


Series

10-21-VQ1000/2000

5 Port Solenoid Valve

Base Mounted

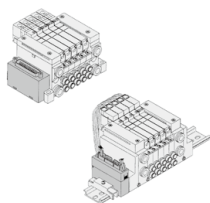


Manifold type	Series	D-sub connector	Flat ribbon cable	Connector	Serial
Plug-in	10-21-VQ1000	●	●	—	●
	10-21-VQ2000	●	●	—	●

10-21-VQ1000	How to Order, Manifold Options	P. 515
--------------	--------------------------------	--------

10-21-VQ2000	How to Order, Manifold Options	P. 517
--------------	--------------------------------	--------


10-21-VQ1000/2000	Model, Standard/Manifold Specifications	P. 521
-------------------	---	--------

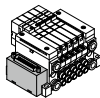


10-21-VQ1000/2000	F kit (D-sub connector)	P. 523
-------------------	-------------------------	--------




10-21-VQ1000/2000	P kit (Flat ribbon cable)	P. 527
-------------------	---------------------------	--------

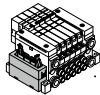


10-21-VQ1000/2000	J kit (Flat ribbon cable)	P. 531
-------------------	---------------------------	--------

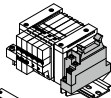


10-21-VQ1000/2000	G kit (Flat ribbon cable with terminal block)	P. 535
-------------------	---	--------

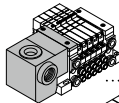

10-21-VQ1000/2000	T kit (Terminal block box)	P. 539
-------------------	----------------------------	--------

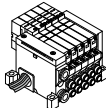


10-21-VQ1000/2000	L kit (Lead wire)	P. 543
-------------------	-------------------	--------

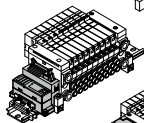

10-21-VQ1000/2000	S kit (Serial transmission) EX510	P. 547
-------------------	-----------------------------------	--------



10-21-VQ1000/2000	S kit (Serial transmission) EX120/123/124	P. 551
-------------------	---	--------

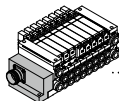

10-21-VQ2000	M kit (Circular connector)	P. 557
--------------	----------------------------	--------

10-21-VQ2000	Sub-plate Single Unit	P. 560
--------------	-----------------------	--------

10-21-VQ1000/2000	Semi-standard	P. 561
-------------------	---------------	--------

10-21-VQ1000/2000	Construction	P. 564
-------------------	--------------	--------

10-21-VQ1000/2000	Exploded View of Manifold	P. 567
-------------------	---------------------------	--------

10-21-VQ1000/2000	Manifold Optional Parts	P. 571
-------------------	-------------------------	--------

10-21-VQ1000/2000	Specific Product Precautions	P. 575
-------------------	------------------------------	--------


Series ¹⁰⁻₂₁₋VQ1000

Base Mounted Plug-in Unit

Note) For CE compliant models, DC-type only.



How to Order Manifold

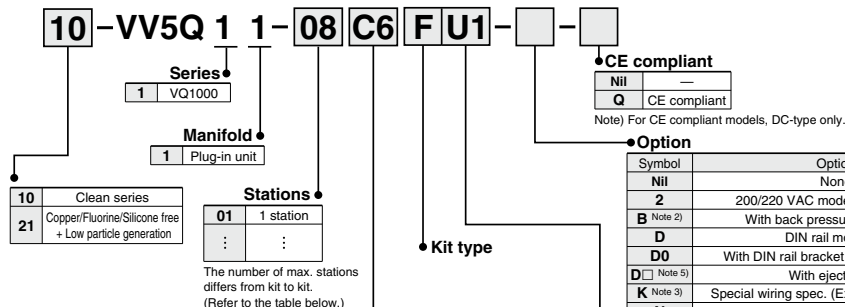

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B ^{Note 2)}	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ ^{Note 5)}	With ejector unit
K ^{Note 3)}	Special wiring spec. (Except double wiring)
N	With name plate
R ^{Note 4)}	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)

Note 4) Indicate "R" for the valve with external pilot.

Note 5) □: Station. Example: D08: The number of stations that may be displayed is longer than the manifold number of stations.

Symbol	Port size	Symbol	Port size
C3	With ø3.2 One-touch fitting	L5	Top ported elbow M5 thread
C4	With ø4 One-touch fitting	B3	Bottom ported elbow with ø3.2 One-touch fitting
C6	With ø6 One-touch fitting	B4	Bottom ported elbow with ø4 One-touch fitting
M5	M5 thread	B6	Bottom ported elbow with ø6 One-touch fitting
CM ^{Note 1)}	Mixed sizes and with port plug	B5	Bottom ported elbow M5 thread
L3	Top ported elbow with ø3.2 One-touch fitting	LM ^{Note 1)}	Elbow port, mixed sizes
L4	Top ported elbow with ø4 One-touch fitting	MM ^{Note 2)}	Mixed size for different types of piping, option installed
L6	Top ported elbow with ø6 One-touch fitting		

Note 1) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.





Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions on the manifold specification sheet.

Note 3) Inch-size One-touch fittings are also available. Refer to page 563 for details.

Note 4) M5 fittings for M5 thread are attached without being incorporated.

Simple specials are available with SMC Simple Specials System.
Refer to the **WEB catalog** for details on applicable models.

Kit type/Electrical entry/Cable length

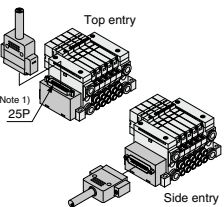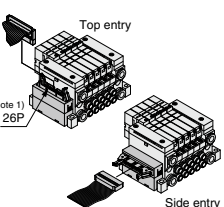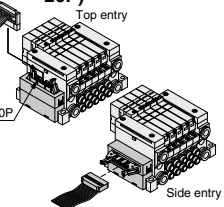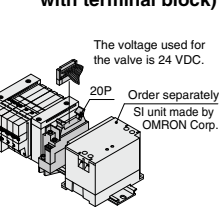F kit (D-sub connector)				P kit (Flat ribbon cable)				J kit (Flat ribbon cable 20P)				G kit (Flat ribbon cable with terminal block)			
															
Note 1) 25P				Note 1) 26P				20P				The voltage used for the valve is 24 VDC. 20P Order separately SI unit made by OMRON Corp.			
Connector entry direction Top entry Side entry				Connector entry direction Top entry Side entry				Connector entry direction Top entry Side entry				Connector entry direction Top entry Side entry			
P. 523				P. 527				P. 531				P. 535			
F	U0	S0	Without cable	P	U0	S0	Without cable	J	U0	S0	Without cable	G	0	Without cable	
U1	S1	With cable (1.5 m)	Note 2) 2 to 24 stations	U1	S1	With cable (1.5 m)	Note 2) 2 to 24 stations	U1	S1	With cable (1.5 m)	Note 2) 2 to 24 stations	U1	1	With cable (1.5 m)	Note 2) 2 to 16 stations
U2	S2	With cable (3 m)		U2	S2	With cable (3 m)		U2	S2	With cable (3 m)		U2	2	With cable (3 m)	
U3	S3	With cable (5 m)		U3	S3	With cable (5 m)		U3	S3	With cable (5 m)		U3	3	With cable (5 m)	

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 561 for details.

Note 2) Refer to page 562 for details.

(Note) For CE compliant models, DC-type only. **CE** [Option]

How to Order Valve

How to Order Manifold Assembly

10-VQ 1 1 0 0 - 5 - 1 -

Series
1 VQ1000

10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Seal
0 Metal seal
1 Rubber seal

Actuation type
1 2-position single (A/B)
2 2-position double (A/B)
3 3-position closed center (A/B)
4 3-position exhaust center (A/B)
5 3-position pressure center (A/B)

Function
Nil Standard (0.4 W) (Note 1)
B High-speed response type (0.95 W)
K (Note 2) High-pressure type (1.0 MPa) (0.95 W)
N (Note 3) Negative common
R (Note 3) External pilot

Manual override
Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)


Light/surge voltage suppressor
E (Note) Yes
None

Coil voltage
1 100 VAC (50/60 Hz)
2 (Note) 200 VAC (50/60 Hz)
3 110 VAC (50/60 Hz)
4 (Note) 220 VAC (50/60 Hz)
5 24 VDC
6 12 VDC

CE compliant
Nil
Q CE compliant
(Note) For CE compliant models, DC-type only.

Note 1 Refer to page 522 for power consumption of AC type.
Note 2 Metal seal only
Note 3 For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4 When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Example

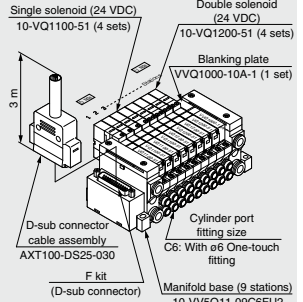

10-VV5Q11-09C6FU2 ... 1 set (If kit 9-station manifold base part no.)
*10-VQ1100-51 ... 4 sets (Single solenoid part no.)
*10-VQ1200-51 ... 4 sets (Double solenoid part no.)
*VVQ1000-10A-1 ... 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly.
Prefix it to the part no. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

T kit (Terminal block box)
P. 539
T kit 0 Terminal block box 2 to 24 stations (Note 2)

L kit (Lead wire)
P. 543
L kit 0 With cable (0.6 m)
1 With cable (1.5 m)
2 With cable (3 m)
1 to 8 stations

S kit (Serial transmission)
P. 551
The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust proof SI unit is also available. Refer to page 551 for details.
(Note) Refer to "SI Unit Part No." on page 551 when ordering the CE-compliant SI unit.

0	Without SI unit	(Note 2)
H	NKE Corp.: Fieldbus H System	Max. 16 stations
Q	DeviceNet™	Max. 16 stations
R1	OMRON Corp.: CompoBus/S (16 outputs)	Max. 8 stations
R2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations
V	CC-Link	Max. 16 stations
ZB	CompoNet™ (Positive common)	
ZBN	CompoNet™ (Negative common)	

Series 10-21-VQ2000

Base Mounted Plug-in Unit

Note) For CE compliant models, DC-type only.



How to Order Manifold

10-VV5Q 2 1-08 C6 F U1

Series
10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Manifold
2 VQ2000
1 Plug-in unit

CE compliant
NIL —
Q CE compliant
 Note) For CE compliant models, DC-type only.

Option

Symbol	Option
NIL	None
2	200/220 VAC models (F/L kit only)
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D1 (Note 5)	DIN rail length specified
K (Note 3)	Special wiring spec. (Except double wiring)
N	With name plate
R (Note 4)	External pilot

Stations
01 1 station
 ...
 ...

Cylinder port

Symbol	Port size
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
CM (Note 1)	Mixed sizes and with port plug
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting

Kit type

Symbol	Port size
L8	Top ported elbow with ø8 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B8	Bottom ported elbow with ø8 One-touch fitting
LM (Note 1)	Elbow port, mixed sizes
MM (Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate "Mixed size and with port plug" by means of the manifold specification sheet.
 Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.
 Note 3) Inch-size One-touch fittings are also available. Refer to page 563 for details.

Simple specials are available with SMC Simple Specials System.
 Refer to the **WEB catalog** for details on applicable models.

Kit type/Electrical entry/Cable length

F kit (D-sub connector) Note 1) 25P Top entry Side entry Connector entry direction Top entry Side entry P. 523 <table border="1"> <tr> <td>F kit</td> <td>U0 Without cable</td> <td rowspan="3">Note 2) 2 to 24 stations</td> </tr> <tr> <td>U1 kit</td> <td>S1 With cable (1.5 m)</td> </tr> <tr> <td>U2 kit</td> <td>S2 With cable (3 m)</td> </tr> <tr> <td>U3 kit</td> <td>S3 With cable (5 m)</td> <td></td> </tr> </table>	F kit	U0 Without cable	Note 2) 2 to 24 stations	U1 kit	S1 With cable (1.5 m)	U2 kit	S2 With cable (3 m)	U3 kit	S3 With cable (5 m)		P kit (Flat ribbon cable) Note 1) 26P Top entry Side entry Connector entry direction Top entry Side entry P. 527 <table border="1"> <tr> <td>P kit</td> <td>U0 Without cable</td> <td rowspan="3">Note 2) 2 to 24 stations</td> </tr> <tr> <td>U1 kit</td> <td>S1 With cable (1.5 m)</td> </tr> <tr> <td>U2 kit</td> <td>S2 With cable (3 m)</td> </tr> <tr> <td>U3 kit</td> <td>S3 With cable (5 m)</td> <td></td> </tr> </table>	P kit	U0 Without cable	Note 2) 2 to 24 stations	U1 kit	S1 With cable (1.5 m)	U2 kit	S2 With cable (3 m)	U3 kit	S3 With cable (5 m)		J kit (Flat ribbon cable 20P) Note 1) 20P Top entry Side entry Connector entry direction Top entry Side entry P. 531 <table border="1"> <tr> <td>J kit</td> <td>U0 Without cable</td> <td rowspan="3">Note 2) 2 to 16 stations</td> </tr> <tr> <td>U1 kit</td> <td>S1 With cable (1.5 m)</td> </tr> <tr> <td>U2 kit</td> <td>S2 With cable (3 m)</td> </tr> <tr> <td>U3 kit</td> <td>S3 With cable (5 m)</td> <td></td> </tr> </table>	J kit	U0 Without cable	Note 2) 2 to 16 stations	U1 kit	S1 With cable (1.5 m)	U2 kit	S2 With cable (3 m)	U3 kit	S3 With cable (5 m)		G kit (Flat ribbon cable with terminal block) The voltage used for the valve is 24 VDC. Top entry Connector entry direction Top entry Side entry P. 535 <table border="1"> <tr> <td>G kit</td> <td>U0 Without cable</td> <td rowspan="3">Note 2) 2 to 16 stations</td> </tr> <tr> <td>U1 kit</td> <td>S1 With cable (1.5 m)</td> </tr> <tr> <td>U2 kit</td> <td>S2 With cable (3 m)</td> </tr> <tr> <td>U3 kit</td> <td>S3 With cable (5 m)</td> <td></td> </tr> </table>	G kit	U0 Without cable	Note 2) 2 to 16 stations	U1 kit	S1 With cable (1.5 m)	U2 kit	S2 With cable (3 m)	U3 kit	S3 With cable (5 m)	
F kit	U0 Without cable	Note 2) 2 to 24 stations																																									
U1 kit	S1 With cable (1.5 m)																																										
U2 kit	S2 With cable (3 m)																																										
U3 kit	S3 With cable (5 m)																																										
P kit	U0 Without cable	Note 2) 2 to 24 stations																																									
U1 kit	S1 With cable (1.5 m)																																										
U2 kit	S2 With cable (3 m)																																										
U3 kit	S3 With cable (5 m)																																										
J kit	U0 Without cable	Note 2) 2 to 16 stations																																									
U1 kit	S1 With cable (1.5 m)																																										
U2 kit	S2 With cable (3 m)																																										
U3 kit	S3 With cable (5 m)																																										
G kit	U0 Without cable	Note 2) 2 to 16 stations																																									
U1 kit	S1 With cable (1.5 m)																																										
U2 kit	S2 With cable (3 m)																																										
U3 kit	S3 With cable (5 m)																																										
T kit (Terminal block box) Dust-tight/Water-jet-proof (IP65) compatible Note 3) P. 539 <table border="1"> <tr> <td>T kit</td> <td>0 Terminal block box 2 to 20 stations</td> <td>Note 2)</td> </tr> </table>	T kit	0 Terminal block box 2 to 20 stations	Note 2)	L kit (Lead wire) Dust-tight/Water-jet-proof (IP65) compatible Note 3) P. 543 <table border="1"> <tr> <td>L kit</td> <td>0 With cable (0.6 m)</td> <td rowspan="2">1 to 8 stations</td> </tr> <tr> <td>1 kit</td> <td>1 With cable (1.5 m)</td> </tr> <tr> <td>2 kit</td> <td>2 With cable (3 m)</td> <td></td> </tr> </table>	L kit	0 With cable (0.6 m)	1 to 8 stations	1 kit	1 With cable (1.5 m)	2 kit	2 With cable (3 m)		S kit (Serial transmission) Note 4) The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dusttight SI unit is available. Refer to page 551 for details. Dust-tight, Water-jet-proof (IP65) is available. Note 3) Note) Refer to "SI Unit Part No." on page 551 when ordering the CE-compliant SI unit. P. 551 <table border="1"> <tr> <td>S kit</td> <td>0 Without SI unit</td> <td rowspan="5">Note 2) Max. 16 stations</td> </tr> <tr> <td>H kit</td> <td>1 NKE Corp.: Fieldbus H System</td> </tr> <tr> <td>Q kit</td> <td>2 DeviceNet™</td> </tr> <tr> <td>R1 kit</td> <td>3 OMRON Corp.: CompBus/S (16 outputs)</td> </tr> <tr> <td>R2 kit</td> <td>4 OMRON Corp.: CompBus/S (8 outputs)</td> </tr> <tr> <td>V kit</td> <td>5 CC-Link</td> <td>Max. 8 stations</td> </tr> </table>	S kit	0 Without SI unit	Note 2) Max. 16 stations	H kit	1 NKE Corp.: Fieldbus H System	Q kit	2 DeviceNet™	R1 kit	3 OMRON Corp.: CompBus/S (16 outputs)	R2 kit	4 OMRON Corp.: CompBus/S (8 outputs)	V kit	5 CC-Link	Max. 8 stations	M kit (Circular connector) Dust-tight/Water-jet-proof (IP65) compatible Note 3) P. 557 <table border="1"> <tr> <td>M kit</td> <td>0 Without cable</td> <td rowspan="3">Note 2) 2 to 24 stations</td> </tr> <tr> <td>1 kit</td> <td>1 With cable (1.5 m)</td> </tr> <tr> <td>2 kit</td> <td>2 With cable (3 m)</td> </tr> <tr> <td>3 kit</td> <td>3 With cable (5 m)</td> <td></td> </tr> </table>	M kit	0 Without cable	Note 2) 2 to 24 stations	1 kit	1 With cable (1.5 m)	2 kit	2 With cable (3 m)	3 kit	3 With cable (5 m)						
T kit	0 Terminal block box 2 to 20 stations	Note 2)																																									
L kit	0 With cable (0.6 m)	1 to 8 stations																																									
1 kit	1 With cable (1.5 m)																																										
2 kit	2 With cable (3 m)																																										
S kit	0 Without SI unit	Note 2) Max. 16 stations																																									
H kit	1 NKE Corp.: Fieldbus H System																																										
Q kit	2 DeviceNet™																																										
R1 kit	3 OMRON Corp.: CompBus/S (16 outputs)																																										
R2 kit	4 OMRON Corp.: CompBus/S (8 outputs)																																										
V kit	5 CC-Link	Max. 8 stations																																									
M kit	0 Without cable	Note 2) 2 to 24 stations																																									
1 kit	1 With cable (1.5 m)																																										
2 kit	2 With cable (3 m)																																										
3 kit	3 With cable (5 m)																																										

Note 1) Besides the above, F/P kit with different number of pins are available.

Refer to page 561 for details.

Note 2) Refer to page 562 for details.

Note 3) Refer to the pages on respective kits for IP65 type. (T/L/S/M kit)

Note 4) Serial transmission system with IP65 enclosure applicable to input/output is also available. Refer to page 555 for details.

Note) For CE compliant models, DC-type only.



How to Order Valve

How to Order Manifold Assembly

10-VQ 2 1 0 0 - 5 - - - 1 -

Series	
2	VQ2000
10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type	
1	2-position single (A/B)
2	2-position double (A/B)
3	3-position closed center (A/B)
4	3-position exhaust center (A/B)
5	3-position pressure center (A/B)

Note) For sub-plate single unit type, refer to page 560.

Seal	
0	Metal seal
1	Rubber seal

CE compliant	
Nil	—
Q	CE compliant
Note) For CE compliant models, DC-type only.	
Enclosure	
Nil	—
W	Dust-tight/water-jet-proof type (IP65)
Note) T, L, S and M kits only	

Light/surge voltage suppressor	
Nil	Yes
E	None
Note) Not applicable to the S kit.	

Coil voltage	
1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) 200 and 220 VAC: F/L kit only

Manual override

Nil: Non-locking push type (Tool required)
B: Push-locking slotted type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	—
B	High-speed response type	(0.95 W)	—
K	High-pressure type (1.0 MPa)	(0.95 W)	—
N	Negative common	—	—
R	External pilot	—	—


Note 1) For power consumption of AC type, refer to page 522.

Note 2) Metal seal only

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Example

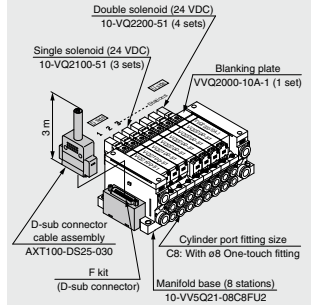

10-VV5Q21-08C8FU2 ... 1 set (F kit 8-station manifold base part no.)
 *10-VQ2100-51 ... 3 sets (Single solenoid part no.)
 *10-VQ2200-51 ... 4 sets (Double solenoid part no.)
 *VVQ2000-10A-1 ... 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part no. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing


Flow Control Equipment

Pressure Switches/Pressure Sensors


10-**VQ1000: Manifold Options**

P. 571 to 572


Blanking plate assembly
VVQ1000-10A-1

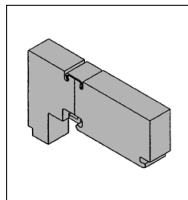


Individual SUP spacer
VVQ1000-P-1-C6-N7

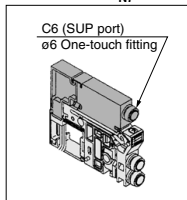


Individual EXH spacer
VVQ1000-R-1-C6-N7

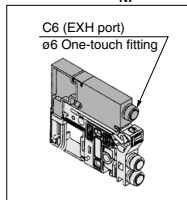


SUP block plate
VVQ1000-16A

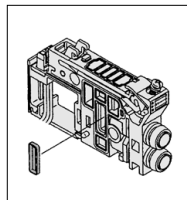


EXH block base assembly
VVQ1000-19A-
F C3, C4
C6, M5
P1, N3
N7

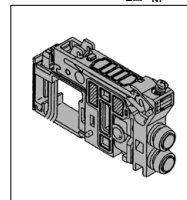


Back pressure check valve
assembly [-B]
VVQ1000-18A

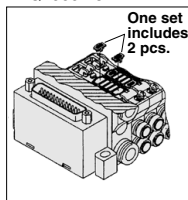


Name plate [-N]
VVQ1000-N-Station
(1 to Max. stations)

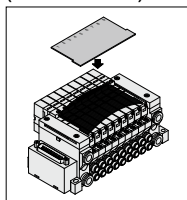

Blanking plug
KQ2P-□

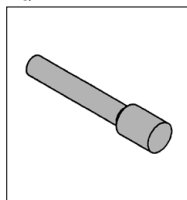


DIN rail mounting bracket
[-D/-D0/-D□]
VVQ1000-57A

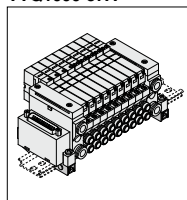


10-**VQ2000: Manifold Options**

P. 573 to 574


Blanking plate assembly
VVQ2000-10A-1

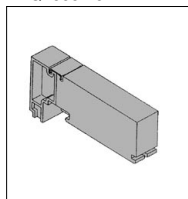


Individual SUP spacer
VVQ2000-P-1-C8-N9

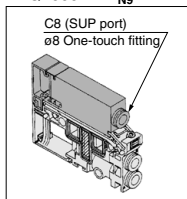


Individual EXH spacer
VVQ2000-R-1-C8-N9

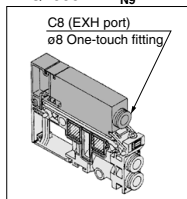


SUP block plate
VVQ2000-16A

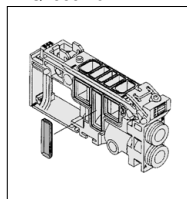


EXH block plate
VVQ2000-19A

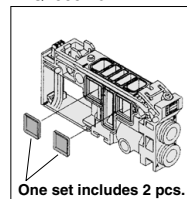


Back pressure check valve
assembly [-B]
VVQ2000-18A

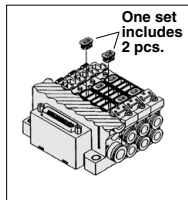


Name plate [-N]
VVQ2000-N-Station
(1 to Max. stations)

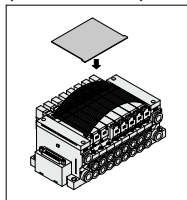

Blanking plug
KQ2P-□

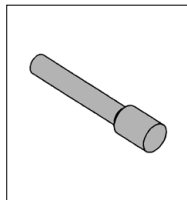

DIN rail mounting bracket
[-D/-D0/-D□]
VVQ2000-57A

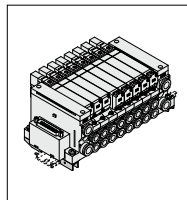

Series ¹⁰⁻₂₁₋VQ1000/2000

Base Mounted
Plug-in Unit



Model

Series	Actuation type		Model	Flow rate characteristics ^{Note 1)}						Response time (ms) ^{Note 2)}			Weight (g)
				1 → 2/4 (P → A/B)			2/4 → 3/5 (A/B → R1/R2)			Standard: 0.4 W	High-speed response: 0.95 W	AC	
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv				
VQ1000	2-position	Single	Metal seal ¹⁰⁻²¹⁻ VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	29 or less	67
			Rubber seal ¹⁰⁻²¹⁻ VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	34 or less	
		Double	Metal seal ¹⁰⁻²¹⁻ VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	13 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	20 or less	
	3-position	Closed center	Metal seal ¹⁰⁻²¹⁻ VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	77
			Rubber seal ¹⁰⁻²¹⁻ VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	47 or less	
		Exhaust center	Metal seal ¹⁰⁻²¹⁻ VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	47 or less	
		Pressure center	Metal seal ¹⁰⁻²¹⁻ VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	47 or less	
VQ2000	2-position	Single	Metal seal ¹⁰⁻²¹⁻ VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	49 or less	95
			Rubber seal ¹⁰⁻²¹⁻ VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	51 or less	
		Double	Metal seal ¹⁰⁻²¹⁻ VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	20 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	26 or less	
	3-position	Closed center	Metal seal ¹⁰⁻²¹⁻ VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	58 or less	105
			Rubber seal ¹⁰⁻²¹⁻ VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	64 or less	
		Exhaust center	Metal seal ¹⁰⁻²¹⁻ VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	58 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	64 or less	
		Pressure center	Metal seal ¹⁰⁻²¹⁻ VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	58 or less	
			Rubber seal ¹⁰⁻²¹⁻ VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	64 or less	


Note 1) The values are given for port size C6: (10-VQ1000), C8: (10-VQ2000) without back pressure check valve.

Note 2) As per JIS B 8375-1981 (Supply pressure 0.5 MPa; with indicator light/surge voltage suppressor; clean air

The response time is subject to the pressure and quality of the air.) The values at the time of ON are given for double types.

Standard Specifications

Symbol

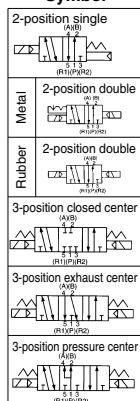

Valve specifications	Valve type	Metal seal	Rubber seal
	Fluid	Air, Inert gas	Air, Inert gas
	Maximum operating pressure	0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa
	Minimum operating pressure	Single	0.1 MPa
		Double	0.1 MPa
		3-position	0.1 MPa
		4-position	0.2 MPa
	Ambient and fluid temperature	-10 to 50°C (Note 1)	
	Lubrication	Not required	
	Manual override	Push type, Locking type (Tool required, Manual) semi-standard	
Electrical specifications	Impact/Vibration resistance (Note 2)	150/30 m/s ²	
	Enclosure	Dust-protected; Dust-tight, Water-jet-proof (IP65) (Note 4)	
	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation	±10% of rated voltage	
	Coil insulation type	Equivalent to Class B	
	Power consumption (Current)	24 VDC	0.4 W DC (17 mA), 0.95 W DC (40 mA) (Note 3)
		12 VDC	0.4 W DC (34 mA), 0.95 W DC (80 mA) (Note 3)
		100 VAC	Inrush 0.96 VA (10 mA), Holding 0.96 VA (10 mA)
		110 VAC	Inrush 1.0 VA (9 mA), Holding 1.0 VA (9 mA)
		200 VAC	Inrush 1.26 VA (6 mA), Holding 1.26 VA (6 mA)
		220 VAC	Inrush 1.38 VA (6 mA), Holding 1.38 VA (6 mA)

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance ----- No malfunction occurred when it was tested in the axial direction and at right angles to the main valve and armature in both energized and de-energized states once for each condition. (Default settings)

Vibration resistance ... No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in both energized and de-energized states in the axial direction and at right angles to the main valve and armature. (Default settings)

Note 3) Value for high-speed response, high-voltage type (0.95 W)


Note 4) Dust-tight, Water-jet-proof (IP65) is available on T/L/S/M kit of the VQ2000.

Manifold Specifications


Series	Base model	Connection type	Piping specifications			Applicable stations	Applicable solenoid valve	5-station weight (g)
			Piping direction	Port size <small>Note 1)</small>				
				1(P), 3(R)	4(A), 2(B)			
10-21-VQ1000	VV5Q11-□□□	F kit-D-sub connector P kit-Flat ribbon cable J kit-Flat ribbon cable (20P) G kit-Flat ribbon cable with terminal block T kit-Terminal block box L kit-Lead wire S kit-Serial transmission	Side	C8 (ø8) <div>Option: Direct EXH outlet with built-in silencer</div>	C3 (ø3.2) C4(ø4) C6 (ø6) M5 (M5 thread)	<div><div>F/P/T kit</div><div>2 to 24 stations</div></div> <div><div>J/G/S kit</div><div>2 to 16 stations</div></div> <div><div>L kit</div><div>1 to 8 stations</div></div>	VQ1□00 VQ1□01	643 (Single) 754 (Double, 3-position)
		F kit-D-sub connector P kit-Flat ribbon cable J kit-Flat ribbon cable (20P) G kit-Flat ribbon cable with terminal block T kit-Terminal block box L kit-Lead wire S kit-Serial transmission M kit-Circular connector		C10 (ø10) <div>Option: Direct EXH outlet with built-in silencer</div>	C4 (ø4) C6 (ø6) C8 (ø8)	<div><div>F/P kit</div><div>2 to 24 stations</div></div> <div><div>J/G/S kit</div><div>2 to 16 stations</div></div> <div><div>L kit</div><div>1 to 8 stations</div></div> <div><div>T kit</div><div>2 to 20 stations</div></div>	VQ2□00 VQ2□01	1076 (Single) 1119 (Double, 3-position)

Note 1) Inch-size One-touch fittings are also available. Refer to page 563 for details.

Note 2) Refer to page 562 for details.

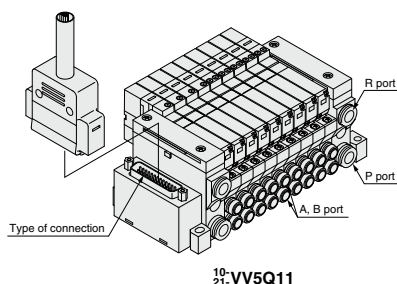


10-21-VV5Q11

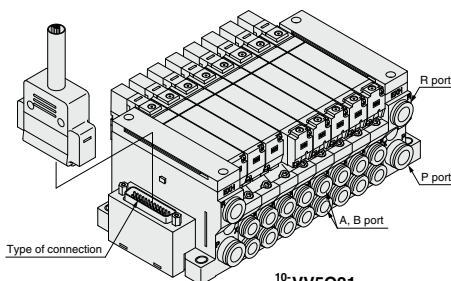

10-21-VV5Q21

F Series ¹⁰⁻²¹-VQ1000/2000 Kit (D-sub connector)

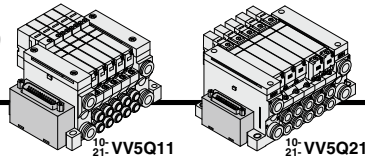

- D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as semi-standard) conforming to MIL standard permits the use of commercial connectors and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

D-sub Connector (25 Pins)


Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21- VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
10-21- VQ2000	Side	C10	C4, C6, C8	Max. 24 stations

Cable Assembly ●

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

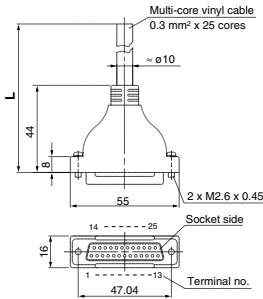

D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 cores x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

- For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.

Example of connector manufacturers

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the D-sub connector cable is 20 mm.


Wire color by terminal no. of D-sub connector cable assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Note 1) Types with 15 pins are also available. Refer to page 561 for details.

Note 2) Lengths other than the above are also available. Please contact SMC for details.

How to Order Manifold

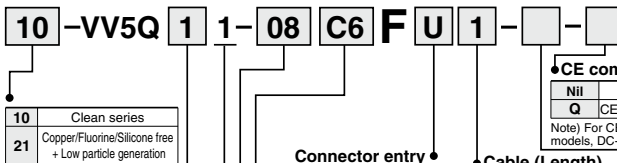

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Series ●	
1	VQ1000
2	VQ2000

Stations ●

02	2 stations
...	...
24	24 stations

Note) Refer to page 562 for details.

Manifold ●

1	Plug-in unit
---	--------------

Connector entry direction

U	Top entry
S	Side entry

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 (Note 1)	With ø3.2 One-touch fitting	●	—
C4 (Note 1)	With ø4 One-touch fitting	●	●
C6 (Note 1)	With ø6 One-touch fitting	●	●
C8 (Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM (Note 2/Note 3)	Mixed sizes and with port plug	●	●
MM (Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Note) For CE compliant models, DC-type only. **CE** [option]

Option

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D (Note 3)	DIN rail length specified (□: Stations 02 to 24)
K (Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R (Note 5)	External pilot


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

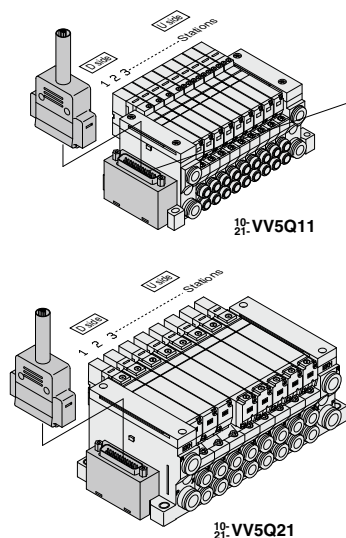

Electrical Wiring Specifications

D-sub connector



As the standard electrical wiring specifications, double wiring (connected to SOLA and SOLB) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.) Refer to "Semi-standard" on page 562 for details.

D-sub connector assembly AXT100-DS25-030 Wire color 050

Terminal no.	Polarity	Lead wire color	Dot marking
Station 1	SOLA 14 (-)	(+)	Black None
	SOLA 2 (-)	(+)	Yellow None
Station 2	SOLA 15 (-)	(+)	Brown None
	SOLA 3 (-)	(+)	Pink Black
Station 3	SOLA 16 (-)	(+)	Red None
	SOLA 4 (-)	(+)	Blue White
Station 4	SOLA 17 (-)	(+)	Orange None
	SOLA 5 (-)	(+)	Purple None
Station 5	SOLA 18 (-)	(+)	Yellow None
	SOLA 6 (-)	(+)	Gray None
Station 6	SOLA 19 (-)	(+)	Pink None
	SOLA 7 (-)	(+)	Orange Black
Station 7	SOLA 20 (-)	(+)	Blue None
	SOLA 8 (-)	(+)	Red None
Station 8	SOLA 21 (-)	(+)	Purple White
	SOLA 9 (-)	(+)	Brown White
Station 9	SOLA 22 (-)	(+)	Gray Black
	SOLA 10 (-)	(+)	Pink Red
Station 10	SOLA 23 (-)	(+)	White Black
	SOLA 11 (-)	(+)	Gray Red
Station 11	SOLA 24 (-)	(+)	White Red
	SOLA 12 (-)	(+)	Black White
Station 12	SOLA 25 (-)	(+)	Yellow Red
	COM. 13 (+)	(+)	White None
		(+)	Orange Red

Positive COM spec. Negative COM spec.

The total number of stations is tabulated starting from station one on the D-side.

How to Order Valve

Note) For CE compliant models, DC-type only.



10-VQ 1 1 0 0 - 5 1 -

Series	
1	VQ1000
2	VQ2000
Actuation type	
10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation
Seal	
0	Metal seal
1	Rubber seal

Function		DC	AC
Symbol	Specifications	(0.4 W)	(Note 1)
Nil	Standard	○	○
B	High-speed response type	(0.95 W)	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	—
N (Note 3)	Negative common	○	—
R (Note 3)	External pilot	○	○

Note 1) Refer to page 562 for power consumption of AC type.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

CE compliant	
Nil	—
Q	CE compliant

Manual override	
Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor	
Nil	Yes
E	None

Coil voltage		CE compliant
1	100 VAC (50/60 Hz)	—
2	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
D-sub connector kit with cable (3 m)
10-VV5Q11-09C6FU2-1 set-Manifold base part no.
*10-VQ1100-512 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-514 sets-Valve part no. (Stations 3 to 6)
*10-VQ1300-512 sets-Valve part no. (Stations 7 to 8)
*VVQ1000-10A-11 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.


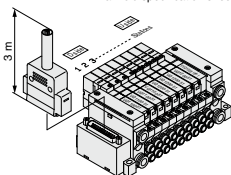


F Series ¹⁰⁻²¹-VQ1000/2000 kit (D-sub connector)

10-21-VV5Q11

< >: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

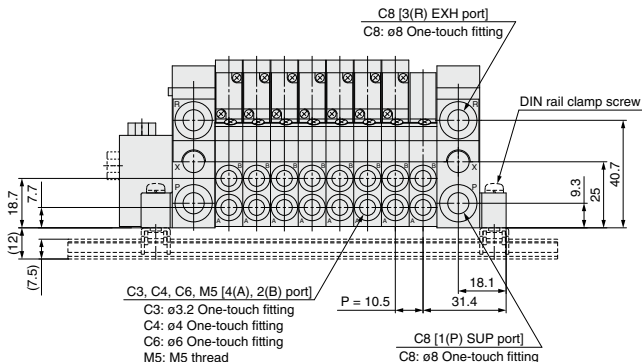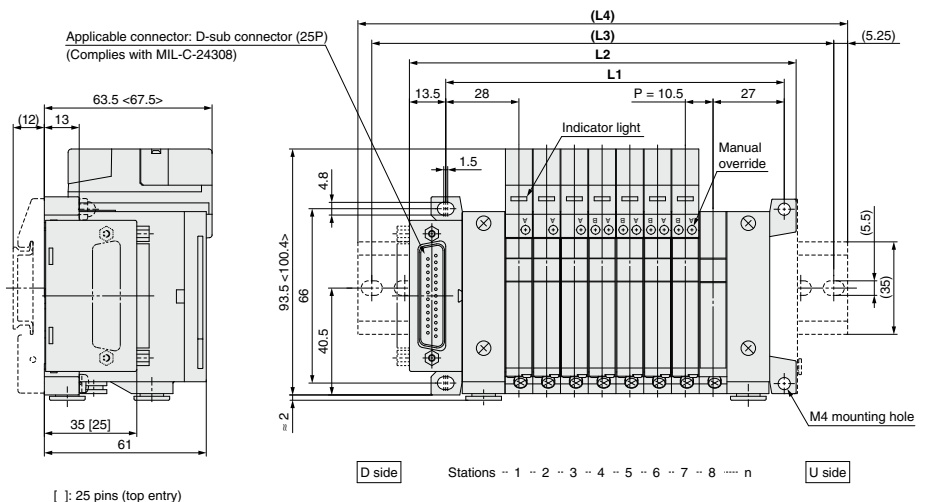

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 62.5 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2		83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)



L2 = 10.5n + 46.3 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.

10-21-VV5Q21

< >: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

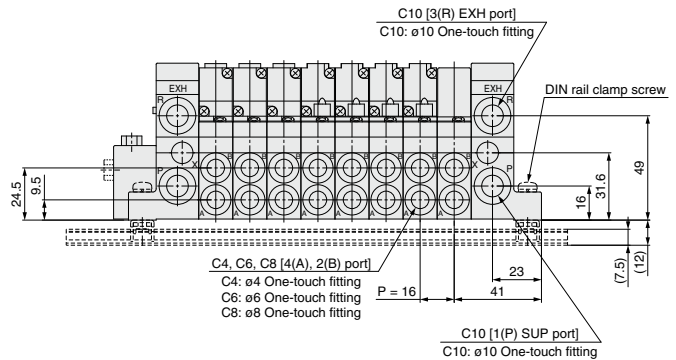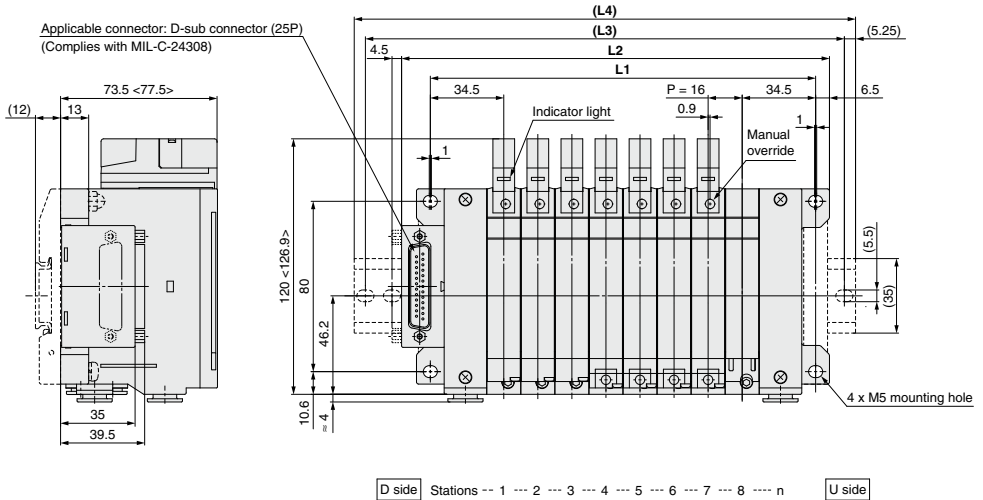


Dimensions

Formula $L1 = 16n + 53$, $L2 = 16n + 73$ n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437	
L2	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457	
(L3)	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	
(L4)	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	

P Series¹⁰⁻²¹ VQ1000/2000 kit (Flat ribbon cable)

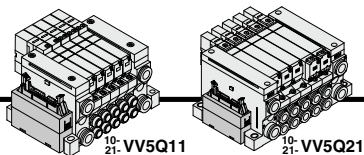


- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of commercial connectors and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

Manifold Specifications

Series	Piping specifications		Applicable stations
	Piping direction	Port size	
10-21: VQ1000	Side	C8	C3, C4, C6, M5
10-21: VQ2000	Side	C10	C4, C6, C8

Flat Ribbon Cable (26 Pins)

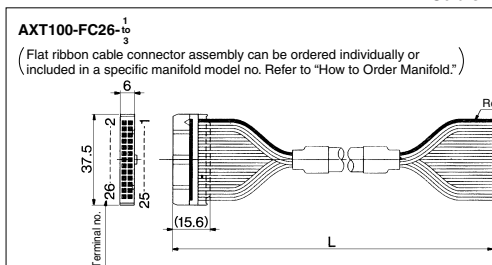

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 cores x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

- * For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.
- * Cannot be used for transfer wiring.


Connector manufacturers' example

- HIROSE ELECTRIC CO., LTD.
- Fujitsu Limited
- J.S.T. Mfg. Co., Ltd.
- 3M Japan Limited
- Japan Aviation Electronics Industry, Limited
- Oki Electric Cable Co., Ltd.

Note 1) Other than the above model, 10P, 16P, 20P are also available. Refer to page 561 for details.

Note 2) Lengths other than the above are also available. Please contact SMC for details.


Cable Assembly

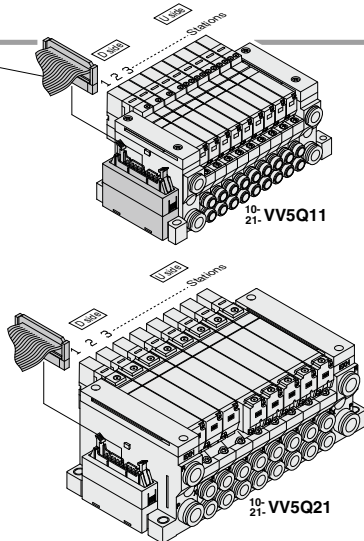

The total number of stations is tabulated starting from one on the D-side.

Note) For CE compliant models, DC-type only. [Option]

How to Order Manifold

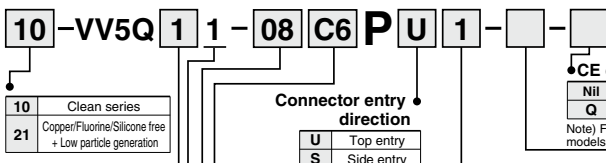

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 (Note 1)	With ø3.2 One-touch fitting	●	—
C4 (Note 1)	With ø4 One-touch fitting	●	●
C6 (Note 1)	With ø6 One-touch fitting	●	●
C8 (Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM (Note 2) (Note 3)	Mixed sizes and with port plug	●	●
MM (Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Option

Symbol	Option
Nil	None
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ (Note 3)	DIN rail length specified (□: Stations 02 to 24)
K (Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R (Note 5)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

Electrical Wiring Specifications

Flat ribbon cable connector

Connector terminal no. Triangle mark indicator position

Station	Terminal no.	Polarity
Station 1	SOL.A 1	(-)
	SOL.B 2	(+)
Station 2	SOL.A 3	(-)
	SOL.B 4	(+)
Station 3	SOL.A 5	(-)
	SOL.B 6	(+)
Station 4	SOL.A 7	(-)
	SOL.B 8	(+)
Station 5	SOL.A 9	(-)
	SOL.B 10	(+)
Station 6	SOL.A 11	(-)
	SOL.B 12	(+)
Station 7	SOL.A 13	(-)
	SOL.B 14	(+)
Station 8	SOL.A 15	(-)
	SOL.B 16	(+)
Station 9	SOL.A 17	(-)
	SOL.B 18	(+)
Station 10	SOL.A 19	(-)
	SOL.B 20	(+)
Station 11	SOL.A 21	(-)
	SOL.B 22	(+)
Station 12	SOL.A 23	(-)
	SOL.B 24	(+)
	COM 25	(+)
	COM 26	(-)

Electrical wiring specifications

Positive COM spec. Negative COM spec.

As the standard electrical wiring specifications, double wiring (connected to SOL.A and SOL.B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.) Refer to "Semi-standard" on page 562 for details.

How to Order Valve

Note) For CE compliant models, DC-type only. **CE** [Option]

10-VQ 1 1 0 0 - 5 1 -

Series

1	VQ1000
2	VQ2000

10 Clean series

21 Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
NII	Standard	(0.4 W) ○	(Note 1) ○
B	High-speed response type	(0.95 W) ○	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N (Note 3)	Negative common	○	—
R (Note 3)	External pilot	○	○

Manual override

NII	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

NII	Yes
E	None

Coil voltage

	DC type	AC type
1	100 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●


Note 1) Refer to page 522 for power consumption of AC type.
Note 2) Metal seal only.
Note 3) Refer to "Semi-standard" on pages 562 to 563 for external pilot and negative common specifications.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Flat ribbon cable kit with cable (3 m)
10-V5Q11-09C6PU2-1 set-Manifold base part no.
*10-VQ1100-51 2 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-51 4 sets-Valve part no. (Stations 3 to 6)
*10-VQ1300-51 2 sets-Valve part no. (Stations 7 to 8)
*VQ1000-10A-1 1 set-Blanking plate part no. (Station 9)

Write sequentially from the 1st station on the D-side.
When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

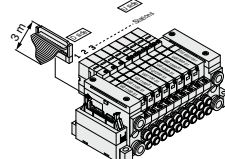

Caution
Use the standard (DC) specification when continuously energizing for long periods of time.


P **Series ¹⁰⁻₂₁₋VQ1000/2000**
kit (Flat ribbon cable)

**10-
21-VV5Q11**

 $\leq \geq$: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].


Applicable connector: Flat ribbon cable connector (26P)
(Complies with MIL-C-83503)

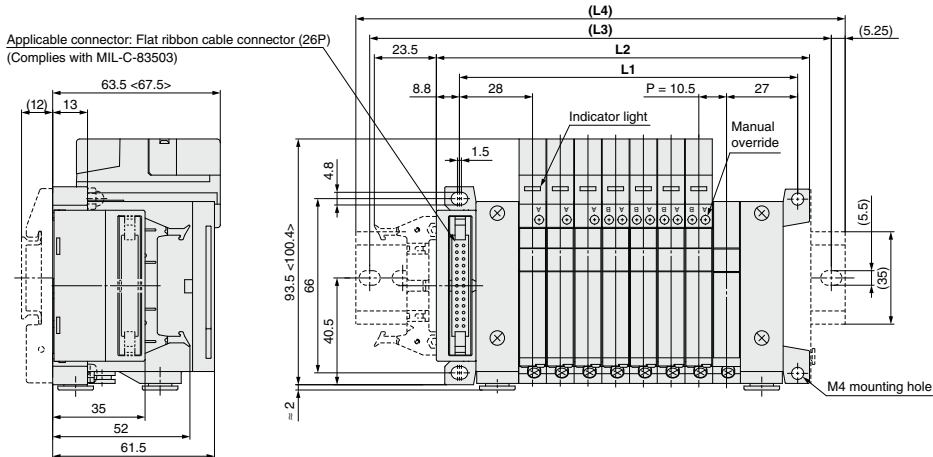

D side

Stations .. 1 .. 2 .. 3 .. 4 .. 5 .. 6 .. 7 .. 8 n

U side

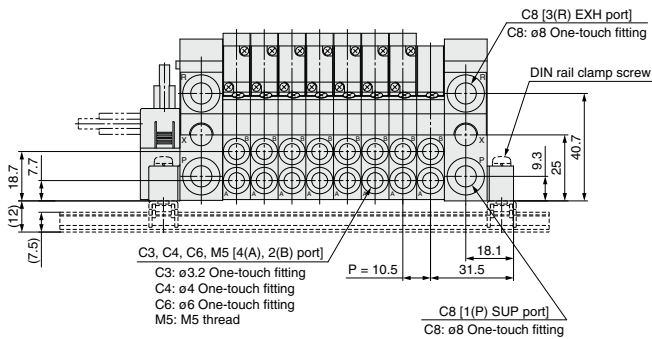

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5	
L2		78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5	278	288.5	299	309.5	
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	310.5	323	335	337.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)

$$L2 = 10.5n + 41.3 + (\text{Number of ejector units} \times 26.7)$$

L4 is L2 plus about 30.

Air Cylinders

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

Rotary Actuators



Modular F. R.


Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/
Pressure Sensors

J Series¹⁰⁻²¹ VQ1000/2000 kit (Flat ribbon cable)

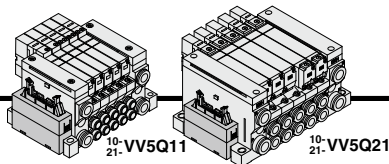

- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable connectors (20P) conforming to MIL standard permits the use of connector put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21-VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations
10-21-VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

Flat Ribbon Cable (20 Pins)

AXT100-FC20-1¹⁰⁻²¹

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

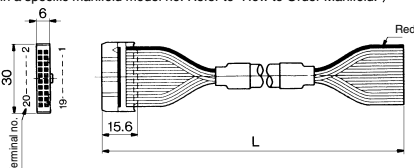

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	Cable 20 cores x 28AWG
3 m	AXT100-FC20-2	
5 m	AXT100-FC20-3	

* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.


* Cannot be used for transfer wiring.

Example of connector manufacturers

- HIROSE ELECTRIC CO., LTD.
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited
- Oki Electric Cable Co., Ltd.

(Note) Lengths other than the above are also available. Please contact SMC for details.

Cable Assembly

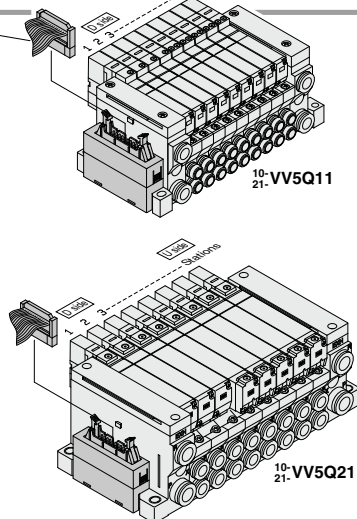

The total number of stations is tabulated starting from one on the D-side.



How to Order Manifold

10 - VV5Q 1 1 - 08 C6 J U 1 -

10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Series
1 VQ1000
2 VQ2000

Manifold
1 Plug-in unit

Stations
02 2 stations
16 16 stations

Connector entry direction
U Top entry
S Side entry

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 (Note 1)	With ø3.2 One-touch fitting	●	—
C4 (Note 1)	With ø4 One-touch fitting	●	●
C6 (Note 1)	With ø6 One-touch fitting	●	●
C8 (Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM (Note 2) (Note 3)	Mixed sizes and with port plug	●	●
MM (Note 4)	Mixed size for different types of piping, option installed	●	●

CE compliant
NII —
Q CE compliant

Cable (Length)
0 Without cable
1 With cable (1.5 m)
2 With cable (3 m)
3 With cable (5 m)

Option

Symbol	Option
NII	None
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ (Note 3)	DIN rail length specified (□: Stations 02 to 16)
K (Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R (Note 5)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

(Note) Refer to page 562 for details.

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.


Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Directional Control Valves
Air Cylinders
Rotary Actuators
Air Grippers
Air Preparation Equipment
Modular F. R.
Pressure Control Equipment
Fittings & Tubing
Flow Control Equipment
Pressure Switches/Pressure Sensors


Electrical Wiring Specifications

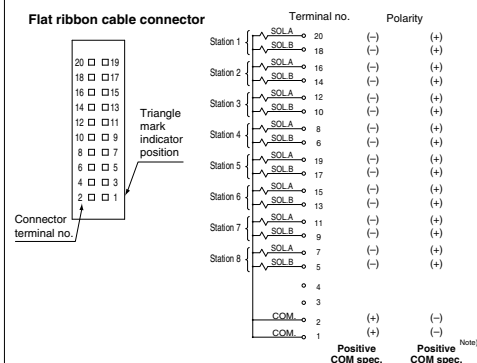

As the standard electrical wiring specifications, double wiring (connected to SOL.A and SOL.B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types.
Mixed single and double wiring is available as semi-standard. Refer to "Semi-standard" on page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.)
Refer to "Semi-standard" on page 562 for details.

How to Order Valve

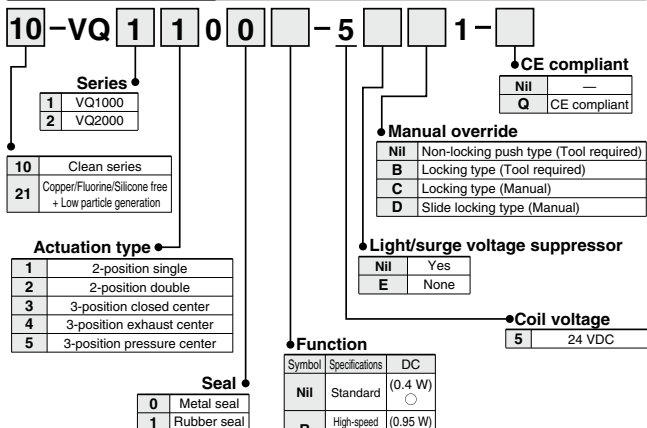

[Option]

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Flat ribbon cable kit with cable (3 m)

10-VV5Q11-08C6JU2-1 set-Manifold base part no.
*10-VQ1100-51 2 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-51 4 sets-Valve part no. (Stations 3 to 6)
*10-VQ1300-51 1 set-Valve part no. (Station 7)
*VVQ1000-10A-1 1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part no. of the solenoid valve, etc.
Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

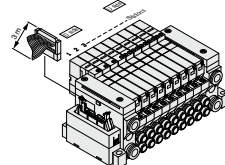


J Series ¹⁰⁻₂₁-VQ1000/2000 kit (Flat ribbon cable)

10-₂₁-VV5Q11

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

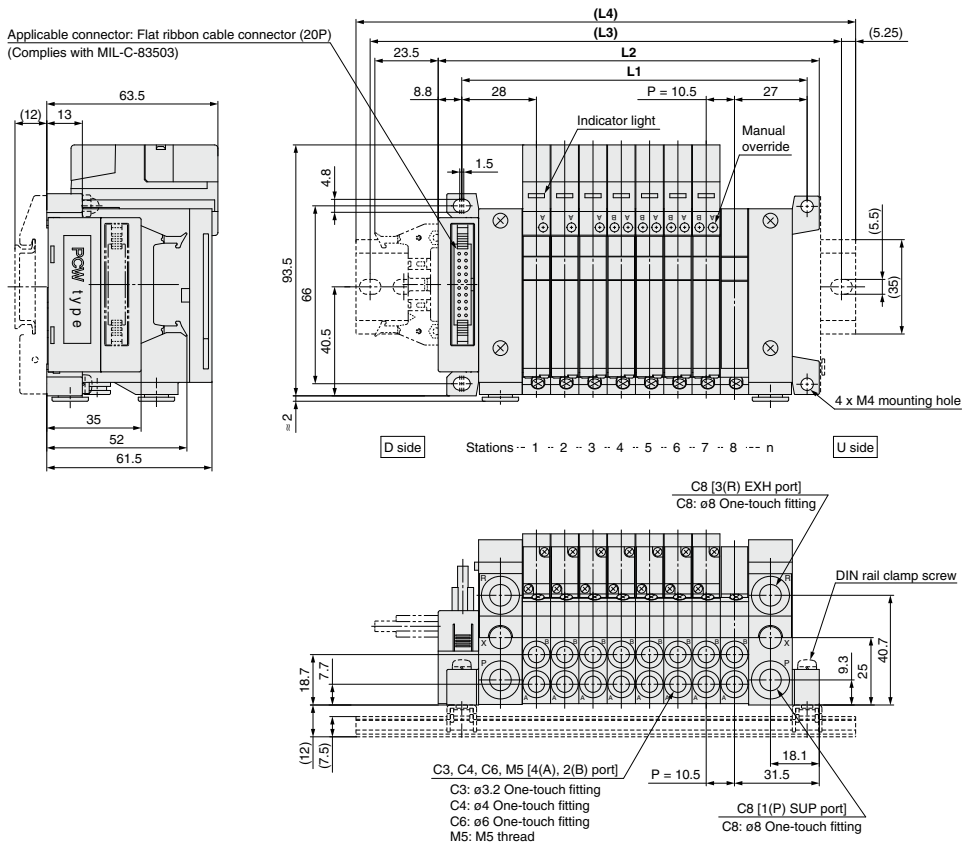

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 16 stations)

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)



L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.

**10-
21-VV5Q21**

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

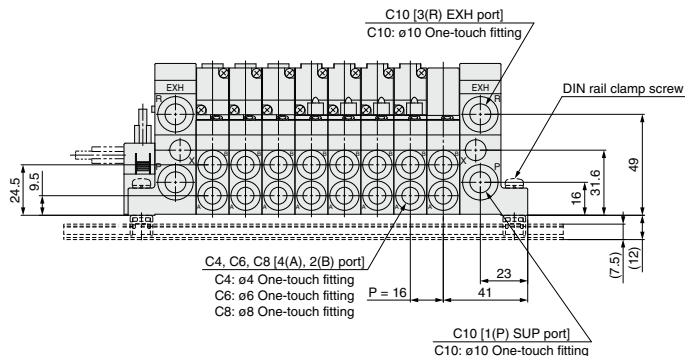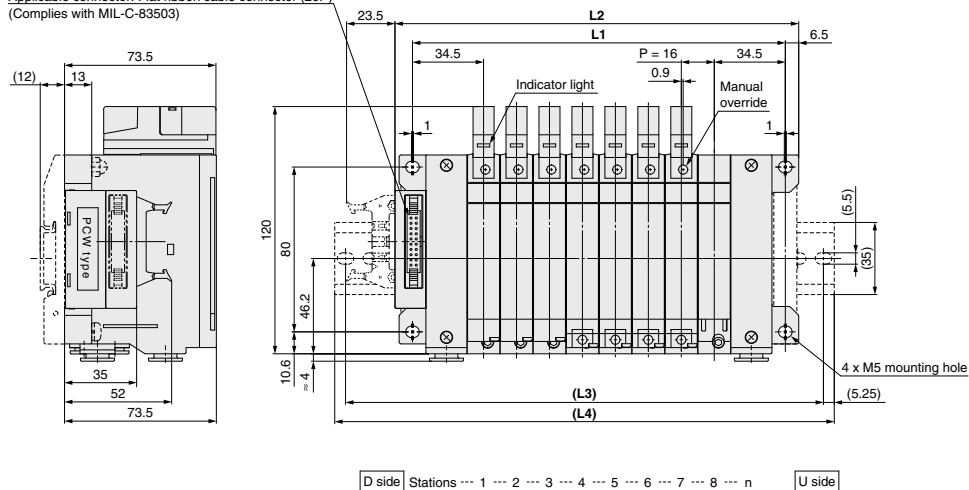


Dimensions

Parameters		Performance (L1: 100, L2: 100, L3: 100) - 1000 iterations (maximum 1000 iterations)															
Order	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L1		85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	
L2		100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	
(L3)		125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	
(L4)		135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	

Formula L1 = 16n + 53, L2 = 16n + 68 n: Station (Maximum 16 stations)



Series¹⁰⁻²¹ VQ1000/2000 kit (Flat ribbon cable with terminal block)

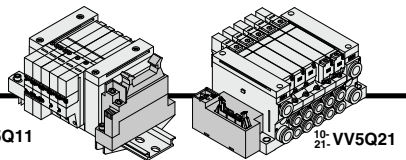

- Terminal block for power supply equipped with a 20 pins flat ribbon cable connection for rationalized connection of valves.
- Solenoid valves and power supply can be connected by the same cable to a specific output unit that requires power supply from the output section to the internal circuit.
- Maximum stations are 16.


Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21- VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations
10-21- VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

Flat Ribbon Cable (20 Pins)

AXT100-FC20-¹/₃

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

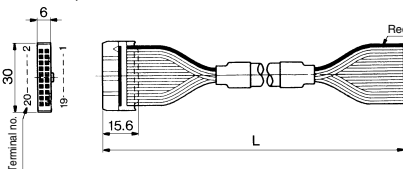

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	Cable 20 cores x 28AWG
3 m	AXT100-FC20-2	
5 m	AXT100-FC20-3	



* For other commercial connectors, use a 20 pins type with strain relief conforming to MIL-C-83503.

* Cannot be used for transfer wiring.

Example of connector manufacturers

• HIROSE ELECTRIC CO., LTD.	• Japan Aviation Electronics Industry, Limited	• Oki Electric Cable Co., Ltd.
• 3M Japan Limited	• J.S.T. Mfg. Co., Ltd.	• Fujitsu Limited

Note) Lengths other than the above are also available. Please contact SMC for details.

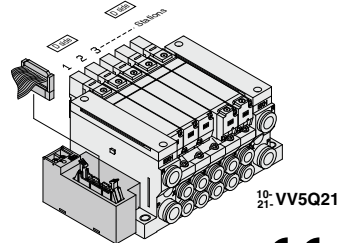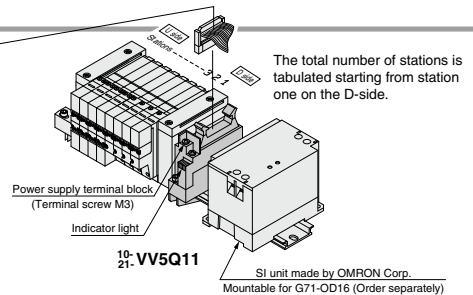

How to Order Manifold

10 - VV5Q 1 1 - 08 C6 G

Series

1	VQ1000
2	VQ2000

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
⋮	⋮
16 (Note)	16 stations

Note) Refer to page 562 for details.

Connector entry direction, Top entry

Nil	VQ1000
U	VQ2000

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 (Note 1)	With ø3.2 One-touch fitting	●	—
C4 (Note 1)	With ø4 One-touch fitting	●	●
C6 (Note 1)	With ø6 One-touch fitting	—	●
C8 (Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM (Note 2, Note 3)	Mixed sizes and with port plug	●	●
MM (Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

CE compliant

Nil	—
Q	CE compliant

Cable (Length)

0	Without cable
1	Cable length 1.5 m
2	Cable length 3 m
3	Cable length 5 m

Option

Symbol	Option
Nil	None
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D1 (Note 3)	DIN rail length specified (□: Stations 02 to 16)
K (Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R (Note 5)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.


Note 5) Indicate "R" for the valve with external pilot.



Connector Assembly

Electric circuit diagram (Below wiring is the case of all double solenoid connections.)

Flat ribbon cable connector

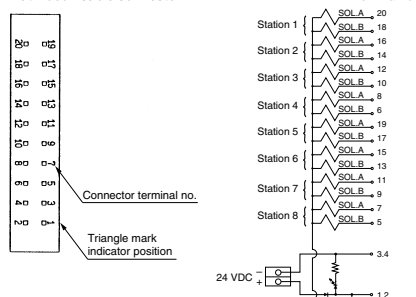

As the standard electrical wiring specifications, double wiring (connected to SOL.A and SOL.B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

How to Order Valve

10-VQ 1 1 0 0 - 5 - 1 -

Series

1	VQ1000
2	VQ2000

10 Clean series

21 Copper/Fluorine/Silicone free + Low particle generation

Seal

0	Metal seal
1	Rubber seal

Coil voltage

5	24 VDC
---	--------

Function

Symbol	Specifications	DC
Nil	Standard	(0.4 W)
B	High-speed response type	(0.95 W)
K ^{Note 1)}	High-pressure type (1.0 MPa)	(0.95 W)
R ^{Note 2)}	External pilot	

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

CE compliant

Nil	—
Q	CE compliant

Option

CE

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Flat ribbon cable kit with terminal block with cable (3 m)


10-VV5Q11-08C62 ... 1 set—Manifold base part no.
 *10-VQ1100-51 ... 4 sets—Valve part no. (Stations 1 to 4)
 *10-VQ1200-51 ... 1 set—Valve part no. (Station 5)
 *10-VQ1300-51 ... 3 sets—Valve part no. (Stations 6 to 8)

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

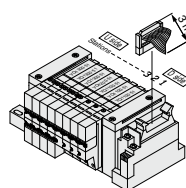


10-21-VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

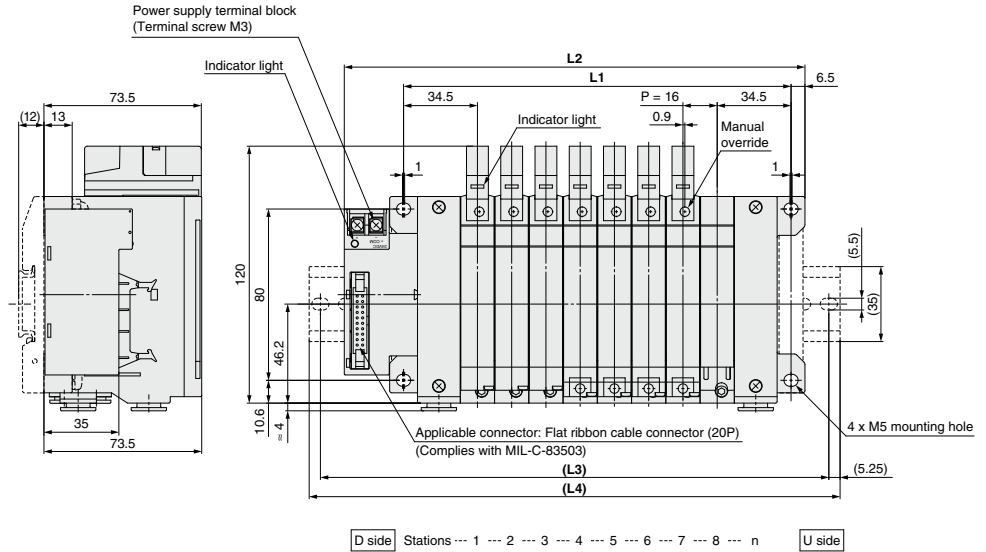

Flat ribbon cable connector assembly (20P)
AXT100-FC20-1: 1.5 m
AXT100-FC20-2: 3 m
AXT100-FC20-3: 5 m

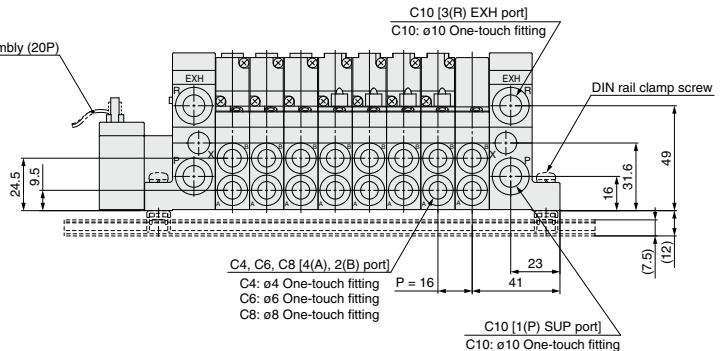

Dimensions

Formula $L1 = 16n + 53$, $L2 = 16n + 87$ n: Station (Maximum 16 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	
L2	119	135	151	167	183	199	215	231	247	263	279	295	311	327	343	
(L3)	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	362.5	
(L4)	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	

T Series¹⁰⁻²¹ VQ1000/2000 kit (Terminal block box)

IP65 compliant

- This kit has a small terminal block inside a junction box. The electrical entry port (¹⁰/₂₁: VQ1000: G 1/2, ²¹/₂₁: VQ2000: G 3/4) permits connection of conduit fittings.
- Maximum stations: 24 (¹⁰/₂₁: VQ1000), 20 (¹⁰/₂₁: VQ2000)
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
¹⁰ / ₂₁ : VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
¹⁰ / ₂₁ : VQ2000	Side	C10	C4, C6, C8	Max. 20 stations

Terminal Block Connection (¹⁰/₂₁: VQ1000)

Open the terminal block cover to connect the wires to the terminal block.

Step 1. Removing the terminal block cover

Loosen the screws on the terminal block cover and open it in the direction shown by the arrow. The cover can then be removed from the terminal block.






Step 2. Wiring

The diagram on the left shows the terminal block wiring schematic. All stations are provided with double solenoid wiring. Insert each lead wire into the terminal opening and tighten the screw directly above.

How to connect is inserting the lead wire into the terminal window, then tighten the screw on the top. (Tightening torque: 0.25 to 0.35 N·m)

Step 3. Mounting the terminal block cover

Hook groove (a) on shaft (b) and close the cover. Then tighten the screws.
• Drip proof plug assembly (for G 1/2): AXT100-B04A

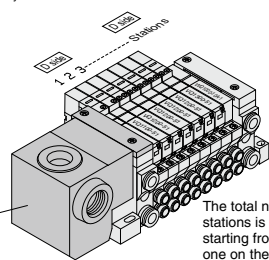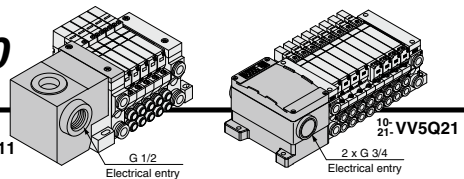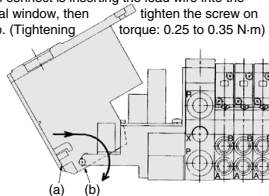

The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications: ¹⁰/₂₁: VQ1000

Terminal no.	COM (+)	Polarity
Station 1	SOLA 1A (-)	(+)
Station 2	SOLA 1B (-)	(+)
Station 3	SOLA 2A (-)	(+)
Station 4	SOLA 2B (-)	(+)
Station 5	SOLA 3A (-)	(+)
Station 6	SOLA 3B (-)	(+)
Station 7	SOLA 4A (-)	(+)
Station 8	SOLA 4B (-)	(+)
Station 9	SOLA 5A (-)	(+)
Station 10	SOLA 5B (-)	(+)
Station 11	SOLA 6A (-)	(+)
Station 12	SOLA 6B (-)	(+)
Station 13	SOLA 7A (-)	(+)
Station 14	SOLA 7B (-)	(+)
Station 15	SOLA 8A (-)	(+)
Station 16	SOLA 8B (-)	(+)
Station 17	SOLA 9A (-)	(+)
Station 18	SOLA 9B (-)	(+)
Station 19	SOLA 10A (-)	(+)
Station 20	SOLA 10B (-)	(+)
Station 21	SOLA 11A (-)	(+)
Station 22	SOLA 11B (-)	(+)
Station 23	SOLA 12A (-)	(+)
Station 24	SOLA 12B (-)	(+)
Station 25	SOLA 13A (-)	(+)
Station 26	SOLA 13B (-)	(+)
Station 27	SOLA 14A (-)	(+)
Station 28	SOLA 14B (-)	(+)
Station 29	SOLA 15A (-)	(+)
Station 30	SOLA 15B (-)	(+)
Station 31	SOLA 16A (-)	(+)
Station 32	SOLA 16B (-)	(+)
Station 33	SOLA 17A (-)	(+)
Station 34	SOLA 17B (-)	(+)
Station 35	SOLA 18A (-)	(+)
Station 36	SOLA 18B (-)	(+)
Station 37	SOLA 19A (-)	(+)
Station 38	SOLA 19B (-)	(+)
Station 39	SOLA 20A (-)	(+)
Station 40	SOLA 20B (-)	(+)
Station 41	SOLA 21A (-)	(+)
Station 42	SOLA 21B (-)	(+)
Station 43	SOLA 22A (-)	(+)
Station 44	SOLA 22B (-)	(+)
Station 45	SOLA 23A (-)	(+)
Station 46	SOLA 23B (-)	(+)
Station 47	SOLA 24A (-)	(+)
Station 48	SOLA 24B (-)	(+)
Station 49	SOLA 25A (-)	(+)
Station 50	SOLA 25B (-)	(+)
Station 51	SOLA 26A (-)	(+)
Station 52	SOLA 26B (-)	(+)
Station 53	SOLA 27A (-)	(+)
Station 54	SOLA 27B (-)	(+)
Station 55	SOLA 28A (-)	(+)
Station 56	SOLA 28B (-)	(+)
Station 57	SOLA 29A (-)	(+)
Station 58	SOLA 29B (-)	(+)
Station 59	SOLA 30A (-)	(+)
Station 60	SOLA 30B (-)	(+)
Station 61	SOLA 31A (-)	(+)
Station 62	SOLA 31B (-)	(+)
Station 63	SOLA 32A (-)	(+)
Station 64	SOLA 32B (-)	(+)
Station 65	SOLA 33A (-)	(+)
Station 66	SOLA 33B (-)	(+)
Station 67	SOLA 34A (-)	(+)
Station 68	SOLA 34B (-)	(+)
Station 69	SOLA 35A (-)	(+)
Station 70	SOLA 35B (-)	(+)
Station 71	SOLA 36A (-)	(+)
Station 72	SOLA 36B (-)	(+)
Station 73	SOLA 37A (-)	(+)
Station 74	SOLA 37B (-)	(+)
Station 75	SOLA 38A (-)	(+)
Station 76	SOLA 38B (-)	(+)
Station 77	SOLA 39A (-)	(+)
Station 78	SOLA 39B (-)	(+)
Station 79	SOLA 40A (-)	(+)
Station 80	SOLA 40B (-)	(+)
Station 81	SOLA 41A (-)	(+)
Station 82	SOLA 41B (-)	(+)
Station 83	SOLA 42A (-)	(+)
Station 84	SOLA 42B (-)	(+)
Station 85	SOLA 43A (-)	(+)
Station 86	SOLA 43B (-)	(+)
Station 87	SOLA 44A (-)	(+)
Station 88	SOLA 44B (-)	(+)
Station 89	SOLA 45A (-)	(+)
Station 90	SOLA 45B (-)	(+)
Station 91	SOLA 46A (-)	(+)
Station 92	SOLA 46B (-)	(+)
Station 93	SOLA 47A (-)	(+)
Station 94	SOLA 47B (-)	(+)
Station 95	SOLA 48A (-)	(+)
Station 96	SOLA 48B (-)	(+)
Station 97	SOLA 49A (-)	(+)
Station 98	SOLA 49B (-)	(+)
Station 99	SOLA 50A (-)	(+)
Station 100	SOLA 50B (-)	(+)
Station 101	SOLA 51A (-)	(+)
Station 102	SOLA 51B (-)	(+)
Station 103	SOLA 52A (-)	(+)
Station 104	SOLA 52B (-)	(+)
Station 105	SOLA 53A (-)	(+)
Station 106	SOLA 53B (-)	(+)
Station 107	SOLA 54A (-)	(+)
Station 108	SOLA 54B (-)	(+)
Station 109	SOLA 55A (-)	(+)
Station 110	SOLA 55B (-)	(+)
Station 111	SOLA 56A (-)	(+)
Station 112	SOLA 56B (-)	(+)
Station 113	SOLA 57A (-)	(+)
Station 114	SOLA 57B (-)	(+)
Station 115	SOLA 58A (-)	(+)
Station 116	SOLA 58B (-)	(+)
Station 117	SOLA 59A (-)	(+)
Station 118	SOLA 59B (-)	(+)
Station 119	SOLA 60A (-)	(+)
Station 120	SOLA 60B (-)	(+)
Station 121	SOLA 61A (-)	(+)
Station 122	SOLA 61B (-)	(+)
Station 123	SOLA 62A (-)	(+)
Station 124	SOLA 62B (-)	(+)
Station 125	SOLA 63A (-)	(+)
Station 126	SOLA 63B (-)	(+)
Station 127	SOLA 64A (-)	(+)
Station 128	SOLA 64B (-)	(+)
Station 129	SOLA 65A (-)	(+)
Station 130	SOLA 65B (-)	(+)
Station 131	SOLA 66A (-)	(+)
Station 132	SOLA 66B (-)	(+)
Station 133	SOLA 67A (-)	(+)
Station 134	SOLA 67B (-)	(+)
Station 135	SOLA 68A (-)	(+)
Station 136	SOLA 68B (-)	(+)
Station 137	SOLA 69A (-)	(+)
Station 138	SOLA 69B (-)	(+)
Station 139	SOLA 70A (-)	(+)
Station 140	SOLA 70B (-)	(+)
Station 141	SOLA 71A (-)	(+)
Station 142	SOLA 71B (-)	(+)
Station 143	SOLA 72A (-)	(+)
Station 144	SOLA 72B (-)	(+)
Station 145	SOLA 73A (-)	(+)
Station 146	SOLA 73B (-)	(+)
Station 147	SOLA 74A (-)	(+)
Station 148	SOLA 74B (-)	(+)
Station 149	SOLA 75A (-)	(+)
Station 150	SOLA 75B (-)	(+)
Station 151	SOLA 76A (-)	(+)
Station 152	SOLA 76B (-)	(+)
Station 153	SOLA 77A (-)	(+)
Station 154	SOLA 77B (-)	(+)
Station 155	SOLA 78A (-)	(+)
Station 156	SOLA 78B (-)	(+)
Station 157	SOLA 79A (-)	(+)
Station 158	SOLA 79B (-)	(+)
Station 159	SOLA 80A (-)	(+)
Station 160	SOLA 80B (-)	(+)
Station 161	SOLA 81A (-)	(+)
Station 162	SOLA 81B (-)	(+)
Station 163	SOLA 82A (-)	(+)
Station 164	SOLA 82B (-)	(+)
Station 165	SOLA 83A (-)	(+)
Station 166	SOLA 83B (-)	(+)
Station 167	SOLA 84A (-)	(+)
Station 168	SOLA 84B (-)	(+)
Station 169	SOLA 85A (-)	(+)
Station 170	SOLA 85B (-)	(+)
Station 171	SOLA 86A (-)	(+)
Station 172	SOLA 86B (-)	(+)
Station 173	SOLA 87A (-)	(+)
Station 174	SOLA 87B (-)	(+)
Station 175	SOLA 88A (-)	(+)
Station 176	SOLA 88B (-)	(+)
Station 177	SOLA 89A (-)	(+)
Station 178	SOLA 89B (-)	(+)
Station 179	SOLA 90A (-)	(+)
Station 180	SOLA 90B (-)	(+)
Station 181	SOLA 91A (-)	(+)
Station 182	SOLA 91B (-)	(+)
Station 183	SOLA 92A (-)	(+)
Station 184	SOLA 92B (-)	(+)
Station 185	SOLA 93A (-)	(+)
Station 186	SOLA 93B (-)	(+)
Station 187	SOLA 94A (-)	(+)
Station 188	SOLA 94B (-)	(+)
Station 189	SOLA 95A (-)	(+)
Station 190	SOLA 95B (-)	(+)
Station 191	SOLA 96A (-)	(+)
Station 192	SOLA 96B (-)	(+)
Station 193	SOLA 97A (-)	(+)
Station 194	SOLA 97B (-)	(+)
Station 195	SOLA 98A (-)	(+)
Station 196	SOLA 98B (-)	(+)
Station 197	SOLA 99A (-)	(+)
Station 198	SOLA 99B (-)	(+)
Station 199	SOLA 100A (-)	(+)
Station 200	SOLA 100B (-)	(+)
Station 201	SOLA 101A (-)	(+)
Station 202	SOLA 101B (-)	(+)
Station 203	SOLA 102A (-)	(+)
Station 204	SOLA 102B (-)	(+)
Station 205	SOLA 103A (-)	(+)
Station 206	SOLA 103B (-)	(+)
Station 207	SOLA 104A (-)	(+)
Station 208	SOLA 104B (-)	(+)
Station 209	SOLA 105A (-)	(+)
Station 210	SOLA 105B (-)	(+)
Station 211	SOLA 106A (-)	(+)
Station 212	SOLA 106B (-)	(+)
Station 213	SOLA 107A (-)	(+)
Station 214	SOLA 107B (-)	(+)
Station 215	SOLA 108A (-)	(+)
Station 216	SOLA 108B (-)	(+)
Station 217	SOLA 109A (-)	(+)
Station 218	SOLA 109B (-)	(+)
Station 219	SOLA 110A (-)	(+)
Station 220	SOLA 110B (-)	(+)
Station 221	SOLA 111A (-)	(+)
Station 222	SOLA 111B (-)	(+)
Station 223	SOLA 112A (-)	(+)
Station 224	SOLA 112B (-)	(+)
Station 225	SOLA 113A (-)	(+)
Station 226	SOLA 113B (-)	(+)
Station 227	SOLA 114A (-)	(+)
Station 228	SOLA 114B (-)	(+)
Station 229	SOLA 115A (-)	(+)
Station 230	SOLA 115B (-)	(+)
Station 231	SOLA 116A (-)	(+)
Station 232	SOLA 116B (-)	(+)
Station 233	SOLA 117A (-)	(+)
Station 234	SOLA 117B (-)	(+)
Station 235	SOLA 118A (-)	(+)
Station 236	SOLA 118B (-)	(+)
Station 237	SOLA 119A (-)	(+)
Station 238	SOLA 119B (-)	(+)
Station 239	SOLA 120A (-)	(+)
Station 240	SOLA 120B (-)	(+)
Station 241	SOLA 121A (-)	(+)
Station 242	SOLA 121B (-)	(+)
Station 243	SOLA 122A (-)	(+)
Station 244	SOLA 122B (-)	(+)
Station 245	SOLA 123A (-)	(+)
Station 246	SOLA 123B (-)	(+)
Station 247	SOLA 124A (-)	(+)
Station 248	SOLA 124B (-)	(+)
Station 249	SOLA 125A (-)	(+)
Station 250	SOLA 125B (-)	(+)
Station 251	SOLA 126A (-)	(+)
Station 252	SOLA 126B (-)	(+)
Station 253	SOLA 127A (-)	(+)
Station 254	SOLA 127B (-)	(+)
Station 255	SOLA 128A (-)	(+)
Station 256	SOLA 128B (-)	(+)
Station 257	SOLA 129A (-)	(+)
Station 258	SOLA 129B (-)	(+)
Station 259	SOLA 130A (-)	(+)
Station 260	SOLA 130B (-)	(+)
Station 261	SOLA 131A (-)	(+)
Station 262	SOLA 131B (-)	(+)
Station 263	SOLA 132A (-)	(+)
Station 264	SOLA 132B (-)	(+)
Station 265	SOLA 133A (-)	(+)
Station 266	SOLA 133B (-)	(+)
Station 267	SOLA 134A (-)	(+)
Station 268	SOLA 134B (-)	(+)
Station 269	SOLA 135A (-)	(+)
Station 270	SOLA 135B (-)	(+)
Station 271	SOLA 136A (-)	(+)
Station 272	SOLA 136B (-)	(+)
Station 273	SOLA 137A (-)	(+)
Station 274	SOLA 137B (-)	(+)
Station 275	SOLA 138A (-)	(+)
Station 276	SOLA 138B (-)	(+)
Station 277	SOLA 139A (-)	(+)
Station 278	SOLA 139B (-)	(+)
Station 279	SOLA 140A (-)	(+)
Station 280	SOLA 140B (-)	(+)
Station 281	SOLA 141A (-)	(+)
Station 282	SOLA 141B (-)	(+)
Station 283	SOLA 142A (-)	(+)
Station 284	SOLA 142B (-)	(+)
Station 285	SOLA 143A (-)	(+)
Station 286	SOLA 143B (-)	(+)
Station 287	SOLA 144A (-)	(+)
Station 288	SOLA 144B (-)	(+)
Station 289	SOLA 145A (-)	(+)
Station 290	SOLA 145B (-)	(+)
Station 291	SOLA 146A (-)	(+)
Station 292	SOLA 146B (-)	(+)
Station 293	SOLA 147A (-)	(+)
Station 294	SOLA 147B (-)	(+)
Station 295	SOLA 148A (-)	(+)
Station 296	SOLA 148B (-)	(+)
Station 297	SOLA 149A (-)	(+)
Station 298	SOLA 149B (-)	(+)
Station 299	SOLA 150A (-)	(+)
Station 300	SOLA 150B (-)	(+)
Station 301	SOLA 151A (-)	(+)
Station 302	SOLA 151B (-)	(+)
Station 303	SOLA 152A (-)	(+)
Station 304	SOLA 152B (-)	(+)
Station 305	SOLA 153A (-)	(+)
Station 306	SOLA 153B (-)	(+)
Station 307	SOLA 154A (-)	(+)
Station 308	SOLA 154B (-)	(+)
Station 309	SOLA 155A (-)	(+)
Station 310	SOLA 155B (-)	(+)
Station 311	SOLA 156A (-)	(+)
Station 312	SOLA 156B (-)	(+)
Station 313	SOLA 157A (-)	(+)
Station 314	SOLA 157B (-)	(+)
Station 315	SOLA 158A (-)	(+)
Station 316	SOLA 158B (-)	(+)
Station 317	SOLA 159A (-)	(+)
Station 318	SOLA 159B (-)	(+)
Station 319	SOLA 160A (-)	(+)
Station 320	SOLA 160B (-)	(+)
Station 321	SOLA 161A (-)	(+)
Station 322	SOLA 161B (-)	(+)
Station 323	SOLA 162A (-)	(+)
Station 324</		

Terminal Block Wiring (10-21-VQ2000)

Open the terminal block cover to connect the wires to the terminal block.



Step 1. Removing the terminal block cover

Loosen mounting screws (4 pcs.) on the terminal block cover and remove the cover.

Step 2. Wiring

Loosen screws on the terminal block, connect wiring and complete it by tightening screws. (Tightening torque: 0.5 to 0.7 N·m)

The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

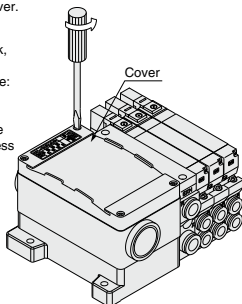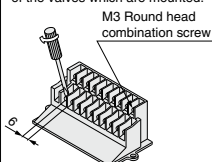


Step 3. Mounting the terminal block cover

Securely tighten the screws after confirming that the gasket is installed correctly. (Tightening torque: 0.7 to 1.2 N·m)

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof assembly (for G 3/4): AXT100-B06A

Special Wiring Specifications: 10-21-VQ2000

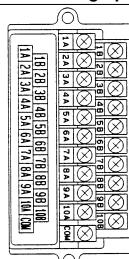

As the standard electrical wiring specifications, double wiring (connected to SOL A and SOL B) is adopted for the internal wiring of each station for 10 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common.

Refer to "Semi-standard" on page 562 for details.

	Terminal no.	Polarity
Station 1	SOL A 1A	(-) (+)
	SOL B 1B	(-) (+)
Station 2	SOL A 2A	(-) (+)
	SOL B 2B	(-) (+)
Station 3	SOL A 3A	(-) (+)
	SOL B 3B	(-) (+)
Station 4	SOL A 4A	(-) (+)
	SOL B 4B	(-) (+)
Station 5	SOL A 5A	(-) (+)
	SOL B 5B	(-) (+)
Station 6	SOL A 6A	(-) (+)
	SOL B 6B	(-) (+)
Station 7	SOL A 7A	(-) (+)
	SOL B 7B	(-) (+)
Station 8	SOL A 8A	(-) (+)
	SOL B 8B	(-) (+)
Station 9	SOL A 9A	(-) (+)
	SOL B 9B	(-) (+)
Station 10	SOL A 10A	(-) (+)
	SOL B 10B	(-) (+)
	COM.	(-) (+)

Note)
Positive COM spec. Negative COM spec.

How to Order Valve

Note) For CE compliant models, DC-type only.

CE [Option]

10-VQ 1 1 0 0 - 5 - 1 -

Series

1	VQ1000
2	VQ2000

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3)	External pilot	○	○

Coil voltage

	CE compliant
1	100 VAC (50/60 Hz) —
3	110 VAC (50/60 Hz) —
5	24 VDC ○
6	12 VDC ●

Note 1) Refer to page 522 for power consumption of AC type.

Note 2) Metal seal only

Note 3) Refer to "Semi-standard" on pages 562 to 563 for external pilot and negative common specifications.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Terminal block box kit

10-VVQ11-08C6T0-1 set-Manifold base part no.
 *10-VQ1100-51 ... 2 sets-Valve part no. (Stations 1 to 2)
 *10-VQ1200-51 ... 4 sets-Valve part no. (Stations 3 to 6)
 *10-VQ1300-51 ... 1 set-Valve part no. (Station 7)
 *VVQ1000-10A-1 ... 1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

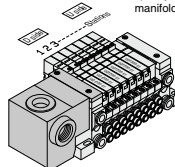

Caution


Use the standard (DC) specification when continuously energizing for long periods of time.

T Series ¹⁰⁻²¹⁻VQ1000/2000 kit (Terminal block box)

10-21-VV5Q11

< >: AC

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

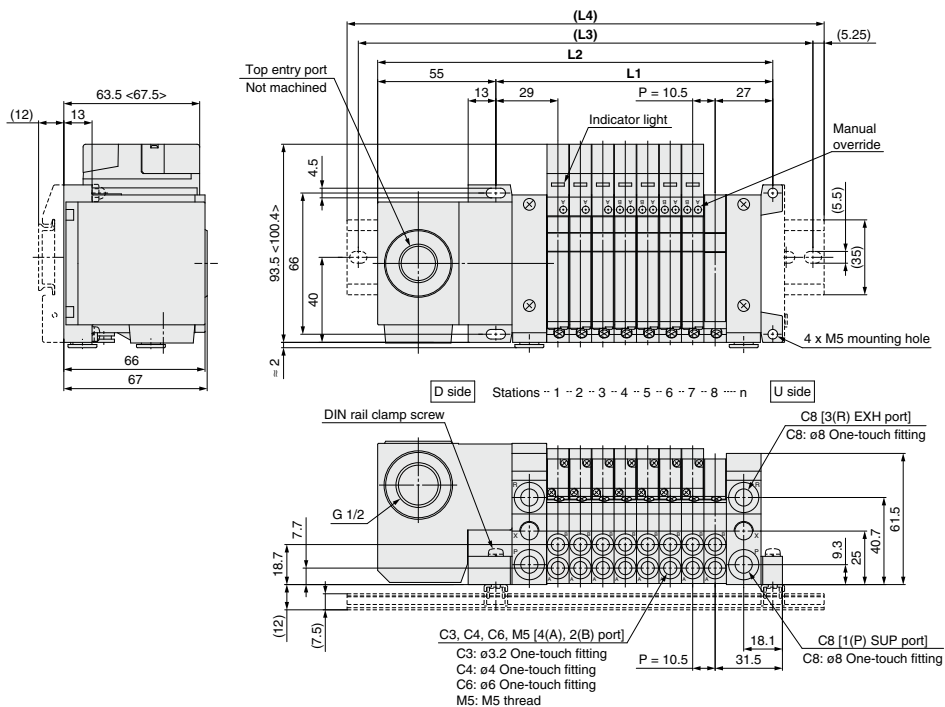

Dimensions

Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2		126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)		150	162.5	175	187.5	197.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)		160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398

With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)


L2 = 10.5n + 88.8 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.

10-21-VV5Q21

< >: AC

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

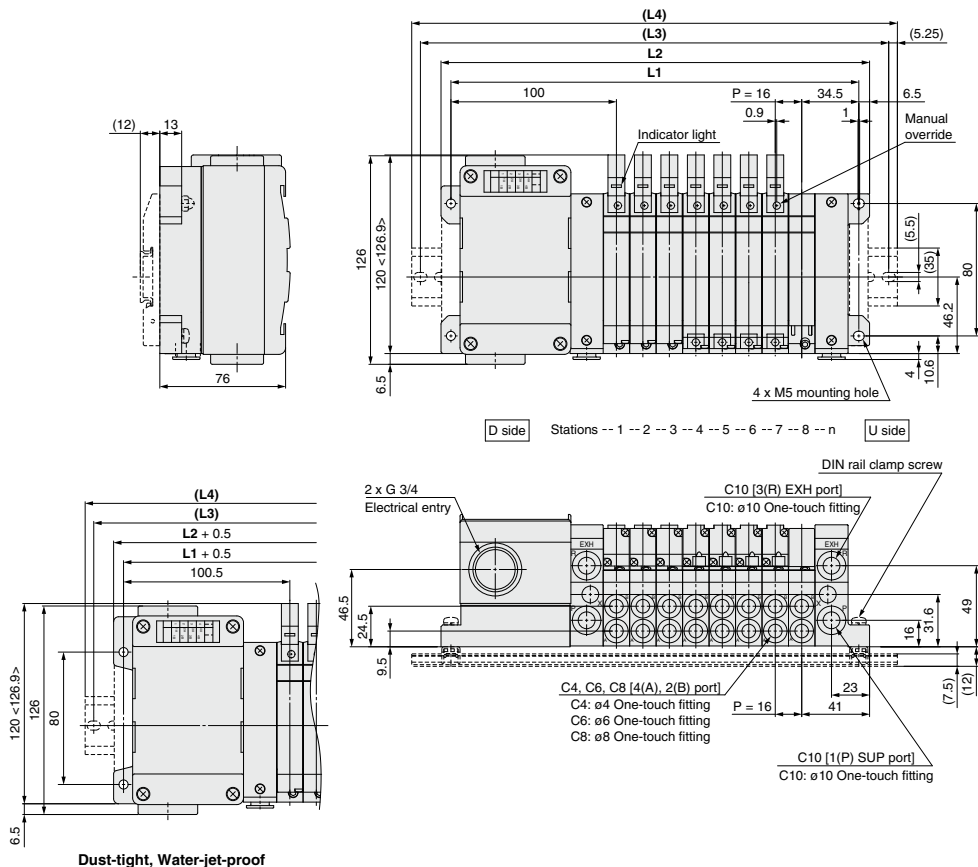


Dimensions

Formula $L1 = 16n + 118.5$, $L2 = 16n + 131$ n: Station (Maximum 20 stations)

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5

- Direct electrical entry. Models with one or more stations are available.
- SUP and EXH ports are provided on one side for further space savings.
- Maximum stations are 8.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The red wire is for COM connection.

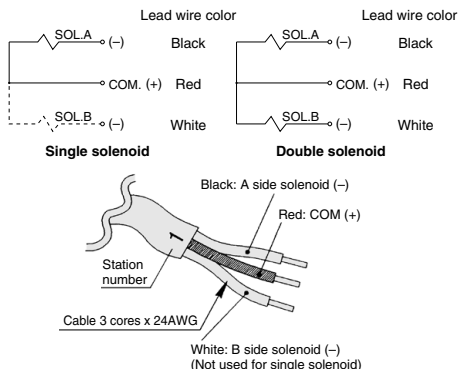


Use any of the below cable lead wire assembly to change the lead wire length:

Lead wire length	Part no.
0.6 m	VVQ1000-84A-6-*
1.5 m	VVQ1000-84A-15-*
3 m	VVQ1000-84A-30-*


* Station number 1 to 8

Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21- VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations
10-21- VQ2000	Side	C10	C6, C8	Max. 8 stations

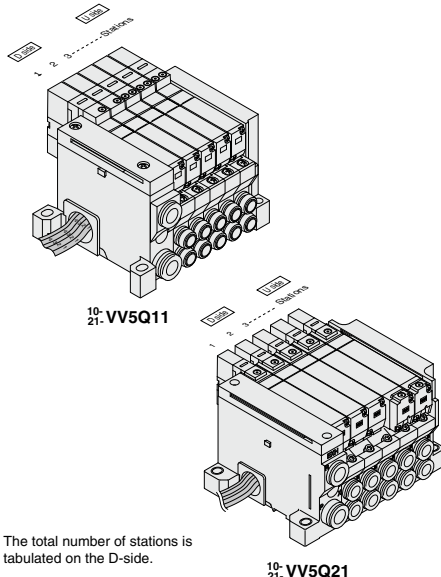

 The total number of stations is tabulated on the D-side.

Note) For CE compliant models, DC-type only.  [Option]



[Option]

10 Clean series

21 Copper/Fluorine/Silicone free + Low particle generation

1 Plug-in unit

01 1 station

08 8 stations

1- Series

06 Cylinder port

C6 Cylinder port

L Cylinder port

1 Cable length

0 Cable length 0.6 m

1 Cable length 1.5 m

2 Cable length 3 m

Note) For negative common specifications, refer to "Semi-standard" on page 562.

- **Cylinder port**

Symbol	Port size	VQ1000	VQ2000
C3 <small>Note 1)</small>	With ø3.2 One-touch fitting	●	—
C4 <small>Note 1)</small>	With ø4 One-touch fitting	●	●
C6 <small>Note 1)</small>	With ø6 One-touch fitting	●	●
C8 <small>Note 1)</small>	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
M <small>Note 2) Note 3)</small>	Mixed sizes and with port plug	●	●
CM <small>Note 4)</small>	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting)

flow fitting assembly, or double check block (direct mounting), enter "44" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

- CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

- Option

Symbol	Option	VQ1000	VQ2000
N il	None	●	●
2	200/220 VAC models (F/L kit only)	●	●
B (Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D (Note 3)	DIN rail length specified (□: Stations 02 to 08)	●	●
N	With name plate	●	●
R (Note 4)	External input	●	●
W	Enclosure: Dust-tight, Water-tight (IP65)	—	—

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR


Note 2) Models with a suffix "-R" have a

Note 2) models with a built-in ΔP have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain

manifold stations, specify the mounting position by means of the manifold specification sheet.



Note 3) The number of stations that may be displayed

Note 4) Indicate "R" for the valve with external pilot.

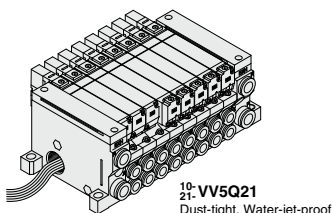

• Wiring Specifications: Negative COM (Semi-standard)

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The black wire is for COM connection.

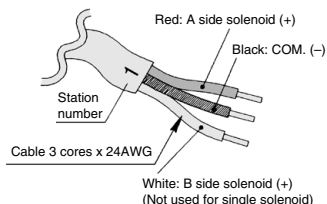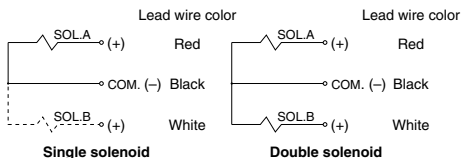

Lead wire assembly with connector

Lead wire length	Part no.
0.6 m	VVQ1000-84AN-6-*
1.5 m	VVQ1000-84AN-15-*
3 m	VVQ1000-84AN-30-*

* Station number 1 to 8

Note) When using the negative common specifications, use valves for negative common. For negative common specifications, refer to "Semi-standard" on page 562.

How to Order Valve

10-VQ 1 1 0 0 - 5

Series

1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

10 Clean series

21	Copper/Fluorine/Silicone free + Low particle generation
----	---

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	(Note 1)
B	High-speed response type	(0.95 W)	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	—
N (Note 3)	Negative common	—	—
R (Note 3)	External pilot	—	—

Note) For CE compliant models, DC-type only.



• CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

• Enclosure

Nil	Dust-protected
W (Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

• Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

• Light/surge voltage suppressor

Nil	Yes
E	None

• Coil voltage

	CE compliant
1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Lead wire kit with cable (3 m)
10-VV5Q11-06C6L2...1 set-Manifold base part no.
*10-VQ1100-51...2 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-51...2 sets-Valve part no. (Stations 3 to 4)
*10-VQ1300-51...2 sets-Valve part no. (Station 5)
*VVQ1000-10A-1...1 set-Blanking plate part no. (Station 6)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

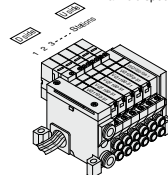

⚠ Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


Note 1) Refer to page 522 for power consumption of AC type.
Note 2) Metal seal only.
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

L Series ¹⁰⁻21- **VQ1000/2000** kit (Lead wire)

10-
21- **VV5Q11**

< >: AC


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

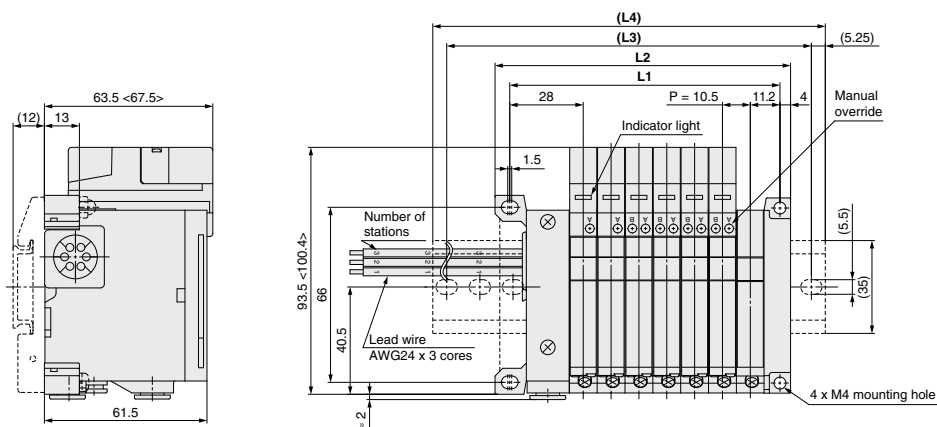

D side

Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- n

U side

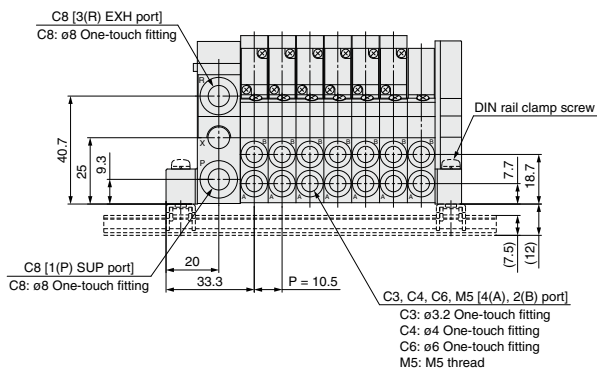

Formula L1 = 10.5n + 28.5, L2 = 10.5n + 38
 n: Station (Maximum 8 stations)

Dimensions

n	1	2	3	4	5	6	7	8
L1	39	49.5	60	70.5	81	91.5	102	112.5
L2	48.5	59	69.5	80	90.5	101	111.5	122
(L3)	75	87.5	87.5	100	112.5	125	137.5	150
(L4)	85.5	98	98	110.5	123	135.5	148	160.5

With ejector unit: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7)
 L2 = 10.5n + 38 + (Number of ejector units x 26.7)
 L4 is L2 plus about 30.

Air Cylinders

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).



Air Grippers



Formula L1 = 16n + 35, L2 = 16n + 47
n: Station (Maximum 8 stations)

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment


Pressure Switches/
Pressure Sensors

S

Series¹⁰⁻²¹ VQ1000/2000

kit (Serial transmission) Base mounted plug-in manifold: For EX510 Gateway-type serial transmission system

How to Order Manifold

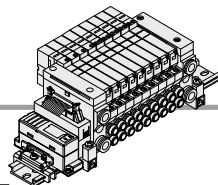

10 - VV5Q 1 1 - SB 08 - D -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Manifold series

1	VQ1000
2	VQ2000

SI unit specifications

NII	NPN output (+COM.)
N	PNP output (-COM.)

Valve stations

Symbol	Stations
01	1 station
⋮	⋮
08	8 stations

Note) Max. 16 stations.
(Special wiring specifications)

SI unit part no.

Symbol	SI unit specifications	SI unit part no.
NII	NPN output (+COM.)	EX510-S002A
N	PNP output (-COM.)	EX510-S102A

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM ^{Note 1)}	With mixed sizes and with port plug	●	●
L3	Top ported elbow with ø3.2 One-touch fitting	●	—
L4	Top ported elbow with ø4 One-touch fitting	●	●
L6	Top ported elbow with ø6 One-touch fitting	●	●
L8	Top ported elbow with ø8 One-touch fitting	—	●
L5	Top ported elbow M5 thread	●	—
B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
B4	Bottom ported elbow with ø4 One-touch fitting	●	●
B6	Bottom ported elbow with ø6 One-touch fitting	●	●
B8	Bottom ported elbow with ø8 One-touch fitting	—	●
B5	Bottom ported elbow M5 thread	●	—
LM ^{Note 1)}	Elbow port, mixed sizes	●	●
N1	ø1/8" with One-touch fitting	●	—
N3	ø5/32" with One-touch fitting	●	●
N7	ø1/4" with One-touch fitting	●	●
N9	ø5/16" with One-touch fitting	—	●
M5T	UNF10-32 thread	●	—
NM ^{Note 1)}	With mixed sizes and with port plug	●	●
LN1	Top ported elbow with ø1/8" One-touch fitting	●	—
LN3	Top ported elbow with ø5/32" One-touch fitting	●	●
LN7	Top ported elbow with ø1/4" One-touch fitting	●	●
LN9	Top ported elbow with ø5/16" One-touch fitting	—	●
L5T	Top ported elbow UNF10-32 thread	●	—
BN1	Bottom ported elbow with ø1/8" One-touch fitting	●	—
BN3	Bottom ported elbow with ø5/32" One-touch fitting	●	●
BN7	Bottom ported elbow with ø1/4" One-touch fitting	●	●
BN9	Bottom ported elbow with ø5/16" One-touch fitting	—	●
B5T	Bottom ported elbow UNF10-32 thread	●	—
LM ^{Note 1)}	Elbow port, mixed sizes	●	●
MM ^{Note 2)}	Mixed size for different types of piping, option installed	●	●

Note 1) Indicate "Mixed sizes and with port plug" in the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Refer to the **WEB catalog** for details on the EX510 gateway-type serial transmission system.

CE compliant

NII	—
Q	CE compliant

Option

NII	None
B ^{Note 2)}	With back pressure check valve
D ^{Note 5)}	DIN rail length specified (□: Stations 02 to 16)
K ^{Note 3)}	Special wiring spec. (Except double wiring)
N	With name plate
R ^{Note 4)}	with external pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) Specify the wiring specifications by means of the manifold specification sheet.


Note 4) Indicate "R" for the valve with external pilot.

Note 5) The number of stations that may be displayed is longer than the manifold number of stations.

DIN rail mounting

How to Order Manifold Assembly

Example

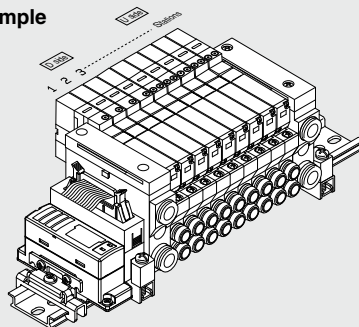

10-VV511-SB08C6-D-1 set (SB kit, 8-station manifold part no.)
10-VQ1100-S1 4 sets (Single type part no.)
10-VQ1200-S1 3 sets (Double type part no.)
10-VQ1300-S1 1 set (3 position type part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part no. of the solenoid valve, etc.

Enter in order starting from the first station on the D-side.

Add the valve and option part numbers under the manifold base part number. For complex arrangements, specify them by means of the manifold specification sheet.



How to Order Valve

10-VQ1100-51-

10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Series
1 VQ1000
2 VQ2000

Actuation type

1	2-position single	
	2-position double	
2	2-position double	
	3-position closed center	
3	3-position exhaust center	
	3-position pressure center	

CE compliant
Nil —
Q CE compliant

Manual override
Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)

Rated voltage
5 24 VDC

Function



Symbol	Specifications
Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K <small>Note 1)</small>	High-pressure type (1.0 MPa) [0.95 W]
N <small>Note 2)</small>	Negative common
R <small>Note 2)</small>	External pilot

Note 1) Metal seal only
 Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
 Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.


Seal
0 Metal seal
1 Rubber seal

10-21-VV5Q11

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

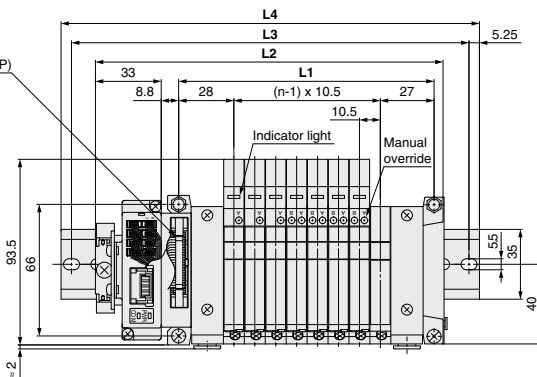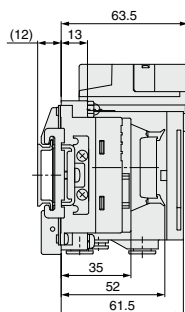

D side Stations ~ 1 ~ 2 ~ 3 ~ 4 ~ 5 ~ 6 ~ 7 ~ 8 ~ n U side

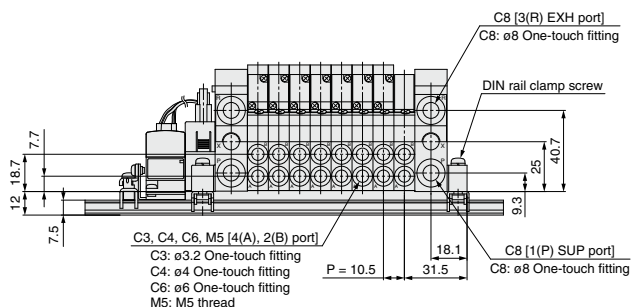


Dimensions

Formula $L1 = 10.5n + 44.5$, $L2 = 10.5n + 91$ n: Station (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	101.5	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259
L3	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5
L4	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298

10-21-VV5Q21

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

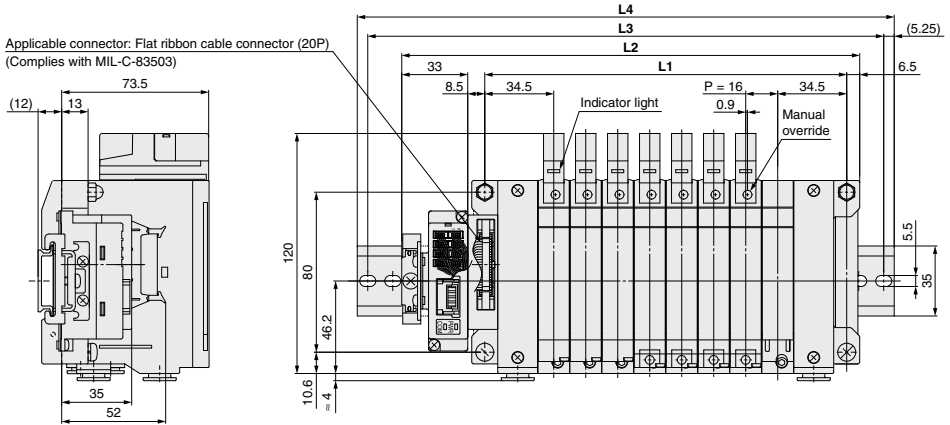

D side Stations -- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 --- n U side

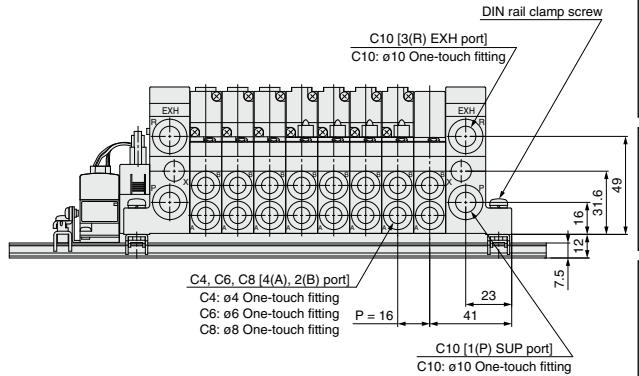

Dimensions

Formula $L1 = 16n + 53$, $L2 = 16n + 101$ n: Station (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		69	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2		117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357
L3		137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L4		148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398

S Series¹⁰⁻²¹ VQ1000/2000

kit (Serial transmission): For EX120/123/124 Integrated-type (Output) serial transmission system

IP65 compliant

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)


Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21-VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations
10-21-VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

Note) Refer to "SI Unit Part No." when ordering the CE-compliant SI unit.



How to Order Manifold

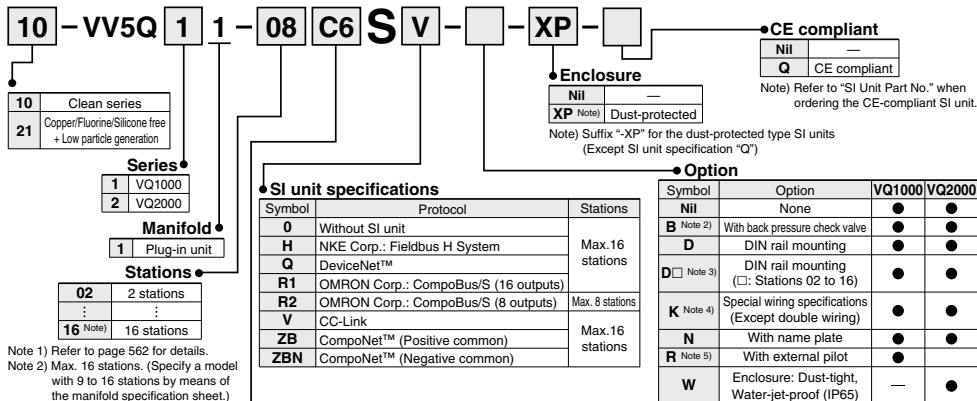

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM	Mixed sizes and with port plug	●	●
MM	Mixed size for different types of piping, option installed	●	●

- Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
 Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
- Note 2) Indicate as "LM" for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
- Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.
- Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Note 1) When two or more symbols are specified, indicate them alphabetically.
 Example) -BNR.

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

SI Unit Part No.

(Without option W [Dust-protected (-XP) is included.])


Symbol	Protocol	SI unit part no.	CE compliant
H	NKE Corp.: Fieldbus H System	Standard: EX120-SUH1 Dust-protected: EX120-SUH1-XP	—
Q	DeviceNet™	Standard: EX120-SDN1 Dust-protected: No part no.	●
R1	OMRON Corp.: CompoBus/S (16 outputs)	Standard: EX120-SCS1 Dust-protected: EX120-SCS1-XP	●
R2	OMRON Corp.: CompoBus/S (8 outputs)	Standard: EX120-SCS2 Dust-protected: EX120-SCS2-XP	●
V	CC-Link	Standard: EX120-SMJ1 Dust-protected: EX120-SMJ1-XP	●
ZB	CompoNet™ (Positive common)	Standard: EX120-SCM1 Dust-protected: No part no.	●
ZBN	CompoNet™ (Negative common)	Standard: EX120-SCM3 Dust-protected: No part no.	●

SI Unit Part No. (With option W)


Symbol	Protocol	SI unit part no.	CE compliant
H	NKE Corp.: Fieldbus H System	EX123D-SUH1	—
Q	DeviceNet™	EX124D-SDN1	●
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX124D-SCS1	●
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX124D-SCS2	●
V	CC-Link	EX124D-SMJ1	●

Refer to the **WEB catalog** for details on the EX120/123/124 integrated-type (Output) serial transmission system.


* Refer to the **WEB catalog** for details on CompoNet™.

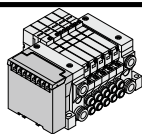


10-21-VV5Q11

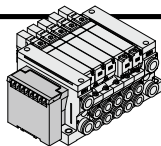

10-21-VV5Q21

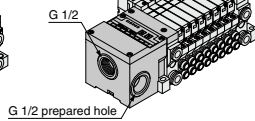

10-21-VV5Q11
Dust-protected (-XP)

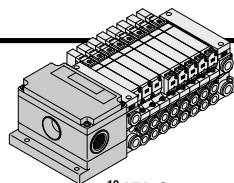

10-21-VV5Q21
Dust-tight, Water-jet-proof (-W)



[Option]

How to Order Valve

10-VQ1100-51-1

Series

1	VQ1000
2	VQ2000

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

Enclosure

Nil	Dust-protected
W (Note)	Dust-tight, Water-jet-proof (IP65)

(Note) ≧ VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Coil voltage

5	24 VDC With indicator light/ surge voltage suppressor
---	---

Function

Symbol	Specifications	DC
Nil	Standard	(0.4 W) ○
B	High-speed response type	(0.95 W) ○
K (Note 1)	High-pressure type (1.0 MPa)	(0.95 W) ○
N (Note 2)	Negative common	○
R (Note 2)	External pilot	○

Note 1) Metal seal only

Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

10-VV5Q11-08C6SV-1 set-Manifold base part no.
 *10-VQ1100-51 ... 2 sets-Valve part no. (Stations 1 to 2)
 *10-VQ1200-51 ... 4 sets-Valve part no. (Stations 3 to 6)
 *10-VQ1300-51 ... 1 set-Valve part no. (Station 7)
 *VVQ1000-10A-1 ... 1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side.
 When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

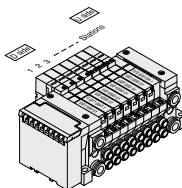

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.


Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors

**10-
21-VV5Q11**

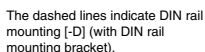

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(L3)	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(L4)	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273


Dust-protected SI unit: $L5 = 10.5n + 97$, $L6 = L3 + 25$, $L7 = L4 + 25$
Formula $L1 = 10.5n + 44.5$, $L2 = 10.5n + 72.5$ n : Station (Maximum 16 stations)

S Series¹⁰⁻21-VQ2000

kit (Serial transmission): For EX240 Integrated-type (I/O) serial transmission system **IP65 compliant**

VQ2000 only

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.

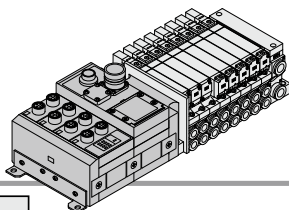

How to Order Manifold

10 - **VV5Q21** - **08** **C6** **S** **D** **QW** **1** - **N** **W** -

VQ2000
Plug-in series

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Stations

01	1 station
16	16 stations

Cylinder port

Symbol	Port size
C4 (Note 1)	With ø4 One-touch fitting
C6 (Note 1)	With ø6 One-touch fitting
C8 (Note 1)	With ø8 One-touch fitting
CM (Note 2) (Note 3)	Mixed sizes and with port plug
MM (Note 4)	Mixed size for different types of piping, option installed

SI unit mounting
D: D side mounting

- Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 one-touch fitting)
Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Refer to the **WEB catalog** for details on the EX240 integrated-type (I/O) serial transmission system.

How to Order Manifold

10 - **VQ** **2** **1** **0** **0** - **5** **W** **1** -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

Note) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.

Model

0W	Without SI unit
QW	DeviceNet™ +COM.
NWN	PROFIBUS-DP -COM.

Note) Only +COM is available for DeviceNet™. Order a mounting valve with +COM. Since PROFIBUS is -COM only, order -COM for valves to be mounted.

Enclosure
IP65 (Dust-tight, Water-jet-proof)

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Function

Symbol	Specifications	DC
Nil	Standard	(0.4 W) ○
B	High-speed response type	(0.95 W) ○
K (Note 1)	High-pressure type (1.0 MPa)	(0.95 W) ○
N (Note 2)	Negative common	○
R (Note 2)	External pilot	○

Coil voltage

5	24 VDC, With indicator light/surge voltage suppressor
----------	---

- Note 1) Metal seal only
Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 3) When a valve is compatible with PROFIBUS DP, the SI unit is negative common. Select valves for negative common.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.


CE compliant

Nil	—
Q	CE compliant

* Refer to "SI Unit Part No." when ordering the CE-compliant SI unit.

Caution
Use the standard (DC) specification when continuously energizing for long periods of time.

10-21-VV5Q21
(Serial transmission kit: EX240)

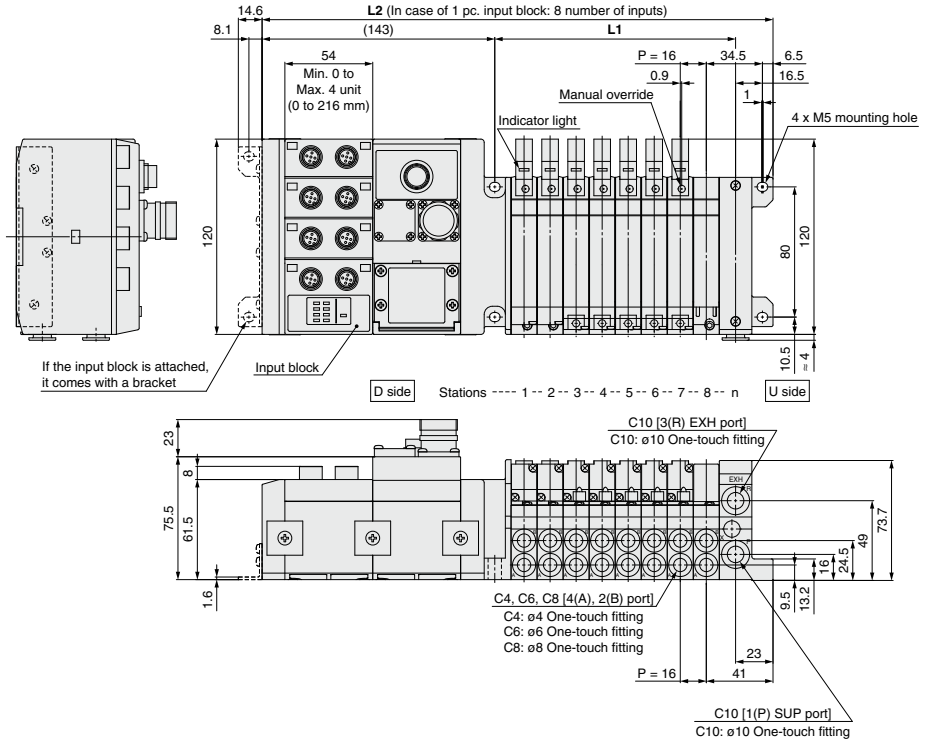


Dimensions

Formula $L1 = 16n + 36.5$ $L2 = 16n + 186$ (In case of 1 pc. DI unit, 54 mm will be added for increasing every 1 pc.)
n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		68.5	84.5	100.5	116.5	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5	308.5	324.5	340.5	356.5	372.5	388.5	404.5	420.5
L2		218	234	250	266	282	298	314	330	346	362	378	394	410	426	442	458	474	490	506	522	538	554	570

M Series¹⁰⁻²¹-VQ2000 kit (Circular connector)

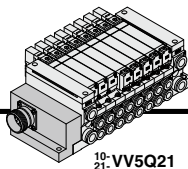

VQ2000 only

10-21-VV5Q21

- MIL flat cable connector reduces installation labor for electrical connection.
- Manifold and connectors, both compliant with the IP65 rating (Dust-tight, Water-jet-proof), provide a high-degree of protection for the electrical parts.
- Maximum stations are 24.

Manifold Specifications


Series	Piping specifications		Applicable stations
	Piping direction	Port size	
		1(P), 3(R), 4(A), 2(B)	
10-21: VQ2000	Side	C10	C4, C6, M8
			Max. 24 stations

Circular Connector (26 Pins)

Cable Assembly ●

AXT100-MC26-015
030
050

(Circular connector cable assembly included in a specific manifold model no.)
(Refer to "How to Order Manifold.")

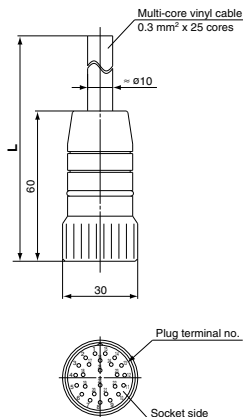

Circular connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-MC26-015	Cable 25-core x 24AWG
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

* Cannot be used for transfer wiring.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C or more	5

Note) The minimum bending radius of the circular connector cable is 20 mm.

Circular connector cable assembly terminal no.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Lengths other than the above are also available. Please contact SMC for details.

Note) For CE compliant models, DC-type only.



How to Order Manifold

10 - VV5Q 2 1 - 08 C6 M 1 - N -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Series
2 VQ2000

Manifold
1 Plug-in unit

02	2 stations
24	24 stations

Note) Refer to page 562 for details.

Cylinder port

Symbol	Port size
C4 (Note 1)	With ø4 One-touch fitting
C6 (Note 1)	With ø6 One-touch fitting
C8 (Note 1)	With ø8 One-touch fitting
CM (Note 2) Note 3	Mixed sizes and with port plug
MM (Note 4)	Mixed size for different types of piping, option installed

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Option

Symbol	Option
Nil	None
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ (Note 3)	DIN rail mounting (□: Stations 02 to 24)
K (Note 4)	Special wiring spec. (Except double wiring)
N	With name plate
R (Note 5)	External pilot
W	Enclosure: Dust-tight, Water-jet-proof (IP65)


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BKR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.


Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

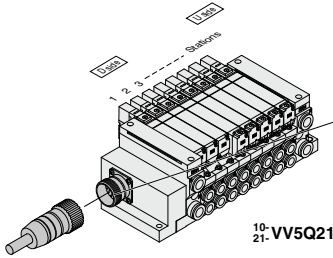

The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications

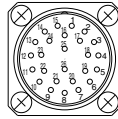

As the standard electrical wiring specifications, double wiring (connected to SOLA and SOLB) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.)
Refer to "Semi-standard" on page 562 for details.

Circular connector cable assembly

AXT100-MC26-030 Wire color

Terminal no.	Polarity	Lead wire color	Dot marking
Station 1	SOLA 1 (-)	(+)	Black
	SOLB 2 (-)	(+)	Brown
Station 2	SOLA 3 (-)	(+)	Red
	SOLB 4 (-)	(+)	Orange
Station 3	SOLA 5 (-)	(+)	Yellow
	SOLB 6 (-)	(+)	Pink
Station 4	SOLA 7 (-)	(+)	Blue
	SOLB 8 (-)	(+)	Purple
Station 5	SOLA 9 (-)	(+)	Gray
	SOLB 10 (-)	(+)	White
Station 6	SOLA 11 (-)	(+)	White
	SOLB 12 (-)	(+)	Yellow
Station 7	SOLA 13 (-)	(+)	Orange
	SOLB 14 (-)	(+)	Yellow
Station 8	SOLA 15 (-)	(+)	Pink
	SOLB 16 (-)	(+)	Blue
Station 9	SOLA 17 (-)	(+)	Purple
	SOLB 18 (-)	(+)	Gray
Station 10	SOLA 19 (-)	(+)	Orange
	SOLB 20 (-)	(+)	Red
Station 11	SOLA 21 (-)	(+)	Brown
	SOLB 22 (-)	(+)	Pink
Station 12	SOLA 23 (-)	(+)	Gray
	SOLB 24 (-)	(+)	Black
(Max.)	COM. 25 (-)	(+)	White
	COM. 26 (+)	(-)	White

Positive COM spec. Negative COM spec.

How to Order Valve

Note) For CE compliant models, DC-type only.

CE [Option]

10-VQ 2 1 0 0 - 5 - 1 -

Series
2 VQ2000

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	(Note 1)
B	High-speed response type	(0.95 W)	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	—
N (Note 3)	Negative common	—	—
R (Note 3)	External pilot	—	—

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

Note 1) For power consumption of AC type, refer to page 522.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Circular connector kit with cable (3 m)
10-VV5Q21-09C6M2-W...1 set-Manifold base part no.
*10-VQ2100-51...3 sets-Valve part no. (Stations 1 to 3)
*10-VQ2200-51...3 sets-Valve part no. (Stations 4 to 6)
*10-VQ2300-51...2 sets-Valve part no. (Stations 7 to 8)
*VVQ2000-10A-1...1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side.
When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

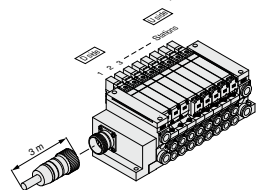


M Series ¹⁰⁻₂₁₋VQ2000 kit (Circular connector)

¹⁰⁻₂₁₋VV5Q21

< >: AC

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

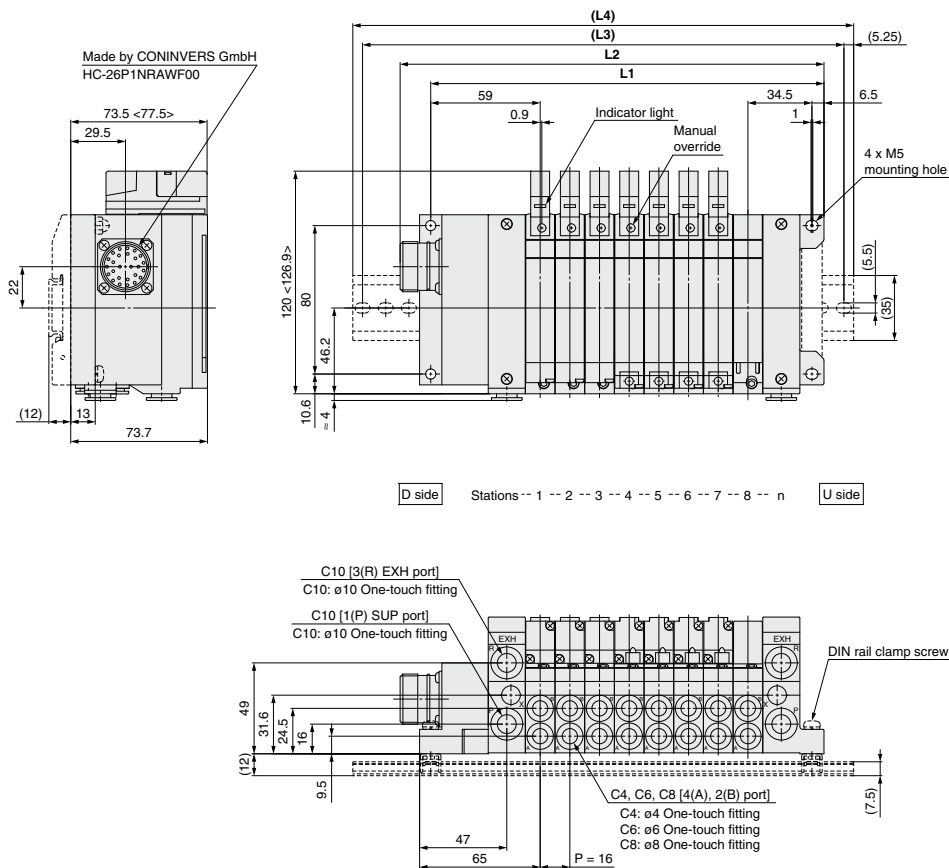

Dimensions

Formula $L1 = 16n + 77.5$, $L2 = 16n + 100.5$ n: Station (Maximum 12 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5
L2		132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5
(L3)		162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5
(L4)		173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323

Sub-plate Single Unit

CE
[Option]

Directional Control Valves

In the case of **Valve** + **Sub-plate**

10-VQ2 1 0 0-5 W 1-02 -

- CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

- **Thread type**

Nil	Rc
N	NPT
T	NPTF
F	G





- **Port size**

02	1/4
----	-----

In the case of **(Sub-plate)** alone

VQ2000 – PW – 02

Dimensions

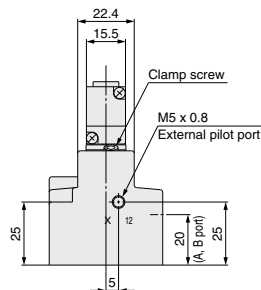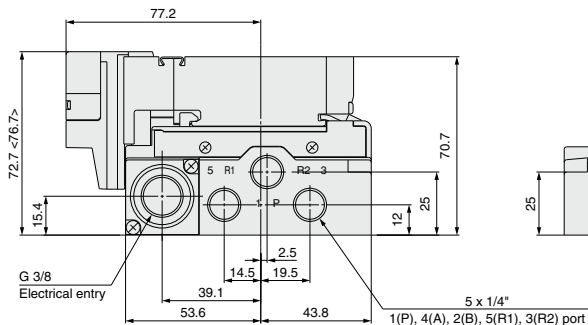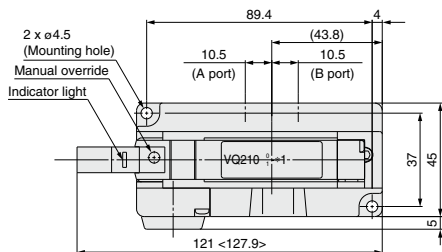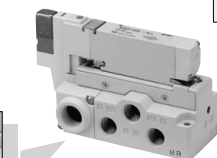

Note) When using this valve for IP65, mount a seal connector to the electrical entry.

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment


Pressure Switches/
Pressure Sensors

Semi-standard


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25P; P = 26P). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector)
15 pins

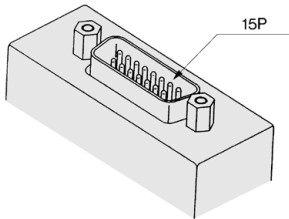


How to Order Manifold

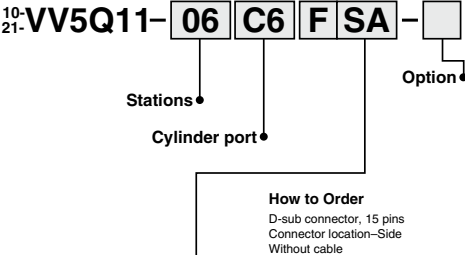

Kit type/Electrical entry

Pins \ Location	Top entry		Side entry	
15P (Max. 7 stations)	F kit	UA	F kit	SA

* In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

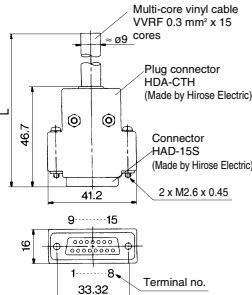

Wire Color Table by Terminal No. of
D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable)
10/16/20 pins

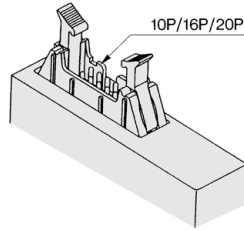


How to Order Manifold

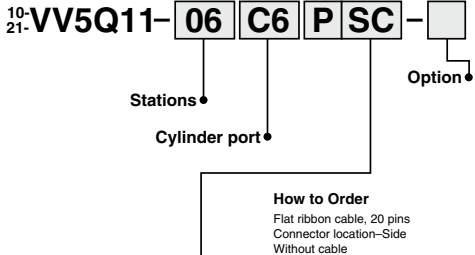

Kit type/Electrical entry

Location		Top entry		Side entry	
Pins		P kit	UA	P kit	SA
10P (Max. 4 stations)			UB		SB
16P (Max. 7 stations)			UC		SC
20P (Max. 9 stations)					

* In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

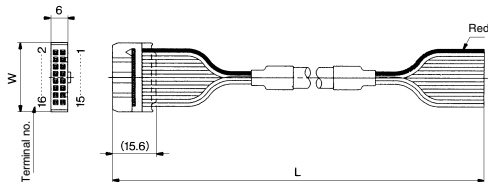

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

Special Wiring Specifications

In the internal wiring of F/P/J/G/T/S kit, double wiring (connected to SOL.A and SOL.B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol “-K”, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

10-21-VV5Q11-08C6FU1-D K S

Others, option symbols:
to be indicated alphabetically.

2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

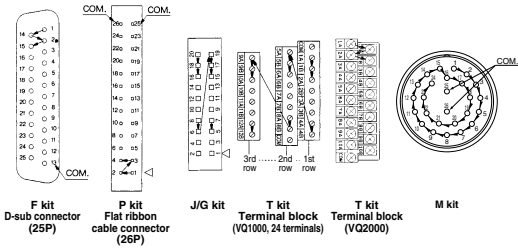

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub connector)		P kit (Flat ribbon cable)				J kit (Flat ribbon cable)	G kit (Flat ribbon cable with terminal block)
Type	F ^U _{25P}	F ^U _{A 15P}	P ^U _{26P}	P ^U _{C 20P}	P ^U _{16P}	P ^U _{B 10P}	J ^U _{20P}	G
Max. points	24	14	24	18	14	8	16	16

Kit	T kit (Terminal block box)		S kit (Serial transmission)	M kit (Circular connector)
Type	10-21-VQ1000	2 rows of terminal blocks	S	M
		3 rows of terminal blocks		
		16	24	
Max. points	10-21-VQ2000	20		24

Negative Common Specifications

Specify the valve model no. as shown below for negative common specification.

The manifold no. shown below is for the T (10-VQ1000) and L (10-VQ1000/2000) kits. For other kits the standard manifold can be used. However, negative common is not compatible with S (except EX510 gateway-type, EX240 integrated-type and EX120/121/122 integrated-type (CompoNet™)) and G kits.


How to Order Valve

10-21-VQ1100 N -51


• Negative common specifications

How to Order Manifold

T kit (VQ1000):

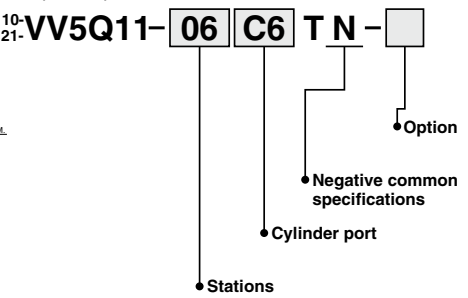

L kit (VQ1000/2000):

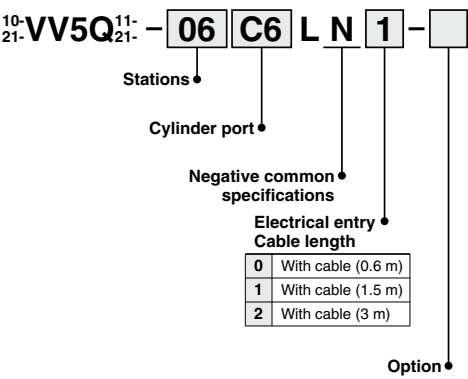

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors

Semi-standard

External Pilot Specifications

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R". The X-port of the manifold base is equipped with One-touch fittings for external pilot.

VQ1000: C4 (ø4 One-touch fitting)

VQ2000: C6 (ø6 One-touch fitting)

How to Order Manifold

10-
21-VV5Q11-08C6FU1-R S

External pilot specifications

Others, option symbols:
to be indicated alphabetically.

How to Order Valve

10-
21-VQ1100 R - 51

External pilot specifications

Note 1) When two or more functions are specified, indicate them alphabetically.

Note 2) Since the pilot EXH of this valve is released from the R1 passage, it is not possible to vacuum from a part other than EXH pressure and SUP ports.

Inch-size One-touch Fittings

The valve with inch-size One-touch fittings is shown below.

10-
21-VV5Q11-06 N7 PS0-

Stations

Option

Kit type/Electrical entry

Cylinder port

Symbol	N1	N3	N7	N9	M5T	NM
Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"	10-32UNF (MS thread)	Mixed
4(A), 2(B) port	VQ1000	●	●	—	●	●
	VQ2000	—	●	●	—	●

Note) When inch-size fittings are selected for the cylinder port, inch-size fittings are selected on 1(P), 3(R) port, too.

1(P), 3(R) port size

VQ1000 ø5/16" (N9)

VQ2000 ø3/8" (N11)

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

- When DIN rail is unnecessary
(DIN rail mounting brackets only are attached.)

Indicate the option symbol, -D0, for the manifold part number.

How to Order Manifold

10-
21-VV5Q11-08C6FU1-D0 S

Others, option symbols:
to be indicated alphabetically.

- When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol "D" for the manifold part number.

How to Order Manifold

10-
21-VV5Q11-08C6FU1-D09 S

DIN rail for 9 stations

Others, option symbols:
to be indicated alphabetically.

*The number of stations that may be displayed is longer than the manifold number of stations.

- When changing to a DIN rail mounting.

Order brackets for mounting a DIN rail. (Refer to "Manifold Optional Parts" on pages 572 and 574.)

No. VVQ1000-57A (For VQ1000)


VVQ2000-57A (For VQ2000)

2 pcs. per one set.

- When ordering DIN rail only

DIN rail no.: AXT100-DR-□

* As for □, specify the number from the DIN rail table.
Refer to the dimensions of each kit for L dimension.

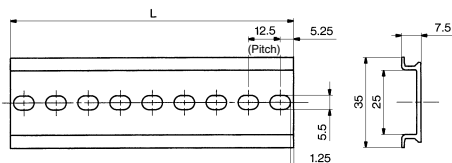

L Dimension


$L = 12.5 \times n + 10.5$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series 10-21-VQ1000/2000 Construction

10-21-VQ1000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

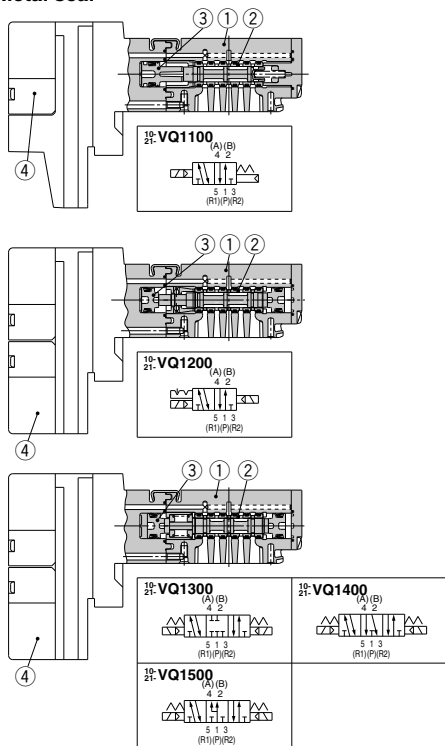


Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Rubber seal

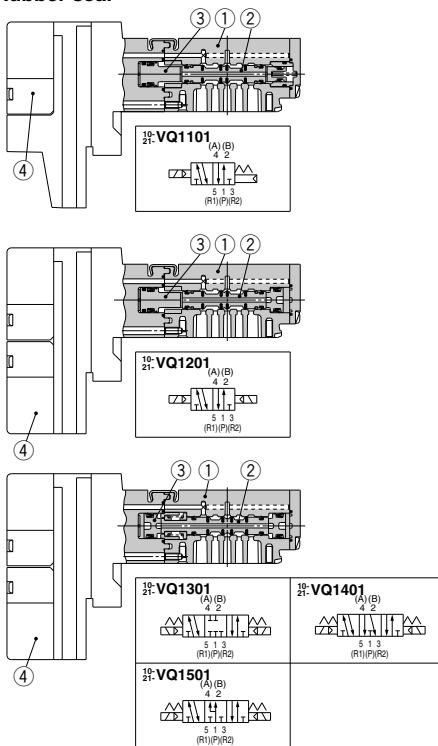

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Directional
Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation
Equipment

Modular F. R.

Pressure Control
Equipment


Fittings & Tubing

Flow Control
Equipment

Pressure Switches/
Pressure Sensors

10-
21-VQ2000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

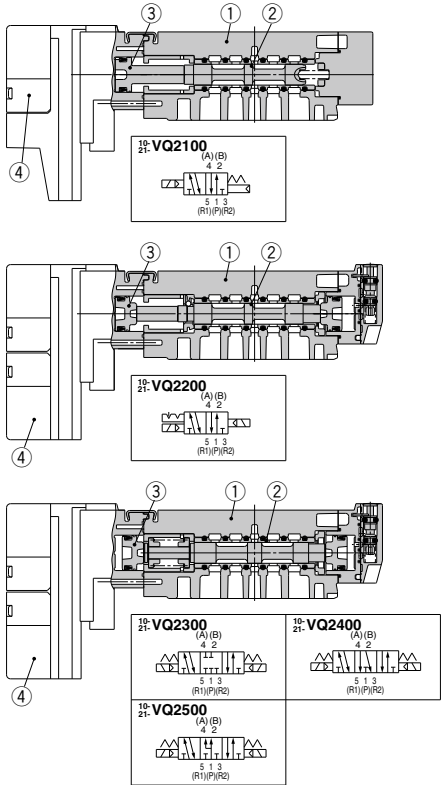


Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Rubber seal

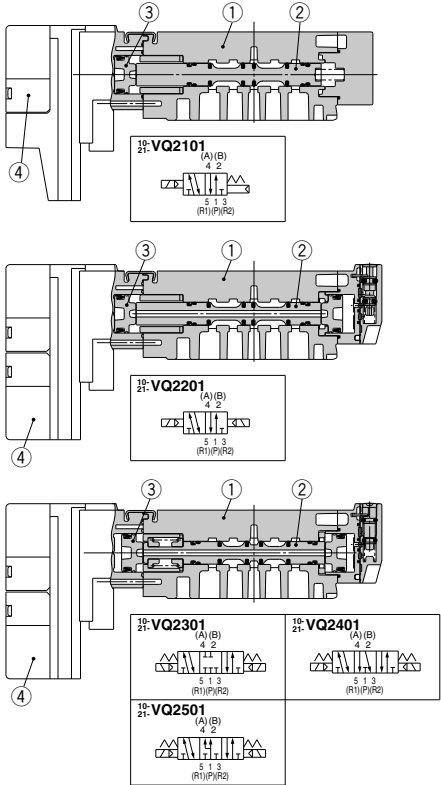

Component Parts


No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Exploded View of Manifold

10-
21-VQ1000 Plug-in Unit: Exploded View

(F/P/J/L/S kit)

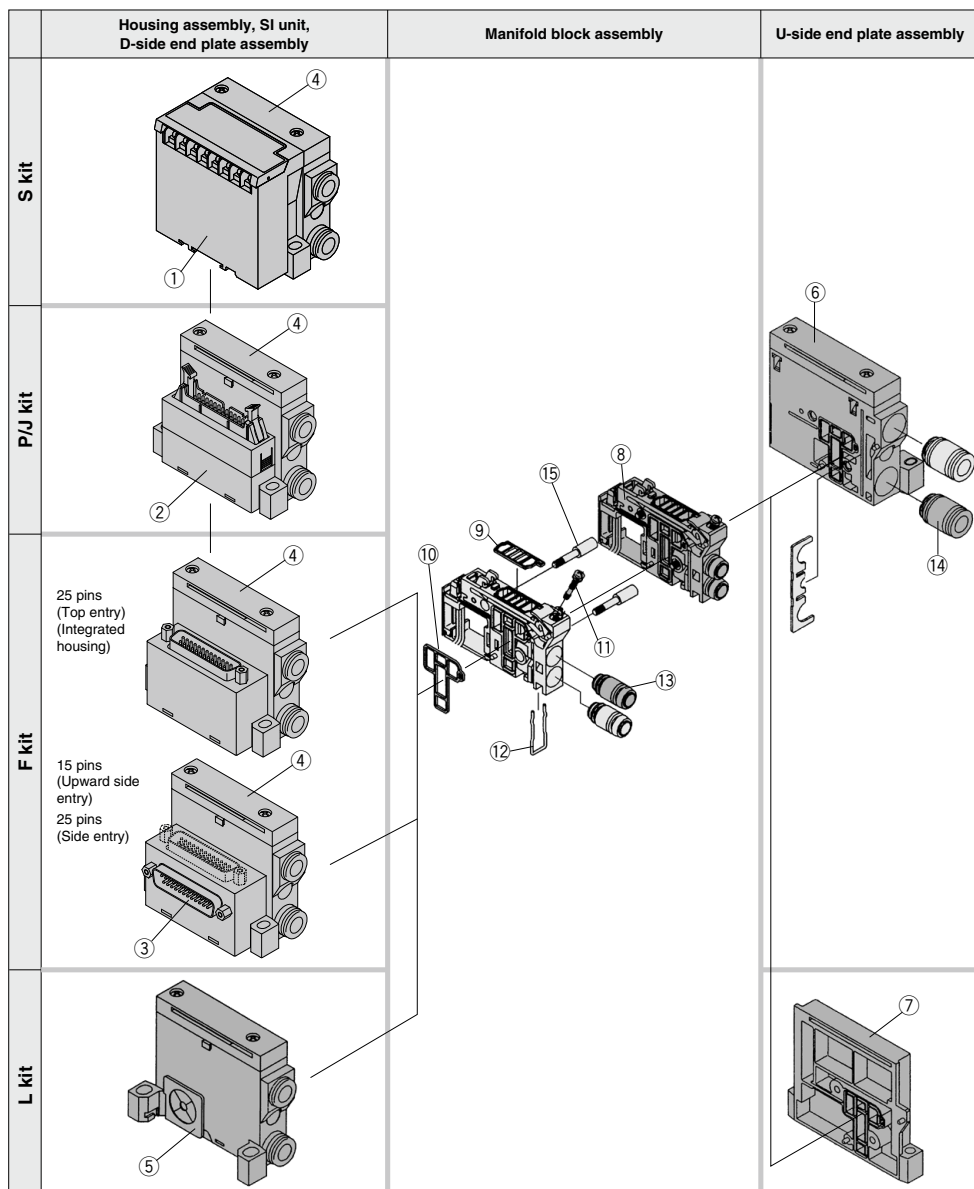

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SH kit)	EX120-SUH1(-XP) <small>Note 2)</small>	NKE Corp.: Fieldbus H System (16 outputs)
	(SQ kit)	EX120-SDN1	DeviceNet™
	(SR1 kit)	EX120-SCS1(-XP) <small>Note 2)</small>	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) <small>Note 2)</small>	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) <small>Note 2)</small>	CC-Link
	(SZB kit)	EX120-SCM1	CompoNet™ (Positive common)
②	(SZBN kit)	EX120-SCM3	CompoNet™ (Negative common)
	P $\frac{3}{4}$ kit	AXT100-1-P$\frac{3}{4}$ <small>Note 1)</small>	Flat ribbon cable housing assembly □ = Number of pins: 26/20/16/10
	J $\frac{3}{4}$ kit	AXT100-1-J$\frac{3}{4}$ <small>Note 1)</small>	Flat ribbon cable housing assembly
③	FU kit	AXT100-1-FU15	D-sub connector housing assembly (Top entry) Number of pins: 15
	FS kit	AXT100-1-FS □	D-sub connector housing assembly (Side entry) □ = Number of pins: 25/15

Note 1) Top entry connector for PU, JU while side entry connector for PS, JS.

Note 2) Suffix "-XP" to the end of the part number for dust-protected SI unit. (Not available for S/SQ kit)

<D-Side End Plate Assembly>

④⑤ D-side end plate assembly no.

VVQ1000-3A-1-□-□

Electrical entry ●

FU25	For F kit top entry 25 pins
F	For F kit other than above
P	For P kit
J	For J kit
L	For L kit
S	For S kit

● Option

Nil	Common EXH
R <small>Note 1)</small>	External pilot
S <small>Note 1)</small>	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/S kit are not included (except FU25). Separately place an order for ①, ②, ③.

<Manifold Block Assembly>

⑧ Manifold block assembly no.

VVQ1000-1A-□-□

Electrical entry ●

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/J/S kit for 2 to 12 stations/Double wiring
P2	P/J/S kit for 13 to 24 stations/Double wiring
P3	P/J/S kit for 2 to 24 stations/Single wiring
L0 □	L0 kit □: Stations (1 to 8)
L1 □	L1 kit □: Stations (1 to 8)
L2 □	L2 kit □: Stations (1 to 8)

● Port size

C3	With ø3.2 One-touch fitting
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
C0	Without One-touch fitting (With clip)

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑨	VVQ1000-80A-1	Gasket	HNBR	12
⑩	VVQ1000-80A-2	Seal	HNBR	12
⑪	VVQ1000-80A-3	Clamp screw	Carbon steel	12
⑫	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<U-Side End Plate Assembly>

⑥ U-side end plate assembly no. (For F/P/J/S kit)

VVQ1000-2A-1-□

● Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

Note) The ④'s fitting assembly is included.

⑦ U-side end plate assembly no. (For L kit)

VVQ1000-2A-1-L

<Fitting Assembly>

⑬ Fitting assembly part no. (For cylinder port)

VVQ1000-50A-□

● Port size

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	M5 thread

Note) Purchase orders are available in units of 10 pieces.

⑭ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ1000-51A-C8

● Applicable tubing ø8

Note) Purchase orders are available in units of 10 pieces.

⑮ Tie-rod assembly part no. (2 pcs./set)

VVQ1000-TR-□

Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24

Note 3) For S/P/J/F/L kit

Pilot valve assembly

⑩: V112 □ - □ □

● Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	<small>Note 1)</small>
B	High-speed response type	(0.95 W)	—
K	High-pressure type (1.0 MPa)	(0.95 W)	—

Note 1) Refer to page 522 for power consumption of AC type.

Note 2) Common to single solenoid and double solenoid

● Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

● Enclosure

A	Dust-tight, Water-jet-proof (IP65)
B	Dust-protected

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment










Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors

10-
21-VQ2000 Plug-in Unit: Exploded View

(F/P/J/L/G/S kit)

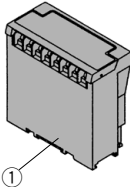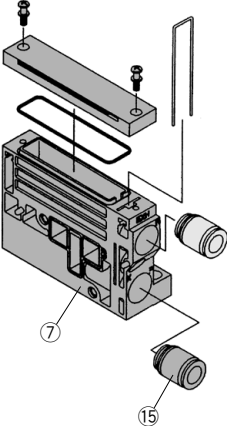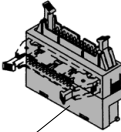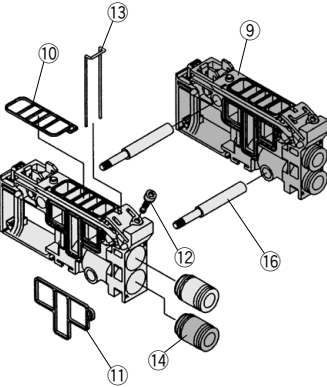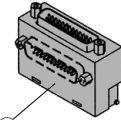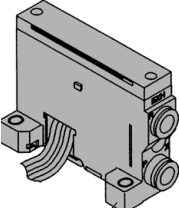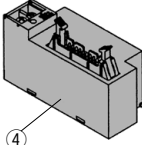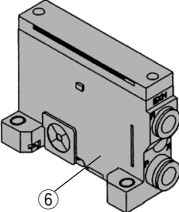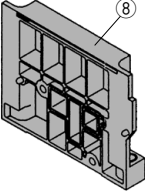	Housing assembly and SI unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
S kit				
P/J kit				
F kit				
G kit				
L kit				

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SH kit)	EX120-SUH1(-XP) ^{Note 1)} [EX123D-SUH1] ^{Note 2)}	NKE Corp.: Fieldbus H System (16 outputs)
	(SQ kit)	EX120-SDN1 [EX124D-SDN1] ^{Note 2)}	DeviceNet™
	(SR1 kit)	EX120-SCS1(-XP) ^{Note 1)} [EX124D-SCS1] ^{Note 2)}	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) ^{Note 1)} [EX124D-SCS2] ^{Note 2)}	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) ^{Note 1)} [EX124D-SMJ1] ^{Note 2)}	CC-Link
②	(SZB kit)	EX120-SCM1	CompoNet™ (Positive common)
	(SZBN kit)	EX120-SCM3	CompoNet™ (Negative common)
	P _S kit	AXT100-1-P _S ^{Note 3)}	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10
③	J _S kit	AXT100-1-J _S ^{Note 3)}	Flat ribbon cable housing assembly
	F _S kit	AXT100-1-F _S ^{Note 3)}	D-sub connector housing assembly □: Number of pins: 25/15
④	G kit	AXT100-1-GU20	Flat ribbon cable housing assembly with terminal block

Note 1) Suffix "-XP" to the end of the part number for dust-protected SI unit.

Note 2) Dust-tight, Water-jet-proof (IP65)

Note 3) Top entry connector for FU, PU, JU while side entry connector for FS, PS, JS.

<D-Side End Plate Assembly>

⑤⑥ D-side end plate assembly no.

VVQ2000-3A-1-□-□

Electrical entry
F For F kit
P For P kit
J For J kit
L For L kit
G For G kit
S For S kit

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.
M kit is available with [W] only.
S/L/T kit are selectable depending on the manifold type.

Option

Nil	Common EXH
R ^{Note 1)}	External pilot
S ^{Note 1)}	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

<U-Side End Plate Assembly>

⑦ U-side end plate assembly no. (For F/P/J/G/T/S/M kit)

VVQ2000-2A-1-□-□

Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.
M kit is available with [W] only.
S/T kit are selectable depending on the manifold type.

Note 1) The ②'s fitting assembly is included.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

⑧ U-side end plate assembly no. (For L kit)

VVQ2000-2A-1-L-□-□

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) Select it depending on the manifold type.

<Manifold Block Assembly>

⑨ Manifold block assembly no.

VVQ2000-1A-□-□-□

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

Electrical entry

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/J/G/S kit for 2 to 12 stations/Double wiring
P2	P/J/G/S kit for 13 to 24 stations/Double wiring
P3	P/J/G/S kit for 2 to 24 stations/Single wiring
L0□	L0 kit □: Stations (1 to 8)
L1□	L1 kit □: Stations (1 to 8)
L2□	L2 kit □: Stations (1 to 8)
T1	T kit for 2 to 20 stations/Double wiring
T3	T kit for 2 to 20 stations/Single wiring
M1	M kit for 2 to 12 stations/Double wiring
M2	M kit for 13 to 24 stations/Double wiring
M3	M kit for 2 to 24 stations/Single wiring

Port size

C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
C0	Without One-touch fitting (With clip)

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.

M kit is available with [W] only.

S/L/T kit are selectable depending on the manifold type.

<Fitting Assembly>

⑭ Fitting assembly part no. (For cylinder port)

VVQ1000-51A-□

Port size

C4	Applicable tubing ø4
C6	Applicable tubing ø6
C8	Applicable tubing ø8

Note) Purchase orders are available in units of 10 pieces.

⑮ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ2000-51A-C10

Applicable tubing ø10

Note) Purchase orders are available in units of 10 pieces.

⑯ Tie-rod assembly part no. (2 pcs./set)

VVQ2000-TR-□

Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24

Note 3) For S/P/J/F/L kit

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑩	VVQ2000-80A-1	Gasket	HNBR	12
⑪	VVQ2000-80A-2	Seal	HNBR	12
⑫	VVQ2000-80A-3	Clamp screw	Carbon steel	12
⑬	VVQ2000-80A-4	Clip	Stainless steel	12



Note) A set of parts containing 12 pcs. each is enclosed.

10-
21-VQ1000: Manifold Optional Parts

Blanking plate assembly VVQ1000-10A-1



It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

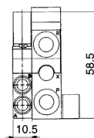
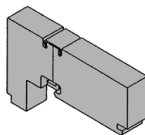


Individual SUP spacer VVQ1000-P-1-C6 N7

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet.
The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

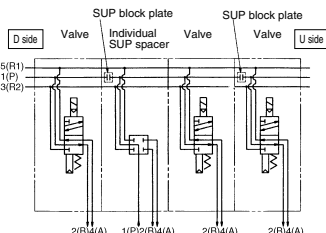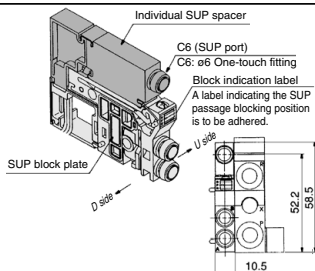

Individual EXH spacer VVQ1000-R-1-C6 N7

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Block both sides of the individual valve EXH station. (Refer to the application example.)


* Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.

* An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.


When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.

* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

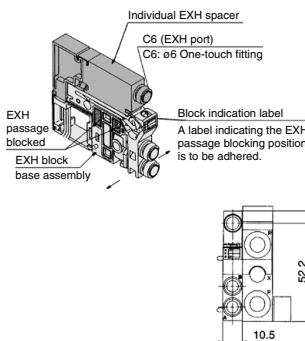

Description/Model		Stations						
Valve	Single							
	Individual EXH spacer							
Option	Individual EXH spacer							
	EXH blocking position: Specify 2 places.							

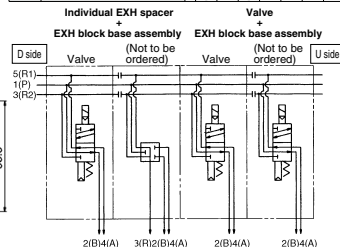

SUP block plate VVQ1000-16A



When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

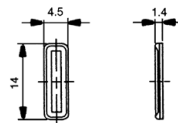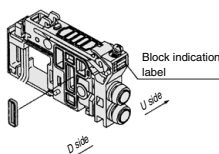

SUP passage blocked



SUP/EXH passage blocked

EXH block base assembly VVQ1000-19A-F (C3/C4/C6/M5/N1/N3/N7)

Manifold block assembly Electrical entry


F0	Without lead wire
F1	For F kit (2 to 12 stations)/Double wiring
F2	For F kit (13 to 24 stations)/Double wiring
F3	For F kit (2 to 24 stations)/Single wiring
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring
P3	For P, G, T, S kit (2 to 24 stations)/Single wiring
L0*	L0 kit
L1*	L1 kit * 1 to 8 stations
L2*	L2 kit

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

* When ordering an EXH block base incorporated with a manifold, a block indication label is attached to the manifold.

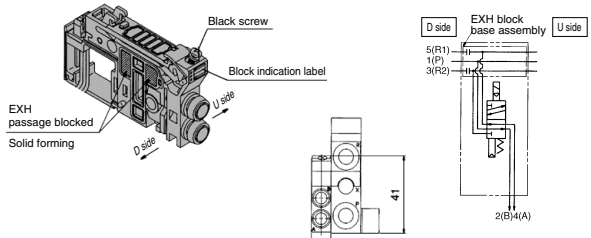

* Specify the mounting station by means of the manifold specification sheet.

* When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with "a" in front of it beneath the manifold part number.



EXH passage blocked





SUP/EXH passage blocked

Back pressure check valve assembly [-B] VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering it being mounted on all manifold stations, suffix "B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

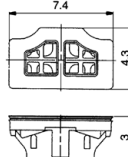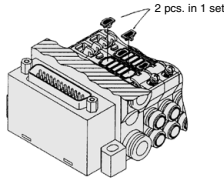

(Precautions)

1. The back pressure check valve assembly is the parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]



VVQ1000-NC-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

* When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n".

* When ordering this option incorporated with a manifold, suffix "N" to the end of the manifold part number.

N: Standard
NC: For mounting blanking plate with connector

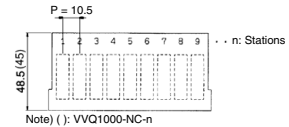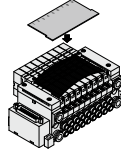


Note) (-): VVQ1000-NC-n

Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchase orders are available in units of 10 pieces.

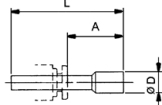

Dimensions



Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2	1/8"	KQ2P-01	16	31.5	5
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10

Port plug VVQ0000-58A

The plug is used to block the cylinder port.

* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions 4(A) and 2(B) by means of the manifold specification sheet.

* Gently screw an M3 screw in the port plug hole and pull it for removal.

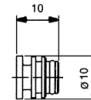
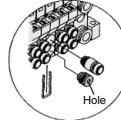


DIN rail mounting bracket [-D, -D0, -D□]

VVQ1000-57A

This bracket is used for mounting the manifold on the DIN rail.



* When ordering this option incorporated with a manifold, suffix "D" to the end of the manifold part number.

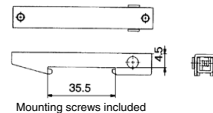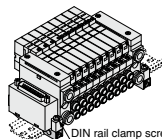

1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.

10-
21-VQ2000: Manifold Optional PartsBlanking plate assembly
VVQ2000-10A-1

Symbol

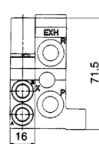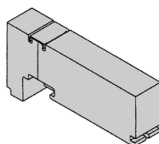

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.



Individual SUP spacer
VVQ2000-P-1-C₈
N₉

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)
* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

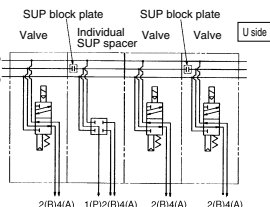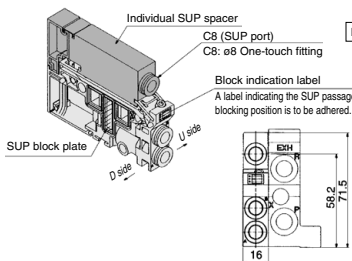Individual EXH spacer
VVQ2000-R-1-C₈
N₉

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)



Block both sides of the individual valve EXH station. (Refer to the application example.)

* Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet.

The block plate is used in one or two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)



* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

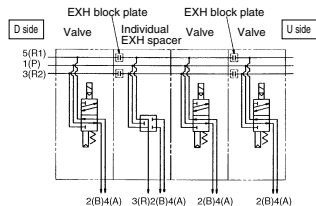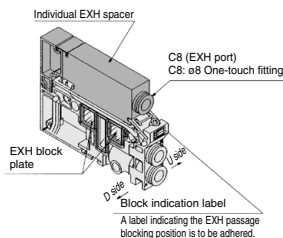SUP block plate
VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet.

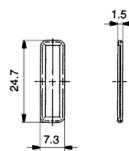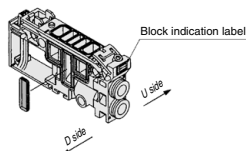

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)



SUP passage blocked





SUP/EXH passage blocked

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

EXH block plate
VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

* Specify the mounting position by means of the manifold specification sheet.

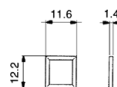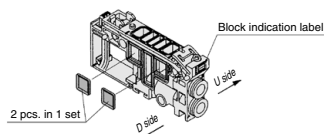

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)



EXH passage blocked



SUP/EXH passage blocked

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.



Back pressure check valve assembly [-B]

VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

• When ordering assemblies incorporated with a manifold, add suffix "-B" to the end of the manifold part number.

Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

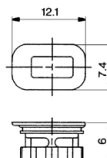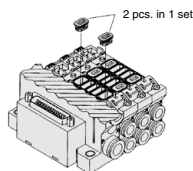

(Precautions)

1. The back pressure check valve assembly is assembly parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.



Name plate [-N]

VVQ2000-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.

Insert it into the groove on the side of the end plate and bend it as shown in the figure.



• When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

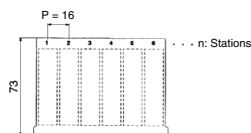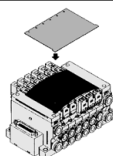

Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports. Purchase orders are available in units of 10 pieces.

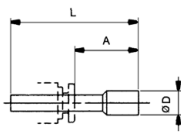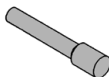

Dimensions



Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10
10	KQ2P-10	22	43	12	3/8"	KQ2P-11	22	43	11.5

DIN rail mounting bracket [-D,-D0,-D□]

VVQ2000-57A

This bracket is used for mounting the manifold on the DIN rail.

• When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

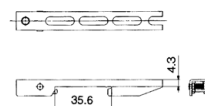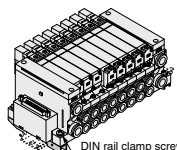

1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors



Series ¹⁰⁻²¹⁻VQ1000/2000

Specific Product Precautions 1


Be sure to read this before handling.

Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

Light/Surge Voltage Suppressor


⚠ Caution

The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

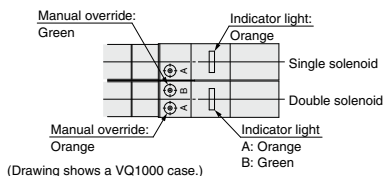


DC circuit diagram

Single solenoid

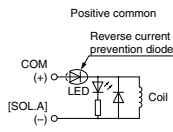

Double solenoid

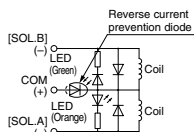

Note) A-side energization:
A light (Orange) illuminates.
B-side energization:
B light (Green) illuminates.


With wrong wiring prevention (stop diode) mechanism
With a surge absorption (surge absorption diode) mechanism

Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required/Manual)

■ Push type (Tool required)

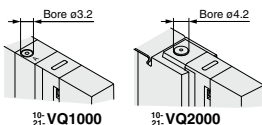


Push down on the manual override with a small screwdriver, etc. until it stops. Release the screwdriver and the manual override will return.

■ Locking type (Tool required) <Semi-standard>

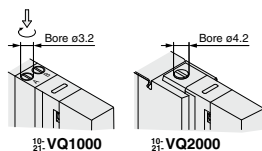

Push down on the manual override with a flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking type (Manual) <Semi-standard>

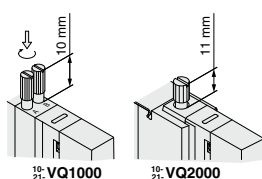

Push down on the manual override with a small flat head screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)



Series 10-21-VQ1000/2000

Specific Product Precautions 2


Be sure to read this before handling.

Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

Manual Override

Warning


■ Slide locking type (Manual) <Semi-standard>

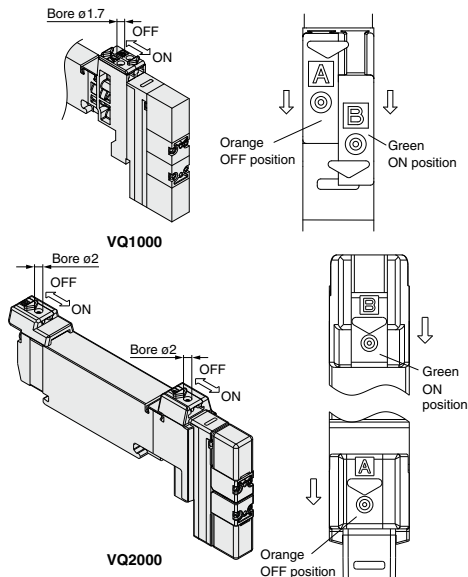

The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or finger. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or less for VQ2000).

How to Mount/Remove Solenoid Valves

Caution

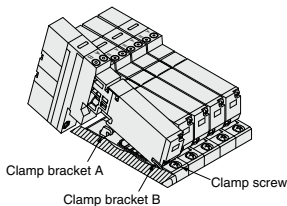

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

How to Mount/Remove Solenoid Valves

Caution

Mounting

1. Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N·m; VQ2000, 0.5 to 0.7 N·m.)

Caution


Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

Replacement of Cylinder Port Fittings

Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip. Take out the clip with a flat head screwdriver, etc., then replace the fittings.

For mounting, insert the fitting assembly until it strikes against the inside wall and then insert the clip to the specified position.

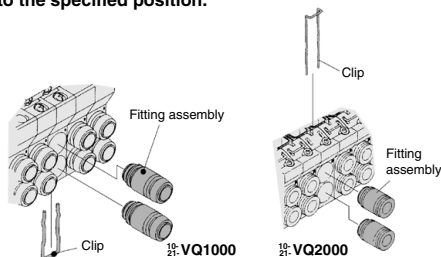

Applicable tubing O.D.	Fitting assembly part no.	
	10-21-VQ1000	10-21-VQ2000
Applicable tubing ø3.2	VVQ1000-50A-C3	—
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing ø8	—	VVQ1000-51A-C8
M5	VVQ1000-50A-M5	—
Applicable tubing ø1/8"	VVQ1000-50A-N1	—
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7
Applicable tubing ø5/16"	—	VVQ1000-51A-N9

* Refer to "Manifold Optional Parts" on pages 572 for other types of fittings.

Caution

1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
3. Purchase orders are available in units of 10 pieces.



Series ¹⁰⁻²¹⁻VQ1000/2000

Specific Product Precautions 3

Be sure to read this before handling.


Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

How to Mount/Remove DIN Rail

Caution


Removing

1. Loosen the clamp screw on side (a) of the end plate on both sides.
2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

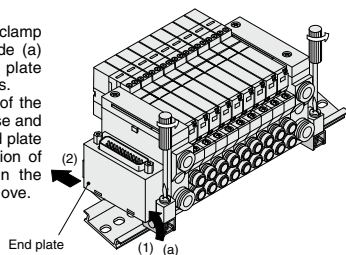

Mounting

1. Hook side (b) of the manifold base on the DIN rail.
2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

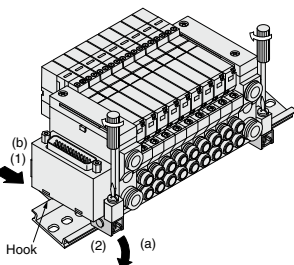

IP65 Enclosure

Caution

Wiring connection for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

How to Calculate Flow Rate

Refer to the **WEB catalog** for obtaining the flow rate.