

5 Port Solenoid Valve

VQC4000/5000 Series

Metal Seal

Rubber Seal

The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

■ Compact and large flow capacity



VQC4000 Possible to drive cylinders up to $\varnothing 160$

VQC5000 Possible to drive cylinders up to $\varnothing 180$

* When the average speed is 200 mm/s.
Refer to page 1154 for actual conditions.

VQC4000: 25 mm pitch

$C[dm^3/(s \cdot bar)]: 7.3^*$

VQC5000: 41 mm pitch

$C[dm^3/(s \cdot bar)]: 17^*$

* 2-position single, rubber seal: 4/2 $\rightarrow$ 5/3 (A/B $\rightarrow$ R1/R2)

■ Extensive range of protocols available



EtherCAT $\rightarrow$ EtherNet/IP




DeviceNet CC-Link



IO-Link CC-Link IE TSN

■ Connector type manifold

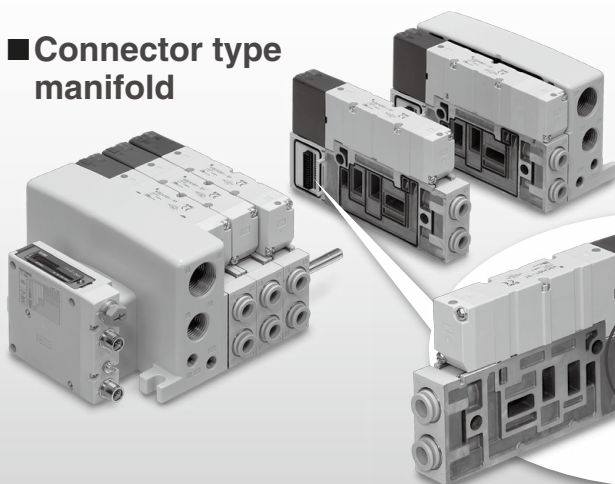

Connector

■ Power saving

	Power consumption [W]	Maximum operating pressure [MPa]
VQC	0.4 (0.95)	1.0
Current product	0.5 (1.0)	0.7

* Low wattage type (): Standard


■ Long service life

100 million cycles
(Metal seal)

* According to SMC life test conditions

■ Enclosure IP67 compliant

* Except F and P kits

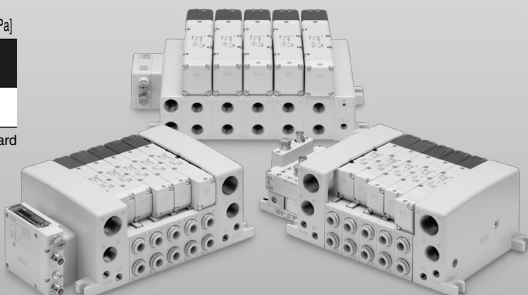

VQC4000/5000 Series

■ Compact and large flow

Model (Series)	Valve pitch [mm]	Flow rate characteristics Note)					
		Metal seal			Rubber seal		
		C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv
VQC4000	25	6.9	0.17	1.7	7.3	0.38	2.0
VQC5000	41	14	0.18	3.4	17	0.31	4.7

Note) Flow rate characteristics: 2-position single, 4/2 → 5/3 (A/B → R1/R2)

■ Applicable to EX600 (Input/Output) serial transmission system (Fieldbus system)

■ Compatible Protocols

CC-Link V2

DeviceNet

PROFIBUS

EtherNet/IP

PROFINET

EtherCAT


Reduction in wiring time with SPEEDCON (Phoenix Contact). Just insert and make 1/2 rotation!



Handheld Terminal

■ Self diagnosis function

It is possible to ascertain the maintenance period and identify the parts that require maintenance, by an input/output open circuit detection function and an input/output signal ON/OFF counter function. Also, the monitoring of input and output signals and the setting of parameters can be performed with a Handheld Terminal.

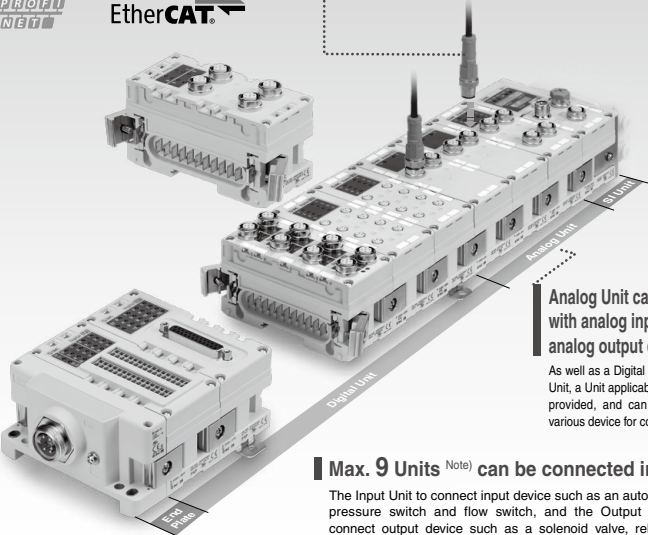

Analog Unit can be connected with analog input device or analog output device.

As well as a Digital (switch) Input/Output Unit, a Unit applicable to analog signal is provided, and can be connected with various device for control.

■ Max. 9 Units Note) can be connected in any order.

The Input Unit to connect input device such as an auto switch, pressure switch and flow switch, and the Output Unit to connect output device such as a solenoid valve, relay and indicator light can be connected in any order.

Note) Except SI Unit

■ EX260 (Output device for driving 5 port solenoid valves)

Compatible Protocols

PROFIBUS
PROFINET

DeviceNet

EtherNet/IP

IO-Link


CC-Link IE TSN

CC-Link

EtherCAT

ETHERNET POWERLINK

Compact
28 mm

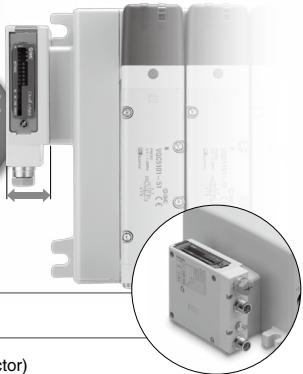

Number of outputs 32/16 digital output

Output polarity Negative common (PNP)/Positive common (NPN)

Enclosure IP67 (IP40 when selecting a D-sub connector or an RJ45 connector)

Internal terminating resistor ON/OFF switching is possible with an internal terminating resistor for communication. (Only for Units compatible with M12 PROFIBUS DP, CC-Link communication connectors)

■ The EX260 and EX600 series support safety communication (PROFIsafe).

- **This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.**
The safety communication protocol is a communication protocol that transmits safety-related data by network communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

● Using the safety communication protocol

Refer to the EX260 and EX600 series catalogs for details on units that support the safety communication protocol.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.


Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.


■ A wide variety of prepackaged wiring configurations

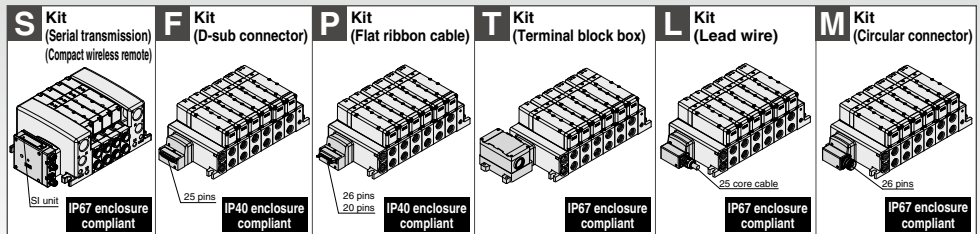


- Our six standard wiring packages bring a world of ease to wiring and maintenance work, while the protective enclosures of four of them conform to IP67 standards.
- The serial transmission is compatible with a combined I/O Unit. (Not applicable to Gateway Unit)

■ Connector type manifold

- The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.
- All kits use multi-pin connectors, so switching from the F kit (D-sub connector) to the S kit (serial transmission) can be done simply by changing the kit section.

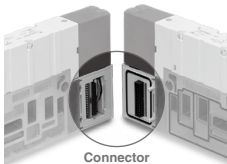


(Refer to the connector wiring diagram.)
Printed circuit board patterns between connectors are shifted at every station. This allows for viable connections to take place without necessarily specifying whether the manifold station is double, single, or mixed wiring.

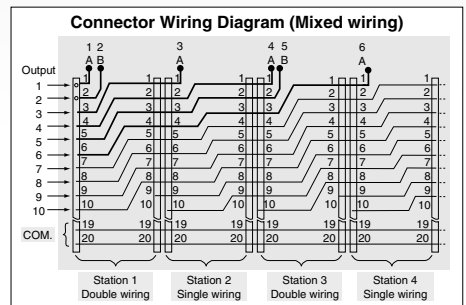

■ Connector entry direction can be changed with a single push. (F/P kit)

The connector entry direction can be changed from the top to the side by simply pressing the manual release button.






It is not necessary to use the manual release button when switching from the side to the top.

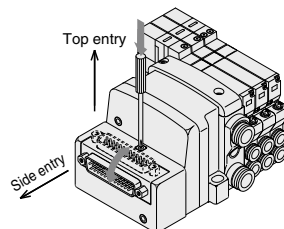

Sub-plate/Base Mounted: Variations

				Sonic conductance C [dm³/(s·bar)]		S kit					
				Values: (CYL → EXH (4/2 → 5/3))		Serial transmission					
						Gateway-type		Integrated-type (I/O)		Integrated-type (for output)	
						EX500	EX600	EX245	EX250	EX260	EX126
	Sub-plate		Base mounted	Single/Double	3-position (Closed center)	Compatible protocol · EtherNet/IP™ · PROFINET	Compatible protocol · PROFINET · EtherNet/IP™ · PROFIBUS DP · DeviceNet® · CC-Link · EtherCAT · CIP Safety	Compatible protocol · PROFINET	Compatible protocol · EtherNet/IP™ · DeviceNet® · AS-Interface	Compatible protocol · PROFINET · EtherCAT · EtherNet/IP™ · PROFIBUS DP · DeviceNet® · CC-Link · Ethernet POWERLINK · IO-Link · PROFIsafe · CC-Link IE TSN · Safety over EtherCAT	Compatible protocol · CC-Link
						 IP67 compliant	 IP67 compliant	 IP65 compliant	 IP67 compliant	 IP40 compliant IP67 compliant	 IP67 compliant
Sub-plate	VQC 4000 Series	Metal seal	VQC4□00	6.9	6.3						
		Rubber seal	VQC4□01	7.3	6.4	—	—	—	—	—	—
	VQC 5000 Series	Metal seal	VQC5□00	14	11						
		Rubber seal	VQC5□01	17	13						
Base Mounted	VQC 4000 Series	Metal seal	VQC4□00	6.9	6.3	 Page 1160	 Page 1160	 Page 1160	 Page 1160	 Page 1160	 Page 1160
		Rubber seal	VQC4□01	7.3	6.4						
	VQC 5000 Series	Metal seal	VQC5□00	14	11	 Page 1202	 Page 1202	 Page 1202	 Page 1202	 Page 1202	 Page 1202
		Rubber seal	VQC5□01	17	13						

     Manifold options are the same as those for the VQ4000/5000 series. Refer to the Web Catalog.


		F Kit	P Kit	T Kit	L Kit	M Kit	Port size	
		D-sub connector	Flat ribbon cable	Terminal block box	Electrical entry	Circular connector	SUP EXH port	Cylinder port
Compact wireless remote EXW1 Compatible protocol  IP67 compliant	D-sub connector (Compatible with D-sub connector that complies with MIL standard.)  25 pins IP40 compliant	Flat ribbon cable (Compatible with flat ribbon cable connector that complies with MIL standard.)  26 pins/20 pins IP40 compliant	Terminal block box (Terminal blocks) Terminals are concentrated in compact clusters within the terminal block box.  IP67 compliant	Lead wire (IP67 enclosure with use of multiple wire cable with sheath and waterproof connector)  IP67 compliant	Circular connector (IP67 enclosure with use of waterproof multiple connector)  IP67 compliant	1, 3 (P, R)	2, 4 (A, B)	
	—	—	—	—	—	—	1/4 3/8 (Rc, NPT, NPTF, G)	1/4 3/8 (Rc, NPT, NPTF, G)
	—	—	—	—	—	—	1/2 (Rc, NPT, NPTF, G)	1/2 (Rc, NPT, NPTF, G)
	● Page 1167-1	● Page 1176	● Page 1178	● Page 1180	● Page 1182	● Page 1184	<SUP port> 1/2 (Rc, NPT, NPTF, G) <EXH port> 3/4 (Rc, NPT, NPTF, G) C6 (for ø6) C8 (for ø8) C10 (for ø10) C12 (for ø12) N7 (ø1/4") N9 (ø5/16") N11 (ø3/8") 1/4 3/8 1/4 (Bottom ported) (Rc, NPT, NPTF, G)	
● Page 1207-1	● Page 1216	● Page 1218	● Page 1220	● Page 1222	● Page 1224	<SUP port> D side 1/2 (Rc, NPT, NPTF, G) U side 3/8 (Rc, NPT, NPTF, G) <EXH port> D side 1/2 (Rc, NPT, NPTF, G) U side 3/8 (Rc, NPT, NPTF, G) 3/8 1/2 1/2 (Bottom ported) (Rc, NPT, NPTF, G)		

Cylinder Speed Chart

VQC4000

This chart is provided as guidelines only.

For performance under various conditions, use SMC's Model Selection Software before making a judgment.

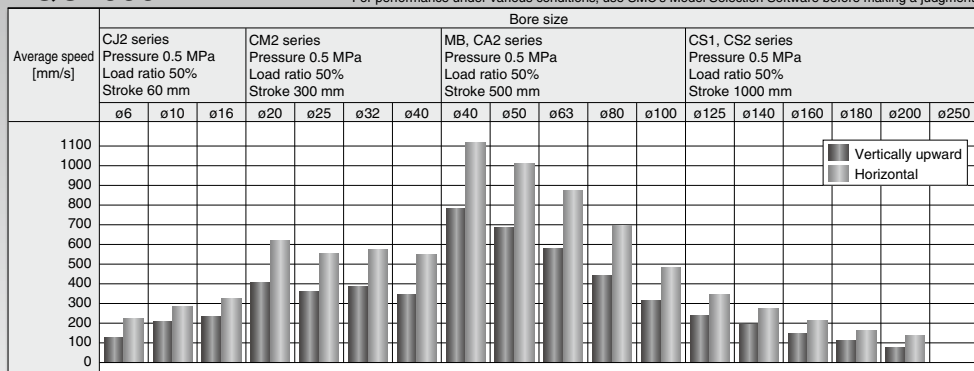

* Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.

* The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.

* The load ratio is obtained by the following formula: ((Load mass x 9.8)/Theoretical output) x 100%

Conditions

Base mounted	CJ2 series	CM2 series	MB, CA2 series	CS1, CS2 series
Tube x Length	T0604 x 1 m	T1075 x 1 m	T1209 x 1 m	
Speed controller	AS3002F-06	AS4002F-10	AS4002F-12	
Silencer	AN40-04			AN40-04


Conditions [With SGP (Steel Pipe)]

Body ported	MB, CA2 series	CS1, CS2 series
Tube x Length	SGP10A x 1 m	
Speed controller	AS420-03	
Silencer	AN40-04	

VQC5000

This chart is provided as guidelines only.

For performance under various conditions, use SMC's Model Selection Software before making a judgment.

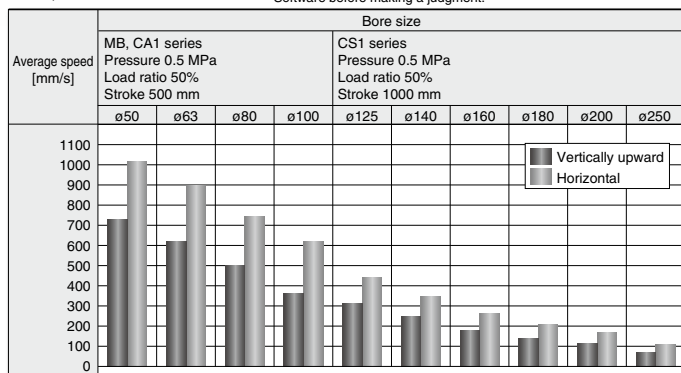

* Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.

* The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.

* The load ratio is obtained by the following formula: ((Load mass x 9.8)/Theoretical output) x 100%


Conditions

Speed controller	Silencer	SPG (Steel pipe) dia. x Length
AS420-04	AN40-04	10A x 1 m

Sub-plate/Base Mounted: Variations	Page 1152
Cylinder Speed Chart	Page 1154

VQC4000 Series

Plug-in: Single Unit	Page 1156
Plug-in Unit: Manifold	Page 1160

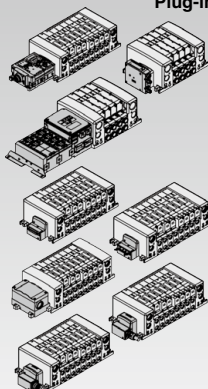


S Kit (Serial transmission kit):	EX600 [IP67]/EX500 [IP67]		Page 1168
	EX260 [IP40/IP67]/EX245 [IP65]/		
	EX250 [IP67]/EX126 [IP67]/		
	(Safety communication protocol) EX600 [IP67]		
(Compact wireless remote):	EXW1 [IP67]		Page 1175-1
F Kit (D-sub connector kit) [IP40]			Page 1176
P Kit (Flat ribbon cable kit) [IP40]			Page 1178
T Kit (Terminal block box kit) [IP67]			Page 1180
L Kit (Lead wire kit) [IP67]			Page 1182
M Kit (Circular connector kit) [IP67]			Page 1184

Construction	Page 1186
Exploded View of Manifold	Page 1187
Specific Product Precautions	Page 1192

VQC5000 Series

Plug-in: Single Unit	Page 1198
Plug-in Unit: Manifold	Page 1202

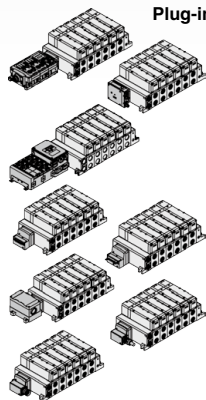

S Kit (Serial transmission kit):	EX600 [IP67]/ EX500 [IP67]/EX260 [IP40/IP67]/ EX250 [IP67]/EX126 [IP67]/ EX245 [IP65]/ (Safety communication protocol) EX600 [IP67]	Page 1208
(Compact wireless remote):	EXW1 [IP67]	Page 1215-1
F Kit (D-sub connector kit)	[IP40]	Page 1216
P Kit (Flat ribbon cable kit)	[IP40]	Page 1218
T Kit (Terminal block box kit)	[IP67]	Page 1220
L Kit (Lead wire kit)	[IP67]	Page 1222
M Kit (Circular connector kit)	[IP67]	Page 1224

Construction	Page 1226
Exploded View of Manifold	Page 1227
Specific Product Precautions	Page 1232

Base Mounted

Plug-in: Single Unit

VQC4000 Series



Model

Series	Configuration		Model		Port size	Flow rate characteristics						Response time [ms]		Weight [kg]
						1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			Standard: 0.95 W	Low wattage type: 0.4 W	
						C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
VQC4000	2-position	Single	Metal seal	VQC4100	3/8	6.2	0.19	1.5	6.9	0.17	1.7	20	22	0.23
			Rubber seal	VQC4101		7.2	0.43	2.1	7.3	0.38	2.0	25	27	
		Double	Metal seal	VQC4200		6.2	0.19	1.5	6.9	0.17	1.7	12	16	0.26
			Rubber seal	VQC4201		7.2	0.43	2.1	7.3	0.38	2.0	15	17	
	3-position	Closed center	Metal seal	VQC4300		5.9	0.23	1.5	6.3	0.18	1.6	45	47	0.28
			Rubber seal	VQC4301		7.0	0.34	1.9	6.4	0.42	1.9	50	52	
		Exhaust center	Metal seal	VQC4400		6.2	0.18	1.5	6.9	0.17	1.7	45	47	0.28
			Rubber seal	VQC4401		7.0	0.38	1.9	7.3	0.38	2.0	50	52	
		Pressure center	Metal seal	VQC4500		6.2	0.18	1.6	6.4	0.18	1.6	45	47	0.28
			Rubber seal	VQC4501		7.0	0.38	1.9	7.1	0.38	2.0	50	52	
		Double check	Metal seal	VQC4600		2.7	—	—	3.7	—	—	55	57	0.50
			Rubber seal	VQC4601		2.8	—	—	3.9	—	—	62	64	

Note 1) Cylinder port 3/8: Value for valve on sub-plate

Note 2) Based on JIS B 8419: 2010. (Supply pressure: 0.5 MPa, with indicator light and surge voltage suppressor, clean air. This will change depending on pressure and air quality.) The value when ON for the double type.


Note 3) Table: Without sub-plate, With sub-plate: Add 0.41 kg.




Plug-in unit

Symbol

 
2-position single




3-position closed center

 


2-position double (Metal)

 

3-position exhaust center

 


2-position double (Rubber)

 

3-position pressure center



 3-position double check



Standard Specifications

	Valve construction	Metal seal	Rubber seal
	Fluid	Air	
Valve specifications	Max. operating pressure	1.0 MPa	
	Min. operating pressure	Single Double	0.15 MPa 0.15 MPa
	3-position	0.15 MPa	0.20 MPa
	Ambient and fluid temperature	-10 to 50°C (Note 1)	
Electrical specifications	Lubrication	Not required	
	Manual override	Push type/Locking type (Tool required)/Locking type (Manual)	
	Impact/Vibration resistance	150/30 m/s ² (Note 2)	
	Enclosure	Dust-tight (IP67 compatible) (Note 3)	
	Coil rated voltage	12, 24 VDC	
	Allowable voltage fluctuation	±10% of rated voltage	
	Coil insulation type	Class B or equivalent	
	Power consumption	24 VDC [W]	0.95, 0.4 0.95, 0.4

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Only applicable to S, T, L and M kits

How to Order Valves



Plug-in

VQC4 1 0 0 - - - 1 - - -

1	Metal	2-position single (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
		2-position double (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
		2-position double (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
2	Rubber	2-position double (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
		2-position double (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
		2-position double (A)(B) 4 2 5 1 3 (R1)(P1)(R2)


Type of actuation

3	3-position closed center (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
4	3-position exhaust center (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
5	3-position pressure center (A)(B) 4 2 5 1 3 (R1)(P1)(R2)
6	3-position double check (A)(B) 4 2 5 1 3 (R1)(P1)(R2)

Note) For double check type, refer to the **Web Catalog** of the VQ4000/5000 series.

Body

0: Plug-in sub-plate

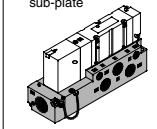

Seal

0	Metal seal
1	Rubber seal

Function

Nil (Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R (Note 2)	External pilot

Note 1) When the power is energized continuously, refer to "Specific Product Precautions 1" on page 1192.

Note 2) For details about external pilot type, refer to the **Web Catalog** of the VQ4000/5000 series. In addition, external pilot type cannot be combined with a double check spacer.

Note 3) When multiple symbols are specified, indicate them alphabetically.

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Port size

Nil	Without sub-plate (For manifold)
02	1/4
03	3/8

Porting specifications

Nil	Side ported
B	Bottom ported

Manual override

Nil: Non-locking push type (Tool required)



B: Locking type (Tool required)



C: Locking type (Manual)



Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage

5	24 VDC
6	12 VDC

How to Order Sub-plates



[Option]

VQ4000 - PW - - 02 - -

Porting specifications

Nil	Side ported
B	Bottom ported (Note)

Port size

02	1/4
03	3/8

Note) For bottom ported, port size is 1/4 only.

CE/UKCA-compliant

Nil	—
Q	CE/UKCA-compliant

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Replacement of pilot valve assembly (Voltage)



- Refer to page 1190 for pilot valve assembly part numbers.
- Refer to page 1193 for replacement method.

VQC4000 Series



Dimensions: Plug-in Type

Conduit terminal

2-position single: VQC410⁰-□

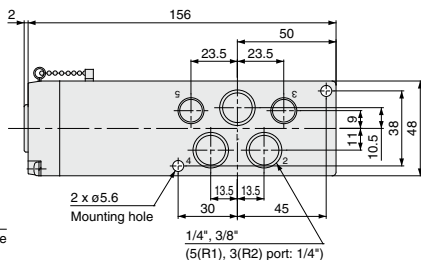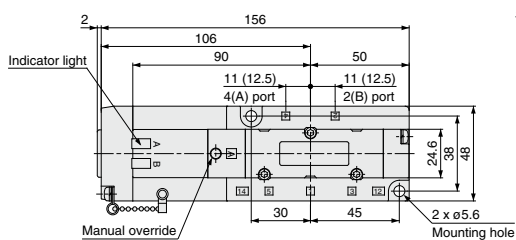

Bottom ported drawing

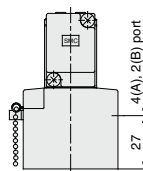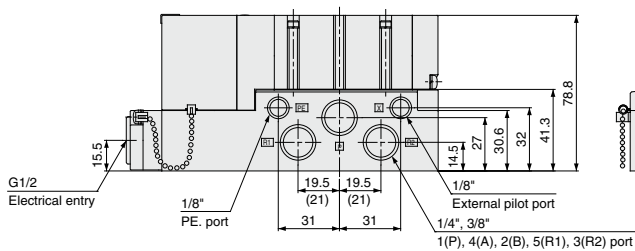



(): Values for 3/8"

2-position double: VQC420⁰-□



3-position closed center: VQC430⁰-□

3-position exhaust center: VQC440⁰-□

3-position pressure center: VQC450⁰-□

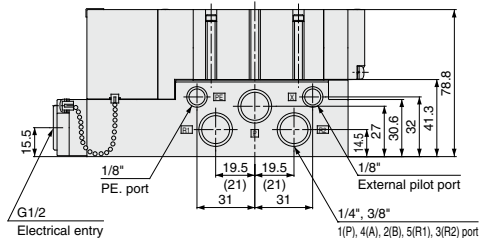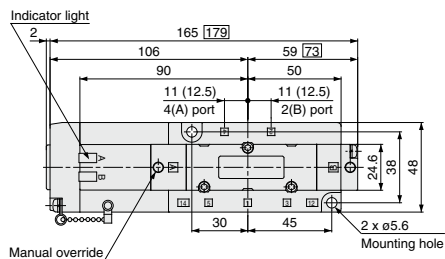

3-position double check: VQC460⁰-□

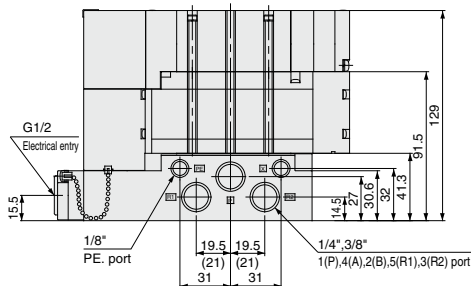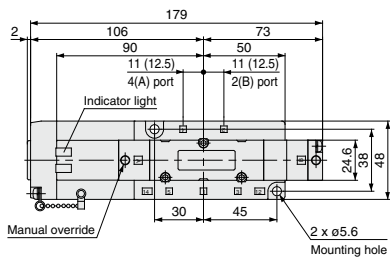

□: Values for 3-position
(): Values for 3/8"

Base Mounted

Plug-in Unit

VQC4000 Series



The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.


Refer to pages 1166 (EX260) and 1167-01 (EX600) for details on manifolds that support safety communication.

How to Order Manifold

S kit

The selectable items vary for each series. Select from the applicable item numbers in the table below.

Series	Item number (Refer to pages 1160, 1161 and 1182)
EX600	1, 2, 3, 5, 8, 9, 10, 11
EX245	1, 2, 3, 5, 6, 7, 11
EX250	1, 2, 3, 5, 9, 11, 12, 13, 14
EX500, 260, 126	1, 2, 3, 5, 9, 11

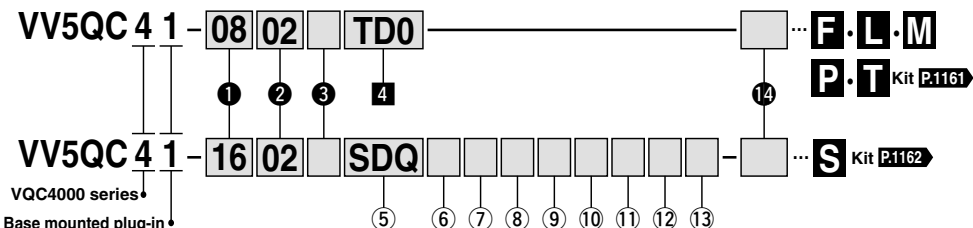


1 Valve stations

01	1 station
...	...

The maximum number of stations differs depending on the electrical entry. (Refer to 5)

 Note) In the case of compatibility with the S kit/As-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.
8 in/8 out: Maximum 8 solenoids
4 in/4 out: Maximum 4 solenoids



D side Stations-1-2-3-4-5-6-7-8-n U side

* Stations are counted from station 1 on the D-side.

2 Cylinder port size

C6 With ø6 One-touch fitting	N11	For ø3/8"
C8 With ø8 One-touch fitting	02	1/4
C10 With ø10 One-touch fitting	03	3/8
C12 With ø12 One-touch fitting	B	Bottom ported 1/4
N7 For ø1/4"	CM	Mixed
N9 For ø5/16"		

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

6 With or without I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module
Y	With I/O module

7 Number of I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module (Without SI Unit)
1	1 station
...	...
8	8 stations

8 End plate type (Enter only for EX600-compliant S kit.)

Nil	Without end plate
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI Unit, the symbol is nil.
* The pin layout for "4" and "5" pin connector is different.

10 I/O Unit stations (Enter only for EX600-compliant S kit.)

Nil	None
1	1 station
...	...
9	9 stations

Note 1) Without SI Unit, the symbol is nil.
Note 2) SI Unit is not included in I/O Unit stations.
Note 3) When I/O Unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.
Note 4) Refer to page 1196 for details about the enclosure.
Note 5) Indicate the I/O unit part numbers, following the ordering example on page 1164.

11 Number of input blocks (Enter only for S kit compliant with EX250.)

Nil	Without SI Unit (SDO)
0	Without input block
1	With 1 input block
...	...
4	With 4 input blocks
...	...
8	With 8 input blocks

12 Input block type (Enter only for S kit compliant with EX250.)

Nil	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs

13 Input block COM (Enter only for S kit compliant with EX250.)

Nil	PNP sensor input or without input block
N	NPN sensor input

14 Option






Nil	None
K	Special wiring specifications (except for double wiring)
N	With name plate (available for T kit only)
S ^{Note)}	Direct EXH outlet with built-in silencer

Note) The silencer is built into the R port passage of the end plate and the silenced air is exhausted from the R port.
* When two or more symbols are specified, indicate them alphabetically.
Example: -KNS

Refer to the EX600 series catalog and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, <https://www.smcworld.com>

4 Kit type/Electrical entry/Cable length

     
* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "K".

F kit (D-sub connector)  IP40 compliant	M kit (Circular connector)  IP67 compliant	T kit (Terminal block box)  IP67 compliant	L kit (Lead wire)  IP67 compliant
FD0 D-sub connector (25P) without cable FD1 D-sub connector (25P) with 1.5 m cable FD2 D-sub connector (25P) with 3.0 m cable FD3 D-sub connector (25P) with 5.0 m cable	MD0 Circular connector (26P) without cable MD1 Circular connector (26P) with 1.5 m cable MD2 Circular connector (26P) with 3.0 m cable MD3 Circular connector (26P) with 5.0 m cable	TD0 Terminal block box	LD0 Lead wire 0.6 m lead wire LD1 Lead wire 1.5 m lead wire LD2 Lead wire 3.0 m lead wire
P kit (Flat ribbon cable)  IP40 compliant			
Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.			
PD0 Flat ribbon cable (26P) without cable PD1 Flat ribbon cable (26P) with 1.5 m cable PD2 Flat ribbon cable (26P) with 3.0 m cable PD3 Flat ribbon cable (26P) with 5.0 m cable PDC Flat ribbon cable (20P) without cable	1 to 12 stations (16 stations, 24 points) 1 to 9 stations (16 stations, 18 points)		

VQC4000 Series

5 Kit type

* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "K".

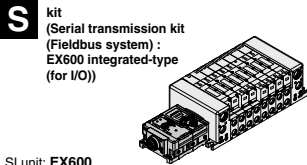


SI unit: EX600

IP67 compliant

SD60	Without SI unit	1 to 12 stations (16 stations, 24 points)
SD6Q	DeviceNet®	
SD6N	PROFIBUS DP	
SD6V	CC-Link	
SD6FA	PROFINET (IO-Link unit)	
SD6FB	PROFINET (OPC UA, IO-Link unit) (Note 1)	
SD6EB	EtherNet/IP™ (IO-Link unit)	
SD6DA	EtherCAT (IO-Link unit)	
SD6WS	Wireless remote	

kit (Serial transmission kit: EX500 gateway-type)

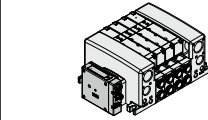


SI unit: EX500

Note) A separate gateway unit and communication cable are required.

SD0	Without SI unit	—	—
SDA3	EX500 Gateway Decentralized System 2 (128 points)	32 outputs	1 to 12 stations (16 stations, 24 points)

IP67 compliant

 kit (Serial transmission kit: EX260 integrated-type (for output))




SI unit: EX260

IP40 compliant

IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations
SD0A	Without SI unit			1 to 12 stations (16 stations, 24 points)
SQA	DeviceNet®	32	M12	1 to 8 stations (16 stations, 16 points)
SQB		16		
SNA		32	M12	1 to 12 stations (16 stations, 24 points)
SNB		16		
SNC	PROFIBUS DP	32	D-sub	1 to 12 stations (16 stations, 24 points)
SND		16		
SVA	CC-Link	32	M12	1 to 12 stations (16 stations, 24 points)
SVB		16		
SDA	EtherCAT	32	M12	1 to 12 stations (16 stations, 24 points)
SDB		16		
SFA	PROFINET	32	M12	1 to 12 stations (16 stations, 24 points)
SFB		16		
SEA	EtherNet/IP™	32	M12	1 to 12 stations (16 stations, 24 points)
SEB		16		
SGA	Ethernet POWERLINK	32	M12	1 to 12 stations (16 stations, 24 points)
SGB		16		
SKA	IO-Link	32	M12	1 to 12 stations (16 stations, 24 points)
SCA		32		
SCA	CC-Link IE TSN	32	RJ45	1 to 12 stations (16 stations, 24 points)

 kit (Serial transmission kit: EX126 integrated-type (for output))




SI unit: EX126

IP67 compliant

SDVB	CC-Link	1 to 8 stations (16 stations, 16 points)		
------	---------	--	--	--

Note 1) Only negative common (PNP) is available.

kit (Serial transmission: EX245 integrated-type (for I/O))

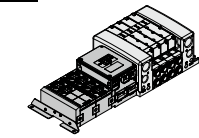


SI unit: EX245

IP65 compliant

Symbol	Protocol	Communication connector	Power supply connector	Stations
SD0B	Without SI unit			1 to 12 stations (16 stations, 24 points)
SDAAN	PROFINET	Push/Pull (SCRJ); 2 pcs.	Push/Pull (24 V); 2 pcs.	
SDABN		Push/Pull (RJ45); 2 pcs.	Push/Pull (24 V); 2 pcs.	
SDACN		M12: 2 pcs.	7/8 inch: 2 pcs.	

kit (Serial transmission kit: EX250 integrated-type (for I/O))

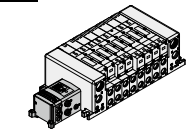

SI unit: EX250

IP67 compliant

SD0	Without SI unit	1 to 12 stations (16 stations, 24 points)	
SDQ	DeviceNet®		
SDTA	AS-Interface, 8 in/8 out, 2 power supply systems	1 to 4 stations (8 stations, 8 points)	
SDTB	AS-Interface, 4 in/4 out, 2 power supply systems	1 to 2 stations (4 stations, 4 points)	
SDTC	AS-Interface, 8 in/8 out, 1 power supply systems	1 to 4 stations (8 stations, 8 points)	
SDTD	AS-Interface, 4 in/4 out, 1 power supply systems	1 to 2 stations (4 stations, 4 points)	
SDZEN	EtherNet/IP™	1 to 12 stations (16 stations, 24 points)	

9 SI unit output polarity

SI unit output polarity		EX250 integrated-type (I/O) serial transmission system		
		DeviceNet®	AS-Interface	EtherNet/IP™
NH	Positive common	—	—	—
N	Negative common	○	○	○

SI unit output polarity	EX245 integrated-type (I/O) serial transmission system		EX260 integrated-type (for output) serial transmission system						
	PROFINET	DeviceNet®	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	EtherNet POWERLINK	IO-Link	CC-Link IE TSN
NH	—	—	○	○	○	○	—	—	—
N	○	○	○	○	○	○	○	○	○

SI unit output polarity		EX500 Gateway Decentralized System 2 (128 points)	
		—	○
NH	Positive common	—	—
N	Negative common	—	○

SI unit output polarity		EX600 integrated-type (I/O) serial transmission system						
		DeviceNet®	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	Wireless remote
NH	Positive common	○	○	○	○	○	○*2	○
N	Negative common	○	○	○	○	○	○	○

*1 Leave the box blank for without SI Unit (SD0C, SD60). *2 Positive common is not available for PROFINET (OPC UA).

How to Order Valves

VQC4 **1** **0** **0** **□** - **5** **□** **□** **1**

VQC4000 series • (A) (B) (C) (D) (E) (F)

(A) Type of actuation

1	2-position single (A) (B) 4, 2 5 1 3 (R1) (P) (R2)	4	3-position exhaust center (A) (B) 4, 2 5 1 3 (R1) (P) (R2)
	2-position double (Metal) (A) (B) 4, 2 5 1 3 (R1) (P) (R2)		3-position pressure center (A) (B) 4, 2 5 1 3 (R1) (P) (R2)
2	2-position double (Rubber) (A) (B) 4, 2 5 1 3 (R1) (P) (R2)	5	3-position double check (A) (B) 4, 2 5 1 3 (R1) (P) (R2)
	3-position closed center (A) (B) 4, 2 5 1 3 (R1) (P) (R2)		6

(B) Seal type

0	Metal seal
1	Rubber seal

(C) Function

Nil ^{Note 1)}	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R ^{Note 2)}	External pilot

Note 1) When the power is energized continuously, refer to "Specific Product Precautions 1" on page 1192.

Note 2) For details about external pilot type, refer to the **Web Catalog** of the VQ4000/5000 series. In addition, external pilot type cannot be combined with a double check spacer.

* When multiple symbols are specified, indicate them alphabetically.

(D) Coil voltage

5	24 VDC ^{Note)}
6	12 VDC

Note) S kit is only available for 24 VDC.

(E) Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

(F) Manual override

Nil	Non-locking push type (Tool required)
B	Push-turn locking type (Tool required)
C	Turn locking type (Manual)

VQC4000 Series

How to Order Manifold Assembly: EX600*1

Example (VV5QC41-□SD6□)

Digital Input Unit
EX600-DXPD
End plate (Note)
EX600-ED4

Digital Output Unit
EX600-DYPB
SI Unit (Note)
EX600-SDN1A

2-position single
VQC4100-51 (3 sets)

2-position double
VQC4200-51 (2 sets)

1 2... I/O Unit stations 1 2 3 4 5...Valve stations

D side U side

VV5QC41-0502SD6Q4N2...1 set (S kit 5-station manifold base part number)

•VQC4100-51.....3 sets (2-position single part number)

•VQC4200-51.....2 sets (2-position double part number)

•EX600-DXPD.....1 set I/O Unit part number (Station 1)

•EX600-DYPB.....1 set I/O Unit part number (Station 2)

→The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

· The valve arrangement is numbered as the 1st station from the D side.

· Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

For the I/O unit part number mounted, [click here for details](#).

· Digital Input Unit · Digital Output Unit · Digital Input/Output Unit

· Analog Input Unit · Analog Output Unit · Analog Input/Output Unit

How to Order Manifold Assembly: EX245*

Example (VV5QC41-□SDAAN□)

Digital output module
EX245-DY1
End plate (Note)
EX245-EA2-4

Digital input module
EX245-DX1
SI unit (Note)
EX245-SPN1A

2-position single
VQC4101-51 (4 sets)

2 1... I/O module stations 1 2 3 4...Valve stations

D side U side

VV5QC41-04C8SDAANY2...1 set (S kit 4-station manifold base part no.)

•VQC4101-51.....4 sets (2-position single part no.)

•EX245-DX1.....1 set I/O unit part number (Station 1)

•EX245-DY1.....1 set I/O unit part number (Station 2)

→The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

· The valve arrangement is numbered as the 1st station from the D side.

· Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

* The EX245/250 I/O module (block) station arrangement is numbered starting from the SI unit side.

Manifold Specifications

Series	Base model	Connection type	Piping specifications			Note 2) Applicable stations	Applicable solenoid valve	5-station weight [g]
			Port direction	Port size Note 1)				
				1, 3 (P, R)	2, 4 (A, B)			
VQC4000	VV5QC41-□□□	■ F kit: D-sub connector ■ P kit: Flat ribbon cable ■ T kit: Terminal block box ■ S kit: Serial transmission Compact wireless remote ■ L kit: Lead wire ■ M kit: Circular connector	Side	P: 1/2 (Rc, G, NPT/NPTF) R: 3/4 (Rc, G, NPT/NPTF)	C6 (for ø6) C8 (for ø8) C10 (for ø10) C12 (for ø12) 1/4 (Rc, G, NPT/NPTF) 3/8 (Rc, G, NPT/NPTF)	(F, L, M, P kit 1 to 12 stations) (T kit 1 to 10 stations) (S kit Note 3) 1 to 12 stations: EX250, EX245 1 to 8 stations: EX500, EX600	VQC4□00-51 VQC4□01-51	2282 · S kit (Without Unit) · Not including valve weight.
			Bottom		1/4 (Rc, G, NPT/NPTF)	(S kit Note 4) 1 to 12 stations)		

Note 1) One-touch fittings in inch sizes are also available.

Note 2) An optional specification for special wiring is available to increase the maximum number of stations.

Note 3) Depending on the protocol, there is a limit to the number of stations a serial transmission can be applied to. Refer to page 1162 for details.

Note 4) For the compact wireless remote

SI Unit Part Number Table

EX600 Integrated type (For Input/Output)

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)	Positive common (NPN)	
SD6Q	DeviceNet®	EX600-SDN1A	EX600-SDN2A	1188
SD6N	PROFIBUS DP	EX600-SPR1A	EX600-SPR2A	
SD6V	CC-Link	EX600-SMJ1	EX600-SMJ2	
SD6FA	PROFINET (IO-Link unit)	EX600-SPN3	EX600-SPN4	
SD6FB	PROFINET (OPC UA, IO-Link unit)	—	EX600-SPN31	
SD6EB	EtherNet/IP™ (IO-Link unit)	EX600-SEN7	EX600-SEN8	
SD6DA	EtherCAT (IO-Link unit)	EX600-SEC3	EX600-SEC4	1189
SD6WS	Wireless remote ^{Note)}	EX600-WSV1	EX600-WSV2	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX245 Integrated type (For Input/Output)

Symbol	Compatible protocol	SI unit part no.	Page
SDAAN	PROFINET	EX245-SPN1A	1189
SDABN		EX245-SPN2A	
SDACN		EX245-SPN3A	

EX126 Integrated type (For Output)

Symbol	Applicable protocol	SI Unit part no.	Page
SDVB	CC-Link, Positive common (NPN)	EX126D-SMJ1	1189

EX500 Gateway Decentralized System 2 (128 points)

Symbol	SI Unit part no.	Page
	Negative common (PNP)	
SDA3	EX500-S103	1188

EX260 Integrated type (For Output)

Symbol	Applicable protocol	Number of outputs	SI Unit part no.		Communication connector	Page
			Negative common (PNP)	Positive common (NPN)		
SQA	DeviceNet®	32	EX260-SDN1	EX260-SDN2	M12	1189
SQB		16	EX260-SDN3	EX260-SDN4		
SNA		32	EX260-SPR1	EX260-SPR2		
SNB	PROFIBUS DP	16	EX260-SPR3	EX260-SPR4	D-sub	
SNC		32	EX260-SPR5	EX260-SPR6		
SND		16	EX260-SPR7	EX260-SPR8		
SVA	CC-Link	32	EX260-SMJ1	EX260-SMJ2	M12	
SVB		16	EX260-SMJ3	EX260-SMJ4		
SDA		EtherCAT	32	EX260-SEC1	EX260-SEC2	M12
SDB	16		EX260-SEC3	EX260-SEC4		
SFA	PROFINET		32	EX260-SPN1	EX260-SPN2	M12
SFB		16	EX260-SPN3	EX260-SPN4		
SEA		EtherNet/IP™	32	EX260-SEN1	EX260-SEN2	M12
SEB	16		EX260-SEN3	EX260-SEN4		
SGA	Ethernet POWERLINK		32	EX260-SPL1	—	M12
SGB		16	EX260-SPL3	—		
SKA	IO-Link	32	EX260-SIL1	—	M12	
SCA	CC-Link IE TSN	32	EX260-SC11	—	RJ45	









EX250 Integrated type (For Input/Output)

Symbol	Applicable protocol	SI Unit part no.	Page
SDQ	DeviceNet®, Negative common (PNP)	EX250-SDN1	1189
SDTA	AS-Interface, Negative common (PNP), (8 in/8 out, 2 power supply systems)	EX250-SAS3	
SDTB	AS-Interface, Negative common (PNP), (4 in/4 out, 2 power supply systems)	EX250-SAS5	
SDTC	AS-Interface, Negative common (PNP), (8 in/8 out, 1 power supply system)	EX250-SAS7	
SDTD	AS-Interface, Negative common (PNP), (4 in/4 out, 1 power supply system)	EX250-SAS9	
SDZEN	EtherNet/IP™, Negative common (PNP)	EX250-SEN1	

For details about the EX series (Serial Transmission System), refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via SMC website, <https://www.smcworld.com>

Manifold Options

For details about options, refer to the **Web Catalog** of the VQ4000 series.

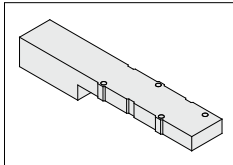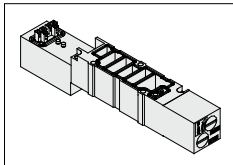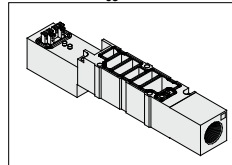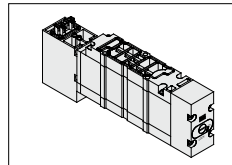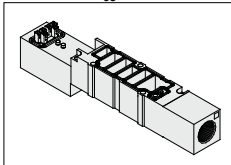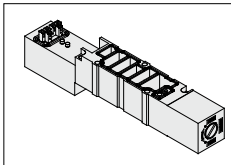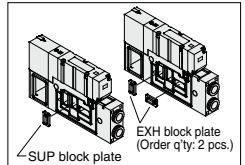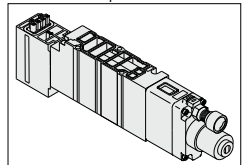Blanking plate assembly
VVQ4000-10A-1Restrictor spacer
VVQ4000-20A-1Individual SUP spacer
VVQ4000-P-1-⁰²/₀₃Double check spacer with residual pressure exhaust
VVQ4000-25A-1 ^{Note)}Individual EXH spacer
VVQ4000-R-1-⁰²/₀₃SUP stop valve spacer
VVQ4000-37A-1SUP/EXH block plate
VVQ4000-16A (1 pc./set)Interface regulator (P, A, B port regulation)
ARBQ4000-00-¹/₁

Note) The double check spacer with residual pressure release valve cannot be combined with external pilot type.

For replacement parts, refer to page 1190.

Base Mounted Plug-in Unit

EX260 Safety Communication Protocol

VQC4000 Series

CE UK
CA

CE US

RoHS

Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to page 1160 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC 4 1 - 16 02 SFP N -

VQC4000 series •

Base mounted plug-in •

1 2 3 4 5 6

1 Valve stations

Symbol	Stations	Note
01	1 station	Double wiring (Note 1)
⋮	⋮	
12	12 stations	
01	1 station	Special wiring spec. (Note 2) (Up to 24 solenoids available)
⋮	⋮	
16	16 stations	

Note 1) Double wiring: 2-position single, double, and 3-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal.

If this is not desired, order with a specified layout.

Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, and 3-position valves cannot be used where single wiring has been specified.)

2 Cylinder port size


C6	With ø6 One-touch fitting	N11	For ø3/8"
C8	With ø8 One-touch fitting	02	1/4
C10	With ø10 One-touch fitting	03	3/8
C12	With ø12 One-touch fitting	B	Bottom ported 1/4
N7	For ø1/4"	CM	Mixed
N9	For ø5/16"		

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

4 Kit type/Electrical entry/Cable length

 S Kit
Serial transmission: EX260 integrated-type (for output)



SI Unit: EX260

IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations
SD0A			Without SI unit	1 to 12 stations
SFP	PROFIsafe	32	M12	
SDP	Safety over EtherCAT	32	M12	

5 SI unit output polarity

SI unit output polarity	EX260 integrated-type (for output) serial transmission system	
	PROFIsafe	Safety over EtherCAT
N Negative common	○	○

Note) Positive common (NPN) type is not applicable.

6 Option

Nil	None
K	Special wiring spec. (Except double wiring)
S (Note)	Direct EXH outlet with built-in silencer

Note) The silencer is built into the R port passage of the end plate and the silenced air is exhausted from the R port.

* When two or more symbols are specified, indicate them alphabetically.
Example: -KS

How to Order Valves

Refer to page 1163 for valve models. Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B" and "C") are excluded since they do not comply with safety standards.

SI Unit Part No.

EX260 SI Unit (Safety Communication)

EX260-F **PS1**

• Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Page
PS1	PROFIsafe	32	Source/PNP (Negative common)	M12	SFPN	1189
SE1	Safety over EtherCAT	32	Source/PNP (Negative common)	M12	DPN	

Base Mounted Plug-in Unit

EX600 Safety Communication Protocol

VQC4000 Series



RoHS

Using the safety communication protocol

Refer to the EX600 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to page 1160 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC 4 1 - 16 02 SD6EP -

VQC4000 series* 1 2 3 4 5

Base mounted plug-in*

1 Valve stations

Symbol	Stations	Note
01	1 station	Double wiring ^{Note 1)}
⋮	⋮	
12	12 stations	
01	1 station	Special wiring spec. ^{Note 2)} (Up to 24 solenoids available)
⋮	⋮	
16	16 stations	

Note 1) Double wiring: 2-position single, double, and 3-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal.

If this is not desired, order with a specified layout.

Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, and 3-position valves cannot be used where single wiring has been specified.)

2 Cylinder port size

C6	With ø6 One-touch fitting	N11	For ø3/8"
C8	With ø8 One-touch fitting	02	1/4
C10	With ø10 One-touch fitting	03	3/8
C12	With ø12 One-touch fitting	B	Bottom ported 1/4
N7	For ø1/4"	CM	Mixed
N9	For ø5/16"		

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

4 Kit type

[Safety communication protocol]
EX600

Symbol	Protocol	Number of outputs	Communication connector
SD6EP		Without fieldbus module	

Note 1) Manifold + valve plate part number

Note 2) Refer to the mounting instructions in the EX600 catalog when mounting the included valve plate.

Note 3) Refer to the EX600 catalog when selecting a safety communication fieldbus system. When ordering, include the part number as shown in the ordering example on page 1167-02. In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.

Note 4) If your order includes a safety communication fieldbus module, it will be shipped with the product. Refer to the attached operation manual for details on the mounting method.

5 Option

Nil	None
K	Special wiring spec. (Except double wiring)
S ^{Note)}	Direct EXH outlet with built-in silencer


Note) The silencer is built into the R port passage of the end plate and the silenced air is exhausted from the R port.

* When two or more symbols are specified, indicate them alphabetically.

Example: -KS

How to Order Valves

Refer to page 1163 for valve models. Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B" and "C") are excluded since they do not comply with safety standards.

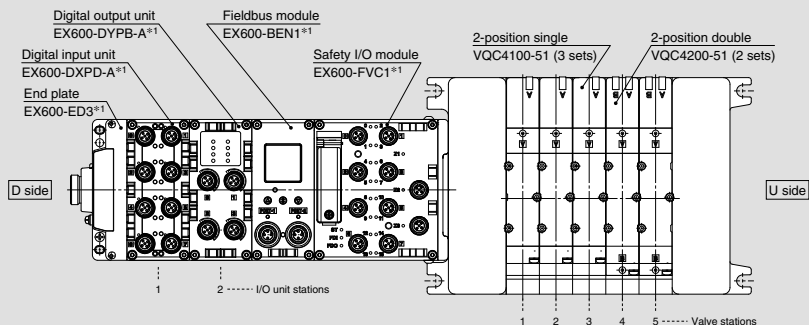How to Order Manifold Assembly: [Safety Communication Protocol] EX600**Example (VV5QC41-□SD6EP-□)**

VV5QC41-0502SD6EP..... 1 set 5-station manifold base part no.

- * VQC4100-51 3 sets 2-position single part no. (Stations 1 to 3)
- * VQC4200-51 2 sets 2-position double part no. (Stations 4 to 5)
- * EX600-ED3 1 set End plate
- * EX600-DXPD-A 1 set I/O unit part number (Station 1)
- * EX600-DYPB-A 1 set I/O unit part number (Station 2)
- * EX600-BEN1 1 set Fieldbus module part no.
- * EX600-FVC1 1 set Safety I/O module part no.

→ The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

Indicate the part numbers of valves and optional parts to be mounted in order, starting from station 1 (D side). If the arrangement becomes complicated, specify on a manifold specification sheet.

Indicate the part numbers for the end plate, I/O unit (1st station from the D side), fieldbus module, and safety I/O module in that order.

*1 The manifold part number above does not include an end plate, I/O unit, fieldbus module, or safety I/O module. However, they can be shipped with the product if they are ordered together. For details on the compatible EX600 models, refer to the EX600 series safety communication fieldbus system catalog. In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.

 
Base Mounted Plug-in Unit

Compact Wireless Remote Series

VQC4000 Series



How to Order Manifolds



1 Valve stations

Symbol	Stations	Note
01	1 station	Double wiring (Note 1)
:	:	
12	12 stations	
01	1 station	Special wiring spec. (Note 2) (Up to 24 solenoids available)
:	:	
16	16 stations	

Note 1) Double wiring: 2-position single, double, and 3-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, and 3-position valves cannot be used where single wiring has been specified.)

2 Cylinder port size

C6	With ø6 One-touch fitting	N11	For ø3/8"
C8	With ø8 One-touch fitting	02	1/4
C10	With ø10 One-touch fitting	03	3/8
C12	With ø12 One-touch fitting	B	Bottom ported 1/4
N7	For ø1/4"	CM	Mixed
N9	For ø5/16"		

3 Thread type

N11	Rc
F	G
N	NPT
T	NPTF

4 Kit type

Specifications	Wireless adapter	Number of outputs	Stations	Number of selectable frequency channels	Applicable countries (Note 3)
SD0 (Note 1) (Note 2)	Without compact wireless remote				
SW1	Without wireless adapter	32	1 to 12 stations (24)	—	—
SW2	EXW1-A11E	32	1 to 12 stations (24)	Min. 5/ Max. 79	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
SW3	EXW1-A11N	32	1 to 12 stations (24)	Min. 15/ Max. 79	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

Note 1) Confirm that the common specification of the built-in valve matches the output polarity of the selected compact wireless remote.

In addition, if the built-in valve has no polarity, either compact wireless remote output polarity type can be connected.

Note 2) "With DIN rail" cannot be selected for the type without a compact wireless remote.

Note 3) Select the wireless adapter according to the country of use.

* The applicable countries differ depending on the part number. Before purchasing, refer to the wireless system catalog.

5 Compact wireless remote output polarity

Output polarity
N Negative common

Note) Cannot be selected for the type without a compact wireless remote

6 Option

N11	None
K	Special wiring spec. (Except double wiring)
S (Note)	Direct EXH outlet with built-in silencer

Note) The silencer is built into the R port passage of the end plate and the silenced air is exhausted from the R port.

* When two or more symbols are specified, indicate them alphabetically.

Example: -KS

Compact Wireless Remote Part No.**① Compact wireless remote part no.****EXW1-RDYPM5C-E**

Type	
Symbol	Type
D	Digital

Type	
Symbol	Type
Y	Output

Polarity	
Symbol	Description
P	PNP
N	NPN

Option

Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

- * If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately. Refer to the operation manual for mounting instructions.
- * "E" and "N" are shipped with the wireless adapter assembled.

Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

Connector/Number of ports

Symbol	Connector	Number of points
M5	Valve manifold	32 points

Corresponding Manifold Symbol Table

Compact wireless remote part no.	Manifold symbol
EXW1-RDYNM5C	SW1
EXW1-RDYPM5C	SW1N
EXW1-RDYNM5C-E	SW2
EXW1-RDYPM5C-E	SW2N
EXW1-RDYNM5C-N	SW3
EXW1-RDYPM5C-N	SW3N

② Wireless adapter**EXW1-A11N****Wireless adapter****Applicable model**

Symbol	Applicable model
1	- Base/Remote - Antenna specification for wireless communication: C - Air Management Hub: EXA1-□

Frequency channel selection

Symbol	Number of selectable frequency channels	Applicable countries
E	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
N	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

- * A dedicated cable is required to connect the wireless base/remote and wireless adapter.
- When using this product, order the wireless adapter cable separately.
- An installation plate (EXW1-AB4) is included as an accessory.

③ Wireless adapter cover**EXW1-AB6**

For direct mounting of wireless adapter, a wireless adapter cover is required.



For details on the compact wireless remote, refer to the EXW1 series catalog or operation manual, and for part numbers of the built-in compact wireless remote, etc., refer to page 1187. The operation manual can be downloaded from the SMC website: <https://www.smcworld.com>


VQC4000 Series

S VQC4000 Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX600)


Power supply with M12 connector

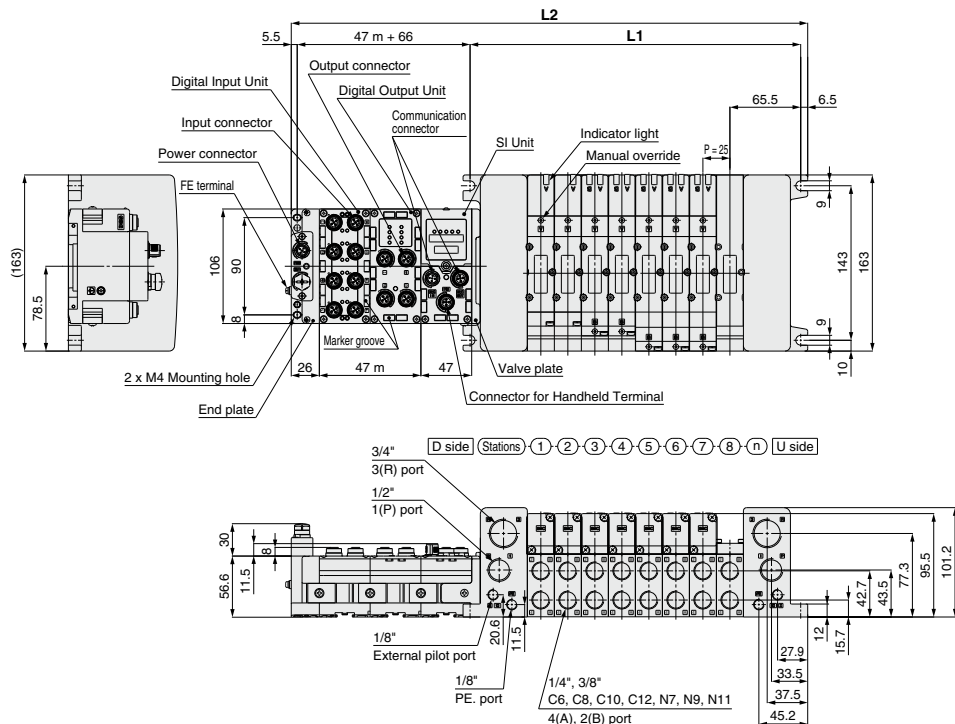

Bottom ported

<P/R port side>


<Bottom side>

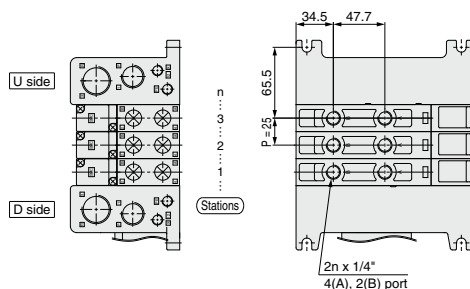

* Other dimensions are the same as the side ported type.

Dimensions Formula: $L1 = 25n + 106$, $L2 = 25n + 184$ * L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "m" is number of I/O Units. n: Stations (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2		209	234	259	284	309	334	359	384	409	434	459	484	509	534	559	584

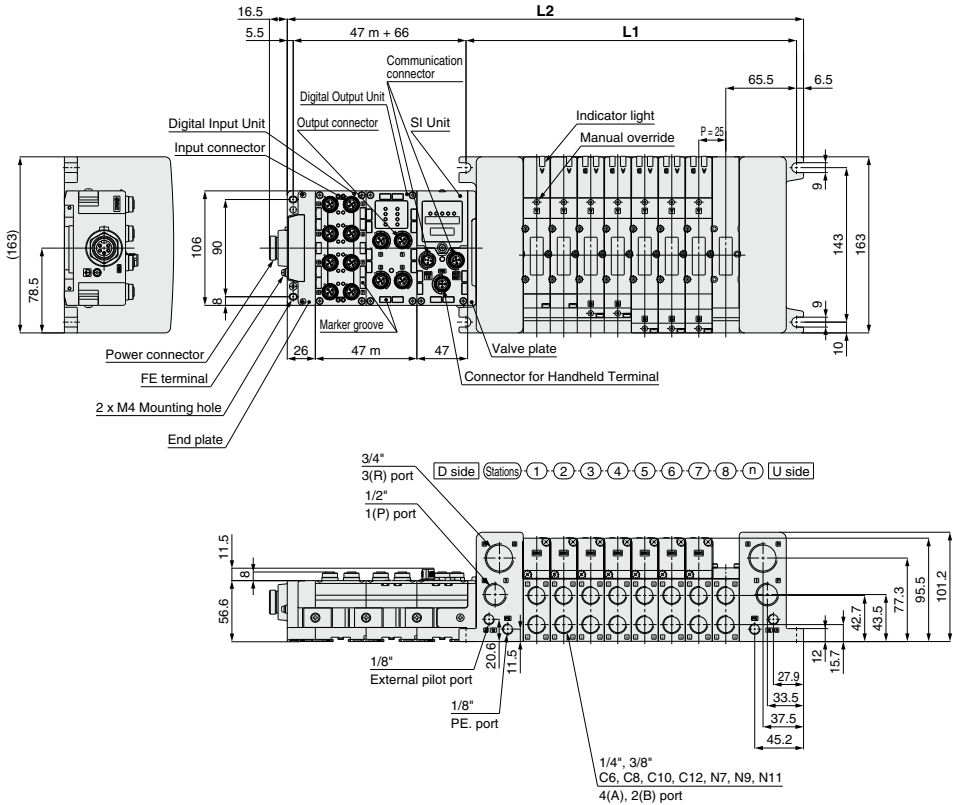S**VQC4000**Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant****VV5QC41****S kit (Serial transmission kit: EX600)****Power supply with 7/8 inch connector**

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions Formula: $L1 = 25n + 106$, $L2 = 25n + 184$ * $L2$ is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n" is number of I/O Units. n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	209	234	259	284	309	334	359	384	409	434	459	484	509	534	559	584


VQC4000 Series

S

VQC4000

Kit (Serial transmission kit): For EX500 Gateway Decentralized System 2 (128 points) IP67 compliant

VV5QC41
S kit (Serial transmission kit: EX500)

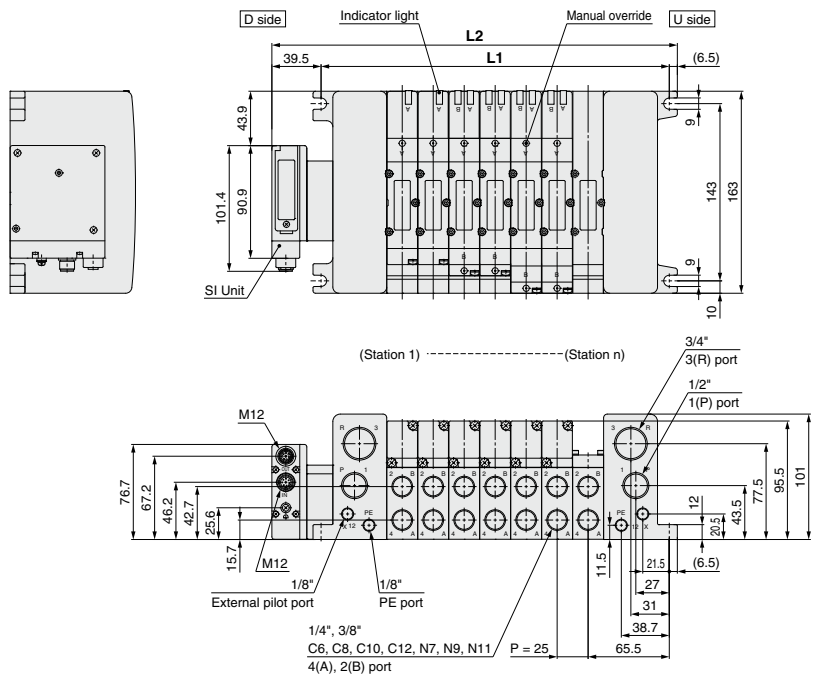

Note) The dimensions of the bottom ported type are common to all S kits.

Formula: $L1 = 25n + 106$, $L2 = 25n + 152$ n: Stations (Maximum 16 stations)

$\begin{matrix} L \\ n \end{matrix}$	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

VQC4000 Series

S

VQC4000


Kit (Serial transmission kit): For EX260 Integrated-type (Output) Serial Transmission System

IP40 compliant


IP67 compliant

VV5QC41

S kit (Serial transmission kit: EX260)

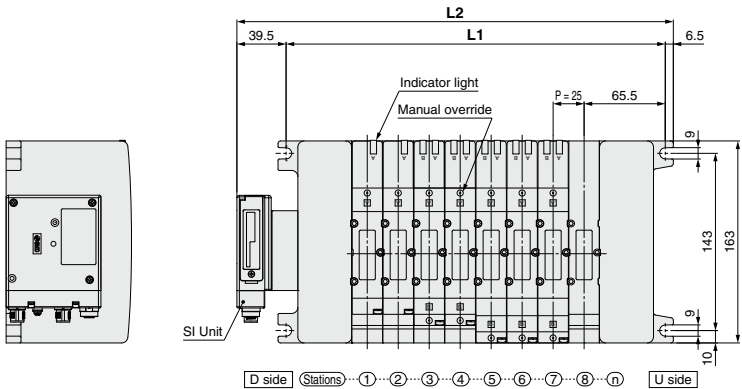

<Communication connector D-sub>



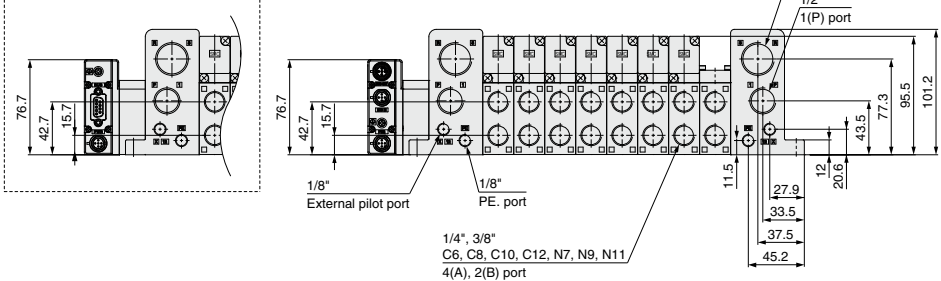


Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions

n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

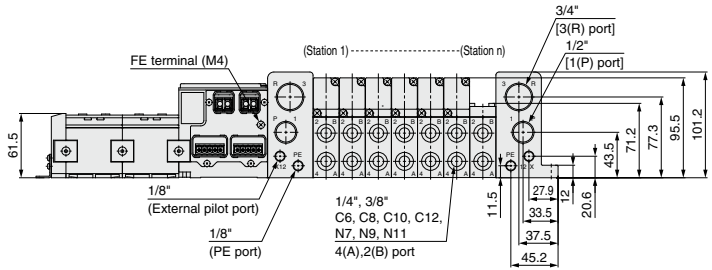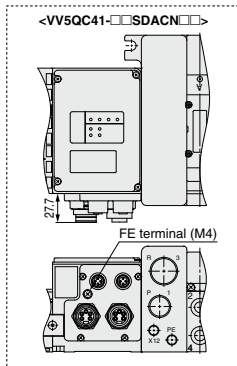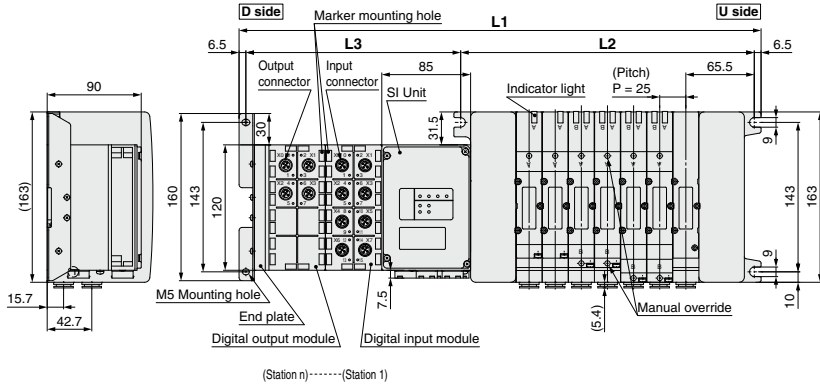S**VQC4000**Kit (Serial transmission kit): For EX245 Integrated-type (I/O) Serial Transmission System **IP65 compliant****VV5QC41****S kit****(Serial transmission: EX245)**

$$L3 = 54n2 + 97.6$$

Dimensions Formula: $L1 = 25n + 216.6$ $L2 = 25n + 106$ * The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module. * n2 is the number of I/O module stations.

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		241.6	266.6	291.6	316.6	341.6	366.6	391.6	416.6	441.6	466.6	491.6	516.6	541.6	566.6	591.6	616.6
L2		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506


VQC4000 Series

S

VQC4000

Kit (Serial transmission kit): For EX250 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC41
S kit
(Serial transmission kit: EX250)

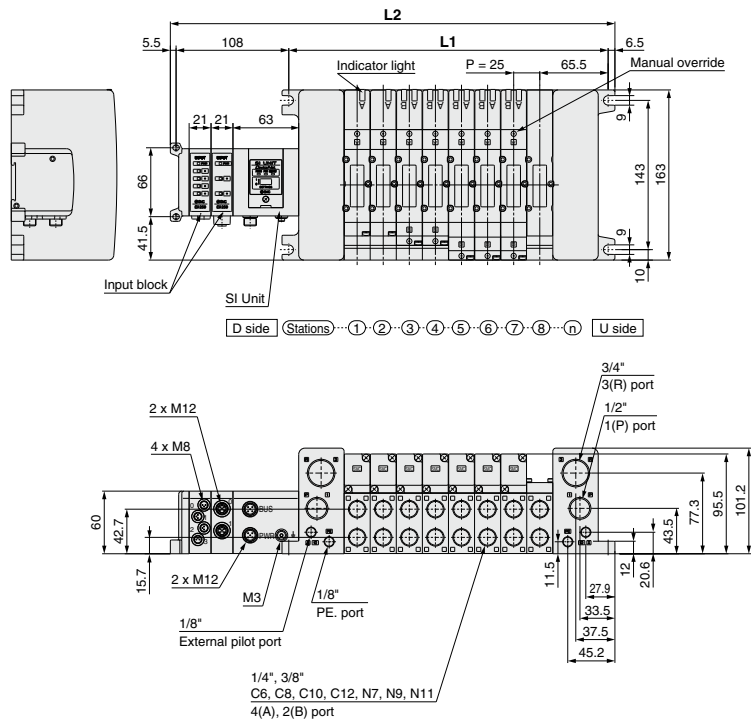

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions		Formula: $L1 = 25n + 106$, $L2 = 25n + 205$ (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 16 stations)															
L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2		230	255	280	305	330	355	380	405	430	455	480	505	530	555	580	605


S

VQC4000

Kit (Serial transmission kit): For EX126 Integrated-type (Output) Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX126)

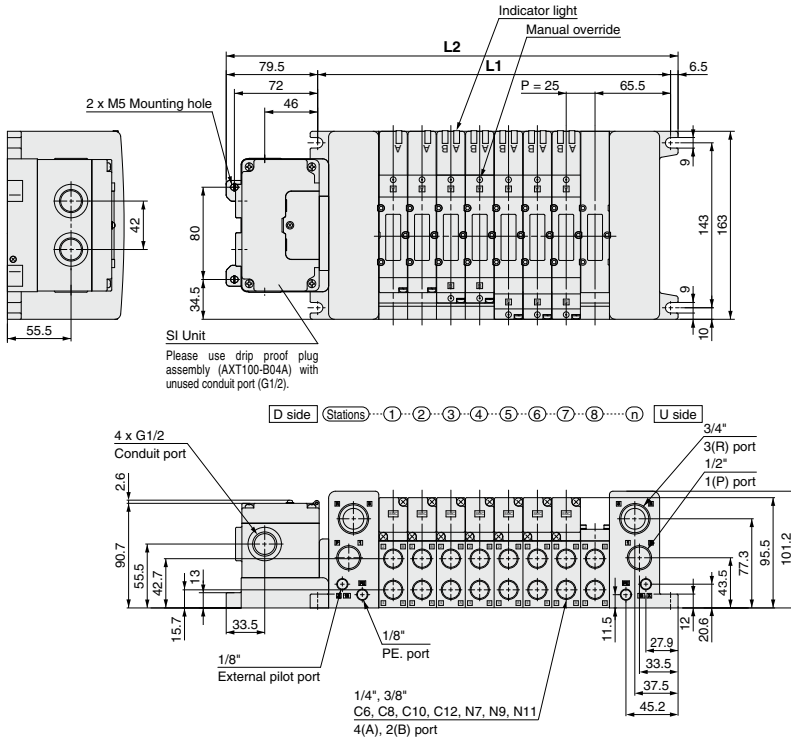

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions

Formula: $L1 = 25n + 106$, $L2 = 25n + 192$ n: Stations (Maximum 16 stations)


$\begin{matrix} \text{L} \\ \text{N} \end{matrix}$	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	217	242	267	292	317	342	367	392	417	442	467	492	517	542	567	592

S VQC4000

Kit [Safety Communication Protocol] EX600

IP67 compliant

VV5QC41
[Safety Communication Protocol] EX600
(Power supply with 7/8 inch connector)

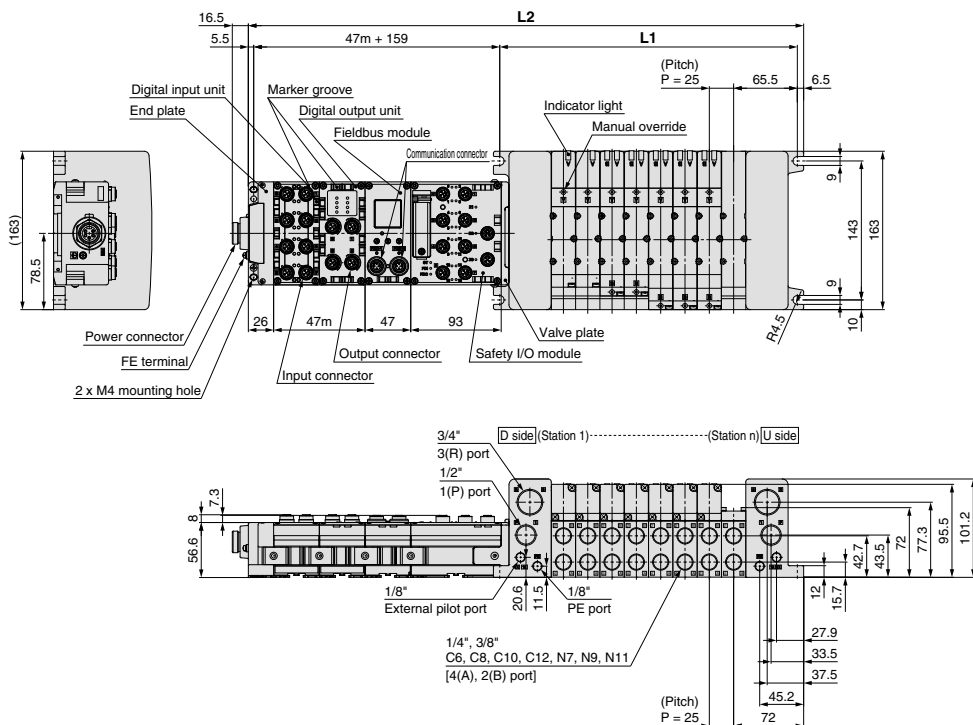

Dimensions Formula: $L1 = 25n + 106$, $L2 = 25n + 277$ * $L2$ is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "m" is number of I/O Units. n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	302	327	352	377	402	427	452	477	502	527	552	577	602	627	652	677

VQC4000 Series

S




VQC4000

Kit (Compact Wireless Remote) EXW1

IP67 compliant

VV5QC41

S kit (Compact wireless remote: EXW1)

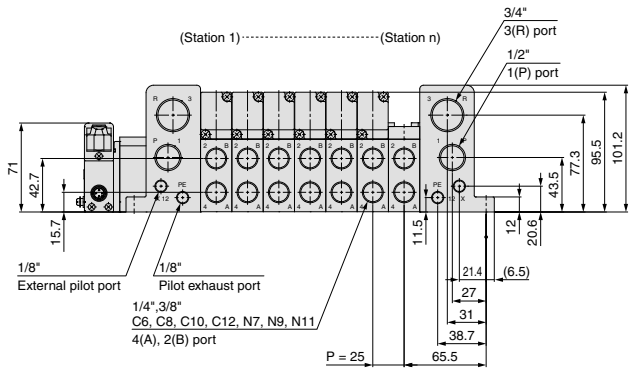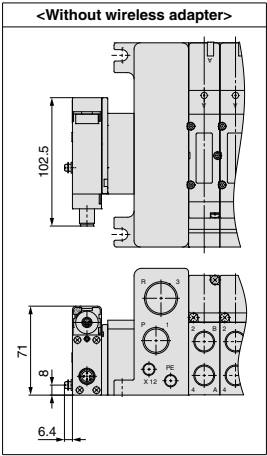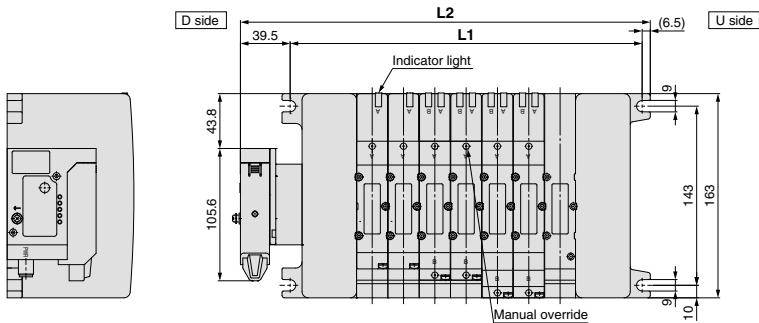

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions


n: Stations (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2		177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

VQC4000 Series


F VQC4000 Kit (D-sub connector kit) IP40 compliant

- Using our D-sub connector for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.
- We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

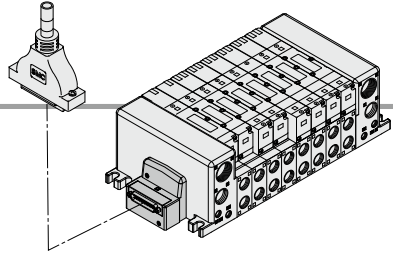

Electrical Wiring Specifications

 D-sub connector




As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types.
Mixed single and double wiring are available as options.
Refer to special wiring specifications (options) below.

Lead wire colors for D-sub connector assemblies (AXT100-DS25-015, 030, 050)

Standard wiring	Terminal no.	Lead wire color	Dot marking
Station 1 { SOL.A	1	Black	None
Station 1 { SOL.B	14	Yellow	Black
Station 2 { SOL.A	2	Brown	None
Station 2 { SOL.B	15	Pink	Black
Station 3 { SOL.A	3	Red	None
Station 3 { SOL.B	16	Blue	White
Station 4 { SOL.A	4	Orange	None
Station 4 { SOL.B	17	Purple	None
Station 5 { SOL.A	5	Yellow	None
Station 5 { SOL.B	18	Gray	None
Station 6 { SOL.A	6	Pink	None
Station 6 { SOL.B	19	Orange	Black
Station 7 { SOL.A	7	Blue	None
Station 7 { SOL.B	20	Red	White
Station 8 { SOL.A	8	Purple	White
Station 8 { SOL.B	21	Brown	White
Station 9 { SOL.A	9	Gray	Black
Station 9 { SOL.B	22	Pink	Red
Station 10 { SOL.A	10	White	Black
Station 10 { SOL.B	23	Gray	Red
Station 11 { SOL.A	11	White	Red
Station 11 { SOL.B	24	Black	White
Station 12 { SOL.A	12	Yellow	Red
Station 12 { SOL.B	25	White	None
COM.	13	Orange	Red

Special Wiring Specifications (Options)

 (For 25P)




Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-DS25-015, 030, 050

(D-sub connector cable assemblies can be ordered with manifolds.)
(Refer to manifold ordering.)

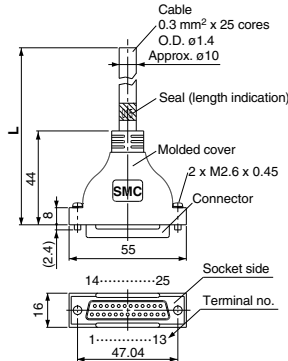

Lead wire colors for D-sub connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub connector cable assemblies

Cable length [L]	Part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm ² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

- When using a standard commercial connector, use a type 25P female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more


(Note) The minimum bending radius for D-sub connector cables is 20 mm.

Connector Manufacturers Example

- Fujitsu, Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.


F**VQC4000****Kit (D-sub connector kit) IP40 compliant**

VV5QC41

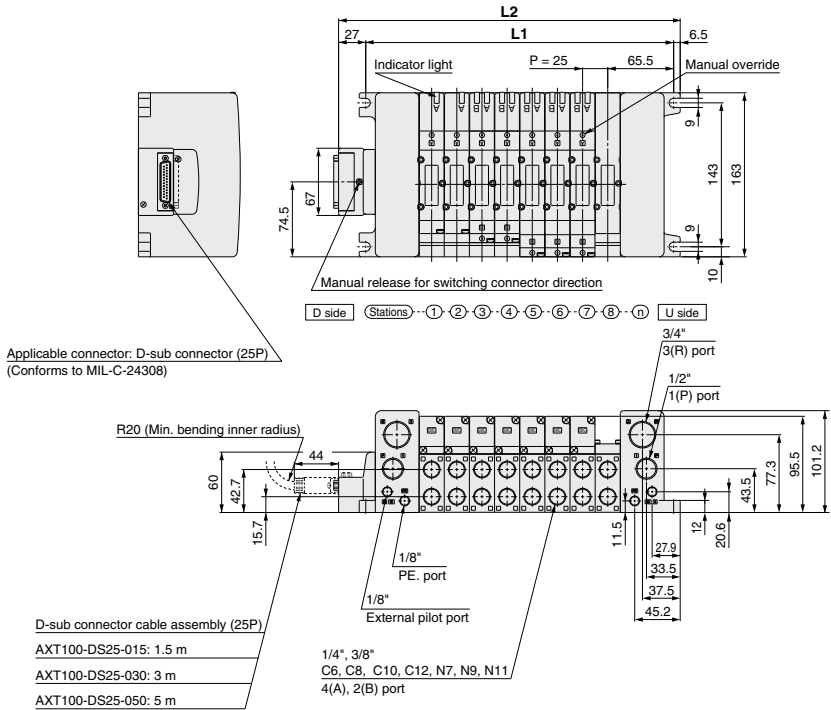**Bottom ported**

<P/R port side>

<Bottom side>

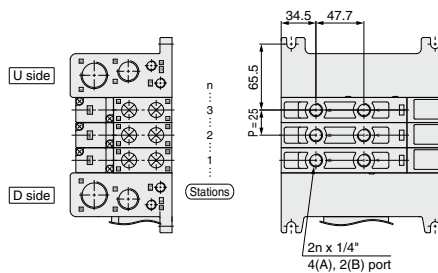

* Other dimensions are the same as the side ported type.

Dimensions


Formula: L1 = 25n + 106, L2 = 25n + 139.5 n: Stations (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2		164.5	189.5	214.5	239.5	264.5	289.5	314.5	339.5	364.5	389.5	414.5	439.5	464.5	489.5	514.5	539.5

VQC4000 Series


P VQC4000 Kit (Flat ribbon cable kit) IP40 compliant

- Using our flat ribbon cable for electrical connections greatly reduces labour, while it also minimizes wiring and saves space.
- We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

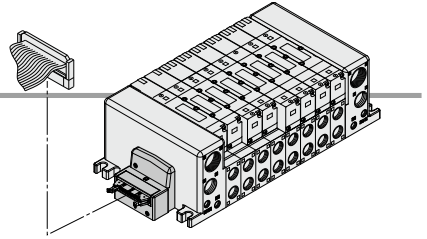

Electrical Wiring Specifications

 Flat ribbon cable connector




Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.


Connector terminal number

Triangle mark indicator position

<26P>

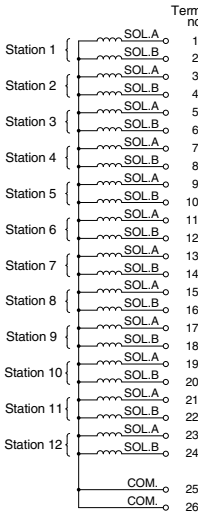


<20P>

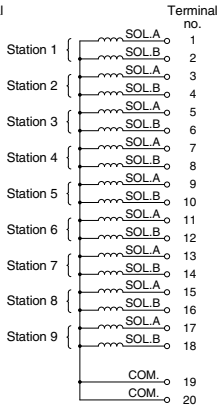

Cable Assembly

AXT100-FC²⁰₂₆¹₂³

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

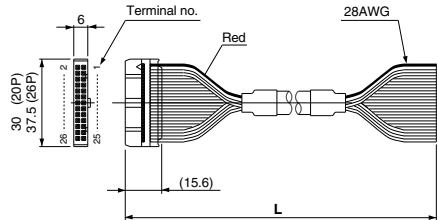

Flat ribbon cable connector assemblies


Cable length [L]	Part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

- When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu, Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.


Special Wiring Specifications (Option)

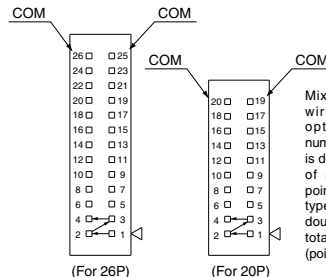

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

P**VQC4000****Kit (Flat ribbon cable kit) IP40 compliant**

VV5QC41

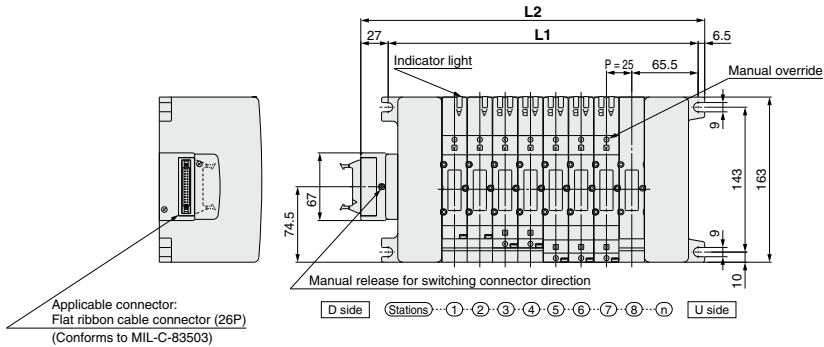


Flat ribbon cable connector assembly (26P)

AXT100-FC26-1: 1.5 m


AXT100-FC26-2: 3 m

AXT100-FC26-3: 5 m

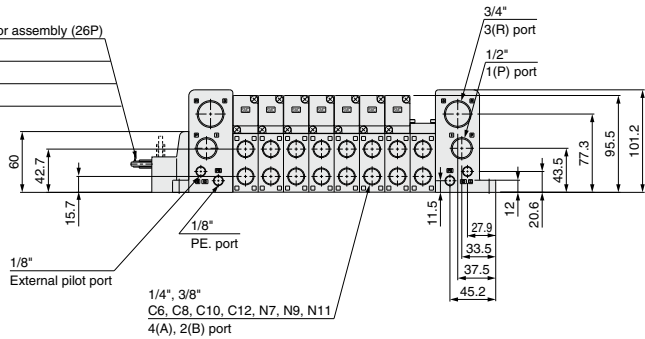**Bottom ported**

<P/R port side>

<Bottom side>

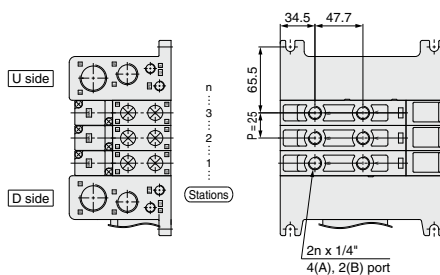


* Other dimensions are the same as the side ported type.

DimensionsFormula: $L1 = 25n + 106$, $L2 = 25n + 139.5$ n: Stations (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2		164.5	189.5	214.5	239.5	264.5	289.5	314.5	339.5	364.5	389.5	414.5	439.5	464.5	489.5	514.5	539.5

VQC4000 Series

T VQC4000 Kit (Terminal block box kit) IP67 compliant

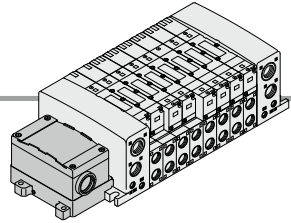


- This kit has a small terminal block inside a junction box. The provision of a G3/4 electrical entry allows connection of conduit fittings.

Terminal Block Connection

Step 1. How to remove terminal block cover

Loosen the 4 mounting screws (M4) and remove the terminal block cover.

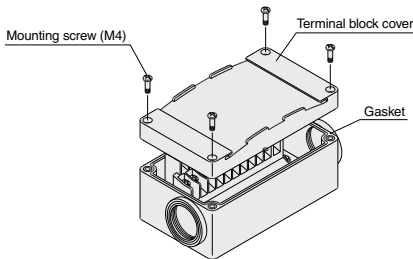

Step 3. How to replace the terminal block cover

Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


Proper tightening torque [N·m]
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof plug assembly (for G3/4): AXT100-B06A


Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

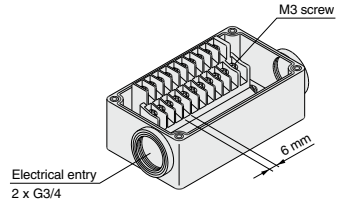


 Electrical Wiring Specifications (Conforms to IP67)



The internal wiring is double (connected to SOL. A and SOL. B) for all stations regardless of the type of valve or options. Mixed single and double wiring are available as options.

Standard wiring

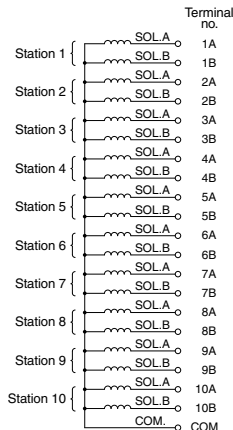

Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 20.

1. How to Order

Indicate option symbol "K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.


2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.




T**VQC4000****Kit (Terminal block box kit) IP67 compliant**

VV5QC41

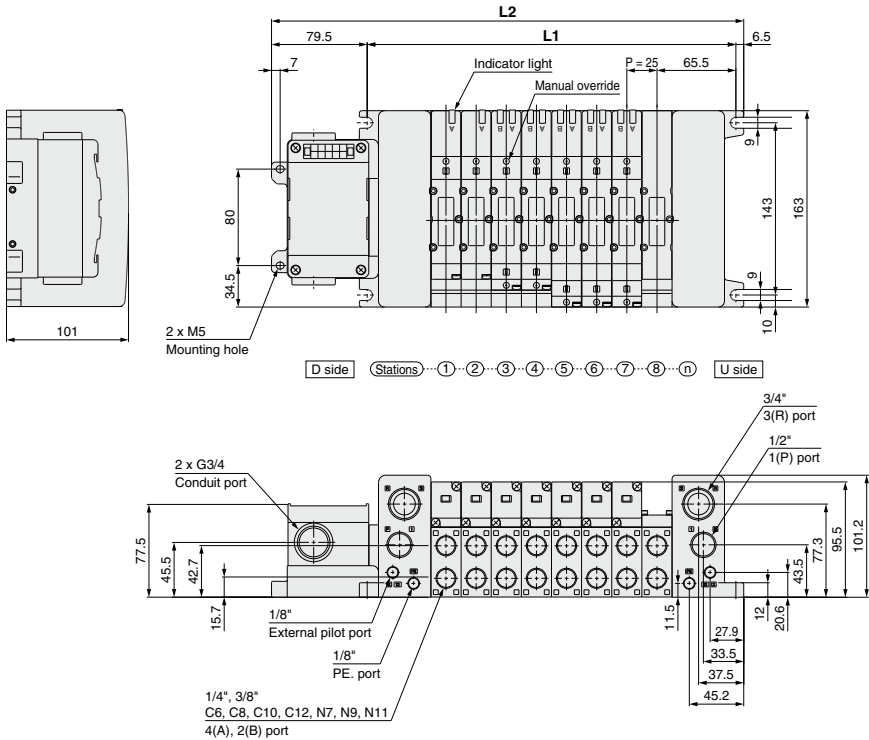**Bottom ported**

<P/R port side>

<Bottom side>

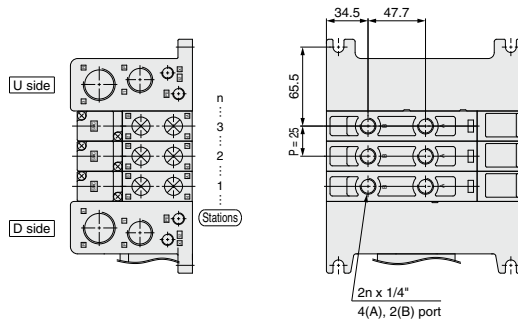


* Other dimensions are the same as the side type.

DimensionsFormula: $L1 = 25n + 106$, $L2 = 25n + 192$ n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	217	242	267	292	317	342	367	392	417	442	467	492	517	542	567	592

VQC4000 Series

L VQC4000 Kit (Lead wire kit) IP67 compliant

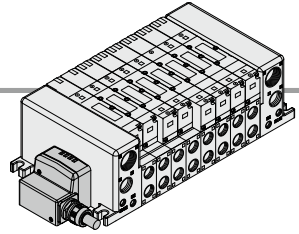


- Direct electrical entry type
- IP67 enclosure is available with use of cables with sheath and waterproof connectors.

Electrical Wiring Specifications

Lead wire specifications

Lead wire
0.3 mm² x 25 cores

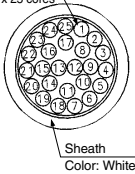

As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

	Terminal no.	Lead wire color	Dot marking
Station 1 {	SOL.A 1	Black	None
	SOL.B 14	Yellow	Black
Station 2 {	SOL.A 2	Brown	None
	SOL.B 15	Pink	Black
Station 3 {	SOL.A 3	Red	None
	SOL.B 16	Blue	White
Station 4 {	SOL.A 4	Orange	None
	SOL.B 17	Purple	None
Station 5 {	SOL.A 5	Yellow	None
	SOL.B 18	Gray	None
Station 6 {	SOL.A 6	Pink	None
	SOL.B 19	Orange	Black
Station 7 {	SOL.A 7	Blue	None
	SOL.B 20	Red	White
Station 8 {	SOL.A 8	Purple	White
	SOL.B 21	Brown	White
Station 9 {	SOL.A 9	Gray	Black
	SOL.B 22	Pink	Red
Station 10 {	SOL.A 10	White	Black
	SOL.B 23	Gray	Red
Station 11 {	SOL.A 11	White	Red
	SOL.B 24	Black	White
Station 12 {	SOL.A 12	Yellow	Red
	SOL.B 25	White	None
	COM. 13	Orange	Red

Lead wire length

VV5QC41-08C12LD0

Lead wire length

0	0.6 m
1	1.5 m
2	3.0 m

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20°C	65 or less
Withstand pressure V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) Cannot be used for transfer wiring.
The minimum bending radius for cables is 20 mm.

Special Wiring Specifications (Option)


Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.



VQC4000

Kit (Lead wire kit) IP67 compliant


VV5QC41

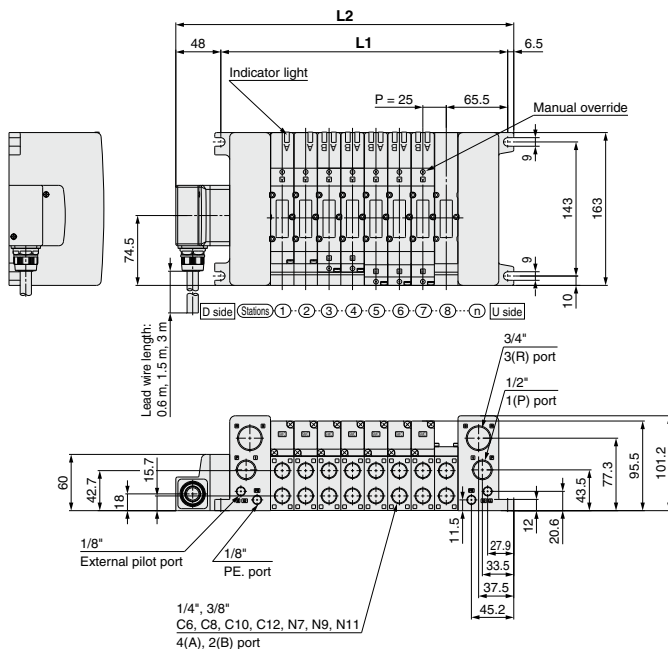

Bottom ported

<P/R port side>

<Bottom side>

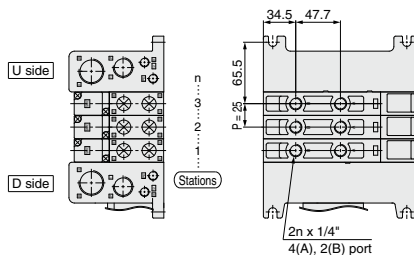

* Other dimensions are the same as the side ported type.

Dimensions

Formula: $L1 = 25n + 106$, $L2 = 25n + 160.5$ n: Stations (Maximum 16 stations)

$\mathbf{L}^n$	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5


VQC4000 Series

M

VQC4000


Kit (Circular connector kit) IP67 compliant

- Use of circular connectors helps streamline wiring procedure to save labor.
- IP67 enclosure is available with use of waterproof multiple connectors.

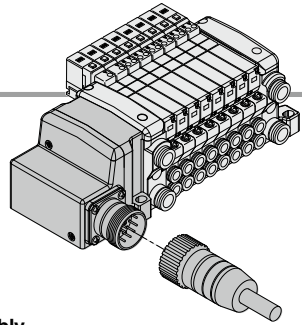


Electrical Wiring Specifications

Multiple connector

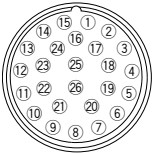

Double wiring (connected to SOLA and SOLB) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

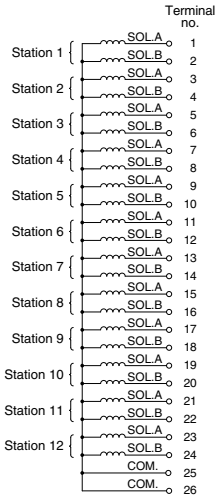



Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-MC26-030
015
030
050

(Type 26P circular connector cable assemblies can be ordered with manifolds. Refer to manifolds ordering.)

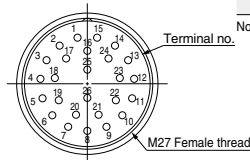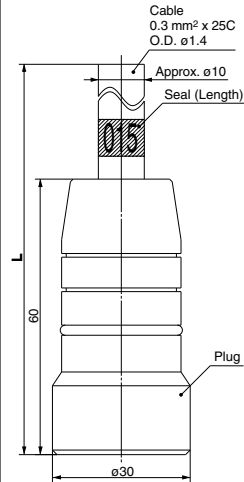

Lead wire colors for circular connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Terminal no. 26 is connected to 25 inside the connector.

Electric characteristics

Item	Property
Conductor resistance Ω/km , 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance $M\Omega/\text{km}$, 20°C	5 or more

Note) The minimum bending radius of the multiple connector cable is 20 mm.


Circular connector cable assemblies

Cable length [L]	Assembly part no.
	26P
1.5 m	AXT100-MC26-015
3 m	AXT100-MC26-030
5 m	AXT100-MC26-050


- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

M**VQC4000****Kit (Circular connector kit) IP67 compliant**

VV5QC41

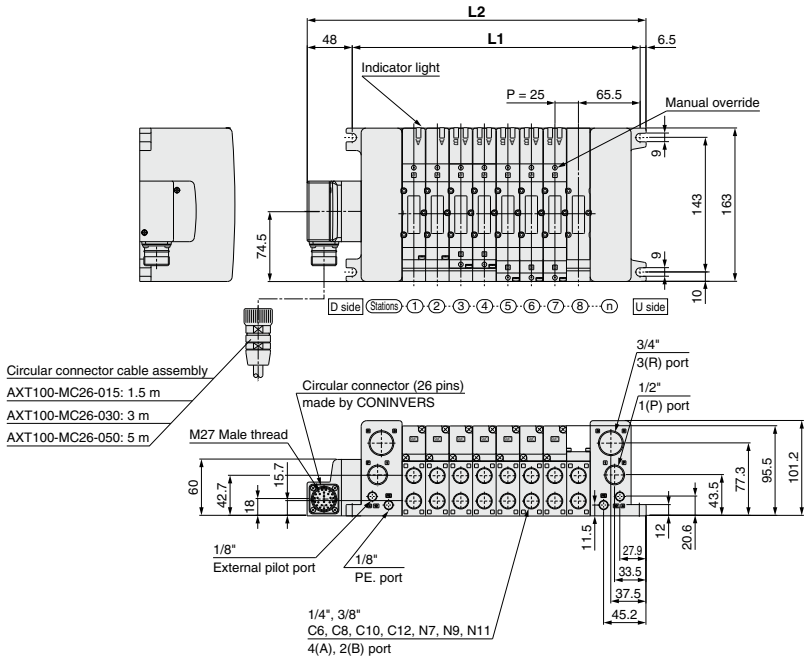

Bottom ported
<P/R port side>

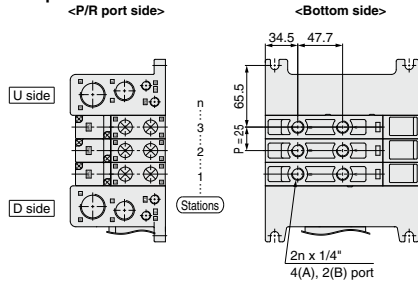

* Other dimensions are the same as the side ported type.

Dimensions


Formula: $L1 = 25n + 106$, $L2 = 25n + 150.5$ n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5

VQC4000 Series Construction

Plug-in Unit

Metal seal type

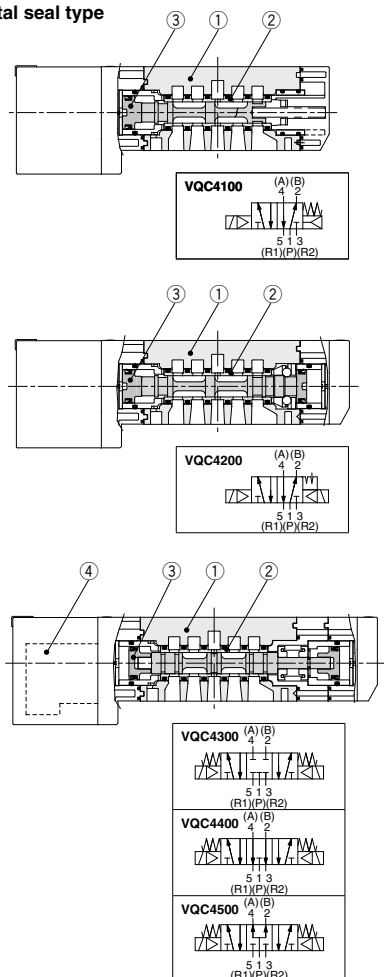


Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

Replacement Parts

Replacement parts						
4	Pilot valve assembly	Coil type <table border="1"> <tr> <td>NII</td> <td>Standard (0.95 W)</td> </tr> <tr> <td>Y</td> <td>Low wattage type (0.4 W)</td> </tr> </table> □: Coil rated voltage Example) 24 VDC: 5 A: With light (For A side) B: With light (For B side) E: Without light (A/B side common)	NII	Standard (0.95 W)	Y	Low wattage type (0.4 W)
NII	Standard (0.95 W)					
Y	Low wattage type (0.4 W)					

Rubber seal type

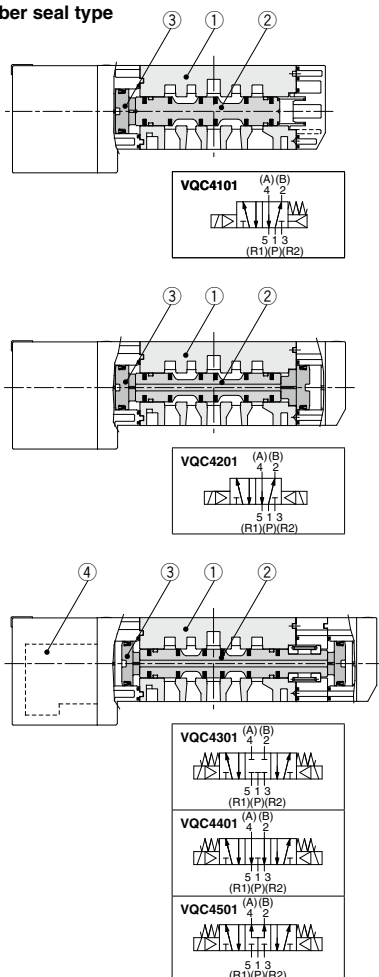

Component Parts















No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	

Replacement Parts

4	Pilot valve assembly	 <table border="1" data-bbox="704 1412 782 1420"> <tr> <th data-bbox="706 1412 720 1414">Coil type</th> <th data-bbox="720 1412 780 1414"></th> </tr> <tr> <td data-bbox="706 1414 720 1417">NII</td> <td data-bbox="720 1414 780 1417">Standard (0.95 W)</td> </tr> <tr> <td data-bbox="706 1417 720 1418">Y</td> <td data-bbox="720 1417 780 1418">Low wattage type (0.4 W)</td> </tr> </table>	Coil type		NII	Standard (0.95 W)	Y	Low wattage type (0.4 W)	□: Coil rated voltage Example) 24 VDC: 5 A: With light (For A side) B: With light (For B side) E: Without light (A/B side common)
Coil type									
NII	Standard (0.95 W)								
Y	Low wattage type (0.4 W)								

VQC4000 Series

     Exploded View of Manifold

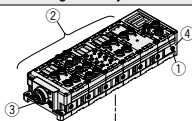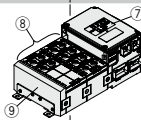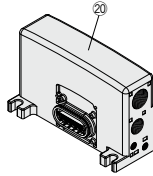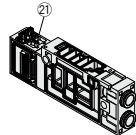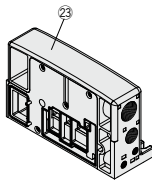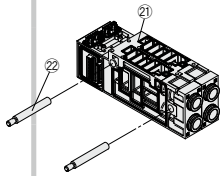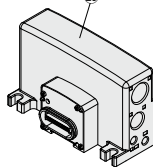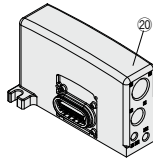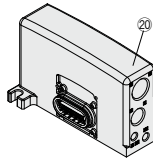	Housing assembly and SI Unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
S Kit (Serial transmission)	EX600 			
	EX500 			
	EX260 			
	EX245 	Corresponding kit S(EX600, EX250, EX126), F, P, T 		
	EX250 			
S kit (Compact wireless module)	EX126 			
	EXW1 			
F Kit (D-sub connector)				
P Kit (Flat ribbon cable)				
T Kit (Terminal block)		Corresponding kit S(EX500, EX260, EXW1), L, M 		
L Kit (Lead wire)				
M Kit (Circular connector)		Corresponding kit S(EX245) 		

Note) There are two kinds of manifold blocks available, 2 stations integrated type and 1 station type. 2 stations integrated type is used for even stations while 2 stations integrated type and 1 station type are combined for odd stations.

D side

U side

1.....2.....3.....4.....5.....6.....

5 stations (Odd number) 2 stations 2 stations 1 station

6 stations (Even number) 2 stations 2 stations 2 stations

VQC4000 Series

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
①	SI Unit	EX600-SDN1A	DeviceNet®, PNP (Negative common)
		EX600-SDN2A	DeviceNet®, NPN (Positive common)
		EX600-SMJ1	CC-Link, PNP (Negative common)
		EX600-SMJ2	CC-Link, NPN (Positive common)
		EX600-SPR1A	PROFIBUS DP, PNP (Negative common)
		EX600-SPR2A	PROFIBUS DP, NPN (Positive common)
		EX600-SEN7	EtherNet/IP™ (IO-Link unit) PNP (Negative common)
		EX600-SEN8	EtherNet/IP™ (IO-Link unit) NPN (Positive common)
		EX600-SEC3	EtherCAT (IO-Link unit) PNP (Negative common)
		EX600-SEC4	EtherCAT (IO-Link unit) NPN (Positive common)
		EX600-SPN3	PROFINET (IO-Link unit) PNP (Negative common)
		EX600-SPN4	PROFINET (IO-Link unit) NPN (Positive common)
		EX600-SPN31	PROFINET (OPC UA, IO-Link unit) PNP (Negative common)
		EX600-WSV1 ^{Note 1)}	Wireless remote module PNP (Negative common)
		EX600-WSV2 ^{Note 1)}	Wireless remote module NPN (Positive common)
②	Digital Input Unit	EX600-DXNB	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs
		EX600-DXNF	NPN input, Spring type terminal box, 32 pins, 16 inputs
		EX600-DXPF	PNP input, Spring type terminal box, 32 pins, 16 inputs
	Digital Output Unit	EX600-DYNB	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs
		EX600-DYNF	NPN output, Spring type terminal box, 32 pins, 16 outputs
		EX600-DYPF	PNP output, Spring type terminal box, 32 pins, 16 outputs
	Digital Input/Output Unit	EX600-DMNE	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMNF	NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
		EX600-DMPF	PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
	Analog Input Unit	EX600-AXA	M12 connector, 5 pins (2 pcs.), 2-channel input
	Analog Output Unit	EX600-AYA	M12 connector, 5 pins (2 pcs.), 2-channel output
	Analog Input/Output Unit	EX600-AMB	M12 connector, 5 pins (4 pcs.), 2-channel input/output
	IO-Link unit ^{Note 2)}	EX600-LAB1	Port class A, M12 connector, 5 pins (4 pcs.)
		EX600-LBB1	Port class B, M12 connector, 5 pins (4 pcs.)
③	End plate	EX600-ED2	M12 power supply connector, B-coded
		EX600-ED3	7/8 inch power supply connector
		EX600-ED4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
		EX600-ED5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2
④	Valve plate	EX600-ZMV1	Enclosed parts: Round head screws (M4 x 6) 2 pcs., Round head screws (M3 x 8) 4 pcs.
⑤	SI Unit	EX500-S103	Gateway decentralized system 2 (128 points), PNP (Negative common)

Note 1) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 2) The compatible SI unit models are as shown below.

- PROFINET compatible: EX600-SPN3/EX600-SPN4/EX600-SPN31

- EtherNet/IP™ compatible: EX600-SEN7/EX600-SEN8

- EtherCAT compatible: EX600-SEC3/EX600-SEC4

Note 3) Refer to the EX600 catalog for details on the safety communication fieldbus system.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
⑥	SI Unit	EX260-SDN1	DeviceNet®, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SDN2	DeviceNet®, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SDN3	DeviceNet®, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SDN4	DeviceNet®, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SRP1	PROFIBUS DP, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SRP2	PROFIBUS DP, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SRP3	PROFIBUS DP, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SRP4	PROFIBUS DP, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SRP5	PROFIBUS DP, D-sub connector, 32 outputs, PNP (Negative common)
		EX260-SRP6	PROFIBUS DP, D-sub connector, 32 outputs, NPN (Positive common)
		EX260-SRP7	PROFIBUS DP, D-sub connector, 16 outputs, PNP (Negative common)
		EX260-SRP8	PROFIBUS DP, D-sub connector, 16 outputs, NPN (Positive common)
		EX260-SMJ1	CC-Link, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SMJ2	CC-Link, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SMJ3	CC-Link, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SMJ4	CC-Link, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SEC1	EtherCAT, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SEC2	EtherCAT, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SEC3	EtherCAT, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SEC4	EtherCAT, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SPN1	PROFINET, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SPN2	PROFINET, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SPN3	PROFINET, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SPN4	PROFINET, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SEN1	EtherNet/IP™, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SEN2	EtherNet/IP™, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SEN3	EtherNet/IP™, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SEN4	EtherNet/IP™, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SPL1	Ethernet POWERLINK, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SPL3	Ethernet POWERLINK, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SIL1	IO-Link, M12 connector, 32 outputs, PNP (Negative common)
		EX260-FPS1	PROFISafe, M12 connector, 32 outputs, PNP (Negative common)
⑦	SI unit	EX245-SPN1A	Communication connector: Push Pull connector (SCRJ): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN2A	Communication connector: Push Pull connector (RJ45): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN3A	Communication connector: M12 connector (4-pin, Socket, D-coded): 2 pcs./Power supply connector: 7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.
⑧	Digital input module	EX245-DX1	Digital input (16 inputs)
	Digital output module	EX245-DY1	Digital output (8 outputs)
	IO-Link module Note 1)	EX245-LA1	Port class A
		EX245-LB1	Port class B
⑨	End plate	EX245-EA2-4	
⑩	SI Unit	EX250-SAS3	AS-Interface, 8 in/8 out, 2 power supply systems, PNP (Negative common)
		EX250-SAS5	AS-Interface, 4 in/4 out, 2 power supply systems, PNP (Negative common)
		EX250-SAS7	AS-Interface, 8 in/8 out, 1 power supply system, PNP (Negative common)
		EX250-SAS9	AS-Interface, 4 in/4 out, 1 power supply system, PNP (Negative common)
		EX250-SDN1	DeviceNet®, PNP (Negative common)
⑪	Input block	EX250-SEN1	EtherNet/IP™, PNP (Negative common)
		EX250-IE1	M12, 2 inputs
		EX250-IE2	M12, 4 inputs
		EX250-IE3	M8, 4 inputs
⑫	End plate assembly	EX250-EA1	Direct mounting
⑬	SI Unit	EX126D-SMJ1	CC-Link, NPN (Positive common)
⑭	Terminal block plate	VVQC1000-74A-2	For EX126 SI Unit mounting
⑮	D-sub connector housing assembly	VVQC1000-F25-1	F kit, 25 pins
⑯	Flat ribbon cable housing assembly	VVQC1000-P26-1	P kit, 26 pins
		VVQC1000-P20-1	P kit, 20 pins
⑰	Terminal block box housing assembly	VVQC1000-T0-1	T kit
		VVQC1000-L25-0-1	L kit with 0.6 m lead wire
⑱	Lead wire housing assembly	VVQC1000-L25-1-1	L kit with 1.5 m lead wire
		VVQC1000-L25-2-1	L kit with 3.0 m lead wire
		VVQC1000-M26-1	M kit, 26 pins
⑲	Circular connector housing assembly	VVQC1000-M26-1	M kit, 26 pins

Note 1) The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).

VQC4000 Series

Manifold Assembly Part No.

<Housing Assembly and SI Unit/Input Block>

No.	Description	Part no.	Note
②4	Compact wireless remote	EXW1-RDYPM5C	Without wireless adapter (Negative common)
		EXW1-RDYNM5C	Without wireless adapter (Positive common)
		EXW1-RDYPM5C-E	With wireless adapter (EXW1-A11E) (Negative common)
		EXW1-RDYNM5C-E	With wireless adapter (EXW1-A11E) (Positive common)
		EXW1-RDYPM5C-N	With wireless adapter (EXW1-A11N) (Negative common)
②5	Wireless adapter	EXW1-RDYNM5C-N	With wireless adapter (EXW1-A11N) (Positive common)
		EXW1-A11E	Min. 5/Max. 79 channels
		EXW1-A11N	Min. 15/Max. 79 channels


* The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

VQC4000 Series

Manifold Assembly Part No.


D-side end plate assembly

② D-side end plate assembly part no.

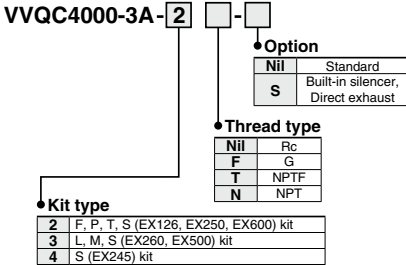


U-side end plate assembly

② U-side end plate assembly part no.

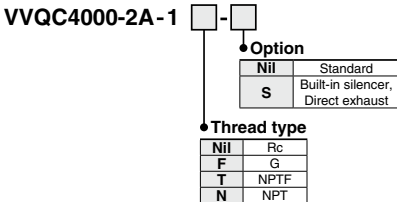

Manifold block assembly

② Manifold block assembly part no.

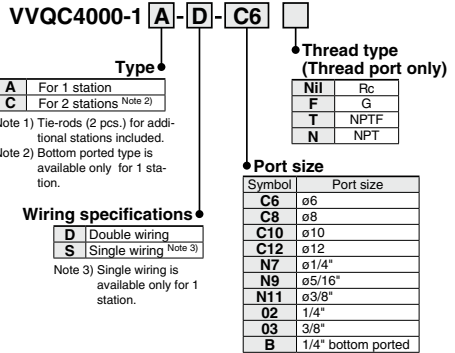








② Tie-rod assembly part no. (2 units)

VQC4000	VVQC4000-TR-□
---------	---------------

Note 1) Please order when reducing the number of manifold stations. When increasing the number of stations, additional orders are not required since they are included in the manifold block assembly.

Note 2) Number of stations, 02 to 16

      List of Valves, Options, and Mounting Bolts

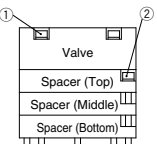Number of options	Valve and options	Bolt part no. Proper tightening torque: 0.8 to 1.2 N·m	Qty (pcs)	Note	Option mounting diagram
0	Single valve	AXT632-17-4 (M3 x 37)	3		
	Blanking plate (VVQ4000-10A- $\frac{1}{5}$)	AXT632-38-1 (M3 x 14) Note 2)	4	For manifold	
1	Valve + Individual SUP spacer (VVQ4000-P- $\frac{1}{5}$ - $\frac{02}{03}$)	① AXT632-17-10 (M3 x 62) ② AXT632-17-19 (M3 x 26)	3 2	For manifold	
	Valve + Individual EXH spacer (VVQ4000-R- $\frac{1}{5}$ - $\frac{02}{03}$)	① AXT632-17-10 (M3 x 62) ② AXT632-17-19 (M3 x 26)	3 2	For manifold	
	Valve + Restrictor spacer (VVQ4000-20A- $\frac{1}{5}$)	① AXT632-17-10 (M3 x 62) ② AXT632-17-19 (M3 x 26)	3 2	Not necessary when mounting the sub-plate.	
	Valve + Release valve spacer (VVQ4000-24A- $\frac{1}{5}$ D)	① AXT632-17-10 (M3 x 62) ② AXT632-17-19 (M3 x 26)	3 2	For manifold	
	Valve + SUP stop valve spacer (VVQ4000-37A- $\frac{1}{5}$)	① AXT632-17-10 (M3 x 62) ② AXT632-17-19 (M3 x 26)	3 2	Not necessary when mounting the sub-plate.	
	Valve + Double check spacer with residual pressure exhaust (VVQ4000-25A- $\frac{1}{5}$)	① AXT632-17-11 (M3 x 87) ② AXT632-41-1 (M3 x 54) Note 2)	3 2	Not necessary when mounting the sub-plate.	
	Valve + Interface regulator (ARBQ4000-00 $\frac{0}{5}$ - $\frac{1}{5}$)	① AXT632-17-11 (M3 x 87) ② AXT632-17-8 (M3 x 52)	3 2	Not necessary when mounting the sub-plate.	
	Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-41-4 (M3 x 42) Note 2) ② AXT632-17-19 (M3 x 26)	3 2	For manifold	
2	Valve + Individual SUP + Individual EXH (Top) (Bottom) (Top)	① AXT632-17-11 (M3 x 87) ② AXT632-17-8 (M3 x 52)	3 2	For manifold	
	Valve + Restrictor + Individual SUP or Individual EXH (Top) (Bottom) (Top) (Bottom)	① AXT632-17-11 (M3 x 87) ② AXT632-17-8 (M3 x 52)	3 2	For manifold The individual EXH cannot be mounted on the top.	
	Valve + SUP stop valve + Individual SUP, Individual EXH or Restrictor (Bottom)	① AXT632-17-11 (M3 x 87) ② AXT632-17-8 (M3 x 52)	3 2	For manifold	
	Valve + Double check spacer with residual pressure exhaust (Top) + Individual SUP or Individual EXH (Bottom)	① AXT632-17-14 (M3 x 112) ② AXT632-41-2 (M3 x 78) Note 2)	3 2	For manifold	
	Valve + Interface regulator + Individual SUP, Individual EXH or Restrictor (Top) (Bottom)	① AXT632-17-14 (M3 x 112) ② AXT632-41-2 (M3 x 78)	3 2	For manifold The individual EXH and restrictor can be mounted on the top.	
	Valve + Restrictor + Double check spacer with residual pressure exhaust (Top) (Bottom)	① AXT632-17-14 (M3 x 112) ② AXT632-41-2 (M3 x 78)	3 2	For manifold	
	Valve + Interface regulator + Double check spacer with residual pressure exhaust (Top) (Bottom)	① AXT632-17-16 (M3 x 137) ② AXT632-41-3 (M3 x 103)	3 2	For manifold	
	Blanking plate + SUP stop valve + Individual SUP (Top) (Bottom)	① AXT632-17-17 (M3 x 66) Note 2) ② AXT632-17-8 (M3 x 52)	3 2	For manifold	
3	Valve + SUP stop valve (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-17-14 (M3 x 112) ② AXT632-17-13 (M3 x 77)	3 2	For manifold	
	Valve + Double check spacer with residual pressure exhaust (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-17-16 (M3 x 137) ② AXT632-41-3 (M3 x 103) Note 2)	3 2	For manifold	
	Valve + Spacer (Top): Interface regulator Spacer (Middle): "Individual SUP or Individual EXH"/Restrictor Spacer (Bottom): "Restrictor"/Individual SUP or Individual EXH	① AXT632-17-16 (M3 x 137) ② AXT632-41-3 (M3 x 103)	3 2	For manifold The individual EXH and restrictor can be mounted on the top.	
	Valve + Double check spacer with residual pressure exhaust (Top) + SUP stop valve (Middle) + Individual SUP (EXH) (Bottom)	① AXT632-17-16 (M3 x 137) ② AXT632-41-3 (M3 x 103) Note 2)	3 2	For manifold	
	Valve + Interface regulator (Top) + Double check spacer with residual pressure exhaust (Middle) + Individual SUP (EXH) (Bottom)	① AXT632-17-20 (M3 x 162) ② AXT632-41-5 (M3 x 128)	3 2	For manifold available as special order	

Note 1) When the SUP stop valve and individual SUP are mounted, the stop valve is mounted on the top of the individual SUP.

Note 2) Proper tightening torque: 0.5 to 0.7 N·m



VQC4000 Series

Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Continuous Duty

⚠ Warning

When the product is continuously energized for a long period of time (10 minutes or longer), select the low wattage type (DC specification). The AC type cannot be continuously energized for 10 minutes or longer. If anything is unclear, please contact SMC.

 
Manual Override

⚠ Warning

Since connected equipment will operate when the manual override is activated, confirm that conditions are safe prior to activation.


■ VQC4000

Push type (Tool required)




Push down the manual override button with a small screwdriver, etc., until it stops. The manual override will return when released.

 
Locking type (Tool required)



 
Push down the manual override button with a small flat head screwdriver until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.



Locking type (Manual)

 

 Push down the manual override button with a small flat head screwdriver or with your finger until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.



⚠ Caution


Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

Valve Mounting

⚠ Caution

After confirming that the gasket is installed correctly, securely tighten the mounting screws according to the tightening torque shown below.

Proper tightening torque [N·m]
0.8 to 1.2

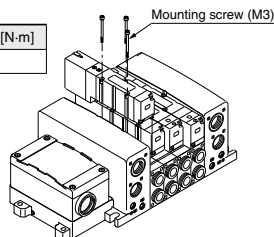


Replacement of One-touch Fittings

⚠ Caution

Cylinder port fittings are available in cassette type and can be replaced easily. Fittings are secured with a retaining clip that is inserted from the top side of the valve. After removing the valve, remove the clip with a flat head screwdriver to replace the fittings. To mount a fitting, insert the fitting assembly until it stops and reinsert the retaining clip to its designated position.

Applicable tube O.D.	Fitting assembly part no.
	VQC4000
ø6	VVQ4000-50B-C6
ø8	VVQ4000-50B-C8
ø10	VVQ4000-50B-C10
ø12	VVQ4000-50B-C12
ø1/4"	VVQ4000-50B-N7
ø5/16"	VVQ4000-50B-N9
ø3/8"	VVQ4000-50B-N11

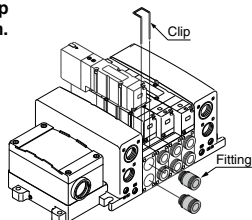


Lead Wire Connection

⚠ Caution

Plug-in sub-plate (With terminal block)

- If the junction cover ① of the sub-plate is removed, you can see the plug-in type terminal block ② mounted inside the sub-plate.
- The terminal block is marked as follows. Connect wiring to each of the power supply terminals.

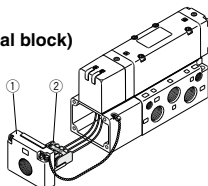

Model	Terminal block marking	A	COM	B	⌚
VQC 1/2 10 0		A side	COM	—	—
VQC 1/2 20 0		A side	COM	B side	—
VQC 3/4 0 0 1		A side	COM	B side	—

Note 1) There is no polarity. It can also be used as -COM.

Note 2) The sub-plate is double wired even for the VQC 1/2 10 0.

- Applicable terminal: 1.25-3s, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5



VQC4000 Series

Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>


Installation and Removal of Light Cover

⚠ Caution

Installation/Removal of light cover

• Removal

Open the cover by inserting a small flat head screwdriver into the slot on the side of the pilot assembly (see drawing below), lift the cover out about 1 mm and then pull off. If it is pulled off at an angle, the pilot valve may be damaged or the protective O-ring may be scratched.

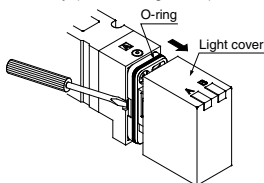

• Installation

Place the cover straight over the pilot assembly so that the pilot valve is not touched, and push it until the cover hook locks without twisting the protective O-ring. (When pushed in, the hook opens and locks automatically.)

Replacement of Pilot Valve


⚠ Caution

• Removal

- 1) Remove the mounting screw that holds the pilot valve using a small screwdriver.

• Installation

- 1) After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

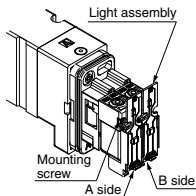


* Refer to page 1186 for pilot valve assembly part number.

Proper tightening torque [N·m]


0.1 to 0.13

Note) The light circuit boards: A side is red and the B side is green. It must be mounted on the pilot valve in accordance with the mounting indicators.

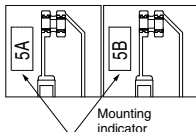


Internal Wiring Specifications

 ⚠ Caution



DC: Single

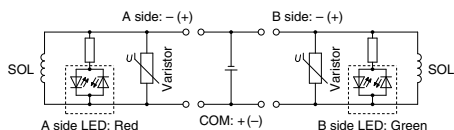

DC: Double

Note) Coil surge voltage generated when OFF is about -60 V. Please contact SMC separately for further suppression of the coil surge voltage.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to the [Web Catalog](#).

Continuous Duty

⚠ Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater. In such cases, if it is possible to select a valve with a power-saving circuit, be sure to do so.

UL Approved Product

⚠ Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a  mark on the body.



VQC4000 Series

Specific Product Precautions 3

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Serial Wiring EX500/EX260/EX250/EX126 Precautions

Warning

1. These products are intended for use in general factory automation equipment.
Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.
2. Do not use in explosive environments, in the presence of inflammable gases, or in corrosive environments. This can cause injury or fire.
3. Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by knowledgeable and qualified personnel only. As handling involves the risk of a danger of electrocution, injury or fire.
4. Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.
5. Do not modify these products. Modifications done to these products carry the risk of injury and damage.

Caution

1. Read the Operation Manual carefully, strictly observe the precautions and operate within the range of the specifications.
2. Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction.
3. In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause a malfunction, damage to the Unit, electrocution or fire.
4. Do not touch connector terminals or internal circuit elements when current is being supplied. There is a danger of malfunction, damage to the Unit or electrocution if connector terminals or internal circuit elements are touched when current is being supplied.
Be sure that the power supply is OFF when adding or removing manifold valves or input blocks or when connecting or disconnecting connectors.
5. Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.
6. Keep wire scraps and other extraneous materials from getting inside these products. This can cause fire, failure or malfunction.
7. Give consideration to the operating environment depending on the type of enclosure being used.
To achieve IP67 protection, provide appropriate wiring between all Units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of Input Units, input blocks, SI Units and manifold valves. Provide a cover or other protection for applications in which there is constant exposure to water.
8. Use the proper tightening torques.
There is a possibility of damaging threads if tightening exceeds the tightening torque range.
9. Provide adequate protection when operating in locations such as the following:
 - Where noise is generated by static electricity
 - Where there is a strong electric field
 - Where there is a danger of exposure to radiation
 - When in close proximity to power supply lines

Caution

10. When these products are installed in equipment, provide adequate protection against noise by using noise filters.
11. Since these products are components whose end usage is obtained after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.
12. Do not remove the name plate.
13. Perform periodic inspections and confirm normal operation, otherwise it may be impossible to guarantee safety due to unexpected malfunction or erroneous operation.
14. Take great care since the SI Unit side surface of the EX260-SPN□ may become hot, causing burn hazard.
15. Do not use in places where there are cyclic temperature changes.
In case that the cyclic temperature is beyond normal temperature changes, the inside product unit is likely to be adversely effected.
16. Do not use in direct sunlight.
Do not use in direct sunlight. It may cause malfunction or damage.
17. Do not use in places where there is radiated heat around it.
Such a place is likely to cause malfunction.

Power Supply Safety Instructions

Caution

1. Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for Input and Control Units). When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.
2. Select the proper type of enclosure according to the environment of operation.
IP65/67 protection class is achieved when the following conditions are met.
 - 1) The Units are connected properly with wiring cable for power supply, communication connector, and cable with M12 connector.
 - 2) Suitable mounting of each Unit and manifold valve.
 - 3) Be sure to mount a seal cap on any unused connectors.If using in an environment that is exposed to water splashes, please take measures such as using a cover.
For IP40 protection class, do not use in atmospheres with corrosive gas, chemicals, sea water, water, steam, or where there is direct contact with any of these.
When EX260-SPR5/6/7/8 are connected, the enclosure of the manifold should be IP40.

Cable Safety Instructions

Caution

1. Avoid miswiring, as this can cause a malfunction, damage and fire in the Unit.
2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high voltage lines. Otherwise, this can cause a malfunction.
3. Check wiring insulation, as defective insulation can cause damage to the Unit when excessive voltage or current is applied.
4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.



VQC4000 Series

Specific Product Precautions 4

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

EX600 Precautions

 
Design / Selection

Warning

- 1. Do not use beyond the specification range.**
Using beyond the specification range can cause a fire, malfunction, or damage to the system.
Check the specifications before operation.
- 2. When using for an interlock circuit:**
 - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
 - Perform an inspection to confirm that it is working properly.Otherwise, this may cause possible injuries due to malfunction.

Caution

- 1. When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.**
- 2. Use within the specified voltage range.**
Using beyond the specified voltage range is likely to cause the product to be damaged or to malfunction.
- 3. The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.**



- 4. Do not install in places where it can be used as a foothold.**

Applying any excessive load such as stepping on the product by mistake or placing a foot on it, will cause it to break.

- 5. Keep the surrounding space free for maintenance.**
When designing a system, take into consideration the amount of free space needed for performing maintenance.
- 6. Do not remove the name plate.**
Improper maintenance or incorrect use of Operation Manual can cause equipment failure or malfunction. Also, there is a risk of losing conformity with safety standards.
- 7. Beware of inrush current when the power supply is turned on.**

Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the Unit to malfunction.

Mounting

Caution

- 1. When handling and assembling Units:**
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the Unit when disassembling.
The connecting portions of the Unit are firmly joined with seals.
 - When joining Units, take care not to get fingers caught between Units.
Injury can result.
- 2. Do not drop, bump, or apply excessive impact.**
Otherwise, this can cause damage, equipment failure or malfunction.
- 3. Observe the tightening torque range.**
Tightening outside of the allowable torque range will likely damage the screw.
IP67 cannot be guaranteed if the screws are not tightened to the specified torque.
- 4. When lifting a large size Manifold Solenoid Valve Unit, take care to avoid causing stress to the valve connection joint.**
The connection joint with the Unit may be damaged.
Because the product may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.
- 5. When placing a manifold, mount it on a flat surface.**
Torsion in the whole manifold can lead to trouble such as air leakage or contact failure.

Wiring

Caution

- 1. Provide the grounding to maintain the safety of the reduced wiring system and to improve the noise immunity.**
Provide a specific grounding as close to the Unit as possible to minimize the distance to grounding.
- 2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.**
Wiring applying repeated bending and tensile stress to the cable can break the circuit.
- 3. Avoid miswiring.**
If miswired, there is a danger of malfunction or damage to the reduced wiring system.



VQC4000 Series

Specific Product Precautions 5

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smcworld.com>

EX600 Precautions

Wiring

Caution

- Do not wire while energizing the product.**
There is a danger of malfunction or damage to the reduced wiring system or input/output device.
- Avoid wiring the power line and high pressure line in parallel.**
Noise or surge produced by signal line resulting from the power line or high pressure line could cause a malfunction.
Wiring of the reduced wiring system or input/output device and the power line or high pressure line should be separated from each other.
- Check for the wiring insulation.**
Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.
- When the reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters etc.**
Noise in signal lines may cause a malfunction.
- When connecting wires of input/output device or Handheld Terminal, prevent water, solvent or oil from entering inside from the connector section.**
Otherwise, this can cause damage, equipment failure or malfunction.
- Avoid wiring patterns in which excessive stress is applied to the connector.**
This may cause equipment failure or malfunction due to contact failure.

Operating Environment

Warning

- Do not use in an atmosphere containing an inflammable gas or explosive gas.**
Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

Caution

- Select the proper type of enclosure according to the environment of operation.**
IP65/67 is achieved when the following conditions are met.
 - Provide appropriate wiring between Units using electrical wiring cables, communication connectors and cables with M12 connectors.
 - Suitable mounting of each Unit and manifold valve.
 - Be sure to mount a seal cap on any unused connectors.If using in an environment that is exposed to water splashes, please take measures such as using a cover.
When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to the EX600-D□□E or EX600-D□□F, manifold enclosure is IP40.
Also, the Handheld Terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Operating Environment

Caution

- Provide adequate protection when operating in locations such as the following.**
Failure to do so may cause a malfunction or equipment failure. The effect of countermeasures should be checked in individual equipment and machine.
 - Where noise is generated by static electricity etc.
 - Where there is a strong electric field
 - Where there is a danger of exposure to radiation
 - When in close proximity to power supply lines
- Do not use in an environment where oil and chemicals are used.**
Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the Unit even in a short period of time.
- Do not use in an environment where the product could be exposed to corrosive gas or liquid.**
This may damage the Unit and cause it to malfunction.
- Do not use in locations with sources of surge generation.**
Installation of the Unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the Unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.
- Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.**
When a surge generating load is directly driven, the Unit may be damaged.
- The product is CE/UKCA marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.**
- Keep dust, wire scraps and other foreign matter from entering inside the product.**
This may cause equipment failure or malfunction.
- Mount the Unit in such locations, where no vibration or shock is affected.**
This may cause equipment failure or malfunction.
- Do not use in places where there are cyclic temperature changes.**
In case that the cyclic temperature is beyond normal temperature changes, the internal Unit is likely to be adversely affected.
- Do not use in direct sunlight.**
This may cause equipment failure or malfunction.
- Observe the ambient temperature range.**
This may cause a malfunction.
- Do not use in places where there is radiated heat around it.**
Such places are likely to cause a malfunction.



VQC4000 Series

Specific Product Precautions 6

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

EX600 Precautions

Adjustment / Operation

⚠ Warning

1. **Do not perform operation or setting with wet hands.**
There is a risk of electrical shock.

<Handheld Terminal>

2. **Do not apply pressure to the LCD.**
There is a possibility of the crack of LCD and injuring.
3. **The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.**
This may cause, injuries or equipment damage.
4. **Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use.**
This may cause injuries or equipment damage.


⚠ Caution

1. **Use a watchmakers' screwdriver with thin blade for the setting of each switch of the SI Unit.**
When setting the switch, do not touch other unrelated parts.
This may cause parts damage or malfunction due to a short circuit.
2. **Provide adequate setting for the operating conditions.**
Failure to do so could result in malfunction.
Refer to the Operation Manual for setting of the switches.
3. **For details on programming and address setting, refer to the manual from the PLC manufacturer.**
The content of programming related to protocol is designed by the manufacturer of the PLC used.

<Handheld Terminal>

4. **Do not press the setting buttons with a sharp pointed object.**
This may cause damage or equipment failure.
5. **Do not apply excessive load and impact to the setting buttons.**
This may cause damage, equipment failure or malfunction.

When the order does not include the SI Unit, a valve plate which connects the manifold and SI Unit, is not mounted. Use attached valve holding screws and mount the valve plate.
(Tightening torque: 0.6 to 0.7 N·m)

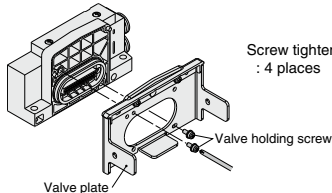

Maintenance

⚠ Warning

1. **Do not disassemble, modify (including circuit board replacement) or repair this product.**
Such actions are likely to cause injuries or equipment failure.
2. **When an inspection is performed,**
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.Unexpected malfunction of system components and injury can result.

⚠ Caution

1. **When handling and replacing Units:**
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the Unit when disassembling.
The connecting portions of the Unit are firmly joined with seals.
 - When joining Units, take care not to get fingers caught between Units.
Injury can result.
2. **Perform periodic inspection.**
Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.
3. **After maintenance, make sure to perform an appropriate functionality inspection.**
In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.
4. **Do not use benzine and thinner for cleaning Units.**
Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.
If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

Other

⚠ Caution

1. **Refer to the catalog of each series for Common Precautions and Specific Product Precautions on manifold solenoid valves.**

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



Base Mounted

Plug-in: Single Unit

VQC5000 Series C € UK

Model

Series	Configuration	Model		Port size	Flow rate characteristics						Response time [ms]		Weight [kg]	
					1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			Standard: 0.95 W	Low wattage type: 0.4 W		
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv				
VQC5000	2-position	Single	Metal seal	VQC5100	1/2	12	0.14	2.9	14	0.18	3.4	35	38	0.59
			Rubber seal	VQC5101		16	0.33	4.4	17	0.31	4.7	40	43	0.58
		Double	Metal seal	VQC5200		12	0.14	2.9	14	0.18	3.4	20	23	0.62
			Rubber seal	VQC5201		16	0.33	4.4	17	0.31	4.7	25	28	0.60
	3-position	Closed center	Metal seal	VQC5300		11	0.24	2.6	11	0.23	2.8	50	53	0.65
			Rubber seal	VQC5301		12	0.33	3.4	13	0.37	3.7	60	63	0.58
		Exhaust center	Metal seal	VQC5400		12	0.13	2.9	14	0.18	3.4	50	53	0.65
			Rubber seal	VQC5401		14	0.39	3.9	16	0.35	4.5	60	63	0.58
		Pressure center	Metal seal	VQC5500		12	0.23	2.9	13	0.24	3.3	50	53	0.65
			Rubber seal	VQC5501		13	0.32	3.4	14	0.40	3.9	60	63	0.58
		Double check	Metal seal	VQC5600		8.0	—	—	8.5	—	—	62	65	1.17
			Rubber seal	VQC5601		8.3	—	—	9.0	—	—	75	78	1.10

Note 1) Value for valve on sub-plate

Note 2) Cylinder port 1/2: Value for valve on sub-plate


Note 3) Based on JIS B 8419: 2010. (Supply pressure: 0.5 MPa [5.1 kgf/cm²], with indicator light and surge voltage suppressor, clean air. This will change depending on pressure and air quality.) The value when ON for the double type.

Note 4) Table: Without sub-plate, With sub-plate: Add 0.65 kg.



Plug-in unit

Symbol

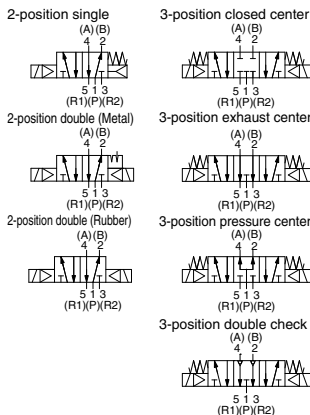

Standard Specifications

	Valve construction		Metal seal	Rubber seal
	Fluid		Air	
Valve specifications	Max. operating pressure		1.0 MPa	
	Min. operating pressure	Single	0.10 MPa	0.20 MPa
		Double	0.10 MPa	0.15 MPa
		3-position	0.15 MPa	0.20 MPa
Electrical specifications	Ambient and fluid temperature		-5 to 50°C Note 1)	
	Lubrication		Not required	
	Manual override		Push type/Locking type (Tool required) Option/Locking type (Manual)	
	Impact/Vibration resistance		150/30 m/s² Note 2)	
	Enclosure		Dust-tight (IP67 compatible) Note 3)	
	Coil rated voltage		12, 24 VDC	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Class B or equivalent	
	Power consumption	24 VDC	0.95, 0.4	
		12 VDC	0.95, 0.4	

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)


Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Only applicable to S, T, L and M kits

How to Order Valves

Plug-in

VQC5 1 0 0 - 5 1 -

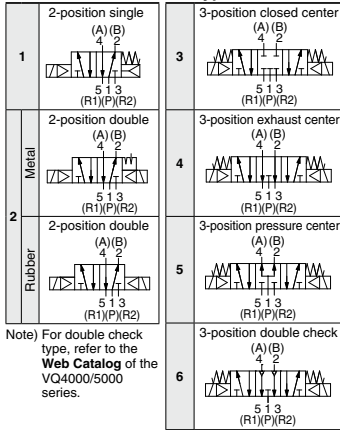

• Thread type

Nil	Rc
N	NPT
T	NPTF
F	G


• Port size

Nil	Without sub-plate (For manifold)
04	1/2

• Porting specifications

Nil	Side ported
B	Bottom ported

• Manual override

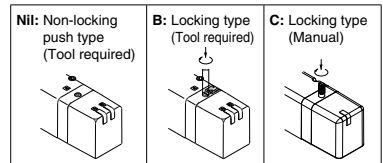

• Light/Surge voltage suppressor


Nil	Yes
E	Without light, with surge voltage suppressor

• Coil voltage

5	24 VDC
6	12 VDC

• Body

 0: Plug-in sub-plate



• Seal

0	Metal seal
1	Rubber seal

• Function

Nil (Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R (Note 2)	External pilot

Note 1) When the power is energized continuously, refer to "Specific Product Precautions 1" on page 1232.

Note 2) For details about external pilot type, refer to the **Web Catalog** of the VQ4000/5000 series.

Note 3) When multiple symbols are specified, indicate them alphabetically.

How to Order Sub-plates

VQ5000 - PW - 04 -

• Porting specifications

Nil	Side ported
B	Bottom ported

• Port size

04	1/2
----	-----

Note) For bottom ported, port size is 1/2 only.

• CE/UKCA-compliant

Nil	—
Q	CE/UKCA-compliant

• Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

• Replacement of pilot valve assembly (Voltage)


· Refer to page 1230 for pilot valve assembly part numbers.
· Refer to page 1233 for replacement method.

VQC5000 Series

Plug-in Type

Conduit terminal

2-position single: VQC510⁰

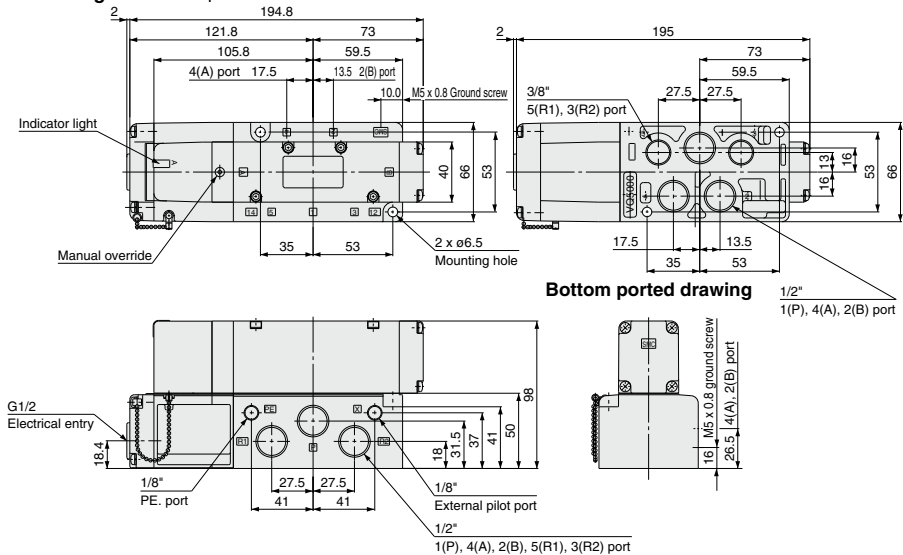


2-position double: VQC520⁰


3-position closed center: VQC530⁰

3-position exhaust center: VQC540⁰

3-position pressure center: VQC550⁰

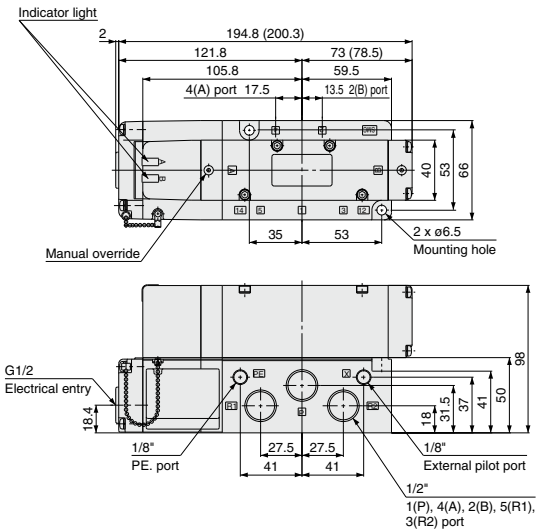

3-position double check: VQC560⁰

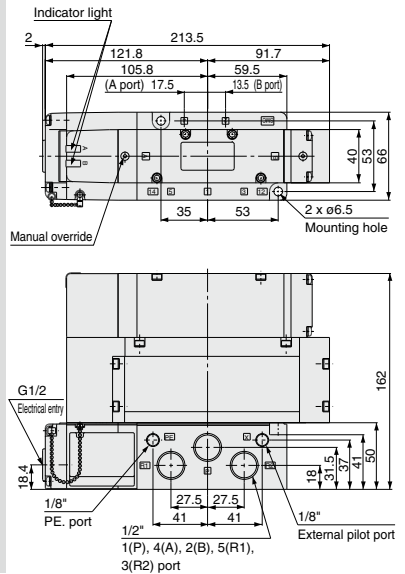

Numbers inside () are for metal seal 3-position type.

Base Mounted

Plug-in Unit



VQC5000 Series

S kit


The selectable items vary for each series. Select from the applicable item numbers in the table below.

Series	Item number (Refer to pages 1202 and 1203)
EX600	①, ②, ③, ④, ⑦, ⑧, ⑨, ⑩
EX245	①, ②, ③, ④, ⑤, ⑥, ⑩
EX250	①, ②, ③, ④, ⑧, ⑩, ⑪, ⑫, ⑬
EX500,260,126	①, ②, ③, ④, ⑧, ⑩

Refer to pages 1206 (EX260) and 1207-01 (EX600) for details on manifolds that support safety communication.

How to Order Manifold


The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

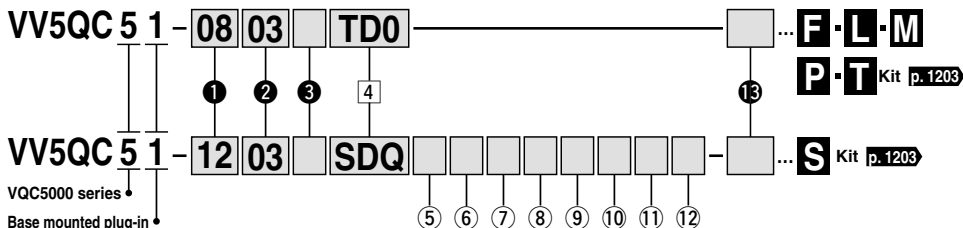

① Valve stations

01	1 station
⋮	⋮

 The maximum number of stations differs depending on the electrical entry. (Refer to ④.)
 Note) In the case of compatibility with the S kit/As-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.
 8 in/8 out: Maximum 8 solenoids
 4 in/4 out: Maximum 4 solenoids



* Stations are counted from station 1 on the D-side.

② Cylinder port size

03	3/8
04	1/2
B	Bottom ported 1/2
CM	Mixed

③ Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

⑪ Input block type

(Enter only for S kit compliant with EX250.)

Nil	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs

⑫ Input block COM

(Enter only for S kit compliant with EX250.)

Nil	PNP sensor input or without input block
N	NPN sensor input

⑬ Option

Nil	None
K	Special wiring specifications (except for double wiring)
N	With name plate (available for T kit only)

⑤ With or without I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module
Y	With I/O module

⑥ Number of I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module (Without SI Unit)
1	1 station
⋮	⋮
8	8 stations

⑦ End plate type

(Enter only for EX600-compliant S kit.)

Nil	Without end plate
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI Unit, the symbol is nil.

* The pin layout for "4" and "5" pin connector is different.

⑨ I/O Unit stations

(Enter only for EX600-compliant S kit.)

Nil	None
1	1 station
⋮	⋮
9	9 stations

Note 1) Without SI Unit, the symbol is nil.

Note 2) SI Unit is not included in I/O Unit stations.

Note 3) When I/O Unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

Note 4) Refer to page 1195 for details about the enclosure.

Note 5) Indicate the I/O unit part numbers, following the ordering example on page 1204.

⑩ Number of input blocks

(Enter only for S kit compliant with EX250.)

Nil	Without SI Unit (SD0)
0	Without input block
1	With 1 input block
⋮	⋮
4	With 4 input blocks
⋮	⋮
8	With 8 input blocks

⑧ SI Unit output polarity

SI Unit output polarity	EX250 integrated-type (for I/O) serial transmission system		
	DeviceNet®	AS-Interface	EtherNet/IP™
Nil + COM	—	—	—
N - COM	○	○	○

SI Unit output polarity	EX260 integrated-type (for output) serial transmission system							
	PROFINET	DeviceNet®	PROFIBUS DP	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	Ether POWERLINK
Nil + COM	—	—	—	—	—	—	—	—
N - COM	○	○	○	○	○	○	○	○

SI Unit output polarity	EX500 Gateway Decentralized System 2 (128 points)	
	—	—
Nil + COM	—	—
N - COM	○	○

SI Unit output polarity	EX600 integrated-type (for I/O) serial transmission system (Fieldbus system)						
	DeviceNet®	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	Wireless remote
Nil + COM	○	○	○	○	○	○*2	○
N - COM	○	○	○	○	○	○	○

*1 Leave the box blank for without SI Unit (SD0□, SD60).

*2 Positive common is not available for PROFINET (OPC UA).


Refer to the **Web Catalog** and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, <https://www.smcworld.com>

4 Kit type/Electrical entry/Cable length

* The number in parentheses indicates the maximum number of stations and the maximum number of solenoids that can be used in the case of mixed single and double wiring. The total number of solenoids determines the maximum number of stations. When ordering mixed wiring, please add the option symbol "K".

S Kit

(Serial transmission kit (Fieldbus system)
: EX600 integrated-type (for I/O))

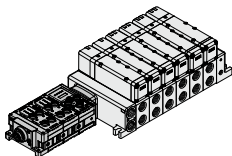


SI Unit: EX600 **IP67 compliant**

SD60	Serial kit without SI Unit	1 to 12 stations (24 points)
SD6Q	DeviceNet®	
SD6N	PROFIBUS DP	
SD6V	CC-Link	
SD6FA	PROFINET (IO-Link unit)	
SD6FB	PROFINET (OPC UA, IO-Link unit) ^{Note 6)}	
SD6EB	EtherNet/IP™ (IO-Link unit)	
SD6DA	EtherCAT (IO-Link unit)	
SD6WS	Wireless remote ^{Note 5)}	

S Kit

(Serial transmission kit: EX500 gateway-type)

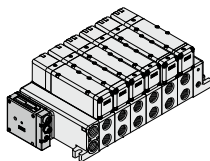


SI Unit: EX500

Note) A separate Gateway Unit and communication cable are required. **IP67 compliant**

SD0	Serial kit without SI Unit	—	—
SDA3	EX500 Gateway Decentralized System 2 (128 points)	32 outputs ^{Note 1)}	1 to 12 stations

S Kit

(Serial transmission kit:
EX260 integrated-type
(for output))

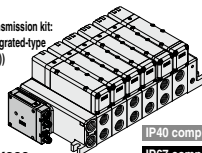

SI Unit: EX260


IP40 compliant

IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations
Serial kit without SI Unit				
SD0	DeviceNet®	32	M12	1 to 12 stations
SQA	PROFIBUS DP	16	M12	1 to 8 stations (12 stations, 16 points)
SQB		16		1 to 12 stations
SNA		32		1 to 8 stations (12 stations, 16 points)
SNC		16		1 to 12 stations
SND		32		1 to 8 stations (12 stations, 16 points)
SNA	CC-Link	16	M12	1 to 12 stations
SND		32		1 to 8 stations (12 stations, 16 points)
SVA	EtherCAT	16	M12	1 to 12 stations
SVB		32		1 to 8 stations (12 stations, 16 points)
SDA	PROFINET	16	M12	1 to 12 stations
SDB		32		1 to 8 stations (12 stations, 16 points)
SFA	EtherNet/IP™	16	M12	1 to 12 stations
SFB		32		1 to 8 stations (12 stations, 16 points)
SEA	Ethernet	16	M12	1 to 12 stations
SEB		32		1 to 8 stations (12 stations, 16 points)
SGA	POWERLINK	16	M12	1 to 12 stations
SGB		32		1 to 8 stations (12 stations, 16 points)
SKA	IO-Link	32	M12	1 to 12 stations
SCA	CC-Link (E-TSN)	32	RJ45 ^{Note 3)}	1 to 12 stations (24)

S Kit

(Serial transmission kit:
EX126 integrated-type
(for output))

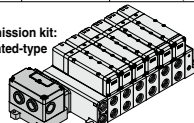


SI Unit: EX126

SDVB	Serial kit for CC-Link	1 to 8 stations (12 stations, 16 points)
------	------------------------	--

S Kit

(Serial transmission kit: EX250 integrated-type (for I/O))

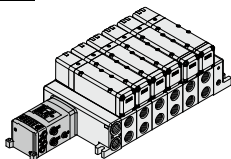


SI Unit: EX250

IP67 compliant

SD0	Serial kit without SI Unit	1 to 12 stations	
SDQ	DeviceNet®		
SDTA	AS-Interface, 8 in/out, 2 power supply systems	1 to 4 stations (8 stations, 8 points)	
SDTB	AS-Interface, 4 in/out, 2 power supply systems	1 to 2 stations (4 stations, 4 points)	
SDTC ^{Note 2)}	AS-Interface, 8 in/out, 1 power supply system	1 to 4 stations (8 stations, 8 points)	
SDTD ^{Note 2)}	AS-Interface, 4 in/out, 1 power supply system	1 to 2 stations (4 stations, 4 points)	
SDZEN	EtherNet/IP™	1 to 12 stations	

S Kit

(Serial transmission: EX245 integrated-type (I/O))

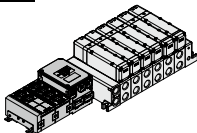


SI unit: EX245

IP65 compliant

Symbol	Protocol	Communication connector	Communication connector specifications	Stations
Without SI unit				
SDAAN	PROFINET	Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.	1 to 12 stations
SDABN		Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.	(12 stations, 24 points)
SDACN		M12: 2 pcs.	7/8 inch: 2 pcs.	1 to 12 stations
SDACN				(24 points)

P Kit

(Flat ribbon cable kit)

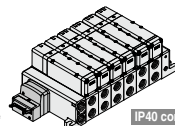


IP40 compliant

Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

PD0	Flat ribbon cable kit (26P) without cable	1 to 12 stations
PD1	Flat ribbon cable kit (26P) with 1.5 m cable	
PD2	Flat ribbon cable kit (26P) with 3.0 m cable	
PD3	Flat ribbon cable kit (26P) with 5.0 m cable	
PD4	Flat ribbon cable kit (20P) without cable ^{Note 4)}	1 to 9 stations (12 stations, 16 points)

F Kit

(D-sub connector kit)

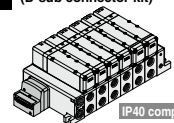

IP40 compliant

FD0	D-sub connector kit (25P) without cable	1 to 12 stations
FD1	D-sub connector kit (25P) with 1.5 m cable	
FD2	D-sub connector kit (25P) with 3.0 m cable	
FD3	D-sub connector kit (25P) with 5.0 m cable	

M Kit

(Circular connector kit)




IP67 compliant

MD0	Circular connector kit (26P) without cable	1 to 12 stations
MD1	Circular connector kit (26P) with 1.5 m cable	
MD2	Circular connector kit (26P) with 3.0 m cable	
MD3	Circular connector kit (26P) with 5.0 m cable	

T Kit

(Terminal block box kit)

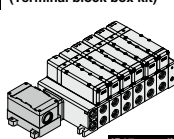


IP67 compliant

TD0	Terminal block box kit	1 to 10 stations (12 stations, 20 points)
-----	------------------------	---

L Kit

(Lead wire kit)

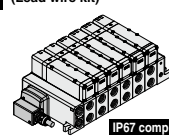

IP67 compliant

LD0	Lead wire kit, 0.6 m lead wire	1 to 12 stations
LD1	Lead wire kit, 1.5 m lead wire	
LD2	Lead wire kit, 3.0 m lead wire	

* The maximum number of stations and the maximum number of solenoids indicated in parentheses are applied to special wiring specifications only (Option "K").

Note 1) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

Note 2) When selecting SI Units with SDTC or SDTD specifications, there are limits to the supply current from the SI Unit to the input block or valve. For details, refer to the [Web Catalog](#).

Note 3) IP40 only when selecting a D-sub or RJ45 S kit

(All other SI Units are IP67 compliant.)

Note 4) For the SI Unit part no., refer to page 1205.

Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 6) Only negative common (PNP) is available.

VQC5000 Series

How to Order Valves

VQC5 1 0 0 - 5 1

VQC5000 series • (A) (B) (C) (D) (E) (F)

(A) Type of actuation

1	2-position single (A) (B) 5 1 3 (R1) (P) (R2)	4	3-position exhaust center (A) (B) 5 1 3 (R1) (P) (R2)
2	2-position double (Metal) (A) (B) 5 1 3 (R1) (P) (R2)	5	3-position pressure center (A) (B) 5 1 3 (R1) (P) (R2)
	2-position double (Rubber) (A) (B) 5 1 3 (R1) (P) (R2)	6	3-position double check (A) (B) 5 1 3 (R1) (P) (R2)
3	3-position closed center (A) (B) 5 1 3 (R1) (P) (R2)		

(B) Seal type

0	Metal seal
1	Rubber seal

(C) Function

Nil	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R	External pilot

Note 1) When the power is energized continuously, refer to 'Specific Product Precautions 1' on page 1232.

Note 2) For details about external pilot type, refer to the **Web Catalog** of the VQ4000/5000 series.

* When multiple symbols are specified, indicate them alphabetically.

(D) Coil voltage

5	24 VDC
6	12 VDC

Note) S kit is only available for 24 VDC.

(E) Light/Surge voltage suppressor


Nil	Yes
E	Without light, with surge voltage suppressor

(F) Manual override

Nil	Non-locking push type (Tool required)
B	Push-turn locking type (Tool required)
C	Turn locking type (Manual)

How to Order Manifold Assembly

Example (VV5QC51-SD6□)

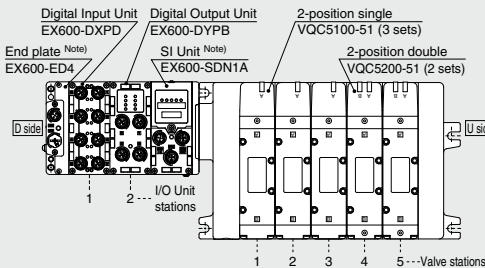

VV5QC51-0503SD6Q4N2...1 set (S kit 5-station manifold base part number)
 *VQC5100-51...3 sets (2-position single part number)
 *VQC5200-51...2 sets (2-position double part number)
 *EX600-DXPD...1 set I/O Unit part number (Station 1)
 *EX600-DYPB...1 set I/O Unit part number (Station 2)

→ The asterisk denotes the symbol for assembly.
 * Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.


Note) Do not enter the SI Unit part number and the end plate part number together.

For the I/O unit part number mounted, [click here for details](#).

• Digital Input Unit • Digital Output Unit • Digital Input/Output Unit
 • Analog Input Unit • Analog Output Unit • Analog Input/Output Unit

How to Order Manifold Assembly: EX245*1

Example (VV5QC51-SDAAN□)

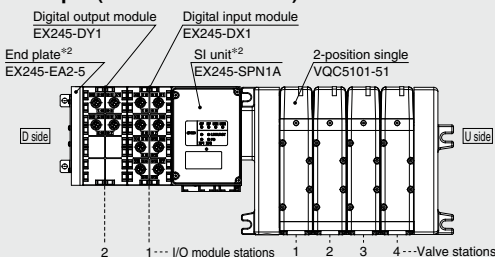

VV5QC51-0404SDAANY2...1 set (S kit 4-station manifold base part no.)
 *VQC5101-51...4 sets (2-position single part no.)
 *EX245-DX1...1 set I/O unit part number (Station 1)
 *EX245-DY1...1 set I/O unit part number (Station 2)

→ The asterisk denotes the symbol for assembly.
 * Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

*2 Do not enter the SI Unit part number and the end plate part number together.

*1 The EX245/250 I/O module (block) station arrangement is numbered starting from the SI unit side.

Manifold Specifications

Series	Base model	Connection type	Piping specifications			Note 2) Applicable stations	Applicable solenoid valve	5-station weight [g]
			Port direction	Port size Note 1)				
				1, 3 (P, R)	2, 4 (A, B)			
VQC5000	VV5QC51-□□□	■ F kit: D-sub connector ■ P kit: Flat ribbon cable ■ T kit: Terminal block box ■ S kit: Serial transmission Compact wireless remote ■ L kit: Lead wire ■ M kit: Circular connector	Side	D side P: 1/2 R: 1/2 (Rc, G, NPT/NPTF)	3/8, 1/2 (Rc, G, NPT/NPTF)	F, L, M, P kit (1 to 12 stations) T kit (1 to 10 stations) S kit 1 to 12 stations: EX250, EX260 1 to 12 stations: EX500, EX600 1 to 12 stations: EXW1	VQC5□00-51 VQC5□01-51	4330 S kit (Without Unit) Not including valve weight.
			Bottom	U side P: 3/4 R: 3/4 (Rc, G, NPT/NPTF)	1/2 (Rc, G, NPT/NPTF)			

Note 1) One-touch fittings in inch sizes are also available. Note 2) As an optional specification, the maximum number of stations can be increased by special wiring specifications.

SI Unit Part Number Table

EX600

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)	Positive common (NPN)	
SD6Q	DeviceNet®	EX600-SDN1A	EX600-SDN2A	1228
SD6N	PROFIBUS DP	EX600-SPR1A	EX600-SPR2A	
SD6V	CC-Link	EX600-SMJ1	EX600-SMJ2	
SD6FA	PROFINET (IO-Link unit)	EX600-SPN3	EX600-SPN4	
SD6FB	PROFINET (OPC UA, IO-Link unit)	—	EX600-SPN31	
SD6EB	EtherNet/IP™ (IO-Link unit)	EX600-SEN7	EX600-SEN8	
SD6DA	EtherCAT (IO-Link unit)	EX600-SEC3	EX600-SEC4	1229
SD6WS	Wireless remote Note)	EX600-WSV1	EX600-WSV2	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX260

Symbol	Applicable protocol	Number of outputs	SI Unit part no.		Communication connector	Page
			Negative common (PNP)	Positive common (NPN)		
SQA	DeviceNet®	32	EX260-SDN1	EX260-SDN2	M12	1229
SOB		16	EX260-SDN3	EX260-SDN4		
SNA		32	EX260-SPR1	EX260-SPR2		
SNB		16	EX260-SPR3	EX260-SPR4		
SNC	PROFIBUS DP	32	EX260-SPR5	EX260-SPR6	D-sub	
SND		16	EX260-SPR7	EX260-SPR8		
SVA	CC-Link	32	EX260-SMJ1	EX260-SMJ2	M12	
SVB		16	EX260-SMJ3	EX260-SMJ4		
SDA	EtherCAT	32	EX260-SEC1	EX260-SEC2	M12	
SDB		16	EX260-SEC3	EX260-SEC4		
SFA	PROFINET	32	EX260-SPN1	EX260-SPN2	M12	
SFB		16	EX260-SPN3	EX260-SPN4		
SEA	EtherNet/IP™	32	EX260-SEN1	EX260-SEN2	M12	
SEB		16	EX260-SEN3	EX260-SEN4		
SGA	EtherNet	32	EX260-SPL1	—	M12	
SGB	POWERLINK	16	EX260-SPL3	—		
SKA	IO-Link	32	EX260-SIL1	—	M12	
SCA	CC-Link IE TSN	32	EX260-SCT1	—	RJ45	

EX245 Integrated type (For Input/Output)

Symbol	Compatible protocol	SI unit part no.	Page
SDAAN	PROFINET	EX245-SPN1A	1229
SDABN		EX245-SPN2A	
SDACN		EX245-SPN3A	

EX126

Symbol	Applicable protocol	SI Unit part no.	Page
SDVB	CC-Link, Positive common (NPN)	EX126D-SMJ1	1229

EX500 Gateway Decentralized System 2 (128 points)

Symbol	SI Unit part no.	Page
	Negative common (PNP)	
SDA3	EX500-S103	1228










EX250

Symbol	Applicable protocol	SI Unit part no.	Page
SDQ	DeviceNet®, Negative common (PNP)	EX250-SDN1	1229
SDTA	AS-Interface, Negative common (PNP), (8 in/8 out, 2 power supply systems)	EX250-SAS3	
SDTB	AS-Interface, Negative common (PNP), (4 in/4 out, 2 power supply systems)	EX250-SAS5	
SDTC	AS-Interface, Negative common (PNP), (8 in/8 out, 1 power supply system)	EX250-SAS7	
SDTD	AS-Interface, Negative common (PNP), (4 in/4 out, 1 power supply system)	EX250-SAS9	
SDZEN	EtherNet/IP™, Negative common (PNP)	EX250-SEN1	

For details about the EX series (Serial Transmission System), refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via SMC website, <https://www.smcworld.com>

Manifold Options

         For details about options, refer to the **Web Catalog** of the VQ5000 series.

Blanking plate assembly VVQ5000-10A-1 	Individual SUP spacer VVQ5000-P-1-⁰³₀₄ 	Individual EXH spacer VVQ5000-R-1-⁰³₀₄ 	EXH block plate VVQ5000-16A-2 (1 pc./set) (Order q'ty: 2 pcs.) 	Restrictor spacer VVQ5000-20A-1 
SUP stop valve spacer VVQ5000-37A-1 	SUP block plate VVQ5000-16A-1 	Double check spacer with residual pressure exhaust VVQ5000-25A-1 	Interface regulator (P, A, B port regulation) ARBQ5000-00-⁰³₀₁ 	For replacement parts, refer to page 1230.

Base Mounted Plug-in Unit

EX260 Safety Communication Protocol (PROFIsafe)

VQC5000 Series



Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to page 1202 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC51-1203SQA-
VQC5000 series
Base mounted plug-in

1 2 3 4 5 6

1 Valve stations

01	1 station
...	...
12	12 stations

2 Cylinder port size


03	3/8
04	1/2
B	Bottom ported 1/2
CM	Mixed

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

4 Kit type/Electrical entry/Cable length

S Kit
Serial transmission: EX260 integrated-type (for output)

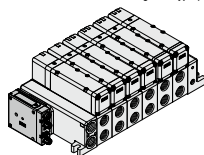

SI Unit: EX260

IP67 compliant

Symbol	Protocol	(Interfacing) Communication connector	Stations
SD0	Without SI unit		1 to 12 stations
SFP	PROFIsafe	32 M12	
SDP	Safety over EtherCAT	32 M12	

5 SI unit output polarity

SI unit output polarity	EX260 integrated-type (for output) serial transmission system	
	PROFIsafe	Safety over EtherCAT
N Negative common	☐	☐

Note) Positive common (NPN) type is not applicable.

6 Option

Nil	None
K	Special wiring spec. (Except double wiring)

How to Order Valves

Refer to page 1204 for valve models. Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B" and "C") are excluded since they do not comply with safety standards.

SI Unit Part No.

EX260 SI Unit (Safety Communication)

EX260-F PS1

Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Page
PS1	PROFIsafe	32	Source/PNP (Negative common)	M12	SFPN	1229
SE1	Safety over EtherCAT	32	Source/PNP (Negative common)	M12	DPN	

Base Mounted Plug-in Unit

EX600 Safety Communication Protocol

VQC5000 Series



Using the safety communication protocol

Refer to the EX600 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to page 1202 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC 5 1 - 12 03 SD6EP -

VQC5000 series*
Base mounted plug-in*

1 2 3 4 5

1 Valve stations

01	1 station
:	:
12	12 stations

2 Cylinder port size

03	3/8
04	1/2
B	Bottom ported 1/2
CM	Mixed

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

4 Kit type

[Safety communication protocol]
EX600

Symbol	Protocol	Number of outputs	Communication connector
SD6EP			Without fieldbus module

Note 1) Manifold + valve plate part number

Note 2) Refer to the mounting instructions in the EX600 catalog when mounting the included valve plate.

Note 3) Refer to the EX600 catalog when selecting a safety communication fieldbus system. When ordering, include the part number as shown in the ordering example on page 1207-02. In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.

Note 4) If your order includes a safety communication fieldbus module, it will be shipped with the product. Refer to the attached operation manual for details on the mounting method.

5 Option

Nil	None
K	Special wiring spec. (Except double wiring)


How to Order Valves

Refer to page 1204 for valve models.

Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B" and "C") are excluded since they do not comply with safety standards.

How to Order Manifold Assembly: [Safety Communication Protocol] EX600

Example (VV5QC51-□SD6EP-□)

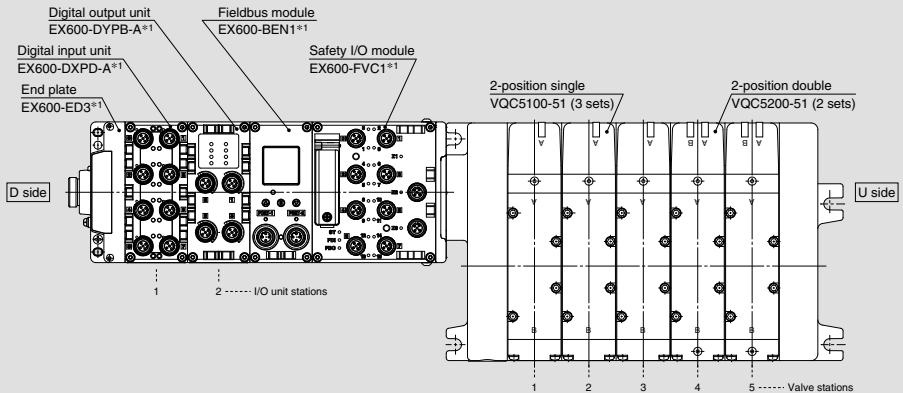

VV5QC51-0503SD6EP1 set 5-station manifold base part no.

- * VQC5100-51 3 sets 2-position single part no. (Stations 1 to 3)
- * VQC5200-51 2 sets 2-position double part no. (Stations 4 to 5)
- * EX600-ED3 1 set End plate
- * EX600-DXPD-A 1 set I/O unit part number (Station 1)
- * EX600-DYPB-A 1 set I/O unit part number (Station 2)
- * EX600-BEN1 1 set Fieldbus module part no.
- * EX600-FVC1 1 set Safety I/O module part no.

→ The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

Indicate the part numbers of valves and optional parts to be mounted in order, starting from station 1 (D side). If the arrangement becomes complicated, specify on a manifold specification sheet.

Indicate the part numbers for the end plate, I/O unit (1st station from the D side), fieldbus module, and safety I/O module in that order.

*1 The manifold part number above does not include an end plate, I/O unit, fieldbus module, or safety I/O module. However, they can be shipped with the product if they are ordered together. For details on the compatible EX600 models, refer to the EX600 series safety communication fieldbus system catalog. In addition, be sure to order a fieldbus system and a safety I/O unit to operate the valve.

Base Mounted Plug-in Unit

Compact Wireless Remote Series

VQC5000 Series

CE UK
CA

How to Order Manifolds

VV5QC51-1203 SW2N-

VQC5000 series
Base mounted plug-in

1 2 3 4 5 6

1 Valve stations

01	1 station
:	:
12	12 stations

2 Cylinder port size

03	3/8
04	1/2
B	Bottom ported 1/2
CM	Mixed

3 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

4 Kit type

Specifications Symbol	Wireless adapter	Number of outputs	Stations	Number of selectable frequency channels	Applicable countries (Note 3)
SD0 (Note 1) (Note 2)	Without compact wireless remote				
SW1	Without wireless adapter	32	1 to 12 stations (24)	—	—
SW2	EXW1-A11E	32	1 to 12 stations (24)	Min. 5/ Max. 79	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
SW3	EXW1-A11N	32	1 to 12 stations (24)	Min. 15/ Max. 79	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

5 Compact wireless remote output polarity

Output polarity
N Negative common

Note) Cannot be selected for the type without a compact wireless remote

6 Option

Nil	None
K	Special wiring spec. (Except double wiring)

Note 1) Confirm that the common specification of the built-in valve matches the output polarity of the selected compact wireless remote.

In addition, if the built-in valve has no polarity, either compact wireless remote output polarity type can be connected.

Note 2) "With DIN rail" cannot be selected for the type without a compact wireless remote.

Note 3) Select the wireless adapter according to the country of use.

* The applicable countries differ depending on the part number. Before purchasing, refer to the wireless system catalog.

Compact Wireless Remote Part No.

① Compact wireless remote part no.

EXW1-RDYPM5C-E

• **Type**

Symbol	Type
D	Digital

• **Type**

Symbol	Type
Y	Output

• **Polarity**

Symbol	Description
P	PNP
N	NPN

• **Option**

Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

- * If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately. Refer to the operation manual for mounting instructions.
- * "E" and "N" are shipped with the wireless adapter assembled.

• **Antenna specification for wireless communication**

Symbol	Connector interface
C	Wireless adapter

• **Connector/Number of ports**

Symbol	Connector	Number of points
M5	Valve manifold	32 points

Corresponding Manifold Symbol Table

Compact wireless remote part no.	Manifold symbol
EXW1-RDYNM5C	SW1
EXW1-RDYPM5C	SW1N
EXW1-RDYNM5C-E	SW2
EXW1-RDYPM5C-E	SW2N
EXW1-RDYNM5C-N	SW3
EXW1-RDYPM5C-N	SW3N

② Wireless adapter



EXW1-A11N

• **Wireless adapter**

• **Applicable model**

Symbol	Applicable model
1	- Base/Remote - Antenna specification for wireless communication: C - Air Management Hub: EXA1-□

• **Frequency channel selection**

Symbol	Number of selectable frequency channels	Applicable countries
E	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
N	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

- * A dedicated cable is required to connect the wireless base/remote and wireless adapter.
- When using this product, order the wireless adapter cable separately.
- An installation plate (EXW1-AB4) is included as an accessory.

③ Wireless adapter cover

EXW1-AB6

For direct mounting of wireless adapter, a wireless adapter cover is required.





For details on the compact wireless remote, refer to the EXW1 series catalog or operation manual, and for part numbers of the built-in compact wireless remote, etc., refer to page 1227. The operation manual can be downloaded from the SMC website: <https://www.smcworld.com>

VQC5000 Series

S VQC5000

Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant


VV5QC51
S kit (Serial transmission kit: EX600)
Power supply with M12 connector

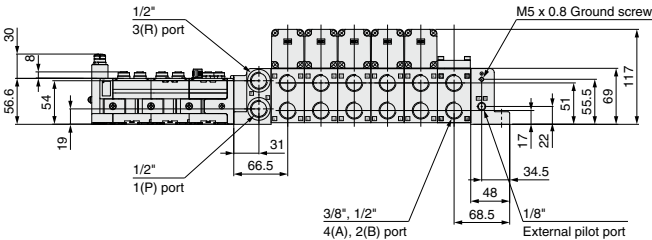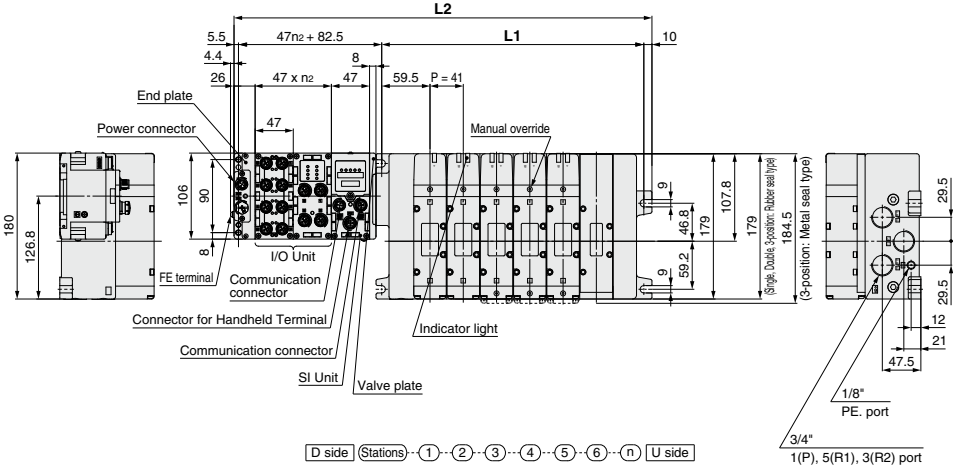

Bottom ported


<P/R port side>

<Bottom side>

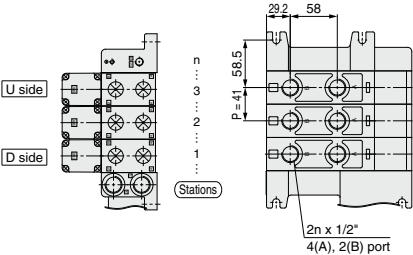

* Other dimensions are the same as the side ported type.

Dimensions		Formula: L1 = 41n + 77, L2 = 41n + 175 + L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n" is number of I/O Units. n: Stations (Maximum 12 stations)											
L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		216	257	298	339	380	421	462	503	544	585	626	667

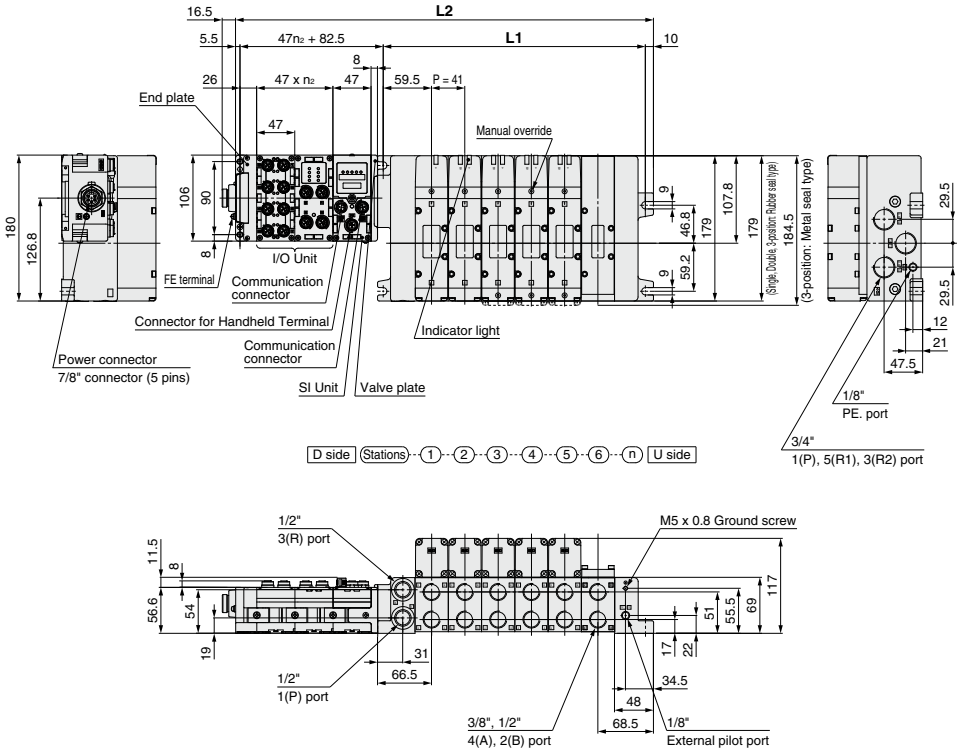S**VQC5000****Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant****VV5QC51****S kit (Serial transmission kit: EX600)****Power supply with 7/8 inch connector**

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions Formula: $L1 = 41n + 77$, $L2 = 41n + 175$, $L2$ is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n" is number of I/O Units. n: Stations (Maximum 12 stations)


L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		216	257	298	339	380	421	462	503	544	585	626	667

VQC5000 Series

S VQC5000

Kit (Serial transmission kit): For EX500 Gateway Decentralized System 2 (128 points) IP67 compliant

VV5QC51
S kit (Serial transmission kit: EX500)

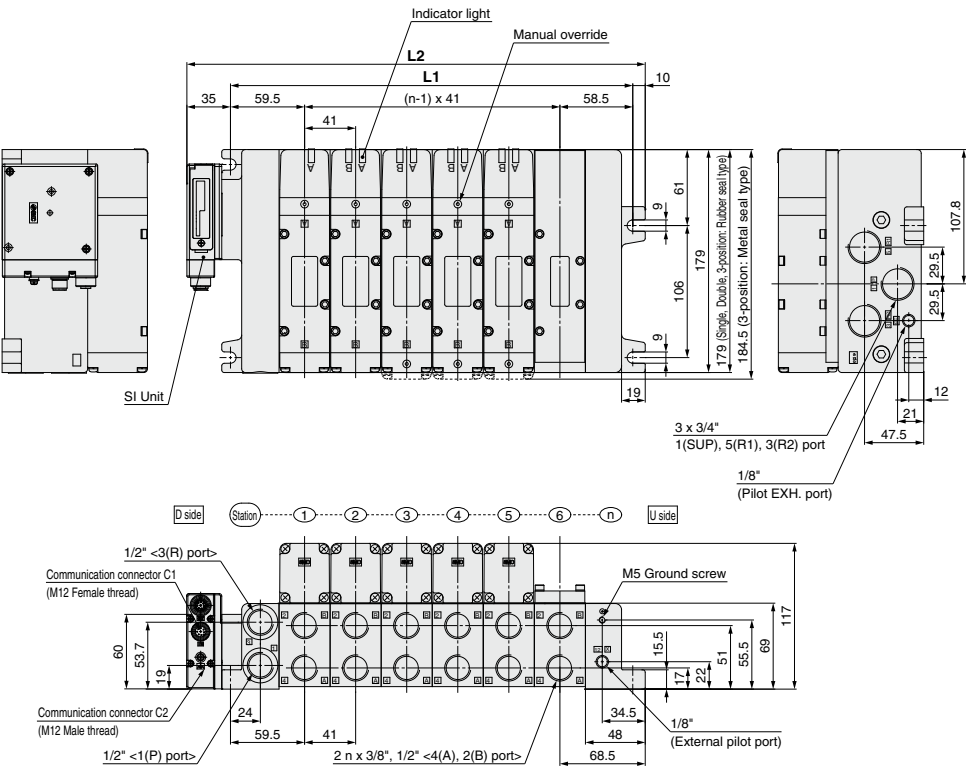

Note) The dimensions of the bottom ported type are common to all S kits.

Formula: $L1 = 41n + 77$, $L2 = 41n + 122$ n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	163	204	245	286	327	368	409	450	491	532	573	614

VQC5000 Series

S

VQC5000


Kit (Serial transmission kit): For EX260 Integrated-type (Output) Serial Transmission System

IP40 compliant

IP67 compliant

VV5QC51

S kit (Serial transmission kit: EX260)

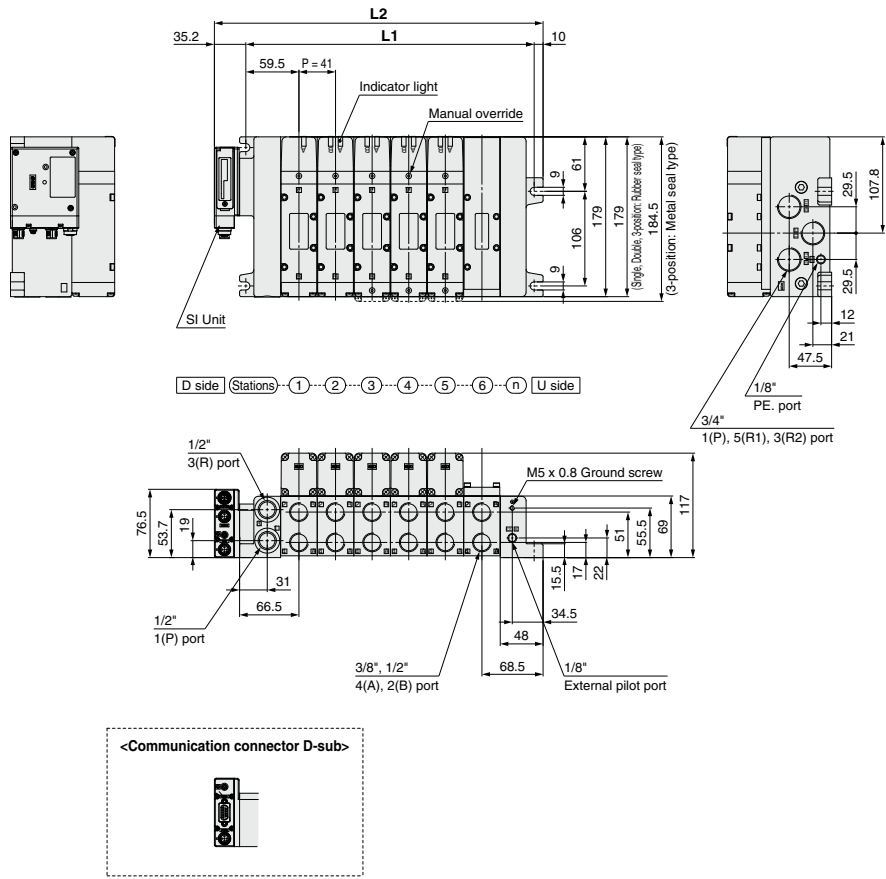

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions

Formula: $L1 = 41n + 77$, $L2 = 41n + 122.2$ n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	163.2	204.2	245.2	286.2	327.2	368.2	409.2	450.2	491.2	532.2	573.2	614.2

S



VQC5000

Kit (Serial transmission kit): EX245 Integrated-type (I/O) Serial Transmission System **IP65 compliant**

VV5QC51

S kit

(Serial transmission kit: EX245)

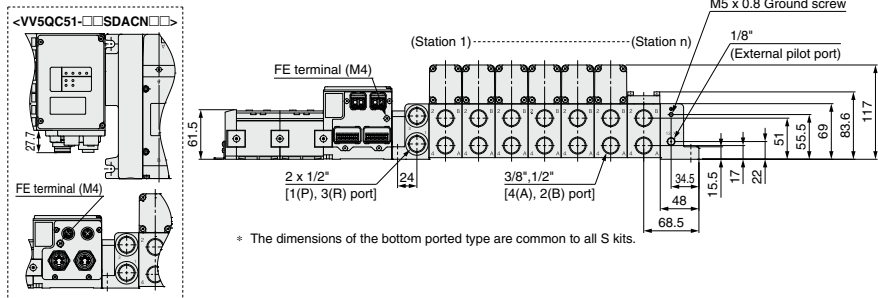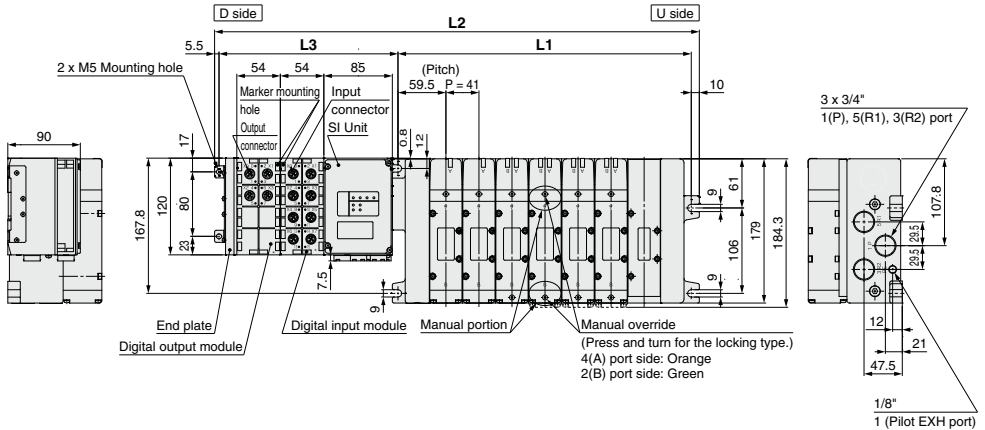

* The dimensions of the bottom ported type are common to all S kits.

$$L3 = 54 \times n2 + 114.1$$

Dimensions

Formula: $L1 = 41n + 77$, $L2 = 41n + 206.6$ * $L2$ is the dimension without I/O Unit. Add 54 mm for each additional I/O Units. * " n^2 " is number of I/O Units. n : Stations


L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	247.6	288.6	329.6	370.6	411.6	452.6	493.6	534.6	575.6	616.6	657.6	698.6

VQC5000 Series

S VQC5000 Kit (Serial transmission kit): For EX250 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC51


S kit (Serial transmission kit: EX250)

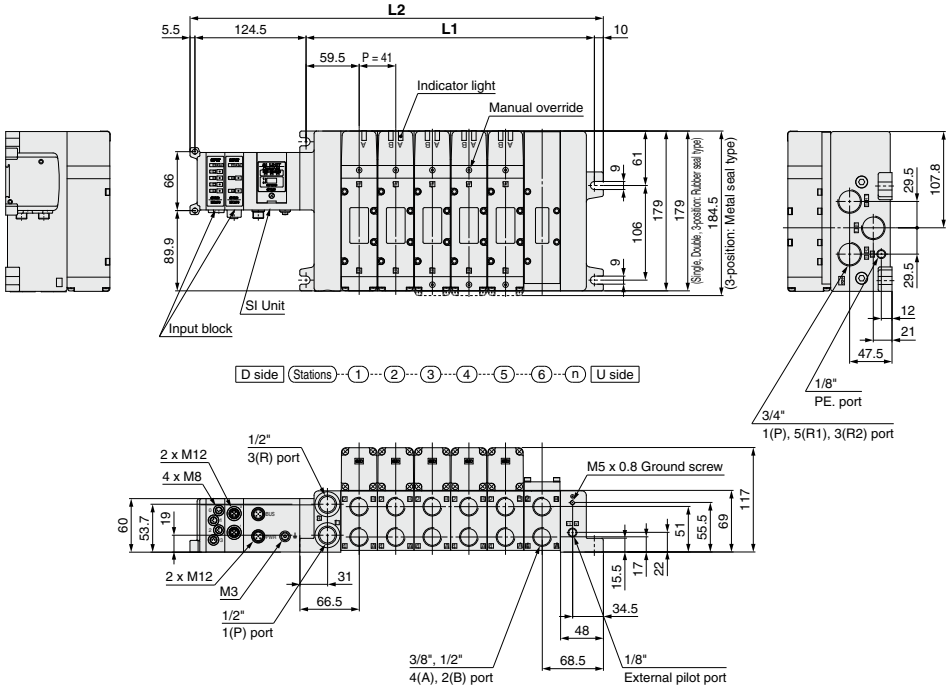

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions Formula: $L1 = 41n + 77$, $L2 = 41n + 196$ (For one input block. Add 21 mm for each additional input block) n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	237	278	319	360	401	442	483	524	565	606	647	688

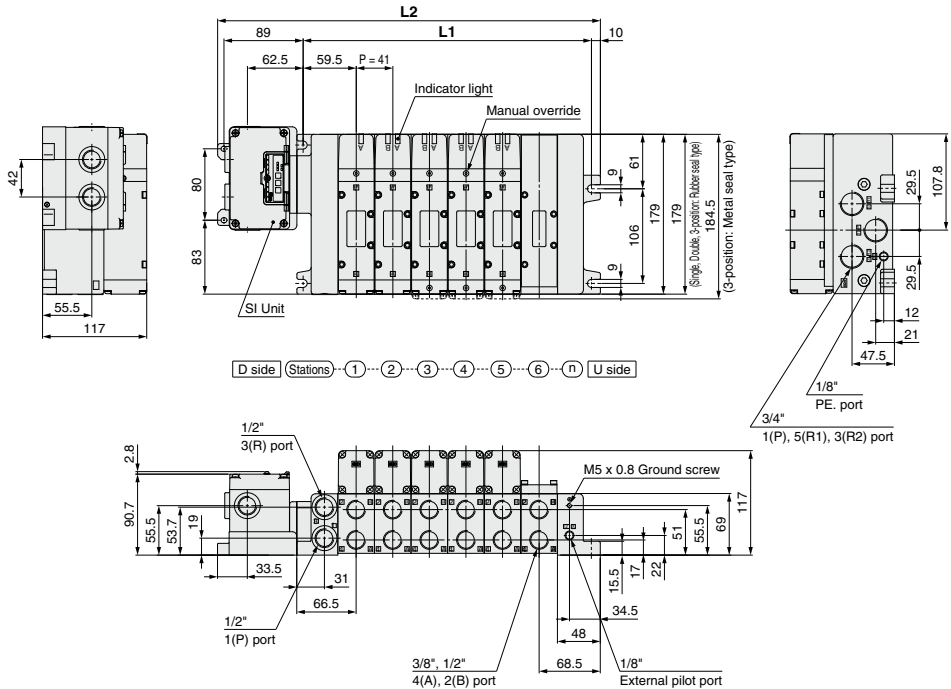S**VQC5000**Kit (Serial transmission kit): For EX126 Integrated-type (Output) Serial Transmission System **IP67 compliant****VV5QC51****S kit (Serial transmission kit: EX126)**

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions

Formula: $L1 = 41n + 77$, $L2 = 41n + 182.8$ n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	223.8	264.8	305.8	346.8	387.8	428.8	469.8	510.8	551.8	592.8	633.8	674.8

S VQC5000


Kit [Safety Communication Protocol] EX600

IP67 compliant

VV5QC51

[Safety communication protocol] EX600

(Power supply with 7/8 inch connector)

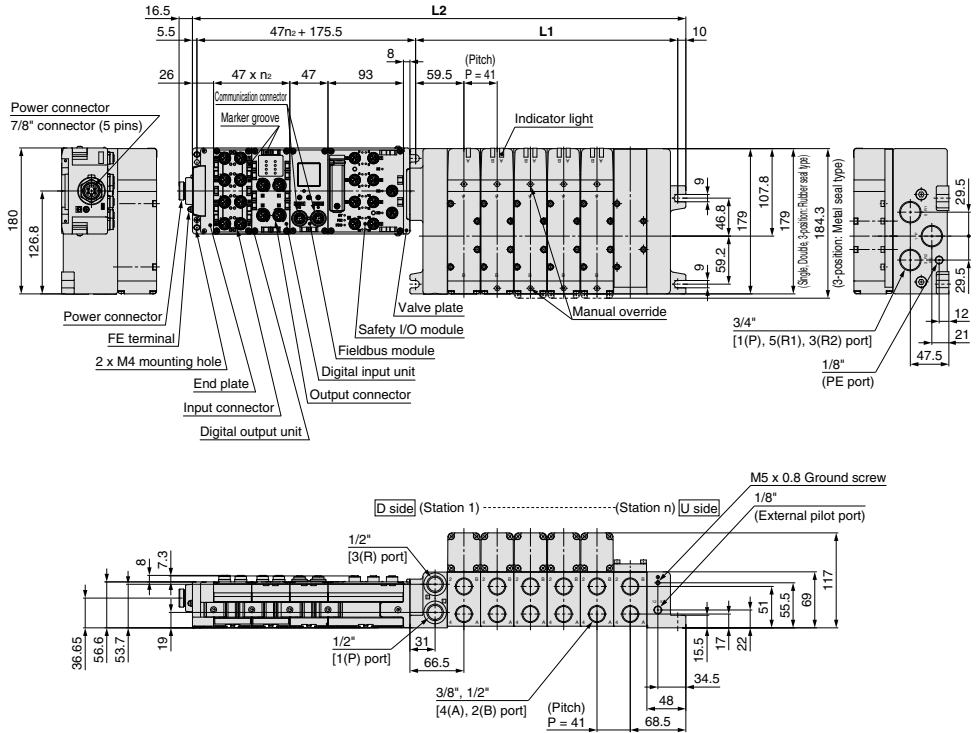

Dimensions Formula: $L1 = 41n + 77$, $L2 = 41n + 268 + 12$ is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n" is number of I/O Units. n: Stations (Maximum 12 stations)

L	1	2	3	4	5	6	7	8	9	10	11	12
L1	211	252	293	334	375	416	457	498	539	580	621	662
L2	309	350	391	432	473	514	555	596	637	678	719	760

VQC5000 Series

S


VQC5000

Kit (Compact Wireless Remote) EXW1

IP67 compliant

VV5QC51

S kit (Compact wireless remote: EXW1)

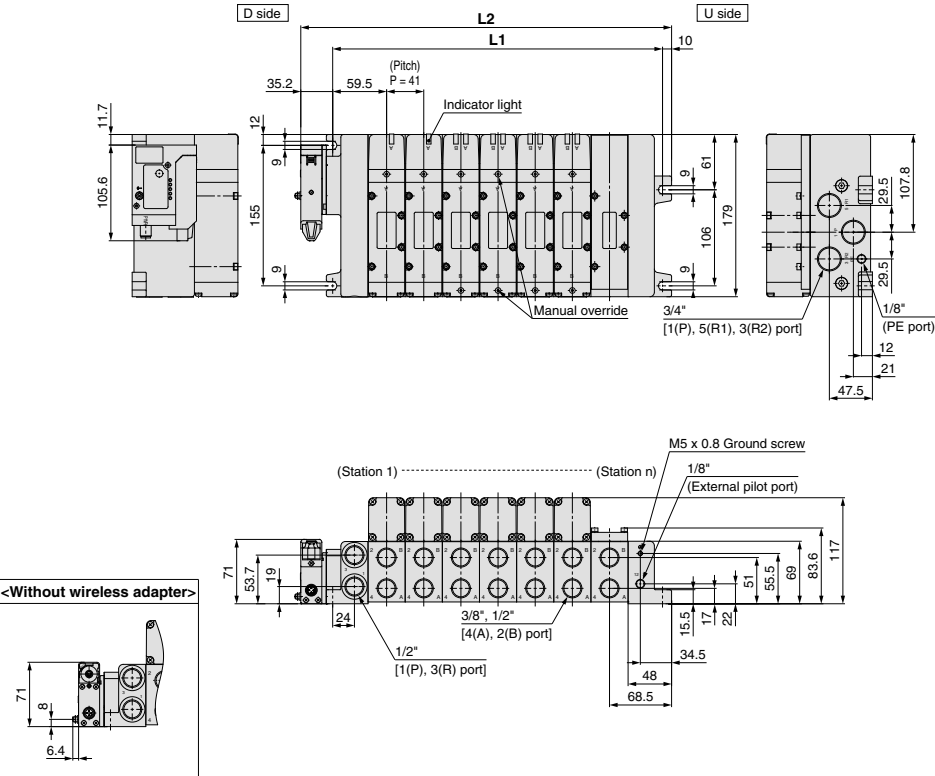

Note) The dimensions of the bottom ported type are common to all S kits.

Dimensions


Formula/L1 = 41n + 77 L2 = 41n + 122.2 n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	163.2	204.2	245.2	286.2	327.2	368.2	409.2	450.2	491.2	532.2	573.2	614.2

VQC5000 Series


F VQC5000 Kit (D-sub connector kit) IP40 compliant

- Using our D-sub connector for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.
- We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

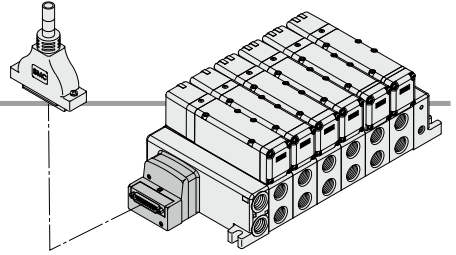

Electrical Wiring Specifications

 D-sub connector




As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types.
Mixed single and double wiring are available as options.
Refer to special wiring specifications (options) below.

Lead wire colors for D-sub connector assemblies (AXT100-DS25-015, 030, 050)

Standard wiring	Terminal no.	Lead wire color	Dot marking
Station 1 { SOL.A	1	Black	None
Station 1 { SOL.B	14	Yellow	Black
Station 2 { SOL.A	2	Brown	None
Station 2 { SOL.B	15	Pink	Black
Station 3 { SOL.A	3	Red	None
Station 3 { SOL.B	16	Blue	White
Station 4 { SOL.A	4	Orange	None
Station 4 { SOL.B	17	Purple	None
Station 5 { SOL.A	5	Yellow	None
Station 5 { SOL.B	18	Gray	None
Station 6 { SOL.A	6	Pink	None
Station 6 { SOL.B	19	Orange	Black
Station 7 { SOL.A	7	Blue	None
Station 7 { SOL.B	20	Red	White
Station 8 { SOL.A	8	Purple	White
Station 8 { SOL.B	21	Brown	White
Station 9 { SOL.A	9	Gray	Black
Station 9 { SOL.B	22	Pink	Red
Station 10 { SOL.A	10	White	Black
Station 10 { SOL.B	23	Gray	Red
Station 11 { SOL.A	11	White	Red
Station 11 { SOL.B	24	Black	White
Station 12 { SOL.A	12	Yellow	Red
Station 12 { SOL.B	25	White	None
COM.	13	Orange	Red

Special Wiring Specifications (Options)

 (For 25P)




Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-DS25-015, 030, 050

(D-sub connector cable assemblies can be ordered with manifolds.)
(Refer to manifold ordering.)

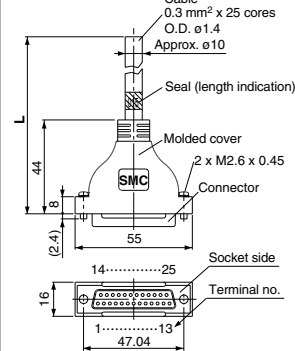

Lead wire colors for D-sub connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub connector cable assemblies

Cable length [L]	Part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm ² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

- When using a standard commercial connector, use a type 25P female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more


(Note) The minimum bending radius for D-sub connector cables is 20 mm.

Connector Manufacturers Example

- Fujitsu, Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

F**VQC5000****Kit (D-sub connector kit) IP40 compliant**

VV5QC51

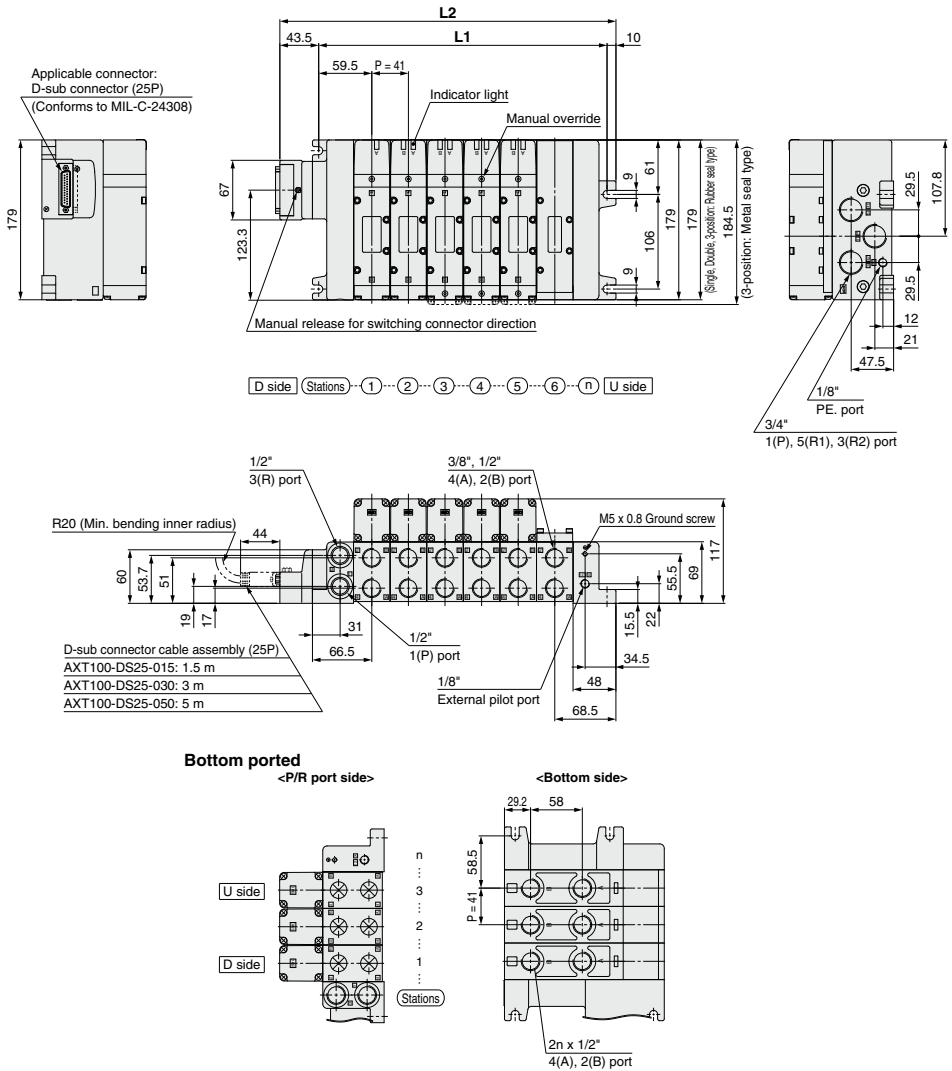

* Other dimensions are the same as the side ported type.


DimensionsFormula: $L1 = 41n + 77$, $L2 = 41n + 130.5$ n: Stations (Maximum 12 stations)

	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

VQC5000 Series


P VQC5000 Kit (Flat ribbon cable kit) IP40 compliant

- Using our flat ribbon cable for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.
- We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

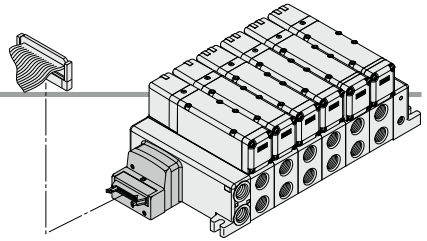

Electrical Wiring Specifications

 Flat ribbon cable connector




Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.


Connector terminal number

Triangle mark indicator position

<26P>

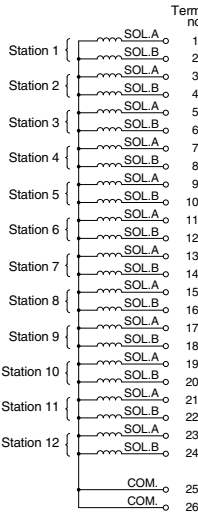


<20P>

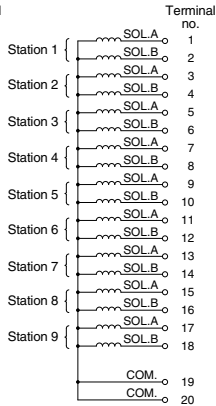

Cable Assembly

AXT100-FC²⁰₂₆-¹₂³

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

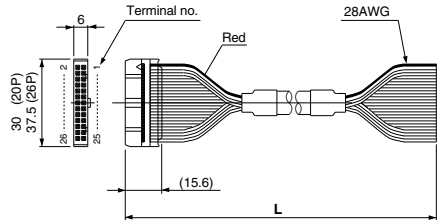

Flat ribbon cable connector assemblies


Cable length [L]	Part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

- When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu, Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.



Special Wiring Specifications (Option)

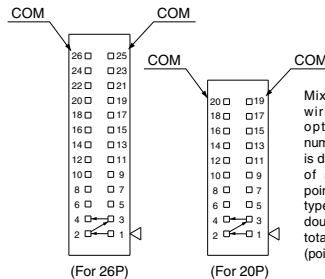

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

P**VQC5000****Kit (Flat ribbon cable kit) IP40 compliant**

VV5QC51

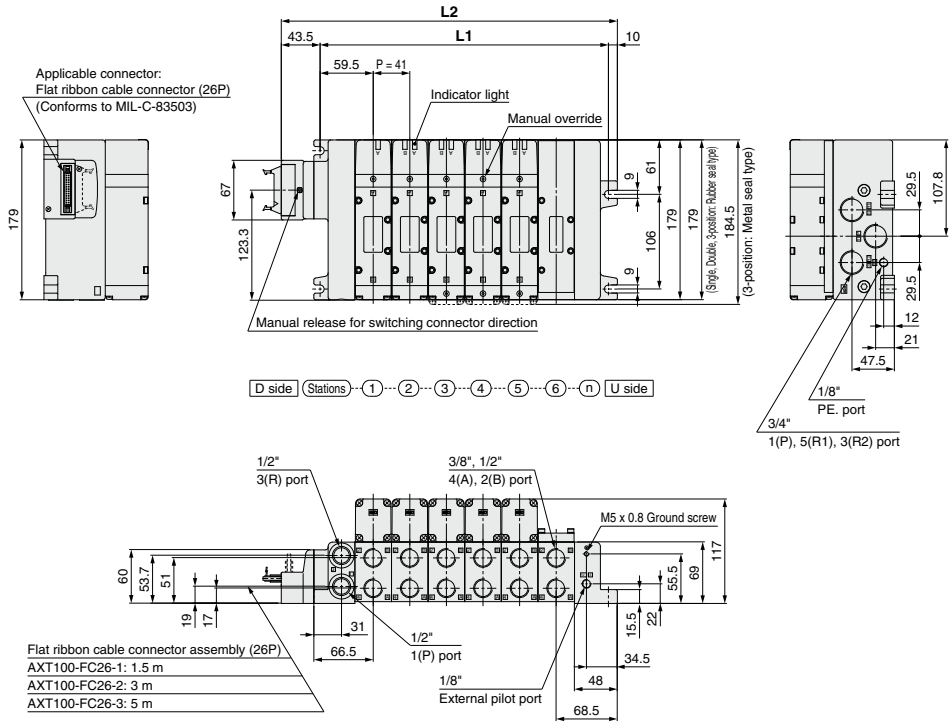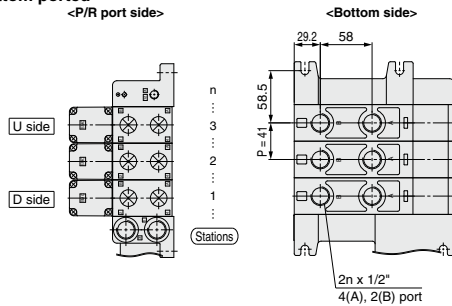**Bottom ported**


* Other dimensions are the same as the side ported type.

DimensionsFormula: $L1 = 41n + 77$, $L2 = 41n + 130.5$ n: Stations (Maximum 12 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

VQC5000 Series

T VQC5000 Kit (Terminal block box kit) IP67 compliant

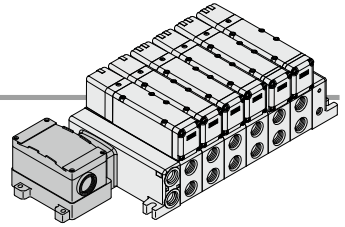


- This kit has a small terminal block inside a junction box. The provision of a G3/4 electrical entry allows connection of conduit fittings.

Terminal Block Connection

Step 1. How to remove terminal block cover

Loosen the 4 mounting screws (M4) and remove the terminal block cover.

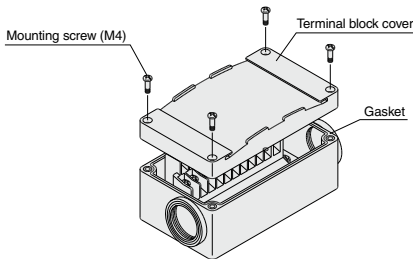

Step 3. How to replace the terminal block cover

Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


Proper tightening torque [N·m]
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof plug assembly (for G3/4): AXT100-B06A


Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

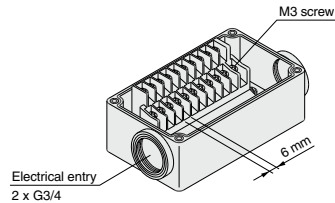


 Electrical Wiring Specifications (Conforms to IP67)



The internal wiring is double (connected to SOL. A and SOL. B) for all stations regardless of the type of valve or options. Mixed single and double wiring are available as options.

Standard wiring

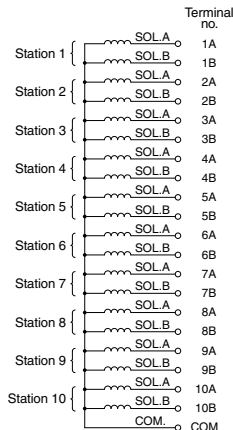

Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 20.

1. How to Order

Indicate option symbol "K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.


2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.




T**VQC5000****Kit (Terminal block box kit) IP67 compliant**

VV5QC51

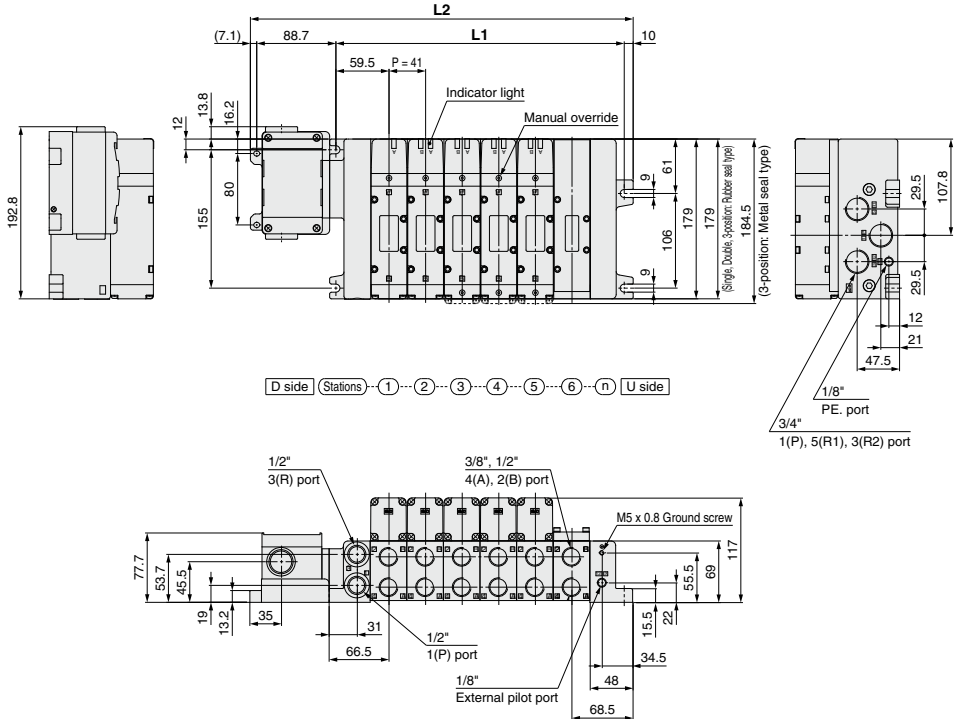**Bottom ported**

<P/R port side>

<Bottom side>

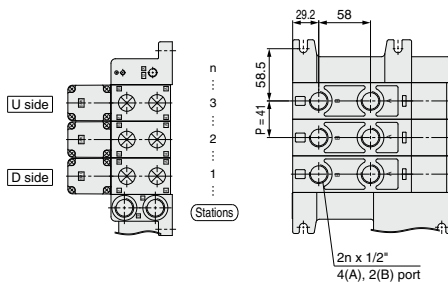


* Other dimensions are the same as the side ported type.

DimensionsFormula: $L1 = 41n + 77$, $L2 = 41n + 182.8$ n: Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	223.8	264.8	305.8	346.8	387.8	428.8	469.8	510.8	551.8	592.8	633.8	674.8

VQC5000 Series

L VQC5000 Kit (Lead wire kit) IP67 compliant

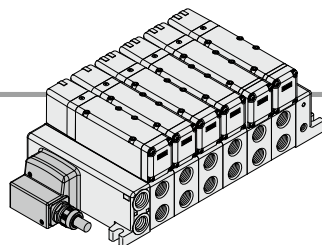


- Direct electrical entry type
- IP67 enclosure is available with use of cables with sheath and waterproof connectors.

Electrical Wiring Specifications

Lead wire specifications

Lead wire

0.3 mm² x 25 cores

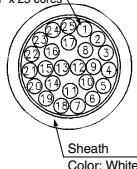

As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types.

Mixed single and double wiring are available as options.

Refer to special wiring specifications (options) below.

	Terminal no.	Lead wire color	Dot marking
Station 1 {	SOL.A 1	Black	None
	SOL.B 14	Yellow	Black
Station 2 {	SOL.A 2	Brown	None
	SOL.B 15	Pink	Black
Station 3 {	SOL.A 3	Red	None
	SOL.B 16	Blue	White
Station 4 {	SOL.A 4	Orange	None
	SOL.B 17	Purple	None
Station 5 {	SOL.A 5	Yellow	None
	SOL.B 18	Gray	None
Station 6 {	SOL.A 6	Pink	None
	SOL.B 19	Orange	Black
Station 7 {	SOL.A 7	Blue	None
	SOL.B 20	Red	White
Station 8 {	SOL.A 8	Purple	White
	SOL.B 21	Brown	White
Station 9 {	SOL.A 9	Gray	Black
	SOL.B 22	Pink	Red
Station 10 {	SOL.A 10	White	Black
	SOL.B 23	Gray	Red
Station 11 {	SOL.A 11	White	Red
	SOL.B 24	Black	White
Station 12 {	SOL.A 12	Yellow	Red
	SOL.B 25	White	None
	COM. 13	Orange	Red

Lead wire length

VV5QC51-08C12LD0

Lead wire length

0	0.6 m
1	1.5 m
2	3.0 m

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20°C	65 or less
Withstand pressure V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) Cannot be used for transfer wiring.
The minimum bending radius for cables is 20 mm.

Special Wiring Specifications (Option)



Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.



VQC5000

Kit (Lead wire kit) IP67 compliant


VV5QC51

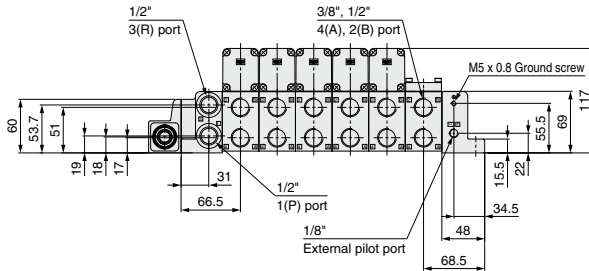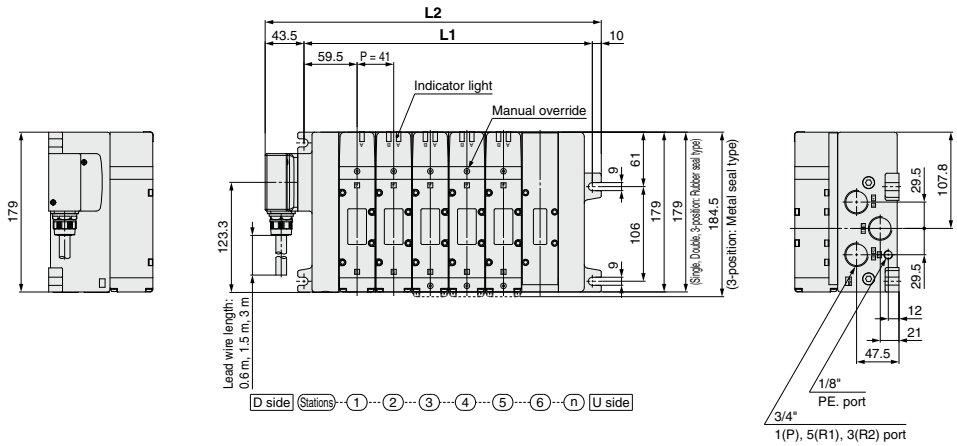

Bottom ported

<P/R port side>

<Bottom side>

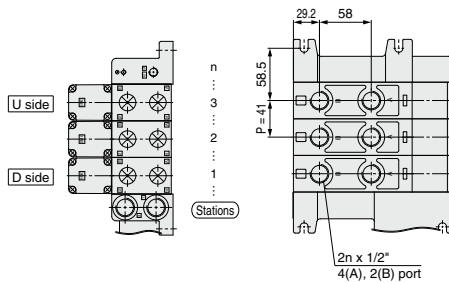

* Other dimensions are the same as the side ported type.

Dimensions


Formula: L1 = 41n + 77, L2 = 41n + 130.5 n: Stations (Maximum 12 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

VQC5000 Series


M VQC5000 Kit (Circular connector kit) IP67 compliant

- Use of circular connectors helps streamline wiring procedure to save labor.
- IP67 enclosure is available with use of waterproof multiple connectors.

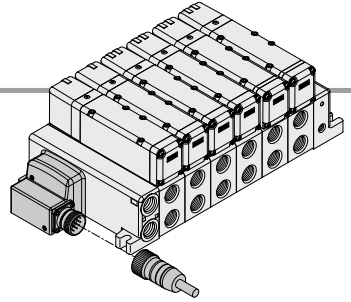


Electrical Wiring Specifications

Multiple connector

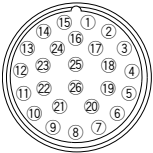

Double wiring (connected to SOLA and SOLB) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

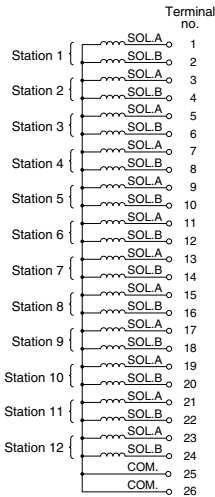


Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-MC26-030
015
050

(Type 26P circular connector cable assemblies can be ordered with manifolds. Refer to manifolds ordering.)

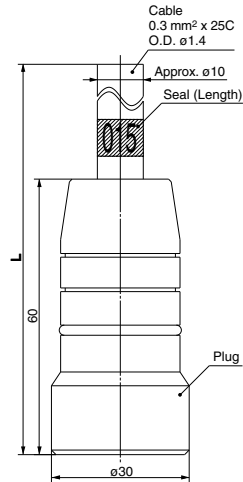

Lead wire colors for circular connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Terminal no. 26 is connected to 25 inside the connector.

Electric characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the multiple connector cable is 20 mm.

Circular connector cable assemblies

Cable length [L]	Assembly part no.
	26P
1.5 m	AXT100-MC26-015
3 m	AXT100-MC26-030
5 m	AXT100-MC26-050



- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

M

VQC5000

Kit (Circular connector kit) IP67 compliant


VV5QC51

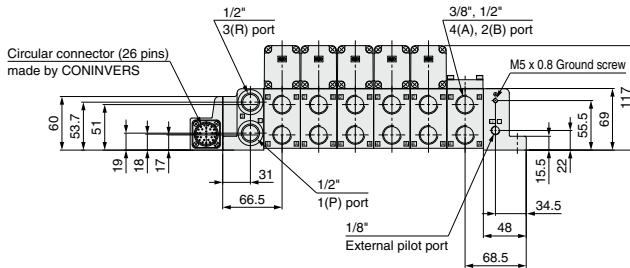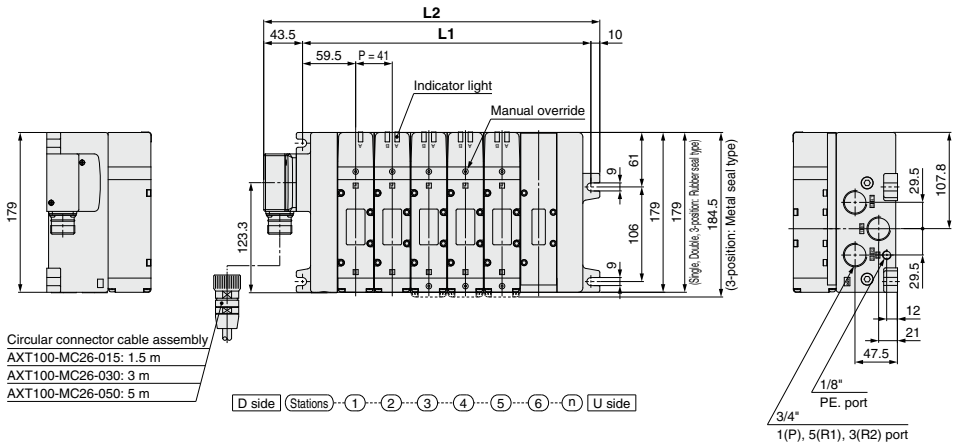

Bottom ported

<P/R port side>

<Bottom side>

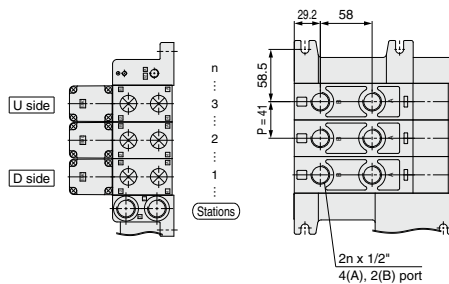

* Other dimensions are the same as the side ported type.

Dimensions









Formula: $L1 = 41n + 77$, $L2 = 41n + 130.5$ n: Stations (Maximum 12 stations)

L	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5









VQC5000 Series Construction

Plug-in Unit

     Metal seal type

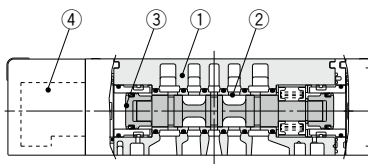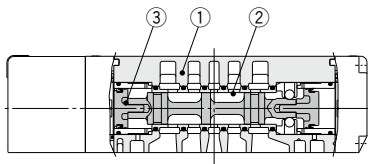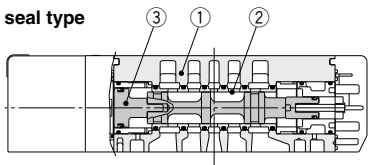

Rubber seal type

     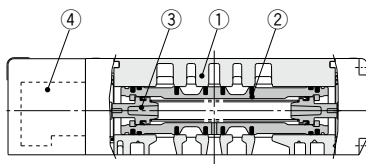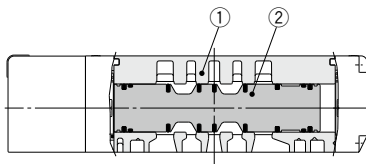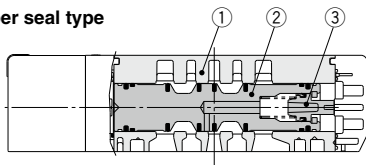

Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

Replacement Parts

4	Pilot valve assembly	V118 A B E Coil type <table><tr><td>NII</td><td>Standard (0.95 W)</td></tr><tr><td>Y</td><td>Low wattage type (0.4 W)</td></tr></table> □: Coil rated voltage Example) 24 VDC; 5 A: With light (For A side) B: With light (For B side) E: Without light (A/B side common)	NII	Standard (0.95 W)	Y	Low wattage type (0.4 W)
NII	Standard (0.95 W)					
Y	Low wattage type (0.4 W)					

Component Parts











No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	

Replacement Parts

4	Pilot valve assembly	V118 A B E Coil type <table><tr><td>NII</td><td>Standard (0.95 W)</td></tr><tr><td>Y</td><td>Low wattage type (0.4 W)</td></tr></table> Coil rated voltage Example) 24 VDC; 5 A: With light (For A side) B: With light (For B side) E: Without light (A/B side common)	NII	Standard (0.95 W)	Y	Low wattage type (0.4 W)
NII	Standard (0.95 W)					
Y	Low wattage type (0.4 W)					

VQC5000 Series

       Exploded View of Manifold

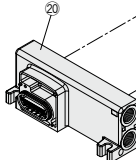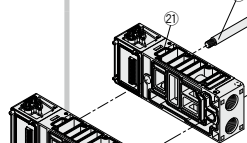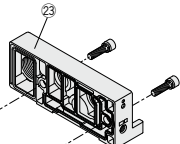	Housing assembly and SI Unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
S Kit (Serial transmission)	EX600 			
	EX500 			
	EX260 			
	EX245 			
	EX250 			
	EX126 			
S kit (Compact wireless remote)	EXW1 			
F Kit (D-sub connector)				
P Kit (Flat ribbon cable)				
T Kit (Terminal block)				
L Kit (Lead wire)				
M Kit (Circular connector)				
				

VQC5000 Series

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
①	SI Unit	EX600-SDN1A	DeviceNet®, PNP (Negative common)
		EX600-SDN2A	DeviceNet®, NPN (Positive common)
		EX600-SMJ1	CC-Link, PNP (Negative common)
		EX600-SMJ2	CC-Link, NPN (Positive common)
		EX600-SPR1A	PROFIBUS DP, PNP (Negative common)
		EX600-SPR2A	PROFIBUS DP, NPN (Positive common)
		EX600-SEN7	EtherNet/IP™ (IO-Link unit) PNP (Negative common)
		EX600-SEN8	EtherNet/IP™ (IO-Link unit) NPN (Positive common)
		EX600-SEC3	EtherCAT (IO-Link unit) PNP (Negative common)
		EX600-SEC4	EtherCAT (IO-Link unit) NPN (Positive common)
		EX600-SPN3	PROFINET (IO-Link unit) PNP (Negative common)
		EX600-SPN4	PROFINET (IO-Link unit) NPN (Positive common)
		EX600-SPN31	PROFINET (OPC UA, IO-Link unit) PNP (Negative common)
		EX600-WSV1 ^{Note 1)}	Wireless remote module PNP (Negative common)
		EX600-WSV2 ^{Note 1)}	Wireless remote module NPN (Positive common)
②	Digital Input Unit	EX600-DXNB	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs
	Digital Output Unit	EX600-DXNF	NPN input, Spring type terminal box, 32 pins, 16 inputs
		EX600-DXPF	PNP input, Spring type terminal box, 32 pins, 16 inputs
		EX600-DYNB	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs
		EX600-DYNF	NPN output, Spring type terminal box, 32 pins, 16 outputs
		EX600-DYPF	PNP output, Spring type terminal box, 32 pins, 16 outputs
		EX600-DMNE	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs
	Digital Input/Output Unit	EX600-DMNF	NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
		EX600-DMPF	PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
		EX600-AXA	M12 connector, 5 pins (2 pcs.), 2-channel input
		EX600-AYA	M12 connector, 5 pins (2 pcs.), 2-channel output
	Analog Input Unit	EX600-AMB	M12 connector, 5 pins (4 pcs.), 2-channel input/output
	Analog Output Unit	EX600-LAB1	Port class A, M12 connector, 5 pins (4 pcs.)
	Analog Input/Output Unit	EX600-LBB1	Port class B, M12 connector, 5 pins (4 pcs.)
	IO-Link unit ^{Note 2)}	EX600-ED2	M12 power supply connector, B-coded
	End plate	EX600-ED3	7/8 inch power supply connector
		EX600-ED4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
		EX600-ED5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2
④	Valve plate	EX600-ZMV1	Enclosed parts: Round head screws (M4 x 6) 2 pcs., Round head screws (M3 x 8) 4 pcs.
⑤	SI Unit	EX500-S103	Gateway decentralized system 2 (128 points), PNP (Negative common)

Note 1) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 2) The compatible SI unit models are as shown below.

· PROFINET compatible: EX600-SPN3/EX600-SPN4/EX600-SPN31

· EtherNet/IP™ compatible: EX600-SEN7/EX600-SEN8

· EtherCAT compatible: EX600-SEC3/EX600-SEC4

Note 3) Refer to the EX600 catalog for details on the safety communication fieldbus system.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
⑥	SI Unit	EX260-SDN1	DeviceNet®, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SDN2	DeviceNet®, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SDN3	DeviceNet®, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SDN4	DeviceNet®, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SRP1	PROFIBUS DP, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SRP2	PROFIBUS DP, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SRP3	PROFIBUS DP, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SRP4	PROFIBUS DP, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SRP5	PROFIBUS DP, D-sub connector, 32 outputs, PNP (Negative common)
		EX260-SRP6	PROFIBUS DP, D-sub connector, 32 outputs, NPN (Positive common)
		EX260-SRP7	PROFIBUS DP, D-sub connector, 16 outputs, PNP (Negative common)
		EX260-SRP8	PROFIBUS DP, D-sub connector, 16 outputs, NPN (Positive common)
		EX260-SMJ1	CC-Link, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SMJ2	CC-Link, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SMJ3	CC-Link, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SMJ4	CC-Link, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SEC1	EtherCAT, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SEC2	EtherCAT, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SEC3	EtherCAT, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SEC4	EtherCAT, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SPN1	PROFINET, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SPN2	PROFINET, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SPN3	PROFINET, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SPN4	PROFINET, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SEN1	EtherNet/IP™, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SEN2	EtherNet/IP™, M12 connector, 32 outputs, NPN (Positive common)
		EX260-SEN3	EtherNet/IP™, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SEN4	EtherNet/IP™, M12 connector, 16 outputs, NPN (Positive common)
		EX260-SPL1	Ethernet POWERLINK, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SPL3	Ethernet POWERLINK, M12 connector, 16 outputs, PNP (Negative common)
		EX260-SIL1	IO-Link, M12 connector, 32 outputs, PNP (Negative common)
		EX260-SCT1	CC-Link IE TSN RJ45 connector, 32 outputs, PNP (Negative common)
		EX260-FPS1	PROFIsafe, M12 connector, 32 outputs, PNP (Negative common)
		EX260-FSE1	Safety over EtherCAT M12 connector, 32 outputs, PNP (Negative common)
⑦	SI unit	EX245-SPN1A	Communication connector: Push Pull connector (SCRJ): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN2A	Communication connector: Push Pull connector (RJ45): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN3A	Communication connector: M12 connector (4-pin, Socket, D-coded): 2 pcs./Power supply connector: 7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.
⑧	Digital input module	EX245-DX1	Digital input (16 inputs)
	Digital output module	EX245-DY1	Digital output (8 outputs)
	IO-Link module Note 1)	EX245-LA1	Port class A
EX245-LB1		Port class B	
⑨	End plate	EX245-EA2-5	
⑩	SI Unit	EX250-SAS3	AS-Interface, 8 in/8 out, 2 power supply systems, PNP (Negative common)
		EX250-SAS5	AS-Interface, 4 in/4 out, 2 power supply systems, PNP (Negative common)
		EX250-SAS7	AS-Interface, 8 in/8 out, 1 power supply system, PNP (Negative common)
		EX250-SAS9	AS-Interface, 4 in/4 out, 1 power supply system, PNP (Negative common)
		EX250-SDN1	DeviceNet®, PNP (Negative common)
		EX250-SEN1	EtherNet/IP™, PNP (Negative common)
⑪	Input block	EX250-IE1	M12, 2 inputs
		EX250-IE2	M12, 4 inputs
		EX250-IE3	M8, 4 inputs
⑫	End plate assembly	EX250-EA1	Direct mounting
⑬	SI Unit	EX126D-SMJ1	CC-Link, NPN (Positive common)
⑭	Terminal block plate	VVQC1000-74A-2	For EX126 SI Unit mounting
⑮	D-sub connector housing assembly	VVQC1000-F25-1	F kit, 25 pins
⑯	Flat ribbon cable housing assembly	VVQC1000-P26-1	P kit, 26 pins
		VVQC1000-P20-1	P kit, 20 pins
⑰	Terminal block box housing assembly	VVQC1000-T0-1	T kit
⑱	Lead wire housing assembly	VVQC1000-L25-0-1	L kit with 0.6 m lead wire
		VVQC1000-L25-1-1	L kit with 1.5 m lead wire
		VVQC1000-L25-2-1	L kit with 3.0 m lead wire
⑲	Circular connector housing assembly	VVQC1000-M26-1	M kit, 26 pins

Note 1) The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).

VQC5000 Series

Manifold Assembly Part No.

<Housing Assembly and SI Unit/Input Block>

No.	Description	Part no.	Note
②4	Compact wireless remote	EXW1-RDYPM5C	Without wireless adapter (Negative common)
		EXW1-RDYNM5C	Without wireless adapter (Positive common)
		EXW1-RDYPM5C-E	With wireless adapter (EXW1-A11E) (Negative common)
		EXW1-RDYNM5C-E	With wireless adapter (EXW1-A11E) (Positive common)
		EXW1-RDYPM5C-N	With wireless adapter (EXW1-A11N) (Negative common)
②5	Wireless adapter	EXW1-RDYNM5C-N	With wireless adapter (EXW1-A11N) (Positive common)
		EXW1-A11E	Min. 5/Max. 79 channels
		EXW1-A11N	Min. 15/Max. 79 channels

* The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

VQC5000 Series

Manifold Assembly Part No.

D-side end plate assembly

② D-side end plate assembly part no.

VVQC5000-3A-2

• Thread type

Nil	Rc
F	G
T	NPTF
N	NPT

U-side end plate assembly

② U-side end plate assembly part no.

VVQ5000-2A-1 -L-W

• Thread type

Nil	Rc
F	G
T	NPTF
N	NPT

Manifold block assembly

② Manifold block assembly part no.

VVQC5000-1 A-D-C6

• Type

A For 1 station

Note) Tie-rods (2 pcs.)
for additional
stations included.

• Wiring specifications

D	Double wiring
S	Single wiring

• Thread type
(Thread port only)

Nil	Rc
F	G
T	NPTF
N	NPT

• Port size

Symbol	Port size
03	3/8"
04	1/2"
B	1/2" bottom ported








② Tie-rod assembly part no. (2 units)

VQC5000 VVQC5000-TR-

Note 1) Please order when reducing the number
of manifold stations. When increasing
the number of stations, additional orders
are not required since they are included
in the manifold block assembly.

Note 2) Number of stations, 02 to 12

     List of Valves, Options, and Mounting Bolts

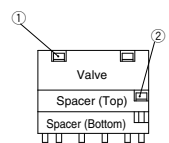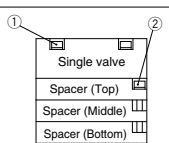Number of options	Valve and options	Bolt part no. Proper tightening torque: 1 to 1.8 N·m	Qty (pcs)	Note	Option mounting diagram
0	Single valve	AXT632-25-4 (M4 x 50)	4		
	Blanking plate (VVQ5000-10A- $\frac{1}{5}$)	AXT632-25-8 (M4 x 17)	4	For manifold	
1	Valve + Individual SUP spacer (VVQ5000-P- $\frac{1}{5}$ - $\frac{03}{04}$)	① AXT632-25-5 (M4 x 82) ② AXT632-25-10 (M4 x 34)	4 2	For manifold	
	Valve + Individual EXH spacer (VVQ5000-R- $\frac{1}{5}$ - $\frac{03}{04}$)	① AXT632-25-5 (M4 x 82) ② AXT632-25-10 (M4 x 34)	4 2	For manifold	
	Valve + Restrictor spacer (VVQ5000-20A- $\frac{1}{5}$)	① AXT632-25-5 (M4 x 82) ② AXT632-25-10 (M4 x 34)	4 2	Not necessary when mounting the sub-plate.	
	Valve + Release valve spacer (VVQ5000-24A- $\frac{1}{5}$ D)	① AXT632-25-5 (M4 x 82) ② AXT632-25-10 (M4 x 34)	4 2	For manifold	
	Valve + Double check spacer with residual pressure exhaust (VVQ5000-25A- $\frac{1}{5}$)	① AXT632-25-6 (M4 x 114) ② AXT632-66-1 (M4 x 64) (Note 2)	4 2	Not necessary when mounting the sub-plate.	
	Valve + SUP stop valve spacer (VVQ5000-37A- $\frac{1}{5}$)	① AXT632-25-5 (M4 x 82) ② AXT632-25-10 (M4 x 34)	4 2	Not necessary when mounting the sub-plate.	
	Valve + Interface regulator (ARBQ5000-00- $\frac{03}{04}$ - $\frac{1}{5}$)	① AXT632-25-6 (M4 x 114) ② AXT632-66-1 (M4 x 64)	4 2	Not necessary when mounting the sub-plate.	
	Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-25-4 (M4 x 50) ② AXT632-25-10 (M4 x 34)	4 2	For manifold	
2	Valve + Individual SUP + Individual EXH (Top) (Bottom) (Top)	① AXT632-25-6 (M4 x 114) ② AXT632-25-11 (M4 x 66)	4 2	For manifold	
	Valve + Restrictor + Individual SUP or Individual EXH (Top) (Bottom) (Bottom)	① AXT632-25-6 (M4 x 114) ② AXT632-25-11 (M4 x 66)	4 2	For manifold * The individual EXH cannot be mounted on the top.	
	Valve + SUP stop valve + Individual SUP, Individual EXH or Restrictor (Bottom)	① AXT632-25-6 (M4 x 114) ② AXT632-25-11 (M4 x 66)	4 2	For manifold	
	Valve + Double check spacer with + Individual SUP or residual pressure exhaust (Top) (Bottom)	① AXT632-25-7 (M4 x 146) ② AXT632-66-2 (M4 x 96) (Note 2)	4 2	For manifold	
	Valve + Interface regulator + Double check spacer with residual pressure exhaust (Top) (Bottom)	① AXT632-25-14 (M4 x 178) ② AXT632-66-3 (M4 x 128)	4 2	For manifold	
	Valve + Interface regulator + Individual SUP, Individual EXH or Restrictor (Bottom)	① AXT632-25-7 (M4 x 146) ② AXT632-66-2 (M4 x 96)	4 2	For manifold * The individual EXH and restrictor can be mounted on the top.	
	Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-25-5 (M4 x 82) ② AXT632-25-11 (M4 x 66)	4 2	For manifold	
	Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-25-5 (M4 x 82) ② AXT632-25-11 (M4 x 66)	4 2	For manifold	
3	Valve + SUP stop valve (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-25-7 (M4 x 146) ② AXT632-25-12 (M4 x 98)	4 2	For manifold	
	Valve + Double check spacer with residual pressure exhaust (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-25-14 (M4 x 178) ② AXT632-66-3 (M4 x 128) (Note 2)	4 2	For manifold	
	Valve + Spacer (Top): Interface regulator Spacer (Middle): "Individual SUP or Individual EXH"/"Restrictor" Spacer (Bottom): "Restrictor"/"Individual SUP or Individual EXH"	① AXT632-25-14 (M4 x 178) ② AXT632-66-3 (M4 x 128)	4 2	For manifold * The individual EXH and restrictor can be mounted on the top.	
	Valve + Spacer (Top): Interface regulator Spacer (Middle): "Individual SUP or Individual EXH"/"Restrictor" Spacer (Bottom): "Restrictor"/"Individual SUP or Individual EXH"	① AXT632-25-14 (M4 x 178) ② AXT632-66-3 (M4 x 128)	4 2	For manifold * The individual EXH and restrictor can be mounted on the top.	

Note 1) When the SUP stop valve and individual SUP are mounted, the stop valve is mounted on the top of the individual SUP.

Note 2) Proper tightening torque: 1 to 1.4 N·m



VQC5000 Series

Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Continuous Duty

⚠ Warning

When the product is continuously energized for a long period of time (10 minutes or longer), select the low wattage type (DC specification). The AC type cannot be continuously energized for 10 minutes or longer. If anything is unclear, please contact SMC.


Manual Override

⚠ Warning

Since connected equipment will operate when the manual override is activated, confirm that conditions are safe prior to activation.


■ VQC5000

Push type (Tool required)

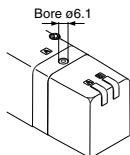


Push down the manual override button with a small screwdriver, etc., until it stops. The manual override will return when released.


Locking type (Tool required)

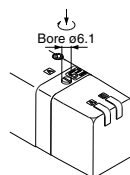

 
Push down the manual override button with a small flat head screwdriver until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.



Locking type (Manual)

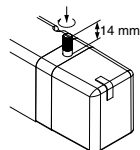

 Push down the manual override button with a small flat head screwdriver until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.



⚠ Caution


Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

Valve Mounting

⚠ Caution

After confirming that the gasket is installed correctly, securely tighten the mounting screws according to the tightening torque shown below.

Proper tightening torque [N·m]
1 to 1.8

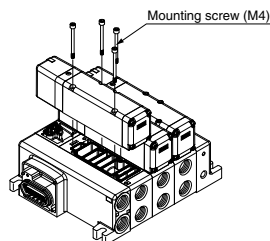


Lead Wire Connection

⚠ Caution

Plug-in sub-plate (With terminal block)

- If the junction cover ① of the sub-plate is removed, you can see the plug-in type terminal block ② mounted inside the sub-plate.

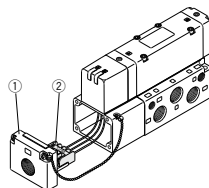

- The terminal block is marked as follows. Connect wiring to each of the power supply terminals.

Terminal block marking	A	COM	B	↑
Model				
VQC510 ⁰	A side	COM	—	—
VQC520 ⁰	A side	COM	B side	—
VQC5 ³ / ₅ 0 ⁰ ₁	A side	COM	B side	—

Note 1) There is no polarity. It can also be used as -COM.

Note 2) The sub-plate is double wired even for the VQC510⁰.

- Applicable terminal: 1.25-3s, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5



VQC5000 Series

Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>


Installation and Removal of Light Cover

⚠ Caution

Installation/Removal of light cover

• Removal

To remove the pilot cover pull it straight off. If it is pulled off at an angle, the pilot valve may be damaged or the protective O-ring may be scratched.

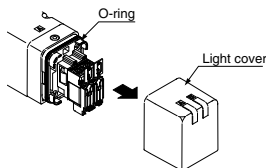

• Installation

Place the cover straight over the pilot assembly so that the pilot valve is not touched, and push it until the cover hook locks without twisting the protective O-ring. (When pushed in, the hook opens and locks automatically.)

Replacement of Pilot Valve


⚠ Caution

• Removal

1) Remove the mounting screw that holds the pilot valve using a small screwdriver.

• Installation

1) After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

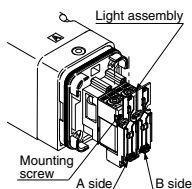

Proper tightening torque [N·m]


0.1 to 0.13

Plug Lead Type

Attaching and detaching connectors

• To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.


• To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

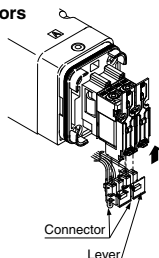


Note) Do not pull on the lead wires with excessive force. This can cause faulty and/or broken contacts.

Internal Wiring Specifications

 
⚠ Caution




DC: Single

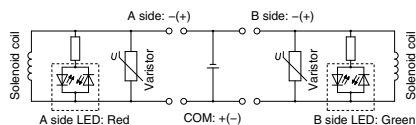

DC: Double

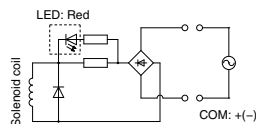

AC: Single

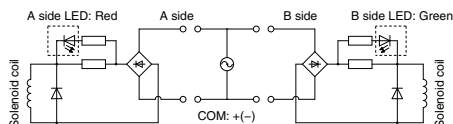

AC: Double

How to Calculate the Flow Rate

For obtaining the flow rate, refer to the [Web Catalog](#).

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.

EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

