

Model with Residual Pressure Release Function


Push-lock Type

Speed Controller with Pilot Check Valve

RoHS


New A stainless steel type (ASP-G series) has been added.
For secondary battery manufacturing processes

Model with Residual Pressure Release Function

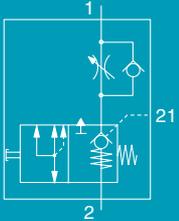

Residual pressure exhaust button

Cylinder pressure can be manually released.

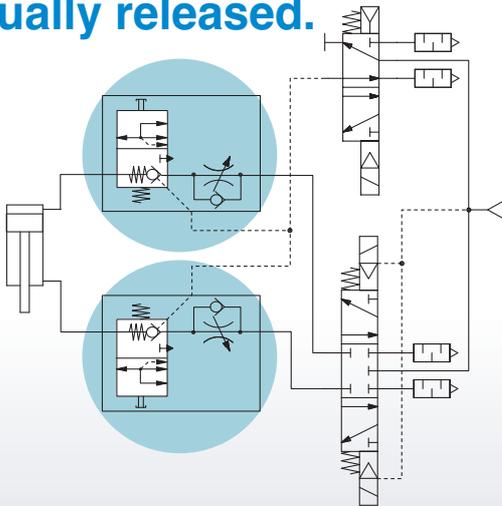


Model without Residual Pressure Release Function



Temporary intermediate stops are possible.*1

*1 Precise intermediate stops are not guaranteed.

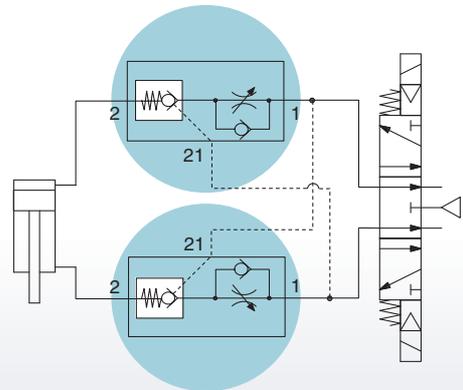

Variations

	Universal	Port size	Pilot port size	Applicable tubing O.D.	Metal material
				Metric size	
Horizontal		M5, 10-32UNF	4, 6, 8, 10, 12	4, 6, 8, 10, 12	Brass Stainless steel
		1/8, 1/4, 3/8, 1/2 (R, NPT, G)			
Vertical		M5, 10-32UNF	4, 6, 8, 10, 12	4, 6, 8, 10, 12	Brass
		1/8, 1/4, 3/8, 1/2 (G)			

ASP Series




CAT.EUS20-298Aa-UK

Horizontal and vertical types are available, which can be selected depending on the installation conditions.

Horizontal



Vertical

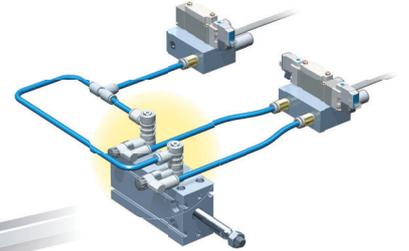

Easily mounted using a hexagon wrench

Mountable in narrow spaces



Metal material: Brass/Stainless steel



For the stainless steel type, copper (Cu) and zinc (Zn) are not used as main components in the metal materials.

Pilot Check Valve Variations by Function


Series	Pilot check valve	Pilot check valve + Residual pressure release valve	Pilot check valve + Speed controller	Pilot check valve + Speed controller + Residual pressure release valve	Page
Compact Type ASP 	—	—	●	●	p. 2
Compact Type AKP 	●	●	—	—	Catalogue on https://www.smc.eu
Metal Body Type AS-X785 	●	—	—	—	Catalogue on https://www.smc.eu

Speed Controller with Pilot Check Valve


ASP Series

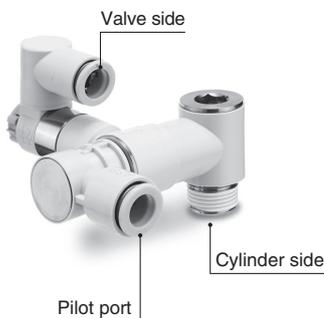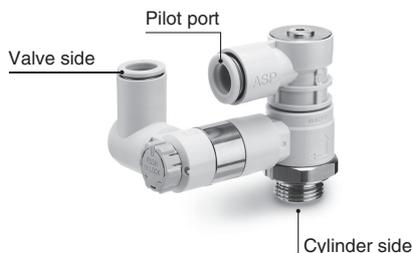

Symbol

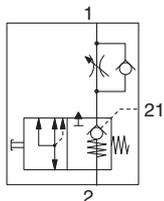

 Model with residual pressure release function



Model without residual pressure release function

Caution

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smc.eu>

Model

Vertical type

Port size	Pilot port size	Applicable tubing O.D.				
		Metric size				
		4	6	8	10	12
M5 x 0.8	Ø 4	●	●	—	—	—
10-32UNF		●	●	—	—	—
G1/8	Ø 6	—	●	—	—	—
G1/4	Ø 8	—	—	●	—	—
G3/8	Ø 10	—	—	—	●	—
G1/2	Ø 12	—	—	—	—	●

Horizontal type

Port size	Pilot port size	Applicable tubing O.D.				
		Metric size				
		4	6	8	10	12
M5 x 0.8	Ø 4	●	●	—	—	—
10-32UNF		●	●	—	—	—
R1/8	Ø 6	—	●	—	—	—
NPT1/8		—	●	—	—	—
G1/8		—	●	—	—	—
R1/4	Ø 8	—	—	●	—	—
NPT1/4		—	—	●	—	—
G1/4		—	—	●	—	—
R3/8	Ø 10	—	—	—	●	—
NPT3/8		—	—	—	●	—
G3/8		—	—	—	●	—
R1/2	Ø 12	—	—	—	—	●
NPT1/2		—	—	—	—	●
G1/2		—	—	—	—	●

Specifications

Fluid	Air
Proof pressure	1.05 MPa
Max. operating pressure	0.7 MPa
Min. operating pressure	0.1 MPa
Pilot check valve operating pressure	50 % or more of the cylinder supply pressure {0.1 (0.15* ¹) MPa or more}
Ambient and fluid temperatures	-5 to 60 °C (No freezing)
Applicable tubing material	Nylon, Soft nylon, Polyurethane, FEP, PFA* ²

*1 The value in brackets is for the AKP-□-M5/U10.

*2 Use caution at the max. operating pressure when using soft nylon or polyurethane tubing. (Refer to the Catalogue on <https://www.smc.eu> for details.)

Flow Rate and Sonic Conductance

Model		ASP-□-M5/U10	ASP-□-□01	ASP-□-□02	ASP-□-□03	ASP-□-□04
Tubing O.D.	Metric size	Ø 4 Ø 6	Ø 6	Ø 8	Ø 10	Ø 12
C values: Sonic conductance dm ³ /(s·bar)	Free flow	0.25	0.58	1.06	2.19	3.43
	Controlled flow	0.22	0.46	1.06	1.69	3.09
b values: Critical pressure ratio	Free flow	0.20	0.20	0.15	0.15	0.20
	Controlled flow	0.30	0.20	0.25	0.20	0.30
Q [l/min (ANR)]* ¹	Free flow	60	139	247	510	822
	Controlled flow	56	110	261	405	786

*1 These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

How to Order



Vertical type

ASP - UA 06 E - G 01



Horizontal type

ASP - UB 06 E - [] 01 S

• **Type**

U	Universal
----------	-----------

• **Piping type**

A	Vertical
B	Horizontal

• **Applicable tubing O.D.**

Metric size

04	∅ 4
06	∅ 6
08	∅ 8
10	∅ 10
12	∅ 12

* For selecting applicable tubing O.D., refer to the "Model" on page 2.

• **Residual pressure release**

—	Without
E	With

• **Seal method**

—	Without sealant
S	With sealant

* Select "—": Without sealant* for M5, 10-32UNF, and G thread types. Example) ASP-UA04E-G01

• **Port size**

M5*1	M5 x 0.8
U10*1	10-32UNF
01	1/8
02	1/4
03	3/8
04	1/2

*1 Use the M5 or U10 port size model in a circuit that uses an exhaust center valve. These sizes cannot be used in a circuit that uses a closed center valve only because the responsiveness of the intermediate stop of the actuator may be slow. Therefore, if you want to use those models in a circuit with a closed center valve only, contact us.

• **Thread type**



—	R
N	NPT
G	G

* Select (R: —) for connection thread port size M5 or U10.

Construction

Vertical Universal type

Seal method: Gasket seal
For M5, 10-32UNF


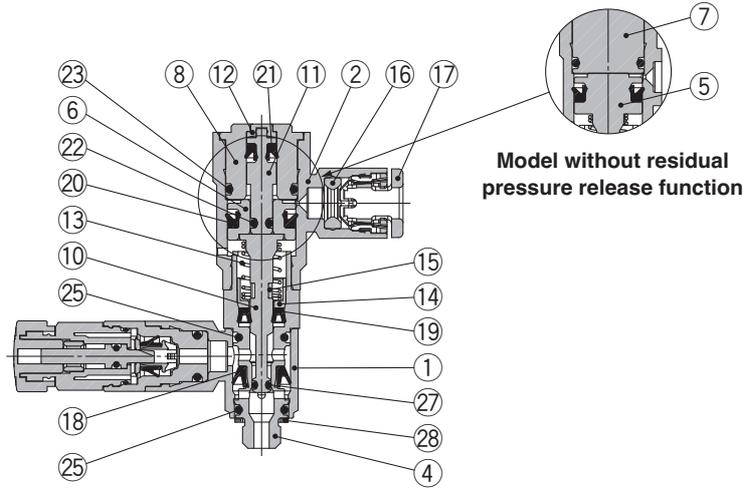
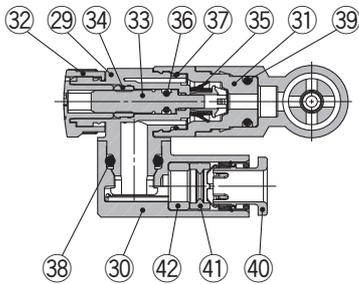


Model without residual pressure release function

Model with residual pressure release function

Horizontal Universal type

Seal method: Gasket seal
For M5, 10-32UNF

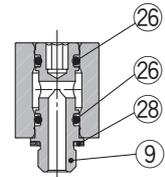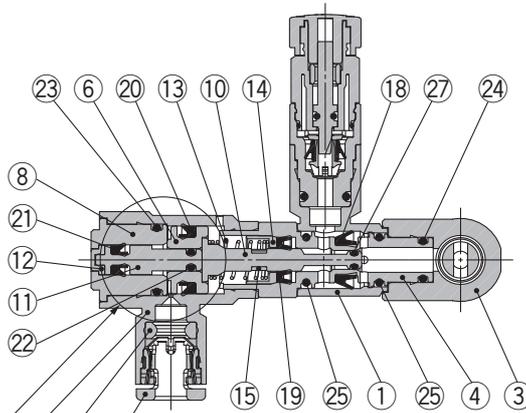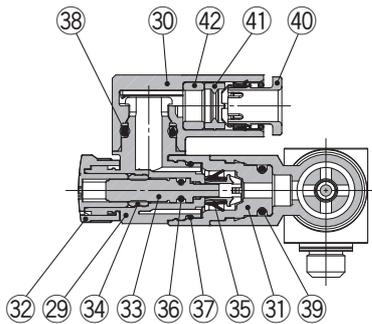

Model with residual pressure release function

Model without residual pressure release function

Component Parts

No.	Description	Material	Note
1	Body A	PBT	
2	Pilot body	PBT	
3	End body	PBT	
4	Body B	Brass	Electroless nickel plating
5	Piston A	Brass	Electroless nickel plating
6	Piston B	Brass	Electroless nickel plating
7	End cover A	Brass	Electroless nickel plating
8	End cover B	Brass	Electroless nickel plating
9	Stud	Brass	Electroless nickel plating
10	Piston rod	Brass	Electroless nickel plating
11	Push rod	Aluminium alloy	
12	Push rod cover	PBT	
13	Spring	Stainless steel	
14	Seal retainer	Brass	Electroless nickel plating
15	Exhaust ring	POM	
16	Seal	NBR	
17	Cassette	—	
18	Seal	HNBR	
19	Seal	NBR	
20	Seal	NBR	
21	Seal	NBR	



No.	Description	Material	Note
22	O-ring	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	O-ring	NBR	
26	O-ring	NBR	
27	O-ring	NBR	
28	Gasket	NBR/Stainless steel	
29	Body A	PBT	
30	Elbow body	PBT	
31	Body B	Brass	Electroless nickel plating
32	Knob	POM	
33	Needle	PBT	
34	Needle guide	Brass	Electroless nickel plating
35	Seal	HNBR	
36	O-ring	NBR	
37	O-ring	NBR	
38	O-ring	NBR	
39	O-ring	NBR	
40	Cassette	—	
41	Seal	NBR	
42	Spacer	PBT	

ASP Series

Construction


Vertical Universal type

Seal method: Face seal
For G

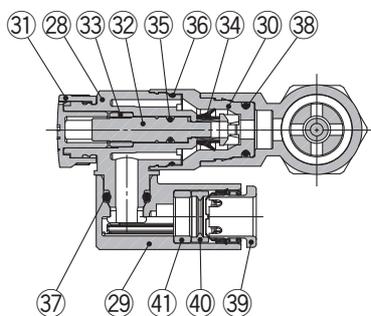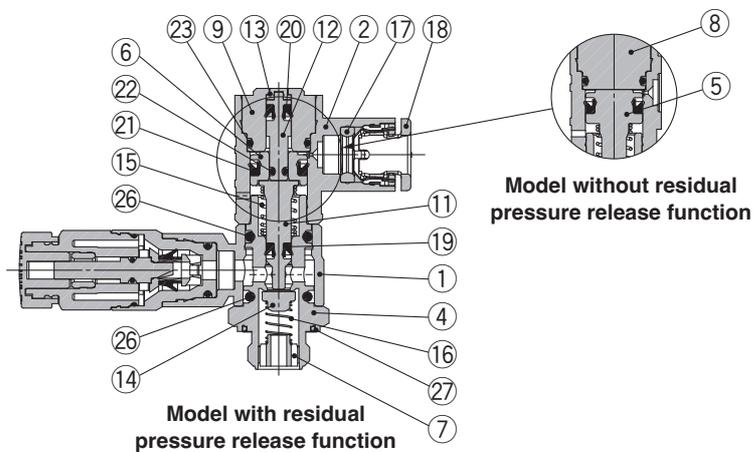

Horizontal Universal type


Seal method: Face seal
For G

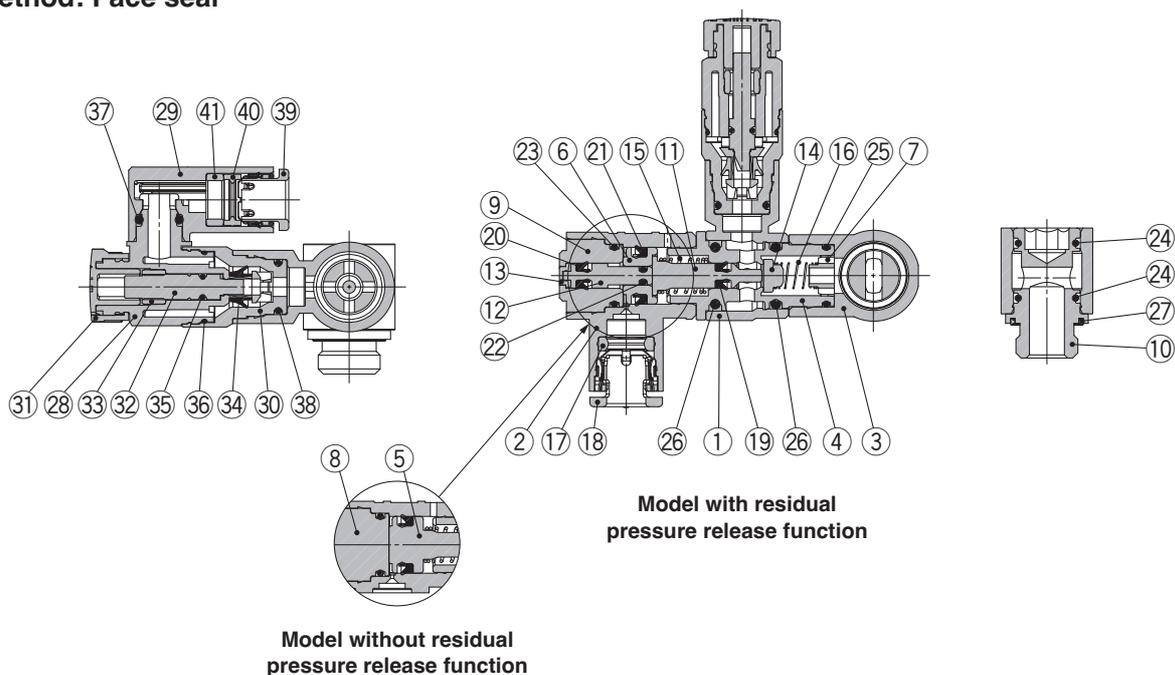

Construction

Horizontal Universal type

Seal method: Sealant
For R, NPT thread

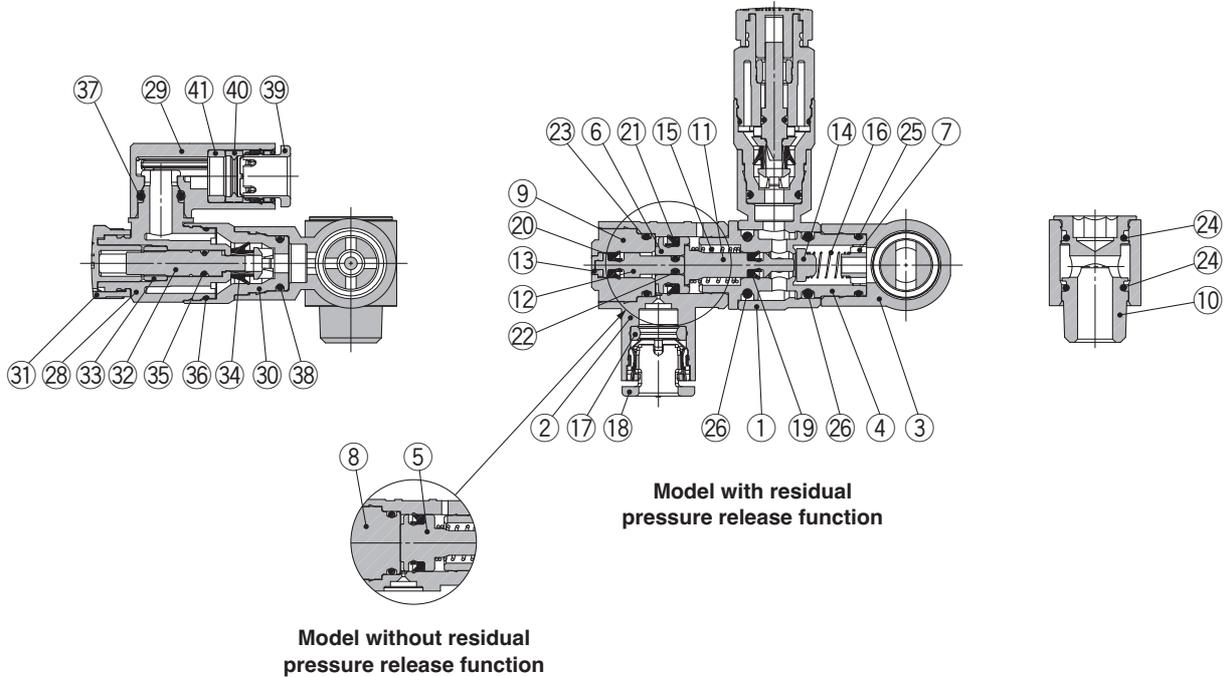

Component Parts

No.	Description	Material	Note
1	Body A	PBT	
2	Pilot body	PBT	
3	End body	PBT	
4	Body B	Brass	Electroless nickel plating
5	Piston A	Brass	Electroless nickel plating
6	Piston B	Brass	Electroless nickel plating
7	Spring guide	Brass	Electroless nickel plating
8	End cover A	Brass	Electroless nickel plating
9	End cover B	Brass	Electroless nickel plating
10	Stud	Brass	Electroless nickel plating
11	Piston rod	Brass	Electroless nickel plating
12	Push rod	Aluminium alloy	
13	Push rod cover	PBT	
14	Valve	NBR	
15	Spring	Stainless steel	
16	Spring	Stainless steel	
17	Seal	NBR	
18	Cassette	—	
19	Seal	NBR	
20	Seal	NBR	
21	Seal	NBR	


No.	Description	Material	Note
22	O-ring	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	O-ring	NBR	
26	O-ring	NBR	
27	Seal ring	NBR	
28	Body A	PBT	
29	Elbow body	PBT	
30	Body B	Brass	Electroless nickel plating
31	Knob	POM	
32	Needle	PBT	
33	Needle guide	Brass	Electroless nickel plating
34	Seal	HNBR	
35	O-ring	NBR	
36	O-ring	NBR	
37	O-ring	NBR	
38	O-ring	NBR	
39	Cassette	—	
40	Seal	NBR	
41	Spacer	PBT	

ASP Series

Dimensions


Horizontal Universal type

Seal method: Gasket seal
For M5, 10-32UNF

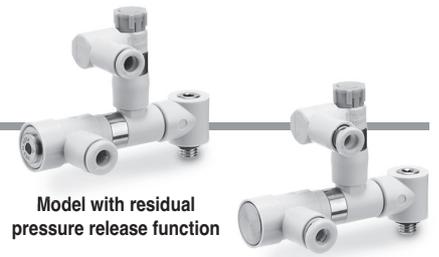

Model with residual pressure release function

Model without residual pressure release function

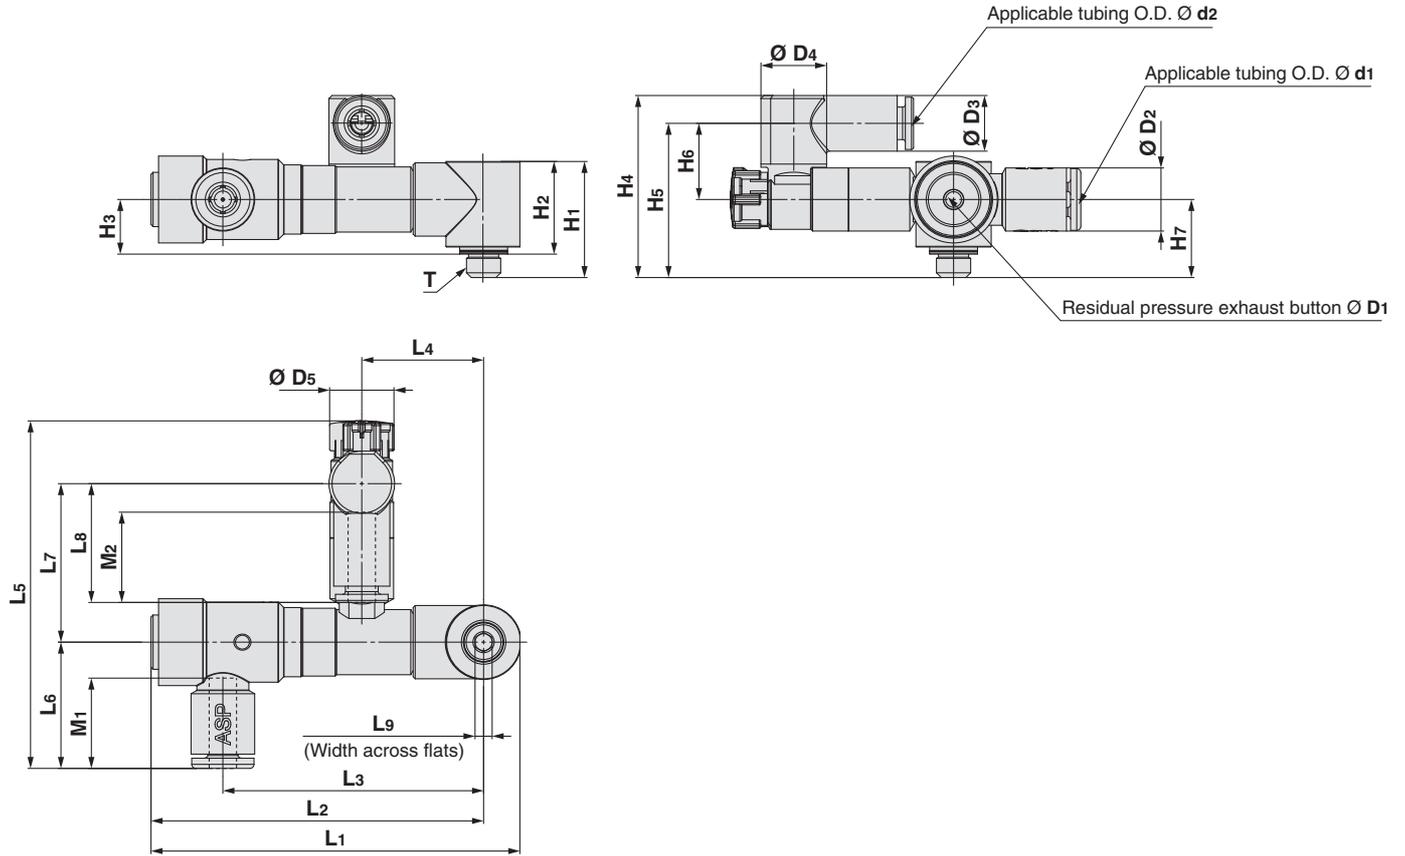


Metric Size

[mm]

Model	d1	d2	T	D1	D2	D3	D4	D5	L1	L2	L3	L4	L5		
													Unlocked	Locked	
ASP-UB04E-M5	4	4	M5 x 0.8	2.9	9.3	8.2	9.6	9.4	53.9	48.6	38.1	17.8	52.3	51.2	
ASP-UB04E-U10			10/32UNF		9.3	8.2	9.6	9.4	53.9	48.6	38.1	17.8	52.3	51.2	
ASP-UB06E-M5		6	M5 x 0.8		9.3	10.4	9.6	9.4	53.9	48.6	38.1	17.8	52.3	51.2	
ASP-UB06E-U10			10/32UNF		9.3	10.4	9.6	9.4	53.9	48.6	38.1	17.8	52.3	51.2	
ASP-UB04-M5		4	4	M5 x 0.8	—	9.3	8.2	9.6	9.4	52.8	47.5	38.1	17.8	52.3	51.2
ASP-UB04-U10				10/32UNF		9.3	8.2	9.6	9.4	52.8	47.5	38.1	17.8	52.3	51.2
ASP-UB06-M5			6	M5 x 0.8		9.3	10.4	9.6	9.4	52.8	47.5	38.1	17.8	52.3	51.2
ASP-UB06-U10				10/32UNF		9.3	10.4	9.6	9.4	52.8	47.5	38.1	17.8	52.3	51.2

Model	L6	L7	L8	L9 (Width across flats)	H1	H2	H3	H4	H5	H6	H7	M1	M2	Weight [g]
ASP-UB04E-M5	18.6	23.3	17.5	2.5	17.1	13.7	8.1	26.8	22.7	11.2	11.5	12.7	13.3	26
ASP-UB04E-U10	18.6	23.3	17.5	2.5	17.1	13.7	8.1	26.8	22.7	11.2	11.5	12.7	13.3	25
ASP-UB06E-M5	18.6	23.3	20.2	2.5	17.1	13.7	8.1	27.9	22.7	11.2	11.5	12.7	13.3	26
ASP-UB06E-U10	18.6	23.3	20.2	2.5	17.1	13.7	8.1	27.9	22.7	11.2	11.5	12.7	13.3	26
ASP-UB04-M5	18.6	23.3	17.5	2.5	17.1	13.7	8.1	26.8	22.7	11.2	11.5	12.7	13.3	26
ASP-UB04-U10	18.6	23.3	17.5	2.5	17.1	13.7	8.1	26.8	22.7	11.2	11.5	12.7	13.3	26
ASP-UB06-M5	18.6	23.3	20.2	2.5	17.1	13.7	8.1	27.9	22.7	11.2	11.5	12.7	13.3	27
ASP-UB06-U10	18.6	23.3	20.2	2.5	17.1	13.7	8.1	27.9	22.7	11.2	11.5	12.7	13.3	27

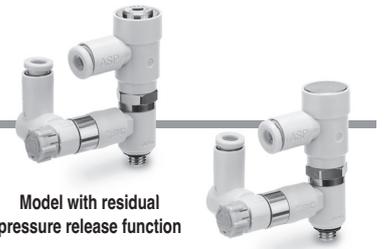



Model with residual pressure release function

Model without residual pressure release function

Dimensions

Vertical Universal type

Seal method: Gasket seal
For M5, 10-32UNF

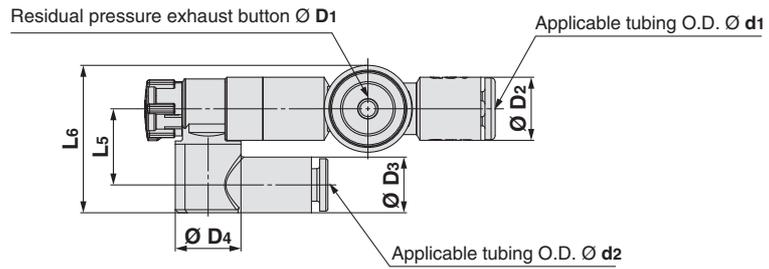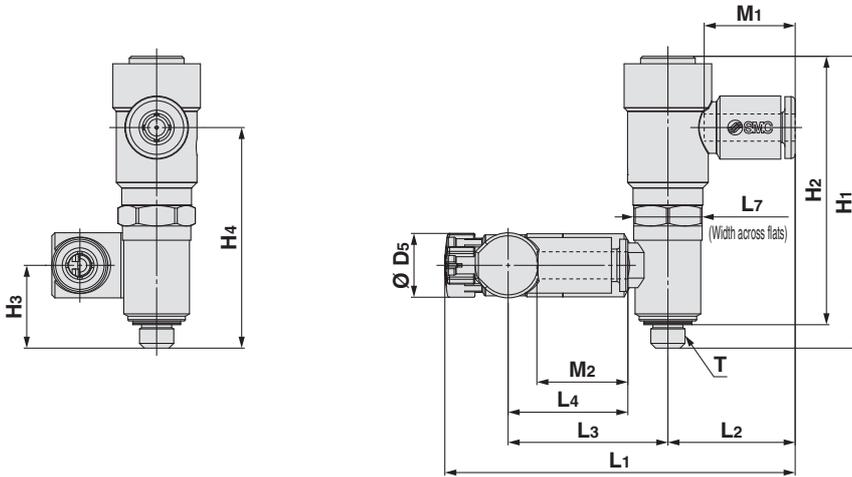

Metric Size

[mm]

Model	d1	d2	T	D1	D2	D3	D4	D5	L1		L2	L3
									Unlocked	Locked		
ASP-UA04E-M5	4	4	M5 x 0.8	2.9	9.3	8.2	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA04E-U10			10/32UNF		9.3	8.2	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA06E-M5		6	M5 x 0.8	—	9.3	10.4	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA06E-U10			10/32UNF		9.3	10.4	9.6	9.4	52.3	51.2	18.6	23.4
ASP-UA04-M5		4	M5 x 0.8	—	9.3	8.2	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA04-U10			10/32UNF		9.3	8.2	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA06-M5		6	M5 x 0.8	—	9.3	10.4	9.6	9.4	52.3	51.2	18.6	23.3
ASP-UA06-U10			10/32UNF		9.3	10.4	9.6	9.4	52.3	51.2	18.6	23.4


Model	L4	L5	L6	L7 (Width across flats)	H1	H2	H3	H4	M1	M2	Weight [g]
ASP-UA04E-M5	17.5	11.2	21.7	10	43.0	39.6	12.2	32.5	12.7	13.3	22
ASP-UA04E-U10	17.5	11.2	21.7	10	43.0	39.6	12.2	32.5	12.7	13.3	22
ASP-UA06E-M5	20.2	11.2	22.8	10	43.0	39.6	12.2	32.5	12.7	13.3	22
ASP-UA06E-U10	20.4	11.2	22.8	10	43.0	39.6	12.2	32.5	12.7	13.3	22
ASP-UA04-M5	17.5	11.2	21.7	10	41.9	38.5	12.2	32.5	12.7	13.3	23
ASP-UA04-U10	17.5	11.2	21.7	10	41.9	38.5	12.2	32.5	12.7	13.3	23
ASP-UA06-M5	20.2	11.2	22.8	10	41.9	38.5	12.2	32.5	12.7	13.3	23
ASP-UA06-U10	20.4	11.2	22.8	10	41.9	38.5	12.2	32.5	12.7	13.3	23

ASP Series

Dimensions

Horizontal Universal type

Seal method: Sealant
For R, NPT thread

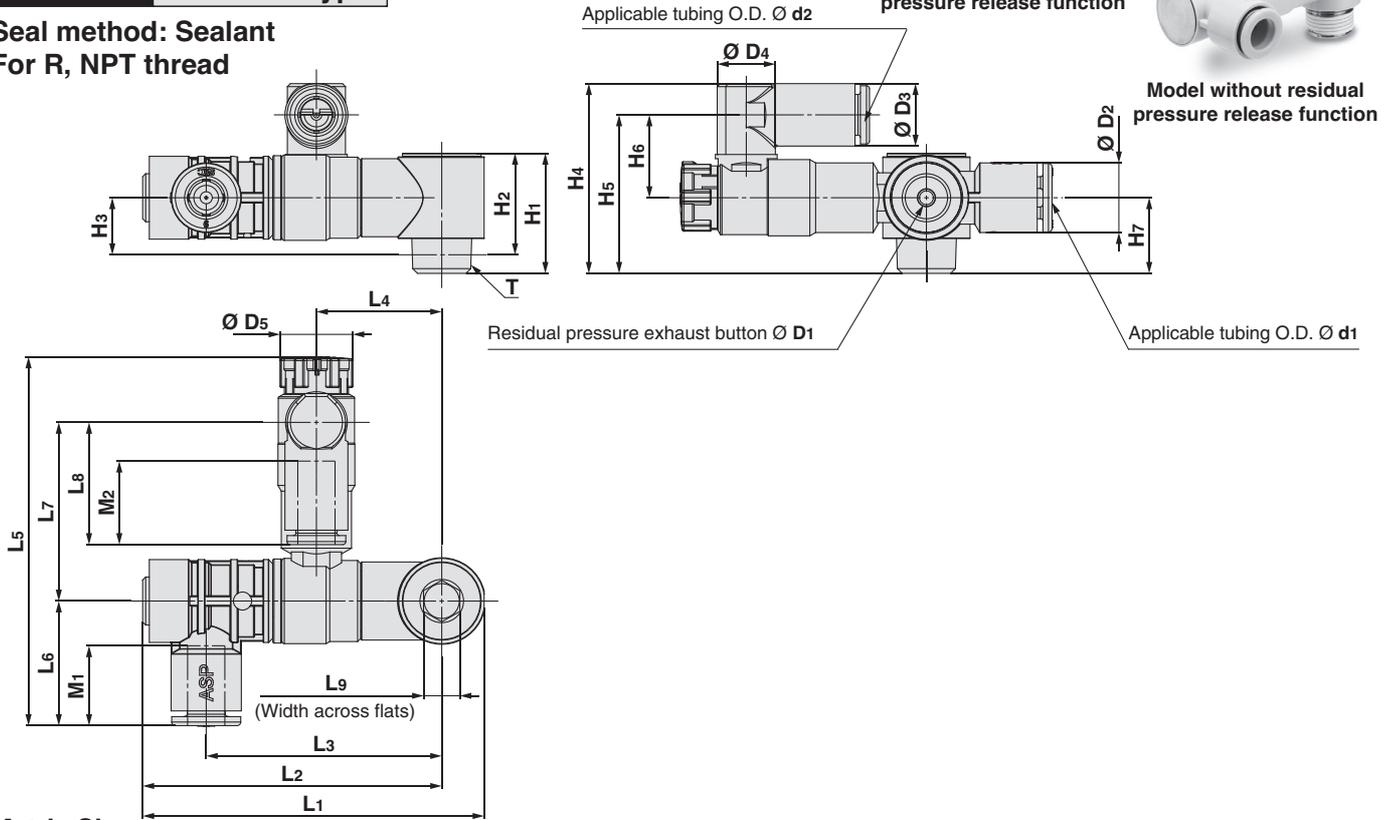

Metric Size



Model	d1	d2	T	D1	D2	D3	D4	D5	L1	L2	L3	L4	L5 [mm]	
													Unlocked	Locked
ASP-UB06E-01(S)	6	6	R1/8	2.9	11.6	10.4	9.6	12	56.4	49.4	38.9	20.7	63.0	61.6
ASP-UB08E-02(S)	8	8	R1/4		15.2	13.2	12.9	13	65.5	56.8	46.7	26.8	79.3	77.7
ASP-UB10E-03(S)	10	10	R3/8		18.5	15.9	17.4	16.6	77.6	67.1	56.5	33.0	91.3	89.7
ASP-UB12E-04(S)	12	12	R1/2		21.7	18.5	21.0	18.8	93.6	80.8	69.4	38.6	106.5	104.9
ASP-UB06-01(S)	6	6	R1/8	—	11.6	10.4	9.6	12	55.3	48.3	38.9	20.7	63.0	61.6
ASP-UB08-02(S)	8	8	R1/4		15.2	13.2	12.9	13	64.6	55.9	46.7	26.8	79.3	77.7
ASP-UB10-03(S)	10	10	R3/8		18.5	15.9	17.4	16.6	76.6	66.1	56.5	33.0	91.3	89.7
ASP-UB12-04(S)	12	12	R1/2		21.7	18.5	21.0	18.8	92.6	79.8	69.4	38.6	106.5	104.9
ASP-UB06E-N01(S)	6	6	NPT1/8	2.9	11.6	10.4	9.6	12	56.4	49.4	38.9	20.7	63.0	61.6
ASP-UB08E-N02(S)	8	8	NPT1/4		15.2	13.2	12.9	13	65.5	56.8	46.7	26.8	79.3	77.7
ASP-UB10E-N03(S)	10	10	NPT3/8		18.5	15.9	17.4	16.6	77.6	67.1	56.5	33.0	91.3	89.7
ASP-UB12E-N04(S)	12	12	NPT1/2		21.7	18.5	21.0	18.8	93.6	80.8	69.4	38.6	106.5	104.9
ASP-UB06-N01(S)	6	6	NPT1/8	—	11.6	10.4	9.6	12	55.3	48.3	38.9	20.7	63.0	61.6
ASP-UB08-N02(S)	8	8	NPT1/4		15.2	13.2	12.9	13	64.6	55.9	46.7	26.8	79.3	77.7
ASP-UB10-N03(S)	10	10	NPT3/8		18.5	15.9	17.4	16.6	76.6	66.1	56.5	33.0	91.3	89.7
ASP-UB12-N04(S)	12	12	NPT1/2		21.7	18.5	21.0	18.8	92.6	79.8	69.4	38.6	106.5	104.9

Model	L6	L7	L8	L9 (Width across flats)	H1	H2	H3	H4	H5	H6	H7	M1	M2	Weight [g]
ASP-UB06E-01(S)	20.8	29.8	20.4	6	20.0	16.9	9.5	31.6	26.4	13.8	12.6	13.9	13.3	44
ASP-UB08E-02(S)	27.2	37.9	23.5	8	30.0	25.3	14.8	45.0	38.4	18.9	19.5	18.7	14.2	95
ASP-UB10E-03(S)	31.9	45.6	26.1	10	37.7	32.6	18.6	54.6	46.6	22.9	23.7	21.0	15.6	162
ASP-UB12E-04(S)	35.3	55.3	28.3	10	45.2	38.8	22.8	64.6	55.3	26.1	29.2	22.0	17.0	292
ASP-UB06-01(S)	20.8	29.8	20.4	6	20.0	16.9	9.5	31.6	26.4	13.8	12.6	13.9	13.3	45
ASP-UB08-02(S)	27.2	37.9	23.5	8	30.0	25.3	14.8	45.0	38.4	18.9	19.5	18.7	14.2	96
ASP-UB10-03(S)	31.9	45.6	26.1	10	37.7	32.6	18.6	54.6	46.6	22.9	23.7	21.0	15.6	163
ASP-UB12-04(S)	35.3	55.3	28.3	10	45.2	38.8	22.8	64.6	55.3	26.1	29.2	22.0	17.0	293
ASP-UB06E-N01(S)	20.8	29.8	20.4	5.56	20.0	16.8	9.4	31.6	26.4	13.8	12.6	13.9	13.3	45
ASP-UB08E-N02(S)	27.2	37.9	23.5	7.938	30.3	25.9	16.4	46.3	39.7	18.9	20.8	18.7	14.2	96
ASP-UB10E-N03(S)	31.9	45.6	26.1	9.525	37.4	32.7	20.2	55.8	47.8	22.9	24.9	21.0	15.6	163
ASP-UB12E-N04(S)	35.3	55.3	28.3	9.525	44.6	38.2	23.7	65.5	56.2	26.1	30.1	22.0	17.0	291
ASP-UB06-N01(S)	20.8	29.8	20.4	5.56	20.0	16.8	9.4	31.6	26.4	13.8	12.6	13.9	13.3	45
ASP-UB08-N02(S)	27.2	37.9	23.5	7.938	30.3	25.9	16.4	46.3	39.7	18.9	20.8	18.7	14.2	97
ASP-UB10-N03(S)	31.9	45.6	26.1	9.525	37.4	32.7	20.2	55.8	47.8	22.9	24.9	21.0	15.6	163
ASP-UB12-N04(S)	35.3	55.3	28.3	9.525	44.6	38.2	23.7	65.5	56.2	26.1	30.1	22.0	17.0	292

Dimensions

Vertical Universal type

Seal method: Face seal
For G

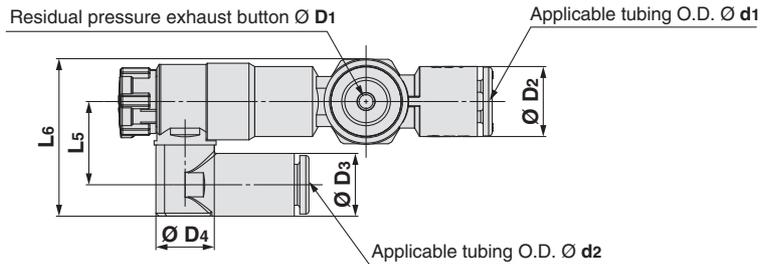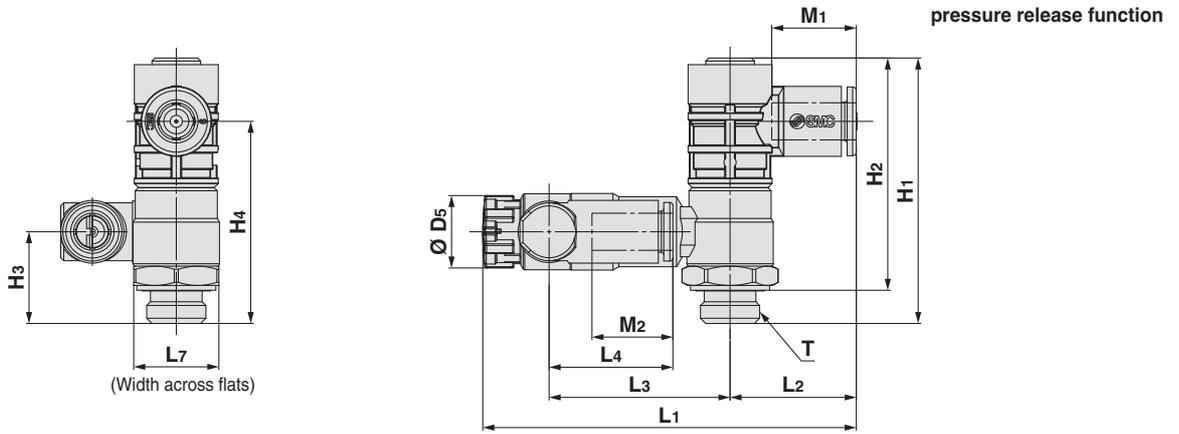

Metric Size

[mm]

Model	d1	d2	T	D1	D2	D3	D4	D5	L1		L2	L3
									Unlocked	Locked		
ASP-UA06E-G01	6	6	G1/8	2.9	11.6	10.4	9.6	12	63.0	61.6	20.8	29.8
ASP-UA08E-G02	8	8	G1/4		15.2	13.2	12.9	13	79.3	77.7	27.2	37.9
ASP-UA10E-G03	10	10	G3/8		18.5	15.9	17.4	16.6	91.3	89.7	31.9	45.6
ASP-UA12E-G04	12	12	G1/2		21.7	18.5	21	18.8	106.5	104.9	35.3	55.3
ASP-UA06-G01	6	6	G1/8	—	11.6	10.4	9.6	12	63.0	61.6	20.8	29.8
ASP-UA08-G02	8	8	G1/4		15.2	13.2	12.9	13	79.3	77.7	27.2	37.9
ASP-UA10-G03	10	10	G3/8		18.5	15.9	17.4	16.6	91.3	89.7	31.9	45.6
ASP-UA12-G04	12	12	G1/2		21.7	18.5	21	18.8	106.5	104.9	35.3	55.3


Model	L4	L5	L6	L7 (Width across flats)	H1	H2	H3	H4	M1	M2	Weight [g]
ASP-UA06E-G01	20.4	13.8	26	14	44.0	38.5	15.2	33.5	13.9	13.3	36
ASP-UA08E-G02	23.5	18.9	35	19	48.1	41.6	17.1	38	18.7	14.2	74
ASP-UA10E-G03	26.1	22.9	42.9	24	56.7	49.2	21.8	46.1	21.0	15.6	122
ASP-UA12E-G04	28.3	26.1	50.4	30	67.8	58.8	25.7	56.4	22.0	17.0	211
ASP-UA06-G01	20.4	13.8	26	14	42.9	37.4	15.2	33.5	13.9	13.3	37
ASP-UA08-G02	23.5	18.9	35	19	47.2	40.7	17.1	38	18.7	14.2	74
ASP-UA10-G03	26.1	22.9	42.9	24	55.7	48.2	21.8	46.1	21.0	15.6	123
ASP-UA12-G04	28.3	26.1	50.4	30	66.8	57.8	25.7	56.4	22.0	17.0	211

ASP Series

Dimensions



Horizontal Universal type

Seal method: Face seal
For G

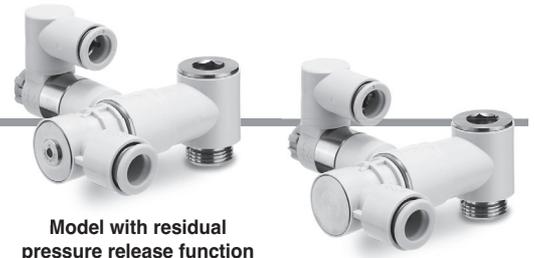

Model with residual pressure release function

Model without residual pressure release function

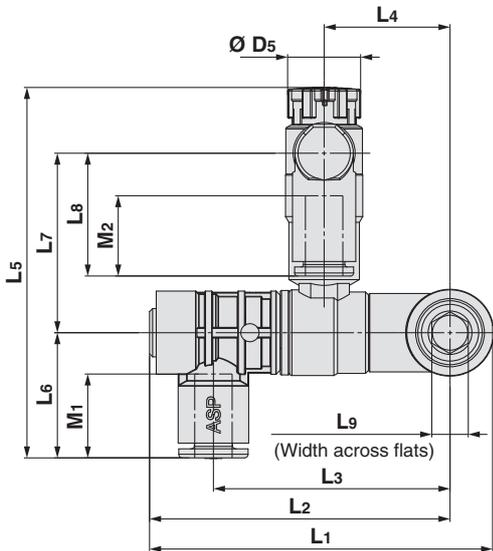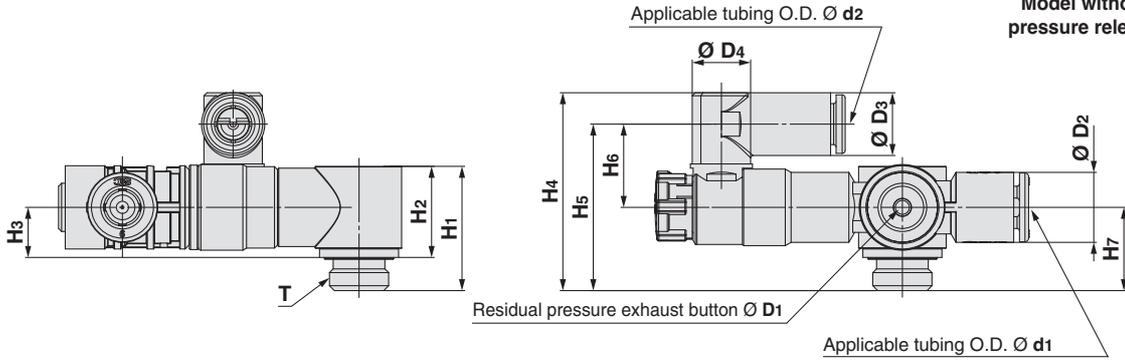

Metric Size


[mm]

Model	d1	d2	T	D1	D2	D3	D4	D5	L1	L2	L3	L4	L5	
													Unlocked	Locked
ASP-UB06E-G01	6	6	G1/8	2.9	11.6	10.4	9.6	12	56.4	49.4	38.9	20.7	63.0	61.6
ASP-UB08E-G02	8	8	G1/4		15.2	13.2	12.9	13	65.5	56.8	46.7	26.8	79.3	77.7
ASP-UB10E-G03	10	10	G3/8		18.5	15.9	17.4	16.6	77.6	67.1	56.5	33.0	91.3	89.7
ASP-UB12E-G04	12	12	G1/2		21.7	18.5	21.0	18.8	93.6	80.8	69.4	38.6	106.5	104.9
ASP-UB06-G01	6	6	G1/8	—	11.6	10.4	9.6	12	55.3	48.3	38.9	20.7	63.0	61.6
ASP-UB08-G02	8	8	G1/4		15.2	13.2	12.9	13	64.6	55.9	46.7	26.8	79.3	77.7
ASP-UB10-G03	10	10	G3/8		18.5	15.9	17.4	16.6	76.6	66.1	56.5	33.0	91.3	89.7
ASP-UB12-G04	12	12	G1/2		21.7	18.5	21.0	18.8	92.6	79.8	69.4	38.6	106.5	104.9


Model	L6	L7	L8	L9 (Width across flats)	H1	H2	H3	H4	H5	H6	H7	M1	M2	Weight [g]
ASP-UB06E-G01	20.8	29.8	20.4	6	20.6	15.1	8.3	32.8	27.6	13.8	13.8	13.9	13.3	44
ASP-UB08E-G02	27.2	37.9	23.5	8	27.8	21.3	11.8	43.8	37.2	18.9	18.3	18.7	14.2	93
ASP-UB10E-G03	31.9	45.6	26.1	10	34.8	27.3	14.8	53.2	45.2	22.9	22.3	21.0	15.6	157
ASP-UB12E-G04	35.3	55.3	28.3	10	41.0	32.0	17.5	61.9	52.6	26.1	26.5	22.0	17.0	26
ASP-UB06-G01	20.8	29.8	20.4	6	20.6	15.1	8.3	32.8	27.6	13.8	13.8	13.9	13.3	45
ASP-UB08-G02	27.2	37.9	23.5	8	27.8	21.3	11.8	43.8	37.2	18.9	18.3	18.7	14.2	94
ASP-UB10-G03	31.9	45.6	26.1	10	34.8	27.3	14.8	53.2	45.2	22.9	22.3	21.0	15.6	158
ASP-UB12-G04	35.3	55.3	28.3	10	41.0	32.0	17.5	61.9	52.6	26.1	26.5	22.0	17.0	283

Speed Controller with Pilot Check Valve Stainless Steel Type

ASP-G Series

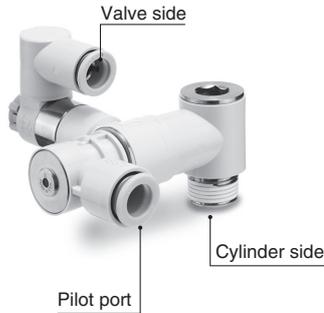

Symbol

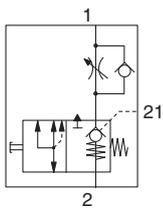

Model with residual pressure release function

Model

Horizontal type

Port size	Pilot port size	Applicable tubing O.D.				
		Metric size				
		4	6	8	10	12
M5 x 0.8	Ø 4	●	●	—	—	—
10-32UNF		●	●	—	—	—
R1/8	Ø 6	—	●	—	—	—
NPT1/8		—	●	—	—	—
G1/8	Ø 8	—	●	—	—	—
R1/4		—	—	●	—	—
NPT1/4	Ø 10	—	—	●	—	—
G1/4		—	—	●	—	—
R3/8	Ø 12	—	—	—	●	—
NPT3/8		—	—	—	●	—
G3/8	Ø 12	—	—	—	●	—
R1/2		—	—	—	—	●
NPT1/2	Ø 12	—	—	—	—	●
G1/2		—	—	—	—	●

Specifications

Fluid	Air
Proof pressure	1.05 MPa
Max. operating pressure	0.7 MPa
Min. operating pressure	0.1 MPa
Pilot check valve operating pressure	50 % or more of the cylinder supply pressure {0.1 (0.15*1) MPa or more}
Ambient and fluid temperatures	-5 to 60 °C (No freezing)
Applicable tubing material	Nylon, Soft nylon, Polyurethane, FEP, PFA*2

*1 The value in brackets is for the AKP-□-M5/U10.

*2 Use caution at the max. operating pressure when using soft nylon or polyurethane tubing. (Refer to the **Catalogue** on <https://www.smc.eu> for details.)

Flow Rate and Sonic Conductance

Model		ASP-□-M5/U10	ASP-□-□01	ASP-□-□02	ASP-□-□03	ASP-□-□04	
Port size		M5 10-32UNF	1/8	1/4	3/8	1/2	
Tubing O.D.	Metric size	Ø 4 Ø 6	Ø 6	Ø 8	Ø 10	Ø 12	
	C values: Sonic conductance dm ³ /(s·bar)	Free flow	0.25	0.58	1.06	2.19	3.43
b values: Critical pressure ratio	Controlled flow	0.22	0.46	1.06	1.69	3.09	
	Free flow	0.20	0.20	0.15	0.15	0.20	
Q [l/min (ANR)]*	Controlled flow	0.30	0.20	0.25	0.20	0.30	
	Free flow	60	139	247	510	822	
		Controlled flow	56	110	261	405	786

* These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

Caution

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smc.eu>



How to Order

Horizontal type **ASP-UB06GE-G01S**

Type

U	Universal
----------	-----------

Piping type

B	Horizontal
----------	------------

Applicable tubing O.D.

Metric size

04	∅ 4
06	∅ 6
08	∅ 8
10	∅ 10
12	∅ 12

* For selecting applicable tubing O.D., refer to the "Model" on page 11-1.

Material

G	Stainless steel type
----------	----------------------

Residual pressure release

E	With
----------	------

Seal method

—	Without sealant
S	With sealant

* Select "—": Without sealant" for M5, 10-32UNF, and G thread types.
Example) ASP-UB06GE-G01

Port size

M5*1	M5
U10*1	10-32UNF
01	1/8
02	1/4
03	3/8
04	1/2

*1 Use the M5 or U10 port size model in a circuit that uses an exhaust center valve. These sizes cannot be used in a circuit that uses a closed center valve only because the responsiveness of the intermediate stop of the actuator may be slow. Therefore, if you want to use those models in a circuit with a closed center valve only, contact us.

Thread type

—	R
N	NPT
G	G


* Select (R: —) for connection thread port size M5 or U10.

Construction

Horizontal Universal type

Seal method: Gasket seal

For M5, 10-32UNF

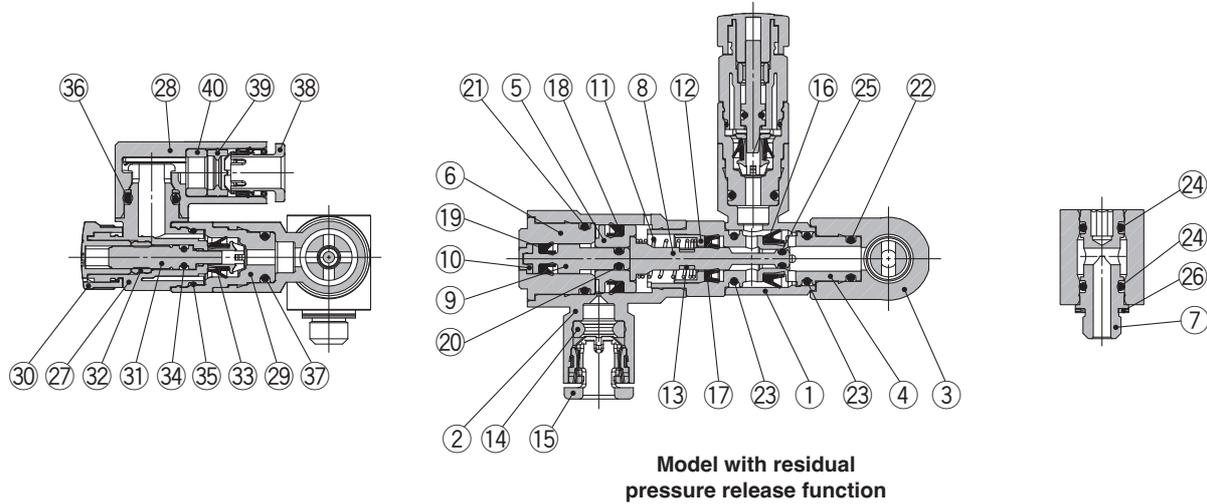

Component Parts

No.	Description	Material	Note
1	Body A	PBT	
2	Pilot body	PBT	
3	End body	PBT	
4	Body B	Stainless steel	
5	Piston B	Stainless steel	
6	End cover B	Stainless steel	
7	Stud	Stainless steel	
8	Piston rod	Stainless steel	
9	Push rod	Stainless steel	
10	Push rod cover	PBT	
11	Spring	Stainless steel	
12	Seal retainer	Stainless steel	
13	Exhaust ring	POM	
14	Seal	NBR	
15	Cassette	—	
16	Seal	HNBR	
17	Seal	NBR	
18	Seal	NBR	
19	Seal	NBR	
20	O-ring	NBR	


No.	Description	Material	Note
21	O-ring	NBR	
22	O-ring	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	O-ring	NBR	
26	Gasket	NBR/Stainless steel	
27	Body A	PBT	
28	Elbow body	PBT	
29	Body B	Stainless steel	
30	Knob	POM	
31	Needle	PBT	
32	Needle guide	Stainless steel	
33	Seal	HNBR	
34	O-ring	NBR	
35	O-ring	NBR	
36	O-ring	NBR	
37	O-ring	NBR	
38	Cassette	—	
39	Seal	NBR	
40	Spacer	PBT	

ASP-G Series

Construction


Horizontal Universal type

Seal method: Face seal
For G

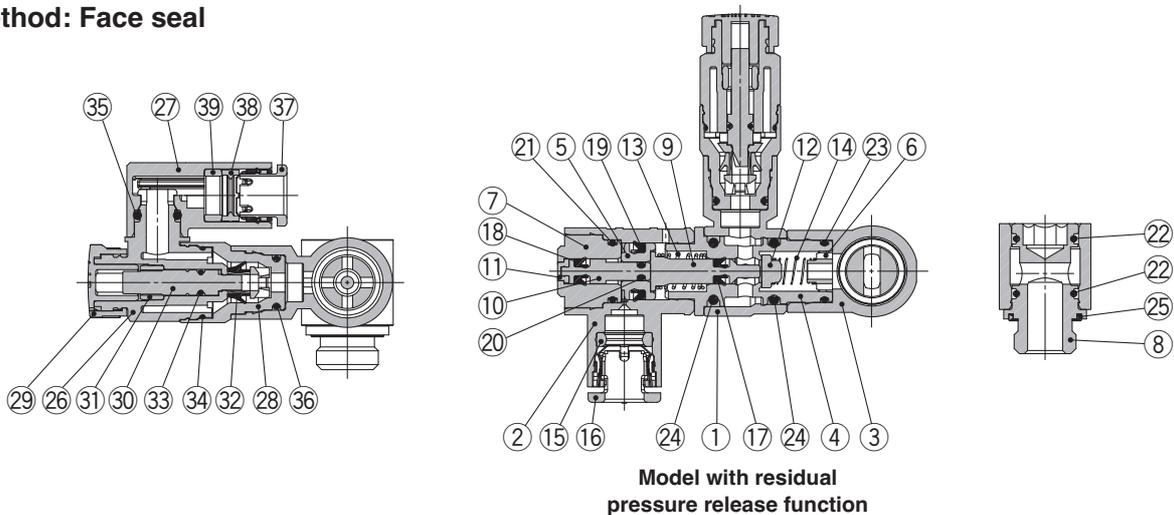

Horizontal Universal type

Seal method: Sealant
For R, NPT thread

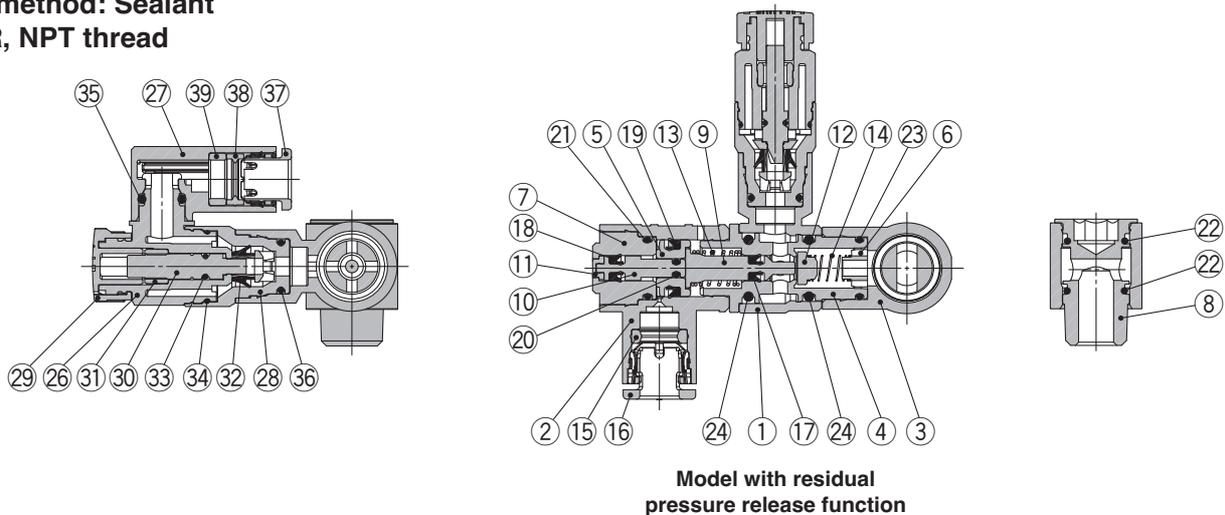

Component Parts

No.	Description	Material	Note
1	Body A	PBT	
2	Pilot body	PBT	
3	End body	PBT	
4	Body B	Stainless steel	
5	Piston B	Stainless steel	
6	Spring guide	Stainless steel	
7	End cover B	Stainless steel	
8	Stud	Stainless steel	
9	Piston rod	Stainless steel	
10	Push rod	Stainless steel	
11	Push rod cover	PBT	
12	Valve	NBR	
13	Spring	Stainless steel	
14	Spring	Stainless steel	
15	Seal	NBR	
16	Cassette	—	
17	Seal	NBR	
18	Seal	NBR	
19	Seal	NBR	
20	O-ring	NBR	

No.	Description	Material	Note
21	O-ring	NBR	
22	O-ring	NBR	
23	O-ring	NBR	
24	O-ring	NBR	
25	Seal ring	NBR	
26	Body A	PBT	
27	Elbow body	PBT	
28	Body B	Stainless steel	
29	Knob	POM	
30	Needle	PBT	
31	Needle guide	Stainless steel	
32	Seal	HNBR	
33	O-ring	NBR	
34	O-ring	NBR	
35	O-ring	NBR	
36	O-ring	NBR	
37	Cassette	—	
38	Seal	NBR	
39	Spacer	PBT	

* The dimensions are the same as those of the standard type (ASP series). Refer to pages 7 to 11.



ASP Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>

Design

Warning

1. Confirm the specifications.

The products in this catalog are designed to be used in compressed air systems (including vacuum) only. Do not operate at pressures, temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.) Please contact SMC when using a fluid other than compressed air (including vacuum). We do not guarantee against any damage if the product is used outside of the specification range.

2. Do not disassemble the product or make any modifications, including additional machining.

Doing so may cause human injury and/or an accident.



3. Sonic conductance (C) and critical pressure ratio (b) values for products are representative values.

4. Check if PTFE can be used in the application.

PTFE powder (Polytetrafluoroethylene resin) is included in the seal material of the male thread type piping taper thread. Confirm that the use of it will not cause any adverse effects on the system. Please contact SMC if the Safety Data Sheet (SDS) is required.

5. The pilot check valve is a product aimed at the control of the actuator via a temporary intermediate stop.

The pilot check valve is used for temporarily stopping the actuator. Until a pilot signal is input, the valve shuts off the flow path from 2 to 1 and the actuator stops. When a pilot signal is input, the flow path from 2 to 1 is opened. When the residual pressure exhaust button is operated, all flow paths (2 to 1, 21, and exhaust port) are opened.

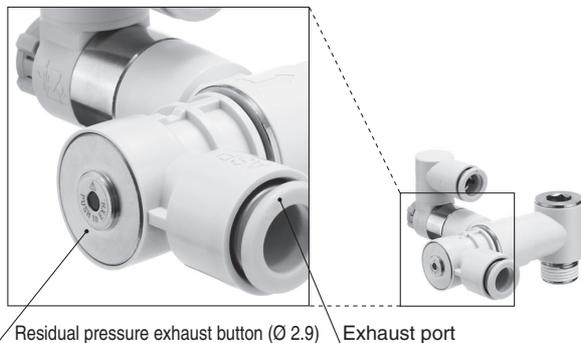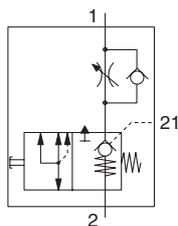

6. This product cannot be used for accurate and precise intermediate stops of the actuator.

Due to the compressibility of air as a fluid, the actuator will continue to move until it reaches a position of pressure balance, even though the pilot check valve closes with an intermediate stop signal.

7. This product cannot be used to hold a stop position for an extended period of time.

Pilot check valves and actuators are not guaranteed for zero air leakage. Therefore, it is sometimes not possible to hold a stop position for an extended period of time. In the event that holding for an extended time is necessary, a mechanical means for holding should be devised.

8. Pay attention to the residual pressure within the actuator at the time of intermediate stop.

When the actuator is stopped at the intermediate position by this product, there may be pressure contained inside the actuator, therefore the actuator may suddenly move when the residual pressure is released. Before operating the residual pressure exhaust button, confirm that the surrounding area is secure from any potential hazards or accidents occurring.

9. Use this product after checking the surrounding areas in advance before the release of residual pressure.

The actuator may move at a speed quicker than the intended speed from the original circuit set up when exhausting from the residual pressure release. Confirm this speed will not create additional hazards and pay attention to the air discharged from the exhaust port.

10. Pay attention to the motion of the actuator at the time of release of the residual pressure.

When operating the residual pressure exhaust button or conducting maintenance or inspection, the actuator may start moving due to the residual pressure. Take appropriate measures in advance to prevent an actuator movement from posing a hazard. Also pay attention to the operation speed and the movement of the cylinder during exhaust.

When an exhaust center valve is used on the actuator supply side (Figure A below), the residual pressure is released from port 1, 21, and the exhaust port. However, when using a closed center valve like the example shown in Figure B below, air is discharged only from port 21 and the exhaust port.

For the moving direction of the actuator against the corresponding exhaust side, refer to the figure below.

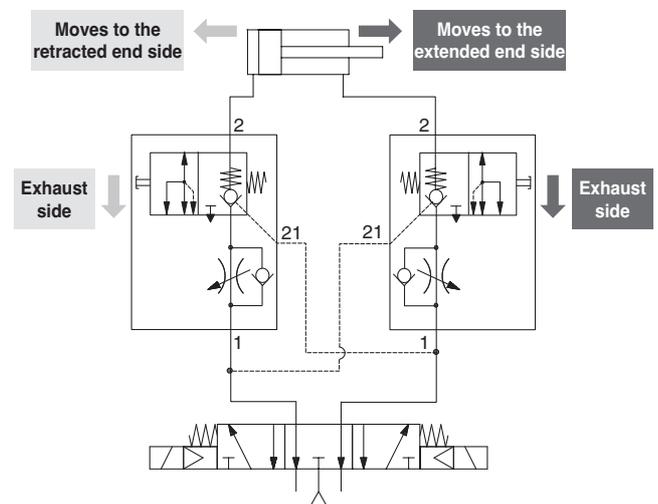


Figure A: Example of piping using exhaust center valve

* Use the model “ASP-□-M5” or “ASP-□-U10” in a circuit that uses an exhaust center valve.



ASP Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>

Design

Warning

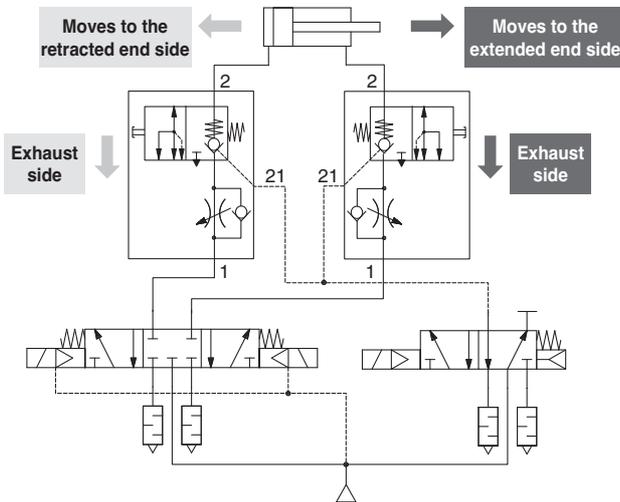


Figure B: Example of piping using closed center valve (Recommended example)

* The model “ASP-□-M5” or “ASP-□-U10” cannot be used in a circuit that uses a closed center valve only. If you want to use that model with a closed center valve only, contact us.

11. Push the residual pressure exhaust button all the way to the end position by using a tool.

Push the residual pressure exhaust button all the way to the end position by using a tool having a tip diameter of $\varnothing 2.8$ or below. Refer to the table below for operating force and depth. Note that the higher the residual pressure, the greater the force required to operate the residual pressure exhaust button.

Model	Operating force [N] (Reference value)	Operating depth [mm]
ASP-□-M5/U10	5.3 to 8.2	3.5
ASP-□-□01	5.1 to 11.9	3.9
ASP-□-□02	6.7 to 19.5	3.8
ASP-□-□03	10.6 to 34.4	4.7
ASP-□-□04	17.1 to 54.4	5.8


12. After operating the residual pressure exhaust button, confirm that the button has returned to the normal position.

Make sure that the residual pressure exhaust button has returned to the end face of the product before operating again. If the button cannot return to the normal position, the intermediate stop function of the actuator will not work. Therefore, replace the product with a new one.

13. Pay attention to the motion of the actuator at the time of restart after the release of residual pressure.

When restarting the product after releasing the residual pressure, check the initial driving direction, confirm that the work area is secured, and then restart the product. Failure to follow this instruction may cause the actuator to suddenly move.

- When the product is used in a balance control circuit, the check valve may not be released even when the pilot pressure is 50 % of the operating pressure. In this case, obtain the pilot pressure from a position so that the pilot pressure is equivalent to the operating pressure. When using the product at the minimum operating pressure, set the pilot pressure to 0.1 MPa or higher. However, for “ASP-□-M5” or “ASP-□-U10,” set the pilot pressure to 0.15 MPa or higher.
- As a reference, we have confirmed through our durability tests that the check valve has a durability against 10 million cycles of ON and OFF operations and the residual pressure exhaust button has a durability against 10,000 cycles of operation at the maximum operating pressure. However, note that the tests were conducted under limited conditions.
- In the following cases, malfunctioning or noise due to oscillation may occur.
 - When the differential pressure between the port 1 side and port 2 side is smaller than the min. operating pressure
 - When the IN side piping of the product or the effective area of the directional control valve is smaller than that of the product
 - When the pressure drop on the port 1 side is slower than that of the port 2 side during operation of the product
 - When the supply pressure at the port 21 is reduced (Refer to the piping diagram below.)
 - When the port 1 side piping (tube) is bent or crushed

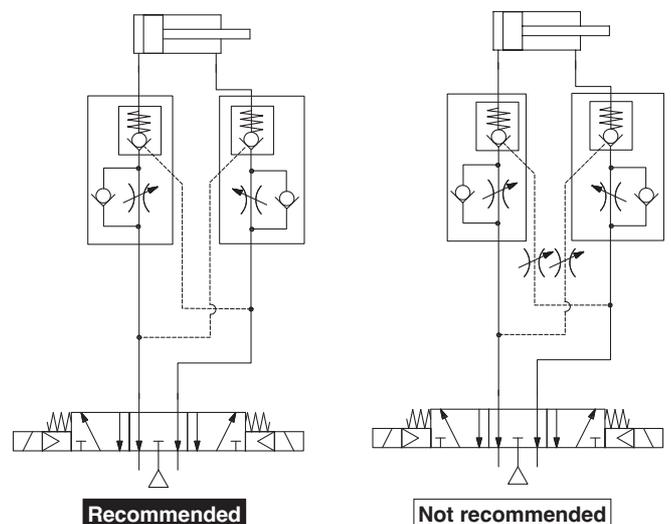



ASP Series

Specific Product Precautions 3

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>

Mounting

Warning

1. Operation manual

Install the product and operate it only after reading the operation manual carefully and understanding its contents. Also, keep the manual where it can be referred to as necessary.

2. Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance and inspection.

3. Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

4. Screw the R screw into the Rc thread, the NPT screw into the NPT thread and the G screw into the G thread.

5. Mount after confirming the piping direction.

Connect the IN side to the directional control valve and OUT side to the actuator.

6. Do not apply excessive force or shock to the fittings or other parts of the product with tools.

Doing so may result in damage or air leakage. When connecting piping, use a tube of sufficient length. When binding the piping together with a tying band, etc., be sure that external force is not being applied to the piping.

7. For handling One-touch fittings, refer to the “Fittings and Tubing Precautions” in the “Handling Precautions for SMC Products.”

8. Pay attention to the method of mounting on the cylinder.

For the horizontal type, a hexagon wrench needs to be used. The product cannot be mounted with an open-end wrench. For the mounting of the vertical type, an open-end wrench needs to be used. Note that the mounting method differs between the vertical type and horizontal type.


9. Conduct mounting and removal of the vertical type by holding the width across flats of the body B and turning it by using an appropriate wrench.

Do not apply torque at other points, as the product may be damaged. Rotate body A manually for positioning after installation.



10. To install and remove the horizontal type product with hexagonal hole, use an appropriate hex key and push it into the hexagon hole of the stud.

Do not apply torque at other points, as the product may be damaged. Rotate the end body manually for positioning after installation. Refer to the applicable dimension of the hexagon wrench.

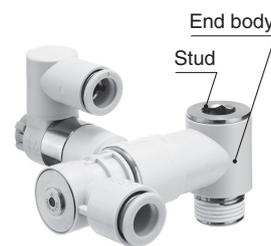

Connection thread size	Hexagon wrench (Nominal width across flats)	
	Metric size	Inch size
M5, 10-32UNF	2.5	—
R1/8, G1/8	6	—
NPT1/8	—	7/32"
R1/4, G1/4	8	—
NPT1/4	—	5/16"
R3/8, G3/8	10	—
NPT3/8	—	3/8"
R1/2, G1/2	10	—
NPT1/2	—	3/8"

11. Do not use this product in the operating condition where moment loads will be constantly applied to the product.

The fitting section and the product may be damaged.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

 Danger:	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
 Warning:	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
 Caution:	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

- 1) ISO 4414: Pneumatic fluid power – General rules and safety requirements for systems and their components.
ISO 4413: Hydraulic fluid power – General rules and safety requirements for systems and their components.
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smc.dk.com	smc@smcdk.com
Estonia	+372 651 0370	www.smcee.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smc.fi@smc.fi
France	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	sales@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	info@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za