Flame Resistant (Equivalent to UL-94 Standard V-0) Speed Controller with One-touch Fittings In-line Type

■ Uses flame-resistant resin (Equivalent to UL-94 Standard V-0)



Model

	Applicable tubing O.D.					
Model	Metric size					
	6	8	10			
AS2052F-06-X900	•					
AS2052F-08-X900		•				
AS3002F-10-X900						

Specifications

Specifications not listed are the same as those of the standard product. For details, refer to the **Web Catalog**.

Fluid	Air			
Proof pressure	1.05 MPa			
Max. operating pressure	0.7 MPa			
Min. operating pressure	0.1 MPa			
Ambient and fluid temperatures	-5 to 60°C (No freezing)			
Applicable tubing materials	FR double layer, FR soft nylon*1			

Sectional view of FR double laver tubing

^{*} Brass parts are electroless nickel plated.



^{*1} Use caution when operating at the max. operating pressure. (Refer to the **Web Catalog** for details on tubing.)

How to Order

AS 205 2F-06-X900

Body size • 205 1/4 standard 300 3/8 standard

Flame resistant (Equivalent to UL-94 Standard V-0)


♦ Applicable tubing O.D.*1

06	ø6					
08	ø8					
10	ø10					

*1 To select the applicable tubing O.D., refer to the "Model" chart on the cover page.

Construction


AS2052F-X900

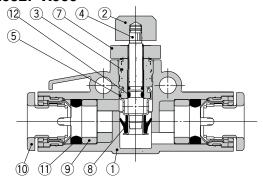

Component Parts


No.	Description	Material	Note
1	Body A	Flame-resistant PBT	
2	Knob	Brass	Electroless nickel plating
3	Body B	Brass	Electroless nickel plating
4	Needle	Brass	Electroless nickel plating
5	Seat ring	Brass	Electroless nickel plating
6	Needle guide	Brass	Electroless nickel plating

AS3002F-X900

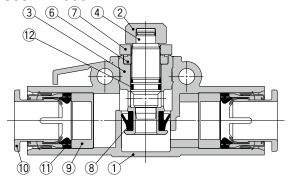

No.	Description	Material	Note
7	Lock nut	Steel	
8	U-seal	HNBR	
9	Spacer	PBT	
10	Cassette	_	
11	Seal	NBR	
12	O-ring	NBR	

Dimensions

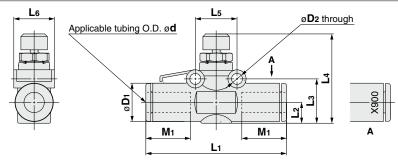

l 									[mm]			
Model	Applicable tubing O.D. d	D1 D2	14	10 10	Lз	L	4 *1	15	l c	M ₁	Weight	
			D2	LI	L2	L3	Max.	Min.	L5	L6	IVI I	[g]
AS2052F-06-X900	6	12.8	4.3	53.2	6.7	16.3	33.2	28.2	17	15.7	17	20
AS2052F-08-X900	8	15.2	4.3	57.2	8	17.6	34.5	29.5	17	16.1	18	23
AS3002F-10-X900	10	18.5	4.3	70.8	9.8	21.7	41	36	22	20.5	21	43

^{*1} Reference dimensions

∕!\ Caution

I Be sure to read this before handling the products. For safety instructions and flow control equipment precautions, refer to I the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com

© 2019 SMC Corporation All Rights Reserved