


Rodless Cylinder for Vacuum Series CYV ø15, ø32



Air cylinder for transfer in vacuum environments (1.3 x 10⁻⁴Pa)

Simplifies and reduces the size of equipment

Since the cylinder can be installed inside a vacuum chamber, it contributes to simplifying and reducing the size of a transfer system.

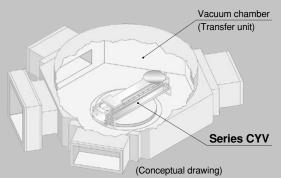


Air cylinder for transfer

Rodless Cylinder for Vacuum

Series CYV Ø15, Ø32

Low particulate generation Average particle generation (particles >0.1 μ)

is 0.1 particles/cycle. (Atmospheric conditions)

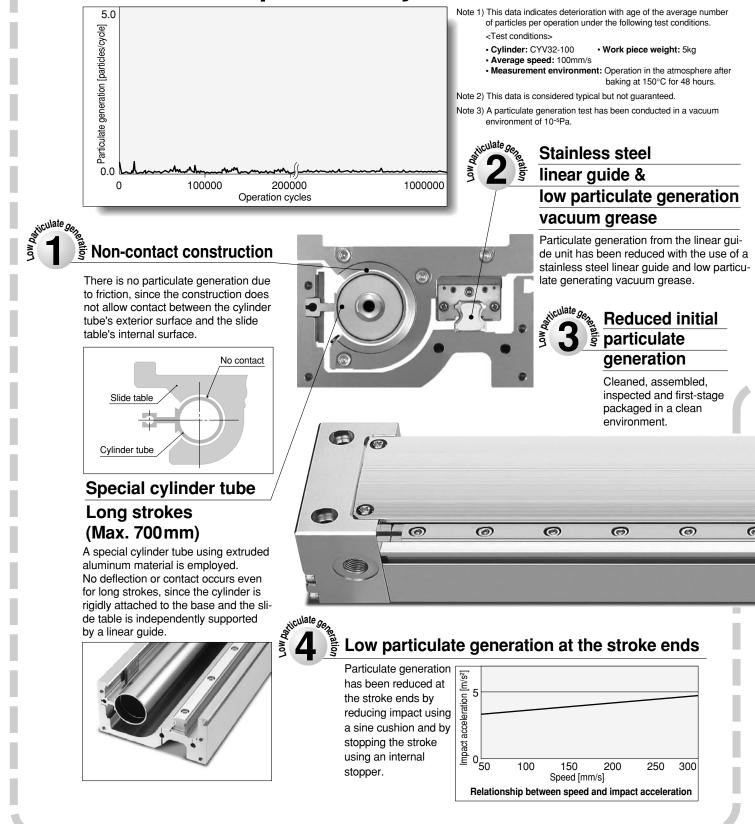


in vacuum environments (1.3 x 10-VPa)

Carefully designed for low particulate generation, low leakage, and low outgassing.

Low leakage

Leakage:1.3 x 10⁻⁷Pa·m³/sec or less

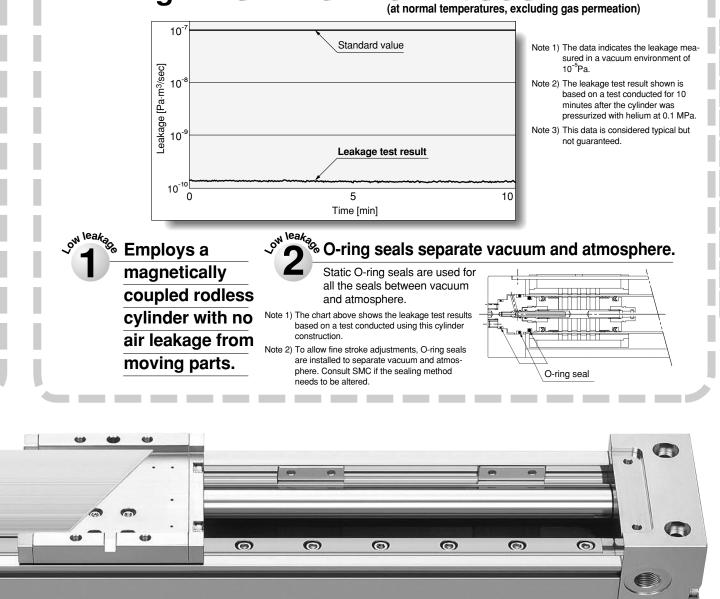


Reduced outgassing Reduction of outgassing due to surface treatment All the external parts (made of aluminum alloy) such as the body and slide table are electroless nicked

aluminum alloy) such as the body and slide table are electroless nickel plated.


Furthermore, external magnets are coated with titanium nitride.

Note 1) Consult SMC if other specifications for surface treatment are required.

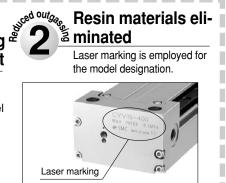

SMC

Fine adjustments at the end of the stroke Fine adjustments between -2 to 0mm

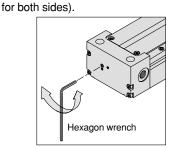

can be made on one side (-4 to 0mm

3.11-3

ZX

ZR

ZM

ZY

ZH

ZU

ZL

ZF

ZP

ZCU


CYV

Vacuum

related

Rodless Cylinder for Vacuum Series CYV



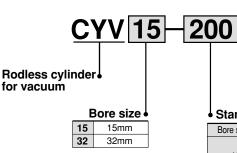

How to Order

• Standard stroke

 Bore size (mm)
 Standard stroke (mm)

 100, 150, 200, 250
 300, 350, 400, 450

 500, 600, 700
 500, 600, 700

Specifications

Bore size (mm)	15	32					
Operating environment pressure	Atmosphere to 1.3 x 10 ⁻⁴ Pa (ABS)						
Operating atmosphere	Air and ir	nert gases					
Fluid	Air and ir	nert gases					
Action	Double acting						
Proof pressure	0.5MPa						
Operating pressure range	0.05 to 0.3MPa						
Leakage	1.3 x 10 ⁻⁷ Pa·m ³ /sec or less (at normal temperatures, excluding gas permeation						
Maximum baking temperature	15	0°C					
Ambient and fluid temperature	-10 to	o 60°C					
Piston speed	50 to 3	00mm/s					
Stroke adjustment	-2 to 0mm on each side (-4 to 0mm total)						
Cushion	Sine cushion (Air cushion)						
Port size	5/16-24UNF 7/16-20UNF						
Lubrication	Vacuum grease for linear guide unit and inside the cylinder tube						

Weights

											(kg)
Model		Standard stroke (mm)									
	100	150	200	250	300	350	400	450	500	600	700
CYV15	1.2	1.4	1.6	1.7	1.9	2.0	2.2	2.4	2.5	2.8	3.2
CYV32	4.2	4.6	5.0	5.5	5.9	6.3	6.7	7.1	7.5	8.3	9.1


Magnet Holding Force

Bore size (mm)	Magnet holding force (N)
15	59
32	268

Theoretical Output

				(N)		
	Piston area	Operating pressure (MPa)				
(mm)	(mm²)	0.1	0.2	0.3		
15	176	18	35	53		
32	804	80	161	241		

Construction

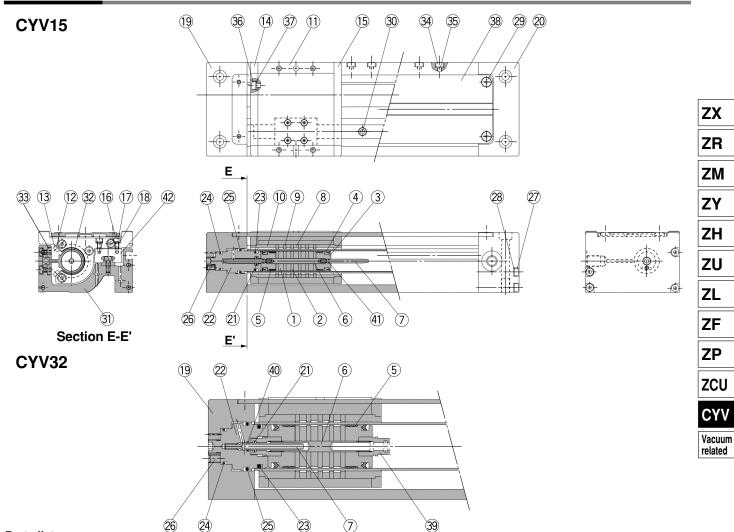

Parts I	ist
---------	-----

Parts list									
No.	Description	Material	Note						
1	Magnet A	Rare earth magnet	Aluminum chromated						
2	Piston side yoke	Rolled steel plate	Zinc chromated						
3	Piston	Brass/ Aluminum alloy	Electroless nickel plated/Chromated						
4	Piston seal	Fluoro rubber							
5	Wear ring	Special bearing							
6	Shaft	Stainless steel							
7	Cushion ring	Stainless steel/Brass	-/Electroless nickel plated						
8	Magnet B	Rare earth magnet	Titanium nitride coating						
9	External slider side yoke	Rolled steel	Electroless nickel plated						
10	Hold spacer	Aluminum alloy	Electroless nickel plated						
11	Slide table	Aluminum alloy	Electroless nickel plated						
12	Insertion guide plate	Stainless steel							
13	Round head Phillips screw	Stainless steel							
14	Side plate A	Aluminum alloy	Electroless nickel plated						
15	Side plate B	Aluminum alloy	Electroless nickel plated						
16	Hexagon socket head cap screw	Stainless steel							
17	Spring washer	Stainless steel							
18	Flat washer	Stainless steel							
19	Plate A	Aluminum alloy	Electroless nickel plated						
20	Plate B	Aluminum alloy	Electroless nickel plated						
21	Cushion seal	Fluoro rubber							


No.	Description	Material	Note
22	Inner cover	Aluminum alloy	Electroless nickel plated
23	Cylinder tube gasket	Fluoro rubber	
24	O-ring	Fluoro rubber	
25	O-ring	Fluoro rubber	
26	Hexagon socket head set screw	Stainless steel	
27	Hexagon socket head cap screw	Stainless steel	
28	Flat washer	Stainless steel	
29	Round head Phillips screw	Stainless steel	
30	Hexagon socket head cap screw	Stainless steel	
31	Base	Aluminum alloy	Electroless nickel plated
32	Cylinder tube	Aluminum alloy	Electroless nickel plated
33	Tube attaching bracket	Aluminum alloy	Electroless nickel plated
34	Hexagon socket head cap screw	Stainless steel	
35	Flat washer	Stainless steel	
36	Hexagon socket head cap screw	Stainless steel	
37	Flat washer	Stainless steel	
38	Top cover	Aluminum alloy	Electroless nickel plated
39	Cushion seal holder	Aluminum alloy	Chromated
40	O-ring	Fluoro rubber	
41	O-ring	Fluoro rubber	
42	Linear guide	Stainless steel	

Note) In the material and note columns of the parts list above, the first description is for CYV15 and the second description is for CYV32.



Series CYV

Dimensions

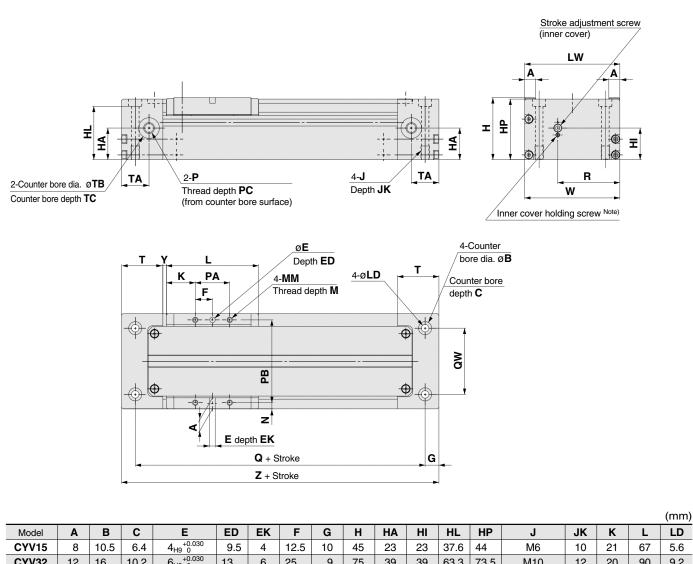


C1V32	12	10 10.2	O _{H9}	0	13 0	25	9	/5	39	39	03.3	/3.5	IVI	10	12	20	90	9.2
Model	LW	MM	М	Ν	Р	PA	PB	PC	Q	QW	R	Т	TA	ТВ	тс	W	Y	Z
CYV15	69	M4	6	4.5	5/16-24UNF	25	60	10	112	48	45	30	20	15	0.5	69	2.5	132
CYV32	115	M6	8	7.5	7/16-20UNF	50	100	12	147	83	79.5	34	22.5	22	0.5	115	3.5	165

Note) Refer to "Cushion Effect (Sine Cushion) and Stroke Adjustment" under Specific Product Precautions on page 3.11-11.

Series CYV **Model Selection 1**

Design Parameters 1

The allowable load mass moment differs depending on the work piece mounting method, cylinder mounting orientation and piston speed. To determine whether or not the cylinder can be operated, do not allow the sum (ΣΩn) of the load factors (Qn) for each mass and moment to exceed "1".

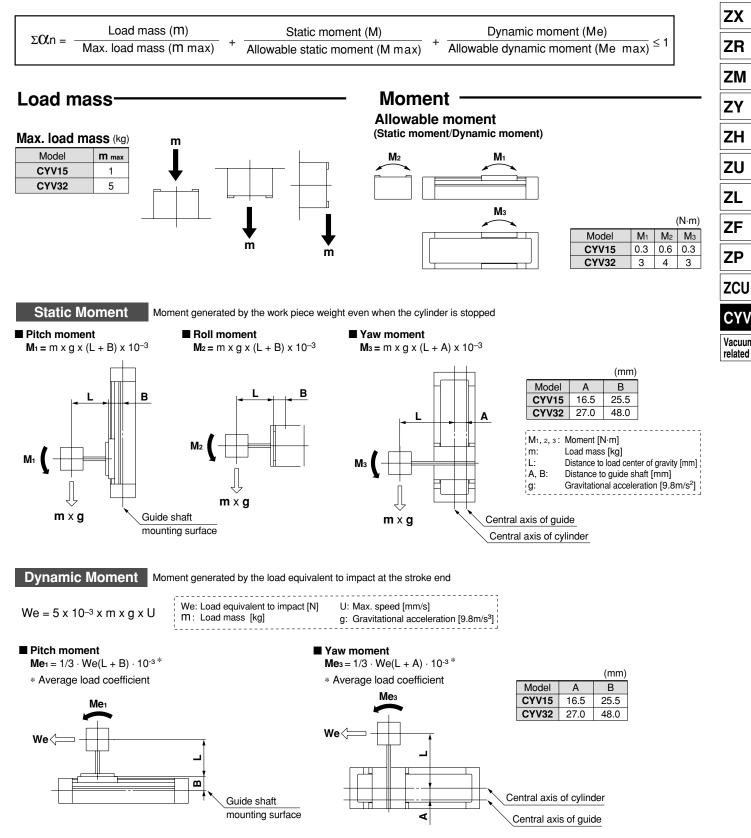

}SMC

ZP

CYV

Vacuum

Series CYV Model Selection 2


Selection Calculation -

The selection calculation finds the load factors (α n) of the items below, where the total ($\Sigma\alpha$ n) does not exceed "1".

$\Sigma \Omega n = \Omega_1 + \Omega_2 + \Omega_3 \le 1$							
Item	Load factor $lpha$ n	Note					
1. Max. load mass	$\Omega_1 = m/m \max$	Review M . M max is the maximum load mass.					
2. Static moment	Cℓ2 = M/M max	Review M1, M2, M3. M max is the allowable moment.					
3. Dynamic moment	Cℓ3 = Me/Me max	Review Me1, Me3. Me max is the allowable moment.					

Calculation Example

Operating conditions								
· •								
CYV32								
Horizontal wall mounting								
: U = 300 [mm/s]								
m = 1 [kg] (excluding mass of the arm section)								

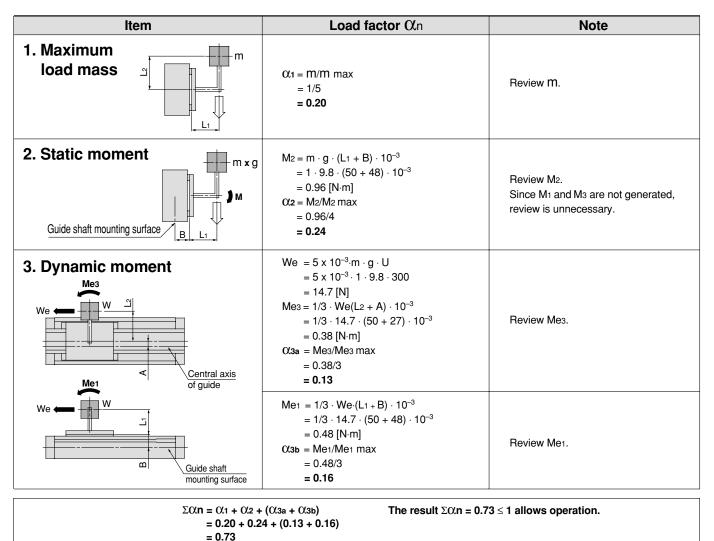


9

Series CYV Model Selection 3

Design Parameters 2

Table Deflection Note)

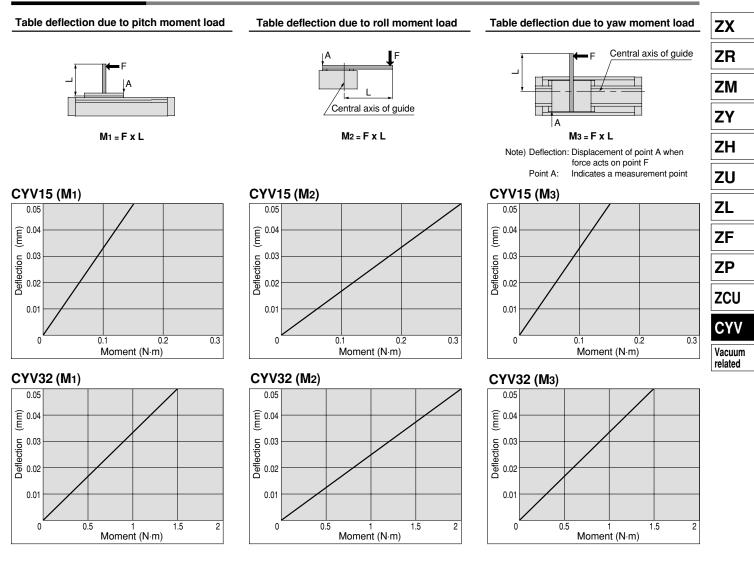

Vertical Operation

When using in vertical operation, prevention of work piece dropping due to breaking of the magnetic coupling should be considered. The allowable load mass and maximum operating pressure should be as shown in the table below.

Model	Allowable load mass mv (kg)	Maximum operating pressure Pv (MPa)
CYV15	1	0.3
CYV32	5	0.5

Intermediate Stops

The cushion effect (smooth start-up, soft stop) is applied only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) is not available an intermediate stop or return from an intermediate stop using an external stopper, etc.

When using an intermediate stop with the above information taken into account, implement measures to prevent particulate generation and set the operating pressure to no more than 0.3MPa.

Cushion stroke

Model	Stroke (mm)
CYV15	25
CYV32	30

SMC

Series CYV Specific Product Precautions 1

Be sure to read before handling.

Handling

≜Caution

- 1. Open the inner package of the double packaged clean series product inside a clean room or other clean environment.
- 2. Do not install a cylinder with bare hands. Outgassing characteristics can be degraded.
- 3. Perform parts replacement and disassembly work inside the chamber after exhausting compressed air in the piping to the outside of the clean room.

Mounting

≜Caution

1. Take care to avoid striking the cylinder tube with other objects or handling it in a way that could cause deformation.

The cylinder tube and slider units have a non-contact construction. For this reason, even a slight deformation or slippage of position can cause malfunction and loss of durability, as well as a danger of degrading particulate generation characteristics.

- 2. Do not scratch or gouge the linear guide by striking it with other objects.
- 3. Since the slide table is supported by precision bearings, do not apply strong impacts or excessive moment when mounting work pieces.
- 4. The cylinder can be operated by directly applying a load within the allowable range. However, careful alignment is necessary when connecting to a load with an external guide mechanism.

Since displacement of the alignment increases as the stroke becomes longer, consider a connection method that can absorb the displacement and does not cause interference at any point within the stroke. Also, operate with due consideration of measures against particulate generation.

5. Be sure to operate the cylinder with the plates on both sides secured.

Avoid applications in which the slide table or only one plate is secured.

6. Do not use until you verify that the equipment can be operated properly.

After mounting or repair, connect the air supply and electric power, and then confirm proper mounting by performing appropriate function and leakage tests.

7. Instruction manual

Mount and operate the product after thoroughly reading the manual and understanding its contents. Also, store it where it can be referred at any time.

Operation

∆Caution

1. The maximum operating pressure for the vacuum rodless cylinder is 0.3MPa

If the maximum operating pressure of 0.3MPa for the vacuum rodless cylinder is exceeded, the magnetic coupling can be broken, causing a danger of malfunction or degradation of particulate generation characteristics, etc.

Operation

2. When used for vertical operation, take precautions against possible dropping due to separation of the magnetic coupling.

When used for vertical operation, use caution as there is a possibility of dropping due to separation of the magnetic coupling if a load (pressure) greater than the allowable value is applied.

3. Do not operate with the magnetic coupling out of position.

If the magnetic coupling is out of position, push the external slider (or the piston slider by using air pressure) back to the proper position at the stroke end. (When pushing the external slider, do not push it with bare hands.)

- 4. Do not apply lubricant, as this is a non-lube product. The interior of the cylinder is lubricated at the factory, and lubrication with turbine oil, etc., will not satisfy the product's specifications.
- 5. Never reapply lubricant.

Never reapply lubricant, as this may cause a degradation of particulate generation or operation characteristics.

6. Use the cylinder in inert gas environments.

Corrosive gases may cause corrosion of a cylinder and loss of durability.

7. Be sure to use the cylinder in pressure environments from atmosphere to 1.3 x 10⁻⁴Pa (ABS).

If used in pressure environments below these conditions, grease applied to the guide unit will evaporate excessively and may cause environmental contamination and loss of durability.

8. Be sure to set the baking temperature to 150°C or less.

If a higher temperature is used, the grease will evaporate excessively and may cause environmental contamination and loss of durability.

9. Positioning of a cylinder should be performed using an optical sensor from outside the chamber.

 
A positioning sensor cannot be mounted on the cylinder.

Fitting

≜Caution

1. A fitting with an O-ring is used for a high vacuum rodless cylinder.

Use a fitting that conforms to the dimensions below, and install it so that there is no air leakage.



2. Air blow and clean fittings and piping materials completely with clean air to remove oil and impurities, etc., before piping.



Series CYV **Specific Product Precautions 2**

Be sure to read before handling.

Speed Adjustment

\land Caution

- 1. A speed controller for clean room use is recommended for speed adjustment.
- 2. Install the speed controller outside the chamber.
- 3. In case of vertical mounting, a system with a regulated supply circuit installed on the down side is recommended. (This is effective against delays at the start of upward movement and for conservation of air.)

Cushion Effect (Sine Cushion) and Stroke Adjustment

A Caution

1. A sine cushion (smooth start-up, soft stop) function is included in the standard specifications.


Due to the nature of a sine cushion, adjustment of the cushion effect is not possible. There is no cushion needle adjustment as in the case of conventional cushion mechanisms.

2. The stroke adjustment is a mechanism to adapt the slide table's stroke end position to a mechanical stopper on other equipment, etc.

(Adjustment range: Total of both sides -4 to 0mm)

To ensure safety, perform adjustment after shutting off the drive air, releasing the residual pressure and implementing drop prevention measures. etc.

- 1) Loosen the inner cover holding screw with a hexagon wrench, etc.
- 2) To match the position with a mechanical stopper on other equipment, etc., rotate the stroke adjustment screw (inner cover) to the left or right with a hexagon wrench to move the inner cover back and forth.
- 3) The maximum adjustment on one side is -2 to 0mm. A total adjustment of approximately -4 to 0mm is possible using both sides.
- 4) After completing the stroke adjustment, tighten the inner cover holding screw with a hexagon wrench, etc.

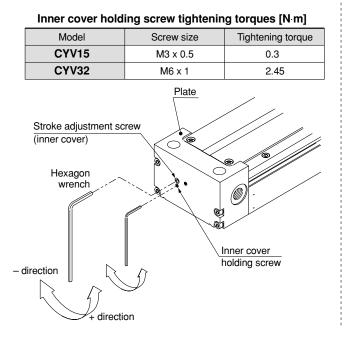

Maintenance

A Caution

1. Never disassemble the cylinder tube or linear guide, etc

If disassembled, the slide table may touch the outside surface of the cylinder tube resulting in a degradation of particulate generation characteristics.


- 2. Consult SMC when replacing seals and bearings (wear rings).
- 3. For repair of a cylinder inadvertently exposed to a corrosive gas, consult SMC after clarifying the name of the corrosive gas.

Particulate Generation Characteristics

Caution

1. In order to maintain the particulate generation grade, use operation of 1 million cycles or travel distance of about 200km as a guide. (Table 1 below)

If operation is continued beyond the recommended values, lubrication failure of the linear guide and a degradation of particulate generation characteristics may occur.

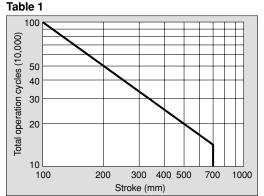

ZX ZR ZM ZY ZH ZU ZL ZF ZP ZCU CYV

Vacuum

related