
 
How to Order Solenoid Valves (3 Position 3 Port with Restrictor)



- * Connector entries with the symbol "M\sum or can not use the switch signal from the common wiring on the manifold.
- When ordering a connector assembly separately, refer to back page 8.

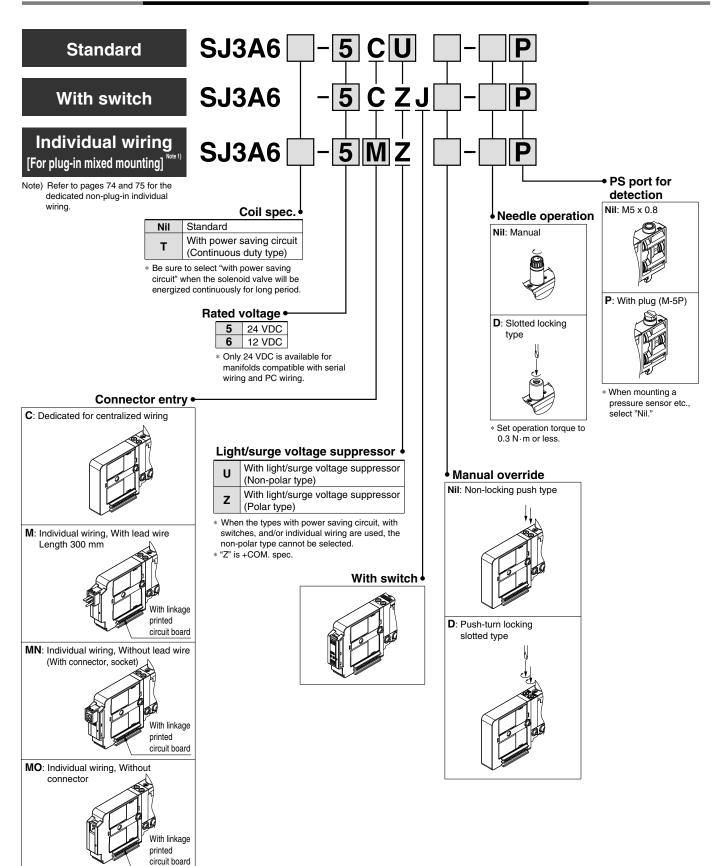

Note 3) There is no valve block switch for linking the neighboring valve, etc. to the 3 position 3 port solenoid valve with restrictor. Consult SMC if you wish to use the SJ2000/3000 valve with a valve block switch, or an end block or SUP/EXH block assembly.



How to Order Solenoid Valves (3 Position 3 Port with Restrictor)

