Maintenance Parts List

Replaceable parts for devices are listed by series.

You can also refer to the replacement procedures for the consumable parts of each series.



Modular F.R.L. Pressure Control Equipment



Air Preparation Equipment Industrial Filters







CONTENTS

Maintenance Parts List

Actuators Cylinder inspection items	p. 2
2 Troubleshooting 3 Details of replacement parts	
Modular F.R.L.	
Pressure Control Equipment	p. 244
1 Indication of replacement of elements, inspection items 2 Troubleshooting 3 Details of replacement parts	
Air Preparation Equipment	p. 274
1 Indication of replacement of elements, inspection items 2 Troubleshooting 3 Details of replacement parts	•
Industrial Filters	p. 274
1 Indication of replacement of elements, inspection items 2 How to select element order number for replacement 3 Details of replacement parts	•
Replacement Procedure	
Actuators	p. 310
Modular F.R.L. Pressure Control Equipment	p. 430
Industrial Filters	p. 536
OChecking Whether your Cylinder is a Current or Previous Model	p. 563
○Model Index (Alphanumerical Order)	n. 565

Search for Seal Kits

You can search for seal kits on the SMC website.

1 Cylinder inspection items	k).	4
2 Troubleshooting	k).	5

The products marked with a ★ have been discontinued. As they have been replaced by a new series, please check whether the cylinder is a new or a previous model before ordering replacement parts. For details, refer to "Checking Whether your Cylinder is a Current or Previous Model" on pages 563 and 564.

		ails of replacement parts	Replacement Parts	Replacement Procedure
	CJP2	Pin Cylinder/Double Acting, Single Rod	p. 7	p. 311
	CJP	Pin Cylinder/Single Acting, Spring Return	p. 8	
	CM2-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 9	p. 313
	CM2Y-Z	Smooth Cylinder/Double Acting, Single Rod	p. 9	p. 313
	CM2X-Z	Low Speed Cylinder/Double Acting, Single Rod	p. 9	p. 313
	CM2W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 10	p. 313
	CM2-Z	Air Cylinder/Standard Type: Single Acting, Spring Extend	p. 11	p. 313
	CM2K-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 12	p. 313
			p. 13	p. 313
	CM2K-Z	Air Cylinder/Non-rotating Rod Type: Single Acting, Spring Extend	p. 14	p. 313
	CM2R-Z	Air Cylinder/Direct Mount Type: Double Acting, Single Rod	p. 15	p. 313
	CM2RK-Z	Air Cylinder/Direct Mount, Non-rotating Rod Type: Double Acting, Single Rod	p. 16	p. 313
	CM2	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 17	p. 313
	CM2Y	Smooth Cylinder/Double Acting, Single Rod	p. 17	p. 313
	CM2X	Low Speed Cylinder/Double Acting, Single Rod	p. 17	p. 313
	CM2W	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 18	p. 313
	CM2	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 19	p. 313
	CM2K	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 20	p. 313
	CM2KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 21	p. 313
	CM2K	Air Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	p. 22	p. 313
	CM2R	Air Cylinder/Direct Mount Type: Double Acting, Single Rod	p. 23	p. 313
*	CM2RK	Air Cylinder/Direct Mount, Non-rotating Rod Type: Double Acting, Single Rod	p. 24	p. 313
	CM2□P	Air Cylinder/Centralized Piping Type: Double Acting, Single Rod	p. 25	p. 313
	CBM2	Air Cylinder/With End Lock	p. 26	p. 313
	CG1-Z	Air Cylinder/Standard Type	p. 27	p. 314
	CG1Y-Z	Smooth Cylinder	p. 27	p. 314
	CG1W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 28	p. 314
	CG1-Z	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 29	p. 314
	CG1K-Z	Air Cylinder/Non-rotating Rod Type: Double Acting	p. 30	p. 314
	CG1KW-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 31	p. 314
	CG1R-Z	Air Cylinder/Direct Mount Type: Double Acting	p. 32	p. 314
	CG1KR-Z	Air Cylinder/Direct Mount, Non-rotating Rod Type	p. 33	p. 314
	CG1	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 34	p. 314
	CG1Y	Smooth Cylinder/Double Acting, Single Rod	p. 34	p. 314
	CG1W	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 35	p. 314
	CG1	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 36	p. 314
	CG1K	Air Cylinder/Non-rotating Rod Type: Double Acting	p. 37	p. 314
	CG1KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 38	p. 314
	CG1R	Air Cylinder/Direct Mount Type: Double Acting	p. 39	p. 314
*	CG1KR	Air Cylinder/Direct Mount, Non-rotating Rod Type	p. 40	p. 314
	CBG1	Air Cylinder/With End Lock	p. 41	p. 314
	CG3	Air Cylinder Short Type/Standard: Double Acting, Single Rod	p. 42	p. 314
	MB-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 43	p. 317
	MBY-Z	Smooth Cylinder/Double Acting, Single Rod	p. 43	p. 317
	MBW-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 44	p. 317
	MBK-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 45	p. 317
	MBKW-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	•	p. 317
	MB	Air Cylinder/Single Rod	p. 47	p. 317
	MBW	Air Cylinder/Double Rod	p. 48	p. 317
	MBK	Air Cylinder/Non-rotating Rod Type	p. 49	p. 317
*	MBKW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 50	p. 317
	MB□Q	Air Cylinder/Low Friction Type	p. 51	p. 317
	MBB	Air Cylinder/With End Lock	p. 52	p. 317
	MB1-Z	Square Tube Type Air Cylinder/Standard Type: Double Acting, Single Rod	p. 53	p. 317
	MB1W-Z	Square Tube Type Air Cylinder/Standard Type: Double Acting, Double Rod	-	p. 317
	MB1K-Z	Square Tube Type Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 55	p. 317

		Parts	Procedure
MB1	Square Tube Type Air Cylinder/Standard Type: Double Acting, Single Rod	p. 56	p. 317
MB1W	W Square Tube Type Air Cylinder/Standard Type: Double Acting, Double Rod		p. 317
MB1K	Square Tube Type Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 58	p. 317
CA2-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 59	p. 317
CA2Y-Z	Smooth Cylinder/Double Acting, Single Rod	p. 59	p. 317
CA2W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 60	p. 317
CA2	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 61	p. 317
CA2Y	Smooth Cylinder/Double Acting, Single Rod	p. 61	p. 317
CA2W	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 62	p. 317
CA2K	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 63	p. 317
CA2KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 64	p. 317
CBA2	Air Cylinder/With End Lock	p. 65	p. 317
CA2□H	Air-hydro Cylinder/Double Acting, Single Rod	p. 66	
CA2W□H Air-hydro Cylinder/Double Acting, Double Rod		p. 67	
CS1	Air Cylinder/Standard Type: Lube, Non-lube Type, Air-hydro Type	p. 68	p. 320
CDS1	Air Cylinder/With Auto Switch	p. 69	p. 320
CS1W	Air Cylinder/Double Rod Type	p. 70	p. 320
CS1□Q	Air Cylinder/Low Friction Type: Non-lube Type	p. 71	p. 320
CS2	Air Cylinder	p. 72	p. 320
CS2W	Air Cylinder/Double Rod	p. 73	p. 320
CS2Y	Smooth Cylinder	p. 74	p. 320
CUJ	Mini Free Mount Cylinder	p. 75	p. 322
CU	Free Mount Cylinder/Double Acting, Single Rod	p. 77	
CUW	Free Mount Cylinder/Double Acting, Double Rod	p. 78	
CU	Free Mount Cylinder/Single Acting, Spring Return/Extend	p. 79	_
CUK	Free Mount Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 81	
CUKW	Free Mount Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	•	
CUK	Free Mount Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend		_
CU	Free Mount Cylinder/Long Stroke Type: Double Acting, Single Rod	•	_
CUX	Low Speed Cylinder/Double Acting, Single Rod	p. 85	_
CUK	Free Mount Cylinder/Long Stroke Type: Non-rotating Rod, Double Acting, Single Rod		
CU	Free Mount Cylinder with Air Cushion	p. 87	_
ZCUK	Free Mount Cylinder for Vacuum	p. 88	
CQS	Compact Cylinder/Standard Type: Double Acting, Single Rod	-	p. 323
CQSY	Smooth Cylinder/Double Acting, Single Rod	p. 90	p. 323
CQSX	Low Speed Cylinder/Double Acting, Single Rod	p. 90	p. 323
CQSW	Compact Cylinder/Standard Type: Double Acting, Double Rod	p. 91	p. 323
CQS	Compact Cylinder/Standard Type: Single Acting, Single Rod	p. 92	p. 323
CQSKW	Compact Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 93	p. 323
CQS\(\sigma\)	Compact Cylinder/Non-rotating Rod Type: Double Acting, Double Rod Compact Cylinder/Anti-lateral Load Type	p. 94	p. 323
CQ3_3	Compact Cylinder/Standard Type: Double Acting, Single Rod	p. 95	p. 323
CQ2Y	Smooth Cylinder/Double Acting, Single Rod		p. 323 p. 323
CQ2X	Low Speed Cylinder/Double Acting, Single Rod	p. 96 p. 96	p. 323 p. 323
CQ2W	Compact Cylinder/Standard Type: Double Acting, Double Rod		p. 323
CQ2	Compact Cylinder/Standard Type: Souble Acting, Bouble Rod		-
CQ2	Compact Cylinder/Standard Type: Single Acting, Single Rod Compact Cylinder/Large Bore Size: Double Acting, Single Rod	p. 98	p. 323 p. 323
CQ2W	Compact Cylinder/Large Bore Size: Double Acting, Single Hod	•	
CQ2	Compact Cylinder/Long Stroke Type: Double Acting, Single Rod		
CQ2K	Compact Cylinder/Non-rotating Rod: Double Acting, Single Rod		
CQ2KW	Compact Cylinder/Non-rotating Rod: Double Acting, Onlye Rod		
CQP2	Compact Cylinder/Axial Piping: Double Acting, Souble Rod		_
CQP2	Compact Cylinder/Axial Piping: Single Acting, Single Rod		
CQ2	Compact Cylinder/Anti-lateral Load		p. 323
CBQ2	Compact Cylinder/With End Lock		p. 323
CQ2	Compact Cylinder/Water Resistant: Double Acting, Single Rod		p. 323
			2

Search for Seal Kits

You can search for seal kits on the SMC website.

	Det	ails of replacement parts	Replacement Parts	Replaceme Procedure
	RQ	Compact Cylinder with Air Cushion	p. 109	p. 32
	CQU	Compact Cylinder/Plate Type: Double Acting, Single Rod	p. 110	_
	MU	Plate Cylinder/Double Acting, Single Rod	p. 111	_
	MUW	Plate Cylinder/Double Acting, Double Rod	p. 112	_
	MU	Plate Cylinder/Single Acting, Spring Return/Extend	p. 113	_
	CG5-S	Stainless Steel Cylinder	p. 114	_
	HYQ	Hygienic Design Cylinder/Basic Type	p. 115	-
	HYC	Hygienic Design Cylinder/ISO Standard Type	p. 116	
	HYG	Hygienic Design Cylinder Machanically Inited Regulator Cylinder (Regis Tyres)	p. 117	p. 33
	MY1B-□Z	Mechanically Jointed Rodless Cylinder/Basic Type Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 118	_
•	MY1B	Mechanically Jointed Rodless Cylinder/Enlear Guide Type Mechanically Jointed Rodless Cylinder/Basic Type	p. 119	_
	MY1M	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type		_
	MY1C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 124	•
,	MY1H	Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 125	
	MY1□W	Mechanically Jointed Rodless Cylinder/With Protective Cover: Slide Bearing Guide Type, Cam Follower Guide Type	p. 128	
	MY2C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 129	
	MY2H	Mechanically Jointed Rodless Cylinder/Linear Guide/Single Axis Type	p. 130	-
	MY2HT	Mechanically Jointed Rodless Cylinder/Linear Guide/Double Axis Type		_
	MY3A	Mechanically Jointed Rodless Cylinder/Basic Type	p. 131	
	мүзв	Mechanically Jointed Rodless Cylinder/Basic Type	p. 133	_
	MY3M	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type		-
	СҮЗВ	Magnetically Coupled Rodless Cylinder/Basic Type	p. 136	_
	CY3R	Magnetically Coupled Rodless Cylinder/Direct Mount Type	•	•
	CY1S-Z	Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing		_
	CY1S	Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing		1
	CY1L	Magnetically Coupled Rodless Cylinder/Slider Type: Ball Bushing Bearing		-
	CY1H	Magnetically Coupled Rodless Cylinder/Linear Guide Type	p. 142	_
	MXS	Air Slide Table	p. 144	p. 35
	MXQ	Air Slide Table	p. 145	p. 35
	MXQR	Air Slide Table/Reversible Type	p. 146	p. 35
	MXF	Low Profile Slide Table	p. 147	p. 35
	MXW	Air Slide Table	p. 148	p. 35
	MXP	Air Slide Table	p. 149	p. 35
	MXY	Air Slide Table	p. 151	p. 36
	MGP-□Z	Compact Guide Cylinder	p. 152	p. 36
	MGP□-AZ	Compact Guide Cylinder/With Air Cushion	p. 153	p. 36
	MGP	Compact Guide Cylinder	p. 154	p. 36
	MGP-□A	Compact Guide Cylinder/With Air Cushion	p. 155	p. 36
	MGP	Compact Guide Cylinder/With End Lock	p. 156	p. 36
	MGPS	Compact Guide Cylinder/Heavy Duty Guide Rod Type	p. 157	p. 36
	MGPW	Compact Guide Cylinder/Wide Type	p. 158	p. 36
	MGQ	Compact Guide Cylinder	p. 159	p. 36
	MGG	Guide Cylinder	p. 160	_
	MGG	Guide Cylinder/With End Lock	p. 162	_
	MGC	Guide Cylinder/Compact Type	p. 163	_
	MGF	Guide Table	p. 164	p. 37
	MGZ	Non-rotating Double Power Cylinder	p. 165	_
	MGZ Non-rotating Double Power Cylinder/With End Lock on Rod Side		-	
	MGZR Double Power Cylinder/Without Non-rotating Mechanism		p. 167	
	CX2 Slide Unit/Double Rod Type		p. 168	
	CXWM	Slide Unit/Built-in Shock Absorber	p. 169	_
	CXWL Slide Unit/Built-in Shock Absorber		p. 171	
CXT Platform Cylinder CXSJ Dual Rod Cylinder/Compact Type CXS Dual Rod Cylinder/Baris Type			p. 173	_
			p. 174	
		, ,,	p. 176	
	CXS	Dual Rod Cylinder/With Air Cushion	p. 178	
	CXS	Dual Rod Cylinder/With End Lock for Retraction Side	p. 179	-
	CXSW	Dual Rod Cylinder/Double Rod Type	p. 180	
	CLG1	Fine Lock Cylinder/Double Acting, Single Rod	p. 181	p. 37
	CL1	Lock-up Cylinder/Double Acting, Single Rod	p. 182	- 0-

		Parts	illelli II	Procedure
CNG	Cylinder with Lock/Double Acting, Single Rod		_	o. 381
MNB	Cylinder with Lock/Double Acting, Single Rod	_	-	. 384
MNBW	Cylinder with Lock/Double Acting, Double Rod		-	. 384
CNA2	Cylinder with Lock/Double Acting, Single Rod		- 1	. 384
CNA2W	Cylinder with Lock/Double Acting, Double Rod		-	. 384
CNS	Cylinder with Lock/Double Acting, Single Rod	•		. 389
CLS	Cylinder with Lock/Double Acting, Single Rod	<u> </u>	·	. 391
REAR	Sine Rodless Cylinder/Direct Mount Type	_	-	. 349
REAS	Sine Rodless Cylinder/Slider Type: Slide Bearing	_	- 1	. 394
REAL	Sine Rodless Cylinder/Slider Type	p. 19	- 1	_
REAH	Sine Rodless Cylinder/Linear Guide Type	p. 19		_
REBR	Sine Rodless Cylinder/Direct Mount Type	_	-	. 349
REBH	Sine Rodless Cylinder/Linear Guide Type	p. 20	-	_
REC	Sine Cylinder		-	. 395
RHC	High Power Cylinder		- '	. 397
RZQ	3 Position Cylinder		- 1	. 400
MK	Rotary Clamp Cylinder/Standard	_	-	. 404
MK2T	Rotary Clamp Cylinder/Double Guide Type	_	Ť	. 404
	Pin Clamp Cylinder D series	_	- 1	. 407
	Pin Clamp Cylinder U series	_		. 407
. ,	Pin Clamp Cylinder K series		— ·	. 407
. ,	Pin Clamp Cylinder M series	•	·	. 407
• • • •	Guide Pins Assembly/Clamp Arm Assembly Kit Number	p. 21	-	_
CKQG32	Pin Clamp Cylinder/Compact Cylinder Type	p. 21		
CKU32	Pin Clamp Cylinder/Plate Cylinder Type	p. 21		_
CKG1	Clamp Cylinder with Magnetic Field Resistant Auto Switch (Rod Mounting)	p. 21	_	_
CKP1	Clamp Cylinder with Magnetic Field Resistant Auto Switch (Rod Mounting)	p. 21		_
CK1	Clamp Cylinder/Magnetic Field Resistant Auto Switch (Band Mounting)	p. 21	-	_
CKG1	Clamp Cylinder/Magnetic Field Resistant Auto Switch (Band Mounting)	p. 21	_	_
RSQ	Stopper Cylinder/Fixed Mounting Height	p. 21	16 p	. 418
RSG	Stopper Cylinder/Adjustable Mounting Height	p. 21	17 p	. 418
RSH	Heavy Duty Stopper Cylinder	_	— ř	. 420
RS2H	Heavy Duty Stopper Cylinder	p. 21	19 p	. 420
MIW	Escapements/Double Finger Type	p. 22	20 p	. 423
MIS	Escapements/Single Finger Type			423
		p. 22	21 p	,LU
CVQ	Compact Cylinder/With Solenoid Valve		- 1	. 323
CVQ CVM5	Compact Cylinder/With Solenoid Valve Valve Mounted Cylinder/Double Acting, Single Rod	p. 22	22 p	
		p. 22 p. 22	22 p 23 p	. 323
CVM5	Valve Mounted Cylinder/Double Acting, Single Rod	p. 22 p. 22 p. 22	22 p 23 p 24 p	o. 323 o. 313
CVM5 CVM5K	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p	o. 323 o. 313 o. 313
CVM5 CVM5K CVM3	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend	p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p 26 p	o. 323 o. 313 o. 313 o. 313
CVM5 CVM5K CVM3 CVM3K	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	p. 22 p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p 26 p 27	o. 323 o. 313 o. 313 o. 313
CVM5 CVM5K CVM3 CVM3K CV3	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p 26 p 27	o. 323 o. 313 o. 313 o. 313
CVM5 CVM5K CVM3 CVM3K CV3 CV3K	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p 26 p 27 28	o. 323 o. 313 o. 313 o. 313 o. 313
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CV31	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22	22 p 23 p 24 p 25 p 26 p 27 28 29	o. 323 o. 313 o. 313 o. 313 o. 313 —
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23	22 p 23 p 24 p 25 p 26 p 27 28 29 30 31	0. 323 0. 313 0. 313 0. 313 0. 313 ———————————————————————————————————
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CV51 CVS1K CH□QB	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23	22 p 23 p 24 p 25 p 26 p 27 28 29 30 31 32	0. 323 0. 313 0. 313 0. 313 0. 313 ———————————————————————————————————
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CH□QB CH□QWB	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23	22 p 23 p 24 p 25 p 26 p 27 28 29 30 31 32 333 p	o. 323 o. 313 o. 313 o. 313 o. 313 — — —
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CH□QB CH□QWB CH□KD	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder	p. 222 p. 222 p. 222 p. 222 p. 222 p. 222 p. 223 p. 232 p. 233 p. 233 p. 232 p. 232 p. 232	22 p 23 p 24 p 25 p 26 p 26 p 28 29 30 31 32 33 p 34 p	0. 323 0. 313 0. 313 0. 313 0. 313 ———————————————————————————————————
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CH□QB CH□QWB CH□KD CH□KG	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23 p. 23 p. 23	22 p 23 p 24 p 25 p 26 p 26 p 27 28 29 30 331 332 333 p 34 p	0. 323 0. 313 0. 313 0. 313 0. 313
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1 CHQB CHQWB CHGKD CHNKG CHN	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23	22 p 23 p 24 p 25 p 26 p 26 p 27 28 29 30 31 32 33 p 33 p 33 p 36 p 37 p	0. 323 0. 313 0. 313 0. 313 0. 313
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CH□QB CH□QWB CH□KD CH□KG CHN CHSD	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23	22 p 23 p 24 p 25 p 26 p 26 p 27 28 29 30 31 32 33 p 33 p 33 p 36 p 37 p	0. 323 0. 313 0. 313 0. 313 0. 313
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CHQB CHQWB CHGWB CHGKD CHSD CHSG	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder	p. 222 p. 222 p. 222 p. 222 p. 222 p. 222 p. 223 p. 232 p. 233 p. 233 p. 233 p. 232 p. 232 p. 232 p. 232	22 p 23 p 24 p 25 p 26 p 27 p 28 p 29 p 30 p 31 p 32 p 33 p 34 p 35 p 36 p 37 p	0. 323 0. 313 0. 313 0. 313 0. 313 0. 313 0. 313 0. 425 0. 425 0. 425 0. 426 0. 427 0. 428 0. 428
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CVS1C CVS1K CH□QB CH□KD CH□KG CHN CHSD CHSG CH2E	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23 p. 23	22 p 23 p 24 p 24 p 25 p 26 p 26 p 27 p 28 p 30 p 31 p 32 p 33 p 34 p 35 p 36 p 37 p 38 p	0. 323 0. 313 0. 313 1. 313
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CH□QB CH□QWB CH□KD CH□KG CH□KG CHSC CHSC CHSC CHSC CHSC CH2E CH2F	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder	p. 222 p. 222 p. 222 p. 222 p. 222 p. 223 p. 233 p. 234 p. 235 p.	22 p 23 p 24 p 25 p 26 p 27 p 28 p 30 p 31 p 32 p 33 p 33 p 34 p 35 p 36 p 37 p 38 p 38 p	0. 323 0. 313 0. 313 0. 313 0. 313 0. 313 0. 313 0. 313 0. 313 0. 342 0. 425 0. 426 0. 427 0. 428 0. 429 0. 429 0. 429 0. 429
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CH□QB CH□CMB CH□KD CH□KG CHN CHSD CHSC CH2E CH2F CH2G CH2H CH2EW	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder/Double Acting, Single Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 22 p. 23 p. 24 p. 25 p. 26 p. 26	22 p 23 p 24 p 25 p 26 p 27 p 28 p 29 p 30 p 31 p 32 p 33 p 34 p 35 p 36 p 37 p 38 p 38 p 38 p 38 p	0. 323 0. 313 0. 426 0. 427 0. 428 0. 429 0. 429
CVM5 CVM5K CVM3 CVM3K CV3 CV3K CVS1 CVS1K CH□QB CH□QWB CH□KD CH□KG CH□KG CH□CHSC CHSC CHSC CHSC CH2E CH2F CH2H	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder/Double Acting, Single Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 222 p. 223	222 p 223 p 224 p 225 p 226 p 227 p 228 p 229 p 330 p 331 p 332 p 333 p 334 p 335 p 336 p 337 p 338 p 338 p 338 p 339 p	0. 323 0. 313 0. 426 0. 427 0. 428 0. 429 0. 429
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CH□QB CH□CMB CH□CMB CH□CHC CHSC CHSC CH2E CH2F CH2EW CH2FW CH4 CH2FW CH4	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder/Double Acting, Single Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 222 p. 223	222 p 223 p 224 p 225 p 226 p 227 p 228 p 229 p 330 p 331 p 332 p 333 p 334 p 335 p 336 p 337 p 338 p 338 p 338 p 339 p	0. 323 0. 313 0. 426 0. 427 0. 428 0. 429 0. 429
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CHQB CHQWB CHGKD CHSD CHSC CHSC CHSC CHSC CHSC CHSC CHS	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder Small Bore Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder/Double Acting, Single Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 222 p. 223 p. 233 p. 23	22 p 23 p 24 p 24 p 25 p 26 p 27 p 28 p 29 p 30 p 31 p 32 p 33 p 34 p 35 p 36 p 37 p 38 p 38 p 38 p 39 p 40 p	0. 323 0. 313 0. 426 0. 427 0. 428 0. 429 0. 429
CVM5 CVM5K CVM3 CVM3K CV3 CVS1 CVS1K CH□QB CH□CMB CH□CMB CH□CHC CHSC CHSC CH2E CH2F CH2EW CH2FW CH4 CH2FW CH4	Valve Mounted Cylinder/Double Acting, Single Rod Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Single Acting, Spring Return/Extend Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting Compact Hydraulic Cylinder/Double Acting, Single Rod Compact Hydraulic Cylinder/Double Acting, Double Rod JIS Standard Compact Hydraulic Cylinder Compact Hydraulic Cylinder ISO Standard Hydraulic Cylinder ISO Standard Hydraulic Cylinder JIS Standard Hydraulic Cylinder/Double Acting, Single Rod JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 222 p. 225 p. 225 p. 225 p. 225 p. 225 p. 227 p.	22 p 23 p 24 p 25 p 26 p 27 p 28 p 29 p 30 p 31 p 32 p 33 p 34 p 35 p 36 p 37 p 38 p 38 p 38 p 40 p 41 p 42 p	0. 323 0. 313 0. 426 0. 427 0. 428 0. 429 0. 429



1 Cylinder inspection items

The following describes the general contents of the cylinder inspection items.

Actually, add inspection items suitable for the customer's specifications and perform the inspection work.

■ Inspection items

- 1) Check the cylinder mounting bolt or nut for looseness.
- 2) Check the cylinder mounting frame for looseness or unusual deflection.
- 3) Check the rod end bracket, tie rod, or bolt for looseness or rattle.
- 4) Check the rod for dent or sliding scratch.
- 5) Check that the cylinder operates smoothly and that the minimum operating pressure does not increase.
- 6) Check that the piston speed or cycle time does not change.
- 7) Check that any shock does not occur at the operation end or that any unusual noise is not heard
- 8) Check for eternal leak. In particular, carefully check the rod seal.
- 9) Check that the stroke is correct and that the cylinder operates the specified stroke.
- 10) Check that the auto switch operates correctly, that the switch joint is not loose, and that the switch position does not deviate.

■ Trouble judgement from cylinder status (Judgement from appearance)

- 1) Only one side of the rod surface is contaminated blackly.
 - → The seal is worn out unevenly by the eccentric load or lateral load.
- 2) Thin sliding scratch is marked on the entire periphery of the rod in the operation direction.
 - → The lubrication is faulty due to grease run-out.
- 3) Sliding scratch is marked on only one side of the rod surface.
 - → The rod is strongly in contact with the bushing by the eccentric load or lateral load, causing scratch.
- 4) A part of the rod is scratched in a direction perpendicular to the cylinder operation.
 - → A large lateral load is applied when the cylinder stops.
- 5) Air leaks from the rod seal.
 - → Scratch, dent, eccentric load, or external foreign object (solid or liquid) may be the cause.

■ Probable troubles (Reference)

Refer to the cylinder troubleshooting. (p. 5)

2 Troubleshooting

The following describes the general contents of the troubleshooting.

[Cylinder]

Trouble (Symptom)	Cause	Corrective action
The operation is not smooth. The output drops. The cylinder does not operate.	The grease of the sliding part runs out.	Apply the grease. The following may be the cause of the trouble. • As water content, such as drain enters, the grease flows out. • The lubrication is stopped halfway. • The cylinder is operated in an environment where the fluid splashes.
	The center between the work- piece and cylinder shaft or the center between the workpiece guide shaft and cylinder shaft de- viates.	Align the center. Check that the cylinder operates smoothly with the air not supplied to the cylinder. Additionally, examine the use of the floating joint.
	The piston rod deforms.	Replace the cylinder. The following may be the cause of the trouble. The center between the cylinder and load deviates. A lateral load exceeding an allowable level is applied. The kinetic energy exceeds an allowable level. An excessive force is applied when mounting a load.
	The air leaks (seal is worn-out).	Replace the seal. The following may be the cause of the trouble. • The center between the cylinder and load deviates. • A lateral load exceeding an allowable level is applied. • The operating temperature exceeds its range. • The grease runs out. • A foreign object enters.
	The air pressure is insufficient.	Supply an appropriate pressure. The following may be the cause of the trouble. The supply pressure decreases. The pressure regulator setting deviates. The piping is clogged.
	The cylinder operates at low speed.	Operate the cylinder within the specification range.
	The cylinder output is insufficient.	Increase the operating pressure or use an appropriate cylinder with a large bore size. Since there are cylinder and mechanical resistances, it is necessary to consider the load factor.
	The system configuration is not appropriate.	Use piping tube, fitting, directional control valve, and speed controller with proper sizes.
	Equipment other than the cylinder malfunctions or is faulty.	Investigate the target system step-by-step. The following may be the cause of the trouble. • The directional control valve malfunctions. • The speed controller is not adjusted properly. • The speed controller malfunctions. • The piping is clogged. • The filter is clogged, etc.
The cylinder part is damaged.	The cylinder operates at high speed.	Adjust the speed with the speed controller to operate the cylinder within the specification range.
	Overload	Operate the cylinder within its allowable kinetic energy range.
	Lateral load	Operate the cylinder within its lateral load range.
	Unusual external force is applied.	If any mechanical interference, eccentric load, or overload occurs, this may cause the cylinder to deform or break. Remove such adverse factors.



 
Pin Cylinder/Double Acting, Single Rod

CJP2 Series Ø6, Ø10, Ø16




Construction

C□JP2B6



C□JP2B10, 16

 

* The numbers correspond with those in the "Construction" of the CJP2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Desc	cription	Material	Note
10	Piston seal		NBR	
11)	Rod seal		NBR	
12	Gasket	ø 6 , ø 10 , ø 16	NBR	

Replacement Parts: Seal Kit

riopiacoment i arto: Coar Rit			
Part no.	Contents		
Standard			
CJP2B6D-PS	Cat of man		
CJP2B10D-PS	Set of nos.		
CJP2B16D-PS	(1), (1), (2)		
	Part no. CJP2B6D-PS CJP2B10D-PS		

* The seal kit includes a grease pack (5 g).

Order with the following part number when only the grease pack is required.

Grease pack part number: GR-L-005 (5 g)

XB6/Heat-resistant cylinder (-10 to 150°C)

6	CJP2B6D-XB6-PS	Cat of man
10	CJP2B10D-XB6-PS	Set of nos.
16	CJP2B16D-XB6-PS	(10), (11), (12)

* The seal kit includes a grease pack (5 g).

Order with the following part number when only the grease pack is required.

Grease pack part number: GR-F-005 (5 g)

XB7/Cold-resistant cylinder

6	CJP2B6D-XB7-PS	0-4-4
10	CJP2B10D-XB7-PS	Set of nos.
16	CJP2B16D-XB7-PS	(0, 11), (2)

* The seal kit includes a grease pack (5 g).

Order with the following part number whe

Order with the following part number when only the grease pack is required.

Grease pack part number: GR-T-005 (5 g)

XC22/Fluororubber seal

6	CJP2B6D-XC22-PS	Set of nos.
10	CJP2B10D-XC22-PS	10, (1), (12)
16	CJP2B16D-XC22-PS	10, 11, 12

* The seal kit includes a grease pack (5 g).

Order with the following part number when only the grease pack is required.




Pin Cylinder/Single Acting, Spring Return

CJP Series Ø4, Ø6, Ø10, Ø15

Construction (Not able to disassemble.)

Embedded type

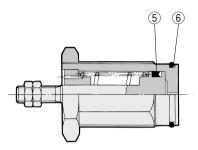

* The numbers correspond with those in the "Construction" of the CJP series in the Best Pneumatics catalog.

Seal List

No.	Description	Material	I Note	
5	Piston seal		5 is a non-replaceable part	
6	Gasket	NBR	Special product (O-ring) embedded type only	

Replacement Parts/Gasket

ropiacomicnic i a		
Bore size (mm)	Order no.	Contents
4	CJPS4-G	
6	CJPS6-G	No. 6
10	CJPS10-G	INO. ®
15	CJPS15-G	1


* For the plug mounting type

^{*} Since gaskets (10 pcs./set) do not include a grease pack (10 g), it should be ordered separately. Grease pack part no.: GR-S-005 (5 g)


CN2-Z/CN2Y-Z/CN2X-Z Series Replacement Procedure is on

Construction


With rubber bumper

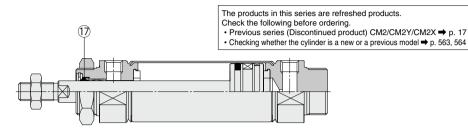

Air-hydro type

 

With air cushion

 

* The figures above show the construction of the CM2-Z series. The numbers correspond with those in the "Construction" of the CM2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(17)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
• Standard type (With rubber bumpe	er/With air cushion)

Smooth cylinder 20

32	CM32Z-PS	
40	CM40Z-PS	
Air-hydro type		
20	CM2H20-PS	
25	CM2H25-PS	1

CM2H32-PS CM2H40-PS

CM20Z-PS CM25Z-PS

Low speed cylinder

Low speed cylinder		
20	CM2X20-PS	
25	CM2X25-PS	
32	CM2X32-PS	
40	CM2X40-PS	

* Since the seal kit does not include a grease pack, it should be ordered separately.

Standard type

Grease pack part no.: GR-S-010 (10 g) Smooth/Low speed cylinder Grease pack part no.: GR-L-005 (5 g) GR-L-010 (10 g)

GR-L-150 (150 g)




CM2W-Z Series ©20, ©25 ©32, Ø40




 Construction






Air-hydro type

 

With air cushion

 

* The numbers correspond with those in the "Construction" of the CM2W-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(14)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
With rubber bumper/With air cushion				
20	CM20Z-PS			
25	CM25Z-PS			
32	CM32Z-PS			
40	CM40Z-PS			
Air-hydro type				

Air-nyaro type

20	CM2H20-PS	
25	CM2H25-PS	
32	CM2H32-PS	
40	CM2H40-PS	

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

* Order 2 pcs. per cylinder.


Air Cylinder/Standard Type: Single Acting, Spring Extend

CN2-Z Series ©20, ©25, ©32, ©40 Replacement Procedure is on p. 313



Construction

Spring extend

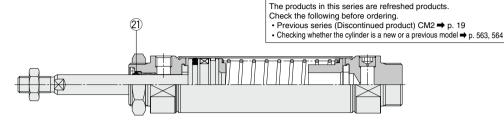

* The number corresponds with that in the "Construction" of the CM2-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
21)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM20Z-PS	
25	CM25Z-PS	
32	CM32Z-PS	
40	CM40Z-PS	

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod

CM2K-Z Series ©20, ©25 ©32, ©40




Construction

With rubber bumper

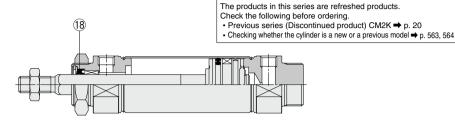

With air cushion

 

* The numbers correspond with those in the "Construction" of the CM2K-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod


CM2KW-Z Series ©20, ©25 ©32, ©40



Construction

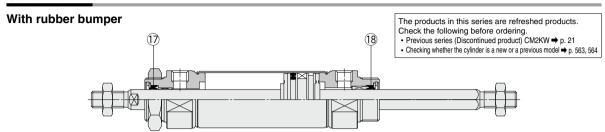

With air cushion

 

* The numbers correspond with those in the "Construction" of the CM2KW-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Rod seal A	NBR	
18)	Rod seal B	INDH	


Replacement Parts: Seal Kit

Bore size	Par	Contents	
(mm)	Rod seal A	Rod seal B	Contents
20	CM20Z-PS	CM2K20-PS	
25	CM25Z-PS	CM2K25-PS	
32	CM32Z-PS	CM2K32-PS	
40	CM40Z-PS	CM2K40-PS	

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

Construction

Spring extend

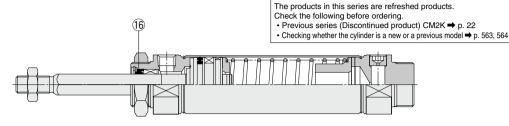

* The number corresponds with that in the "Construction" of the CM2K-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(16)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	

* Since the seal kit does not include a grease pack, it should be ordered separately.




Air Cylinder/Direct Mount Type: Double Acting, Single Rod

CM2R-Z Series ©20, ©25 ©32, ©40




Construction


With rubber bumper

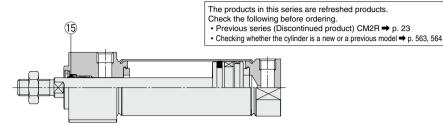

Air-hydro type

 

With air cushion

 

* The numbers correspond with those in the "Construction" of the CM2R-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(15)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
With rubber bumper/With air cushion					
20	CM20Z-PS				
25	CM25Z-PS				
32	CM32Z-PS				
40	CM40Z-PS				
Air-hydro type					
20	20 CM2H20-PS				
25	CM2H25-PS				
32	CM2H32-PS				
40	CM2H40-PS				


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.



CM2RK-Z Series

The Replacement Procedure is on p. 313

Construction

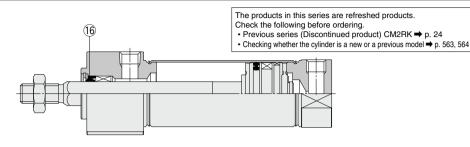

* The number corresponds with that in the "Construction" of the CM2RK-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(16)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	
	20 25 32	20 CM2K20-PS 25 CM2K25-PS 32 CM2K32-PS

* Since the seal kit does not include a grease pack, it should be ordered separately.

CM2/CM2Y/CM2X Series 020, 025 032, 040

 


Construction


With rubber bumper

The production of this series has been discontinued. Check the following before ordering.


- New series CM2-Z/CM2Y-Z/CM2X-Z ⇒ p. 9
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564




Air-hydro type

 

With air cushion

 

With built-in One-touch fittings

 

- * The construction of the smooth cylinder CM2Y series and the low speed cylinder CM2X series are the same as the CM2 series.
- * The numbers correspond with those in the "Construction" of the CM2 series in the Web Catalog.

Seal Kit List

32

17

ĺ	No.	Description	Material	Note
	18	Rod seal	NBR	

Replacement Parts: Seal Kit			
Bore size (mm)	Part no.	Contents	
With rubber bumper/W	ith air cushion/With b	uilt-in One-touch fittings	
20	CM220-PS		
25	CM225-PS		
32	CM232-PS		
40	CM240-PS		
Air-hydro type			
20	CM2H20-PS		
25	CM2H25-PS		

CM2H40-PS * Since the seal kit does not include a grease pack, it should be ordered separately. Grease pack part no.: GR-S-010 (10 g)

CM2H32-PS

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
Smooth cylinde	r	
20	CM220-PS	
25	CM225-PS	
32	CM232-PS	
40	CM240-PS	
Low speed cylir	der	
20	CM3Y30 BS	

20	CM2X20-PS
25	CM2X25-PS
32	CM2X32-PS
40	CM2X40-PS

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-L-005 (5 g)

GR-L-010 (10 g)

GR-L-150 (150 g)




The


CM2W Series ©20, ©25 ©32, ©40

Construction




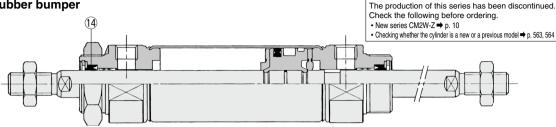


Air-hydro type

 

With air cushion

 

With built-in One-touch fittings

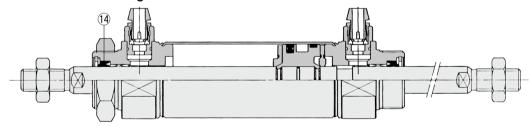

* The numbers correspond with those in the "Construction" of the CM2W series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
14)	Rod seal	NBR	

Replacement Parts: Seal Kit

With rubber bumper, With air cushion, With built-in One-touch fittings

minimization bumpon, m	June ni Ono touon ntungo	
Bore size (mm)	Part no.	Contents
20	CM220-PS	
25	CM225-PS	
32	CM232-PS	
40	CM240-PS	

Air-hydro type

J		
Bore size (mm)	Part no.	Contents
20	CM2H20-PS	
25	CM2H25-PS	
32	CM2H32-PS	
40	CM2H40-PS	

- * Since the seal kit does not include a grease pack, it should be ordered separately.
 - Grease pack part no.: GR-S-010 (10 g)
- * 2 pcs. are required per cylinder.




Air Cylinder/Standard Type: Single Acting, Spring Return/Extend


CM2 Series Ø20, Ø25, Ø32, Ø40




Construction

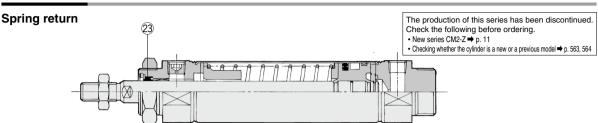


  Spring return, With built-in One-touch fittings





 Spring extend, With built-in One-touch fittings



* The numbers correspond with those in the "Construction" of the CM2 series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
23	Rod seal	NBR	

Replacement Parts: Seal Kit With rubber bumper, With built-in One-touch fittings

	,	
Bore size (mm)	Part no.	Contents
20	CM220-PS	
25	CM225-PS	
32	CM232-PS	
40	CM240-PS	


^{*} Since the seal kit does not include a grease pack, it should be ordered




CM2K Series ©20, ©25, ©32, ©40



Construction

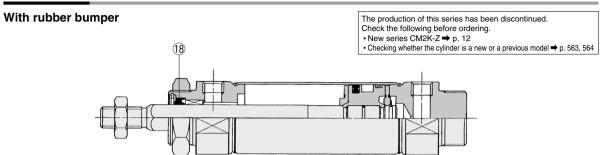

With air cushion

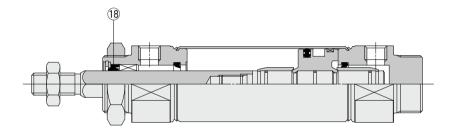

* The numbers correspond with those in the "Construction" of the CM2K series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note		
(18)	Rod seal	NBR			

Replacement Parts: Seal Kit With rubber bumper. With air cushion

With rubber bumper, With an easilion				
Bore size (mm)	Part no.	Contents		
20	CM2K20-PS			
25	CM2K25-PS			
32	CM2K32-PS			
40	CM2K40-PS			

* Since the seal kit does not include a grease pack, it should be ordered separately.


Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod

CM2KW Series


Ø20, Ø25 Ø32, Ø40



Construction

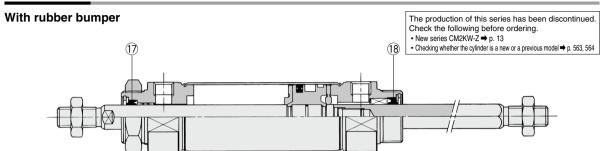

With air cushion

 

* The numbers correspond with those in the "Construction" of the CM2KW series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
17	Rod seal A	NBR	
18	Rod seal B	NDN	

Replacement Parts: Seal Kit

With rubber bumper, With air cushion, With built-in One-touch fittings

Bore size	Part no.		Contents
(mm)	Rod seal A	Rod seal B	Contents
20	CM220-PS	CM2K20-PS	
25	CM225-PS	CM2K25-PS	
32	CM232-PS	CM2K32-PS	
40	CM240-PS	CM2K40-PS	

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

CM2K Series ©20, ©25, ©32, ©40



 
Construction

Spring return


The production of this series has been discontinued. Check the following before ordering.

• New series CM2K-Z ⇒ p. 14

• Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564



Spring extend

 

* The numbers correspond with those in the "Construction" of the CM2K series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
(23)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	

* Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)


Actuators

Air Cylinder/Direct Mount Type: Double Acting, Single Rod


CM2R Series 020, 025, 032, 040




Construction

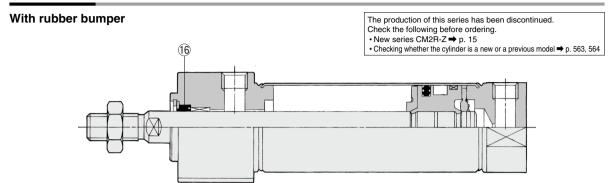

Air-hydro type

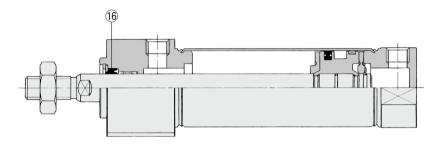

With air cushion

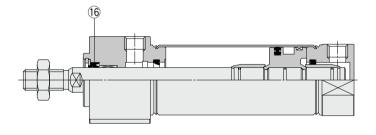

* The numbers correspond with those in the "Construction" of the CM2R series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal	NBR	

Replacement Parts: Seal Kit

With rubber bumper, With air cushion

	••	
Bore size (mm)	Part no.	Contents
20	CM220-PS	
25	CM225-PS	
32	CM232-PS	
40	CM240-PS	

Air-hydro type

Bore size (mm)	Part no.	Contents
20	CM2H20-PS	
25	CM2H25-PS	
32	CM2H32-PS	
40	CM2H40-PS	


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.



CM2RK Series

The Replacement Procedure is on p. 313

Construction

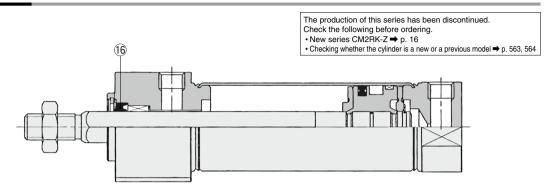

* The number corresponds with that in the "Construction" of the CM2RK series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Modular F.R.L. Pressure Control Equipment


Air Preparation Equipment

lacement Industrial Filters

Air Cylinder/Centralized Piping Type: Double Acting, Single Rod

The Replacement Procedure is on p. 313

Construction

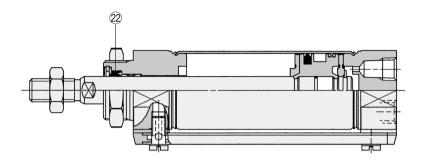

* The number corresponds with that in the "Construction" of the CM2 P series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
22	Rod seal	NBR	

Replacement Parts: Seal Kit

I	Bore size (mm)	Part no.	Contents
	20	CM220-PS	
Ī	25	CM225-PS	
	32	CM232-PS	
	40	CM240-PS	

 
^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

CBM2 Series ©20, ©25, ©32, ©40




Construction


Head end lock



Manual release (Non-lock type): Suffix N

  With air cushion





* The numbers correspond with those in the "Construction" of the CBM2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
26	Rod seal		33 is a non-replaceable
27)	Lock piston seal	NBR	part, so it is not included
33	Cushion needle seal		in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
With lock in single end				
20	CBM2-20-PS			
25	CBM2-25-PS	Set of nos. 26, 27		
32	CBM2-32-PS	3et 01 1105. 29, 20		
40	CBM2-40-PS			

With lock at double ends

Trial look at acabic criac			
20	CBM2-20-PS-W		
25	CBM2-25-PS-W	Set of nos. 26, 27	
32	CBM2-32-PS-W	Set of flos. 49, 40	
40	CBM2-40-PS-W		

- * The seal kit includes 26 and 20. Order the seal kit based on each bore size. (Except 33.)
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

 Grease pack part no.: GR-S-010 (10 g)

Air Cylinder/Standard Type, Smooth Cylinder

CG1-Z/CG1Y-Z Series

Ø20, Ø25 Ø32, Ø40 Ø50, Ø63

 


 
Construction

With rubber bumper

The products in this series are refreshed products. Check the following before ordering.


- Previous series (Discontinued product) CG1/CG1Y ⇒ p. 34
 - Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564







Long stroke

  With air cushion



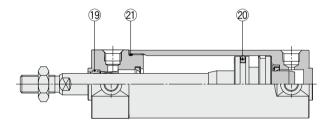



Long stroke

* The figures above show the construction of the CG1-Z series.

The numbers correspond with those in the "Construction" of the CG1-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
19	Rod seal		
20	Piston seal	NBR	22 is a non-replaceable
21)	Tube gasket	INDI	part, so it is not included in the seal kit.
22	Valve seal		

Disassembly/Replacement

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with $\varnothing 50$ or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
Standard type (V	Vith rubber bum	iper)	
20	CG1N20Z-PS		
25	CG1N25Z-PS	Set of nos.	
32	CG1N32Z-PS	19, 20, 21	
40	CG1N40Z-PS		
Smooth cylinder			
20	CG1Y20Z-PS		
25	CG1Y25Z-PS	Set of nos.	
32	CG1Y32Z-PS	19, 20, 21	
40	CG1Y40Z-PS		

* The seal kit includes a grease pack (10 g).

Order with one of the following part numbers when only the grease pack is required.

Standard type

Grease pack part no.: GR-S-010 (10 g)

Smooth cylinder

Grease pack part no.: GR-L-005 (5 g)

GR-L-010 (10 g) GR-L-150 (150 g)





CG1W-Z Series (32, 940) (950, 963) (970)

Air Cylinder/Standard Type: Double Acting, Double Rod

ø20. ø25 Ø80, Ø100

 
Construction



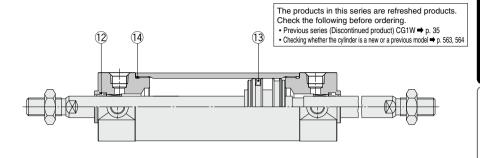

With air cushion



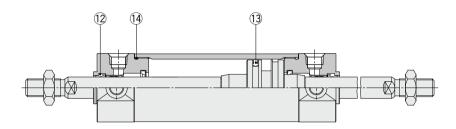

* The numbers correspond with those in the "Construction" of the CG1W-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Rod seal		
13	Piston seal	NBR	15 is a non-replaceable part, so it is not included in the seal kit.
14)	Tube gasket		
15	Valve seal		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Cylinders with $\emptyset 50$ or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
20	CG1WN20Z-PS			
25	CG1WN25Z-PS	Set of nos.		
32	CG1WN32Z-PS	12, 13, 14		
40	CG1WN40Z-PS			

 The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

SMC

Air Cylinder/Standard Type: Single Acting, Spring Return/Extend

CG1-Z Series ©20, ©25, ©32, ©40 Replacement Procedure is on


p. 314

Construction


Single acting, spring return

The products in this series are refreshed products. Check the following before ordering.

- Previous series (Discontinued product) CG1 ⇒ p. 36
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

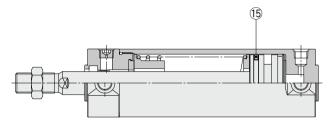

Single acting, spring extend

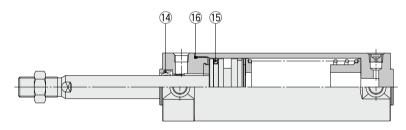

* The numbers correspond with those in the "Construction" of the CG1-Z series in the Best Pneumatics catalog.

Seal Kit List

Single acting, spring return

No.	Description	Material	Note
15	Piston seal	NBR	
• Sir	ngle acting, sprir	ng exter	nd
No.	Description	Material	Note
14)	Rod seal		
15	Piston seal	NBR	
16	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
Single acting, spring return					
20	CG1N20-S-PS				
25	CG1N25-S-PS	No ®			
32	CG1N32-S-PS	No. 15			
40	CG1N40-S-PS				
Single acting, sp	oring extend				
20	CG1N20Z-PS				
25	CG1N25Z-PS	Set of nos.			
32	CG1N32Z-PS	(14), (15), (16)			
40	CG1N40Z-PS				
T					

The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.



Air Cylinder/Non-rotating Rod Type: Double Acting

CG1K-Z Series

Ø20, Ø25 Ø32, Ø40 Ø50, Ø63




 
Construction

With rubber bumper

The products in this series are refreshed products. Check the following before ordering.


- Previous series (Discontinued product) CG1K ⇒ p. 37
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

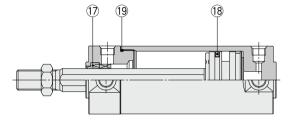





Long stroke

 With air cushion



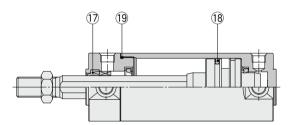

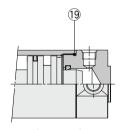

Long stroke

Seal Kit List

No.	Description	Material	Note
17	Rod seal		
18	Piston seal	NBR	20 is a non-replaceable part, so it is not included in the seal kit.
19	Tube gasket		
20	Valve seal		

Disassembly/Replacement

∧ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ϖ 50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
20	CG1KN20Z-PS		
25	CG1KN25Z-PS	Set of nos.	
32	CG1KN32Z-PS	17, 18, 19	
40	CG1KN40Z-PS		

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

^{*} The numbers correspond with those in the "Construction" of the CG1K-Z series in the Best Pneumatics catalog.


Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod

CG1KW-Z Series 920, 925 932, 940 950, 963

20, Ø25 32, Ø40 50, Ø63

The Replacement Procedure is on p. 314

Construction

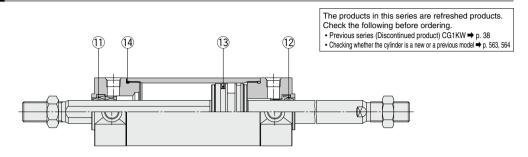

* The numbers correspond with those in the "Construction" of the CG1KW-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11)	Rod seal A		
12	Rod seal B	NBR	
13	Piston seal	INDR	
14	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with \emptyset 50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1KWN20Z-PS	
25	CG1KWN25Z-PS	Set of nos.
32	CG1KWN32Z-PS	11), 12, 13, 14
40	CG1KWN40Z-PS	

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.




Air Cylinder/Direct Mount Type: Double Acting

CG1R-Z Series 020, 025 032, 040 050, 063





Construction

With rubber bumper

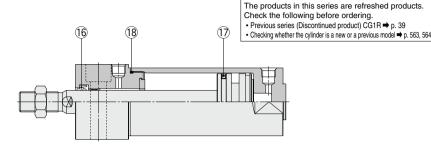

With air cushion

 

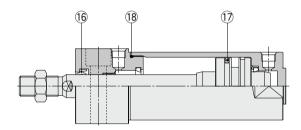

* The numbers correspond with those in the "Construction" of the CG1R-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal		
17	Piston seal	NBR	19 is a non-replaceable part, so it is not included in the seal kit.
18	Tube gasket		
19	Valve seal		

Disassembly/Replacement

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ϖ 50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

- to print of the total of the			
Bore size (mm)	Part no.	Contents	
20	CG1N20Z-PS		
25	CG1N25Z-PS	Set of nos.	
32	CG1N32Z-PS	16, 17, 18	
40	CG1N40Z-PS		

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Air Cylinder/Direct Mount, Non-rotating Rod Type

CG1KR-Z Series 020, 025 032, 040 050, 063

The Replacement Procedure is on p. 314

Construction

Non-rotating rod, bottom mounting

The products in this series are refreshed products. Check the following before ordering.

• Previous series (Discontinued product) CG1KR → p. 40

• Checking whether the cylinder is a new or a previous model → p. 563, 564

* The numbers correspond with those in the "Construction" of the CG1KR-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11)	Rod seal		
12	Piston seal	NBR	
13	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with Ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1KN20Z-PS	
25	CG1KN25Z-PS	Set of nos.
32	CG1KN32Z-PS	11), 12, 13
40	CG1KN40Z-PS	

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.



CG1/CG1Y Series ©20, Ø25, Ø32, Ø40 Ø50, Ø63, Ø80, Ø100

Replacement Procedure is on p. 314


Construction

With rubber bumper


The production of this series has been discontinued Check the following before ordering.

New series CG1-Z/CG1Y-Z ⇒ p. 27

Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

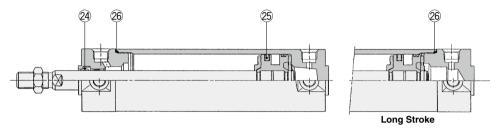

With air cushion

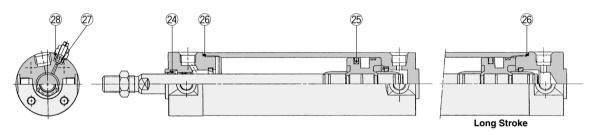

* The numbers correspond with those in the "Construction" of the CG1 series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
24	Rod seal		
25	Piston seal		
26	Tube gasket	NBR	
27)	Valve seal		
28	Valve retainer gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
Standard type: With rubber bumper				
20	CG1N20-PS			
25	CG1N25-PS	Set of nos.		
32	CG1N32-PS	24, 25, 26		
40	CG1N40-PS			

Standard type: With air cushion

20	CG1A20-PS	
25	CG1A25-PS	Set of nos.
32	CG1A32-PS	24, 25, 26, 27, 28
40	CG1A40-PS	

Smooth cylinder

25 CG1Y25-PS Set of nos. 32 CG1Y32-PS ②, ②, ②, ②	20	CG1Y20-PS	
<u> </u>	25	CG1Y25-PS	Set of nos.
	32	CG1Y32-PS	24, 25, 26
40 CG1Y40-PS	40	CG1Y40-PS	

Note) Order with a part number for each type and bore size.

The seal kit includes a grease pack (10 g).

Order with one of the following part numbers when only the grease pack is required.

Standard type

Grease pack part no.: GR-S-010 (10 g)

Smooth cylinder

Grease pack part no.: GR-L-005 (5 g)


GR-L-010 (10 g) GR-L-150 (150 g)

Air Cylinder/Standard Type: Double Acting, Double Rod


CG1W Series 920, 925, 932 940, 950, 963 980, 9100



Construction

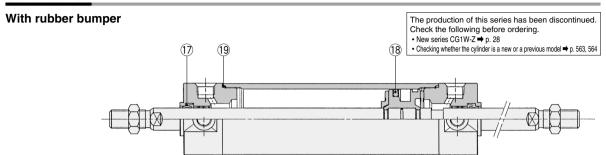

With air cushion

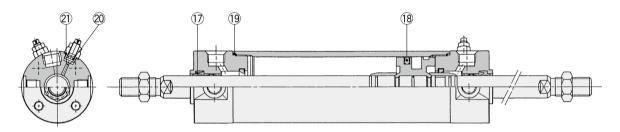

* The numbers correspond with those in the "Construction" of the CG1W series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
17	Rod seal		
18	Piston seal		
19	Tube gasket	NBR	
20	Valve seal		
21)	Valve retainer gasket		

Disassembly/Replacement

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with $\emptyset 50$ or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
With rubber bumper				
20 CG1WN20-PS				
25	CG1WN25-PS	Set of nos.		
32	CG1WN32-PS	17, 18, 19		
40	CG1WN40-PS			

With air cushion

20	CG1WA20-PS	
25	CG1WA25-PS	Set of nos.
32	CG1WA32-PS	17, 18, 19, 20, 21
40	CG1WA40-PS	

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is required.




CG1 Series Ø20, Ø25, Ø32, Ø40

Air Cylinder/Standard Type: Single Acting, Spring Return/Extend

Construction

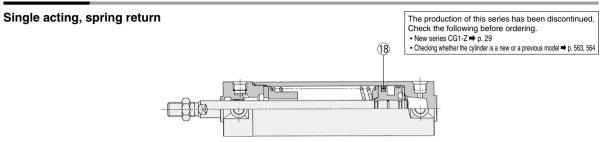

Single acting, spring extend

 

* The numbers correspond with those in the "Construction" of the CG1 series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal	NBR	

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Please note that disassembly by the spring reaction force, because it may cover will pop up. When disassembling cylinders, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1N20-S-PS	
25	CG1N25-S-PS	
32	CG1N32-S-PS	
40	CG1N40-S-PS	

* Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)

Single acting, spring extend

* Replacement parts: Seal kit is the same as the case of standard type single rod (with rubber bumper). Refer to page 34.

Air Cylinder/Non-rotating Rod Type: Double Acting

CG1K Series ©20, ©25, ©32 ©40, ©50, ©63

 


 
Construction

With rubber bumper

The production of this series has been discontinued Check the following before ordering.


- New series CG1K-Z ⇒ p. 30
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564






Long Stroke

With air cushion

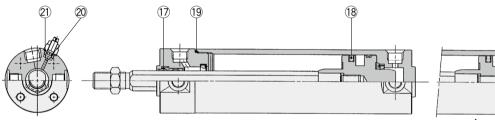

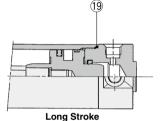

* The numbers correspond with those in the "Construction" of the CG1K series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
17	Rod seal		
18	Piston seal		
19	Tube gasket	NBR	
20	Valve seal		
21)	Valve retainer gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Renlacement Parts: Seal Kit

neplacement Farts. Seal Kit				
Bore size (mm)	Part no.	Contents		
With rubber bumper				
20	CG1KN20-PS			
25	CG1KN25-PS	Set of nos.		
32	CG1KN32-PS	17, 18, 19		
40	CG1KN40-PS			
With air cushion				
40	CG1KA40-PS	Set of nos. ①, ①, ②, ②		

Note) Order with a part number for each type and bore size.

The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.




CG1KW Series

Ø20, Ø25 Ø32, Ø40 Ø50, Ø63 The Replacement Procedure is on p. 314

Construction

The production of this series has been discontinued Check the following before ordering.

- New series CG1KW-Z ⇒ p. 31
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

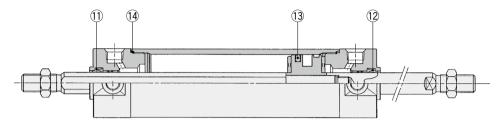

* The numbers correspond with those in the "Construction" of the CG1KW series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
11	Rod seal A		
12	Rod seal B	NBR	
13	Piston seal	INDR	
14)	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage

Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1KWN20-PS	
25	CG1KWN25-PS	Set of nos.
32	CG1KWN32-PS	11, 12, 13, 14
40	CG1KWN40-PS	

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.

Air Cylinder/Direct Mount Type: Double Acting

CG1R Series 020, 025, 032 040, 050, 063



Construction


Standard, bottom mounting, with rubber bumper

The production of this series has been discontinued. Check the following before ordering.

New series CG1R-Z → p. 32

• Checking whether the cylinder is a new or a previous model → p. 563, 564

With air cushion

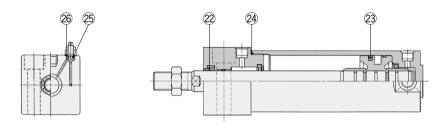

* The numbers correspond with those in the "Construction" of the CG1R series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
22	Rod seal		
23	Piston seal		
24)	Tube gasket	NBR	
25	Valve seal		
26	Valve retainer gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with \emptyset 50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
With rubber bun	nper		
20	CG1N20-PS		
25	CG1N25-PS	Set of nos.	
32	CG1N32-PS	22, 23, 24	
40	CG1N40-PS		
With air cushion			
20	CG1A20-PS		
25	CG1A25-PS	Set of nos.	
32	CG1A32-PS	22. 23. 24. 25. 26	

CG1A40-PS

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.





The Replacement

Air Cylinder/Direct Mount, Non-rotating Rod Type


CG1KR Series ©20, ©25, ©32 ©40, ©50, ©63

Construction

Non-rotating rod, bottom mounting

The production of this series has been discontinued Check the following before ordering.

- New series CG1KR-Z ⇒ p. 33
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

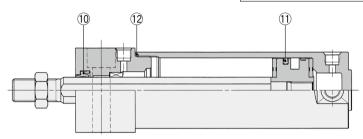

* The numbers correspond with those in the "Construction" of the CG1KR series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
10	Rod seal		
11)	Piston seal	NBR	
12	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

riepiacement i arts. Ocai Kit				
Bore size (mm)	Part no.	Contents		
With rubber bun				
20	CG1KN20-PS			
25	CG1KN25-PS	Set of nos.		
32	CG1KN32-PS	10, 11, 12		
40	CG1KN40-PS			

Note) Order with a part number for each type and bore size.

- * The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is

 
Air Cylinder/With End Lock

CBG1 Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100





Construction

Head end lock with rubber bumper



Head end lock with air cushion

 

 

* The numbers correspond with those in the "Construction" of the CBG1 series in the Best Pneumatics catalog.

Seal Kit List: With Rubber Bumper

No.	Description	Material	Note
25	Rod seal		
26	Piston seal	NBR	
27)	Cylinder tube gasket	INDR	
28	Lock piston seal		

Replacement Parts: Seal Kit: With Rubber Bumper Part no. Series Bore size (mm)

Locking at nead or rod end					
CBG1□N	20	CBG1N20-PS	Set of nos.		
Rubber bumper		CBG1N25-PS	25, 26, 27, 28,		
type	32	CBG1N32-PS	and a grease		
1,700	40	CBG1N40-PS	pack		

Locking at both ends

CBG1□N	20	CBG1N20-PS-W	Set of nos.
Rubber bumper	25	CBG1N25-PS-W	25, 26, 27, 28,
type	32	CBG1N32-PS-W	and a grease
	40	CBG1N40-PS-W	pack

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

Seal Kit List: With Air Cushion

Ou	Courtin Liot: With All Cucinon					
No.	Description	Material	Note			
25	Rod seal					
26	Piston seal					
27)	Cylinder tube gasket	NBR				
28	Lock piston seal	INDI				
40	Valve seal					
41	Valve retainer gasket					

Replacement Parts: Seal Kit: With Air Cushion

Series	Bore size (mm)	Part no.	Contents		
Locking at head or rod end					
CBG1□A Air cushion type	20	CBG1A20-PS	Set of nos.		
	25	CBG1A25-PS	25, 26, 27, 28,		
	32	CBG1A32-PS	40, 41, and a		
	40	CBG1A40-PS	grease pack		
Locking at both ends					

CBG1□A Air cushion type	20	CBG1A20-PS-W	Set of nos.
	25	CBG1A25-PS-W	25, 26, 27, 28,
	32	CBG1A32-PS-W	40, 41), and a
	40	CBG1A40-PS-W	grease pack

Note) Order with a part number for each type and bore size.

The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

- 2. To replace a seal, apply grease to the new seal before installing it. If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air
- 3. Cylinders with ø50 or larger bore sizes cannot be disassembled. When disassembling cylinders with bore sizes ø20 through ø40, grip

the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Disassembly in a locked state, may cause damage to the lock parts, it is recommended to work in the unlocked position.




CG3 Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100



Construction

With rubber bumper

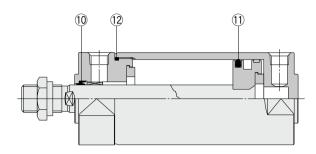

* The numbers correspond with those in the "Construction" of the CG3 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
10	Rod seal		
11	Piston seal	NBR	
12	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG3N20-PS	
25	CG3N25-PS	Set of nos.
32	CG3N32-PS	10, 11, 12
40	CG3N40-PS	

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)

Actuators

Air Cylinder/Standard Type, Smooth Cylinder: Double Acting, Single Rod

MB-Z/MBY-Z Series


ø32, ø40, ø50 ø63, ø80

 


Construction

The products in this series are refreshed products.

- Check the following before ordering.
- Previous series (Discontinued product) MB ⇒ p. 47
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

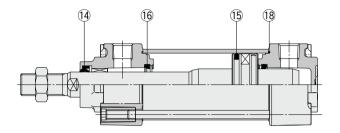



* The figures above show the construction of the MB-Z series. The numbers correspond with those in the "Construction" of the MB-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
14)	Rod seal	NBR	1	17 is a non-
15	Piston seal	NBR	1	replaceable
16	Cushion seal	Urethane	2	part, so it is not
17	Cushion valve seal	NBR	2	included in the
18)	Cylinder tube gasket	NBR	2	seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
Standard type			
32	MB32Z-PS		
40	CA2-40Z-PS		
50	CA2-50Z-PS	0-4-6	
63	CA2-63Z-PS	Set of nos.	
80	CA2-80Z-PS	(4), (1), (10), (10)	
100	CA2-100Z-PS		
125	MB125-PS		
Smooth cylinde	•		

32	MBY32Z-PS	
40	CA2Y40Z-PS	
50	CA2Y50Z-PS	Set of nos.
63	CA2Y63Z-PS	14, 15, 18
80	CA2Y80Z-PS	
100	CA2Y100Z-PS	

- * The seal kit for the standard type includes (4), (5), (6), and (8). Order the seal kit based on each bore size.
- * The center trunnion type should not be disassembled.
- * The seal kit for the standard type includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100, ø125: 30 g). The seal kit for the smooth cylinder also includes a grease pack (10 g).

Order with one of the following part numbers when only the grease pack is required.

Standard type

Grease pack part no.: GR-S-010 (10 g) GR-S-020 (20 g)

Smooth cylinder

Grease pack part no.: GR-L-005 (5 g) GR-L-010 (10 g) **GR-L-150** (150 g)




Air Cylinder/Standard Type: Double Acting, Double Rod

MBW-Z Series 932, 940, 950 963, 980 9100, 9125



Construction

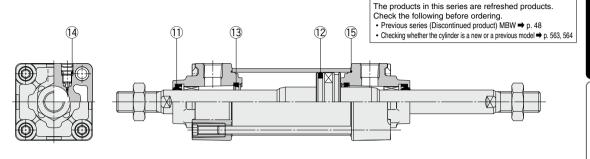

* The numbers correspond with those in the "Construction" of the MBW-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
11	Rod seal	NBR	2	14 is a non-
12	Piston seal	NBR	1	replaceable
13	Cushion seal	Urethane	2	part, so it is not
14	Cushion valve seal	NBR	2	included in the seal kit.
(15)	Cylinder tube gasket	NBR	2	Seai Kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBW32Z-PS	
40	CA2W40Z-PS	
50	CA2W50Z-PS	Cot of mon
63	CA2W63Z-PS	Set of nos.
80	CA2W80Z-PS	U, W, W, W
100	CA2W100Z-PS	
125	MBW125-PS	

- * The seal kit includes (1), (2), (3), and (5). Order the seal kit based on each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100, ø125: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod

MBK-Z Series 032, 040, 050 063, 080, 0100


The Replacement Procedure is on p. 317

 
Construction

The products in this series are refreshed products.

Check the following before ordering.

- Previous series (Discontinued product) MBK ⇒ p. 49
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

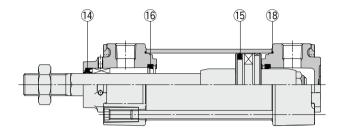



* The numbers correspond with those in the "Construction" of the MBK-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
14)	Rod seal	NBR	1	17 is a non-
15	Piston seal	NBR	1	replaceable
16	Cushion seal	Urethane	2	part, so it is not
17	Cushion valve seal	NBR	2	included in the seal kit.
(18)	Cylinder tube gasket	NBR	2	Sear Kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBK32Z-PS	
40	MBK40Z-PS	
50	MBK50Z-PS	Set of nos.
63	MBK63Z-PS	14, 15, 16, 18
80	MBK80Z-PS	
100	MBK100Z-PS	

- * The seal kit includes (4), (5), (6), and (8). Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.



Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod

MBKW-Z Series


Ø32, Ø40 Ø50, Ø63 Ø80, Ø100



Construction

The products in this series are refreshed products.

- Check the following before ordering.
- Previous series (Discontinued product) MBKW ⇒ p. 50
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

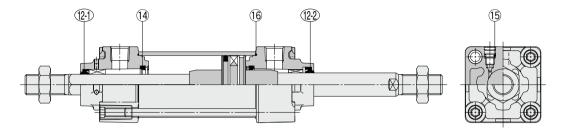

* The numbers correspond with those in the "Construction" of the MBKW-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
(12-1)	Rod seal	NBR	1	
(12-2)	Rod seal	NBR	1	15 is a non-
13	Piston seal	NBR	1	replaceable part, so it is not
14)	Cushion seal	Urethane	2	included in the
15	Cushion valve seal	NBR	2	seal kit.
16	Cylinder tube gasket	NBR	2	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBKW32Z-PS	
40	MBKW40Z-PS	
50	MBKW50Z-PS	Set of nos.
63	MBKW63Z-PS	12, 13, 14, 16
80	MBKW80Z-PS	
100	MBKW100Z-PS	

- * The seal kit includes ②, ③, ④, and ⑥. Order the seal kit based on each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100: 30 q).

Order with one of the following part numbers when only the grease pack is required.


Air Cylinder/Single Rod

 
MB Series ©32, ©40, ©50, ©63 ©80, ©100, ©125



Construction

The production of this series has been discontinued. Check the following before ordering. • New series MB-Z ⇒ p. 43 • Checking whether the cylinder is a new or a previous model → p. 563, 564

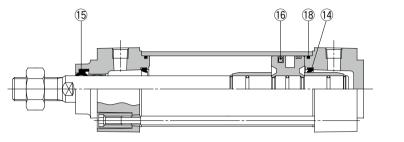



* The numbers correspond with those in the "Construction" of the MB series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
14)	Cushion seal	Urethane	
15	Rod seal	NBR	17 is a non-replaceable
16	Piston seal	NBR	part, so it is not included
17	Cushion valve seal	NBR	in the seal kit.
(18)	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MB32-PS	
40	MB40-PS	
50	MB50-PS	Cat of non
63	MB63-PS	Set of nos.
80	MB80-PS	(19, 10, 10, 10
100	MB100-PS	
125	MB125-PS	

- * Seal kits consist of items 14, 15, 16 and 18, and can be ordered by using the seal kit number corresponding to each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100, ø125: 30 g).

Order with one of the following part numbers when only the grease pack is required.



MBW Series ©32, Ø40, Ø50, Ø63 Ø80, Ø100, Ø125




Construction

The production of this series has been discontinued.

Check the following before ordering.

- New series MBW-Z ⇒ p. 44
- Checking whether the cylinder is a new or a previous model → p. 563, 564

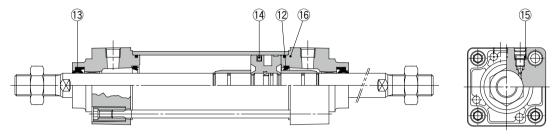

* The numbers correspond with those in the "Construction" of the MBW series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
12	Cushion seal	Urethane	
13	Rod seal	NBR	15 is a non-replaceable
14)	Piston seal	NBR	part, so it is not included
15	Cushion valve seal	NBR	in the seal kit.
(16)	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

riopiacement i	ito. Ocai itit	
Bore size (mm)	Part no.	Contents
32	MBW32-PS	
40	MBW40-PS	
50	MBW50-PS	Cat of man
63	MBW63-PS	Set of nos. (2), (3), (4), (6)
80	MBW80-PS	(2, (3), (4), (0)
100	MBW100-PS	
125	MBW125-PS	

- * Seal kits consist of items 12, 13, 14 and 16, and can be ordered by using the seal kit number corresponding to each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100, ø125: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Air Cylinder/Non-rotating Rod Type

MBK Series ©32, ©40, ©50 ©63, ©80, ©100

 



Construction

The production of this series has been discontinued.
Check the following before ordering.

New series MBK-Z → p. 45

Checking whether the cylinder is a new or a previous model → p. 563, 564



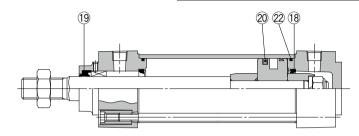

* The numbers correspond with those in the "Construction" of the MBK series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
18	Cushion seal	Urethane	
19	Rod seal	NBR	21 is a non-replaceable
20	Piston seal	NBR	part, so it is not included
21	Cushion valve seal	NBR	in the seal kit.
22	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBK32-PS	
40	MBK40-PS	
50	MBK50-PS	Set of nos.
63	MBK63-PS	18, 19, 20, 22
80	MBK80-PS	
100	MBK100-PS	

- * Seal kits consist of items (18, (19, 20) and (22), and can be ordered by using the seal kit number corresponding to each bore size.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).
- Order with one of the following part numbers when only the grease pack is required.
- Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)
- * Model without air cushion is designed to include rubber bumpers.

MBKW Series ©32, ©40, ©50 ©63, ©80, ©100




Construction

The production of this series has been discontinued.

Check the following before ordering.

• New series MBKW-Z ⇒ p. 46

• Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

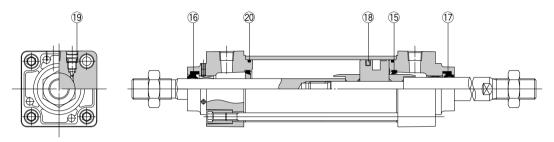

* The numbers correspond with those in the "Construction" of the MBKW series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
15	Cushion seal	Urethane	
16	Rod seal A	NBR	
17	Rod seal B	NBR	19 is a non-replaceable
18	Piston seal	NBR	part, so it is not included in the seal kit.
19	Cushion valve seal	NBR	
20	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

riopiacomonici a	ito. Ocai itit	
Bore size (mm)	Part no.	Contents
32	MBKW32-PS	
40	MBKW40-PS	
50	MBKW50-PS	Set of nos.
63	MBKW63-PS	15, 16, 17, 18, 20
80	MBKW80-PS	
100	MBKW100-PS	

- * The seal kit includes (5, (6, (7), (8), and (20). Order the seal kit based on each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100, ø125: 30 g).


Order with one of the following part numbers when only the grease pack is required.

 
Air Cylinder/Low Friction Type

MB Q Series ©32, ©40, Ø50 Ø63, Ø80, Ø100



Construction

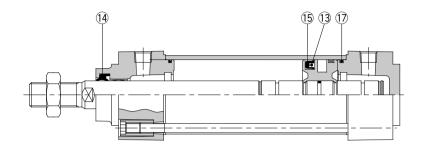



* The numbers correspond with those in the "Construction" of the MBQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
13	Back-up O-ring		
14)	Rod seal		16 is a non-replaceable
15	Piston seal	NBR	part, so it is not included
16	Cushion valve seal		in the seal kit.
(17)	Cylinder tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBQ32-PS	
40	MBQ40-PS	
50	MBQ50-PS	Set of nos.
63	MBQ63-PS	13, 14, 15, 17
80	MBQ80-PS	
100	MBQ100-PS	

- * Seal kits consist of items 3, 4, 5 and 7, and can be ordered by using the seal kit number corresponding to each bore size.
- * The trunnion type should not be disassembled.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-L-005 (5 g), GR-L-010 (10 g), GR-L-150 (150 g)


The Replacement Procedure is on p. 317

Air Cylinder/With End Lock

MBB Series 032, 040, 050 063, 080, 0100

Construction

Locking at head end Manual release non-locking type: N

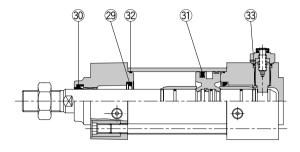

* The numbers correspond with those in the "Construction" of the MBB series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
29	Cushion seal	Urethane	
30	Rod seal	NBR	
31)	Piston seal	NBR	
32	Cylinder tube gasket	NBR	
33	Lock piston seal	NBR	

Replacement Parts: Seal Kit

rtopiacoment i	101 0041 1111				
Bore size (mm)	Part no.	Contents			
Locking at head or rod end					
32	MBB32-PS				
40	MBB40-PS				
50	MBB50-PS	Set of nos.			
63	MBB63-PS	29, 30, 31, 32, 33			
80	MBB80-PS				
100	MBB100-PS				

Loc	kina	at	botl	h end	S
		•••	~~.		_

32	MBB32-PS-W	
40	MBB40-PS-W	
50	MBB50-PS-W	Set of nos.
63	MBB63-PS-W	29, 30, 31, 32, 33
80	MBB80-PS-W	
100	MBB100-PS-W	

- * Seal kits consist of items 29 to 33, and can be ordered by using the seal kit number corresponding to each bore size.
- * The trunnion type should not be disassembled.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g,

Order with one of the following part numbers when only the grease pack is required.

Square Tube Type Air Cylinder/Standard Type: Double Acting, Single Rod


MB1-Z Series 032, 040, 050, 063 080, 0100, 0125




Construction

The products in this series are refreshed products. Check the following before ordering.

 - Previous series (Discontinued product) MB1 ⇒ p. 56
- Checking whether the cylinder is a new or a previous model → p. 563, 564

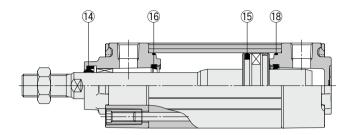



* The numbers correspond with those in the "Construction" of the MB1-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
14	Rod seal	NBR	1	17 is a
15	Piston seal	NBR	1	non-replaceable
16	Cushion seal	Urethane	2	part, so it is not
17	Cushion valve seal	NBR	2	included in the seal kit.
18	Cylinder tube gasket	NBR	2	Sear Kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MB32Z-PS	
40	MB1-40Z-PS	
50	MB1-50Z-PS	0-4-6
63	MB1-63Z-PS	Set of nos.
80	MB1-80Z-PS	(4), (3), (6), (6)
100	MB1-100Z-PS	
125	MB125-PS	

- * The seal kit includes (4) to (6), (8). Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø32 to ø50 : 10 g, ø63, ø80 : 20 g, ø100 : 30g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10g), GR-S-020 (20g)

53


MB1W-Z Series

ø32, ø40 ø50, ø63 ø80, ø100 ø125 The Replacement Procedure is on p. 317

Construction

The products in this series are refreshed products. Check the following before ordering.

- Previous series (Discontinued product) MB1W ⇒ p. 57
- Checking whether the cylinder is a new or a previous model → p. 563, 564

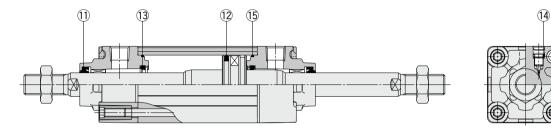

* The numbers correspond with those in the "Construction" of the MB1W-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
11)	Rod seal	NBR	2	14 is a
12	Piston seal	NBR	1	non-replaceable
13	Cushion seal	Urethane	2	part, so it is not
14	Cushion valve seal	NBR	2	included in the
15	Cylinder tube gasket	NBR	2	seal kit.

Replacement Parts: Seal Kit

ricpiacement i	riepiacement i arts. Ocai titt					
Bore size (mm)	Part no.	Contents				
32	MBW32Z-PS					
40	MB1W40Z-PS					
50	MB1W50Z-PS	0-4-6				
63	MB1W63Z-PS	Set of nos.				
80	MB1W80Z-PS	10, 12, 13, 13				
100	MB1W100Z-PS					
125	MBW125-PS]				

- \ast The seal kit includes 1 to 3, 5. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

H Act

Square Tube Type Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod


MB1K-Z Series 032, 040, 050 063, 080, 0100




Construction

The products in this series are refreshed products. Check the following before ordering.

 - Previous series (Discontinued product) MB1K ⇒ p. 58
- Checking whether the cylinder is a new or a previous model → p. 563, 564

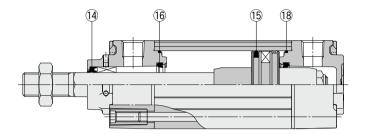



* The numbers correspond with those in the "Construction" of the MB1K-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
14)	Rod seal	NBR	1	17 is a
15	Piston seal	NBR	1	non-replaceable
16	Cushion seal	Urethane	2	part, so it is not
17	Cushion valve seal	NBR	2	included in the seal kit.
18	Cylinder tube gasket	NBR	2	Sear Kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBK32Z-PS	
40	MBK40Z-PS	
50	MBK50Z-PS	Set of nos.
63	MBK63Z-PS	14, 15, 16, 18
80	MBK80Z-PS	
100	MBK100Z-PS	

- * The seal kit includes (4) to (6), (8). Order the seal kit based on each bore
- * The seal kit includes a grease pack (ø32 to ø50 : 10 g, ø63, ø80 : 20 g, ø100 : 30 g).

Order with one of the following part numbers when only the grease pack




MB1 Series ©32, Ø40, Ø50, Ø63 Ø80, Ø100, Ø125

 
Replacement Procedure is on p. 317

Construction

The production of this series has been discontinued. Check the following before ordering.

- New series MB1-Z → p. 53
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

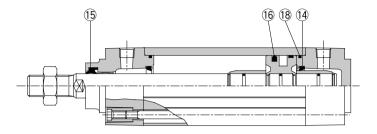



* The numbers correspond with those in the "Construction" of the MB1 series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
14)	Cushion seal	Urethane	
15	Rod seal	NBR	17 is a non-replaceable
16	Piston seal	NBR	part, so it is not included
17	Cushion valve seal	NBR	in the seal kit.
(18)	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

neplacement i arts. Sear Kit				
Bore size (mm)	Part no.	Contents		
32	MB32-PS			
40	MB40-PS			
50	MB50-PS	Set of nos.		
63	MB63-PS	14, 15, 16, 18		
80	MB80-PS			
100	MB100-PS			

- * The seal kit includes 4 to 6, 8. Order the seal kit based on each bore
- * The seal kit includes a grease pack (ø32 to ø50 : 10 g, ø63, ø80 : 20 g, ø100 : 30q).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10g), GR-S-020 (20g)

Actuators

Modular F.R.L. Pressure Control Equipment



Square Tube Type Air Cylinder/Standard Type: Double Acting, Double Rod

MB1W Series 932, 940, 950 963, 980, 9100 9125




Construction

The production of this series has been discontinued.

Check the following before ordering.

• New series MB1W-Z ⇒ p. 54 • Checking whether the cylinder is a new or a previous model → p. 563, 564

(15)

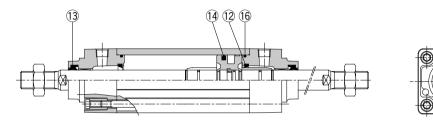

* The numbers correspond with those in the "Construction" of the MB1W series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
12	Cushion seal	Urethane	
13	Rod seal	NBR	15 is a non-replaceable
14)	Piston seal	NBR	part, so it is not included
15	Cushion valve seal	NBR	in the seal kit.
(16)	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBW32-PS	
40	MBW40-PS	
50	MBW50-PS	Set of nos.
63	MBW63-PS	12, 13, 14, 16
80	MBW80-PS	
100	MBW100-PS	

- * The seal kit includes 12 to 14, 16. Order the seal kit based on each bore
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.



MB1K Series


ø32, ø40, ø50 ø63, ø80, ø100




Construction

The production of this series has been discontinued. Check the following before ordering.

- New series MB1K-Z ⇒ p. 55
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

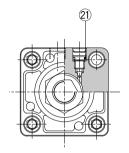

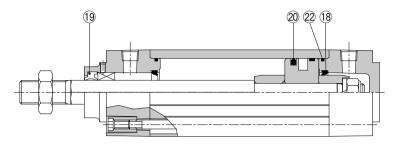

* The numbers correspond with those in the "Construction" of the MB1K series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
18	Cushion seal	Urethane	
19	Rod seal	NBR	21 is a non-replaceable
20	Piston seal	NBR	part, so it is not included
21	Cushion valve seal	NBR	in the seal kit.
(22)	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBK32-PS	
40	MBK40-PS	
50	MBK50-PS	Set of nos.
63	MBK63-PS	18, 19, 20, 22
80	MBK80-PS	
100	MBK100-PS	

- * The seal kit includes (8 to 20, 22. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø32 to ø50 : 10 g, ø63, ø80 : 20 g, ø100 : 30 g).
- Order with one of the following part numbers when only the grease pack is required.
- Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)
- * In the case of w/o air cushion, it comes with rubber bumper.

Actua

Air Cylinder/Standard Type, Smooth Cylinder: Double Acting, Single Rod


CA2-Z/CA2Y-Z Series




Construction

The products in this series are refreshed products. Check the following before ordering.

- Previous series (Discontinued product) CA2/CA2Y ⇒ p. 61
- Checking whether the cylinder is a new or a previous model → p. 563, 564

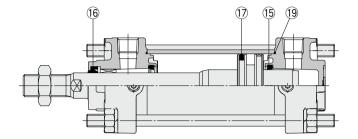

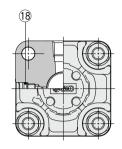

* The figures above show the construction of the CA2-Z series.

The numbers correspond with those in the "Construction" of the CA2-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
15	Cushion seal	Urethane	
16	Rod seal	NBR	18 is a non-replaceable
17	Piston seal	NBR	part, so it is not included
18	Cushion valve seal	NBR	in the seal kit.
19	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
Standard type				
40	CA2-40Z-PS			
50	CA2-50Z-PS	0-4-6		
63	CA2-63Z-PS	Set of nos. (5, (6, (7), (9)		
80	CA2-80Z-PS	(3), (0), (1), (3)		
100	CA2-100Z-PS			

Sm	ooth	cvl	inder

40	CA2Y40Z-PS		
50	CA2Y50Z-PS	0-4-4	
63	CA2Y63Z-PS	Set of nos.	
80	CA2Y80Z-PS	10, 10, 19	
100	CA2Y100Z-PS		

- * The seal kit for the standard type includes 1, 1, 1, and 1. Order the seal kit based on each bore size.
- st Do not disassemble the trunnion type.
- * The seal kit for the standard type includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g). The seal kit for the smooth cylinder also includes a grease pack (10 g).

Order with one of the following part numbers when only the grease pack is required.

Standard type

Grease pack part no.: GR-S-010 (10 g) GR-S-020 (20 g)

Smooth cylinder

Grease pack part no.: GR-L-005 (5 g)

GR-L-010 (10 g) GR-L-150 (150 g)




Ø40, Ø50 Ø63, Ø85 Ø100



Construction

The products in this series are refreshed products. Check the following before ordering.

- Previous series (Discontinued product) CA2W ⇒ p. 62
- Checking whether the cylinder is a new or a previous model → p. 563, 564

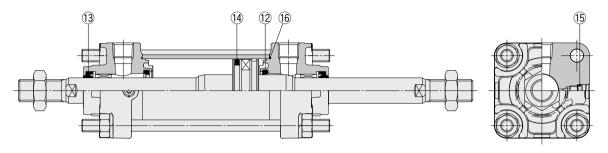

* The numbers correspond with those in the "Construction" of the CA2W-Z series in the Best Pneumatics catalog.

Seal Kit List

N	lo.	Description	Material	Note
(1	2	Cushion seal	Urethane	
(1	3	Rod seal	NBR	15 is a non-replaceable
(1	4)	Piston seal	NBR	part, so it is not included
1	5	Cushion valve seal	NBR	in the seal kit.
(1	6	Cylinder tube gasket	NBB	

Replacement Parts: Seal Kit

riepiacement i arts. Ocai kit			
Bore size (mm)	Part no.	Contents	
40	CA2W40Z-PS		
50	CA2W50Z-PS	0-4-4	
63	CA2W63Z-PS	Set of nos.	
80	CA2W80Z-PS	12, 13, 14, 16	
100	CA2W100Z-PS		

- * Do not disassemble the trunnion type.
- * The seal kit includes ②, ③, ④ and ⑥. Order the seal kit based on each bore size.
- The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Act

Air Cylinder/Standard Type, Smooth Cylinder: Double Acting, Single Rod

CA2/CA2Y Series (940, 950, 963) (880, 9100)





Construction

The production of this series has been discontinued.

Check the following before ordering.

• New series CA2-Z/CA2Y-Z ⇒ p. 59 • Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

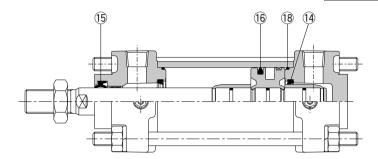

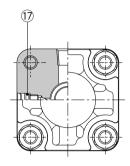

* The figures above show the construction of the CA2 series. The numbers correspond with those in the "Construction" of the CA2 series in the Web Catalog.

Seal Kit List

No	Description	Material	Note
12	Cushion seal	Urethane	
15	Rod seal	NBR	17 is a non-replaceable
16	Piston seal	NBR	part, so it is not included
17	Cushion valve seal	NBR	in the seal kit.
(18	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
Standard type		
40	MB40-PS	
50	MB50-PS	0-4-5
63	MB63-PS	Set of nos. (14), (15), (16), (18)
80	MB80-PS	14, 19, 16, 18
100	MB100-PS	
Smooth cylinder	•	

Smooth cylinder

50 CA2Y50-PS	
50 CA2Y50-PS	0-4-6
63 CA2Y63-PS	Set of nos.
80 CA2Y80-PS	(13), (10), (10)
100 CA2Y100-PS	

^{*} The seal kit for the standard type includes (4, (5, (6, and (8). Order the seal kit based on each bore size.

Do not disassemble the trunnion type.

Order with one of the following part numbers when only the grease pack is required.

Standard type

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Smooth cylinder Grease pack part no.: GR-L-005 (5 g)

GR-L-010 (10 g) GR-L-150 (150 g)



^{*} The seal kit for the standard type includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g). The seal kit for the smooth cylinder also includes a grease pack (10 g).

CA2W Series

ø40, ø50, ø63 ø80, ø100


The Replacement Procedure is on p. 317


Construction

The production of this series has been discontinued.

Check the following before ordering.

- New series CA2W-Z ⇒ p. 60
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

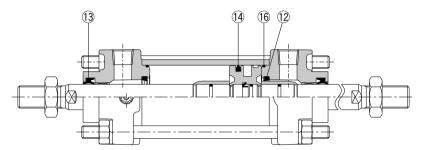

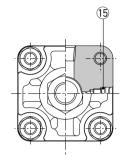

* The numbers correspond with those in the "Construction" of the CA2W series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
12	Cushion seal	Urethane	
13	Rod seal	NBR	15 is a non-replaceable
14)	Piston seal	NBR	part, so it is not included
15	Cushion valve seal	NBR	in the seal kit.
16	Cylinder tube gasket	NBR	

Replacement Parts: Seal Kit

. replacement a		
Bore size (mm)	Part no.	Contents
40	MBW40-PS	
50	MBW50-PS	Catafaaa
63	MBW63-PS	Set of nos.
80	MBW80-PS	12, (3), (4), (6)
100	MBW100-PS	

- * Do not disassemble the trunnion type.
- * The seal kit includes ②, ③, ④ and ⑥. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)


Actu

Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod

CA2K Series Ø40, Ø50, Ø63



Construction

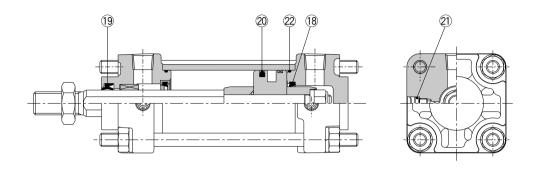

* The numbers correspond with those in the "Construction" of the CA2K series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Cushion seal	Urethane	
19	Rod seal	NBR	21 is a non-replaceable
20	Piston seal	NBR	part, so it is not included
21	Cushion valve seal	NBR	in the seal kit.
(22)	Cylinder tube gasket	NBR	

Disassembly/Replacement

1. Please consult with SMC when the rod seal is to be replaced.

When the rod seal is to be replaced, make sure that the seal's width across flats matches that of the non-rotating guide.

A rod seal may allow air leakage depending on the position where it is installed. Therefore, please consult with SMC when a rod seal is to be replaced.

2. Do not replace the non-rotating guide.

Since the non-rotating guide is press fitted, the entire cover assembly needs be replaced instead of a single part.

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
40	CA2K40-PS	0-4-4
50	CA2K50-PS	Set of nos.
63	CA2K63-PS	10, 19, 20, 22


- * The seal kit includes (8), (9), (20) and (20). Order the seal kit based on each bore size.
- * Do not disassemble the trunnion type.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, over ø63: 20 g). Order with one of the following part numbers when only the grease pack is required.



ø**40**, ø**50** ø**63** The Replacement Procedure is on p. 317

 Construction

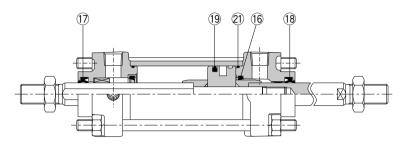



* The numbers correspond with those in the "Construction" of the CA2KW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Cushion seal	Urethane	
17	Rod seal A	NBR	
18	Rod seal B	NBR	20 is a non-replaceable
19	Piston seal	NBR	part, so it is not included in the seal kit.
20	Cushion valve seal	NBR	
(21)	Cylinder tube gasket	NBR	

Disassembly/Replacement

 Please consult with SMC when the rod seal is to be replaced.

When the rod seal is to be replaced, make sure that the seal's width across flats matches that of the non-rotating guide.

A rod seal may allow air leakage depending on the position where it is installed. Therefore, please consult with SMC when a rod seal is to be replaced.

2. Do not replace the non-rotating guide.

Since the non-rotating guide is press fitted, the entire cover assembly needs be replaced instead of a single part.

Replacement Parts: Seal Kit

riopiacoment i arto. Coai itti				
Bore size (mm)	Part no.	Contents		
40	CA2KW40-PS	Set of nos.		
50	CA2KW50-PS	16, 17, 18, 19, 21		
63	CA2KW63-PS	(0, (0, (0, (0, (0)		

- * The seal kit includes (6, 17), (18), (19), and (21). Order the seal kit based on each bore size.
- * Do not disassemble the trunnion type.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.




Air Cylinder/With End Lock

CBA2 Series 040, 050, 063 080, 0100



Construction

Head side end lock

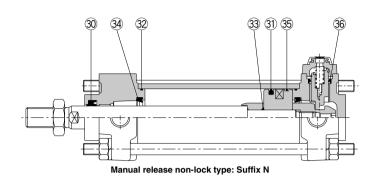

* The numbers correspond with those in the "Construction" of the CBA2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
30	Rod seal	NBR	
31)	Piston seal	NBR	
32	Cylinder tube gasket	NBR	33 and 35 are
33	Piston gasket	NBR	non-replaceable parts, so they are not included in the
34)	Cushion seal	NBR	seal kit.
35	Wear ring	Resin	
36	Lock piston seal	NBR	

Replacement Parts: Seal Kit		
Bore size (mm)	Part no.	Contents
Single end lock		
40	MBB40-PS	
50	MBB50-PS	0-4-6
63	MBB63-PS	Set of nos. 30, 31, 32, 34, 36
80	MBB80-PS	30, 31, 32, 34, 30
100	MBB100-PS	
Double end lock		
40	MBB40-PS-W	
50	MBB50-PS-W	0-4-4
63	MBB63-PS-W	Set of nos. 30, 31, 32, 34, 36
80	MBB80-PS-W	30, 31, 32, 34, 30

- MBB100-PS-W \ast The seal kit includes 30, 31, 32, 34 and 36. Order the seal kit based on each bore size.
- * Do not disassemble the trunnion type.


100

* The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.



Construction

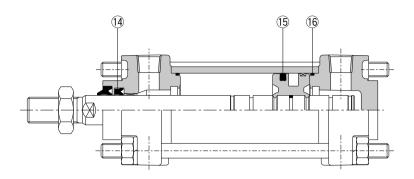

* The numbers correspond with those in the "Construction" of the CA2□H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Rod seal		
15	Piston seal	NBR	
16	Cylinder tube gasket		

Replacement Parts: Seal Kit

riopiacement i arto. Coai itti			
Bore size (mm)	Part no.	Contents	
40	CA2H40A-PS		
50	CA2H50A-PS	0-4-6	
63	CA2H63A-PS	Set of nos.	
80	CA2H80A-PS	(19, (19, (19	
100	CA2H100A-PS		

* Do not disassemble the trunnion type.


* The seal kit includes (14), (15) and (16). Order the seal kit based on each bore size.

* The seal kit includes a grease pack (ø40, ø50: 10 g, ø63: 20 g).

Order with one of the following part numbers when only the grease pack is required.

CA2W H Series 040, 050, 063 080, 0100

Construction

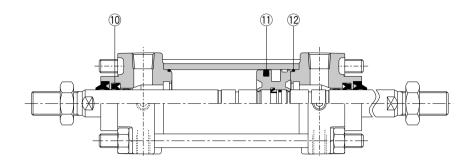

* The numbers correspond with those in the "Construction" of the CA2W□H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
10	Rod seal		
11)	Piston seal	NBR	
12	Cylinder tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
40	CA2WH40A-PS				
50	CA2WH50A-PS	0-4-4			
63	CA2WH63A-PS	Set of nos.			
80	CA2WH80A-PS	(10), (11), (12)			
100	CA2WH100A-PS				


- * Do not disassemble the trunnion type.
- * The seal kit includes 0, 1 and 2. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63 or more: 20 g). Order with one of the following part numbers when only the grease pack is required.

CS1 Series


Lube, Non-lube Type: Ø125, Ø140, Ø160, Ø180 Ø200, Ø250, Ø300 Air-hydro Type: Ø125, Ø140, Ø160



Construction

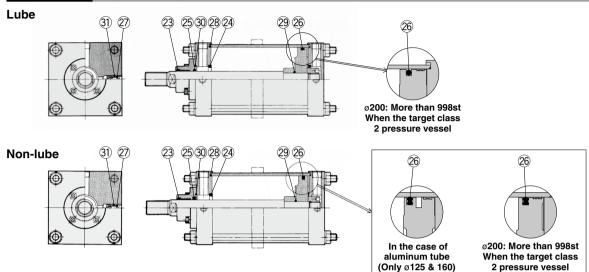

Air-hydro

 

In the case of aluminum tube

st The numbers correspond with those in the "Construction" of the CS1 series in the Best Pneumatics catalog.

Seal Kit List

Sea	I KIT LIST		
No.	Description	Material	Note
Lub	e, non-lube, air-h	ıydro	
23	Wiper ring		
24	Cushion seal		
25	Rod seal		
26	Piston seal		24, 29 and 31 are
27)	Valve seal	NBR	non-replaceable parts, so they are not included in the
28	Tube gasket		seal kit.
29	Piston gasket		
30	Retaining plate gasket		
31	Guide gasket		

Replacement Parts: Seal Kit

riopiacomicini i artor coarriti					
Bore size (mm)	Part no.	Contents			
Standard (lube)					
125	CS1-125A-PS				
140	CS1-140A-PS				
160	CS1-160A-PS	Component part			
180	CS1-180A-PS	numbers:			
200	CS1-200A-PS	23, 25, 26, 27, 28, 30			
250	CS1-250A-PS				
300	CS1-300A-PS				
Standard (non-lu	ıbe)				
125	CS1N125A-PS				
140	CS1N140A-PS				
160	CS1N160A-PS	Component part			
180	CS1N180A-PS	numbers:			
200	CS1N200A-PS	23, 25, 26, 27, 28, 30			
250	CS1N250A-PS				
300	CS1N300A-PS	1			

* The seal kit includes a grease pack (ø125 to ø160: 40 g, ø180 and ø200: 50 g, ø250 and ø300: 60 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Air-hydro type

All-liyalo type		
125	CS1H125A-PS	Component part
140	CS1H140A-PS	numbers:
160	CS1H160A-PS	23, 25, 26, 27, 28, 30

 
Air Cylinder/With Auto Switch

 
CDS1 Series §125, §140, §160 §180, §200




Construction


Lube 1, 2





Non-lube

 

 



(1) Foot type: Rod side flange type In the case of ø125, ø140 1001 to 1400 st In the case of ø160 1201 to 1400 st

(2) In the case of ø180, ø200

(1), (2): Non-lube type is used.

 Air-hydro: Ø125, Ø140, Ø160 only



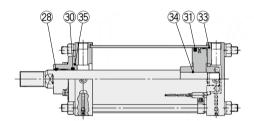

* The numbers correspond with those in the "Construction" of the CS1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note			
Lube (1, 2), non-lube, air-hydro						
28	Wiper ring					
29	Cushion seal					
30	Rod seal					
31)	Piston seal		29, 34 and 36 are			
32	Valve seal	NBR	non-replaceable parts, so they are not included in the			
33	Tube gasket		seal kit.			
34	Piston gasket					
35	Retaining plate gasket					
36	Guide gasket					

Replacement Parts: Seal Kit

riopiacoment i arter ecai itti				
Bore size (mm)	Part no.	Contents		
Lube (1)				
125	CS1-125A-PS			
140	CS1-140A-PS	Component part		
160	CS1-160A-PS	numbers:		
180	CDS1-180A-PS	28, 30, 31, 32, 33, 35		
200	CDS1-200A-PS			
Non-lube				
125	CS1N125A-PS			
140	CS1N140A-PS	Component part		
160	CS1N160A-PS	numbers:		
180	CS1N180A-PS	28, 30, 31, 32, 33, 35		
200	CS1N200A-PS			
Lube (2) Note)				
125	CDS1L125A-PS	Component part		
140	CDS1L140A-PS	numbers:		
160	CDS1L160A-PS	28, 30, 31, 32, 33, 35		

* The seal kit includes a grease pack (ø125 to ø160: 40 g, ø180 and ø200: 50 g). Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Note) Foot type, Rod side flange type: ø125, ø140: 1001 to 1400 stroke, ø160: 1201 to 1400 stroke.

Air-hvdro

7 y u u		
125	CS1H125A-PS	Component part
140	CS1H140A-PS	numbers:
160	CS1H160A-PS	28, 30, 31, 32, 33, 35




Lube, Non-lube Type: Ø125, Ø140, Ø160, Ø180 CS1W Series Ø200, Ø250, Ø300 Air-hydro Type: ø125, ø140, ø160

The Replacement Procedure is on p. 320

Construction

Lube, non-lube with auto switch

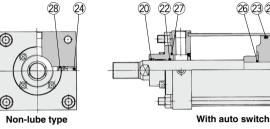












26 23 25 21)

Aluminum tube Steel tube

ø125 to ø160

ø180. ø200

Air-hydro

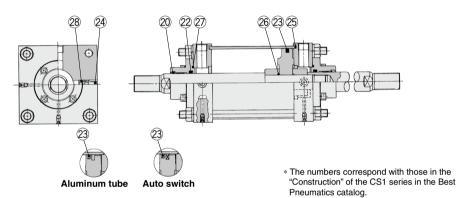

Seal Kit List

	Ocal Kit Liot					
No.	Description	Material	Note			
Lub	Lube, non-lube, air-hydro, lube (with auto switch)					
20	Wiper ring					
21	Cushion seal					
22	Rod seal					
23 31	Piston seal	NBR	21, 26 and 28 are non-replaceable parts, so			
24	Valve seal	NBH	they are not included in the			
25	Tube gasket		seal kit.			
26	Piston gasket					
27)	Retaining plate gasket					
28	Guide gasket					

Replacement Parts: Seal Kit

riopiacement i arto. Coai itti				
Bore size (mm)	Part no.	Contents		
Lube				
125	CS1W-125A-PS			
140	CS1W-140A-PS			
160	CS1W-160A-PS	Component part		
180	CS1W-180A-PS	numbers:		
200	CS1W-200A-PS	20, 22, 23, 24, 25, 27		
250	CS1W-250A-PS			
300	CS1W-300A-PS			

^{*} The seal kit includes a grease pack (ø125 to ø160: 40 g, ø180 and ø200: 50 g, ø250 and ø300: 60 g). Order with one of the following part numbers when only the grease pack is required. Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
Non-lube with auto switch					
125	CS1WN125A-PS				
140	CS1WN140A-PS				
160	CS1WN160A-PS	Component part			
180	CS1WN180A-PS	numbers:			
200	CS1WN200A-PS	20, 22, 23, 24, 25, 27			
250 Note)	CS1WN250A-PS				
300 Note)	CS1WN300A-PS				

Lube with auto switch

125	CS1W-125A-PS	
140	CS1W-140A-PS	Component part
160	CS1W-160A-PS	numbers:
180	CDS1W180A-PS	20, 22, 24, 25, 27, 31
200	CDS1W200A-PS	

Note) It is not available with auto switch.

* The seal kit includes a grease pack (ø125 to ø160: 40 g, ø180 and ø200: 50 g, ø250 and ø300: 60 g). Order with one of the following part numbers when only the grease pack is required. Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Air-hvdro

· · · · · · · · · · · · · · · · · · ·			
125	CS1WH125A-PS	Component part	
140	CS1WH140A-PS	numbers:	
160	CS1WH160A-PS	20, 22, 23, 24, 25, 27	


Air Cylinder/Low Friction Type: Non-lube Type


CS1 Q Series of 125, of 140 of 160



Construction

Non-lube

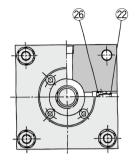

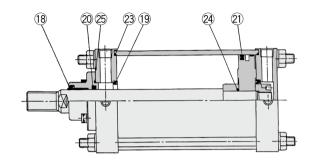

* The numbers correspond with those in the "Construction" of the CS1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Wiper ring		
19	Cushion seal *		
20	Rod seal		
21)	Piston seal	NBR	19, 24 and 26 are non-replaceable parts, so they are not included in the seal kit.
22	Valve seal		
23	Tube gasket		
24	Piston gasket		
25	Retaining plate gasket		
26	Guide gasket		

* Used with cushion only.

Replacement Parts/Seal Kit


Bore size (mm)	Part no.	Contents
125	CS1Q125A-PS	Component part
140	CS1Q140A-PS	numbers:
160	CS1Q160A-PS	18, 20, 21, 22, 23, 25


* Since the seal kit does not include a grease pack, please arrange with the part numbers listed below only the grease pack separately. In that case, the amount of grease, please refer to the standard type. Grease pack part no.: GR-L-005 (5 g), GR-L-010 (10 g), GR-L-150 (150 g)

CS2 Series ©125, Ø140, Ø160



Construction

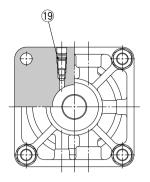

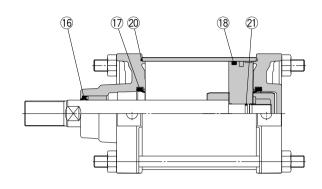

* The numbers correspond with those in the "Construction" of the CS2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal	NBR	
17	Cushion seal	Urethane	19 and 21 are
18	Piston seal	NBR	non-replaceable parts, so
19	Valve seal	NBR	they are not included in
20	Tube gasket	NBR	the seal kit.
21	Piston gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
125	CS2-125A-PS	Component part
140	CS2-140A-PS	numbers:
160	CS2-160A-PS	16, 17, 18, 20

* The seal kit includes a grease pack (40 g). Order with one of the following part numbers when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Air Cylinder/Double Rod

CS2W Series Ø125, Ø140, Ø160



Construction

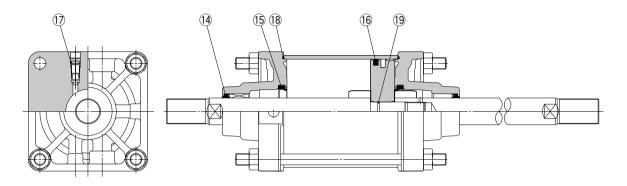

* The numbers correspond with those in the "Construction" of the CS2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Rod seal	NBR	
15	Cushion seal	Urethane	17 and 19 are
16	Piston seal	NBR	non-replaceable parts, so
17	Valve seal	NBR	they are not included in
18	Tube gasket	NBR	the seal kit.
19	Piston gasket	NBR	

Replacement Parts: Seal Kit

is required.


Bore size (mm)	Part no.	Contents
125	CS2W125A-PS	Component part
140	CS2W140A-PS	numbers:
160	CS2W160A-PS	14, 15, 16, 18


* The seal kit includes a grease pack (40 g). Order with one of the following part numbers when only the grease pack

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

CS2Y Series Ø125, Ø140, Ø160

Construction

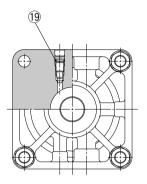

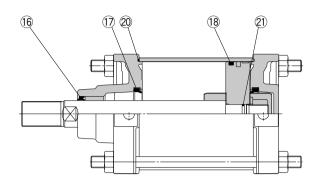

* The numbers correspond with those in the "Construction" of the CS2Y series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal	NBR	
17	Cushion seal *	Urethane	19 and 21 are
18	Piston seal	NBR	non-replaceable parts, so
19	Valve seal	NBR	they are not included in
20	Tube gasket	NBR	the seal kit.
21	Piston gasket	NBR	

^{*} Used with cushion only.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
125	CS2Y125A-PS	Without cushion
140	CS2Y140A-PS	Consists of component part
160	CS2Y160A-PS	numbers 16, 18, and 20
125	CS2Y125AA-PS	With single-side cushion
140	CS2Y140AA-PS	Consists of component part
160	CS2Y160AA-PS	numbers (6), (7) (two), (8), and (2)
125	CS2Y125AR-PS	With single-side cushion
140	CS2Y140AR-PS	Consists of component part
160	CS2Y160AR-PS	numbers 16, 17 (one), 18 and 20

^{*} The seal kit does not include a grease pack.

Order with one of the following part numbers when only the grease pack

Grease pack part no.: GR-L-005 (5 g), GR-S-010 (10 g), GR-L-150 (150g)


Mini Free Mount Cylinder

CUJ Series 04, 06, 08, 010


The Replacement Procedure is on p. 322

Construction

Double acting

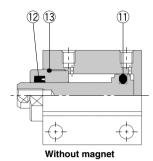

Single acting, spring return

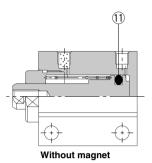

* The numbers correspond with those in the "Construction" of the CUJ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Piston seal		
12	Rod seal	NBR	
13	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
Double acting			
4	CUJB4-PS	Set of nos.	
6	CUJB6-PS	1), 12, 13,	
8	CUJB8-PS	and a grease pack	
10	CUJB10-PS	and a grease pack	

 $[\]ast$ The seal kit $\scriptsize{\textcircled{1}\! 1}$ to $\scriptsize{\textcircled{1}\! 3}$ comes as a set. Use the kit number for each bore size.

Single acting, spring return

4	CUJB4-S-PS	
6	CUJB6-S-PS	Set of no. 11
8	CUJB8-S-PS	and a grease pack
10	CUJB10-S-PS	


^{*} Use the following part number for ordering a grease pack only. **Grease pack part no.: GR-L-005** (5 g)

CUJ Series Ø12, Ø16, Ø20




Construction

Double acting

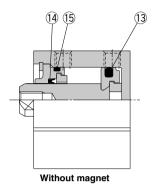

Single acting, spring return

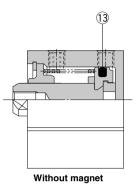

* The numbers correspond with those in the "Construction" of the CUJ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
13	Piston seal		
14)	Rod seal	NBR	
15	O-ring		

Poplessment Barto, Saal Kit

neplacement Parts. Sear Kit			
Bore size (mm)	Part no.	Contents	
Double acting			
12	CUJB12-PS	Set of nos.	
16	CUJB16-PS	13, 14, 15,	
20	CUJB20-PS	and a grease pack	

* The seal kit 13 to 15 comes as a set. Use the kit number for each bore

Single acting, spring return

3	J	
12	CUJB12-S-PS	Set of no. 13
16	CUJB16-S-PS	
20	CUJB20-S-PS	and a grease pack


^{*} Use the following part number for ordering a grease pack only. Grease pack part no.: GR-L-005 (5 g)

Free Mount Cylinder/Double Acting, Single Rod


CU Series (910, 916, 920, 925, 932)


Construction


ø10

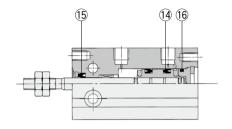

With auto switch

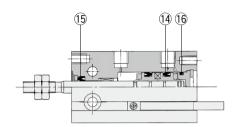

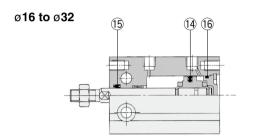

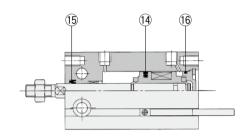

* The numbers correspond with those in the "Construction" of the CU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Piston seal		
15	Rod seal	NBR	
16	Gasket		

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
10	CU10D-PS	
16	CU16D-PS	Set of nos.
20	CU20D-PS	14), (15), (16)
25	CU25D-PS	(4), (5), (6)
32	CU32D-PS	


- * ø6 cannot be repaired.
- * The seal kit includes (4), (5), (6). Order the seal kit based on each bore
- * The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is

With auto switch


CUV Series 010, 016, 020, 025, 032

 
Construction

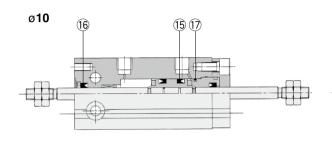



ø16 to ø32

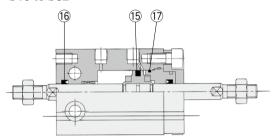

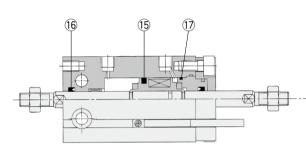

* The numbers correspond with those in the "Construction" of the CUW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
15	Piston seal		
16	Rod seal	NBR	
(17)	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
10	CUW10D-PS	
16	CUW16D-PS	Catatasa
20	CUW20D-PS	Set of nos.
25	CUW25D-PS	19, 19, 17
32	CUW32D-PS	1

- * ø6 cannot be repaired.
- * The seal kit includes (5, (6, 17). Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

Modular F.R.L. Pressure Control Equipment

Air Preparation Equipment

Industrial Filters Replacement Procedure

Free Mount Cylinder/Single Acting, Single Rod, Spring Return


CU Series (910, 916, 920, 925, 932)

Construction

Single acting, spring return

ø10 ø16 to ø32

With auto switch

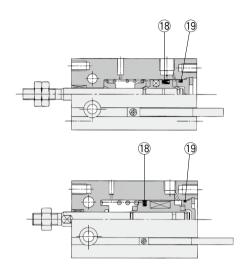

* The numbers correspond with those in the "Construction" of the CU series in the Best Pneumatics catalog.

Seal Kit List

No	. Description	Material	Note
18	Piston seal	NBR	
(19	Gasket	INDI	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
10	CU10S-PS	
16	CU16S-PS	
20	CU20S-PS	Set of nos. 18, 19
25	CU25S-PS	
32	CU32S-PS	

- * ø6 cannot be repaired.
- * The seal kit includes (18), (19). Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is

CU Series (910, 916, 920, 925, 932)


Construction

Single acting, spring extend


ø10

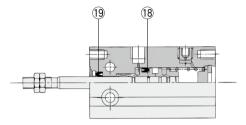


With auto switch

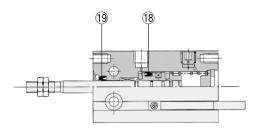



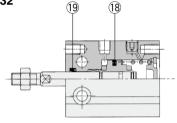

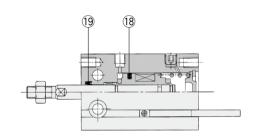

* The numbers correspond with those in the "Construction" of the CU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal	NBR	
(19)	Rod seal	INDI	

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents	
10	CU10T-PS		
16	CU16T-PS		
20	CU20T-PS	Set of nos. 18, 19	
25	CU25T-PS		
32	CU32T-PS		

- * ø6 cannot be repaired.
- * The seal kit includes ®, ®. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is

CUK Series ©10, Ø16, Ø20, Ø25, Ø32

Construction

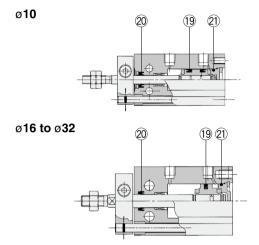

With auto switch

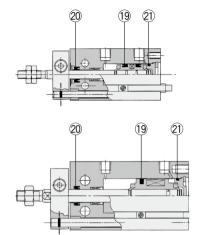

* The numbers correspond with those in the "Construction" of the CUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
19	Piston seal		
20	Rod seal	NBR	
21)	Gasket		

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
10	CU10D-PS	
16	CU16D-PS	Cot of non
20	CU20D-PS	Set of nos.
25	CU25D-PS	(19, 69, 61)
32	CU32D-PS	

- * ø6 cannot be repaired.
- * The seal kit includes (9, 20, 2). Order the seal kit based on each bore
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.


CUKW Series Ø10, Ø16, Ø20, Ø25, Ø32

Construction

 
ø10




With auto switch

 

ø16 to ø32

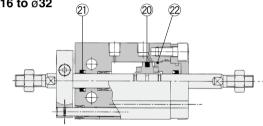

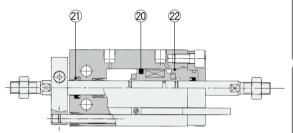

* The numbers correspond with those in the "Construction" of the CUKW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Piston seal		
21)	Rod seal	NBR	
22	Gasket		

Replacement Parts: Seal Kit

neplacement i arts. Sear Kit			
Bore size (mm)	Part no.	Contents	
10	CUW10D-PS		
16	CUW16D-PS	Set of nos.	
20	CUW20D-PS	20, 21, 22	
25	CUW25D-PS	20, 21, 22	
32	CUW32D-PS		


- * ø6 cannot be repaired.
- * The seal kit includes @, @, @. Order the seal kit based on each bore
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

CUK Series Ø10, Ø16, Ø20, Ø25, Ø32


Construction


Single acting, spring return


ø10

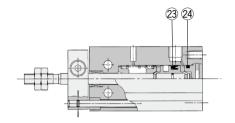

With auto switch

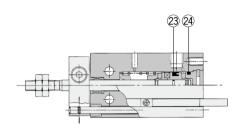

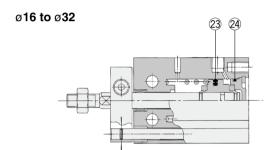

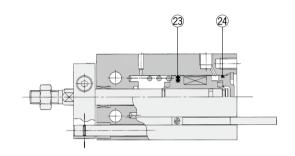

* The numbers correspond with those in the "Construction" of the CUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
23	Piston seal	NBR	
24)	Gasket	INDI	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
10	CU10S-PS	
16	CU16S-PS	
20	CU20S-PS	Set of nos. 23, 24
25	CU25S-PS	
32	CU32S-PS	

- * ø6 cannot be repaired.
- * The seal kit includes 3, 4. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is required.

CUK Series §10, §16, §20, §25, §32


Construction


Single acting, spring extend


ø10

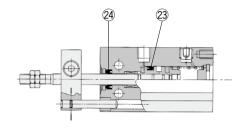

With auto switch

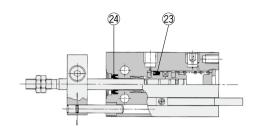

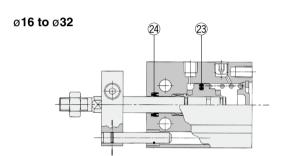

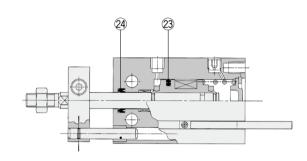

* The numbers correspond with those in the "Construction" of the CUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
23	Piston seal	NBR	
24	Rod seal	NDN	


Replacement Parts: Seal Kit

ricpiacement rants. Ocar tit			
Bore size (mm)	Part no.	Contents	
10	CU10T-PS		
16	CU16T-PS		
20	CU20T-PS	Set of nos. 23, 24	
25	CU25T-PS		
32	CU32T-PS		


- ø6 cannot be repaired.
- * The seal kit includes 3, 4. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is required.


CU/CUX Series (910, 916, 920, 925, 932)


Construction

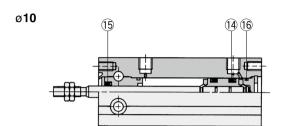

With auto switch

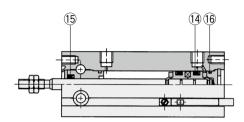

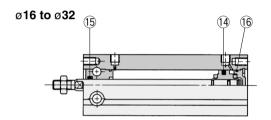

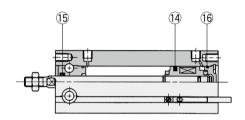

- * The construction of the low speed cylinder CUX series is the same as the CU series.
- * The numbers correspond with those in the "Construction" of the CU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Piston seal		
15	Rod seal	NBR	
16	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
Long stroke type				
10	CU10D-PS			
16	CU16D-PS	Set of nos.		
20	CU20D-PS	14), (15), (16)		
25	CU25D-PS	(4), (3), (6)		
32	CU32D-PS			
Low speed cylinder				
16	CUX16-PS			
20	CUX20-PS	Set of nos.		
25	CUX25-PS	14, 15, 16		

- 32 ø6 cannot be repaired.
- * The seal kit for the long stroke type and low speed cylinders includes 14, (5), and (6). Order the seal kit based on each bore size.

CUX32-PS

* The seal kit includes a grease pack (10 g).

Order with one of the following part numbers when only the grease pack is required.

Long stroke type

Grease pack part no.: GR-S-010 (10 g)

Low speed cylinder

Grease pack part no.: GR-L-005 (5 g)

 
GR-L-010 (10 g) GR-L-150 (150 g)




CUK Series ©10, ©16, ©20, ©25, ©32


Construction


ø10



With auto switch

 

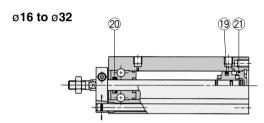

 

* The numbers correspond with those in the "Construction" of the CUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
19	Piston seal		
20	Rod seal	NBR	
(21)	Gasket		

Renlacement Parts: Seal Kit

neplacement Parts. Sear Kit			
Bore size (mm)	Part no.	Contents	
10	CU10D-PS		
16	CU16D-PS	Cat of man	
20	CU20D-PS	Set of nos.	
25	CU25D-PS	ا ان , دن , دا	
32	CH32D-PS	1	

- * ø6 cannot be repaired.
- * The seal kit includes (9, 20, 2). Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g)

Actuators

Free Mount Cylinder with Air Cushion

CU Series ©20, ©25, ©32

Construction

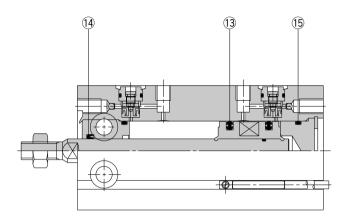

* The numbers correspond with those in the "Construction" of the CU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	No. of pcs.	Note
13	Piston seal		2	
14)	Rod seal	NBR	1	
15	Gasket		1	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
ø 20	CU20A-PS	Set of nos.
ø 25	CU25A-PS	13, (14), (15)
ø 32	CU32A-PS	(19, (19, (19

 $[\]ast$ The seal kit includes $\ensuremath{\mathfrak{I}}\xspace,$ $\ensuremath{\mathfrak{I}}\xspace$, $\ensuremath{\mathfrak{I}}\xspace$, order the seal kit based on each bore size.



^{*} The seal kit includes a grease pack (10 g).

 
Order with the following part number when only the grease pack is required.

ZCUK Series (10, 016, 020, 025, 032)


Construction


Cap piping, male thread: ZC(D)UKC


ø10



With auto switch

 

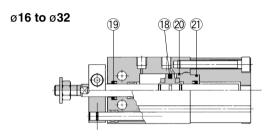

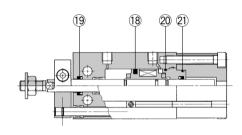

* The numbers correspond with those in the "Construction" of the ZCUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal		
19	Rod seal	NBR	
20	Gasket	INDI	
21)	Gasket for cap		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
10	ZCU10-PS		
16	ZCU16-PS	Set of nos.	
20	ZCU20-PS	18, 19, 20, 21	
25	ZCU25-PS	(0, (3, 20, 2)	
32	ZCU32-PS		

- * The seal kit includes 18, 19, 20 and 21. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

Air Preparation Equipment

Industrial Filters

 
Free Mount Cylinder for Vacuum

ZCUK Series (10, 016, 020, 025, 032)


Construction


Rod piping, male thread: ZC(D)UKQ


ø10



With auto switch

 

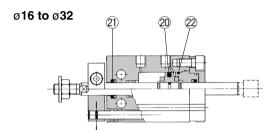

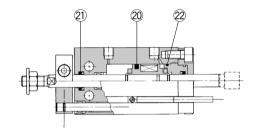

* The numbers correspond with those in the "Construction" of the ZCUK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Piston seal		
21)	Rod seal	NBR	
22	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
10	CUW10D-PS	
16	CUW16D-PS	Catatasa
20	CUW20D-PS	Set of nos. 20, 21, 22
25	CUW25D-PS	١ ١ ١ ١ ١ ١ ١ ١
32	CUW32D-PS	

- * The seal kit includes @, @) and @. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is

 
CQS/CQSY/CQSX Series


Ø12Ø16Ø20Ø25




Construction


Basic type



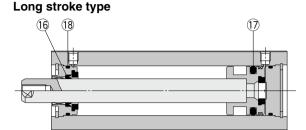

With auto switch (built-in magnet)

 

 

ø**20**, ø**25**

* The figures above show the construction of the CQS series.
The numbers correspond with those in the "Construction" of the CQS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note		
16	Rod seal				
17	Piston seal	NBR			
18	Tube gasket	1			

Replacement Parts: Seal Kit

Replacement Parts: Sear Kit					
Bore size (mm)	Part no.	Contents			
Basic type	Basic type				
12	CQSB12-PS				
16	CQSB16-PS	Set of nos.			
20	CQSB20-PS	16, 17, 18			
25	CQSB25-PS				

Long stroke type

12	CQSB12-L-PS	
16	CQSB16-L-PS	Set of nos.
20	CQSB20-L-PS	16, 17, 18
25	CQSB25-L-PS	

Smooth cylinder

12	CQSY12-PS	Cat of man
16	CQSY16-PS	Set of nos. 16, 17, 18, and
20	CQSY20-PS	
25	CQSY25-PS	a grease pack (10 g)

Low speed cylinder

12	CQSX12-PS	Catatana
16	CQSX16-PS	Set of nos. (6, 17, 18, and
20	CQSX20-PS	-, -, -,
25	CQSX25-PS	a grease pack (10 g)

- * Order the seal kit based on each bore size. (The long stroke type includes 2 tube gaskets.)
- * The seal kit for the standard type and long stroke type does not include a grease pack. It should be ordered separately.

 Grease pack part no.: GR-S-010 (10 g)
- * The seal kit for smooth/low speed cylinders includes a grease pack (10 g).

Order with the one of following part numbers when only the maintenance grease for smooth/low speed cylinders is required.

GR-L-150 (150 g)

Grease pack part no.: GR-L-005 (5 g) GR-L-010 (10 g)


Compact Cylinder/Standard Type: Double Acting, Double Rod

CQSW Series ©12, ©16 ©20, ©25


The Replacement Procedure is on p. 323


Construction

Basic type

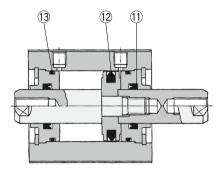

With auto switch (built-in magnet)

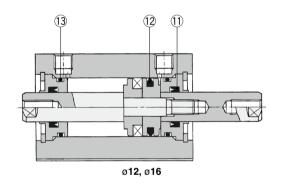

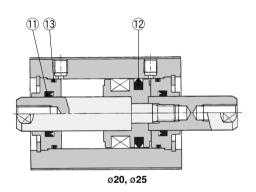

* The numbers correspond with those in the "Construction" of the CQSW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Rod seal		
12	Piston seal	NBR	
13	Tube gasket		

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
12	CQSWB12-PS	
16	CQSWB16-PS	Set of nos.
20	CQSWB20-PS	11), 12, 13
25	CQSWB25-PS	

- * The seal kit includes 1, 2, 3. Order the seal kit based on each bore size
- * Since the seal kit does not include a grease pack, it should be ordered separately.




 
Construction






Single acting, spring return/ with auto switch (built-in magnet)

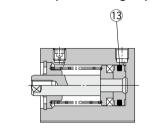


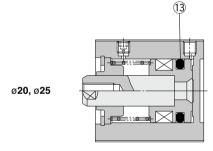


Single acting, spring extend

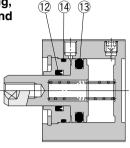

Single acting, spring extend/ with auto switch (built-in magnet)

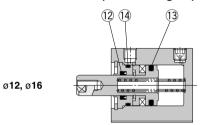

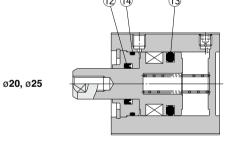

* The numbers correspond with those in the "Construction" of the CQS series in the Best Pneumatics catalog.

Seal Kit List

ø12, ø16

No.	Description	Material	Note	
12	Rod seal			
13	Piston seal	NBR		
(14)	Tube gasket			

Replacement Parts: Seal Kit

riopiacoment i artor ecarriti				
Bore size (mm)	Part no.	Contents		
Single acting, spring return				
12	CQSB12-S-PS			
16	CQSB16-S-PS	No. (13)		
20	CQSB20-S-PS	110. (3)		
25	CQSB25-S-PS			

- st The seal kit includes \footnotemark . Order the seal kit based on each bore size.
- \ast Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Single acting, spring extend

12	CQSB12-T-PS	
16	CQSB16-T-PS	Set of nos.
20	CQSB20-T-PS	12, 13, 14
25	COSB25-T-PS	

 
- * The seal kit includes @, @, @. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

 
CQSK Series 012, 016, 020, 025




Construction


Basic type






With auto switch (built-in magnet)

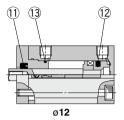

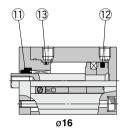

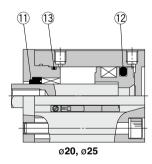

* The numbers correspond with those in the "Construction" of the CQSK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Rod seal		
12	Piston seal	NBR	
13	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
12	CQSKB12-PS			
16	CQSKB16-PS	Set of nos.		
20	CQSKB20-PS	11, 12, 13		
25	CQSKB25-PS			

- * The seal kit includes 1, 2, 3. Order the seal kit based on each bore size. * Since the seal kit does not include a grease pack, it should be ordered
- Grease pack part no.: GR-S-010 (10 g)





CQSKW Series

Ø12, Ø16 Ø20, Ø25 The Replacement Procedure is on p. 323


Construction


Basic type

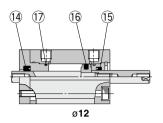


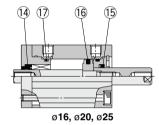

With auto switch (built-in magnet)

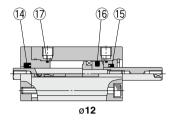

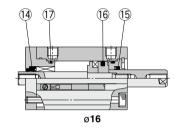

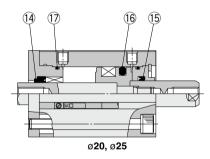

* The numbers correspond with those in the "Construction" of the CQSKW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14	Rod seal for non-rotating		
15	Rod seal	NBR	
16	Piston seal	INDR	
17	Tube gasket		

Replacement Parts: Seal Kit

riepiacement i arts. Cear tit				
Bore size (mm)	Part no.	Contents		
12	CQSKWB12-PS			
16	CQSKWB16-PS	Set of nos.		
20	CQSKWB20-PS	14, 15, 16, 17		
25	CQSKWB25-PS			

* The seal kit includes 4, 5, 5, 7. Order the seal kit based on each bore size.


* Since the seal kit does not include a grease pack, it should be ordered separately.

Compact Cylinder/Anti-lateral Load Type





Construction

Basic type

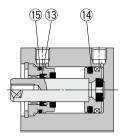

With auto switch (built-in magnet)

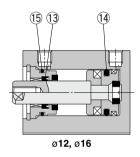

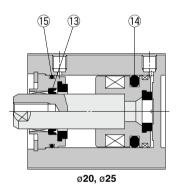

* The numbers correspond with those in the "Construction" of the CQS Series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
13	Rod seal		
14)	Piston seal	NBR	
(15)	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
12	CQSB12-PS	
16	CQSB16-PS	Set of nos.
20	CQSB20-PS	(13), (14), (15)
25	CQSB25-PS	

- \ast The seal kit includes $\ensuremath{(\mbox{\^{1}\! 3})},\ensuremath{(\mbox{\^{1}\! 4})}$. Order the seal kit based on each bore size.
- \ast Since the seal kit does not include a grease pack, it should be ordered separately.




CQ2/CQ2Y/CQ2X Series


Ø12, Ø16, Ø20 Ø25, Ø32, Ø40 Ø50, Ø63 Ø80, Ø100



Construction

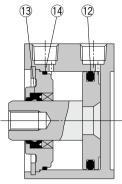

Without auto switch

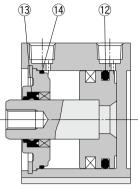

With auto switch

* The figures above show the construction of the CQ2 series.

The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Piston seal		
13	Rod seal	NBR	
(14)	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
Pneumatic type	Pneumatic type				
12	CQ2B12-PS				
16	CQ2B16-PS				
20	CQ2B20-PS				
25	CQ2B25-PS				
32	CQ2B32-PS	Set of nos.			
40	CQ2B40-PS	12, 13, 14			
50	CQ2B50-PS				
63	CQ2B63-PS				
80	CQ2B80-PS				
100	CQ2B100-PS				
Air-hydro typo					

Air-hydro type

20	CQ2BH20-PS	
25	CQ2BH25-PS	
32	CQ2BH32-PS	
40	CQ2BH40-PS	Set of nos.
50	CQ2BH50-PS	12, 13, 14
63	CQ2BH63-PS	
80	CQ2BH80-PS	
100	CQ2BH100-PS	

- \ast The seal kit includes @, @, and @. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
Smooth cylinder	Smooth cylinder			
32	CQ2Y32-PS			
40	CQ2Y40-PS	0-4-4		
50	CQ2Y50-PS	Set of nos. (12), (13), (14), and		
63	CQ2Y63-PS	a grease pack (10 g)		
80	CQ2Y80-PS	a grease pack (10 g)		
100	CQ2Y100-PS			

Low speed cylinder

32	CQ2X32-PS	
40	CQ2X40-PS	0-4-6
50	CQ2X50-PS	Set of nos. 12, 13, 14, and
63	CQ2X63-PS	a grease pack (10 g)
80	CQ2X80-PS	a grease pack (10 g)
100	CQ2X100-PS	

- * The seal kit includes ②, ③, and ④. Order the seal kit based on each bore size.
- * The seal kit for smooth/low speed cylinders includes a grease pack (10 g)

Order with one of the following part numbers when only the maintenance grease is required.


Compact Cylinder/Standard Type: Double Acting, Double Rod


CQ2W Series

ø12, ø16, ø20 ø25, ø32, ø40 ø50, ø63, ø80



Construction

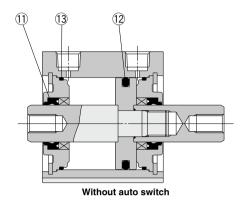

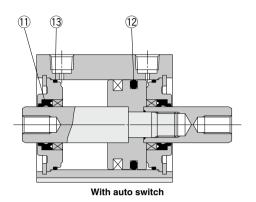

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Rod seal		
12	Piston seal	NBR	
13	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
Pneumatic type		
12	CQ2WB12-PS	
16	CQ2WB16-PS	
20	CQ2WB20-PS	
25	CQ2WB25-PS	
32	CQ2WB32-PS	Set of nos.
40	CQ2WB40-PS	11), 12, 13
50	CQ2WB50-PS	
63	CQ2WB63-PS	
80	CQ2WB80-PS	
100	CQ2WB100-PS	
Air-hydro type		
20	CQ2WBH20-PS	
25	CQ2WBH25-PS	
32	CQ2WBH32-PS	
40	CQ2WBH40-PS	Set of nos.
50	CQ2WBH50-PS	11), 12, 13
63	CQ2WBH63-PS	
80	CQ2WBH80-PS	

- CQ2WBH100-PS * The seal kit includes ①, ②, ③. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)


100




CQ2 Series Ø12, Ø16, Ø20, Ø25 Ø32, Ø40, Ø50


The Replacement Procedure is on p. 323

Construction

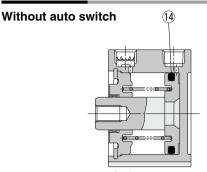




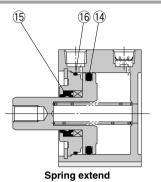

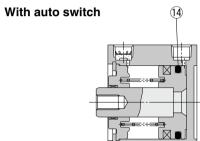

Spring return

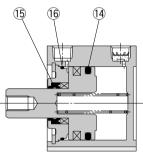

Spring extend

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Piston seal		
15	Rod seal	NBR	
16	Gasket		

Replacement Parts: Seal Kit

riepiacement i arts. Cear Kit				
Part no.	Contents			
Single acting, spring return				
CQ2B12-S-PS				
CQ2B16-S-PS				
CQ2B20-S-PS				
CQ2B25-S-PS	No. 🗐			
CQ2B32-S-PS				
CQ2B40-S-PS				
CQ2B50-S-PS				
	Part no. oring return CQ2B12-S-PS CQ2B16-S-PS CQ2B20-S-PS CQ2B25-S-PS CQ2B32-S-PS CQ2B40-S-PS			

Single acting, spring extend

onigio dottiig, opinig ontoila				
12	CQ2B12-T-PS			
16	CQ2B16-T-PS			
20	CQ2B20-T-PS	Catafaaa		
25	CQ2B25-T-PS	Set of nos.		
32	CQ2B32-T-PS	9, 9, 9		
40	CQ2B40-T-PS			
50	CQ2B50-T-PS			

- * The seal kit includes 1, 1, 6. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Compact Cylinder/Large Bore Size: Double Acting, Single Rod

CQ2 Series 0125, 0140, 0160 0180, 0200



Construction

Standard

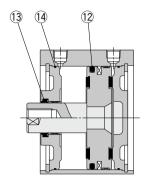

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Piston seal		
13	Rod seal	NBR	
14)	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
125	CQ2B125-PS	
140	CQ2B140-PS	Cot of non
160	CQ2B160-PS	Set of nos.
180	CQ2B180-PS	12, 13, 14
200	CQ2B200-PS	

- * The seal kit includes ②, ③, ④. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Retaining Ring Installation/Removal

⚠ Caution


- For installation and removal, use an appropriate pair of pliers (tool for installing a C retaining ring).
- 2. Even if a proper plier (tool for installing a C retaining ring) is used, it is likely to inflict damage to a human body or peripheral equipment, as a retaining ring may be flown out of the tip of a plier (tool for installing a C retaining ring). Be much careful with the popping of a retaining ring. Besides, be certain that a retaining ring is placed firmly into the groove of rod cover before supplying air at the time of installment.



The Replacement Procedure is on p. 323

Construction

Standard

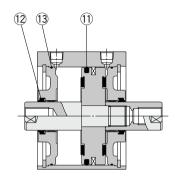

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Piston seal		
12	Rod seal	NBR	
(13)	Tube gasket		

Replacement Parts: Seal Kit

riopiacoment i artor ocar itit			
Bore size (mm)	Part no.	Contents	
125	CQ2WB125-PS		
140	CQ2WB140-PS	Set of nos.	
160	CQ2WB160-PS	(1), (12), (13)	
180	CQ2WB180-PS	U, B, U	
200	CQ2WB200-PS		

* The seal kit includes ①, ②, ③. Order the seal kit based on each bore size.

^{*} Since the seal kit does not include a grease pack, it should be ordered

Compact Cylinder/Long Stroke Type: Double Acting, Single Rod

CQ2 Series 032, 040, 050 063, 080, 0100



Construction

Standard



* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Rod seal		
15	Piston seal	NBR	
(16)	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
32	CQ2A32-L-PS		
40	CQ2A40-L-PS		
50	CQ2A50-L-PS	Set of nos.	
63	CQ2A63-L-PS	14, 15, 16	
80	CQ2A80-L-PS		
100	CQ2A100-L-PS		

- * The seal kit includes (4), (5), (6). Order the seal kit based on each bore size
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Retaining Ring Installation/Removal

⚠ Caution

- For installation and removal, use an appropriate pair of pliers (tool for installing a C retaining ring).
- 2. Even if a proper plier (tool for installing a C retaining ring) is used, it is likely to inflict damage to a human body or peripheral equipment, as a retaining ring may be flown out of the tip of a plier (tool for installing a C retaining ring). Be much careful with the popping of a retaining ring. Besides, be certain that a retaining ring is placed firmly into the groove of rod cover before supplying air at the time of installment.

 


CQ2K Series ©12, Ø16, Ø20, Ø25 Ø32, Ø40, Ø50, Ø63




Construction

Standard (ø40 to ø63)



Without auto switch

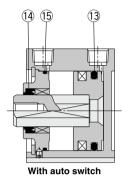

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
13	Piston seal		
14)	Rod seal	NBR	
15	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
12	CQ2KB12-PS	
16	CQ2KB16-PS	
20	CQ2KB20-PS	
25	CQ2KB25-PS	Set of nos.
32	CQ2KB32-PS	13, 14, 15
40	CQ2KB40-PS	
50	CQ2KB50-PS	
63	CQ2KB63-PS	
	0 42.1200 . 0	

- * The seal kit includes 3, 4, 5. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Air Preparation Equipment

Industrial Filters

Compact Cylinder/Non-rotating Rod: Double Acting, Double Rod


CQ2KW Series


Ø12, Ø16 Ø20, Ø25 Ø32, Ø40 Ø50, Ø63



Construction

Standard (ø40 to ø63)

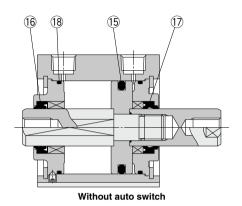

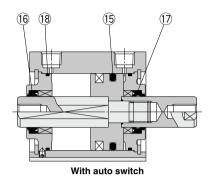

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No	Description	Material	Note
15	Piston seal		
16	Rod seal for non-rotating	NBR	
17	Rod seal	NDK	
18	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
12	CQ2KWB12-PS			
16	CQ2KWB16-PS			
20	CQ2KWB20-PS			
25	CQ2KWB25-PS	Set of nos.		
32	CQ2KWB32-PS	15, 16, 17, 18		
40	CQ2KWB40-PS			
50	CQ2KWB50-PS			
63	CQ2KWB63-PS			

^{*} The seal kit includes (\$\), (6), (7), (8). Order the seal kit based on each hore size


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

CQP2 Series 912, 916, 920, 925 932, 940, 950, 963 980, 9100


The Replacement Procedure is on p. 323

Construction


Without auto switch

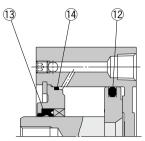


A-A section (port on rod end)

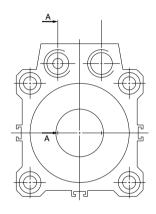

With auto switch

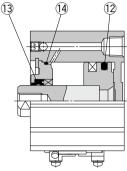

A-A section (port on rod end)

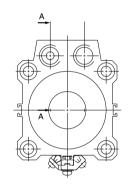

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Piston seal		
13	Rod seal	NBR	
(14)	Gasket		

Replacement Parts: Seal Kit				
Bore size (mm)	Part no.	Contents		
Pneumatic type	(non-lube)			
12	CQ2B12-PS			
16	CQ2B16-PS			
20	CQ2B20-PS			
25	CQ2B25-PS			
32	CQ2B32-PS	Set of nos.		
40	CQ2B40-PS	12, 13, 14		
50	CQ2B50-PS			
63	CQ2B63-PS			
80	CQ2B80-PS			
100	CQ2B100-PS			

Air-hydro type

20	CQ2BH20-PS	
25	CQ2BH25-PS	
32	CQ2BH32-PS	
40	CQ2BH40-PS	Set of nos.
50	CQ2BH50-PS	12, 13, 14
63	CQ2BH63-PS	
80	CQ2BH80-PS	
100	CQ2BH100-PS	

- * The seal kit includes ②, ③, ④. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)

Air Preparation Equipment

Industrial Filters


Compact Cylinder/Axial Piping: Single Acting, Single Rod

CQP2 Series ©12, Ø16, Ø20, Ø25 Ø32, Ø40, Ø50




Construction

Without auto switch

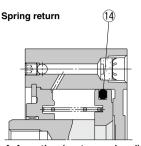


Spring extend

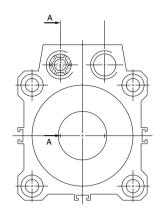


A-A section (port on rod end)

With auto switch

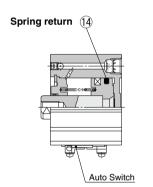




Spring extend

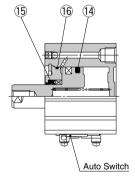

A-A section (port on rod end)

 A-A section (port on rod end)



Seal Kit List

No.	Description	Material	Note
14)	Piston seal		
15	Rod seal	NBR	
16	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
Single acting, sp	Single acting, spring return				
12	CQ2B12-S-PS				
16	CQ2B16-S-PS				
20	CQ2B20-S-PS				
25	CQ2B25-S-PS	No. 😉			
32	CQ2B32-S-PS				
40	CQ2B40-S-PS				
50	CQ2B50-S-PS				

- * The seal kit includes 14. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Seal Kit

neplacement i arts. Sear Kit						
Bore size (mm)	Part no.	Contents				
Single acting, sp	Single acting, spring extend					
12	CQ2B12-T-PS					
16	CQ2B16-T-PS					
20	CQ2B20-T-PS	Set of nos.				
25	CQ2B25-T-PS	(4), (15), (16)				
32	CQ2B32-T-PS	19, 19, 10				
40	CQ2B40-T-PS					
50	CQ2B50-T-PS					

- * The seal kit includes 4, 5, 6. Order the seal kit based on each bore
- * Since the seal kit does not include a grease pack, it should be ordered separately.




^{*} The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.


CQ2 Series 032, 040, 050 063, 080, 0100



Construction

Standard

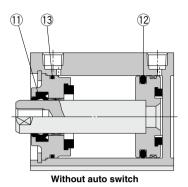

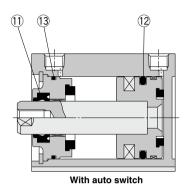

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Rod seal		
12	Piston seal	NBR	
(13)	Tube gasket		

Replacement Parts: Seal Kit

Replacement Parts: Seal Kit				
Bore size (mm)	Part no.	Contents		
32	CQ2B32-PS			
40	CQ2B40-PS			
50	CQ2B50-PS	Set of nos.		
63	CQ2B63-PS	11), 12, 13		
80	CQ2B80-PS			
100	CQ2B100-PS			

- \ast The seal kit includes 1, 2, 3. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Compact Cylinder/With End Lock


CBQ2 Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100



Construction

ø32 to ø63

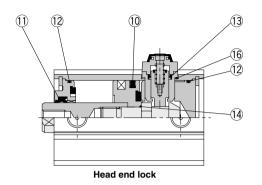

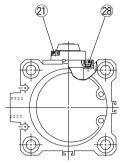

Cylinder tube form Ø32 to Ø63

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
10	Piston seal	NBR	
11	Rod seal	NBR	
12	Tube gasket	NBR	Using 4 pcs. for ø80, ø100
13	Lock piston seal	NBR	
14	Piston gasket	NBR	Nothing for ø20, ø25
16	Gasket	NBR	
21)	Hexagon socket head cap screw	Alloy steel	Black zinc chromated
28	Hexagon socket head cap screw	Alloy steel	Nickel plated

14 is a non-replaceable part, so it is not included in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
End lock type		
20	CBQ2B20-PS	
25	CBQ2B25-PS	
32	CBQ2B32-PS	Set of nos.
40	CBQ2B40-PS	10, 11, 12, 13,
50	CBQ2B50-PS	16, 21, 28,
63	CBQ2B63-PS	and a grease pack
80	CBQ2B80-PS	
100	CBQ2B100-PS	


- * The seal kit includes ①, ①, ②, ③, ⑥, ②, ②. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


CQ2 Series ©20, Ø25, Ø32, Ø40 Ø50, Ø63, Ø80, Ø100

The Replacement Procedure is on p. 323

Construction

Standard (Ø40 to Ø100)

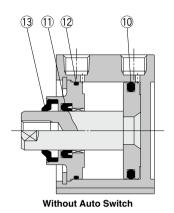

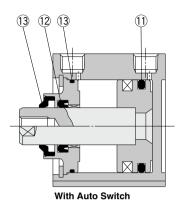

* The numbers correspond with those in the "Construction" of the CQ2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
(10)	Piston seal	R: NBR	
10	PISTOII Seal	V: FKM	
11	Ded seel	R: NBR	13 is a non-
U	Rod seal	V: FKM	replaceable part, so
(12)	Tuba maakat	R: NBR	it is not included in
(12)	Tube gasket	V: FKM	the seal kit.
13	Rod scraper	R: NBR	
13	nou scraper	V: FKM	

^{*} R: NBR seal (Nitrile rubber)

Replacement Parts: Seal Kit

Bore size	Part	Contents		
(mm)	R: NBR	V: FKM	Contents	
20	CQ2B20R-PS	CQ2B20V-PS		
25	CQ2B25R-PS	CQ2B25V-PS		
32	CQ2B32R-PS	CQ2B32V-PS		
40	CQ2B40R-PS	CQ2B40V-PS	Set of nos.	
50	CQ2B50R-PS	CQ2B50V-PS	10, 11, 12	
63	CQ2B63R-PS	CQ2B63V-PS		
80	CQ2B80R-PS	CQ2B80V-PS		
100	CQ2B100R-PS	CQ2B100V-PS		

^{*} The seal kit includes @, @. Order the seal kit based on each bore size.

Grease pack part no.: GR-S-010 (10 g)

Actuator

V: FKM seal (Fluororubber)

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Compact Cylinder with Air Cushion

RQ Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100





Construction

ø20 to ø40

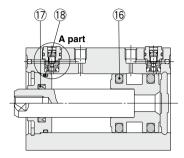

ø50 to ø100

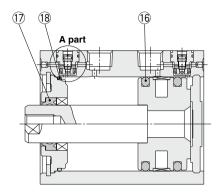

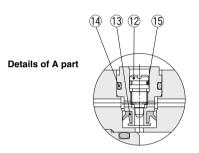

* The numbers correspond with those in the "Construction" of the RQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Cushion needle	Stainless steel	
13	Check seal	NBR	
14	Check gasket	NBR	12 to 15 are non-
15	Needle gasket	NBR	replaceable parts, so they are not included
16	Piston seal	NBR	in the seal kit.
17	Rod seal	NBR	
(18)	Tube gasket	NBR	

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents	
20	RQB20-PS		
25	RQB25-PS		
32	RQB32-PS		
40	RQB40-PS	Set of nos.	
50	RQB50-PS	16, 17, 18	
63	RQB63-PS		
80	RQB80-PS		
100	RQB100-PS		

- * The seal kit includes (6), (7), (8). Order the seal kit based on each bore
- * Since the seal kit does not include a grease pack, it should be ordered separately.



CQU Series Ø20, Ø25, Ø32, Ø40

Construction

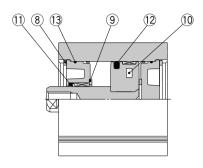

* The numbers correspond with those in the "Construction" of the CQU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
8	N-type retaining ring	Carbon tool steel	
9	Bumper	Urethane	9 and 10 are
10	Magnet	_	non-replaceable parts, so
11)	Rod seal	NBR	they are not included in
12	Piston seal	NBR	the seal kit.
13	O-ring	NBR	

Replacement Parts: Seal Kit


neplacement Faits. Seal Kit				
Bore size (mm)	Part no.	Contents		
20	CQUB20-PS			
25	CQUB25-PS	Set of nos.		
32	CQUB32-PS	8, 11, 12, 13		
40	CQUB40-PS			

- * The seal kit includes (8) , (1) , (2) , (3) . Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Plate Cylinder/Double Acting, Single Rod

MU Series ©25, ©32, ©40, ©50, ©63

Construction

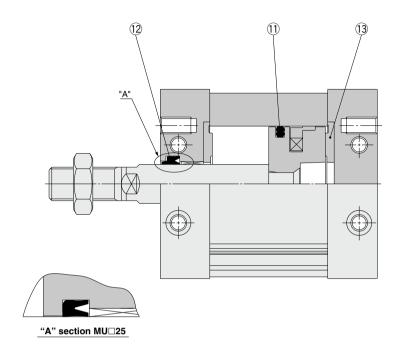

* The numbers correspond with those in the "Construction" of the MU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note	
11	Piston seal	NBR		
12	Rod seal	NBR		
13	Bumper	Urethane		

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
25	MUB25-PS	
32	MUB32-PS	Cot of moo
40	MUB40-PS	Set of nos.
50	MUB50-PS	0, 6, 3
63	MUB63-PS	

^{*} The seal kit includes 1 to 3. Order the seal kit based on each bore

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

MUW Series ©25, ©32, ©40, ©50, ©63

Construction

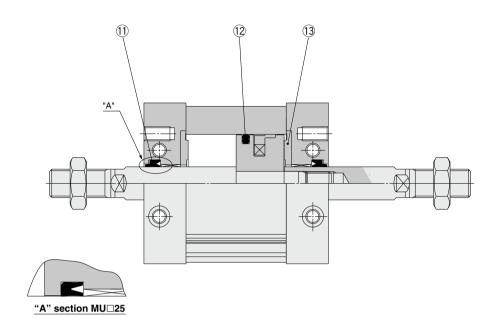

* The numbers correspond with those in the "Construction" of the MU series in the Best Pneumatics catalog.

Seal Kit List

Jean Kit List				
No.	Description	Material	Note	
11	Rod seal			
12	Piston seal	NBR		
(13)	Bumper			

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
25	MUW25-PS	
32	MUW32-PS	Cot of noo
40	MUW40-PS	Set of nos.
50	MUW50-PS	U, W, U
63	MUW63-PS	


- * The seal kit includes 1 to 3. Order the seal kit based on each bore
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Plate Cylinder/Single Acting, Spring Return/Extend


MU Series ©25, ©32, ©40, ©50, ©63

Construction

Spring return

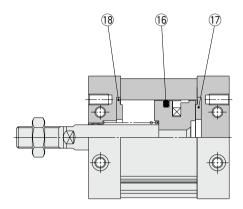

Spring extend

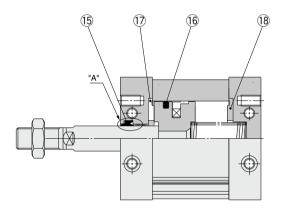



* The numbers correspond with those in the "Construction" of the MU series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
15	Rod seal	NBR	
16	Piston seal	NBR	
17	Bumper	Urethane	
18	Bumper B	Urethane	

Replacement Parts: Seal Kit

Bore size	Par	t no.	Contents
(mm)	Spring return	Spring extend	
25	MU25S-PS MU25T-PS		
32	MU32S-PS	MU32T-PS	For spring return type:
40	MU40S-PS	MU40T-PS	16, 17, 18 as a set For spring extend type:
50	MU50S-PS	MU50T-PS	(15), (16), (17), (18) as a set
63	MU63S-PS	MU63T-PS	w, w, w, w as a set

^{*} The seal kit includes 15, 16, 17, 18 (excluding 15 for spring return type). Order them with a part number for each bore size.




^{*} Since the seal kit does not include a grease pack, it should be ordered

CG5-S Series 920, 925, 932 940, 950, 963 980, 9100




Construction

With rubber bumper

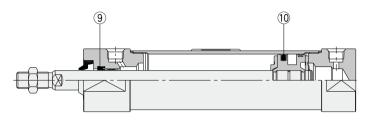

With air cushion

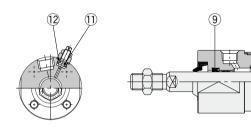

* The numbers correspond with those in the "Construction" of the CG5-S series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material		
		CG5□□□SR	CG5□□□SV	
9	Rod seal	NBR	FKM	
10	Piston seal			
11)	Valve seal			
12	Valve retainer gasket			

Replacement Parts: Seal Kit

Bore size	Part no.		Contents	
(mm)	CG5□N□SR	CG5□N□SV	Contents	
Rubber bumper				
20	CG5N20SR-PS	CG5N20SV-PS		
25	CG5N25SR-PS	CG5N25SV-PS	Set of nos.	
32	CG5N32SR-PS	CG5N32SV-PS	9, 10	
40	CG5N40SR-PS	CG5N40SV-PS		

(10)

bore size	Faii	Contents	
(mm)	CG5□A□SR	CG5□A□SV	Contents
Air cushion			

20	CG5A20SR-PS	CG5A20SV-PS	
25	CG5A25SR-PS	CG5A25SV-PS	Set of nos.
32	CG5A32SR-PS	CG5A32SV-PS	9, 10, 11, 12
40	CG5A40SR-PS	CG5A40SV-PS	

- * Order the seal kit based on each bore size.
- The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is

Grease pack part no.: GR-R-010 (10 g)

∕∖∖ Caution

When disassembling cylinders with bore sizes of ø20 through ø40, grip the double flat part of either the tube cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When retightening, tighten approximately 2 degrees more than the original position. (Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled.)


Hygienic Design Cylinder/Basic Type

HYQ Series 020, 025, 032 040, 050, 063




Construction

ø20, ø25

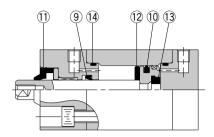

Ø32 to Ø63

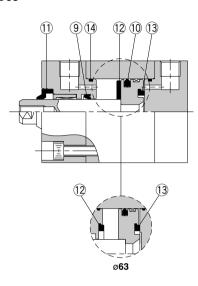

* The numbers correspond with those in the "Construction" of the HYQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
9	Rod seal	NBR	(FKM can be selected.)
10	Piston seal	NBR	
11	Rod scraper	NBR	(FKM can be selected.)
12	Bumper A	Resin	
13	Bumper B	Resin	
14)	Tube gasket	NBR	(FKM can be selected.)

11, 12 and 13 are non-replaceable parts, so they are not included in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
20	HYQB20□-PS	Set of nos.		
25	HYQB25□-PS	9, 10, 14		

Place the seal material symbol in \square .

Symbol	Material	
R	NBR	
Н	External FKM*	

- * External seal: Rod seal and the tube gasket are made from FKM.
- * The seal kit includes (9), (10) and (14). Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease for food part no.: GR-H-010 (10 g) Standard grease part no.: GR-S-010 (10 g)

Seal Kit List

No.	Description	Material	Note
9	Rod seal	NBR	(FKM can be selected.)
10	Piston seal	NBR	
11	Rod scraper	NBR	(FKM can be selected.)
12	Bumper A	Resin	
13	Bumper B	Resin	(Only ø63 is common to the bumper A.)
14)	Tube gasket	NBR	(FKM can be selected.)

11, 12 and 13 are non-replaceable parts, so they are not included in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
32	HYQB32□-PS			
40	HYQB40□-PS	Set of nos.		
50	HYQB50□-PS	9, 10, 14		
63	HYQB63□-PS			

Place the seal material symbol in \square .

Symbol	Material	
R	NBR	
Н	External FKM*	

- * External seal: Rod seal and the tube gasket are made from FKM.
- * The seal kit includes (9), (10) and (14). Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease for food part no.: GR-H-010 (10 g) Standard grease part no.: GR-S-010 (10 g)




 
Hygienic Design Cylinder/ISO Standard Type

HYC Series Ø32, Ø40, Ø50, Ø63



Construction

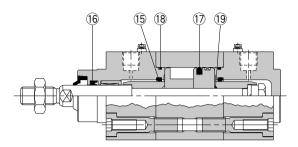



* The numbers correspond with those in the "Construction" of the HYC series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
15	Cushion seal	Resin	2	
16	Rod seal	NBR	1	(FKM can be selected.)
17	Piston seal	NBR	1	
18	Cylinder tube gasket	NBR	2	(FKM can be selected.)
19	Piston gasket	NBR	1	
21)	Needle scraper	NBR	2	(FKM can be selected.)

19 is a non-replaceable part, so it is not included in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
32	HYCB32□-PS			
40	HYCB40□-PS	Set of nos.		
50	HYCB50□-PS	15, 16, 17, 18, 21		
63	HYCB63□-PS			

Place the seal material symbol in \square .

Symbol	Material
R	NBR
н	External FKM*

- * External seal: Rod seal, the tube gasket and needle scraper are made
- * The seal kit includes (5), (6), (7), (8) and (2). Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Grease for food part no.: GR-H-010 (10 g) Standard grease part no.: GR-S-010 (10 g)

Hygienic Design Cylinder

HYG Series ©20, ©25, ©32 ©40, ©50, ©63



Construction

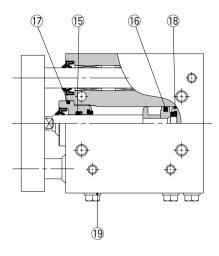

* The numbers correspond with those in the "Construction" of the HYG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
15	Rod seal	NBR	(FKM can be selected.)
16	Piston seal	NBR	
17	O-ring (Rod end)	NBR	(FKM can be selected.)
18	O-ring (Head end)	NBR	
19	Seal washer	Stainless steel + NBR	(FKM can be selected.)

18 is a non-replaceable part, so it is not included in the seal kit.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	HYG20□-PS	Set of nos.
25	HYG25□-PS	(5, 16, 17, 19
32	HYG32□-PS	19, 10, 17, 13

Place the seal material symbol in \Box .

Symbol	Material
R	NBR
Н	External FKM*

- * External seal: Rod seal, O-ring (Rod side) and seal washer are made from FKM.
- * The seal kit includes 15, 16, 17 and 19. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease for food part no.: GR-H-010 (10 g) Standard grease part no.: GR-S-010 (10 g)



Please contact SMC to repair or replace seals of cylinder bore size 40 mm and above.

Please contact SMC when the cylinder has to be disassembled for the purpose of replacing seals, etc.



MY1B- Z Series (25, Ø32, Ø40)


Mechanically Jointed Rodless Cylinder/Basic Type

Construction

 
The products in this series are refreshed products.

 
- Check the following before ordering.
- Previous series (Discontinued product) MY1B ⇒ p. 122
- Checking whether the cylinder is a new or a previous model → p. 563, 564

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below. Lot number checking method → p. 564

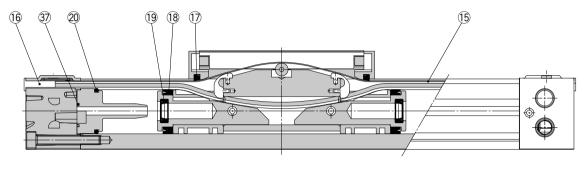







* The numbers correspond with those in the "Construction" of the MY1B series in the Best Pneumatics catalog

Rep	Replacement Parts: Seal Kit													
No.	Description	Material	Qty.	MY1B25	MY1B32	MY1B40	Note							
14	Seal belt	Urethane	1	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke								
15	Dust seal band	Stainless steel	1	MY1B25-16B-Stroke	MY1B32-16B-Stroke	MY1B40-16B-Stroke								
16	Belt clamp	Polybutylene terephthalate	2	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B								
28	O-ring	NBR	2	KA00311	KA00320	KA00320								
20	O-ring	NDN		(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø7.15 x ø3.75 x ø1.7)	14, 15, 16, 28, 33, and 37 are							
33	Side scraper	Polyamide	2	MYB25-15BA5900B	MYB32-15BA5901B	MYB40-15BA5902B	not included in the seal kit. Order them as required with							
37	Cushion boss gasket	NBR	2	MYB25-16GA5900	MYB32-16GA5901	MYB40-16GA5902	the individual part numbers							
17	Scraper	NBR	2				provided.							
18	Piston seal	NBR	2											
19	Cushion seal	NBR	2	MY1B25-PS	MY1B32-PS	MY1B40-PS								
20	Tube gasket	NBR	2											
34)	O-ring	NBR	2											

- * The seal kit includes 1, 18, 19, 20 and, 34. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).

When (4) and (5) are shipped independently, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required. Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

MY1H- Z Series ©25, ©32, ©40

Construction


The products in this series are refreshed products.

Check the following before ordering.

• Previous series (Discontinued product) MY1H ⇒ p. 126

• Checking whether the cylinder is a new or a previous model → p. 563, 564

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below. Lot number checking method → p. 564

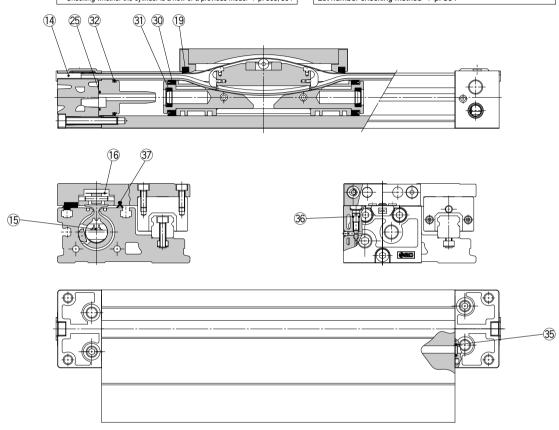

* The numbers correspond with those in the "Construction" of the MY1H series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit //4 15 16 25 36 and 37 are not included in the seal kit Order them as required with the individual part numbers provided.)

nep	replacement Parts. Seal Kit (14, 15, 16, 25, 36, and 37 are not included in the seal kit. Order them as required with the individual part numbers provided.)										
No.	Description	Material	Qty.	MY1H25 MY1H32		MY1H40					
14	Belt clamp	Special resin	2	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B					
15	Seal belt	Urethane	1	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke					
16	Dust seal band	Stainless steel	1	MY1B25-16B- Stroke	MY1B32-16B-Stroke	MY1B40-16B-Stroke					
25	Cushion boss gasket	NBR	2	MYB25-16GA5900	MYB32-16GA5901	MYB40-16GA5902					
36	O-ring	NBR	2	KA00311	KA00320	KA00320					
30	O-ring	NDN		(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	ø7.15 x ø3.75 x ø1.7					
37	Side scraper	Special resin	2	MYH25-15BK2902B	MYH32-15BK2903B	MYH40-15BK2904B					
19	Scraper	NBR	2								
30	Piston seal	NBR	2								
31)	Cushion seal	NBR	2	MY1H25-PS	MY1H32-PS	MY1H40-PS					
32	Tube gasket	NBR	2								
35	O-ring	NBR	2								

^{*} The seal kit includes (9, 30, 3), 32, and 35. Order the seal kit based on each bore size.

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)



^{*} The seal kit includes a grease pack (10 g).


When ⓑ and ⓑ are shipped independently, a grease pack is included. (10 g per 1000 strokes)

MY1H- Z Series

Mechanically Jointed Rodless Cylinder/Linear Guide Type

Construction

With end lock: Ø25 to Ø40

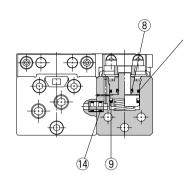

The products in this series are refreshed products. Check the following before ordering.

- Previous series (Discontinued product) MY1H → p. 127
 Checking whether the cylinder is a new or a previous model
- ⇒ p. 563, 564

* The numbers correspond with those in the "Construction" of the MY1H series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit

nep	neplacement Farts. Sear Kit												
No.	Description	Material	Qty.	MY1H25	MY1H32	MY1H40							
8	Rod seal	NBR	1	KB00267	KB00267	KB00267							
9	Piston seal	NBR	1	KB00217	KB00217	KB00217							
12	O-ring	NBR	1	KA00037	KA00037	KA00037							
14	O-ring	NBR	2	KA00048	KA00048	KA00048							

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


^{*} Replacement parts other than those shown above are the same as those for the standard type. Refer to page 119.

 
MY1B Series 510



Construction

Centralized piping type: Ø10

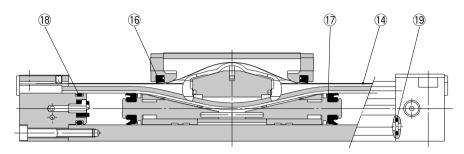



* The numbers correspond with those in the "Construction" of the MY1B series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit

nep	neplacement Farts. Sear Kit													
No.	Description	Qty.	MY1B10	Note										
13	Seal belt	1	MY10-16A-Stroke											
14	Dust seal band	1	MY10-16B-Stroke	13 and 14 are not included in										
16	Scraper	2		the seal kit. Order them as										
17	Piston seal	2	MY1B10-PS	required with the individual										
18	Tube gasket	2	WITTE TO-F3	part numbers provided.										
19	O-ring	4												

^{*} The seal kit includes (\$\(\), (\), (\), (\), and (\).

The seal kit includes a grease pack (10 g).

When (\) and (\) are shipped independently, a grease pack is included. (10 g per 1000 strokes)

pack is included. (10 g per 1000 strokes)
Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)



MY1B Series 916, 920, 925, 932 940, 950, 963, 980 9100




Construction

ø16 to ø100

The production of this series has been discontinued. Check the following before ordering. • New series MY1B-□Z ⇒ p. 118

• Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for ø25, ø32, and ø40 sizes. Lot number checking method → p. 564

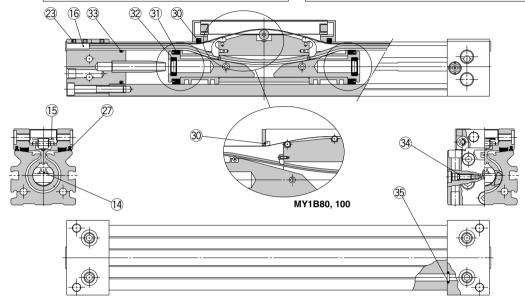

* The numbers correspond with those in the "Construction" of the MY1B series in the Best Pneumatics catalog (Web Catalog for ø25 to ø40 sizes).

Replacement Parts: Seal Kit

	accinonic i ancoi						
No.	Description	Qty.	MY1B16	MY1B20	MY1B25	MY1B32	MY1B40
14	Seal belt	1	MY16-16C-Stroke	MY20-16C-Stroke	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke
15	Dust seal band	1	MY16-16B-Stroke	MY20-16B-Stroke	MY25-16B-Stroke	MY32-16B-Stroke	MY40-16B-Stroke
16	Belt clamp 2		-	_	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B
27	Side scraper 2		_	MYB20-15CA7164B	MYB25-15BA5900B	MYB32-15BA5901B	MYB40-15BA5902B
34	O-ring	2	KA00309	KA00309	KA00311	KA00320	KA00320
34	O-ring	2	(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø7.15 x ø3.75 x ø1.7)
30	Scraper	2					
31)	Piston seal	2					
32	Cushion seal	2	MY1B16-PS	MY1B20-PS	MY1B25-PS	MY1B32-PS	MY1B40-PS
33	Tube gasket	2					
35	O-ring	4					

No.	Description	Qty.	MY1B50	MY1B63	MY1B80	MY1B100	Note
14	Seal belt	1	MY50-16C-Stroke	MY63-16A-Stroke	MY80-16A-Stroke	MY100-16A-Stroke	
15	Dust seal band	1	MY50-16B-Stroke	MY63-16B-Stroke	MY80-16B-Stroke	MY100-16B-Stroke	
16	Belt clamp	1	_	_	_	_	
27	Side scraper	2	MYB50-15CA7165B	MYB63-15CA7166B	MYB80-15CK2470B	MY100-15CK2471B	14, 15, 16, 27, and 34 are not included
24	4 0		KA00402	KA00777	KA00050	KA00050	in the seal kit.
34	O-ring	2 (ø8.3 x ø4.5 x ø1				_	Order them as
30	Scraper	2					required with the
31	Piston seal	2					individual part numbers provided.
32	Cushion seal	2	MY1B50-PS	MY1B63-PS	MY1B80-PS	MY1B100-PS	
33	Tube gasket	2					
35	O-ring	4					

^{*} The seal kit includes 30, 31, 32, 33, and 35. Order the seal kit based on each bore size.

When (4) and (5) are shipped independently, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Note) Two kinds of dust seal bands are available. Since the part number varies depending on the treatment of the hexagon socket head set screw 23, confirm before ordering. A: Black zinc chromated \rightarrow MY \square -16B-stroke, B: Nickel plated \rightarrow MY \square -16BW-stroke




^{*} The seal kit includes a grease pack (10 g).

NY11 Series ©16, Ø20, Ø25, Ø32 Ø40, Ø50, Ø63



Construction

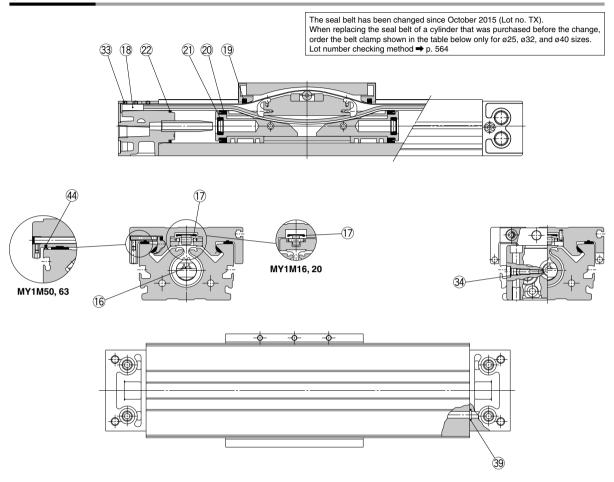

* The numbers correspond with those in the "Construction" of the MY1M series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (16, 17, 18, 34, and 44 are not included in the seal kit. Order them as required with the individual part numbers provided.)

			0 0 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1	.,,,				ano marviadai parci	·····
No.	Description	Qty.	MY1M16	MY1M20	MY1M25	MY1M32	MY1M40	MY1M50	MY1M63
16	Seal belt	1	MY16-16C-Stroke	MY20-16C-Stroke	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke	MY50-16C-Stroke	MY63-16A-Stroke
17	Dust seal band	1	MY16-16B-Stroke	MY20-16B-Stroke	MY25-16B-Stroke	MY32-16B-Stroke	MY40-16B-Stroke	MY50-16B-Stroke	MY63-16B-Stroke
18	Belt clamp	2	_	_	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B	_	_
34	O-ring	2	KA00309	KA00311	KA00311	KA00320	KA00402	KA00777	KA00777
34	O-ring	2	(ø4 x ø1.8 x ø1.1)	(ø5.1 x ø3 x ø1.05)	(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø8.3 x ø4.5 x ø1.9)	_	
44	Side scraper	2	_	_	_	_	_	MYM50-15CK0502B	MYM63-15CK0503B
19	Scraper	2							
20	Piston seal	2							
21)	Cushion seal	2	MY1M16-PS	MY1M20-PS	MY1M25-PS	MY1M32-PS	MY1M40-PS	MY1M50-PS	MY1M63-PS
22	Tube gasket	2							
39	O-ring	4							

^{*} The seal kit includes (9, 20, 2), 22, and 39. Order the seal kit based on each bore size.

A: Black zinc chromated \rightarrow MY \square \square -16B-stroke, B: Nickel plated \rightarrow MY \square \square -16BW-stroke



^{*} The seal kit includes a grease pack (10 g).

When 16 and 17 are shipped independently, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)


Note) Two kinds of dust seal bands are available. Since the part number varies depending on the treatment of the hexagon socket head set screw 39, confirm before ordering.

Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type

MY1C Series 016, 020, 025, 032 040, 050, 063



Construction

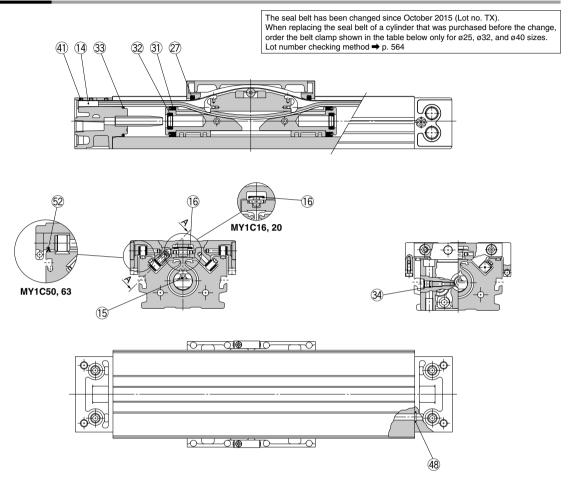

* The numbers correspond with those in the "Construction" of the MY1C series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (14, 15, 16, 34, and 52 are not included in the seal kit. Order them as required with the individual part numbers provided.)

opiacomone i artor ocar itte (14, 16, 16, 54, and 52 are not included in the scal title order them as required with the individual part numbers provided.)										
Description	Qty.	MY1C16	MY1C20	MY1C25	MY1C32	MY1C40	MY1C50	MY1C63		
Belt clamp	2	_	_	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B	_	_		
Seal belt	1	MY16-16C-Stroke	MY20-16C-Stroke	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke	MY50-16C-Stroke	MY63-16A-Stroke		
Dust seal band	1	MY16-16B-Stroke	MY20-16B-Stroke	MY25-16B-Stroke	MY32-16B-Stroke	MY40-16B-Stroke	MY50-16B-Stroke	MY63-16B-Stroke		
O ring	2	KA00309	KA00311	KA00311	KA00320	KA00402	KA00777	KA00777		
O-ring		(ø4 x ø1.8 x ø1.1)	(ø5.1 x ø3 x ø1.05)	(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø8.3 x ø4.5 x ø1.9)	_			
Side scraper	2	_	_	_	_	_	MYM50-15CK0502B	MYM63-15CK0503B		
Scraper	2									
Piston seal	2									
Cushion seal	2	MY1M16-PS	MY1M20-PS	MY1M25-PS	MY1M32-PS	MY1M40-PS	MY1M50-PS	MY1M63-PS		
Tube gasket	2									
O-ring	4									
	Description Belt clamp Seal belt Dust seal band O-ring Side scraper Scraper Piston seal Cushion seal Tube gasket	Description Qty. Belt clamp 2 Seal belt 1 Dust seal band 1 O-ring 2 Side scraper 2 Scraper 2 Piston seal 2 Cushion seal 2 Tube gasket 2	Description Qty. MY1C16	Description Qty. MY1C16 MY1C20	Description Qty. MY1C16 MY1C20 MY1C25 Belt clamp 2 — — MY26-16C-Stroke MY20-16C-Stroke MY25-16C-Stroke Seal belt 1 MY16-16C-Stroke MY20-16C-Stroke MY25-16C-Stroke Dust seal band 1 MY16-16B-Stroke MY20-16B-Stroke MY25-16B-Stroke O-ring 2 KA00309 KA00311 KA00311 Side scraper 2 — — Scraper 2 — — Piston seal 2 MY1M16-PS MY1M20-PS MY1M25-PS Tube gasket 2	Description Qty. MY1C16 MY1C20 MY1C25 MY1C32 Belt clamp 2 — — MY2C3-31-29449B MYC25-31-29449B MYC25-31-29449B MYC25-31-29449B MYC25-31-29449B MY2C3-31-29449B MY2C3-16C-Stroke MY25-16C-Stroke MY32-16C-Stroke MY32-16C-Stroke MY32-16C-Stroke MY32-16B-Stroke MY25-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MY32-16B-Stroke MX32-16B-Stroke MX32-16B-Stroke	Description Oty. MY1C16 MY1C20 MY1C25 MY1C32 MY1C40	Description Qty. MY1C16 MY1C20 MY1C25 MY1C32 MY1C40 MY1C50		

^{*} The seal kit includes @, @, @, @, and @. Order the seal kit based on each bore size.

When (5) and (6) are shipped independently, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Note) Two kinds of dust seal bands are available. Since the part number varies depending on the treatment of the hexagon socket head set screw @, confirm before ordering.

A: Black zinc chromated \rightarrow MY \square -16B-stroke, B: Nickel plated \rightarrow MY \square -16BW-stroke




^{*} The seal kit includes a grease pack (10 g).


MY1H Series 510



Construction

Centralized piping type: Ø10

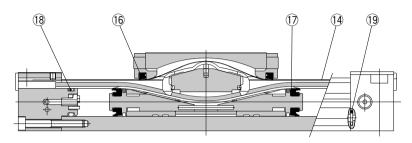

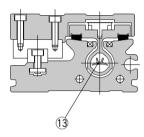

* The numbers correspond with those in the "Construction" of the MY1H series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit

nep	iacement raits. S	cai i	IL .	
No.	Description	Qty.	MY1H10	Note
13	Seal belt	1	MY10-16A-Stroke	
14	Dust seal band	1	MY10-16B-Stroke	
16	Scraper	2		13 and 14 are not included in the seal kit. Order them as required with the
17	Piston seal	2	MY1B10-PS	individual part numbers provided.
18	Tube gasket	2	WITIBIO-PS	
19	O-ring	4		

^{*} The seal kit includes 16, 17, 18 and 19.

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)



The seal kit includes a grease pack (10 g).

When ③ and ④ are shipped independently, a grease pack is included.

MY1H Series ©16, ©20, ©25 ©32, ©40





Construction

The production of this series has been discontinued. Check the following before ordering. • New series MY1H- \Box Z \Rightarrow p. 119

• Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for $\varnothing25$, $\varnothing32$, and $\varnothing40$ sizes. Lot number checking method \Rightarrow p. 564

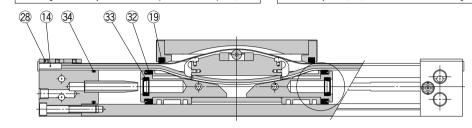

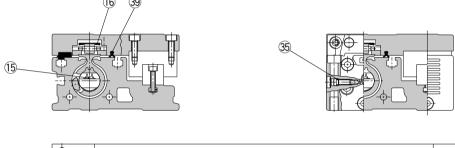



^{*} The numbers correspond with those in the "Construction" of the MY1H series in the Best Pneumatics catalog (Web Catalog for ø25 to ø40 sizes).

Replacement Parts: Seal Kit (14, 15, 16, 35, and 39 are not included in the seal kit. Order them as required with the individual part numbers provided.)

HCP	iacement Parts. S	cui ix	it (14, 15, 10, 55, and 55	are not included in the si	eai kit. Order tilelli as red	juli eu willi lile illulviuuai	part numbers provided.)
No.	Description	Qty.	MY1H16	MY1H20	MY1H25	MY1H32	MY1H40
14	Belt clamp	2	_	_	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B
15	Seal belt	1	MY16-16C-Stroke	MY20-16C-Stroke	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke
16	Dust seal band	1	MY16-16B-Stroke	MY20-16B-Stroke	MY25-16B-Stroke	MY32-16B-Stroke	MY40-16B-Stroke
35	O-ring	2	KA00309	KA00309	KA00311	KA00320	KA00320
33	O-ring		(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø7.15 x ø3.75 x ø1.7)
39	Side scraper	1	MYH16-15BK2900B	MYH20-15BK2901B	MYH25-15BK2902B	MYH32-15BK2903B	MYH40-15BK2904B
19	Scraper	2					
32	Piston seal	2					
33	Cushion seal	2	MY1H16-PS	MY1H20-PS	MY1H25-PS	MY1H32-PS	MY1H40-PS
34	Tube gasket	2					
37)	O-ring	4					

^{*} The seal kit includes (9, 32, 33, 34, and 37). Order the seal kit based on each bore size.

When (5) and (6) are shipped independently, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Note) Two kinds of dust seal bands are available. Since the part number varies depending on the treatment of the hexagon socket head set screw @, confirm before ordering.

A: Black zinc chromated \rightarrow MY \square -16B-stroke, B: Nickel plated \rightarrow MY \square -16BW-stroke




^{*} The seal kit includes a grease pack (10 g).

MY1H Series §16, §20, §25 §32, §40

The Replacement Procedure is on p. 343

Construction

With End Lock: Ø16 to Ø40

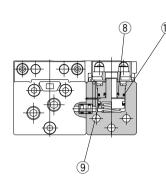

The production of this series has been discontinued. Check the following before ordering.

- New series MY1H-□Z ⇒ p. 120
- Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

* The numbers correspond with those in the "Construction" of the MY1H series in the Best Pneumatics catalog (Web Catalog for ø25 to ø40 sizes).

Replacement Parts: Seal Kit

	naconnonie i antoi	O O O O O O O O O O	•					
No.	Description	Material	Qty.	MY1H16	MY1H20	MY1H25	MY1H32	MY1H40
8	Rod seal		1	KB00257	KB00257	KB00267	KB00267	KB00267
9	Piston seal	NBR	1	KB00202	KB00202	KB00217	KB00217	KB00217
12	O-ring		1	KA00057	KA00057	KA00037	KA00037	KA00037

 $[\]ast$ Since the seal kit does not include a grease pack, it should be ordered separately.


^{*} Replacement parts other than those shown above are the same as those for the standard type. Refer to page 126.


MY1 W Series 916, 920, 925 932, 940, 950 963

Replacement Procedure is on p. 339


Construction

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change order the belt clamp shown in the table below only for ø25, ø32, and ø40 sizes. Lot number checking method ⇒ p. 564

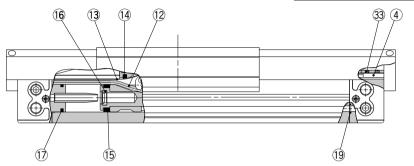

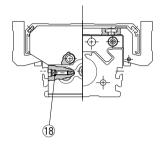

With side seal

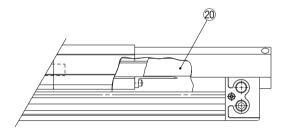

* The numbers correspond with those in the "Construction" of the MY1□W series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (4, 12, 13, 18, and 20 are not included in the seal kit, Order them as required with the individual part numbers provided.)

ricp	naccincin i c	1113.	Sear Kit (4, 12	, 13, 10, and 20 are	not included in the	Sear Kit. Order ther	ii as required with t	ne murriduai part n	unibers provided.)
No.	Description	Qty.	ø 16	ø 20	ø 25	ø 32	ø 40	ø 50	ø 63
4	Belt clamp	2	_	_	MYC25-31-29449B	MYC25-31-29449B	MYC40-31-29451B	_	
12	Seal belt	1	MY16-16C-Stroke	MY20-16C-Stroke	MY25-16C-Stroke	MY32-16C-Stroke	MY40-16C-Stroke	MY50-16C-Stroke	MY63-16A-Stroke
13	Dust seal band Note)	1	MY16-16B-Stroke	MY20-16B-Stroke	MY25-16B-Stroke	MY32-16B-Stroke	MY40-16B-Stroke	MY50-16B-Stroke	MY63-16B-Stroke
18	O-ring	2	KA00309	KA00311	KA00311	KA00320	KA00402	KA00777	KA00777
10	O-ring		(ø4 x ø1.8 x ø1.1)	(ø5.1 x ø3 x ø1.05)	(ø5.1 x ø3 x ø1.05)	(ø7.15 x ø3.75 x ø1.7)	(ø8.3 x ø4.5 x ø1.9)	_	_
20	Side seal assembly	2	MYMK-16-Stroke	MYMK-20-Stroke	MYMK-25-Stroke	MYMK-32-Stroke	MYMK-40-Stroke	_	_
14)	Scraper	2							
15	Piston seal	2							
16	Cushion seal	2	MY1M16-PS	MY1M20-PS	MY1M25-PS	MY1M32-PS	MY1M40-PS	MY1M50-PS	MY1M63-PS
17	Tube gasket	2							
19	O-ring	4							

Note) Two kinds of dust seal bands are available. Since the part number varies depending on the treatment of the hexagon socket head set screw 33, confirm before ordering (Refer to the Construction of MY1M.).

A Black zinc chromated \rightarrow MY \square -16B-Stroke B Nickel plated \rightarrow MY \square -16BW-Stroke

When 12 and 13 are shipped as single units, a grease pack (10 g per 1000 strokes) is included.

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

Pressure Control Equipment

Air Preparation Equipment

ndustrial Filters

Replacement Procedure

Actuators

Modular F.R.L. Pressure Control Equipment

ndustrial Filters

^{*} The seal kit includes (4), (5), (6), (7), and (9). Order the seal kit based on each bore size.

^{*} The seal kit includes a grease pack (10 g).


Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type

 
MY2C Series 016, 025, 040

The Replacement Procedure is on p. 344

Construction

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for \emptyset 25 and \emptyset 40 sizes. Lot number checking method \Rightarrow p. 564

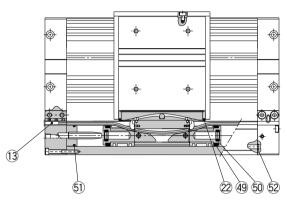



^{*} The numbers correspond with those in the "Construction" of the MY2C series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit

	accinonici ancoi					
No.	Description	Qty.	MY2C16G	MY2C25G	MY2C40G	Note
13	Belt clamp	2	_	MYC25-31-29449B	MYC40-31-29451B	
14	Seal belt	1	MY16-16C-Stroke	MY25-16C-Stroke	MY40-16C-Stroke	
15	Dust seal band	1	MY2H16-16B-Stroke	MY2H25-16B-Stroke	MY2H40-16B-Stroke	13, 14, 15, and 53
	O rim r		KA00309	KA00309	KA00320	are not included in
53	O-ring	2	(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)	the seal kit. Order them as required
22	Scraper	2				with the individual
49	Piston seal	2				part numbers
50	Cushion seal	2	MY2B16-PS	MY2B25-PS	MY2B40-PS	provided.
<u>51</u>	Tube gasket	2				
52	O-ring	4				

^{*} The seal kit includes 22, 49, 50, 51, and 52. Order the seal kit based on each bore size.

When 14 and 15 are shipped as single units, a grease pack (10 g per 1000 strokes) is included.

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)




^{*} The seal kit includes a grease pack (10 g).

MY2H/HT Series ø**25**

Replacement Procedure is on p. 344

Construction

The seal belt has been changed since October 2015 (Lot no. TX). When replacing the seal belt of a cylinder that was purchased before the change order the belt clamp shown in the table below only for ø25 and ø40 sizes. Lot number checking method ⇒ p. 564

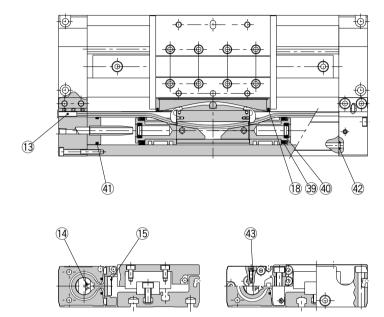

* The numbers correspond with those in the "Construction" of the MY2H/HT series in the Best Pneumatics catalog.

Penlacement Parts: Seal Kit

кер	lacement Parts:	Sea	I KIT			
No.	Description	Qty.	MY2H16G/MY2HT16G	MY2H25G/MY2HT25G	MY2H40G/MY2HT40G	Note
13	Belt clamp	2	_	MYC25-31-29449B	MYC40-31-29451B	
14	Seal belt	1	MY16-16C-Stroke	MY25-16C-Stroke	MY40-16C-Stroke	
15	Dust seal band	1	MY2H16-16B-Stroke	MY2H25-16B-Stroke	MY2H40-16B-Stroke	13, 14, 15, and 43
40	O winner	0	KA00309	KA00309	KA00320	are not included in
43	O-ring	2	(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)	the seal kit. Order
18	Scraper	2				them as required with the individual
39	Piston seal	2				part numbers
40	Cushion seal	2	MY2B16-PS	MY2B25-PS	MY2B40-PS	provided.
<u>41</u>	Tube gasket	2				
(42)	O-ring	4				

^{*} The seal kit includes 18, 39, 40, 41, and 42. Order the seal kit based on each bore size.

When 19 and 15 are shipped as single units, a grease pack is included. (10 g per 1000 strokes)

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g) , GR-S-020 (20 g)



 
^{*} The seal kit includes a grease pack (10 g).


MY3A Series ©16, ©25, ©40, ©63



Construction

The seal belt has been changed since June 2015 (Lot no. TT). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for ø40 size. Lot number checking method → p. 564



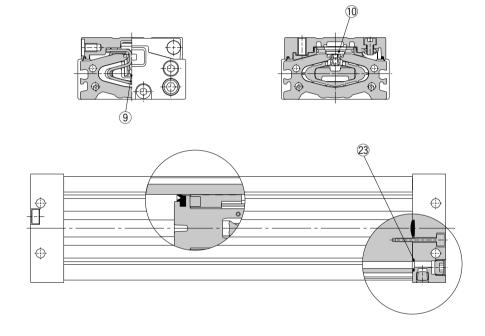

^{*} The numbers correspond with those in the "Construction" of the MY3 series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (8, 9, 10, and 18 are not included in the seal kit. Order them as required with the individual part numbers provided.)

No.	Description	Material	Qty.	MY3A16	MY3A25	MY3A40	MY3A63
8	Belt clamp	Polybutylene terephthalate	1	_	_	MYA40-31-R6658B	_
9	Seal belt	Urethane Polyamide	1	MY3A16-16C-Stroke	MY3A25-16C-Stroke	MY3A40-16C-Stroke	MY3A63-16A-Stroke
10	Dust seal band	Stainless steel	1	MY3A16-16B-Stroke	MY3A25-16B-Stroke	MY3A40-16B-Stroke	MY3A63-16B-Stroke
18	Scraper	Polyamide	1	MYA16-15-R6656	MYA25-15-R6657	MYA40-15-R6658	MYA63-15-R6659
15	Gasket bumper	NBR	2				
16	Piston seal	NBR	2	MY3A16-PS	MY3A25-PS	MY3A40-PS	MY3A63-PS
23	O-ring	NBR	4				

^{*} When (9) and (10) are shipped as single units, a grease pack is included (10 g per 1000 strokes).

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)




Order with one of the following part numbers when only the grease pack is required.

 
MY3A Series



Construction

The seal belt has been changed since June 2015 (Lot no. TT). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for ø50 size. Lot number checking method → p. 564

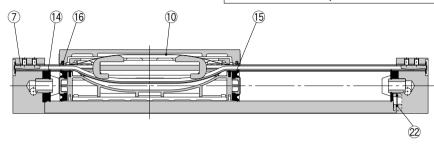



^{*} The numbers correspond with those in the "Construction" of the MY3 series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (7, 9, 10, and 16 are not included in the seal kit. Order them as required with the individual part numbers provided.)

No.	Description	Material	Qty.	MY3A20	MY3A32	MY3A50
7	Belt clamp	Polybutylene terephthalate	1	_	1	MYA40-31-R6658B
9	Seal belt	Urethane	1	MY3A20-16C-Stroke	MY3A32-16C-Stroke	MY3A50-16C-Stroke
10	Dust seal band	Stainless steel	1	MY3A20-16B-Stroke	MY3A32-16B-Stroke	MY3A50-16B-Stroke
16	Scraper	Polyamide	1	MYA20-15-AC594	MYA32-15-AC595	MYA50-15-AC596
14	Gasket bumper	NBR	2			
15	Piston seal	NBR	2	MY3A20-PS	MY3A32-PS	MY3A50-PS
22	O-ring	NBR	4			

^{*} When (9) and (10) are shipped as single units, a grease pack is included (10 g per 1000 strokes). Order with one of the following part numbers when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

MY3B Series 016, 025, 040, 063



Construction

The seal belt has been changed since June 2015 (Lot no. TT). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for ø40 size. Lot number checking method → p. 564

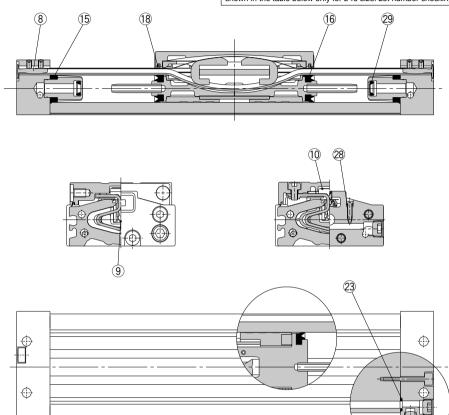

* The numbers correspond with those in the "Construction" of the MY3 series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (8, 9, 10, 18, and 28 are not included in the seal kit. Order them as required with the individual part numbers provided.)

Nic	Description			MYODAG			MAYODGO
No.	Description	Material	Qty.	MY3B16	MY3B25	MY3B40	MY3B63
8	Belt clamp	Polybutylene terephthalate	1	_	_	MYA40-31-R6658B	
9	Seal belt	Urethane Polyamide	1	MY3B16-16C-Stroke	MY3B25-16C-Stroke	MY3B40-16C-Stroke	MY3B63-16A-Stroke
10	Dust seal band	Stainless steel	1	MY3B16-16B-Stroke	MY3B25-16B-Stroke	MY3B40-16B-Stroke	MY3B63-16B-Stroke
18	Scraper	Polyamide	1	MYA16-15-R6656	MYA25-15-R6657	MYA40-15-R6658	MYA63-15-R6659
28	O-ring	NBR	2	KA00309	KA00309	KA00320	KA00402
20	O-IIIIg	NDN		(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)	(ø8.3 x ø4.5 x ø1.9)
15	Tube gasket	NBR	2				
16	Piston seal	NBR	2	MY3B16-PS	MY3B25-PS	MY3B40-PS	MY3B63-PS
23	O-ring	NBR	4	WITSDIG-FS	W113D25-F3	WIT3040-F3	WIT 3003-F3
29	Cushion seal	NBR	2				

^{*} When (9) and (10) are shipped as single units, a grease pack is included (10 g per 1000 strokes). Order with one of the following part numbers when only the grease pack is required. Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)




MY3B Series

 
ø20, ø32, ø50

 


Construction

The seal belt has been changed since June 2015 (Lot no. TT). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for \emptyset 50 size. Lot number checking method \Rightarrow p. 564

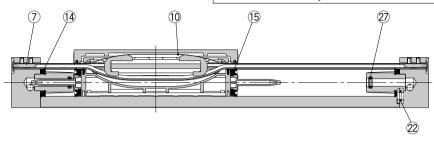





* The numbers correspond with those in the "Construction" of the MY3 series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (7, 9, 10, 16, and 26 are not included in the seal kit. Order them as required with the individual part numbers provided.)

No.	Description	Material	Qty.	MY3B20	MY3B32	MY3B50
7	Belt clamp	Polybutylene terephthalate	1	_	1	MYA40-31-R6658B
9	Seal belt	Urethane	1	MY3B20-16C-Stroke	MY3B32-16C-Stroke	MY3B50-16C-Stroke
10	Dust seal band	Stainless steel	1	MY3B20-16B-Stroke	MY3B32-16B-Stroke	MY3B50-16B-Stroke
16	Scraper	Polyamide	1	MYA20-15-AC594	MYA32-15-AC595	MYA50-15-AC596
26	O-ring	NBR	2	KA00309	KA00309	KA00320
20	O-filing	NDN	-	(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)
14	Tube gasket	NBR	2			
15	Piston seal	NBR	2	MY3B20-PS	MY3B32-PS	MY3B50-PS
22	O-ring	NBR	4	WI 1 3D20-F3	WI 1 3D32-F3	WH 3030-F3
27	Cushion seal	NBR	2			
		•	•			

^{*} When (9) and (10) are shipped as single units, a grease pack is included (10 g per 1000 strokes). Order with one of the following part numbers when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)


MY3M Series ©16, ©25, ©40, ©63



Construction

The seal belt has been changed since June 2015 (Lot no. TT). When replacing the seal belt of a cylinder that was purchased before the change, order the belt clamp shown in the table below only for ø40 size. Lot number checking method → p. 564

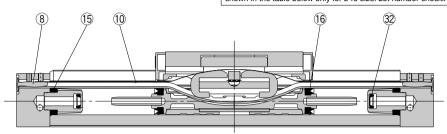

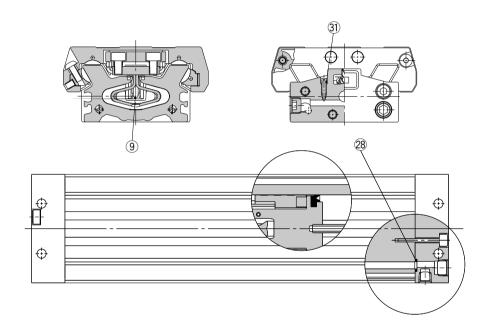

^{*} The numbers correspond with those in the "Construction" of the MY3 series in the Best Pneumatics catalog.

Replacement Parts: Seal Kit (8. 9. 10. and 31 are not included in the seal kit. Order them as required with the individual part numbers provid

ricp	nacement i arts.	Sear Kit (6,	3, 10, a	ilu 31 are not included in ti	ie seai kit. Oruer tilelli as i	equired with the mulvidua	i part riuribers provided.)
No.	Description	Material	Qty.	MY3M16	MY3M25	MY3M40	MY3M63
8	Belt clamp	Polybutylene terephthalate	1	1	1	MYA40-31-R6658B	_
9	Seal belt	Urethane Polyamide	1	MY3B16-16C-Stroke	MY3B25-16C-Stroke	MY3B40-16C-Stroke	MY3B63-16A-Stroke
10	Dust seal band	Stainless steel	1	MY3B16-16B-Stroke	MY3B25-16B-Stroke	MY3B40-16B-Stroke	MY3B63-16B-Stroke
31	O-ring	NBR	2	KA00309	KA00309	KA00320	KA00402
31	O-IIIIg	NDN		(ø4 x ø1.8 x ø1.1)	(ø4 x ø1.8 x ø1.1)	(ø7.15 x ø3.75 x ø1.7)	(ø8.3 x ø4.5 x ø1.9)
15	Tube gasket	NBR	2				
16	Piston seal	NBR	2	MY3B16-PS	MY3B25-PS	MY3B40-PS	MY3B63-PS
28	O-ring	NBR	4	W113D10-F3	WI 1 3D25-F3	WI13040-F3	WI 1 3 D 0 3 - F 3
32	Cushion seal	NBR	2				

^{*} Since the seal kit does not include a grease pack, it should be ordered separately. Grease pack part no.: GR-S-010 (10 g)



The Replacement Procedure is on p. 348

 
Modular F.R.L. Pressure Control Equipment

Air Preparation Equipment


CY3B Series 06, 010, 015, 020, 025 032, 040, 050, 063

Construction

Basic type **CY3B6**




CY3B10, 15

 


* The above drawing is ø15. (3 magnets are used in ø10.)

CY3B20 to 40

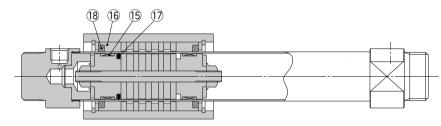

CY3B50, 63

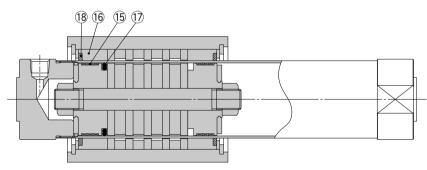

* The numbers correspond with those in the "Construction" of the CY3B series in the Best Pneumatics catalog.

Seal Kit List

No. Description	Material	Note
15 Wear ring A	Special resin	
16 Wear ring B	Special resin	
17 Piston seal	NBR	
18 Lube-retainer	Special resin	
19 Cylinder tube gasket	NBR	

* The seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø63: 10 g). Order with one of the following part numbers when only the grease pack is required. Grease pack part no. for Ø6, Ø10: GR-F-005 (5 g) for external

sliding sections GR-S-010 (10 g) for tubing interior

Grease pack part no. for ø15 to ø63: GR-S-010 (10 g)

Replacement Parts/Seal Kit

replacement raite/ecar kit		
Bore size (mm)	Part no.	Contents
6	CY3B6-PS	Set of nos. (6, 17, (9)
10	CY3B10-PS	Set of nos. (6, (7), (8, (9)
15	CY3B15-PS	
20	CY3B20-PS	
25	CY3B25-PS	Set of nos.
32	CY3B32-PS	15, 16, 17, 18
40	CY3B40-PS	19, 10, 17, 10
50	CY3B50-PS	
63	CY3B63-PS	
Note 1) Cool Little are note consisting of growth are 10 through 10 Orders the		

- Note 1) Seal kits are sets consisting of numbers 15 through 19. Order the seal kit based on each bore size.
- Note 2) Adhesive glue is applied to the thread fixed section of the head cover and cylinder tube. Contact SMC if the head cover removal is difficult.
- Note 3) For wear ring A, ø10, please consult with SMC.




CY3R Series 06, 010, 015, 020 025, 032, 040, 050 063




Construction

Both sides piping type


CY3R6

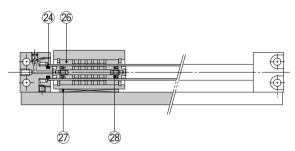

CY3R10

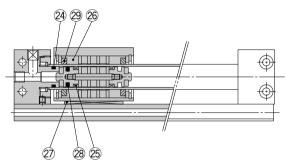

CY3R15 to 63

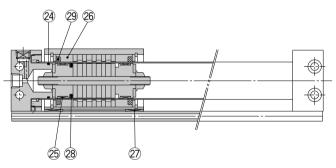

* The numbers correspond with those in the "Construction" of the CY3R series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note			
24	Cylinder tube gasket	NBR				
25	Wear ring A	Special resin				
26	Wear ring B	Special resin	For the both sides			
27)	Wear ring C	Special resin	piping type, 30 is not included in the seal			
28	Piston seal	NBR	kit.			
29	Lube-retainer	Special resin				
30	Switch rail gasket	NBR				

* The seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø63: 10 g). Order with one of the following part numbers when only the grease pack is required.

Grease pack part no. for Ø6, Ø10: GR-F-005 (5 g) for external sliding sections GR-S-010 (10 g) for tubing

interior Grease pack part no. for Ø15 to Ø63: GR-S-010 (10 g) Replacement Parts/Seal Kit

		-
Bore size (mm)	Part no.	Contents
6	CY3R6-PS	Set of nos. 24, 26, 27, 28
10	CY3R10-PS	Set of nos. ②, ③, ②, ②, ③, ③
15	CY3R15-PS	
20	CY3R20-PS	
25	CY3R25-PS	Set of nos.
32	CY3R32-PS	24, 25, 26, 27, 28, 29, 30
40	CY3R40-PS	
50	CY3R50-PS	
63	CY3R63-PS	

Note 1) Seal kits are the same for both the both sides piping type and the centralized piping type.

Note 2) Seal kits are sets consisting of numbers 24 through 30. Order the seal kit based on each bore size.

Note 3) For wear ring A, ø10, please consult with SMC.

CY3R Series 06, 010, 015, 020 025, 032, 040, 050 063

The Replacement Procedure is on p. 349


Air Preparation Equipment

ndustrial Filters


Construction

Centralized piping type

CY3RG10

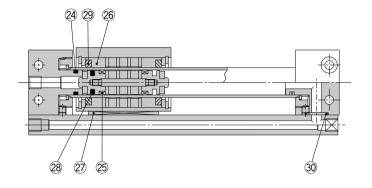

CY3RG15 to 63

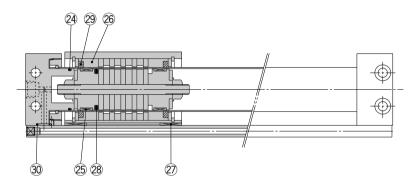

* The numbers correspond with those in the "Construction" of the CY3R series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
24	Cylinder tube gasket	NBR	
25	Wear ring A	Special resin	
26	Wear ring B	Special resin	For the both sides
27)	Wear ring C	Special resin	piping type, 30 is not included in the seal
28	Piston seal	NBR	kit.
29	Lube-retainer	Special resin	
30	Switch rail gasket	NBR	

Replacement Parts: Seal Kit

nopiacoment i arter ocai itit				
Bore size (mm)	Part no.	Contents		
10	CY3R10-PS	Set of nos. ②4, ②6, ②7, ②8, ③9, ③0		
15	CY3R15-PS			
20	CY3R20-PS			
25	CY3R25-PS	Set of nos.		
32	CY3R32-PS	24, 25, 26, 27, 28, 29, 30		
40	CY3R40-PS	4, 6, 6, 6, 6, 6, 6		
50	CY3R50-PS			
63	CY3R63-PS			

Note 1) Seal kits are the same for both the both sides piping type and the centralized piping type.

Note 2) Seal kits are sets consisting of numbers 24 through 30. Order the seal kit based on each bore size.

Note 3) For wear ring A, ø10, please consult with SMC.

* The seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø63: 10 g). Order with one of the following part numbers when only the grease pack is required.

Grease pack part no. for Ø6, Ø10: GR-F-005 (5 g) for external sliding sections

GR-S-010 (10 g) for tubing interior

Grease pack part no. for Ø15 to Ø63: GR-S-010 (10 g)


Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing

CY1S-Z Series 96, 010, 015 020, 025 032, 040




Construction

CY1S: Bilateral piping type

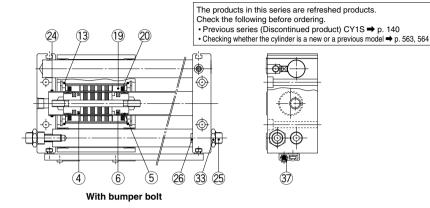

CY1SG: Centralized piping type

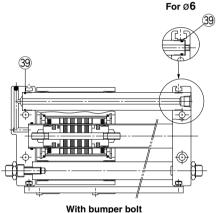

* The numbers correspond with those in the "Construction" of the CY1S-Z series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
4	Piston seal	NBR	
5	Wear ring A	Special resin	
6	Lube-retainer A	Special resin	
13	Slider gasket	NBR	
19	Wear ring B	Special resin	
20	Lube-retainer B	Special resin	

No.	Description	Material	Note
24	Cylinder tube gasket	NBR	
25	Bumper bolt	Chromium molybdenum steel	
26	Bumper	Urethane rubber	
33	Hexagon nut	Chromium molybdenum steel	
37)	Switch spacer	Special resin	
39	Guide shaft gasket	NBR	

Replacement Parts: Seal Kit

Bore size	Sea	Seal kit Bumper bolt assembly		Switch spacer			
(mm)	Part no.	Contents	Part no.	Contents	Part no.	Contents	
6	CY1S6-Z-PS	Set of nos. 4, 5, 13, 19, 24, 39	CYS06-37-AJ024-R				
10	CY1S10-Z-PS	Set of nos. 4, 13, 19, 20, 24, 39	CYS10-37-AJ025-R				
15	CY1S15-Z-PS		C1310-37-AJ025-N				
20	CY1S20-Z-PS	Set of nos.	CYS20-37-AJ027-R	Set of nos. 25, 26, 33	BMY3-016	No. 🕉	
25	CY1S25-Z-PS	4, 5, 6, 13, 19	CYS25-37-AJ028-R CYS32-37-AJ029-R	e, e, s			
32	CY1S32-Z-PS	20, 24, 39					
40	CY1S40-Z-PS						

Note 1) The seal kit includes 4, 5, 3, 4, 9, 2, 3 for ø6. 4, 3, 9, 2, 3 for ø10. 4, 5, 6, 3, 9, 2, 3 are for ø15 to ø40. Order the seal kit based on each bore size.

Note 3) A switch spacer, as specified in the table above will be required if an auto switch is mounted afterward. When ordering an additional auto switch, also order an additional switch spacer. Refer to "Auto Switch Mounting" for details.




Note 2) The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required. Grease pack part no.: GR-S-010

Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing

CY1S Series 06, 010, 015, 020 025, 032, 040



Construction

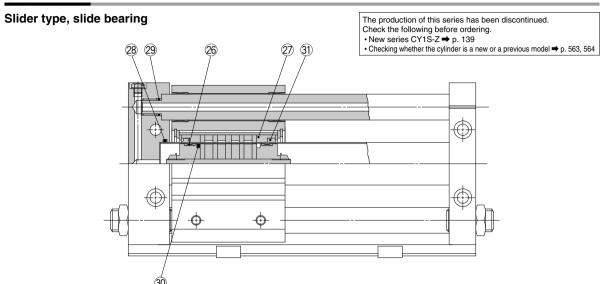

* This figure is for a representative cylinder CDY1S25H

* The numbers correspond with those in the "Construction" of the CY1S series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note		
26	Wear ring A	Special resin			
27)	Wear ring B	Special resin			
28	Cylinder tube gasket	NBR			
29	Guide shaft gasket	NBR			
30	Piston seal	NBR			
31)	Scraper	NBR			

Replacement Parts: Seal Kit

ricpiacement i arts. Ocai Kit				
Bore size (mm)	Part no.	Contents		
6	CY1S6-PS-N	Set of nos. ②, ®, ②, ③		
10	CY1S10-PS-N	Set of nos. ②, ②, ③, ③, ③)		
15	CY1S15-PS-N			
20	CY1S20-PS-N	Set of nos.		
25	CY1S25-PS-N	26, 27, 28, 29, 30, 31		
32	CY1S32-PS-N	(20, 20, 20, 20, 30, 31		
40	CY1S40-PS-N			

Note 1) The seal kit includes @ to @ for $\emptyset6$. @ to @ are for $\emptyset10$. @ to @are for ø15 to ø40. Order the seal kit based on each bore size. Note 2) For wear ring A, ø10, please consult with SMC.

* The seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø40: 10 g). Order with one of the following part numbers when only the grease pack is required

Grease pack part no. for Ø6, Ø10: GR-F-005 (5 g) for external sliding parts.

GR-S-010 (10 g) for tube interior

Grease pack part no. for ø15 to ø40: GR-S-010 (10 g)


Magnetically Coupled Rodless Cylinder/Slider Type: Ball Bushing Bearing

CY1L Series 06, 010, 015, 020 025, 032, 040



Construction

Slider type, ball bushing bearing

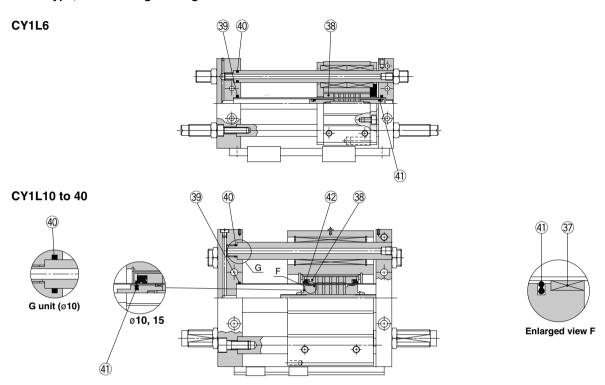

^{*} The numbers correspond with those in the "Construction" of the CY1L series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
37)	Wear ring A	Special resin	
38	Wear ring B	Special resin	
39	Cylinder tube gasket	NBR	
40	Guide shaft gasket	NBR	
41	Piston seal	NBR	
42	Scraper	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	CY1S6-PS-N	Set of nos. 38, 39, 40, 41
10	CY1L10-PS-N	Set of nos. 38, 39, 40, 41, 42
15	CY1L15-PS-N	
20	CY1L20-PS-N	Set of nos.
25	CY1L25-PS-N	37, 38, 39, 40, 41, 42
32	CY1L32-PS-N	50, 50, 50, 50, 50, 50
40	CY1L40-PS-N	

Note 1) The seal kit includes 38 to 40 for Ø6. 38 to 40 are for Ø10. 37 to 40 are for Ø15 to Ø40. Order the seal kit based on each bore size.

Note 2) Ø6 are the same as for CY1S6.

Note 3) For wear ring A, Ø10, please consult with SMC.

* The seal kit includes a grease pack (ø6, ø10: 5 and 10 g, ø15 to ø40: 10 g). Order with one of the following part numbers when only the grease pack is required.

Grease pack part no. for Ø6, Ø10: GR-F-005 (5 g) for external sliding parts,


GR-S-010 (10 g) for tube interior

Grease pack part no. for Ø15 to Ø40: GR-S-010 (10 g)

CY1H Series Single Axis Type: \$\,\text{910}, \,\text{915}, \,\text{920}, \,\text{925}

Construction

Single axis type

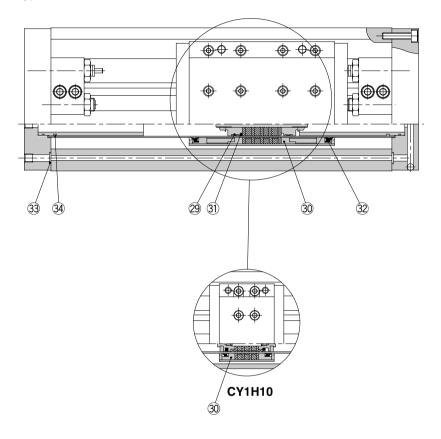

* The numbers correspond with those in the "Construction" of the CY1H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note			
29	Wear ring A	Special resin				
30	Wear ring B	Special resin				
31)	Piston seal	NBR				
32	Scraper	NBR				
33	O-ring	NBR				
34)	O-ring	NBR				

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
10	CY1H10-PS	Set of nos. 30, 31, 32, 33, 34	
15	CY1H15-PS	Catafaaa	
20	CY1H20-PS	Set of nos. ②, ③, ③, ③, ②, ③	
25	CY1H25-PS		

Note 1) The seal kit includes 30 to 34 for Ø10. 29 to 34 are for Ø15 to Ø25. Order the seal kit based on each bore size.

Note 2) For wear ring A, ø10, please consult with SMC.

* The seal kit includes a grease pack (ø10: 5 and 10 g, ø15 to ø25: 10 g). Order with one of the following part numbers when only the grease pack is required.

Grease pack part no. for ø10: GR-F-005 (5 g) for external sliding parts, GR-S-010 (10 g) for tube interior


Grease pack part no. for Ø15 to Ø25: GR-S-010 (10 g)

Magnetically Coupled Rodless Cylinder/Linear Guide Type

CY1H Series Double Axis Type: Ø25, Ø32

Construction

Double axes type

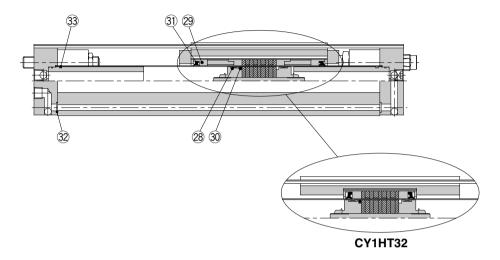

* The numbers correspond with those in the "Construction" of the CY1H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Material
28	Wear ring A	Special resin	
29	Wear ring B	Special resin	
30	Piston seal	NBR	
31)	Scraper	NBR	
32	O-ring	NBR	
33	O-ring	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
25	CY1HT25-PS	Set of nos.			
32	CY1HT32-PS	28, 29, 30, 31, 32, 33			


Note 1) The seal kit includes $\ensuremath{\mathfrak{B}}$ to $\ensuremath{\mathfrak{B}}$. Order the seal kit based on each

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is required.

MXS Series 06, 08, 012, 016 020, 025

Construction

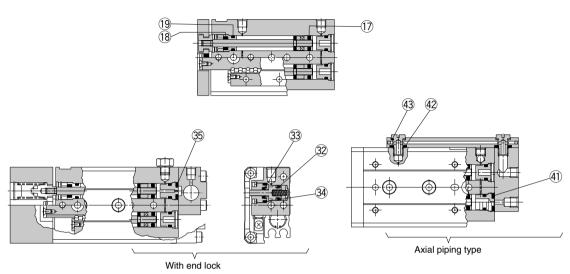

* The numbers correspond with those in the "Construction" of the MXS series in the Best Pneumatics catalog.

Sea	l Kit List		
No.	Description	Material	Note
17	Piston seal		
18	Rod seal	NBR	
19	O-ring		
With	n end lock		
32	Piston seal		
33	Rod seal	NBR	
34)	O-ring	INDIN	
35	O-ring		
Axia	al piping type		
41)	O-ring	NBR	
42	O-ring	NBR	
43)	Gasket		

* The seal kit includes 1 set of numbered seals in the table on the right. Order the appropriate seal kit depending on the cylinder bore size.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXS6-PS	
8	MXS8-PS	
12	MXS12-PS	Set of nos.
16	MXS16-PS	17, 18, 19
20	MXS20-PS	
25	MXS25-PS	

Replacement Parts: Seal Kit for with End Lock

	. to: oou: itit io:	= =00
Bore size (mm)	Part no.	Contents
8	MXS8R-PS	
12	MXS12R-PS	Cat of man
16	MXS16R-PS	Set of nos. 17, 18, 19, 32, 33, 34, 35
20	MXS20R-PS	0, 10, 10, 52, 53, 53, 53
25	MXS25B-PS	

Replacement Parts: Seal Kit for Axial Piping Type


replacement i diter ecai itit ici rixiai i iping i ype			
Bore size (mm)	Part no.	Contents	
6	MXS6P-PS		
8	MXS8P-PS		
12	MXS12P-PS	Set of nos.	
16	MXS16P-PS	17, 18, 19, 41, 42, 43	
20	MXS20P-PS		
25	MXS25P-PS		

Applied unit	Grease pack part no.	
Guide unit	GR-S-010 (10 g)	
Guide unit	GR-S-020 (20 g)	
Cylinder unit	GR-L-005 (5 g)	
Cylinder unit	GR-L-010 (10 a)	

MXQ Series 06, 08, 012, 016 020, 025



Construction

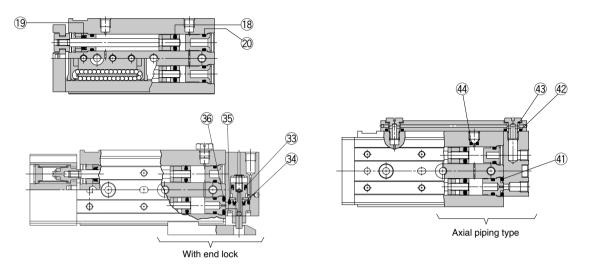

^{*} The numbers correspond with those in the "Construction" of the MXQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal		
19	Rod seal	NBR	
20	O-ring		
With	end lock		
33	Piston seal		
34	Rod seal	NBR	
35	O-ring	INDI	
36	O-ring		
Axia	al piping type		
41)	O-ring	NBR	
42	O-ring	NBR	
43	Gasket	NBR, Stainless steel	
44	O-ring	NBR	

^{*} The seal kit includes these seals to provide as a set. Order the seal kit based on each bore size.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXQ6-PS	
8	MXQ8-PS	
12	MXQ12-PS	Set of nos.
16	MXQ16-PS	18, 19, 20
20	MXQ20-PS	
25	MXQ25-PS	

Replacement Parts: Seal Kit for with End Lock

· repidee interior		
Bore size (mm)	Part no.	Contents
8	MXQ8R-PS	
12	MXQ12R-PS	Set of nos.
16	MXQ16R-PS	18, 19, 20, 33, 34, 35, 36
20	MXQ20R-PS	10, 19, 20, 33, 34, 33, 30
25	MXQ25R-PS	

Replacement Parts: Seal Kit for Axial Piping Type

Bore size (mm)	Part no.	Contents
6	MXQ6P-PS	Set of nos.
8	MXQ8P-PS	18, 19, 20, 41, 42, 43, 44
12	MXQ12P-PS	100, 100, 200, 400, 420, 430, 430
16	MXQ16P-PS	Cat of man
20	MXQ20P-PS	Set of nos.
25	MXQ25P-PS	10, 13, 20, 41, 42, 43

Applied section	Grease pack part no.
Guide	GR-S-010 (10 g)
	GR-S-020 (20 g)
Culindon	GR-L-005 (5 g)
Cylinder	GR-L-010 (10 g)




p. 352

Air Slide Table/Reversible Type

MXQR Series 06, 08, 012 016, 020, 025

Construction

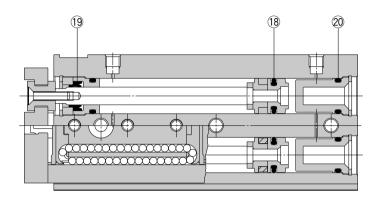

* The numbers correspond with those in the "Construction" of the MXQR series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal		
19	Rod seal	NBR	
20	O-ring		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXQ6-PS	
8	MXQ8-PS	
12	MXQ12-PS	Set of nos.
16	MXQ16-PS	18, 19, 20
20	MXQ20-PS	
25	MXQ25-PS	

^{*} The seal kit includes these seals to provide as a set. Order the seal kit based on each bore size.


Applied part	Grease pack part no
Guide unit	GR-S-010 (10 g)
	GR-S-020 (20 g)
Cylinder unit	GR-L-005 (5 g)
	GR-L-010 (10 g)

Low Profile Slide Table

MXF Series Ø8, Ø12, Ø16, Ø20



Construction

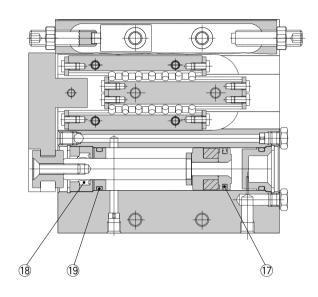

* The numbers correspond with those in the "Construction" of the MXF series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Piston seal		
18	Rod seal	NBR	
19	O-ring		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
8	MXF8-PS	
12	MXF12-PS	Set of nos.
16	MXF16-PS	17, 18, 19
20	MXF20-PS	

^{*} The seal kit includes (7), (8), (9). Order the seal kit based on each bore size.


Applied part	Grease pack part no.
Guide	GR-S-010 (10 g)
Guide	GR-S-020 (20 g)
Culindor	GR-L-005 (5 g)
Cylinder	GR-L-010 (10 g)

MXV Series Ø8, Ø12, Ø16 Ø20, Ø25

Air Slide Table



Construction

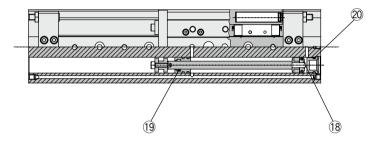

* The numbers correspond with those in the "Construction" of the MXW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal		
19	Rod seal	NBR	
20	O-ring		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
8	MXW8-PS	
12	MXW12-PS	Catafaaa
16	MXW16-PS	Set of nos.
20	MXW20-PS	10, 19, 20
25	MXW25-PS	

^{*} The seal kit includes (9, (9, (2)). Order the seal kit based on each bore size.

Applied part	Grease pack part no.	
Guide	GR-S-010 (10 g)	
Guide	GR-S-020 (20 g)	
Cylinder	GR-L-005 (5 g)	
	GR-L-010 (10 g)	


Air Slide Table

MXP Series ...



Construction

MXP6

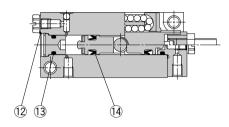

* The numbers correspond with those in the "Construction" of the MXP series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
12	Gasket (for plug)	PVC	
13	O-ring	NBR	
14)	Piston seal	INDH	


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXP6-PS	A set of two of ①, ① and ④ each

Replacement Parts: Grease Pack

Applied unit	Grease pack part no.	
Cuido unit	GR-S-010 (10 g)	
Guide unit	GR-S-020 (20 g)	
Culindar unit	GR-L-005 (5 g)	
Cylinder unit	GR-L-010 (10 g)	

 MXPJ6



st The numbers correspond with those in the "Construction" of the MXP series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
11	Gasket (for plug)	PVC	
12	O-ring	NBR	
13	Piston seal	INDIL	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXPJ6-PS	2 pieces of nos. ①, ② and ③

Applied unit	Grease pack part no.
Guide unit	GR-S-010 (10 g)
	GR-S-020 (20 g)
Cylinder unit	GR-L-005 (5 g)
	GR-L-010 (10 g)




MXP Series 08, 010, 012, 016

Air Slide Table



Construction

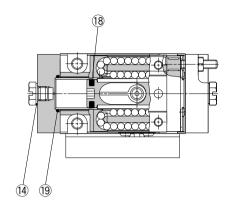

* The numbers correspond with those in the "Construction" of the MXP series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
14)	Gasket (for plug)	NBR, stainless steel	
18	Piston seal	NBR	
19	O-ring	INDR	

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
8	MXP8-PS	
10	MXP10-PS	A set of two of
12	MXP12-PS	14, 18 and 19 each
16	MXP16-PS	


replacement ranter direase rack			
Applied unit	Grease pack part no.		
Guide unit Cylinder unit	GR-S-010 (10 g)		
	GR-S-020 (20 g)		
	GR-L-005 (5 g)		
	GR-L-010 (10 a)		

MXY Series 06, 08, 012



  Construction





Detail drawing of part A

Seal Kit List

No.	Description	Material	Note
10	Wear ring A	Resin	
11	Wear ring B	Resin	
22	Cylinder scraper	NBR	
26	Piston seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	MXY6-PS	A set of two of
8	MXY8-PS	10, 11, 22 and 26 each
12	MXY12-PS	(i), (i), (2) and (3) each

^{*} As for MXY12, only one piston seal 26 is included.

Grease pack part no.
GR-S-010 (10 g)
GR-S-020 (20 g)

^{*} The numbers correspond with those in the "Construction" of the MXY series in the Best Pneumatics catalog.


The Replacement

Compact Guide Cylinder

NGP- Z Series 912, 916, 920, 925 932, 940, 950 963, 980, 9100

Construction: MGPM, MGPL, MGPA Series


MGPM12 to 25

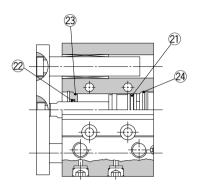


MGPM32 to 100

The products in this series are refreshed products. Check the following before ordering.


• Previous series (Discontinued product) MGP ⇒ p. 154

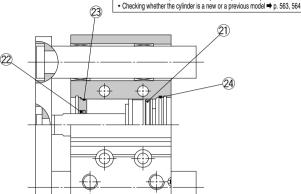

MGPL12 to 25 MGPA12 to 25

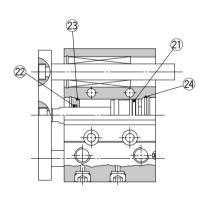

MGPL32 to 100 MGPA32 to 100

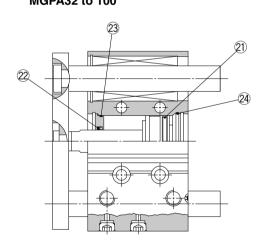

* The numbers correspond with those in the "Construction" of the MGP series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
21)	Piston seal		
22	Rod seal	NBR	
23	Gasket A	INDR	
24	Gasket B		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	Bore size (mm)	Part no.	Contents
12	MGP12-Z-PS		40	MGP40-Z-PS	Catas
16	MGP16-Z-PS		50	MGP50-Z-P5	Set of nos.
20	MGP20-Z-PS	21, 22,	63	MGP63-Z-PS	21, 22,
25	MGP25-Z-PS	23. 24	80	MGP80-Z-PS	23. 24
32	MGP32-Z-PS		100	MGP100-Z-PS	

^{*} The seal kit includes ② to ②. Order the seal kit based on each bore size.

^{*} Refer to page 242 for replacement parts/seal kit and grease pack part numbers of Made-to-Order common specifications (-XB□, -XC□).

^{*} Since the seal kit does not include a grease pack, it should be ordered


Compact Guide Cylinder/With Air Cushion

-AZ Series 016, 020, 025 032, 040, 050 063, 080, 0100



Construction: MGPM-A, MGPL-A, MGPA-A Series

MGPM

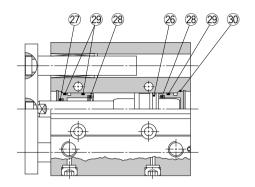


MGPL MGPA

The products in this series are refreshed products. Check the following before ordering.

• Previous series (Discontinued product) MGP-□A ⇒ p. 155

Checking whether the cylinder is a new or a previous model → p. 563, 564

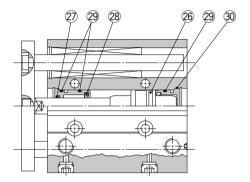

* The numbers correspond with those in the "Construction" of the MGP series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
26	Piston seal	NBR	
27)	Rod seal	NBR	
28	Cushion seal	Urethane	
29	Gasket A	NBR	
30	Gasket B	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	Bore size (mm)	Part no.	Contents
16	MGP16-AZ-PS	0.1.1	50	MGP50-AZ-PS	Set of
20	MGP20-AZ-PS	Set of	63	MGP63-AZ-PS	nos.
25	MGP25-AZ-PS	nos.	80	MGP80-AZ-PS	26, 27, 28,
32	MGP32-AZ-PS	26, 27, 28, 29, 30	100	MGP100-AZ-PS	29, 30
40	MGP40-AZ-PS	Jea, 20			


- * The seal kit includes 26 to 30. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

NGP Series ©12, ©16, ©20, ©25, ©32 ©40, ©50, ©63, ©80, ©100



Construction

MGPM12 to 25

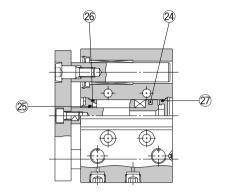


MGPM32 to 100

The production of this series has been discontinued. Check the following before ordering.

• New series MGP-□Z → p. 152

. Checking whether the cylinder is a new or a previous model ⇒ p. 563, 564

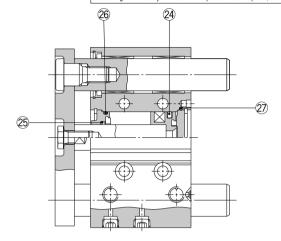

- * The numbers correspond with those in the "Construction" of the MGP series in the Web Catalog.
- * Refer to page 243 for replacement parts/seal kit and grease pack part numbers of Made-to-Order common specifications (-XB□, -XC□).

Seal Kit List

No.	Description	Material	Note	
24)	Piston seal			
25	Rod seal	NBR		
26	Gasket A			
27)	Gasket B			

Replacement Parts: Seal Kit

riopiacomonici artor coarren				
Part no.	Contents			
MGP12-PS				
MGP16-PS				
MGP20-PS				
MGP25-PS				
MGP32-PS	Set of nos.			
MGP40-PS	24, 25, 26, 27			
MGP50-PS				
MGP63-PS				
MGP80-PS				
MGP100-PS				
	Part no. MGP12-PS MGP16-PS MGP20-PS MGP25-PS MGP32-PS MGP40-PS MGP50-PS MGP50-PS MGP63-PS MGP80-PS			

- * The seal kit includes 24 to 27. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)

Pressure Control Equipment

Air Preparation Equipment

Industrial Filters


Compact Guide Cylinder/With Air Cushion

MGP- A Series 016, 020, 025 032, 040, 050 063, 080, 0100



Construction

MGPM16 to 25

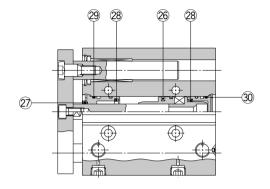


MGPM32 to 100

The production of this series has been discontinued. Check the following before ordering.

• New series MGP-□AZ ⇒ p. 153

Checking whether the cylinder is a new or a previous model → p. 563, 564

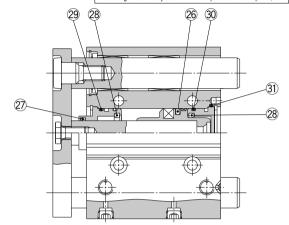

* The numbers correspond with those in the "Construction" of the MGP series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
26	Piston seal	NBR	
27)	Rod seal	NBR	
28	Cushion seal	Urethane	
29	Gasket A	NBR	
30	Gasket B	NBR	
31)	Gasket C	NBR	

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
16	MGP16-A-PS	
20	MGP20-A-PS	
25	MGP25-A-PS	
32	MGP32-A-PS	0-4-6
40	MGP40-A-PS	Set of nos. 26, 27, 28, 29, 30, 31
50	MGP50-A-PS	20, 20, 20, 20, 30, 31
63	MGP63-A-PS	
80	MGP80-A-PS	
100	MGP100-A-PS	


- * The seal kit includes 26 to 31. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

NGP Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100

The Replacement Procedure is on p. 366

 
Construction

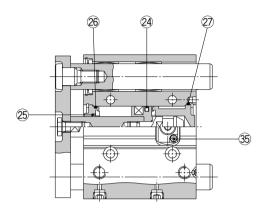




Non-locking type

  (Head end lock)





 $* \ The \ numbers \ correspond \ with \ those \ in \ the \ "Construction" \ of \ the \ MGP \ series \ in \ the \ Best \ Pneumatics \ catalog.$

Seal Kit List

No.	Description	Material	Note
24)	Piston seal	NBR	
25	Rod seal	NBR	
26	Gasket A	NBR	
27)	Gasket B	NBR	
35	Hexagon socket head cap screw	Carbon steel	
36	Hexagon socket head cap screw	Carbon steel	
44	Lock piston seal	NBR	
45	Lock holder gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
20	MGP20-B-PS			
25	MGP25-B-PS	Set of nos. 24, 25,		
32	MGP32-B-PS	26, 27, 35, 44, 45		
40	MGP40-B-PS			
50	MGP50-B-PS	Set of nos. 24, 25,		
63	MGP63-B-PS	26, 27, 35, 36, 44, 45		
80	MGP80-B-PS	Set of nos. 24, 25,		
100	MGP100-B-PS	26, 27, 35, 44, 45		


- * Each seal kit includes the parts listed above. Order the seal kit based on each bore size.
- \ast Since the seal kit does not include a grease pack, it should be ordered separately.

Compact Guide Cylinder/Heavy Duty Guide Rod Type

MGPS Series ©50, ©80



Construction

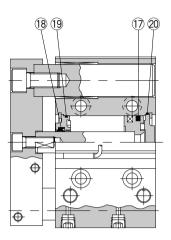

* The numbers correspond with those in the "Construction" of the MGPS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Piston seal		
18	Rod seal	NBR	
19	Gasket A	INDR	
20	Gasket B		

Replacement Parts: Seal Kit

- 3			
Ī	Bore size (mm)	Part no.	Contents
	50	MGP50-PS	Set of nos.
-	80	MGP80-PS	(17), (18), (19), (20)

- * The seal kit includes ① to ②. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.




MGPW Series ©20, ©25, ©32 ©40, ©50, ©63


Compact Guide Cylinder/Wide Type

Construction: MGPWM, MGPWL, MGPWA Series

MGPWM20 to 63

MGPWL20 to 63 **MGPWA20 to 63**

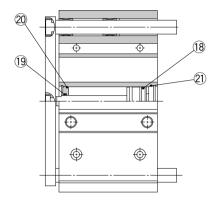

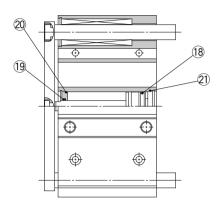

* The numbers correspond with those in the "Construction" of the MGPW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Piston seal		
19	Rod seal	NBR	
20	Gasket A	INDR	
21)	Gasket B		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	Bore size (mm)	Part no.	Contents
20	MGP20-Z-PS	Set of nos.	40	MGP40-Z-PS	Set of nos.
25	MGP25-Z-PS		50	MGP50-Z-PS	18, 19,
32	MGP32-Z-PS	20, 21	63	MGP63-Z-PS	20, 21

- * The seal kit includes (18) to (2). Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Compact Guide Cylinder

MGQ Series 912, 916, 920, 925 932, 940, 950, 963 980, 9100




Construction

MGQM12 to 25

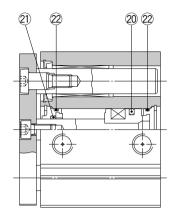

MGQM32 to 100

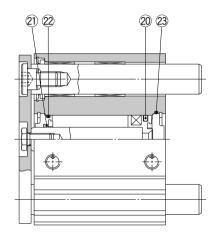

* The numbers correspond with those in the "Construction" of the MGQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Piston seal		
21)	Rod seal	NBR	
22	Gasket A	INDR	
23	Gasket B		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Description
12	MGQ12-PS	
16	MGQ16-PS	
20	MGQ20-PS	
25	MGQ25-PS	
32	MGQ32-PS	Set of nos.
40	MGQ40-PS	20, 21, 22, 23
50	MGQ50-PS	
63	MGQ63-PS	
80	MGQ80-PS	
100	MGQ100-PS	


- * The seal kit includes @ to @. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Guide Cylinder

MGG Series ©20, ©25, Ø32, Ø40, Ø50

Construction

ø20 to ø50/MGG□□

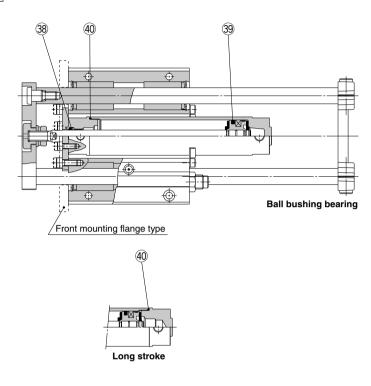

* The numbers correspond with those in the "Construction" of the MGG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
38	Rod seal		
39	Piston seal	NBR	
40	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)		Part no.	Contents
	20	CG1N20-PS	
	25	CG1N25-PS	Set of nos.
	32	CG1N32-PS	38, 39, 40
	40	CG1N40-PS	

- * The seal kit includes 38 to 40. Order the seal kit based on each bore size. * The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

⚠ Caution


When disassembling cylinders with bore sizes of ø20 through ø40, grip the double flat part of either the tube cover or the rod cover with a vise and loosen the other side with a wrench or an adjustable angle wrench, and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

 
(Cylinders with $\emptyset 50$ or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. Please contact SMC when disassemble is required.)

MGG Series Ø63, Ø80, Ø100


Construction


ø63 to ø100/MGG□B

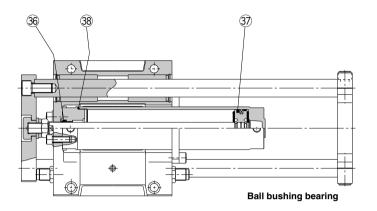



ø63 to ø100/MGG□F

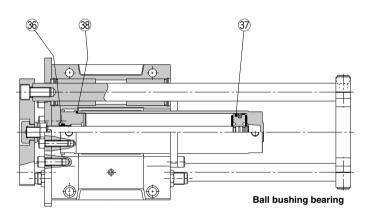

 

* The numbers correspond with those in the "Construction" of the MGG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
36	Rod seal		
37	Piston seal	NBR	
38	Tube gasket		

⚠ Caution


Basic cylinders with a bore size of ø50 cannot be disassembled. (Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. Please contact SMC when disassemble is required.)



NGG Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100

Construction

ø20 to ø100/MGG□□

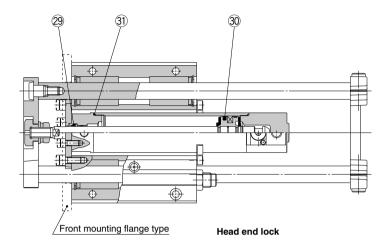

Manual release (Lock type)



ø20 to ø63

* The numbers correspond with those in the "Construction" of the MGG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
29	Rod seal		
30	Piston seal	NBR	
31)	Tube gasket	INDR	
32	Lock piston seal		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CBG1N20-PS	
25	CBG1N25-PS	Set of nos.
32	CBG1N32-PS	29, 30, 31, 32
40	CBG1N40-PS	

- * The seal kit includes 29 to 32. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is


Grease pack part no.: GR-S-010 (10 g)

Basic cylinders with a bore size of ø50 cannot be disassembled. (Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. Please contact SMC when disassemble is required.)

Guide Cylinder/Compact Type

MGC Series ©20, ©25, ©32, ©40, ©50

Construction: With Rear Plate

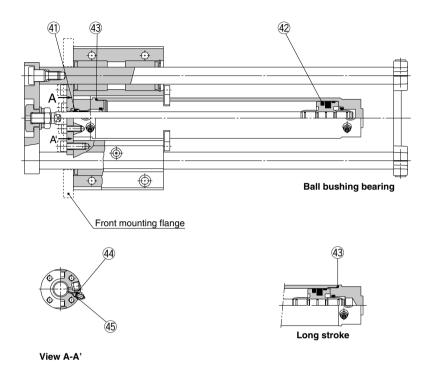

* The numbers correspond with those in the "Construction" of the MGC series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
41)	Rod seal		
42	Piston seal		
43	Tube gasket	NBR	
44	Valve seal		
45	Valve retainer gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1A20-PS	
25	CG1A25-PS	Set of nos.
32	CG1A32-PS	41, 42, 43, 44, 45
40	CG1A40-PS	

- * The seal kit includes 41 to 45. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the $\bar{\mbox{grease}}$ pack is required.

Grease pack part no.: GR-S-010 (10 g)

⚠ Caution

When disassembling base cylinders with bore sizes of $\varnothing 20$ through ø40, grip the double flat part of either the tube cover or the rod cover with a vise and loosen the other side with a wrench or an adjustable angle wrench, and then remove the cover. When retightening,


tighten approximately 2 degrees more than the original position. (Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. Please contact SMC when disassembly is required.)



MGF Series 040, 063, 0100




Construction

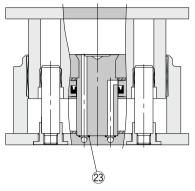

Guide Table

When the cylinder is extended

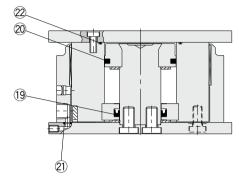

When the cylinder is retracted

* The numbers correspond with those in the "Construction" of the MGF series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
19	Rod seal		
20	Piston seal		
21)	O-ring A	NBR	
22	O-ring B		
23	O-ring C		

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents	
40 MGF40-PS		Set of nos.	
63	MGF63-PS	19, 20, 21, 22, 23	
100	MGF100-PS	(19, 69, 61), 62, 63	


- * The seal kit is not compatible with the clean series.
- The seal kit includes (9) to (2). Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Non-rotating Double Power Cylinder

NGZ Series ©20, ©25, ©32, ©40 ©50, ©63, ©80

 Construction

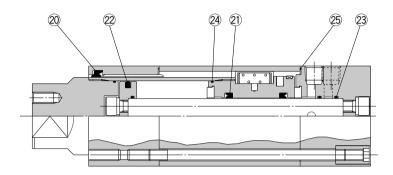



ø20, ø25

* The numbers correspond with those in the "Construction" of the MGZ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Rod seal A		
21	Rod seal B		21, 22, 23 and 24 are
22	Piston seal	NBR	non-replaceable parts, so
23	Piston gasket	NDK	they are not included in
24	Tube rod gasket		the seal kit.
25)	Cylinder tube gasket	1	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	MGZ20-PS	
25	MGZ25-PS	
32	MGZ32-PS	
40	MGZ40-PS	Set of nos. 20, 25
50	MGZ50-PS	
63	MGZ63-PS	
80	MGZ80-PS	


- * Seal kits consist of items ② and ②s, and can be ordered by using the seal kit number corresponding to each bore size.
- * The seal kit includes a grease pack (ø20 to ø50: 10 g, ø63, ø80: 20 g). Order with the following part number when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)



MGZ Series 040, 050, 063

Construction

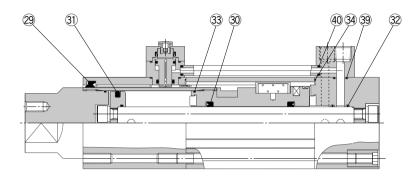

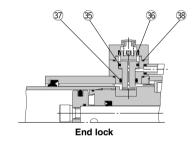

* The numbers correspond with those in the "Construction" of the MGZ series in the Best Pneumatics catalog.

Seal Kit List				
No.	Description	Material	Note	
29	Rod seal A			
30	Rod seal B			
31	Piston seal			
32	Piston gasket			
33	Tube rod gasket		30, 31, 32 and 33 are	
34)	Cylinder tube gasket	NBR	non-replaceable parts, so	
35	Locking piston seal A	INDI	they are not included in	
36	Locking piston seal B		the seal kit.	
37)	Locking piston seal C			
38	Lock holder gasket			
39	Port block gasket			
40	Pipe gasket			

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
40	MGZ40R-PS	Set of nos. 29, 34,
50	MGZ50R-PS	35, 36, 37, 38, 39, 40
63	MGZ63R-PS	39, 39, 39, 39, 49


- * Seal kits consist of items 29 and 34 to 40, and can be ordered by using the seal kit number corresponding to each bore size.
- The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Double Power Cylinder/Without Non-rotating Mechanism

MGZR Series ©20, ©25, ©32, ©40 ©50, ©63, ©80

 Construction

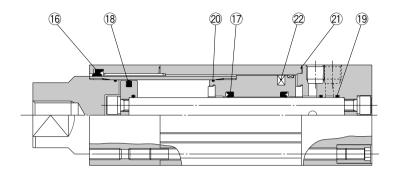



* The numbers correspond with those in the "Construction" of the MGZR series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal A		
17	Rod seal B		17, 18, 19 and 20 are
18	Piston seal	NBR	non-replaceable parts, so
19	Piston gasket	INDR	they are not included in
20	Tube rod gasket		the seal kit.
21)	Cylinder tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	MGZ20-PS	
25	MGZ25-PS	
32	MGZ32-PS	
40	MGZ40-PS	Set of nos. 16, 21
50	MGZ50-PS	
63	MGZ63-PS	
80	MGZ80-PS	

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)




^{*} The seal kit includes a grease pack (ø20 to ø50: 10 g, ø63, ø80: 20 g). Order with one of the following part numbers when only the grease pack is required.


CX2 Series Slide bearing: Ø10, Ø15, Ø25

Construction

CX2N10

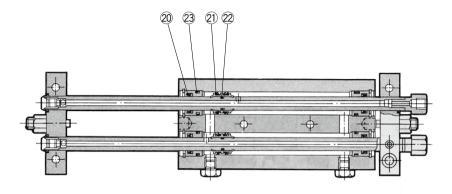

CX2N15, 25

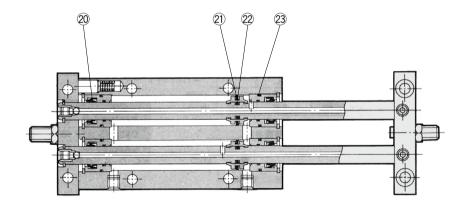

* The numbers correspond with those in the "Construction" of the CX2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note		
20	Rod seal				
21)	Piston seal	NBR	22 is a non-replaceable part, so it is not included in the seal kit.		
22	Piston gasket	INDI			
23	Cylinder tube gasket		ili tile seal kit.		

Replacement Parts: Seal Kit

riopiacoment i arter coarrent				
Model	Part no.	Contents		
CX2N10	CX2N10-PS Set of nos.			
CX2N15	CX2N15-PS	20, 21, 23		
CX2N25	CX2N25-PS	6, 6, 6		


- * The seal kit includes @, @, @. Order the seal kit based on each bore size. (The piston gasket 22 is not replaceable.)
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Slide Unit/Built-in Shock Absorber: Slide Bearing Type

CXVIII Series Ø10, Ø16, Ø25


Construction


ø10

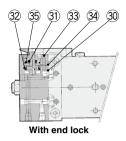

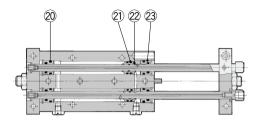

ø16, ø25

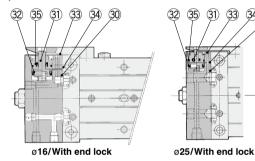

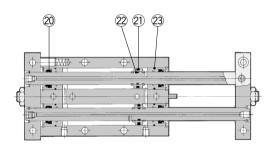

* The numbers correspond with those in the "Construction" of the CXWM series in the Best Pneumatics catalog.

Seal Kit List

Note	Material	Description	No.
! is a	NBR	Rod seal	20
on-replaceable part,	NBR	Piston seal	21)
it is not included	NBR	Piston gasket	22
the seal kit.	NBR	Cylinder tube gasket	23

With End Lock

-	= =					
(30	Body gasket	NBR			
(31)	Rod seal	NBR	33 and 34 are		
(32	Piston seal	NBR	non-replaceable parts,		
-;	33	Steel ball	High carbon chrome bearing steel	so they are not		
_;	34	Steel ball	High carbon chrome bearing steel	included in the seal kit.		
(35	O-ring	NBR			

Replacement Parts: Seal Kit

riopiacoment i arto. Coai itit					
Model Part no. Contents					
Cylinder body					
CXWM10	Set of nos.				
CXWM16	CXWM16-PS	20, 21, 23			
CXWM25	CXWM25-PS	(a), (b), (c)			

- * The seal kit includes ②, ②, ②. Order the seal kit based on each bore size. (The piston gasket ② is not replaceable.)
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

End lock

CXWM10	CXWM10R-PS	Set of nos.
CXWM16	CXWM16R-PS	30, 31, 32, 35
CXWM25	CXWM25R-PS	30, 51, 52, 53


- * The seal kit includes $\mathfrak{D}, \mathfrak{J}, \mathfrak{D}, \mathfrak{S}$. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.




CXVIII Series ©20, ©32

Construction

ø20, ø32

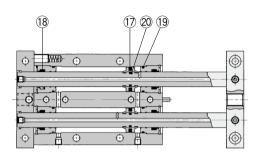

With end lock

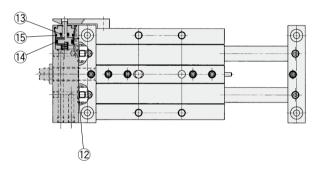

* The numbers correspond with those in the "Construction" of the CXWM series in the Best Pneumatics catalog.

Seal Kit List

O-ring

No.	Description	Material	Note	
17	Piston seal		00 1	
18	Rod seal	NBR	20 is a non-replaceable	
19	Cylinder tube gasket		part, so it is not included in the seal kit.	
20	Piston gasket		in the searkit.	
With	n End Lock			
12	Body gasket			
13	Rod seal	NBR		
(14)	Piston seal	INDI		

Replacement Parts: Seal Kit

riopiacoment i arto: ocai itit					
Model	Part no.	Contents			
Cylinder body					
CXWM20	CXWM20-PS	Set of nos.			
CXWM32	CXWM32-PS	17, 18, 19			

- * The seal kit includes 0, 8, 9. Order the seal kit based on each bore size. (The piston gasket 2 is not replaceable.)
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

End lock

CXWM20	CXWM20R-PS	Set of nos.
CXWM32	CXWM32R-PS	12, 13, 14, 15

 
- * The seal kit includes 2, 3, 4, 5. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

 
Slide Unit/Built-in Shock Absorber: Ball Bushing Bearing Type

CXVL Series Ball Bushing Bearing Type: \$\int 10, \int 16, \int 25\$


Construction


ø10







ø16

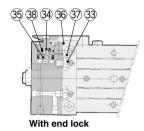

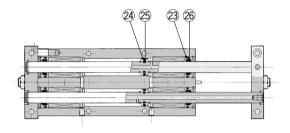

ø**25**

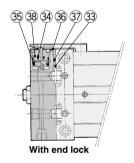

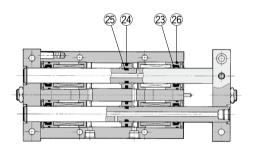

* The numbers correspond with those in the "Construction" of the CXWL series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
23	Rod seal		25 is a
24	Piston seal	NBR	non-replaceable part,
25	Piston gasket	INDR	so it is not included
26	Cylinder tube gasket		in the seal kit.

With End Lock

33	Body gasket	NBR	
34)	Rod seal	NBR	36 and 37 are
35	Piston seal	NBR	non-replaceable parts,
36	Steel ball	High carbon chrome bearing steel	
37	Steel ball	High carbon chrome bearing steel	included in the seal kit.
38	O-ring	NBR	

Replacement Parts: Seal Kit

Model	Part no.	Contents
Cylinder body		
CXWL10	CXWL10-PS	Set of nos.
CXWL16	CXWL16-PS	23, 24, 26
CXWL25	CXWL25-PS	69, 69, 69

- * The seal kit includes 23, 24 and 26. Order the seal kit with the part number for each model.
- * 25 is not replaceable.
- * Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)

End lock

Ena look					
CXWL10	CXWL10R-PS	Cot of noo			
CXWL16	CXWL16R-PS	Set of nos. 33, 34, 35, 38			
CXWL25	CXWL25R-PS	55, 55, 55, 55			


- * The seal kit includes 33, 34, 35 and 38. Order the seal kit with the part number for each model.
- * Since the seal kit does not include a grease pack, it should be ordered separately.




CXVL Series Ball Bushing Bearing Type: Ø20, Ø32


Construction


ø**20**

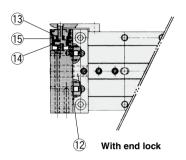

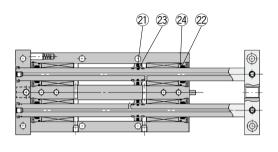

ø**32**

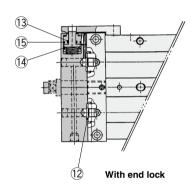

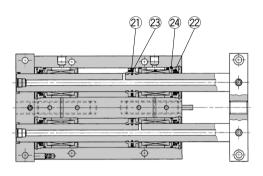

* The numbers correspond with those in the "Construction" of the CXWL series in the Best Pneumatics catalog.

Seal Kit List

Rod seal

15 O-ring

Piston seal

No.	Description	Material	Note
21)	Piston seal		
22	Rod seal	NBR	23 is a non-replaceable
23	Piston gasket	INDI	part, so it is not included in the seal kit.
24	Cylinder tube gasket		in the searkit.
With	n end lock		
12	Body gasket		

NBR

Replacement Parts: Seal Kit

Model	Part no.	Contents
Cylinder body		
CXWL20	CXWL20-PS	Set of nos.
CXWL32	CXWL32-PS	21, 22, 24

- * The seal kit includes ②, ② and ②. Order the seal kit with the part number for each model.
- * 23 is not replaceable.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

End lock

CXWL20	CXWL20R-PS	Set of nos.
CXWL32	CXWL32R-PS	12, 13, 14, 15


- * The seal kit includes 1, 3, 4 and 5. Order the seal kit with the part number for each model.
- * Since the seal kit does not include a grease pack, it should be ordered

Platform Cylinder

CXT Series \$\infty 12, \$\infty 16, \$\infty 20, \$\infty 25, \$\infty 32, \$\infty 40\$



Construction

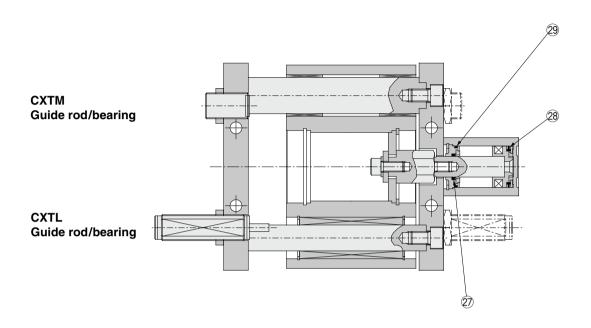

* The numbers correspond with those in the "Construction" of the CXT series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
27)	Rod seal		
28	Piston seal	NBR	
29 Note)	Tube gasket		

Note) The same type of the part is equipped to the head side for the long stroke type.

Replacement Parts: Seal Kit

Model	Cylinder	Part no				
Standard stroke	Standard stroke					
CXT□12	CDQSB12	CQSB12-PS				
CXT□16	CDQSB16	CQSB16-PS				
CXT□20	CDQSB20	CQSB20-PS				
CXT□25	CDQSB25	CQSB25-PS				
CXT□32	CDQ2A32	CQ2B32-PS				
CXT□40	CDQ2A40	CQ2B40-PS				
Long stroke						
CXT□12	CDQSB12	CQSB12-L-PS				
CXT□16	CDQSB16	CQSB16-L-PS				
CXT□20	CDQSB20	CQSB20-L-PS				
CXT□25	CDQSB25	CQSB25-L-PS				
CXT□32	CDQ2A32	CQ2A32-L-PS				
CXT□40	CDQ2A40	CQ2A40-L-PS				

- \ast The seal kit includes @, @ and @. Order the seal kit with the kit number.
- * Since the seal kit does not include a grease pack, it should be ordered separately.




CXSJ Series

ø6, ø10, ø15, ø20 ø25, ø32


Dual Rod Cylinder/Compact Type: Slide Bearing

Construction


CXSJM (Slide bearing) CXSJM6

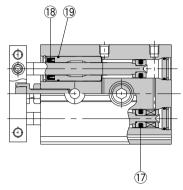


CXSJM15

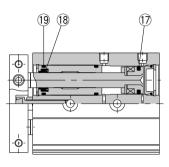



CXSJM10

 

 

CXSJM20 to 32

 

 

* The numbers correspond with those in the "Construction" of the CXSJ series in the Best Pneumatics catalog.

Seal Kit List

1	No.	Description	Material	Note
(17	Piston seal		
(18	Rod seal	NBR	
(19	O-ring		

Replacement Parts: Seal Kit

ricpiacement i arts. Ocai titt					
Model Part no.		Contents			
CXSJM6 CXSJM6-PS					
CXSJM10	CXSJM10-PS				
CXSJM15	CXSM15-PS	Set of nos.			
CXSJM20	CXSM20-PS	17, 18, 19			
CXSJM25	CXSM25-PS				
CAC IW33	CXSM32-PS				

- * The seal kit includes ①, ⑩, and ⑩. Order the seal kit based on each
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Dual Rod Cylinder/Compact Type: Ball Bushing Bearing

CXSJ Series 06, 010, 015, 020 025, 032




Construction


CXSJL (Ball bushing bearing) CXSJL6

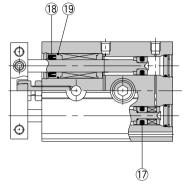


CXSJL15

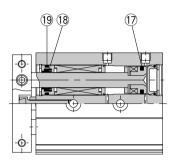



CXSJL10

 

 

CXSJL20 to 32

 

 

* The numbers correspond with those in the "Construction" of the CXSJ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Piston seal		
18	Rod seal	NBR	
19	O-ring		

Replacement Parts: Seal Kit

Model	Part no.	Contents
CXSJL6	CXSJL6-PS	
CXSJL10	CXSJL10-PS	
CXSJL15	CXSL15APS	Set of nos.
CXSJL20 CXSL20APS		17, 18, 19
CXSJL25	CXSL25APS	
CXSJL32	CXSL32APS	


- * The seal kit includes ①, ⑩, and ⑩. Order the seal kit based on each
- * Since the seal kit does not include a grease pack, it should be ordered separately.

CXS Series (96, 010, 015, 020, 025, 032)

Replacement Procedure is on p. 372


Construction

CXSM6

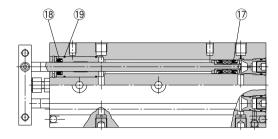

Dual Rod Cylinder/Basic Type: Slide Bearing

CXSM10 to 32

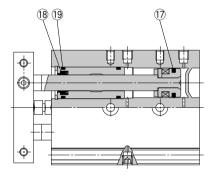

* The numbers correspond with those in the "Construction" of the CXS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Piston seal		
18	Rod seal	NBR	
19	O-ring		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
6	CXSM6-PS	
10	CXSM10APS	
15	CXSM15-PS	Set of nos. ①, ⑧, ⑨
20	CXSM20-PS	
25	CXSM25-PS	
32	CXSM32-PS	

- * The seal kit includes ①, ® and ⑨. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.


Dual Rod Cylinder/Basic Type: Ball Bushing Bearing

CXS Series 06, 010, 015, 020, 025, 032




Construction

CXSL6

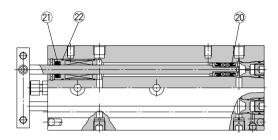

CXSL10 to 32

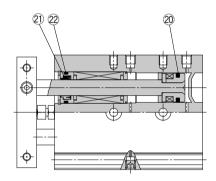

* The numbers correspond with those in the "Construction" of the CXS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Piston seal		
21)	Rod seal	NBR	
22	O-ring		

Replacement Parts: Seal Kit

i topiaocinioni i a		
Bore size (mm)	Part no.	Contents
6	CXSL6-PS	
10	CXSL10BPS	
15	CXSL15APS	Set of nos.
20	CXSL20APS	20, 21, 22
25	CXSL25APS	
32	CXSL32APS	

^{*} The seal kit includes @, @) and @. Order the seal kit based on each bore size.




 
^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

CXS Series ©20, ©25, ©32




CXSM/With air cushion

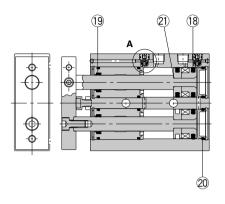




Close-up of A

 CXSL/With air cushion

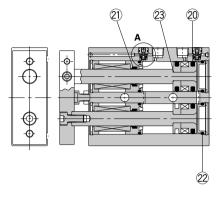



Close-up of A

* The numbers correspond with those in the "Construction" of the CXS series in the Best Pneumatics catalog.

Spal Kit Liet (CYSM)

Sear Kit List (CASIVI)				
No.	Description	Material	Note	
18	Piston seal			
19	Rod seal			
20	O-ring		21 and 24 to 26 are	
21	O-ring	NBR	non-replaceable parts, so	
24	Check seal		they are not included in the seal kit.	
25	Needle gasket]	tile seal kit.	
26	Check gasket			

Replacement Parts: Seal Kit (CXSM)

Bore size (mm)	Part no.	Contents	
20	CXSM20A-PS	Set of nos.	
25	CXSM25A-PS	18, 19, 20	
32	CXSM32A-PS	10, 19, 20	

- * The seal kit includes (8, (9) and 20. Order the seal kit based on each hore size
- * Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no.: GR-S-010 (10 g)

Seal Kit List (CXSL)

_ =					
	No.	Description	Material	Note	
	20	Piston seal			
	21)	Rod seal			
	22	O-ring	NBR	23 and 26 to 28 are	
	23	O-ring		non-replaceable parts, so	
	26	Check seal		they are not included in the seal kit.	
	27	Needle gasket		tile seal kit.	
	28	Check gasket			

Replacement Parts: Seal Kit (CXSL)

	Bore size (mm)	Part no.	Contents	
	20	CXSL20A-PS	0-4-4	
25		CXSL25A-PS	Set of nos. 20, 21, 22	
	32	CXSL32A-PS	20, 21, 22	

- * The seal kit includes 20, 21 and 22. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered


Dual Rod Cylinder/With End Lock for Retraction Side

CXS Series (6, 010, 015, 020, 025, 032)



Construction

CXSM6

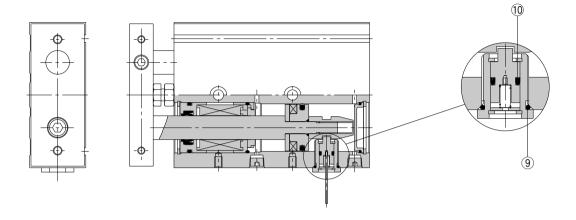

* The numbers correspond with those in the "Construction" of the CXS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
9	O-ring	NDD	
10	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
6	CXSRM6-PS			
O	CXSRL6APS			
10	CXSRM10-PS			
10	CXSRL10APS	Includes the kit		
15	CXSRM15-PS	components of the seal		
15	CXSRL15APS	kit featured on page		
20	CXSRM20-PS	177 plus items (9) and (10) from the left parts		
20	CXSRL20APS			
25	CXSRM25-PS	list.		
25	CXSRL25APS			
32	CXSRM32-PS			
32	CXSRL32APS			

^{*} Seal kits includes the basic type seal (page 177), (9) and (10). Order the seal kit based on each bore size.




^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

CXSW Series 96, 910, 915 920, 925, 932




Construction

CXSWM/Slide bearing

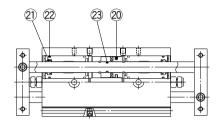

CXSWL/Ball bushing bearing

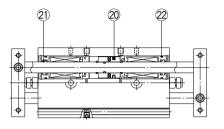

* The numbers correspond with those in the "Construction" of the CXSW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Piston seal		
21)	Rod seal	NDD	23 is a non-replaceable
22	O-ring	NBR	part, so it is not included in the seal kit.
23	O-ring		in the sear kit.

Replacement Parts: Seal Kit

neplacement Farts. Sear Kit			
Bore size (mm)	Part no.	Contents	
6	CXSWM6-PS		
О	CXSWL6-PS		
10	CXSWM10-PS		
10	CXSWL10APS		
15	CXSWM15-PS		
15	CXSWL15APS	Set of nos.	
20	CXSWM20-PS	20, 21, 22	
20	CXSWL20APS		
25	CXSWM25-PS		
20	CXSWL25APS		
20	CXSWM32-PS		
32	CXSWL32APS		

- * The seal kit includes 20 to 22. To order them, use the order number given in the above table.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Modular F.R.L. Pressure Control Equipment

 
Fine Lock Cylinder/Double Acting, Single Rod

 
CLG1 Series ©20, ©25, ©32, ©40

 


Construction

With rubber bumper: CLG1BN









Long stroke

  With air cushion: CLG1BA









Long stroke

Seal Kit List

No.	Description	Material	Note
35	Piston seal		
38	Rod seal B	NBR	
42	Cylinder tube gasket		


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1N20-PS	
25	CG1N25-PS	Set of nos.
32	CG1N32-PS	35, 38, 42
40	CG1N40-PS	

- * The since the lock section for the CLG1 series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Lock Unit

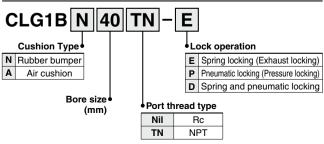



^{*} The numbers correspond with those in the "Construction" of the CLG1 series in the Best Pneumatics catalog.

CL1 Series 940, 950, 963, 980, 9100 9125, 9140, 9160



Construction

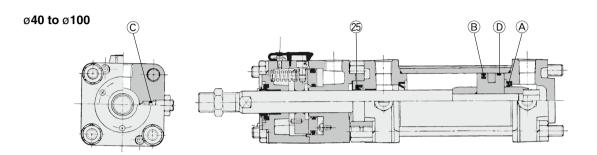

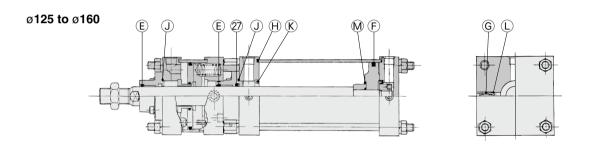

* The numbers correspond with those in the "Construction" of the CL1 series in the Best Pneumatics catalog.

Spal Kit Liet

Sea	I KIT LIST		
No.	Description	Material	Note
ø 40	to ø100		
25	Rod seal		
A	Cushion seal		
B	Piston seal	NBR	
<u>C</u>	Cushion valve seal		
D	Cylinder tube gasket		
ø12	5 to ø160		
27)	Rod seal		
E	Wiper ring		K, L and M are non-replaceable parts, so they are not included in the seal kit.
	Piston seal		
<u>(G</u>)	Valve seal		
<u>H</u>	Tube gasket	NBR	
J	Retaining plate gasket		
K	Cushion seal		
L	Guide gasket		
M	Piston gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	CL40-PS	
50	CL50-PS	
63	CL63-PS	
80	CL80-PS	
100	CL100-PS	
125	CL125-PS	
140	CL140-PS	
160	CL160-PS	

- * Since the lock section for the CL1 series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g, ø125 to ø160: 40 g).

 
Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

* As for the center trunnion type, it is very difficult to adjust the position of the trunnion bracket and the center of the axis.

Therefore repair at SMC is recommended.

Replacement Parts: Lock-up Unit



^{*} Consult with SMC when replacing the lock-up unit with a bore size of ø125 to ø160.

Cylinder with Lock/Double Acting, Single Rod

 
CNG Series ©20, ©25, ©32, ©40



Construction

With rubber bumper: CNGBN







Long stroke

With air cushion: CNGBA









Long stroke

* The numbers correspond with those in the "Construction" of the CNG series in the Best Pneumatics catalog.

Seal Kit List

183

No.	Description	Material	Note
37	Rod seal A		
39	Piston seal	NBR	
40	Cylinder tube gasket		


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CG1N20-PS	
25	CG1N25-PS	Set of nos.
32	CG1N32-PS	37, 39, 40
40	CG1N40-PS	

- * Since the lock section for the CNG series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)


Replacement Parts: Lock Unit

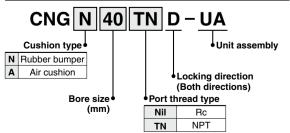

MNB Series 032, 040, 050 063, 080, 0100

The Replacement Procedure is on p. 384

Construction

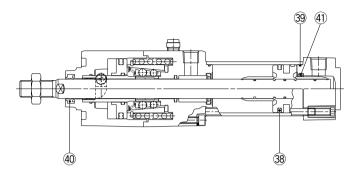

* The numbers correspond with those in the "Construction" of the MNB series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
38	Piston seal		
39	Cylinder tube gasket	NBR	
40	Rod seal A	INDR	
41)	Cushion seal		

Replacement Parts: Seal Kit


riopiacoment i arto: Coar Kit				
Bore size (mm)	Part no.	Contents		
32	MB32Z-PS			
40	MB1-40Z-PS			
50	MB1-50Z-PS	Set of nos.		
63	MB1-63Z-PS	38, 39, 40, 41		
80	MB1-80Z-PS			
100	MB1-100Z-PS			

- * Since the lock section for the MNB series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).


Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

 Replacement Parts: Lock Unit



G Port

 


Cylinder with Lock/Double Acting, Double Rod

MNBW Series 032, 040, 050 063, 080, 0100



Construction

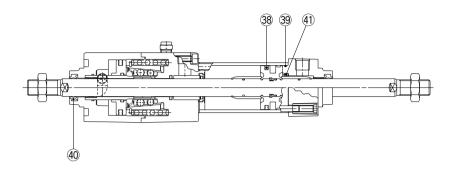

* The numbers correspond with those in the "Construction" of the MNBW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
38	Piston seal	NBR	
39	Cylinder tube gasket		
40	Rod seal A		
41	Cushion seal		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	MBW32-PS	
40	MBW40-PS	
50	MBW50-PS	Set of nos.
63	MBW63-PS	38, 39, 40, 41
80	MBW80-PS	
100	MBW100-PS	

^{*} As a general rule, the lock section of the MNBW series is replaced as a unit, and therefore, the replacement seal kits are for the cylinder section only. These can be ordered using the order number for each bore size.

Order with one of the following part numbers when only the grease pack is required.


Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

^{*} The seal kit includes a grease pack (ø32 to ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).

CNA2 Series 040, 050, 063 080, 0100

The Replacement Procedure is on p. 384

Construction

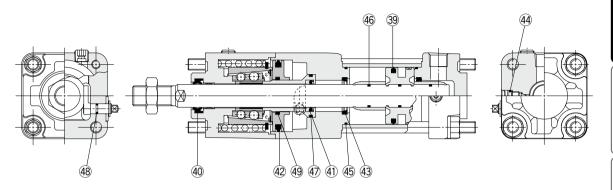

* The numbers correspond with those in the "Construction" of the CNA2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
39	Piston seal	NBR	
40	Rod seal A	NBR	
41	Rod seal B	NBR	
42	Release piston seal	NBR	41, 42, 44 and 46 to 49
43	Cushion seal	Urethane	are non-replaceable
44	Cushion valve seal	NBR	parts, so they are not
45	Tube gasket	NBR	included in the seal
46	Piston gasket	NBR	kit.
47	Piston guide gasket	NBR	
48	Unlocking cam gasket	NBR	
49	O-ring	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	MB1-40Z-PS	
50	MB1-50Z-PS	Set of nos.
63	MB1-63Z-PS	39, 40, 43, 45
80	MB1-80Z-PS	39, 49, 49, 49
100	MB1-100Z-PS	


- * Since the lock of the CNA2 series cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

* As for the center trunnion type, it is very difficult to adjust the position of the trunnion bracket and the center of the axis. Therefore repair at SMC is recommended.

Replacement Parts: Lock Unit

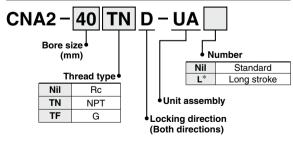

 The lock unit for a long-stroke cylinder is only applicable for flange type with bore size ø50 to ø100 and stroke 1001 or more.
 (Example: CNA2-100D-UAL)


Cylinder with Lock/Double Acting, Double Rod

CNA2W Series

Ø40, Ø50 Ø63, Ø80 Ø100



Construction

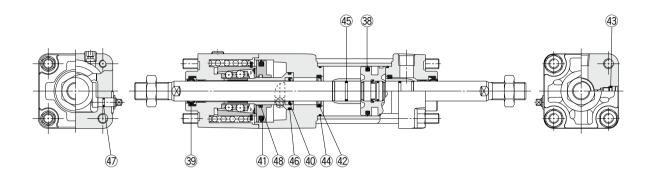

* The numbers correspond with those in the "Construction" of the CNA2 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
38	Piston seal	NBR	
39	Rod seal A	NBR	
40	Rod seal B	NBR	
41	Release piston seal	NBR	
42	Cushion seal	Urethane	40, 41, 43 and 45 to 48
43	Cushion valve seal	NBR	are non-replaceable
44	Tube gasket	NBR	parts, so they are not
45	Piston gasket	NBR	included in the seal
46	Piston guide gasket	NBR	kit.
47	Unlocking cam gasket	NBR	
48	O-ring	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	MBW40-PS	
50	MBW50-PS	Cat of man
63	MBW63-PS	Set of nos. 38, 39, 42, 44
80	MBW80-PS	30, 39, 42, 44
100	MBW100-PS	

- * Since the lock of the CNA2 series cannot be disassembled and is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes a grease pack (ø40 and ø50: 10 g, ø63 and ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)


* As for the center trunnion type, it is very difficult to adjust the position of the trunnion bracket and the center of the axis.

Therefore repair at SMC is recommended.

CNS Series Ø125, Ø140, Ø160



Construction

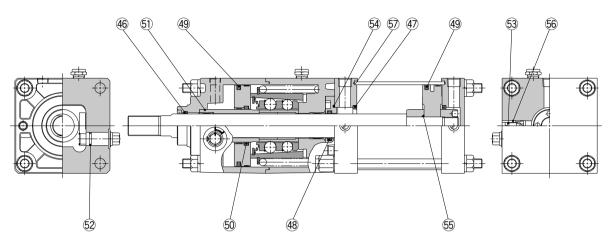

* The numbers correspond with those in the "Construction" of the CNS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
46	Wiper ring	NBR	
47	Cushion seal	NBR	
48	Rod seal	NBR	
49	Piston seal	NBR	
50	O-ring (for release piston)	NBR	47, 50 to 52, 55 and 56
51	O-ring (for piston guide)	NBR	are non-replaceable
52	O-ring (for unlocking cam)	NBR	parts, so they are not included in the seal
53	Valve seal	NBR	kit.
54	Retaining plate gasket	NBR	NIL.
55	Piston gasket	NBR	
56	Guide gasket	NBR	
5 7	Tube gasket	NBR	

Replacement Parts: Seal Kit


Bore size (mm)	Part no.	Contents
125	CS1N125A-PS	Set of nos.
140	CS1N140A-PS	46, 48, 49, 53, 54, 57
160	CS1N160A-PS	9, 9, 9, 9, 9, 9,

- * Since the lock section for the CNS series is normally replaced as a unit, kits are for the cylinder section only. These can be ordered using the order number for each bore size.
- * The seal kit includes 46, 48, 49, 53, 54, 57. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (40 g). Order with one of the following part numbers when only the grease pack

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

* As for the center trunnion type, it is very difficult to adjust the position of the trunnion bracket and the center of the axis. Therefore repair at SMC is recommended.

Replacement Parts: Lock Unit

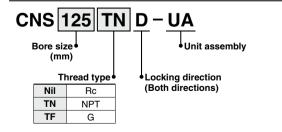


Cylinder with Lock/Double Acting, Single Rod

CLS Series ©125, ©140, ©160 ©180, ©200, ©250



Construction

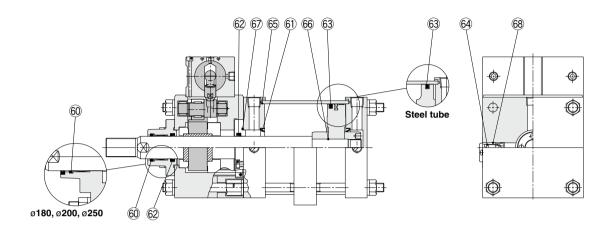

* The numbers correspond with those in the "Construction" of the CLS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
60	Wiper ring		
61	Cushion seal		
62	Rod seal		
63	Piston seal		61, 66 and 68 are
64	Valve seal	NBR	non-replaceable parts, so they are not included in
65	Tube gasket		the seal kit.
66	Piston gasket		the sear kit.
67	Retaining plate gasket		
68	Guide gasket		

Replacement Parts: Lock Unit

NPT

G

(mm)

Nil

TN

TF

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
125	CS1N125A-PS		
140	CS1N140A-PS		
160	CS1N160A-PS	Set of nos.	
180	CS1N180A-PS	60, 62, 63, 64, 65, 67	
200	CS1N200A-PS		
250	CS1N250A-PS		

- * Since the lock section for the CLS series is normally replaced as a unit, replacement seal kits are for the cylinder section only.
- ** Seal kits are sets consisting of items @, @, @, @, @ and @, which can be ordered using the order number for each cylinder bore size.
- The seal kit includes a grease pack (ø125 to ø160: 40 g, ø180, ø200: 50 g, ø250: 60 g).

Order with one of the following part numbers when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g), GR-S-020 (20 g)

* As for the center trunnion type, it is very difficult to adjust the position of the trunnion bracket and the center of the axis.

Therefore repair at SMC is recommended.

D | A93 Bore size

Lock unit auto switch

Without auto switch

* Refer to the table below for applicable auto switch models.

Port thread type Lock unit built-in magnet Rc

> Without magnet (Without auto switch) D Built-in magnet

Unit assembly

Cylinder Unit/Applicable Auto Switches


Cylinder Onit/Applicable Auto Switches													
	Choolel	Electrical	Indicator	Wiring		Load vol	Itage	Auto switch	Lead	wire lengt	th (m)		
Type	function	entry		9		D0	100	model	0.5	3	5	Appl	icable load
	Turicuon	entry	light	(output)		DC	AC	model	(Nil)	(L)	(Z)		
Solid state				3-wire (NPN)		5 V. 12 V		M9N	•	•	0		
switch		Grommet	Yes	3-wire (PNP)	24 V	3 V, 12 V		M9P	•	•	0	l —	Relay, PLC
SWILCIT				2-wire		12 V		M9B	•	•	0	1	
Reed switch		Grommet	No	2-wire	24 V	5 V, 12 V	100 V or less	A90	•	•	_	IC circuit	Relay, PLC
need SWILCH		Gioillilet	Yes	Z-WITE	24 V	12 V	100 V	A93	•	•	•		neiay, FLC




REAR Series \$10, \$15

The Replacement Procedure is on p. 349

 Construction



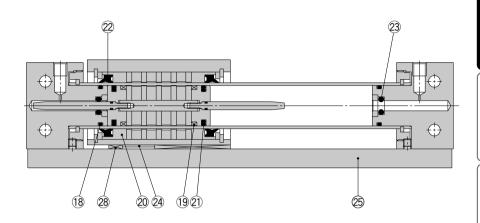

- * The numbers correspond with those in the "Construction" of the REAR series in the Best Pneumatics catalog.
- * The figure is for Ø15. (The magnet for Ø10: 3 pcs.)

Seal Kit List

No.	Description	Material	Note
18	Cylinder tube gasket	NBR	
19	Wear ring A	Special resin	
20	Wear ring B	Special resin	
21)	Piston seal	NBR	24 to 27 are
22	Scraper	NBR	non-replaceable
23	Cushion seal	NBR	parts, so they
24	Magnetic shielding plate	Rolled steel plate	are not included
25	Switch rail	Aluminum alloy	in the seal kit.
26	Magnet	_	
27	Hexagon socket head cap screw	Chromium steel	
28	Wear ring C	Special resin	

Replacement Parts: Seal Kit

ricpiacement i arts. ocai titi							
Bore size (mm)	Part no.	Contents					
10	REAR10-PS	Set of nos. (18, 20, 21, 22, 23, 28 Note 1) 2)					
15	REAR15-PS	Set of nos. (8, (9, 20, 21, 22, 23, 28) Note 1)					

Note 1) It may be difficult to replace the cushion seal 3.

Note 2) For wear ring A, ø10, please consult with SMC.

* The seal kit includes a grease pack (Ø10: 5 g and 10 g, Ø15: 10 g). Order with one of the following part numbers when only the grease pack is required.

For \varnothing 10 grease pack part no.: GR-F-005 (5 g) for external sliding part GR-S-010 (10 g) for tube interior


For Ø15 grease pack part no.: GR-S-010 (10 g)

Sine Rodless Cylinder/Direct Mount Type

REAR Series 020, 025, 032, 040



Construction

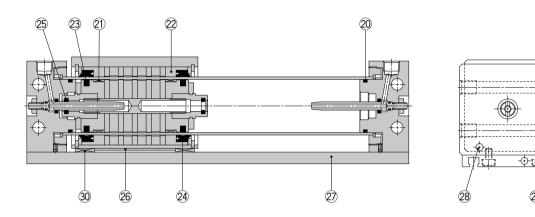

* The numbers correspond with those in the "Construction" of the REAR series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Cylinder tube gasket	NBR	
21)	Wear ring A	Special resin	
22	Wear ring B	Special resin	
23	Piston seal	NBR	26 to 29 are
24	Scraper	NBR	non-replaceable
25	Cushion seal	NBR	parts, so they
26	Magnetic shielding plate	Rolled steel plate	are not included
27	Switch rail	Aluminum alloy	in the seal kit.
28	Magnet	_	
29	Hexagon socket head cap screw	Chromium steel	
30	Wear ring C	Special resin	

Replacement Parts: Seal Kit

Ī	Bore size (mm)	Part no.	Contents
	20	REAR20-PS	
	25	REAR25-PS	Set of nos.
	32	REAR32-PS	20, 21, 22, 23, 24, 25, 30 Note)
	40	REAR40-PS	


Note) Cushion seal 25 may be difficult to be replaced.

- * The seal kit includes @ to @5, @0. Order the seal kit based on each bore size.
- The seal kit includes a grease pack (10 g).
- Order with the following part number when only the grease pack is required.

REAS Series



Construction

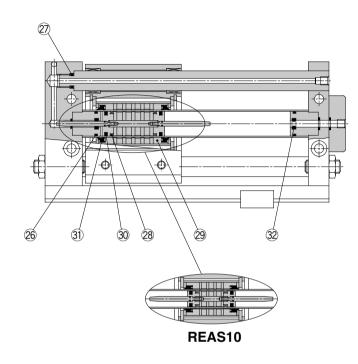

* The numbers correspond with those in the "Construction" of the REAS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
26	Cylinder tube gasket	NBR	
27)	Guide shaft gasket	NBR	
28	Wear ring A	Special resin	
29	Wear ring B	Special resin	
30	Piston seal	NBR	
31)	Scraper	NBR	
32	Cushion seal	NBR	

Replace	Replacement Parts: Seal Kit				
Bore siz	e (mm)	Part no.	Contents		
10)	REAS10-PS	Set of nos. ②, ②, ②, ③, ③, ③ Note 1) 2)		
1	5	REAS15-PS	Set of nos. 26, 27, 28, 29, 30, 31, 32 Note 1)		

Note) The seal kit includes 26 to 32. Order the seal kit based on each bore

Note 1) It may be difficult to replace the cushion seal 32.

Note 2) For wear ring A, Ø10, please consult with SMC.

* The seal kit includes a grease pack (ø10: 5 g and 10 g, ø15: 10 g). Order with one of the following part numbers when only the grease pack is required.

For Ø10 grease pack part no.: GR-F-005 (5 g) for external sliding part GR-S-010 (10 g) for tube interior


For Ø15 grease pack part no.: GR-S-010 (10 g)


Sine Rodless Cylinder/Slider Type: Slide Bearing

REAS Series ©20, ©25, ©32, ©40



Construction

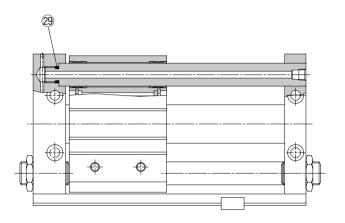

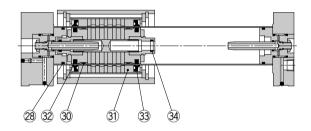

* The numbers correspond with those in the "Construction" of the REAS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material
28	Cylinder tube gasket	NBR
29	Guide shaft gasket	NBR
30	Wear ring A	Special resin
31)	Wear ring B	Special resin
32	Piston seal	NBR
33	Scraper	NBR
34)	Cushion seal	NBR

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	REAS20-PS	
25	REAS25-PS	Set of nos.28, 29, 30, 31, 32, 33, 34 Note 1)
32	REAS32-PS	30, 31, 32, 33, 34 Note 1)
40	REAS40-PS	

Note) The seal kit includes 28 to 34. Order the seal kit based on each bore

Note 1) Cushion seal 34 may be difficult to be replaced.


* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is



REAL Series Ball Bushing Bearing: Ø10, Ø15

Construction

ø10, ø15

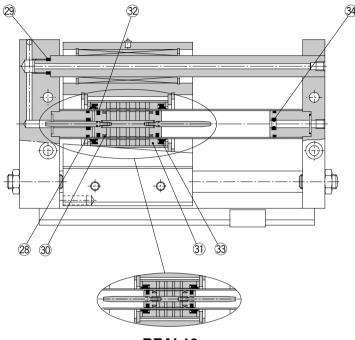

REAL₁₀

* The numbers correspond with those in the "Construction" of the REAL series in the Best Pneumatics catalog.

Seal kit List

No.	Description	Material	Note
28	Cylinder tube gasket	NBR	
29	Guide shaft gasket	NBR	
30	Wear ring A	Special resin	
31)	Wear ring B	Special resin	
32	Piston seal	NBR	
33	Scraper	NBR	
34	Cushion seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
10	REAL10-PS	Set of nos. 28, 29, 31, 32, 33, 34	
15	REAS15-PS	Set of nos. 28, 29, 30, 31, 32, 33, 34	

Note) The seal kit includes 28 to 34. Order the seal kit based on each bore

Note) It may be difficult to replace the cushion seal 3.

Note) For wear ring A, Ø10, please consult with SMC.

* The seal kit includes a grease pack (Ø10: 5 g and 10 g, Ø15: 10 g). Order with one of the following part numbers when only the grease pack is required.

For ø10 grease pack part no.: GR-F-005 (5 g) for external sliding part GR-S-010 (10 g) for tube interior


For Ø15 grease pack part no.: GR-S-010 (10 g)

 
Sine Rodless Cylinder/Slider Type: Ball Bushing Bearing

REAL Series Ball Bushing Bearing: \$\, \text{920}, \$\, \text{925} \\ \text{932}, \$\, \text{940}\$

Construction

ø20 to ø40

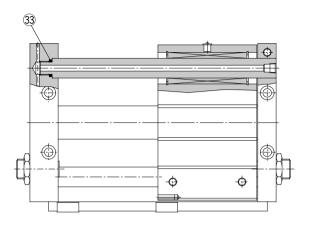



* The numbers correspond with those in the "Construction" of the REAL series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note	
32	Cylinder tube gasket	NBR		
33	Guide shaft gasket	NBR		
34)	Wear ring A	Special resin		
35	Wear ring B	Special resin		
36	Piston seal	NBR		
37	Scraper	NBR		
38	Cushion seal	NBR		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	REAS20-PS	
25	REAS25-PS	Set of nos. 32, 33,
32	REAS32-PS	34, 35, 36, 37, 38
40	REAS40-PS	

Note) The seal kit includes 32 to 38. Order the seal kit based on each bore size.

Note) It may be difficult to replace the cushion seal 38.

 The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is




REAH Series

Single axis type: Ø10, Ø15

Construction

Single axis type: ø10, ø15

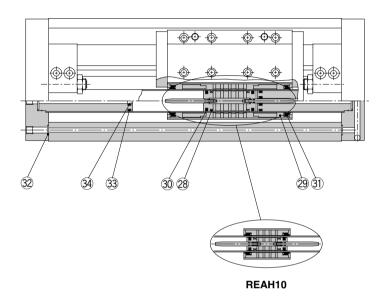

* The numbers correspond with those in the "Construction" of the REAH series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
28	Wear ring A	Special resin	
29	Wear ring B	Special resin	
30	Piston seal	NBR	
31)	Scraper	NBR	
32	O-ring	NBR	
33	O-ring	NBR	
34)	Cushion seal	NBR	

Replacement Parts: Seal Kit

riopiacement i arto: ocai itit		
Bore size (mm)	Part no.	Contents
10	REAH10-PS	Set of nos. 29, 30, 31, 32, 33, 34
15	REAH15-PS	Set of nos. 28, 29, 30, 31, 32, 33, 34

Note) The seal kit includes ${\mathfrak B}$ to ${\mathfrak A}$. Order the seal kit based on each bore size.

Note) It may be difficult to replace the cushion seal ${\mathfrak A}$.

Note) For wear ring A, Ø10, please consult with SMC.

* The seal kit includes a grease pack (ø10: 5 g and 10 g, ø15: 10 g). Order with one of the following part numbers when only the grease pack is required.

For ø10 grease pack part no.: GR-F-005 $(5\ g)$ for external sliding part GR-S-010 $(10\ g)$ for tube interior

For Ø15 grease pack part no.: GR-S-010 (10 g)


Actuator

Sine Rodless Cylinder/Linear Guide Type

REAH Series Single axis type: Ø20, Ø25

Construction

Single axis type: ø20, ø25

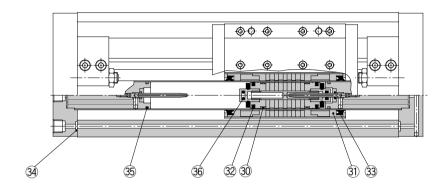

* The numbers correspond with those in the "Construction" of the REAH series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
30	Wear ring A	Special resin	
31)	Wear ring B	Special resin	
32	Piston seal	NBR	
33	Scraper	NBR	
34)	O-ring	NBR	
35	O-ring	NBR	
36	Cushion seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	REAH20-PS	Set of nos.
25	REAH25-PS	30, 31, 32, 33, 34, 35, 36

Note) The seal kit includes 30 to 36. Order the seal kit based on each bore size.

Note) It may be difficult to replace the cushion seal 36.


The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

REAH Series Double axis type: Ø25, Ø32

Construction

Double axis type: ø25, ø32

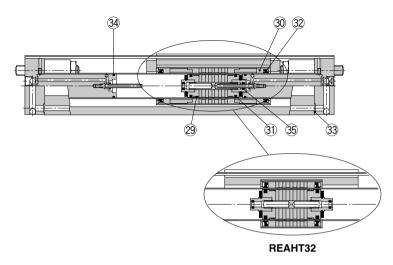

* The numbers correspond with those in the "Construction" of the REAH series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note			
29	Wear ring A	Special resin				
30	Wear ring B	Special resin				
31)	Piston seal	NBR				
32	Scraper	NBR				
33	O-ring	NBR				
34	O-ring	NBR				
35	Cushion seal	NBR				

nlacement Parte: Seal Kit

neplacement Parts. Sear Kit				
Bore size (mm)	Part no.	Contents		
25	REAHT25-PS	Set of nos.29, 30,		
32	REAHT32-PS	31) 32 33 34 35		

Note) The seal kit includes 29 to 35. Order the seal kit based on each bore

Note) It may be difficult to replace the cushion seal 35.

* The seal kit includes a grease pack (10 g).


Order with the following part number when only the grease pack is

Sine Rodless Cylinder/Direct Mount Type

REBR Series © 15, © 25, © 32



Construction

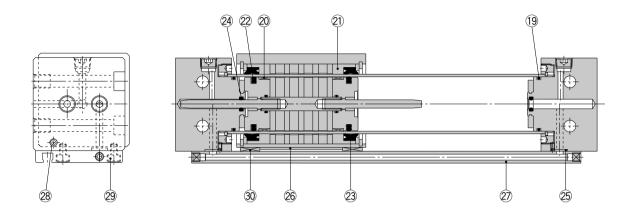

^{*} The numbers correspond with those in the "Construction" of the REBR series in the Best Pneumatics catalog.

Seal Kit List

Ocal fait Elot				
No.	Description	Material	Note	
19	Cylinder tube gasket	NBR		
20	Wear ring A	Special resin		
21)	Wear ring B	Special resin		
22	Piston seal	NBR		
23	Scraper	NBR	26 to 29 are	
24	Cushion seal	NBR	non-replaceable	
25	Switch rail gasket	NBR	parts, so they are not included in	
26	Magnetic shielding plate	Rolled steel plate/Chromated	the seal kit.	
27	Switch rail	Aluminum alloy/Clear anodized	tile seal kit.	
28	Magnet	_		
29	Hexagon socket head cap screw	Chromium steel/Nickel plated		
30	Wear ring C	Special resin		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
15	REBR15-PS	Set of nos.	
25	REBR25-PS	19, 20, 21, 22, 23, 24, 25, 30	
32	REBR32-PS	0, 6, 5, 6, 6, 6, 6, 8	

Note) Cushion seal 24 may be difficult to be replaced.


* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

REBH Series Single axis type: Ø15, Ø25

Construction

Single axis type: Ø15, Ø25

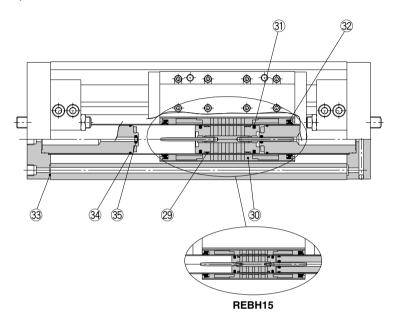

* The numbers correspond with those in the "Construction" of the REBH series in the Best Pneumatics catalog.

Seal Kit List

Sea	Sear Kit List					
No.	Description	Material	Note			
29	Wear ring A	Special resin				
30	Wear ring B	Special resin				
31)	Piston seal	NBR				
32	Scraper	NBR				
33	O-ring	NBR				
34	O-ring	NBR				
35	Cushion seal	NBR				

Replacement Parts: Seal Kit

ricpiacement raits. Ocal tit				
Bore size (mm)	Part no.	Contents		
15	REBH15-PS	Set of nos. 29, 30,		
25	REBH25-PS	31, 32, 33, 34, 35		

Note) Cushion seal 35 may be difficult to be replaced.


* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Sine Rodless Cylinder/Linear Guide Type

REBH Series Double axis type: Ø25, Ø32

Construction

Double axis type: ø25, ø32

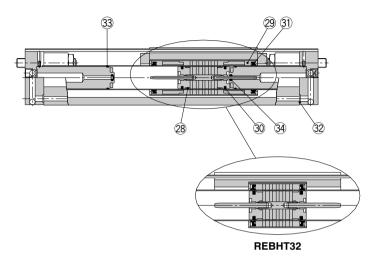

* The numbers correspond with those in the "Construction" of the REBH series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note		
28	Wear ring A	Special resin			
29	Wear ring B	Special resin			
30	Piston seal	NBR			
31)	Scraper	NBR			
32	O-ring	NBR			
33	O-ring	NBR			
34	Cushion seal	NBR			

Replacement Parts: Seal Kit

riopiacoment i arter eca rut				
Bore size (mm)	Part no.	Contents		
25	REBHT25-PS	Set of nos.		
32	REBHT32-PS	28, 29, 30, 31, 32, 33, 34		

Note) Cushion seal 34 may be difficult to be replaced.


* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Sine Cylinder

REC Series ©20, ©25, ©32, ©40



Construction

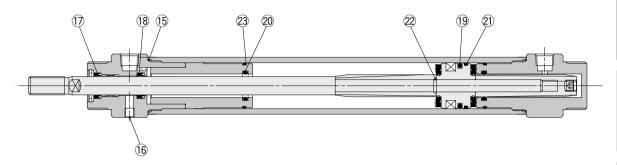

* The numbers correspond with those in the "Construction" of the REC series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
15	Cylinder tube gasket	NBR	2	
16	Hexagon socket head set screw	Carbon steel	1	
17	Rod seal A	NBR	1	16, 18 and 22 are
18	Rod seal B	NBR	1	non-replaceable
19	Piston seal	NBR	1	parts, so they
20	Cushion seal	NBR	2	are not included
21)	Wear ring	Resin	1	in the seal kit.
22	Piston gasket	NBR	1	
23	Holder gasket	NBR	2	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	REC20-PS	
25	REC25-PS	Set of nos.
32	REC32-PS	15, 17, 19, 20, 21, 23
40	REC40-PS	

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)

△ Caution


When disassembling cylinders with bore sizes of ø20 to ø40, grip the double flat part of either the tube cover or the rod cover with a vise and loosen the other side with a wrench or an adjustable angle wrench, and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

High Power Cylinder

RHC Series ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100



Construction

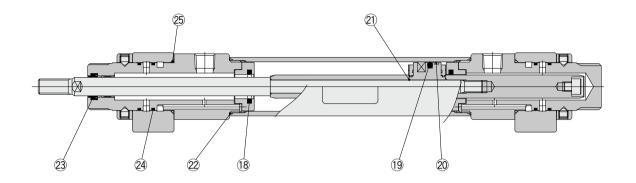

* The numbers correspond with those in the "Construction" of the RHC series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Qty.	Note
18	Cushion seal	Special resin	2	
19	Piston seal	NBR	1	
20	Wear ring	Resin	1	21 is a
21	Piston gasket	NBR	_	non-replaceable part, so it is not
22	Cylinder tube gasket	NBR	2	included in the
23	Rod seal	NBR	1	seal kit.
24)	O-ring	NBR	4	
25	O-ring	NBR	2	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	RHC20-PS	
25	RHC25-PS	Set of nos. 18, 19,
32	RHC32-PS	20, 22, 23, 24, 25
40	RHC40-PS	

* The seal kit includes a grease pack (10 g). Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

⚠ Caution

When disassembling cylinders with bore sizes of ø20 through ø40, grip the double flat part of either the rod cover or the head cover with a vise and loosen the other side with a wrench or an adjustable angle wrench, and then remove the cover. When retightening, tighten approximately 2 degrees more than the original position.






RZQ Series Ø32, Ø40, Ø50, Ø63



Construction

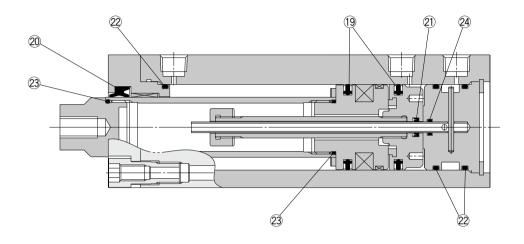

* The numbers correspond with those in the "Construction" of the RZQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
19	Piston seal		
20	Rod seal A		
21)	Rod seal B	NDD	23 is a non-replaceable
22	Gasket A	NBR	part, so it is not included in the seal kit.
23	Gasket B		included in the Sear Kit.
24)	Gasket C		

Replacement Parts: Seal Kit

riopiacoment i arto: ocai itti			
Bore size (mm)	Part no.	Contents	
32	RZQ32-PS		
40	RZQ40-PS	Set of nos.	
50	RZQ50-PS	19, 20, 21, 22, 24	
63	BZQ63-PS		

- * Seal kits are sets consisting of items (19, 20, 21, 22) and (24) and can be ordered using the seal kit number for each cylinder bore size.
- * Since the seal kit does not include a grease pack, it should be ordered


Rotary Clamp Cylinder/Standard

NK Series 912, 916, 920, 925 932, 940, 950, 963




Construction


MK12, 16

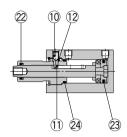

MK20 to 32

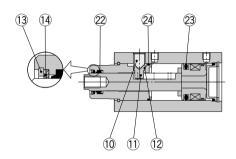

MK40 to 63

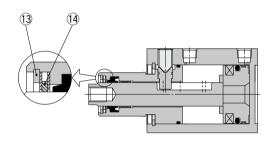

* The numbers correspond with those in the "Construction" of the MK series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
10	Hexagon socket head set screw	Chromium molybdenum steel	
11)	Guide pin	Stainless steel	
12	O-ring	NBR	13 is a
13	Round R-type retaining ring	Carbon tool steel	non-replaceable
14)	Coil scraper	Phosphor bronze	part, so it is not included in the
22	Rod seal	NBR	seal kit.
23	Piston seal	NBR	Jour Kit.
(24)	Gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
12	CQSB12-PS	Set of nos. 22, 23, 24
16	CQSB16-PS	Set of flos. 22, 23, 24
20	MK20Z-PS	
25	MK25Z-PS	
32	MK32Z-PS	
40	MK2T40-PS	Set of nos. 14, 22, 23, 24
50	MK2T50-PS	
63	MK63Z-PS	

- * The seal kit includes numbers in the table. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Guide Pin Kit

riepiacement i arts. duide i in tet			
Bore size (mm)	Part no.	Contents	
12	MK12Z-GS		
16	MK16Z-GS		
20	MK20Z-GS		
25	MK25Z-GS	Set of nos. (0, (1), (2)	
32	MK32Z-GS	Set of flos. (b), (f), (2)	
40	MK40Z-GS		
50	MK50Z-GS		
63	MK63Z-GS		

- * The guide pin kit includes numbers in the table. Order the guide pin kit based on each bore size.
- * For the replacement procedure of the replacement parts/seal and guide pin kits, refer to the Operation Manual.




MK2T Series 920, 925, 932 940, 950, 963


Rotary Clamp Cylinder/Double Guide Type

The Replacement Procedure is on p. 404

Construction

MK2T□20 to 63

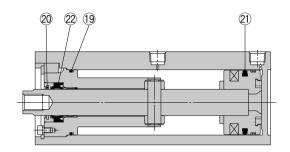

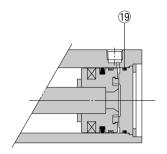

In case of clamp stroke 50 mm

* The numbers correspond with those in the "Construction" of the MK2T series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note	
19	Gasket	NBR		
20	Coil scraper	Bronze		
21)	Piston seal	NBR		
22	Rod seal	NBR		

Replacement Parts: Seal Kit

riopiacoment i arto: ocai kit				
Boı	re size (mm)	Part no.	Content	
	20	MK2T20-PS		
	25	MK2T25-PS		
	32	MK2T32-PS	Set of nos. (19, 20, 21), 22	
	40	MK2T40-PS	3et 01 110s. (9, 20, 21, 22	
	50	MK2T50-PS		
	63	MK2T63-PS		

^{*} The seal kit includes (9, 20, 2), 22. Order the seal kit based on each bore size.


CKQGD/CKQPD Series



Construction

CKQGDA50


* The below figures indicate the CKQGDA50-□RAL.

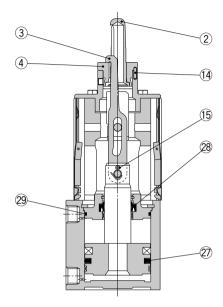

- * There's no seal kit for CLKQGDA50.
- * The numbers correspond with those in the "Construction" of the CKQ□D/CLKQ□D series in the Best Pneumatics catalog.

CKQPDA50

* The below figures indicate the CKQPDA50-□RAL.

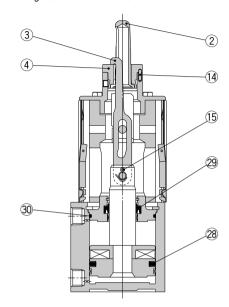

- * There's no seal kit for CLKQPDA50.
- * The numbers correspond with those in the "Construction" of the CKQDD/CLKQDD series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
27)	Piston seal		
28	Rod seal	NBR	
29	Tube gasket		

Replacement Parts: Seal Kit

Part no.	Content	
CQ2B50-PS	Set of nos. 27, 28, 29	

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ⁶ series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

* Consult SMC when replacing the actuating cylinders.

Seal Kit List

No.	Description	Material	Note	
28	Piston seal			
29	Rod seal	NBR		
30	Tube gasket]		

Replacement Parts: Seal Kit

Part no.	Content
CQ2B50-PS	Set of nos. 28, 29, 30

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ[®] series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

* Consult SMC when replacing the actuating cylinders.

Guide Pins Assembly List				
No.	Description	Material	Note	
24	Guide pins assembly	Stainless steel		
14)	Parallel pin	Tool steel		

sembly.
;

Clamp Arm Assembly List					
No.	Description	Material	Note		
3	Clamp arm	Structural steel			
15	Cotter pin	Stainless steel			



Pin Clamp Cylinder U Series 00 00


CKQGU/CKQPU Series 550



Construction

CKQGUA50


* The below figures indicate the CKQGUA50- RAL.

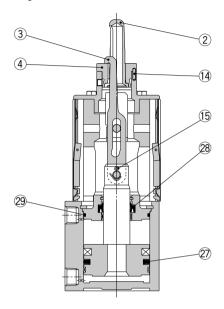

- * There's no seal kit for CLKQGUA50.
- * The numbers correspond with those in the "Construction" of the CKQ□U/CLKQ□U series in the Best Pneumatics catalog.

CKQPUA50

* The below figures indicate the CKQPUA50
RAL.

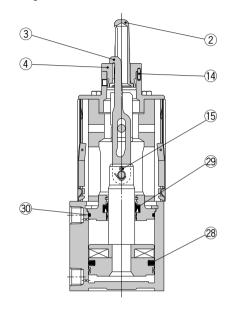

- * There's no seal kit for CLKQPUA50.
- * The numbers correspond with those in the "Construction" of the CKQ□U/CLKQ□U series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
27)	Piston seal		
28	Rod seal	NBR	
29	Tube gasket		

Replacement Parts: Seal Kit

Part no.	Content
CQ2B50-PS	Set of nos. 27, 28, 29

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ⁶ series with lock is not available.

Replacement Parts: Grease Pack

	Grease pack part no.	Content
GR-S-010		Grease 10 g (Lithium)
	•	

* Consult SMC when replacing the actuating cylinders.

Seal Kit List

No.	Description	Material	Note		
28	Piston seal				
29	Rod seal	NBR			
30	Tube gasket]			

Replacement Parts: Seal Kit

Part no.	Content
CQ2B50-PS	Set of nos. 28, 29, 30

 Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ[©]_P series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

 \ast Consult SMC when replacing the actuating cylinders.

Guide Pins Assembly List				
No.	Description	Material	Note	
24	Guide pins assembly	Stainless steel		
14)	Parallel pin Tool steel			
* Refer to page 211 for the guide pins assembly.				

Ciam	p Arm Assembly	LISU	
No.	Description	Material	Note
3	Clamp arm	Structural steel	
15	Cotter pin	Stainless steel	


CKQGK/CKQPK Series 550

The Replacement Procedure is on p. 407

Construction

CKQGKC50


* The below figures indicate the CKQGKC50-□RAL.

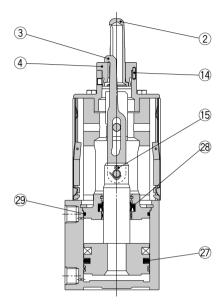

- * There's no seal kit for CLKQGKC50.
- * The numbers correspond with those in the "Construction" of the CKQ□K/CLKQ□K series in the Best Pneumatics catalog.

CKQPKC50

* The below figures indicate the CKQPKC50-□RAL.

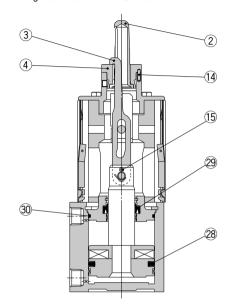

- * There's no seal kit for CLKQPKC50.
- * The numbers correspond with those in the "Construction" of the CKQ□K/CLKQ□K series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
27)	Piston seal		
28	Rod seal	NBR	
29	Tube gasket		

Replacement Parts: Seal Kit

Part no.	Content
CQ2B50-PS	Set of nos. 27, 28, 29

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ⁶ series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content	
GR-S-010	Grease 10 g (Lithium)	

* Consult SMC when replacing the actuating cylinders.

Seal Kit List

No.	Description	Material	Note
28	Piston seal		
29	Rod seal	NBR	
30	Tube gasket]	

Replacement Parts: Seal Kit

Part no.	Content
CQ2B50-PS	Set of nos. 28, 29, 30

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ[®] series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

* Consult SMC when replacing the actuating cylinders.

Guide Pins Assembly List			
No.	Description	Material	Note
24	Guide pins assembly	Stainless steel	
14)	Parallel pin	Tool steel	

sembly.
;

Clamp Arm Assembly List			
No.	Description	Material	Note
3	Clamp arm	Structural steel	
15	Cotter pin	Stainless steel	



Pin Clamp Cylinder M Series 00 00


CKQGM/CKQPM Series



Construction

CKQGMC50


* The below figures indicate the CKQGMC50
RAL.

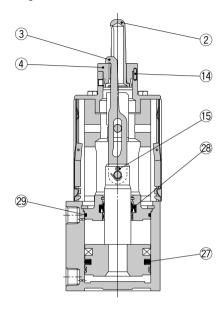

- * There's no seal kit for CLKQGMC50.
- * The numbers correspond with those in the "Construction" of the CKQ□M/CLKQ□M series in the Best Pneumatics catalog.

CKQPMC50

* The below figures indicate the CKQPMC50-□RAL.

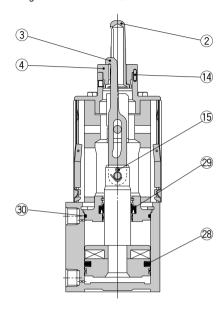

- * There's no seal kit for CLKQPMC50.
- * The numbers correspond with those in the "Construction" of the CKQ□M/CLKQ□M series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
27)	Piston seal		
28	Rod seal	NBR	
29	Tube gasket		

Replacement Parts: Seal Kit

Part no.		Content
	CQ2B50-PS	Set of nos. 27, 28, 29

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ[©]_P series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

* Consult SMC when replacing the actuating cylinders.

Seal Kit List

No.	Description	Material	Note	
28	Piston seal			
29	Rod seal	NBR		
30	Tube gasket]		

Replacement Parts: Seal Kit

-		
Part no.	Content	
CQ2B50-PS	Set of nos. 28, 29, 30	

* Consult SMC for maintenance service. Seal kit for maintenance of the CLKQ^G series with lock is not available.

Replacement Parts: Grease Pack

Grease pack part no.	Content
GR-S-010	Grease 10 g (Lithium)

 \ast Consult SMC when replacing the actuating cylinders.

Guide Pins Assembly List				
No.	No. Description Material Note			
24	Guide pins assembly	Stainless steel		
14	14 Parallel pin Tool steel			
* Refer to page 211 for the guide pins assembly.				

Clamp Arm Assembly List						
	No.	Description	Material	Note		
	3	Clamp arm	Structural steel	_		
	15	Cotter pin	Stainless steel			

CKQG/CKQP Series Guide Pins Assembly, Clamp Arm Assembly Kit Number

Guide Pins Assembly

Guide Pins	Assembly		
Kit no.	Content and o	uantity	Applicable hole diameter
KIL IIO.	Guide pins assembly	Parallel pin	and type
CKQG-R125	1	1	
CKQG-R127	1	1	
CKQG-R128	1	1	For ø13 hole
CKQG-R129	1	1	(Round/Without Shim)
CKQG-R130	1	1	
CKQG-R125S	1	1	
CKQG-R127S	1	1	
CKQG-R128S	1	1	For ø13 hole
-			(Round/With Shim)
CKQG-R129S	1	1	
CKQG-R130S	1	1	
CKQG-R145	1	1	
CKQG-R147	1	1	For ø15 hole
CKQG-R148	1	1	(Round/Without Shim)
CKQG-R149	1	1	(,
CKQG-R150	1	1	
CKQG-R145S	1	1	
CKQG-R147S	1	1	For ø15 hole
CKQG-R148S	1	1	
CKQG-R149S	1	1	(Round/With Shim)
CKQG-R150S	1	1	
CKQG-R155	1	1	
CKQG-R157	1	1	
CKQG-R158	1	1	For ø16 hole
CKQG-R159	1	1	(Round/Without Shim)
CKQG-R160	1	1	
		1	
CKQG-R155S	1		
CKQG-R157S	1	1	For ø16 hole
CKQG-R158S	1	1	(Round/With Shim)
CKQG-R159S	1	1	,
CKQG-R160S	1	1	
CKQG-R175	1	1	
CKQG-R177	1	1	For ø18 hole
CKQG-R178	1	1	(Round/Without Shim)
CKQG-R179	1	1	(Hodrid/Without Shiri)
CKQG-R180	1	1	
CKQG-R175S	1	1	
CKQG-R177S	1	1	E 401.1
CKQG-R178S	1	1	For ø18 hole
CKQG-R179S	1	1	(Round/With Shim)
CKQG-R180S	1	1	
CKQG-D175	1	1	
CKQG-D177	1	1	
CKQG-D178	1	1	For ø18 hole
			(Diamond/Without Shim)
CKQG-D179	1	1	
CKQG-D180	1	1	
CKQG-D175S	1	1	
CKQG-D177S	1	1	For ø18 hole
CKQG-D178S	1	1	(Diamond/With Shim)
CKQG-D179S	1	1	,
CKQG-D180S	1	1	
CKQG-R195	1	1	
CKQG-R197	1	1	For ago halo
CKQG-R198	1	1	For ø20 hole
CKQG-R199	1	1	(Round/Without Shim)
CKQG-R200	1	1	
CKQG-R195S	1	1	
CKQG-R197S	1	1	
CKQG-R198S	1	1	For ø20 hole
CKQG-R199S	1	1	(Round/With Shim)
-	1	1	
CKQG-R200S	1		

Kit no.	Content and q		Applicable hole diameter	
	Guide pins assembly	Parallel pin	and type	
CKQG-D195	1	1		
CKQG-D197	1	1	For ø20 hole	
CKQG-D198	1	1	(Diamond/Without Shim)	
CKQG-D199	1	1	,	
CKQG-D200	1	1		
CKQG-D195S	1	1		
CKQG-D197S	1	1	For ø20 hole	
CKQG-D198S	1	1	(Diamond/With Shim)	
CKQG-D199S	1	1	,,	
CKQG-D200S	1	1		
CKQG-R245	1	1		
CKQG-R247	1	1	For ø25 hole	
CKQG-R248	1	1	(Round/Without Shim)	
CKQG-R249	1	1	(**************************************	
CKQG-R250	1	1		
CKQG-R245S	1	1		
CKQG-R247S	1	1	For ø25 hole	
CKQG-R248S	1	1	(Round/With Shim)	
CKQG-R249S	1	1	(Hourid/With Shiff)	
CKQG-R250S	1	1		
CKQG-D245	1	1		
CKQG-D247	1	1	For ø25 hole	
CKQG-D248	1	1		
CKQG-D249	1	1	(Diamond/Without Shim)	
CKQG-D250	1	1		
CKQG-D245S	1	1		
CKQG-D247S	1	1	F05 h1-	
CKQG-D248S	1	1	For ø25 hole	
CKQG-D249S	1	1	(Diamond/With Shim)	
CKQG-D250S	1	1		
CKQG-R295	1	1		
CKQG-R297	1	1	F 00.1.1	
CKQG-R298	1	1	For ø30 hole	
CKQG-R299	1	1	(Round/Without Shim)	
CKQG-R300	1	1		
CKQG-R295S	1	1		
CKQG-R297S	1	1		
CKQG-R298S	1	1	For ø30 hole	
CKQG-R299S	1	1	(Round/With Shim)	
CKQG-R300S	1	1		
CKQG-D295	1	1		
CKQG-D297	1	1		
CKQG-D298	1	1	For ø30 hole	
CKQG-D299	1	1	(Diamond/Without Shim)	
CKQG-D300	1	1		
CKQG-D295S	1	1		
CKQG-D297S	1	1		
CKQG-D297S	1	1	For ø30 hole	
CKQG-D298S	1	1	(Diamond/With Shim)	
CKQG-D300S	1	1		
ONQG-D3005	ı	- 1		

Clamp Arm Assembly


Kit no.	Content and quantity		Applicable hole
KILTIO.	Clamp arm	Cotter pin	diameter
CKQG-13A	1	1	For ø13 hole
CKQG-15A	1	1	For ø15 hole
CKQG-16A	1	1	For ø16 hole
CKQG-18A	1	1	For ø18 hole
CKQG-20A	1	1	For ø20 hole
CKQG-25A	1	1	For ø25 hole
CKQG-30A	1	1	For ø30 hole



CKQG32 Series 932

Construction

CKQG = 32-100R = H-X2082

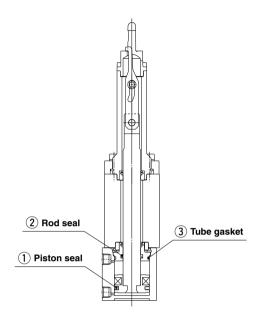

Replacement Parts: Seal Kit

Part no.	Contents
CQ2B32-PS	①Piston seal ②Rod seal ③Tube gasket

^{*} The seal kit includes ①, ②, ③. Since the seal kit does not include a grease pack, order the "Grease Pack" separately.

Replacement Parts: Grease Pack

Part no.	Contents
GR-S-010	Grease 10 g


^{*} Consult with SMC when replacing the actuating cylinders.

Pin Clamp Cylinder/Plate Cylinder Type

CKU32 Series 932

Construction

CKU32-120R L-X2091

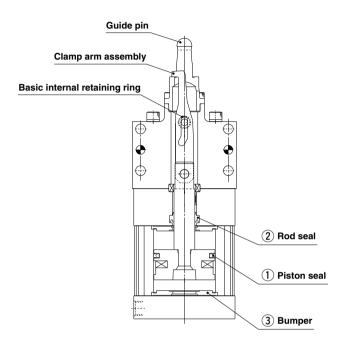

Replacement Parts: Seal Kit

neplacement Farts. Seal Kit			
Part no.	Contents		
MUB32-PS	①Piston seal ②Rod seal ③Bumper		

 $[\]ast$ The seal kit includes 1, 2, 3. Since the seal kit does not include a grease pack, order the "Grease Pack" separately.

Replacement Parts: Grease Pack


Part no.	Contents
GR-S-010	Grease 10 g


^{*} Consult with SMC when replacing the actuating cylinders.

CKG1/CKP1 Series 040, 050, 063

Construction

 CKG1 40, 50, 63 Built-in standard magnet type/With magnetic field resistant auto switch

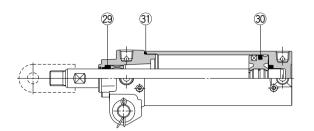



* The numbers correspond with those in the "Construction" of the CKG1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
29	Rod seal		
30	Piston seal	NBR	
31)	Tube gasket		


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
40	CK1A40-PS	Set of nos.		
50	CK1A50-PS	29, 30, 31		
63	CK1A63-PS	29, 30, 31		

Note) Since the seal kit does not come with a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (compatible with all sizes)

CKP1 40, 50, 63 Built-in strong magnet type/With magnetic field resistant auto switch

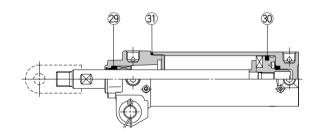

* The numbers correspond with those in the "Construction" of the CKP1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
29	Rod seal		
30	Piston seal	NBR	
31)	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	CK1A40-PS	Set of nos.
50	CK1A50-PS	29, 30, 31
63	CK1A63-PS	(3), (3), (3)

Note) Since the seal kit does not come with a grease pack, it should be ordered separately.


Grease pack part no.: GR-S-010 (compatible with all sizes)

Clamp Cylinder/Basic Type: Built-in Standard Magnet Type Magnetic Field Resistant Auto Switch (Band Mounting)

CK1/CKG1 Series 040, 050, 063

Construction

CK1□40, 50, 63 Basic type/CKG1□40, 50, 63 Built-in standard magnet type

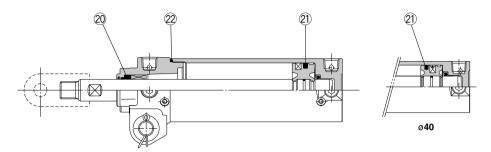

* The numbers correspond with those in the "Construction" of the CK□1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
20	Rod seal		
21)	Piston seal	NBR	
22	Tube gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents		
40	CK1A40-PS	Set of nos.		
50	CK1A50-PS	20, 21, 22		
63	CK1A63-PS	١ ١ ١ ١ ١ ١ ١		

Note) Since the seal kit does not come with a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (compatible with all sizes)


RSQ Series ©12, Ø16, Ø20, Ø32, Ø40, Ø50


Stopper Cylinder/Fixed Mounting Height


Replacement Procedure is on p. 418


Construction

Roller rod end

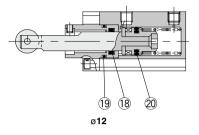

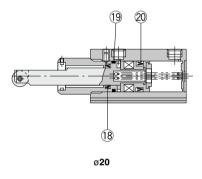

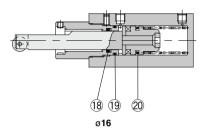

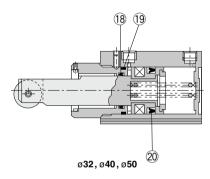

* The numbers correspond with those in the "Construction" of the RSQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Rod seal		
19	Gasket	NBR	
20	Piston seal		

Replacement Parts: Seal Kit

D					
Bore size (mm)	Double acting	Double acting with spring loaded	Single acting	Contents	
12	RSQ12D-PS	RSQ1	2T-PS		
16	RSQ16D-PS	RSQ16B-PS	RSQ16T-PS	0-4-4	
20	RSQ20D-PS	RSQ20B-PS	RSQ20T-PS	Set of	
32	RSQ32D-PS	RSQ32B-PS	RSQ32T-PS	nos. 18, 19, 20	
40	RSQ40D-PS	RSQ40B-PS	RSQ40T-PS	10, 10, 10	
50	RSQ50D-PS	RSQ50B-PS	RSQ50T-PS		

- * The seal kit includes ®, ®, . Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Shock Absorber

Bore size (mm)	Part no.	
32	RB1007-X225	
40.50	RB1407-X552	


Stopper Cylinder/Adjustable Mounting Height

RSG Series 040,050



Construction

Roller rod end

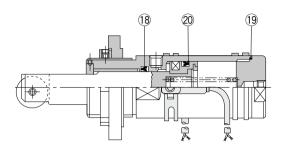

* The numbers correspond with those in the "Construction" of the RSG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
18	Rod seal		
19	Gasket	NBR	
20	Piston seal		

Replacement Parts: Seal Kit

Dave size				
Bore size (mm)	Double acting	Double acting with spring loaded	Single acting	Contents
40	RSG40D-PS	RSG40B-PS	RSG40T-PS	Set of
50	RSG50D-PS	RSG50B-PS	RSG50T-PS	nos. 18, 19, 20

- * The seal kit includes 8, 9, 20. Order the seal kit based on each bore size
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Shock Absorber

Bore size (mm)	Part no.	
40. 50	RB1407-X552	


RSH Series

ø**20**, ø**32**



Construction

ø20, ø32 Double acting (DL, DM)

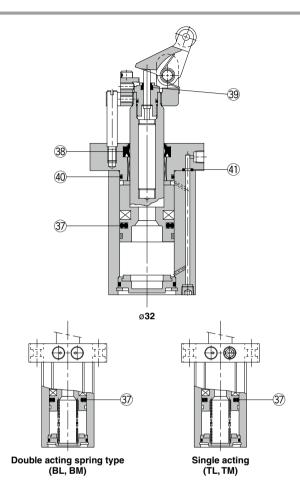

* The numbers correspond with those in the "Construction" of the RSH/RS1H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
37)	Piston seal		
38	Rod seal		38 is a non-replaceable
39	Scraper	NBR	part, so it is not
40	Tube gasket		included in the seal kit.
41	O-ring]	

Replacement Parts: Shock Absorber

Bore size (mm)	Part no.	
20	RSH-R20	
32	RSH-R32	

Replacement Parts: Seal Kit

Dava siza		Part no.		
Bore size (mm)	Double acting	Double acting spring type	Single acting	Contents
20	RSH20D-PS	RSH20T-PS		Set of nos.
32	RSH32D-PS	RSH32T-PS		37, 39, 40, 41

- * The seal kit includes ③, ④, ④) for ø20 to ø32. Order the seal kit based on each bore size.
- \ast Since the seal kit does not include a grease pack, it should be ordered separately.


Grease pack part no.: GR-S-010 (10 g)


RS2H Series ©50, ©63, ©80

 


Construction

Double acting (DL, DM)

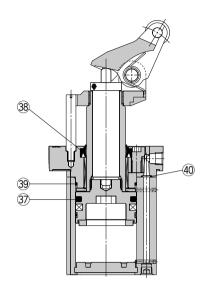

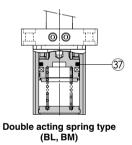



* The numbers correspond with those in the "Construction" of the RS2H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
37)	Piston seal	NBR	38 is a non-replaceable part, so it is not included in the seal kit.
38	Rod seal		
39	Tube gasket		
40	O-ring		

Replacement Parts: Seal Kit

D		Part no.		
Bore size (mm)	Double acting	Double acting spring type	Single acting	Contents
50	RS2H50D-PS	RS2H50T-PS		Cat of non
63	RS2H63D-PS			Set of nos. 37, 39, 40
80	RS2H80D-PS			50, 59, 40

- * The seal kit includes 37, 39, 40 for ø50 to ø80. Order the seal kit based on each bore size.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: Shock Absorber

Bore size (mm)	Part no.
50	RS2H-R50
63	RS2H-R63
80	RS2H-R80





MIW Series Ø8, Ø12, Ø20, Ø25, Ø32



Construction

Option

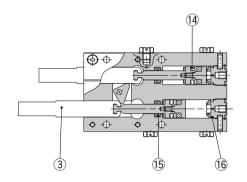

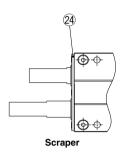

* The numbers correspond with those in the "Construction" of the MIW/MIS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
3	Finger	Carbon steel	Heat treatment/Special treatment
14)	Piston seal	NBR	3 is not included in the seal kit.
15	Rod seal	NBR	Order it as required with the
(16)	Gasket	NBR	individual part number provided.

Option: Scraper

No.	Description	Material	Note
INO.	Description	Material	Note
24	Scraper	Stainless steel + NBR	


Description		Finger		Seal kit	Caranar assambly	Crosse neek
Model	Standard	Tapped on upper and lower faces	Tapped on all faces	Sear Kit	Scraper assembly	Grease pack
MIW8-8D	MI-A0801-8	MI-A0802-8	MI-A0803-8	MIW8-PS	MIW-A0804	
MIW12-12D	MI-A1201-12	MI-A1202-12	MI-A1203-12	MIW12-PS	MIW-A1204	MH-G01
MIW20-20D	MI-A2001-20	MI-A2002-20	MI-A2003-20	MIW20-PS	MIW-A2004	(contents quantity 30 q)
MIW25-25D	MI-A2501-25	MI-A2502-25	MI-A2503-25	MIW25-PS	MIW-A2504	(contents quantity 50 g)
MIW32-32D	MI-A3201-32	MI-A3202-32	MI-A3203-32	MIW32-PS	MIW-A3204	
Main parts No.		③ (1 pc.)		14, 15, 16	24	

Escapements/Single Finger Type

MIS Series (08, 012, 020, 025, 032)



Construction

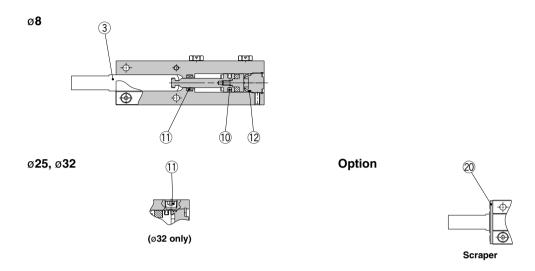

* The numbers correspond with those in the "Construction" of the MIW/MIS series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
3	Finger	Carbon steel	Heat treatment/Special treatment
10	Piston seal	NBR	3 is not included in the seal kit.
11	Rod seal	NBR	Order it as required with the
(12)	Gasket	NBR	individual part number provided.

Option: Scraper

No.	Description	Material	Note
20	Scraper	Stainless steel + NBR	


Description		Finger		Seal kit	Scraper assembly	Grease pack
Model	Standard	Tapped on upper and lower faces	Tapped on all faces	Seai Kil	Scraper assembly	Grease pack
MIS8-10D	MI-A0801-10	MI-A0802-10	MI-A0803-10	MIS8-PS	MIS-A0804	
MIS8-20D	MI-A0801-20	MI-A0802-20	MI-A0803-20	WIIOO-FO	WII3-A0004	
MIS12-10D	MI-A1201-10	MI-A1202-10	MI-A1203-10			
MIS12-20D	MI-A1201-20	MI-A1202-20	MI-A1203-20	MIS12-PS	MIS-A1204	
MIS12-30D	MI-A1201-30	MI-A1202-30	MI-A1203-30			
MIS20-10D	MI-A2001-10	MI-A2002-10	MI-A2003-10			MH-G01
MIS20-20D	MI-A2001-20	MI-A2002-20	MI-A2003-20	MIS20-PS	MIS-A2004	(contents quantity 30 g)
MIS20-30D	MI-A2001-30	MI-A2002-30	MI-A2003-30			
MIS25-30D	MI-A2501-30	MI-A2502-30	MI-A2503-30	MIS25-PS	MIS-A2504	
MIS25-50D	MI-A2501-50	MI-A2502-50	MI-A2503-50	WII323-F3	WIIS-A2504	
MIS32-30D	MI-A3201-30	MI-A3202-30	MI-A3203-30	MIS32-PS	MIS-A3204	
MIS32-50D	MI-A3201-50	MI-A3202-50	MI-A3203-50	IVII 332-F3	WIIG-A3204	
Main parts No.		③ (1 pc.)		10, 11, 12	20	

CVQ Series Ø32, Ø40, Ø50, Ø63



Construction

Basic type

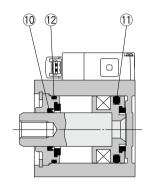

* The numbers correspond with those in the "Construction" of the CVQ series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
10	Rod seal		
11	Piston seal	NBR	
12	Gasket		

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
32	CQ2B32-PS	
40	CQ2B40-PS	Set of nos.
50	CQ2B50-PS	10, 11, 12
63	CQ2B63-PS	

* The seal kit includes ①, ①, ②. Order the seal kit based on each bore size.

Grease pack part no.: GR-S-010 (10 g)


^{*} Grease pack should be ordered separately as it is not included in the

Valve Mounted Cylinder/Double Acting, Single Rod

CVM5 Series ©20, ©25, ©32, ©40



Construction

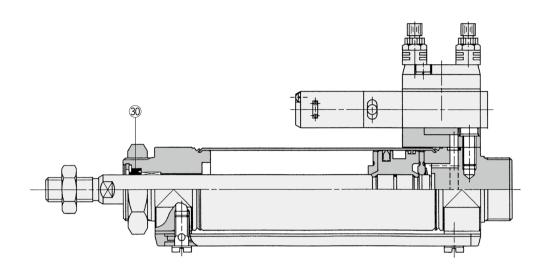

^{*} The number corresponds with that in the "Construction" of the CVM5 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
30	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM220-PS	
25	CM225-PS	
32	CM232-PS	
40	CM240-PS	

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Grease pack part no.: GR-S-010 (10 g)

CVM5K Series

ø20, ø25 ø32, ø40



Construction

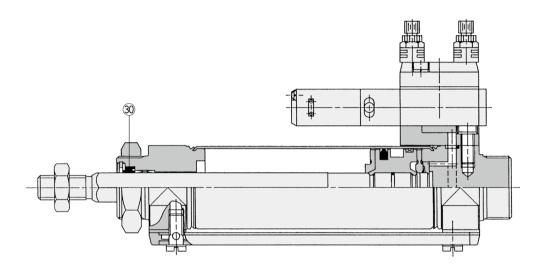

* The number corresponds with that in the "Construction" of the CVM5K series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
30	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
20	CM2K20-PS	
25	CM2K25-PS	
32	CM2K32-PS	
40	CM2K40-PS	

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Actuator


Valve Mounted Cylinder/Single Acting, Spring Return/Extend

CVM3 Series ©20, ©25, ©32, ©40




Construction

Spring return

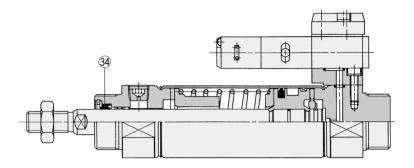

Spring extend

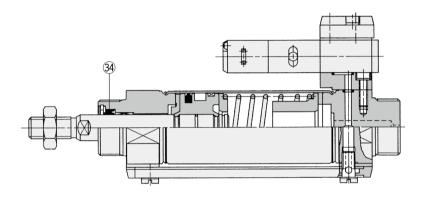

* The numbers correspond with those in the "Construction" of the CVM3 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
34	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
20	CM220-PS				
25	CM225-PS				
32	CM232-PS				
40	CM240-PS				

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Grease pack part no.: GR-S-010 (10 g)

CVM3K Series ©20, ©25 ©32, ©40


The Replacement Procedure is on p. 313

Construction

Spring return

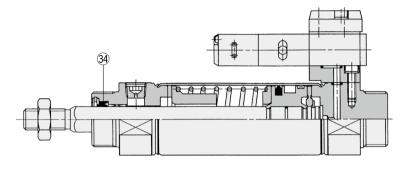

Spring extend

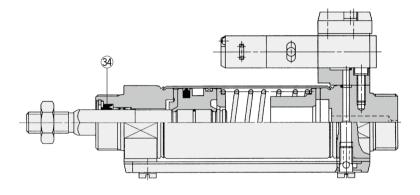

* The numbers correspond with those in the "Construction" of the CVM3K series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
34)	Rod seal	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents			
20	CM2K20-PS				
25	CM2K25-PS				
32	CM2K32-PS				
40	CM2K40-PS				

 $[\]ast$ Since the seal kit does not include a grease pack, it should be ordered separately.


Grease pack part no.: GR-S-010 (10 g)

Valve Mounted Cylinder/Double Acting

CV3 Series Lube, Non-lube type: @40, @50, @63, @80, @100

Construction

Lube type

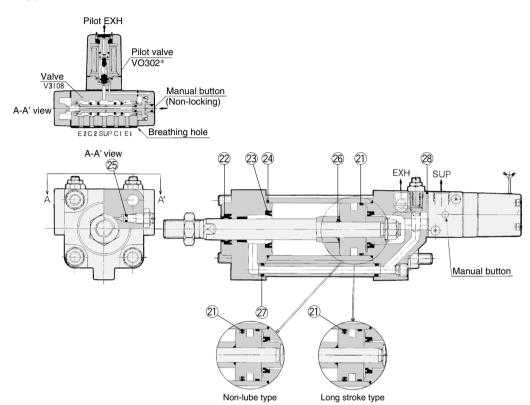

* The numbers correspond with those in the "Construction" of the CV3 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note		
21)	Piston seal				
22	Rod seal				
23	Cushion seal		23 and 26 are		
24	Cylinder tube gasket	NBR	non-replaceable parts, so		
25	Cushion valve seal	NBK	they are not included in		
26	Piston gasket		the seal kit.		
27)	Pipe gasket				
28	Head cover gasket				

Replacement Parts: Seal Kit

Bore size (mm) Part no.		Contents
Lube type		
40	CV3-40-PS	
50	CV3-50-PS	Set of nos.
63	CV3-63-PS	21), 22, 24, 25, 27, 28
80	CV3-80-PS	<i>U</i> , <i>w</i> , <i>w</i> , <i>w</i> , <i>w</i>
100	CV3-100-PS	
Non-lube type		
40	CV3N40-PS	
50	CV3N50-PS Set of nos.	
63	CV3N63-PS	21), 22, 24, 25, 27, 28
80	CV3N80-PS	
100	CV3N100-PS	


- * The seal kit includes ②, ②, ②, ②, ②, ②. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).

Order with one of the following part numbers when only the grease pack



CV3K Series Non-lube Type: Ø40, Ø50, Ø63

Construction

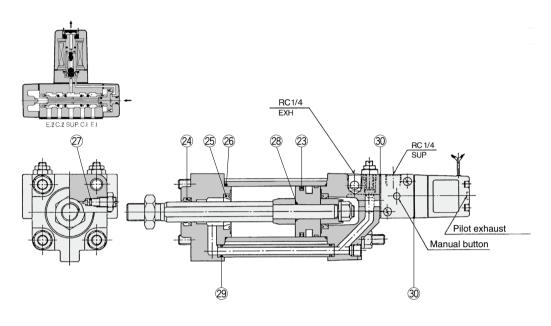

* The numbers correspond with those in the "Construction" of the CV3K series in the Best Pneumatics catalog.

Seal Kit List

O C G	TAIL FIOL		
No.	Description	Material	Note
23	Piston seal		
24)	Rod seal		
25	Cushion seal		25 and 28 are
26	Cylinder tube gasket	NBR	non-replaceable parts, so
27	Cushion valve seal	NDN	they are not included in
28	Piston gasket		the seal kit.
29	Pipe gasket		
30	Head cover gasket		

Disassembly/Replacement

1. Please consult with SMC when the rod seal is to be replaced.

When the rod seal is to be replaced, make sure that the seal's width across flats matches that of the non-rotating guide.

A rod seal may allow air leakage depending on the position where it is installed. Therefore, please consult with SMC when a rod seal is to be replaced.

2. Do not replace the non-rotating guide.

Since the non-rotating guide is press fitted, the entire cover assembly needs be replaced instead of a single part.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	CV3K40-PS	Set of nos.
50	CV3K50-PS	3, 24, 26, 27, 29, 30
63	CV3K63-PS	6, 6, 6, 6, 6, 6


- * The seal kit includes 3, 4, 6, 2, 9, 3. Order the seal kit based on
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63 or more: 20 g). Order with one of the following part numbers when only the grease pack

Valve Mounted Cylinder/Double Acting

CVS1 Series Lube, Non-lube Type: Ø40, Ø50 Ø63, Ø80,

ø63, ø80, ø100

Construction

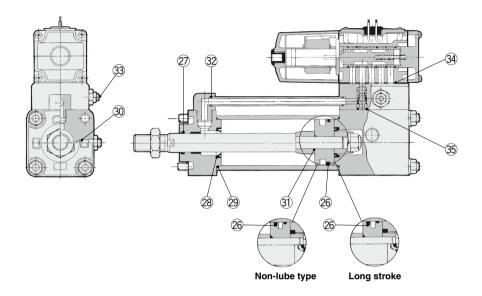

* The numbers correspond with those in the "Construction" of the CVS1 series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note		
26	Piston seal				
27)	Rod seal				
28	Cushion seal				
29	Cylinder tube gasket		28, 31, 33 and 34 are		
30	Cushion valve seal	NBR	non-replaceable parts, so		
31	Piston gasket	INDI	they are not included in		
32	Pipe gasket		the seal kit.		
33	Speed adjustment valve seal				
34	Gasket				
35	Valve port gasket				

Replacement Parts: Seal Kit


100

Bore size (mm)	Part no.	Contents	
Lube type			
40			
50	CVS1-50-PS	Set of nos.	
63	CVS1-63-PS	26, 27, 29, 30, 32, 35	
80	CVS1-80-PS		
100	CVS1-100-PS		
Non-lube type			
40	CVS1N40-PS		
50	CVS1N50-PS	Set of nos.	
63	CVS1N63-PS	26, 27, 29, 30, 32, 35	
80	CVS1N80-PS	20, 20, 29, 30, 32, 33	

- CVS1N100-PS * The seal kit includes 26, 27, 29, 30, 32, 35. Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g).
- Order with one of the following part numbers when only the grease pack is required.



Construction

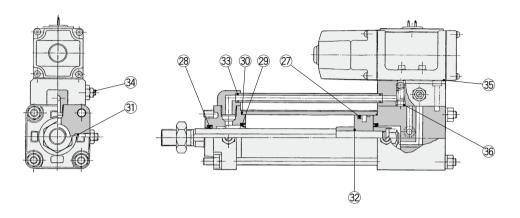

* The numbers correspond with those in the "Construction" of the CVS1K series in the Best Pneumatics catalog.

Seal Kit List

Ocal Itit Elot				
No.	Description	Material	Note	
27)	Piston seal			
28	Rod seal			
29	Cushion seal			
30	Cylinder tube gasket		29, 32, 34 and 35 are	
31)	Cushion valve seal	NBR	non-replaceable parts, so	
32	Piston gasket	INDI	they are not included in	
33	Pipe gasket		the seal kit.	
34	Speed adjustment valve seal			
35	Gasket			
36	Valve port gasket			

Disassembly/Replacement

 Please consult with SMC when the rod seal is to be replaced.

When the rod seal is to be replaced, make sure that the seal's width across flats matches that of the non-rotating guide.

A rod seal may allow air leakage depending on the position where it is installed. Therefore, please consult with SMC when a rod seal is to be replaced.

2. Do not replace the non-rotating guide.

Since the non-rotating guide is press fitted, the entire cover assembly needs be replaced instead of a single part.

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents
40	CVS1K40-PS	Set of nos.
50	CVS1K50-PS	27, 28, 30, 31, 33, 36
63	CVS1K63-PS	20, 20, 30, 50, 30, 30


- * The seal kit includes \mathfrak{D} , \mathfrak{B} , \mathfrak{B} , \mathfrak{B} , \mathfrak{B} . Order the seal kit based on each bore size.
- * The seal kit includes a grease pack (ø40, ø50: 10 g, ø63 or more: 20 g). Order with one of the following part numbers when only the grease pack is required.

Compact Hydraulic Cylinder/Double Acting, Single Rod


CH QB Series ©20, ©32, ©40 ©50, ©63, ©80, ©100

Construction

CH□QB20

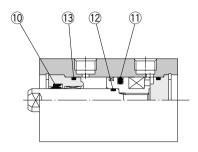

CH□QB32 to CH□QB100

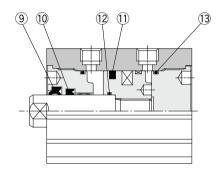

* The numbers correspond with those in the "Construction" of the CHQB series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
9	Scraper		
10	Rod seal		12 is a non-replaceable
11)	Piston seal	NBR	part, so it is not included
12	Piston gasket		in the seal kit.
(13)	Tube gasket		

Replacement Parts: Seal Kit

Part no.	Content
CHQ20-PS	
CHQ32-PS	
CHQ40-PS	Cat of man
CHQ50-PS	Set of nos. (9), (10), (11), (13)
CHQ63-PS	9, 10, 11, 13
CHQ80-PS	
CHQ100-PS	
	CHQ20-PS CHQ32-PS CHQ40-PS CHQ50-PS CHQ63-PS CHQ80-PS

* The seal kit consists of items 9, 10, 11 and 13 and can be ordered by using the seal kit number for each bore size.

Cover Tightening Torque

Bore size (mm)	Tightening torque (N·m)	
32	12.5 ± 1.2	
40	74.5 ± 7.4	
50	100 ± 10	
63	100 ± 10	
80	411 ± 41	
100	411±41	

^{*} Reassemble the cover with the above tightening torques.




^{*} Special tool required for disassembly. Contact SMC for recommended tool designs and dimensions.


CH QWB Series ©20, Ø32, Ø40 Ø50, Ø63, Ø80, Ø100

Construction

CH□QWB20

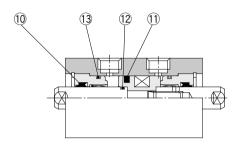

CH□QWB32 to CH□QWB100

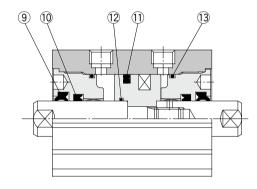

* The numbers correspond with those in the "Construction" of the CH \square QWB series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
9	Scraper		
10	Rod seal		12 is a non-replaceable
11	Piston seal	NBR	part, so it is not included
12	Piston gasket		in the seal kit.
13	Tube gasket]	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Content
20	CHQW20-PS	
32	CHQW32-PS	
40	CHQW40-PS	Set of nos.
50	CHQW50-PS	9, 10, 11, 13
63	CHQW63-PS	(a), (b), (t), (b)
80	CHQW80-PS	
100	CHQW100-PS	

- * The seal kit consists of items (9), (0), (1) and (3) and can be ordered by using the seal kit number for each bore size.
- * Special tool required for disassembly. Contact SMC for recommended tool designs and dimensions.

Cover Tightening Torque

OUTUR TIGHT	9 . 0. 9	
Bore size (mm)	Tightening torque (N·m)	
32	12.5 ± 1.2	
40	74.5 ± 7.4	
50	100 ± 10	
63	100 ± 10	
80	411 ± 41	
100	411±41	

 $[\]ast$ Reassemble the cover with the above tightening torques.


JIS Standard Compact Hydraulic Cylinder

CH \square **KD** Series

Ø20, Ø25 Ø32, Ø40 Ø50, Ø63 Ø80, Ø100



Construction

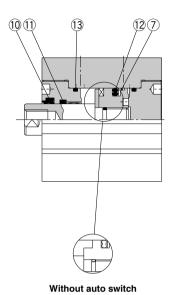

* The numbers correspond with those in the "Construction" of the CH□KD series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
7	Back-up ring	Resin	
10	Scraper		
11)	Rod seal	NBR	
12	Piston seal	INDR	
13	Tube gasket		

Bore size (mm)	Part no.	Content		
20	CHKD20-PS			
25	CHKD25-PS			
32	CHKD32-PS			
40	CHKD40-PS	Set of nos.		
50	CHKD50-PS	7, 10, 11, 12, 13		
63	CHKD63-PS			
80	CHKD80-PS			
100	CHKD100-PS			

^{*} The seal kit consists of items \bigcirc , \bigcirc , \bigcirc , \bigcirc , \bigcirc , and \bigcirc , and can be ordered by using the seal kit number for each bore size.





^{*} Special tools are necessary for disassembly. Contact SMC for recommended tool designs and dimensions. Furthermore, ø80 and ø100 are tightened with a large tightening torque, so disassembly will be difficult. Contact SMC if disassembly is required.

CH \square **KG** Series

Compact Hydraulic Cylinder

Construction

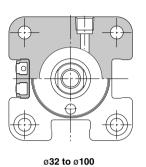

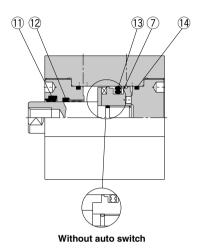

ø20, ø25

ø32, ø40

ø50, ø63

ø**80**, ø**100**

* The numbers correspond with those in the "Construction" of the CH□KG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
7	Back-up ring	Resin	
11	Scraper		
12	Rod seal	NBR	
13	Piston seal	INDR	
14)	Tube gasket		

neplacement Parts. Sear Kit					
Bore size (mm)	Part no.	Content			
20	CHKG20-PS				
25	CHKG25-PS				
32	CHKG32-PS				
40	CHKG40-PS	Set of nos.			
50	CHKG50-PS	7, 11, 12, 13, 14			
63	CHKG63-PS				
80	CHKG80-PS				
100	CHKG100-PS				


- * The seal kit consists of items ⑦, ⑪, ⑫, ⑬ and ⑭ and can be ordered by using the seal kit number for each bore size.
- * Special tools are necessary for disassembly. Contact SMC for recommended tool designs and dimensions. Furthermore, ø80 and ø100 are tightened with a large tightening torque, so disassembly will be difficult. Contact SMC if disassembly is required.

Small Bore Hydraulic Cylinder

CHN Series ©20, ©25, ©32, ©40



Construction

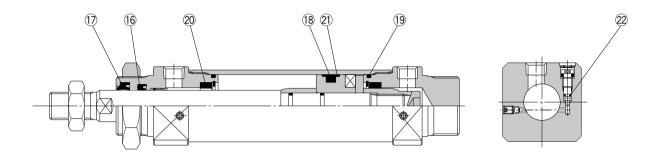

* The numbers correspond with those in the "Construction" of the CHN series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Rod seal	NBR	
17	Scraper	NBR	
18	Piston seal	NBR	21 is a non-replaceable
19	Tube gasket	NBR	part, so it is not included
20	Cushion seal	_	in the seal kit.
21	Back-up ring	Resin	
22	Cushion valve seal A	NBR	

Bore size (mm)	Part no.	Content
20	CHN20-PS	
25	CHN25-PS	Set of nos.
32	CHN32-PS	16, 17, 18, 19, 20, 22
40	CHN40-PS	

^{*} The seal kit consists of items 16 to 20 and 22 and can be ordered by using the seal kit number for each bore size.


ISO Standard Hydraulic Cylinder


CHSD Series %40, %50, %63 %80, %100



Construction

CH SDB

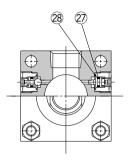

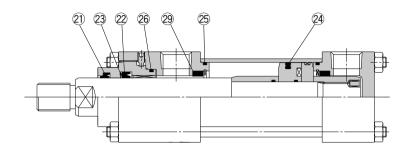

* The numbers correspond with those in the "Construction" of the CHSD series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
21)	Scraper	NBR	
22	Rod seal	NBR	
23	Back-up ring	Resin	
24	Piston seal	NBR	26, 27 and 28 are
25	Cylinder tube gasket	NBR	non-replaceable parts, so they are not included in
26	Holder gasket	NBR	the seal kit.
27	Valve seal	NBR	the scarkit.
28	Valve holder gasket	NBR	
29	Cushion seal	_	

Bore size (mm)	Part no.	Contents
40	CHSD40-PS	
50	CHSD50-PS	Set of nos. 2), 22, 23, 24, 25, 29
63	CHSD63-PS	
80	CHSD80-PS	0, 2, 0, 6, 6, 6
100	CHSD100-PS	

^{*} The seal kit consists of items ② to ⑤ and ②, and can be ordered by using the seal kit number for each bore size.


ISO Standard Hydraulic Cylinder


CHSG Series ©32, Ø40, Ø50 Ø63, Ø80, Ø100



Construction

CH SGB

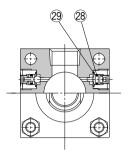

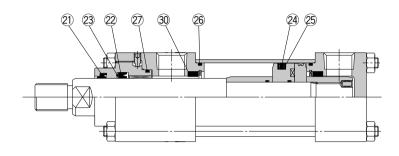

* The numbers correspond with those in the "Construction" of the CHSG series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
21)	Scraper	NBR	
22	Rod seal	NBR	
23	Back-up ring	Resin	
24	Piston seal	NBR	27, 28 and 29 are
25	Back-up ring	Resin	non-replaceable parts, so
26	Cylinder tube gasket	NBR	they are not included in
27	Holder gasket	NBR	the seal kit.
28	Valve seal	NBR	
29	Valve holder gasket	NBR	
30	Cushion seal	_	


Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Contents	
32	CHSG32-PS		
40	CHSG40-PS		
50	CHSG50-PS	Set of nos.	
63	CHSG63-PS	21, 22, 23, 24, 25, 26, 30	
80	CHSG80-PS		
100	CHSG100-PS		

* The seal kit consists of items 20 to 26 and 30, and can be ordered by using the seal kit number for each bore size.

Ø32, Ø40 Ø50, Ø63 Ø80, Ø100

Construction

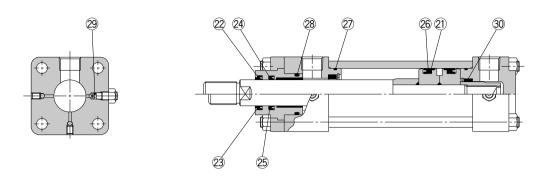

* The numbers correspond with those in the "Construction" of the CH2E/CH2F/CH2G/CH2H series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
21)	Back-up ring	Resin	
22	Scraper (B-series rod)	NBR	
23	Scraper (C-series rod)	NBR	
24	Rod seal (B-series rod)	NBR	
25	Rod seal (C-series rod)	NBR	
26	Piston seal	NBR	
27)	Cylinder tube gasket	NBR	
28	Holder gasket	NBR	
29	Cushion valve seal	NBR	
30	Cushion seal	_	

Bore size	Part no.		Content	
(mm)	(mm) B-series rod C-ser		Content	
	CH2E32B-PS			
32	CH2F32B-PS			
32	CH2G32B-PS			
	CH2H32B-PS			
	CH2E40B-PS	CH2E40C-PS		
40	CH2F40B-PS	CH2F40C-PS		
40	CH2G40B-PS	CH2G40C-PS		
	CH2H40B-PS	CH2H40C-PS		
	CH2E50B-PS	CH2E50C-PS	B-series rod:	
50	CH2F50B-PS	CH2F50C-PS	Set of nos.	
30	CH2G50B-PS	CH2G50C-PS	21, 22, 24, 26, 27, 28, 29, 30	
	CH2H50B-PS	CH2H50C-PS	(2), (2), (3), (3)	
	CH2E63B-PS	CH2E63C-PS	C-series rod:	
63	CH2F63B-PS	CH2F63C-PS	Set of nos.	
03	CH2G63B-PS	CH2G63C-PS	21, 23, 25, 26,	
	CH2H63B-PS	CH2H63C-PS	27, 28, 29, 30	
	CH2E80B-PS	CH2E80C-PS		
80	CH2F80B-PS	CH2F80C-PS		
00	CH2G80B-PS	CH2G80C-PS		
	CH2H80B-PS	CH2H80C-PS		
	CH2E100B-PS	CH2E100C-PS		
100	CH2F100B-PS	CH2F100C-PS		
100	CH2G100B-PS	CH2G100C-PS		
	CH2H100B-PS	CH2H100C-PS		
The seal kit consists of items ② through ③ and can be ordered by using				

^{*} The seal kit consists of items ② through ③ and can be ordered by using the seal kit number for each bore size.


JIS Standard Hydraulic Cylinder/Double Acting, Double Rod

CH2EW/CH2FW Series

ø32, ø40 ø50, ø63 ø80, ø100



Construction

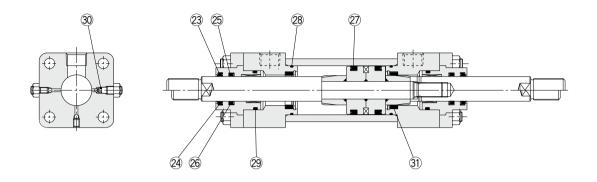

* The numbers correspond with those in the "Construction" of the CH2EW/CH2FW series in the Best Pneumatics catalog.


Seal Kit List


No.	Description	Material	Note
23	Scraper (B-series rod)	NBR	
24	Scraper (C-series rod)	NBR	
25	Rod seal (B-series rod)	NBR	
26	Rod seal (C-series rod)	NBR	
27)	Piston seal	NBR	
28	Cylinder tube gasket	NBR	
29	Holder gasket	NBR	
30	Cushion valve seal	NBR	
31)	Cushion seal	_	

neplacement i arts: ocai kit					
Bore size	Pari	Content			
(mm)	B-series rod	C-series rod	Content		
40	CH2EW40B-PS	CH2EW40C-PS			
40	CH2FW40B-PS	CH2FW40C-PS	B-series rod:		
50	CH2EW50B-PS	CH2EW50C-PS	Set of nos.		
50	CH2FW50B-PS	CH2FW50C-PS	23, 25, 27, 28,		
63	CH2EW63B-PS	CH2EW63C-PS	29, 30, 31		
03	CH2FW63B-PS	CH2FW63C-PS	C-series rod:		
80	CH2EW80B-PS	CH2EW80C-PS	Set of nos.		
80	CH2FW80B-PS	CH2FW80C-PS	24, 26, 27, 28,		
100	CH2EW100B-PS	CH2EW100C-PS	[29, 30, 31) ' '		
100	CH2FW100B-PS	CH2FW100C-PS			

CHA Series ©40, Ø50, Ø63, Ø80 Ø100, Ø125, Ø160

 Construction

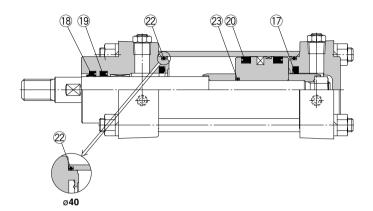



* The numbers correspond with those in the "Construction" of the CHA series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
17	Cushion seal	_	
18	Wiper ring	NBR	
19	Rod seal	NBR	23 is a non-replaceable
20	Piston seal	NBR	part, so it is not included
21)	Needle valve seal	NBR	in the seal kit.
22	Cylinder tube gasket	NBR	
23	Piston gasket	NBR	

Replacement Parts: Seal Kit

Bore size (mm)	Part no.	Content
40	CHA40-PS	
50	CHA50-PS	
63	CHA63-PS	0-4-4
80	CHA80-PS	Set of nos. (1), (18), (19), (20), (21), (22)
100	CHA100-PS	(1), (10), (19), (20), (21), (22)
125	CHA125-PS	
160	CHA160-PS	

* The seal kit consists of items ① through ② and can be ordered using the seal kit number for each bore size.

Tie-rod Nut Tightening Torque


rie-rou wat rightening rorque		
Bore size (mm)	Tightening torque (N·m)	
40	10.8 ± 1.1	
50	24.5 ± 2.4	
63	24.5 ± 2.4	
80	38.2 ± 3.8	
100	38.2 ± 3.8	
125	68.6 ± 6.8	
160	107.8 ± 10.7	

^{*} Gradually tighten the tie-rod nuts equally from opposing corners so that the tightening torques become the same as those listed above.

Tie-rod Type Hydraulic Cylinder/Double Acting, Double Rod

CHAW Series 940, 950, 963, 980 9100, 9125, 9160

Construction

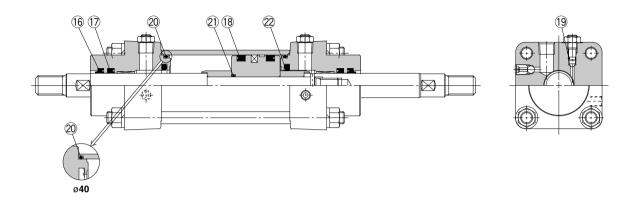

* The numbers correspond with those in the "Construction" of the CHAW series in the Best Pneumatics catalog.

Seal Kit List

No.	Description	Material	Note
16	Wiper ring	NBR	
17	Rod seal	NBR	
18	Piston seal	NBR	21 is a non-replaceable
19	Needle valve seal	NBR	part, so it is not included
20	Cylinder tube gasket	NBR	in the seal kit.
21	Piston gasket	NBR	
22	Cushion seal	_	

Replacement Parts: Seal Kit

ricpiacement i a	its. Ocai itit	
Bore size (mm)	Part no.	Content
40	CHAW40-PS	
50	CHAW50-PS	
63	CHAW63-PS	Catafinas
80	CHAW80-PS	Set of nos.
100	CHAW100-PS	0, 0, 0, 0, 0, 0,
125	CHAW125-PS	
160	CHAW160-PS	

^{*} The seal kit consists of items of (6) through (2) and (2) and can be ordered by using the seal kit number for each bore size.

Tie-rod Nut Tightening Torque

Bore size (mm)	Tightening torque (N·m)
40	10.8 ± 1.1
50	24.5 ± 2.4
63	24.5 ± 2.4
80	38.2 ± 3.8
100	38.2 ± 3.8
125	68.6 ± 6.8
160	107.8 ± 10.7

^{*} Gradually tighten the tie-rod nuts equally from opposing corners so that the tightening torques become the same as those listed above.





MGP-□Z Series

Replacement Parts: Seal Kit

The products in this series are refreshed products.

Check the following before ordering.

• Previous series (Discontinued product) MGP ⇒p. 243

- Checking whether the cylinder is a new or a previous model ⇒p. 563, 564
- * Seal kit part numbers other than those below are the same as those for the standard type.
- * Since the seal kit does not include a grease pack, it should be ordered separately. For details, refer to page 152.

Bore size (mm)	MGP□R(NBR)/MGP□V(FKM) (Water resistant)		XB6 (Heat resistant cylinder –10 to 150°C)	XB13 (Low speed cylinder 5 to 50 mm/s)
12	_	_	MGP12-Z-XB6-PS	MGP12-Z-XB13-PS
16	_	_	MGP16-Z-XB6-PS	MGP16-Z-XB13-PS
20	MGP20R-Z-PS	MGP20V-Z-PS	MGP20-Z-XB6-PS	MGP20-Z-XB13-PS
25	MGP25R-Z-PS	MGP25V-Z-PS	MGP25-Z-XB6-PS	MGP25-Z-XB13-PS
32	MGP32R-Z-PS	MGP32V-Z-PS	MGP32-Z-XB6-PS	MGP32-Z-XB13-PS
40	MGP40R-Z-PS	MGP40V-Z-PS	MGP40-Z-XB6-PS	MGP40-Z-XB13-PS
50	MGP50R-Z-PS	MGP50V-Z-PS	MGP50-Z-XB6-PS	MGP50-Z-XB13-PS
63	MGP63R-Z-PS	MGP63V-Z-PS	MGP63-Z-XB6-PS	MGP63-Z-XB13-PS
80	MGP80R-Z-PS	MGP80V-Z-PS	MGP80-Z-XB6-PS	MGP80-Z-XB13-PS
100	MGP100R-Z-PS	MGP100V-Z-PS	MGP100-Z-XB6-PS	MGP100-Z-XB13-PS

Common Specifications for Made-to-Order Products (-XB□, -XC□)

Bore size (mm)	XC4 (With heavy duty scraper)	XC6 (Made of stainless steel)	XC8 (Adjustable stroke cylinder/Adjustable extension type)
12	_	MGP12-Z-PS	MGP12-Z-XC8-PS
16	_	MGP16-Z-PS	MGP16-Z-XC8-PS
20	MGP20-Z-PS	MGP20-Z-PS	MGP20-Z-XC8-PS
25	MGP25-Z-PS	MGP25-Z-PS	MGP25-Z-XC8-PS
32	MGP32-Z-PS	MGP32-Z-PS	MGP32-Z-XC8-PS
40	MGP40-Z-PS	MGP40-Z-PS	MGP40-Z-XC8-PS
50	MGP50-Z-XC4-PS	MGP50-Z-XC6-PS	MGP50-Z-XC8-PS
63	MGP63-Z-XC4-PS	MGP63-Z-XC6-PS	MGP63-Z-XC8-PS
80	MGP80-Z-XC4-PS	MGP80-Z-XC6-PS	MGP80-Z-XC8-PS
100	MGP100-Z-XC4-PS	MGP100-Z-XC6-PS	MGP100-Z-XC8-PS

Bore size (mm)	XC9 (Adjustable stroke cylinder/Adjustable retraction type)	XC22 (Fluororubber seal)	XC35 (With coil scraper)
12	MGP12-Z-XC9-PS	MGP12-Z-XC22-PS	_
16	MGP16-Z-XC9-PS	MGP16-Z-XC22-PS	_
20	MGP20-Z-XC9-PS	MGP20-Z-XC22-PS	MGP20-Z-PS
25	MGP25-Z-XC9-PS	MGP25-Z-XC22-PS	MGP25-Z-PS
32	MGP32-Z-XC9-PS	MGP32-Z-XC22-PS	MGP32-Z-PS
40	MGP40-Z-XC9-PS	MGP40-Z-XC22-PS	MGP40-Z-PS
50	MGP50-Z-XC9-PS	MGP50-Z-XC22-PS	MGP50-Z-XC35-PS
63	MGP63-Z-XC9-PS	MGP63-Z-XC22-PS	MGP63-Z-XC35-PS
80	MGP80-Z-XC9-PS	MGP80-Z-XC22-PS	MGP80-Z-XC35-PS
100	MGP100-Z-XC9-PS	MGP100-Z-XC22-PS	MGP100-Z-XC35-PS

Grease Pack Part No.

 $\ast\,$ Grease pack part numbers other than those below are the same as those for the standard type.

Symbol	Specifications	Grease pack part no.
25A-	Copper and zinc-free	GR-D-010 (10 g)
XB6	Heat resistant cylinder (-10 to 150°C)	GR-F-005 (5 g)
XB13	Low speed cylinder (5 to 50 mm/s)	GR-L-010 (10 g)
XC85	Grease for food processing equipment	GR-H-010 (10 g)

Common Specifications for Made-to-Order Products (-XB□, -XC□)

MGP Series

Replacement Parts: Seal Kit

The production of this series has been discontinued.

Check the following before ordering.

• New series MGP-□Z ⇒p. 242

Checking whether the cylinder is a new or a previous model ⇒p. 563, 564

- * Seal kit part numbers other than those below are the same as those for the standard type.
- * Since the seal kit does not include a grease pack, it should be ordered separately. For details, refer to page 154.

Bore size (mm)	MGP□R(NBR)/MGP□V(FKM) (Water resistant)		XB6 (Heat resistant cylinder –10 to 150°C)	XB9 (Low speed cylinder 10 to 50 mm/s)
12	_	_	MGP12-XB6-PS	MGP12-XB9-PS
16	_	_	MGP16-XB6-PS	MGP16-XB9-PS
20	MGP20R-PS	MGP20V-PS	MGP20-XB6-PS	MGP20-XB9-PS
25	MGP25R-PS	MGP25V-PS	MGP25-XB6-PS	MGP25-XB9-PS
32	MGP32R-PS	MGP32V-PS	MGP32-XB6-PS	MGP32-XB9-PS
40	MGP40R-PS	MGP40V-PS	MGP40-XB6-PS	MGP40-XB9-PS
50	MGP50R-PS	MGP50V-PS	MGP50-XB6-PS	MGP50-XB9-PS
63	MGP63R-PS	MGP63V-PS	MGP63-XB6-PS	MGP63-XB9-PS
80	MGP80R-PS	MGP80V-PS	MGP80-XB6-PS	MGP80-XB9-PS
100	MGP100R-PS	MGP100V-PS	MGP100-XB6-PS	MGP100-XB9-PS

Bore size (mm)	XB13 (Low speed cylinder 5 to 50 mm/s)	XC8 (Adjustable stroke cylinder/Adjustable extension type)	XC9 (Adjustable stroke cylinder/Adjustable retraction type)
12	MGP12-XB13-PS	MGP12-XC8-PS	MGP12-XC9-PS
16	MGP16-XB13-PS	MGP16-XC8-PS	MGP16-XC9-PS
20	MGP20-XB13-PS	MGP20-XC8-PS	MGP20-XC9-PS
25	MGP25-XB13-PS	MGP25-XC8-PS	MGP25-XC9-PS
32	MGP32-XB13-PS	MGP32-XC8-PS	MGP32-XC9-PS
40	MGP40-XB13-PS	MGP40-XC8-PS	MGP40-XC9-PS
50	MGP50-XB13-PS	MGP50-XC8-PS	MGP50-XC9-PS
63	MGP63-XB13-PS	MGP63-XC8-PS	MGP63-XC9-PS
80	MGP80-XB13-PS	MGP80-XC8-PS	MGP80-XC9-PS
100	MGP100-XB13-PS	MGP100-XC8-PS	MGP100-XC9-PS

Bore size (mm)	XC22 (Fluororubber seal)
12	MGP12-XC22-PS
16	MGP16-XC22-PS
20	MGP20-XC22-PS
25	MGP25-XC22-PS
32	MGP32-XC22-PS
40	MGP40-XC22-PS
50	MGP50-XC22-PS
63	MGP63-XC22-PS
80	MGP80-XC22-PS
100	MGP100-XC22-PS

Grease Pack Part No.

* Grease pack part numbers other than those below are the same as those for the standard type.

Symbol	Specifications	Grease pack part no.
25A-	Copper and zinc-free	GR-D-010 (10 g)
XB6	Heat resistant cylinder (-10 to 150°C)	GR-F-005 (5 g)
XB9	Low speed cylinder (10 to 50 mm/s)	GR-F-005 (5 g)
XB13	Low speed cylinder (5 to 50 mm/s)	GR-L-010 (10 g)
XC85	Grease for food processing equipment	GR-H-010 (10 g)



Modular F.R.L. **Pressure Control Equipment**











1 Indication of replacement of elements, inspection items	p. 245
2 Traublack ating	

3 Details of replace	ement parts	Replacement Parts	Replacement Procedure
AC-A	Air Combination	p. 249	p. 431
AC-B	Air Combination	p. 250	_
ACG	Air Combination	p. 251	_
AF10-A to AF60-A	Air Filter	p. 253	p. 434
AFM20-A to AFM40-A	Mist Separator	p. 254	p. 445
AFD20-A to AFD40-A	Micro Mist Separator	p. 254	p. 447
AR10-A to AR40-A	Regulator	p. 255	p. 449
AR20-B to AR60-B	Regulator	p. 256	p. 454
AR20K-B to AR60K-B	Regulator with Backflow Function	p. 256	p. 456
AL10-A to AL60-A	Lubricator	p. 257	p. 461
AW10-A to AW40-A	Filter Regulator	p. 258	p. 469
AW20-B to AW60-B	Filter Regulator	p. 259	p. 485
AW20K-B to AW60K-B	Filter Regulator with Backflow Function	p. 259	p. 488
AWM20 to AWM40	Mist Separator Regulator	p. 260	p. 497
AWD20 to AWD40	Micro Mist Separator Regulator	p. 260	p. 503
ARG20(K)/30(K)/40(K)	Regulator with Built-in Pressure Gauge	p. 261	p. 509
AWG20/30/40	Filter Regulator with Built-in Pressure Gauge	p. 262	p. 515
AWG20K/30K/40K	Filter Regulator with Built-in Pressure Gauge with Backflow Function	p. 263	_
AR425 to 935	Pilot Operated Regulator	p. 264	p. 522
AMR3000 to 6000	MR Unit (Regulator with Mist Separator)	p. 265	p. 526
ARM5A	Compact Manifold Regulator/Centralized Supply Type	p. 266	p. 527
ARM5B	Compact Manifold Regulator/Individual Supply Type	p. 267	p. 527
ARM5S	Regulator/Single Unit Type	p. 268	p. 527
ARM10	Regulator/Single Unit Type	p. 269	p. 531
ARM11A	Compact Manifold Regulator/Common Supply Type	p. 270	p. 531
ARM11B	Compact Manifold Regulator/Individual Supply Type	p. 271	p. 531
ARM11A/B	Compact Manifold Regulator/Options	p. 272	p. 531

Modular F.R.L. Pressure Control Equipment

Indication of replacement of elements, inspection items

The following describes the general contents of the element replacement and regular check.

Indication of replacement of air filter, inspection items

■ Replacement standards

<Element replacement>

The differential pressure (pressure drop) between the primary side and secondary side reaches 0.1 MPa. Even when any pressure differential does not occur, replace the element every two years.

■ Inspection items

1) Checking of external leak or case crack.

If the case is cracked, this may lead to a serious accident, such as case rupture. So, replace the case immediately and locate the cause. If the case is contaminated significantly and the internal status cannot be checked, clean the case with neutral detergent. At this time, never use solvent or machine cleaning solution.

2) Functional inspection of drain discharge mechanism

Check that the drain mechanism functions correctly without fail and that the drain is discharged periodically for manual type.

If the drain is produced excessively, a trouble may occur in the purification equipment on the upstream side.

■ Probable troubles (Reference)

Refer to the "Troubleshooting" for air filter/auto drain. (p. 246)

Regulator inspection items

■ Inspection items

Check the set pressure level before starting up the equipment. If the set pressure level is beyond the specified range, locate the cause.

(Be sure to locate the cause before starting the readjustment.) Additionally, check the following points during periodic inspection.

- 1) Functional inspection and grease-up of the valve body (including the valve guide)
- 2) Functional inspection and grease-up of the valve spring Check for rust, breakage, or permanent settling.
- 3) Checking of setting function and relief function (Check the functions by increasing or decreasing the setting.)

■ Probable troubles (Reference)

Refer to the "Troubleshooting" for regulator. (p. 247)

Lubricator inspection items

Inspection items

245

- ① Inspection of dripping volume: Inspect this item when starting the equipment operation.
- 2 Check the oil status inside the case. Check for drain entry.
- 3 Check for air leak inside the case or air backflow on the secondary side.

■ Probable troubles (Reference)

Refer to the "Troubleshooting" for lubricator. (p. 248)



2 Troubleshooting

The following describes the general contents of the troubleshooting.

[Air filter/Auto drain]

Trouble (Symptom)	Cause	Corrective action
The pressure drop is large and the specified flow rate cannot be obtained.	1. The element is clogged.	1. Replace the element.
The air leaks from the portion between the bowl and body.	1. The bowl O-ring is damaged.	Replace the bowl O-ring. Apply the grease to the bowl O-ring, and then assemble it into the bowl.
The air leaks from the bowl.	1. The bowl is damaged.	Replace the bowl assembly or replace the bowl with a metallic bowl.
The air leaks from the drain cock.	A foreign object is caught in the valve of the drain cock.	Open the drain cock for several seconds to blow out the foreign object.
	2. The drain cock seat is damaged.	2. Replace the bowl assembly.
The drain is not dis- charged even when the drain cock is opened.	The discharge port of the drain cock is clogged with solid foreign object.	Replace the bowl assembly.
An excessive amount of drain is discharged to the pipe at the outlet.	The drain level exceeds the baffle.	Open the drain cock to discharge the drain, and then replace the element.

Modular F.R.L. Pressure Control Equipment

2 Troubleshooting

The following describes the general contents of the troubleshooting.

[Regulator]

Trouble (Symptom)	Cause	Corrective action
The pressure cannot be regulated.	The regulator is installed in a direction opposite to the flow direction.	Check the flow direction. If the installation direction is opposite to the flow direction, reinstall the regulator.
	2. The spring is broken.	2. Replace the spring.
	3. The valve spring is broken.	3. Replace the valve spring.
	A foreign object is caught in the valve seat or valve O-ring.	Remove the valve guide, and then clean the valve, valve seat, and valve O-ring. At this time, apply the grease to the valve O-ring and sliding part after cleaning.
	The rubber lining surface of the valve is damaged.	5. Replace the valve.
	6. A foreign object is caught in the check valve seat. (AR20K to AR60K)	6. Replace the check valve assembly.
The set pressure level does not become zero (0) even when the knob is loosened.	A foreign object is caught in the valve seat or valve O-ring.	Remove the valve guide, and then clean the valve, valve seat, and valve O-ring. At this time, apply the grease to the valve O-ring and sliding part after cleaning.
	The rubber seat surface of the valve is damaged.	2. Replace the valve.
	3. The valve spring is broken.	3. Replace the valve spring.
	4. The valve is locked.	Clean the sliding surface of the valve O- ring and apply the grease.
	5. A foreign object is caught in the check valve seat. (AR20K to AR60K)	5. Replace the check valve assembly.
The air leaks from the	1. The diaphragm is damaged.	Replace the diaphragm assembly.
exhaust port in the bonnet.	2. The piston seal is damaged.	Replace the piston assembly or clean it. At this time, apply the grease to the piston seal and sliding surface.
	A foreign object is caught in the exhaust valve seat.	Clean the exhaust valve seat or replace the diaphragm assembly.
	A foreign object is caught in the valve seat or valve O-ring.	Remove the valve guide, and then clean the valve, valve seat, and valve O-ring. At this time, apply the grease to the valve O-ring and sliding part after cleaning.
	5. The rubber sheet surface of the valve is damaged.	5. Replace the valve.
	The back pressure exceeding the set pressure level is applied to the secondary side.	Review the air circuit so that the back pressure exceeding the set pressure level is not applied.
	7. A foreign object is caught in the check valve seat. (AR20K to AR60K)	7. Replace the check valve assembly.

[Regulator]

Trouble (Symptom)	Cause	Corrective action	
The air leaks from the	1. The bonnet screw is loose.	Retighten the bonnet screw.	
portion between the bonnet and body.	2. The diaphragm is damaged.	2. Replace the diaphragm assembly.	
The air does not flow backward.	A foreign object is caught in the sliding part of the check valve, causing malfunc- tion. (AR20K to AR60K)	Replace the check valve assembly.	
	2. The check valve is locked. (AR20K to AR60K)	2. Replace the check valve assembly.	

[Lubricator]

Trouble (Symptom)	Cause	Corrective action
The oil does not drop even when the air flows.	The equipment is not connected correctly.	Check the "IN", "OUT", and arrow marks on the equipment. If any incorrect connection is found, connect the equipment again.
	The oil volume inside the bowl is insufficient.	2. Supply the oil.
	The air consumption flow rate is insufficient.	Select an appropriate lubricator with a minimum dripping flow rate suitable for the flow rate to be used.
	4. The damper is damaged.	4. Replace the damper (assembly).
	5. The oil adjustment valve is closed.	5. Open the oil adjustment valve.
	6. The air leaks from the bowl or lubrication plug.	Replace the case O-ring or lubrication plug assembly.
	7. The element is clogged.	7. Replace the damper pushing air assembly.
	8. The air leaks from the sight dome.	8. Replace the sight dome assembly.
Air bubbles are mixed	1. The oil passage pipe seal is damaged.	Replace the damper retainer air assembly.
in the oil drop.	2. The oil volume inside the bowl is insufficient.	2. Supply the oil.
The air or oil leaks	1. The sight dome is damaged.	Replace the sight dome assembly.
from the sight glass.	2. The O-ring is damaged.	2. Replace the sight dome assembly.
The air leaks from the lubrication plug.	1. The O-ring is damaged.	Replace the lubrication plug assembly.
The air leaks from the portion between the bowl and body.	1. The bowl O-ring is damaged.	Replace the bowl O-ring. Apply the grease to the bowl O-ring and assemble it into the bowl.
The air leaks from the bowl	1. The bowl is damaged.	Replace the bowl assembly or replace the bowl with a metallic bowl.

Air Combination

AC-A Series



Air Filter + Regulator + Lubricator AC10-A to AC40-A

Options/Attachments Part No.

				Options/Attach	ments part no.			
_		AC10-A	AC20-A	AC25-A	AC30-A	AC40-A	AC40-06-A	
ē	Model	AC10A-A	AC20A-A	_	AC30A-A	AC40A-A	AC40A-06-A	
Section		AC10B-A	AC20B-A	AC25B-A	AC30B-A	AC40B-A	AC40B-06-A	
S	Туре	_	AC20C-A	AC25C-A	AC30C-A	AC40C-A	AC40C-06-A	
		_	AC20D-A	_	AC30D-A	AC40D-A	AC40D-06-A	
_	Bound type Standard	G27-10-R1		G36-10-□01		G46-10	0-□01	
Option	을 nound type 0.02 to 0.2 MPa setting	G27-10-R1 Note 2)		G36-4-□01		G46-4	-□01	
g	Round type Standard	_		G36-10-□01-L		G46-10	-□01-L	
	Round type Standard 0.02 to 0.2 MPa setting Round type Standard With color zone 0.02 to 0.2 MPa setting 0.	_		G36-4-□01-L		G46-4-		
	Spacer	Y100-A	Y200-A		0-A	Y400-A	Y500-A	
	Spacer with bracket	Y100T-A	Y200T-A		0T-A	Y400T-A	Y500T-A	
	Check valve Note 3, 4)	_	AKM2000-□01-A	AKM3000-(□01)-A		AKM4000-(□02)-A	_	
			(□02)-A □02-A		□03-A			
	Pressure switch Note 4)	_	IS10M-20-A	IS10M-30-A		IS10M-40-A	IS10M-50-A	
	T-spacer Note 3, 4)	Y110-M5-A	Y210-□01-A	Y310-(□01)-A		Y410-(□02)-A	Y510-(□02)-A	
	1-spacer ,	1110-WI3-A	(□02)-A	□02-A		□03-A	□03-A	
+	Pressure relief		VHS20-□01A	VHS30-□02A □03A		□02A		
e	3 port valve Note 4)	_	U1020 □01A			VHS40-□03A	VHS40-□06A	
Attachment	o port valve		LOZA			□04A		
ac			□01-A		□02-A	□02-A		
¥	Piping adapter Note 4)	E100-M5-A	E200-□02-A E300-□03-A		E400-□03-A	E500-□06-A		
	I iping adaptor	2100 MO 71	□03-A	□04-A		□04-A	L300 🗆 00 A	
						□06-A		
			□01-A		□02-A	□02-A		
	Pressure switch with	_	IS10E-20□02-A	IS10F-3	00□03-A	IS10E-40□03-A	_	
	piping adapter Note 4)		□03-A	□04-A		□04-A		
						□06-A		
	Cross spacer Note 4)	Y14-M5-A	Y24-□01-A	Y34-[Y44-□02-A	Y54-□03-A	
	Cross spacer	I I4-IVIO-A	□02-A	□02-A		□03-A	□04-A	

Note 1) \square in round pressure gauge part numbers indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT. Please contact SMC regarding the pipe thread type NPT and the supply of pressure gauge with psi unit display specifications.

SMC

Note 2) Standard pressure gauge

Note 3) For F.R.L. units, port sizes without () are standard specifications.

Note 4) Separate spacers are required for modular unit.

AC-B Series

Air Filter + Regulator + Lubricator AC20-B to AC60-B

Options/Attachments Part No.

						Options/Attach	ments part no.					
_				AC20-B	AC25-B	AC30-B	AC40-B	AC40-06-B	AC50-B	AC55-B	AC60-B	
Ę.		`	Model	AC20A-B	_	AC30A-B	AC40A-B	AC40A-06-B	AC50A-B	_	AC60A-B	
Section				AC20B-B	AC25B-B	AC30B-B	AC40B-B	AC40B-06-B	AC50B-B	AC55B-B	AC60B-B	
0)		Type		AC20C-B	AC25C-B	AC30C-B	AC40C-B	AC40C-06-B	_	_	_	
				AC20D-B	_	AC30D-B	AC40D-B	AC40D-06-B	_	_	_	
	() a	Round type	Standard		G36-10-□01		G46-10-□01					
	Pressure gauge Note 1)	nouriu type	0.02 to 0.2 MPa setting		G36-4-□01				G46-4-□01			
	ang	Round type	Standard	G36-10-□01-L					G46-10-□01-L			
	9	(with color zone)	0.02 to 0.2 MPa setting		G36-4-□01-L				G46-4-□01-L			
_	Inss	Square embedded	Standard		GC3-10AS [GC3P-010AS (Pressure gauge cover only)]							
ij	Pre	type Note 2)	0.02 to 0.2 MPa setting	GC3-4AS [GC3P-010AS (Pressure gauge cover only)]								
Option	ь:	_:=:	NPN output, Wiring bottom entry		ISE35-N-25-MLA [ISE35-N-25-M (Switch body only)] Note 3)							
-		gital essure	NPN output, Wiring top entry ISE35-R-2				5-MLA [ISE35-R-2					
		itch	PNP output, Wiring bottom entry		ISE35-N-65-MLA [ISE35-N-65-M (Switch body only)] Note 3)							
	•••		PNP output, Wiring top entry				-MLA [ISE35-R-6	5-M (Switch body				
		Float type auto N.O.		_		38-A	AD4			AD48-A		
	drain Note 4) N.C.		N.C.	AD27-A		37-A	AD47-A					
		Spacer		Y200-A		Y300-A Y400-A Y500-A			Y600-A			
	Sp	Spacer with bracket		Y200T-A	Y300T-A		Y400T-A	Y500T-A	Y600T-A			
	Ch	Check valve Note 5, 6)		AKM2000-□01-A	AKM300	0-(□01)-A	AKM4000-(□02)-A	_	_	_	_	
	_			(□02)-A		□02-A	□03-A					
	Pr	essure sw	ritch Note 6)	IS10M-20-A		Л-30-A	IS10M-40-A	IS10M-50-A		IS10M-60-A		
	T-s	spacer Note	9 5, 6)	Y210-□01-A	Y310-(□01)-A		Y410-(□02)-A	Y510-(□02)-A	Y610-□03-A Y610-(□03)-A			
	_			(□02)-A		□02-A	□03-A	□03-A	(□04)-A	Ш	04-A	
+-	_		Nata ()	VHS20-□01A	VHS30	0-□02A	□02A		VHS50-□06A			
Ę	Pr	essure rei	ief 3 port valve Note 6)	□02A		□03A	VHS40-□03A	VHS40-□06A	□10A	_	_	
Attachment	_						□04A □02-A					
щ				□01-A		□02-A	□02-A E400-□03-A			E600-□06-A		
⋖	Pip	ping adap	ter Note 6)	E200-□02-A	E300-	.□03-A	□04-A	E500-□06-A		□10-A		
				□03-A		□04-A	□04-A □06-A			□10-A		
							□06-A					
	Dr	accura cu	itch with pining	□01-A		□02-A	IS10E-40□03-A					
		Pressure switch with piping adapter Note 6)		IS10E-20□02-A	IS10E-3	30□03-A	□04-A	_	- -		_	
	au	apiei	•	□03-A		□04-A	□04-A					
				Y24-□01-A	Y34-	□01-A	Y44-□02-A	Y54-□03-A				
	Cr	oss space	er Note 6)	□02-A		⊒01-A ⊒02-A	□03-A	□04-A	_	_	-	
_					_0_ /\	00-A	UA					

Note 1) ☐ in part numbers for a round type pressure gauge indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT. Please contact SMC regarding the connection thread NPT and pressure gauge supply for psi unit specifications.

nor psi unit specinications.

Note 2) Including one O-ring and 2 mounting screws

Note 3) Lead wire with connector (2 m), adapter, lock pin, O-ring (1 pc.), mounting screw (2 pcs.) are attached. []: Switch body only.

Also, regarding how to order the digital pressure switch, refer to the Web Catalog.

Note 4) Minimum operating pressure: N.O. type–0.1 MPa; N.C. type–0.1 MPa (AD27-A) and 0.15 MPa (AD37-A/AD47-A). Please consult with SMC separately for psi and °F unit display specifications.

Note 5) For F.R.L. units, port sizes without () are standard specifications. Note 6) Separate spacers are required for modular unit.

Air Combination

ACG Series

Air Filter + Regulator + Lubricator ACG20/30/40

Options/Attachments Part No.

				Options/Attachments part no.			
De	scription		Model .	ACG20	ACG30	ACG40	
Pressure		Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS	
gai	uge Note 1)	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS	
Options	Float type	oat type auto N.C.		AD27	AD37	AD47	
횽	drain Note 2)		N.O.	-	AD38	AD48	
ts	Spacer	Spacer		Y200	Y300	Y400	
핕	Spacer with bracket		et	Y200T	Y300T	Y400T	
듩		eck valve Note 3, 4)		AKM2000-□01, (□02)	AKM3000-(□01), □02	AKM4000-(□02), □03	
	Pressure			IS10M-20	IS10M-30	IS10M-40	
¥	Residual pressure relief 3 port valve Note 4)		3 port valve Note 4)	VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04	

Note 1) Contact SMC regarding pressure gauge supply for psi unit specifications.

Note 2) Minimum operating pressure: 0.1 MPa for N.O. type, 0.1 MPa for N.C. type (AD27) and 0.15 MPa for N.C. type (AD37 and 47). Contact SMC for psi and °F specifications.

Note 3) For F.R.L. units, port sizes not in () are for standard application.

Note 4) Separate spacers are required for modular unit.

Note 5) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing knob (optional specification: -Y).

Filter Regulator + Lubricator ACG20A/30A/40A

Options/Attachments Part No.

	scription Model			Options/Attachments part no.			
De	Scription	Model		ACG20A	ACG30A	ACG40A	
Pressure		Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS	
gai	uge Note 1)	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS	
suo	Float type	e auto N.C.		AD27	AD37	AD47	
	drain Note 2)		N.O.	-	AD38	AD48	
щs	Spacer Note	Spacer Note 3, 4) Spacer with bracket Check valve		Y200	Y300	Y400	
æ	Spacer wi			Y200T	Y300T	Y400T	
ᅂ	Check val			AKM2000-□01, (□02)	AKM3000-(□01), □02	AKM4000-(□02), □03	
₩	Residual pressure relief 3 port valve Note 4)		3 port valve Note 4)	VHS20-□01. □02	VHS30-□02. □03	VHS40-□02. □03. □04	

Note 1) Contact SMC regarding pressure gauge supply for psi unit specifications.

Note 2) Minimum operating pressure: 0.1 MPa for N.O. type, 0.1 MPa for N.C. type (AD27) and 0.15 MPa for N.C. type (AD37 and 47). Contact SMC for psi and °F specifications.

Note 3) For F.R.L. units, port sizes not in () are for standard application.

Note 4) Separate spacers are required for modular unit.

Air Filter + Regulator ACG20B/30B/40B

Options/Attachments Part No.

	scription Mada			Options/Attachments part no.			
De	Description Model			ACG20B	ACG30B	ACG40B	
Pressure		Standard 0 to 1.0 MPa		GB2-10AS	GB3-10AS	GB4-10AS	
ga	uge Note 1)	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS	
	Float type auto drain Note 2) N.C.		N.C.	AD27	AD37	AD47	
횽			N.O.	-	AD38	AD48	
ış			Spacer		Y200	Y300	Y400
E E				Y200T	Y300T	Y400T	
ach ach			te 3, 4)	IS10M-20	IS10M-30	IS10M-40	
¥			3 port valve Note 3)	VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04	

Note 1) Contact SMC regarding pressure gauge supply for psi unit specifications.

Note 2) Minimum operating pressure: 0.1 MPa for N.O. type, 0.1 MPa for N.C. type (AD27) and 0.15 MPa for N.C. type (AD37 and 47). Contact SMC for psi and °F specifications.

Note 3) Separate spacers are required for modular unit.

Note 4) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing knob (optional specification: -Y).

ACG Series

Air Filter + Mist Separator + Regulator ACG20C/30C/40C

Options/Attachments Part No.

Do	scription				Options/Attachments part no.	
Des	scription		Model	ACG20C	ACG30C	ACG40C
	ssure	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
gaı	ige Note 1)	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
ions			N.C.	AD27	AD37	AD47
ਰ			N.O.	_	AD38	AD48
nts	Spacer			Y200	Y300	Y400
me	Spacer wi	th brack	et	Y200T	Y300T	Y400T
ach	Pressure s			IS10M-20	IS10M-30	IS10M-40
Att	Residual pres	sure relief	3 port valve Note 3)	VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04

Note 1) Contact SMC regarding pressure gauge supply for psi unit specifications.

Note 2) Minimum operating pressure: 0.1 MPa for N.O. type, 0.1 MPa for N.C. type (AD27) and 0.15 MPa for N.C. type (AD37 and 47). Contact SMC for psi and °F specifications.

Note 3) Separate spacers are required for modular unit.

Note 4) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing knob (optional specification: -Y).

Filter Regulator + Mist Separator ACG20D/30D/40D

Options/Attachments Part No.

Do	scription				Options/Attachments part no.	
De	Scription		Model .	ACG20D	ACG30D	ACG40D
	essure	Standard 0 to 1.0 MPa		GB2-10AS	GB3-10AS	GB4-10AS
ga	uge Note 1)	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Suo	Float type auto N.C. drain Note 2) N.O.		N.C.	AD27	AD37	AD47
흄			N.O.	-	AD38	AD48
sus	Spacer			Y200	Y300	Y400
Ě	Spacer wit	th brack	et	Y200T	Y300T	Y400T
Atta	Residual pres	sure relief	3 port valve Note 3)	VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04

Note 1) Contact SMC regarding pressure gauge supply for psi unit specifications.

Note 2) Minimum operating pressure: 0.1 MPa for N.O. type, 0.1 MPa for N.C. type (AD27) and 0.15 MPa for N.C. type (AD37 and 47). Contact SMC for psi and °F specifications.

Note 3) Separate spacers are required for modular unit.

Actuators


ir Preparation Equipment Air

AF10-A to AF60-A


The Replacement Procedure is on p. 434

Construction

 
AF10-A/AF20-A



AF30-A to AF40-06-A

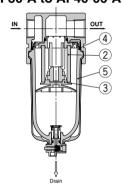

AF50-A/AF60-A

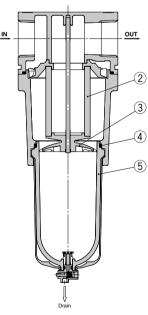

* The numbers correspond with those in the "Construction" of the AF series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Part no.							
IVO.	Description	Iviateriai	AF10-A	AF20-A	AF30-A	AF40-A	AF40-06-A	AF50-A	AF60-A	
2	Filter element	Non-woven fabric	AF10P-060S	AF20P-060S	AF30P-060S	AF40F	AF40P-060S		AF60P-060S	
3	Baffle	PBT	AF10P-040S Note 2)	AF22P-040S	AF32P-040S	AF42F	P-040S	AF50P-040S	AF60P-040S	
4	Bowl seal	NBR	C1SFP-260S	C2SFP-260S	C32FP-260S	C42F		P-260S		
(5)	Bowl assembly Note 1)	Polycarbonate	C1SF-A	C2SF-A	C3SF-A	C4SF-A				

Note 1) Bowl seal is included for the AF20-A to AF60-A. Please contact SMC regarding the supply of bowl assembly with psi and °F unit display specifications.

Note 2) The baffle material for the AF10-A (AF10P-040S) only is polyacetal.

Options/Part No.

Ontional appoifications	Model						
Optional specifications	AF10-A	AF20-A	AF30-A	AF40-A	AF40-06-A	AF50-A	AF60-A
Bracket assembly Note)	_	AF22P-050AS	AF32P-050AS	AF42P-050AS	AF42P-070AS	AF52P	-050AS

Note) Assembly of a bracket and 2 mounting screws

Bowl Assembly Part No.

	Drain					Mod	el
Bowl material	discharge mechanism	Drain port	Other	AF10-A	AF20-A	AF30-A	AF40-A AF40-06-A AF50-A AF60-A
		With drain cock	_	C1SF-A	C2SF-A	_	
		with drain cock	With bowl guard	_	C2SF-C-A	C3SF-A	C4SF-A
	Manual discharge	Drain cock with barb fitting	With bowl guard	_	_	C3SF-W-A	C4SF-W-A
Polycarbo-	a.conargo	With drain guide	_	_	C2SF□-J-A	_	_
nate		(without valve function)	With bowl guard	_	C2SF□-CJ-A	C3SF□-J-A	C4SF□-J-A
	Note) Automatic	Normally closed (N.C.)	_	AD17-A	AD27-A	_	_
	discharge	Normally closed (N.C.)	With bowl guard	_	AD27-C-A	AD37□-A	AD47□-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	_	AD38□-A	AD48□-A
		With drain cock	_	C1SF-6-A	C2SF-6-A	_	_
	Manual		With bowl guard	_	C2SF-6C-A	C3SF-6-A	C4SF-6-A
	discharge	Drain cock with barb fitting	With bowl guard	_	_	C3SF-6W-A	C4SF-6W-A
Nylon	3.	With drain guide		_	C2SF□-6J-A	_	_
Nylon		(without valve function)	With bowl guard	_	C2SF□-6CJ-A	C3SF□-6J-A	C4SF□-6J-A
	Note) Automatic	Normally closed (N.C.)	_	AD17-6-A	AD27-6-A	_	_
	discharge	Normany closed (N.O.)	With bowl guard	_	AD27-6C-A	AD37□-6-A	AD47□-6-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	_	AD38□-6-A	AD48□-6-A
		With drain cock	_	C1SF-2-A	C2SF-2-A	C3SF-2-A	C4SF-2-A
	Manual	With drain cock	With level gauge	_	_	C3LF-8-A	C4LF-8-A
	discharge	With drain guide	_	_	C2SF□-2J-A	C3SF□-2J-A	C4SF□-2J-A
Metal		(without valve function)	With level gauge	_	_	C3LF□-8J-A	C4LF□-8J-A
Wictai	Note)	Normally closed (N.C.)	_	AD17-2-A	AD27-2-A	AD37□-2-A	AD47□-2-A
	Automatic	Tromaily Globba (IV.O.)	With level gauge	_	_	AD37□-8-A	AD47□-8-A
	discharge (Auto drain)	Normally open (N.O.)	_	_	_	AD38□-2-A	AD48□-2-A
	(riato diairi)	riormany open (N.O.)	With level gauge	_	_	AD38□-8-A	AD48□-8-A

Note) Minimum operating pressure: N.O. type-0.1 MPa (AD38-A, AD48-A); N.C. type-0.1 MPa (AD17-A, AD27-A) and 0.15 MPa (AD37-A, AD47-A).

Bowl assembly for the AF20-A to AF60-A models comes with a bowl seal.

 \square in bowl assembly part numbers indicates a pipe thread type (applicable tubing for auto drain). No indication is necessary for Rc thread; however, indicate N for NPT thread, and F for G thread. (For auto drain, Nil: \emptyset 10, N: \emptyset 3/8")

Please consult with SMC separately for psi and °F unit display specifications.




Mist Separator

AFM20-A to AFM40-A AFD20-A to AFD40-A




Construction

AFM20-A AFD20-A

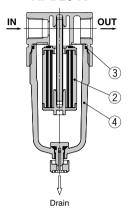

AFM30-A to AFM40-06-A AFD30-A to AFD40-06-A

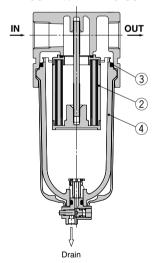

* The numbers correspond with those in the "Construction" of the AFM/AFD series in the Best Pneumatics catalog.

Replacement Parts

					Part	no.	
No.	Description	on	Material	AFM20-A AFD20-A	AFM30-A AFD30-A		AFM40-06-A AFD40-06-A
(2)	Element assembly	AFM20 to 40	_	AFM20P-060AS	AFM30P-060AS	AFM40I	P-060AS
2	AFD20 to 40		_	AFD20P-060AS	AFD30P-060AS	AFD40F	P-060AS
3	Bowl seal		NBR	C2SFP-260S	C32FP-260S	C42FF	P-260S
4	Bowl assembly Note)		Polycarbonate	C2SF-A	C3SF-A	C49	SF-A

Micro Mist Separator

Note) Bowl seal is included. Please contact SMC regarding the supply of bowl assembly with psi and °F unit display specifications.

Options/Part No.

			Mo	del	
Optional specifications		AFM20-A AFD20-A	AFM30-A AFD30-A		AFM40-06-A AFD40-06-A
Bracket assembly Note 1)		AF22P-050AS	AF32P-050AS	AF42P-050AS	AF42P-070AS
Float type auto drain Note 2, 3)	N.C.	AD27-A	AD37-A	AD4	17-A
Float type auto drain ****	N.O.	_	AD38-A	AD4	18-A

Note 1) Assembly of a bracket and 2 mounting screws

Note 2) Minimum operating pressure: N.O. type-0.1 MPa; N.C. type-0.1 MPa (AD27-A) and 0.15 MPa (AD37-A/AD47-A).

Please consult with SMC separately for psi and °F unit display specifications. Note 3) Please consult with SMC for details on drain piping to fit NPT or G port sizes.

Bowl Assembly Part No.

	Drain				Мо	del	
Bowl material	discharge mechanism	Drain port	Other	AFM20-A AFD20-A	AFM30-A AFD30-A	AFM40-A AFD40-A	AFM40-06-A AFD40-06-A
,		With drain cock	_	C2SF-A	_	-	_
		with drain cock	With bowl guard	C2SF-C-A	C3SF-A	C49	SF-A
	Manual discharge	Drain cock with barb fitting	With bowl guard	_	C3SF-W-A	C4SI	-W-A
Polycarbo- nate	alconargo	With drain guide	_	C2SF□-J-A		-	
		(without valve function)	With bowl guard	C2SF□-CJ-A	C3SF□-J-A	C4SF	-J-A
	Note)	Normally closed (N.C.)	_	AD27-A	_	-	
	Automatic discharge	Normally closed (N.C.)	With bowl guard	AD27-C-A	AD37□-A	AD4	7□-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	AD38□-A	AD4	8□-A
		With drain cock	_	C2SF-6-A	_	-	_
		with drain cock	With bowl guard	C2SF-6C-A	C3SF-6-A	C4S	F-6-A
	Manual discharge	Drain cock with barb fitting	With bowl guard	_	C3SF-6W-A	C4SF	-6W-A
Nylon	discriarge	With drain guide	_	C2SF□-6J-A	_	-	_
Nyion		(without valve function)	With bowl guard	C2SF□-6CJ-A	C3SF□-6J-A	C4SF	□-6J-A
	Note)	Normally closed (N.C.)	_	AD27-6-A	_	-	_
	Automatic discharge	Normally closed (N.C.)	With bowl guard	AD27-6C-A	AD37□-6-A	AD47	'□-6-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	AD38□-6-A	AD48	I□-6-A
		With drain cock	_	C2SF-2-A	C3SF-2-A	C4S	F-2-A
	Manual	Willi dialii cock	With level gauge	_	C3LF-8-A	C4L	F-8-A
	discharge	With drain guide	_	C2SF□-2J-A	C3SF□-2J-A	C4SF	□-2J-A
Metal		(without valve function)	With level gauge	_	C3LF□-8J-A	C4LF	□-8J-A
Metai		Normally algored (N.C.)	_	AD27-2-A	AD37□-2-A	AD47	'□-2-A
	Automatic	Normally closed (N.C.)	With level gauge	_	AD37□-8-A	AD47	′□-8-A
	discharge (Auto drain)	Normally open (N.O.)	_	_	AD38□-2-A	AD48	5□-2-A
	, ato diam)	Normally open (N.O.)	With level gauge	_	AD38□-8-A	AD48	I□-8-A

Note) Minimum operating pressure: N.O. type-0.1 MPa (AD38-A, AD48-A); N.C. type-0.1 MPa (AD17-A, AD27-A) and 0.15 MPa (AD37-A, AD47-A).

Bowl assembly for the AFM20-A to AFM40-06-A, AFD20-A to AFD40-06-A models comes with a bowl seal.


 \square in bowl assembly part numbers indicates a pipe thread type (applicable tubing for auto drain). No indication is necessary for Rc thread; however, indicate N for NPT thread, and F for G thread. (For auto drain, Nil: ø10, N: ø3/8")

Please consult with SMC separately for psi and °F unit display specifications.

AR10-A to AR40-A



Construction

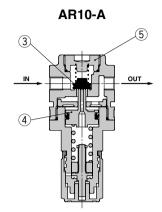

Replacement Parts

No.	Description	Material	Part no.							
IVO.	Description	iviateriai	AR10-A	AR20-A	AR25-A	AR30-A	AR40-A	AR40-06-A		
3	Valve assembly	Stainless steel/HNBR	AR10P-090S	AR22P	-060AS	AR32P-060AS	AR42P	-060AS		
4	Diaphragm assembly	Weatherable NBR	AR10P-150AS Note)	AR22P	-150AS	AR32P-150AS	AR42P	-150AS		
<u></u>	Valve guide assembly	Polyacetal	131329	AR22P	-050AS	AR32P-050AS	AR42P	-050AS		

Note) The AR10-A is a piston type. Assembly of a piston and a seal (KSYP-13).

Options/Part No.

Optional specifications			Model							
piloriai speci	iications	AR10-A	AR20-A	AR25-A	AR30-A	AR40-A	AR40-06-A			
et assembly	AR12P-270AS	AR22P-270AS	AR27P-270AS	AR32P-270AS	AR42P-270AS	AR42P-270AS				
Set nut			AR22P-260S	AR22P-260S AR22P-260S AR32P-260S			AR42P-260S			
Round Standard		G27-10-R1	G36-10-□01			G46-10-□01				
type Note 2)	0.02 to 0.2 MPa setting	G27-10-R1 Note 3)	G36-4-□01			G46-4-□01				
Round type (with	Standard	_	G	36-10-□01-	L	G46-10	-□01-L			
color zone) Note 2)	0.02 to 0.2 MPa setting	_		336-4-□01-l	-	G46-4-	-□01-L			
	t assembly t Round type Note 2) Round type (with	t assembly Note 1) t Round type Note 2) 0.02 to 0.2 MPa setting Round type (with Standard	### AR10-A ####################################	AR10-A AR20-A at assembly Note 1) AR12P-270AS AR22P-270AS t	AR10-A AR20-A AR25-A AR12P-270AS AR22P-270AS AR22P-270AS AR22P-260S AR22P-260S AR22P-260S AR24P-260S AR22P-260S AR22P-260S AR24P-260S AR22P-260S AR22P-260S AR	AR10-A AR20-A AR25-A AR30-A AR30-A AR20-A AR25-A AR30-A AR20-A AR20-A AR25-A AR30-A AR20-A AR20-A AR20-A AR30-A AR20-A AR20-A AR30-A AR20-A AR20-A AR30-A AR20-A AR30-A AR30-A AR20-A AR30-A AR30-A AR30-A AR30-A AR30-A AR30-A	AR10-A AR20-A AR25-A AR30-A AR40-A AR24-270AS AR24-270AS AR32-270AS AR32-270AS AR32-270AS AR34-27-270AS AR32-270AS AR32-270AS AR32-270AS AR34-27-270AS AR32-270AS AR32-270AS AR32-270AS AR34-27-270AS AR32-270AS AR32-270AS AR32-270AS AR34-27-270AS AR34-27-270AS AR34-27-270AS AR34-27-270AS AR34-27-270AS			


Note 1) Assembly of a bracket and set nuts

Note 2) ☐ in round pressure gauge part numbers indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT.

Please contact SMC regarding the pipe thread type NPT and the supply of pressure gauge with psi unit display specifications.

Note 3) Standard pressure gauge

AR20-A to 40-06-A

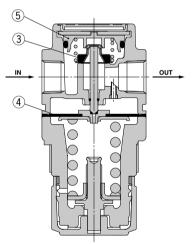


* The numbers correspond with those in the "Construction" of the AR series in the Best Pneumatics catalog.

255


Regulator **Regulator with Backflow Function** AR20-B to AR60-B AR20K-B to AR60K-B




Construction

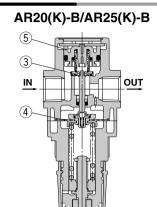


AR30(K)-B/AR40(K)-B

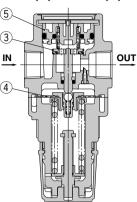


AR50(K)-B/AR60(K)-B

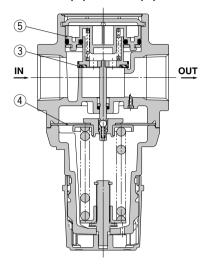

AR20K-B to AR60K-B (Regulator with Backflow Function)

 

 

* The numbers correspond with those in the "Construction" of the AR series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material		Part no.							
INO.	Description	Iviateriai	AR20(K)-B	AR25(K)-B	AR30(K)-B	AR40(K)-B	AR40(K)-06-B	AR50(K)-B	AR60(K)-B		
3	Valve	Brass/HNBR	AR20P-410S	AR25P-410S	AR30P-410S	AR40F	AR40P-410S		AR60P-410S		
4	Diaphragm assembly	Weatherable NBR	AR20P-150AS	AR25P-150AS	AR30P-150AS	AR40P	-150AS	AR50P	-150AS		
(5)	Valve guide assembly	Polyacetal	AR20P-050AS	AR25P-050AS	AR30P-050AS	AR40P-050AS		AR50P-050AS	AR60P-050AS		
6	Check valve assembly Note)	_	AR23KP-020AS								

Note) Check valve assembly is applicable for a regulator with backflow function (AR20K-B to AR60K-B) only. Assembly of a check valve cover, check valve body assembly and 2 mounting screws

Options/Part No.

Ор	tion	Model	AR20(K)-B	AR25(K)-B	AR30(K)-B	AR40(K)-B	AR40(K)-06-B	AR50(K)-B	AR60(K)-B		
Br	acket assembly	Note 1)	AR23P-270AS	AR28P-270AS	AR33P-270AS	AR43P	-270AS	AR52P	-270AS		
Se	t nut		AR23P-260S	AR28P-260S	AR33P-260S	AR43F	P-260S	N	ote 2)		
ge	Round type Note 3)	Standard		G36-10-□01			G46-1	0-□01			
3	nound type note of	0.02 to 0.2 MPa setting		G36-4-□01			G46-4	1- □01			
e ga	Round type	Standard	G36-10-□01-L			G46-10-□01-L					
ľ	(with color zone) Note 3)	0.02 to 0.2 MPa setting		G36-4-□01-L			G46-4-	.□01-L			
Se.	Square	Standard	GC3-10AS [GC3P-010AS (Pressure gauge cover only)]								
凸	embedded type Note 4)	0.02 to 0.2 MPa setting	GC3-4AS [GC3P-010AS (Pressure gauge cover only)]								
		NPN output, Wiring bottom entry		IS	E35-N-25-MLA [ISE35-N-25-M (Switch body only	/)]			
Dig	gital pressure	NPN output, Wiring top entry		IS	E35-R-25-MLA [ISE35-R-25-M (Switch body only	/)]			
sw	itch Note 5)	PNP output, Wiring bottom entry		IS	E35-N-65-MLA [ISE35-N-65-M (Switch body only	/)]			
		PNP output, Wiring top entry		IS	E35-R-65-MLA [ISE35-R-65-M (Switch body only	/)]			

Note 1) Assembly of a bracket and set nuts. Including 2 mounting screws for the AR50(K)-B and AR60(K)-B Note 2) Please consult with SMC regarding the set nuts for the AR50(K)-B and AR60(K)-B.

Note 3) 🗆 in part numbers for a round pressure gauge indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT. Please contact SMC regarding the pressure gauge supply for psi unit specifications.

Note 4) Including one O-ring and 2 mounting screws. []: Pressure gauge cover only
Note 5) In addition to the pressure switch body, lead wire with connector (2 m), adapter, lock pin, O-ring (1 pc.), mounting screw (2 pcs.) are attached.

[]: Switch body only. (Regarding how to order the digital pressure switch, refer to the Web Catalog.)

AL10-A to AL60-A




Construction


AL₁₀-A




AL20-A

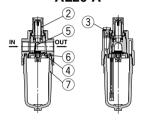

AL30-A/AL40-A

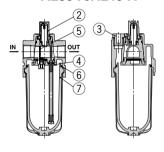

AL50-A/AL60-A

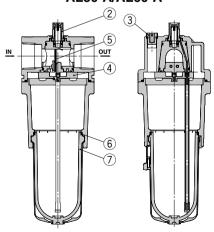

Replacement Parts

No.	Description	Material				Part no.			
INO.	Description	Material	AL10-A	AL20-A	AL30-A	AL40-A	AL40-06-A	AL50-A	AL60-A
2	Sight dome assembly	Polycarbonate	AL10P-080AS			AL20P	-080AS		
3	Lubrication plug assembly	_	_	AL22P-060AS	AL32P-060AS	S AL42P-060AS			
4	Bumper retainer assembly	_	_	AL20P-030AS	AL30P-030AS	AL40P	-030AS	AL50P-030AS	AL60P-030AS
<u>(5)</u>	Bumper (assembly)	Synthetic resin	_	AL20P-040S	AL30P-040S	AL40F	P-040S	AL50P-040AS	AL60P-040AS
6	Bowl seal	NBR	C1SFP-260S	C2SFP-260S	C32FP-260S	S C42FP-260S			
7	Bowl assembly Note)	Polycarbonate	C1SL-A	C2SL-A	C3SL-A	C4SL-A			

Note) · Bowl seal is included for the AL20-A to AL60-A. Please consult with SMC separately for psi and °F unit display specifications.

· Bowl assembly for the AL30-A to AL60-A models comes with a bowl guard (Material: Polycarbonate).

Options/Part No.

Ontional appoifications	Model							
Optional specifications	AL10-A	AL20-A	AL30-A	AL40-A	AL40-06-A	AL50-A	AL60-A	
Bracket assembly Note)	_	AF22P-050AS	AF32P-050AS	AF42P-050AS	AF42P-070AS	AF52P	-050AS	

Note) Assembly of a bracket and 2 mounting screws

Bowl Assembly Part No.

David	I sala alian ant					Model			
Bowl material	Lubricant exhaust port	Other	AL10-A	AL20-A	AL30-A	AL40-A	AL40-06-A	AL50-A	AL60-A
	Without drain cock	_	C1SL-A	C2SL-A	_	_			
D	Williout drain cock	With bowl guard	_	C2SL-C-A	C3SL-A	C4SL-A			
Polycarbo- nate	With drain cock	_	C1SL-3-A	C2SL-3-A	_	-			
	Willi dialii cock	With bowl guard	_	C2SL-3C-A	C3SL-3-A	C4SL-3-A			
	Drain cock with barb fitting	With bowl guard	_	_	C3SL-3W-A	C4SL-3W-A			
	Mithaut duain ands	_	C1SL-6-A	C2SL-6-A	_		-	_	
	Without drain cock	With bowl guard	_	C2SL-6C-A	C3SL-6-A	C4SL-6-A			
Nylon	With drain cock	_	C1SL-36-A	C2SL-36-A	_	_			
	with drain cock	With bowl guard	_	C2SL-36C-A	C3SL-36-A	C4SL-36-A			
	Drain cock with barb fitting	With bowl guard	_	_	C3SL-36W-A		C4SL-	36W-A	
	Without drain cock	_	C1SL-2-A	C2SL-2-A	C3SL-2-A		C4SI	L-2-A	
N4-4-1	without drain cock	With level gauge	_	_	C3LL-8-A		C4LI	8-A	
Metal	Mith ducin cools	_	C1SL-23-A	C2SL-23-A	C3SL-23-A		C4SL	-23-A	
	With drain cock	With level gauge	_	_	C3LL-38-A		C4LL	-38-A	

Note) · Bowl seal is included for the AL20-A to AL60-A.

· Please consult with SMC separately for psi and °F unit display specifications.


st The numbers correspond with those in the "Construction" of the AL series in the Best Pneumatics catalog.




AW10-A to AW40-A

Construction

 
AW10-A



AW20-A

 

AW30-A to AW40-06-A

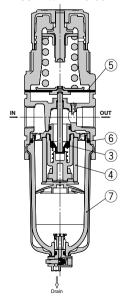

* The numbers correspond with those in the "Construction" of the AW series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material			Part no.		
IVO.	Description	iviateriai	AW10-A	AW20-A	AW30-A	AW40-A	AW40-06-A
3	Valve assembly	Stainless steel/HNBR	AR10P-090S	AW22P-060AS	AW32P-060AS	AW42F	P-060AS
4	Filter element	Non-woven fabric	AF10P-060S	AF20P-060S	AF30P-060S	AF40F	P-060S
(5)	Diaphragm assembly	Weatherable NBR	AR10P-150AS Note 1)	AR22P-150AS	AR32P-150AS	AR42P	-150AS
6	Bowl seal	NBR	C1SFP-260S	C2SFP-260S	C32FP-260S	C42FI	P-260S
7	Bowl assembly Note 2)	Polycarbonate	C1SF-A	C2SF-A	C3SF-A	C45	SF-A

Note 1) The AW10-A is a piston type. Assembly of a piston and a seal (KSYP-13).

Note 2) Bowl seal is included for the AW20-A to AW40-06-A. Please contact SMC regarding the supply of bowl assembly with psi and °F unit display specifications.

Options/Part No.

	ntional angai	ifications	Model						
U	ptional speci	ilications	AW10-A	AW20-A	AW30-A	AW40-A	AW40-06-A		
Brack	Bracket assembly Note 1)		AR12P-270AS	AR22P-270AS	AR32P-270AS	AR42F	-270AS		
Set nu	Set nut		AR12P-260S	AR22P-260S	AR32P-260S	AR42I	P-260S		
	Round Standard		G27-10-R1	G36-10-□01		G46-1	0-□01		
Note 2) Pressure	type	0.02 to 0.2 MPa setting	G27-10-R1 Note 3)	G36-4-□01		G46-4-□01			
gauge	Round type	Standard	_	G36-10)-□01-L	G46-10)-□01-L		
	(with color zone)	0.02 to 0.2 MPa setting	_	G36-4-	-□01-L	G46-4-□01-L			

Note 1) Assembly of a bracket and set nuts

Note 2) ☐ in round pressure gauge part numbers indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT.

Please contact SMC regarding the pipe thread type NPT and the supply of pressure gauge with psi unit display specifications.

Note 3) Standard pressure gauge

Bowl Assembly Part No.

David	Drain					Model		
Bowl material	discharge mechanism	Drain port	Other	AW10-A	AW20-A	AW30-A	AW40-A	AW40-06-A
		With drain cock	_	C1SF-A	C2SF-A	_	-	_
		with drain cock	With bowl guard	_	C2SF-C-A	C3SF-A	C49	SF-A
Polycarbo- nate	Manual discharge	Drain cock with barb fitting	With bowl guard	_	_	C3SF-W-A	C4SF	-W-A
	disoriargo	With drain guide	_	_	C2SF□-J-A	_	-	_
		(without valve function)	With bowl guard	_	C2SF□-CJ-A	C3SF□-J-A	C4SF	□-J-A
	Note)	Normally closed (N.C.)	_	AD17-A	AD27-A	_	-	_
	Automatic discharge	Normally closed (N.C.)	With bowl guard	_	AD27-C-A	AD37□-A	AD4	7□-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	_	AD38□-A	AD4	8□-A
		With drain cock	_	C1SF-6-A	C2SF-6-A	_	-	_
	Manual discharge	With diam cock	With bowl guard	_	C2SF-6C-A	C3SF-6-A	C4S	F-6-A
		Drain cock with barb fitting	With bowl guard	-	_	C3SF-6W-A	C4SF	-6W-A
Nylon		With drain guide	_	_	C2SF□-6J-A		-	_
Nylon		(without valve function)	With bowl guard	_	C2SF□-6CJ-A	C3SF□-6J-A	C4SF□-6J-A	
	Note) Automatic	Normally closed (N.C.)	_	AD17-6-A	AD27-6-A	1	-	_
	discharge	Normally closed (N.C.)	With bowl guard	1	AD27-6C-A	AD37□-6-A	AD47	□-6-A
	(Auto drain)	Normally open (N.O.)	With bowl guard	1	_	AD38□-6-A	AD48	□-6-A
		With drain cock	_	C1SF-2-A	C2SF-2-A	C3SF-2-A	C4SI	F-2-A
	Manual	Willi dialii cock	With level gauge	-	_	C3LF-8-A	C4LI	F-8-A
	discharge	With drain guide	_	_	C2SF□-2J-A	C3SF□-2J-A	C4SF	⊒-2J-A
Metal		(without valve function)	With level gauge	l	_	C3LF□-8J-A	C4LF	⊒-8J-A
ivietai	Note)	Normally closed (N.C.)	_	AD17-2-A	AD27-2-A	AD37□-2-A	AD47	□-2-A
	Automatic	INOTHIANY CIOSEU (N.C.)	With level gauge		_	AD37□-8-A	AD47	□-8-A
	discharge (Auto drain)	Normally open (N.O.)	_		_	AD38□-2-A	AD48	□-2-A
	(nuiv uialii)	Normany open (N.O.)	With level gauge	_	_	AD38□-8-A	AD48	□-8-A

Note) Minimum operating pressure: N.O. type–0.1 MPa (AD38-A, AD48-A); N.C. type–0.1 MPa (AD17-A, AD27-A) and 0.15 MPa (AD37-A, AD47-A).

Bowl assembly for the AW10-A to AW40-06-A models comes with a bowl seal.

 \square in bowl assembly part numbers indicates a pipe thread type (applicable tubing for auto drain). No indication is necessary for Rc thread; however, indicate N for NPT thread, and F for G thread. (For auto drain, Nil: ø10, N: ø3/8")

Please consult with SMC separately for psi and °F unit display specifications.




Filter Regulator Filter Regulator with Backflow Function AW20-B to AW60-B AW20K-B to AW60K-B




Construction

AW20(K)-B

AW30(K)-B/AW40(K)-B

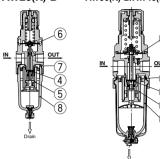

AW60(K)-B

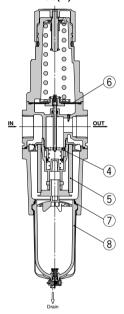

AW20K-B to AW60K-B (Filter Regulator with Backflow Function)





* The numbers correspond with those in the "Construction" of the AW series in the Best Pneumatics catalog.

Note) Minimum operating pressure: N.O. type-0.1 MPa (AD38-A, AD48-A); N.C. type-0.1 MPa (AD27-A) and 0.15 MPa (AD37-A, AD47-A). Bowl assembly comes with a bowl seal.

 $\hfill\square$ in bowl assembly part numbers indicates a pipe thread type (applicable tubing for auto drain). No indication is necessary for Rc thread; however, indicate N for NPT thread, and F for G thread. (For auto drain, Nil: ø10, N: ø3/8")

Please consult with SMC separately for psi and °F unit display specifications.

Replacement Parts

No.	Description	Material	Material Part no.							
IVO.	Description	Material	AW20(K)-B	AW30(K)-B	AW40(K)-B	AW40(K)-06-B	AW60(K)-B			
4	Valve assembly	Brass/HNBR	AW20P-340AS	AW30P-340AS	AW40P	-340AS	AW60P-090AS			
<u>(5)</u>	Filter element	Non-woven fabric	AF20P-060S	AF30P-060S	AF40F	P-060S	AW60P-060S			
6	Diaphragm assembly	Weatherable NBR	AR20P-150AS	AR30P-150AS	AR40P	-150AS	AR50P-150AS			
7	Bowl seal	NBR	C2SFP-260S	C32FP-260S		C42FP-260S				
	Bowl assembly Note 1)	Polycarbonate	C2SF-A	C3SF-A Note 2)		C4SF-A Note 2)				
9	Check valve assembly Note 3)	_	AR23KP-020AS							

Note 1) Bowl assembly comes with a bowl seal. Please consult with SMC separately for psi and °F unit display specifications

Note 2) Bowl assembly for the AW30(K)-B to AW60(K)-B models comes with a bowl guard (Material: Polycarbonate).

Note 3) Check valve assembly is applicable for a filter regulator with backflow function (AW20K to 60K-B) only. Assembly of a check valve cover, check valve body assembly and 2 mounting screws

Options/Part No.

	ptional speci	ifications			Model			
O	pilonai speci	ilications	AW20(K)-B	AW30(K)-B	AW40(K)-B	AW40(K)-06-B	AW60(K)-B	
Brack	et assembly	Note 1)	AW23P-270AS	AR33P-270AS	AR43P	-270AS	AW62P-270AS	
Set nu	ıt		AR23P-260S	AR33P-260S	AR43F	Note 2)		
	Round	Standard	G36-1	0-□01	G46-10-□01			
	type Note 3)	0.02 to 0.2 MPa setting	G36-4	1-□01	G46-4-□01			
Pressure	Round type Note 3)	Standard	G36-10-□01-L			G46-10-□01-L		
gauge	(with color zone)	0.02 to 0.2 MPa setting	G36-4-□01-L		G46-4-□01-L			
	Square embedded	Standard	GC3-10AS [GC3P-010AS (Pressure gauge cover only)]					
	type Note 4)	0.02 to 0.2 MPa setting	GC3-4	4AS [GC3P-01	0AS (Pressur	e gauge cover	only)]	
		NPN output, Wiring bottom entry	ISE3	5-N-25-MLA [I	SE35-N-25-M	(Switch body	only)]	
	l pressure	NPN output, Wiring top entry	ISE3	5-R-25-MLA [I	SE35-R-25-M	(Switch body	only)]	
switch	Note 5)	PNP output, Wiring bottom entry	ISE3	5-N-65-MLA [I	SE35-N-65-M	(Switch body	only)]	
		PNP output, Wiring top entry	ISE3	5-R-65-MLA [I	SE35-R-65-M	(Switch body	only)]	

Note 1) Assembly of a bracket and set nuts. Including 2 mounting screws for the AW60(K)-B

Note 2) Please consult with SMC regarding the set nuts for the AW60(K)-B.

Note 3) \square in part numbers for a round type pressure gauge indicates a pipe thread type. No indication is necessary for R; however, indicate N for NPT.

Please contact SMC regarding the pressure gauge supply for psi unit specifications.

Note 4) Including one O-ring and 2 mounting screws. []: Pressure gauge cover only


Note 5) In addition to the pressure switch body, lead wire with connector (2 m), adapter, lock pin, O-ring (1 pc.), mounting screw (2 pcs.) are attached.

[]: Switch body only. (Regarding how to order the digital pressure switch, refer to the Web Catalog.) A pressure switch can be mounted on the AW60(K)-B, with a special mounting adapter (Pressure switch adapter assembly: AW63P-310AS) and mounting screws (M3 x 0.5 x 14) which are delivered with the mounting adapter.


Bowl Assembly Part No.

Bowl	Drain					Model			
material	discharge mechanism	Drain port	Other	AW20-B	AW30-B	AW40-B	AW40-06-B	AW60-B	
		With drain cock	_	C2SF-A	_		_		
		Willi diaili cock	With bowl guard	C2SF-C-A	C3SF-A		C4SF-A		
	Manual discharge	Drain cock with barb fitting	With bowl guard	_	C3SF-W-A	C4SF-W-A			
Polycarbo-	discriarge	With drain guide	_	C2SF□-J-A	_		_		
nate		(without valve function)	With bowl guard	C2SF□-CJ-A	C3SF□-J-A		C4SF□-J-A		
	Note) Automatic	Normally closed (N.C.)	_	AD27-A	_		— U+31 🗆 U+3-A		
	discharge	Normally closed (N.C.)	With bowl guard	AD27-C-A	AD37□-A	AD47□-A			
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	AD38□-A	AD48□-A			
		With drain cock	_	C2SF-6-A	_				
	Manual discharge	With drain cock	With bowl guard	C2SF-6C-A	C3SF-6-A	C4SF-6-A			
		Drain cock with barb fitting	With bowl guard	_	C3SF-6W-A		C4SF-6W-A		
Nylon		With drain guide	_	C2SF□-6J-A	_	_			
Nylon		(without valve function)	With bowl guard	C2SF□-6CJ-A	C3SF□-6J-A		C4SF□-6J-A		
	Note)	Normally closed (N.C.)	_	AD27-6-A	_		_		
	Automatic discharge	Normally closed (N.C.)	With bowl guard	AD27-6C-A	AD37□-6-A		AD47□-6-A		
	(Auto drain)	Normally open (N.O.)	With bowl guard	_	AD38□-6-A		AD48□-6-A		
		With drain cock	_	C2SF-2-A	C3SF-2-A		C4SF-2-A		
	Manual	With drain cock	With level gauge	_	C3LF-8-A		C4LF-8-A		
	discharge	With drain guide	_	C2SF□-2J-A	C3SF□-2J-A		C4SF□-2J-A		
Metal		(without valve function)	With level gauge	_	C3LF□-8J-A		C4LF□-8J-A		
wetai	Note)	Normally closed (N.C.)	_	AD27-2-A	AD37□-2-A		AD47□-2-A		
	Automatic	Normally closed (N.C.)	With level gauge	_	AD37□-8-A		AD47□-8-A		
	discharge	Normally open (N.O.)	_	_	AD38□-2-A		AD48□-2-A		
	(Auto drain)	Normally open (N.O.)	With level gauge		AD38□-8-A		AD48□-8-A		



 

AWM30/40 AWD30/40

 

* The numbers correspond with those in the "Construction" of the AW□ series in the Best Pneumatics catalog.

Note 1) Assembly of a bracket and set nuts
Note 2)
in part numbers for a round pressure
gauge indicates a type of connection
thread. No indication is necessary for
R; however, indicate N for NPT. Please
contact SMC regarding the connection
thread NPT and pressure gauge supply
for psi unit specifications.

Note 3) Including one O-ring and 2 mounting screws. []: Pressure gauge cover only Note 4) Lead wire with connector (2 m), adapter, lock pin, O-ring (1 pc.), mounting screw (2 pcs.) are attached. []: Switch body only. Also, regarding how to order the digital pressure switch, refer to the Best Pneumatics catalog. A separate pressure switch adapter assembly (AW60P-310AS) is required only for AW60(K). For mounting, please

The mounting screw (M3 x 0.5 x 7)

 $\times 0.5 \times 14$).

use the included mounting screws (M3

Replacement Parts

					Part no.	
No	. Descrip	tion	Material	AWM20 AWD20	AWM30 AWD30	AWM40 AWD40
3	Valve assembl	у	Brass, HNBR	AWM20P-090AS	AWM30P-090AS	AWM40P-090AS
	Element assembly	AWM20 to AWM40	_	AFM20P-060AS	AFM30P-060AS	AFM40P-060AS
4	Element assembly	AWD20 to AWD40	_	AFD20P-060AS	AFD30P-060AS	AFD40P-060AS
5	Diaphragm ass	sembly	Weather resistant NBR	AR20P-150AS	AR30P-150AS	AR40P-150AS
6	Bowl O-ring	<u> </u>		C2SFP-260S	C3SFP-260S	C4SFP-260S
7	Bowl assembly	Note 1)	Polycarbonate	C2SF	C3SF Note 2)	C4SF Note 2)

Note 1) Bowl O-ring is included. Please contact SMC regarding the bowl assembly supply for psi and °F unit specifications.

Note 2) Bowl assembly for the AWM30/40, AWD30/40 comes with a bowl guard (steel band material).

Options/Part No.

				Model			
	Optional speci	fications	AWM20 AWD20	AWM30 AWD30	AWM40 AWD40		
Bracket	t assembly ^{Note 1})	AW20P-270AS	AR30P-270AS	AR40P-270AS		
Set nut			AR20P-260S	AR30P-260S	AR40P-260S		
	Round	Standard	G36-10-□01		G46-10-□02		
	type Note 2)	0.02 to 0.2 MPa setting	G36-2-□01		G46-2-□02		
Pressure	Round type Note 2)	Standard	G36-10-□01-L		G46-10-□02-L		
gauge	(with color zone)	0.02 to 0.2 MPa setting	G36-2-□01-L		G46-2-□02-L		
	Square embedded	Standard	GC3-10AS [GC3P-010AS (Pressure gauge cover o				
	type Note 3)	0.02 to 0.2 MPa setting	GC3-2AS [GC3P-010AS (Pressure gauge cover only)				
		NPN output/Wiring bottom entry	ISE35-N-25-MLA	(Salaharan	witch body only)]		
	pressure	NPN output/Wiring top entry	ISE35-R-25-MLA	(SE35-R-25-M	witch body only)]		
switch	Note 4)	PNP output/Wiring bottom entry	ISE35-N-65-MLA	witch body only)]			
		PNP output/Wiring top entry	ISE35-R-65-MLA	(Salaharan	witch body only)]		
Float ty	Float type auto		AD27	AD37	AD47		
drain No	te 5) Note 6)	N.O.	_	AD38	AD48		

Semi-standard/Bowl Assembly Part No.

						r art ivo.		
Semi-s				tions			Model	
Bowl material	Float	Note 6) type drain	With drain	With	With bowl	AWM20 AWD20	AWM30 AWD30	AWM40 AWD40
	N.C.	N.O.	guide	fitting	guard			
	_	_	_	_	•	C2SF-C	_	_
	•	_	_	_	•	AD27-C	_	_
Polycarbonate	_	_	•	-	_	C2SF-J	C3SF-J	C4SF-J
	_	_	_	•	_	_	C3SF-W	C4SF-W
	_	_	•	-	•	C2SF-CJ	_	_
	_	_	_	-	_	C2SF-6	C3SF-6	C4SF-6
	_	_	_	-	•	C2SF-6C	_	
	•	_	_	_	_	AD27-6	AD37-6	AD47-6
Nylon	_	•	_	_	_	_	AD38-6	AD48-6
Nylon	•	_	_	_	•	AD27-6C	_	_
	_	_	•	_	_	C2SF-6J	C3SF-6J	C4SF-6J
	_	_	_	•	_	_	C3SF-6W	C4SF-6W
	_	_	•	-	•	C2SF-6CJ	_	_
	_	_	_	-	_	C2SF-2	C3SF-2	C4SF-2
Metal	•	_	_	-	_	AD27-2	AD37-2	AD47-2
ivietai	_	•	_	_	_	_	AD38-2	AD48-2
	_	_	•	_	_	C2SF-2J	C3SF-2J	C4SF-2J
Metal bowl with	_	_	_	_	_	_	C3LF-8	C4LF-8
	•	_	_	_	_	_	AD37-8	AD47-8
level gauge	_	•	_	_	_	_	AD38-8	AD48-8
	_		•	_	_		C3LF-8J	C4LF-8J

attached to the digital pressure switch assembly will not be required.

Note 5) Minimum operating pressure: N.O. type–0.1 MPa; N.C. type–0.1 MPa (AD27) and 0.15 MPa (AD37/47). Please contact SMC for psi and °F unit specifications.

Note 6) Please consult SMC for details on drain piping to fit NPT or G port sizes.

Note) • Including O-ring.

Bowl assembly for the AWM30/40, AWD30/40 comes with a bowl guard (steel band material).
 (except when the bowl material is metal)

Replacement Procedure is on p. 497, 503

Regulator with Built-in Pressure Gauge

ARG20(K)/30(K)/40(K)



Construction

Replacement Parts

- в

No.	Description	Material	Qty.		Part no.		Note
INO.		Material	Qiy.	ARG20(K)	ARG30(K)	ARG40(K)	Note
4	Valve	Brass, HNBR	1	AR20P-410S	AR30P-410S	AR40P-410S	
5	Diaphragm assembly	Weather resistant NBR	1	AR20P-150AS	AR30P-150AS	AR40P-150AS	
6	Valve guide assembly	POM, NBR	1	AR20P-050AS	AR30P-050AS	AR40P-050AS	
7	Pressure gauge cover	PC	1	ARG20P-400S	ARG30P-400S	ARG40P-400S	
8	Pressure gauge Note 1)	_	1	GB2-10AS	GB3-10AS	GB4-10AS	
9	Clip	Stainless steel	1	ARG20P-420S	ARG30P-420S	ARG40P-420S	
10	Check valve assembly Note 2)	_	1	AR20KP-020AS			ARG20K, 30K, 40K

Note 1) Only the standard part numbers are listed for the pressure gauges.

Note 2) Check valve assembly contains check valve, check valve cover and its screws (2 pcs).

Options/Part No.

			Applicable model		ADC20(K)	ADC40(K)	
Option				ARG20(K)	ARG30(K)	ARG40(K)	
Bracket assembly Note 1)				ARG20P-270AS	ARG30P-270AS	ARG40P-270AS	
Set nut				ARG20P-260S	ARG30P-260S	ARG40P-260S	
	Pressure	Standard	0 to 1.0 MPa GB2-10AS		GB3-10AS	GB4-10AS	
Pressure	e gauge display		0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS	
gauge		Optional	0 to 150 psi	GB2-P10AS	GB3-P10AS	GB4-P10AS	
	range		0 to 45 psi	GB2-P3AS	GB3-P3AS	GB4-P3AS	

Note 1) Assembly includes a bracket and set nuts.




AWG20/30/40




Construction

  
AWG20








AWG30/40

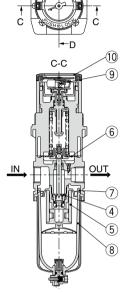

 

* The numbers correspond with those in the "Construction" of the AWG series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Otre		Part no.		Note
INO.	Description	Iviateriai	Qty.	AWG20	AWG30	AWG40	Note
4	Valve assembly	Brass, HNBR	1	AW20P-340AS	AW30P-340AS	AW40P-340AS	
5	Filter element	Non-woven fabric	1	AF20P-060S	AF30P-060S	AF40P-060S	
6	Diaphragm assembly	Weather resistant NBR	1	AR20P-150AS	AR30P-150AS	AR40P-150AS	
7	Bowl O-ring	NBR	1	C2SFP-260S	C3SFP-260S	C4SFP-260S	
8	Bowl assembly Note 1)	PC	1	C2SF	C3SF Note 2)	C4SF Note 2)	
9	Pressure gauge Note 3)	_	1	GB2-10AS	GB3-10AS	GB4-10AS	
10	Pressure gauge cover	PC	1	ARG20P-400S	ARG30P-400S	ARG40P-400S	
11	Clip	Stainless steel	1	ARG20P-420S	ARG30P-420S	ARG40P-420S	

Note 1) Including O-ring. Contact SMC regarding the bowl assembly supply for psi and °F unit specifications.

Note 2) Bowl assembly for AWG30/40 includes a bowl guard (steel band material).

Note 3) Only the standard part numbers are listed in the pressure gauges. For the semi-standard part numbers, refer to the optional part numbers.

Options/Part No.

Option			Applicable model	AWG20	AWG30	AWG40
Bracket assembly Note 1)				ARG20P-270AS	ARG30P-270AS	ARG40P-270AS
Set nut	_			ARG20P-260S	ARG30P-260S	ARG40P-260S
	Pressure	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
Pressure	gauge display range	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
gauge			0 to 150 psi	GB2-P10AS	GB3-P10AS	GB4-P10AS
			0 to 45 psi	GB2-P3AS	GB3-P3AS	GB4-P3AS
Float type auto drain Note 2) N.O. N.C.			N.O.	_	AD38	AD48
			N.C.	AD27	AD37	AD47

Note 1) Assembly includes a bracket and set nuts.

Note 2) Minimum operating pressure: N.O. type-0.1 MPa; N.C. type-0.1 MPa (AD27) and 0.15 MPa (AD37/47). Contact SMC regarding the specifications for psi unit and °F.

ir Preparation Equipment Air


Industrial Filters


AWG20K/30K/40K

Construction

  
AWG20K







AWG30K/40K

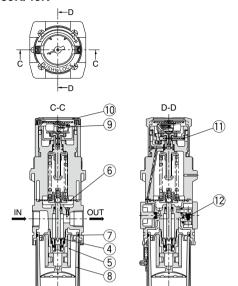

* The numbers correspond with those in the "Construction" of the AWG series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Otre		Part no.		Note
NO.	Description	Material	Qty.	AWG20K	AWG30K	AWG40K	Note
4	Valve assembly	Brass, HNBR	1	AW20P-340AS	AW30P-340AS	AW40P-340AS	
5	Filter element	Non-woven fabric	1	AF20P-060S	AF30P-060S	AF40P-060S	
6	Diaphragm assembly	Weather resistant NBR	1	AR20P-150AS	AR30P-150AS	AR40P-150AS	
7	Bowl O-ring	NBR	1	C2SFP-260S	C3SFP-260S	C4SFP-260S	
8	Bowl assembly Note 1)	PC	1	C2SF	C3SF Note2)	C4SF Note2)	
9	Pressure gauge Note 3)	_	1	GB2-10AS	GB3-10AS	GB4-10AS	
10	Pressure gauge cover	PC	1	ARG20P-400S	ARG30P-400S	ARG40P-400S	
11	Clip	Stainless steel	1	ARG20P-420S	ARG30P-420S	ARG40P-420S	
12	Check valve assembly	_	1	AR20KP-020AS			

Note 1) Including O-ring. Contact SMC regarding the bowl assembly supply for psi and °F unit specifications.

Options/Part No.

o paromori						
Option			Applicable model	AWG20K	AWG30K	AWG40K
Bracket assembly Note 1)				ARG20P-270AS	ARG30P-270AS	ARG40P-270AS
Set nut				ARG20P-260S	ARG30P-260S	ARG40P-260S
	Pressure	Standard	0 to 1.0 MPa GB2-10AS		GB3-10AS	GB4-10AS
Pressure	gauge display	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
gauge			0 to 150 psi	GB2-P10AS	GB3-P10AS	GB4-P10AS
	range		0 to 45 psi	GB2-P3AS	GB3-P3AS	GB4-P3AS
Float type auto drain Note 2) N.O. N.C.			N.O.	_	AD38	AD48
			N.C.	AD27	AD37	AD47

Note 1) Assembly includes a bracket and set nuts.

Note 2) Minimum operating pressure: N.O. type-0.1 MPa; N.C. type-0.1 MPa (AD27) and 0.15 MPa (AD37/47). Contact SMC regarding the specifications for psi unit and °F.




Note 2) Bowl assembly (AWG30K/40K) includes a bowl guard (steel band material).

Note 3) Only the standard part numbers are listed for the pressure gauges. For the semi-standard part numbers, refer to the optional part numbers.

AR425 to 935



Construction

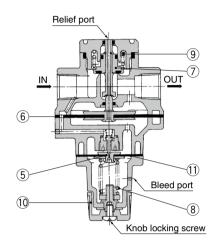

* The numbers correspond with those in the "Construction" of the AR series in the Best Pneumatics catalog.

Renlacement Parts

кер	Replacement Parts								
No.	Description	Material	Otre		Part no.				
INO.	Description		Qty.	AR425/435	AR625/635	AR825/835	AR925/935	Note	
5, 11	Exhaust valve assembly Note 1)	_	1	132586A	132586A	132586A	132586A		
6	Main valve side diaphragm assembly	_	1	132581A	132659A	13275A	13285A		
7	Valve assembly	_	1	132572A	132653A	132752A	132829A		
8	Adjusting spring	Steel wire	4	135053(AR425)	135053(AR625)	135053(AR825)	135053(AR925)		
0	Adjusting spring		'	135025(AR435)	135025(AR635)	135025(AR835)	135025(AR935)		
9	Valve spring	Stainless steel	1	135211	132656	132713	13289		
10	10 Knob ABS 1 13414								

Note 1) Diaphragm is included.

Options/Part No.

- P							
		Part no.					
Description Model	AR4□5	AR6□5	AR8□5	AR9□5			
Bracket	B24P	B25P	_	_			
Pressure gauge with limit indicator Note 1)	G ₄	G46-10- 02 (Max. 1.0 MPa), G46-2- 02 (Max. 0.2 MPa)					

Note 1) • In the gauge part no. (e.g. G46-10- 🗆 02), indicate kind of the connecting thread. Put nothing for Rc and "N" for NPT thread. • Please consult with SMC for NPT pressure gauge.


Note 2) Use caution not to tighten excessively when mounting a pressure gauge, otherwise it may result in a breakdown. Use a pipe tape for sealing. Recommended torque: 12 to 14 N·m.


MR Unit (Regulator with Mist Separator)

AMR3000 to 6000



Construction

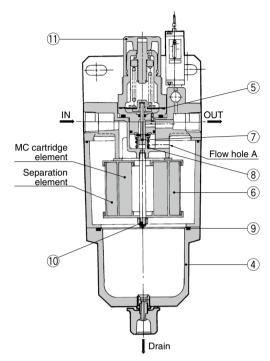

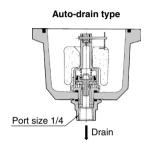

* The numbers correspond with those in the "Construction" of the AMR series in the Best Pneumatics catalog.

Panlacement Darte

HCP	neplacement Faits									
No.	Description	Material	Qty		Par	t no.		Note		
NO.	Description	Material	Qty	AMR3000	AMR4000	AMR5000	AMR6000	Note		
4	Bowl assembly	Aluminum die-casted	1	13573A	13553A	13583A	13563A			
5	Diaphragm assembly	Weather resistant NBR	1	1349161A	131515A	131515A	131614A			
6	Element Note)	_	1	13579	135511	13589	13569			
7	Valve assembly	Brass, HNBR	1	135711A	13154A	135811A	135614-1A			
8	Valve spring	Stainless steel	1	135011	131514	131613	135413			
9	O-ring	NBR	1	KA00064	KA00466	KA00452	KA00455			
10	Gasket	Fiber	1	135714	635327	635327	63555			
11	Knob	POM	1	1349167	131534	131534	131634			

Note) The MC cartridge element and the separation element are integrated.

Accessory (Standard)/Part No.

Model name	Model	AMR3000	AMR4000	AMR5000	AMR6000
Bra	cket	13576	13556	13587 13568	
Pressure gauge Note 5, 6)	1.0MPa	G36-1	0-□01	G46-1	0-□02

Accessory (Option)/Part No.

Model name	AMR3000	AMR4000	AMR5000	AMR6000		
Adapter assembly Note 7)	¹⁄₄: E3-02□ ³⁄ ₈ : E3-03□	¹ / ₄ : E4-02□ ³ / ₈ : E4-03□ ¹ / ₂ : E4-04□	¹/₂: E5-04□ ³/₄: E5-06□	³ ⁄ ₄ : E6-06□ 1 : E6-10□		
Float type auto drain (AMR□100) Note 8)	AD33-X203	AD33-X202	AD33-X210	AD33-X201		
Compact pressure switch	IS10-01 (0.4 MPa setting)					
Elbow (R x Rc) Note 9)	135	510	135613			

Note 5) • □ in the gauge part number (e.g. G36-10-□01) indicates thread. Specify no symbol for "Rc", and "N" for "NPT".
• Please consult with SMC if "NPT" gauge is required.

Note 8) Min. operating pressure = 0.1 MPa

Note 9) If a compact pressure switch is mounted later on, an elbow (R x Rc) is necessary.




Note 6) Use caution not to tighten excessively when mounting a pressure gauge, otherwise it may result in a breakdown. Use a pipe tape for sealing. Recommended tightening torque for pressure regulator: R 1/8 = 7 to 9 N·m, R 1/4 = 12 to 14 N·m


Note 7) Piping adapter, O-ring, Hexagon socket bolt, Hexagon socket bolt assembly. These are shipped together with products. "□" in the gauge part number indicates thread type. Specify no symbol for "RC", "N" for "NPT", and "G" for "F".

ARM5A Series

The Replacement Procedure is on p. 527

 
Construction



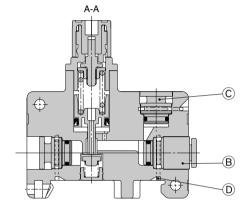


Replacement Parts

Description	Material C		Part no.					
O-ring	NBR		136019					
Fitting assembly	_	1	See below					
Port plug	PBT, HNBR	1	See below					
Clip	Stainless steel	3	136010					
	O-ring Fitting assembly Port plug	O-ring NBR Fitting assembly — Port plug PBT, HNBR	O-ring NBR 1 Fitting assembly — 1 Port plug PBT, HNBR 1					

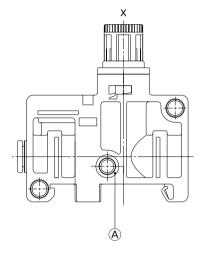


* The numbers correspond with those in the "Construction" of the ARM5A series in the Best Pneumatics catalog.


One-touch Fittings for Centralized Supply Block

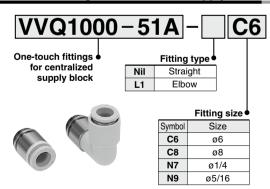

Straight type

 

Elbow type

 

Port Plug

VVQ0000-58A

Single unit regulator/

Fort plug for regulator block



Note) The O-ring is attached. Refer to page 527 for details of the replacement.

	One-touch fittings for centralized supply block			
Fitting size	Straight	Elbow	Elbow	Elbow
	R	S	Т	U
ø4, ø5/32	_	_	_	_
ø6	3	12.5	19	35.5
ø1/4	3	12.5	19	35.5
ø8, ø5/16	5	13.5	21	38.5

 
Note) The O-ring is attached.


Refer to page 528 for details of the replacement.


ARM5B Series



Construction



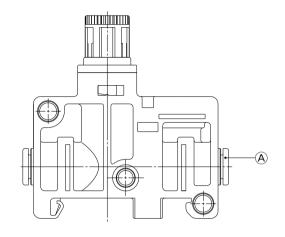

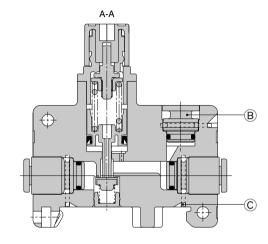


Replacement Parts

No.	Description	Material	Qty.	Part no.
Α	Fitting assembly	_	2	See below
В	Port plug	PBT, HNBR	1	See below
С	Clip	Stainless steel	3	136010


* The numbers correspond with those in the "Construction" of the ARM5B series in the Best Pneumatics catalog.

One-touch Fittings for Regulator Block

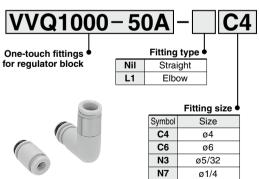

>

 Straight type



Port Plug

VVQ0000-58A

Single unit regulator/ •
Port plug for regulator block



Note) The O-ring is attached. Refer to page 527 for details of the replacement.

	One-touch fittings for regulator block			
Fitting size	Straight	Elbow	Elbow	Elbow
	٧	W	Х	Υ
ø4, ø5/32	2.5	6	11	35.5
ø6	3	6.5	11	36
ø1/4	6.5	6	11.5	38.5
ø8, ø5/16	_	_	_	_


Note) The O-ring is attached.

Refer to page 528 for details of the replacement.



ARM5S Series

The Replacement Procedure is on p. 527

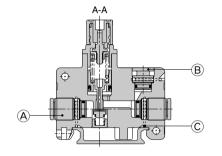


* The numbers correspond with those in the "Construction" of the ARM5S series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Qty.	Part no.
Α	Fitting assembly	_	2	See below
В	Port plug	PBT, HNBR	1	See below
С	Clip	Stainless steel	3	136010

One-touch Fittings for Regulator

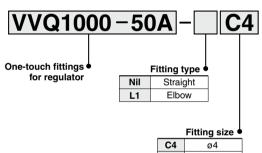

Port Plug



Single unit regulator/

 
◆
Port plug for regulator block




Note) The O-ring is attached.

Refer to page 527 for details of the replacement.

Straight type



Elbow type

 

	One-touch fittings for regulator			
Fitting size	Straight	Elbow	Elbow	Elbow
	٧	W	Х	Υ
ø4, ø5/32	2.5	6	11	35.5
ø6	3	6.5	11	36
ø1/4	6.5	6	11.5	38.5
ø8, ø5/16	_	_	_	_


Note) The O-ring is attached. Refer to page 528 for details of the replacement.


Regulator/Single Unit Type

ARM10 Series



Construction

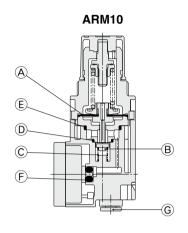

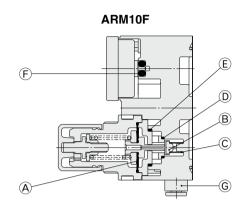


Replacement Parts

No.	Description	Material	Part no.	Note
Α	Diaphragm	Weather resistant	136126A	Relieving type
	assembly	NBR, POM	136126-1A	Non-relieving type
В	Valve	HNBR,	136127-30#1	
В	vaive	Aluminum alloy		
С	Valve spring	Stainless steel	136131	
D	O-ring	NBR	136146	Standard model
	ט O-ring	HNBR	136146-30	Oil-free specification
Е	- Oi	NBR	136147	Standard model
_	O-ring	HNBR	136147-30	Oil-free specification
		NBR	136148	Standard model
		HNBR	136148-30	Oil-free specification
F	O-ring	NBR	KA01731	Standard model for digital pressure switch
		HNBR	KA01613	Oil-free spec. for digital pressure switch
G	Fitting assembly	_	The right reference	


* The numbers correspond with those in the "Construction" of the ARM10 series in the Best Pneumatics catalog.

One-touch Fittings for Regulator

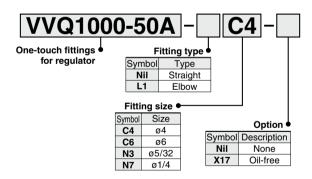

ARM10



 

Fitting size	Х
ø4, ø5/32	2
ø6	2
ø1/4	6

ow type		
•	1 1	
	1 1	
	1 1	
- 1	1 1	
121	1 1	
5.5	1. 1	
47		J
1		
1	Of	
∵		
~ T		
<u> </u>		
	1 - i	

Х	Υ
10.5	21.5
10.5	22
10.5	24.5
	10.5

ARM10F

Straight type



Fitting size	Х
ø4, ø5/32	7
ø6	7
ø1/4	11


Elbow type	
10.5	
×	


Fitting size	Х	Υ
ø4, ø5/32	15.5	21.5
ø6	15.5	22
ø1/4	15.5	24.5

ARM11A Series

The Replacement Procedure is on p. 531

Construction

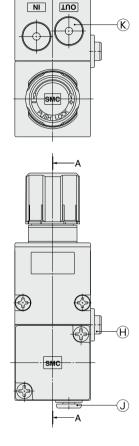

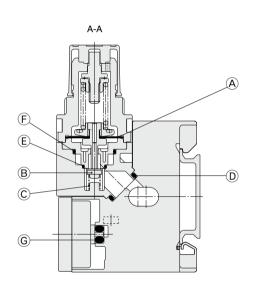

* The numbers correspond with those in the "Construction" of the ARM11A series in the Best Pneumatics catalog.

Replacement Parts


	Description	N4-4	Dt	NI-+-
No.	Description	Material	Part no.	Note
Α	Diaphragm assembly	Weather resistant NBR, POM	136126A	Relieving type
	Diapinagin assembly	Weather resistant NBH, 1 OW	136126-1A	Non-relieving type
В	Valve	HNBR, Aluminum alloy	136127-30#1	
С	Valve spring	Stainless steel	136131	
D	Gasket	HNBR	136137-30	
Е	O winner	NBR	136146	Standard model
_	O-ring	HNBR	136146-30	Oil-free specification
F	O minor	NBR	136147	Standard model
г	O-ring	HNBR	136147-30	Oil-free specification
		NBR	136148	Standard model
_	O	HNBR	136148-30	Oil-free specification
G	O-ring	NBR	KA01731	Standard model for digital pressure switch
		HNBR	KA01613	Oil-free spec. for digital pressure switch
	O winner	NBR	136149	Standard model
Н	O-ring	HNBR	136149-30	Oil-free specification
J	Fitting assembly	_	Refer to page 272.	
K	Port plug	PBT/HNBR	Refer to page 272.	


Compact Manifold Regulator/Individual Supply Type

ARM11B Series



Construction

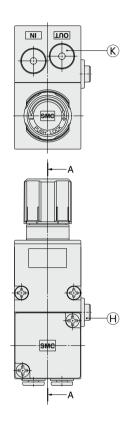

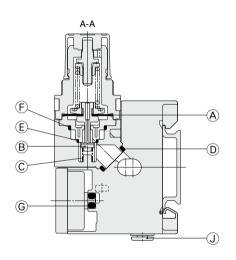

* The numbers correspond with those in the "Construction" of the ARM11B series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Part no.	Note
			136126A	Relieving type
Α	Diaphragm assembly	Weather resistant NBR, POM	136126-1A	Non-relieving type
В	Valve	HNBR, Aluminum alloy	136127-30#1	
С	Valve spring	Stainless steel	136131	
D	Gasket	HNBR	136137-30	
E	O minor	NBR	136146	Standard model
_	O-ring	HNBR	136146-30	Oil-free specification
F	O minor	NBR	136147	Standard model
Г	O-ring	HNBR	136147-30	Oil-free specification
		NBR	136148	Standard model
G	O minor	HNBR	136148-30	Oil-free specification
G	O-ring	NBR	KA01731	Standard model for digital pressure switch
		HNBR	KA01613	Oil-free spec. for digital pressure switch
	O min m	NBR	136149	Standard model
Н	O-ring	HNBR	136149-30	Oil-free specification
J	Fitting assembly	_	Refer to page 272.	
K	Port plug	PBT/HNBR	Refer to page 272.	





Compact Manifold Regulator ARM11A/B Series

Options

The Replacement Procedure is on p. 531

One-touch Fittings for Regulator Block

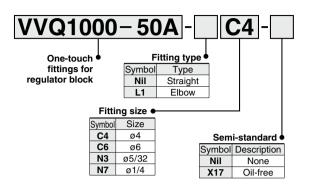


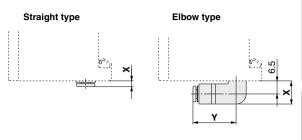


Fitting size	Х
ø4, ø5/32	3
ø6	3
ø1/4	7


Fitting size	Х	Υ
ø4, ø5/32	11.5	19
ø6	11.5	19.5
ø1/4	11.5	22

 One-touch Fittings for Common Supply Block

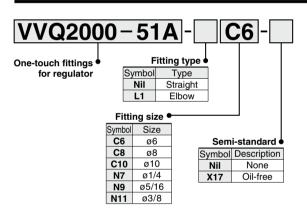




Fitting size	Х
ø6	5
ø8, ø5/16	5
ø10, ø3/8	5.5
ø1/4	5

 

Fitting size	Х	Υ
ø6	19	20
ø8, ø5/16	20	23
ø10, ø3/8	22	26
ø1/4	19	20.5

Port Plug

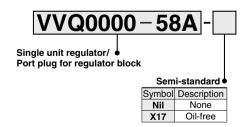



ndustrial Filters

Replacement Procedure

Actuators Modular F.R.L. Pressure Control Equipment

Air Preparation Equipment Industrial Filters

Air Preparation Equipment

- 1 Indication of replacement of elements, inspection items p. 275
- 2 Troubleshooting p. 276
- 3 Details of replacement parts **AMJ** Drain Separator for Vacuum p. 277 p. 277 **AMG** p. 278 p. 278 Water Separator **AFF** p. 279 p. 279 Main Line Filter ΑM Mist Separator p. 280 p. 280 **AMD** Micro Mist Separator p. 281 p. 281 **AMH** Micro Mist Separator with Pre-filter p. 282 p. 282 Super Mist Separator p. 283 p. 283 **AME AMF** Odor Removal Filter p. 284 p. 284

Industrial Filters

- 1 Indication of replacement of elements, inspection items p. 286
- 2 How to select element order number for replacement

How to Select Element Order Number for Replacement	p. 287
Elements: Sintered Metal/Fiber	p. 289
Standard Elements: Paper/Micromesh	p. 290

3 Detail	ls of replacement parts	Replacement Parts Replacement Procedure
FGD	Industrial Filter: Vessel Series	p. 291 p. 537
FGE	Industrial Filter: Vessel Series	p. 293 p. 538, 540
FGG	Industrial Filter: Vessel Series	p. 295 p. 543
FGA	Industrial Filter: Vessel Series	p. 297 p. 545
FGB	Industrial Filter: Vessel Series	p. 298 p. 549
FGC	Industrial Filter: Vessel Series	p. 299 p. 553
FGF	Bag Filter	p. 300 p. 555
FGH	High Precision Filter for Liquids	p. 302 p. 557
FQ1	Quick Change Filter	p. 304 p. 559
FN1	Low Maintenance Filter	p. 306 p. 560
FN4	Low Maintenance Filter	p. 306 p. 560

Air Preparation Equipment

Indication of replacement of elements, inspection items

The following describes the general contents of the element replacement and regular check.

Main line filter/mist separator/micro mist separator replacement standards and inspection items

Replacement standards

<Element replacement timing>

a. For AFF2C to 22C, 37B, 75B, AM 150C to 550C, 650, and 850

The pressure drop reaches 0.1 MPa or two years have elapsed after operation start, whichever comes earlier. [The pressure drop can be checked using the equipment with the element service indicator (-T) or differential pressure gauge (made to order specifications).]

b. For AFF75A to 220A, AMD8□□ to AMD10□□ (Free standing type)

The pressure drop reaches 0.1 MPa or one year has elapsed after operation start, whichever comes earlier. Check the pressure drop using the pressure gauge. (Equipment with pressure gauge: -G)

c. For AME

If red spots appear on the element surface before the standards (a) shown above are satisfied, replace the element.

 
d. For AMF

If oil odor is found at the outlet before the standards (a) or (b) shown above are satisfied, replace the element.

When replacing the element, replace also the O-ring and gasket with new ones. For details about how
to replace the O-ring and gasket, Refer to relevant pages that describe the replacement parts in detail.

■ Inspection items


- ① If the element reaches the replacement timing, immediately replace the element with a new one. If the element is used continuously without replacement, the element may be damaged.
- ② Be sure to discharge the drain accumulated in the filter container. If the drain is not discharged, the accumulated drain flows to the outlet. When using the AFF2C to 22C, 37B, 75B, AM□150C to 550C, 650, or 850 with the drain cock, drain guide, or ball valve, discharge the drain before the drain level reaches the center of the sight glass. If the drain is not discharged, the drain flows to the outlet. Be sure to discharge the drain and check the discharge status while referring to the figure on the right.



- 3 With auto drain
 - This auto drain functions to discharge the drain when the drain level reaches the upper portion of the sight glass.
 - For the AFF2C to 22C, 37B, AM□150C to 550C, and 650 with the auto drain, the drain is automatically discharged with the knob tightened to the "S" side during normal operation. Additionally, the drain can also be discharged manually.

<Manual operation procedure>

 A manual knob is provided at the end of the auto drain. This knob is tightened to the "S" side during normal operation. When the knob is loosened to the "O" side, the drain can be discharged. (Note that the drain gushes from the drain port if the pressure remains inside the filter.)



■ Probable troubles (Reference)

Refer to the "Troubleshooting". (p. 276)

2 Troubleshooting

The following describes the general contents of the troubleshooting.


Trouble (Symptom)	Cause	Corrective action	
The pressure drop is large.	The flow rate is excessive.	Use the equipment at a flow rate that is lower than the maximum flow rate diagram stated on the catalog or review the filter size.	
	The element is used continuously even after its service life has expired.	Replace the element.	
Oily content or solid foreign object comes to the secondary side.	The flow rate is excessive.	Use the equipment at a flow rate that is lower than the maximum flow rate diagram stated on the catalog or review the filter size.	
	The element is used continuously even after its service life has expired.	Replace the element.	
	The drain discharge is faulty.	[Manual drain] Discharge the drain before it reaches the center of the sight glass. [Auto drain] Clean the inside or replace the autodrain.	
	Oily content, such as grease flows out from the equipment installed on the secondary side of the filter.	Install the AM series at the end of the pipe.	
	Ambient air is entangled. (When used for the air blow.)	Perform the air blow in a clean environment. The nozzle becomes negative pressure and the ambient air is entangled. This may cause oily content or solid foreign object to enter the blow air.	
	The cleaning of the pipe on the secondary side is insufficient.	Clean the inside of the pipe on the secondary side.	
The drain leaks outside.	The seat is faulty.	Check the O-ring for foreign object sticking Check the O-ring for kink, flaw, crack, or deterioration.	
The drain leaks from	The seat is faulty (foreign object is sticking).	Clean the inside or replace the auto drain.	
the float type auto drain.	The operation is faulty.	Clean the inside or replace the auto drain.	
	The supply pressure is insufficient.	Check the air supply capability. N.O. type 0.1 MPa N.C. type 0.15 MPa	


AMJ Series

Construction

AMJ3000, 4000

 AMJ5000



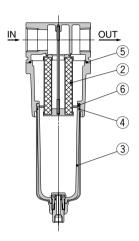

* The numbers correspond with those in the "Construction" of the AMJ series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Part no.			Note
INO.	Description	ivialeriai	AMJ3000	AMJ4000	AMJ5000	Note
2	Element assembly	_	AMJ-EL3000	AMJ-EL4000	AMJ-EL5000	
3	Bowl assembly Note)	_	AMJ-CA30-□	AMJ-CA40-□	AMJ-CA40-□	
4	O-ring	NBR	C3SFP-260S	C4SFP-260S	C4SFP-260S	
5	O-ring	NBR	_	_	111710	
6	Spacer	NBR	AMJ-SA001	AMJ-SA002	AMJ-SA003	


Note) The spacer 6 is not included in the bowl assembly.

Maintenance

⚠ Caution

Replace the element when one of followings occurs.

- Pressure drop reaches 0.02 MPa.
- Element operates for 2 years.
- Element model number: AMJ-EL****
- * **** is AMJ size symbol. (ex: AMJ-EL3000)

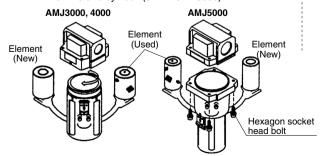

2. How to replace element assembly.

First, discharge the pressure in the case. (Make pressure 0 MPa)

- Remove case (housing).
- Replace element.
- Assemble case (housing).
- * () for AMJ5000.





AMG Series

Construction

AMG150C to AMG550C, AMG650

AMG850

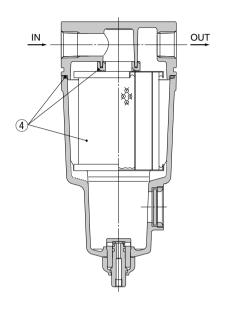

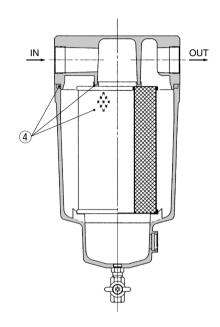

* The numbers correspond with those in the "Construction" of the AMG series in the Best Pneumatics catalog.

Replacement Parts

No	Description*1 Material		Applicable		Model					
INO.	Description	Malenai	model*2	AMG150C	AMG250C	AMG350C	AMG450C	AMG550C	AMG650	AMG850
4	Element	Resin,	Except option F	AMG-EL150	AMG-EL250	AMG-EL350	AMG-EL450	AMG-EL550	AMG-EL650	AMG-EL850
4	assembly	others	For option F	AMG-EL150-F	AMG-EL250-F	AMG-EL350-F	AMG-EL450-F	AMG-EL550-F	_	_

- *1) Element assembly: With gasket (1 pc.) and O-ring (1 pc.)
- *2) F option, the rubber material: In the case of fluororubber

Maintenance

1.Element replacement

extremely dirty air might cause clogging due to deteriorated oil or rust. Replacement is necessary regularly. (When pressure drop reach 0.1MPa or replace element with new one when element has been used for 2 years.)


Element (gasket, O-ring accessory) model number:

* *** is AMG size symbol. (Ex: AMG-EL150)

2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa)


- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

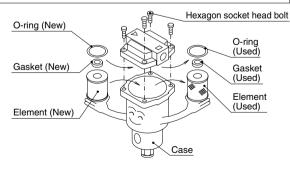


AFF Series

Construction

AFF2C to AFF22C, AFF37B

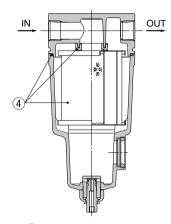

AFF75B

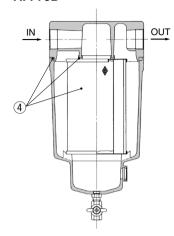

* The numbers correspond with those in the "Construction" of the AFF series in the Best Pneumatics catalog.

Replacement Parts

No.	Description*1 Material		Applicable		Model										
	Describitor.	Materiai	model*2	AFF2C	AFF4C	AFF8C	AFF11C	AFF22C	AFF37B	AFF75B					
4	Element	Cotton paper,	Except option F	AFF-EL2B	AFF-EL4B	AFF-EL8B	AFF-EL11B	AFF-EL22B	AFF-EL37B	AFF-EL75B					
	assembly	others	For option F	AFF-EL2B-F	AFF-EL4B-F	AFF-EL8B-F	AFF-EL11B-F	AFF-EL22B-F	_	_					

- *1) Element assembly: With gasket (1 pc.) and O-ring (1 pc.)
- *2) F option, the rubber material: In the case of fluororubber

Maintenance


1.Replace the element when one of followings occurs.


- Pressure drop reaches 0.1 MPa.
- Element operates for 2 years.
 Element assembly (gasket, O-ring accessory) model number:
 AFF-FI ***
- * *** is AFF size symbol. (ex.: AFF-EL2B)

2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

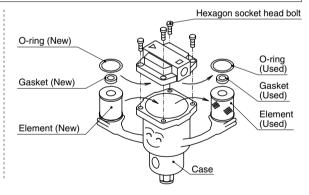

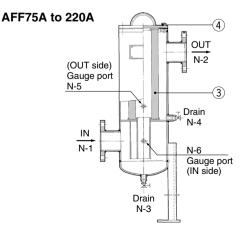

Replacement Parts

No.	Description	Motorial	Qty.	Model							
	Description	IVIalenai		AFF75A	AFF125A	AFF150A	AFF220A				
3	Element		1	EC700)-003N	EC800-003N	EC900-003N				
4	Seal	NBR	1	AL-	33S	AL-34S	AL-35S				





AM Series

Construction

AM150C to AM550C, AM650

AM850

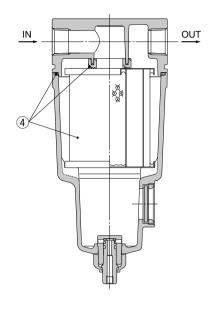

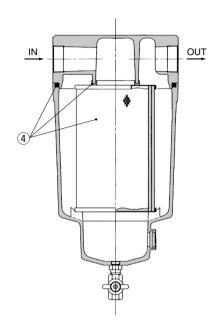

* The numbers correspond with those in the "Construction" of the AM series in the Best Pneumatics catalog.

Replacement Parts

No.	Description*1 Material	Applicable	Model									
INO.		Materiai	model*2	AM150C	AM250C	AM350C	AM450C	AM550C	AM650	AM850		
	Element	Glass fiber,	Except option F	AM-EL150	AM-EL250	AM-EL350	AM-EL450	AM-EL550	AM-EL650	AM-EL850		
4	assembly	others	For option F	AM-EL150-F	AM-EL250-F	AM-EL350-F	AM-EL450-F	AM-EL550-F	_	_		

- *1) Element assembly: With gasket (1 pc.) and O-ring (1 pc.)
- st 2) F option, the rubber material: In the case of fluororubber

Maintenance


Replace the element when one of followings occurs.

- Pressure drop reaches 0.1 MPa.
- Element operates for 2 years.
 Element assembly (gasket, O-ring accessory) model number:
 AM-EL***
- * *** is AM size symbol. (ex.: AM-EL150)

2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

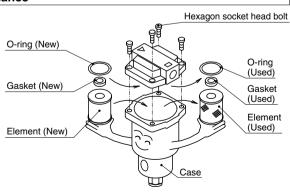


Actuators

Modular F.R.L. essure Control Equipme


AMD Series

Construction

AMD150C to AMD550C, AMD650

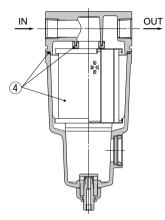

AMD850

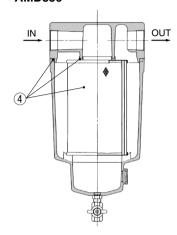

* The numbers correspond with those in the "Construction" of the AMD series in the Best Pneumatics catalog.

Replacement Parts

No	Description*1 Mater	Motorial	Applicable		Model										
110.		Materiai	model*2	AMD150C	AMD250C	AMD350C	AMD450C	AMD550C	AMD650	AMD850					
4	Element	Glass fiber,	Except option F	AMD-EL150	AMD-EL250	AMD-EL350	AMD-EL450	AMD-EL550	AMD-EL650	AMD-EL850					
4	assembly	others	For option F	AMD-EL150-F	AMD-EL250-F	AMD-EL350-F	AMD-EL450-F	AMD-EL550-F		_					

^{*1)} Element assembly: With gasket (1 pc.) and O-ring (1 pc.)

Maintenance


Replace the element when one of followings occurs.

- Pressure drop reaches 0.1 MPa.
- Element operates for 2 years (1 year for free standing type).
 Element assembly (gasket, O-ring accessory) model number:
 AMD-EL***
- * *** is AMD size symbol. (ex.: AMD-EL150)


2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

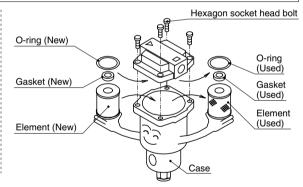

AMD80□, 81□, 9□0, 9□1, 10□0

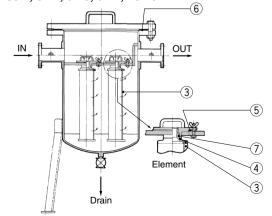

Replacement Parts

Model applicable	3 Elemer	nt	Seal (Material: NBR)		Seal (Material: N	BR)	Gaske (Material: V#6		O-ring (Material: NBR)	
filter	Kit no.	Qty.	Kit no.	Qty.	Kit no.	Qty.	Kit no.	Qty.	Kit no. (Nominal)	Qty.
AMD800 AMD810	63174	1		1	OD112XID90XT3	1	AL-61S	1		1
AMD801 AMD811		1		1	_	_	AL-60S	1		1
AMD900 AMD910		3	63148	3	OD112XID90XT3	3	AL-63S	1	(1A-G35)	3
AMD901 AMD9111		3		3	_	_	AL-62S	1		3
AMD1000 AMD1010		5	5	5	OD112XID90XT3	5	AL-31S	1		5


^{*2)} F option, the rubber material: In the case of fluororubber


AMH Series

Construction

AMH150C to AMH550C, AMH650

AMH850

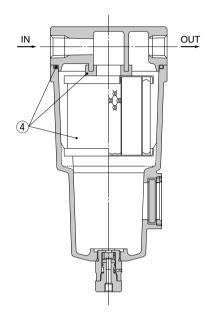

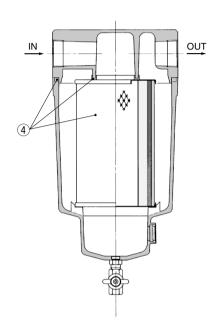

* The numbers correspond with those in the "Construction" of the AMH series in the Best Pneumatics catalog.

Replacement Parts

			-							
No	. Description*1 Mater	Motorial	Applicable				Model			
INO.		Materiai	model*2	AMH150C	AMH250C	AMH350C	AMH450C	AMH550C	AMH650	AMH850
4	Element	Glass fiber,	Except option F	AMH-EL150	AMH-EL250	AMH-EL350	AMH-EL450	AMH-EL550	AMH-EL650	AMH-EL850
4	assembly	others	For option F	AMH-EL150-F	AMH-EL250-F	AMH-EL350-F	AMH-EL450-F	AMH-EL550-F	_	_

- *1) Element assembly: With gasket (1 pc.) and O-ring (1 pc.)
- *2) F option, the rubber material: In the case of fluororubber

Maintenance


Replace the element when one of followings occurs.

- Pressure drop reaches 0.1 MPa.
- Element operates for 2 years.
 Element assembly (gasket, O-ring accessory) model number:
 AMH-EL***
- * *** is AMH size symbol. (ex.: AMH-EL150)

2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

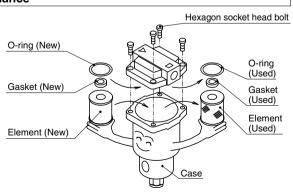


Actuator


AME Series

Construction

AME150C to AME550C

AME650, AME850

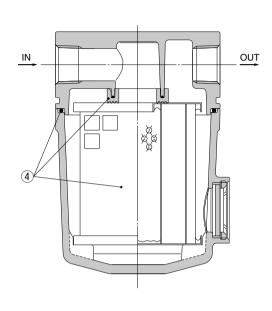

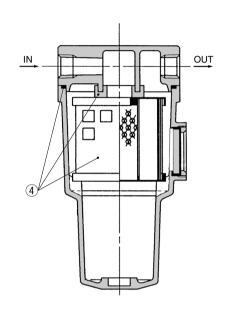

* The numbers correspond with those in the "Construction" of the AME series in the Best Pneumatics catalog.

Replacement Parts

No	Description*1 Material		Applicable			Model						
IVO.	Description	ivialenai	model*2	AME150C	AME250C	AME350C	AME450C	AME550C	AME650	AME850		
4	Element	Glass fiber,	Except option F	AME-EL150	AME-EL250	AME-EL350	AME-EL450	AME-EL550	AME-EL650	AME-EL850		
	assembly	others	For option F	AME-EL150-F	AME-EL250-F	AME-EL350-F	AME-EL450-F	AME-EL550-F	_	_		

^{*1)} Element assembly: With gasket (1 pc.) and O-ring (1 pc.)

Maintenance


Replace the element when one of followings occurs.

- $\bullet\,\mbox{Red}$ spots appear on the element surface.
- Operated for 2 years, or pressure drop reaches 0.1 MPa.
 Element assembly (gasket, O-ring accessory) model number:
 AME-EL***
- * *** is AME size symbol. (ex.: AME-EL150)


2. How to replace element assembly


First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

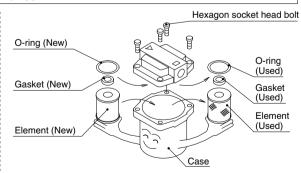

^{*2)} F option, the rubber material: In the case of fluororubber

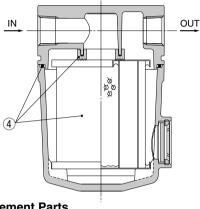

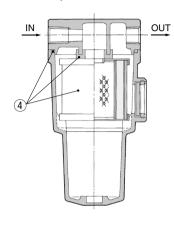

* The numbers correspond with those in the "Construction" of the AMF series in the Best Pneumatics catalog.

Replacement Parts

No	. Description*1 Mater	Motorial	Applicable		Model										
INO.		Malenai	model*2	AMF150C	AMF250C	AMF350C	AMF450C	AMF550C	AMF650	AMF850					
4	Element	Glass fiber,	Except option F	AMF-EL150	AMF-EL250	AMF-EL350	AMF-EL450	AMF-EL550	AMF-EL650	AMF-EL850					
	assembly	others	For option F	AMF-EL150-F	AMF-EL250-F	AMF-EL350-F	AMF-EL450-F	AMF-EL550-F	_	_					

*1) Element assembly: With gasket (1 pc.) and O-ring (1 pc.)

*2) F option, the rubber material: In the case of fluororubber

Maintenance

1.Element replacement

Since element life depend on odor concentration of compressed air, it can not be specified. Confirm deodorizing capacity remaining period, and replace the element periodically afterwards.


Replace the element when you smell oil on the outlet side. Replace the element with new one when element has been used for 2 years, or when pressure drop reaches 0.1 MPa. Element assembly (gasket, O-ring accessory) model number: AMF-EL***

* *** is AMF size symbol. (ex.: AMF-EL150)

2. How to replace element assembly

First, discharge the pressure in the body. (Make pressure 0 MPa.)

- Remove four hexagon socket head bolts.
- Replace element, gasket, O-ring.
- Tighten hexagon socket head bolts.

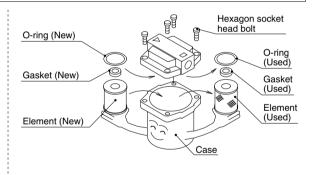

AMF80 , 90 , 1000 N-4 Pressure outlet (IN side) IN N-1 Pressure outlet (OUT side) OUT N-2 S Element 4

Replacement Parts

Model applicable	3 Element		(Material: NBR)		Seal (Material: NBR)		Gaske (Material: V#68		O-ring (Material: NBR)	
filter	Kit no.	Qty.	Kit no.	Qty.	Kit no.	Qty.	Kit no.	Qty.	(Nominal) Oty.	
AMF800		1		1	OD112XID90XT3	1	AL-61S	1	1	
AMF801		1		1	_	_	AL-60S	1	KA00061	
AMF900 AMF901 AMF1000	63271	3	63148	3	OD112XID90XT3	3	AL-63S 1		1A-G35 3	
		3	1	3	_	_	AL-62S	1		
		5		5	OD112XID90XT3	5	AL-31S	1	5	

Industrial Filters

Indication of replacement of elements, inspection items

■ Replacement standards

<Element replacement>

The differential pressure (pressure drop) between the primary side and secondary side reaches 0.1 MPa. Additionally, even if any differential pressure does not occur, replace the element once every two years.

■ Inspection items

Check each seal part for leak periodically.

Check the pressure/temperature periodically to make sure that the filter is within its operable range. If the differential pressure reaches 0.1 MPa during operation, stop the operation and replace the element with a new one.

Remove the dust accumulated in the bowl periodically.

How to Select Element Order Number for Replacement



The element number for replacement is written on the nameplate.

FGESA-20-B120NA ELEMENT NO. EB100-120N MAX. PRESS. 0.7MPa @ SWC

Element number for replacement

Order the element no. written in here.

If the information written on the nameplate cannot be confirmed, please specify the element number as described below.

Order Example

* Element number for FGGSB-20-B002NA




Check the product number of the industrial filter. Confirm the items written on the right.

DElement length

- * The element length is the total length of combined short elements.
- 2Element category

Nominal filtration accuracy

How to Order

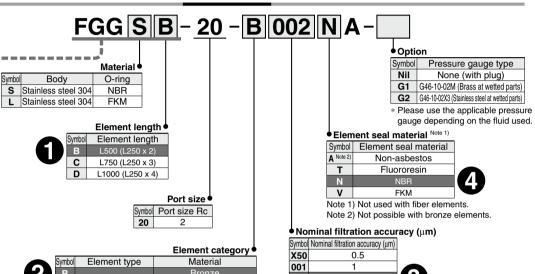


Bronze Sintered metal s Stainless steel Т Polypropylene Fiber G Glass fiber (Honeycomb) н Cotton Р Paper Cotton М Stainless steel 304/Epoxy

Micromesh

120

120

 Note) For a comparison with the nominal filtration accuracy according to the element category, refer to pages 289 and 290.



* Please select accordingly from the following two selection types of numbers and sizes.

Specifications

_															
	Mod	el	FGGSB Note 1)		FGGSC Note 1)		FGGS	FGGSD Note 1)		FGGLB Note 1)		FGGLC Note 1)		FGGLD Note 1)	
	Number of		7 Note 2)	14	7 Note 2)	21	7 Note 2)	28	7 Note 2)	14	7 Note 2)	21	7 Note 2)	28	
Element siz			ø65 x L500	ø65 x L250	ø65 x L750	ø65 x L250	ø65 x L1000	ø65 x L250	ø65 x L500	ø65 x L250	ø65 x L750	ø65 x L250	ø65 x L1000	ø65 x L250	
Γ		Cover	Stainless steel 304												
	Main	Case	Stainless steel 304												
	materials	O-ring			NE	3R					F	ΚM			
		Legs					SS	400 (Chro	matic plati	ng)					

Stainless steel 316

Note 1) Cannot be used with gases.

Note 2) In the case of a sintered metal element or paper element.




There are various types of elements for replacement. Select respective element type according to the type of industrial filter you are using.



Element Model Determination

Specify the element type by filling out the element number with the respective codes of the items selected in sections A and B.

* As for the number of orders, specify it by item **⑤**, "number of elements", in section B. The number of orders is 7 in this example.

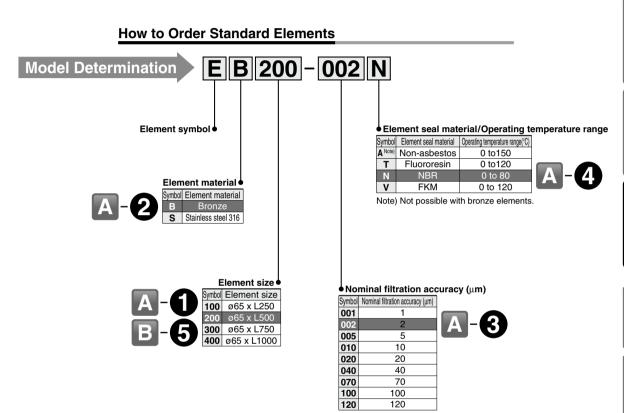

Elements Sintered Metal/Fiber

Sintered Metal Filter Elements

- Outstanding mechanical strength, heat resistance and chemical resistance.
- Formed by sintering finely powdered metal, so a high filtration accuracy can be obtained.
- Even if clogging progresses, the element can be reused by cleaning.
- Main applications

Ideal as a check filter for keeping fluid clean. All types of gases, fluids, general solvents and high-temperature fluids



⚠ Caution

Bronze element, but may have been discolored by moisture in the atmosphere, the characteristics are not affected.

Fiber Elements

- Four types of materials with different characteristics are available so the filters are applicable to any application.
- Elements are economical because particle capturing capacity is excellent, and element life is long.
- Elements are disposable so maintenance and replacement are easy.
- Main applications

Cotton	Cleaning water, General neutral fluids, General solvents, Dry air
Polypropylene	Plating fluids, General acids, Alkali fluids, Industrial water, Cooling water
Glass fiber	Acid fluids, High-temperature fluids



Specifications

opeomeations			
Material		Bronze	Stainless steel 316
Operating temperature (C°) Note 2)		0 to 150	0 to 150
Nominal filtration accuracy (μm)		1, 2, 5, 10, 20, 40, 70, 100, 120	
Max. differential pressure resistance		0.7 MPa	
Element replacement differential pressure		0.1 MPa	
Chemical resistance	Acid	Cannot be used.	Can be used. Note 1)
Chemical resistance	Alkali	Can be used depending on conditions.	Can be used.
Element category of How to Order		В	S

Note 1) Cannot be used with hydrochloric acid, hydrofluoric acid or phosphoric acid.

Note 2) Varies depending on the seal material used.

How to Order Standard Elements



Element material

Symbol	Element material
В	Bronze
S	Stainless steel 316

Element size

Symbol	Element size
100	ø65 x L250
200	ø65 x L500
300	ø65 x L750
400	ø65 x L1000

Nominal filtration accuracy (μm)

Symbol	Nominal filtration accuracy (µm)
001	1
002	2
005	5
010	10
020	20
040	40
070	70
100	100
120	120

Element seal material/Operating temperature range

Symbol	Element seal material	Operating temperature range(°C)
A Note)	Non-asbestos	0 to 150
Т	Fluororesin	0 to 120
N	NBR	0 to 80
٧	FKM	0 to 120

Note) Not possible with bronze elements.

Replacement Seal

Symbol	part no.	Quantity
Α	AL-7S	
T	AL-6S	2
N	AL-8S	2
V	AL-9S	

Specifications

- p					
Material	Core material	Operating temperature (°C)	Nominal filtration accuracy (µm)	Differential pressure resistance (Max.)	Element replacement differential pressure
Cotton	Stainless steel 304	-20 to 100	0.5, 1, 5, 10, 20, 50, 75, 100		
Polypropylene	Polypropylene	0 to 60	0.5, 1, 5, 10, 20, 50, 75, 100	0.2 MPa	0.1 MPa
Glass fiber	Stainless steel 316	0 to 400	1, 5, 10, 20		

Note) Size for all is ø65 x L250. Different lengths are available as a special order up to 750 mm, only for cotton and polypropylene.

How to Order Standard Elements

Fleme	nt material	Cotton	Polypropylene	Glass fiber
			,, ,,	0.0000
Core	material	Stainless steel 304	Polypropylene	Stainless steel 316
5	0.5	EH10G	EHM10A	_
accuracy	1	EH39R10GV	EHM39R10AY	EHK27R10S
acc	5	EH23R10GV	EHM23R10AY	EHK19R10S
a) fig	10	EH19R10GV	EHM19R10AY	EHK15R10S
iltra (E	20	EH15R10G	EHM15R10A	EHK10R10S
Nominal filtration (μm)	50	EH11R10G	EHM11R10A	_
j j	75	EH10R10G	EHM10R10A	1
ž	100	EH8R10G	EHM8R10A	
	category of to Order	Н	Т	G

Note) Element seals are not used for fiber elements.



Paper Elements

Cartridges are pleated for a large filtration area, and elements are economical due to their long service life.


Main applications

Ideal for filtration of hydraulic oil. lubricating oil, fuel oil, oils for the liquid gas industry, dry inert gases, and dry air.



Specifications		
Material	Filter paper (Cotton, Phenol resin impregnated paper)	
Operating temperature (C°)	0 to 80	
Nominal filtration accuracy (μm)	5, 10, 20	
Max. differential pressure resistance	0.6 MPa	
Adhesive used	Epoxy resin	
Element replacement differential pressure	0.1 MPa	
Element category of How to Order	Р	

How to Order Standard Elements

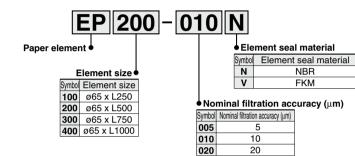

Micromesh Elements

- Stainless steel metal mesh has high filtration accuracy.
- Outstanding heat and chemical resistance. Applicable to a wide range of applications.
- ▶ Pleated type has 3 times the filtration area of a cylinder.
- Filters are economical because they can be cleaned and repeatedly used.
- Main applications

Please use 40 microns or less as a high-precision filter, and 74 microns or higher as a high-grade strainer. All types of gases and fluids, high-temperature fluids.



Specifications

opecinications			
Model		EM100	EM500
Materials		Stainless steel 304	Stainless steel 316
Jointing material		Epoxy resin —	
Operating temperature (C°) Note 2)		-5 to 100 -180 to 300	
Nominal filtration accuracy (µm)		5, 10, 20, 40, 74, 105	
Max. differential pressure re	sistance	e 0.7 MPa	
Element replacement differential	l pressure	0.1 MPa	
Chemical resistance	Acid	Cannot be used.	Can be used. Note 1)
Chemical resistance	Alkali	Can be used.	Can be used.
Element category of How to Order		М	L

Note 1) Cannot be used with hydrochloric acid, hydrofluoric acid or phosphoric acid. Note 2) Varies depending on the seal material used.

How to Order Standard Elements

005 010


020

040

074

105

(Size ø65 x L250)

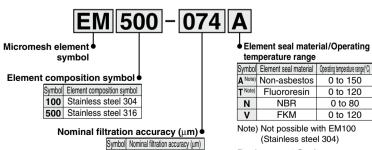

10

20

40

74

105


Repl	acement Seal	
Symbol	part no.	
Α	AL-7S	

Symbol	part no.	Quantity
Α	AL-7S	
Т	AL-6S	2
N	AL-8S	-
٧	AL-9S	

FGD Series 1



Replacement Parts and Seal List

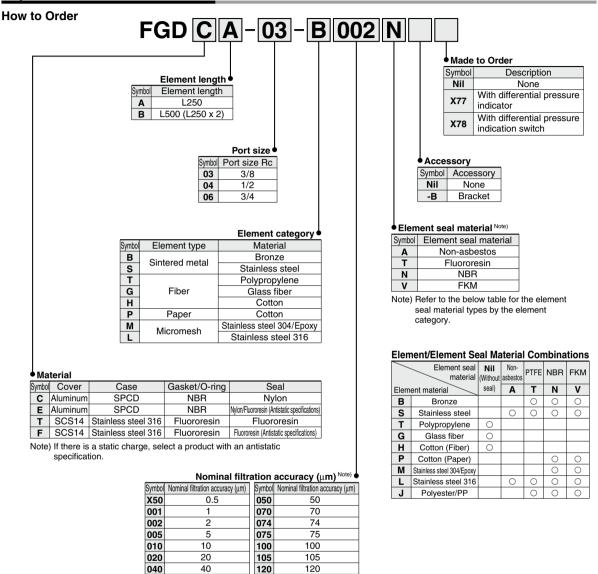

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Specifications


Specifica	แบบเอ									
Mod	del	FGDCA	FGDCB	FGDEA	FGDEB	FGDTA	FGDTB	FGDFA	FGDFB	
Number of	elements	1	2 Note)	1	2 Note)	1	2 Note)	1	2 Note)	
Element si	ze	ø65 x L250	ø65 x L500 (L250 x 2)	ø65 x L250	ø65 x L500 (L250 x 2)	ø65 x L250	ø65 x L500 (L250 x 2)	ø65 x L250	ø65 x L500 (L250 x 2)	
	Cover		Alum	inum		SCS14				
Main	Case		SP	CE		Stainless steel 316				
materials	Gasket/ O-ring		NI	3R			Fluor	oresin		
	Seal	Ny	/lon	Nylon/FI	uororesin	Fluororesin				

Note) 1 element (ø65 x L500) in the case of a sintered metal element or paper element.





Replacement Parts and Seal List

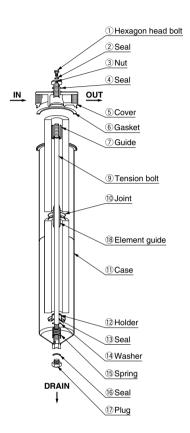

Parts descriptions and functions

(Figure shows the product with two FGD□B elements.)

Note) There is no compatibility between the FGDT/F and FGDC/E as the seal structure on the gasket portion is different. Use the cover and case of the same model.

- Refer to pages 287 and 288 for selection.
- Refer to pages 289 and 290 for the replacement element type.
- * The numbers correspond with those in the "Replacement Parts and Seal List" of the FGD series in the Best Pneumatics catalog.

Parts Descriptions and Functions

No.	Description	Material	Function		
1	Hexagon head bolt	Stainless steel or iron	Plug to release air in the housing		
2	Seal	Resin			
3	Nut	Stainless steel or iron	Tightens the cover.		
4	Seal	Resin			
(5)	Cover	Stainless steel or Aluminum	The lid of the filter body		
6	Gasket	Resin or rubber			
7	Guide	Stainless steel	Seals the gap between the element and tension bolt.		
9	Tension bolt	Stainless steel or iron	Connects the case and cover.		
10	Joint	Stainless steel	Seals the area between elements. (when two FGD□B elements are used)		
11)	Case	Stainless steel or iron	Filter body		
12	Holder	Stainless steel	Seals the elements.		
13	Seal	Resin or rubber			
14)	Washer	Stainless steel			
15	Spring	Stainless steel	Stabilizes the element.		
16	Seal	Resin			
17	Plug	Stainless steel or iron	Drainage discharging plug		
18	Element guide	Stainless steel or iron			

Renlacement Parts


Replacement Parts									
Description	Part no.	Applicable model	Part no. (Kit contents)						
	FGD-KT001	FGDC							
Nut kit	FGD-KT002	FGDE	1), 2), 3), 4): 1 pc. each						
Nut Kit	FGD-KT003	FGDT	(1), (2), (3), (4). I pc. each						
	FGD-KT004	FGDF							
Replacement	FGD-CV005-03 06	FGDT/F	(5)						
cover	FGD-CV006-04	FGDC/E							
Joint	FGD-OP001	FGD□	10						
	KT-FGDC	FGDC							
Seal kit	KT-FGDE	FGDE	2, 4, 6, 13, 16: 1 pc. each						
Jear Kit	KT-FGDT	FGDT	2, 4, 0, 0, 0, 1 pc. each						
	KT-FGDF	FGDF							
	FGD-CA002	FGDT/F(L250)	7, 9, 11, 12, 13, 14, 15, 16, 17						
Replacement case	FGD-CA003	FGDT/F(L500)	: 1 pc. each						
assembly	FGD-CA004	FGDC/E(L250)	Note) Only the FGD-CA003 and CA005 includes ® element						
	FGD-CA005	FGDC/E(L500)	guide in the set.						

Industrial Filter

FGE Series 1



Replacement Parts and Seal List

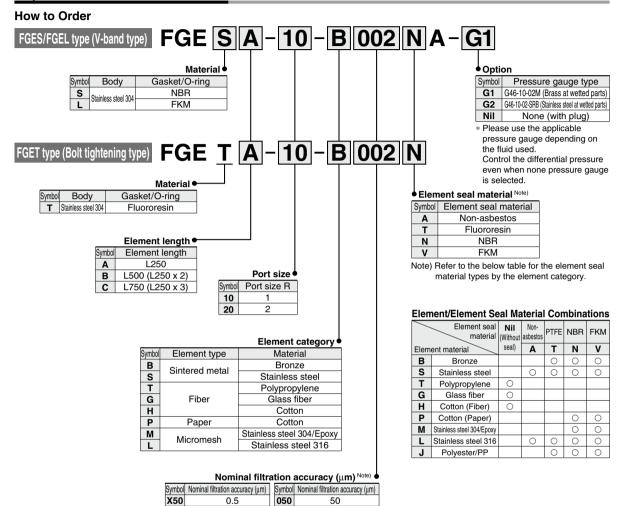

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Specifications

Model		FGESA Note 1)	FGES	B Note 1)	FGES	C Note 1)	FGELA Note 1)	FGEL	B Note 1)	FGEL	C Note 1)	FGETA	FGI	ΞΤВ	FGI	ETC
Number of elements		4	4 Note 2)	8	4 Note 2)	12	4	4 Note 2)	8	4 Note 2)	12	4	4 Note 2)	8	4 Note 2)	12
Element size		ø65 to 70 x L250		ø65 to 70 x L250			ø65 to 70 x L250	ø65 to 70 x L500			ø65 to 70 x L250	ø65 x L250	ø65 x L500	ø65 x L250	ø65 x L750	ø65 x L250
	Cover		Stainless steel 304													
	Case		Stainless steel 304													
Main materials	Gasket	_	_	-	_	_	_				-	Fluororesin Fluororesin		Fluororesin		
materials	O-ring	NBR FKM —														
	Legs						SS40	0 (Chro	matic p	lating)						

Note 1) Cannot be used with gases.

Note 2) In the case of a sintered metal element or paper element.




FGE Series 2




Replacement Parts and Seal List

FGES/FGEL type (V-band type)

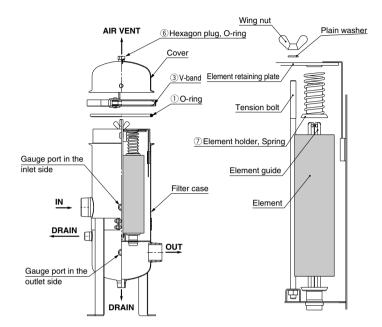

FGET type (Bolt tightening type)

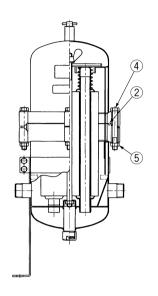

Description	Otri	Applicable model							
Description	Qty.	FGES	FGEL	FGET					
O-ring	1	FGE-KT001	FGE-KT002	_					
Gasket	1		_	AL-19S					
V-band	1	CY-	_						
Hexagon head bolt	4	_	_	CB00021					
Hexagon nut	4	_	_	DA00110					
Hexagon plug	1	ECE OPOOT	ECE OBOOS						
O-ring	1	FGE-OP007	FGE-OP008	_					
	Gasket V-band Hexagon head bolt Hexagon nut Hexagon plug	O-ring 1 Gasket 1 V-band 1 Hexagon head bolt 4 Hexagon nut 4 Hexagon plug 1	FGES Co-ring 1 FGE-KT001 Gasket 1	Description Qty. FGES FGEL					

FGE-OP005

4

Spring

Element holder

- Refer to pages 287 and 288 for selection.
- Refer to pages 289 and 290 for the replacement element type.
- * The numbers correspond with those in the "Replacement Parts and Seal List" of the FGE series in the Best Pneumatics catalog.

Industrial Filter

FGG Series 1




٧

0

0

L Stainless steel 316

Replacement Parts and Seal List

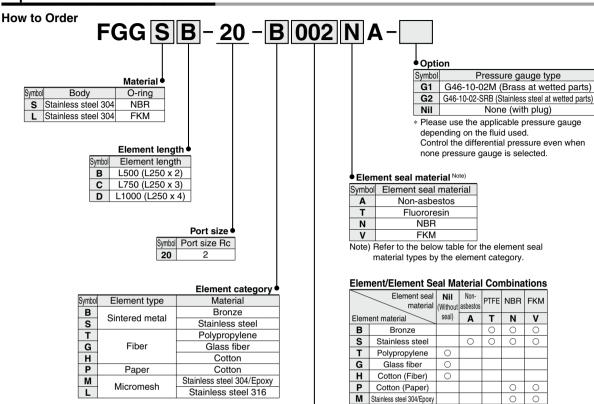

Nominal	filtration	accuracy	(um) Note)

Symbol	Nominal filtration accuracy (µm)	Symbol	Nominal filtration accuracy (µm)
X50	0.5	050	50
001	1	070	70
002	2	074	74
005	5	075	75
010	10	100	100
020	20	105	105
040	40	120	120

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Specifications

e per inicacione													
Mode	el	FGGS	B Note 1)	FGGS	C Note 1)	FGGS	D Note 1)	FGGL	B Note 1)	FGGL	C Note 1)	FGGL	D Note 1)
Number of e	lements	7 Note 2)	14	7 Note 2)	21	7 Note 2)	28	7 Note 2)	14	7 Note 2)	21	7 Note 2)	28
Element size	9	ø65 x L500	ø65 x L250	ø65 x L750	ø65 x L250	ø65 x L1000	ø65 x L250	ø65 x L500	ø65 x L250	ø65 x L750	ø65 x L250	ø65 x L1000	ø65 x L250
	Cover		Stainless steel 304										
Main	Case	Stainless steel 304											
materials	O-ring		NBR FKM										
	Legs	SS400 (Chromatic plating)											

Note 1) Cannot be used with gases.


Note 2) In the case of a sintered metal element or paper element.




FGG Series 2



Replacement Parts and Seal List

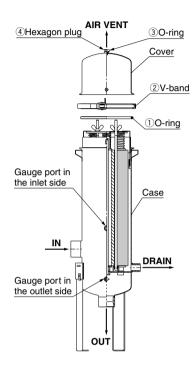

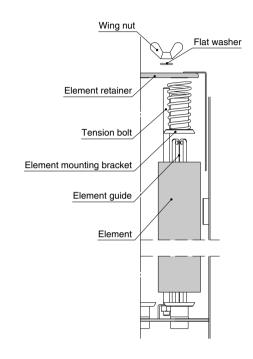

Replacement Parts

No.	Description	Qty.	Applicable model						
INO.		Qty.	FGGS	FGGL					
1	O-ring	1	FGF-KT01	FGF-KT02					
2	V-band	1	CY-	27S					
3	O-ring	1	FGE-OP007	FGE-OP008					
4	Hexagon plug	1	FGE-OP007						

 Refer to pages 287 and 288 for selection.

 Refer to pages 289 and 290 for the replacement element type.

* The numbers correspond with those in the "Replacement Parts and Seal List" of the FGG series in the Best Pneumatics catalog.

FGA Series



Replacement Parts and Seal List



FGA C 04 A - 10 - B 002 N

Vessel material (wetted parts)

Symbol	Vessel material (wetted parts)
С	SS400
S	Stainless steel 304

Number of arranged elements

Symbol	Number of arranged elements	Syn	nbol	Number of arranged elements
04	4	2	9	29
07	7	3	4	34
09	9	3	7	37
18	18	5	3	53
22	22	8	3	83

Element length •

Element length
L250
L500 (L250 x 2)
L750 (L250 x 3)
L1000 (L250 x 4)

AIR VENT

| Symbol | Port size | 10 | 25 (1^B) | 14 | 40 (1 1/2^B) | 20 | 50 (2^B)

24	65 (Z 1/Z ⁵)
30	80 (3 ^B)
40	100 (4 ^B)
60	150 (6B)

Note) The connection method is JIS 10KFF flange connection.

Symbol Element type Material

В	Sintered metal	Bronze
S	Sintered metal	Stainless steel
Т		Polypropylene
G	Fiber	Glass fiber
Н		Cotton
Р	Paper	Cotton
M	Micromesh	Stainless steel 304/Epoxy
	Micromesii	Stainless steel 316

Element seal material Note)

Symbol	Symbol Element seal material		
A Non-asbestos			
Т	Fluororesin		
N NBR			
٧	FKM		

Note) Refer to the below table for the element seal material types by the element category.

Nominal filtration accuracy (μm) Note)

Symbol	Nominal filtration accuracy (µm)	Symbol	Nominal filtration accuracy (µm)
X50	0.5	050	50
001	1	070	70
002	2	074	74
005	5	075	75
010	10	100	100
020	20	105	105
040	40	120	120

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Element/Element Seal Material Combinations


	Element seal material		Non- asbestos	PTFE	NBR	FKM
Elem	ent material	seal)	Α	Т	N	٧
В	Bronze			0	0	0
S	Stainless steel		0	0	0	0
T	Polypropylene	0				
G	Glass fiber	0				
Н	Cotton (Fiber)	0				
Р	Cotton (Paper)				0	0
M	Stainless steel 304/Epoxy				0	0
L	Stainless steel 316		0	0	0	0

Applicable Element Specifications

Description	Material	Nominal filtration accuracy (µm)	Size	
Sintered metal	Bronze	1, 2, 5, 10, 20, 40 70, 100, 120	ø65 x L250 ø65 x L500	
Omerca metar	Stainless steel 316		ø65 x L750 ø65 x L1000	
Paper	Cotton (Phenol)	5, 10, 20	ø65 x L250 ø65 x L500 ø65 x L750 ø65 x L1000	
	Cotton	0.5, 1, 5, 10, 20		
Fiber	Polypropylene	50, 75, 100	ø65 x L250	
	Glass fiber	1, 5, 10, 20		
Micromesh	Stainless steel 304	5, 10, 20, 40	ø65 x L250	
MICIOINESII	Stainless steel 316	74, 105	905 X L250	

 Refer to pages 289 and 290 for the replacement element type.

 * The numbers correspond with those in the "Replacement Parts and Seal List" of the FGA series in the Best Pneumatics catalog.



BACKWASH.

 
Element mounting figure



FGB Series



Replacement Parts and Seal List



Vessel material (wetted parts)

Symbol	Vessel material (wetted parts)
С	SS400
S	Stainless steel 304

Number of arranged elements

Symbol	Number of arranged elements	Symbol	Number of arranged elements
04	4	30	30
07	7	36	36
13	13	55	55
19	19	83	83

AIR VENT

BACK

Element length

Symbol	Element length
Α	L250
В	L500 (L250 x 2)
С	L750 (L250 x 3)
D	L1000 (L250 x 4)

Port size

Cyllibol	1 011 3120
10	25 (1 ^B)
14	40 (1 1/2 ^B)
20	50 (2 ^B)
24	65 (2 1/2 ^B)
30	80 (3 ^B)
40	100 (4 ^B)
60	150 (6 ^B)

Note) The connection method is JIS 10KFF flange connection.

Element seal material Note 1)

Symbol	Element seal material		
A Note 2)	Non-asbestos		
T Fluororesin			
N	NBR		
V	FKM		

Note 1) Not used with fiber elements.

Note 2) Not possible with bronze elements.

Nominal filtration accuracy (μm) Note

Symbol	Nominal filtration accuracy (μm)	Symbol	Nominal filtration accuracy (μm)
X50	0.5	050	50
001	1	070	70
002	2	074	74
005	5	075	75
010	10	100	100
020	20	105	105
040	40	120	120

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Element category

Symbol	Element type	Material			
В	Sintered metal	Bronze			
S	Sintered metal	Stainless steel			
Т		Polypropylene			
G	Fiber	Glass fiber			
Н		Cotton			
P	Paper	Cotton			
M	Micromesh	Stainless steel 304/Epoxy			
L	L	Stainless steel 316			

Applicable Element Specifications

Applicable Liellient Specifications					
Description	Material	Nominal filtration accuracy (µm)	Size		
Cintered metal	Bronze	1, 2, 5, 10, 20, 40	ø65 x L250 ø65 x L500		
Sintered metal	Stainless steel 316	70, 100, 120	ø65 x L750 ø65 x L1000		
Paper	Cotton (Phenol)	5, 10, 20	ø65 x L250 ø65 x L500 ø65 x L750 ø65 x L1000		
	Cotton	0.5, 1, 5, 10, 20			
Fiber	Polypropylene	50, 75, 100	ø65 x L250		
	Glass fiber	1, 5, 10, 20			
Miswamash	Stainless steel 304	5, 10, 20, 40	ø65 x L250		
Micromesh	Stainless steel 316	74, 105	000 X L200		

 Refer to pages 289 and 290 for the replacement element type.

Element mounting figure



Actuators

Modular F.R.L. Pressure Control Equipment

Air Preparation Equipment

ndustrial Filters

Replacement Procedure

Actuators

Modular F.R.L. essure Control Equipment

ndustrial Filters

The numbers correspond with those in the "Replacement Parts and Seal List" of the FGB series in the Best Pneumatics catalog.


Industrial Filter

FGC Series



Replacement Parts and Seal List

AIR VENT

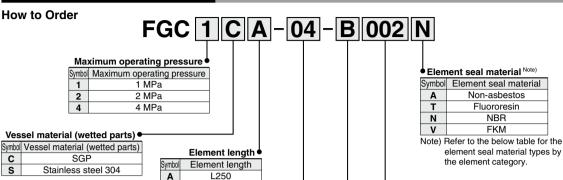

Port size

| Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port size | Port

L500 (L250 x 2)

В

OUT

04 15 (1/28) 06 20 (3/48) 10 25 (18) Note) The connection method is flange

connection, as indicated below. FGC1: JIS 10KFF flange connection FGC2: JPI300^{Lb}RF flange connection FGC4: JPI600^{Lb}RF flange connection

Element category

Symbol	Element type	Material
В	Sintered metal	Bronze
S	Sintered metal	Stainless steel
Т		Polypropylene
G	Fiber	Glass fiber
Н		Cotton
Р	Paper	Cotton
M	Micromesh	Stainless steel 316/Epoxy
L	Micromesn	Stainless steel 316

●No	Nominal filtration accuracy (μm) Note)					
Symbol	Nominal filtration accuracy (µm)		Symbol	Nominal filtration accuracy (µm)		
X50	0.5		050	50		
001	1		070	70		
002	2		074	74		
005	5		075	75		
010	10		100	100		
020	20		105	105		
040	40		120	120		

Note) For a comparison with the nominal filtration accuracy according to the element category, refer to the Best Pneumatics catalog.

Element/Element Seal Material Combinations


	Element seal material		Non- asbestos	PTFE	NBR	FKM
Elem	ent material	seal)	Α	Т	N	٧
В	Bronze			0	0	0
S	Stainless steel		0	0	0	0
Т	Polypropylene	0				
G	Glass fiber	0				
Н	Cotton (Fiber)	0				
Р	Cotton (Paper)				0	0
М	Stainless steel 304/Epoxy				0	0
L	Stainless steel 316		0	0	0	0

Applicable Element Specifications

Description	Material	Nominal filtration accuracy (µm)	Size	
	Bronze	1, 2, 5, 10, 20, 40	ø65 x L250	
Sintered metal	Stainless steel 316	70, 100, 120	ø65 x L500	
Paper	Cotton (Phenol)	5, 10, 20	ø65 x L250 ø65 x L500	
	Cotton	0.5, 1, 5, 10, 20		
Fiber	Polypropylene	50, 75, 100	ø65 x L250	
	Glass fiber	1, 5, 10, 20		
Mieremeek	Stainless steel 304	5, 10, 20, 40		
Micromesh	Stainless steel 316	74, 105	ø65 x L250	

 Refer to pages 289 and 290 for the replacement element type.

 * The numbers correspond with those in the "Replacement Parts and Seal List" of the FGC series in the Best Pneumatics catalog.




Element mounting figure



The Replacement Procedure is on p. 555





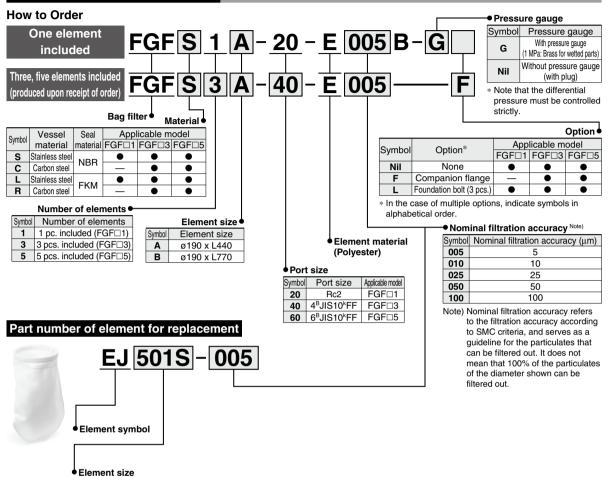

Specifications

Symbol

501S

601S

Element size

ø190 x L440

ø190 x L770

Opcon	ioationio							
Model		FGF□1A-20	FGF□1B-20	FGF□3A-40	FGF□3B-40	FGF□5A-60	FGF□5B-60	
	Material		Polyester					
	Nominal filtration accuracy	5, 10, 25, 50, 100 μm						
Element	Element replacement differential pressure	0.1 MPa Note 1)						
Element	Number of elements	1 element included 3 elements included 5 elements inc			s included			
	Size	ø190 x L440	ø190 x L770	ø190 x L440	ø190 x L770	ø190 x L440	ø190 x L770	
	Filtration area	1800 cm ²	3400 cm ²	5400 cm ²	10200 cm ²	9000 cm ²	17000 cm ²	

Note 1) Control the element replacement so that the differential pressure does not exceed 0.1 MPa.

Applicable model

For FGF□□A


For FGF□□B

Bag Filter

FGF Series 2



Replacement Parts and Seal List

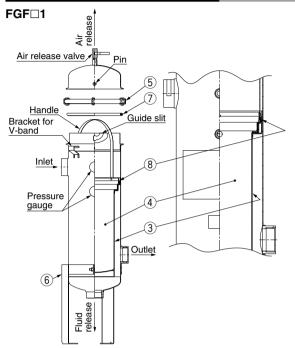


Replacement Parts

Description	Part No.	Material	Qty.	Applicable model Note)
Backet	FGF-BT01	Stainless steel 204	1	FGF□1A
Daskei	FGF-BT02	Stairliess steel 304	1	FGF□1B
Element	EJ501S-□	Dolyootor	1	FGF□1A
Element	EJ601S-□	Folyestel	1	FGF□1B
V-band	FGF-BA01	Stainless steel	1	FGF□1□
Legs assembly (with bolt, nut, flat washer)	FGF-OP01 (Set)	Carbon steel	1	FGF□1□
0	FGF-KT01	NBR	1	FGFS1□
O-ring	FGF-KT02	FKM	1	FGFL1□
Holder	FGF-KT03 (Set)	Polypropylene/ NBR	1	FGFS1□
(with O-ring)	FGF-KT04 (Set)	Polypropylene/ FKM	1	FGFL1□
	Basket Element V-band Legs assembly (with bolt, nut, flat washer) O-ring Holder assembly	FGF-BT01 FGF-BT02 EJ501S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EJ601S-□ EGF-BA01 EGF-BA01	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	FGF-BT01

Note) Refer to "How to Order" on page 300 for the \square part of the model number.

Part number of element for replacement

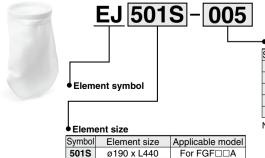

ø190 x L770

601S

For FGF□□B

FGF□3□-40		
FGF□5□-60	Davit for cover	Nut
Air release valve Pressure gauge	Center bol	Spring washer Retainer

Replacement Parts

Kep	Diacement i	arts			
No.	Description	Part No.	Material	Qty.	Applicable model Note)
		BT-3S	Stainless	3	FGF□3A-40
3	Basket	D1-33	steel 304	5	FGF□5A-60
3	Dasket	BT-4S	Stainless	3	FGF□3B-40
		D1-40	steel 304	5	FGF□5B-60
4	Element	Refer to	Polyester	3	FGF□3□-40
	Liement	"How to Order".	1 Olyestel	5	FGF□5□-60
	1 O-ring	AL-26S AL-27S		1	FGFS3□-40
			NBR		FGFC3□-40
				1	FGFS5□-60
11					FGFC5□-60
• • •		AL-23S	FKM	1	FGFL3□-40
					FGFR3□-40
		AL-24S			FGFL5□-60
		AL-240			FGFR5□-60
			NBR	3	FGFS3□-40
		AL-20S			FGFC3□-40
		AL-200		5	FGFS5□-60
12	Gasket				FGFC5□-60
.2	dushet			3	FGFL3□-40
		AL-21S	FKM		FGFR3□-40
				5	FGFL5□-60
					FGFR5□-60
N I - I - N	D-f	0.4.1	Contract		and a shall be a second to a second

Note) Refer to "How to Order" on page 300 for the □ part of the model number.

→ Nom	Nominal filtration accuracy Note					
Symbol	Nominal filtration accuracy (μm)					
005	5					
010	10					
025	25					
050	50					
100	100					

* The numbers correspond with those in the "Replacement Parts and Seal List" of the FGF series in the Best Pneumatics catalog.


Note) Nominal filtration accuracy refers to the filtration accuracy according to SMC criteria, and serves as a guideline for the particulates that can be filtered out. It does not mean that 100% of the particulates of the diameter shown can be filtered out.



FGH Series 1




Replacement Parts and Seal List

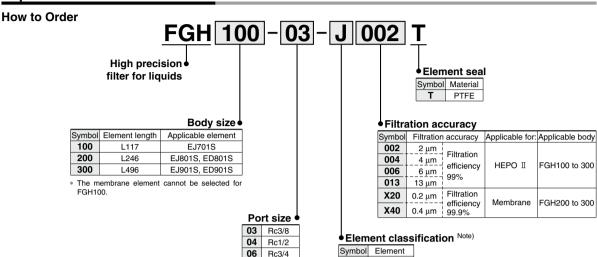

10 Rc1

Specifications

Model	FGH100	FGH200	FGH300
Number of built-in elements (element length) (mm)	1 (125)	1 (250)	1 (500)

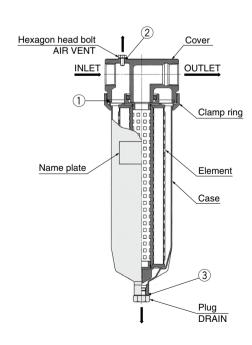

Replacement Parts

HEPO II

Membrane

regarding the elements.

Note) Refer to the **web catalog** for details about specifications, models, dimensions, etc.

D

No.	Description		Part number	
INO.		FGH100	FGH200	FGH300
1	Gasket	AL-58S#1		
2	Seal	AL-43S		
3	Seal	AL-53S		

- * Use each one of the above parts for each filter unit.
- Use a commercially available belt wrench etc. for mounting and removing clamp rings.

Refer to page 303 for the replacement element type.

Modular F.R.L. Pressure Control Equipment

Air Preparation Equipment

ement Indu

Actuators Repla Proc

Modular F.R.L. Pressure Control Equipment

Industrial Filters

^{*} The numbers correspond with those in the "Replacement Parts and Seal List" of the FGH series in the Best Pneumatics catalog.

High Precision Filter for Liquids

FGH Series 2




HEPO II Element for FGH Series **EJ** Series



Model		EJ□S-002	EJ□S-004	EJ□S-006	EJ□S-013	
Filtration accuracy(Filtration efficiency 99%)		2	4	6	13	
gt l	117 mm	1890	2310	2090	2490	
ang	246 mm	4250	5200	4700	5600	
ت	496 mm	8500	10400	9400	11200	
Heat resistant temperature (°C)		80				
Filter media		Polyester				
Material Reinforcement material		Polypropylene				
Others		Polypropylene				
Pressure resistance		0.5 MPa at 20°C, 0.125 MPa at 80°C				
	tration of the tration of tration of tration of tration of tration of tration of tration of tration of tration of tration of tration of trati	tration efficiency 99%) 117 mm 246 mm 496 mm mperature (°C) Filter media Reinforcement material Others	tration efficiency 99%) 2 117 mm	117 mm	117 mm	

Note) See "How to Order" below for items represented by \Box .

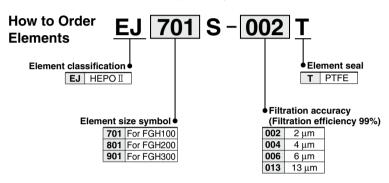


Membrane Element for FGH Series **ED** Series

Specifications

Mo	Model		ED□S-X20	ED□S-X40
Filtration accuracy(Filtration efficiency 99.9%) Note 1)		iency 99.9%) Note 1)	0.2	0.4
Filtration area	듩 247 mm		4,000	6,200
Filtration area (cm²)	Ē	495 mm	8,000	12,400
Heat resistant temperature (°C)		rature (°C)	80	
	Filter media		Polyether sulfone	Cellulose acetate & polyester
Material	Reinforcement material		Polypropylene	Polyester
Others		rs	Polypropylene	Polypropylene
Pressure resistance 0.5 MPa at 20°C, 0.125 MPa at 80°C		0.125 MPa at 80°C		
Resistivity recovery Note 2)		Note 2)	60 min at 10 L/m	_
Others			100 L/4000 cm ² Pure water cleaning	_
Others				

Note 1) Filtration accuracy: tested with ultrapure water, flow rate at $\Delta P=0.01$ MPa. Note 2) Resistivity recovery: time taken to recover to 18 $M\Omega\text{-}cm$ with ultrapure water. Note 3) See "How to Order" below for items represented by \Box .

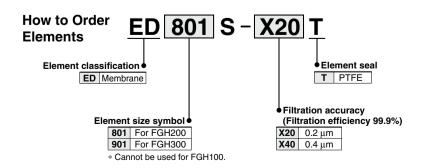






FQ1 Series 1







Replacement Parts and Seal List

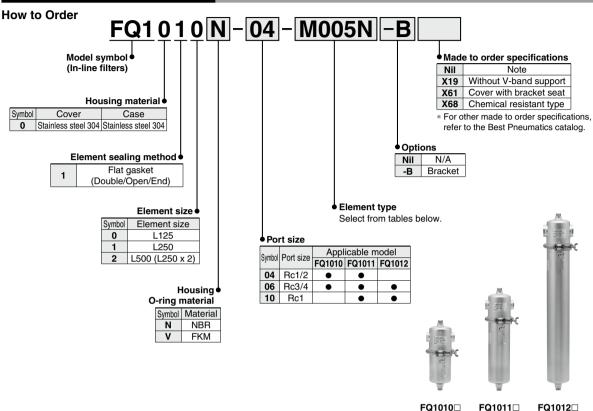

Specifications

Model	FQ1010	FQ1011	FQ1012
No.of built-in elements (L: Element length in mm)	1 (L 125)	1 (L 250)	2 (L 250 x 2)

Element

1. Fiber element (P.P.)

Dimensions	Element symbol	Nominal filtration accuracy (µm)	Part number		
	TX50	0.5	EHM10A		
ø65 x	T001	1	EHM39R10AY		
	T005	5	EHM23R10AY		
	T010	10	EHM19R10AY		
L250	T020	20	EHM15R10A		
L230	T050	50	EHM11R10A		
	T075	75	EHM10R10A		
	T100	100	EHM8R10A		

2. Fiber element (Cotton)

Dimensions	Element symbol	Nominal filtration accuracy (µm)	Part number
	HX50	0.5	EH10G
	H001	1	EH39R10GV
ø65 x	H005	5	EH23R10GV
	H010	10	EH19R10GV
L250	H020	20	EH15R10G
L250	H050	50	EH11R10G
	H075	75	EH10R10G
	H100	100	EH8R10G

3. Micromesh element (Stainless steel 304) Bonding material: Epoxy resin

Dimensio	Element symbol	Nominal filtration accuracy (µm)	Part number		
	M005□	5	EM100-005		
	M010□	10	EM100-010		
ø6	^O M020□	20	EM100-020		
L25	M040□	40	EM100-040		
LES	M074□	74	EM100-074		
	M105□	105	EM100-105		
	M005□	5	EM200-005□X4		
ø6!	_ M010□	10	EM200-010□X4		
00:	- IMO20	20	EM200-020□X4		
L12		40	EM200-040□X4		
-''2	[™] M074□	74	EM200-074□X4		
	M105□	105	EM200-105□X4		
Note	Note) Cassify and material in place a				

Note) Specify seal material in place of \square (N for NBR or V for FKM).

4. Micromesh element (Stainless steel 316)

Dimensions	Element symbol	Nominal filtration accuracy (µm)	Part number	
	L005□	5	EM500-005□	
ø65	L010□	10	EM500-010□	
X	L020□	20	EM500-020□	
L250	L040□	40	EM500-040□	
	L074□	74	EM500-074□	
	L105□	105	EM500-105□	
	L005□	5	EM600-005□X4	
ø65	L010□	10	EM600-010□X4	
X	L020□	20	EM600-020□X4	
L125	L040□	40	EM600-040□X4	
	L074□	74	EM600-074□X4	
	L105□	105	EM600-105□X4	
Note) Charify and material in place of				

Note) Specify seal material in place of "□" (N for NBR or V for FKM).

Pressure Control Equipment

r Preparation Equipment Air

FQ1 Series 2






it is no longer compliant

with RoHS.



Replacement Parts and Seal List

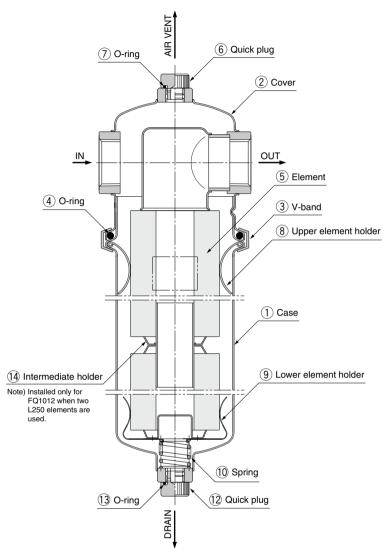

Replacement Parts

Description	Part number	Material	Applicable model	Part no. (Set contents)	Note
	FQ1-CA001N		FQ1010N	①, ⑧, ⑨, ⑫, ⑬: 1 pc. each	Element size: L125
	FQ1-CA001V	Stainless steel 304 Note) O-ring	FQ1010V		Element size: L125
	FQ1-CA002N		FQ1011N		FI
Case assembly	FQ1-CA002V	material N: NBR	FQ1011V	Note) Only the FQ1-CA003□ includes ⁽¹⁾ intermediate holder in the set.	Element size: L250
	FQ1-CA003N	V: FKM	FQ1012N	Intermediate noider in the set.	Element size: L500
	FQ1-CA003V	V. 1 KW	FQ1012V		(L250 x 2)
V-band for replacement	FQ-BA001	Stainless steel 304	FQ1 series	3	
O-ring kit	FQ-KT005N	NBR	FQ101□N	④, ⑦, ⑬: 1 pc. each	④: OR NBR-70-1 P85 ⑦, ③: OR NBR-70-1 P11
	FQ-KT005V	FKM	FQ101□V		4: OR FKM-70 P85 7, 13: OR FKM-70 P11
Quick plug	AG-9S	Stainless steel 303	FQ1 series	6, 12	
Upper element holder	L-131S	Stainless steel 304	FQ1 series	8	
Lower element holder	L-135S	Stainless steel 304	FQ1 series	9	
Intermediate holder	FQ-OP001	Stainless steel 304	FQ1 series	(4)	
	BP-15S		FQ101□□-04		For port size Rc 1/2
Bracket	BP-14S	Stainless steel 304	FQ101□□-06		For port size Rc 3/4
	BP-13S		FQ101□□-10		For port size Rc 1



 
FN1/FN4 Series 1





Replacement Parts and Seal List





Housing material

Symbol Housing material Stainless steel 304

Element type Note)

Symbol Element type Applicable model 0 Cylindrical type (5 μ m, 20 μ m) FN1, FN4 Step type (5 µm)

Note) Refer to the Best Pneumatics catalog for detailed element type.

Element length

- j		Applicable model
1	L250 mm	FN1
2	L500 mm	FN1, FN4

Seal material Symbol Seal material **NBR** ٧ FKM

Pressure gauge

Symbol	Pressure gauge
Nil	None (With plug)
G Note 1)	With pressure gauge Note 2) (Wetted part: Brass)

Note 1) Contact SMC for the pressure gauge specification for stainless steel wetted parts.

Note 2) The FN4 series is equipped with two pressure gauges.

Nominal filtration rating

• Element material		Symbol	Nominal filtration rating	
	Symbol	Element material	005	5 μm (Cylindrical type, Step type)
	S	Stainless steel 304	020	20 μm (Cylindrical type)

Port size

Syn	nbol	Port size	Applicable mode
1	0	Rc1	FN1
2	0	Rc2	FN4

Specifications


	Model	FN1101	FN1111	FN1102	FN1112	FN4102
Element dimension		ø65 x	250L	ø65 x 500L		
=	Material	Stainless steel 304				
Je.	Construction	Cylindrical type	Step type	Cylindrical type	Step type	Cylindrical type
leme	Nominal filtration rating	5 μm, 20 μm	5 μm	5 μm, 20 μm	5 μm	5 μm, 20 μm
ш	Differential pressure proof	0.6 MPa				

FN1/FN4 Series 2





Replacement Parts and Seal List

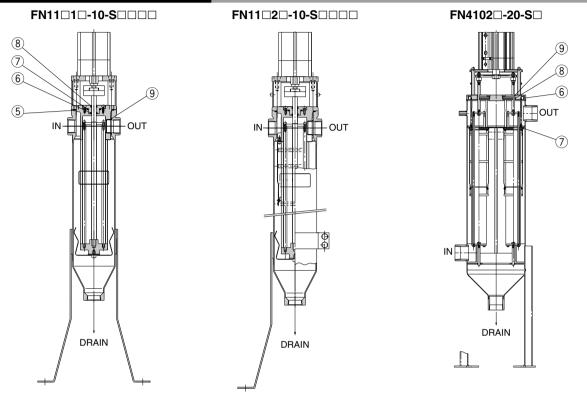

* The numbers correspond with those in the "Replacement Parts and Seal List" of the FN1/FN4 series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Qty.	Material
(5)	O-ring	1	
6	Penta seal	1	NBR
7	O-ring	1	or
8	Scraper	1	FPM
9	O-ring	1	

Replacement Parts: Seal Kit

Model	Part no.	Material	Note
FN11□□N	KT-FN11N	NBR	Items (5) through (9) from
FN11□□V	KT-FN11V	FPM	the above chart, 1 pc. each

Replacement Element

Model	Part no. Qty.		Note
	END100-005		5 μm, Cylindrical type
FN11□1□	END100-020	1	20 μm, Cylindrical type
	END110-005	1	5 μm, Step type
	END200-005	1	5 μm, Cylindrical type
FN11□2□	END200-020	1 20 μm, Cylindrical	
	END210-005	1	5 μm, Step type

Replacement Parts

No.	Description	Qty.	Material
6	O-ring	1	
7	O-ring		NBR
8	Penta seal	1	or FPM
9	Scraper	1	

Replacement Parts: Seal Kit

Model	Part no.	Material	Note
FN4102N	KT-FN41N	NBR	Items 6 through 9 from
FN4102V	KT-FN41V	FPM	the above chart, 1 pc. each

Replacement Element

Model	Part no.	Qty.	Note
FN4102□	END400-005	1	5 μm, Cylindrical type
FN4102	END400-020	1	20 μm, Cylindrical type




FN1/FN4 Series 3

Options (Sold separately)

Reservoir tank: FNR series

This tank is used to store a sufficient amount of fluid for back-flushing (For the FN1 series).

* It is not required for the FN4, which has a built-in tank

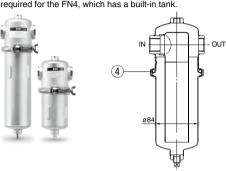

How to Order	FNR ₁₀	0	N	-10
		\top		

Size

Symbol	Capacity	Applicable model
0	1.1 L	FN11□1
1	1.8 L	FN11□2

Port size Symbol Port size

Seal material

Symbol	Material
N	NBR
V	FKM

Replacement Parts

No.	Description	Material	Qty.	Note
4	Orina	NBR	1	OR NBR-70-1 P85*
	O-ring	FKM	1	OR FKM-70 P85*

^{*} When ordering an O-ring, order the standard product shown in the note.

Specifications


	Model	FNR100N-10	FNR100V-10	FNR101N-10	FNR101V-10		
Tank capacity		1.1	I L	1.8 L			
Port size		Rc1					
Material	Bowl & Cover	Stainless steel 304					
wateriai	O-ring	NBR	FKM	NBR	FKM		
Weight		1.5	kg	1.9 kg			
Applicable filter		FN11□1□ (E	lement L 250)	FN11□2□ (E	lement L 500)		

Dust recovery filter (Produced upon receipt of order)

This filter is for recovering dust from fluid after element back-flushing.

It enables the re-use of the element (Gold mesh).



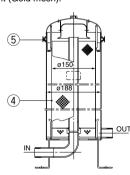

How to Order

FND100 N-10-M149 X0

Seal material Symbol Material N NBR FKM

> Port size Symbol Port size 10 R1

Nominal filtration rati									
	-	149	149 µm						
	• Element type								

Symbol Type Gold mesh

Replacement Parts

No.	Description	Part no.	Material	Qty.
4	Element	EZH710AS-149	Stainless steel 304	1
	O-ring	FGE-KT001	NBR	1
5	O-ring	FGE-KT002	FKM	1

Specifications

- p						
Model		FND100N-10-M149X0	FND100V-10-M149X0			
Port size		R1				
Bowl & Cover		Stainless steel 304				
Material	O-ring	NBR	FKM			
	Element	Stainless steel 304				
Element nominal filtration rating		149 μm				
Weight		7.5 kg				

Note) Produced upon receipt of order.

r Preparation Equipment

Air

Actuators

Actuators Replacement Procedure

CJP2	Pin Cylinder	p. 311
CM2	Air Cylinder	p. 313
CVM	Valve Mounted Cylinder	p. 313
CG1	Air Cylinder	p. 314
CG3	Air Cylinder/Short Type	p. 314
CG5-S	Stainless Steel Cylinder	p. 314
МВ	Air Cylinder	p. 317
MB1	Square Tube Type Air Cylinder	p. 317
CA2	Air Cylinder	p. 317
CS1	Air Cylinder	p. 320
CS2	Air Cylinder	p. 320
CUJ	Mini Free Mount Cylinder	p. 322
cqs	Compact Cylinder	p. 323
CQ2	Compact Cylinder	p. 323
RQ	Compact Cylinder with Air Cushion	p. 323
СХТ	Platform Cylinder	p. 323
CVQ	Compact Cylinder/With Solenoid Valve	p. 323
HYQ	Hygienic Design Cylinder	p. 330
HYC	Hygienic Design Cylinder	p. 330
HYG	Hygienic Design Cylinder	p. 334
MY1B	Mechanically Jointed Rodless Cylinder/Basic Type	p. 337
MY1M	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type	p. 339
MY1C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 339
MY1□W	Mechanically Jointed Rodless Cylinder/With Protective Cover	p. 339
MY1H	Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 343
MY2C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 344
MY2H/HT	Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 344
МҮЗА	Mechanically Jointed Rodless Cylinder/Basic Type	p. 345
МҮ3В	Mechanically Jointed Rodless Cylinder/Basic Type	p. 345
МҮЗМ	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type	p. 345
СҮЗВ	Magnetically Coupled Rodless Cylinder/Basic Type	p. 348
CY3R	Magnetically Coupled Rodless Cylinder/Direct Mount Type	p. 349
REAR	Sine Rodless Cylinder	p. 349
REBR	Sine Rodless Cylinder	p. 349
CY1S	Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing	p. 350
CY1L	Magnetically Coupled Rodless Cylinder/Slider Type: Ball Bushing Bearing	p. 351
MXS	Air Slide Table	p. 352
MXQ	Air Slide Table	p. 352
MXQR	Air Slide Table/Reversible Type	p. 352
MXF	Low Profile Slide Table	p. 357
MXW	Air Slide Table	p. 358
MXP	Air Slide Table	p. 359
MXY	Air Slide Table/Long Stroke Type	p. 362
MGP	Compact Guide Cylinder	p. 366

MGPW	Compact Guide Cylinder/Wide Type	p. 366
MGQ	Compact Guide Cylinder	p. 366
MGF	Guide Table	p. 370
CXSJ/CXS/CXSW	Dual Rod Cylinder	p. 372
CLG1	Fine Lock Cylinder	p. 373
CL1	Lock-up Cylinder	p. 376
CNG	Cylinder with Lock	p. 381
MNB	Cylinder with Lock	p. 384
CNA2	Cylinder with Lock	p. 384
CNS	Cylinder with Lock	p. 389
CLS	Cylinder with Lock	p. 391
REAS	Sine Rodless Cylinder	p. 394
REC	Sine Cylinder	p. 395
RHC	High Power Cylinder	p. 397
RZQ	3 Position Cylinder	p. 400
MK	Rotary Clamp Cylinder/Standard	p. 404
MK2T	Rotary Clamp Cylinder/Double Guide Type	p. 404
CKQG/CKQP	Pin Clamp Cylinder	p. 407
RSQ	Stopper Cylinder	p. 418
RSG	Stopper Cylinder	p. 418
RSH	Heavy Duty Stopper Cylinder	p. 420
RS2H	Heavy Duty Stopper Cylinder	p. 420
MIW/MIS	Escapements	p. 423
CH□KD	JIS Standard Compact Hydraulic Cylinder	p. 425
CH□KG	Compact Hydraulic Cylinder	p. 426
CHN	Small Bore Hydraulic Cylinder	p. 427
CHSD/CHSG	ISO Standard Hydraulic Cylinder	p. 428
CH2□	JIS Standard Hydraulic Cylinder	p. 429

CJP2 Series Replacement Procedure for Seals 1

⚠ Caution

Ask SMC for replacing a seal if a tube inside diameter is 4 mm.

Tubes with a 4 mm I.D cannot be disassembled. If they need to be disassembled in order to replace the packing or for other purposes, please contact an SMC representative for the repair.

1. Disassembly of the Cylinder

1-1. Cleaning

Prior to disassembly, wipe off any dirt from the outside of the actuator.

This will prevent the intrusion of dust and foreign materials during disassembly.

Take particular care on the surface of the piston rod.

1-2. Removal of retaining ring

Remove the retaining ring with proper pliers.

1-3. Removal of head cover

Remove the head cover from the body by pushing the piston rod to the head side.

1-4. Disassembly

Pull out the piston rod.


Take care not to scratch or mark the internal face of the body.

2. Removal of the Seal

2-1. Rod seal

Insert a watchmakers screw driver etc. from front the body and prise the seal out.

Take care not to scratch or score the seal groove in the body.

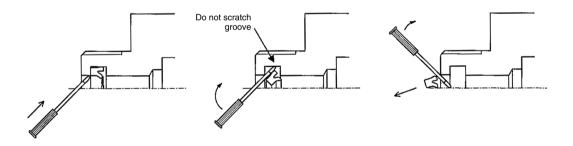


2-2. Piston seal

Push the tube gasket partially to make it come off and pull it out manually.

2-3. Gasket (See right)

Push the gasket partially to make it come off and pull it out manually.

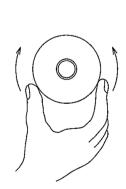



Grease

Piston seal

CJP2 Series Replacement Procedure for Seals 2

3. Application of Grease

3-1. Rod seal and Piston seal

Apply the grease evenly all around the new seal.

3-2. Gasket

Spread a thin film of grease over the tube gasket.

4. Mounting of Seal

4-1. Rod seal

Mount the rod seal with attention to direction.

Then, apply the grease on the rod seal and body bushing.


4-2. Piston seal

When mounting the seal, ensure there are no twists in the seal


Also add the grease inside the groove.

4-3. Gasket

Pay attention not to make the gasket come off.

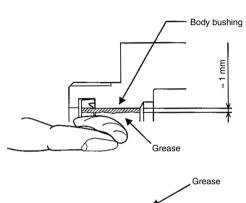


Rod seal

 

5. Application of Grease

5-1. Each component of the cylinder Spread grease entirely over the parts shown.

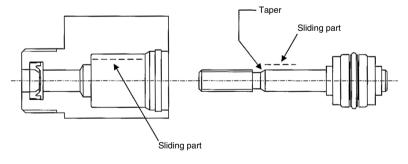

6. Reassembly of the Cylinder

6-1. Insertion of piston rod assembly

Please insert piston rod assembly in the body.

6-2. Insertion of head cover assembly

Please insert head cover assembly in the body.

6-3. Mounting of the retaining ring

Mount the retaining ring with proper pliers.

6-4. Check the assembly condition.

Confirm that there is no air leakage from the seal and that the cylinder can operate smoothly at a minimum operating pressure.



CM2(-Z)/CVM Series Replacement Procedure for Seals

∧ Caution

The cylinder of CM2/CVM series can not disassemble because the cover and the tube are connected by rolling caulking method.

1. How to Replace the Rod Seal

Replacement of the rod seal can be done even at the state of cylinder installed. As for replacement work, proceed as follows.

1-1. Demounting

When removing retaining ring by using a C-shaped retaining ring fitting tool for hole (snap ring pliers) and pulling out the piston rod at the state of rod cover port stopped up by finger, seal retainer and rod seal can be demounted.

1-2. Greasing


Use lithium soap base grease equivalent to JIS class 2.

Fulling lubricate by grease on inner-and-outer peripheries of new rod seals for replacement. Moreover, fill grease into groove and slot portions.

1-3. Mounting

Mounting the rod seal with paying attention as to direction. Slowly push the rod seal with slight rotation when letting the thread part of piston rod tip and width across flat part pass through and surely install to the rod cover housing.

Then, mount in the order of seal retainer and retaining ring.

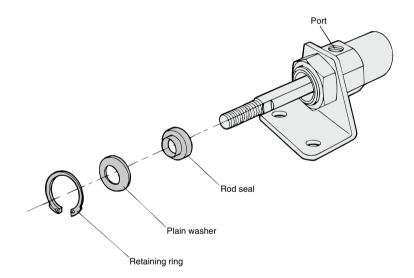

CG1(-Z)/CG3/CG5-S Series Replacement Procedure for Seals 1

1. How to Replace the Seals

1-1. It is possible to replace the rod seal, piston seal, cylinder tube gasket for Ø20 to Ø40.

CBG1 Series

For Ø20 to Ø40, it is possible to replace rod seal, piston seal, cylinder tube gasket and lock piston seal.

1-2. Contact SMC sales if it is necessary to replace seal for ø50 to ø100.

CBG1 Series

For ø50 to ø100, it is possible to replace lock piston seal. For other seals, contact SMC.

1-3. Contact SMC sales if it is necessary to replace parts other than those mentioned above.

Marning

Only people who have sufficient knowledge and experience are allowed to replace seals.

The person who disassembles and reassembles the cylinder is responsible for the safety of the product. Repeatedly disassembling and reassembling the product may cause wearing or deformation of the screws as well as a decline in screw tightening strength. When reassembling the product, be sure to check the cover and tubing screws for wear, deformities, or any other abnormalities. Operating the product with damaged screws may result in the cover or tubing coming off during operation, which could lead to a serious accident. Caution must be taken to avoid such incidents.

↑ Caution

When replacing seals, take care not to hurt your hand or finger on the corners of parts.

2. Disassembly/Reassembly

⚠ Caution

Disassemble and assemble the cylinder in a clean area. Perform on a clean cloth.

For disassembling, hold the flats of the tube cover gently in a vice and hold the flats of the rod cover with a spanner or monkey wrench to loosen and remove the rod cover. When reassembling, tighten 0 to 2 degrees more than the original position before disassembling.

Bore size of ø50 or more cannot be disassembled because they are tightened to a high torque.

Contact your SMC Sales representative if you need to disassemble these products.

For single-acting type, please be noted that the cover might pop up due to the internal spring.

CG5-S Series

The cover and cylinder tube are tighten with Loctite 542 as seal in order to prevent from leakage. Remove old loctite completely and put new loctite when reassemble cylinder.

3. Removal of the Seal

3-1. Rod seal


Insert a watchmakers screw driver from the front of the cover to pull out the seal as shown in Fig. 1.


⚠ Caution

Take care not to damage the seal groove of the cover at

CG5-S Series

Whole rod cover assembly need to be changed when rod scraper of water resistant type is worn.

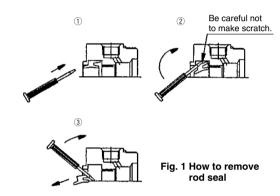

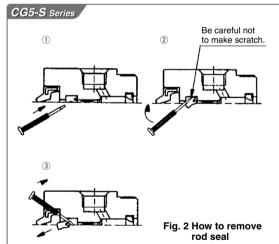

3-2. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 3)

CG1(-Z)/CG3/CG5-S Series Replacement Procedure for Seals 2

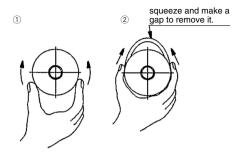


Fig. 3 How to remove piston seal

3-3. Tube gasket

Remove the tube gasket with the watchmakers screw driver or the like.

3-4. Valve seal, valve retaining gasket (Air cushion style only)

After disassembling by referring to Figure 4, pull out them by using a watchmakers screw driver.


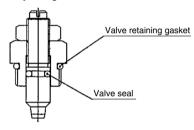


Fig. 4 Positions of valve seal and valve retaining gasket

3-5. Lock piston seal (End lock section)

CBG1 Series

- a. Insert the manual bolt through the rubber cap of the end lock unit (This is not necessary for -*L lock style).
- b. Unscrew two hexagon socket head cap screws and pull out the end lock unit.
- c. For ø20 to ø63, remove the lock piston seal.
- d. For ø80 and ø100, remove the seal retainer and lock piston seal.

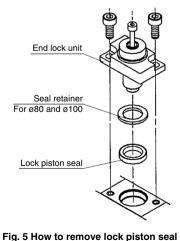

4. Application of Grease

∧ Caution

Use lithium soap base grease equivalent to JIS class 2.


- 4-1. Rod seal, lock piston seal
 - Lightly apply grease to the circumference of a new seal to make mounting easier and have better contact with the cover. Fill in the groove with grease since this is necessary for operation.
- 4-2. Piston seal

Lightly and evenly apply grease to the inner and outer circumferences for easier mounting on the piston.

- 4-3. Tube gasket
 - Lightly apply grease. This prevents its drop when assembling the cylinder.
- 4-4. Valve seal and valve retaining gasket (Air cushion style only)
 - Lightly apply grease. This prevents their drop when assembling the valve.
- 4-5. Cylinder component parts

Apply grease to each component parts of the cylinder in Figure 6. Appendix table shows the grease amount required for a cylinder with stroke 100. For your reference, amount taken with a forefinger is about 3 (g).


L \approx 100 mm, or stroke x $\frac{1}{2}$

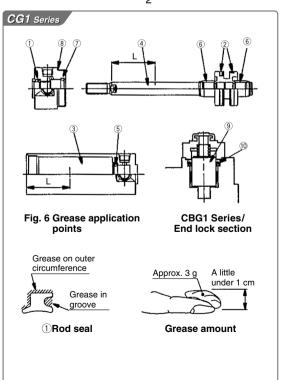

CG1(-Z)/CG3/CG5-S Series Replacement Procedure for Seals 3

Grease application amount (g) Bore size Application ø**20** ø**25** ø32 ø**40** points Stroke 12345 100 st 3 3 3 to 4 678910 Extra 50 st 0.5 0.5 (3)(4)

- * Rubber bumper style does not have (5), (6), and (7).
- * (9) and (10) are the end lock parts of the CBG1 series.

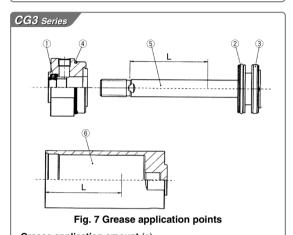

Gr	Grease application amount (g)								
Sti	Bore size	ø 20	ø 25	ø 32	ø 40	Position for grease			
	At 100 st	2	3	3	3 to 4	123 456			
5	0 st increased	0.5	0.5	0.5	1	(5)(6)			

5. Mounting of Seal

5-1. Rod seal

Be careful with the direction of seal while mounting. Apply grease to the seal and the inner circumference of the bush as Figure 8. For small bore sizes, use a watchmakers screw driver to apply grease.

5-2. Piston seal

After mounting the seal, rub grease into the seal groove and the outer circumference of the seal as Figure 9.

5-3. Tube gasket

Install the tube gasket to the cover.

5-4. Valve seal, valve retaining gasket (Air cushion style only)

By referring to Figure 4, install them to the specified position.

 


Fig. 8 Rod seal



CG5-S Series

A little less than 1 mm

Grease

Fig. 10 Rod seal


∧ Caution


Make sure that there is nothing wrong with operation and air leakage when assembly is completed.

MB(-Z)/MB1(-Z)/CA2(-Z) Series Replacement Procedure for Seals 1

1. Disassembly of the Cylinder

The cylinder needs to be disassembled and assembled in a clean place.

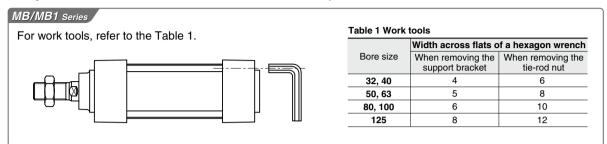

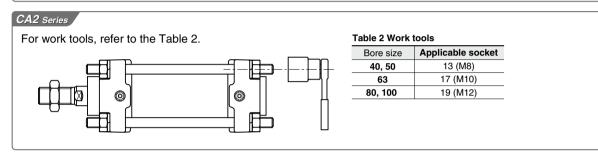

2. Removal of the Seal

2-1. Rod seal, cushion seal

Insert a watchmakers screw driver to pull out the seals.

Take care not to damage the seal groove of the cover. (Fig. 1)

2-2. Piston seal

Remove it as in Fig. 2.

2-3. Tube gasket

Remove it in the same way as Fig. 2.

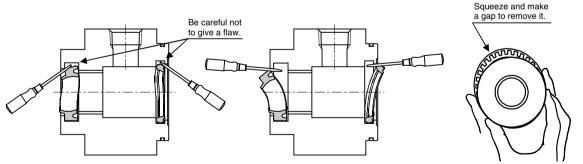


Fig. 1 Removal of rod seal and cushion seal

Fig. 2 Removal of piston seal

MB(-Z)/MB1(-Z)/CA2(-Z) Series Replacement Procedure for Seals 2

3. Application of Grease to Seal

- 3-1. Apply grease slightly to the outer circumference of each seal.
- 3-2. Fill in the groove of the rod seal with grease.

 


Fig. 3 Grease to the seals

4. Mounting of Seal

- 4-1. Rod seal, cushion seal
 - Mount the seal in the correct direction by bending the seal with fingers as Fig. 4.
- 4-2. Piston seal

Mount the seal while stretching it as in Fig. 5.

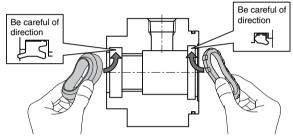


Fig. 4 Mounting of rod seal, cushion seal

 


Fig. 5 Mounting of piston seal

5. Application of Grease

5-1. Rod seal, cushion seal


Apply grease to the seal and the inner circumference of the bush. (Fig. 6)

5-2. Piston seal

Rub grease into the seal groove and the outer circumference of the seal. (Fig. 7)

5-3. Cylinder component parts

Apply grease to each component parts of the cylinder in Figure 9. Appendix table shows the grease amount required for a cylinder with stroke 100. For your reference, amount taken with a forefinger is about 3 g. (Fig. 8)

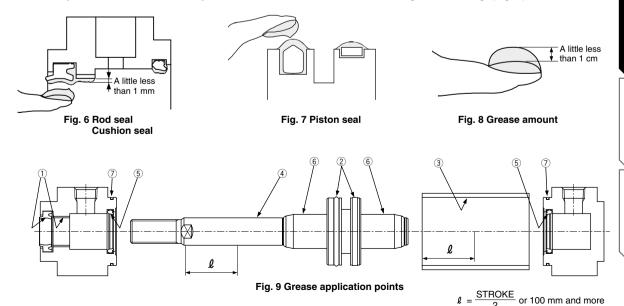

MB(-Z)/MB1(-Z)/CA2(-Z) Series Replacement Procedure for Seals 3

Table 3 Grease application amount (g)

Stroke		Bore size						
	32	40	50	63	80	100	125	Application points
100 st	3 to 4	3 to 4	3 to 5	4 to 5	6 to 8	8 to 10	15 to 17	1234567
Extra 50 st	1	1	1	1.5	1.5	2	3	(3)(4)

6. Reassembly of the Cylinder

- 6-1. Make sure no particles are present. Do not scratch the seals.
- 6-2. To assemble the tie rod to the cylinder, tighten the tie rod to the shorter screw side by hand.
- 6-3. Set the tie rod nuts from the cover on the opposite side. Tighten the tie rod nut so that the tensile force is even.

Refer to the appropriate tightening torque of table 4 and 5.

Brackets refer to the same table.

 


Fig. 10 Tie rod tightening order

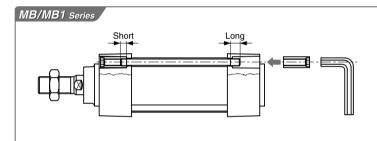


Table 4 Appropriate tightening torque				
Bore size	Appropriate tightening torque (N·m)			
32, 40	5.1			
50, 63	11.0			
80, 100	25.0			
125	30.0			

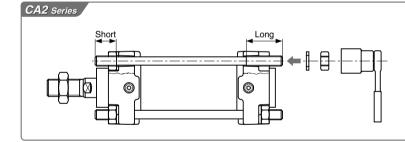


Table 5 Approp	Table 5 Appropriate tightening torque			
Bore size	Appropriate tightening torque (N·m)			
40, 50	10.8			
63	24.5			
80, 100	38.2			

CS1/CS2 Series Replacement Procedure for Seals 1

1. Disassembly

- 1-1. Disassembly should be done in a wide space containing little dust.
- 1-2. After removing the cylinder, be sure to protect the end of piping port and rubber hose on the machine side with clean waste to prevent dust from entering.
- 1-3. Disassemble the unit with care to prevent damage to the sliding portion.
- 1-4. Check the double chamfered portion at the rod end for burrs to prevent damage to the seal and the bushing when removing the cover (push plate) from the piston rod. If burrs are found, remove them with a "file"
- 1-5. Loose either of nuts for tie rod with "ratchet handle for socket wrench", "T-type slide handle for socket wrench" or "spinner handle for socket wrench", etc. and remove it from the tie rod. Please refer to the table for "socket for socket wrench".

C	S1 Series		
	Bore size (mm)	Nut	Applicable socket
	125, 140	Class1, M14 x 1.5	JISB4636 Dodecagon 22
	160	Class1, M16 x 1.5	JISB4636 Dodecagon 24
	180	Class1, M18 x 1.5	JISB4636 Dodecagon 27
	200	Class1, M20 x 1.5	JISB4636 Dodecagon 30
	250	Class1, M24 x 1.5	JISB4636 Dodecagon 36
	300	Class1, M30 x 1.5	JISB4636 Dodecagon 46

CS2 Series								
Nut	Applicable socket							
Class2, M14 x 1.5	JISB4636 Dodecagon 22							
Class2, M16 x 1.5	JISB4636 Dodecagon 24							
	Class2, M14 x 1.5							

- 1-6. Remove 4 tie rods from cover.
- 1-7. Remove the push plate (rod cover) from the piston rod with care to prevent damage to the seal and bushing.
- 1-8. Pull the piston rod and pull out the piston from the cylinder tube.
- 1-9. Remove the cylinder tube from the head cover.
- 1-10. Disassembly of the rod cover (For the head cover, it should also be in accordance with this procedure.)

CS1 Series

- Remove the cylinder tube gasket. When excessive deformation or cut is found with the gasket, replace it.
- b. Remove the cushion cover from the cover by using "flat blade screwdriver".
- (Tool; Screwdriver Nominal size 8 x 150 Normal type, Normal class)
- c. Remove the cushion valve seal from the cushion valve by using "waste".

d. Loosen the hexagon socket head cap screw for push plate by using "hexagon wrench" and remove the push plate. Applicable "Hexagon wrenches" are shown in the table below.

Bore size (mm)	Hexagon socket head cap screw	Nominal size of wrench
125, 140, 160	M8 x 1.25 x 25L	6
180, 200	M10 x 1.5 x 30L	8
250, 300	M12 x 1.75 x 35L	10

- e. Remove the wiper ring. If it cannot be removed by hand, use a small "flat blade screwdriver" and remove it with care to prevent damage to it.
- f. Remove the rod seal by using a small "flat blade screwdriver" with care to prevent damage to it.
- g. Remove the push plate gasket.
- h. Since the cushion seal is pressed fit, air will leak from the portion where the cushion seal is pressed fit due to damage or change in pressing force. Therefore when the cushion seal should be replaced, the rod cover assembly and the head cover assembly should be replaced. (For those that are to be assembled with the Class 2 pressure vessel, the rod and head covers cannot be replaced. Please consult SMC as required.)
- i. Since the bushing is pressed fit into push plate, it is difficult to remove structurally and even if it is removed, stock for press fit lowers when it is pressed fit again. Therefore when it is replaced, replace the push plate assembly.

CS2 Series

- Remove the cylinder tube gasket. When excessive deformation or cut is found with the gasket, replace it.
- Pick out the rod seal with a small flat blade screwdriver carefully not to damage seal and rod cover.
- c. Remove the cushion seal from the cover by using a small flat blade screwdriver carefully not to damage seal and rod cover.
- d. The bushing is pressed fit to the rod cover and difficult to remove. Even if it can be removed, the allowance for press-fit is reduced, which requires the replacement as a rod cover assembly.

2. Replacement Procedure of Seal


2-1. Removal of the seal


Please refer to "1. Disassembly" for dismantling of wiper ring, rod seal, valve seal, tube gasket and push plate gasket.

Since piston seal has a deep groove for sealing, use your hand (not a watchmakers screw driver) and push from one side of seal and pull it out when it lifts off.

2-2. Application of grease

- a. Seal: Apply thin coat of grease.
- b. Cylinder component Apply grease to the individual components as the figure below. The table shows the grease amount required for a cylinder with stroke 100.

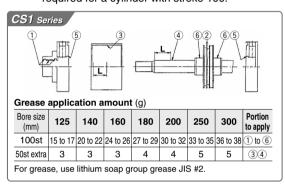

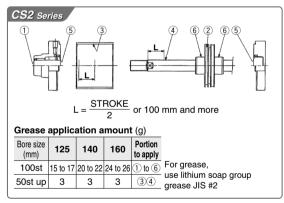

2-3. Mounting of seal

CS1 Series

- a. Wiper ring/Rod seal Mount in correct direction.
- b. Seals other than wiper ring After mounting seals, apply grease on inside diameter surfaces of bushing (rubbing grease into surface).

CS2 Series

- a. Cushion seal/Rod seal Mount in correct direction, N
- b. Seals other than rod seal and cushion seal (Mounting directionless seals)

After mounting seals, apply grease on inside diameter surfaces of bushing (rubbing grease into surface).

3. Assembly

- 3-1. Before assembling cylinder, be sure to clean each part to remove dust.
- 3-2. Before assembling, apply rod, bushing, tube and seal with enough grease.
- 3-3. For rusty part, remove the rust completely.
- 3-4. Assembly should be done in a clean place with care to prevent foreign matters from entering.
- 3-5. Mount seal with care to prevent damage to it.
- 3-6. Insert piston into tube or rod into bushing with care to prevent damage to each seal.
- 3-7. Tighten tie rod and bolt with appropriate torque shown in the table below.

CS1 Series Tightening torque (N·m) Bore size (mm) 125 140 160 180 200 300 Tie Steel tube 49 75.5 103 147.1 254 451.1 92.7 132.4 rod | Aluminum tube 39.2 62.8 Push plate bolt 11 22 38

C	CS2 Series						
	Tightening torque (N⋅m)						
	Bore size (mm)	125	140	160			
	Tightening torque	39.2		62.8			
_							

CUJ Series Replacement Procedure for Seals

1. How to Disassemble

1-1. Disassembly

a. ø4 to ø10

Lightly hold the cylinder tube in a vice. Use a spanner on the width across flats of the rod cover and turn it counterclockwise to detach the rod cover.

b. ø12 to ø20

Remove the retaining ring with suitable pliers (tools for basic internal retaining ring).

Moreover, please note that the retaining ring comes off from pliers when detaching it, it flies, and the human body and peripherals might be disadvantaged.

1-2. Removal of existing seal

For piston seal and tube gasket (O-ring), pick their edges and pull them out of groove.

For rod seal, use a fine watchmakers screw driver to remove it from the seal groove. At that time, be careful not to scratch the inside of the groove and bearing.

2. How to Assemble

2-1. Mounting of seal

a. Tube gasket (O-ring)

Spread the surface of tube gasket with special grease included in a packing set and mount the gasket in the specified groove. (For double acting cylinders only.)

b. Piston seal

Fill a concavity at the side of piston seal with the special grease. Then, mount the seal in the specified groove without a twist.

c. Rod seal

Spread the entire rod seal and fill U-shape groove with the special grease. Then, mount the

rod seal in the specified groove. Make sure to mount it in the right direction. (For double acting cylinders only.)

2-2. Application of grease to cylinder tube

It is recommended that grease should be applied to cylinder tube in case of seal replacement.

Wipe existing grease with clean waste. Be careful not to scratch the inside of cylinder tube and leave out any fiber of the waste as well. Air leakage may occur otherwise.

2-3. Assembly

a. ø4 to ø10

After attaching piston rod assembly to rod cover assembly, set them into cylinder tube.

Tighten the rod cover with the torque specified below.

Tightening torque

3 . 3 . 1			
ø 4	ø6	ø 8	ø 10
0.97 N·m ± 10%	3.08 N·m ± 10%	5.02 N·m ± 10%	5.63 N·m ± 10%

b. ø12 to ø20

After connecting the piston rod assembly to rod cover assembly, set them into cylinder tube, and install the retaining ring with proper pliers (tool for installing a basic internal retaining ring).

Pay attention that the ring will slip off from the pliers, and cause injury or damage to peripheral equipment. Additionally, ensure the retaining ring is mounted properly into the retaining ring groove.

3. Inspection

Inspect cylinders with replaced seal for proper operation and air leakage so as to confirm there is no defect before use.

CQS/CQ2(-Z)/RQ/CXT/CVQ Series Replacement Procedure for Seals 1

Disassembly/Reassembly

Disassemble and assemble the cylinder in a clean area. Perform on a clean cloth.

For disassembling, hold the flats of the tube cover gently in a vice and hold the flats of the rod cover with a spanner or monkey wrench to loosen and remove the rod cover. When reassembling, tighten 2 degrees more than the original position before disassembling.

⚠ Caution

1. For installation and removal, use an appropriate pair of pliers (tool for installing a C retaining ring).

Even if a proper plier (tool for installing a C retaining ring) is used, it is likely to inflict damage to a human body or peripheral equipment, as a retaining ring may be flown out of the tip of a plier (tool for installing a C retaining ring). Be much careful with the popping of a retaining ring. Besides, be certain that a retaining ring is placed firmly into the groove of rod cover before supplying air at the time of installment.

2. Only people who have sufficient knowledge and experience are allowed to replace seals.

The person who disassembles and reassembles the cylinder is responsible for the safety of the product.

When replacing seals, take care not to hurt your hand or finger on the corners of parts.

CBQ2 Series

When more grease is needed due to the maintenance of the cylinder, etc., please order grease pack, which is available separately.

Lock holder mounting bolt is included for $\emptyset 20$ to $\emptyset 63$. Be sure to exchange it when disassembling and re-assembling the cylinder, or it may cause of the air leakage.

1. Disassembly of the Cylinder

See the structural drawing and structural parts for disassembly.

1-1. Cleaning of external surface

Remove dusts and foreign matters from external surfaces to prevent them from entering the cylinder during disassembly. In particular, the surface of the piston rod and the collar should be cleaned carefully.

1-2. Removal of retaining ring

Use appropriate pliers (tool for basic internal retaining ring) for removing the retaining ring. Pay attention that the ring will slip off from the end of the pliers, and cause injury or damage to peripheral equipment.

CQ2K Series

Removal of the rod cover holding bolt and collar holding retaining ring.

a. Bore size ø12 to ø32

Remove the hexagon socket head cap screw holding the rod cover with a hexagon wrench.

b. Bore size ø40 to ø63

Remove the retaining ring with pliers (tool for basic internal retaining ring), and remove the hexagon set screw on the side of the cylinder tube with a hexagon wrench (2 mm width across flats). Be careful not to let the ring slip from the end of the pliers as it may cause injury or damage to surrounding equipment.

1-3. Disassembly

Pull out the rod cover and collar through the bolt or nut mounted on the piston rod end, and take the collar out from the piston rod. At that time, take care not to damage the internal surface of the cylinder tube and the bushing of the collar.

CBQ2 Series

a. Removal of the end lock: Fig. 1.

Locking piston seal

Insert the manual bolt and screw it in over the rubber cap of the end lock unit to the internal lock piston. (It is not necessary for -*L. lock type)

Remove 2 hexagon socket head cap screws and pull off the end lock unit.

As for ø20 to ø63, remove locking piston seal. As for ø80 and ø100, remove packing retainer and lock piston seal.

Then remove lock holder mounting bolt and remove the lock unit and gasket.

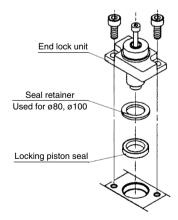


Fig. 1 How to remove end lock



2. Removal of the Seal

2-1. Rod seal

Tool: Watchmakers screw driver, etc.

Insert a watchmakers screw driver from the front side of the cover as shown in Fig. 2.

Take care not to damage the seal groove of the cover

 


Fig. 2 Removal of Rod packing

CQ2 Series

Insert the watchmakers screw driver from the back of the rod cover and collar to pull out the rod seal. Do not to damage the seal groove on the collar at this time.

2-2. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 3)







Fig. 3 Piston seal

2-3. Tube gasket

Remove the tube gasket with the watchmakers screw driver or the like.

3. Application of Grease

3-1. Rod seal

Apply grease around the replacement seal. Fill grease in the groove. (Fig. 4)



Fig. 4 Rod seal

3-2. Piston seal

Apply grease thinly and evenly to the external and internal peripheries of the piston seal to ensure easy fitting to the piston.



Fig. 5 Piston seal

3-3. Tube gasket

Thinly apply grease to the tube gasket. Grease will help prevention of dropping off during fitting the cylinder.

3-4. Cylinder parts

Apply grease to all points of cylinder parts as shown in Figure 6. Grease in quantities show in Table 1 are required for each of 100 mm stroke cylinders in accordance with their diameters.

The quantity of grease taken up by the forefinger as shown in Figure 8 is approximately 3 g.

L \approx 100 mm or Stroke x $\frac{1}{2}$

 


Fig. 6 Grease application points


 



Fig. 7


Fig. 8 Grease amount

Table 1 Grease application amount (g)								
Bore size (mm)		25	32	40	50	63	80	100
100 stroke	2	3	3	3 to 4	3 to 5	4 to 5	6 to 8	8 to 10
Additional 50 stroke	0.5	0.5	0.5	1	1	1.5	1.5	2

b. Apply grease to the sliding part of each part.

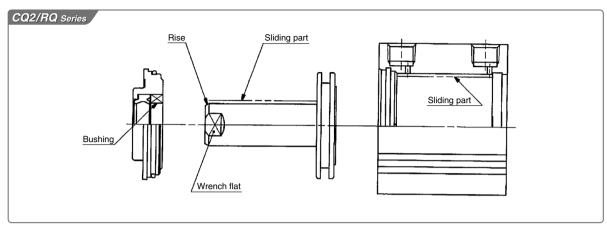

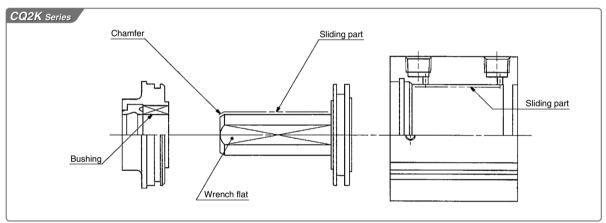

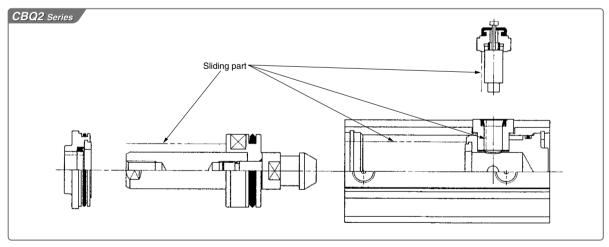


4. Mounting of Seal

4-1. Rod seal

Mount the seal in the correct direction.

After mounting, apply grease to the seal and bushing evenly.


For small diameter cylinders, apply grease using the watchmakers screw driver.

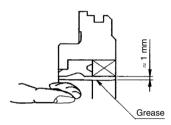

CQ2K Series


To mount the rod seal in the correct direction, the whole internal sliding surface of the guide and rod seal should be visible when looking at the rod cover assembly from the piston side.

 After mounting, apply grease to the seal and bushing evenly.



4-2. Piston seal

 Mount without twisting. After mounting, apply grease to the external circumference of the seal, and the gap to the mounting groove.



4-3. Tube gasket

Mount the tube gasket on the cover.



5. Reassembly of the Cylinder

- 5-1. Insertion of rod cover and collar to piston rod Apply grease to the piston rod end or 30° angled raise and wrench flat, and insert the collar gently with care not to damage the rod seal.
- 5-2. Insertion of piston, rod cover and collar to cylinder tube.

Apply grease to appropriate parts of the cylinder tube, and insert the piston and collar gently without any damage to them by the retaining ring groove.

5-3. Mounting of retaining ring

Use appropriate pliers (tool for installing a basic internal retaining ring). Pay attention that the ring will slip off from the pliers, and cause injury or damage to peripheral equipment. Additionally, ensure the retaining ring is mounted properly into the retaining ring groove.

CQ2K Series

- a. Mounting of the rod cover holding bolt and collar retaining ring
 - 1) Bore size ø12 to ø32
 - Tighten the hexagon socket head cap screw holding the rod cover with a hexagon wrench to the recommended tightening torque. (Refer to Table for the recommended tightening torque.)
 - 2) Bore size ø40 to ø63

Position the collar so that the 4mm hole position on the external circumference aligns with the M4 tap of the cylinder tube, and tighten the hexagon set screw to the recommended tightening torque. (Refer to Table for the recommended tightening torque.) Use appropriate pliers (tool for installing a basic internal retaining ring). Pay attention that the ring will slip off from the pliers, and cause injury or damage to peripheral equipment. Additionally, ensure the retaining ring is mounted properly into the retaining ring groove.

Bore size (mm)		Rod cover holding hexagon socket head cap screw	Collar holding hexagon set screw	Recommended tightening torque (N·m)
12	Without auto switch	M3 x 0.5 x *L	_	0.59 to 1.06
12	With auto switch	M2.5 x 0.45 x 6L	_	0.33 to 0.61
16	Without auto switch	M3 x 0.5 x *L	-	0.59 to 1.06
10	With auto switch	M2.5 x 0.45 x 6L	_	0.33 to 0.61
20	Without auto switch	M5 x 0.8 x *L	_	2.84 to 5.10
20	With auto switch	M3 x 0.5 x 10L	-	0.59 to 1.06
25	Without auto switch	M5 x 0.8 x *L	-	2.84 to 5.10
25	With auto switch	M4 x 0.7 x 10L	_	1.37 to 2.45
32		M5 x 0.8 x *L	_	2.84 to 5.10
40		_	M4 x 0.7 x 4L Truncated cone point	0.20 to 0.39
50		-	M4 x 0.7 x 6L Truncated cone point	0.20 to 0.39
63		-	M4 x 0.7 x 6L Truncated cone point	0.20 to 0.39

^{* *}L: Length of the hexagon socket head cap screw depends on the stroke.





CBQ2 Series

a. Mounting of end lock

Apply grease to the lock piston surface and internal lock holder. Insert the gasket and lock holder, then fix with new hexagon socket head cap screw which is attached to the seal kit.

Insert end lock unit and fix with new hexagon socket head cap screw which is attached to the seal kit.

(Figure 9, 10, 11, 12)

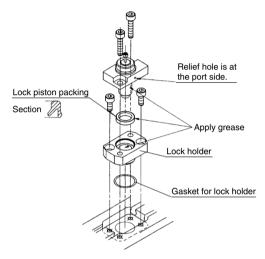


Fig. 9 Reassembling of end lock part (Ø20, Ø25)


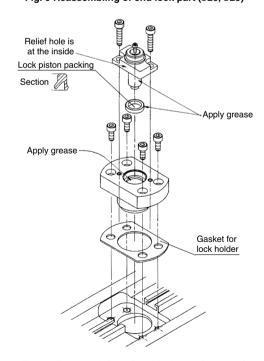


Fig. 11 Reassembling of end lock part (Ø50, Ø63)

 

Hexagon socket head cap screw	Applicable bore size	Tightening torqu
M3	ø20 to ø63	0.71 to 0.86
M5	ø80 and ø100	2.65 to 3.24

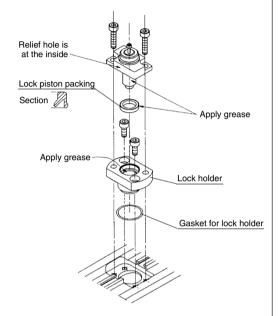


Fig. 10 Reassembling of end lock part (Ø32, Ø40)

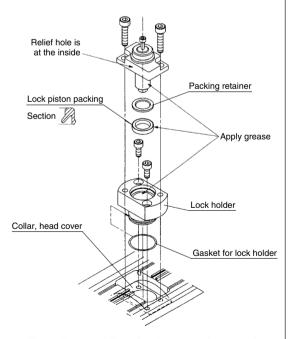


Fig. 12 Reassembling of end lock part (Ø80, Ø100)



5-4. Check of assembly

Check there is no air leakage at the seal and the minimum operating pressure can realize smooth operation.

CXT Series

Replacement of Driving Cylinder

 Driving cylinder of this device is normal compact cylinder, so it is possible to replace it. The following is types of cylinder.

Applicable type	Driving cylinder type
CXT□12	CDQSB12-**DC
CXT□16	CDQSB16-**DC
CXT□20	CDQSB20-**DC
CXT□25	CDQSB25-**DC
CXT□32	CDQ2A32-**DC
CXT□40	CDQ2A40-**DC

Driving cylinder type ** indicates stroke.

2. Replacement procedure

Please comply with the following procedure as referring constructions on page 173.

a. Disconnect connection between piston rod and adaptor with spanner.

- b. Remove 4 bolts fixing plate ② to driving cylinder. Note)
- c. Replace driving cylinder to another and fix it with 4 bolts. Please make sure that piston rod doesn't touch inside of plate A lole.
- d. Screw adapter in piston rod and tight it with spanner.
- Note) In case of cylinder with short stroke, hexagon wrench sometimes doesn't applies between plate A② and slide block① due to its narrow space. In that case, replace driving cylinder by removing plate A itself with loosening 2 tightening bolts between plate A and quide axis④.
- In case of replacing only packing etc. of cylinder, replace it after removing cylinder on 2). Please refer to "Appendix. Replacement procedure of cylinder packing"





1. Disassembly of the Cylinder

1-1. Cleaning

Prior to disassembly, wipe off any dirt from the outside of the actuator. This will prevent the intrusion of dust and foreign materials during disassembly.

Take particular care on the surface of the piston rod.

- 1-2. Removal of switch rail [if the switch is mounted] Loosen the hexagon bolt and remove the switch rail and switch rail pedestal.
- 1-3. Removal of rod cover

HYQ Series

Loosen the hexagon socket head cap screw and remove the rod cover.

HYC Series

Loosen the tie rod nut and remove the rod cover.

1-4. Disassembly

Pull out the piston rod by holding a bolt or nut mounted on the piston rod end. Take care not to scratch or mark the internal face of the cylinder tube.

1-5. Removal of the head cover

HYQ Series

Loosen the hexagon socket head cap screw and remove the head cover.


HYC Series


Loosen the tie rod nut and remove the head cover.

2. Removal of the Seal

2-1. Rod seal [Fig. 7]

Insert a watchmakers screw driver etc. from behind the rod cover and prise the seal out. Take care not to scratch or score the seal groove in the rod cover.

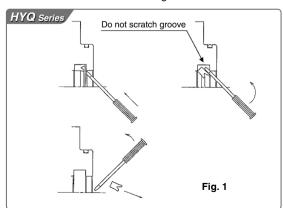


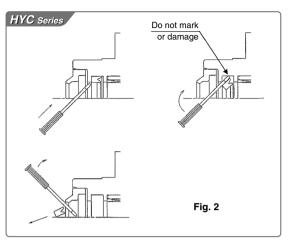

2-2. Cushion seal


HYC Series

Insert a watchmakers screw driver etc. from the front of the rod cover and take out. Take care not to mark or damage the seal groove of the rod cover. Likewise, insert the watchmakers screw driver etc. from the front of the head cover and take out. Do not mark or damage the seal groove of the head cover.

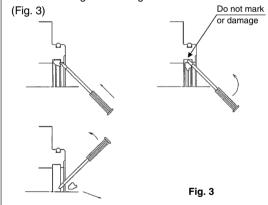

2-3. Piston seal

Since the piston packing is inserted deeply, push it partially to make it come off and pull it out manually. Do not use watchmakers screw driver. (Fig. 4)

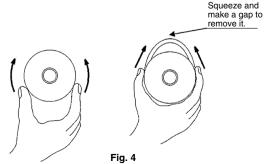

Actuators
 Actuators

Modular F.R.L. Pressure Control Equipme

Air Preparation Equipment

ndustrial Filters


Industrial Filters

HYQ/HYC Series Replacement Procedure for Seals 2

2-4. Tube gasket


Push the tube gasket partially to make it come off and pull it out manually. (Fig. 4)

2-5. Needle scraper

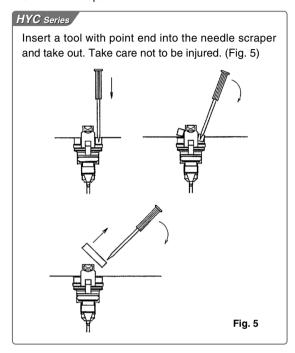


3. Application of Grease

 3-1. Rod seal and piston seal [Fig. 6, Fig. 7]
Apply the grease all around new packing evenly. Also add the grease inside the groove.



3-2. Cushion seal [Fig. 8]

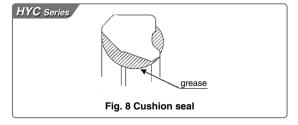

3-3. Tube gasket

Spread a thin film of grease, over the gasket.


3-4. Rod scraper


Fill the rod scraper groove with grease. (Fig. 9)



ia. 9

3-5. Each component of the cylinder

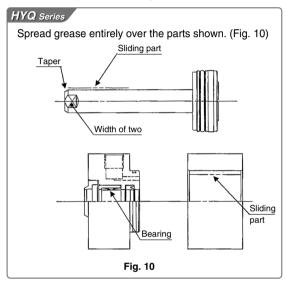

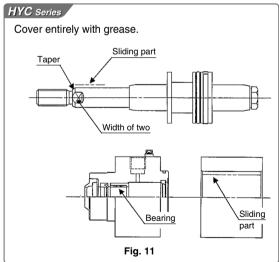


HYQ/HYC Series Replacement Procedure for Seals 3


4. Mounting of Seal

4-1. Rod seal

Mount the seal with attention to direction.

Then, apply the grease on the seal and bearing evenly.

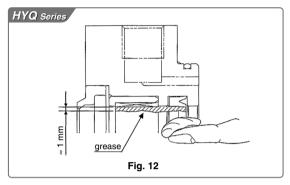


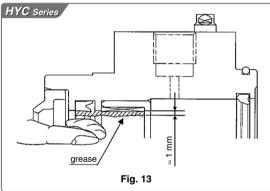

4-2. Piston seal

Make sure not to twist the seal, when mounting.

4-3. Cushion seal

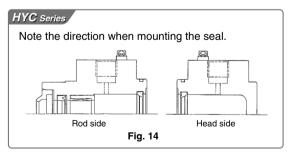


4-4. Tube gasket

Pay attention not to make the gasket come off.

4-5. Needle scraper

HYC Series

Press down with hand to mount. At that time, ensure there is no protrusion from the cover end face.

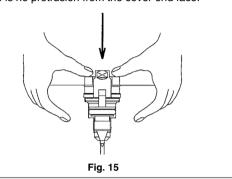

5. Reassembly of the Cylinder

5-1. Tighten the head cover.

HYQ Series

Wipe off the old adhesive from the threaded part of the hexagon socket head cap screw and apply a new layer of adhesive (Loctite 242 (blue)).

Tighten the cylinder tube and head cover with hexagon socket head cap screw.

Table 1

Applicable bore size	Tightening torque (N·m)	
ø 20	2.1 to 3.9	
ø 25	3.6 to 6.8	
ø 32	2.1 to 3.9	
ø 40		
ø 50	3.6 to 6.8	
ø 63	8.8 to 16.2	

HYC Series

Wipe off the adhesive from the threaded part of the tie rod bolt and apply adhesive (Loctite 242 (blue)) newly.

Tighten the cylinder tube and head cover with tie rod bolt.

Table 2

Applicable bore size	Tightening torque (N·m)
ø 32	8.8 to 16.2
ø 40	0.0 to 10.2
ø 50	17.2 to 31.8
ø 63	17.2 10 51.0

5-2. Inset the rod assembly into the cylinder tube.

Apply the grease to the part receiving the cylinder tube and insert the rod assembly carefully and slowly make sure the piston packing and gasket are not damaged.

HYQ/HYC Series Replacement Procedure for Seals 4

5-3. Tighten the rod cover.

HYQ Series

Wipe off the old adhesive from the threaded part of the hexagon socket head cap screw, and apply a new layer of adhesive (Loctite 242 (blue)).

Tighten the cylinder tube and rod cover with hexagon socket head cap screw. (Tightening torque: refer to table 1)

HYC Series

Wipe off the adhesive from the threaded part of the tie rod bolt and apply adhesive (Loctite 242 (blue)) newly. Tighten the cylinder tube and rod cover with tie rod bolt. (Tightening torque: refer to table 2)

5-4. Mount the switch rail (if the switch is mounted).

Applicable bore size	Tightening torque (N·m)
ø 20 to ø 63	1.1 to 1.9

5-5. Check the assembly condition.

Confirm there is no air leakage from the packing and the cylinder can operate smoothly at minimum operating pressure.



HYG Series Replacement Procedure for Seals 1

⚠ Caution

Ask SMC for replacing a seal if a tube inside diameter has 40 mm or more.

The cylinder with internal diameter of 40 mm or more has extremely large tightening torque at the rod cover.

Therefore, if the cylinder needs to be disassembled for replacing a seal, ask SMC for the work. SMC can supply a seal kit. However, if the cylinder results in failure or damage after it is disassembled by the other party than SMC, we can't compensate such failure.

1. Disassembly of the Cylinder

1-1. Cleaning

Prior to disassembly, wipe off any dirt from the outside of the actuator.

This will prevent intrusion of dust and foreign materials during disassembly.

Take particular care on the surface of the piston rod and guide rod.


1-2. Removal of the assembly

Fix the chamfer on the piston rod, which is retracted, with a spanner, and remove a fixing bolt from a plate by turning the piston rod.

1-3. Removal of the rod cover assembly Remove the rod cover assembly by rotating the chamfer on the rod cover.

1-4. Disassembly


Pull out the piston rod by holding a nut mounted on the Tightening bolt end. Take care not to scratch or mark the internal face of the body tube.

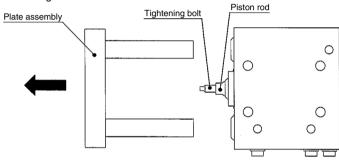

2. Removal of the Seal

2-1. Rod seal

Insert a precision driver etc. from behind the rod cover and prise the seal out. Take care not to scratch or score the seal groove in the rod cover.

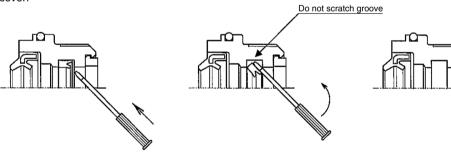

2-2. O-ring (rod side) [Fig. 1]

Push the tube gasket partially to make it come off and pull it out manually.

2-3. Piston seal [Fig. 1]

Since the piston seal is inserted deeply, push it partially to make it come off and pull it out manually. Do not use precision driver.





Squeeze and make a gap to

Fig. 1







HYG Series Replacement Procedure for Seals 2


3. Application of Grease

3-1. Rod seal and piston seal

Apply the grease all around new seal evenly. Also add the grease inside the groove.


3-2. O-ring (rod side)

Spread a thin film of grease, over the gasket.

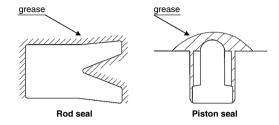


3-3. Scraper

Fill the scraper (part of piston rod and guide rod) groove with grease.

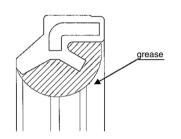

3-4. Each component of the cylinder

Spread grease entirely over the parts shown.

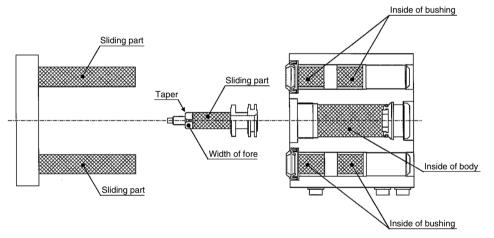

4. Mounting of Seal

4-1. Rod seal

Mount the seal with attention to direction.


Then, apply the grease on the seal evenly.

4-2. Piston seal

When mounting the seal, ensure there are no twists in the seal.

4-3. O-ring (rod side)

Pay attention not to make the gasket come off.

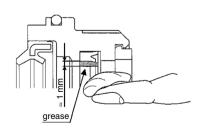

HYG Series Replacement Procedure for Seals 3

5. Reassembly of the Cylinder

5-1. Insert the piston rod assembly into the body.
Insert the piston rod assembly carefully and slowly, so as not to dam-

age the piston seal. 5-2. Tighten the rod cover.

Tighten the rod cover and the body. (Tightening torque: refer to table 1) O-ring must be fit in a groove correctly, and must not be torn out.

5-3. Tighten the plate assembly

Apply adhesive on a thread hole on a plate. (Kind of adhesive: Loctite 262 [red])

Insert a guide rod of a plate assembly into the body.

Fixing the chamfer on the piston rod with a spanner, tighten the tightening bolt and the plate assembly by rotating the piston rod.

(Tightening torque: refer to table 2)

5-4. Check the assembly condition.

Confirm there in no air leakage from the seal and the cylinder can operate smoothly at minimum operating pressure.

Table 1

Bore size (mm)	Tightening torque (N·m)
20	140
25	260
32	500

Table 2


Bore size (mm)	Tightening torque (N·m)
20	2.1 to 3.9
25	3.7 to 6.7
32	8.8 to 16.2


lhdl

MY1B Series Replacement Procedure for Dust Seal Bands 1

1. Disassembly

 - a. Loosen two set screws at one side. That is, four set screws (within dotted line) both sides totally for three rotations.
- b. Remove end cover by removing two hexagon socket button head screws for fixing on end cover (at both sides of slider).
- c. Remove the opposite end cover as same way.
- d. Remove top cover.
- e. Pull out dust seal band at this condition.



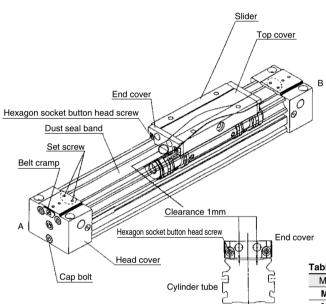

Spacer Stopper

Hexagon socket button head screw

MY1B20 to 40

Parallel ke

 


Fig. 2

Table 1. Dust seal band standard list

Model number	Standard length	Model number	Standard length
MY10-16B-st	st + 110 -1	MY40-16B-st	st + 272 ⁺² ₀
MY16-16B-st	st + 160 -1	MY50-16B-st	st + 328 ⁺²
MY20-16B-st	st + 200 -1	MY63-16B-st	st + 382 +2
MY25-16B-st	st + 182 +2	MY80-16B-st	st + 544 +2
MY32-16B-st	st + 228 +2	MY100-16B-st	st + 634 +2

Note) 2 type of dust seal bands are available and the part no. depends on treatment of setscrew.

- •Black zinc chromate \rightarrow MY **-16B-st
- $\bullet \text{Nickel plating} \to \text{MY}**\text{-16BW-st}$

2. Assembly

a. Masking tape (black) of dust seal band for replacement should be removed and applied the grease wholly as Fig. 4^(Note 1) after supplementary process of Fig. 5.

Fig. 1

- (Length of dust seal band is defined as regulated. But check the length again before mounting for shipping.)
- b. Put dust seal band for replacement in slider.
- c. Fix end cover assembly so that clearance between end cover assembly and cylinder tube is about 1 mm. In that case, proper tightening torque of hexagon socket button bolt is regulated by values shown in table. 2. Fix the opposite end cover as same way. (Fig. 2) In case of fixing end cover, ensure that spacer, stopper and parallel key are installed.
- d. Insert both dust seal band into head cover up to line (10 mm). At the same time, put dust seal band in the groove of cylinder tube while stretching dust seal band. Also, as the stainless plate of dust seal band is thin. 0.15 t, be careful not to bend or break in insertion.

Table 2. Tightening torque of hexagon socket button head screw

Diameter	Bolt size	Tightening torque (N·m)
10		
16, 20	M3 x 0.5	0.3
25, 32, 40	M4 x 0.7	0.7
50, 63, 80, 100	M5 x 0.8	1.5



 


Fig. 3

  - ∗In case of Ø10, Ø80 and Ø100, Dust seal band is magnetic hold type. Set the dust seal band on the Cylinder tube with equivalent clearance W₁ and W₂. (Fig. 5) Another work is same way as above 4.
- e. Tighten only two set screws at A side after installation. In that case, adjust so that dust seal band located near screws does not lift due to excessive tightening. Proper tightening torque is 0.1 N·m {1 kgf·cm}.
- Reciprocate slider three or four times up to both stroke ends to remove sagging of dust seal band.
- g. Be sure to return slider up to B side stroke end and tighten at B side as same way after ensuring that dust seal band is inserted into head cover for approx. 10 mm.
- h. Install top cover.
- Reciprocate slider for a few times manually again.
 If dust seal band does not lift, installation will complete.
- Note 1) In case of $\varnothing 10$, $\varnothing 80$ and $\varnothing 100$, dust seal band is made of stainless steal only without masking tape.
- Note 2) Apply grease uniformly as Fig. 4. Use lithium soap grease with consistency No. 1 or No. 2.





MY1M/C/ W Series Replacement Procedure 1



How to Maintenance

Monthly application of grease to the slide bearing and the dust seal band may lengthen the life.


Grease pack is recommended. (Grease pack number: GR-S-010)

- 1. Refer to Replacement Procedure of MY1M/C Dust Seal Band.
- 2. How to install the cylinder with the cover Refer to Installation Procedure for MY1 W.
- 3. How to install the side seal of the cylinder with cover. Refer to Mounting Procedure for MY1 WK side seal.

1. Replacement Procedure of Dust Seal Band

MY1M/C Series

- 1. Disassembly
 - a. Loosen the two set screws at one side, that is, four set screws at both sides.
 - b. Remove the end cover by removing two (four) hexagon socket button head screws for fixing which are on the end cover.
- c. Remove the opposite end cover as same way.
- d. Pull out the dust seal band in this condition.

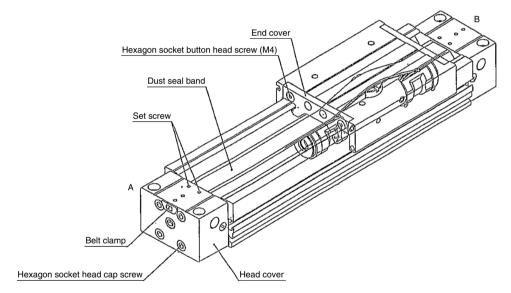

Table, 1 Dust seal band standard list

Table. I bust seal ballu stallualu list		
Model number	Standard length	
MY16-16B-st	st + 160 ⁺²	
MY20-16B-st	st + 200 ⁺² ₀	
MY25-16B-st	st + 182 ⁺² ₀	
MY32-16B-st	st + 228 ⁺² ₀	
MY40-16B-st	st + 272 ⁺² 0	
MY50-16B-st	st + 328 ⁺² 0	
MY63-16B-st	st + 382 ⁺²	

Note) 2 type of dust seal bands are available and the part no. depends on treatment of set screw. Black zinc chromate \rightarrow MY \square -16B-st

Nickel plating \rightarrow MY \square -16BW-st

MY1M/C/ W Series Replacement Procedure 2

2. Assembly

- a. The dust seal band for replacement should be added the process of drawing 2 and greased wholly as shown in figure 1.
- b. The dust seal band for replacement is pierced the slide table.
- c. The end cover is fixed so that the clearance between the end cover assembly bottom part and the cylinder tube upper surface is about 1 mm.

The adequate tightening torque at this time is 0.7 N·m (7 kgf·cm).

The opposite end cover is fixed as same way.

- d. The dust seal bands of both sides are inserted in the head cover to the position drawn with a pen (about 10 mm). Then, at the same time, insert the dust seal band in the groove of cylinder tube by pulling it to both sides. (figure 4)
- e. If the dust seal band is installed properly without coming to the surface, tighten two set screws at A side.
 Adequate tightening torque is 0.1 N·m (1 kgf·cm).
- f. Reciprocate the slide table three or four times to both stroke ends in order to remove the sag of the dust seal band.
- g. Be sure to return the slide table to B side stroke end and tighten the set screw at B side after ensuring that the dust seal band is inserted in the head cover of about 10 mm.
- h. Reciprocate the slide table again manually a few times and ensure that the dust seal band does not come to the surface.

Note 1) Grease uniformly as the drawing 1. Use consistency No. 1 or No. 2 of the lithium soap grease.

Table. 2 Tightening torque of button bolt

Diameter	Bolt size	Tightening torque (N·m)
16, 20	M3 x 0.5	0.3
25, 32, 40	M4 x 0.7	0.7
50, 65	M5 x 0.8	1.5



Grease application amount (Shaded portion) ≈ 0.3mm

Fig. 1



 


Fig. 2



 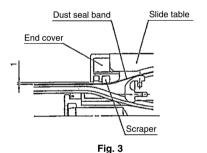




MY1M/C/ W Series Installation Procedure


2. Installation

MY1 □ W Series

- 1. Removal of the cover
 - a. Remove the hexagon socket button head screw to remove the cover.

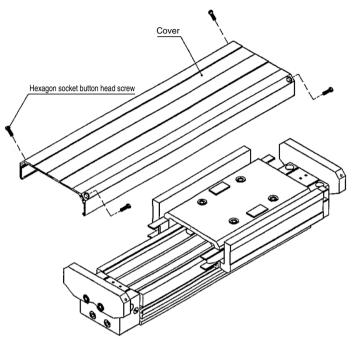

2. Installation, adjustment

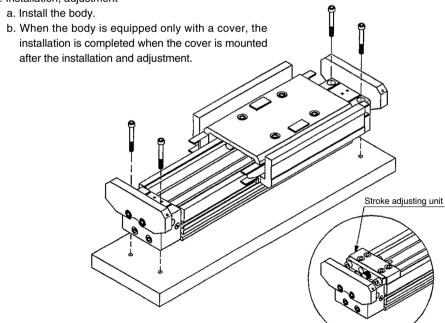

Note) Optional stroke adjustment unit is adjusted here.


Cover

MY1M/C/ W Series Installation Procedure


3. Installation Procedure of the Side Seal

MY1 □ WK Series

- 1. End cover removal procedure
 - a. Remove two hexagon socket head cap screws and two hexagon socket button head screws.
 - b. Remove the end plate on one end.

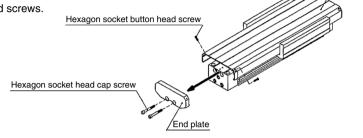

- 2. Installation of the side seal
 - a. Insert the side seal assembly from the end surface.
 - Note) The stainless part of the side seal assembly is very sharp. It should be handled with care.

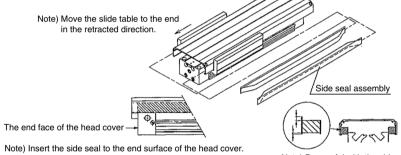


Do not bend before insertion.

ø**40**

M6

Note) Be careful with the side seal assembly direction.

- 3. Assembly of the cover
 - a. Mount the end plate and fix it.

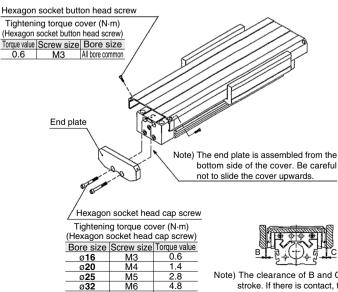


Note) The clearance of B and C part has to be checked at the full stroke. If there is contact, the clearance should be adjusted by loosening the hexagon head cap screw and retightening it.

MY1H Series Replacement Procedure for Dust Seal Bands

1. Disassembly

 - a. Loosen the two (three) set screws at one side, that is, four (six) set screws at both sides.
- b. Remove the end cover by removing two bolt with hex. hole fixing which are on the end cover.
- c. Remove the opposite end cover as same way.



Bolt with hex. hole (M4)

Dust seal band

Set screw

Belt clamp

Head cover

Table. 1 Dust seal band standard list

Part number	Standard length
MY10-16B-st	st + 110 ⁺² ₀
MY16-16B-st	st + 160 ⁺² ₀
MY20-16B-st	st + 200 ⁺² ₀
MY25-16B-st	st + 182 ⁺² 0
MY32-16B-st	st + 228 ⁺² ₀
MY40-16B-st	st + 272 ⁺² ₀

Note) 2 types of dust seal bands are available and the part no. depends on treatment of set screw.(Over ø16)
Black zinc chromate →

 $\label{eq:MY**-16B-st} \text{Nickel plating} \rightarrow \text{MY**-16BW-st}$

2. Assembly

- a. The dust seal band for replacement should be greased wholly as shown in figure 1.
- b. The dust seal band for replacement is pierced the slide table.
- c. The end cover is fixed so that the clearance between the end cover assembly bottom part and the cylinder tube upper surface is about 1 mm. (fig. 2)

The adequate tightening torque at this time is 0.7 N·m (7 kgf·cm).

The opposite end cover is fixed as same way.

- d. The dust seal bands of both sides inserted in the head cover to the position drawn with a pen (fig. 3). Then, at the same time, insert the dust seal band in the groove of cylinder tube by pulling it to both sides. (fig. 4)
- e. If the dust seal band is installed properly without coming to the surface, tighten two set screw at A side. Adequate tightening torque is 0.1 N·m (1 kgf·m).
- f. Reciprocate the slide table three or fore times to both stroke ends in order to remove the sag of the dust seal band.

Be sure to return the slide table to B side stroke end and tighten the set screw at B side after ensuring that the dust seal band is inserted in the head cover of about 10 mm.

Note 1) Grease uniformly as the fig. 1. Use consistency No. 1 or No. 2 of the lithium soap grease.

Note 2) After inserting the dust seal band, pull it by the hands to A and B directions to make it a little tightened, and insert it to the cylinder tube ditch. (fig. 4)


Note 3) Adequate tightening torque of the set screw is 0.1 N·m (1 kgf·cm).


Note 4) Ensure that the magic drawing of additional work to the dust seal band (figure 2) is hidden inside the head cover assembly.



Grease application amount (Shaded portion) $\approx 0.3 \text{ mm}$

Fig. 1

 

 

 



Fig. 4




MY2C/H/HT Series Replacement Procedure for Dust Seal Bands

1. Disassembly

- a. Remove the 4 cap bolts for fixing the cylinder and remove the cylinder from the guide.
- b. Loosen the 2 set screws on one side (3 screws for ø16) of the head cover, total 4 screws on both sides (6 screws for ø16). (Note 1)
- c. Remove the 2 cap bolts for fixing the end cover to remove the end cover.
- d. Remove the end cover on the other side in the same way.
- e. Pull out the dust seal band in this state.

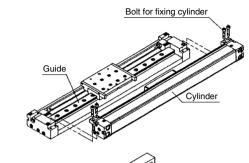

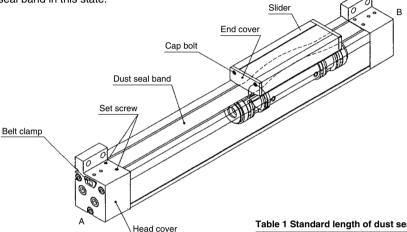

2. Assembly

- a. Cut the dust seal band for replacement into the dimension shown in Table 1 and bend both ends at about 10° (Figure 2) with L dimension in Table 2 from the position in Figure 1.
- b. Mount it on the cylinder facing the bent side downward. (Note 2)
- c. Adjust the end cover to obtain about 1mm clearance between the bottom face of the end cover and the top face of the cylinder tube and fix with care so that the scraper will not drop or twist. (Figure 3)
- d. Fix the end cover on the other side in the same way.
- e. Adjust the dust seal band to obtain L dimensions in Table 2 (L dimension: the length of the dust seal band projected from the cylinder tube), and fix the set screws on side A. (Note 3)
- f. Stretch the dust seal band toward side B and fix it with the set screws on side B.
- g. Move the slider in full stroke for 2 ~ 3 times to check the dust seal band for fit.
- h. Apply grease to the sliding part of dust seal band (upper face of the cylinder tube) and mount the cylinder on the guide. (Note 4)
- Note 1) For ø16, remove a belt clamp.
- Note 2) Dust seal band is made of thin material. Don't bend it at portions other than those designated.
- Note 3) Tightening torque for set screw is 0.1 N·m (1 kqf·cm).
- Note 4) For grease, use lithium soap base grease No. 1 or No. 2.

Table 1 Standard length of dust seal band

Standard length	
Stroke + 160 ⁺²	
Stroke + 176 ⁺² ₀	
Stroke + 270 ⁺² ₀	

Table 2 L dimension of dust seal band

Bore size	L dimension (mm)
ø 16	20
ø 25	8
ø 40	10

 


Fig. 2

 


Fig. 3





MY3A/3B/3M Series Replacement Procedure 1

1. Inspection/Maintenance


Regular grease applying (once a month) to the bearing sliding surface and the dust seal band is recommended for more improvement of life. Refer to 'Guide for replacement of MY3 dust seal band' to replace the dust seal band.


2. Disassembly/Assembly

MY3A/B Series Replacement Procedure of Seal Belt 7 Hexagon socket head cap screw 6Slide table assembly (1)Cylinder tube 12Scraper 5 Bearing 4)Dust seal band 3Seal belt 2Set screw 1)Hexagon socket head cap screw assembly 9 Head cover 8 Belt clamp Fig. 1

1.Disassembly

- a. Loosen two setscrews ② on the top head cover ⑨.
- b. Remove belt clamp (8).
- c. Remove four retaining hexagon socket head cap screws \bigcirc on the top of slide table assembly \bigcirc .
- d. Remove slide table assembly ⑥. (At this time, please watch that the beanings ⑤ and the scraper ⑫ might fall. (Note 2)
- e. In this condition, Pull out dust seal band 4.
- f. Remove four bearings ⑤ in the right and left from piston assembly ⑩.
- g. Remove three head cover retaining hexagon socket head cap screws ①.
- h. Pull out head cover 9 from cylinder tube 11.
- j. Pull out piston assembly 10 from cylinder tube 11.
- k. Pull out seal belt 3 from cylinder tube 11.

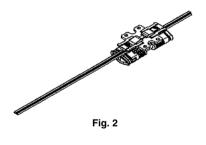

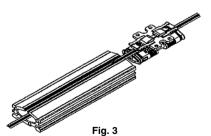

MY3A/3B/3M Series Replacement Procedure 2

2. Assembly

- a. Avoid flaws on seal belt, as it may cause air leakage (Pay special attention to the edges indicated by arrows in Figure 4).
- b. Check that the total length of seal belt is of a recommended length and apply grease to the whole surface (Refer to Table 1).
- c. Put seal belt through piston assembly and assemble it to cylinder tube as shown in Figures 2 and 3.
- d. Keep the same extra length of seal belt on both left and right ends of cylinder tube and slowly reciprocate piston assembly once to fit seal belt into cylinder tube. Then reciprocate piston assembly a couple of times more and wipe the extra grease collected forward of the piston off. (When grease remains on the contact side of the piston and the head cover, it may cause the lurching by sticking.
- e. Insert the right and left head cover in the cylinder tube, and tighten head cover retaining hexagon socket head cap screws.
- f. Put dust seal band in piston assembly. (Note 1)
- g. Insert bearing into piston assembly. (Note 1)
- h. Assembly slide table assembly to piston assembly with retaining hexagon socket head cap screws. (Note 1)
- Cut off the extra seal belt over the head cover ends with cutter and assembly belt clamp.
- j. Tighten two setscrews each on the top of both head covers. (Note 1)
- k. This is the end of replacement work.
 If air leakage is considerable after replacement, consult SMC

Replacement Procedure of Dust Seal Band

- 1. Disassembly
 - a. Loosen two set screws at one side, that is, four set screws both sides totally for three rotations.
 - b. Remove Slide table by removing two hexagon socket button bolts for fixing on Slide table.
 Pay attention not to let the bearing and scraper come off when the slid table is removed.
 - c. Pull out Dust seal band at this condition.
- 2. Assembly
 - a. Cut the replacement dust seal band to the dimensions shown in Table 1.
 - *Length of dust seal band is defined as regulated, but check the length again before mounting for shipping.
 - b. Pass the replacement dust seal band through the opening (at 2 places) of the belt separator, and mount on the cylinder body.
 - c. Set the bearing in place.
 - d. Mount the scraper into the groove on the slide table.



•

Table 1. Seal belt part no.

	Bore size	Part No.	Recommended length
	ø 16	MY3A16-16C-st	st + 206
	ø 20	MY3A20-16C-st	st + 225
	ø 25	MY3A25-16C-st	st + 246
MY3A	ø 32	MY3A32-16C-st	st + 289
	ø 40	MY3A40-16C-st	st + 336
	ø 50	MY3A50-16C-st	st + 370
	ø 63	MY3A63-16A-st	st + 416
	ø16	MY3B16-16C-st	st + 218
	ø 20	MY3B20-16C-st	st + 245
МҮ3В	ø 25	MY3B25-16C-st	st + 274
MY3M Note 3)	ø 32	MY3B32-16C-st	st + 321
	ø 40	MY3B40-16C-st	st + 372
	ø 50	MY3B50-16C-st	st + 406
	ø 63	MY3B63-16A-st	st + 452

Note 1) Refer to "Dust Seal Band Replacement Procedure" for dust seal band assembling (installation of the bearing and the slide table assembly).

Note 2) When parts fall check no adhesion of the foreign objects and assembly it.

Note 3) Only bore sizes ø16, ø25, ø40 and ø63 are available in MY3M.

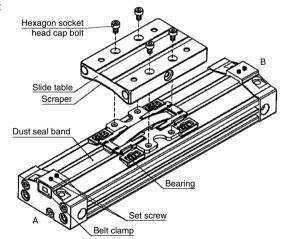


Table 1. Standard length dust seal band

Bore	MY		MY	
size	Part No.	Recommended length	Part No.	Recommended length
ø 16	MY3A16-16B-st	st + 106 -0	MY3B16-16B-st	st + 118 -2
ø 20	MY3A20-16B-st	st + 125 -0	MY3B20-16B-st	st + 145 -2
ø 25	MY3A25-16B-st	st + 146 -0	MY3B25-16B-st	st + 174 -2
ø 32	MY3A32-16B-st	st + 189 -2	MY3B32-16B-st	st + 221 -2
ø 40	MY3A40-16B-st	st + 236 -2	MY3B40-16B-st	st + 272 -2
ø 50	MY3A50-16B-st	st + 270 -2	MY3B50-16B-st	st + 305 -2
ø 63	MY3A63-16B-st	st + 316 -0	MY3B63-16B-st	st + 352 -2



MY3A/3B/3M Series Replacement Procedure 3

- e. Set the slide table in place referring to the fixing bolt position, and fix it by 4 hexagon socket head bolts.
- f. Align the end surfaces and insert them to the head cover so that the protruded amount of the dust seal band from the cylinder tube will be L dimension shown in Table 2, and fix the set screw closer to the A side holding the belt clamp.
- g. Pull the dust seal band to the B side until it has no protruded part, and fix the set screw close to the B side holding the belt clamp.
- h. Tighten the set screw closer to the cylinder tube on the top of the head cover until all of the lifted part of the dust seal band near the cylinder tube ends at both of A and B sides are eliminated.
 - In that case, adjust so that Dust seal band located near screws does not lift due to excessive tightening. Proper tightening torque is 0.1 N·m {1 kgf·cm}.
- Cycle the slide table at full stroke 2 to 3 times, and check there is no lifted part all over the dust seal band.
- Apply grease to the whole sliding part (top of the cylinder tube) of the dust seal band.

Note 1) Handle the dust seal band with care because it is thing and easily bent.

Note 2) Use lithium soap grease with consistency No. 1 or No. 2.

Table 2. Dust seal band L dimension (MY3A/B)

Bore size	L dimension (mm)
ø 16	11.5
ø 20	14
ø 25	18
ø 32	20.5
ø 40	25
ø 50	25
ø 63	29

CY3B Series Replacement Procedure for Seals

1. Disassembly and Maintenance

Pay attention in the following points when the cylinder is disassembled for replacement of piston packing, soft wiper and wearing.

 
- 1-1. If the cylinder body or piston is removed from cylinder tube, displace the positions of external slider and piston forcedly to eliminate holding force and take out them individually.
 - If they are removed together with holding force left, they become unable to separate from each other by internal and external magnet force.
- 1-2. The used magnet has strong suction force and should be handled with care when external slider and piston slider are removed from cylinder tube.

- 1-3. Never disassembly the parts which compose the magnet (external slider and piston slider).
 - The disassembly of them may deprive holding force from the magnet and cause operating failure.
- piston slider.
- 1-5. Handle external slider and piston slider with care to protect the magnet from drop on the floor and collision to the metal.
- 1-6. And apply the grease periodically on external face of cylinder tube.

CY3R/REAR/REBR Series Replacement Procedure for Seals

1. Disassembly and Maintenance

1-1. If the cylinder needs to be disassembled for replacement of piston packing, soft wiper and wearing, specific tool is required. The specific tool can be ordered by part no. shown on Table.



Part no. of specific tool

Part on.	Applicable cylinder tube I.D. (mm)	
CYRZ-V	6, 10, 15, 20	
CYRZ-W	25, 32, 40	
CYRZ-X	50	
CYRZ-Y	63	

1-2. As for sine rodless cylinders, the cushion ring and seal are assembled to provide the optimum cushioning effect.

Therefore, they should be returned to the factory for maintenance.

If you disassemble them by necessity, please note the following points.

- a. If the cylinder body or piston is removed from cylinder tube, displace the positions of external slider and piston forcedly to eliminate holding force and take out them individually. If they are removed together with holding force left, they become unable to separate from each other by internal and external magnet force.
- b. Loosen hexagon socket head female on side of end cover by hexagon wrench, take off attachment ring from the end cover with specific tool and then remove the end cover from cylinder tube. After that, remove Circular stop ring mounted on the external face of the cylinder tube by snap ring pliers. The used magnet has strong suction force and should be handled with care when external slider and piston slider are removed from cylinder tube.
- Never disassembly the parts which compose the magnet (external slider and piston slider).
 The disassembly of them may deprive holding force from the magnet and cause operating failure.
- d. When handle magnet assembly, watch on your arm should be put off not to get influence from strong magnetic field.
- e. Handle external slider and piston slider with care to protect the magnet from drop on the floor and collision to the metal.
- f. And apply the grease periodically on external face of cylinder tube. The grease can be ordered by the following part no.
- g. Since the cushion ring is precisely attached to the head cover, be careful not to take it off nor deform/dent it.





CY1S(-Z) Series Replacement Procedure for Seals

1. Maintenance

When this device is disassembled to replace piston packing, wear ring, etc., care should be taken for the following points.

- 1-1. To remove the external slider or the piston slider from the cylinder tube, the holding force must be released by shifting the positions of the external slider and the piston slider forcibly. Removing them without doing so may cause the respective magnets to attract each other, making them impossible to separate.
- 1-2. Upon completing the above step to remove the sliders, remove the cylinder tube and plate A from guide shafts A and B by loosening the hexagon socket head cap screw on the plate A side and the hexagon socket head set screw (for -Z). (While carrying out replacement work (of the packing, etc.), please refrain from disassembling other parts of the product as air leakage may result.)
- 1-3. The magnet assembly (piston slider and external slider) must not be disassembled. Doing so may result in decreased holding force and other problems.
- 1-4. The piston slider and external slider have a set direction (L type and Ø6, Ø10).
 Refer to the diagram below for details. Connect the

external slider (slide block) and the piston slider and insert into the cylinder tube as shown in the diagram. If the positioning resembles Fig. 1-(b), rotate the piston slider to insert. (If the direction is incorrect, it will be impossible to obtain the specified holding force.

- 1-5. Before handling the magnet assembly, remove your wrist watch so as not to subject it to the effects of the strong magnetic field.
- 1-6. Thorough care should be taken to prevent the magnets from dropping on the floor or being knocked against metal objects.
- 1-7. The magnetic force of this part is extremely strong. When removing the external slider and piston slider from the cylinder tube for maintenance or other similar purposes, care should be taken to avoid your hands getting caught in the machine.

After disassembly, even if the external slider is placed at a distance from the piston slider, the sliders may attract each other due to the strong magnetic force. This may cause an unexpected serious accident, so particular care must be taken when handling these parts.

 


Fig. 1-(a) Correct direction

 


Fig. 1 Direction of the slider

1-8. The set screws in the figure below are for securing the guide shaft in place and should only be loosened for purposes such as replacing the seal kit.

(CY1S-Z)

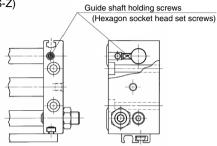


Fig. 2 Set screws for holding the guide shaft

2. Other Precautions

- 2-1. The slider contains parts made of iron, so care should be taken to prevent water droplets from entering the cylinder tube.
- 2-2. Grease should be periodically applied to the bearing part of the slide block.
- 2-3. After the product is reassembled, thoroughly flush the piping with air to remove any remaining dirt or cutting chips from inside the piping.
- 2-4. Care should be taken to prevent the external surfaces of the cylinder tube and the guide shaft from being scratched, dented, etc. Damage to the scraper, wear ring, and bush may lead to a malfunction.
- 2-5. The changing of magnet holding force (for example, CY1S25L→CY1S25H) is carried out in our factories. Please contact our sales office for further details or to request this service.
- 2-6. Please contact us beforehand if the cylinder (cylinder tube, guide shaft surface) is to be used in an environment where it will be exposed to (warm) water, coolant, etc.



CY1L Series Replacement Procedure for Seals

1. Maintenance

When this device is disassembled to replace piston packing, wearing, etc., care should be taken for the following points.

- 1-1. To remove the external slider or the piston slider from the cylinder tube, the holding force must be released by shifting the positions of the external slider and the piston slider forcibly. Removing them without doing so may cause the respective magnets to attract each other, making them impossible to separate.
- 1-2. Upon completing the above step to remove the sliders, remove the cylinder tube and plate A from guide shafts A and B by loosening the hexagon socket head cap screw on the plate A side. (While carrying out replacement work (of the packing, etc.), please refrain from disassembling other parts of the product as air leakage may result.)
- 1-3. The magnet assembly (piston slider and external slider) must not be disassembled. Doing so may result in decreased holding force and other problems.
- 1-4. The piston slider and external slider have a set direction (L type and ø6, ø10).
 Refer to the diagram below for details. Connect the external slider (slide block) and the piston slider and
 - external slider (slide block) and the piston slider and insert into the cylinder tube as shown in Fig. 1-(a). If the positioning resembles Fig. 1-(b), rotate the piston slider to insert.

 


Fig. 1 Direction of the slider

- 1-5. Before handling the magnet assembly, remove your wrist watch so as not to subject it to the effects of the strong magnetic field.
- 1-6. Thorough care should be taken to prevent the magnets from dropping on the floor or being knocked against metal objects.

351

2. Other Precautions

- 2-1. The slider contains parts made of iron, so care should be taken to prevent water droplets from entering the cylinder tube.
- 2-2. Grease should be periodically applied to the bearing part of the slide block.
- 2-3. After the product is reassembled, thoroughly flush the piping with air to remove any remaining dirt or cutting chips from inside the piping.
- 2-4. Care should be taken to prevent the external surfaces of the cylinder tube and the guide shaft from being scratched, dented, etc. Damage to the scraper, wear ring, and bush may lead to a malfunction.
- 2-5. The changing of magnet holding force (for example, CY1L25L→CY1L25H) is carried out in our factories. Please contact our sales office for further details or to request this service.
- 2-6. Please contact us beforehand if the cylinder (cylinder tube, guide shaft surface) is to be used in an environment where it will be exposed to (warm) water, coolant, etc.



⚠ Caution


- The cross roller part which is the guide system of the Air slide table, should not be taken apart because the pre-load has been already adjusted at the mounting stage.
- Replenishment of grease during piston packing replacement.

Apply special grease to the piston packing section and the sliding section.


(Grease No.: GR-L)

1. Replacement Procedure of Piston Seal

- 1-1. Remove hexagon socket head cap screws which connect end plate and table.
- 1-2. Remove end plate.

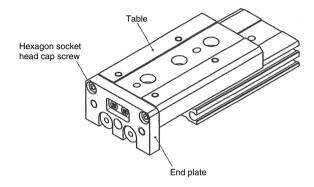


MXQ Series Cautions after removing the end plate

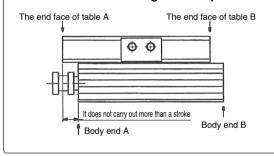


Make sure that table end A does not exceed the body end A at the full stroke after removing the end plate. Make sure that table end B does not exceed the body end B at the full stroke after removing the end plate. (The steel balls in the guide will fall out.)

- 1-3. Remove the C shaped retaining ring. (Using a retaining ring tool)
- 1-4. Pull out piston assembly.

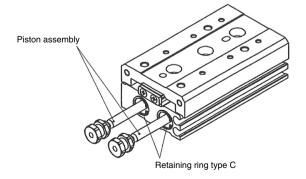


- 1-5. Apply grease to the piston seal and replace it.
- 1-6. Remove the C shaped retaining ring on the head cap side. (Use a tool for the C shaped retaining ring.)
- 1-7. Remove the head cap, apply grease and replace the O-ring.

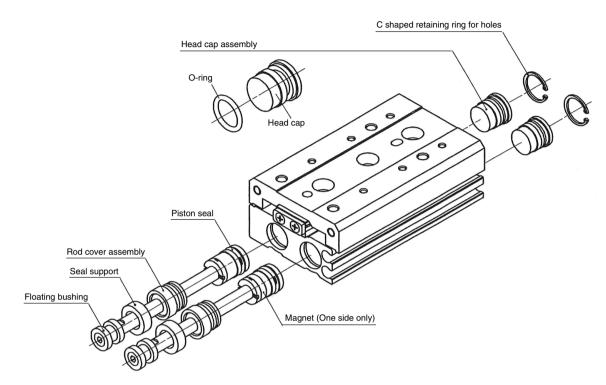

1-8. Remove the floating bushing.

 
 $\emptyset 6$ and $\emptyset 8$ do not have width across flats. Lock onto the shaded part with Round nose chain pliers with side cutters. (It is not possible to lock onto areas other than the shaded part.)



	MXS6	MXS8
Dimension A	3.2 mm or less	3.6 mm or less

	MXQ6	MXQ8	
Dimension A	3.2 mm or less	3.6 mm or less	

 In the case of \emptyset 12 to \emptyset 25, fix the width across flats of the rod with a wrench.




	MXS12	MXS16	MXS20	MXS25
Dimension B	5 mm	6 mm	8 mm	10 mm
			•	


	MXQ12	MXQ16	MXQ20	MXQ25
Dimension B	5 mm	6 mm	8 mm	10 mm



- 1-9. Remove the seal support.
- 1-10. Remove the rod cover assembly.
- 1-11. Apply grease to the O-ring and replace it.
- 1-12. Apply grease to the rod seal and replace.

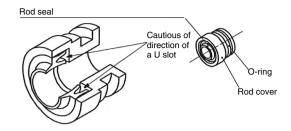


- 1-13. Mount the rod cover assembly and seal support to the piston rod assembly and insert it into the body.
- 1-14. Fix the seal support with the C shaped retaining ring. (Use a tool for retaining ring.)
- 1-15. Insert the head cap assembly into the body and fix it with the C shaped retaining ring. (Use a tool for retaining ring.)

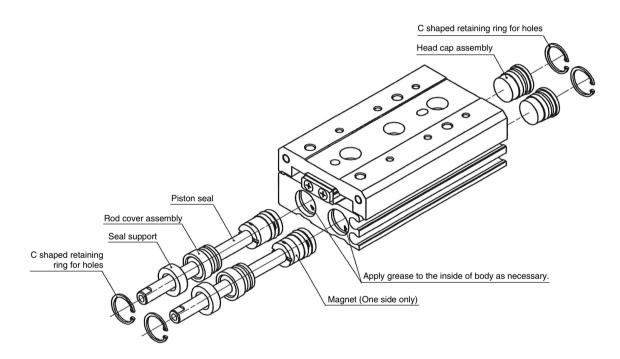

1-16. Mount the floating bushing onto the piston rod assembly.

 ø6, ø8




Model	Dimension A	
MXS6 3.2 mm or les		
MXS8	3.6 mm or less	

Model	Dimension A	
MXQ6	3.2 mm or less	
MXQ8	3.6 mm or less	

Floating bushing

 
Tightening torque Model (N·m) MXS6 0.21 MXS8 0.41




Apply Henkel Japan Loctite No.262 or an equivalent adhesive.

If adhesive is squeezed out from part A after assembly, wipe it off.

 ø12 to ø25




Model	Hexagon socket head cap screw Fe Ni	Tightening torque (N·m)
MXQ12	M3 x 14	1.0
MXQ16	M4 x 18	2.4
MXQ20	M5 x 20	4.3
MXQ25	M6 x 25	6.9

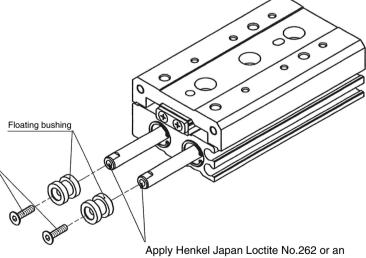

equivalent adhesive.


- 1-17. Mount the end plate.
- 1-18. Tighten the end plate mounting bolt with the specified torque.

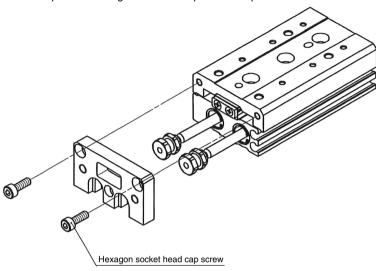

Apply Henkel Japan Loctite No.262 or an equivalent adhesive.

Model	Hexagon socket head cap screw Fe Ni	Tightening torque (N·m)	
MXS6	M2.5 x 6	0.5	
MXS8	M3 x 6	0.9	
MXS12	M4 x 10	2.1	
MXS16	M5 x 12	4.3	
MXS20	M5 x 14		
MXS25	M6 x 18	6.9	
	100 X 10	0.0	

Model	Hexagon socket head cap screw Fe Ni	Tightening torque (N·m)
MXQ6	M2.5 x 6	0.5
MXQ8	M3 x 6	0.9
MXQ12	M4 x 8	2.1
MXQ16	M5 x 10	4.3
MXQ20	M5 x 16	4.3
MXQ25	M6 x 16	6.9

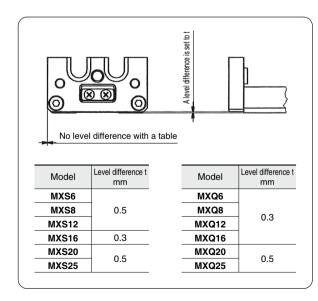


MXF Series Replacement Procedure for Seals

∧ Caution

The cross roller section which is the guide system of the air slide table should not be disassembled because the pre-load has been already adjusted at mounting.

1. Replacement Procedure of Piston Seal

1-1. Loosen the hexagon socket head cap screws which connect the end plate to the table.

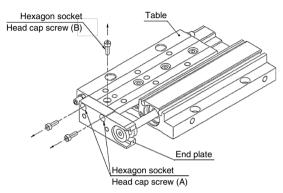

End plate attachment (A)

= na plate a				
Model	Hexagon socket head cap screw	Tightening torque (N⋅m)		
MXF8	M2 x 10	0.25		
MXF12 M2.5 x 10		0.47		
MXF16	M3 x 10	0.88		
MXF20	M4 x 14	2.06		


Loctite No. 242 of Henkel Japan Ltd. or its equivalent is applied.

End plate attachment (B)


Model	Hexagon socket head cap screw	Tightening torque (N·m)	
MXF8	M2 x 8	0.25	
MXF12 M2.5 x 8		0.47	
MXF16 M3 x 10		0.88	
MXF20	M4 x 14	2.06	

Loctite No. 242 of Henkel Japan Ltd. or its equivalent is applied.


1-2. Move the end plate as indicated by the arrow to remove.

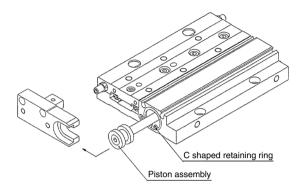

- 1-3. Take off the C shaped retaining ring with a tool for retaining ring.
- 1-4. Pull out the piston assembly.

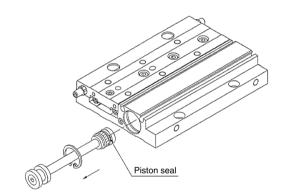

- 1-5. Change the piston seal.
- 1-6. Apply grease to the piston and the rod.

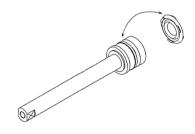

1-7. Put the piston rod, and assemble in the reverse order.


MXW Series Replacement Procedure for Seals

⚠ Caution

The linear guide section which is the guide system of the air slide table should not be disassembled because the pre-load has been already adjusted at mounting.


1. Replacement Procedure of Piston Seal

- 1-1. Remove end plate mounting bolts.
- 1-2. Remove C shaped retaining rings for end caps and head caps at first, and remove the both caps.
- 1-3. Hold the rod with a spanner, and remove the floating bushing mounting bolt.
- 1-4. Remove the end plate.

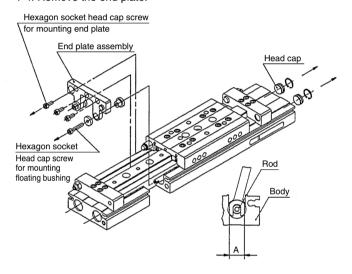

Note) The floating bushing should be mounted/dismounted carefully with a spanner whose width is A to avoid flaws inside the body.

1-5. Push out the piston rod with a driver less than ØB.

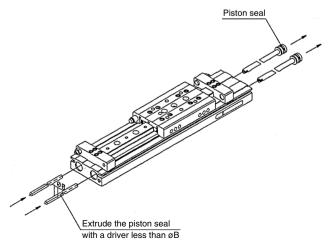

	MXW8	MXW12	MXW16	MXW20	MXW25
øΒ	3	5	7	9	11

End plate attachment

Model	Hexagon socket head cap screw	Tightening torque (N·m)
MXW8	M3 x 8	0.6
MXW12	M3 x 8	0.6
MXW16	M4 x 12	2.4
MXW20	M5 x 12	2.8
MXW25	M6 x 16	8.6

Loctite No. 242 of Henkel Japan Ltd. or its equivalent is applied.


Floating bushing attachment

Model	Hexagon socket head cap screw	Tightening torque (N·m)	
MXW8	M3 x 8	0.6	
MXW12	M3 x 14	1.0	
MXW16	M4 x 20	2.4	
MXW20	M5 x 20	5.1	
MXW25	M6 x 30	8.6	
	MXW8 MXW12 MXW16 MXW20	MXW8 M3 x 8 MXW12 M3 x 14 MXW16 M4 x 20 MXW20 M5 x 20	

Loctite No. 262 of Henkel Japan Ltd. or its equivalent is applied.

	MXW8	MXW12	MXW16	MXW20	MXW25
Dimension A	8	8.5	14.5	18	23.5
Width across flat	3.5	5	6	8	10

- 1-6. Change the piston seal.
- 1-7. Apply grease to the piston and the rod.
- 1-8. Put the piston rod, and assemble in the reverse order.

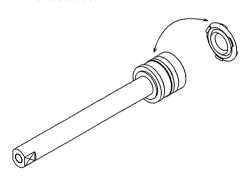


MXP Series Replacement Procedure for Seals 1

1. Replacement Procedure of Piston Seal

MXPJ6

- 1-1. Remove the C shaped retaining ring. (Using a retaining ring tool)
- 1-2. Remove the end cap.
- 1-3. Remove the piston.

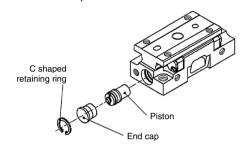


1-4. Apply grease to piston for replacement.



1-5. Apply grease to O-ring for replacement.



 1-6. Apply grease to the piston surface.




Apply grease to the inside of body as necessary.


1-7. Insert piston and assemble parts in the reverse order of removal.

MXP6


- 1-1. Remove bolts for end plate mount.
- 1-2. Remove end plate.
- 1-3. Remove O-ring on the end plate.

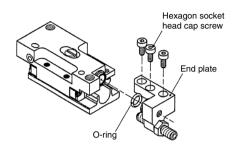


- 1-4. Remove the C shaped retaining ring. (Using a snap ring tool)
- 1-5. Remove end cap.
- 1-6. Remove piston.

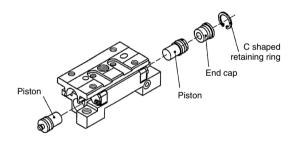

 1-7. Apply grease to piston for replacement.




1-8. Apply grease to O-ring for replacement.

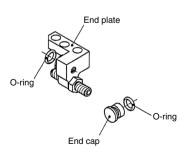


MXP Series Replacement Procedure for Seals 2

1-9. Apply grease to the piston surface.

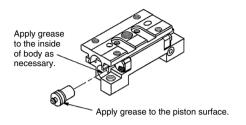


1-10. Insert the piston, and assembly in the reverse order.
Note) Tighten the end plate mounting bolt with the specified torque.

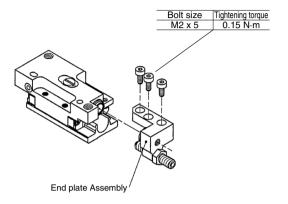


No gap is present at the mating surface between the body assemblies.

MXP8, 10, 12, 16

 - 1. Remove bolts for end plate mount.
- 2. Remove end plate.
- 3. Remove the tube and O-ring.
- 4. Apply grease to the O-ring and replace it.
- Remove the joint shaft. Remove the piston assembly from the body.
- 6. Apply grease to the piston seal and replace it.



Make sure that the guide block will not exceed the body end surface after removing the joint shaft. (The steel balls in the guide will fall out.)

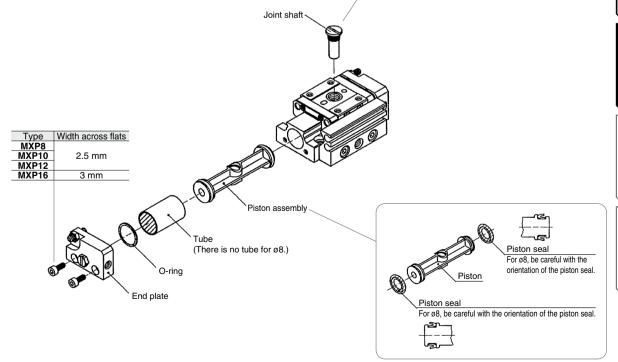


MXP Series Replacement Procedure for Seals 3

- Insert the piston assembly to the body, and tighten the body with the joint shaft.
- 8. Apply grease to the shaded part of the tube inner surface if necessary. (See the drawing of previous page)
- 9. Mount the tube and O-ring.
- 10. Mount end plate.
- 11. Fasten bolts for end plate mount with specified torque.

Note 1) Assemble end plate so that A, B dimensions will be values on table below.

	(mm)
Α	В
0.2	0.2
	0.2
0.5	0.3
	0.3
	0.2

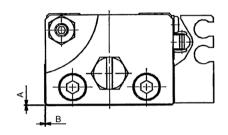



Type	Tightening torque joint shaft	
MXP8	0.4 N·m	
MXP10	0.7 N⋅m	
MXP12	1.8 N⋅m	
MXP16	3.6 N⋅m	=
	En	Body (Note 1) nd plate (Note 1)
Type	Bolt torque	
MXP8	0.45 N·m	
MXP10 MXP12	0.6 N⋅m	
MXP16	1.4 N·m	-

- 12. Remove the end plate mounting bolt on the opposite side.
- 13. Remove the end plate on the opposite side.
- 14. Remove the tube and O-ring.
- 15. Apply grease to the O-ring and replace it.
- 16. Apply grease to the shaded part of the tube inner surface if necessary.
- 17. Mount the tube and O-ring.
- 18. Mount the end plate on the opposite side. (*2)
- 19. Tighten the end plate mounting bolt on the opposite side with the specified torque.

Note 2) Assemble end plate so that A, B dimensions will be values on table below. (As well as *1)

		(mm)
Туре	Α	В
MXP8	0.2	0.2
MXP10		0.2
MXP12	0.5	0.3
MXP16	0.5	0.5

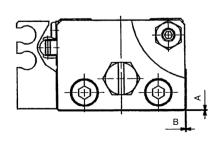

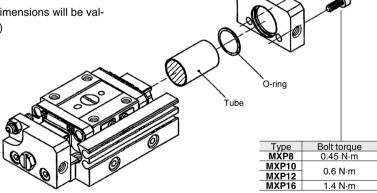

MXY Series Replacement Procedure for Seals 1

1. Disassembly Procedure (Seal and Wearing)

1-1. a. Remove guide block fixing studs.

 
Note) Take care so that guide block would not come off even partially to prevent steel ball of guide block from coming out and becoming unavailable.

- b. Loosen switch rail fixing studs and disconnect switch
- Loosen end plate fixing hexagon socket head cap screws and disconnect end plate.
- d. Disconnect cylinder assembly.



- 1-3. a. Insert round bar jig into tube and hold piston slider.

 Note) Do not damage internal face of tube at this time.
 - Move external slider forcedly to make holding force unable to act.
 - c. Take off piston slider from tube.
 - d. Take off external slider from tube.





Note) Take care so that magnet B and yoke B would not come out.


b. Take off wearing B and cylinder scraper from spacer and replace each with new one.


Note) Mind mounting direction of cylinder scraper.

- c. Tighten hexagon socket head cap screws on right end face with referential mark on body turned front until spacer is made close to body tightly.
- d. Tighten hexagon socket head cap screws on left end face with referential mark on body turned front until spacer is mounted on body with clearance.

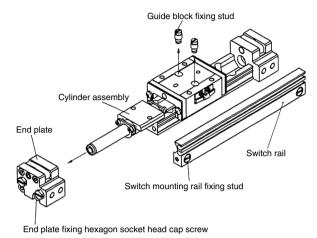

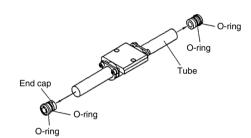

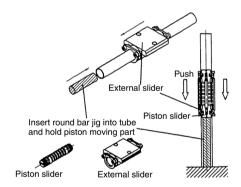

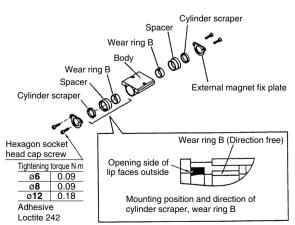




MXY Series Replacement Procedure for Seals 2


Note) Tighten each two hexagon socket head cap screws by turn gradually until specified torque is reached to make force given to them even.

Note) Before tightening, apply specified adhesive (Loctite 242 or equivalent) on hexagon socket head cap screws.

 - 1-5. a. Holding one piston by flat blade screw driver, loose the other piston by flat blade screw driver.
 - b. Take off yoke A and magnet A from shaft. Magnet A should be kept with stick inserted.
 - Note) Mounting direction of magnet A is specified. So, keep them in the manner like above not to be unable to recognize correct mounting direction.
 - Take off wearing A and piston seal and replace each with new one.
 - Note) Mind mounting direction of piston seal in MXY6 and MXY8.
 - Note) Apply specified grease on wearing A and piston seal.
 - Note) Confirm piston seal is mounted without twist.
 - Note) Piston seal is mounted only on one side in MXY12.
 - d. Insert yoke A and magnet A into shaft the reverse procedure.
 - e. Tighten piston to shaft by torque specified on right figure.
 - Note) Apply specified adhesive (Loctite 262 or equivalent) on the end of shaft.



Tighten the bolt witch comes right when referential mark is turned front. (Gap is created between left spacer and body.)

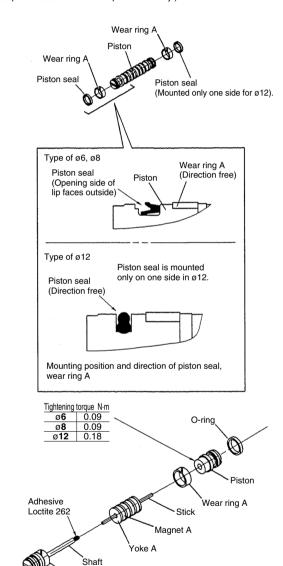

. Wear ring A

How to remove Yoke A and Magnet A

Piston




Apply grease all around

MXY Series Replacement Procedure for Seals 3


- 1-6. a. Apply grease all around piston slider.
 - b. Apply grease all around internal face of external slider.
 - Insert piston moving part and external slider into tube.
 - d. Move external moving part to a little over stroke end manually to engage it with piston slider (i. e. to locate magnet coupling on adequate position.)
 - e. Apply grease evenly on internal and external face of tube

Note) Do not close external slider to the end of tube to apply the grease because all of grease is brought to there during operation.

Note) Use specified one for grease.

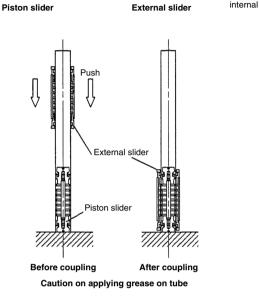


Apply grease all around

 

1-7. Put end cap in tube.

Note) Ensure O-ring doesn't come off.

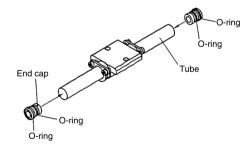

MXY Series Replacement Procedure for Seals 4

1-8. a. Tighten end plate on left side to rail temporarily with referential mark on guide block turned to front (with port bore turned to front as well).

Note) Apply specified adhesive (Loctite 242 or equivalent) on end plate holding hexagon socket head cap screws.


- b. Pass cylinder assembly between rail and guide block with referential mark on cylinder assembly turned to front and then tighten end plate on right side temporarily like one on left side.
- c. Tighten guide block holding stud by torque specified on right figure to hold guide block to external


Note) Apply specified grease on the side of guide block fixing stud except for threaded part.

- d. Tighten end plate fixing hexagon socket head cap screw by torque specified on right figure.
- e. Tighten switch rail holding stud by torque specified on right figure to hold switch rail to end plate.


Note) Keep step among end plate, switch rail and rail within the value shown on right figure.

Note) Ensure switch rail doesn't contact magnet by moving guide block all over its movable part.

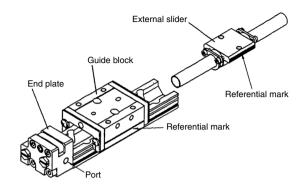

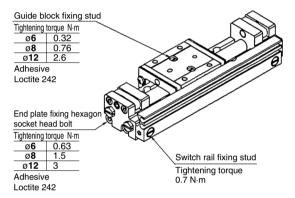

 
Step between end plate and rail shall comply with table.






Type of with switch rail

  Detail of dimension A and B





∧ Caution

Cylinder needs to be disassembled/assembled at clean environment. Use a clean cloth.

Before disassembly, eliminate the dirt on the outer surface so that foreign material does not enter the cylinder or the quide.

1. Disassembly

1-1. Tools

Retaining ring plier for hole, hexagon wrench, spanner, socket wrench (or air impact wrench).

- 1-2. Fix the piston rod so that it is not scratched. Remove the guide rod assembly by loosening the plate mounting bolt with a hexagon wrench or socket wrench.
 - Or, loosen the plate set bolt with the air impact wrench to remove the guide rod assembly.
 - Continue the work without removing the guide rod from the plate.
- 1-3. Remove the two retaining rings (rod and head side) with the retaining ring pliers, and pull out the collar, head cover and piston rod assembly.

For air cushion type and end lock type, it is necessary to remove the collar and parts below.

Air cushion type (ø80, ø100)

- Set screw at the bottom of the cylinder. End lock type
- End lock unit (See below)

Bore size (mm)	Retaining ring size	Width across flat (mm)	Plate mount bolt tightening torque (kgf·cm)
12	RTW-13	5	14
16	RTW-18	6	34
20	RTW-22	8	52
25	RTW-26	10	88
32	RTW-34	14	220
40	RTW-42	14	220
50	RTW-52	17	440
63	RTW-65	17	440
80	RTW-82	22	1,240
100	RTW-102	27	2,000

Removal of End Lock (With End Lock)

1. Tools

Retaining ring plier for hole, hexagon wrench, spanner, socket wrench (or air impact wrench), watchmakers screw driver.

- 2. Insert the manual bolt from the top of the end lock unit rubber cap, and screw the bolt into the lock piston, (Not necessary for -*L, lock type)
- Remove two hexagon socket head cap screws to pull out the end lock unit.
- For ø20 to ø63, remove the lock piston seal.
 For ø80, ø100, remove the packing seal retainer and locking piston seal.

Remove the lock holder mounting bolt to remove the lock unit and gasket.

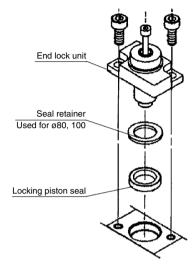


Fig. 1 How to remove the end lock

2. Removal of the Seal

- 2-1. Rod seal
 - a. Tools

Watchmakers screw driver, etc.

- Insert the driver to the collar front to pull out the seal like Fig. 2.
 - Do not damage the seal groove on the collar at this time.

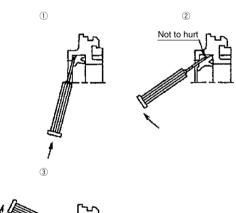




Fig. 2 How to remove rod seal

2-2. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 3)

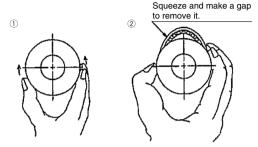


Fig. 3 How to remove piston seal

2-3. Gasket

Pull out the collar and the head cover outer rim or the gasket inside of the body (ø32 or larger) with precision driver.

- 2-4. Cushion seal (With air cushion only)
 - a. Tool: Watchmakers screw driver, etc.
 - b. As shown in Fig.4, pull out the cushion seal by inserting the precision screwdriver from the back of the seal and the head cover. Take care not to damage the seal groove at this time.

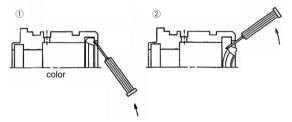


Fig. 4 Removing the cushion seal

3. Application of Grease

Use grease pack in table or lithium soap base grease JIS2, or equivalent.

Table Grease pack no.				
10 g type GR-S-010				
20 g type	GR-S-020			

3-1. Rod seal

Apply grease slightly to outer circumference of new seal for replace. This helps the seal to accustom to the collar. For the grove, fill it with grease. This is necessary for operation.

 


Fig. 4

3-2. Piston seal

Apply grease to outer/inner circumference of seal slightly and evenly to make mounting this to the piston easier

3-3. Gasket

Apply grease slightly. Provide better sealing and stop falling.

3-4. Cushion seal (With air cushion only)
Apply grease to outer/inner circumference

Apply grease to outer/inner circumference of seal slightly and evenly to make mounting this to the seal groove.

3-5. Cylinder parts

Apply grease to cylinder parts including the guide.

With end Lock

Use lithium soap radical grease JIS2 corresponding to such as "Nippon Oil Corporation multipurpose grease No. 2", "Idemitsu Daphne coronex No. 2", "Kyoseki lisonix grease No. 2".

4. Assembly

4-1. Mount seal

a. Rod seal

Mind the seal direction. Apply grease all over the seal and inner surface of the bush as Fig. 8. You may use a precision screw driver to apply grease when small bore diameter.

 


Fig. 8 Rod seal

b. Piston seal

Apply grease rubbing to seal groove and outer circumference.

 


Fig. 9 Piston seal

c. Gasket (With rubber bumper)

Mount to the groove of the collar and the head cover. For ø32 or larger, mount to the inner groove of the body, not to the head cover.

This case, the gasket of the body is large type.

d. Gasket (With air cushion)

Mount to the groove of the collar and the head cover. For ø32 or larger, mount to the inner groove of the head cover and the body.

This case, the gasket of the body is large type. Do not mount the gasket on the air passage (through hole groove) as in Fig.10.

 


Fig. 10 Gasket mounting position

e. Cushion seal (With air cushion only)
Mount the seal in the correct direction. Apply grease thinly and evenly to the inner circumference of the seal. As the seal has a floating mechanism, it is normal to have some play.

 


Fig. 11 Cushion seal mounting position

- 4-2. Assemble cylinder
 - a. Insert the head cover to the body to fix with a retaining ring.
 - b. Insert the collar to the piston rod.
 - Apply grease to the piston rod end or 30 degree of slope at the end of spanner flat, and insert the collar gently so that the piston seal is not hurt.
 - c. Insert the piston and the collar to the tube and fix it with a retaining ring.
 - Apply grease to the inlet of the tube and insert the piston and the collar gently so that the piston seal and the gasket are not hurt by the retaining ring groove.
 - d. Guide rod assembly assembling Apply glue to the plate mounting bolt when mounting the guide rod assembly. Then tighten the bolt with tightening torque in table 1.

After assembling, ensure manually that work properly operate smoothly.

Check the air leakage.

With End Lock

1. Mount end lock

Apply grease to the lock piston surface, lock holder inner surface to insert the gasket and lock holder. Then, fix them with new hexagon socket head cap screws included in accessories.

Insert the end lock unit and fix it with new hexagon socket head cap screws included in accessories. (See drawing 12, 13, 14, 15)

After assembling, ensure manually that end lock work properly and cylinder operate smoothly with lock released.

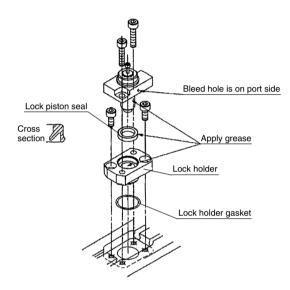


Fig. 12 End lock reassembled (ø20, ø25)

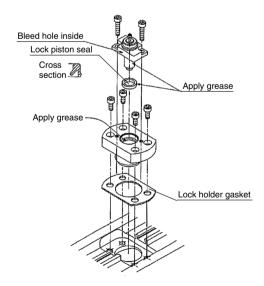


Fig. 14 End lock reassembled (Ø50, Ø63)

Cap and lock holder bolt tightening torque

Hexagonal bolt	Bore size (mm)	Tightening torque (N)
M3	ø20 to ø63	0.71 to 0.86
M5	ø 80 , ø100	2.65 to 3.24

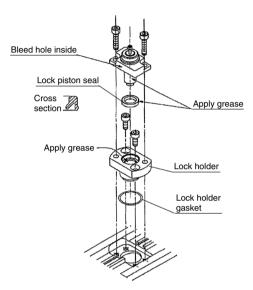


Fig. 13 End lock reassembled (ø32, ø40)

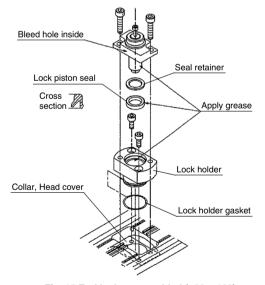


Fig. 15 End lock reassembled ($\emptyset 80, \emptyset 100$)

⚠ Caution

Replace the hexagon socket head bolt with a new one included in the packing set to avoid air leakage.

Tighten the hexagon socket head bolt evenly to avoid air leakage.



MGF Series Replacement Procedure for Seals 1

∧ Caution

Disassemble and assemble the cylinder in a clean area. Remove dusts and foreign matters from external surfaces to prevent them from entering the cylinder during disassembly. Perform on a clean cloth.

1. Maintenance

- 1-1. When malfunction of cylinder occurs due to air leakage, replace seal and gasket by referring to procedure shown below.
- 1-2. Replacement procedure
 - a. Remove two hexagon head bolts C (1) and separate upper and lower assemblies.
 - b. Remove six hexagon head bolts A ② of the upper assembly and remove plate ⑥.
 - c. Push piston rod assembly (piston rod \$\oxint{\oxint{\oxint{\oxint{\oxint{\oxint{\oxite{0}}}}}} + piston }
 4) from rod seal side to pull the piston rod out of tube \$\oxint{\oxin{\oxint{\oxin{\oxint{\oxint{\oxint{\oxint{\oxint{\oxint{\oxint{\oxint{\oxint{
 - d. Remove piston seal @ from piston @ and replace it by new one. Apply grease on the overall surface of piston seal.
 - e. Remove rod seal (9) from rod cover (3) and replace it by new one. Care should be taken for the orientation of rod seal. Mount it by referring to the internal structural drawing.
 - f. Remove four hexagon head bolts B ³ and separate body ¹ and end plate ⁷.


- g. Remove two O-rings C 23 on the end plate side and replace them. Apply grease on the overall surface of gasket.
- h. Remove O-ring B 22 from tube 2 and replace it.
 Apply grease on the overall surface of gasket.
- After all replacement is completed, reassemble the parts. To assemble, follow the disassembling procedure a to h in reverse order.

2. Caution at Assembly and Disassembly

- 2-1. Adhesive is applied to each bolt to prevent loosening. Since powders (adhesive) come out when bolt is removed, care should be taken to prevent them from entering cylinder and sliding part.
- 2-2. Apply the adhesive (moderate strength) to each bolt at assembling.
- 2-3. When the upper assembly is inserted to the lower assembly, bush in the lower assembly is not complete round. Therefore, press the bush by the tube of the upper assembly so that the bush becomes complete round. Care should be taken not to break the bush since broken bush will cause malfunction.
- 2-4. Insert the piston rod assembly to the same position as it was disassembled.
 - If the piston rod assembly is rotated, lifting and lowering ports would be reversed.


3. Disassembly

3-1. Separation of upper assembly from lower assembly

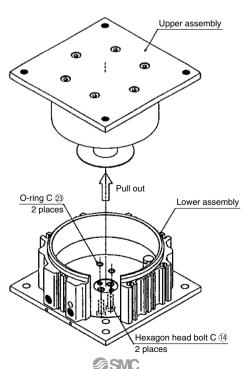


MGF Series Replacement Procedure for Seals 2

3-2. Disassembly of upper assembly

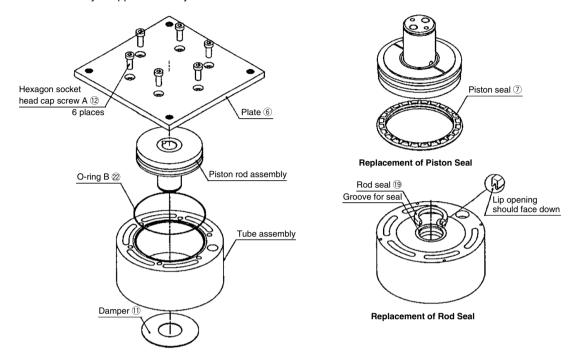

3-3. Disassembly of lower assembly

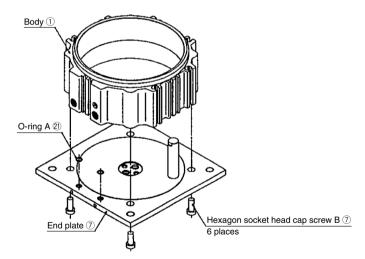

CXSJ/CXS/CXSW Series Replacement Procedure for Seals

1. Disassembly

Caution

It decomposes and it is necessary to assemble the cylinder in a clean place.

Please begin working after it wipes off with a clean cloth,

1-1. Loosen and remove the hexagon socket head cap screw and set screw which fix plate, rod. Then pull the plate out of the rod.

At this occasion, screws are sometime hard to unscrew because they are applied Loctite. Pay attention not to damage the hexagon head.

As plates are sometime hard to unscrew as well, use a gear-puller not to damage rods.

CXS Series With end lock 1-2. Detach the lock unit (5 to 10) from the housing. Fig. 1

- 1-3. Detach retaining rings on the side of head cover using pliers (tool for basic internal retaining ring).
- 1-4. Hit rods lightly with a plastic hammer, then pull them out from head cover side. At this occasion, they go through bearing part, so make sure there are no burrs or deformation. Burrs or deformations have to be removed by a file or sandpaper.
- 1-5. Detach the retaining rings on the side of rod cover by using pliers (tool for basic internal retaining ring), then the rod cover away in the same method of 1-4.
- 1-6. Reusing of packing is not possible. They have to be replaced by the new one at the occasion of reassembling.

At this time, grease has to be applied to packings and kept away from the dust.

CXS Series

With end lock

1-7. O-ring and Lock seal is exchanged. The lock seal removes and exchanges the snap ring. Reusing of packing is not possible. They have to be replaced by the new one at the occasion of

reassembling.

2. Assembly

- 2-1. Reassemble the parts by reversing the disassembling process.
- 2-2. Mount the plate to the rod.

It is necessary for the rod to be in the extend state. Apply 0.2 MPa or more from the supply port of the head cover side. Tighten the hexagon socket head cap screw pressing the plate to the rod. Then, tighten the hexagon socket head set screw.

Make sure the product operates with the minimum operating pressure (see table below) without any problem. (The product operates smoothly when it is moved by hand)

Bore size (mm)	6	10	15	20	25	32
Minimum operating pressure (MPa)	0.15	0	.1		0.05	

CXS Series

With end lock

After tightening, make sure there is no problem when it is operated in minimum operation pressure (See below) and confirm the lock on the return side.


Bore size (mm)	6	10	15	20	25	32
Minimum operating pressure (MPa)			0	.3		

Air

CLG1 Series Replacement Procedure for Seals 1

1. Disassembly of the Cylinder

 - 1-1. The cylinder needs to be disassembled and assembled in a clean place.
- 1-2. Refer to the "Replacement Procedure of the Lock Unit" (CLG-1) ① to ③ for disassembly.



2. Removal of the Seal

- 38 Rod seal A: Insert a watchmakers screw driver to pull out the seal. Take care not to damage the seal groove of the cover. (Fig. 1)
- 35 Piston seal: Remove the piston seal. (Fig. 2)
- Cylinder tube gasket: Insert a watchmakers screw driver to pull out the seal.



Fig. 1 Removal of rod seal

 


Fig. 2 Removal of piston seal

3. Application of Grease to Seal

- 3-1. Apply grease slightly to the outer circumference of each seal.
- 3-2. Fill in the groove of the rod seal with grease.

 


Fig. 3 Grease to the seals

4. Mounting of Seal

- 38 Rod seal A: Mount the seal in the correct direction.
- 35 Piston seal: Mount the seal while stretching it as Fig. 5.

 


Fig. 4 Installation of rod seal

 


Fig. 5 Installation of piston seal

CLG1 Series Replacement Procedure for Seals 2


5. Application of Grease

- 38 Rod seal B: Apply grease to the seal and the inner circumference of the bush. (Fig. 6) Use a precision screwdriver to apply grease to the small bore diameter while making sure not to
- § Piston seal: Rub grease into the seal groove and outer circumference of the seal. (Fig. 7)
- 42 Cylinder tube gasket: Lightly apply grease.
- Cylinder component parts: Apply grease to each component parts of the cylinder in Figure 9.

Appendix table shows the grease amount required for a cylinder with stroke 100.

For your reference, amount taken with a forefinger is about 3 g. (Fig. 8)



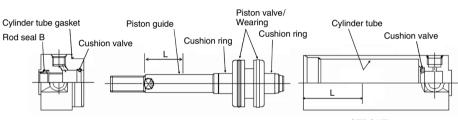

or 100 mm and more Fig. 9 Grease application points

Table. 1 Grease application amount (g)

Stroke		Bore	size	
Stroke	20	25	32	40
100 st	2	3	3	3 to 4
Extra 50 st	0.5	0.5	0.5	1

6. Reassembly of the Cylinder

- 6-1. Make sure no particles are present. Do not scratch the seals.
- 6-2. Tighten the cover approximately 0-2 degrees more from the original position (where the ports of rod and head covers match).
- 6-3. After completing the assembly, manually check whether the movement is smooth.

7. Replacement Parts

- 7-1. For the CLG1 series, lock-up unit (except the longstroke lock-up) and seals (rod seal B, piston seal, cylinder tube gasket) are replaceable.
- 7-2. Contact SMC sales if it is necessary to replace parts other than those mentioned above.

 
CLG1 Series Replacement Procedure for Seals 3

8. Replacement Procedure of the Lock Unit

Lock units for the CLG1 series are replaceable.

(However, please note that lock units cannot be replaced in the case of long stroke specifications.)

- 8-1. Release the manual lock.
 - a. Loose locking nut.
 - b. Supply air pressure of 0.3 MPa or more to the lock release port.
 - c. Turn the wrench flats section of the manual unlocking cam until it stop at the FREE position that is marked on the cam guide.
 - d. While keeping the wrench flats section in place, tighten the lock nut.




"LOCK" and "FREE" are marked on the cam guide.


8-2. Remove the lock unit by securing the square section of the rod cover or the wrench flats of the tube cover in an apparatus such as a vice, and then loosening the other end with a spanner or adjustable angle


See the table below for the dimensions of the square section and the wrench flats.

Bore size (mm)	Rod cover square section (mm)	Tube cover wrench flats (mm)
20	38	24
25	45	29
32	45	35.5
40	52	44

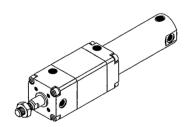



8-3. Remove the tube cover.

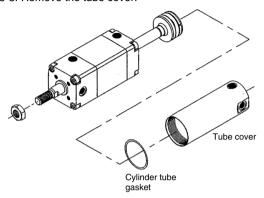

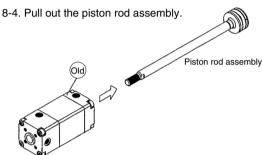

 8-5. Replace the temporary axis of a new lock unit with

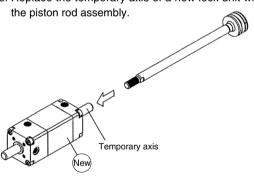



Note) When replacing piston rod assembly with a new lock unit, care should be taken not to cut rod packing B with threads or wrench flats.

Lock the manual unlocking cam before use.

 
8-6. Reassemble by reversing the procedure in steps 8-1. and 8-3. When retightening the sections, turn approximately 2° past their position prior to disassembly.



1. Disassembly of the Cylinder

The cylinder needs to be disassembled and assembled in a clean place.

1-1. Loosen the tie-rod nuts and pull out the four tie-rods.



1-2. Open the rubber cap and screw in the unlocking bolt, which is provided as an accessory part. At this time, apply air pressure of 0.2 MPa to 0.3 MPa to disengage the lock and insert the bolt. (The operation to follow can be performed properly and easily with the application of air pressure.) After verifying that the bolt has been inserted properly, pull out the unit from the rod.

 


Table 1 Work tools

Bore size (mm)	Applicable socket
40, 50	13 (M8)
63	17 (M10)
80, 100	19 (M12)

2. Removal of the seal

2-1. Rod seal

Insert a watchmakers screw driver to pull out the seal.

Take care not to damage the seal groove of the cover. (Fig. 1)

2-2. Piston seal

Remove it as in Fig. 2.

2-3. Tube gasket

Remove it in the same way as Fig. 2.

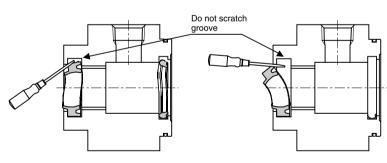


Fig. 1 Removal of rod seal

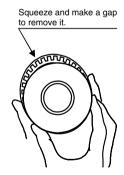


Fig. 2 Removal of piston seal

3. Application of Grease to Seal

- 3-1. Apply grease slightly to the outer circumference of each seal.
- 3-2. Fill in the groove of the rod seal with grease.

 


Fig. 3 Grease to the seals



CL1 Series Ø40 to Ø100 Replacement Procedure for Seals 2

4. Mounting of Seal

4-1. Rod seal

Mount the seal in the correct direction by bending the seal with fingers as Fig. 4.

4-2. Piston seal

Mount the seal while stretching it as in Fig. 5.

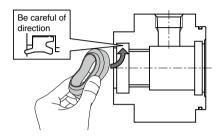


Fig. 4 Installation of rod seal

 


Fig. 5 Installation of piston seal

5. Application of Grease

5-1. Rod seal

Apply grease to the seal and the inner circumference of the bush. (Fig. 6)

5-2. Piston seal

Rub grease into the seal groove and outer circumference of the seal. (Fig. 7)

5-3. Cylinder component parts

Apply grease to each component parts of the cylinder in Figure 9. Appendix table shows the grease amount required for a cylinder with stroke 100. For your reference, amount taken with a forefinger is about 3 g. (Fig. 8)

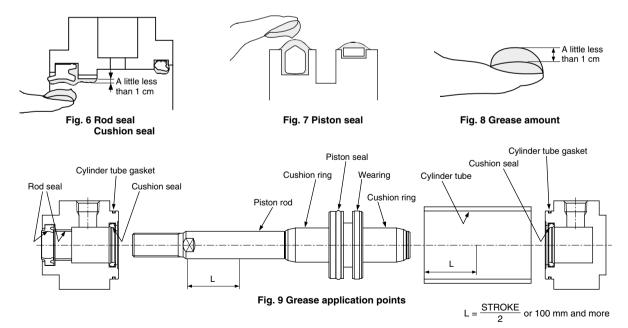


Table. 2 Grease application amount (g)

Stroke	Bore size						
Stroke	32	40	50	63	80	100	125
100 st	3 to 4	3 to 4	3 to 5	4 to 5	6 to 8	8 to 10	15 to 17
Extra 50 st	1	1	1	1.5	1.5	2	3

CL1 Series Ø40 to Ø100 Replacement Procedure for Seals 3

6. Reassembly of the Cylinder

- 6-1. Make sure no particles are present. Do not scratch the seals.
- 6-2. To assemble the tie rod to the cylinder, tighten the tie rod to the shorter screw side by hand.
- 6-3. Set the tie rod nuts from the head cover side. Tighten the tie rod nut so that the tensile force is even.

Refer to the appropriate tightening torque of table 3.

Brackets refer to the same table.



 


Fig. 10 Tie rod tightening order

 

| Bore size (mm) | Appropriate tightening torque (N·m) | 40, 50 | 10.8 | 63 | 24.5 | 80, 100 | 38.2 |

 
6-4. Install four tie-rods, with their shorter threaded portion oriented towards the rod cover, and tighten them with uniform torque. Until the installation and adjustment have been completed, never pull out the unlocking bolt (or release the air pressure).




CL1 Series Ø125 to Ø160 Replacement Procedure for Seals 4

1. Disassembly

 - 1-1. Disassembly should be done in a wide space containing little dust.
- 1-2. After removing the cylinder, be sure to protect the end of piping port and rubber hose on the machine side with clean waste to prevent dust from entering.
- 1-3. Disassemble the unit with care to prevent damage to the sliding portion.
- 1-4. Check the double chamfered portion at the rod end for burrs to prevent damage to the seal and the bushing when removing the lock-up unit from the piston rod. If burrs are found, remove them with a "file".
- 1-5. Loosen the tie-rod nuts and pull out the four tie-rods.



 1-6. Apply air pressure of 0.2 MPa to 0.3 MPa to disengage the lock and pull out the lock-up unit from the piston rod.



1-7. Loose either of nuts for head side tie rod with "ratchet handle for socket wrench", "T-type slide handle for socket wrench" or "spinner handle for socket wrench", etc. and remove it from the tie rod. Please refer to the table for "socket for socket wrench.

Bore size (mm)	Nut	Applicable socket
125, 140	Class1, M14 x 1.5	JISB4636 Dodecagon22
160	Class1, M16 x 1.5	JISB4636 Dodecagon24

- 1-8. Remove 4 tie rods from cover.
- 1-9. Remove the push plate (rod cover) from the piston rod with care to prevent damage to the seal and bushing.
- 1-10. Pull the piston rod and pull out the piston from the cylinder tube.
- 1-11. Remove the cylinder tube from the head cover.

- 1-12. Disassembly of the rod cover (For the head cover, it should also be in accordance with this procedure.)
 - a. Remove the cylinder tube gasket. When excessive deformation or cut is found with the gasket, replace it.
 - b. Remove the cushion valve from the cover by using "flat blade screwdriver".
 - (Tool; Screwdriver Nominal size 8 x 150 Normal type, Normal class)
 - c. Remove the cushion valve seal from the cushion valve by using "waste".
 - d. Loosen the hexagon socket head cap screw for push plate by using "hexagon wrench" and remove the push plate. Applicable "Hexagon wrenches" are shown in the table below.

Bore size (mm)	Hexagon socket head cap screw	Nominal size of wrench
125, 140, 160	M8 x 1.25 x 25L	6

- e. Remove the wiper ring. If it cannot be removed by hand, use a small "flat blade screwdriver" and remove it with care to prevent damage to it.
- f. Remove the rod seal by using a small "flat blade screwdriver" with care to prevent damage to it.
- g. Remove the push plate gasket.
- h. Since the cushion seal is pressed fit, air will leak from the portion where the cushion seal is pressed fit due to damage or change in pressing force. Therefore when the cushion seal should be replaced, the rod cover assembly and the head cover assembly should be replaced. (Rod and head covers are not replaceable for type 2 pressure containers. Please consult with SMC for more detail.)
- i. Since the bushing is pressed fit into push plate, it is difficult to remove structurally and even if it is removed, stock for press fit lowers when it is pressed fit again. Therefore when it is replaced, replace the push plate assembly.





CL1 Series Ø125 to Ø160 Replacement Procedure for Seals 5

 
2. Replacement Procedure of Seal

2-1. Removal of the seal

Please refer to "1. Disassembly" for dismantling of wiper ring, rod seal, valve seal, tube gasket and push plate gasket.

Since piston seal has a deep groove for sealing, use your hand (not a watchmakers screw driver) and push from one side of seal and pull it out when it lifts off.

- 2-2. Application of grease
 - a. Seals: Apply thin coat of grease.
 - b. Cylinder component
 Apply grease to the individual components as the figure below. The table shows the grease amount required for a cylinder with stroke 100.



Grease application amount (g)

Bore size (mm)	125	140	160	Portion to apply
100 st	15 to 17	20 to 22	24 to 26	1) to (6)
50 st up	3	3	3	34

For grease, use lithium soap group grease JIS #2

- 2-3. Mounting of seal
 - a. Wiper ring/Rod sealMount in correct direction.
 - Seals other than wiper ring
 After mounting seals, apply grease on inside diameter surfaces of bushing (rubbing grease into surface).

3. Assembly

- 3-1. Before assembling cylinder, be sure to clean each part to remove dust.
- 3-2. Before assembling, apply rod, bushing, tube and seal with enough grease.
- 3-3. For rusty part, remove the rust completely.
- 3-4. Assembly should be done in a clean place with care to prevent foreign matters from entering.
- 3-5. Mount seal with care to prevent damage to it.
- 3-6. Insert piston into tube or rod into bushing with care to prevent damage to each seal.
- 3-7. Tighten tie rod and bolt with appropriate torque shown in the table below.

Tightening torque (N·m)


3 . 3	· · · · · · · · · · · · · · · · · · ·			
В	ore size (mm)	125	140	160
Tio rod	Steel tube	49)	75.5
Tie rod	Aluminum tube	39	.2	62.8
P	ush plate bolt		11	

3-8. Insert the lock-up unit to the piston rod while the lock is released with the air pressure of 0.2 to 0.3 MPa, Install the four tie-rods, with their shorter threaded portion oriented towards the rod cover, and tighten them with uniform torque.

Maintain the application of air pressure until the installation and adjustment have been completed, and never actuate the lock in the meantime.

1. Disassembly of the Cylinder

 - 1-1. The cylinder needs to be disassembled and assembled in a clean place.
- 1-2. Refer to the "Replacement Procedure of the Lock Unit" (CNG-3) ① to ③ for disassembly.





Long stroke

- 37Rod seal A
- 39Piston seal
- 40Cylinder tube gasket

2. Removal of the Seal

- 3 Rod seal A: Insert a watchmakers screw driver to pull out the seal. Take care not to damage the seal groove of the cover. (Fig. 1)
- 38 Piston seal: Remove the piston seal. (Fig. 2)
- @ Cylinder tube gasket: Insert a watchmakers screw driver to pull out the seal.

 


Fig. 1 Removal of rod seal



Fig. 2 Removal of piston seal

3. Application of Grease to Seal

- 3-1. Apply grease slightly to the outer circumference of each seal.
- 3-2. Fill in the groove of the rod seal with grease.

 


Fig. 3 Grease to the seals

4. Mounting of Seal

- ③ Rod seal A: Mount the seal in the correct direction.
- 39 Piston seal: Mount the seal while stretching it as Fig. 5.

 


Fig. 4 Installation of rod seal

 


Fig. 5 Installation of piston seal

5. Application of Grease

- ③ Rod seal A: Apply grease to the seal and the inner circumference of the bush. (Fig. 6)
 Use a precision screwdriver to apply grease to the small bore diameter while making sure not to leave scratches
- 39 Piston seal: Rub grease into the seal groove and outer circumference of the seal. (Fig. 7)
- 30 Cylinder tube gasket: Lightly apply grease.
- Cylinder component parts: Apply grease to each component parts of the cylinder in Figure 9.

Appendix table shows the grease amount required for a cylinder with stroke 100. For your reference, amount taken with a forefinger is about 3 g. (Fig. 8)

Bushing Piston seal

A little less than 1 mm

A little less than 1 cm

Fig. 6 Rod seal

Fig. 7 Piston seal

Fig. 8 Grease amount

 


Fig. 9 Grease application points

 $L = \frac{STROKE}{2}$ or 100 mm and more

Grease application amount (g)

Stroke		Bore	size	
Siloke	20	25	32	40
100 st	2	3	3	3 to 4
Extra 50 st	0.5	0.5	0.5	1

6. Reassembly of the Cylinder

- 6-1. Make sure no particles are present. Do not scratch the seals.
- 6-2. Tighten the cover approximately 0-2 degrees more from the original position (where the ports of rod and head covers match).
- 6-3. After completing the assembly, manually check whether the movement is smooth.

7. Replacement Parts

- 7-1. For the CNG series, lock-up unit (except the longstroke) and seal (rod seal B, piston seal, cylinder tube gasket) are replaceable.
- 7-2. Contact SMC sales if it is necessary to replace parts other than those mentioned above.

8. Replacement Procedure of the Lock Unit

⚠ Caution


Lock units for the CNG series are replaceable.

(However, please note that lock units cannot be replaced in the case of long stroke specifications.)


8-1. Remove the lock unit by securing the square section of the rod cover or the wrench flats of the tube cover in an apparatus such as a vice, and then loosening the other end with a spanner or adjustable angle wrench, etc.

See the table below for the dimensions of the square section and the wrench flats.


Bore size (mm)	Rod cover square section (mm)	Tube cover wrench flats (mm)
20	38	24
25	45	29
32	45	35.5
40	52	44

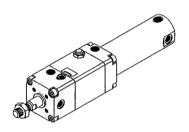


8-2. Remove the tube cover.

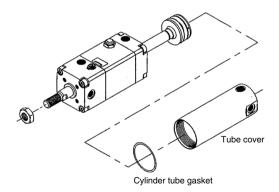


8-3. Apply compressed air of 0.3 MPa or more to the unlocking port, and pull out the piston rod assembly.

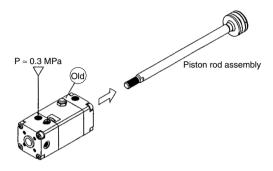

8-4. Similarly apply compressed air of 0.3 MPa or more to the unlocking port of the new lock unit, and replace the temporary axis with the previous piston rod assembly.

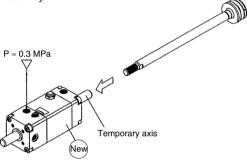

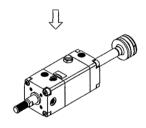

Note) When replacing piston rod assembly with a new lock unit, care should be taken not to cut rod packing B with threads or wrench flats.

Be sure to keep applying compressed air with a pressure of at least 0.3 MPa to the lock releasing port when replacing the temporary axis of a new lock unit with a piston rod assembly.

If the compressed air applied to the lock releasing port is released (when it is in the lock condition) while the temporary rod and the piston rod assembly are removed from the lock unit, the brake shoe will be deformed and it will become impossible to insert the piston rod assembly, which will make the lock unit impossible to use.

8-5. Reassemble by reversing the procedure in steps 8-1. and 8-2. When retightening the sections, turn approximately 2° past their position prior to disassembly.



1. Disassembly of the Cylinder

The cylinder needs to be disassembled and assembled in a clean place.

How to Replace Lock Units 2 (Page 387) Refer to a to c.

Table 1 Work tools

		of a hexagon wrench
Bore size (mm)	When removing the support bracket	When removing the tie-rod nut
32, 40	4	6
50, 63	5	8
80, 100	6	10
125	8	12

CNA2 Series

How to Replace Lock Units 2 (Page 388) Refer to a to c.

Table 2 Work tools

Bore size (mm)	Applicable socket
40, 50	13 (M8)
63	17 (M10)
80, 100	19 (M12)

2. Removal of the Seal

2-1. Rod seal, cushion seal

Insert a watchmakers screw driver to pull out the seal.

Take care not to damage the seal groove of the cover. (Fig. 1)

2-2. Piston seal

Remove it as in Fig. 2.

2-3. Tube gasket

Remove it in the same way as Fig. 2.

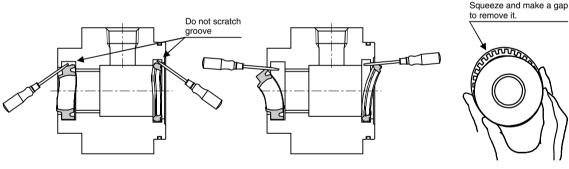


Fig. 1 Removal of rod seal, cushion seal

Fig. 2 Removal of piston seal

3. Application of Grease to Seal

3-1. Apply grease slightly to the outer circumference of each seal.

3-2. Fill in the groove of the rod seal with grease.

 


Fig. 3 Grease to the seal


4. Mounting of Seal

4-1. Rod seal, cushion seal

Mount the seal in the correct direction by bending the seal with fingers as Fig. 4.

4-2. Piston seal

Mount the seal while stretching it as in Fig. 5.

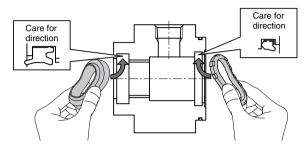



 


Fig. 5 Installation of piston seal

5. Application of Grease

5-1. Rod seal, cushion seal


Apply grease to the seal and the inner circumference of the bush. (Fig. 6)

5-2. Piston seal

Rub grease into the seal groove and outer circumference of the seal. (Fig. 7)

5-3. Cylinder component parts

Apply grease to each component parts of the cylinder in Figure 9. Appendix table shows the grease amount required for a cylinder with stroke 100. For your reference, amount taken with a forefinger is about 3 g. (Fig. 8)

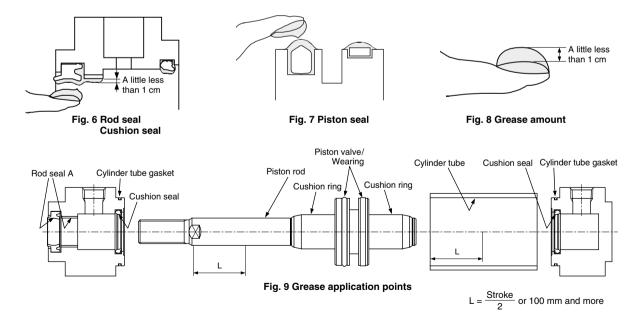

Grease application amount (g)

Stroke				Bore size)		
Stroke	32	40	50	63	80	100	125
100 st	3 to 4	3 to 4	3 to 5	4 to 5	6 to 8	8 to 10	15 to 17
Extra 50 st	1	1	1	1.5	1.5	2	3



6. Reassembly of the Cylinder

- 6-1. Make sure no particles are present. Do not scratch the seals.
- 6-2. Assemble the cylinder following the Replacement Procedure of Lock-up Unit 2, c through a.
 - MNB (Page 387)
 - CNA2 (Page 388)
- 6-3. To assemble the tie rod to the cylinder, tighten the tie rod to the shorter screw side by hand from the head cover side.

 


Fig. 10 Tie rod tightening order

6-4. Set the tie rod nuts. Tighten the tie rod nut so that the tensile force is even. Refer to the appropriate tightening torque of table 4 and 5. Brackets refer to the same table.

MNB Series		
	Table 4 Approp	riate tightening torque
	Bore size (mm)	Appropriate tightening torque (N·m)
	32, 40	5.1
	50, 63	11.0
	80, 100	25.0
	125	30.0

CNA2 Series	
Table 5 Approp	riate tightening torque
Bore size (mm)	Appropriate tightening torque (N·m)
40, 50	10.8
63	24.5
80, 100	38.2


7. Replacement Procedure of the Lock Unit

MNB Series


Although the MNB series lock unit is replaceable, do not disassemble the lock unit.

- 1. Lock units for the MNB series are replaceable.
- 2. How to replace the lock unit
 - a. Loosen the cylinder head cover tie rod nuts (four) with a hexagon wrench. Refer to the table below for applicable.


Bore size (mm)	Width across flats of a hexagon wrench
32, 40	6
50, 63	8
80, 100	10

 

b. Remove the tie rods, head cover and cylinder tube

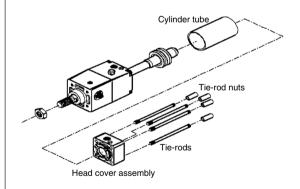


c. Apply 0.3 MPa or more of pressure to the lock release port to pull out the piston rod assembly.

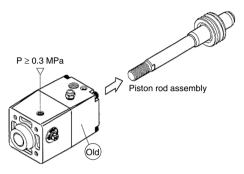

- d. Apply 0.3 MPa or more of pressure to new lock unit lock release port to change the piston rod assembly to the tentative rod.
- Note1) Attention should be taken not to cut rod packing B with screws and the spanner flat when replacing the piston rod assembly to new lock unit.
- Note2) Be sure to keep applying compressed air with a pressure of at least 0.3 MPa to the lock releasing port when replacing the temporary axis of a new lock unit with a piston rod assembly.

If the compressed air applied to the lock releasing port is released (when it is in the lock condition) while the temporary rod and the piston rod assembly are removed from the lock unit, the brake shoe will be deformed and it will become impossible to insert the piston rod assembly, which will make the lock unit impossible to use.

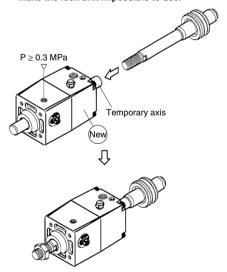

e. Reassemble in reverse order from b to a


Don't apply grease nor oil to the piston rod surface.

CNA2 Series


- 1. CNA2 series lock unit is replaceable.
- 2. How to replace the lock unit
 - a. Loosen the tie-rod nuts (4 pieces) on the cylinder head cover side by using a socket wrench.

For applicable socket, refer to the below table.


Bore size	Nut	mounting br	acket
(mm)	Nut	Width across flats dimension	Socket
40, 50	JISB1181 Class2 M8 x 1.25	13	JISB4636 + 2-point angle socket 13
63	JISB1181 Class2 M10 x 1.25	17	JISB4636 + 2-point angle socket 17
80, 100	JISB1181 Class2 M12 x 1.75	19	JISB4636 + 2-point angle socket 19

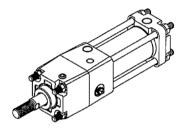

b. Remove the tie rods, head cover and cylinder tube.

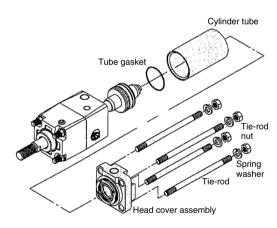


 Apply 0.3 MPa or more of compressed air to the unlocking port, and pull out the piston rod assembly.

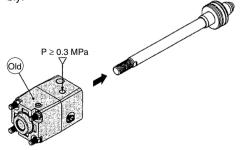

- d. Similarly, apply 0.3 MPa or more of compressed air to the unlocking port of the new lock unit, and replace the new lock unit's temporary axis with the previous piston rod assembly.
- Note1) Attention should be taken not to cut rod seal B with screws and the spanner flat when replacing the piston rod assembly to new lock unit.
- Note2) Be sure to keep applying compressed air with a pressure of at least 0.3 MPa to the lock releasing port when replacing the temporary axis of a new lock unit with a piston rod assembly.

If the compressed air applied to the lock releasing port is released (when it is in the lock condition) while the temporary rod and the piston rod assembly are removed from the lock unit, the brake shoe will be deformed and it will become impossible to insert the piston rod assembly, which will make the lock unit impossible to use.

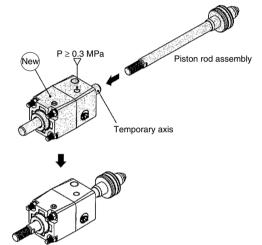

e. Reassemble in reverse order from step b to a.

∧ Caution

Don't apply grease nor oil to the piston rod surface.



1. Disassembly

- 1-1. Disassembly should be done in a wide space containing little dust.
- 1-2. After removing the cylinder, be sure to protect the end of piping port and rubber hose on the machine side with clean waste to prevent dust from entering.
- 1-3. Disassemble the unit with care to prevent damage to the sliding portion.
- 1-4. Check the double chamfered portion at the rod end for burrs to prevent damage to the seal and the bushing when removing the lock unit from the piston rod. If burrs are found, remove them with a "file".
- 1-5. Remove the lock unit according to section 4, Replacing Procedures of Lock Unit.
- 1-6. Loose either of nuts for head side tie rod with "ratchet handle for socket wrench", "T-type slide handle for socket wrench" or "spinner handle for socket wrench", etc. and remove it from the tie rod. Refer to the table for "socket for socket wrench.

Bore size (mm)	Nut	Applicable socket
125, 140 Class1, M14 x 1.5		JISB4636 Dodecagon22
160	Class1, M16 x 1.5	JISB4636 Dodecagon24

- 1-7. Remove 4 tie rods from cover.
- 1-8. Remove the rod cover from the piston rod with care to prevent damage to the seal and bushing.
- 1-9. Pull the piston rod and pull out the piston from the cylinder tube.
- 1-10. Remove the cylinder tube from the head cover. Remove the wiper ring of the lock unit. If it cannot be removed by hand, use a small "flat blade screwdriver" and remove it with care to prevent damage to it.
- 1-11. Disassembly of the rod cover (For the head cover, it should also be in accordance with this procedure.)
 - Remove the cylinder tube gasket. When excessive deformation or cut is found with the gasket, replace it.
 - b. Remove the cushion valve from the cover by using "flat blade screwdriver".
 - (Tool; Screwdriver nominal size 8x150 Normal type, Normal class)
 - c. Remove the cushion valve seal from the cushion valve by using "waste".
 - d. Loosen the hexagon socket head cap screw for push plate B by using "hexagon wrench" and remove the push plate D. Applicable "Hexagon wrenches" are shown in the table below.
 - e. Remove the rod seal by using a small "flat blade screwdriver" with care to prevent damage to it.
 - f. Remove the push plate gasket.

Bore size (mm)	Hexagon socket head cap screw	Nominal size of wrench
125, 140, 160	M8 x 1.25 x 25L	6

g. Since the cushion seal is pressed fit, air will leak from the portion where the cushion seal is pressed fit due to damage or change in pressing force. Therefore when the cushion seal should be replaced, the rod cover assembly and the head cover assembly should be replaced.

2. Replacement Procedure of Seal

 
2-1. Removal of the seal

Please refer to "1. Disassembly" for dismantling of wiper ring, rod seal, valve seal, tube gasket and push plate gasket.

Since piston seal has a deep groove for sealing, use your hand (not a watchmakers screw driver) and push from one side of seal and pull it out when it lifts off.

- 2-2. Application of grease
 - a. Seals: Apply thin coat of grease.
 - b. Cylinder component

Apply grease to the individual components as the figure below. The table shows the grease amount required for a cylinder with stroke 100.



Grease application amount (q)

Bore size (mm)	125	140	160	Portion to apply
100 st	15 to 17	20 to 22	24 to 26	1) to 6
50 st extra	3	3	3	34

For grease, use lithium soap group grease JIS #2.

2-3. Mounting of seal

- a. Wiper ring/Rod sealMount in correct direction.
- Seals other than wiper ring
 After mounting seals, apply grease on inside diameter surfaces of bushing (rubbing grease into surface).



3. Assembly

- 3-1. Before assembling cylinder, be sure to clean each part to remove dust.
- 3-2. Before assembling, apply rod, bushing, tube and seal with enough grease.
- 3-3. For rusty part, remove the rust completely.
- 3-4. Assembly should be done in a clean place with care to prevent foreign matters from entering.
- 3-5. Mount seal with care to prevent damage to it.
- 3-6. Insert piston into tube or rod into bushing with care to prevent damage to each seal.
- 3-7. Tighten tie rod and bolt with appropriate torque shown in the table below.


Tightening torque (N·m)

Bore size (mm)		125 140		160
Tie rod	Steel tube	49		75.5
i ie rod	Aluminum tube	39.2		62.8
Push	Push plate bolt		11	


4. Replacement Procedure of the Lock Unit

- 4-1. Lock unit for the CNS series can be replaced.
- 4-2. Replacing procedures of lock unit
 - a. Loosen tie-rod nut (4 pieces) on rod cover side of cylinder with socket wrench.


Bore size (mm)	Nut	Dimension of width across flats	Socket
125, 140	JIS B1181 M14 x 1.5	22	JIS B4636 Socket22
160	JIS B1181 M16 x 1.5	24	JIS B4636 Socket24

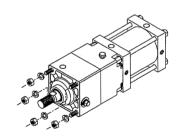

 b. Remove lock unit by applying compressed air over 0.3 MPa to lock release port.

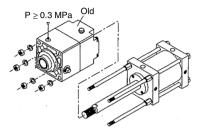


c. Also apply compressed air over 0.3 MPa to new lock unit and replace piston rod of cylinder with temporary shaft.

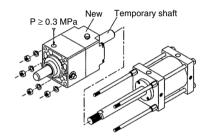

Note) To replace the piston rod assembly with the temporary shaft of a new lock unit, make sure that the compressed air of 0.3 MPa or higher is kept applied to the lock release port.

If the compressed air is exhausted (locked state) while the temporary shaft and piston rod assembly are pulled out from the lock unit, a brake shoe will be deformed and the piston rod assembly cannot be inserted. This makes the lock unit unusable.

 d. Tighten tie-rod nut (4 pieces) on cylinder rod side with socket wrench.

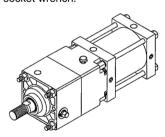

△ Warning

Customer shall not disassemble the CNS series lock unit.

- Because of powerful spring installed, do not loosen or remove hexagon socket head cap screws fixing covers A and B (parts may be shot out).
- Please consult with our sales person if disassembly and repair are necessary.

⚠ Caution

Apply grease and oil to the surface of piston rod only when it is necessary.



CLS Series Replacement Procedure for Seals 1

1. Disassembly

- 1-1. Disassembly should be done in a wide space containing little dust.
- 1-2. After removing the cylinder, be sure to protect the end of piping port and rubber hose on the machine side with clean waste to prevent dust from entering.
- 1-3. Disassemble the unit with care to prevent damage to the sliding portion.
- 1-4. Check the double chamfered portion at the rod end for burrs to prevent damage to the seal and the bushing when removing the lock unit from the piston rod. If burrs are found, remove them with a "file".

Remove the lock unit according to "Appendix. Replacement Procedures of Lock Unit".

1-5. Side of the head of nuts for tie rod with "ratchet handle for socket wrench", "T-type slide handle for socket wrench" or "spinner handle for socket wrench", etc. and remove it from the tie rod. Refer to the table for "socket for socket wrench".

Bore size (mm) Nut		Applicable socket
125-140	Class1, M14 x 1.5	JISB4636 Dodecagon22
160	Class1, M16 x 1.5	JISB4636 Dodecagon24
180	Class1, M18 x 1.5	JISB4636 Dodecagon27
200	Class1, M20 x 1.5	JISB4636 Dodecagon30
250	Class1, M24 x 1.5	JISB4636 Dodecagon36

- 1-6. Remove 4 tie rods from cover.
- 1-7. Remove the rod cover from the piston rod with care to prevent damage to the seal and bushing.
- 1-8. Pull the piston rod and pull out the piston from the cylinder tube.
- 1-9. Remove the cylinder tube from the head cover. Remove the wiper ring of lock unit. If it cannot be removed by hand, use a small "flat blade screwdriver" and remove it with care to prevent damage to it.
- 1-10. Disassembly of the rod cover (For the head cover, it should also be in accordance with this procedure.)
 - a. Remove the cylinder tube gasket. When excessive deformation or cut is found with the gasket, replace it.
 - b. Remove the cushion cover from the cover by using "flat blade screwdriver".

(Tool; Screwdriver nominal size 8x150 normal type, normal class)

- c. Remove the cushion valve seal from the cushion valve by using "waste".
- d. Loosen the hexagon socket head cap screw for push plate by using "hexagon wrench" and remove the push plate. Applicable "Hexagon wrenches" are shown in the table right above.

Bore size (mm)	Hexagon socket head cap screw	Nominal size of wrench
125, 140, 160	M8 x 1.25 x 16L	6
180, 200	M10 x 1.5 x 18L	8
250	M12 x 1.75 x 22L	10

- e. Remove the rod seal by using a small "flat blade screwdriver" with care to prevent damage to it.
- f. Remove the push plate gasket.
- g. Since the cushion seal is pressed fit, air will leak from the portion where the cushion seal is pressed fit due to damage or change in pressing force. Therefore when the cushion seal should be replaced, the rod cover assembly and the head cover assembly should be replaced.

2. Replacement Procedure of Seal

2-1. Removal of the seal

 
Please refer to "1. Disassembly" for dismantling of wiper ring, rod seal, valve seal, tube gasket and push plate gasket.

Since piston seal has a deep groove for sealing, use your hand (not a screw driver) and push from one side of seal and pull it out when it lifts off.

2-2. Application of grease

- a. Seals: Apply thin coat of grease.
- b. Cylinder component

Apply grease to the individual components as the figure below. The table shows the grease amount required for a cylinder with stroke 100.



Grease application amount (g)

Bore size (mm)	125	140	160	180	200	250	Portion to apply
100 st	15 to 17	20 to 22	24 to 26	27 to 29	30 to 32	33 to 35	1) to 6
50 st extra	3	3	3	4	4	5	34

For grease, use lithium soap group grease JIS #2.

2-3. Mounting of seal

- a. Wiper ring/Rod seal Mount in correct direction.
- b. Seals other than wiper ring
 After mounting seals, apply grease on inside diameter surfaces of bushing (rubbing grease into surface).





CLS Series Replacement Procedure for Seals 2

3. Assembly

- 3-1. Before assembling cylinder, be sure to clean each part to remove dust.
- 3-2. Before assembling, apply rod, bushing, tube and seal with enough grease.
- 3-3. For rusty part, remove the rust completely.
- 3-4. Assembly should be done in a clean place with care to prevent foreign matters from entering.

Tightening torque (N·m))
---------------------	------	---

Bore size (mm)) 125 140		160	180	200	250
Tie	Steel tube	49		75.5	103	147.1	254
rod	Aluminum tube	39.2		62.8	92.7	132.4	_
Push plate bolt			11		2	2	38

- 3-5. Mount seal with care to prevent damage to it.
- 3-6. Insert piston into tube or rod into bushing with care to prevent damage to each seal.
- 3-7. Tighten tie rod and bolt with appropriate torque shown in the table below.

4. Replacement Procedure of the Lock Unit

4-1. Lock unit for the CLS series can be replaced.

∧ Caution

1. Never disassemble the lock unit.

A heavy duty spring is contained in part of the unit, which presents a serious hazard if disassembly is performed incorrectly.


In addition, the lock unit is adjusted before shipment. If readjustment is not performed correctly after reassembly, a serious danger will be created, as performance will not meet specifications.

- Cylinder body and the lock unit are heavy materials. Two or more persons are required for the replacement of the unit after cleaning up the working environment.
- The brake tube assembly and the lock unit can be separated. Do not disassemble any other parts.
- 4-2. Loosen the four tie-rod nuts on the rod cover side of the cylinder using the socket wrench.


Refer to the table below for the size of the tie-rod nut.

Bore size (mm)	Tie-rod nut	Width across flats dimension	Socket	
125, 140	JISB1181 Class 1 M14 x 1.5	22	JISB4636 + 2-point angle socket 22	
160	JISB1181 Class 1 M16 x 1.5	24	JISB4636 + 2-point angle socket 24	
180	JISB1181 Class 1 M18 x 1.5	27	JISB4636 + 2-point angle socket 27	
200	JISB1181 Class 1 M20 x 1.5	30	JISB4636 + 2-point angle socket 30	
250	JISB1181 Class 1 M24 x 1.5	36	JISB4636 + 2-point angle socket 36	

4-3. Release the lock by hand or apply 0.25 MPa to the unlocking port and pull out the lock unit from the base cylinder.

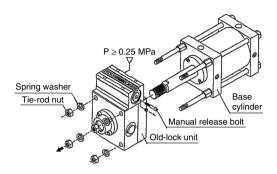


4-4. Remove four holding bolts for the new lock unit brake tube assembly and remove the brake tube assembly.

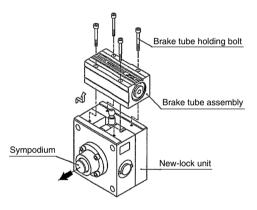

4-5. Pull out the temporary shafts from the lock unit and insert the lock unit to the base cylinder.

⚠ Caution

 Take care not to damage the inner surface of the brake shoe with the width across flats during insertion of the lock unit.

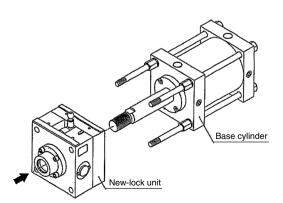

CLS Series Replacement Procedure for Seals 3

4-6. After making sure that the key is mounted to the specified location, assemble the brake tube assembly and fix it with holding bolts.


(N·m)

Bore size (mm)	Bolt size	Tightening torque (standard)	
125, 140	M6	4.8	
160	M8	11.9	
180	M8	11.9	
200	M10	24.5	
250	M12	42	

4-7. Lastly, tighten the tie-rod nuts.

(N·m)

Bore size (mm)	Bolt size	Tightening torque (standard)	
125, 140	M14	34.3	
160	M16	53.9	
180	M18	73	
200	M20	102	
250	M24	180	

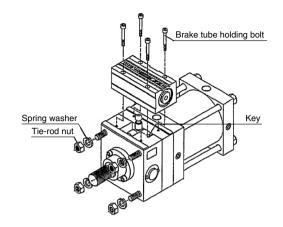

⚠ Caution

Apply 0.08 MPa or more of air pressure to the cylinder port before installing the equipment for checking the operation. Make sure that the manual release bolts are removed before installing the equipment.

REAS Series Replacement Procedure for Seals

1. Maintenance

As for sine rodless cylinders, the cushion ring and seal are assembled to provide the optimum cushioning effect

Therefore, they should be returned to the factory for maintenance.

If you disassemble them by necessity, please note the following points.

- 1-1. To remove external slider or piston slider from cylinder tube, holding force must be released by shifting positions of external slider and slider piston forcibly. Removing those without doing so, respective magnets call each other directly and may become impossible to separate.
- 1-2. Upon completing above works to separate respective sliders, by loosening hexagon head cap screw (at plate A side,) remove cylinder tube and plate A from guide rod A and B. (While replacing works (of packing, so on), other parts should not be disassembled, disassembling other parts may cause to air leakage.)
- 1-3. Magnet assembly (piston slider and external slider) must not be disassembled. Disassembling this may cause to decrease of holding force and other defects
- 1-4. When handle magnet assembly, watch on your arm should be put off not to get influence from strong magnetic field.

- 1-5. Thorough care should be taken for the magnet not to drop on the floor or knock against metal.
- 1-6. Make sure the external slider is in the correct direction. (REAS10 only).

Insert the external slider (slide block) and the piston slider to the cylinder tube. If the direction is incorrect (Fig. 2), turn the piston slider 180 degrees then insert. If the direction is not corrected, the specified holding force will not be realized.

 


Fig. (1) Correct position

 


Fig. (2) Incorrect position

REC Series Replacement Procedure for Seals 1

1. Disassembly and Reassembly of the Cylinder


A clean place is necessary to disassemble and reassemble the cylinder. Put a clean waste on a working place. For disassembly, hold width across flats of the head cover or rod cover by vice or by spanner or monkey spanner, and loose and remove the covers respectively.

 
2. Removal of the Seal

2-1. Rod seal

The rod seal A can be replaced with the cylinder mounted. On the other hand, the rod seal B should not be replaced by customer because of its difficulty in mounting works.

Use retaining ring pliers (tool for installing a basic internal retaining ring) to remove the retaining ring, and take the piston rod out from the rod cover with closing the ports of the rod cover by fingers. Then, the seal holder and rod seal A will appear and can be removed from the piston rod.

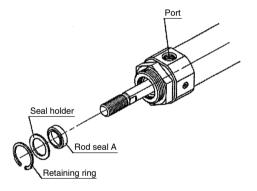



2-2. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 2)

2-3. Tube gasket

Remove the tube gasket with the watchmakers screw driver or the like. (Be careful not to damage the surrounding parts of the tube gasket.)

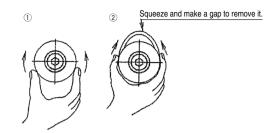


Fig. 2 Removal of piston seal

3. Application of Grease

Use lithium soap base grease equivalent to JIS class 2. You may also order our grease package (GR-S-010 for 10 g and GR-S-020 for 20 g).

3-1. Rod seal

Apply grease thin around the internal and external faces of the new seal for replacement. This is for smooth mounting of the rod seal to the cover and firm fitting between them. Also, the grease is required for the seal groove.

3-2. Piston seal

Apply grease thin and evenly around the internal and external faces of the piston seal for smooth mounting to the piston.

3-3. Tube gasket

Apply grease thin to the tube gasket to prevent it from coming off from the cylinder when assembling.

3-4. Other parts of cylinder

The parts of the cylinder shown in Fig. 3 also require grease to be applied. The amount shall be as specified in Table 1 for one cylinder with 100 stroke. You can consider the amount scooped by index finger to be approx. 3 g. (Fig. 4)

L is nearly equal to 100 mm or stroke by 1/2.

 


Fig. 3 Grease application points

 


Fig. 4 Grease amount

Table 1 Grease application amount (g)

Stroke	ø 20	ø 25	ø 32	ø 40	Applying position
100 st	2	3	3	3 to 4	123456
50 st added	0.5	0.5	0.5	1	34

 


4. Mounting of Seal

4-1. Rod seal

Mount the rod seal with care for direction. When passing the rod seal through the threaded part at the piston rod end and width across flat, press the rod seal slowly and gradually with rotating. And then, mount it to the housing of the rod cover firmly.

After that, mount the seal holder and retaining ring.



4-2. Piston seal

Mount the piston seal and rub grease into the inside and the external face of the seal groove as shown in Fig. 6.

4-3. Tube gasket

Mount the tube gasket, apply grease slightly and mount to the head and rod covers.

 



Fig. 6

That is all for the replacement of seals. After they are assembled, check if the cylinder operates smoothly by hand and there is no air leakage as the last step.

1. Replacement Procedure of Seal

Seal for cylinder should be disassembled and reassembled on the clean bench without metal chips and dust. Attached metal chips and dust will cause air leakage. Pay great attention to the operation to prevent air leakage.

 - 1-1. Removal of mounting nut and bracket
 Bracket such as foot and flange are fixed with nut.
 Loosen nut to remove bracket and mounting nut.
- 1-2. Removal of relief valve body holder Since relief valve body holder is fixed with set screw, use hexagon wrench to loosen it. Relief valve body holder on cover side is slightly deformed due to screw. When relief valve body holder is removed from cover, remove it as rotating.





Picture 1: R/C side

Picture 2: H/C side

1-3. Removal of rod cover

When cylinder cover is removed after relief valve body holders on both rod and head cover side removed, fix head cover with vice and loosen screwed-in rod cover with spanner or monkey wrench.





Picture 3: Fixed (H/C side)

Picture 4: R/C side


- 1-4. Removal of piston rod assembly Extract piston rod assembly from tube as rotating it after rod cover is removed,
- 1-5. Removal of head cover Loosen screwed-in tube as rotating it with pipe wrench leaving head cover fixed with vice. Pay great attention to the operation to prevent inside of tube from deformation.




Picture 5: H/C side

1-6. Removal of rod seal

 Since rod seal is mounted on the cover part where groove is machined, remove it with watchmakers screw driver.

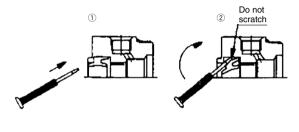




Pay attention to the operation to prevent cover form scratch at the operation in ② and ③.

1-7. Removal of piston seal

Wipe off grease around piston seal to remove it easily, then remove it in accordance with the procedure stated below.

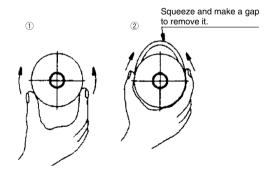

1-8. Replacement of wearing

When wearing is wore-out, remove and replace it with watchmakers screw driver.

1-9. Removal of cushion seal


Since cushion seal is mounted on the parts of rod and head cover where groove is machined, remove it carefully with watchmakers screw driver with the same operation for rod seal.

1-10. Each O-ring

Remove each part just in the case that there are flaws on surface of O-ring. Use same operation as piston seal for the small O-ring which mounted on the groove. Put small amount of grease.

1-11. Installation of rod seal

Install rod seal with correct direction after applying grease on whole part. Check if there is no deformation on seal, and if so, set it correctly with finger.

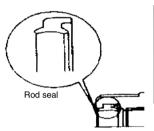




Picture 6: Installation of rod seal

1-12. Installation of cushion seal

Install cushion seal with correct direction after applying grease on whole part. Check if there is no deformation on seal, and if so, set it correctly with finger.

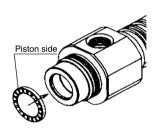




Picture 7: Installation cushion seal

Grease

1-13. Installation of piston seal

 
Install piston seal by expanding it to mounting groove after applying grease on whole part. Then, put grease to outside of piston like below diagram.





1-14. Grease for piston rod assembly

 Spread grease thinly and equally to pointed part stated below.




Picture 9: Grease applied piston rod assembly

1-15. Preliminary tightening of tube and cover Prepare assembly by screwing head cover in tube with hand.

1-16. Grease for sliding portion (I.D.) of tube

 Apply grease inside of cylinder tube. Put approx. 1 cm (3 g) of grease on finger as standard and apply it to the range, which is equivalent length to cylinder I.D. equally.



1-17. Insertion of piston rod assembly

Insert piston rod assembly to the assembly in step 1-16. Pay great attention to the operation to protect piston seal from flaws by screw at the end of tube.

1-18. Preliminary tightening of rod cover

 
Screw-in rod cover to the assembly assembled up to 3-17 with hand. Pay great attention to operation to protect rod seal from flaws by screws on the end of tube.

1-19. Final tightening of cover

Fix head cover with vice and screw-in rod cover with spanner and monkey wrench with the same procedure at disassembly. Tight additionally approx. $1\sim2^{\circ}$ as standard considering the relation of ports between rod cover and head cover before disassembly.

1-20. Installation of relief valve body

Install relief valve body on cover. Install it as rotating until it touch's to the end of cover as facing C chamfer to outside.



1-21. Relief valve fixing

Fix hexagon socket set screw with hexagon wrench. Refer to the following table for tightening torque.

Table 3, Tightening torque (N·m)


Model	Tightening torque
RHC*20	1.5 ± 10%
RHC*25	1.5 ± 10%
RHC*32	2.6 ± 10%
RHC*40	2.6 ± 10%

1-22. Check before cylinder installation

Perform trial operation with min. operating pressure of 0.05 MPa before mounting cylinder to check if each part is not loosened or if there is no air leakage, then check same things at max. operating pressure of 1.0 MPa. After checking no failure on parts, install cylinder.

1. Replaceable Seal

1-1. The seals shown on the below figure are replaceable.

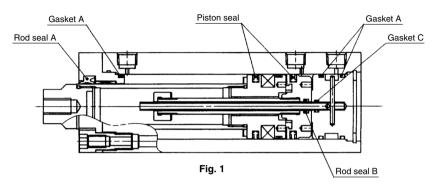

2. Disassembly of the Cylinder


⚠ Caution

Cylinder needs to be disassembled/assembled at clean environment. Use a clean cloth.

Before disassembly, eliminate the dirt on the outer surface so that foreign material does not enter the cylinder or the guide.


2-1. Removing rod cover

Loose the fitting bolts, and remove the rod cover.

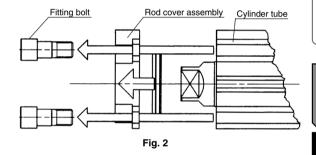

2-2. Removal of components

Following the removal of a retaining ring, press the tube rod cover out from rod side, and take it out from head side.

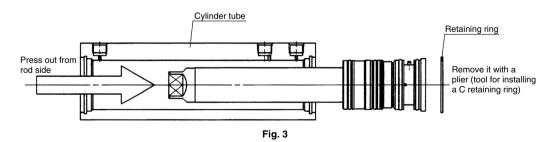

∧ Caution

Perform mounting and removal of the retaining ring with a proper plier (tool for installing a C retaining ring).

There is a risk of causing damage for human body and peripheral equipment when a retaining ring is removed from the end of plier even if it is a proper plier. Supply air after checking the retaining ring is mounted at the retaining ring groove securely.



2-3. Removal of head cover assembly

Take the head cover assembly out from the piston rod assembly. (The piston rod assembly cannot be further disassembled.)

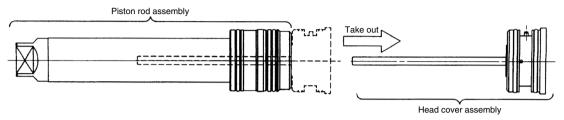


Fig. 4

2-4. Take the parallel pin out from the head cover, and remove the inner pipe.


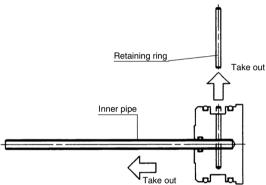


Fig. 5

3. Removal of the Seal

3-1. Removal of rod seal

Remove the seal by inserting a watchmakers screw driver from the front side of the rod cover. During this work, do not give a flaw on the seal groove at the rod cover.

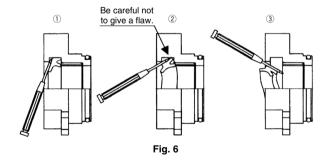

3-2. Removal of piston seal

- Wipe out grease around the piston seal (it helps easy removal of a piston seal).
- As the piston seal groove is deep, remove the seal using a gap made by squeezing it, not using a precision driver.

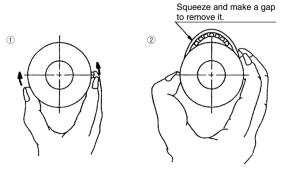


Fig. 7



3-3. Removal of gasket

- a. Gasket around rod cover and head cover
 In the same way as the removal of piston seal, squeeze the gasket and make a gap to remove it.
- b. Gasket inside head cover In the same way as the removal of rod seal, insert a watchmakers screw driver to remove it. Be careful not to give a flaw on the seal groove at the rod cover.

4. Application of Grease

4-1. Rod seal and piston seal

Apply grease thinly and evenly to the seal for replacement. Fill grease into the groove.

4-2. Gasket

Apply grease thinly and evenly to the gasket for replacement.

4-3. Cylinder parts

Apply grease to each part.

Refer to "6. Assembling of Cylinder" for the parts to apply grease.



5. Mounting of Seal

5-1. Rod seal

Mount the seal with care of its direction. Apply grease to the seal and the bushing evenly after mounting it as shown on Fig. 9.


Apply grease to the rod seal B with a precision driver.

5-2. Piston seal

Mount the seal without twisted. After mounting it, apply the grease to the seal and the seal groove as shown on Fig. 10.


5-3. Gasket

Fit it up with care of drop off.

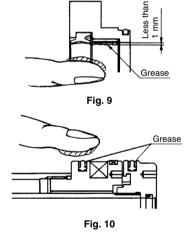


6. Assembly of the Cylinder

- 6-1. Apply grease to insertion for head cover at the inner pipe.
- 6-2. Insert the inner pipe to the head cover. (Match the hole of head cover with the one of inner pipe.) Perform Inserting slowly and carefully so as not to catch the gasket.
- 6-3. Get the parallel pin through the head cover and the inner pipe.
- 6-4. Pull the inner pipe lightly to check it will not fall off from the head cover.
- 6-5. Apply grease to the inner pipe.
- 6-6. Insert the head cover assembly (inner pipe) to the piston rod assembly. Perform Inserting slowly and carefully so as not to catch the rod seal B.

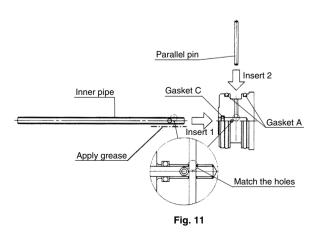



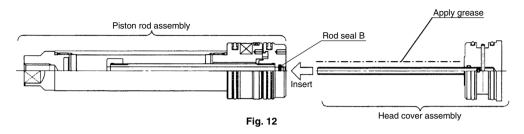

- 6-7. Apply grease to inside of the cylinder tube and outside of the tube rod, the piston A, and the piston B.
- 6-8. Insert the piston rod assembly and head cover assembly to the cylinder tube. Perform Inserting slowly and carefully so as not to catch the piston seal and the gasket.
- 6-9. Mount a retaining ring on the cylinder tube to fix the head cover.

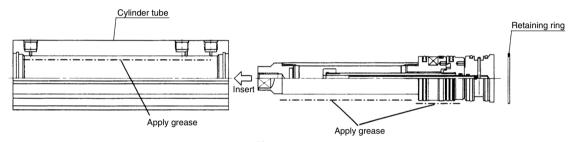


Fig. 13

- 6-10. Apply grease to the internal face of the bushing at the inside of the rod cover.
- 6-11. Insert the rod cover assembly to the cylinder tube.

 Mount the rod seal A slowly and carefully so as not to be caught.
- 6-12. Apply locking agent to the fitting bolt.
- 6-13. Tighten the fitting bolts at the cylinder tube to fix the rod cover. Refer to Table 1 for the tightening torque of the fitting bolts.

Table 1			
Bore size (mm)	Nominal size	Tightening torque [N·m]	
32	M8 x 0.75	6.2	
40	M8 x 0.75	6.2	
50	M10 x 0.75	15.6	
62	Minario	21.0	

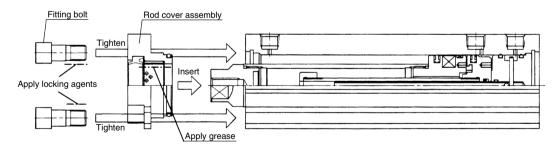


Fig. 14

After completing the assembly, confirm that there is not air leakage from the sealing parts, and also that it operates smoothly with the low operating pressure.

1. Disassembly of the Cylinder

1-1. Cleaning

Prior to disassembly, wipe off any dirt from the outside of the actuator. This will prevent the intrusion of dust and foreign materials during disassembly.

Take particular care on the surface of the piston rod.

1-2. Removal of arm

Remove the arm with rod point.

1-3. Removal of hexagon socket head cap screw [only ø25 or more]. (Fig. 1)

Remove the hexagon socket head cap screw (with washer or spring washer).

1-4. Removal of retaining ring (Fig. 2)

Remove with proper pliers (tool for basic internal retaining ring). Moreover, please note that the retaining ring comes off from pliers when detaching it, it files, and the human body and peripherals might be disadvantaged.

1-5. Disassembly

Install the bolt etc. in the point part of the piston rod, and pull it out with rod cover assembly and the key.

In that case, please note that neither the inside diameter of the tube nor the rod cover bearing are damaged.

2. Removal of the Seal

2-1. Removal of the coil scraper


Insert a precision driver etc. from front the rod cover assembly and prise the seal out. From front rod cover assembly and prise the coil scraper out.

Take care not to scratch or score the coil scraper groove in the rod cover assembly.

2-2. Removal of the rod seal

Insert a precision driver etc. from front the rod cover assembly and prise the seal out.

Take care not to scratch or score the seal groove in the rod cover assembly. Do not scratch groove

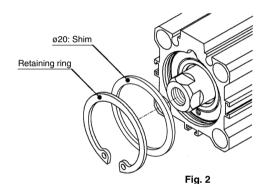



Hexagon socket

head cap screw

Fig. 1

 ø25. ø32: Washer ø40 or more: Spring washer

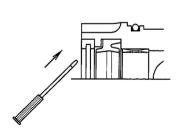





2-3. Removal of the piston seal

As the piston seal groove is deep, remove the seal using a gap made by squeezing it, not using a precision driver.

2-4. Removal of the tube gasket

Squeeze the gasket and make a gap to remove it. (Refer to the right Fig. 4).





Fig. 4

404

Squeeze and make a gap to remove it.

MK/MK2T Series Replacement Procedure for Seals 2

3. Application of Grease

3-1. Grease spreading of rod seal and piston seal (Fig. 5)

There is thinly no irregularity and lithium system grease* is spread on all surroundings of rod seal and piston seal for the exchange.


- *SMC recommendation grease: It is possible to arrange. (Refer to the operation manual.)
- 3-2. Grease spreading of tube gasket


There is thinly no irregularity and lithium system grease is spread on the whole of the tube gasket for the exchange.

- *SMC recommendation grease: It is possible to arrange. (Refer to the operation manual.)
- 3-3. Grease spreading of each part

There is thinly no irregularity and lithium system grease^{*} is spread on a specified part of rod cover assembly, piston rod assembly and cylinder tube assembly.

*SMC recommendation grease: It is possible to arrange. (Refer to the operation manual.)

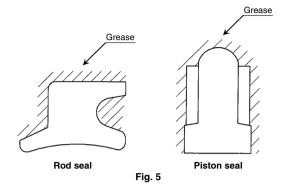

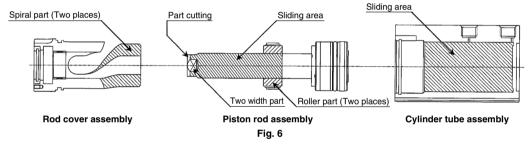

4. Installation of Seal and Coil Scraper

4-1. Installation of rod seal and tube gasket (Fig. 7)

Install the direction of rod seal so as not to make a mistake. Install the tube gasket so as not to drop out of rod cover assembly.

After it installs it, there is no irregularity and lithium system grease* is spread on rod seal and the bearing.

- *SMC recommendation grease: It is possible to arrange. (Refer to the operation manual.)
- 4-2. Installation of coil scraper

Install coil scraper for the exchange in the coil scraper ditch surely.


4-3. Installation of piston seal (Fig. 8)


Install it so that piston seal should not twist.

Spread it to rub lithium system grease* into between piston seal outer part and the ditch after it installs it.

- *SMC recommendation grease: It is possible to arrange. (Refer to the operation manual.)
- 4-4. Installation of tube gasket

Please note the dropout, and install it.

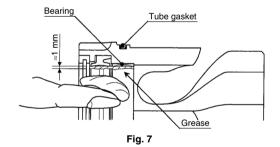


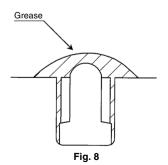

MK/MK2T Series Replacement Procedure for Seals 3

5. Assembly of the Cylinder

 5-1. Insertion of rod cover assembly (Fig. 9)
Insert it politely slowly so as not to damage rod seal in corner part piston rod assembly.



5-2. Insertion of piston rod assembly (Fig. 10)

Insert it politely slowly to damage neither piston seal nor the tube gasket in corner part cylinder tube assembly.

 


Fig. 10

5-3. Installation of key and retaining ring (Fig. 11)

Insert the key in the key ditch, and install the retaining ring with proper pliers (tool for basic internal retaining ring).

In that case, install the direction of the retaining ring so as not to make a mistake.

Because the retaining ring comes off from pliers when it installs it, it flies, and the human body and peripherals might be disadvantaged. Please note it.

Moreover, please confirm whether in the retaining ring ditch surely.

5-4. Installation of hexagon socket head cap screw [only ø25 or more] (Fig. 12)

After cleaning the adhesive from the hexagon socket head cap screw and the rod cover assembly with alcohol etc., apply the tightening adhesive to the screw holes of the rod cover assembly (SMC recommended adhesive: Loctite Corp. 242 [Blue]) in order not to loose. Spread the adhesive (SMC recommendation adhesive: Loctite Corp. 242 [Blue]) for loose stop on screw hole part rod cover assembly.


Tighten with the hexagon socket head cap screw (*ø25, ø32: with washer/ø40 or more: with spring washer).

 
Please confirm whether the adhesive has overflowed after it concludes it.

Wipe an extra adhesive off when overflowing.

5-5. Assembly confirmation

Please confirm whether not to cause the air leakage from the packing seal or to operate by the minimum operating pressure smoothly.

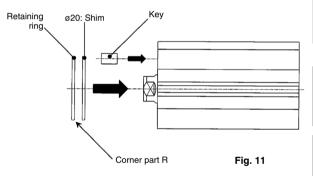



.

Γiq	hte	ning	tor	que

Bore size	Size of screw	Tightening torque (N·m)
ø 25, ø 32	M2.5 x 0.45	0.36 ± 10% (0.324 to 0.396)
ø 40 , ø 50 , ø 63	M3 x 0.5	0.63 ± 10% (0.570 to 0.690)

⚠ Caution

- Confirm air is not supplied for the cylinder before disassembly and reassembly.
- 2. Never disassembly lock unit [For only CLKQG/CLKQP series]

The lock unit is equipped with heavy duty spring and may cause danger if disassembled.


Also, if it is reassembled incorrectly, the locking performance is impaired and desired function become unavailable.

For these reasons, the disassembly of lock unit at customer's site is prohibited strictly.

(If disassembly or replacement of a part is required absolutely, contact SMC.)

1. Romoval of Spatter

- a. Insert flat blade screwdriver into the groove of cover and set up the cover straight toward direction marked with arrows by the driver. Then the cover is opened.
- * If excessive force is given to do this, the cover may be damaged.
- b. Collect the spatter inside the groove.
- c. Push the cover unit it snaps.

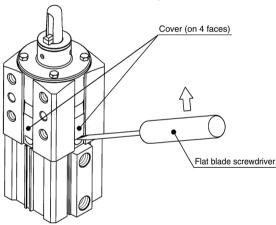

2. Replacement of Guide Pin and Clamp Arm

The clamping position height: For the LOW type


- 1. Disassembly of clamping part
- a. Cleaning of appearance

Wipe off the dirt of appearance to prevent intrusion of dust and foreign materials during disassembly.


b. Removal of guide pin assembly.

Adjust the position of the clamp arm to the unclamping side, detach the hexagon socket set screw (3 pcs.), and guide pin assembly from guide tube.

Detach the parallel pin which does a positional match of guide tube and guide pin assembly.

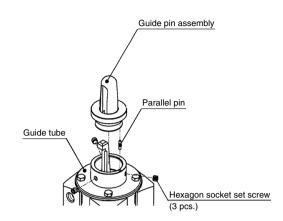


- c. Removal of clamp arm
 - 1) Detach the hexagon head bolt (4 pcs.), and detach the guide tube from the body.

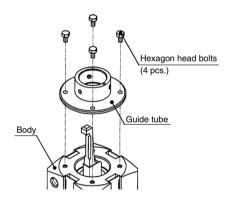


Insert a flat blade screwdriver or similar object into the cover groove and open. Then detach the cover (4 pcs.).

Detach pin A from the body side hole.


Pay attention to cut neither the hand nor the finger, etc. when you detach the cover.

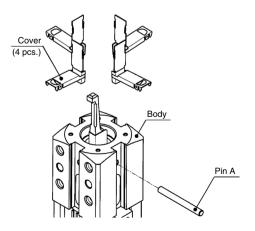

3) Loosen the hexagon socket head cap screw (4 pcs.) the base cylinder, and detach the body from the base cylinder.

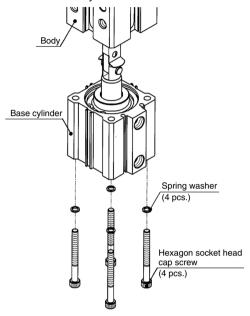


4) Extract the cotter pin, detach pin B, and detach the clamp arm (The spatter cover also together).

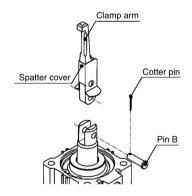

- 2. Reassembly of clamping part
 - a. Check of part no.

Check the number printed on clamp arm and guide pin assembly with reference to the following table.

Printed no.		
Guide pin assembly	Clamp arm	
125, 127, 128, 129, 130	13	
145, 147, 148, 149, 150	15-16	
155, 157, 158, 159, 160	15-16	
175, 177, 178, 179, 180	18	
195, 197, 198, 199, 200	20	
245, 247, 248, 249, 250	25	
295, 297, 298, 299, 300	30	
	Guide pin assembly 125, 127, 128, 129, 130 145, 147, 148, 149, 150 155, 157, 158, 159, 160 175, 177, 178, 179, 180 195, 197, 198, 199, 200 245, 247, 248, 249, 250	

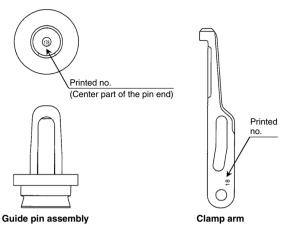

- b. Mounting of clamp arm
 - 1) There is thinly no irregularity and lithium system grease is spread on the slash part of the clamp arm for the exchange (both sides).

Moreover, there is no irregularity and lithium system grease is spread on the pin hole part and the cam ditch part of the clamping arm a lot (Grease can collect).

Install the spatter cover (The direction is noted) in the clamping arm.

In that case, install it so that the pin hole of the spatter cover and the cam groove of the clamp arm are visible.

Grease application amount (standard)

Both sides of clamping arm	≈ 0.05 g
Clamp arm pin hole part	≈ 0.10 g
Clamp arm cam ditch part	≈ 0.50 g

2) There is thinly no irregularity and lithium system grease is spread on the slash part in pin B and the piston rod slit part (both sides).

Moreover, there is no irregularity and lithium system grease is spread on the piston rod pin hole part a lot (Grease can collect).


Do not damage the finger etc. for the acute angle when you spread grease on the piston rod slit part.

Grease application amount (standard)

Groupe application amount (ctandard)		
Pin B	≈ 0.05 g	
Piston rod slit part	≈ 0.05 g	
Piston rod pin hole part	≈ 0.10 g	


- 3) Insert the clamp arm (with spatter cover) in the piston rod slit part and insert pin B.
 - Insert the cotter pin for the exchange through the hole for the cotter pin of pin B, and bend the point with the needle rose pliers.
- 4) Rotate the clamp arm, and rotate it so that the A-D installation position may squarely become direction of the fingernail.

(Rotate it while moving the piston rod up and down when it rotates.)

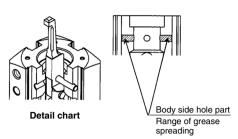



2) Fasten, in order, the spring washer (4 pcs.) and the hexagon socket head cap screw (4 pcs.) from the head side of the base cylinder.

Tightening torque: 4 to 6 (N·m)

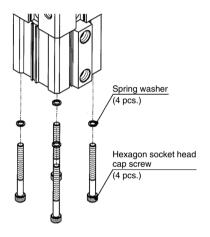

3) Install the cover (4 pcs.) on the body. In that case, please note the direction of insertion.

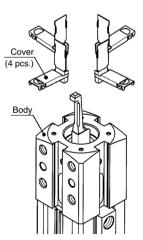

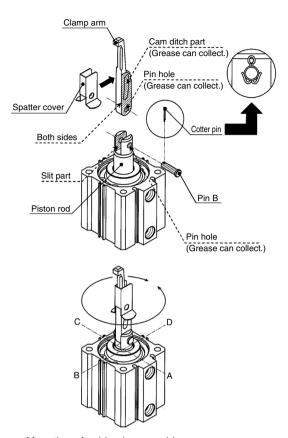

- c. Mounting of guide pin assembly
 - 1) Put into the state to draw out the piston rod, confirm the body installation side and the clamping arm fingernail position, and insert the body.


There is thinly no irregularity and lithium system grease is spread on the slash part of pin A.

There is no irregularity and lithium system grease is spread on the body side hole part (pin A insertion part) a lot (Grease can collect).

Insert pin A from the body side hole through the spatter cover and the clamp arm (Refer to a detail chart).

Grease application amount (standard)

Pin A	≈ 0.05 g
Body side hole part	≈ 0.20 g

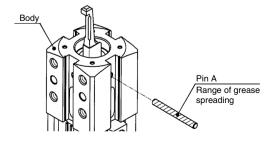

SMC


4) After cleaning the adhesive from the hexagon head bolts (4 pcs.) and the body with alcohol etc., apply the tightening adhesive to the screw holes of the body (SMC recommended adhesive: Loctite Corp. 242 [Blue]) in order not to loose. Please install the guide tube in the body with the hexagon head bolt (4 pcs.).

 
In that case, install it so the guide tube pin hole is on the right side of the clamp arm (detail chart).

Tightening torque: 1.5 to 1.8 (N·m)

Please confirm whether the adhesive has overflowed after concluding the hexagon head bolt (4 pcs.).

Wipe an extra adhesive off when overflowing.

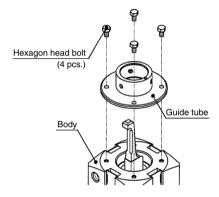



5) Insert the parallel pin for the exchange in the pin hole of guide pin assembly for the exchange, (when equipped with a shim, adhesive to secure the parallel pin to the guide pin assembly) suit to the position of the pin hole on the guide tube side, insert, and tighten with the hexagon socket set screw (3 pcs.: [green] with the adhesive).


Tightening torque: 4.86 to 5.94 (N·m)

However, when the adhesive color of the hexagon socket set screw (3 pcs.) is "red", or the "green" adhesive is stripped off from repeated replacements, completely remove the remaining adhesive from the thread of the hexagon socket set screw and the screw hole of the guide tube with alcohol. Then apply tightening adhesive (SMC recommendation: Loctite Corp. 242 [Blue]) to the hexagon socket set screw (3 pcs.).

Please confirm whether the adhesive has overflowed after it concludes it.


Wipe an extra adhesive off when overflowing.

For the with shim type, insert the shim between the guide pin assembly and the guide tube. Install the order of shim referring to the following. Please confirm shim does not dash out from the guide tube outer after assemble.

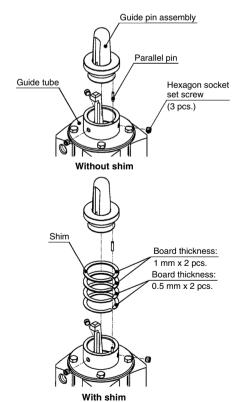


The Clamping Position Height: For HIGH


- 1. Disassembly of clamping part
 - a. Cleaning of appearance Wipe off the dirt of appearance to prevent intrusion of dust and foreign materials during disassembly.
 - b. Removal of guide pin assembly Adjust the position of the clamp arm to the unclamping side, detach the hexagon socket set screw (3 pcs.), and guide pin assembly from the guide tube. Detach the parallel pin which does a positional match of guide tube and guide pin assembly.

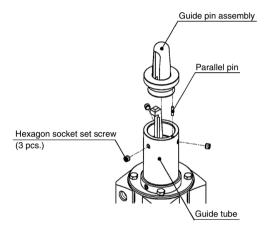

- c. Removal of clamp arm
 - 1) Detach the hexagon socket set screw, and detach the ring from the guide tube.
 - Detach pin A from the guide tube side hole.

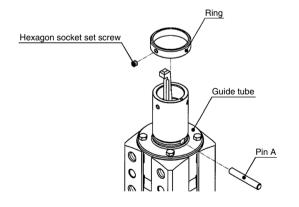


2) Detach the hexagon head bolt (4 pcs.), and detach the guide tube and the spatter cover from the body.

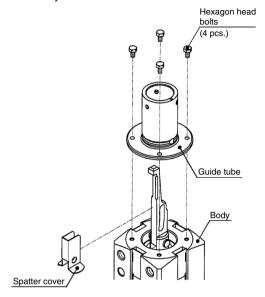


3) Insert a flat blade screwdriver or similar object into the cover groove and open. Then detach the cover (4 pcs.).


Pay attention to cut neither the hand nor the finger, etc. when you detach the cover.

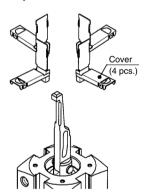

4) Loosen the hexagon socket head cap screw (4 pcs.) of the base cylinder, and detach the body from the base cylinder.

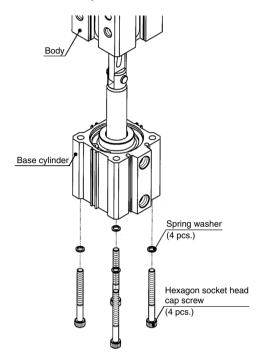


5) Extract the cotter pin, detach pin B, and detach the clamp arm.

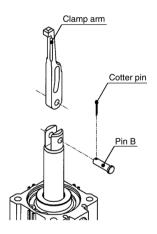

- 2. Reassembly of clamping part
 - a. Check of part no.

Check the number printed on clamp arm and guide pin assembly with reference to the following table.

	Printed no.		
	Guide pin assembly	Clamp arm	
	125, 127, 128, 129, 130	13	
	145, 147, 148, 149, 150	15-16	
Applicable combination	155, 157, 158, 159, 160	15-16	
olica	175, 177, 178, 179, 180	18	
App	195, 197, 198, 199, 200	20	
. 0	245, 247, 248, 249, 250	25	
	295, 297, 298, 299, 300	30	

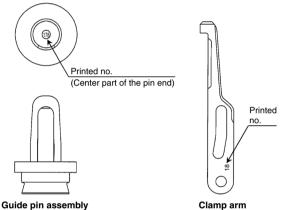

- b. Installation of clamp arm
 - 1) There is thinly no irregularity and lithium system grease is spread on the slash part of the clamp arm for the exchange (both sides).

Moreover, there is no irregularity and lithium system grease is spread on the pin hole part and the cam ditch part a lot (Grease can collect).

Grease application amount (standard)

Both sides of clamp arm	≈ 0.05 g
Clamp arm pin hole part	≈ 0.10 g
Clamp arm cam ditch part	≈ 0.50 g

2) There is thinly no irregularity and lithium system grease is spread on the slash part in pin B and the piston rod slit part (both sides).

There is no irregularity and lithium system grease is spread on the piston rod pin hole part a lot (Grease can collect).


Do not damage the finger etc. in the slit part for the acute angle when you spread grease on the piston rod slit part.

Grease application amount (standard)

••	,
Pin B	≈ 0.05 g
Piston rod slit part	≈ 0.05 g
Piston rod pin hole part	≈ 0.10 g

- 3) Insert the clamp arm in the piston rod slit part and insert pin B.
 - Insert the cotter pin for the exchange through the hole for the cotter pin of pin B, and bend the point with the radio pincers.
- 4) Rotate the clamp arm, and rotate it to become it at right angles with the A-D installation position and the direction of the fingernail.


(Rotate it while moving the piston rod and down when it rotates.)

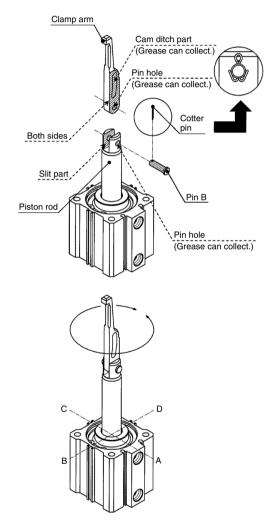


- c. Mounting of guide pin assembly
 - 1) Put into the state to draw out the piston rod, confirm the body installation side and the clamp arm fingernail position, and insert the body.

Fasten, in order, the spring washer (4 pcs.) and the hexagon socket head cap screw (4 pcs.) from the head side of the base cylinder.

Tightening torque: 4 to 6 (N·m)

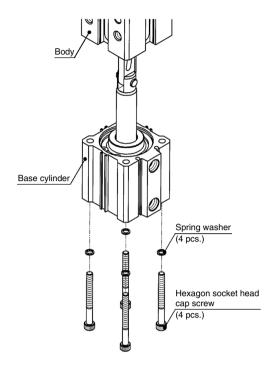

2) Install the cover (4 pcs.) on the body. In that case, please note the direction of insertion.

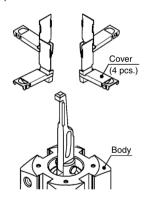

3) After cleaning the adhesive from the hexagon head bolts (4 pcs.) and the body with alcohol etc., apply the tightening adhesive to the screw holes of the body (SMC recommended adhesive: Loctite Corp. 262 [Red]) in order not to loose. Spread lithium system grease on the pin hole part of pin A and the guide tube.

Grease application amount (standard)

Pin A	≈ 0.05 g
Guide tube pin hole part	≈ 0.10 g





Install the spatter cover (The direction is noted) in the clamp arm.

In that case, install it so that the pin hole of the spatter cover and the cam groove of the clamp arm are visible.

Insert the guide tube in the body.


In that case, install it so the guide tube pin hole is on the right side of the clamp arm (detail chart).

Insert pin A from the guide tube side hole through the spatter cover and the clamp arm (Refer to detail chat 2).

Install it with the hexagon head bolt (4 pcs.) after inserting pin A. Tightening torque: 1.5 to 1.8 (N·m).

Please confirm whether the adhesive has overflowed after concluding the hexagon head bolt (4 pcs.).

Wipe an extra adhesive off when overflowing.

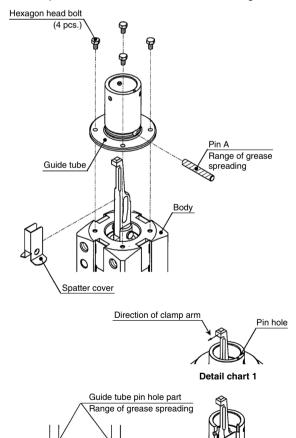

 Insert the ring in the guide tube and install it with a hexagon socket set screw (with the adhesive [Green]).


Align the screw hole position of the ring to the same direction of the clamp arm claw and tighten. (Refer to the figure below.)

Tightening torque: 4.86 to 5.94 (N·m)

However, when the adhesive color of the hexagon socket set screw is "red", or the "green" adhesive is stripped off from repeated replacements, completely remove the remaining adhesive from the thread of the hexagon socket set screw and the screw hole of the guide tube with alcohol. Then apply tightening adhesive (SMC recommendation: Loctite Corp. 242 [Blue]) to the hexagon socket set screw (3 pcs.).

Please confirm whether the adhesive has overflowed after it concludes it.

Wipe an extra adhesive off when overflowing.

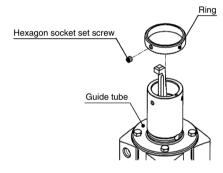

5) Insert the replacement parallel pin in the pin hole of the replacement guide assembly (when equipped with a shim, secure with adhesive on the parallel pin and the guide pin assembly), line up with the pin hole on the guide tube, insert, and tighten with the hexagon socket set screw (3 pcs.: with the adhesive [Green]).


Tightening torque: 4.86 to 5.94 (N·m)

However, when the adhesive color of the hexagon socket set screw (3 pcs.) is "red", or the "green" adhesive is stripped off from repeated replacements, completely remove the remaining adhesive from the thread of the hexagon socket set screw and the screw hole of the guide tube with alcohol. Then apply tightening adhesive (SMC recommendation: Loctite Corp. 242 [Blue]) to the hexagon socket set screw (3 pcs.).

Please confirm whether the adhesive has over flowed after it concludes it.

Wipe an extra adhesive off when overflowing.

For the with shim type, insert the shim between the guide pin assembly and the guide tube. Install the order of shim referring to the following. Please confirm shim does not dash out from the guide tube outer after assemble.

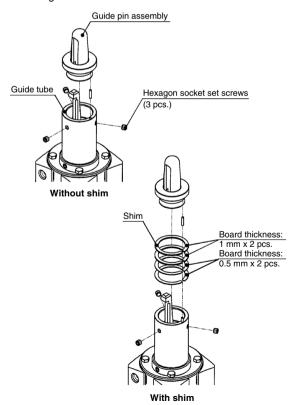

3. Replacement of Seal

(Only for the CKQG/P series because disassemble of CLKQG/P is unacceptable.)

- 3-1. Disassembly of base cylinder
 - a. Cleaning of appearance

 
Wipe off the dirt of appearance to prevent intrusion of dust and foreign materials during disas-

Intensively, pay attention to surface of piston rod and collar.

b. Removal of retaining ring

Use adequate pliers (tool for installing a basic internal ring).


And pay attention not to cause the retaining ring to pop out and damage the human body and peripheral equipments.



c. Disassembly

Take off the piston rod with collar assembly by pulling out the pin inserted into the hole on the end of piston rod and then remove the collar assembly from the piston rod assembly.

At the time, pay attention not to give any flaw on inner face of the tube and bearing of the collar assembly.

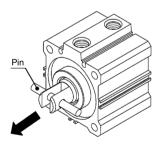


3-2. Removal of seal

a. Removal of rod seal


Remove by watchmakers screw driver inserted from the front of collar assembly.

Do not give any flaw on the groove of the collar assembly packing.

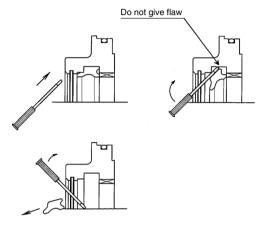

b. Removal of piston seal

As the piston seal groove is deep, remove the seal using a gap made by squeezing it, not using a precision driver.

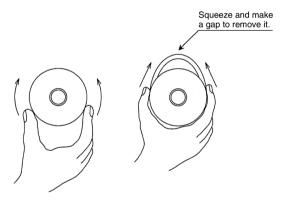

c. Removal of tube gasket

Push the packing gasket partially to make it come off and pull it out manually.

Squeeze the gasket and make a gap to remove it. (Refer to the above figure.)


3-3. Application of grease

a. Rod seal and piston seal

There is thinly no irregularity and lithium system grease is spread on all surroundings of rod seal and piston seal for the exchange.

Grease application amount (standard)

Rod seal	≈ 0.10 g
Piston seal	≈ 0.30 g

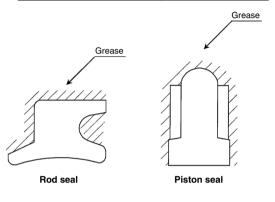

b. Tube gasket

There is thinly no irregularity and lithium system grease is spread on the whole of the tube gasket for the exchange.

Grease application amount (standard)


Tube gasket	≈ 0.15 g

c. Each components of cylinder

There is thinly no irregularity and lithium system grease is spread on a specified part of piston rod assembly and cylinder tube assembly.

Grease application amount (standard)

	· ,	
Sliding part and taper of	L type	≈ 0.20 g
piston rod	H type	≈ 0.30 g
Sliding part of cylinder tube		≈ 0.40 g

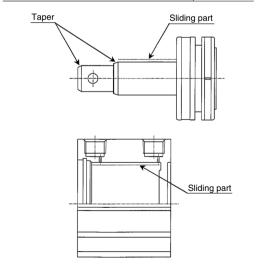

3-4. Mounting of seal

a. Mounting of rod seal

Mount the seal with attention to direction.

After installation, apply lithium type grease evenly onto the rod seal and bearing.

Grease application amount (standard)

Rod seal and bearing	≈ 0.25 g
Grease	


b. Mounting of piston seal

Mount the piston seal without twist.

Spread it to rub lithium system grease into between piston seal outer part and the ditch after it installs it.

Grease application amount (standard)


• • • • • • • • • • • • • • • • • • • •	•	•	
Piston packing outer par	t and ditch	≈ 0.70 g	

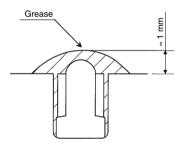

c. Mounting of tube gasket
Pay attention not to make the gasket come off.


3-5. Reassembly of cylinder

a. Insertion of piston rod assembly
 Insert it politely slowly so as not to damage rod seal in corner part cylinder tube assembly.

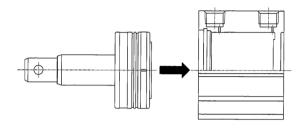

b. Insertion of color assembly

Damage neither rod packing nor the tube gasket in corner part piston rod assembly and cylinder tube assembly. Insert it politely slowly.

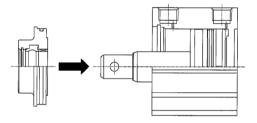


c. Mounting of retaining ring

Use adequate pliers (tool for installing a basic internal ring).

Mount the retaining ring with attention to direction.

And pay attention not to cause the retaining ring to pop out and damage the human body and peripheral equipments.

After mounting, confirm the retaining ring is secured firmly by the mating hole.

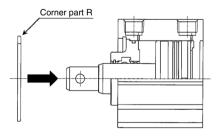

d. Check of reassembly condition

Confirm there is no air leakage from seal etc. and the cylinder can be moved smoothly at min. operating pressure.

1. Disassembly and Assembly of the cylinder

Disassemble and assemble the cylinder in a clean area. Perform on a clean cloth.

For disassembling, hold the flats of the tube cover gently in a vice and hold the flats of the rod cover with a spanner or monkey wrench to loosen and remove the rod cover. When reassembling, tighten 2 degrees more than the original position before disassembling.

2. Removal of the Seal

2-1. Rod seal

Tool: Watchmakers screw driver, etc.

Insert a precision screwdriver from the front side of the cover as shown in Figure 1.

At this time, exercise care not to damage the packing groove of the cover.

2-2. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 2)

2-3. Tube gasket

Remove the tube gasket with the watchmakers screw driver or the like.

3. Application of Grease

3-1. Rod seal

Thinly apply grease to the periphery of a new seal before replacement. Grease will help tight fitting to the cover.

Fill the seal groove with grease for smooth movement. (Fig. 3)

3-2. Piston seal

Apply grease thinly and evenly to the external and internal peripheries of the piston packing to ensure easy fitting to the piston.

3-3. Tube gasket

Thinly apply grease to the tube gasket. Grease will help prevention of dropping off during fitting the cylinder.

3-4. Cylinder parts

Apply grease to all points of cylinder parts as shown in Figure 4.








 Fig. 4 Grease application points

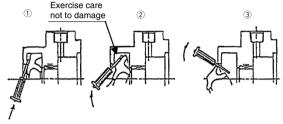


Fig. 1 Removal of rod seal


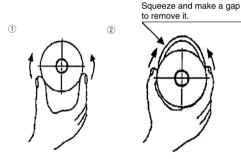


Fig. 2 Removal of piston seal

 



4. Mounting of Seal

4-1. Rod seal

Mount the rod seal in the correct direction. After this, apply grease to the seal and the entire internal periphery of the bushing as shown in Figure 5. For small diameter cylinders, apply grease using the watchmakers screw driver.

4-2. Piston seal

After mounting the seal, apply grease to the inner and outer peripheries of the seal groove while rubbing it by finger as shown in Fig. 6.

4-3. Tube gasket

Mount the tube gasket on the cover.

After completion of installation, check the cylinder for smooth manual movement. Moreover, the procedure will be finished after checking a leakage from the seal.

 


Fig. 5 Rod seal

 


Fig. 6 Piston seal

5. Replacement Procedure of Shock Absorber

5-1. Loosen the hexagon socket head set screw (M3) at the piston rod by approximately one turn, and push down the lever. (See Fig. 7) Tool: Hexagon wrench: Width across flats 1.5mm

Replacement Parts: Shock Absorber

Bore size (mm)	Kit no.	
32	RB1007-X225	
40.50	RB1407-X552	

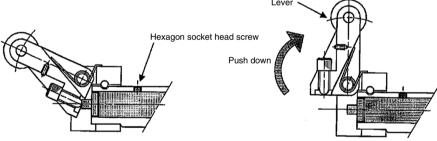


Fig. 7

5-2. While pushing down the lever, remove the shock absorber and replace it with a new shock absorber.

Tighten the hexagon socket set screw (M3 \times 0.5) of the piston rod. Stop tightening around 1/4 turn after the set screw comes into contact with the shock absorber.

If it is tightened too much, it may cause damage to the hexagon socket set screw or a malfunction of the shock absorber.

Tightening torque: 0.29 N⋅m

Tool: Hexagon wrench: Width across flats 1.5mm

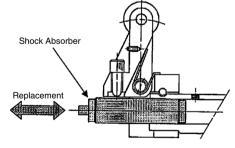


Fig. 8

RSH/RS2H Series Replacement Procedure for Repair Parts 1

1. Replacement Procedure of Seal

The piston seal, cylinder tube gasket, O-ring of the RSH/ RS2H series can be replaced. The scraper of the RSH series can be replaced.

Contact SMC sales if it is necessary to replace parts other than those mentioned above.

Caution

When replacing seals, take care not to hurt your hand or finger on the corners of parts.

2. Disassembly/Reassembly

↑ Caution

Disassemble and assemble the cylinder in a clean area. Perform on a clean cloth

When disassembling the cylinder, loosen the hexagon socket head cap screws (ø20: 2 pcs., ø32 to ø80: 4 pcs.) with a hexagon wrench. Remove the rod cover and piston rod from the cylinder tube as Fig.1

When reassembling, apply locking adhesive on the hexagon socket head cap screws and tighten them.

Hexagon socket head cap screw tightening torque

ø20: 3.0 N⋅m ø32: 5.2 N·m ø50: 12.5 N⋅m ø63: 24.5 N·m ø80: 42.0 N·m

3. Removal of Seal

3-1. Piston seal

Wipe off grease around piston seal first to make removal easier.

Hold piston seal with one hand and push it into groove so that piston seal can be lifted off and pulled out without using a watchmakers screw driver. (Fig. 2)

3-2. Tube gasket


Remove the tube gasket with the watchmakers screw driver or the like.


3-3. O-ring

Remove the tube gasket with the watchmakers screw driver or the like.

3-4. Scraper (RSH series only)

Remove the scraper by inserting a watchmakers screw driver or the like. Take care not to damage the seal groove of the cover at this time.

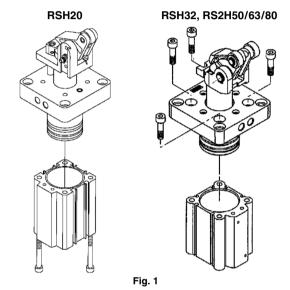

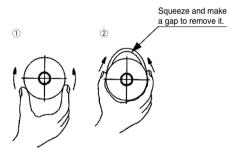



RSH/RS2H Series Replacement Procedure for Repair Parts 2

4. Grease Application

∧ Caution

Use our recommended grease. Grease pack no.: GR-S-010 (10 g), GR-S-020 (20 g)

- 4-1. Piston seal (RSH, RS2H: No.37)
 Lightly and evenly apply grease to the inner and outer circumferences for easier mounting on the piston.
- 4-2. Tube gasket (RSH: No.40, RS2H: No.39)
 Lightly apply grease. This prevents its drop when assembling the cylinder.
- 4-3. O-ring (RSH: No.41, RS2H: No.40) Lightly apply grease. This prevents its drop when assembling the cylinder.
- 4-4. Scraper (RSH: No.39) Apply a little grease to the outer circumference of the new seal for replacement. This improves mounting and adhesion of the seal to the cover.
- 4-5. Cylinder component parts Apply grease to each component parts of the cylinder in Figure 3.

5. Mounting of Seal

5-1. Piston seal

After mounting the seal, apply grease to the inner and outer peripheries of the seal groove while rubbing it by finger as shown in Fig. 4.

5-2. Tube gasket

Mounted to the cover. (For the RSH series, tube gasket is mounted to the bottom plate, too.)

5-3. O-ring

 
Apply O-ring to the cover.

5-4. Scraper


Mount the scraper, ensuring the correct orientation. Apply grease to the inner circumference of packing using something, such as a precision screwdriver.


⚠ Caution

Confirm that there is no problem with operation and air tightness after assembly.



RS2H50/63/80

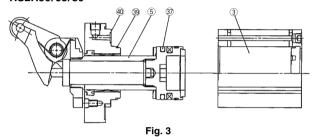

 

Hexagon socket

head cap screw

Stopper

Shock Absorber

Set screw (M4)

RSH/RS2H Series Replacement Procedure for Repair Parts 3

6. Replacement Procedure of Shock Absorber

~RSH Series (Fig. 5)~

- 6-1. Loosen two hexagon socket head set screws of the stopper and the shock absorber set screw to remove the stopper from the lever holder.
- 6-2. Push down the lever 90 degrees and loosen the adjusting dial to remove it.
- 6-3. Pull out the shock absorber and replace it with a new shock absorber.
- 6-4. After tightening the adjusting dial, fix the stopper with hexagon socket head cap screws. Before fixing the stopper with hexagon socket head cap screws, apply adhesive to the screws.
- Hexagon socket head cap screw tightening torque: 1.5 N·m 6-5. Fix the shock absorber with a set screw.
- •Set screw tightening torque: 1.5 N·m

~RS2H Series (Fig. 6)~


- 6-1. Loosen the set screw (M4) of the lever holder which fixes the shock absorber. Push down the lever 90 degrees to pull out the shock absorber.
- 6-2. Fix the shock absorber with a set screw.
- Set screw tightening torque: 1.5 N⋅m

Lever Set screw (M4)

Fig. 5

Fig. 6

After replacing the shock absorber, tighten the set screw firmly and apply grease to the shock absorber rod end surface (Fig.7).

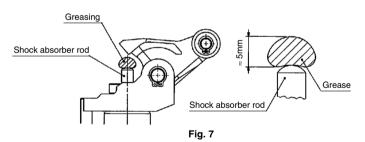



Pressure Control Equipment

Air


MIW/MIS Series Replacement Procedure for Fingers/Seals 1


1. Replacement Procedure of Finger


- 1-1. Remove the hexagon socket head cap screws.
- 1-2. Remove the cover.
- 1-3. Replace the finger.
 - a. Apply the specified grease to the finger, body, cover and T groove part of the finger.
 - b. Insert the piston in the T groove so that it will be hooked there.
- 1-4. Fix the cover and tighten the hexagon socket head cap screws.

Bore size	Hexagon socket head cap screw	Hexagon width across flats	Tightening torque (N·m)
8	M2 x 6	1.5	0.24
12	M2.5 x 6	2	0.36
20	M4 x 10	3	1.5
25	M5 x 14	4	3.0
32	M6 x 15	5	5.2

 Note) For assembly, apply Henkel Japan Loctite No.243 or equivalent adhesive and tighten with the specified tightening torque. Please consult SMC if you feel replacement is difficult.

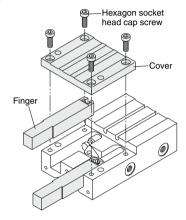

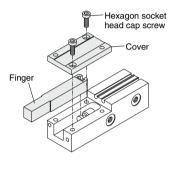





Finger and position connection

2. Replacement Procedure of Seal

- 2-1. Remove the cover and the finger. (Refer to Replacement Procedure of Finger)
- 2-2. Loosen the hexagon socket set screws. (Refer to the table of hexagon socket set screw size).
 - For MIS, hexagon socket set screw is not included except for the stroke adjusting type.
- 2-3. Remove the retaining ring with spring pliers to remove the cap.
 - * If there are any questions for Ø8, please consult SMC.


Bore size	Hexagon socket set screw	Hexagon width across flats	Tightening torque (N·m)
8	M2 x 6	0.9	0.176
12	M2 x 6	0.9	0.176
20	M3 x 8	1.5	0.63
25	M4 x 8	2	1.5
32	M4 x 8	2	1.5

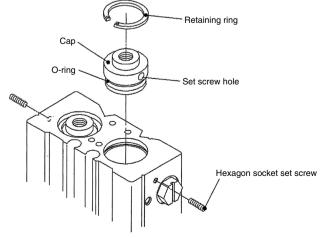

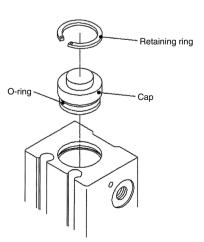

MIW/MIS Series Replacement Procedure for Fingers/Seals 2

2-4. Take out the piston assembly and replace the seal, to which the specified grease is applied.

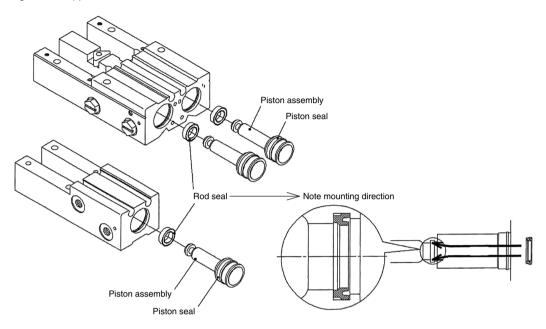

2-5. Apply the specified grease lightly to the sliding interface between the outer periphery and the body of the piston, and assemble them in the reversed order.

3. Scraper Option


∧ Caution


1-1. Please observe the specified torque limits when mounting a scraper.

A tightening torque above the specified limits can cause a damage, while tightening torque below the specified limits can cause a dislocation or drop off.

Tightening torque


Model	Bolt (N·m)	
MIW8	0.176	
MIS8	0.176	
MIW12	0.36	
MIS12	0.36	
MIW20	0.63	
MIS20	0.63	
MIW25	0.63	
MIS25	0.63	
MIW32	1.5	
MIS32	1.5	

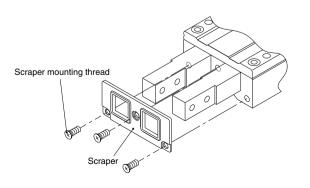

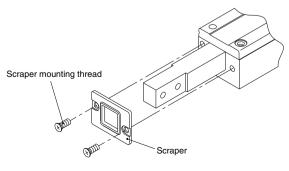

CH | **KD** Series Replacement Procedure for Seals

1. Exploded View

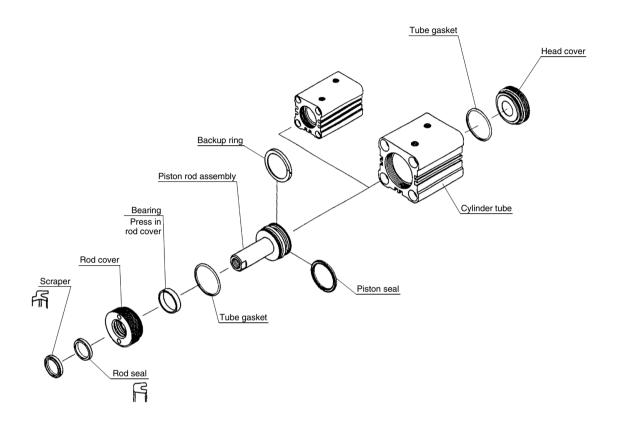

∧ Caution

- The piston rod assembly can not be disassembled.
 The bearing can not be removed because it is pressed into the rod cover.
- Replace the seal with new one to disassemble and repair the cylinder.
- If fuel oil such as gasoline and kerosene or solvent are used to wash parts touched to seal, wipe off or dry up them completely before assembling seal.
- Apply hydraulic fluid (Oil used for the cylinder) or grease to the seal and the housing to be able to move smoothly before assembling.
- 5. Assemble the seal after confirming the sealing direc-
- If a driver is used for mounting, round the point of the driver not to make a flaw on the seal and the housing.

For handling the seal, take care to avoid excessive extension and deformation.


Cover tightening torque

Dover lighterning torque		
Bore size (mm)	Tightening torque (N·m)	
20	23.5 ± 2.4	
25	35.3 ± 3.5	
32	68.6 ± 6.8	
40	117.7 ± 11.7	
50	215.7 ± 21.6	
63	372.6 ± 37.3	
80	804.1 ± 80.4	
100	1470 ± 147	

^{*} Remount the cover with the tightening torques listed above.



1. Exploded View

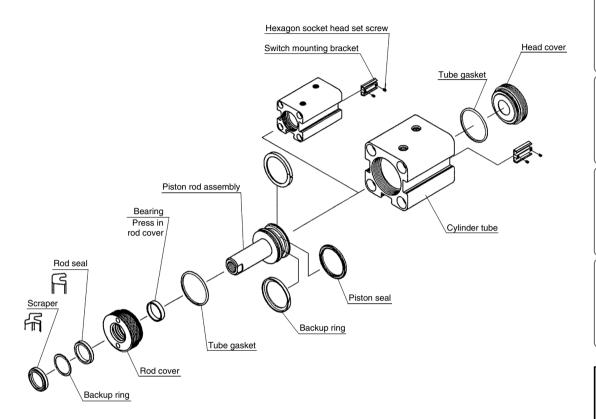

SMC

⚠ Caution

- The piston rod assembly can not be disassembled.
 The bearing can not be removed because it is pressed into the rod cover.
- 2. Replace the seal with new one to disassemble and repair the cylinder.
- 3. If fuel oil such as gasoline and kerosene or solvent are used to wash parts touched to seal, wipe off or dry up them completely before assembling seal.
- Apply hydraulic fluid (Oil used for the cylinder) or grease to the seal and the housing to be able to move smoothly before assembling.
- 5. Assemble the seal after confirming the sealing direction.
- If a driver is used for mounting, round the point of the driver not to make a flaw on the seal and the housing.


For handling the seal, take care to avoid excessive extension and deformation.

Cover tightening torque

Cover lighterning torque	
Bore size (mm)	Tightening torque (N·m)
20	23.5 ± 2.4
25	35.3 ± 3.5
32	68.6 ± 6.8
40	117.7 ± 11.7
50	215.7 ± 21.6
63	372.6 ± 37.3
80	804.1 ± 80.4
100	1470 ± 147

^{*} Remount the cover with the tightening torques listed above.

1. Exploded View

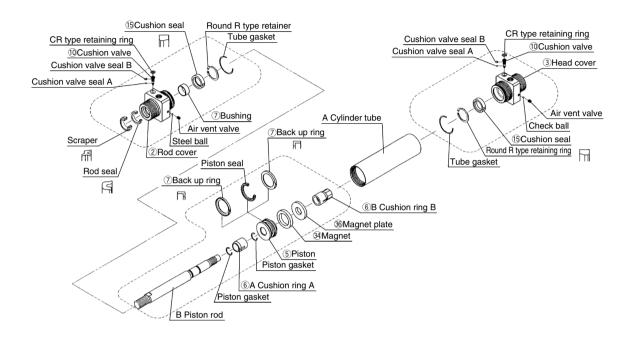


- 1. Rod cover and head cover are screw-in type.
- Piston rod assembly cannot be disassembled. Bushing cannot be taken out as it is pressed into rod cover.
- Replace seal at the time of cylinder disassembly and repair.
- 4. When fuel oil such as gasoline and kerosene or solvent is used to wash the parts that contact seal, thoroughly wipe or dry them off before placing.
- 5. Apply hydraulic oil (to be used for the cylinder) or grease to seal and housing for smooth sliding.

- Assemble the seal after confirming the sealing direction
- 7. Blunt the tip of a driver not to flaw seal and housing.
- Carefully handle the seal to avoid excessive elongation and deformation.
- Please note that the positions of the rod and head covers might move from their original positions upon remounting.

CHSD/CHSG Series Replacement Procedure for Seals

1. Exploded View

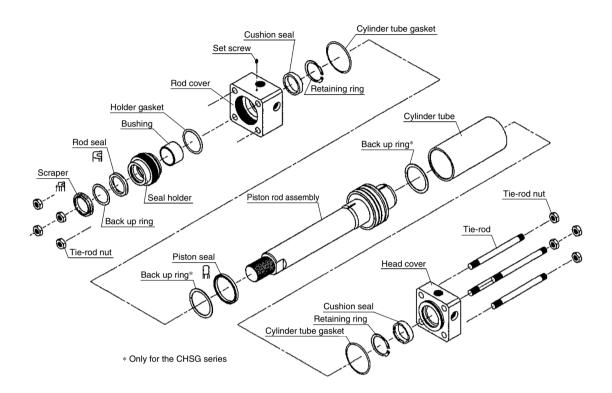

∧ Caution

- Piston rod assembly cannot be disassembled. Bushing cannot be taken out as it is pressed into seal holder.
- Replace seal at the time of cylinder disassembly and repair.
- 3. When fuel oil such as gasoline and kerosene or solvent is used to wash the parts that contact seal, thoroughly wipe or dry them off before placing.
- Apply hydraulic oil (to be used for the cylinder) or grease to seal and housing for smooth sliding.
- 5. Verify sealing direction and them place seal.
- 6. Blunt the tip of a driver not to flaw seal and housing when it is used for mounting.


7. Carefully handle the seal to avoid excessive elongation and deformation.

Tie-rod nut tightening torque

Bore size (mm)	Tightening torque (N⋅m)	
Bore Size (IIIII)	CHSD	CHSG
32		10.8 ± 1.08
40	10.8 ± 1.08	24.5 ± 2.45
50	24.5 ± 2.45	24.5 ± 2.45
63	24.5 ± 2.45	42.2 ± 4.22
80	53.9 ± 5.39	137.3 ± 13.73
100	107.8 ± 10.78	137.3 ± 13.73

^{*} Tighten tie-rod nuts diagonally and equally with torque shown in the table above.

1. Disassembling Drawing

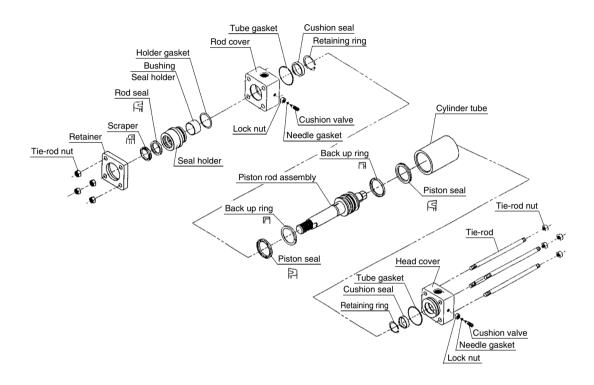

∧ Caution

- Piston rod assembly cannot be disassembled. Bearing cannot be taken out as it is pressed into rod cover.
- Replace seal at the time of cylinder disassembly and repair.
- When fuel oil such as gasoline and kerosine or solvent is used to wash the parts that contact seal, thoroughly wipe or dry them off before setting.
- Apply hydraulic oil (to be used for the cylinder) or grease to seal and housing for smooth sliding.
- 5. Verify sealing direction and then set seal.
- 6. Blunt the tip of a driver not to scar seal and housing when it is used for mounting.

Carefully handle the seal to avoid excessive elongation and deformation.

Tie-rod nut tightening torque

Bore size	Tightening torque (N⋅m)		
(mm)	CH2E	CH2F	CH2G/H
32	11.8 ± 1.1	14.7 ± 1.4	24.5 ± 2.4
40	11.8 ± 1.1	19.6 ± 1.9	24.5 ± 2.4
50	14.7 ± 1.4	24.5 ± 2.4	24.5 ± 2.4
63	24.5 ± 2.4	39.2 ± 3.9	42.1 ± 4.2
80	44.1 ± 4.4	68.6 ± 6.8	107.8 ± 10.7
100	94 ± 4.9	73.5 ± 7.3	147.1 ± 14.7

^{*} Tighten tie-rod nuts diagonally and equally with torque shown in the table above.


Modular F.R.L./Pressure Control Equipment Replacement Procedure

AC-A	F.R.L. Units	p. 431
AF10-A to AF60-A	Air Filter	p. 434
AFM20-A to AFM40-A	Mist Separator	p. 445
AFD20-A to AFD40-A	Micro Mist Separator	p. 447
AR10-A to AR40-A	Regulator	p. 449
AR20-B to AR60-B	Regulator	p. 454
AR20K-B to AR60K-B	Regulator with Backflow Function	p. 456
AL10-A to AL60-A	Lubricator	p. 461
AW10-A to AW40-A	Filter Regulator	p. 469
AW20-B to AW60-B	Filter Regulator	p. 485
AW20K-B to AW60K-B	Filter Regulator with Backflow Function	p. 488
AWM20 to AWM40	Mist Separator Regulator	p. 497
AWD20 to AWD40	Micro Mist Separator Regulator	p. 503
ARG	Regulator with Built-in Pressure Gauge	p. 509
AWG	Filter Regulator with Built-in Pressure Gauge	p. 515
AR425 to 925	Pilot Operated Regulator	p. 522
AMR3000 to 6000	MR Unit (Regulator with Mist Separator)	p. 526
ARM5	Compact Manifold Regulator	p. 527
ARM10/11	Compact Manifold Regulator	p. 531




AC-A Series Exploded View 1

1) F.R.L. units

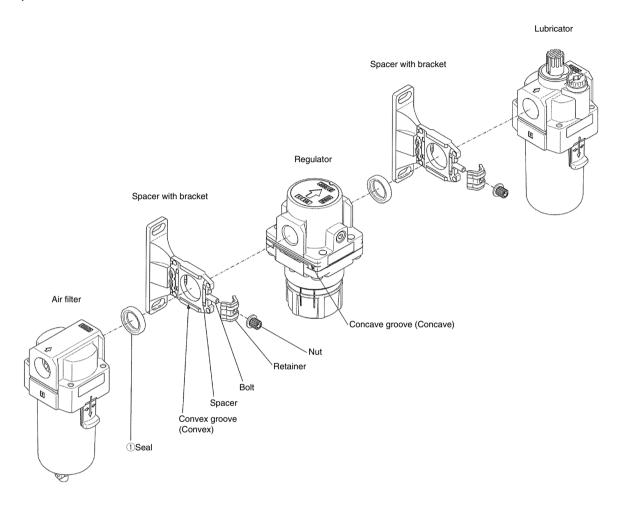


AC-A Series Exploded View 2

2) Spacer with bracket

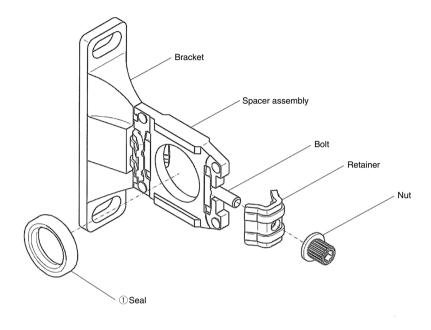

3) Spacer

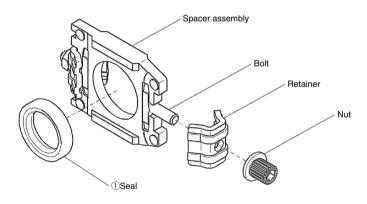

AC-A Series Replacement Procedure


⚠ Warning

- Before replacement, ensure that the regulator is not pressurized.
- · Rotate the knob of the regulator and filter regulator to zero.
- · Replace while referring to the "Exploded View."
- · After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Air Combination

Process	Procedure	Tools	Check item
Disassembly	1) Remove the pipes connected to the product as required.	_	_
	Remove the nut and retainer. Insert the hexagon wrench into the hexagon hole on the nut, and turn the	Hexagon wrench Nominal:	
	wrench to the left to remove the nut and retainer. At this time, hold the product by hand to prevent it from falling.	AC10-A AC20-B	_
		AC25, 30-B 4	_
		AC40(-06)-B 5	_
		AC50, 55, 60-B 6	_
	3) Remove the product.	_	_
Assembly	Mount the spacer onto the product. Engage the convex groove on the spacer with the concave groove on the product. At this time, be careful not to confuse the IN and OUT of the product.	_	_
	5) While holding the product by hand, let the bolt on the spacer pass through the retainer, and then turn the nut to the right to tighten it temporarily.	_	_
	6) Tighten the nut.	Hexagon wrench	
	Insert the hexagon wrench into the hexagon hole on the nut, and turn the	Nominal:	Tightening torque:
	wrench to the right to tighten the nut. Refer to the "Check item" in the right column for the tightening torque.	AC10-A AC20-B	AC10-A AC20-B 0.6 ±0.05 N⋅m
		AC25, 30-B 4	AC25, 30-B 1.5 ±0.05 N·m
		AC40(-06)-B 5	AC40(-06)-B
		AC50, 55, 60-B 6	AC50, 55, 60-B


[Modular connection (assembly) method]

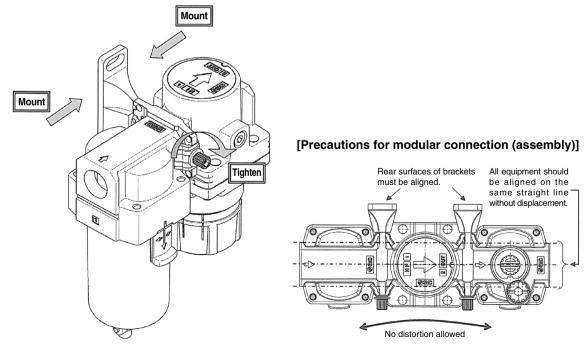


^{*} For details on each product, refer to the corresponding operation manuals.




AF10-A to 60-A Exploded View 1

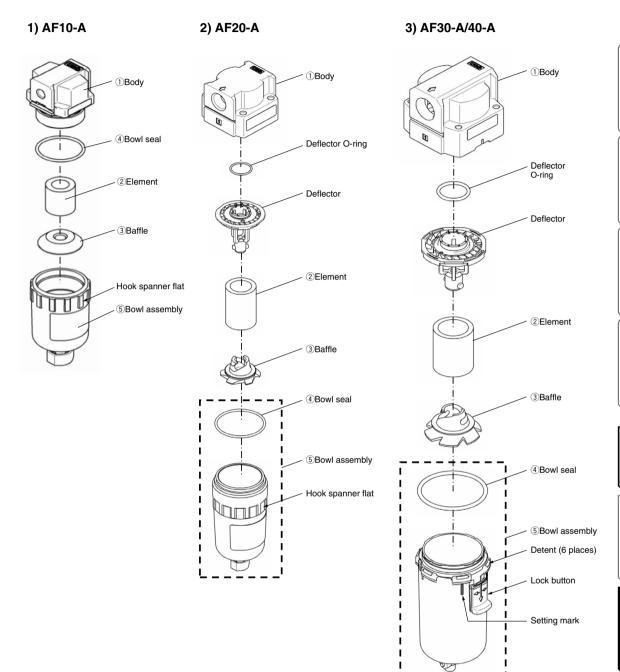

AF50-A/60-A Exploded View 2

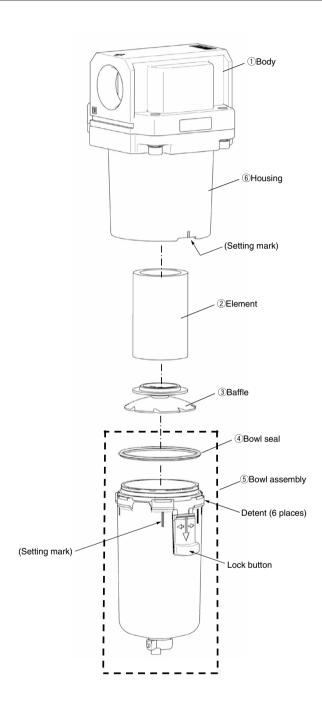

AF20-A to 60-A Bracket Assembly Exploded View 3

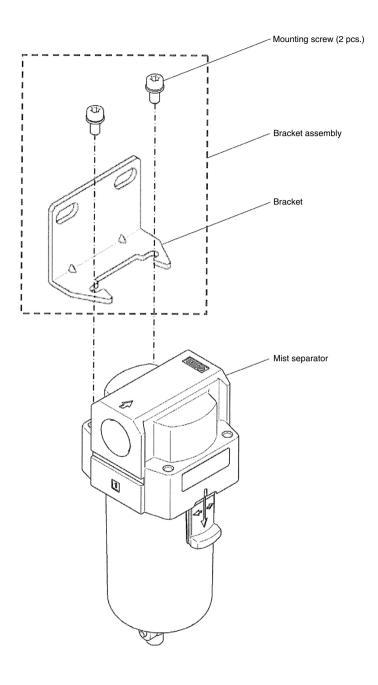

Before replacement, ensure that the regulator is not pressurized.


Replace while referring to the "Exploded View."


After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.


1. Bowl Assembly, Element


Applicable model	AF1	0-A	
Process	Disassembly		
	Turn the bowl assembly in the direction shown in the figure below to remove it from the product. If the bowl assembly has been tightened too much to be removed, use a hook spanner until it can be loosened by hand. (Hook spanner nominal: 25/28)	Turn the baffle by hand in the direction shown in the figure below to remove the element.	
Procedure	Bowl assembly	Element	



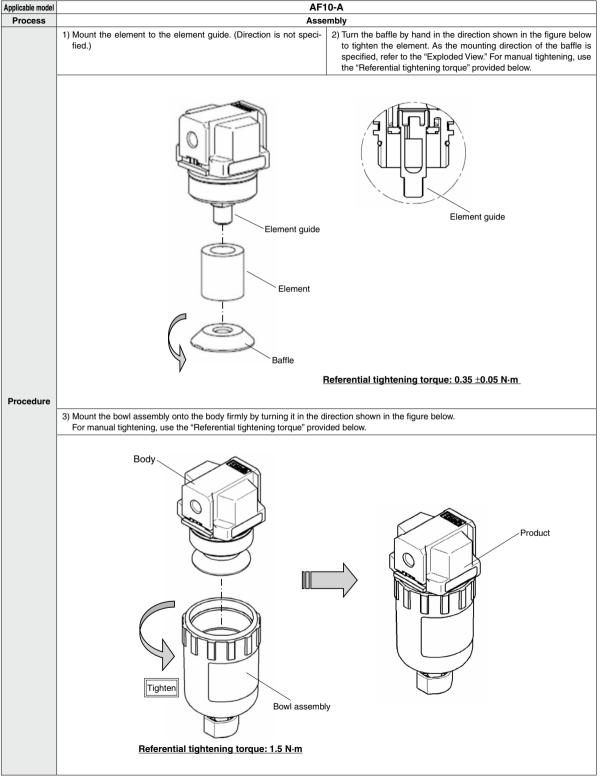


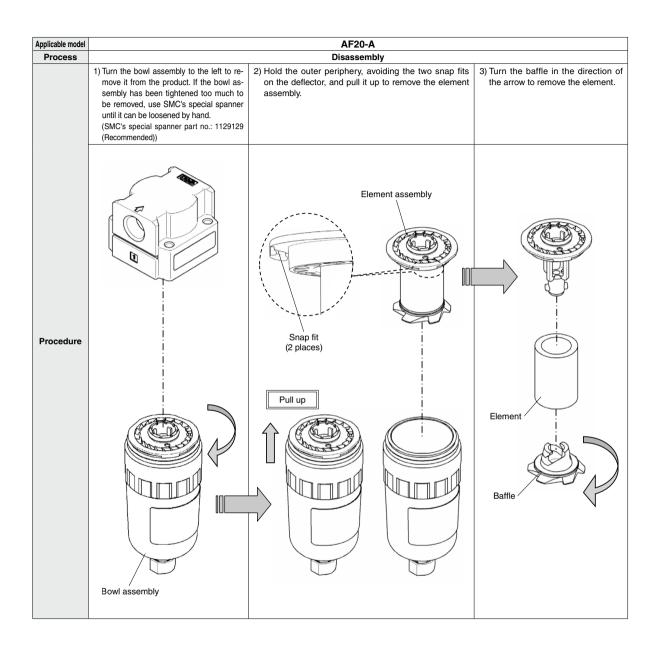

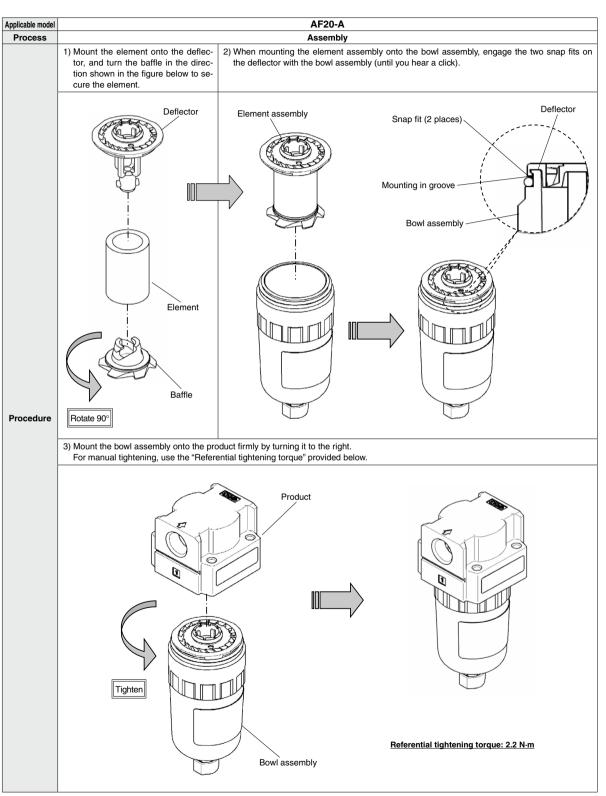


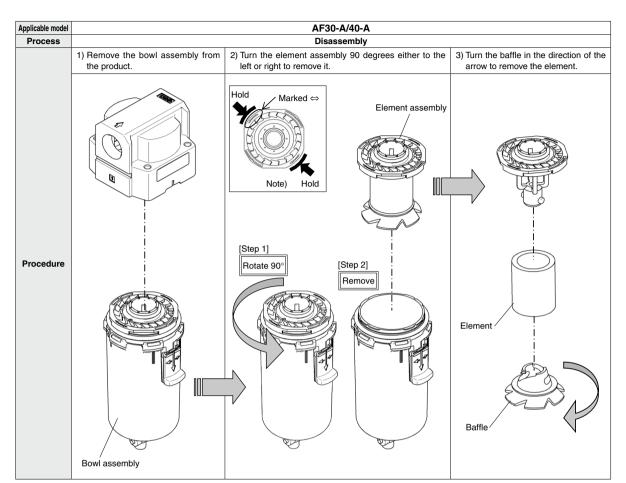


Note) Hold the sections marked \Leftrightarrow on the circular arc, and turn the element assembly.

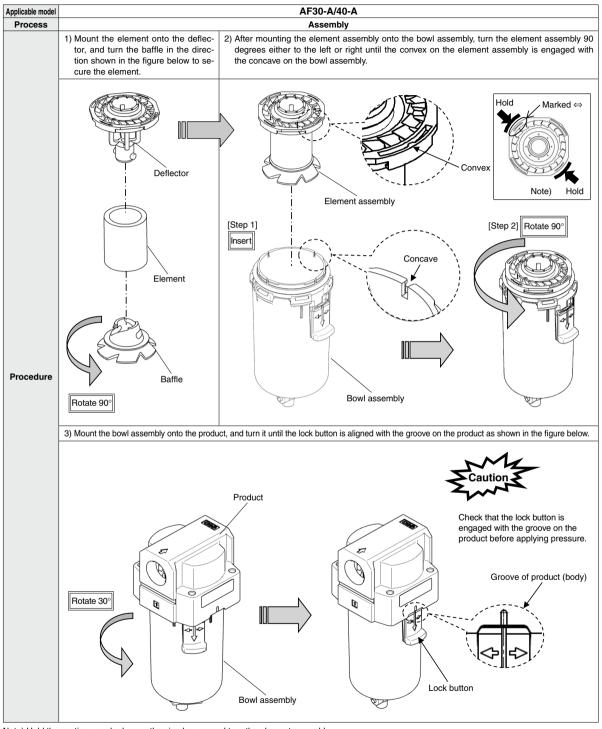


Note) Hold the sections marked \Leftrightarrow on the circular arc, and turn the element assembly.

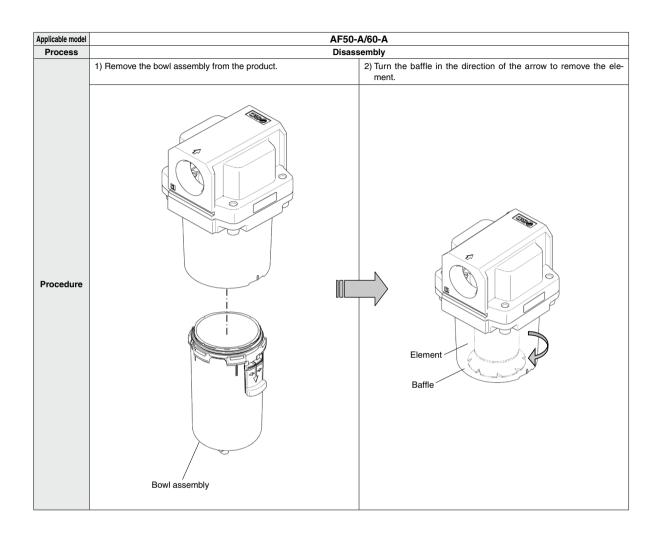

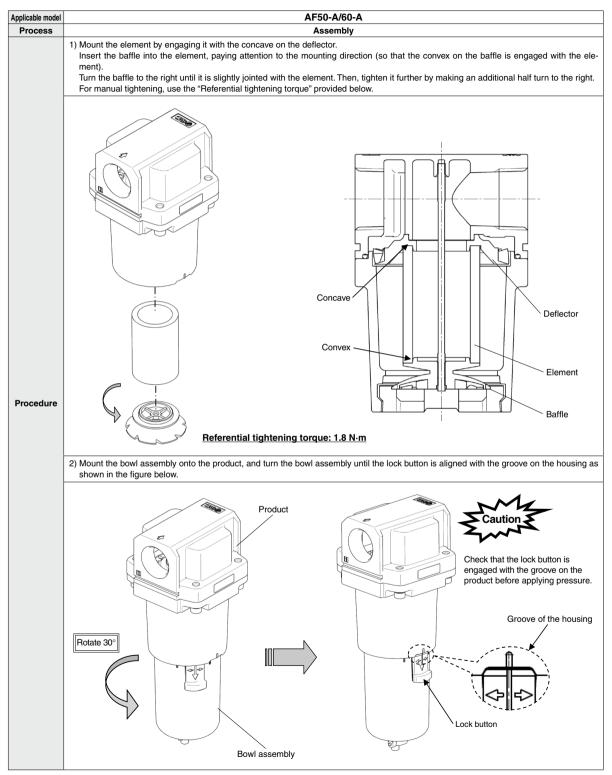


AFM20-A to 40-A Exploded View 1


1) AFM20-A

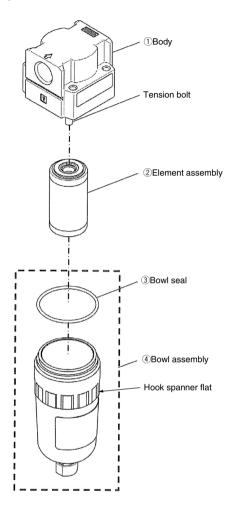

2) AFM30-A/40-A

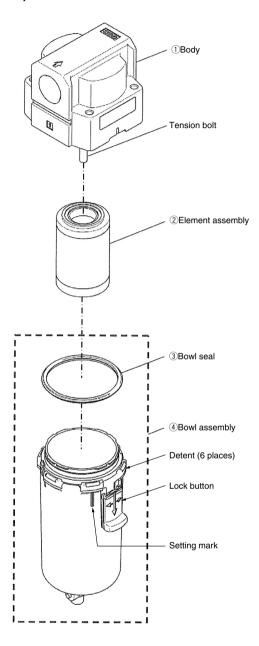


AFM20-A to 40-A Bracket Assembly Exploded View 2

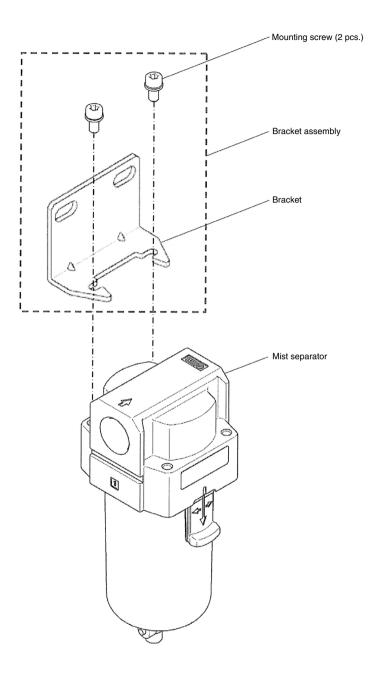


AFD20-A to 40-A Exploded View 1


1) AFD20-A

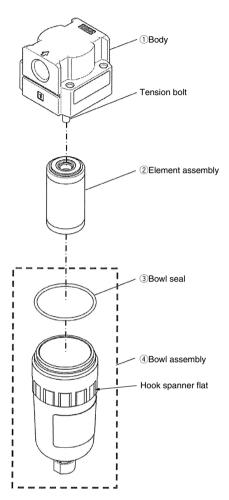


2) AFD30-A/40-A

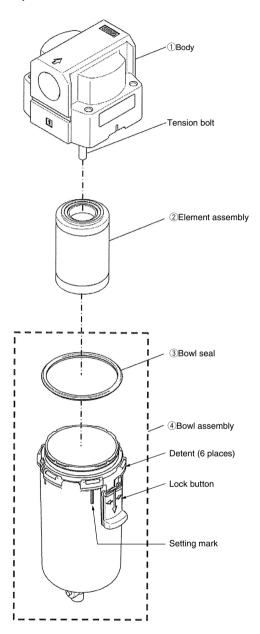


AFD20-A to 40-A Bracket Assembly Exploded View 2

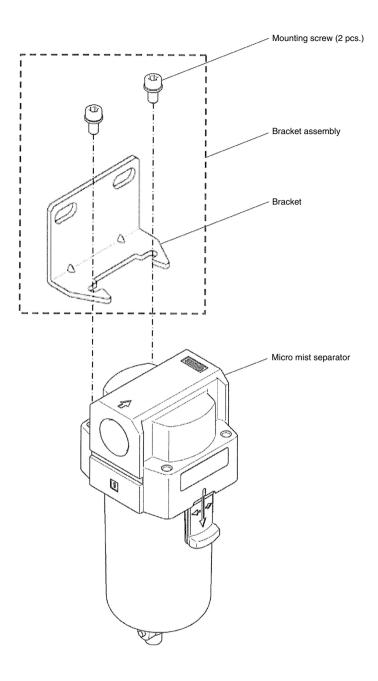


AR10-A Exploded View 1

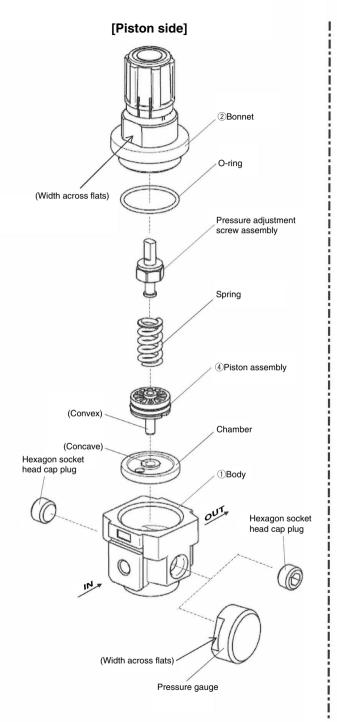




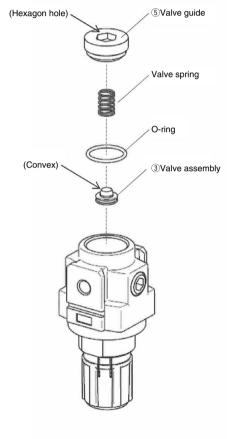

AR20-A/25-A/30-A/40-A Exploded View 2

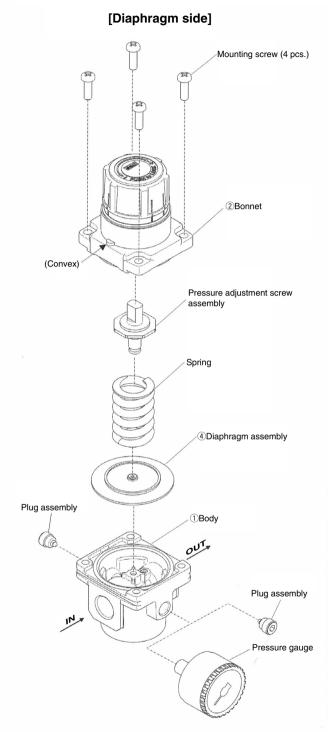

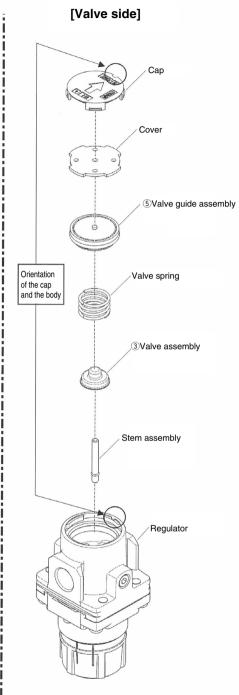


Actuators

Modular F.R.L.
ure Control Equipment

Air Preparation Equipment

Bracket Assembly,

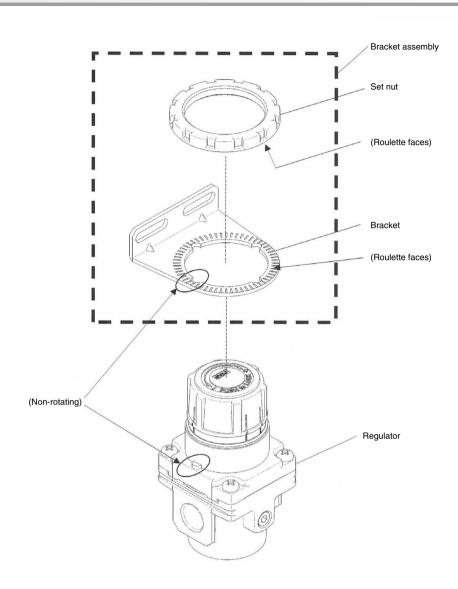

AR10-A to 40-A Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Diaphragm Assembly (Piston Assembly)

		- ,		
Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Hold the bonnet with a spanner on the width across flat, and rotate counterclockwise to remove the bonnet assembly.	Spanner Nominal: 16	
		Remove the piston assembly from the bonnet. Pull out the piston assembly with the knob facing downwards. Otherwise, the pressure adjustment screw assembly or spring may fall out.	_	
AR10-A	Assembly	Mount the piston assembly to the bonnet assembly. Insert the piston assembly into the bonnet so that the piston assembly convex faces the body. If the pressure adjustment screw or spring is not mounted on the bonnet, mount it before mounting the piston assembly.	_	
		4) Ensure the chamber is mounted on the body. If the chamber is removed during disassembly, mount the chamber ensuring that it's facing the right direction. The convex of the chamber should face the bonnet side.	_	Presence of the chamber Mounting direction
		5) Mount the bonnet assembly to the body. Hold the bonnet assembly with a spanner on the spanner flat, and rotate the body clockwise to secure it. Refer to the "Check item" for the tightening torque.	Spanner Nominal: 16	Tightening torque: 1.8 ± 0.3 N⋅m
AR20-A	Disassembly	1) Removing bonnet Remove all 4 screws, and then remove the bonnet. Carefully store the bonnet parts. <bonnet parts=""> Pressure adjustment screw assembly Spring Diaphragm assembly</bonnet>	Phillips head screwdriver	
AR25-A AR30-A AR40-A	Assembly	Mount the disassembled parts onto the body. Perform mounting while referring to the "Exploded View" (page 450).	_	Direction of the diaphragm assembly and the pressure adjustment screw assembly
		Mounting bonnet Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AR20-A 0.62 ± 0.3 N·m AR30-A 3.5 ± 0.3 N·m AR40-A 2.6 ± 0.3 N·m


AR10-A to 40-A Series Replacement Procedure 2

2. Valve Guide (Assembly), Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the valve guide. Insert the hexagon wrench key into the valve guide hexagon socket, and rotate counterclockwise to remove it.	Hexagon wrench key Nominal: 6	_
		2) Remove the valve spring.	_	
		3) Remove the valve.	_	_
	Assembly	Mount the valve. Set the valve so that the convex surface faces the valve guide.	_	The concave surface is the valve guide side (top).
AR10-A		 Mount the valve spring. Insert the valve so that the inner circumference of the valve spring fits in the convex surface of the valve. 	_	-
		Ensure the O-ring is mounted. Ensure the valve guide seal O-ring is mounted. Mount the O-ring if the ring is missing.	_	Presence of the O-ring
		7) Mount the valve guide. Insert the hexagon wrench key into the valve guide hexagon socket, and rotate the spanner clockwise to tighten the guide. Refer to the "Check item" for the tightening torque.	Hexagon wrench key Nominal: 6	Tightening torque: 0.75 ± 0.15 N⋅m
	Disassembly	Remove the cap. Insert the watchmaker's screwdriver into the gap between the body and the cap and dig up the cap.	Watchmaker's screwdriver (-)	_
AR20-A		Remove the cover. Insert the circular pliers into the 2 small holes of the cover, rotate 45 degrees to one side or the other, and then lift.	Circular pliers Nominal: 125	_
AR25-A AR30-A AR40-A		Remove the valve guide assembly. Lift the outer periphery with a watchmaker's screwdriver or similar for removal.	Watchmaker's screwdriver (-)	_
		4) Remove the valve spring.	_	_
		5) Remove the valve assembly.	_	_
	Assembly	Mount the disassembled parts onto the body. Perform mounting while referring to the "Exploded View."	_	· Orientation of the valve · Orientation of the cap




AR20-B to 60-B Exploded View 1

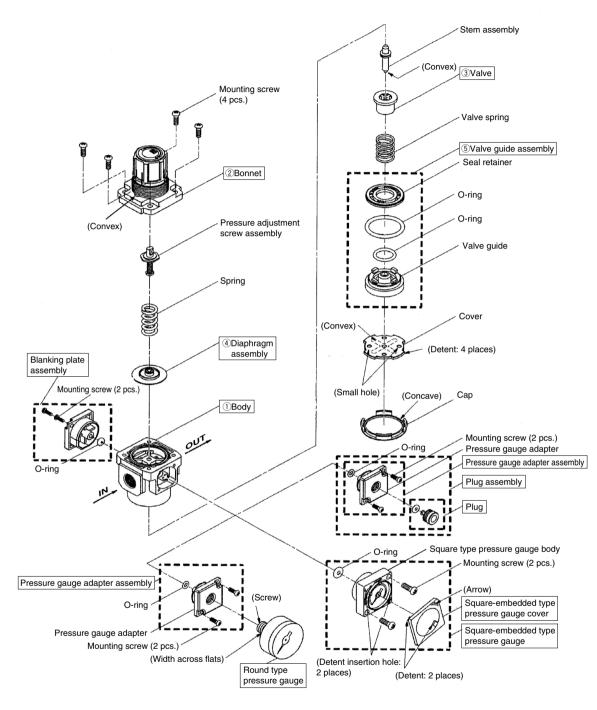


Note) It is possible to mount a square-embedded type pressure gauge, a pressure gauge adapter assembly, or a plug assembly instead of a blanking plate assembly.

AR20-B to 60-B Bracket Assembly, Panel Mount Exploded View 2

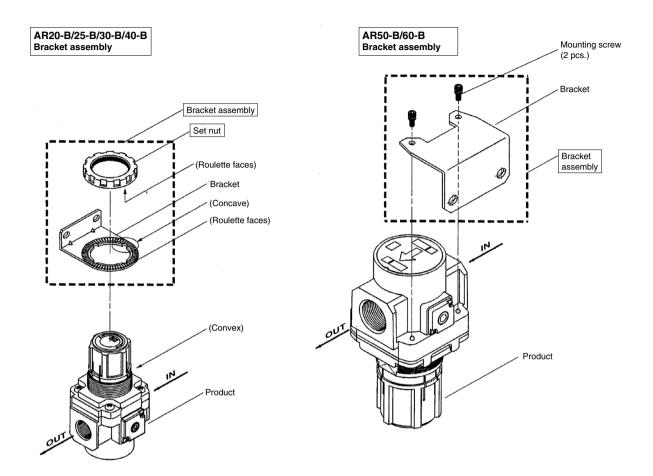



AR20K-B to 60K-B Exploded View 1

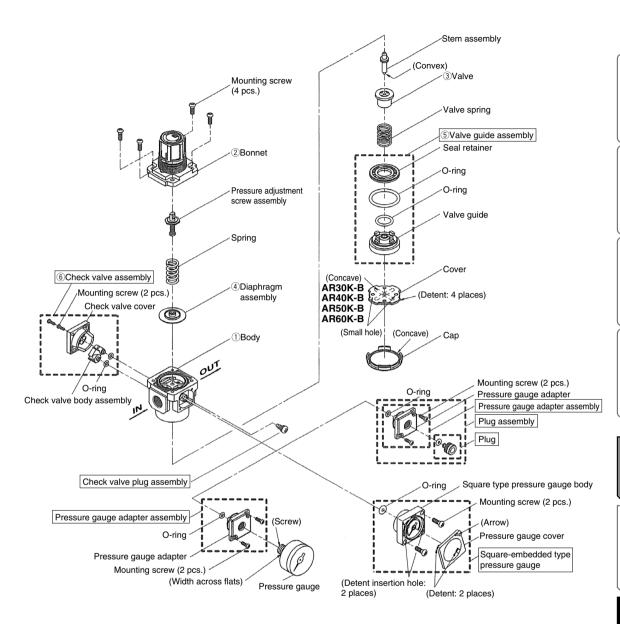

Note) (a) The flow direction can be changed by removing the check valve assembly and replacing it with the square-embedded type pressure gauge, pressure gauge adapter assembly, and plug assembly.

AR20K-B to 60K-B Bracket Assembly, Panel Mount Exploded View 2

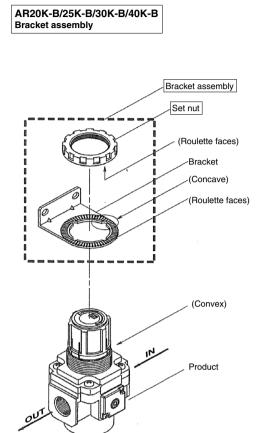

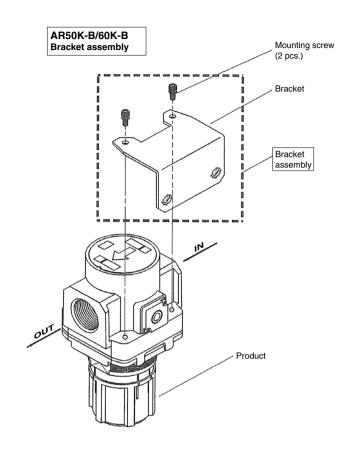

AR20(K)-B to 60(K)-B Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet. Rotate the set screw counterclockwise with a Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
AR20(K)-B		Remove parts in order of the pressure adjustment screw assembly, spring, and the diaphragm assembly. Please note that the diaphragm assembly will be attached to the bonnet if disassembled with the knob facing down.	_	_
AR25(K)-B AR30(K)-B AR40(K)-B AR50(K)-B	Assembly	Mount parts to the body in order of the diaphragm assembly, spring, and pressure adjustment screw.	_	Direction of the diaphragm assembly and the pressure adjustment screw assembly
AR60(K)-B		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AR20(K)-B 2.35 ±0.3 N·m AR25(K)-B 2.35 ±0.3 N·m AR30(K)-B 2.35 ±0.3 N·m AR40(K)-B 3.5 ±0.3 N·m AR50(K)-B 3.5 ±0.3 N·m AR60(K)-B 3.5 ±0.3 N·m

2. Valve Guide (Assembly), Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the cap. Insert the watchmakers screw driver in the gap between the body and the cap and dig up the cap.	Watchmakers screw driver (-)	-
		 Remove the cover. Insert the circular pliers into the 2 small holes of the cover, rotate 45 degrees to one side or the other and lift. 	Circular pliers Nominal: 125	_
		Remove the valve guide assembly. Hold the valve guide with a needle nose pliers, and lift it.	Needle nose pliers	_
		4) Remove the valve spring.	_	_
AR20(K)-B		5) Remove the valve.	_	_
AR25(K)-B AR30(K)-B AR40(K)-B	Assembly	Mount the valve. Mate the stem convex and the valve center hole.	_	Positioning the stem and the valve (centering)
AR50(K)-B AR60(K)-B		7) Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		8) Mount the valve guide assembly and the cover assembly to the body. Align the body groove and the cover clamp, push in the valve guide and cover assembly, insert the circular pliers into the 2 small holes of the cover and rotate 45 degrees to one side or the other to lock into place.	Circular pliers Nominal: 125	_
		9) Mount the cap. Mate the convex of the body cover and the concave of the cap, and push them in to settle. Ensure the end of the body and the cap are almost flat.	_	Orientation of the body and the cap. Body end and the cap are almost flat.

3. Bracket Assembly, Panel Mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Mount the parts to the bracket (panel). Mate the bracket (panel) concave and the bonnet convex to mount the bracket.	_	_
AR20(K)-B AR25(K)-B AR30(K)-B AR40(K)-B		2) Settle the bracket (panel) with set nut. Rotate the set nut clockwise with a hook spanner to settle the parts to the bracket (panel). For the tightening torque, refer to the "Check item" on the right. When mounting the bracket, ensure that the roulette faces of the set nut and the bracket are mated appropriately. When mounting with bracket, set nut tightened manually is adequate for general used.	Hook spanner Nominal: AR20(K)-B 34/38 AR25(K)-B 40/42 AR30(K)-B 52/55 AR40(K)-B 52/55	Tightening torque: AR20(K)-B 2.0 ± 0.2 N·m AR25(K)-B 2.5 ± 0.2 N·m AR30(K)-B 3.5 ± 0.3 N·m AR40(K)-B 4.0 ± 0.4 N·m
AR50(K)-B AR60(K)-B	Assembly (Bracket assembly)	Mount the bracket to the product. Fix them by tightening two mounting screws using a hexagon wrench key.	Hexagon wrench key Nominal: 5	Referential tightening torque: 2.6 N·m

4. Square Embedded Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the pressure gauge cover. Rotate the pressure gauge cover 15 degrees to the arrow mark (counterclockwise) to pull it out.	П	_
		Remove the pressure gauge Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the pressure gauge and two mounting screws.	Phillips head screwdriver	_
AR20(K)-B AR25(K)-B AR30(K)-B	Assembly	Ensure O-ring is mounted to the pressure gauge. Mount O-ring to the pressure gauge if the ring fall off.	_	Presence of O-ring
AR40(K)-B AR50(K)-B AR60(K)-B		Mount the pressure gauge. Rotate two mounting screws clockwise with Phillips head screwdriver to mounting screws temporary. Then settle them with tightening torque in check item.	Phillips head screwdriver	Tightening torque: 0.6 ± 0.05 N⋅m
		5) Mount the pressure gauge cover. Insert the pressure gauge mating two detent of the pressure gauge and holes for them so that the arrow of the pressure gauge cover comes upper right. Rotate the pressure gauge cover 15 degree opposite to the arrow to mount the pressure gauge.	_	_

5. Circular Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
AR20(K)-B AR25(K)-B	Disassembly	Remove the pressure gauge. Hold the pressure gauge with a spanner on the spanner flat. Then, rotate the gauge.	Spanner Nominal: AR20(K)-B AR30(K)-B AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B	_
AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B	Assembly	2) Wind the pressure gauge thread with the sealant tape leaving 1.5 to 2 threads from the end.	_	Wind sealant tape leaving 1.5 to 2 threads
		3) Mount the pressure gauge. Hold the pressure gauge on the spanner flat with a spanner, and rotate it clockwise to mount the circular pressure gauge. Refer to the "Check item" for tightening torque of pressure gauge.	Spanner Nominal: AR20(K)-B AR25(K)-B AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B	Tightening torque: AR20(K)-B



6. Pressure Gauge Adapter, Plug Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the plug. Insert the hexagon wrench key to hexagon socket of the plug. Rotate the plug counterclockwise to remove the plug.	Spanner Nominal: AR20(K)-B AR25(K)-B AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B	_
AR20(K)-B AR25(K)-B		Remove the pressure gauge adapter. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the pressure gauge adapter and two mounting screws.	Phillips head screwdriver	_
AR30(K)-B AR40(K)-B	Assembly	Ensure O-ring is mounted to the pressure gauge adapter. If not, mount O-ring.	_	_
AR50(K)-B AR60(K)-B		Mount pressure gauge adapter. Rotate two screws clockwise by Phillips head screwdriver to fix pressure gauge adapter. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.6 ± 0.05 N⋅m
		Mount plug assembly. Insert hexagon wrench key into hexagon socket on the plug and rotate clockwise to fix the plug. Refer to the "Check item" for tightening torque of two screws.	Spanner Nominal: AR20(K)-B AR25(K)-B AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B	Tightening torque: AR20(K)-B AR25(K)-B AR30(K)-B AR40(K)-B AR50(K)-B AR60(K)-B

7. Blanking Plate Assembly


Applicable model	Process	Procedure	Tools	Check item
AR20-B AR25-B	Disassembly	Remove the blanking plate. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the blanking plate and two mounting screws.	Phillips head screwdriver	_
AR30-B AR40-B AR50-B AR60-B	Assembly	2) Ensure O-ring is mounted to the blanking plate. If not, mount O-ring.	_	_
		Mount blanking plate. Rotate two screws clockwise by Phillips head screwdriver to fix blanking plate. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.6 ± 0.05 N⋅m

8. Check Valve Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove check valve cover. Rotate two screws counterclockwise by Phillips head screw-driver and remove the check valve cover and the screws.	Phillips head screwdriver	_
AR20K-B AR25K-B		Remove the check valve assembly from body. The check valve can be removed by pulling it out by hand. At this time, confirm O-ring is mounted to body side properly so that it wouldn't come out from the body.	_	_
AR30K-B AR40K-B AR50K-B AR60K-B	Assembly	3) Confirm two O-rings is mounted to body side. If not, mount it to the body.	_	_
		4) Insert convexes on check valve into O-ring insert holes on body.	_	Orientation of the check valve body assembly
		 Mount check valve cover. Rotate two screws clockwise by Phillips head screwdriver to fix check valve cover. Refer to the "Check item" for tightening torque of two screws. 	Phillips head screwdriver (Torque driver)	Tightening torque: 0.6 ± 0.05 N-m

AL10-A/20-A Exploded View 1

1) AL10-A

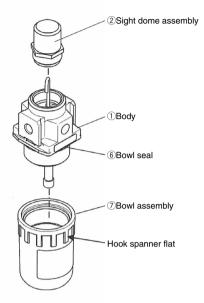


2) AL20-A

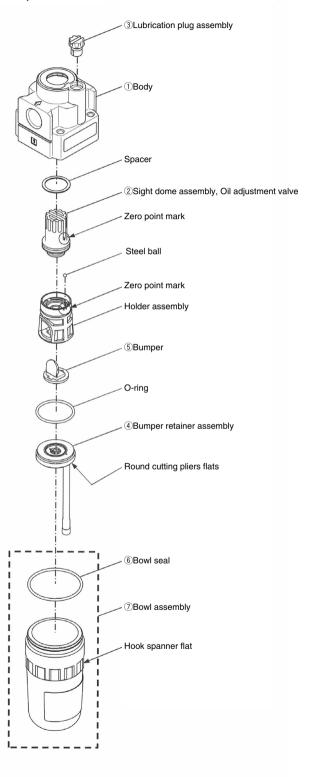


AL30-A/40-A Exploded View 2


3) AL30-A/40-A

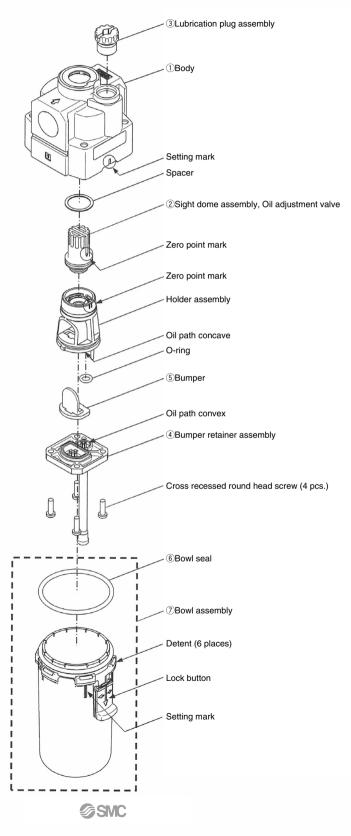

AL50-A/60-A Exploded View 3

4) AL50-A/60-A

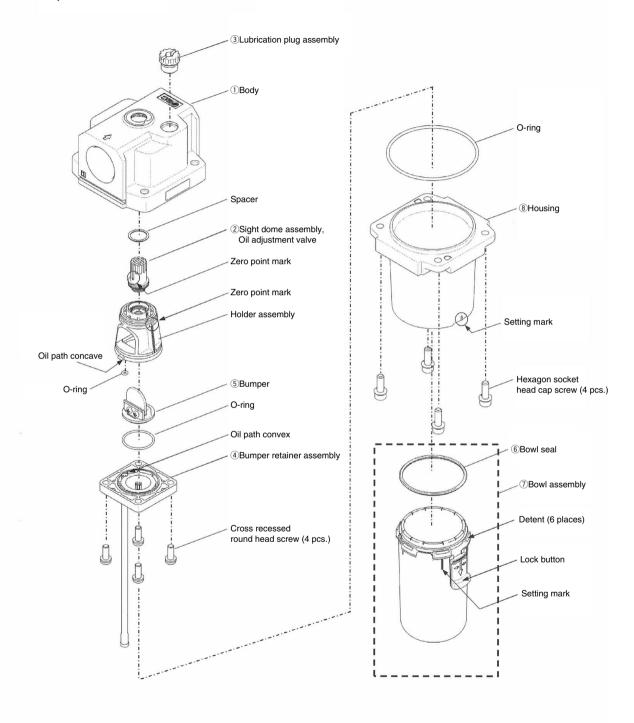

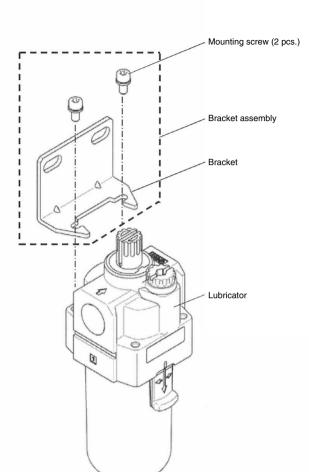

AL20-A to 60-A Bracket Assembly Exploded View 4

AL10-A to 60-A Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Bowl Assembly, Sight Dome Assembly

Applicable model	Process	Procedure	Tools	Check item
AL10-A	Disassembly	Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly is tightened too much to be removed, use hook spanner until it can be loosened by hand.	(Hook spanner Nominal: 25/28)	-
		Remove the sight dome assembly. Rotate counterclockwise with spanner to remove the sight dome assembly.	Spanner Nominal: 14	_
	Assembly	3) Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Re- fer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 1.5 N⋅m
		Mount the sight dome assembly. Rotate clockwise with spanner to mount the sight dome assembly. Tightening torque at this time is shown on the "Check item".	Spanner Nominal: 14 (Torque wrench)	Tightening torque: 0.8 ± 0.2 N⋅m

2. Bowl Assembly, Bumper Retainer Assembly, Bumper, Sight Dome Assembly

Applicable model	Process	Procedure	Tools	Check item
AL20-A	Disassembly	Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly is tightened too much to be removed, use spanner until it can be loosened by hand.	SMC's special spanner (Recommended) Part no.: 1129129	-
		 Close the oil adjustment valve (outer of the sight dome) fully. Rotate the oil adjustment valve clockwise by manual until feeling the end of rotation with light force. 	_	_
		Remove bumper retainer assembly. Hold the bumper retainer assembly by round cutting pliers and rotate counterclockwise.	Round cutting pliers Nominal: 125 or 150	-
		4) Remove O-ring, bumper, holder assembly, steel ball, sight dome assembly and spacer. Push the sight dome assembly forward to the body by hand for disconnection. And the holder assembly and the sight dome assembly can be separated away by hand as well, but at the time the attention has to be paid not to lose the steel balls between them. Bumper can be pulled out by tweezers.	Tweezers	
	Assembly	5) Insert the spacer to the sight dome assembly.	_	_
		6) Connect the sight dome assembly, the steel balls and the holder assembly. After inserting the steel balls into the path hole of oil on the holder assembly, put the sight dome assembly into the holder assembly by meeting zero point mark of both holder assembly and the sight dome.	_	Zero point mark on the holder assembly shall meet with zero point mark on the sight dome assembly.
		7) Insert the bumper into the holder assembly. For insertion, meet the setting concave (bumper) and convex (holder assembly)	_	Setting concave on the bumper shall meet with the setting convex on the holder assembly.
		8) Insert the assembly 5) to 7) mentioned above (sight dome + spacer + steel ball + holder assembly + damper) to the body. For insertion, meet the setting convex and concave on the body holder. Proper insertion makes the face of the holder and the body flat.	_	Setting concave on the body shall meet with the setting con- vex of the holder. The face of the holder and the body is made
		9) Mount the bumper retainer assembly. Hold the bumper retainer assembly by round cutting pliers and rotate clockwise. tightening torque at this time is shown on the "Check item".	Round cutting pliers Nominal: 125 or 150	Tightening torque: 1.4 ± 0.1 N⋅m
		10) Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Re- fer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 2.2 N⋅m



AL10-A to 60-A Series Replacement Procedure 2

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bowl assembly. Push the lock button on the bowl assembly down and rotate clock or counterclockwise by 30°. After the rotation, the bowl assembly can be pulled out.	_	-
		Close the oil adjustment valve (outer of the sight dome) fully. Rotate the oil adjustment valve clockwise by manual until feeling the end of rotation with light force.	_	-
		Remove the bumper retainer assembly. Loosen and remove four cross recessed round head screws by Phillips head screwdriver to remove the bumper retainer assembly. At this time, the attention has to be paid not to lose O-ring between the bumper retainer assembly and the holder assembly.	Phillips head screwdriver	_
		Remove bumper, holder assembly, sight dome assembly and spacer. Push the sight dome assembly forward to the body by hand for disconnection. And the holder assembly and the sight dome assembly can be separated away by hand as well. Bumper can be pulled out by tweezers.	Tweezers	_
	Assembly	5) Insert the spacer into the sight dome assembly.	_	_
AL30-A AL40-A		6) Connect the sight dome assembly with the holder assembly. Put the sight dome assembly into the holder assembly by meeting zero point mark of both holder assembly and the sight dome assembly.	_	Zero point mark on the holder assembly shall meet with zero point mark on the sight dome assembly.
		Insert the bumper into the holder assembly. For insertion, the shape of the bumper is matched to the shape of the convex part of the holder assembly.	_	Setting the shape of the bump- er shall meet with the setting convex of the holder assem- bly.
		8) Insert the assembly 5) to 7) mentioned above (sight dome + spacer + holder assembly + bumper) to the body. For insertion, meet the setting convex and concave on the body holder. Proper insertion makes the face of the holder and the body flat.	_	Setting concave on the body shall meet with the setting convex of the holder. The face of the holder and the body is made.
		9) Mount the bumper retainer assembly. Place the bumper retainer assembly so that the oil path convex (bumper holder assembly) and concave (holder) could meet, and then fix it by four cross recessed round head screw by Phil- lips head screwdriver. Tightening torque at this time is shown on the "Check item". And the screw which is tightened next after first tightened screw shall be what is located at cross corner of first one.	Phillips head screwdriver	Tightening torque AL30-A: 0.4 ± 0.1 N·m AL40-A: 0.7 ± 0.2 N·m
		10) Mount the bowl assembly. Insert the bowl assembly into the body by using individual setting mark and rotate clock or counterclockwise by 30° (until the lock button is released). If the release of the lock button is confirmed, mount of the bowl assembly is completed.	_	Lock button us up.
		Rotate 30°	Groove of product (b	Check that the lock button is engaged with the groove on the product before applying pressure.
		Bowl assembly L	_ock button	



AL10-A to 60-A Series Replacement Procedure 3


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the housing including the bowl assembly. Loosen four hexagon socket head cap screw by hexagon wrench to remove the housing (including the bowl assembly) and O-ring.	Hexagon wrench Nominal: 5	_
		 Close the oil adjustment valve (outer of the sight dome) fully. Rotate the oil adjustment valve clockwise by manual until feeling the end of rotation with light force. 	_	_
		Remove the damper retainer assembly. Loosen and remove four cross recessed round head screws by Phillips head screwdriver to remove the bumper retainer assembly.	Phillips head screwdriver	-
		4) Remove O-ring, bumper assembly, holder assembly, sight dome assembly and spacer. Push the sight dome assembly forward to the body by hand for disconnection. And the holder assembly and the sight dome assembly can be separated away by hand as well.	_	-
	Assembly	5) Insert the spacer into the sight dome assembly.	_	_
AL50-A AL60-A		6) Connect the sight dome assembly with the holder assembly. Put the sight dome assembly into the holder assembly by meeting zero point mark of both holder assembly and the sight dome assembly.	_	Zero point mark on the holder assembly shall meet with zero point mark on the sight dome assembly.
		7) Insert the bumper into the holder assembly. For insertion, the setting hole of the bumper assembly is matched to the convex part of the holder assembly.	_	Setting the setting hole of the bumper assembly shall meet with the convex of the holder assembly.
		8) Insert the assemblies 5) to 7) mentioned above (sight dome + spacer + holder assembly + bumper assembly) to the body. For insertion, meet the setting convex and concave on the body holder. Proper insertion makes the face of the holder and the body flat.	_	Setting concave on the body shall meet with the Setting convex of the holder. The face of the holder and the body is made flat.
		9) Install O-ring to the holder assembly.	_	_
		10) Mount the bumper retainer assembly. Place the bumper retainer assembly so that the oil path convex (bumper holder assembly) and concave (holder) could meet, and then fix it by four cross recessed round head screw by Phillips head screwdriver. Tightening torque at this time is shown on the "Check item". And the screw which is tightened next after first tightened screw shall be what is located at cross corner of first one.	Phillips head screwdriver	Tightening torque AL50-A: 1.4 ± 0.1 N⋅m AL60-A: 1.4 ± 0.1 N⋅m
		11) Install O-ring to the body.	_	_
		12) Mount the housing including the bowl assembly. Place the housing including the bowl assembly on the body at the position with configuration match by checking the appearance of them and fix it by four hexagon socket head cap screw by hexagon wrench. Tightening torque at this time is shown on the "Check item". And the screw which is tightened next after first tightened screw shall be what is located at cross corner of first one.	Hexagon wrench Nominal: 5	Tightening torque AL50-A: 4.5 ± 1 N⋅m AL60-A: 4.5 ± 1 N⋅m




3. Lubrication Plug Assembly


Applicable model	Process	Procedure	Tools	Check item
AL20-A AL30-A	Disassembly	Remove the lubrication plug assembly. Insert flat blade screwdriver into the groove on the top of lubrication plug and rotate counterclockwise to remove the lubrication plug assembly from the body.	Flat blade screwdriver	_
AL40-A AL50-A AL60-A	Assembly	Mount the lubrication plug assembly. Insert flat blade screwdriver into the groove on the top of lubrication plug and rotate clockwise to fix the lubrication plug assembly to the body. Tightening torque at this time is shown on the "Check item".	Flat blade screwdriver	Tightening torque AL20-A: 0.3 ± 0.05 N·m AL30-A: 0.4 ± 0.05 N·m AL40-A to 60-A: 0.55 ± 0.05 N·m

AW10-A Exploded View 1

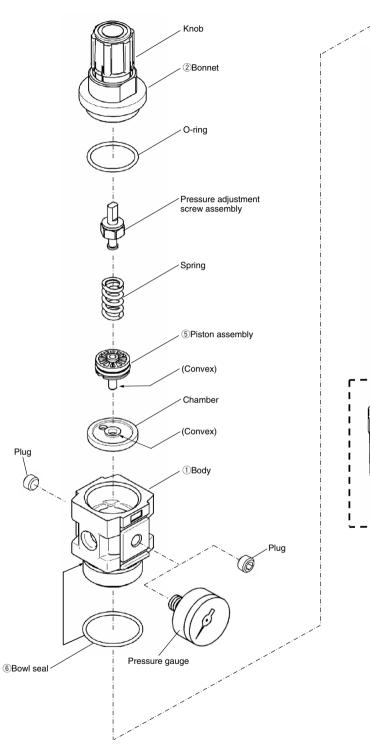


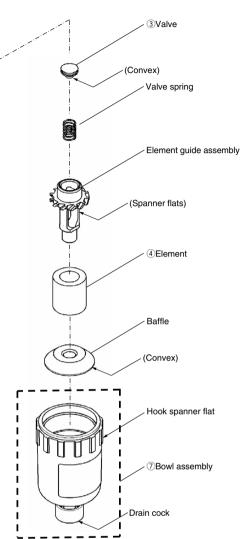


AW20-A Exploded View 2

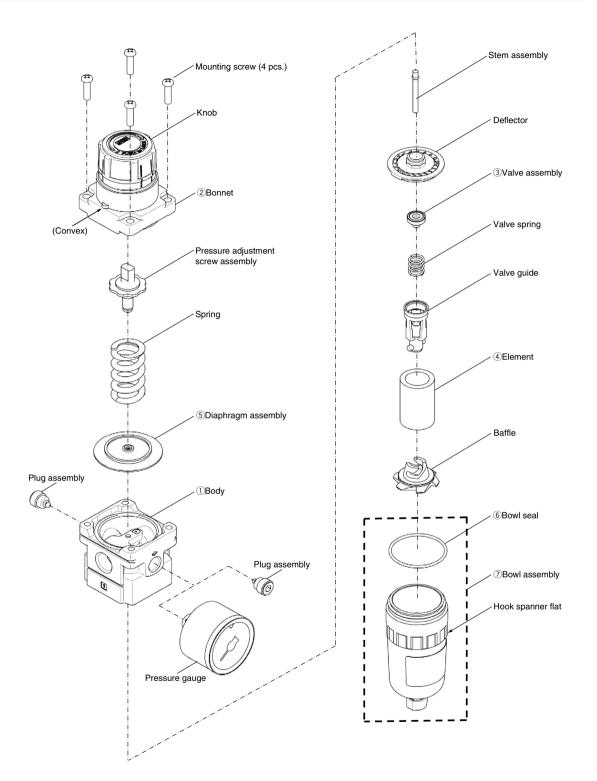

AW30-A/40-A Exploded View 3

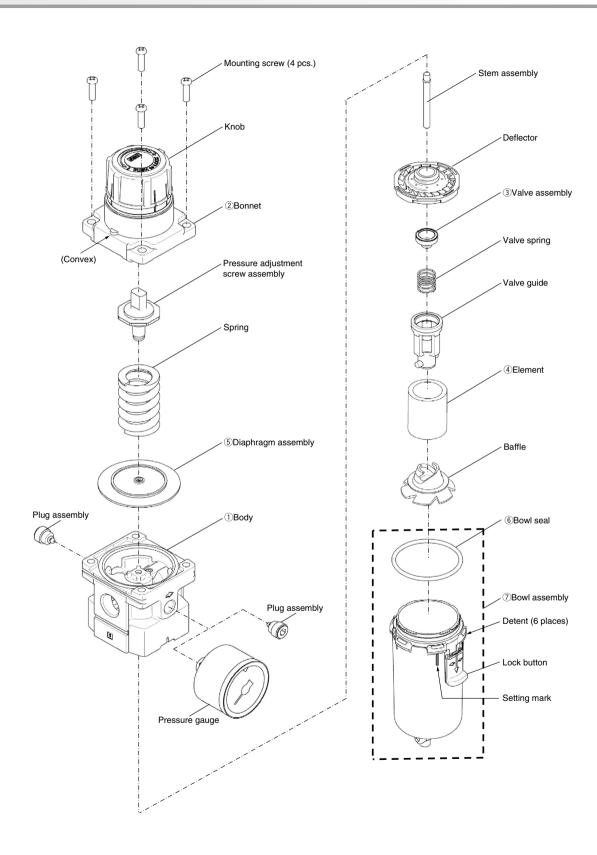

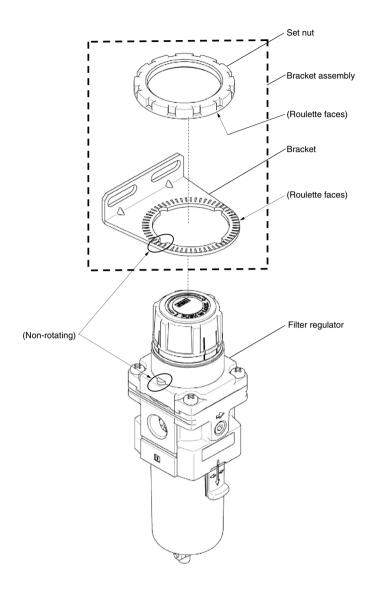

⚠ Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.


Replace while referring to the "Exploded View."


After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.


1. Bowl Assembly, Element


Applicable model	AW	10-A
Process		sembly
	Turn the bowl assembly in the direction shown in the figure below to remove it from the product. If the bowl assembly has been tightened too much to be removed, use a hook spanner until it can be loosened by hand. (Hook spanner nominal: 25/28)	Turn the baffle by hand in the direction shown in the figure below (in the direction of the arrow) to remove the baffle and element.
Procedure	Bowl assembly	Element



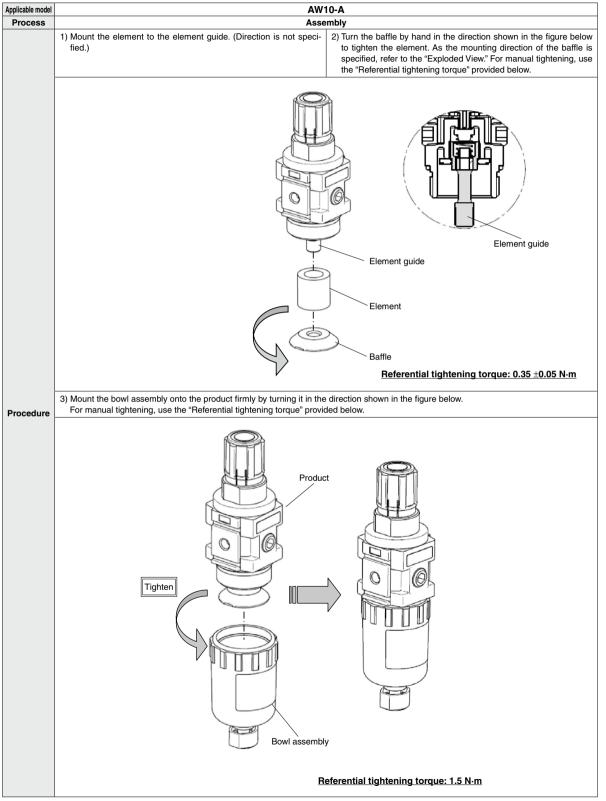


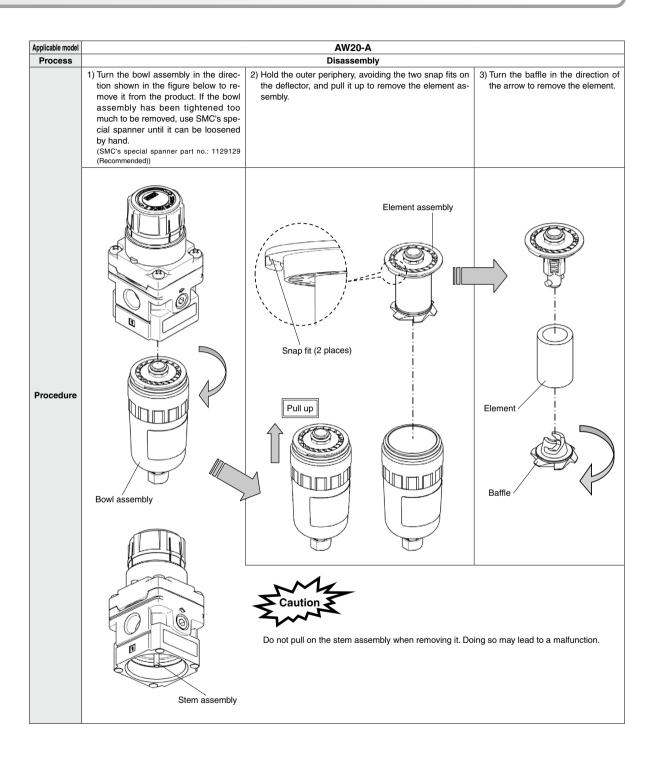

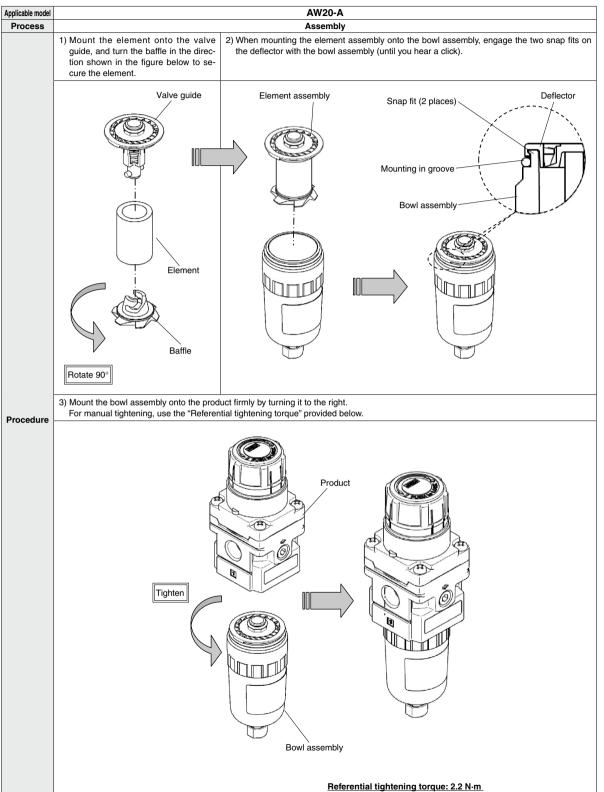

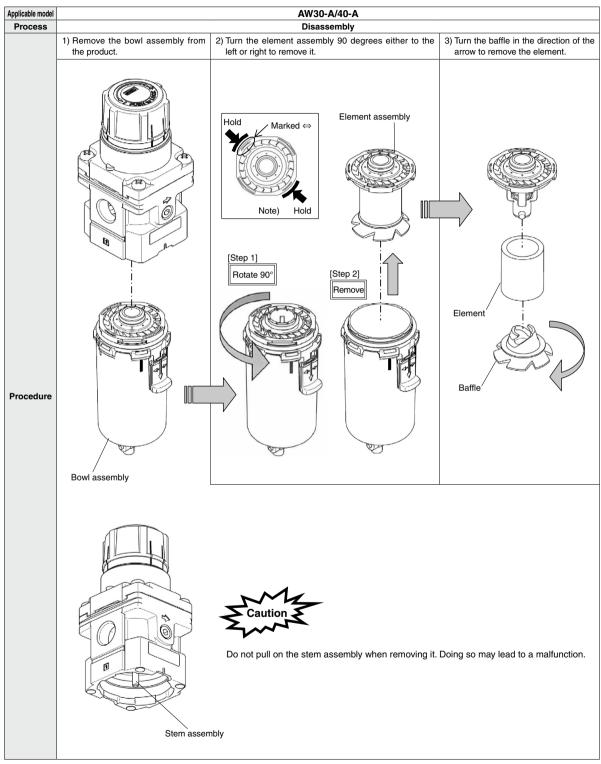


Note) Hold the sections marked \Leftrightarrow on the circular arc, and turn the element assembly.

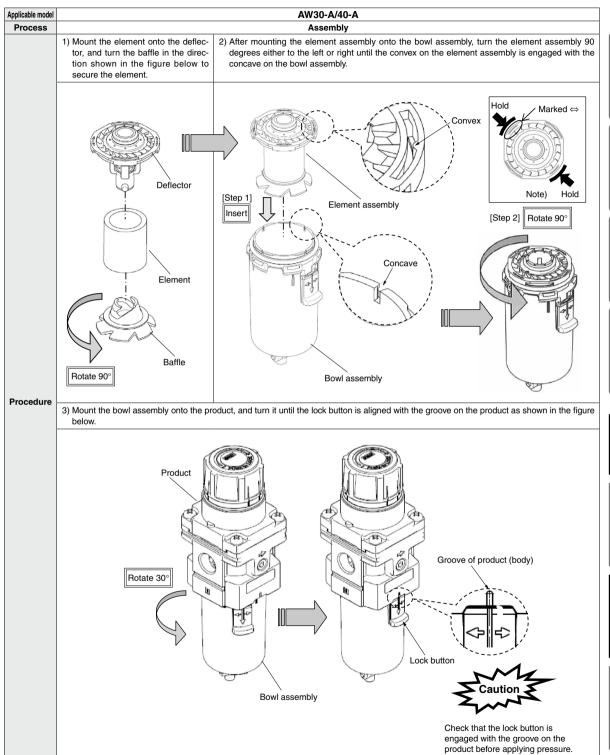



Note) Hold the sections marked ⇔ on the circular arc, and turn the element assembly.





2. Valve Assembly

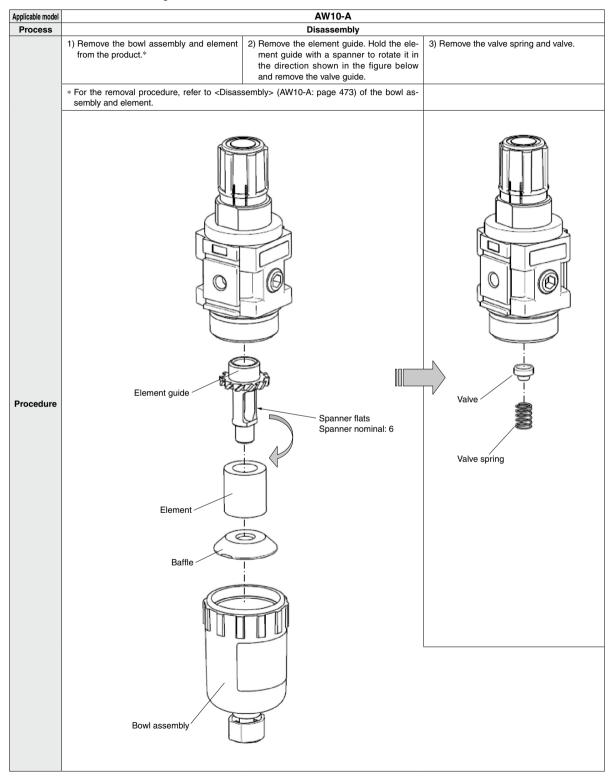

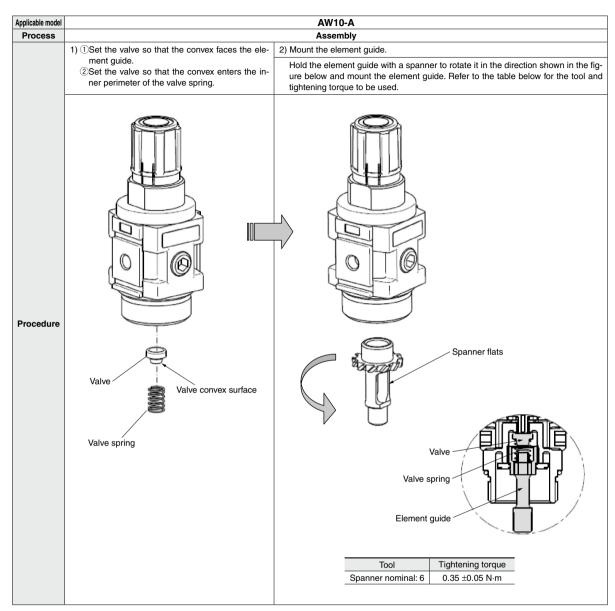

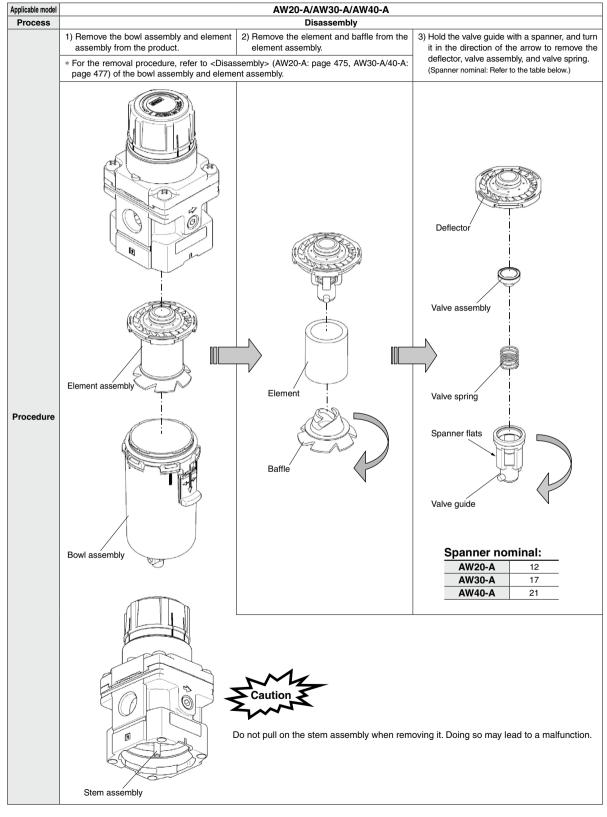

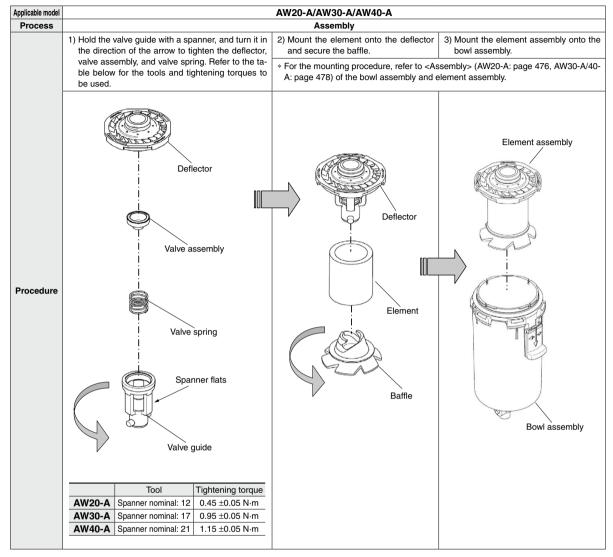


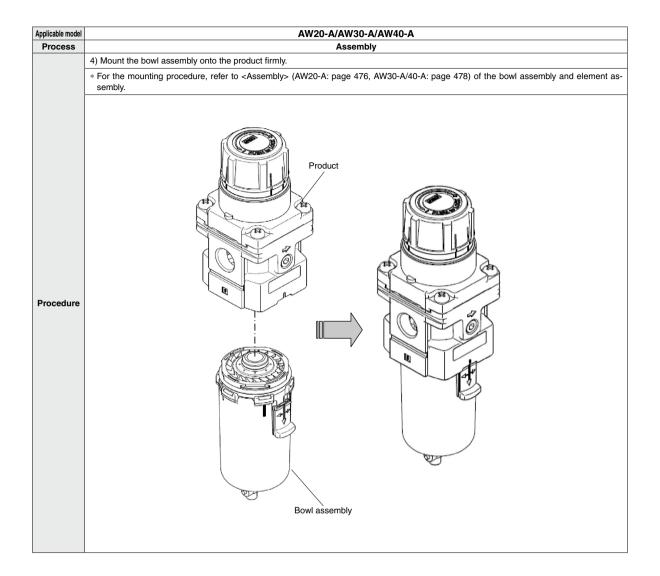

3. Diaphragm Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Hold the bonnet with a spanner on the width across flat, and rotate counterclockwise to remove the bonnet assembly.	Spanner Nominal: 16	_
		Remove the piston assembly from the bonnet assembly. Pull out the piston assembly with the knob facing downwards. Otherwise, the pressure adjustment screw assembly or spring may fall out.	_	_
AW10-A	Assembly	3) Mount the piston assembly to the bonnet assembly. Insert the piston assembly into the bonnet so that the piston assembly convex faces the body. If the pressure adjusting screw or pressure adjusting spring is not mounted on the bonnet, mount it before mounting the piston assembly.	-	_
		Ensure the chamber is mounted on the body. If the chamber is removed during disassembly, mount the chamber ensuring that it's facing the right direction. The convex of the chamber should face the bonnet.	_	Presence of the chamber Mounting direction
		5) Mount the bonnet assembly to the body. Hold the bonnet assembly with a spanner on the width across flat, and rotate the body clockwise to secure it. Refer to the "Check item" for the tightening torque.	Spanner Nominal: 16	Tightening torque: 1.8 ± 0.3 N·m
AW20-A	Disassembly	1) Removing bonnet Remove all 4 screws, and then remove the bonnet. Carefully store the bonnet parts. <bonnet parts=""> Pressure adjustment screw assembly Spring Diaphragm assembly</bonnet>	Phillips head screwdriver	_
AW30-A AW40-A	Assembly	Mount the disassembled parts onto the body. Perform mounting while referring to the "Exploded View" (pages 481 to 483).	_	Direction of the pressure adjustment screw assembly and diaphragm assembly
		Mounting bonnet Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AW20-A 0.62 ± 0.3 N·m AW30-A 3.5 ± 0.3 N·m AW40-A 2.6 ± 0.3 N·m

AW20-B Exploded View 1

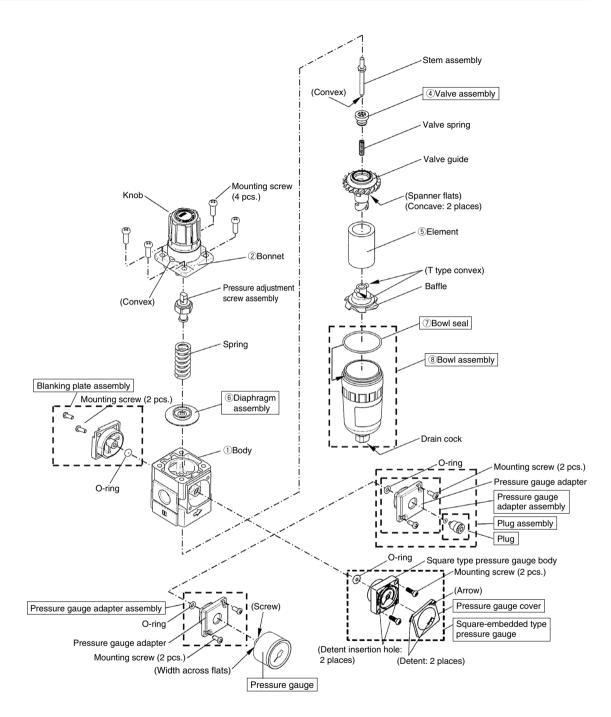


Note) It is possible to mount a square-embedded type pressure gauge, a pressure gauge adapter assembly, or a plug assembly instead of a blanking plate assembly.

AW30-B/AW40-B Exploded View 2

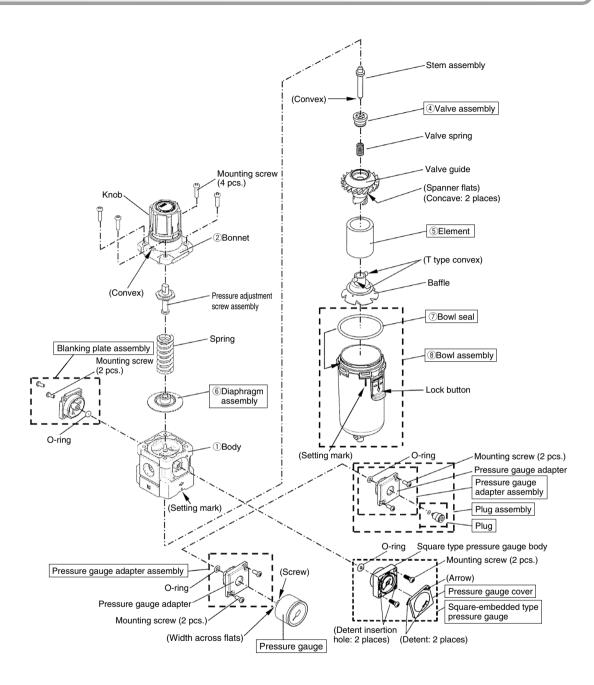

Note) It is possible to mount a square-embedded type pressure gauge, a pressure gauge adapter assembly, or a plug assembly instead of a blanking plate assembly.


AW60-B Exploded View 3

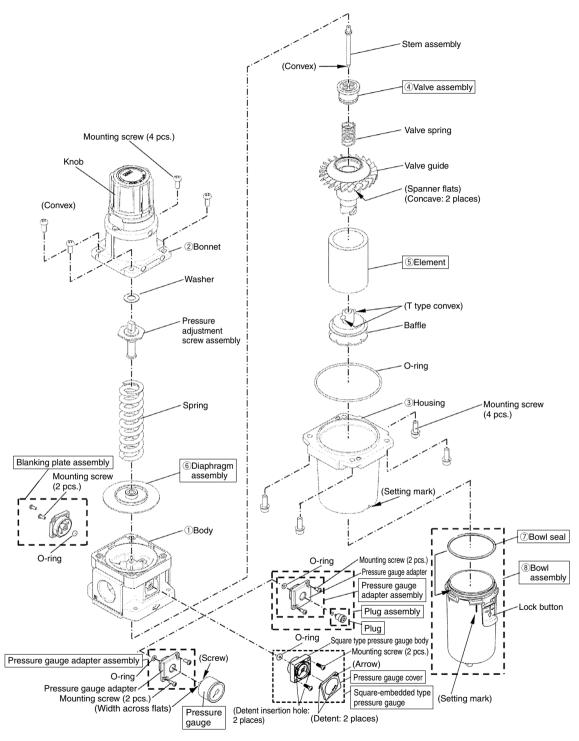

Note) It is possible to mount a square-embedded type pressure gauge, a pressure gauge adapter assembly, or a plug assembly instead of a blanking plate assembly.


SMC

AW20K-B Exploded View 1

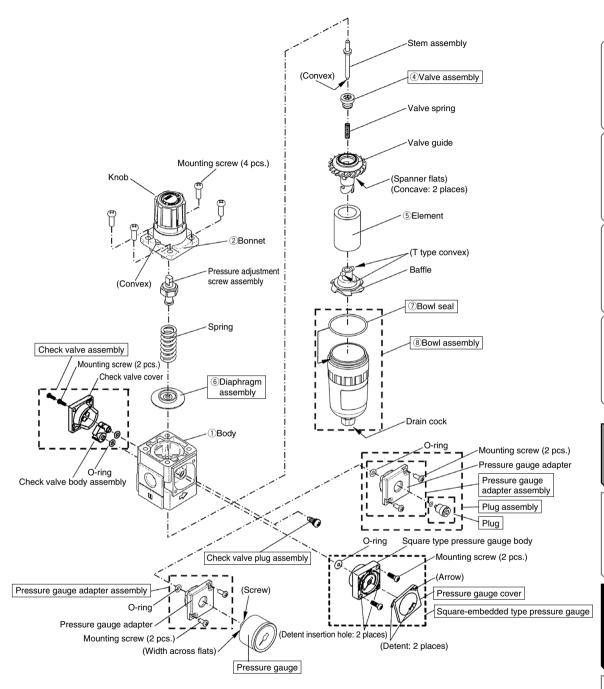


Note) The flow direction can be changed by removing the check valve assembly and replacing it with the square-embedded type pressure gauge, pressure gauge adapter assembly, and plug assembly. At this time, the check valve plug assembly must also be replaced.

AW30K-B/AW40K-B Exploded View 2

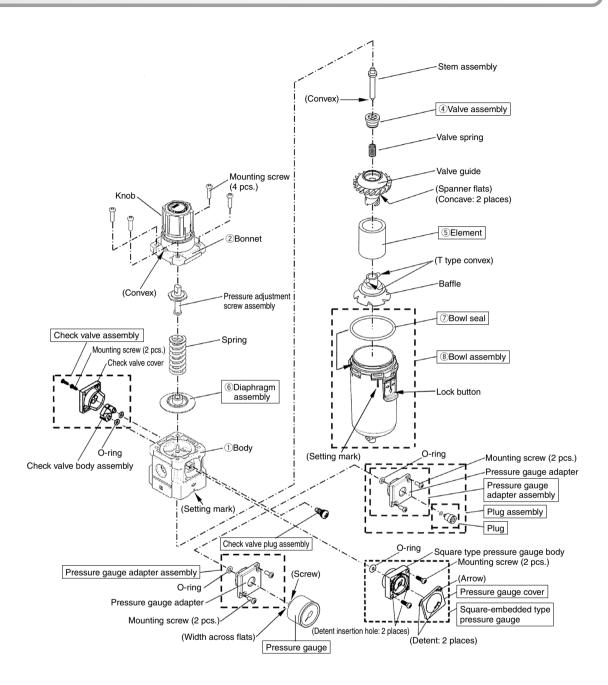


Note) The flow direction can be changed by removing the check valve assembly and replacing it with the square-embedded type pressure gauge, pressure gauge adapter assembly, and plug assembly. At this time, the check valve plug assembly must also be replaced.

AW60K-B Exploded View 3

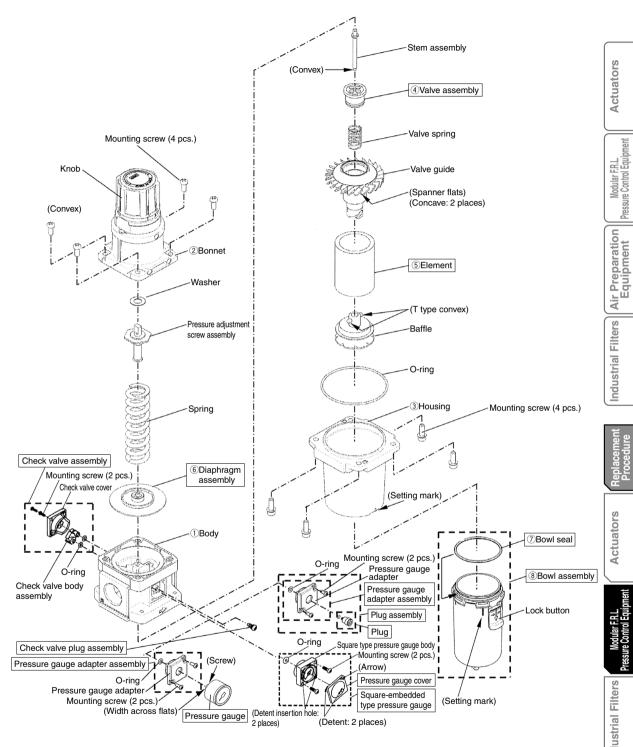


Note) The flow direction can be changed by removing the check valve assembly and replacing it with the square-embedded type pressure gauge, pressure gauge adapter assembly, and plug assembly. At this time, the check valve plug assembly must also be replaced.

AW20K-B to 40K-B Bracket Assembly, Panel Mount Exploded View 4

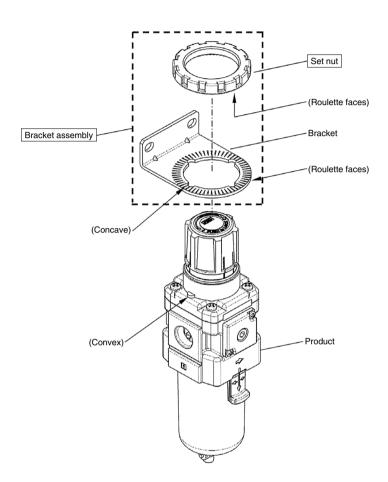

SMC

AW60K-B Bracket Assembly Exploded View 5

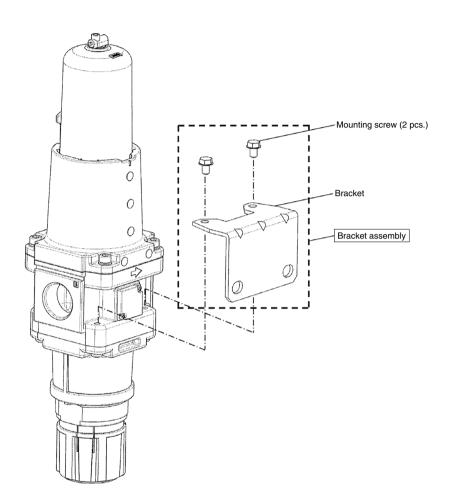

AW20(K)-B to 60(K)-B Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Bowl Assembly/Element

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly has been tightened too much to be removed, use a spanner until it can be loosened by hand.	SMC's special spanner (Recommended) Part no.: 1129129	-
		Remove the baffle and element. Rotate the baffle by hand and counterclockwise to remove the baffle and element.	_	_
AW20(K)-B	Assembly	Mount the element. Mount the element to the valve guide.	_	_
		4) Mount the baffle. Insert the baffle so that concave on the valve guide could meet T convex on the baffle. And rotate it clockwise manually until feeling snap fit (approx. 110°) to fix to the element.	_	_
		5) Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Refer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 2.2 N·m
	Disassembly	Remove the bowl assembly. Push the bowl assembly lock button. Lifting the bowl assembly, rotate the assembly 30 degree (right or left) to pull out the assembly.	_	I
		Remove the baffle and element. Rotate the baffle by hand and counterclockwise to remove the baffle and element.	_	_
AW30(K)-B AW40(K)-B	Assembly	Mount the element. Mount the element to the valve guide.	_	_
AW60(K)-B		4) Mount the baffle. Insert the baffle so that concave on the valve guide could meet T convex on the baffle. And rotate it clockwise manually until feeling snap fit (approx. 110°) to fix to the element.	_	Direction of baffle. For element convex side.
		5) Mount the bowl assembly. Match the mating mark of the body and the bowl assembly to insert the assembly to the body. Rotate the assembly 30 degree (right or left) until the lock button is tossed up to mount the bowl assembly. Ensure the lock button is up.	_	Lock button is up.

2. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Rotate the set screw counterclockwise with Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
AW20(K)-B AW30(K)-B		 Remove parts in order of the pressure adjustment screw assembly, spring, and the diaphragm assembly. Please be noted that the diaphragm assembly adheres to the bonnet if disassemble parts with the knob facing downwards. 	_	_
AW40(K)-B AW60(K)-B	Assembly	Mount parts to the body in order of the diaphragm assembly, spring, and pressure adjustment screw assembly.	_	Direction of the diaphragm assembly and the pressure adjustment screw assembly
		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AW20(K)-B 2.15 ± 0.3 N·m AW30(K)-B 2.35 ± 0.3 N·m AW40(K)-B 3.5 ± 0.3 N·m AW60(K)-B 4.5 ± 0.3 N·m



Actuators

3. Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a spanner on the spanner flat to rotate it counterclockwise, and remove the valve guide.	Spanner Nominal: AW20(K)-B 11 AW30(K)-B 17 AW40(K)-B 21	_
		2) Remove the valve spring.	_	_
AWOO(K) B		3) Remove the valve assembly.	_	_
AW20(K)-B AW30(K)-B AW40(K)-B	Assembly	Mount the valve assembly. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
		5) Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		6) Mount the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it clockwise, and mount the valve guide. Refer to the "Check item" for the tightening torque.	Spanner Nominal: AW20(K)-B 11 AW30(K)-B 17 AW40(K)-B 21	Tightening torque: AW20(K)-B 0.8 ± 0.1 N·m AW30(K)-B 2.35 ± 0.3 N·m AW40(K)-B 3.5 ± 0.3 N·m
	Disassembly	Remove the bowl assembly, housing, and element. Remove a housing from a body by rotating 4 mounting screws counterclockwise with a hexagon wrench key.	Hexagon wrench key Nominal: 5	_
		Remove the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it counterclockwise and remove the valve guide.	Spanner Nominal: 30	_
		3) Remove the valve spring.	_	_
		4) Remove the valve assembly.	_	_
AW60(K)-B	Assembly	Mount the valve assembly. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
AW60(K)-B		Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		7) Mount the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it clockwise, and mount the valve guide. Refer to the "Check item" for the tightening torque.	Spanner Nominal: 30	Tightening torque: 6.5 ± 0.3 N⋅m
		8) Mount the housing. Mount an O-ring on the body, assemble the housing, and tighten the 4 mounting screws temporary. Tighten the screws additionally and evenly with the tightening torque shown on the right using the hexagon wrench key.	Hexagon wrench key Nominal: 5	Tightening torque: 4.5 ± 1.0 N⋅m

AW20(K)-B to 60(K)-B Series Replacement Procedure 2

AW20(K)-B to 60(K)-B Series Replacement Procedure 3

4. Bracket Assembly, Panel Mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Mount the parts to the bracket (panel). Connect the bracket (panel) concave and the bonnet convex to mount the bracket.	_	_
AW20(K)-B AW30(K)-B AW40(K)-B		2) Secure the bracket (panel) with the set nut. Rotate the set nut clockwise with a hook spanner to secure the parts to the bracket (panel). Refer to the "Check item" for the tightening torque. The set nut knurling surface should face the bracket. When mounting with a bracket, a manually tightened set nut is adequate for general use.	Hook spanner Nominal: AW20(K)-B 34/38 AW30(K)-B 52/55 AW40(K)-B 52/55	Tightening torque: AW20(K)-B 2.0 ± 0.2 N·m AW30(K)-B 3.5 ± 0.3 N·m AW40(K)-B 4.0 ± 0.4 N·m
AW60(K)-B	Assembly	Mount the product to the bracket. Two mounting screws are tightened by spanner for holding.	Spanner Nominal: 10	Tightening torque: 2.6 N⋅m

5. Square Embedded Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the pressure gauge cover. Rotate the pressure gauge cover 15 degrees counterclockwise to pull out the pressure gauge cover.	I	_
		Remove the pressure gauge. Rotate the 2 mounting screws counterclockwise with a Phillips head screwdriver to remove the pressure gauge and the 2 mounting screws.	Phillips head screwdriver	_
AW20(K)-B AW30(K)-B	Assembly	Ensure O-ring is mounted to the pressure gauge. Mount O-ring to the pressure gauge if the ring fall off.	_	Presence of O-ring
AW40(K)-B AW60(K)-B		Mount the pressure gauge. Rotate two mounting screws clockwise with Phillips head screw driver to mounting screws temporary. Then settle them with tightening torque in "Check item".	Phillips head screwdriver	Tightening torque: 0.3 ± 0.05 N⋅m
		5) Mount the pressure gauge cover. Insert the pressure gauge mating two detent of the pressure gauge and holes for them so that the arrow of the pressure gauge cover comes upper right. Rotate the pressure gauge cover 15 degrees opposite to the arrow to mount the pressure gauge.	_	_

6. Circular Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
AWGG(G) D	Disassembly	Remove the pressure gauge. Hold the pressure gauge with a spanner on the width across flat. Then, rotate the gauge counterclockwise to remove the gauge.	Spanner Nominal: AW20(K)-B AW30(K)-B AW40(K)-B AW60(K)-B	_
AW20(K)-B AW30(K)-B AW40(K)-B		2) Wind the pressure gauge thread with the sealant tape leaving 1.5 to 2 threads from the end.	_	Wind sealant tape leaving 1.5 to 2 threads
AW60(K)-B		3) Mount the pressure gauge. Hold the pressure gauge on the width across flat with a spanner, and rotate it clockwise to mount the circular pressure gauge. Refer to the "Check item" for tightening torque of pressure gauge.	Spanner Nominal: AW20(K)-B AW30(K)-B AW40(K)-B AW60(K)-B AW60(K)-B	Tightening torque: AW20(K)-B



7. Pressure Gauge Adapter, Plug Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the plug. Insert the hexagon wrench key to hexagon hole of hexagon plug. Rotate the plug counterclockwise to remove the plug.	Hexagon wrench key Nominal: AW20(K)-B AW30(K)-B AW40(K)-B AW60(K)-B	_
AW20(K)-B		Remove the pressure gauge adapter. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the pressure gauge and two mounting screws.	Phillips head screwdriver	_
AW30(K)-B AW40(K)-B	-	Confirm pressure gauge adapter has O-ring. If not, mount O-ring.	_	_
AW60(K)-B		Mount pressure gauge adapter. Rotate two mounting screws clockwise by Phillips head screwdriver to fix pressure gauge adapter. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.3 to 0.05 N·m
		Mount plug assembly. Insert hexagon wrench key into hexagon hole on the plug and rotate clockwise to fix the plug. Refer to the "Check item" for tightening torque of two screws.	Hexagon wrench key Nominal: AW20(K)-B AW30(K)-B AW40(K)-B AW60(K)-B	Tightening torque: AW20(K)-B AW30(K)-B AW40(K)-B AW60(K)-B


8. Blanking Plate Assembly

Applicable model	Process	Procedure	Tools	Check item
AW20(K)-B	Disassembly	 Remove the blanking plate. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the blanking plate and two mounting screws. 	Phillips head screwdriver	_
AW30(K)-B	Assembly	2) Confirm blanking plate has O-ring. If not, mount O-ring.	_	_
AW40(K)-B AW60(K)-B		Mount the blanking plate. Rotate two mounting screws clockwise by Phillips head screwdriver to fix blanking plate. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.3 ± 0.05 N⋅m

9. Check Valve Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the check valve cover. Rotate two mounting screws counterclockwise by Phillips head screwdriver to remove the check valve cover.	Phillips head screwdriver	_
AWOOK D		Remove the check valve assembly from the body. Pull and remove the check valve assembly. Then, ensure two O-rings don't fall out of the body.	_	_
AW20K-B AW30K-B AW40K-B	Assembly	Ensure two O-rings don't fall out of the body and mount them if they fall off.	_	_
AW60K-B		2) Insert convex on the check valve body into two inserting holes for the O-rings respectively.	_	Direction of check valve body assembly
		Mount the check valve cover. Rotate two mounting screws clockwise by Phillips head screwdriver to fix the check valve cover to the body. Refer to the "Check item" for adequate tightening torque for the screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.6 ± 0.05 N⋅m

AWM20 to AWM40 Series Exploded View 1

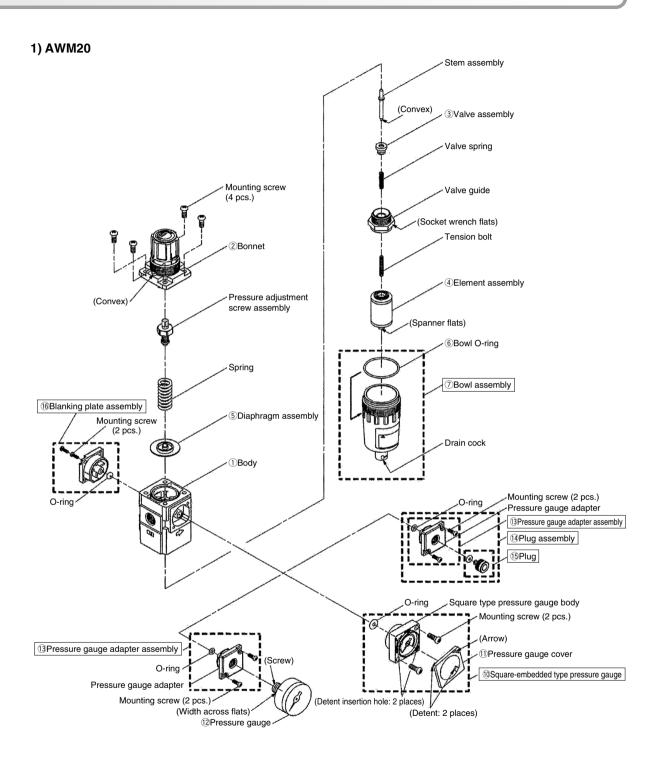

Note) It is possible to mount a [®] square-embedded type pressure gauge, a [®] pressure gauge adapter assembly, or a [®] plug assembly instead of a [®] blanking plate assembly.




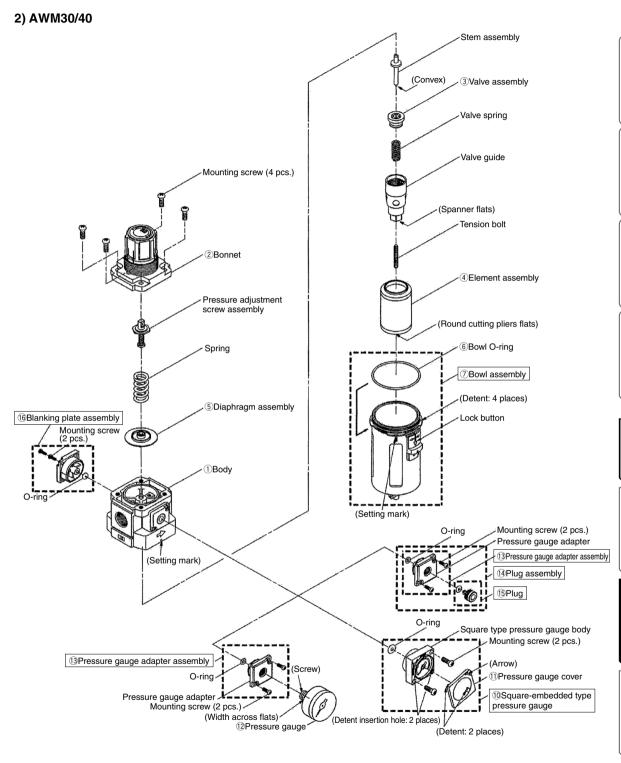

Note) It is possible to mount a (1) square-embedded type pressure gauge, a (1) pressure gauge adapter assembly, or a (1) plug assembly instead of a (1) blanking plate assembly.



3) AWM20/30/40 Bracket assembly, panel mount exploded view

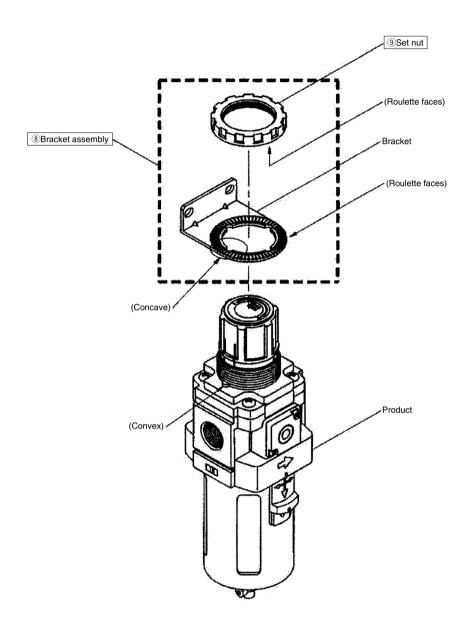

AWM20 to AWM40 Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Bowl Assembly/Element

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly has been tightened too much to be removed, use a hook spanner until it can be loosened by hand.	(Hook spanner Nominal: 34/38)	_
AWM20		Remove the element. Hold the element with a spanner to rotate it counterclockwise and remove the element.	Spanner Nominal: 7	_
	Assembly	Mount the element. Hold the element with a spanner to rotate it clockwise, and mount the element. Refer to the "Check item" for the tightening torque.	Spanner Nominal: 7	Tightening torque: 0.35 ± 0.05 N⋅m
		Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Refer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 2.2 N·m
	Disassembly	Remove the bowl assembly. Push the bowl assembly lock button by hand. Lifting the bowl assembly, rotate the assembly 45 degrees (right or left) to pull out the assembly.	_	_
		Remove the element. Hold the element with a round cutting to rotate it counterclockwise, and remove the element.	Round cutting	_
AWM30 AWM40	Assembly	Mount the element. Hold the element with a round cutting to rotate it clockwise, and mount the element. Refer to the "Check item" for the tightening torque.	Round cutting	Tightening torque: 0.35 ± 0.05 N⋅m
		4) Mount the bowl assembly. Match the mating mark of the body and the bowl assembly to insert the assembly to the body. Rotate the assembly 45 degrees (right or left) until the lock button is tossed up to mount the bowl assembly. Ensure the lock button is up.	_	Lock button is up.

2. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet. Rotate the set screw counterclockwise with Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
AWM20 AWM30		 Remove parts in order of the pressure adjustment screw assembly, spring, and the diaphragm assembly. Please be noted that the diaphragm assembly adheres to the bonnet if disassemble parts with the knob facing downwards. 	_	_
AWM40	Assembly	Assembly 3) Mount parts to the body in order of the diaphragm assembly, spring, and pressure adjustment screw.	_	Direction of the diaphragm assembly and the pressure adjustment screw assembly
		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AWM20 2.15 ± 0.3 N⋅m AWM30 2.35 ± 0.3 N⋅m AWM40 3.5 ± 0.3 N⋅m

3. Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a socket wrench on the socket wrench flat to rotate it counterclockwise, and remove the valve guide.	Socket wrench Nominal: 18	_
		2) Remove the valve spring.	_	_
		3) Remove the valve.	_	_
AWM20	Assembly	Mount the valve. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
		Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		6) Mount the valve guide. Hold the valve guide with a socket wrench on the socke wrench flat to rotate it clockwise, and mount the valve guide Refer to the "Check item" for the tightening torque.	Socket wrench Nominal: 18	Tightening torque: 40 ± 3.5N⋅m
		7) Mount the element and bowl assembly.	_	_
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a spanner to rotate it counterclockwise, and remove the valve guide.	Spanner Nominal: AWM30 8 AWM40 12	_
		2) Remove the valve spring.	_	_
		3) Remove the valve.	_	_
AWM30 AWM40	Assembly	Mount the valve. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
Aviii-to		5) Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		Mount the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it clockwise, and mount the valve guide. Refer to the	Spanner Nominal: AWM30 8	Tightening torque: AWM30 25 ± 2.5 N·m
		"Check item" for the tightening torque.	AWM40 12	AWM40 55 ± 5 N·m
		7) Mount the element and bowl assembly.		

4. Bracket Assembly, Panel Mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Mount the parts to the bracket (panel). Connect the bracket (panel) concave and the bonnet convex to mount the bracket.	_	_
AWM20 AWM30 AWM40		2) Secure the bracket (panel) with the set nut. Rotate the set nut clockwise with a hook spanner to secure the parts to the bracket (panel). Refer to the "Check item" for the tightening torque. The set nut knurling surface should face the bracket. When mounting with a bracket, a manually tightened set nut is adequate for general use.	Hook spanner Nominal: AWM20 34/38 AWM30 52/55 AWM40 52/55	Tightening torque: AWM20 2.0 ± 0.2 N⋅m AWM30 3.5 ± 0.3 N⋅m AWM40 4.0 ± 0.4 N⋅m

5. Square-embedded Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
AWM20	Disassembly	Remove the pressure gauge cover. Rotate the pressure gauge cover 15 degrees counterclockwise to pull out the pressure gauge cover.	_	_
AWM30 AWM40		 Remove the pressure gauge. Rotate the 2 mounting screws counterclockwise with a Phillips head screwdriver to remove the pressure gauge and the 2 mounting screws. 	Phillips head screwdriver	_



AWM20 to AWM40 Series Replacement Procedure 3

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Ensure O-ring is mounted to the pressure gauge. Mount O-ring to the pressure gauge if the ring fall off.		Presence of O-ring
AWM20 AWM30		Mount the pressure gauge. Rotate two mounting screws clockwise with Phillips head screwdriver to mounting screws temporary. Then secure them with tightening torque in "Check item".	Phillips head screwdriver	Tightening torque: 0.3 ± 0.05 N⋅m
AWM40		5) Mount the pressure gauge cover. Insert the pressure gauge mating two detent of the pressure gauge and holes for them so that the arrow of the pressure gauge cover comes upper right. Rotate the pressure gauge cover 15 degrees opposite to the arrow to mount the pressure gauge.	_	-

6. Circular Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the pressure gauge. Hold the pressure gauge with a spanner on the width across flat. Then, rotate the gauge counterclockwise to remove the gauge.	Spanner Nominal: 14	_
AWM20 AWM30	Assembly	2) Wind the pressure gauge thread with the sealant tape leaving 1.5 to 2 threads from the end.	_	Wind sealant tape leaving 1.5 to 2 threads
AWM30 AWM40		3) Mount the pressure gauge. Hold the pressure gauge on the width across flat with a spanner, and rotate it clockwise to mount the circular pressure gauge. Refer to the "Check item" for tightening torque of pressure gauge.	Spanner Nominal: 14	Tightening torque:

7. Pressure Gauge Adapter, Plug Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the plug. Insert the hexagon wrench key to hexagon hole of hexagon plug. Rotate the plug counterclockwise to remove the plug.	Nominal: AWM20 AWM30 AWM40 6	-
AWM20		Remove the pressure gauge adapter. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the pressure gauge and two mounting screws.	Phillips head screwdriver	_
AWM30	Assembly	3) Confirm pressure gauge adapter has O-ring. If not, mount O-ring.	_	_
AWM40		Mount pressure gauge adapter. Rotate two mounting screws clockwise by Phillips head screwdriver to fix pressure gauge adapter. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.3 ± 0.05 N⋅m
		Mount plug assembly. Insert hexagon wrench key into hexagon hole on the plug and rotate clockwise to fix the plug. Refer to the "Check item" for tightening torque of two screws.	Nominal: AWM20 AWM30 AWM40 6	Tightening torque: AWM20

8. Blanking Plate Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	 Remove the blanking plate. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the blanking plate and two mounting screws. 	Phillips head screwdriver	_
AWM20 AWM30	Assembly	2) Confirm blanking plate has O-ring. If not, mount O-ring.	_	_
AWM30 AWM40		Mount the blanking plate. Rotate two mounting screws clockwise by Phillips head screwdriver to fix blanking plate. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.3 ± 0.05 N⋅m



AWD20 to AWD40 Series Exploded View 1

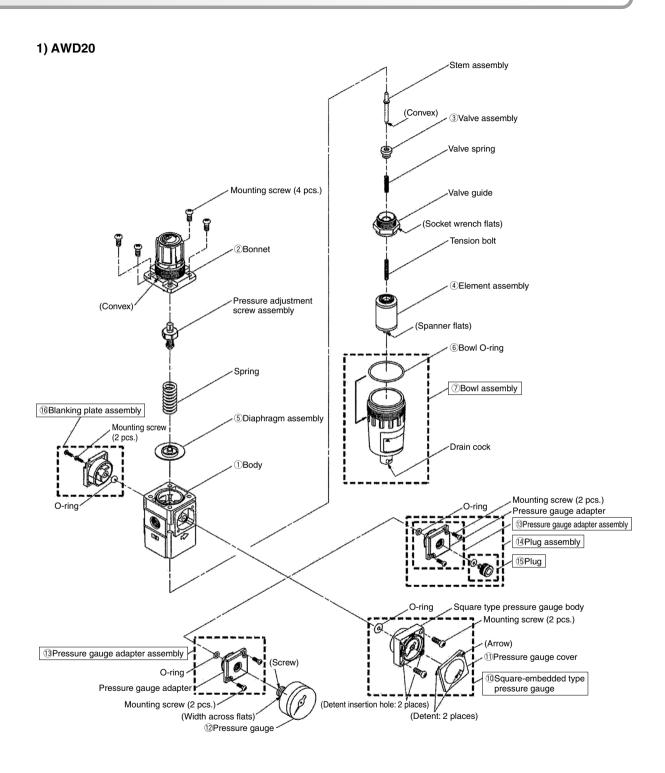


Note) It is possible to mount a 1 square-embedded type pressure gauge, a 3 pressure gauge adapter assembly, or a 4 plug assembly instead of a 6 blanking plate assembly.



AWD20 to AWD40 Series Exploded View 2

2) AWD30/40

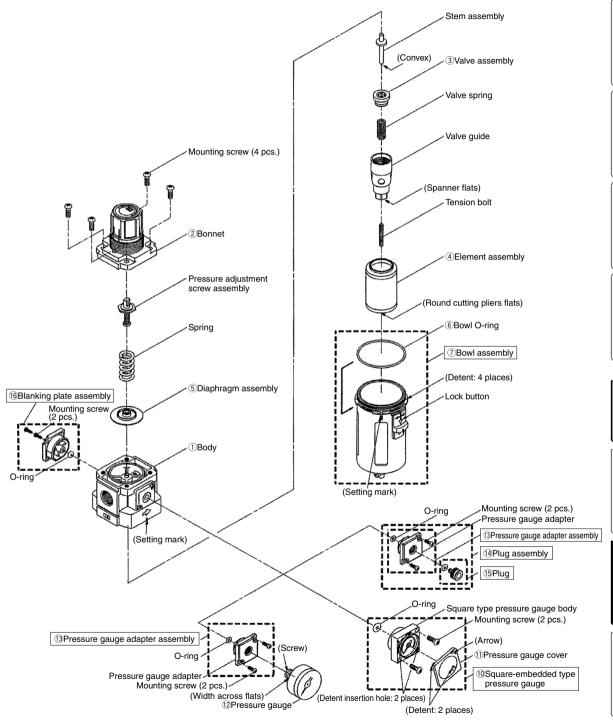


Note) It is possible to mount a $\mathbin{\textcircled{\scriptsize 10}}$ square-embedded type pressure gauge, a $\mathbin{\textcircled{\scriptsize 3}}$ pressure gauge adapter assembly, or a 4 plug assembly instead of a 6 blanking plate assembly.



AWD20 to AWD40 Series Exploded View 3

3) AWD20/30/40 Bracket assembly, panel mount exploded view

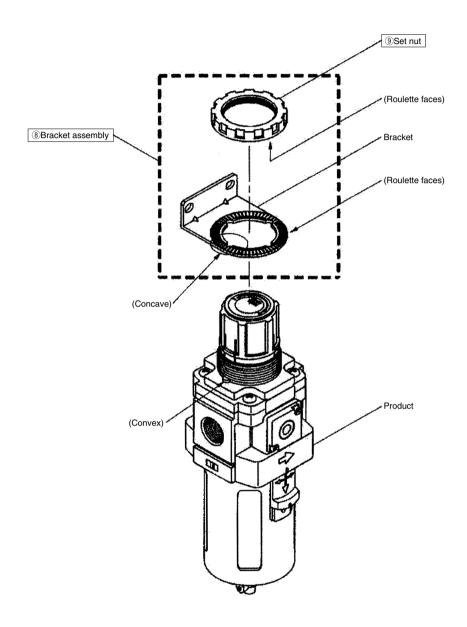

AWD20 to AWD40 Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Bowl Assembly/Element

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly has been tightened too much to be removed, use a hook spanner until it can be loosened by hand.	(Hook spanner Nominal: 34/38)	_
		Remove the element. Hold the element with a spanner to rotate it counterclockwise and remove the element.	Spanner Nominal: 7	_
AWD20	Assembly	Mount the element. Hold the element with a spanner to rotate it clockwise, and mount the element. Refer to the "Check item" for the tightening torque.	Spanner Nominal: 7	Tightening torque: 0.35 ± 0.05 N·m
		Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Refer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 2.2 N⋅m
	Disassembly	Remove the bowl assembly. Push the bowl assembly lock button by hand. Lifting the bowl assembly, rotate the assembly 45 degrees (right or left) to pull out the assembly.	_	_
		Remove the element. Hold the element with a round cutting to rotate it counterclockwise, and remove the element.	Round cutting	_
AWD30 AWD40	Assembly	Mount the element. Hold the element with a round cutting to rotate it clockwise, and mount the element. Refer to the "Check item" for the tightening torque.	Round cutting	Tightening torque: 0.35 ± 0.05 N·m
		4) Mount the bowl assembly. Match the mating mark of the body and the bowl assembly to insert the assembly to the body. Rotate the assembly 45 degrees (right or left) until the lock button is tossed up to mount the bowl assembly. Ensure the lock button is up.	_	Lock button is up.

2. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Rotate the set screw counterclockwise with Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
AWD20		2) Remove parts in order of the pressure adjustment screw as- sembly, spring, and the diaphragm assembly. Please be noted that the diaphragm assembly adheres to the bonnet if disassemble parts with the knob facing downwards.	_	_
AWD30 AWD40	Assembly	Mount parts to the body in order of the diaphragm assembly, spring, and pressure adjustment screw assembly.	_	Direction of the diaphragm assembly and the pressure adjustment screw assembly
		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AWD20 2.15 ± 0.3 N·m AWD30 2.35 ± 0.3 N·m AWD40 3.5 ± 0.3 N·m

AWD20 to AWD40 Series Replacement Procedure 2

3. Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a socket wrench on the socket wrench flat to rotate it counterclockwise, and remove the valve guide.	Socket wrench Nominal: 18	_
		2) Remove the valve spring.	_	_
		3) Remove the valve.	_	_
AWD20	Assembly	Mount the valve. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
		5) Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		Mount the valve guide. Hold the valve guide with a socket wrench on the socket wrench flat to rotate it clockwise, and mount the valve guide. Refer to the "Check item" for the tightening torque.	Socket wrench Nominal: 18	Tightening torque: 40 ± 3.5 N⋅m
		7) Mount the element and bowl assembly.		
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a spanner to rotate it counterclockwise, and remove the valve guide.	Spanner Nominal: AWD30 8 AWD40 12	_
		2) Remove the valve spring.	_	_
		3) Remove the valve.	_	_
AWD30 AWD40	Assembly	Mount the valve. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
		5) Mount the valve spring. Insert the valve spring into the valve hole.	_	_
		Mount the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it clockwise, and mount the valve guide. Refer to the "Check item" for the tightening torque.	Spanner Nominal: AWD30 8 AWD40 12	Tightening torque: AWD30
		7) Mount the element and bowl assembly.		

4. Bracket Assembly, Panel Mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Mount the parts to the bracket (panel). Connect the bracket (panel) concave and the bonnet convex to mount the bracket.	_	_
AWD20 AWD30 AWD40		2) Secure the bracket (panel) with the set nut. Rotate the set nut clockwise with a hook spanner to secure the parts to the bracket (panel). Refer to the "Check item" for the tightening torque. The set nut knurling surface should face the bracket. When mounting with a bracket, a manually tightened set nut is adequate for general use.	Hook spanner Nominal: AWD20 34/38 AWD30 52/55 AWD40 52/55	Tightening torque: AWD20 2.0 ± 0.2 N·m AWD30 3.5 ± 0.3 N·m AWD40 4.0 ± 0.4 N·m

5. Square-embedded Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
AWD20	Disassembly	Remove the pressure gauge cover. Rotate the pressure gauge cover 15 degrees counterclockwise to pull out the pressure gauge cover.	_	_
AWD30 AWD40		Remove the pressure gauge. Rotate the 2 mounting screws counterclockwise with a Phillips head screwdriver to remove the pressure gauge and the 2 mounting screws.	Phillips head screwdriver	-



AWD20 to AWD40 Series Replacement Procedure 3

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Ensure O-ring is mounted to the pressure gauge. Mount O-ring to the pressure gauge if the ring fall off.	_	Presence of O-ring
AWD20 AWD30		Mount the pressure gauge. Rotate two mounting screws clockwise with Phillips head screwdriver to mounting screws temporary. Then secure them with tightening torque in "Check item".	Phillips head screwdriver	Tightening torque: 0.3 ± 0.05 N⋅m
AWD40		5) Mount the pressure gauge cover. Insert the pressure gauge mating two detent of the pressure gauge and holes for them so that the arrow of the pressure gauge cover comes upper right. Rotate the pressure gauge cover 15 degrees opposite to the arrow to mount the pressure gauge.	-	-

6. Circular Pressure Gauge

Applicable model	Process	Procedure	Tools	Check item
AWD20 AWD30 AWD40	Disassembly	Remove the pressure gauge. Hold the pressure gauge with a spanner on the width across flat. Then, rotate the gauge counterclockwise to remove the gauge.	Spanner Nominal: 14	_
	Assembly	Wind the pressure gauge thread with the sealant tape leaving 1.5 to 2 threads from the end.	_	Wind sealant tape leaving 1.5 to 2 threads
		Mount the pressure gauge. Hold the pressure gauge on the width across flat with a spanner, and rotate it clockwise to mount the circular pressure gauge. Refer to the "Check item" for tightening torque of pressure gauge.	Spanner Nominal: 14	Tightening torque: AWD20 7 to 9 N·m AWD40 12 to 14 N·m

7. Pressure Gauge Adapter, Plug Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the plug. Insert the hexagon wrench key to hexagon hole of hexagon plug. Rotate the plug counterclockwise to remove the plug.	Hexagon wrench key Nominal: AWD20 4 AWD30 6	-
AWD20		 Remove the pressure gauge adapter. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the pressure gauge and two mounting screws. 	Phillips head screwdriver	-
AWD30	Assembly	3) Confirm pressure gauge adapter has O-ring. If not, mount O-ring.	_	_
AWD40		Mount pressure gauge adapter. Rotate two mounting screws clockwise by Phillips head screw-driver to fix pressure gauge adapter. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: $0.3 \pm 0.05 \text{ N} \cdot \text{m}$
		5) Mount plug assembly. Insert hexagon wrench key into hexagon hole on the plug and rotate clockwise to fix the plug. Refer to the "Check item" for tightening torque of two screws.	Hexagon wrench key Nominal:	Tightening torque:
			AWD20 4	AWD20
			AWD40 6	AWD40 1.0 ± 0.1 N⋅m

8. Blanking Plate Assembly


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	 Remove the blanking plate. Rotate two mounting screws counterclockwise with Phillips head screwdriver to remove the blanking plate and two mounting screws. 	Phillips head screwdriver	_
AWD20 AWD30	Assembly	2) Confirm blanking plate has O-ring. If not, mount O-ring.	_	_
AWD40		Mount the blanking plate. Rotate two mounting screws clockwise by Phillips head screwdriver to fix blanking plate. Refer to the "Check item" for tightening torque of two screws.	Phillips head screwdriver (Torque driver)	Tightening torque: 0.3 ± 0.05 N·m



ARG20(K), 30(K), 40(K) Exploded View 1

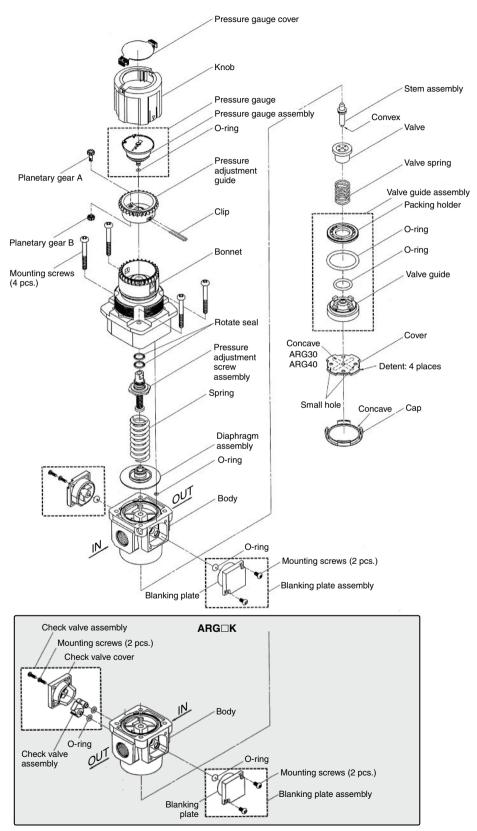

ARG20(K), 30(K), 40(K) Bracket Assembly, Panel Mount Exploded View 2

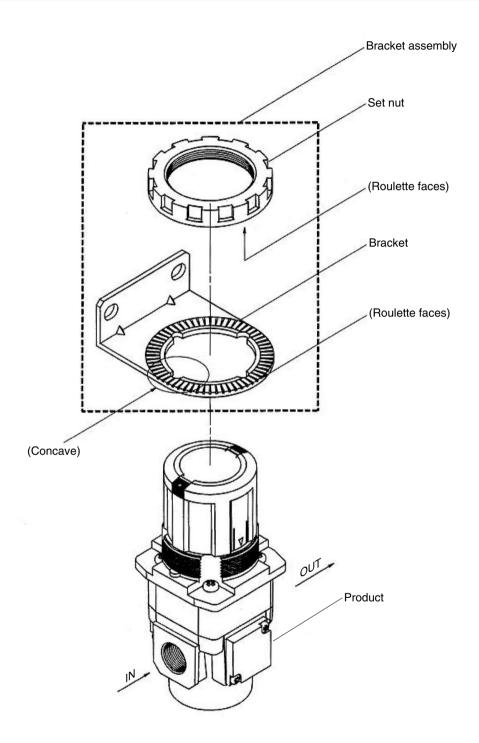

ARG20(K), 30(K), 40(K) Series Replacement Procedure for Diaphragms 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Rotate the mounting screw counterclockwise with Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
ARG20(K) ARG30(K)		 Remove parts in order of the spring and the diaphragm as- sembly. Please be noted that the diaphragm assembly ad- heres to the bonnet if disassemble parts with the knob facing downwards. 	_	_
ARG40(K)	Assembly	3) Mount the diaphragm assembly first and then spring on the body.	_	Direction of diaphragm assembly
		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: ARG20(K) 2.15 ± 0.3 N·m ARG30(K) 2.35 ± 0.3 N·m ARG40(K) 3.5 ± 0.3 N·m

2. Valve Guide Assembly, Valve

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the cap. Insert the watchmakers screwdriver in the gap between the body and the cap and dig up the cap.	Watchmakers screwdriver	_
		Remove the cover. Insert the circular pliers into the 2 small holes of the cover, rotate 45 degrees to one side or the other and lift.	Circular pliers Nominal: 125	ı
		Remove the valve guide assembly. Hold the valve guide with a needle nose pliers, and lift it.	Needle nose pliers	
		4) Remove the valve spring.	_	_
		5) Remove the valve.	_	_
ARG20(K) ARG30(K)	Assembly	Mount the valve. Connect the stem convex and the valve center hole.	_	Positioning of the stem and the valve (centering)
ARG40(K)		7) Mount the valve spring. Insert the valve spring to the valve hole.	_	_
		8) Mount the valve guide assembly and the cover assembly to the body. Align the body groove and the cover clamp, push in the valve guide and cover assembly, insert the circular pliers into the 2 small holes of the cover and rotate 45 degrees to one side or the other to lock into place.	Circular pliers Nominal: 125	_
		9) Mount the cap. Connect the convex of the body cover and the concave of the cap, and push them in to secure. Ensure the end of the body and the cap are almost flat.	_	Orientation of the body and the cap. Body end and the cap are almost flat.



3. Bracket Assembly, Panel Mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly	Mount the parts to the bracket (panel). Connect the bracket (panel) concave and the bonnet convex to mount the bracket.	_	-
ARG20(K) ARG30(K) ARG40(K)		2) Secure the bracket (panel) with the set nut. Rotate the set nut clockwise with a hook spanner to secure the parts to the bracket (panel). Refer to the "Check item" for the tightening torque. When mounting the bracket for ARG20(K)/30(K)/40(K), ensure that the roulette faces of the set nut and the bracket are mated appropriately. When mounting with a bracket, a manually tightened set nut is adequate for general use. (ARG20(K)/30(K)/40(K))	ARG20(K)/30(K)/40(K) Hook spanner Nominal: ARG20(K) 52/55 ARG30(K) 58/65 ARG40(K) 65/70	Tightening torque: ARG20(K) 2.5 ± 0.2 N·m ARG30(K) 3.5 ± 0.3 N·m ARG40(K) 4.0 ± 0.4 N·m

ARG20(K), 30(K), 40(K) Series Procedure of the Pressure Gauge Replacement and Angle Adjustment 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.


After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

Applicable model	Process	rocess Procedure		Check item
	Disassembly	Preparation Release the pressure adjustment knob lock with the pressure adjustment knob completely loosened.	_	Orange line can be seen between the pressure adjustment knob and the bonnet.
		2) Removal of the knob Pull out the knob to remove at the position where ▼ mark of the knob and ▲ mark of the bonnet meet. Knob ▼ mark ■ mark ■ mark	_	_
ARG20(K) ARG30(K) ARG40(K)		3) Removal of the clip The clip becomes visible from the side window of the bonnet if ▲ mark of the bonnet and ▼ mark of the pressure adjustment guide meet, pull out the clip with tweezers. * Rotate the pressure adjustment guide clockwise when matching the mark. Pressure adjustment guide ▼ mark Bonnet side Bonnet	Tweezers	_
		Removal of the pressure gauge Pull out the pressure gauge holding the outer circumference of the dial. * Don't touch the internal component of the pressure gauge (surrounded by dashed line). It may damage the indication accuracy of the pressure gauge. Outer circumference of the dial	_	_
	Assembly	5) Setting the pressure gauge Hold the outer circumference of the dial and set the gauge at specified angle, and push in the gauge lightly. For reference, table 1 shows the gap dimension between the bottom surface of the dial and the top surface of the pressure adjustment guide after mounting the pressure gauge. Note 1) If the gauge does not enter by some interference when setting the pressure gauge, set the gauge by slightly rotating it in rotating di- rection. (The planet gear of the pressure adjustment guide and the sun gear integrated in the pressure gauge interfere each other.) Note 2) Set the pressure gauge completely. Note 3) The end of the pressure gauge has greased O-ring. Attention should be taken so that dust and particle not enter to the pressure gauge.	_	FIG. 1. Gap dimension ARG20(K) ARG30(K) ARG40(K) Xdimension (Reference value) 2.6 mm 3.3 mm 3.3 mm


ARG20(K), 30(K), 40(K) Series Procedure of the Pressure Gauge Replacement and Angle Adjustment 2

Applicable model	Process	Procedure	Tools	Check item
ARG20(K) ARG30(K) ARG40(K)	Assembly	6) Setting the clip Insert the clip from the side window of the bonnet where ▲ mark of the pressure adjustment guide and ▼ mark of the bonnet meet. Use something sharp like tweezers when insert- ing the clip to the end. If the clip is not inserted to the end the knob may not rotate after setting the knob. Note 1) Clip is slightly tapered to the end to avoid falling off. Slight- ly open the end of the clip when setting the clip. Note 2) Following causes are possible when the clip is stuck in the middle. ① The pressure adjustment screw is lower than the original position. (Gap is made between the pressure adjustment nut and the spring. When the pressure adjustment screw is completely loosened, the pressure adjustment screw may be lowered if excessive press force applied to the pressure adjustment screw.) Countermeasure Turn the pressure adjustment guide approx. 5 times clockwise (pressure rise direction). ② Pressure gauge is not properly set. Countermeasure5) See setting the pressure gauge. Pressure Adjustment guide ▼ mark Bonnet Bonnet	Tweezers	_
		7) Setting the knob Set the knob, and finish.		_


AWG20 Exploded View 1

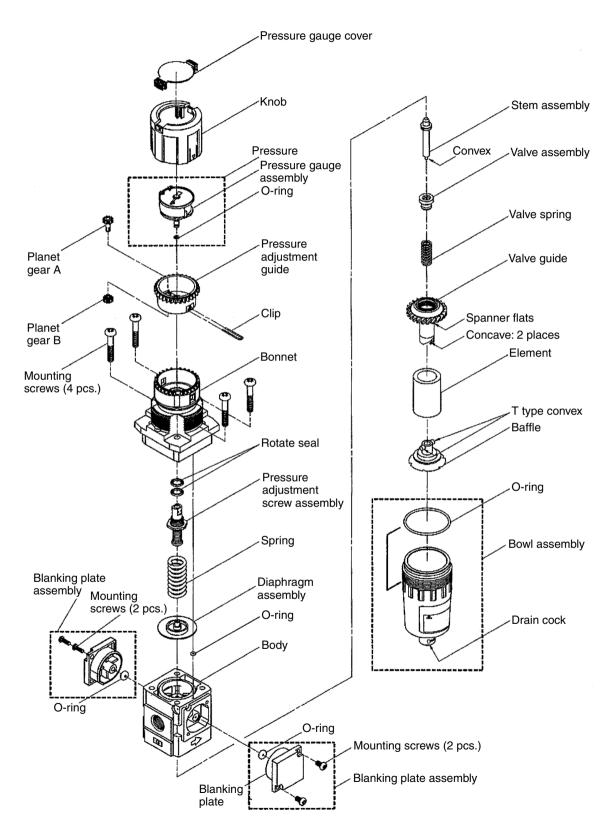

AWG30, 40 Exploded View 2

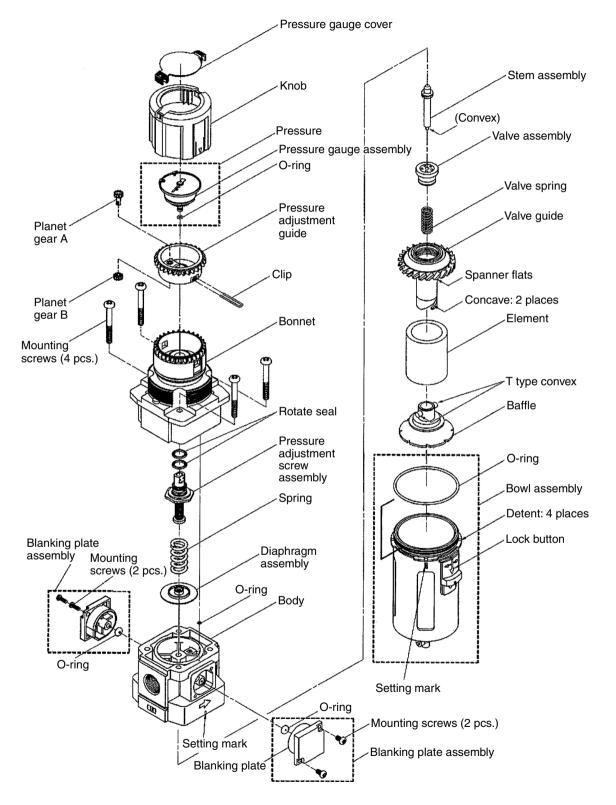

AWG20, 30, 40 Bracket Assembly, Panel Mount Exploded View 3

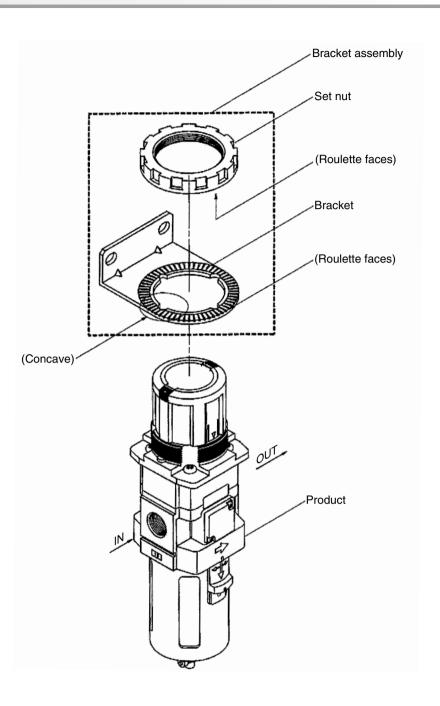

AWG20, 30, 40 Series Replacement Procedure for Diaphragms 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

Replace while referring to the "Exploded View."

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Bowl Assembly/Element

Applicable model	Process	Procedure	Tools	Check item
	Disassembly 1) Remove the bowl assembly. Hold the bowl assembly by hand and rotate counterclockwise to remove the bowl assembly. If the bowl assembly has been tightened too much to be removed, use a hook spanner until it can be loosened by hand.		(Hook spanner) (Nominal: 34/38)	_
		Remove the baffle and element. Rotate the baffle by hand and counterclockwise to remove the baffle and element.	_	_
AWG20	Assembly	Mount the element. Mount the element to the valve guide.	_	_
		4) Mount the baffle. Insert the baffle so that concave on the valve guide could meet T convex on the baffle. And rotate it clockwise manually until feeling snap fit (approx. 110°) to fix to the element.	_	_
		5) Mount the bowl assembly. Hold the bowl assembly by hand and rotate clockwise. Do not use tool for mounting because the bowl may be damaged. Refer to the "Check item" for referential tightening torque.	_	Referential tightening torque: 2.2 N·m
	Disassembly	Remove the bowl assembly. Push the bowl assembly lock button. Lifting the bowl assembly, rotate the assembly 45 degrees (right or left) to pull out the assembly.	_	_
		Remove the baffle and element. Rotate the baffle by hand and counterclockwise to remove the baffle and element.	_	_
AWG30	Assembly	Mount the element. Mount the element to the valve guide.	_	_
AWG40		4) Mount the baffle. Insert the baffle so that concave on the valve guide could meet T convex on the baffle. And rotate it clockwise manually until feeling snap fit (approx. 110°) to fix to the element.	_	Direction of baffle. For element convex side.
		5) Mount the bowl assembly. Match the mating mark of the body and the bowl assembly to insert the assembly to the body. Rotate the assembly 45 degrees (right or left) until the lock button is tossed up to mount the bowl assembly. Ensure the lock button is up.	_	Lock button is up.

2. Diaphragm Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the bonnet assembly. Rotate the set screw counterclockwise with Phillips head screwdriver to remove the bonnet from the body.	Phillips head screwdriver	_
AWG20 AWG30		 Remove parts in order of the spring, and the diaphragm as- sembly. Please be noted that the diaphragm assembly ad- heres to the bonnet if disassemble parts with the knob facing downwards. 	_	_
AWG40	Assembly	3) Mount parts to the body in order of the diaphragm assembly, spring.	_	Diaphragm
		4) Mount the bonnet to the body. Mount the convex IN side of the bonnet to the body, and tighten the 4 mounting screws half way with a Phillips head screwdriver. Then, tighten the screws completely in a diagonal pattern with the indicated tightening torque.	Phillips head screwdriver	Tightening torque: AWG20 2.15 ± 0.3 N·m AWG30 2.35 ± 0.3 N·m AWG40 3.5 ± 0.3 N·m

3. Valve Assembly

Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Remove the valve guide after removing the bowl assembly and element. Hold the valve guide with a spanner on the spanner flat to rotate it counterclockwise, and remove the valve guide.	Spanner Nominal: AWG20 7 AWG30 17 AWG40 21	-
		2) Remove the valve spring.	_	_
	AWG30 Connect the stem convex and the valve center hole.		_	_
AWG20 AWG30 AWG40			_	Positioning of the stem and the valve (centering)
			_	_
		Mount the valve guide. Hold the valve guide with a spanner on the spanner flat to rotate it clockwise, and mount the valve guide. Refer to the "Check item" for the tightening torque.	Spanner Nominal:	Tightening torque: AWG20

4. Bracket Assembly, Panel mount

Applicable model	Process	Procedure	Tools	Check item
	Assembly 1) Mount the parts to the bracket (panel) Connect the bracket (panel) concave and the bonnet convet to mount the bracket.		_	_
AWG20 AWG30 AWG40		2) Secure the bracket (panel) with the set nut. Rotate the set nut clockwise with a hook spanner to secure the parts to the bracket (panel). Refer to the "Check item" for the tightening torque. Set nut knurling surface should face the bracket (AWG20 to 40). When mounting with bracket, a manually tightened set nut is adequate for general use. (AWG20 to 40)	AWG20/30/40 Hook spanner Nominal: AWG20 52/55 AWG30 58/65 AWG40 65/70	Tightening torque: AWG20

AWG20, 30, 40 Series Procedure of the Pressure Gauge Replacement and Angle Adjustment 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Rotate the pressure adjusting knob to zero.

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.


Applicable model	Process	Procedure	Tools	Check item
	Disassembly	Preparation Release the knob lock with the pressure adjustment knob completely loosened.	_	Orange line can be seen between the knob and the bonnet.
		2) Removal of the knob. Pull out the knob to remove at the position where ▼ mark of the knob and ▲ mark of the bonnet meet. Knob ▼ mark ■ mark ■ mark	-	
AWG20 AWG30 AWG40		3) Removal of the clip. The clip becomes visible from the side window of the bonnet if ▲ mark of the bonnet and ▼ mark of the pressure adjustment guide meet, pull out the clip with tweezers. * Rotate the pressure adjustment guide clockwise when matching the mark. Adjust guide W mark Bonnet side Bonnet	Tweezers	_
A110-10		4) Removal of the pressure gauge. Pull out the pressure gauge holding the outer circumference of the dial. * Don't touch the internal component of the pressure gauge (surrounded by dashed line). It may damage the indication accuracy of the pressure gauge. Outer circumference of the dial	_	_
	Assembly	5) Setting the pressure gauge Hold the outer circumference of the dial and set the gauge at specified angle, and push in the gauge lightly. For reference, table 1 shows the gap dimension between the bottom surface of the dial and the top surface of the pressure adjustment guide after mounting the pressure gauge. Note 1) If the gauge does not enter by some interference when setting the pressure gauge, set the gauge by slightly rotating it in rotating direction. (The planet gear of the pressure adjustment guide and the sun gear integrated in the pressure gauge interfere each other.) Note 2) Set the pressure gauge completely. Note 3) The end of the pressure gauge has greased O-ring. Attention should be taken so that dust and particle not enter to the pressure gauge.	-	FIG. 1. Gap dimension AWG20 AWG30 AWG40 X dimension Reference value 2.6 mm 3.3 mm 3.3 mm

AWG20, 30, 40 Series Procedure of the Pressure Gauge Replacement and Angle Adjustment 2

ŧ	2	

Applicable model	Process	Procedure	Tools	Check item
AWG20 AWG30 AWG40	Assembly	lnsert the clip. Insert the clip from the side window of the bonnet where ▲ mark of the pressure adjustment guide and ▼ mark of the bonnet meet. Use something sharp like tweezers when inserting the clip to the end. If the clip is not inserted to the end the knob may not rotate after setting the knob. Note 1) Clip is slightly tapered to the end to avoid falling off. Slightly open the end of the clip when setting the clip. Note 2) Following causes are possible when the clip is stuck in the middle. ①The pressure adjustment screw is lower than the original position. (Gap is made between the pressure adjustment nut and the spring. When the pressure adjustment screw is completely loosened, the pressure adjustment screw may be lowered if excessive press force applied to the pressure adjustment screw.) Countermeasure Turn the pressure adjustment guide approx. 5 times clockwise (pressure rise direction). ② Pressure gauge is not properly set. Countermeasure5) See setting the pressure gauge. Pressure adjustment guide ▼ mark Bonnet Side window	Tweezers	_
		7) Setting the knob Set the knob, and finish.	_	_




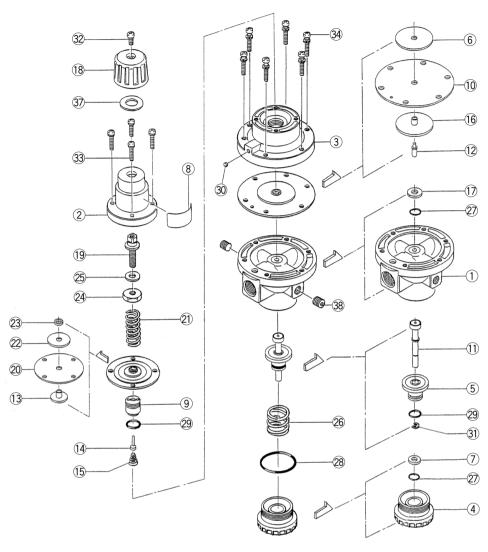

Con	Component Parts					
Item	Part Name	Qty	Remarks			
1	Body	1	Chromate treatment			
2	Bonnet	1	Chromate treatment			
3	Chamber	1	Chromate treatment			
4	Valve guide	1	Chromate treatment			
(5)	Valve	1	Rubber lining material: HNBR			
6	Diaphragm shell	1	Zinc chromate treatment			
7	O-ring holder	1	Chromate treatment			
8	Name plate	1	Complete product No. indicated			
9	Valve seat	1				
10	Diaphragm	1				
11	Stem	1	Rubber lining material: HNBR			
12	Rod	1				
13	Diaphragm holder	1				
14)	Pilot valve	1	Rubber lining material: HNBR			
15	Valve spring	1				
16	Diaphragm holder	1				
17	O-ring holder	1	Chromate treatment			
18	Knob	1				

Item	Part Name	Qty	Remarks
19	Adjustment screw	1	Zinc chromate treatment
20	Diaphragm	1	
21)	Spring	1	Zinc chromate treatment
22	Diaphragm shell	1	Chromate treatment
23	Washer	1	
24	Spring holder	1	Zinc chromate treatment
25	Seal	1	
26	Valve spring	1	
27)	O-ring	2	JIS B2401 P5
28	O-ring	1	JIS B2401 G35
29	O-ring	2	JIS B2401 P10
30	Steel ball	1	ø4
31)	Retaining ring	1	JIS B2805 4
32	Cross recessed round head screw	1	M5 x 0.8 x 8 Black Zn. chromate treatment
33	Cross recessed round head screw	4	M4 x 0.7 x 16 Nickel plating
34)	Cross recessed round head screw	6	M5 x 0.8 x 22 Nickel plating
37)	Flat washer	1	ø10.5 x ø20 x 1.2 Zinc chromate treatment
38	Hexagon socket head plug	2	R(PT) 1/4 Nickel plating


AR625 Exploded View 2

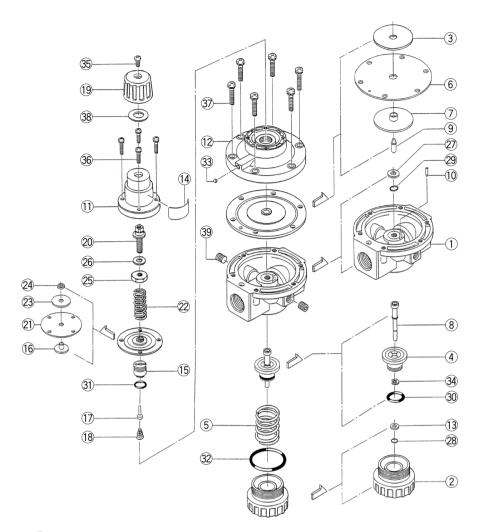

Component Parts

CUII	iponeni Faris		
Item	Part Name	Qty	Remarks
1	Body	1	Chromate treatment
2	Valve guide	1	Chromate treatment
3	Diaphragm shell	1	Zinc chromate treatment
4	Valve	1	Rubber lining material: HNBR
5	Valve spring	1	
6	Diaphragm	1	
7	Diaphragm holder	1	
8	Stem	1	Rubber lining material: HNBR
9	Rod	1	
10	Static pressure tube	1	
11)	Bonnet	1	Chromate treatment
12	Chamber	1	Chromate treatment
13	O-ring holder	1	Chromate treatment
14	Name plate	1	Complete product No. indicated
15	Valve seat	1	
16	Diaphragm holder	1	
17	Pilot valve	1	Rubber lining material: HNBR
18	Valve spring	1	
19	Knob	1	
20	Adjustment screw	1	Zinc chromate treatment

Item	Part Name	Qty	Remarks
21)	Diaphragm	1	
22	Spring	1	Zinc chromate treatment
23	Diaphragm shell	1	Chromate treatment
24)	Washer	1	
25	Spring holder	1	Zinc chromate treatment
26	Seal	1	
27)	O-ring holder	1	Chromate treatment
28	O-ring	1	JIS B2401 P5
29	O-ring	1	JIS B2401 P6
30	O-ring	1	JIS B2401 P16
31)	O-ring	1	JIS B2401 P10
32	O-ring	1	JIS B2401 G40
33	Steel ball	1	ø4
34)	Retaining ring	1	JIS B2805 4
35	Cross recessed round head screw	1	M5 x 0.8 x 8 Black Zn. chromate treatment
36	Cross recessed round head screw	4	M4 x 0.7 x 16 Nickel plating
37)	Cross recessed round head screw	6	M6 x 1 x 22 Nickel plating
38	Flat washer	1	ø10.5 x ø20 x 1.2 Zinc chromate treatment
39	Hexagon socket head plug	2	R(PT) 1/4 Nickel plating

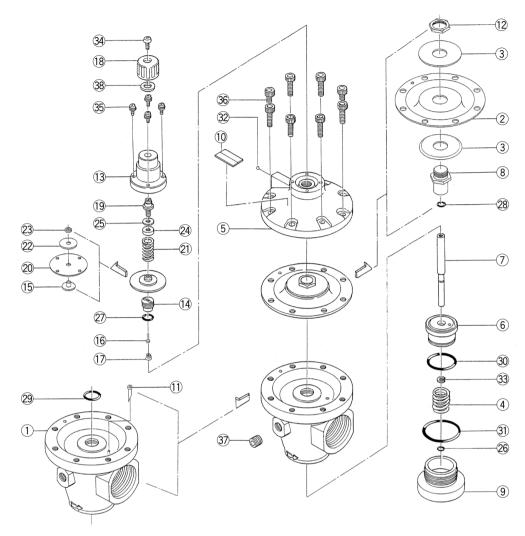


Component Parts

Component i dits			
Part Name	Qty	Remarks	
Body	1	Chromate treatment	
Diaphragm	1		
Diaphragm shell	2	Zinc Chromate treatment	
Valve spring	1		
Chamber	1	Chromate treatment	
Valve	1	Rubber lining material: HNBR	
Stem	1		
Diaphragm shell holder	1		
Valve guide	1	Chromate treatment	
Name plate	1	Complete product No. indicated	
Static pressure tube	1		
Set nut	1		
Bonnet	1	Chromate treatment	
Valve seat	1		
Diaphragm holder	1		
Pilot valve	1	Rubber lining material: HNBR	
Valve spring	1		
Knob	1		
Adjustment screw	1	Zinc Chromate treatment	
	Part Name Body Diaphragm Diaphragm shell Valve spring Chamber Valve Stem Diaphragm shell holder Valve guide Name plate Static pressure tube Set nut Bonnet Valve seat Diaphragm holder Pilot valve Valve spring Knob	Part Name Qty Body 1 Diaphragm 1 Diaphragm shell 2 Valve spring 1 Chamber 1 Valve 1 Stem 1 Diaphragm shell holder 1 Valve guide 1 Name plate 1 Set nut 1 Bonnet 1 Valve seat 1 Diaphragm holder 1 Pilot valve 1 Valve spring 1 Knob 1	

Item	Part Name	Qty	Remarks
20	Diaphragm	1	T to marke
21	Spring	1	Zinc Chromate treatment
22	Diaphragm shell	1	Chromate treatment
23	Washer	1	
24	Spring holder	1	Zinc Chromate treatment
25	Seal	1	
26	O-ring	1	JIS B2401 P7
27)	O-ring	1	JIS B2401 P10
28	O-ring	1	
29	O-ring	1	JIS B2401 P20
30	O-ring	1	JIS B2401 P30
31)	O-ring	1	JIS B2401 G50
32	Steel ball	1	ø4
33	Retaining ring	1	TE-23
34)	Cross recessed round head screw	1	M5 x 0.8 x 8 Black Zinc chromate treatment
35	Cross recessed round head screw	4	M4 x 0.7 x 16 Nickel plating
36	Hexagon socket head cap screw	8	M8 x 1.25 x 18 Nickel plating
37)	Hexagon socket head plug	2	R(PT) 1/4 Nickel plating
38	Flat washer	1	ø10.5 x ø20 x 1.2 Zinc Chromate treatment

AR925 Exploded View 4

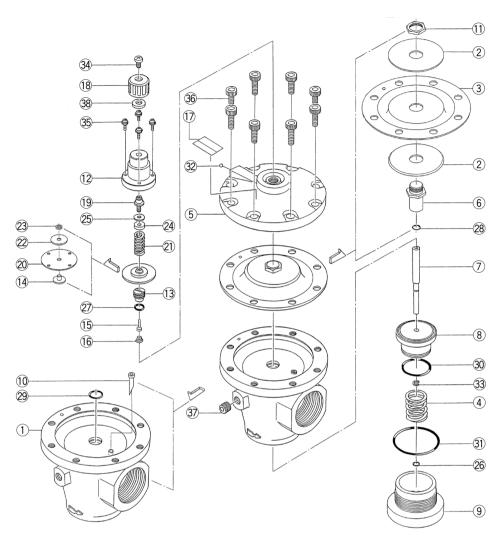

Component Parts

OUII	Component Farts			
Item	Part Name	Qty	Remarks	
1	Body	1	Chromate treatment	
2	Diaphragm shell	2	Zinc chromate treatment	
3	Diaphragm	1		
4	Valve spring	1		
5	Chamber	1	Chromate treatment	
6	Diaphragm shell holder	1		
7	Stem	1		
8	Valve	1	Rubber lining material: HNBR	
9	Valve guide	1	Chromate treatment	
10	Static pressure tube	1		
11	Set nut	1		
12	Bonnet	1	Chromate treatment	
13	Valve seat	1		
14)	Diaphragm holder	1		
15	Pilot valve	1	Rubber lining material: HNBR	
16	Valve spring	1		
17	Name plate	1	Complete product No. indicated	
18	Knob	1		
19	Adjustment screw	1	Zinc chromate treatment	


Item	Part Name	Qty	Remarks
20	Diaphragm	1	
21)	Spring	1	Zinc chromate treatment
22	Diaphragm shell	1	Chromate treatment
23	Washer	1	
24)	Spring holder	1	Zinc chromate treatment
25	Seal	1	
26	O-ring	1	JIS B2401 P7
27)	O-ring	1	JIS B2401 P10
28	O-ring	1	
29	O-ring	1	JIS B2401 P20
30	O-ring	1	JIS B2401 P42
31)	O-ring	1	JIS B2401 G70
32	Steel ball	1	ø5
33	Retaining ring	1	TE-23
34)	Cross recessed round head screw	1	M5 x 0.8 x 8 Black Zinc chromate treatment
35	Cross recessed round head screw	4	M4 x 0.7 x 16 Nickel plating
36	Hexagon socket head cap screw	8	M10 x 1.5 x 20 Nickel plating
37)	Hexagon socket head plug	2	R(PT) 1/4 Nickel plating
38	Flat washer	1	ø10.5 x ø20 x 1.2 Zinc chromate treatment

AMR3000 to 6000 Series Replacement Procedure for Elements

1. Element Replacement Method

To replace the element, carry out the procedure of 1-1 to 1-8 below while referring to the figure.

- 1-1. Using a hexagonal wrench, loosen the four hexagon socket head cap screws and remove the bowl. At this time, confirm that the O-ring groove in the bowl. If the O-ring is out of place, fit it into the O-ring groove.
- 1-2. Using a spanner, loosen the domed cap nut and remove it together with the gasket.
- 1-3. Pull the element downwards and remove it. If the element is difficult to remove, remove it by pushing it in the horizontal direction.
- 1-4. Coat the top of the element seal with a thin layer of grease, then set the seal so that it is uppermost and pass the tension bolt through it.
- 1-5. Pass the tension bolt through the gasket, then tighten the domed cap nut to fix the gasket in place.
- 1-6. Confirm that the O-ring is fitted in the O-ring groove in the bowl, and set the liquid level gauge so that it is facing the front.
- 1-7. Fix the bowl by tightening the four hexagon socket head cap screws.
- 1-8. Confirm that there is no leakage between the bowl and the housing.

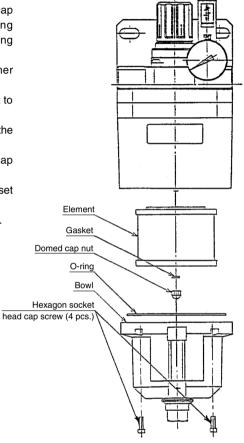

ARM5A/5B/5S Series Replacement Procedure for Diaphragms 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Fully rotate the pressure adjusting knob counterclockwise and return it to zero.


After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. Replacement of Pressure Gauge/Port Plug

Content	Renlacement of pres	sure gauge/nort plug	
Parts	Replacement of pressure gauge/port plug Pressure gauge, port plug		
Tools	_	blade screwdriver	
Process	Disassembly	Assembly	
Procedure	1) Insert a watchmakers flat blade screwdriver along with taper of hole A on OUT side of the body. 2) Hook the tip of the screwdriver to the inserted clip, and pull out the clip. * As the clip may fly out, pull it slowly as holding it with a hand. 3) Pull out the mounted pressure gauge/port plug.	1) Insert the pressure gauge/port plug all the way in properly. 2) Put the clip back to the hole. Use the tip of the watchmakers flat blade screw driver to insert the clip to the end properly.	
Check item	_	Presence of the O-ring (If dust or particles are remained on the O-ring it may cause air leakage. Therefore take measures to prevent them from attaching on the O-ring.	
Exploded view	O-ring Body Clip	O-ring Regulator	

2. Replacement of One-touch Fittings

Content	Exchange of One-touch fittings (IN side and OUT side port) One-touch fittings		
Parts			
Tools	Watchmakers flat blade screwdriver		
Process	Disassembly	Assembly	
Procedure	1) Insert a watchmakers flat blade screwdriver along with taper of hole B on OUT side of the body. 2) Hook the tip of the screwdriver to the inserted clip, and pull out the clip. * As the clip may fly out, pull it slowly as holding it with a hand. 3) Pull out the mounted One-touch fitting.	Insert the One-touch fitting all the way in properly. Put the clip back to the hole. Use the tip of the watchmakers flat blade screw driver to insert the clip to the end properly.	
Check item	_	Presence of the O-ring (If dust or particles are remained on the O-ring it may cause air leakage. Therefore take measures to prevent them from attaching on the O-ring.)	

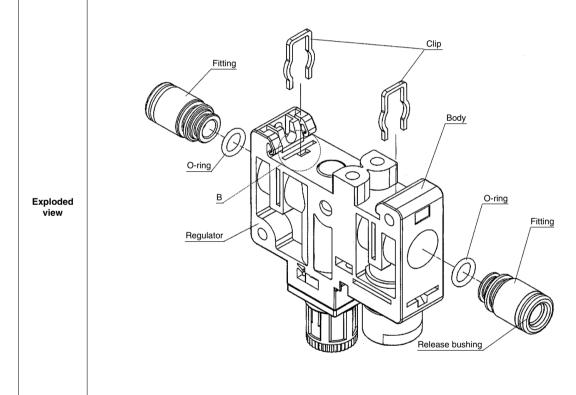

* If it is hard to remove the fitting, do not remove the release bushing with a strong force. It that case, install the tube and plug, and pull the fitting out together with them.

3. Replacement of Manifold Stations (Common Supply Specification)

.		
Content	Change of manifold stations and common supply block	
Parts	Regulator block, common supply block	
Tools	Phillips head	
Process	Disassembly 1) Loosen and remove the cross recessed round head screw on the corner of the end block. 2) Pull out the tie-rod from the end block, common supply block and regulator.	1) Connect the several tie-rods from each other. 2) Engage the tie-rods with the upper left side of the end block, and temporarily tighten them with 2 pcs. of cross recessed round head screws. 3) Check that O-ring is mounted on the recessed connection of each block of the manifold, and insert the each block to the tie-rods. 4) Temporarily tighten the cross recessed round head screws on the right side. 5) Tighten the cross recessed round head screws on both sides of manifold within the following specified torque.
Check item	_	Presence of the O-ring (If dust or particles are remained on the O-ring it may cause air leakage. Therefore take measures to prevent them from attaching on the O-ring.)
Exploded view	Note) The length of tie-rod and common supply tie-rod is varied depending on the applicable stations. Tie-rods for additional stations, tie-rods for applicable stations or common supply tie-rods are necessary separately. Common supply regulator block Common supply block Tie-rod for additional regulator Common supply block Common supply block Tie-rod for additional regulator Common supply block Tie-rod for additional regulator Common supply block Tie-rod for additional regulator Common supply block Tie-rod for additional regulator	O-ring Cross recessed round head screws (with SW) (M3) * For common supply blocks, reversible and double-sided mounting is available.

Content

Parts

view

End block

Change of manifold stations

Regulator block

4. Replacement of Manifold Stations (Individual Supply Specification)

Tools	Phillips head screwdriver	
Process	Disassembly	Assembly
Procedure	Loosen and remove the cross recessed round head screw on the corner of the end block. Pull out the tie-rod from the end block, common supply block and regulator.	1) Connect the several tie-rods from each other. 2) Engage the tie-rods with the upper left side of the end block and temporarily tighten them with 2 pcs. of cross recesser round head screws. 3) Insert each block to the tie-rod. 4) Temporarily tighten the cross recessed round head screw (2 pcs.) on the right side. 5) Tighten the cross recessed round head screws on bott sides of manifold within the following specified torque.
Check item	_	_
	Note) The length of tie-rod and common supply tie-rod is varied depending on the applicable stations. Tie-rods for additional stations, tie-rods for applicable stations or common supply tie-rods are necessary separately. Individual supply regulator block	
Exploded	Tie-rod for additional regulator station	

Cross recessed round head screws (with SW) (M3)



Tie-rod

Cross recessed round head screws

Tightening torque: 0.32 ± 0.03 N⋅m

(with SW) (M3)

ARM10/11A/11B Series Replacement Procedure 1

△Warning

Before replacement, ensure that the regulator is not pressurized.

Fully rotate the pressure adjusting knob counterclockwise and return it to zero.

After replacement, ensure that the specified function is satisfied and that no external leakage is found before resuming operation.

1. ARM10 Regulator

Content	Wash and replacement of diaphrag	gm, O-ring, valve and valve spring.
Tools		snap ring pliers, tweezers
Process	Disassembly	Assembly
Procedure	1) Rotate the bonnet counterclockwise by holding its width across flats with a spanner to disconnect. (The pressure adjustment screw and spring are to remain mounted on the bonnet.) 2) Remove the diaphragm assembly manually. 3) Remove the valve seat assembly by holding it with snap ring pliers. 4) Remove the valve and valve spring.	1) Mount the valve spring and the valve with tweezers. 2) Mount the valve seat assembly (with two O-rings mounted) with snap ring pliers so that the static pressure part of the valve seat and the OUT passage can be in the proper position. 3) Hold the valve seat assembly by accessing it from the side opening to prevent it from coming apart. 4) Mount the diaphragm assembly. 5) Mount the bonnet which has the pressure adjustment screw and the spring installed to its body, and rotate it clockwise by holding the width across flats with a spanner to connect it to the body.
Check item	_	Presence of the O-ring Position of the static pressure part of the valve and the OUT passage
Disassembly/ Assembly procedure	Rotate counter-clockwise by holding the width across flats with a spanner to disconnect.	Rotate clockwise by holding the width across flats with a spanner to connect. 1) Mounted condition of the O-ring 2) Position of the static pressure part and the OUT passage

2. ARM11 A/ARM11 C Regulator Block (Knob Position: Top or Bottom Type)

Content	Wash and replacement of gasket, diap	ohragm, O-ring, valve and valve spring
Tools	Phillips head screwdriver, spanner (18	mm in width), snap ring pliers, tweezers
Process	Disassembly	Assembly
Procedure	1) Loosen and remove round head screws of regulator assembly by Phillips head screwdriver to become the regulator assembly able to be disconnected manually. 2) Rotate the bonnet counterclockwise by holding its width across flats with a spanner to disconnect. (The pressure adjustment screw and spring are to remain mounted on the bonnet.) 3) Remove the diaphragm assembly manually. 4) Remove the valve seat assembly by holding it with snap ring pliers. 5) Remove the valve and valve spring.	1) Mount the valve spring and the valve with tweezers. 2) Mount the valve seat assembly (with two O-rings mounted) with snap ring pliers so that the static pressure part of the valve seat and character "A" on body can be in the proper position. 3) Hold the valve seat assembly by accessing it from the side opening to prevent it from coming apart. 4) Mount the diaphragm assembly. 5) Mount the bonnet which has the pressure adjustment screw and the spring installed to its body, and rotate it clockwise by holding the spanner flat with a spanner to connect it to the body. 6) Mount regulator assembly on manifold block and hold it by tightening two round screws by Phillips head screwdriver.
Check item	_	1) Presence of the O-ring 2) Position of the static pressure part of the valve seat and character "A" on body. 3) Tightening torque of round screw: 0.32 ± 0.03 N-cm
Disassembly/ Assembly procedure	Rotate counterclockwise by holding the width across flats with a spanner to disconnect. Disassembly direction Disassembly direction Output Disassembly	Rotate clockwise by holding the width across flats with a spanner to connect.

3. ARM11 B Regulator Block (Knob Position: Front Type)

Content	Wash and replacement of gasket, diaphragm, O-ring, valve and valve spring		
Tools		mm in width), snap ring pliers, tweezers	
Process	1) Loosen and remove round head screws of regulator as-	Assembly 1) Mount the valve spring and the valve with tweezers.	
Procedure	sembly by Phillips head screwdriver to become the regulator assembly able to be disconnected manually. 2) Rotate the bonnet counterclockwise by holding its width across flats with a spanner to disconnect. (The pressure adjustment screw and spring are to remain mounted on the bonnet.) 3) Remove the diaphragm assembly manually. 4) Remove the valve seat assembly by holding it with snap ring pliers. 5) Remove the valve and valve spring.	 Mount the valve seat assembly (with two O-rings mounted) with snap ring pliers so that the static pressure part of the valve seat and character "B" on body can be in the proper position. Hold the valve seat assembly by accessing it from the side opening to prevent it from coming apart. Mount the diaphragm assembly. Mount the bonnet which has the pressure adjustment screw and the spring installed to its body, and rotate it clockwise by holding the spanner flat with a spanner to connect it to the body. Mount regulator assembly on manifold block and hold it by tightening two round screws by Phillips head screwdriver. 	
Check item	_	1) Presence of the O-ring 2) Position of the static pressure part of the valve seat and character "B" on body 3) Tightening torque of round head screw: 0.32 ± 0.03 N·cm	
Disassembly/ Assembly procedure	Rotate counterclockwise by holding the width across flat with a spanner to disconnect. Disassemply direction	Rotate clockwise by holding the width across flat with a spanner to connect.	

4. ARM10, 11 Regulator, Manifold Block

Content	Wash, air blowing and replacement of O-ring of fittings			
Tools	Watchmakers flat blade screwdriver			
Process	Disassembly	Assembly		
Procedure	Remove the clip with held by watchmakers flat blade screwdriver. Pull the fitting assembly out manually.	Push the fitting assembly until it comes to a stop to mount. Push the clip until it comes to a stop to mount.		
Check item	_	Confirmation that the fitting assembly reaches mounting end for it. Confirmation that the clip reaches mounting end for it.		
Disassembly/ Assembly procedure	Disassembly direction A Compared to the comp	Assembly direction Assembly direction		

5. ARM11 Regulator Block

Content	Wash and replacement of O-ring of bushing				
Tools	Watchmakers flat blade screwdriver				
Process	Disassembly	Assembly			
Procedure	Remove the bushing with held by watchmakers flat blade screwdriver. Remove the O-ring from the bushing.	Nount the O-ring to bushing. Push the bushing until it comes to a stop to mount.			
Check item	-	1) Confirmation that the bushing reaches mounting end for it.			
Disassembly/ Assembly procedure	Hold here by watch-makers flat blade screwdriver.	Assembly direction O			

ARM10/11A/11B Series Replacement Procedure 5

6. ARM10 Regulator

Content	Wash and replacement of O-ring of pressure gauge		
Tools	Phillips head screwdriver		
Process	Disassembly	Assembly	
Procedure	Remove the cover assembly by rotating counterclockwise manually. Loosen and remove two round head screw by Phillips head screwdriver. Remove the pressure gauge assembly. Remove the O-ring.	1) Mount the O-ring. 2) Mount the pressure gauge assembly. 3) Hold the pressure gauge assembly by tightening two round head screws by Phillips head screwdriver. 4) Mount cover assembly by rotating clockwise manually. (Mind direction of cover and position of locating mark and detent.)	
Check item	_	1) Presence of the O-ring 2) Tightening torque of round head screw: 0.32 ± 0.03 N-cm	
Disassembly/ Assembly procedure	Rotate Disassembly direction	Assembly direction Assembly direction Assembly direction Assembly direction	

7. ARM11 Regulator Block

Content	Wash and replacement of O-ring of pressure gauge		
Tools	Phillips head screwdriver		
Process	Disassembly	Assembly	
Procedure	 Loosen and remove round head screws from regulator assembly by Phillips head screwdriver to becomes the regulator assembly able to be disconnected. Remove the cover assembly by rotating counterclockwise manually. Remove two round head screws from pressure assembly by Phillips head screwdriver. Remove the pressure gauge assembly. Remove the O-ring. 	1) Mount the O-ring to bush. 2) Mount the pressure gauge assembly. 3) Hold the pressure gauge assembly by tightening two round head screws by Phillips head screwdriver. 4) Mount cover assembly by rotating clockwise manually. (Mind direction of cover and position of locating mark and detent.) 5) Mount regulator assembly to manifold block and hold it by tightening two round screws by Phillips head screwdriver.	
Check item	_	1) Presence of the O-ring 2) Tightening torque of round head screw: 0.32 \pm 0.03 N-cm	
Disassembly/ Assembly procedure	Rotate Disassembly direction	Assembly direction Rotate	

Industrial Filters Replacement Procedure

FGD	Vessel Series	p. 537
FGE	Vessel Series	p. 538
FGET	Vessel Series	p. 540
FGG	Vessel Series	p. 543
FGA	Vessel Series	p. 545
FGB	Vessel Series	p. 549
FGC	Vessel Series	p. 553
FGF	Bag Filter	p. 555
FGH	High Precision Filter for Liquids	p. 557
FQ1	Quick Change Filter	p. 559
FN1/FN4	Low Maintenance Filter	p. 560

FGD Series Replacement Procedure for Elements

1. Installation

- 1-1. Connect the piping after confirming IN and OUT.
- 1-2. Use clean pipes for piping.
- 1-3. The seal tapes should not come off.
- 1-4. Hold the filter cover with a spanner when connecting the tubes for piping to the filter. Never hold the filter case when piping.
- 1-5. Secure the space (not less than 50 mm) under the filter so that the element can be taken out.

2. Removal of the Element

- 2-1. Stop the fluid from flowing into the filter.
- 2-2. Loosen the hexagon head bolt (air ventilation) to release the internal pressure of the filter completely.
- 2-3. Remove the plug to discharge the drainage from the filter
- 2-4. Loosen the nut to remove the case.

 The case can be removed by lowering it for approximately 50 mm.
- 2-5. Remove the element from the case.
 - * For the filter that uses 2 elements (L250), be careful not to loose the guide used for sealing between the elements because it is re-used.
- 2-6. Wash and clean inside the case, the gasket, the packing and the plug with clean fluid or solvent.
 - * Do not take the tension bolt away from the case.

3. Mounting of the Element

- 3-1. Replace the defective gasket and packing with new ones if there any of them are defective.
- 3-2. Put the tension bolt through the hole of the element, and insert the element into the case.
 - * For the filter that uses 2 elements, insert the guide between the elements.
- 3-3. Align the tension bolt to the center hole of the cover, and insert the case that has the element inside into the cover
- 3-4. Press the casing from the bottom, and tighten the nut from the top of the cover. (Tightening torque: 20 N⋅m)
- 3-5. Confirm that it has no fluid leakage after the test operation before starting the actual operation.



1. Removal of the Cover

- 1-1. Stop operation
- 1-2. Close the valve in order of INLET, then, OUTLET.
- 1-3. Zeroes the pressure in the filter.
- 1-4. Open the drain valve for inlet and outlet to discharge all fluid inside.
- 1-5. Pull out the V-band clamping position check pin.
- 1-6. Loosen V-band tightening nut and remove the latch. Then, remove the cover and O-ring for checking,
- 1-7. Rotate the cover counterclockwise and lift it to remove the cover. (In order of (1)(2) in drawing on the right)
- 1-8. If O-ring is swollen, replace it with a new O-ring.

O-ring for replacement Part no.: JISB2401-1A-P185 (NBR) Part no.: JISB2401-4D-P185 (FKM)

.↑Warning

Remove V-band/cover after confirming the pressure in the filter is zero.

2. Removal of the Element

- 2-1. Remove the wing nut and the washer.
- 2-2. Remove the element retainer.
- 2-3. Remove the element mounting bracket (a part integrating the element holder and the spring).
- 2-4. Take out parts in order of the element, then, joint (element guide).
 - * It is not a must to take out the element guide.

Element, and joint can be taken out together by taking out the element guide. Note) Joint may not be necessary depending on filter and element type.

⚠ Caution

Attention should be taken to avoid burning for high temperature.

3. Mounting of the Element

3-1. To recycle the micro mesh element and sintered element, eliminate any dust between the end plate and the seal completely.

 
⚠ Caution


Replace all equipment using fluoropolymer seal. Recycle of used seal leads to cause sealing leakage.


- 3-2. Mount the element guide if it is removed.
- 3-3. Insert parts in order of the element, joint, element, then, element mounting bracket so that they are concentric.


Note) Joint may not be necessary.

When element is mounted, do not drop the parts from the top of the element guide for mounting.



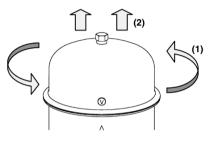

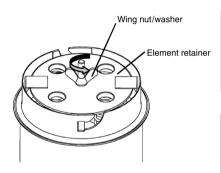

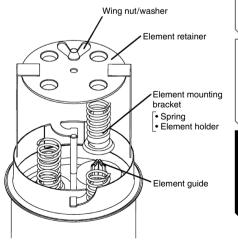

538

 


FGE Series Replacement Procedure for Elements 2

- 3-4. When 2 to 3 elements are placed on top of the other, a set in which the element and joint are prepared can be mounted to the element support.
- 3-5. Assemble the element mounting bracket.
- 3-6. Mount the element retainer carefully.

4. Mounting of O-ring and Cover

- 4-1. Set O-ring to the case
- 4-2. Rotate the cover clockwise while pushing till the end so that the orientation mark of the case and the cover match. [In order of (1) and (2) on drawing on the right]



Collar of cover

V-band

Collar of case

5. Mounting and Tightening V-band

5-1. Mount V-band to the collar of the cover and the case correctly. [Refer Fig. (a), (b)]

⚠ Warning

The cover may be fallen off due to incorrect mounting. Mount the cover properly.

- 5-2. Hit the circumference of V-band lightly with plastic hammer for secure mounting.
- 5-3. Mount T-bracket to the latch correctly. [See Fig. (c)]
- 5-4. Tighten the clamping nut to specified position (position from where clamping position check pin can be inserted), and insert the clamping position check pin. [See Fig.(c)]
- 5-5. When clamping nut can not be tightened to specified position(position where clamping position check pin can be inserted), replace V-band and O-ring to new ones. (See table 1).

X

Fig. (a) Correct mounting of V-band

Cover

Case

Fig. (b) Incorrect mounting of V-band (Not correctly with collar of cover)

▲ Caution

Clean V-band and the contact surface between the cover and the case before mounting. Dirty contact surface lead to cause leakage.

⚠ Warning

Replace with a new V-band when deformation or worn out by screw is found on the band.

[V-band for replacement] Part no. : CY-24S

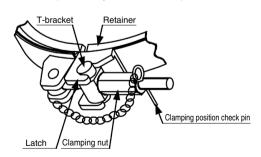



Fig. (c) V-band tightening

6. Restart and Air Discharge

- 6-1. When restart the operation after the replacement of the element, mount V-band to specified position. Confirm connecting parts and seal do not leak before start operation.
- 6-2. When restart the operation, open the upper air relief port to **discharge air**.



1. Instruction Drawing for Disassembly & Reassembly of Filter

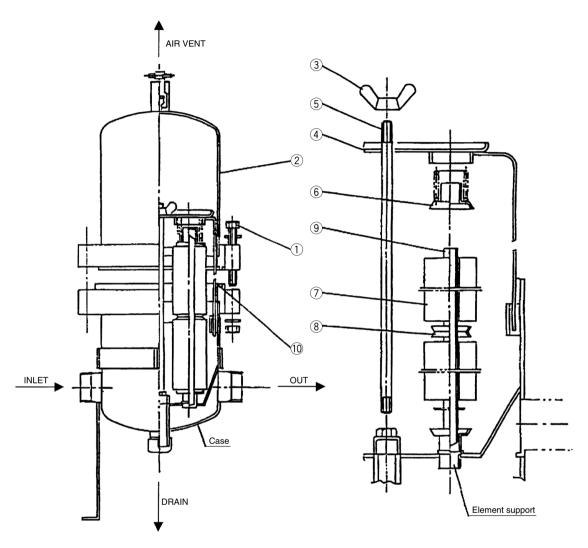

- ①Hexagon head bolt, nut, washer
- ②Cover
- 3Wing nut
- **4** Element retainer
- (5)Tension bolt

- 6 Element mounting bracket
- 7Element
- (8)Joint
- 9Element guide
- 10Gasket


2. Removal of the Cover

- 2-1. Close the inlet and outlet valves.
- 2-2. Open the drain valve to make the pressure in the filter zero, and open the air vent valve to completely remove the inside fluid.
- 2-3. Loosen the hexagon head bolts and nuts fastening the filter cover to the filter case.
- 2-4. Remove the cover.

3. Removal of the Element

- 3-1. Remove the wing nut.
- 3-2. Remove the element retainer.
- 3-3. Take out parts in order of the element mounting bracket, element, joint, and element guide. The element guide may not necessarily be taken out. It is not a must to take out the

After removal of the element mounting bracket, the elements and joints can be taken out as a unit by taking out the element guide in accordance with instructions shown in Fig. 1. Note) Joint may not be necessary.

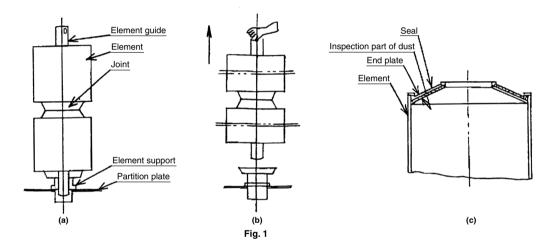

4. Cleaning of the Element

- 4-1. Immerse any taken-out element in a cleaning liquid such as trichlene, carbon tetrachloride, volatile oils for 10 to 15 min.
- 4-2. Clean it in trichlene liquid with ultrasonic vibration. If ultrasonic cleaning is impossible, wash them in the following
- 4-3. Take out the element from the cleaning liquid and clean the inside and out side of the element thoroughly with a brush (preferably a soft brush such as brass brush.)
- 4-4. Reimmerse the element in the liquid and remove dirty substances on the inside of the element by agitating the liquid.
- 4-5. Take out the element and blow compressed air into the inside of the element to make the dirty substances in the inside come out to the surface.
- 4-6. Brush the element in the cleaning liquid to take away dirty substances on its surface.
- 4-7. Repeat the following (4-4) till the element is free from dirty substances on its surface.
- 4-8. Take out the element and blow compressed air into the inside.
- 4-9. Immerse the element in clean water and agitate the water.
- 4-10. Take out the element from the water and blow compressed air into the inside of the element to blow off moisture therein. Then dry it.
- Note 1) Cleaning liquids should be handled in a well ventilated and fire-free place.
- Note 2) Use plastic or rubber gloves to prevent the skin from coming into direct contact with washing liquid.
- Note 3) Should a loaded element not be normalized by repeated cleaning, send it back to the manufacturer for cleaning.



5. Mounting of the Element

(Handle the elements in a clean atmosphere.)


5-1. For fitting a cylindrical or pleat type micromesh element (which does not use spherical seal) or a sintered element, remove dust between the end plate and the seal completely without fail, before fitting. (Refer to Fig. 1 c)

Note) Replace any Teflon seal if used.

It should be kept in mind that the reuse of Teflon seal can result in poor sealing because of its hardness.

- 5-2. Mount the element guide if taken off.
- 5-3. Insert an element, joint, the other element, and element mounting bracket in this order and in such a way that they are exactly concentric.
- Note) Some units may not require the joint, does not need according to circumstances.

In incorporating the element to the element guide, do not drop the element from the upper end of the element guide.

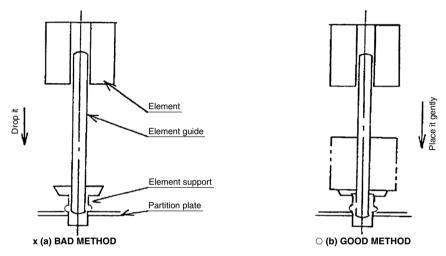

Note) When 2 or 3 elements are put one upon another, it is possible to firstly set elements and joints to the element guide and then mount the element guide assembly on the element support. (Refer to Fig. 1, reversely to the order of removal.)

- 5-4. Incorporate the element mounting bracket.
- 5-5. Fit the element retainer gently.

6. Mounting of the Cover

- 6-1. After making sure that the gasket is not damage, set it at the given place. Damaged gasket requires replacement.
- 6-2. Set the cover at the given place.
- 6-3. Fasten the hexagon head bolts, nuts and washer.

7. Restart and Air Discharge

Make sure that no pressure-leak is exhibited from the seat surface. Then put the unit into regular operation in accordance with the procedure of operation described below.

- 7-1. Before starting the operation, make sure of the open or close position of each valve in the piping and of being perfectly sealed at the joining parts.
- 7-2. Open the air discharging valve and supply fluid. Upon air in the container is removed completely, close the air discharging valve. Then start a regular operation.
- Note) Since this filter consists of many thin press-formed parts, it must be handled using clean gloves.

1. Removal of the Cover

- 1-1. Stop operation.
- 1-2. Close the valve in order of INLET, then, OUTLET.
- 1-3. Zeroes the pressure in the filter.
- 1-4. Open the drain valve for inlet and outlet to discharge all fluid inside.
- 1-5. Pull out the V-band clamping position check pin.
- 1-6. Loosen V-band tightening nut and remove the latch. Then, remove the cover and O-ring for checking,
- 1-7. Rotate the cover counterclockwise and lift it to remove the cover. [In order of (1)(2) in drawing on the right]
- 1-8. If O-ring is swollen, replace it with a new O-ring.

O-ring for replacement Part no.: AL-25S (NBR)
Part no.: AL-22S (FKM)

⚠Warning

Remove V-band/cover after confirming the pressure in the filter is zero.

Retainer

Clamping nut

Clamping

position check pin

2. Removal of the Element

2-1. Remove the wing nut and the washer.

⚠ Caution

Please remove two wing nuts at the same time. The element retainer might not be able to incline from one side when it is outside and to remove well.

- 2-2. Remove the element retainer.
- 2-3. Remove the element mounting bracket (a part integrating the element holder and the spring).
- 2-4. Take out parts in order of the element, then, joint (element guide).
 - * It is not a must to take out the element guide.
 - Element, and joint can be taken out together by taking out the element guide.

Note) Joint may not be necessary depending on filter and element type.

↑ Caution

Attention should be taken to avoid burning for high temperature.

3. Mounting of the Element


- 3-1. To recycle the micro mesh element and sintered element, eliminate any dust between the end plate and the seal completely.
- 3-2. Mount the element guide if it is removed.
- 3-3. Insert parts in order of the element, joint , element, then, element mounting bracket so that they are concentric.


Note) Joint may not be necessary.

∧ Caution

When element is mounted, do not drop the parts from the upper end of the element guide for mounting.

- 3-4. When 2 to 3 elements are placed on top of the other, a set in which the element and joint are prepared can be mounted to the element support.
- 3-5. Assemble the element mounting bracket.
- 3-6. Mount the element retainer carefully.

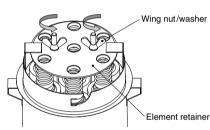

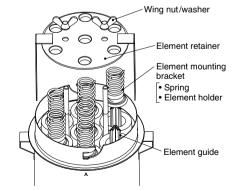



4. Mounting of O-ring and Cover

- 4-1. Set O-ring to the case.
- 4-2. Rotate the cover clockwise while pushing till the end so that the orientation mark of the case and the cover match. [In order of (1) and (2) on drawing on the right]

5. Mounting and Tightening of V-band

5-1. Mount V-band to the collar of the cover and the case correctly. [Refer Fig. (a), (b)]

The cover may be fallen off due to incorrect mounting. Mount the cover properly.

- 5-2. Hit the circumference of V-band lightly with plastic hammer for secure mounting.
- 5-3. Mount T-bracket to the latch correctly. [See Fig. (c)]
- 5-4. Tighten the clamping nut to specified position (position from where clamping position check pin can be inserted), and insert the clamping position check pin. [See Fig. (c)]
- 5-5. When clamping nut can not be tightened to specified position (position where clamping position check pin can be inserted), replace V band and O-ring to new ones. (See table 1).

⚠Warning


Replace with a new V-band when deformation or worn out by screw is found on the band

[V-band for replacement] Part no: CY-27S

Clean V-band and the contact surface between the cover and the case before mounting. Dirty contact surface lead to cause leakage.

6. Restart and Air Discharge

- 6-1. When restart the operation after the replacement of the element, follow the procedure of section 4 "Operation".
- 6-2. When restart the operation, open the upper air relief port to discharge air.

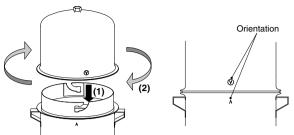

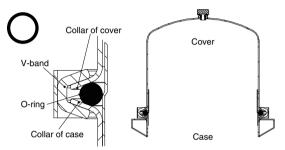


Fig. (a) Correct mounting of V-band

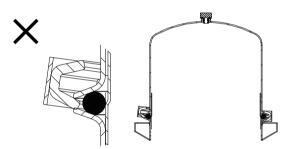


Fig. (b) Incorrect mounting of V-band


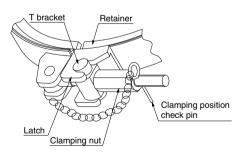


Fig. (c) V-band tightening



1. Instruction Drawing for Disassembly & Reassembly of Filter

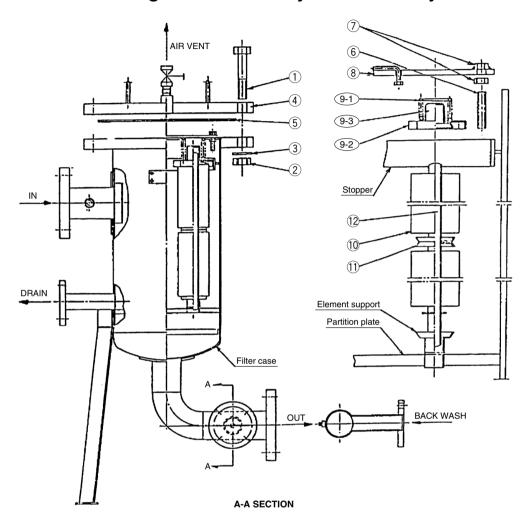

- ①Hexagon head bolt
- ②Hexagon nut
- ③Washer
- **4**Cover
- (5)Gasket

- **6**Adjustment bolt
- 7)Lock nut
- ®Element retainer
- 9 Element mounting bracket
- 9-1)Spring

- 9-2 Vibration stop
- 9-3 Element holder
 - **10Element**
 - 11Joint
 - 12 Element guide

2. Overhaul

- 2-1. If the differential pressure rises due to clogging and reaches the threshold for element replacement (0.1 MPa), replace the element with the new one.
- 2-2. The removal and mounting of the element at the time of overhauling shall be made in the following sequence.

3. Removal of the Cover

- 3-1. Close the valves at inlet and outlet.
- 3-2. Open the air vent and drain valves and make the pressure inside the filter zero (0) in order to discharge all fluid inside.
- 3-3. Loosen the bolt and nut of ① and ② for tightening the filter cover and filter case meanly little by little. When the nut can be turned with hand, remove them one after another in order from the end.
- 3-4. Remove the cover and gasket.

4. Removal of the Element

4-1. Remove the element retainer.


Set the bolt and nut of (6) and (7) in the plate as it is.

Please note that it could cause deformation due to the incomplete sealing or overtightened element if it is mounted without any adjustment. For details, refer to section 7, "Adjustment Method for Mounting Other Elements".

4-2. Take them out in the element mounting bracket, element, joint, element guide in order.

The element guide is not required to be taken out forcibly.

After the element holder is taken out, if the element guide is taken out in such a manner as shown in Fig. 1, the element and joint can be taken out together. Note) In some cases, no joint is required.

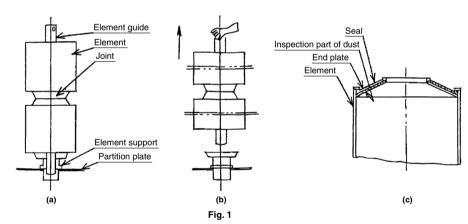

5. Mounting of the Element

(Be sure to handle at clean surrounding condition)

5-1. In the case of micro mesh element (cylindrical or pleat type (spherical seal is not used)) and sintered element, be sure to remove dust completely between end plate and seal completely. (Refer to Fig. 1 (c))

Note) When Teflon seal is used, be sure to exchange it for new one.


As it is hard, as the seal becomes imperfect, attention must be paid to it.

- 5-2. Mount the element guide if taken off.
- 5-3. Insert them in the order of element, joint, element, element mounting bracket in order in such a way that they are concentric.


In some cases, no joint is required.

Note) When the element is mounted, be sure to avoid building in it by dropping from the upper end of the element guide.



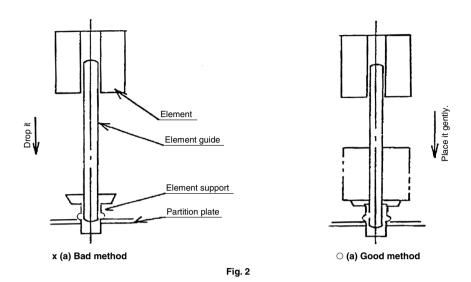


- * Incidentally, when the number of arrangements is many and the number of piling of elements is 3-4 stages, the one in which element and joint are set in the element guide can be set at element support. [Refer to Fig. 1 for the details: Procedure opposite to that for removal]
- 5-4. The element mounting bracket must be built in it by such a manner as shown in (b) and (c) of (Fig. 3).

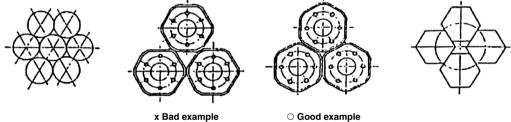


- (a) Arranging condition of element.
- (b) Arrangement of more 7 pcs.

Fig. 3

  - Note) Fig. 3 (b) and (c) show the arranging condition of the element mounting bracket (spring, vibration stop, element holder) shown in Fig. 4
- 5-5. Fit the element retainer gently.






6. Mounting of the Cover

the normal operation.


- 6-1. After confirmation that there is no damage in the gasket, set it at specified position and set the bolts of ① ② and ③, washer, nut and tighten it uniformly diagonally. When the gasket is damaged, exchange it for new one.
- 6-2. After confirmation that there is no leakage of pressure from the seat surface, start

(Method of operation, please refer to the instruction manual.)

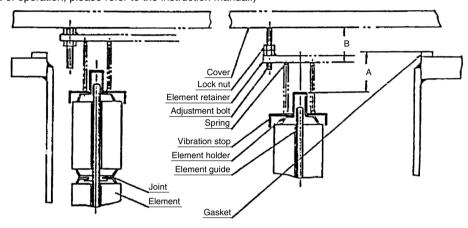

(a) Mounting condition employing joint

(b) Mounting condition not employing joint

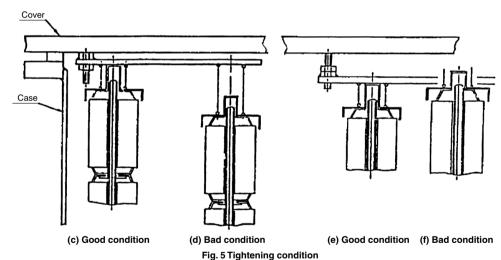

7. Adjustment Method for Mounting Other Elements

- 7-1. Adjust it in such a way that the element retainer and element are at close contact condition when the filter cover is installed, employing the adjustment bolt and lock nut shown in (Fig. 5) [Refer to (c) and (e) of Fig. 5] when the element retainer is installed.
- 7-2. Adjustment must be made in the following manner.


Make measurement on dimensions A as shown in Fig. 5 (b) and adjust it in such a way that Dimensions A are equal to those B, resulting in being at such a condition as shown in (e) of Fig. 5.

As can be seen in Fig. 5 (a) and (b), the lock nut should be set to the bottom in the installation employing the joint. In the installation not employing the joint, set it to the top.



1. Instruction Drawing for Disassembly & Reassembly of Filter

Element assembly exploded view

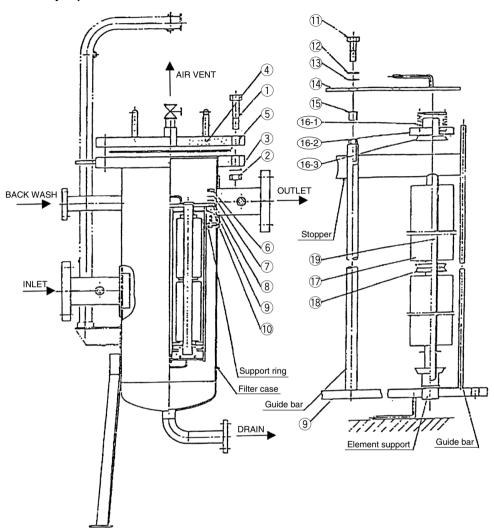

- ①Hexagon head bolt
- 2Hexagon nut
- **3Washer**
- 4 Cover
- (5)Gasket
- 6Hexagon nut
- ⑦Spring washer
- ®Washer

- 10Gasket
- 11)Hexagon head bolt
- 12Spring washer
- 13Washer
- 14Element retainer
- 15Collar
- 16Element mounting bracket
- 16-1)Spring
- 16-2 Vibration stop
- 16-3 Element holder
 - 17)Element
 - 18Joint
 - 19Element guide

2. Overhaul

- 2-1. If the differential pressure rises due to clogging and reaches the threshold for element replacement (0.1 MPa), replace the element with the new one.
- 2-2. The removal and mounting of the element at the time of overhauling shall be made in the following sequence.

3. Removal of the Cover

- 3-1. Close the valves at inlet and outlet.
- 3-2. Open the air vent and drain valves and make the pressure inside the filter zero (0) in order to discharge all fluid inside.
- 3-3. Loosen the bolt ①, nut ②, the filter cover and filter case uniformly little by little.
 - When the nut can be turned with hand, remove them one after in order the end.
- 3-4. Remove the cover and gasket.

4. Method for Removal of Element Assembly


- 4-1. Loosen the nut ⑥ little by little uniformly.

 Remove the nut, spring washer and washer.
- 4-2. Lift the element assembly from the container by means of a davit or any other lifting device out of the container.
 - Then, lift it vertically so that the guide bar protecting the element does not touch the support ring too much.
- 4-3. Turn the element assembly taken out of the container upside down so that the partition plate is located downwards as illustrated in the disassembly drawing.

5. Removal of the Element

- 5-1. Loosen the hexagon head bolt of 1 uniformly little by little. Remove the spring washer and washer.
- 5-2. Remove the element retainer.
- 5-3. Take out the members in the order of collar, element mounting bracket, element, joint and element guide.

The element guide is not needed to be taken out forcibly. If the element guide is taken out in the procedure after taking out of the element holder (Fig. 1 (b)), both element and joint can be taken out at the same time. Note) Joint is not needed in some cases.

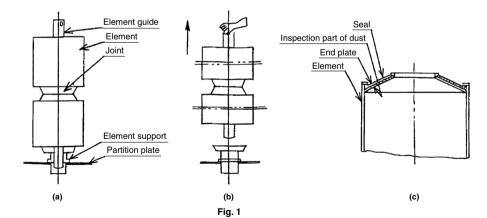




6. Mounting of the Element

(Be sure to handle it in the clean environmental condition.)

- 6-1. In the case of micromesh element (cylindrical and pleat type (employing no seal)) and sintered element, be sure to remove the dust located between end plate and seal without fail. (Refer to Fig. 1 (c) for the details)
- 6-2. When the element guide is removed, fit it.
- 6-3. Insert the members correctly in the order of element, joint, element and element fitting hardware in such a way that concentricity may be obtained.

Note) No joint is needed sometimes.


When the element is installed, do not drop it from the upper end of the element guide and assemble it. (Fig. 2)

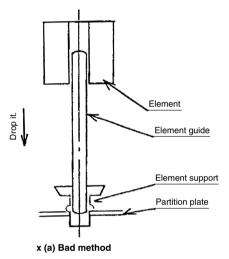

O (b) Good method

Fig. 2

- Note) When the number of arranged ones is many and the number of stacking of elements is 3-4 stages, the element guide to which the element and joint are set can be set to the element support. (Refer to Fig. 1 for the details: Opposite procedure to that for taking out)
- 6-4. The fitting hardware for element shall be assembled in such a method as shown by (b) and (c) of (Fig. 3).

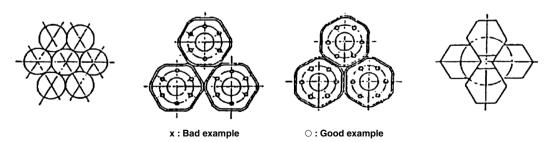


(a) Arranging condition of element

(b) Arrangement of more 7 pcs.

(c) 4 pcs. arrangement

 Fig. 3







6-5. The collar should be set to the bottom of the element retainer only when the honeycomb element is used. For other elements, it should be set to the top of the retainer.

Note 1) The collar is not used for single element assembly.

Note 2) The collar for honeycomb element cannot be used for other elements.

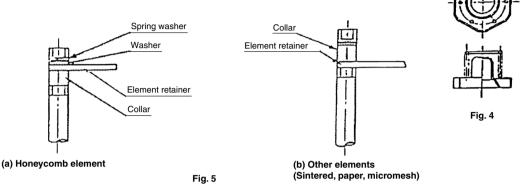

6-6. The element retainer shall be assembled in such a way that the symbol A-A in (a) of Fig. 6 is overlapped with symbol B-B of element retainer shown in (b) of Fig. 6 in parallel.

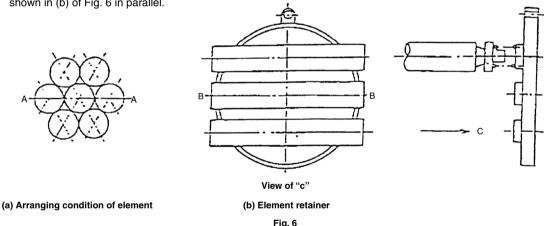

Note 1) When the element retainer is installed, place it correctly in such a way that the element mounting bracket is not moved.

Note 2) Fit the washer of 🕄 🗘 and spring washer and tighten the bolt of 🕦 uniformly little by little. Then, tighten it to such an extent that the guide bar comes in close contact with bolt nut, spring washer, washer, element retainer.

7. Mounting of the Element Assembly


- 7-1. Turn the element assembly set at 4-2-4 upside down in such a way that the partition plate comes upside.
- 7-2. Before the element assembly is installed, be sure to install the gasket at specified position correctly.
- 7-3. Employing the davit and other lifting devices, assemble it in the same way that the element assembly is taken out.
- 7-4. Install the washer of (8) and (7) and spring washer and tighten it uniformly with nut of (6).

8. Mounting of the Cover

- 8-1. Ensure that the gasket is not damaged, and set it to the specified position. Also set the bolts ①②③, washer and nut, and tighten it evenly from the opposing corners.
 - If the gasket is damaged, replace it with the new one.
- 8-2. After ensuring that there is no pressure leakage, start the actual operation.



1. Instruction Drawing for Disassembly & Reassembly of Filter

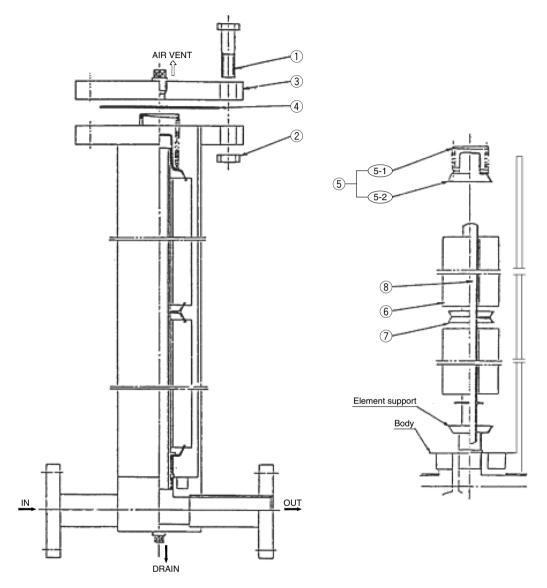

- 1)Hexagon head bolt
- ②Hexagon nut
- 3 Cover
- **4**Gasket
- ⑤ Element mounting bracket
- (5-1)Spring
- (5-2) Element holder
 - **6**Element

- 7)Joint
- ®Element guide

2. Overhaul

- 2-1. If the differential pressure rises due to clogging and reaches the threshold for element replacement (0.1 MPa), replace the element with the new one.
- 2-2. Take out the element at the time of overhauling and carry out the mounting operation in the following sequence.

3. Removal of the Cover

- 3-1. Close the valves at inlet and outlet.
- 3-2. Open the air vent valve and drain valve in order make the pressure inside the filter zero (0) and discharge all fluid from the inside.
- 3-3. Loosen the bolt and nut ① and ② for tightening of the filter cover and filter case little by little meanly at first. When the nut can be turned with hand, remove them one after another in order from the end.
- 3-4. Remove the cover and gasket.

4. Removal of the Element

- 4-1. Take out the element mounting bracket, element, joint, element guide in order.
- 4-2. It is not required to take out the element forcibly.
- 4-3. After taking out the element holder, the element and joint can be taken out together if the element guide is taken out in such a manner as mentioned in (Fig.1).

Note) In some cases, no joint is required.

5. Mounting of the Element


(Handle it at clean surrounding condition)

- 5-1. As for the elements except the honeycomb and paper elements, check if there is no dust between the end plate and seal when taking them out. If there is any dust, clean it off. (See Fig. 1 (c).)
- 5-2. Mount it when the element guide is removed:
- 5-3. Insert them in the order of element, joint, element, element mounting bracket in such a way that they are concentric.
- Note) No joint is needed in some cases.

When the element is installed, avoid building in it by dropping from the upper end of the element guide when the element is installed

6. Mounting of the Cover


- 6-1. After confirmation that there is no damage in the gasket, set it at specified position and set the bolt and nut ① and ② and tighten it uniformly diagonally.
 - When the gasket is damaged, exchange it for new one.
- 6-2. After confirmation that there is no leakage of pressure from the seat surface, start operation.

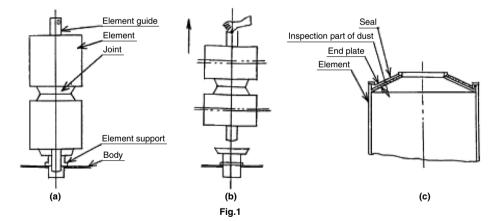

One element included type


1. Removal of the Element

 - 1-1. After stopping the operation, close the valve in the order of inlet and outlet.
- 1-2. Open the air release valve to let the internal pressure of a filter be zero, and open the liquid discharging valve to let out the internal fluid completely.




1-3. Loosen the tightening bolts of the V-band and remove the stopper.

(The tightening bolts can be loosened with a hexagon wrench [width across flats 6 mm].)

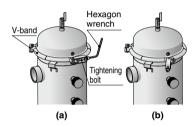




 Check the O-ring and the V-band, and if there is any abnormality, replace it with a new one.
 (Refer to "Replacement Parts" on page 301.)




1-4. Remove the cover upward by turning it counterclockwise.

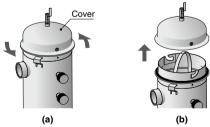


- 1-5. Using the handle, remove the basket vertically.
 - * Inspect the O-ring attached to the holder assembly in the case, and replace it with a new one if it is expanded or there is any abnormality.

 (Refer to "Replacement Parts" on page 301.)




1-6. A handle made of cloth is attached to the element so that elements can be pulled out of the basket by fingers or using sticks, pulling them to the center. (Element for replacement: Refer to "Part number of element for replacement" on page 301.)

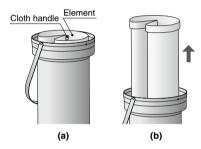


2. Mounting of the Element

2-1. Pull a new element by the cloth handle toward the center, and put it inside the basket, folding the edge of an element. Further, push the edge of an element to the basket's bottom-plate flange surface thoroughly.

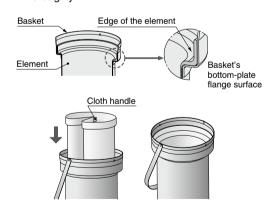


* Set the handle avoiding attaching it to the notch (guide slit) of the case and INLET.

 
2-2. Grasp the handle and put the basket in the case.



 
- 2-3. Set the O-ring to the case.
 - * Replace the O-ring with a new one if it is expanded or there is any abnormality. (Refer to "Replacement Parts" on page 301.)
- 2-4. Adjust the pins (two locations) to the guide slit of the case inside the cover, and push them thoroughly and turning clockwise.



 
2-5. Install the V-band in the edge of the cover and case correctly.



  Clean the contact surface of the V-band, cover and case prior to the attachment. 2-6. Align the tightening bolts with the slit and fasten properly.




 2-7. Tighten the tightening bolts until they cohere to the flat washers.



* When restarting this product after replacing the elements, be sure to release the air by opening the release valve on the too

1. Instruction Drawing for Disassembly & Reassembly of Filter

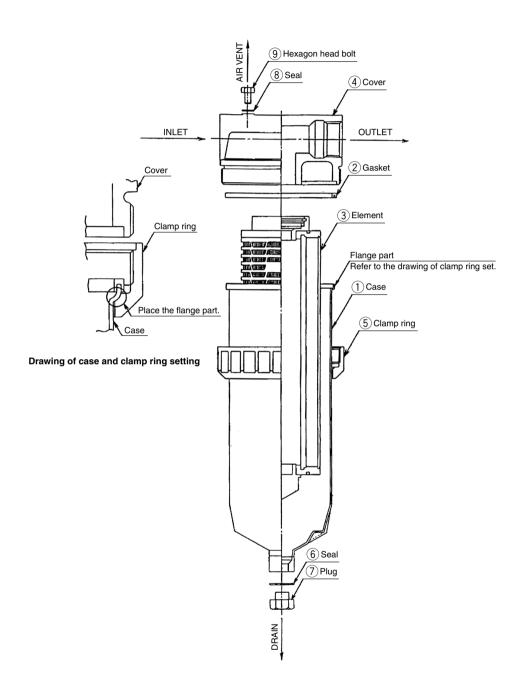

1. Removal of the Element

- 1-1. Stop the fluid sent to the filter. (If a valve is installed before or after the filter, close the valve.)
- 1-2. Loosen the air vent (hexagon head bolt (9)) and completely discharge the pressure in the filter.
- 1-3. Remove drain (plug ⑦) and discharge the fluid from the filter.
- 1-4. A large force is required to loosen clamp ring ⑤. Use a commercially available belt wrench etc. to loosen clamp ring ⑤ so that the tool is not removed, so as to make it turnable by hand. Remove case ① by hand while supporting it, and remove the element together with case ①.
- 1-5. Pull out element ③ from cover ④. Since the PTFE seal is used, a certain amount of force may be necessary to pull out the element. If there is not enough space under case ①, lower case ① by about 100mm, and remove the element together with case ①.
- 1-6. Dispose the removed element.
- 1-7. Clean the inside of case, ①, gasket ②, seal ⑥ and plug ⑦ using clean operation fluid or solvent.

2. Mounting of new Element

- 2-1. Check that the sealing surface of case $\mathbin{\textcircled{\scriptsize 1}}$ is not scarred.
- 2-2. Check whether or not the gasket and seal are damaged or deformed.
 - Replace any abnormal one with a new one.
- 2-3. Since the PTFE seal is used for element ③, a certain amount of force is needed to set the element. Set the element in the following procedure. Handle element ③ carefully to keep it clean, for


Handle element ③ carefully to keep it clean, for example, open the element package only when the element is mounted.

- a. Fit the grooved part of gasket ② into the flange part of case ①.
- b. Place element ③ in case ①. Element ③ must be positioned at the center of case ①.
- c. Set clamp ring ⑤ to case ①. The tapered part of clamp ring ⑤ must be facing downward.
- d. Set seal part of the element ③ to the cover ④ while the flange part of case ① is being placed on clamp ring ⑤.
- e. Since PTFE is used for the material of gasket ②, a large force is required to tighten clamp ring ⑤. After screwing clamp ring ⑤ into cover ④ by hand, use a commercially available belt wrench etc. to tighten the clamp ring so that the tool is not removed and no leakage occurs. (Reference tightening rotation angle: approx. 1/4 to 1/2 turn after tightening by hand)
- * This makes the element ③ be pushed up as a whole, and the element seal will be installed to the case ① sealing. The element ③ can also be pushed hard by hand to be surely installed before setting the case ①.
- 2-4. Set seal (§) on plug (7) of drain and tighten hexagon head bolt (9) of the air vent so that no leakage occurs.
- 2-5. Start the operation.




1. Removal of the Element

- 1-1. Stop liquid flowing into the filter. (If there are valves before and after the filter, close these valves.)
- 1-2. Release pressure inside the filter completely by loosening the air vent plug.
- 1-3. Discharge fluid inside the filter by removing the drain plug.
- 1-4. Remove the stopper from the retainer by loosening the wing bolt on the V-band.

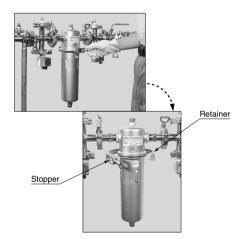

- 1-5. To extract the element from the case, rotate the case counterclockwise about 20 degrees until it stops, then lower it by about 40 mm and remove it from the cover.
- Note) When using two L250 elements, do not discard the intermediate holder since it is used.

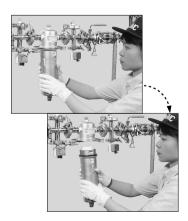


1-6. Clean the inside of the case, gaskets, seals, holders, plugs, etc., with a pure fluid or solvent.

2. Installing the Element

- 2-1. Make sure that O-rings are not damaged or deformed. If needed, replace with new ones.
- 2-2. Check that the lower holder inside the case is not inclined, and then insert the element.

[When using two L250 elements]

Insert the intermediate holder into the lower part of the second element (upper level), and then place one side of the intermediate holder into the case by inserting it into the upper part of the first element (lower level).

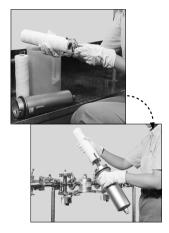


- 2-3. Align the indentations of the case with the projections of the cover, lift the case upward by about 10 mm and rotate it clockwise about 20 degrees.
- 2-4. Mount it in such a way that the entire flanged perimeter of the cover and case are held by the retainer of the V-band.



- 2-5. Set the stopper on the retainer while holding down the V-band outside perimeter, and then tighten the wing bolt to the prescribed position.
- 2-6. Tighten the drain plug.
- 2-7. When air release is completed, tighten the air vent plug.



1. Instruction Drawing for Disassembly & Reassembly of Cover Assembly

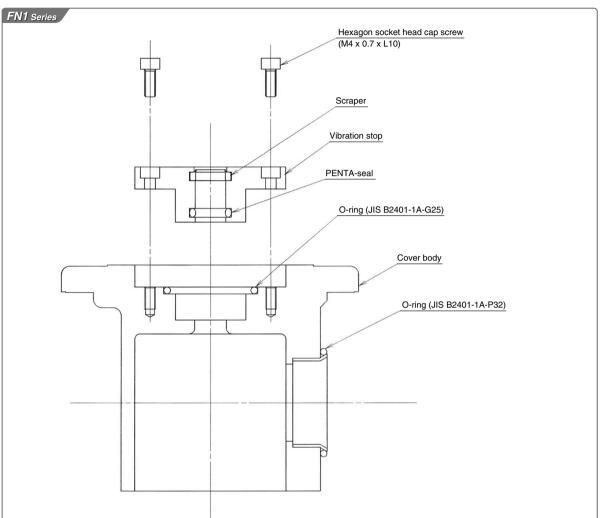

Actuators

2. Disassembly

FN1 Series

- 2-1. Remove the cover [Two M4 hexagon socket head cap screws See Figure 1]
- 2-2. Remove the cylinder flange fixing screws (four M8 hexagon socket head cap screws), and remove the entire body of the cylinder. [Slide the entire body of the cylinder in the horizontal direction, and remove the cylinder from the joint. See Fig. 2]
- 2-3. Remove the four struts. [See Fig. 2]
- 2-4. Pull the cover assembly upward. [Pull out the entire body of the element. See Fig. 3]
- 2-5. Remove the mounting bracket inside the cover assembly. [Remove the set screw, and turn the mounting bracket. See Fig. 4]
 For FN11□2□-10, two screws are mounted in the middle of the guide assembly [M3 See Fig. 4]
- 2-6. The element can now be pulled out of the cover.

Do not disassemble the element any further.

Note) Reassembly should be performed by reversing the disassembly procedure.

Refer to the schematic drawings for the assembly and disassembly procedures for the cover, seals etc.



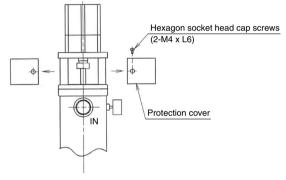


Fig. 1

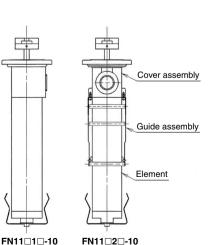

10 FN11□2□-10 Fig. 3

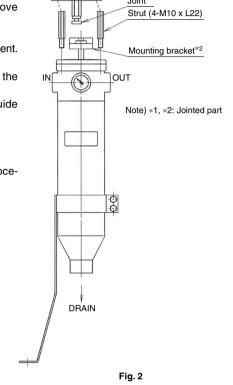

Cylinder

Hexagon socket head cap screw

Cylinder flange (4-M8 x L20)

Set screw

Cover assembly

Element assembly

Screw (M3)

FN11 12 -10

Fig. 4

FN4 Series

Basically, this filter does not need any maintenance, but if an element needs cleaning (differential pressure cannot be returned as dust adheres) or an element or a seal needs replacement, clean or replace the element by following the dismantling procedure below.


2-1. Stopping operation

- a. Stop the operation of filter.
- b. Close the valves at IN and OUT.
- c. Open the DRAIN valve to make the internal pressure zero and to exhaust all the fluid inside.

2-2. Removing protection cover


a. Remove the set screws of a protection cover, and slide the cover to the side.

(M4 hexagon socket head cap screws at two

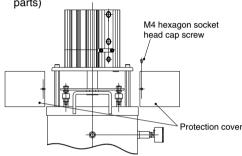

2-3. Removing cylinder

- a. Remove the M8 hexagon nut at four parts.
- b. Remove the cylinder flange holding bolts.
 Holding bolt: M8 hexagon socket head cap screws at four parts up to the cylinder, and remove it.

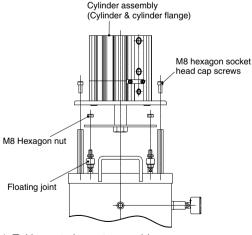


2-4. Taking out element assembly

- a. Remove the C shaped retaining ring at four parts.
- b. Withdraw the element assembly upward from the case.
- * Remove the O-ring to the new one if it has any problems such as swelling.

[O-ring for replacement]

KT-FN41N (JIS B2401-1A-G90 and G80) (Material: NBR) KT-FN41V (JIS B2401-4D-G90 and G80) (Material: FPM)

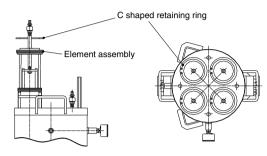


2-5. Removing element

- a. Remove the floating joint.
- b. Remove the intermediate screws of the guide assembly.
- c. Withdraw the element from the cover assembly.
- * Do not dismantle the element further more.

[Replacement Element] END400-005 (5 μm Type) END400-020 (20 μm Type)

* 4 elements are required per unit.

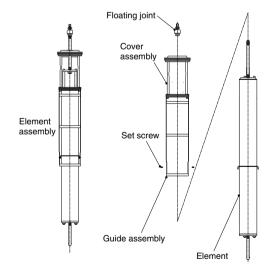

2-6. Cleaning element

- a. Clean the element taken out.
 [Cleaning method] Ultrasonic cleaning, solvent cleaning, blowing cleaning, etc
- * Do not clean it with acid or a hard brush.

2-7. Assembling and restarting

- Assemble it by following the dismantling procedure backward.
- b. For restarting, follow Section 3 "Operation" in the Operation Manual.



Checking Whether your Cylinder is a Current or Previous Model

To check whether a product currently in use corresponds to a previous series whose production has been discontinued or to a current series (refreshed product), check the product number and lot number printed on the product name plate or the label affixed to the packing box (bag).


Cylinders

Product name	Previous series	Discontinued date	Lot no.	Current series	Release date	Lot no.
Air Cylinder/Standard Type	CM2	Sept. 2013	RW	CM2-Z	Oct. 2013	RX
Air Cylinder/Smooth Cylinder	CM2Y	Sept. 2013	RW	CM2Y-Z	Oct. 2013	RX
Air Cylinder/Low Speed Cylinder	CM2X	Sept. 2013	RW	CM2X-Z	Oct. 2013	RX
Air Cylinder/Standard Type: Double Rod	CM2W	Sept. 2013	RW	CM2W-Z	Oct. 2013	RX
Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	CM2	Sept. 2013	RW	CM2- Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type	CM2K	Sept. 2013	RW	CM2K-Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type: Double Rod	CM2KW	Sept. 2013	RW	CM2KW-Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	CM2K	Sept. 2013	RW	CM2K-Z	Oct. 2013	RX
Air Cylinder/Direct Mount Type	CM2R	Sept. 2013	RW	CM2R-Z	Oct. 2013	RX
Air Cylinder/Direct Mount, Non-rotating Rod Type	CM2RK	Sept. 2013	RW	CM2RK-Z	Oct. 2013	RX
Air Cylinder/Standard Type	CG1	Sept. 2013	RW	CG1-Z	Oct. 2013	RX
Air Cylinder/Smooth Cylinder	CG1Y	Sept. 2013	RW	CG1Y-Z	Oct. 2013	RX
Air Cylinder/Standard Type: Double Rod	CG1W	Sept. 2013	RW	CG1W-Z	Oct. 2013	RX
Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	CG1	Sept. 2013	RW	CG1-Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type	CG1K	Sept. 2013	RW	CG1K-Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type: Double Rod	CG1KW	Sept. 2013	RW	CG1KW-Z	Oct. 2013	RX
Air Cylinder/Direct Mount Type	CG1R	Sept. 2013	RW	CG1R-Z	Oct. 2013	RX
Air Cylinder/Direct Mount, Non-rotating Rod Type	CG1KR	Sept. 2013	RW	CG1KR-Z	Oct. 2013	RX
Air Cylinder/Single Rod	MB	Sept. 2013	RW	MB-Z	Oct. 2013	RX
Air Cylinder/Double Rod	MBW	Sept. 2013	RW	MBW-Z	Oct. 2013	RX
Air Cylinder/Non-rotating Rod Type	MBK	Sept. 2013	RW	MBK-Z	Oct. 2013	RX
Square Tube Type Air Cylinder/Standard Type	MB1	Apr. 2015	TR	MB1-Z	May 2015	TS
Square Tube Type Air Cylinder/Standard Type: Double Rod	MB1W	Apr. 2015	TR	MB1W-Z	May 2015	TS
Square Tube Type Air Cylinder/Non-rotating Rod Type	MB1K	Apr. 2015	TR	MB1K-Z	May 2015	TS
Air Cylinder/Standard Type	CA2	Sept. 2013	RW	CA2- Z	Oct. 2013	RX
Air Cylinder/Smooth Cylinder	CA2Y	Sept. 2013	RW	CA2Y-Z	Oct. 2013	RX
Air Cylinder/Standard Type	CA2W	Sept. 2013	RW	CA2W-Z	Oct. 2013	RX
Mechanically Jointed Rodless Cylinder/Basic Type	MY1B	Apr. 2013	RR	MY1B-Z	May 2013	RS
Mechanically Jointed Rodless Cylinder/Linear Guide Type	MY1H	Apr. 2013	RR	MY1H-Z	May 2013	RS
Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing	CY1S	Sept. 2013	RW	CY1S-Z	Oct. 2013	RX
Compact Guide Cylinder	MGP	Dec. 2015	TZ	MGP-□ Z	Jan. 2016	Uo
Compact Guide Cylinder/With Air Cushion	MGP-□A	Dec. 2015	TZ	MGP□-AZ	Jan. 2016	Uo




Checking Whether your Cylinder is a Current or Previous Model



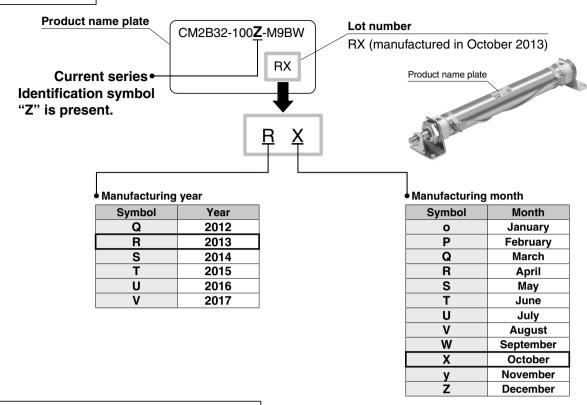

Previous series (Discontinued product)

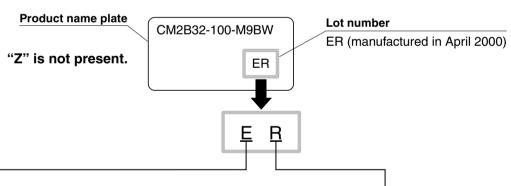

	•		
Symbol	Year	Symbol	Year
Т	1989	Н	2003
U	1990	i	2004
V	1991	J	2005
W	1992	K	2006
X	1993	L	2007
У	1994	M	2008
Z	1995	N	2009
Α	1996	0	2010
В	1997	Р	2011
С	1998	Q	2012
D	1999	R	2013
E	2000	S	2014
F	2001	Т	2015
G	2002	U	2016

Manufacturing month

Symbol	Month
0	January
Р	February
Q	March
R	April
S	May
Т	June
U	July
V	August
W	September
Х	October
у	November
Z	December

Maintenance Parts List

Model Index (Alphanumerical Order)

Α		Replacement Parts	Replacement Procedure
AC-A	Air Combination	p. 249	p. 431
AC-B	Air Combination	p. 250	_
ACG	Air Combination	p. 251	_
AF10-A to AF60-A	Air Filter	p. 253	p. 434
AFD20-A to AFD40-A	Micro Mist Separator	p. 254	p. 447
AFF	Main Line Filter	p. 279	p. 279
AFM20-A to AFM40-A	Mist Separator	p. 254	p. 445
AL10-A to AL60-A	Lubricator	p. 257	p. 461
АМ	Mist Separator	p. 280	p. 280
AMD	Micro Mist Separator	p. 281	p. 281
AME	Super Mist Separator	p. 283	p. 283
AMF	Odor Removal Filter	p. 284	p. 284
AMG	Water Separator	p. 278	p. 278
АМН	Micro Mist Separator with Pre-filter	p. 282	p. 282
AMJ	Drain Separator for Vacuum	p. 277	p. 277
AMR3000 to 6000	MR Unit (Regulator with Mist Separator)	p. 265	p. 526
AR10-A to AR40-A	Regulator	p. 255	p. 449
AR20-B to AR60-B	Regulator	p. 256	p. 454
AR20K-B to AR60K-B	Regulator with Backflow Function	p. 256	p. 456
AR425 to 935	Pilot Operated Regulator	p. 264	p. 522
ARG20(K)/30(K)/40(K)	Regulator with Built-in Pressure Gauge	p. 261	p. 509
ARM10	Regulator/Single Unit Type	p. 269	p. 531
ARM11A	Compact Manifold Regulator/Common Supply Type	p. 270	p. 531
ARM11A/B	Compact Manifold Regulator/Options	p. 272	p. 531
ARM11B	Compact Manifold Regulator/Individual Supply Type	p. 271	p. 531
ARM5A	Compact Manifold Regulator/Centralized Supply Type	p. 266	p. 527
ARM5B	Compact Manifold Regulator/Individual Supply Type	p. 267	p. 527
ARM5S	Regulator/Single Unit Type	p. 268	p. 527
AW10-A to AW40-A	Filter Regulator	p. 258	p. 469
AW20-B to AW60-B	Filter Regulator	p. 259	p. 485
AW20K-B to AW60K-B	Filter Regulator with Backflow Function	p. 259	p. 488
AWD20 to AWD40	Micro Mist Separator Regulator	p. 260	p. 503
AWG20/30/40	Filter Regulator with Built-in Pressure Gauge	p. 262	p. 515
AWG20K/30K/40K	Filter Regulator with Built-in Pressure Gauge with Backflow Function	p. 263	_
AWM20 to AWM40	Mist Separator Regulator	p. 260	p. 497

\mathbf{c}

*	CA2	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 61	p. 317
	CA2-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 59	p. 317
	CA2□H	Air-hydro Cylinder/Double Acting, Single Rod	p. 66	_
	CA2K	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 63	p. 317
	CA2KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 64	p. 317
*	CA2W	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 62	p. 317
	CA2W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 60	p. 317
	CA2W□H	Air-hydro Cylinder/Double Acting, Double Rod	p. 67	_
*	CA2Y	Smooth Cylinder/Double Acting, Single Rod	p. 61	p. 317
	CA2Y-Z	Smooth Cylinder/Double Acting, Single Rod	p. 59	p. 317
	CBA2	Air Cylinder/With End Lock	p. 65	p. 317
	CBG1	Air Cylinder/With End Lock	p. 41	p. 314
	565			Tr.

			Replacement Parts	Replacement Procedure
	CBM2	Air Cylinder/With End Lock	p. 26	p. 313
	CBQ2	Compact Cylinder/With End Lock	p. 107	p. 323
	CDS1	Air Cylinder/With Auto Switch	p. 69	p. 320
*	CG1	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 36	p. 314
*	CG1	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 34	p. 314
	CG1-Z	Air Cylinder/Standard Type	p. 27	p. 314
	CG1-Z	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 29	p. 314
*	CG1K	Air Cylinder/Non-rotating Rod Type: Double Acting	p. 37	p. 314
	CG1K-Z	Air Cylinder/Non-rotating Rod Type: Double Acting	p. 30	p. 314
*	CG1KR	Air Cylinder/Direct Mount, Non-rotating Rod Type	p. 40	p. 314
	CG1KR-Z	Air Cylinder/Direct Mount, Non-rotating Rod Type	p. 33	p. 314
*	CG1KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 38	p. 314
	CG1KW-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 31	p. 314
*	CG1R	Air Cylinder/Direct Mount Type: Double Acting	p. 39	p. 314
	CG1R-Z	Air Cylinder/Direct Mount Type: Double Acting	p. 32	p. 314
*	CG1W	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 35	p. 314
	CG1W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 28	p. 314
*	CG1Y	Smooth Cylinder/Double Acting, Single Rod	p. 34	p. 314
	CG1Y-Z	Smooth Cylinder	p. 27	p. 314
	CG3	Air Cylinder Short Type/Standard: Double Acting, Single Rod	p. 42	p. 314
	CG5-S	Stainless Steel Cylinder	p. 114	p. 314
	CH□KD	JIS Standard Compact Hydraulic Cylinder	p. 233	p. 425
	CH□KG	Compact Hydraulic Cylinder	p. 234	p. 426
	CH□QB	Compact Hydraulic Cylinder/Double Acting, Single Rod	p. 231	_
	CH□QWB	Compact Hydraulic Cylinder/Double Acting, Double Rod	p. 232	
	CH2E	JIS Standard Hydraulic Cylinder/Double Acting, Single Rod	p. 238	p. 429
	CH2EW	JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 239	p. 429
	CH2F	JIS Standard Hydraulic Cylinder/Double Acting, Single Rod	p. 238	p. 429
	CH2FW	JIS Standard Hydraulic Cylinder/Double Acting, Double Rod	p. 239	p. 429
	CH2G	JIS Standard Hydraulic Cylinder/Double Acting, Single Rod	p. 238	p. 429
	CH2H	JIS Standard Hydraulic Cylinder/Double Acting, Single Rod	p. 238	p. 429
	СНА	Tie-rod Type Hydraulic Cylinder/Double Acting, Single Rod	p. 240	_
	CHAW	Tie-rod Type Hydraulic Cylinder/Double Acting, Double Rod	p. 241	_
	CHN	Small Bore Hydraulic Cylinder	p. 235	p. 427
	CHSD	ISO Standard Hydraulic Cylinder	p. 236	p. 428
	CHSG	ISO Standard Hydraulic Cylinder	p. 237	p. 428
	CJP	Pin Cylinder/Single Acting, Spring Return	p. 8	
	CJP2	Pin Cylinder/Double Acting, Single Rod	p. 7	p. 311
	CK1	Clamp Cylinder/Magnetic Field Resistant Auto Switch (Band Mounting)	p. 215	_
	CKG1	Clamp Cylinder/Magnetic Field Resistant Auto Switch (Band Mounting)	p. 215	
	CKG1	Clamp Cylinder with Magnetic Field Resistant Auto Switch (Rod Mounting)	p. 214	_
	CKP1	Clamp Cylinder with Magnetic Field Resistant Auto Switch (Rod Mounting)	p. 214	
	CKQG/CKQP	Guide Pins Assembly/Clamp Arm Assembly Kit Number	p. 211	_
	CKQG32	Pin Clamp Cylinder/Compact Cylinder Type	p. 212	_
	CKQG(P)D	Pin Clamp Cylinder D series	p. 207	p. 407
	CKQG(P)K	Pin Clamp Cylinder K series	p. 209	p. 407
	CKQG(P)M	Pin Clamp Cylinder M series	p. 210	p. 407
	CKQG(P)U	Pin Clamp Cylinder U series	p. 208	p. 407
	CKU32	Pin Clamp Cylinder/Plate Cylinder Type	p. 213	_



The products marked with a ★ have been discontinued.

As they have been replaced by a new series, please check whether the cylinder is a new or a previous model before ordering replacement parts. For details, refer to "Checking Whether your Cylinder is a Current or Previous Model" on pages 563 and 564.

			Replacement Parts	Replacement Procedure
	CL1	Lock-up Cylinder/Double Acting, Single Rod	p. 182	p. 376
	CLG1	Fine Lock Cylinder/Double Acting, Single Rod	p. 181	p. 373
	CLS	Cylinder with Lock/Double Acting, Single Rod	p. 189	p. 391
*	CM2	Air Cylinder/Standard Type: Single Acting, Spring Return/Extend	p. 19	p. 313
*	CM2	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 17	p. 313
	CM2-Z	Air Cylinder/Standard Type: Single Acting, Spring Extend	p. 11	p. 313
	CM2-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 9	p. 313
	CM2□P	Air Cylinder/Centralized Piping Type: Double Acting, Single Rod	p. 25	p. 313
*	CM2K	Air Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	p. 22	p. 313
*	CM2K	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 20	p. 313
	CM2K-Z	Air Cylinder/Non-rotating Rod Type: Single Acting, Spring Extend	<u> </u>	p. 313
	CM2K-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	•	p. 313
•	CM2KW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	•	p. 313
^	CM2KW-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	•	p. 313
_	CM2RV-2		•	
*	CM2R-Z	Air Cylinder/Direct Mount Type: Double Acting, Single Rod Air Cylinder/Direct Mount Type: Double Acting, Single Rod	•	p. 313
			•	p. 313
*	CM2RK	Air Cylinder/Direct Mount, Non-rotating Rod Type: Double Acting, Single Rod	•	p. 313
	CM2RK-Z	Air Cylinder/Direct Mount, Non-rotating Rod Type: Double Acting, Single Rod	•	p. 313
*	CM2W	Air Cylinder/Standard Type: Double Acting, Double Rod	•	p. 313
	CM2W-Z	Air Cylinder/Standard Type: Double Acting, Double Rod		p. 313
*	CM2X	Low Speed Cylinder/Double Acting, Single Rod	p. 17	p. 313
	CM2X-Z	Low Speed Cylinder/Double Acting, Single Rod	p. 9	p. 313
*	CM2Y	Smooth Cylinder/Double Acting, Single Rod	p. 17	p. 313
	CM2Y-Z	Smooth Cylinder/Double Acting, Single Rod	p. 9	p. 313
	CNA2	Cylinder with Lock/Double Acting, Single Rod	p. 186	p. 384
	CNA2W	Cylinder with Lock/Double Acting, Double Rod	p. 187	p. 384
	CNG	Cylinder with Lock/Double Acting, Single Rod	p. 183	p. 381
	CNS	Cylinder with Lock/Double Acting, Single Rod	p. 188	p. 389
	CQ2	${\it Compact Cylinder/Long Stroke Type: Double Acting, Single Rod}\\$	p. 101	p. 323
	CQ2	Compact Cylinder/Water Resistant: Double Acting, Single Rod	p. 108	p. 323
	CQ2	Compact Cylinder/Large Bore Size: Double Acting, Single Rod	p. 99	p. 323
	CQ2	Compact Cylinder/Standard Type: Single Acting, Single Rod	p. 98	p. 323
	CQ2	Compact Cylinder/Standard Type: Double Acting, Single Rod	p. 96	p. 323
	CQ2	Compact Cylinder/Anti-lateral Load	p. 106	p. 323
	CQ2K	Compact Cylinder/Non-rotating Rod: Double Acting, Single Rod	p. 102	p. 323
	CQ2KW	Compact Cylinder/Non-rotating Rod: Double Acting, Double Rod	p. 103	p. 323
	CQ2W	Compact Cylinder/Large Bore Size: Double Acting, Double Rod	p. 100	p. 323
	CQ2W	Compact Cylinder/Standard Type: Double Acting, Double Rod	•	p. 323
	CQ2X	Low Speed Cylinder/Double Acting, Single Rod	p. 96	p. 323
	CQ2Y	Smooth Cylinder/Double Acting, Single Rod	p. 96	p. 323
	CQP2	Compact Cylinder/Axial Piping: Single Acting, Single Rod		_
	CQP2	Compact Cylinder/Axial Piping: Double Acting, Single Rod	-	-
	CQS	Compact Cylinder/Standard Type: Single Acting, Single Rod	-	p. 323
	cas	Compact Cylinder/Standard Type: Double Acting, Single Rod	•	p. 323 p. 323
			·	
	COSK	Compact Cylinder/Anti-lateral Load Type Compact Cylinder/Non rotating Red Type: Double Acting Single Red	p. 95	p. 323
	COSKW	Compact Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	•	p. 323
	CQSKW	Compact Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	•	p. 323
	CQSW	Compact Cylinder/Standard Type: Double Acting, Double Rod	p. 91	p. 323
	CQSX	Low Speed Cylinder/Double Acting, Single Rod	p. 90	p. 323
	CQSY	Smooth Cylinder/Double Acting, Single Rod	p. 90	p. 323
	CQU	Compact Cylinder/Plate Type: Double Acting, Single Rod	p. 110	_

Model Index (Alphanumerical Order)

		Replacement Parts	Replacement Procedure
CS1	Air Cylinder/Standard Type: Lube, Non-lube Type, Air-hydro Type	p. 68	p. 320
CS1□Q	Air Cylinder/Low Friction Type: Non-lube Type	p. 71	p. 320
CS1W	Air Cylinder/Double Rod Type	p. 70	p. 320
CS2	Air Cylinder	p. 72	p. 320
CS2W	Air Cylinder/Double Rod	p. 73	p. 320
CS2Y	Smooth Cylinder	p. 74	p. 320
CU	Free Mount Cylinder with Air Cushion	p. 87	_
CU	Free Mount Cylinder/Long Stroke Type: Double Acting, Single Rod	p. 85	_
CU	Free Mount Cylinder/Single Acting, Spring Return/Extend	p. 79	_
CU	Free Mount Cylinder/Double Acting, Single Rod	p. 77	_
CUJ	Mini Free Mount Cylinder	p. 75	p. 322
CUK	Free Mount Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	p. 83	_
CUK	Free Mount Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 81	_
сик	Free Mount Cylinder/Long Stroke Type: Non-rotating Rod, Double Acting, Single Rod	p. 86	_
CUKW	Free Mount Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 82	_
CUW	Free Mount Cylinder/Double Acting, Double Rod	p. 78	_
CUX	Low Speed Cylinder/Double Acting, Single Rod	p. 85	_
CV3	Valve Mounted Cylinder/Double Acting	p. 227	_
CV3K	Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 228	_
CVM3	Valve Mounted Cylinder/Single Acting, Spring Return/Extend	p. 225	p. 313
СУМЗК	Valve Mounted Cylinder/Non-rotating Rod Type: Single Acting, Spring Return/Extend	p. 226	p. 313
CVM5	Valve Mounted Cylinder/Double Acting, Single Rod	p. 223	p. 313
CVM5K	Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 224	p. 313
CVQ	Compact Cylinder/With Solenoid Valve	p. 222	p. 323
CVS1	Valve Mounted Cylinder/Double Acting	p. 229	_
CVS1K	Valve Mounted Cylinder/Non-rotating Rod Type: Double Acting	p. 230	_
CX2	Slide Unit/Double Rod Type	p. 168	_
cxs	Dual Rod Cylinder/With Air Cushion	p. 178	p. 372
cxs	Dual Rod Cylinder/Basic Type	p. 176	p. 372
cxs	Dual Rod Cylinder/With End Lock for Retraction Side	p. 179	p. 372
CXSJ	Dual Rod Cylinder/Compact Type	p. 174	p. 372
cxsw	Dual Rod Cylinder/Double Rod Type	p. 180	p. 372
СХТ	Platform Cylinder	p. 173	p. 323
CXWL	Slide Unit/Built-in Shock Absorber	p. 171	_
схим	Slide Unit/Built-in Shock Absorber	p. 169	_
CY1H	Magnetically Coupled Rodless Cylinder/Linear Guide Type	p. 142	_
CY1L	Magnetically Coupled Rodless Cylinder/Slider Type: Ball Bushing Bearing	p. 141	p. 351
CY1S	Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing	p. 140	p. 350
CY1S-Z	Magnetically Coupled Rodless Cylinder/Slider Type: Slide Bearing	p. 139	p. 350
СҮЗВ	Magnetically Coupled Rodless Cylinder/Basic Type	p. 136	p. 348
CY3R	Magnetically Coupled Rodless Cylinder/Direct Mount Type	p. 137	p. 349

FGA	Industrial Filter: Vessel Series	p. 297 p. 545
FGB	Industrial Filter: Vessel Series	p. 298 p. 549
FGC	Industrial Filter: Vessel Series	p. 299 p. 553
FGD	Industrial Filter: Vessel Series	p. 291 p. 537
FGE	Industrial Filter: Vessel Series	p. 293 p. 538, 540
FGF	Bag Filter	p. 300 p. 555
FGG	Industrial Filter: Vessel Series	p. 295 p. 543
FGH	High Precision Filter for Liquids	p. 302 p. 557



Maintenance Parts List Model Index (Alphanumerical Order)

			Replacement Parts	Replacement Procedure
	FN1	Low Maintenance Filter		p. 560
	FN4	Low Maintenance Filter	•	p. 560
	FQ1	Quick Change Filter		p. 559
			F . • • •	J
	НҮС	Hygienic Design Cylinder/ISO Standard Type	p. 116	p. 330
	HYG	Hygienic Design Cylinder	-	p. 334
	HYQ	Hygienic Design Cylinder/Basic Type	-	p. 330
		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	•	
	M			
*	MB	Air Cylinder/Single Rod	p. 47	p. 317
	MB-Z	Air Cylinder/Standard Type: Double Acting, Single Rod	p. 43	p. 317
	MB□Q	Air Cylinder/Low Friction Type	p. 51	p. 317
*	MB1	Square Tube Type Air Cylinder/Standard Type: Double Acting, Single Rod	p. 56	p. 317
	MB1-Z	Square Tube Type Air Cylinder/Standard Type: Double Acting, Single Rod	p. 53	p. 317
*	MB1K	Square Tube Type Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 58	p. 317
	MB1K-Z	Square Tube Type Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 55	p. 317
*	MB1W	Square Tube Type Air Cylinder/Standard Type: Double Acting, Double Rod	p. 57	p. 317
	MB1W-Z	Square Tube Type Air Cylinder/Standard Type: Double Acting, Double Rod	p. 54	p. 317
	MBB	Air Cylinder/With End Lock	p. 52	p. 317
*	MBK	Air Cylinder/Non-rotating Rod Type	p. 49	p. 317
	MBK-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Single Rod	p. 45	p. 317
*	MBKW	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 50	p. 317
	MBKW-Z	Air Cylinder/Non-rotating Rod Type: Double Acting, Double Rod	p. 46	p. 317
*	MBW	Air Cylinder/Double Rod	p. 48	p. 317
	MBW-Z	Air Cylinder/Standard Type: Double Acting, Double Rod	p. 44	p. 317
	MBY-Z	Smooth Cylinder/Double Acting, Single Rod	p. 43	p. 317
	MGC	Guide Cylinder/Compact Type	p. 163	_
	MGF	Guide Table	p. 164	p. 370
	MGG	Guide Cylinder	p. 160	_
	MGG	Guide Cylinder/With End Lock	p. 162	_
*	MGP	Compact Guide Cylinder	p. 154	p. 366
	MGP	Compact Guide Cylinder/With End Lock	p. 156	p. 366
	MGP	Common Specifications for Made-to-Order Products (-XB□, -XC□)	p. 243	_
*	MGP-□A	Compact Guide Cylinder/With Air Cushion	p. 155	p. 366
	MGP-□Z	Compact Guide Cylinder	p. 152	p. 366
	MGP-□Z	Common Specifications for Made-to-Order Products (-XB□, -XC□)	p. 242	_
	MGP□-AZ	Compact Guide Cylinder/With Air Cushion	p. 153	p. 366
	MGPS	Compact Guide Cylinder/Heavy Duty Guide Rod Type	p. 157	p. 366
	MGPW	Compact Guide Cylinder/Wide Type	p. 158	p. 366
	MGQ	Compact Guide Cylinder	p. 159	p. 366
	MGZ	Non-rotating Double Power Cylinder	p. 165	_
	MGZ	Non-rotating Double Power Cylinder/With End Lock on Rod Side	p. 166	_
	MGZR	Double Power Cylinder/Without Non-rotating Mechanism	p. 167	_
	MIS	Escapements/Single Finger Type	p. 221	p. 423
	MIW	Escapements/Double Finger Type	p. 220	p. 423
	MK	Rotary Clamp Cylinder/Standard	p. 205	p. 404
	MK2T	Rotary Clamp Cylinder/Double Guide Type	p. 206	p. 404
	MNB	Cylinder with Lock/Double Acting, Single Rod	p. 184	p. 384
	MNBW	Cylinder with Lock/Double Acting, Double Rod	p. 185	p. 384
	MU	Plate Cylinder/Single Acting, Spring Return/Extend	p. 113	_

The products marked with a \bigstar have been discontinued.

As they have been replaced by a new series, please check whether the cylinder is a new or a previous model before ordering replacement parts. For details, refer to "Checking Whether your Cylinder is a Current or Previous Model" on pages 563 and 564.

			Replacement	Replacement
			Parts	Procedure
	MU	Plate Cylinder/Double Acting, Single Rod	p. 111	_
	MUW	Plate Cylinder/Double Acting, Double Rod	p. 112	_
	MXF	Low Profile Slide Table	p. 147	p. 357
	MXP	Air Slide Table	p. 149	p. 359
	MXQ	Air Slide Table	p. 145	p. 352
	MXQR	Air Slide Table/Reversible Type	p. 146	p. 352
	MXS	Air Slide Table	p. 144	p. 352
	MXW	Air Slide Table	p. 148	p. 358
	MXY	Air Slide Table	p. 151	p. 362
	MY1□W	Mechanically Jointed Rodless Cylinder/With Protective Cover: Slide Bearing Guide Type, Cam Follower Guide Type	p. 128	p. 339
Ł	MY1B	Mechanically Jointed Rodless Cylinder/Basic Type	p. 121	p. 337
	MY1B-□Z	Mechanically Jointed Rodless Cylinder/Basic Type	p. 118	_
	MY1C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 124	p. 339
ť	MY1H	Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 125	p. 343
	MY1H-□Z	Mechanically Jointed Rodless Cylinder/Linear Guide Type	p. 119	_
	MY1M	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type	p. 123	p. 339
	MY2C	Mechanically Jointed Rodless Cylinder/Cam Follower Guide Type	p. 129	p. 344
	MY2H	Mechanically Jointed Rodless Cylinder/Linear Guide/Single Axis Type	p. 130	p. 344
	MY2HT	Mechanically Jointed Rodless Cylinder/Linear Guide/Double Axis Type	p. 130	p. 344
	МҮ3А	Mechanically Jointed Rodless Cylinder/Basic Type	p. 131	p. 345
	МҮ3В	Mechanically Jointed Rodless Cylinder/Basic Type	p. 133	p. 345
	МҮЗМ	Mechanically Jointed Rodless Cylinder/Slide Bearing Guide Type	p. 135	p. 345

R	
---	--

REAH	Sine Rodless Cylinder/Linear Guide Type	p. 196	_
REAL	Sine Rodless Cylinder/Slider Type	p. 194	_
REAR	Sine Rodless Cylinder/Direct Mount Type	p. 190	p. 349
REAS	Sine Rodless Cylinder/Slider Type: Slide Bearing	p. 192	p. 394
REBH	Sine Rodless Cylinder/Linear Guide Type	p. 200	_
REBR	Sine Rodless Cylinder/Direct Mount Type	p. 199	p. 349
REC	Sine Cylinder	p. 202	p. 395
RHC	High Power Cylinder	p. 203	p. 397
RQ	Compact Cylinder with Air Cushion	p. 109	p. 323
RS2H	Heavy Duty Stopper Cylinder	p. 219	p. 420
RSG	Stopper Cylinder/Adjustable Mounting Height	p. 217	p. 418
RSH	Heavy Duty Stopper Cylinder	p. 218	p. 420
RSQ	Stopper Cylinder/Fixed Mounting Height	p. 216	p. 418
RZQ	3 Position Cylinder	p. 204	p. 400

p. 88



Free Mount Cylinder for Vacuum



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

⚠ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines.

ISO 10218-1: Manipulating industrial robots - Safety.

(Part 1: General requirements)

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements"

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
 - replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

- Edition C * A list of current and previous cylinders, checking methods, and the model
 - * Refreshed products (CM2-Z, CG1-Z, CA2-Z series, etc.) have been added to the actuator section.
 - * Refreshed products (AC-A, AF-A, AR-A, B series, etc.) have been added to the modular F.R.L section.
 - * Number of pages has been increased from 488 to 572.

٧Z