For Air

2-Port Solenoid Valve with Manual Override

VX2 0 0 0 X357



The valve can be manually opened or closed when electrical control is not possible, such as during machine adjustment.







Variations

Body size	Valve type	Orifice diameter						Body	Seal	Port size	
		ø2 mm	ø3 mm	ø4 mm	ø5 mm	ø7 mm	ø8 mm	ø10 mm	material	material	Port size
Size 1	-	•	•	_	•	_	_	_	Aluminum	NBR	1/8, 1/4
Size 2		_	_	•	_	•	_	_			1/4, 3/8
Size 3		_	_	_	•	_	•	•			1/4, 3/8


Caution To ensure the safest possible operation of this product, please be sure to thoroughly read the "Safety Instructions" in our "Best Pneumatics" catalog before use.




X357





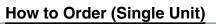



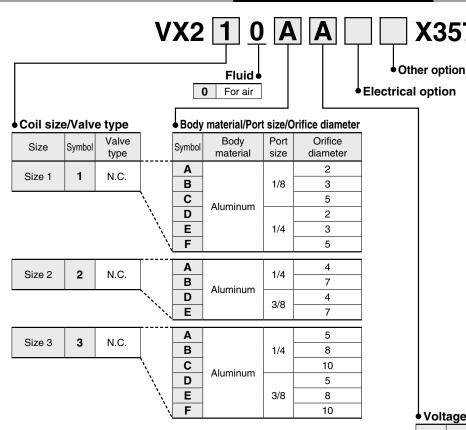

Common Specifications

Seal material	NBR
Coil insulation type	Class B
Thread type	Rc

Special options

Symbol	Mounting option	Electrical entry direction		
Nil		IN side (Standard)		
Α	Nama	90°		
В	None	180°		
С		270°		
D		IN side (Standard)		
E	\A /:41- 114	90°		
F	With bracket	180°		
G		270°		
Н	Marriation	IN side (Standard)		
J	Mounting holes on the	90°		
K	bottom side of the body	180°		
L	of the body	270°		


Volta	age/Electrical ent	ry			
Symbol	Voltage	Electrical entry			
Α	24 VDC	Grommet			
В	100 VAC				
C 110 VAC		Grommet			
D	200 VAC	(With surge voltage suppressor			
Е	230 VAC				
F	24 VDC				
G 24 VDC					
Н	100 VAC	DIN terminal			
J	110 VAC	/ With surge voltage \			
K	200 VAC	(suppressor)			
L	230 VAC				
M 24 VDC					
N	100 VAC	Conduit terminal (With surge voltage) suppressor			
Р	110 VAC				
Q	200 VAC				
R	230 VAC				
S	24 VDC				
Т	100 VAC	Conduit (With surge voltage) suppressor			
U	110 VAC				
V	200 VAC				
w	230 VAC				
Υ	24 VDC	Flat terminal			
Z	Other special options				


For electrical/other options, refer to the Web Catalog.





Dimensions [mm]

VX210□□□□X357□

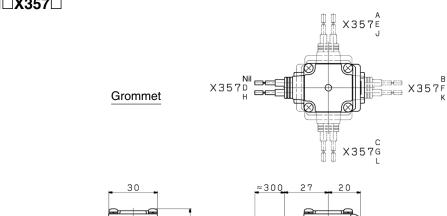


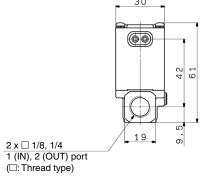

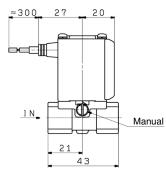


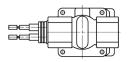



VX220□□□□X357□

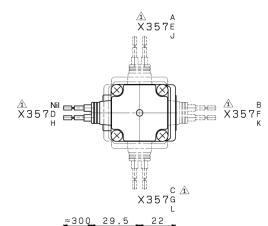



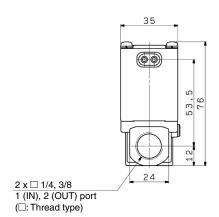

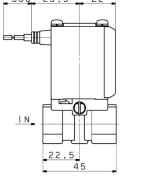

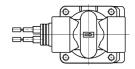





Grommet


VX2 □ *0* □ □ □ □ *X357* □


Dimensions [mm]

VX230□□□□**X357**□

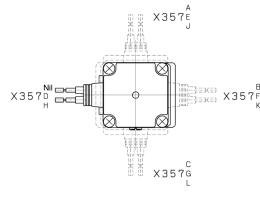

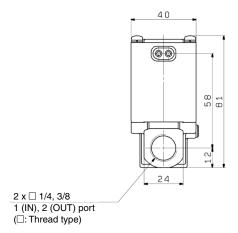

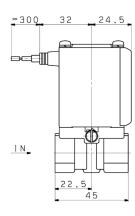

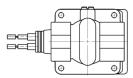

Manual operation method

Valve opening: Turn the manual override 90 degrees clockwise us-

ing a slotted screwdriver. The valve will remain open even when the screwdriver is removed.

Valve closing: Turn the manual override 90 degrees counterclock-

wise from the valve open position to return it to its

original position.

Make sure that the manual override is in the valve closed position when performing electrical operation.

Note) Do not turn the manual override more than 90 degrees.

