Electric Actuators



For details, refer to page 75.

High Performance

RoHS

Slider Type/Rod Type

Incremental (Step Motor 24 VDC)

Reduces cycle time

Cycle time

LEFS□F

Reduced by 39% (0.57 s ← 0.93 s) compared with the existing model*1 When LEFS25FH-400 is operated from 0 to 400 mm (stroke)

LEY□**F**

Reduced by 44% (0.54 s ← 0.97 s) compared with the existing model*2

*2 When LEY25FA-300 is operated from 0 to 300 mm (stroke)



Acceleration/ **Deceleration**

10000 mm/s² (334% increase compared with the existing model)

Max. speed

800 mm/s

1500 mm/s (Improved by 25% compared with the existing model)

(Improved by 60% compared with the existing model)

JXC5H/6H Series Existing model Time [T]

High Performance Step Motor Controller Higher acceleration and max. speed can be set with the special controller.

> Parallel I/O JXC5H/6H Series p. 61



EtherCAT/EtherNet/IP™/ **PROFINET** JXCEH/9H/PH Series p. 68



LEFS F/LEY F Series



Step Data Input Type JXC5H/6H Series p.61




Controller Setting Software ACT Controller 2



Easy-to-use setting software ACT Controller 2 (For PC)


Various functions available in normal mode (Compared with the existing ACT Controller)

Parameter and step data setting

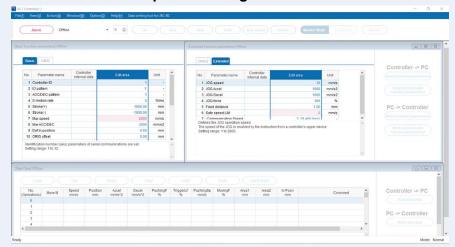


 Customers operating computers with specifications other than Windows 10/64 bit should use the existing ACT Controller.

Alarm confirmation

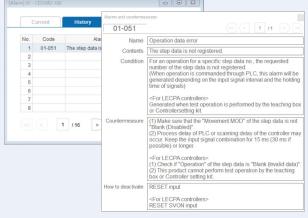

When an alarm is generated, the alarm details and countermeasures can be confirmed.

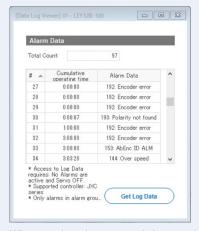

When an alarm is generated, the cumulative startup time of the controller can be confirmed.

Waveform monitoring



The position, speed, force, and input/output signals' waveform data during operation can be measured.

* When using the ACT Controller 2 test operation function, waveform monitoring is not available.

Step Data Input Type JXC5H/6H Series p.61




Controller Setting Software ACT Controller 2

The JXC-BC writing tool



The writing tool can be used to write the connected actuator's parameters and step data to a JXC series blank controller.


Customizable plug-in functions

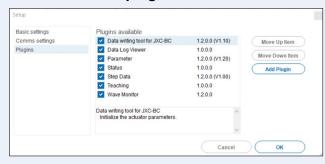

Which plug-in functions are displayed as well as the display order are customizable. Customers can add the functions they require.


In normal mode, various other test operation methods (program operation, jogging, moving of the constant rate, etc.), signal status monitoring, one-touch switching between Japanese and English, and other functions are available.


For immediate use, operate in easy mode.

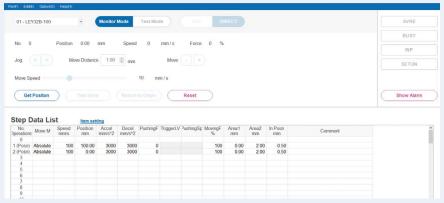

Step data setting, various test operations, and status confirmation can be done on a single screen.

How to download the setting software

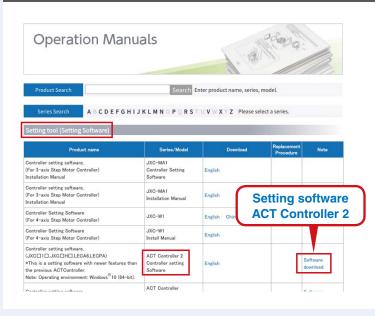

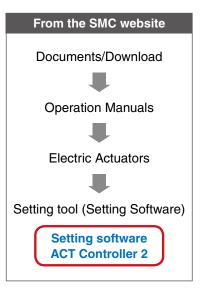

Step Data Input Type JXC5H/6H Series p.61


Teaching Box

O Normal Mode

- Multiple step data can be stored in the teaching box and transferred to the controller.
- Continuous test drive by up to 5 step data

Teaching box screen


 Each function (step data setting, test drive, monitoring, etc.) can be selected from the main menu.

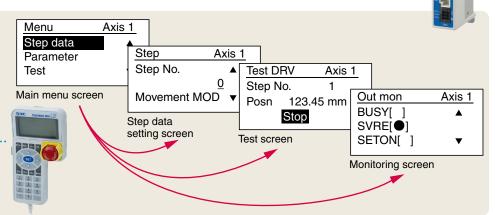


© Easy Mode

- The simple screen without scrolling promotes ease of setting and operation.
- Choose an icon from the first screen to select a function.
- Set the step data and check the monitor on the second screen.



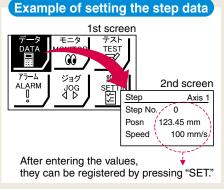

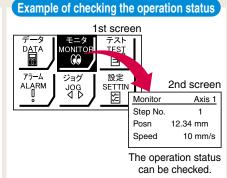

Teaching box screen

 Data can be set by inputting only the position and speed.
 (Other conditions are preset.)

Step	Axis 1
Step No.	0
Posn	50.00 mm
Speed	200 mm/s





Step	Axis 1
Step No.	1
Posn	80.00 mm
Speed	100 mm/s

The actuator and controller are provided as a set. (They can be ordered separately as well.)

Confirm that the combination of the controller and actuator is correct.

- <Check the following before use.>
- ① Check the actuator label for the model number. This number should match that of the controller.
- ② Check that the Parallel I/O configuration matches (NPN or PNP).

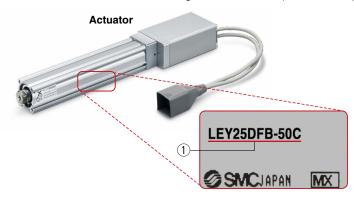

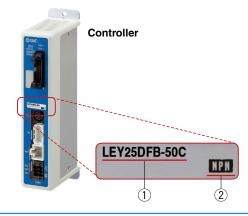

Function

Item	Step data input type JXC5H/6H	
Step data and parameter setting	Input from controller setting software (PC) Input from teaching box	
Step data "position" setting	Numerical value input from controller setting software (PC) or teaching box Input numerical value Direct teaching JOG teaching	
Number of step data	64 points	
Operation command (I/O signal)	Step No. [IN *] input \Rightarrow [DRIVE] input	
Completion signal	INP] output	

Setting Items

TB: Teaching box PC: Controller setting software

	Item	Contents		sy ode	Normal Mode	Step data input type
				PC	TB/PC	JXC5H/6H
	Movement MOD	Selection of "absolute position" and "relative position"	Δ	•	•	Set at ABS/INC
	Speed	Transfer speed	•	•	•	Set in units of 1 mm/s
	Position	[Position]: Target position [Pushing]: Pushing start position	•	•	•	Set in units of 0.01 mm
	Acceleration/Deceleration	Acceleration/deceleration during movement	•	•	•	Set in units of 1 mm/s ²
Step data			•	•	•	Set in units of 1%
setting (Excerpt)	Trigger LV	Target force during pushing operation	Δ	•	•	Set in units of 1%
	Pushing speed	Speed during pushing operation	Δ	•	•	Set in units of 1 mm/s
	Moving force	Force during positioning operation	Δ	•	•	Set to 100%
	Area output	Conditions for area output signal to turn ON	Δ	•	•	Set in units of 0.01 mm
	In position	[Position]: Width to the target position [Pushing]: How much it moves during pushing	Δ	•	•	Set to 0.5 mm or more (Units: 0.01 mm)
	Stroke (+)	+ side position limit	×	×	•	Set in units of 0.01 mm
Parameter	Stroke (-)	- side position limit	×	×	•	Set in units of 0.01 mm
setting ORIG direction	Direction of the return to origin can be set.	×	×	•	Compatible	
(Excerpt)	ORIG speed	Speed during return to origin	×	×	•	Set in units of 1 mm/s
	ORIG ACC	Acceleration during return to origin	×	×	•	Set in units of 1 mm/s ²
	JOG		•	•	•	Continuous operation at the set speed can be tested while the switch is being pressed.
Test	MOVE		×	•	•	Operation at the set distance and speed from the current position can be tested.
	Return to ORIG		•	•	•	Compatible
	Test drive	Operation of the specified step data	•	•	(Continuous operation)	Compatible
	Forced output	ON/OFF of the output terminal can be tested.	×	×	•	Compatible
	DRV mon	Current position, speed, force, and the specified step data can be monitored.	•	•	•	Compatible
Monitor	In/Out mon	Current ON/OFF status of the input and output terminal can be monitored.	×	×	•	Compatible
A1 N4	Status	Alarm currently being generated can be confirmed.	•	•	•	Compatible
ALM	ALM Log record	Alarms generated in the past can be confirmed.	×	×	•	Compatible
File	Save/Load	Step data and parameters can be saved, forwarded, and deleted.	×	×	•	Compatible
Other	Language	Can be changed to Japanese or English	•	•	•	Compatible

 \triangle : Can be set from TB Ver. 2.** (The version information is displayed on the initial screen.)



Fieldbus Network

EtherCAT/EtherNet/IP™/PROFINET **Direct Input Type** Step Motor Controller/JXC H Series 68









Two types of operation command

Step no. defined operation: Operate using the preset step data in the controller.


Numerical data defined operation: The actuator operates using values such as position and speed from the PLC.

Numerical monitoring available


Numerical information, such as the current speed, current position, and alarm codes, can be monitored on the PLC.

Transition wiring of communication cables

Two communication ports are provided.

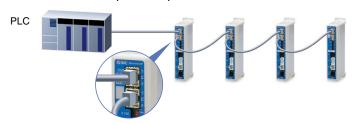



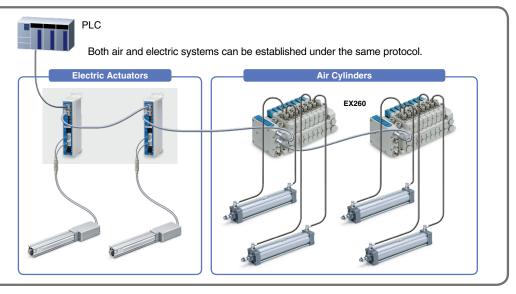



Controller Setting Software ACT Controller 2 From p. 1




Easy-to-use setting software ACT Controller 2 (For PC)


Various functions available in normal mode (Compared with the existing ACT Controller)

- Parameter and step data setting
- Alarm confirmation
- Waveform monitoring
- The JXC-BC writing tool
- Customizable plug-in functions
- * Customers operating computers with specifications other than Windows 10/64 bit should use the existing ACT Controller.

System Construction/General Purpose I/O

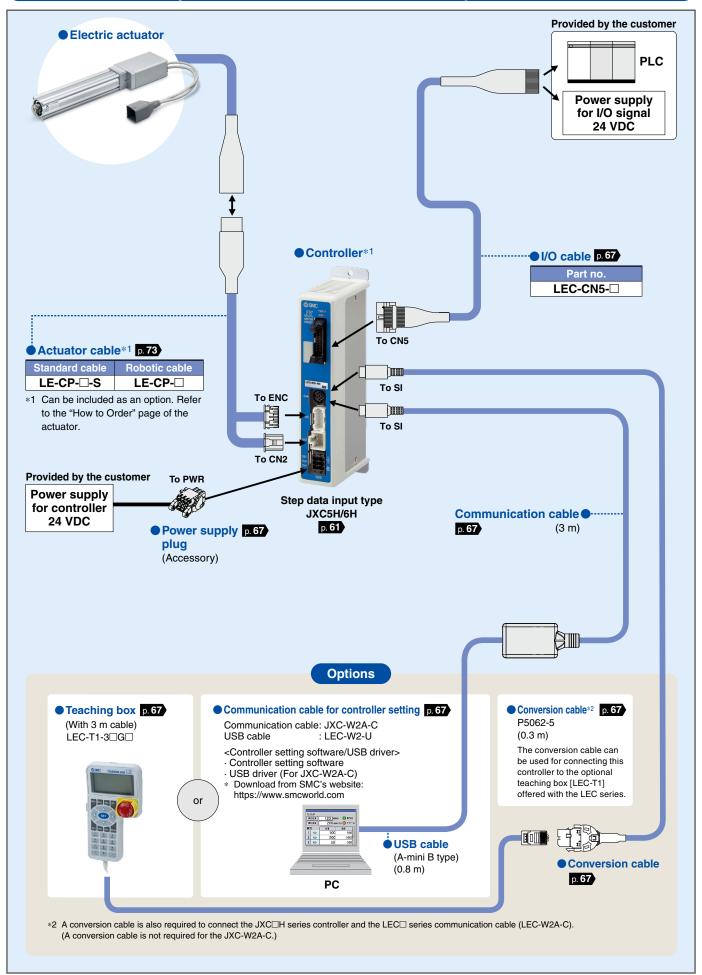

System Construction/Fieldbus Network (EtherCAT/EtherNet/IP™/PROFINET Direct Input Type)

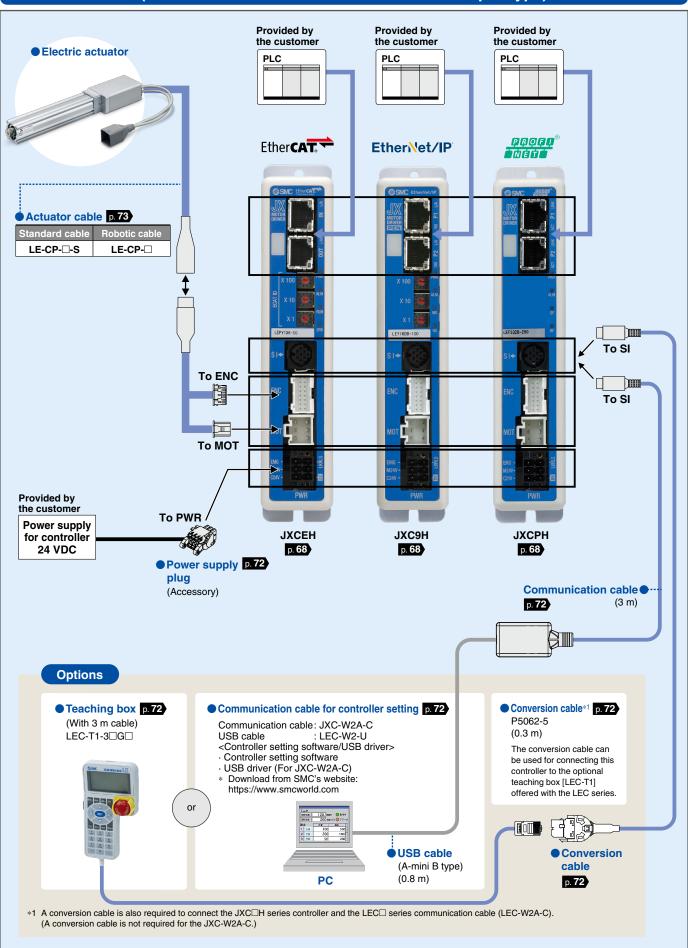



CONTENTS

High Performance Slider Type/Ball Screw Drive $LEFS \square F$ Series $lacksquare$						
Since Type/Dan Sciew Drive LLI Selles in	High Performance	Slider 7	Гуре/Ball	Screw Drive	$LEFS\Box F$	Series p. 10

Incremental (Step Motor 24 VDC)



Model Selection	p. 11
How to Order	p. 19
Specifications	p. 21
Dimensions	p. 23
Auto Switch Mounting	p. 30

High Performance Rod Type LEY F Series p. 34

Incremental (Step Motor 24 VDC)



Model Selection	p. 35
How to Order	p. 43
Specifications	p. 45
Dimensions	p. 47
Auto Switch Mounting	p. 55

Controllers JXC H Series p.60

High Performance Controller (Step Data Input Type) JXC5H/6H Series Incremental (Step Motor 24 VDC)



How to Order	p. 61
Specifications	p. 61
Dimensions	p. 63
Options	p. 67
Actuator Cable	p. 73

High Performance Step Motor Controller JXCEH/9H/PH Series Incremental (Step Motor 24 VDC)



How to Order	p. 68
Specifications	p. 69
Dimensions	p. 70
Options	p. 72
Actuator Cable	p. 73

Precautions Relating to Differences in Controller Versions		o. 7	74
CE/UKCA/UL-compliance List	p	o. 7	7

Electric Actuators


High Performance Slider Type



Controllers p. 60



Selection Procedure

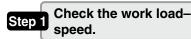

Step 2 Check the cycle time.




Check the allowable Step 3 moment.

Selection Example

Operating conditions

- •Workpiece mass: 10 [kg]
- •Speed: 300 [mm/s]
- Acceleration/Deceleration: 10000 [mm/s²]
- •Stroke: 200 [mm]
- Mounting orientation: Horizontal upward

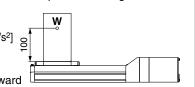


Workpiece mounting condition:

Step 1 Check the work load-speed. <Speed-Work load graph> (pages 12 to 15)

Select a model based on the workpiece mass and speed while referencing the speed-work load graph.

Selection example) The LEFS25FA-200 can be temporarily selected as a possible candidate based on the graph shown on the right side.

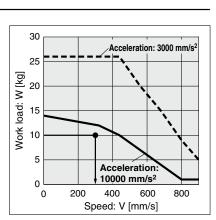

<Speed-Work load graph> (LEFS25FA/Step motor)

Step 2 Check the cycle time.

Calculate the cycle time using the following calculation method.

Cycle time:

T can be found from the following equation.

$$T = T1 + T2 + T3 + T4 [s]$$

•T1: Acceleration time and T3: Deceleration time can be found by the following equation.

•T2: Constant speed time can be found from the following equation.

$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V}[s]$$

•T4: Settling time varies depending on the conditions such as actuator types, load, and in position of the step data. Reference value for settling time: 0.15 s or less

The following value is used for this calculation.

Calculation example)

T1 to T4 can be calculated as follows.

$$T1 = V/a1 = 300/10000 = 0.03 [s],$$

$$T3 = V/a2 = 300/10000 = 0.03 [s]$$

$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V}$$

$$=\frac{200-0.5\cdot 300\cdot (0.03+0.03)}{2000}$$


$$= 0.64 [s]$$

$$T4 = 0.15 [s]$$

The cycle time can be found as follows.

$$T = T1 + T2 + T3 + T4$$

$$= 0.03 + 0.64 + 0.03 + 0.15$$

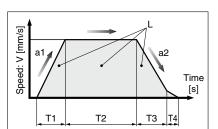

L : Stroke [mm] ··· (Operating condition)

V : Speed [mm/s] ··· (Operating condition)

a1: Acceleration [mm/s2] ··· (Operating condition)

a2: Deceleration [mm/s2] ··· (Operating condition)

T1: Acceleration time [s] Time until reaching the set speed

T2: Constant speed time [s] Time while the actuator is operating at a constant speed

T3: Deceleration time [s] Time from the beginning of the constant speed operation to stop

T4: Settling time [s]


Time until positioning is completed




Step 3 Check the allowable moment. <Static allowable moment> (page 15)

<Dynamic allowable moment> (page 16)

Confirm the moment that applies to the actuator is within the allowable range for both static and dynamic conditions.

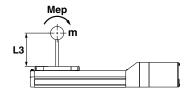

Based on the above calculation result, the LEFS25FA-200 should be selected.

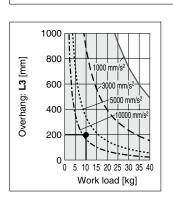





* The following graphs show the values when the moving force is 100%.

LEFS16FA/Ball Screw Drive



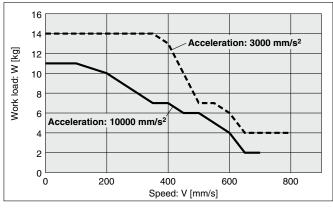


Vertical/Lead 10

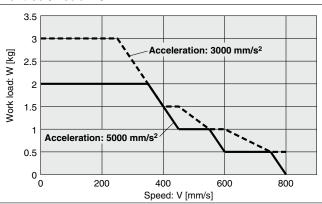


LEFS16FB/Ball Screw Drive

Horizontal/Lead 5

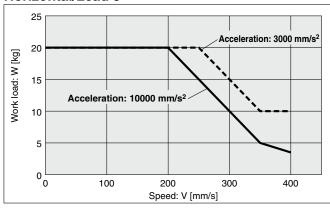

Vertical/Lead 5

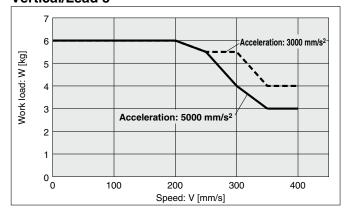





* The following graphs show the values when the moving force is 100%.

LEFS25FH/Ball Screw Drive

Horizontal/Lead 20

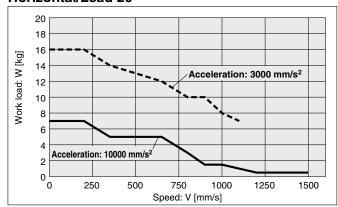


Vertical/Lead 20

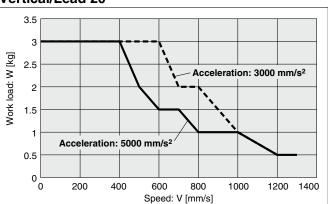


LEFS25FA/Ball Screw Drive

Horizontal/Lead 12

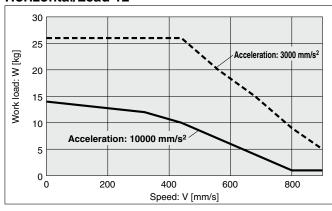


Vertical/Lead 12

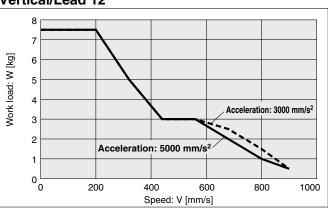


LEFS25FB/Ball Screw Drive

Horizontal/Lead 6

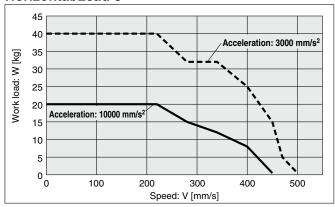

Vertical/Lead 6

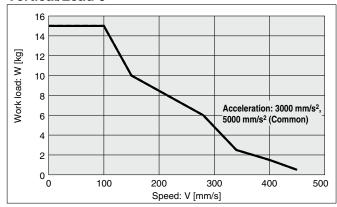







* The following graphs show the values when the moving force is 100%.

LEFS32FH/Ball Screw Drive



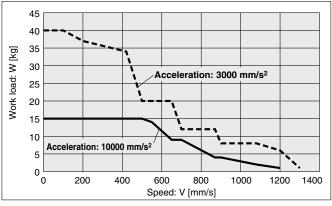


Vertical/Lead 24

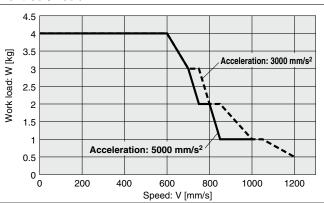


LEFS32FA/Ball Screw Drive

Horizontal/Lead 16

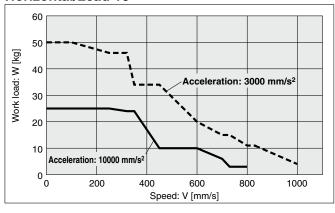


Vertical/Lead 16

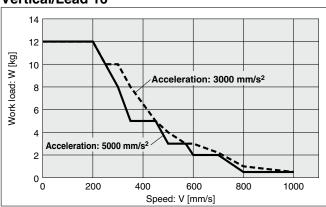


LEFS32FB/Ball Screw Drive

Horizontal/Lead 8

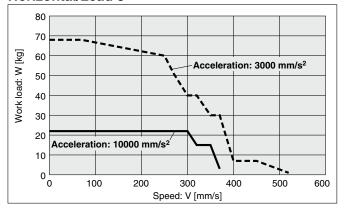

Vertical/Lead 8

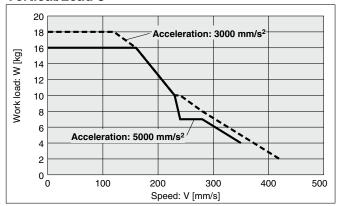





* The following graphs show the values when the moving force is 100%.

LEFS40FH/Ball Screw Drive

Horizontal/Lead 30

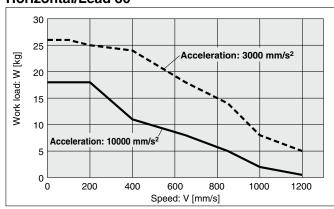


Vertical/Lead 30

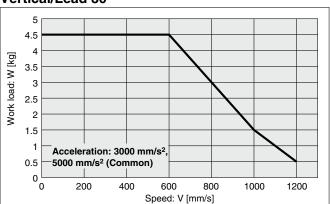


LEFS40FA/Ball Screw Drive

Horizontal/Lead 20

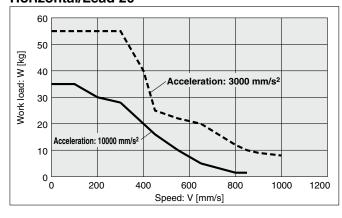


Vertical/Lead 20

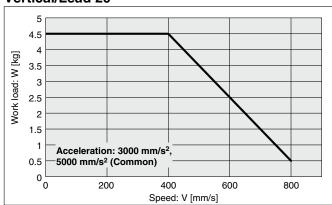


LEFS40FB/Ball Screw Drive

Horizontal/Lead 10

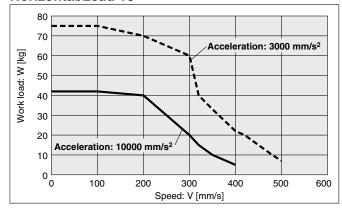

Vertical/Lead 10

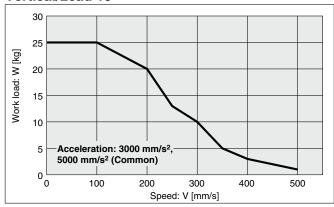

Static Allowable Moment*1

				[N·m]
Model	Size	Pitching	Yawing	Rolling
	16	10.0	10.0	20.0
LEF□	25	27.0	27.0	52.0
LEF	32	46.0	46.0	101.0
	40	110.0	110.0	207.0


^{*1} The static allowable moment is the amount of static moment which can be applied to the actuator when it is stopped.

If the product is exposed to impact or repeated load, be sure to take adequate safety measures when using the product.

Model Selection LEFS F Series Incremental (Step Motor 24 VDC)

Dynamic Allowable Moment

* These graphs show the amount of allowable overhang (guide unit) when the center of gravity of the workpiece overhangs in one direction.

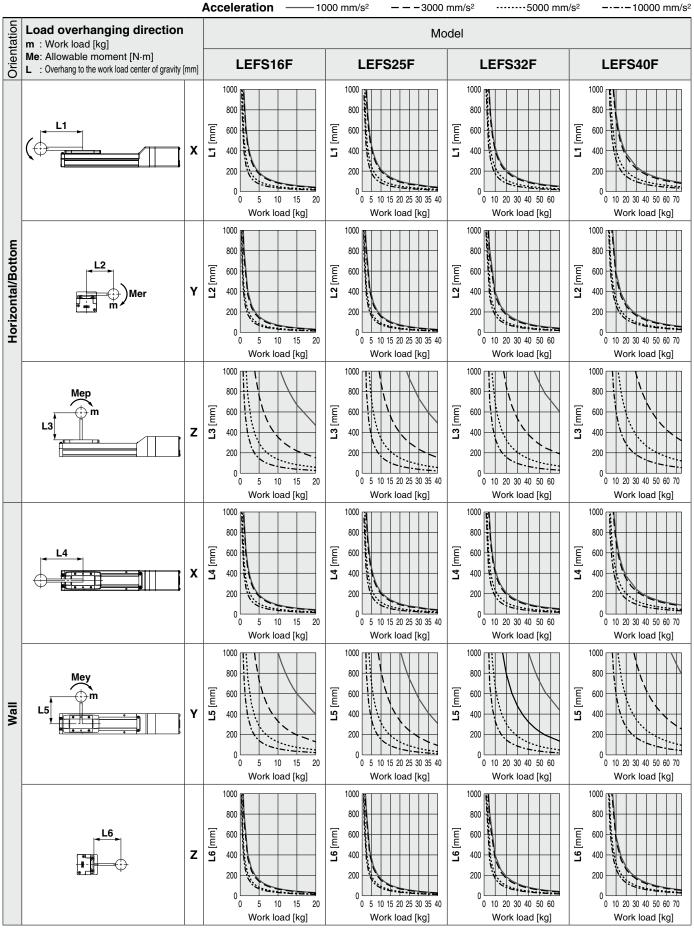



Dynamic Allowable Moment

* These graphs show the amount of allowable overhang (guide unit) when the center of gravity of the workpiece overhangs in one direction.

Acceleration 1000 mm/s² - - 3000 mm/s² -----5000 mm/s² Orientation Load overhanging direction Model m: Work load [kg] Me: Allowable moment [N·m] LEFS16F LEFS25F LEFS32F LEFS40F L : Overhang to the work load center of gravity [mm] 1000 1000 1000 1000 800 800 mm [mm] **L7** [mm] [mm] 600 600 600 600 Υ 400 7 400 7 400 7 400 200 200 200 200 2 3 4 5 10 5 10 15 20 Vertical Work load [kg] Work load [kg] Work load [kg] Work load [kg] 1000 1000 1000 1000 800 800 800 800 **L8** [mm] 600 600 **L8** [mm] 600 **L8** [mm] 600 **L8** [mm] Z 400 400 400 400 200 200 200 2 3 4 5 5 10 5 10 15 20 25

Calculation of Guide Load Factor

Work load [kg]

1. Decide operating conditions.

Model: LEFS□F

Size: 25/32/40

Mounting orientation: Horizontal/Bottom/Wall/Vertical

Acceleration [mm/s²]: **a** Work load [kg]: **m**

Work load [kg]

Work load center position [mm]: Xc/Yc/Zc

- 2. Select the target graph while referencing the model, size, and mounting orientation.
- 3. Based on the acceleration and work load, find the overhang [mm]: Lx/Ly/Lz from the graph.
- 4. Calculate the load factor for each direction.

 $\alpha x = Xc/Lx$, $\alpha y = Yc/Ly$, $\alpha z = Zc/Lz$

5. Confirm the total of $\alpha \boldsymbol{x}$, $\alpha \boldsymbol{y}$, and $\alpha \boldsymbol{z}$ is 1 or less.

 $\alpha x + \alpha y + \alpha z \le 1$

When 1 is exceeded, please consider a reduction of acceleration and work load, or a change of the work load center position and series.

Example

1. Operating conditions Model: LEFS40F


Size: 40


Mounting orientation: Horizontal Acceleration [mm/s²]: 3000


Work load [kg]: 20

Work load center position [mm]: Xc = 0, Yc = 50, Zc = 200

2. Select the graphs for horizontal of the LEFS40F on page 16.

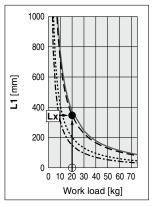

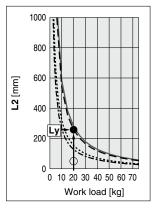

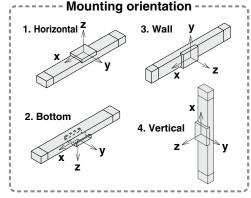

Work load [kg]

- 3. Lx = 350 mm, Ly = 250 mm, Lz = 1000 mm
- 4. The load factor for each direction can be found as follows.


Work load [kg]

 $\alpha x = 0/350 = 0$

 α **y** = **50/250** = **0.2**


 $\alpha z = 200/1000 = 0.2$

5. $\alpha x + \alpha y + \alpha z = 0.4 \le 1$

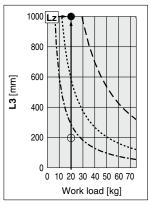

Model Selection LEFS F Series Incremental (Step Motor 24 VDC)


Table Accuracy (Reference Value)

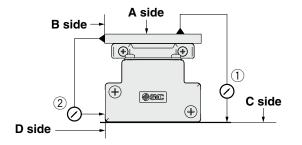


	Traveling parallelism	[mm] (Every 300 mm)
Model	C side traveling parallelism to A side	② D side traveling parallelism to B side
LEFS16F	0.05	0.03
LEFS25F	0.05	0.03
LEFS32F	0.05	0.03
LEFS40F	0.05	0.03

Traveling parallelism does not include the mounting surface accuracy. (Excludes when the stroke exceeds 2000 mm)

Table Displacement (Reference Value)

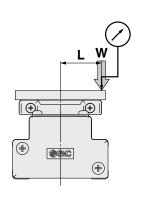


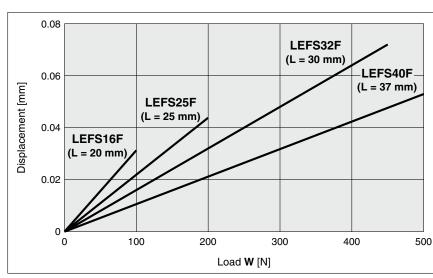


- * This displacement is measured when a 15 mm aluminum plate is mounted and fixed on the table
- * Check the clearance and play of the guide separately.

Overhang Displacement Due to Table Clearance (Initial Reference Value)

Basic type

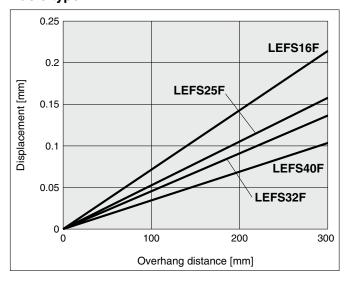

High-precision type

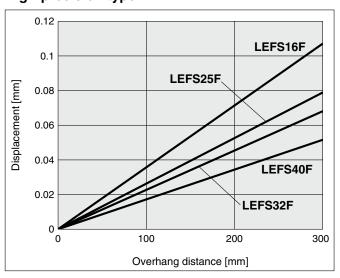


High Performance Slider Type **Ball Screw Drive**



LEFS F Series LEFS16, 25, 32, 40

(RoHS)

How to Order

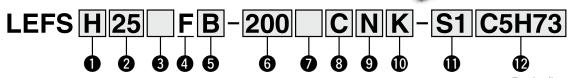

For details on controllers, refer to page 20.

Accuracy

Accuracy			
Nil	Basic type		
H High-precision typ			

2 Siz	e
16	
25	
32	
40	

<u> 4</u>	Мо	tor	ty	ре

Cumbal	Applicable size			Compatible			
Symbol	Type	LEFS16	LEFS25	LEFS32	LEFS40	controllers	
F	High performance (Step motor 24 VDC)	•	•	•	•	JXC5H JXC6H JXCEH JXC9H JXCPH	

3 Motor mounting position In-line

A	l ead	[mm]

Symbol	LEFS16	LEFS25	LEFS32	LEFS40
Н	_	20	24	30
Α	10	12	16	20
В	5	6	8	10

6 Stroke*1[mm]

01101	Guerce [mm]			
Stroke	Note			
Stroke	Size	Applicable stroke		
50 to 500	16	50, 100, 150, 200, 250, 300, 350, 400, 450, 500		
50 to 800	25	50, 100, 150, 200, 250, 300, 350, 400, 450, 500, 550, 600, 650, 700, 750, 800		
50 to 1000	32	50, 100, 150, 200, 250, 300, 350, 400, 450, 500, 550, 600, 650, 700, 750, 800, 850, 900, 950, 1000		
150 to 1200	40	150, 200, 250, 300, 350, 400, 450, 500, 550, 600, 650, 700, 750, 800, 850, 900, 950, 1000, 1100, 1200		

Symbol	LEFS16	LEFS25	LEFS32	LEFS40
Н	_	20	24	30
Α	10	12	16	20
В	5	6	8	10

8 Auto switch compatibility*2 *3 *4 *5

Nil	None	
С	With (Includes 1 mounting bracket)	

Grease application (Seal band part)

Nil		With		
N	Without	(Roller specifi	cation)	

Motor option

Nil	Without option	
В	With lock	


Positioning pin hole

Nil	Housing B bottom* ⁶	Housing B bottom
К	Body bottom 2 locations	Body bottom

Actuator cable type/length*8

Standard o	able [m]	Roboti	c cable		[m]
Nil	None	R1	1.5	RA	10* ⁷
S1	1.5	R3	3	RB	15* ⁷
S3	3	R5	5	RC	20* ⁷
S5	5	R8	8*7		



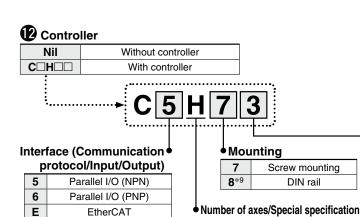

Communication plug connector, I/O cable*10

Symbol	Type	Applicable interface
Nil	Without accessory	_
1	I/O cable (1.5 m)	B # 11 . (AIBAN)
3	I/O cable (3 m)	Parallel input (NPN) Parallel input (PNP)
5	I/O cable (5 m)	i araner iriput (i ivi)

*1 Please contact SMC for non-standard strokes as they are produced as special orders

DIN rail

1 axis/High performance type

Excluding the LEFS16

EtherNet/IP™

PROFINET

9

Р

- *3 If 2 or more are required, please order them separately. (Part no.: LEF-D-2-1 For details, refer to the Web Catalog.)
- The auto switches must be ordered separately. (For details, refer to the Web Catalog.)
- *5 When "Nil" is selected, the product will not come with a built-in magnet for an auto switch, and so a mounting bracket cannot be secured. Be sure to select an appropriate model initially as the product cannot be changed to have auto switch compatibility after purchase.
- *6 For details on the mounting method, refer to the Web Catalog.
- *7 Produced upon receipt of order (Robotic cable only)
- *8 The standard cable should only be used on fixed parts. For use on moving parts, select the robotic cable.
- *9 The DIN rail is not included. It must be ordered separately.
- *10 Select "Nil" for anything other than parallel input. Select "Nil," "1," "3," or "5" for parallel input.

∕!∖ Caution

[CE/UKCA-compliant products]

EMC compliance was tested by combining the electric actuator LEF series and the controller JXC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

■ Trademark

EtherNet/IP® is a registered trademark of ODVA, Inc.


EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

The actuator and controller are sold as a package.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

*1 Check the actuator label for the model number.

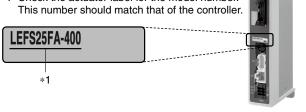

Refer to the Operation Manual for using the products. Please download it via our website: https://www.smcworld.com

nnatible Controllers

Compatible Controlle	rs						
Туре	Step data input type	EtherCAT direct input type	EtherNet/IP™ direct input type	PROFINET direct input type			
Series	JXC5H JXC6H	JXCEH	ЈХС9Н	ЈХСРН			
Features	Parallel I/O	EtherCAT direct input	EtherNet/IP™ direct input	PROFINET direct input			
Compatible motor	Step motor 24 VDC		Step motor (Servo/24 VDC)				
Max. number of step data	64 points		64 points				
Power supply voltage	24 VDC		24 VDC				
Reference page	61	68					



Specifications

	Model		LEF:	S16F		LEFS25F			LEFS32F		LEFS40F					
Stroke [m	m]*1		50 to	500		50 to 800			50 to 1000)		150 to 120	0			
Work load	Н	orizontal	14	20	16	28*	40	40	50	68	26	60*	75			
[kg]*2	•	/ertical	3	6	3	7.5	15	4	12	18	4.5	4.5	25			
		Up to 400	10 to 800	5 to 400	20 to 1500	12 to 900	6 to 500	24 to 1300	16 to 1000	8 to 520	30 to 1200	20 to 1000	10 to 500			
		401 to 500	10 to 700	5 to 360	20 to 1100	12 to 750	6 to 400	24 to 1300	16 to 950	8 to 520	30 to 1200	20 to 1000	10 to 500			
		501 to 600	_	_	20 to 900	12 to 540	6 to 270	24 to 1200	16 to 800	8 to 400	30 to 1200	20 to 1000	10 to 500			
0	041	601 to 700	_	_	20 to 630	12 to 420	6 to 230	24 to 930	16 to 620	8 to 310	30 to 1200	20 to 900	10 to 440			
Speed [mm/s]	Stroke range	701 to 800	_	_	20 to 550	12 to 330	6 to 180	24 to 750	16 to 500	8 to 250	30 to 1140	20 to 760	10 to 350			
[lungo	801 to 900	_	_	_		_	24 to 610	16 to 410	8 to 200	30 to 930	20 to 620	10 to 280			
		901 to 1000	_	_	_	_	_	24 to 500	16 to 340	8 to 170	30 to 780	20 to 520	10 to 250			
<u> </u>		1001 to 1100	_	_	_	_	_	_	_	_	30 to 660	20 to 440	10 to 220			
g		1101 to 1200	_	30 to 570 20 to 380 10 to 190												
Max. acceleration [mm/s ²]	on/deceleration	Horizontal						10000								
[mm/s ²]		Vertical						5000								
Positioning r	repeatability							±0.02								
Positioning r [mm]		High-precision type		±0.015 (Lead H: ±0.02)												
Lost motion	on	Basic type		0.1 or less												
[mm]*3		High-precision type						0.05 or less	S							
Lead [mm	-		10	5	20	12	6	24	16	8	30	20	10			
		istance [m/s ²]*4	50/20													
Actuation	<i>,</i> ,		Ball screw													
Guide typ							L	inear guid			1					
Static		p (Pitching)		0		27			46			110				
allowable moment*5	. —	y (Yawing)	ļ	0		27			46			110				
	ivie	r (Rolling)	2	0		52			101			207				
		ture range [°C]						5 to 40								
		range [%RH]	_		I		90 or less	s (No cond			1					
Motor size				28		□42			□56.4			□56.4				
Motor typ	е		Step motor (Servo/24 VDC)													
Encoder								ncrementa								
Motor size Motor type Encoder Power sup Power [W]		ige [V]						4 VDC ±10	,-							
	1****		Max. po	wer 102	Ma	x. power 1			x. power 1	58	Ma	ax. power 2	202			
Type*7 Holding for Power [W]	[N]		00	50	47	70		nagnetizin		040	75	140	0.45			
Holding for Power [W]			29 59 47 78 157 72 108 216 75 113 245 2.9 5 5 5									245				
Power [W]			2.9 5 5 5 5 5 24 VDC ±10%													
_			d strokes as they are produced as special orders.													

- *1 Please contact SMC for non-standard strokes as they are produced as special orders.
- *2 The max. work load at 3000 mm/s² acceleration and deceleration speed. (Values with * show the max. work load at 1000 mm/s² acceleration and deceleration speed.) Work load varies depending on the speed and acceleration. Check the "Speed–Work Load Graph" on pages 12 to 15. Furthermore, if the cable length exceeds 5 m, the speed and work load specified in the "Speed–Work Load Graph" may decrease by up to 10% for each 5 m increase.
- *3 A reference value for correcting errors in reciprocal operation
- *4 Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)

 **A The test was performed in a test ranging between 45 to 2000 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw. (The test was performed in a test ranging between 45 to 2000 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw. (The test was performed in a test ranging between 45 to 2000 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw.)
 - Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)
- *5 The static allowable moment is the amount of static moment which can be applied to the actuator when it is stopped. If the product is exposed to impact or repeated load, be sure to take adequate safety measures when using the product.
- *6 Indicates the max. power during operation (including the controller)
 This value can be used for the selection of the power supply.
- *7 With lock only
- *8 For an actuator with lock, add the power for the lock.



Weight

Series					LEFS	S16F				
Stroke [mm]	50 100 150 200 250 300 350 400 450									500
Product weight [kg]	0.85	0.92	1.00	1.07	1.15	1.22	1.30	1.37	1.45	1.52
Additional weight with lock [kg]	0.12									


Series		LEFS25F														
Stroke [mm]	50	0 100 150 200 250 300 350 400 450 500 550 600 650 700 750 800														
Product weight [kg]	1.70	1.84	1.98	2.12	2.26	2.40	2.54	2.68	2.82	2.96	3.10	3.24	3.38	3.52	3.66	3.80
Additional weight with lock [kg]		0.26														

Series		LEFS32F																		
Stroke [mm]	50	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000
Product weight [kg]	3.15	3.35	3.55	3.75	3.95	4.15	4.35	4.55	4.75	4.95	5.15	5.35	5.55	5.75	5.95	6.15	6.35	6.55	6.75	6.95
Additional weight with lock [kg]										0.	53									


Series		LEFS40F																		
Stroke [mm]	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1100	1200
Product weight [kg]	5.37	5.65	5.93	6.21	6.49	6.77	7.15	7.33	7.61	7.89	8.17	8.45	8.73	9.01	9.29	9.57	9.85	10.13	10.69	11.25
Additional weight with lock [kg]			•		•					0.	53									



LEFS16F

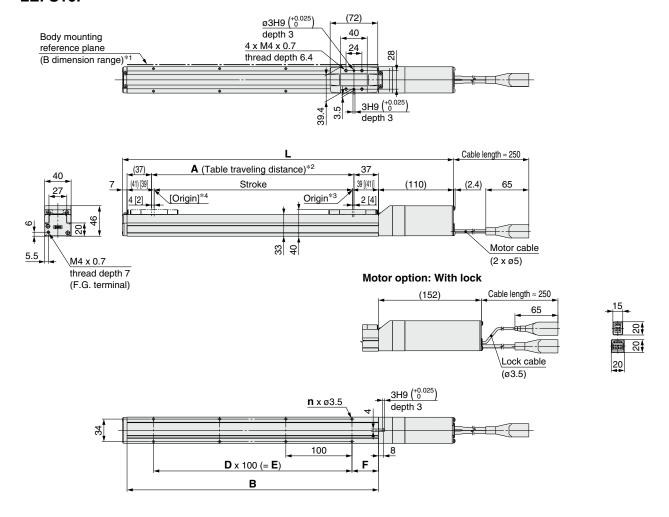

Positioning pin hole*5 (Option): Body bottom

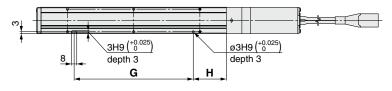


- *1 When mounting the actuator using the body mounting reference plane, set the height of the opposite surface or pin to be 2 mm or more because of round chamfering. (Recommended height: 5 mm) In addition, be aware that surfaces other than the body mounting reference plane (B dimension range) may slightly protrude from the body mounting reference plane. Be sure to provide a clearance of 1 mm or more to avoid interference with workpieces, facilities, etc.
- *2 This is the distance within which the table can move when it returns to origin.
- Make sure that workpieces mounted on the table do not interfere with other workpieces or the facilities around the table.
- *3 Position after returning to origin
- $*4\ [\]$ for when the direction of return to origin has changed
- *5 When using the body bottom positioning pin holes, do not simultaneously use the housing B bottom pin hole.

Dimensions										[mm]
Model	L	_	Α	В	n	D	Е	F	G	н
Model	Without lock	With lock	^		"	0	_		_ G	••
LEFS16F□-50□	247	289	56	130	4	_	_	15	80	25
LEFS16F□-100□	297	339	106	180	4	_	_		80	50
LEFS16F□-150□	347	389	156	230	4	_	_		80	50
LEFS16F□-200□	397	439	206	280	6	2	200		180	50
LEFS16F□-250□	447	489	256	330	6	2	200		180	50
LEFS16F□-300□	497	539	306	380	8	3	300	40	280	50
LEFS16F□-350□	547	589	356	430	8	3	300		280	50
LEFS16F□-400□	597	639	406	480	10	4	400		380	50
LEFS16F□-450□	647	689	456	530	10	4	400		380	50
LEFS16F□-500□	697	739	506	580	12	5	500		480	50



LEFS25F

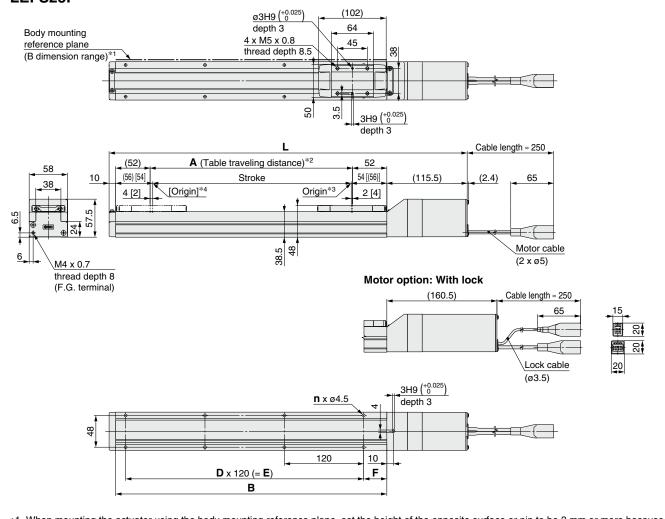

- *1 When mounting the actuator using the body mounting reference plane, set the height of the opposite surface or pin to be 3 mm or more because of round chamfering. (Recommended height: 5 mm)

 In addition, be aware that surfaces other than the body mounting reference plane (B dimension range) may slightly protrude from the body mounting reference plane. Be sure to provide a clearance of 1 mm or more to avoid interference with workpieces, facilities, etc.
- *2 This is the distance within which the table can move when it returns to origin.

 Make sure that workpieces mounted on the table do not interfere with other workpieces or the facilities around the table.
- *3 Position after returning to origin
- *4 [] for when the direction of return to origin has changed


_	:	en	_ :	- 1		
	ım	non		\mathbf{a}	ne	

Dimensions								[mm]
Model			Α	В		D	Е	F
Wodel	Without lock	With lock	4	Ь	n	U		Г
LEFS25F□-50□	285.5	330.5	56	160	4	_	_	20
LEFS25F□-100□	335.5	380.5	106	210	4	_	_	
LEFS25F□-150□	385.5	430.5	156	260	4	_	_	
LEFS25F□-200□	435.5	480.5	206	310	6	2	240	
LEFS25F□-250□	485.5	530.5	256	360	6	2	240	
LEFS25F□-300□	535.5	580.5	306	410	8	3	360	
LEFS25F□-350□	585.5	630.5	356	460	8	3	360	
LEFS25F□-400□	635.5	680.5	406	510	8	3	360	
LEFS25F□-450□	685.5	730.5	456	560	10	4	480	35
LEFS25F□-500□	735.5	780.5	506	610	10	4	480	
LEFS25F□-550□	785.5	830.5	556	660	12	5	600	
LEFS25F□-600□	835.5	880.5	606	710	12	5	600	
LEFS25F□-650□	885.5	930.5	656	760	12	5	600	
LEFS25F□-700□	935.5	980.5	706	810	14	6	720	
LEFS25F□-750□	985.5	1030.5	756	860	14	6	720	
LEFS25F□-800□	1035.5	1080.5	806	910	16	7	840	




LEFS25F

Positioning pin hole*1 (Option): Body bottom

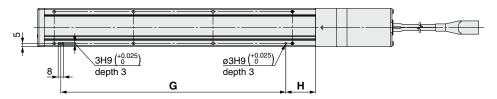

*1 When using the body bottom positioning pin holes, do not simultaneously use the housing B bottom pin hole.

With auto switch (Option)

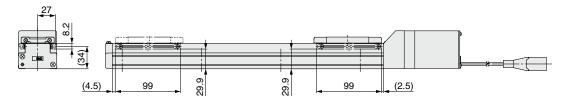


st For strokes of 99 mm or less, only 2 auto switch mounting brackets can be installed on the motor side.

Dimensions		[mm]
Model	G	Н
LEFS25F□-50□	100	30
LEFS25F□-100□	100	45
LEFS25F□-150□	100	45
LEFS25F□-200□	220	45
LEFS25F□-250□	220	45
LEFS25F□-300□	340	45
LEFS25F□-350□	340	45
LEFS25F□-400□	340	45
LEFS25F□-450□	460	45
LEFS25F□-500□	460	45
LEFS25F□-550□	580	45
LEFS25F□-600□	580	45
LEFS25F□-650□	580	45
LEFS25F□-700□	700	45
LEFS25F□-750□	700	45
LEFS25F□-800□	820	45

[mm]

Dimensions: In-line Motor

LEFS32F

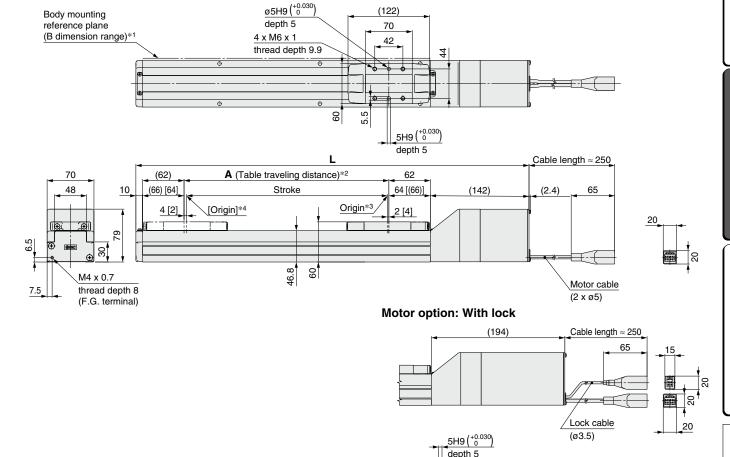

- *1 When mounting the actuator using the body mounting reference plane, set the height of the opposite surface or pin to be 3 mm or more because of round chamfering. (Recommended height: 5 mm)
 - In addition, be aware that surfaces other than the body mounting reference plane (B dimension range) may slightly protrude from the body mounting reference plane. Be sure to provide a clearance of 1 mm or more to avoid interference with workpieces, facilities, etc.
- *2 This is the distance within which the table can move when it returns to origin.
 - Make sure that workpieces mounted on the table do not interfere with other workpieces or the facilities around the table.
- *3 Position after returning to origin

9

st4 [] for when the direction of return to origin has changed

Dimensions

150

15

15

D x 150 (= **E**)

В

n x ø5.5


Model	L	_	Α	В	n	D	Е
Wiodei	Without lock	With lock	^		- "		_
LEFS32F□-50□	332	384	56	180	4	_	_
LEFS32F□-100□	382	434	106	230	4	_	_
LEFS32F□-150□	432	484	156	280	4	_	_
LEFS32F□-200□	482	534	206	330	6	2	300
LEFS32F□-250□	532	584	256	380	6	2	300
LEFS32F□-300□	582	634	306	430	6	2	300
LEFS32F□-350□	632	684	356	480	8	3	450
LEFS32F□-400□	682	734	406	530	8	3	450
LEFS32F□-450□	732	784	456	580	8	3	450
LEFS32F□-500□	782	834	506	630	10	4	600
LEFS32F□-550□	832	884	556	680	10	4	600
LEFS32F□-600□	882	934	606	730	10	4	600
LEFS32F□-650□	932	984	656	780	12	5	750
LEFS32F□-700□	982	1034	706	830	12	5	750
LEFS32F□-750□	1032	1084	756	880	12	5	750
LEFS32F□-800□	1082	1134	806	930	14	6	900
LEFS32F□-850□	1132	1184	856	980	14	6	900
LEFS32F□-900□	1182	1234	906	1030	14	6	900
LEFS32F□-950□	1232	1284	956	1080	16	7	1050
LEFS32F□-1000□	1282	1334	1006	1130	16	7	1050






LEFS32F

Positioning pin hole*1 (Option): Body bottom

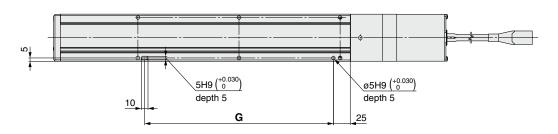

*1 When using the body bottom positioning pin holes, do not simultaneously use the housing B bottom pin hole.


With auto switch (Option)

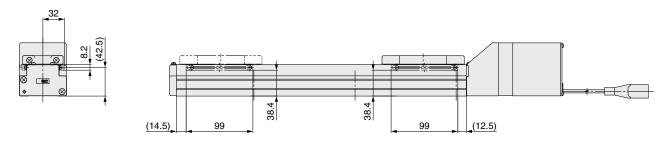

* For strokes of 99 mm or less, only 2 auto switch mounting brackets can be installed on the motor side.

Dimensions	[mm
Model	G
LEFS32F□-50□	130
LEFS32F□-100□	130
LEFS32F□-150□	130
LEFS32F□-200□	280
LEFS32F□-250□	280
LEFS32F□-300□	280
LEFS32F□-350□	430
LEFS32F□-400□	430
LEFS32F□-450□	430
LEFS32F□-500□	580
LEFS32F□-550□	580
LEFS32F□-600□	580
LEFS32F□-650□	730
LEFS32F□-700□	730
LEFS32F□-750□	730
LEFS32F□-800□	880
LEFS32F□-850□	880
LEFS32F□-900□	880
LEFS32F□-950□	1030
LEFS32F□-1000□	1030

LEFS40F

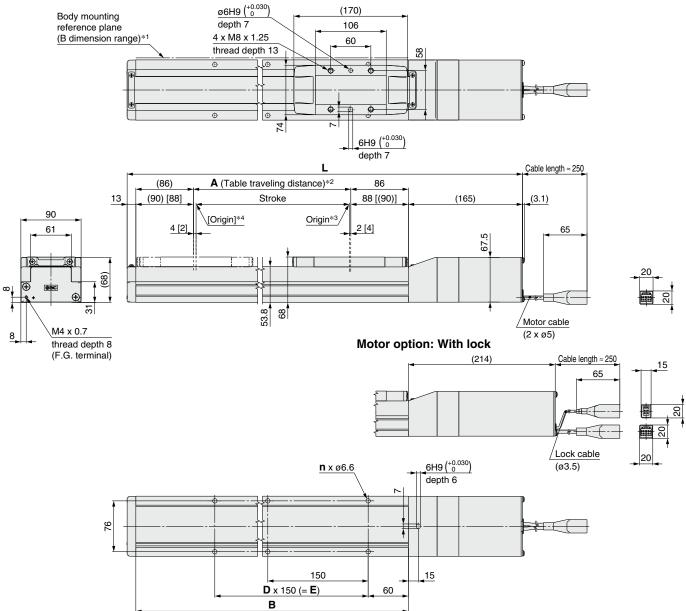

- *1 When mounting the actuator using the body mounting reference plane, set the height of the opposite surface or pin to be 3 mm or more because of round chamfering. (Recommended height:
 - In addition, be aware that surfaces other than the body mounting reference plane (B dimension range) may slightly protrude from the body mounting reference plane. Be sure to provide a clearance of 1 mm or more to avoid interference with workpieces, facilities, etc.
- *2 This is the distance within which the table can move when it returns to origin.
 - Make sure that workpieces mounted on the table do not interfere with other workpieces or the facilities around the table.
- *3 Position after returning to origin
 *4 [] for when the direction of return to origin has changed


Dimensions [mm]							
Model	Without lock	With lock	Α	В	n	D	E
LEFS40F□-150□	506	555	156	328	4	_	150
LEFS40F□-200□	556	605	206	378	6	2	300
LEFS40F□-250□	606	655	256	428	6	2	300
LEFS40F□-300□	656	705	306	478	6	2	300
LEFS40F□-350□	706	755	356	528	8	3	450
LEFS40F□-400□	756	805	406	578	8	3	450
LEFS40F□-450□	806	855	456	628	8	3	450
LEFS40F□-500□	856	905	506	678	10	4	600
LEFS40F□-550□	906	955	556	728	10	4	600
LEFS40F□-600□	956	1005	606	778	10	4	600
LEFS40F□-650□	1006	1055	656	828	12	5	750
LEFS40F□-700□	1056	1105	706	878	12	5	750
LEFS40F□-750□	1106	1155	756	928	12	5	750
LEFS40F□-800□	1156	1205	806	978	14	6	900
LEFS40F□-850□	1206	1255	856	1028	14	6	900
LEFS40F□-900□	1256	1305	906	1078	14	6	900
LEFS40F□-950□	1306	1355	956	1128	16	7	1050
LEFS40F□-1000□	1356	1405	1006	1178	16	7	1050
LEFS40F□-1100□	1456	1505	1106	1278	18	8	1200
LEFS40F□-1200□	1556	1605	1206	1378	18	8	1200






LEFS40F


Positioning pin hole*1 (Option): Body bottom

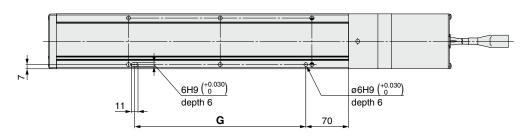

*1 When using the body bottom positioning pin holes, do not simultaneously use the housing B bottom pin hole.

With auto switch (Option)

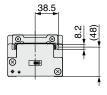


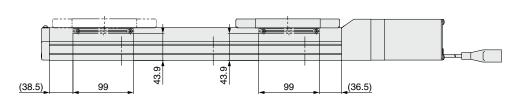

Dimensions	[mm]
Model	G
LEFS40F□-150□	130
LEFS40F□-200□	280
LEFS40F□-250□	280
LEFS40F□-300□	280
LEFS40F□-350□	430
LEFS40F□-400□	430
LEFS40F□-450□	430
LEFS40F□-500□	580
LEFS40F□-550□	580
LEFS40F□-600□	580
LEFS40F□-650□	730
LEFS40F□-700□	730
LEFS40F□-750□	730
LEFS40F□-800□	880
LEFS40F□-850□	880
LEFS40F□-900□	880
LEFS40F□-950□	1030
LEFS40F□-1000□	1030
LEFS40F□-1100□	1180
LEFS40F□-1200□	1180

LEFS F Series Auto Switch Mounting

Auto Switch Mounting Position

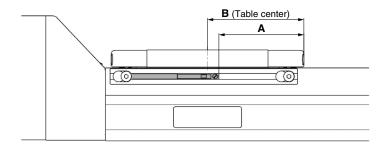


				[111111]
Model	Size	Α	В	Operating range
	25	45	51	4.9
LEFS	32	55	61	3.9
	40	79	85	5.3

- * The applicable auto switch is D-M9 (N/P/B) (W) (M/L/Z).
- The operating range is a guideline including hysteresis, not meant to be guaranteed. There may be large variations depending on the ambient environment.
- Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Switch Mounting

Rotate the bolts for the auto switch mounting bracket three to four times to loosen them (Removing them is not required), and slide and remove the auto switch mounting bracket. Then, insert a switch into the groove on the mounting bracket.

As the mounting bolts for installing the product body interfere with the auto switch mounting bracket, mount the auto switch mounting bracket after installing the product body. After setting in the mounting position, use a flat head watchmaker's screwdriver to tighten the auto switch mounting screw that is included.

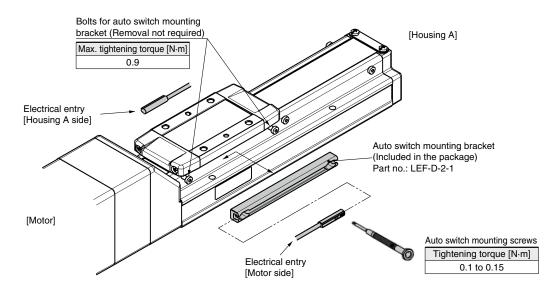

- * The applicable auto switch is D-M9 (N/P/B) (W) (M/L/Z).
- * The direction of the lead wire entry is specified. If it is mounted in the opposite direction, the auto switch may malfunction.
- * When tightening the auto switch mounting screw (included with the auto switch), use a watchmaker's screwdriver with a handle diameter of about 5 to 6 mm
- * If more than two auto switch mounting brackets are required, please order them separately. All eight bolts for attaching the auto switch mounting bracket at the stroke end are tightened into the body when the product is shipped.

 For 50-mm stroke type, only four bolts are tightened on the motor side.



Solid State Auto Switch Direct Mounting Type D-M9N/D-M9P/D-M9B



Refer to the SMC website for details on products that are compliant with international standards

Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard spec.



Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

PLC: Programmable Logic Controller

D-M9□, D-M9□V (With indicator light)					
Auto switch model	D-M9N	D-M9P	D-M9B		
Electrical entry direction		In-line			
Wiring type	3-v	vire	2-wire		
Output type	NPN	PNP	_		
Applicable load	IC circuit, F	24 VDC relay, PLC			
Power supply voltage	5, 12, 24 VDC	_			
Current consumption	10 mA	_			
Load voltage	28 VDC or less	28 VDC or less —			
Load current	40 mA	or less	2.5 to 40 mA		
Internal voltage drop	0.8 V or less at 10 mA	4 V or less			
Leakage current	100 μA or les	0.8 mA or less			
Indicator light	Red LED illuminates when turned ON.				
Standard		CE marking, RoHS	-		

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-M9N D-M9P		D-M9B	
Sheath	Outside diameter [mm]	2.6			
Insulator	Number of cores	3 cores (Brow	2 cores (Brown/Blue)		
irisulator	Outside diameter [mm]	0.88			
Conductor	Effective area [mm²]	0.15			
Conductor	Strand diameter [mm]	0.05			
Min. bending radius [I	mm] (Reference values)	17			

- * Refer to the Web Catalog for solid state auto switch common specifications.
- * Refer to the Web Catalog for lead wire lengths.


Weight

[g]

Auto switch model		D-M9N	D-M9P	D-M9B
	0.5 m (Nil)	8		7
Lood wire length	1 m (M)	14		13
Lead wire length	3 m (L)	41		38
	5 m (Z)	68		63

<u>Dimensions</u> [mm]

D-M9□

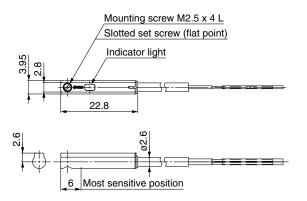



Normally Closed Solid State Auto Switch Direct Mounting Type D_MQNF(\/\)/D_MQDF(\/\)/D_MQRF(\/\)

D-M9NE(V)/D-M9PE(V)/D-M9BE(V) $\subset \in$

RoHS

Grommet

- Output signal turns on when no magnetic force is detected.
- Can be used for the actuator adopted by the solid state auto switch D-M9 series (excluding special order products)



∆ Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□E, D-M9□EV (With indicator light)							
Auto switch model	D-M9NE	D-M9NEV	D-M9PE	D-M9PEV	D-M9BE	D-M9BEV	
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular	
Wiring type		3-w	/ire		2-1	vire	
Output type	N	PN	PI	NΡ	_	_	
Applicable load	IC circuit, Relay, PLC				24 VDC r	elay, PLC	
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)			_			
Current consumption		10 mA or less			-	_	
Load voltage	28 VDC	28 VDC or less —			24 VDC (10	to 28 VDC)	
Load current	40 mA or less			2.5 to	40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA)				4 V c	r less	
Leakage current	100 μA or less at 24 VDC				0.8 mA	or less	
Indicator light	Red LED illuminates when turned ON.						
Standard			CE marki	ng, RoHS			

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto sw	itch model	D-M9NE(V)	D-M9BE(V)		
Sheath	Outside diameter [mm]	2.6			
Insulator	Number of cores	3 cores (Brow	2 cores (Brown/Blue)		
irisulator	Outside diameter [mm]	0.88			
Conductor	Effective area [mm²]	0.15			
Conductor	Strand diameter [mm]	0.05			
Min. bending radius [mm] (Reference values)	17			

- * Refer to the Web Catalog for solid state auto switch common specifications.
- * Refer to the **Web Catalog** for lead wire lengths.

Weight

[9]


Auto swit	ch model	D-M9NE(V) D-M9PE(V)		D-M9BE(V)		
	0.5 m (Nil)	8		8		7
Lead wire length	1 m (M)*1	14		13		
Lead wife length	3 m (L)	41		38		
	5 m (Z)*1	68		63		


^{*1} The 1 m and 5 m options are produced upon receipt of order.

Dimensions

D-M9□E

[mm]

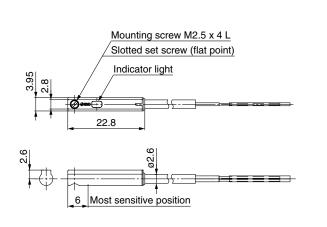

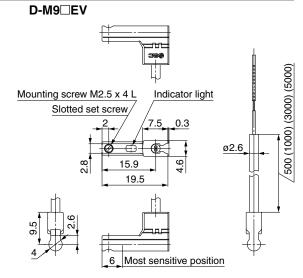

2-Color Indicator Solid State Auto Switch **Direct Mounting Type** D-M9NW/D-M9PW/D-M9BW





Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

D-M9□W, D-M9□WV (With indicator light)					
Auto switch model	D-M9NW	D-M9PW	D-M9BW		
Electrical entry direction	In-line				
Wiring type	3-wire		2-wire		
Output type	NPN	PNP	_		
Applicable load	IC circuit, Relay, PLC		24 VDC relay, PLC		
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)		_		
Current consumption	10 mA or less		_		
Load voltage	28 VDC or less —		24 VDC (10 to 28 VDC)		
Load current	40 mA or less		2.5 to 40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA)		4 V or less		
Leakage current	100 μA or less at 24 VDC		0.8 mA or less		
Indicator light	Operating range ········ Red LED illuminates. Proper operating range ······ Green LED illuminates.				
Standard	CE marking Bolls				

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto switch model		D-M9NW	D-M9PW	D-M9BW
Sheath	Outside diameter [mm]	2.6		
Insulator	Number of cores	3 cores (Brown/Blue/Black)		2 cores (Brown/Blue)
	Outside diameter [mm]	0.88		
Conductor	Effective area [mm²]	0.15		
	Strand diameter [mm]	0.05		
Min. bending radius [mm] (Reference values)		17		

- * Refer to the **Web Catalog** for solid state auto switch common specifications.
- * Refer to the Web Catalog for lead wire lengths.

PLC: Programmable Logic Controller

	D-MANN SE			
Out III	O-Warm			
	- 0 ac	D-HOBM		
	-			

Grommet

2-wire load current is reduced

Using flexible cable as standard

The proper operating range can be determined by the color of the light. (Red \rightarrow Green \leftarrow Red)

(2.5 to 40 mA).

spec.

∆Caution

i iccautions			
	Fix the auto switch with the existing screw		
į	installed on the auto switch body. The auto		
	switch may be damaged if a screw other		

than the one supplied is used.


Drecautions

Weight [g]

Auto switch model		D-M9NW	D-M9PW	D-M9BW
Lead wire length	0.5 m (Nil)	8		7
	1 m (M)	14		13
	3 m (L)	41		38
	5 m (Z)	68		63

Dimensions [mm]


D-M9□W

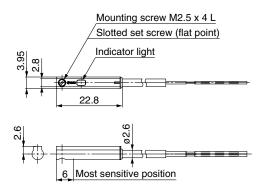



Electric Actuators

High Performance Rod Type

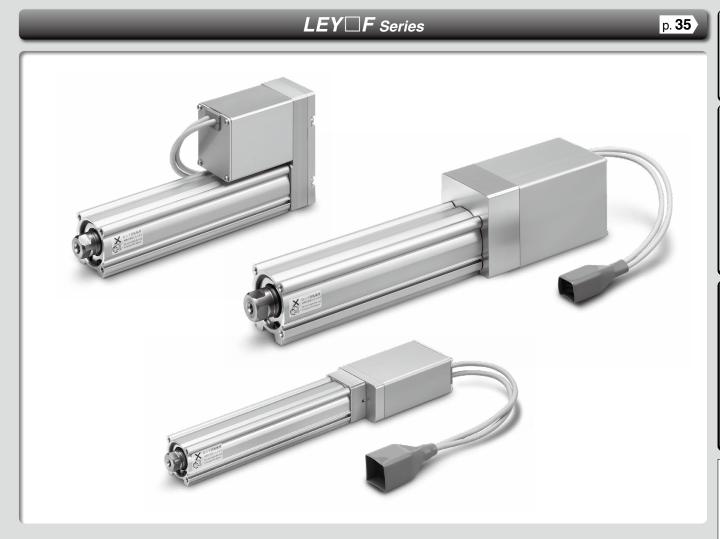


Controllers p. 60



Model Selection

Selection Procedure

Positioning Control Selection Procedure

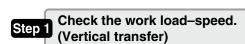



Step 2 Check the cycle time.




Selection Example

Operating conditions

- Workpiece mass: 2 [kg]
- •Speed: 100 [mm/s]
- Acceleration/Deceleration: 5000 [mm/s²]
- •Stroke: 200 [mm]
- Workpiece mounting condition: Vertical upward

downward transfer

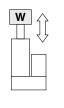

Speed: V [mm/s]

T1

L: Stroke [mm] ... (Operating condition)

V: Speed [mm/s] ... (Operating condition)

a1: Acceleration [mm/s²] ··· (Operating condition) a2: Deceleration [mm/s²] ··· (Operating condition)

T1: Acceleration time [s] ... Time until reaching the set speed

T2: Constant speed time [s] ... Time while the actuator is

T3: Deceleration time [s] ... Time from the beginning of the


T2

Step 1 Check the work load-speed. <Speed-Vertical work load graph>

Select a model based on the workpiece mass and speed while referencing the speed-vertical work load graph.

Selection example) The **LEY16DFB** can be temporarily selected as a possible candidate based on the graph shown on the right side.

It is necessary to mount a guide outside the actuator when used for horizontal transfer. When selecting the target model, refer to the horizontal work load in the specifications on page 45 and the precautions.

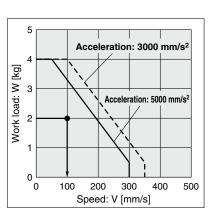

<Speed-Vertical work load graph> (LEY16/Step motor)

T3

operating at a constant speed

constant speed operation to stop

Time [s]

Step 2 Check the cycle time.

Calculate the cycle time using the following calculation method. Cycle time:

T can be found from the following equation.

•T1: Acceleration time and T3: Deceleration time can be found by the following equation.

•T2: Constant speed time can be found from the following equation.


$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V}$$
 [s]

•T4: Settling time varies depending on the conditions such as actuator types, load, and in position of the step data. Reference value for settling time: 0.15 s or less The following value is used for this calculation.

$$T4 = 0.15 [s]$$



T4 = 0.15 [s]

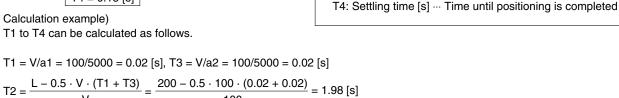

The cycle time can be found as follows.

$$T = T1 + T2 + T3 + T4 = 0.02 + 1.98 + 0.02 + 0.15 = 2.17$$
 [s]

Based on the above calculation result, the LEY16DFB-200 should be selected.



Selection Procedure

Pushing Control Selection Procedure






Check the lateral load on the rod end.

* The duty ratio is a ratio of the operation time in one cycle.

Selection Example

Operating conditions

- Mounting condition: Horizontal (pushing)
- Attachment weight: 0.2 [kg]
- Pushing force: 60 [N]
- Duty ratio: 20 [%]
- •Speed: 100 [mm/s] •Stroke: 200 [mm]

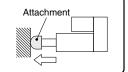

Step 1 Check the duty ratio.

<Conversion table of pushing force-duty ratio>

Select the [Pushing force] from the duty ratio while referencing the conversion table of pushing force-duty ratio.

Selection example)

Based on the table below,

• Duty ratio: 20 [%]

The pushing force set value will be 70 [%].

<Conversion table of pushing force-duty ratio> (LEY16/Step motor)

Pushing force set value [%]	Duty ratio [%]	Continuous pushing time [min]
40 or less	100	_
50	70	12 or less
70	20	1.3 or less
85	15	0.8 or less

- [Pushing force set value] is one of the step data input to the controller.
- [Continuous pushing time] is the time that the actuator can continuously keep pushing.

Step 2 Check the pushing force.

<Force conversion graph>

Select a model based on the pushing force set value and force while referencing the force conversion graph.

Selection example)

Based on the graph shown on the right side,

- Pushing force: 60 [N]
- Pushing force set value: 70 [%]

The **LEY16DFB** can be temporarily selected as a possible candidate.

Step 3 Check the lateral load on the rod end.

<Graph of allowable lateral load on the rod end>

Confirm the allowable lateral load on the rod end of the actuator: LEY16□, which has been selected temporarily while referencing the graph of allowable lateral load on the rod end.


Selection example)

Based on the graph shown on the right side,


- Attachment weight: 0.2 [kg] ≈ 2 [N]
- Product stroke: 200 [mm]

The lateral load on the rod end is in the allowable range.

Based on the above calculation result, the LEY16DFB-200 should be selected.

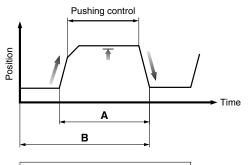




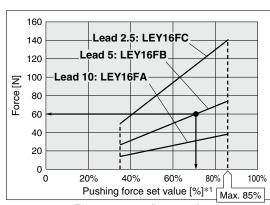

<Force conversion graph> (LEY16/Step motor)

*1 Set values for the controller

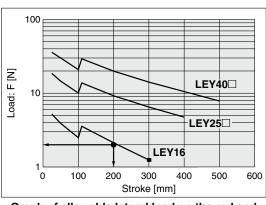

<Graph of allowable lateral load on the rod end>




Speed-Work Load Graph (Guide)


* The following graphs show the values when the external guide is used together, and the moving force is 100%.

LEY16□FA

Horizontal/Lead 10

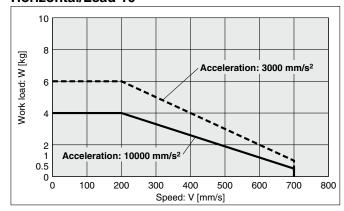


Vertical/Lead 10

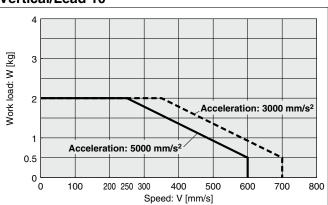


LEY16□FB

Horizontal/Lead 5

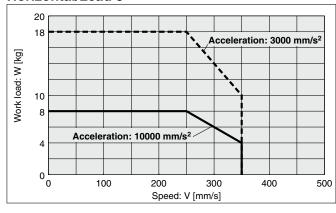


Vertical/Lead 5

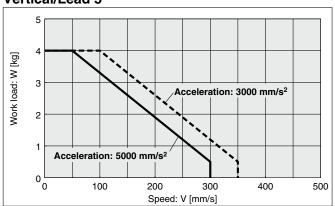


LEY16□FC

Horizontal/Lead 2.5

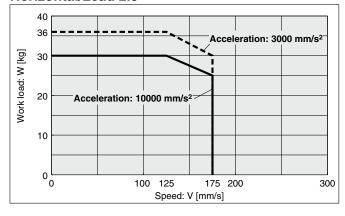

Vertical/Lead 2.5

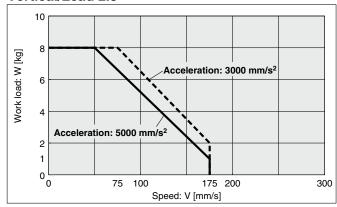

Operating temperature: Use products with a duty ratio of 100% or less when the temperature is below 30°C and with a duty ratio of 35% or less when the temperature exceeds 30°C.




Speed-Work Load Graph (Guide)


* The following graphs show the values when the external guide is used together, and the moving force is 100%.

LEY25□FA



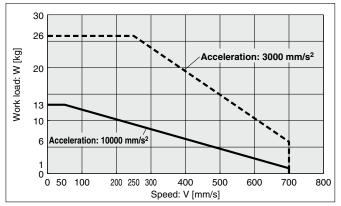


Vertical/Lead 12

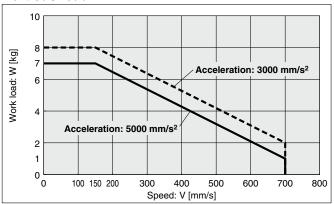


LEY25□FB

Horizontal/Lead 6

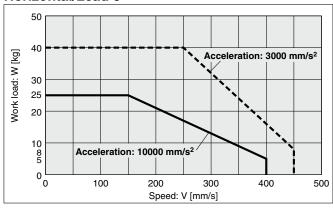


Vertical/Lead 6

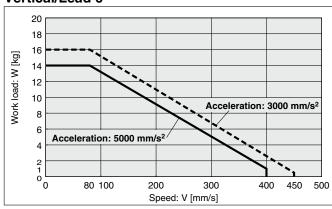


LEY25□FC

Horizontal/Lead 3

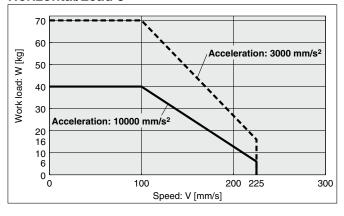

Vertical/Lead 3

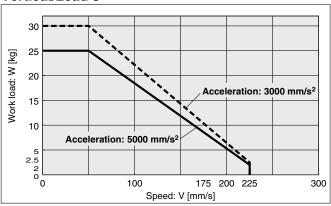

Operating temperature: Use products with a duty ratio of 100% or less when the temperature is below 30°C and with a duty ratio of 35% or less when the temperature exceeds 30°C.




Speed-Work Load Graph (Guide)


* The following graphs show the values when the external guide is used together, and the moving force is 100%.

LEY40□FA

Horizontal/Lead 16

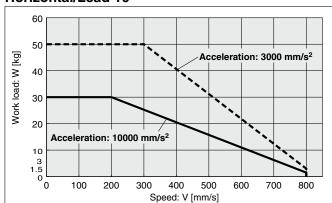


Vertical/Lead 16

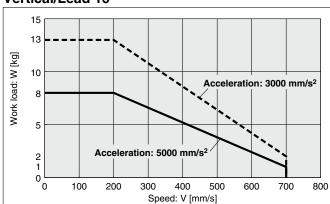


LEY40□FB

Horizontal/Lead 8

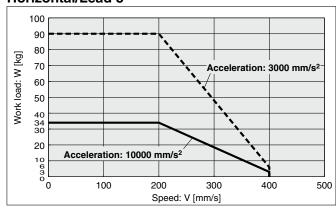


Vertical/Lead 8

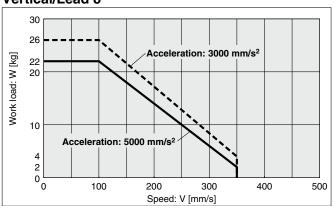


LEY40□FC

Horizontal/Lead 4

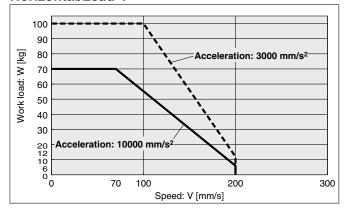


Vertical/Lead 4

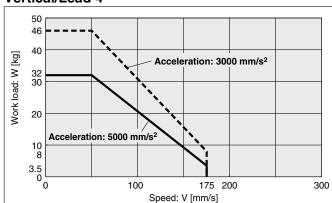


Operating temperature: Use products with a duty ratio of 100% or less when the temperature is below 30°C and with a duty ratio of 35% or less when the temperature exceeds 30°C.

Graph of Allowable Lateral Load on the Rod End (Guide)

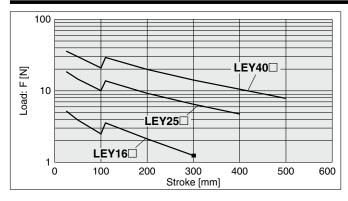


[Stroke] = [Product stroke] + [Distance from the rod end to the center of gravity of the workpiece]

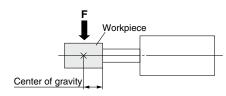


Rod Displacement: δ [mm]

Stroke Size	30	50	100	150	200	250	300	350	400	450	500
16	±0.4	±0.5	±0.9	±0.8	±1.1	±1.3	±1.5	_	_	_	_
25	±0.3	±0.4	±0.7	±0.7	±0.9	±1.1	±1.3	±1.5	±1.7	_	_
40	±0.3	±0.4	±0.7	±0.6	±0.8	±1.0	±1.1	±1.3	±1.5	±1.7	±1.8

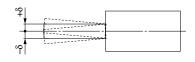

Non-rotating Accuracy of Rod

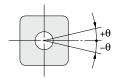


Size	Non-rotating accuracy θ
16	±1.1°
25	±0.8°
40	±0.7°

- * Avoid using the electric actuator in such a way that rotational torque would be applied to the piston rod.
 - Failure to do so may result in the deformation of the non-rotating guide, abnormal auto switch responses, play in the internal guide, or an increase in the sliding resistance.




Force Conversion Graph (Guide)

LEY16□F

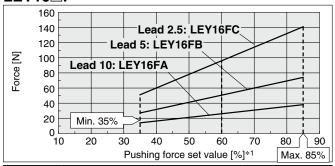


Ambient temperature	Pushing force set value [%]	Duty ratio [%]	Continuous pushing time [min]
25°C or less	85 or less	100	_
	40 or less	100	_
40°C	50	70	12 or less
40°C	70	20	1.3 or less
	85	15	0.8 or less

LEY25□F

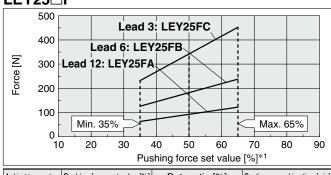

Ambient temperature Pushing force set value [%] Duty ratio [%] Continuous pushing time [min] 40°C or less 65 or less 100 —

LEY40□F

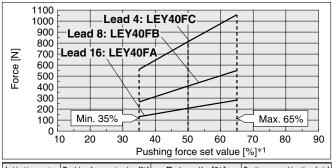

Ambient temperature	Pushing force set value [%]	Duty ratio [%]	Continuous pushing time [min]
40°C or less	65 or less	100	_

*1 Set values for the controller

<Limit Values for Pushing Force and Trigger Level in Relation to Pushing Speed>

Model	Lead	Pushing speed [mm/s]	Pushing force (Setting input value)
LEY16□F	A/B/C	21 to 50	60 to 85%
LEY25□F	A/B/C	21 to 35	50 to 65%
LEY40□F	Α	24 to 30	50 to 65%
LEY40UF	B/C	21 to 30	50 10 05 /6

There is a limit to the pushing force in relation to the pushing speed. If the product is operated outside of the range (low pushing force), the completion signal [INP] may be output before the pushing operation has been completed (during the moving operation).

If operating with the pushing speed below the min. speed, please check for operating problems before using the product.

<Set Values for Vertical Upward Transfer Pushing Operations>

For vertical loads (upward), set the pushing force to the max. value shown below and operate at the work load or less.

Model	LEY16□F		LEY25□F			LEY40□F			
Lead	Α	В	С	Α	В	С	Α	В	С
Work load [kg]	1	1.5	3	2.5	5	10	7	14	28
Pushing force		85%			65%			65%	

High Performance


Rod Type LEY F Series LEY16, 25, 40






How to Order



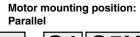

Motor mounting position:

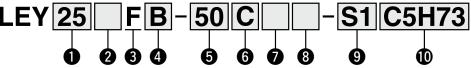

For details on controllers, refer to

1 Size

	_
16	
25	
40	

2 Motor mounting position/Motor cover direction

Symbol	Motor mounting position	Motor cover direction		
Nil	Top side parallel	_		
R	Right side parallel	_		
L	Left side parallel	_		
D		<u>_</u> *1		
D1		Left side*2		
D2	In-line	Right side*2		
D3		Top side*2		
D4		Bottom side*2		

3 Motor type

Symbol	Type	Compatible	controllers
F	High performance (Step motor 24 VDC)	JXC5H JXC6H	JXCEH JXC9H JXCPH

4 Lead [mm]

Symbol	LEY16	LEY25	LEY40
Α	10	12	16
В	5	6	8
С	2.5	3	4

5 Stroke*3[mm]

30	30
to	to
500	500

^{*} For details, refer to the applicable stroke table below.

6 Motor option*4

D meter eparen										
C With motor cover										
W With lock/motor cover										
M	otor									

Rod end thread

Nil	Rod end female thread
М	Rod end male thread (1 rod end nut is included.)

M	(1 rod end nut is included.)

Actuator cable type/length

Standard cable [m]								
Nil None								
S1	1.5							
S3	3							
S5	5							

Roboti	c cable		[m]
R1	1.5	RA	10* ¹⁰
R3	3	RB	15* ¹⁰
R5	5	RC	20*10
R8	8*10		

8 Mounting*5

Symbol	Type	Motor mounting position				
Symbol	туре	Parallel	In-line			
Nil	Ends tapped/ Body bottom tapped*6	•	•			
L	Foot bracket	•	_			
F	Rod flange*6	●*8	•			
G	Head flange*6	●*9	_			
D	Double clevis*7	•	_			

Applicable Stroke Table

Size		Stroke [mm]										
Size	30	50	100	150	200	250	300	350	400	450	500	Manufacturable stroke range
16	• •		•	•	•	•	•	_	_	_	_	10 to 300
25	• •		•	•	•	•	•	•	•	_	_	15 to 400
40	•	•	•	•	•	•	•	•	•	•	•	20 to 500

For auto switches, refer to pages 55 to 58.







Without controller CUHUU With controller

Interface (Communication protocol/Input/Output)

5	Parallel I/O (NPN)	
6	Parallel I/O (PNP)	
Е	EtherCAT	
9	EtherNet/IP™	
Р	PROFINET	

- IVIOU	• wounting								
7	Screw mounting								
8*11	DIN rail								

 Number of axes/Special specification 1 axis/High performance type

Communication plug connector, I/O cable*12

Symbol	Type	Applicable interface		
Nil	Without accessory	_		
1	I/O cable (1.5 m)	D (AIDAI)		
3	I/O cable (3 m)	Parallel input (NPN) Parallel input (PNP)		
5	I/O cable (5 m)	i araller iliput (i ivi)		

- *1 Sizes 25 and 40 only
- *2 Size 16 only
- *3 Please contact SMC for non-standard strokes as they are produced as special orders.
- *4 When "With lock/motor cover" is selected for the top/right/left side parallel motor types, the motor body will stick out from the end of the body for size 16 with strokes of 50 mm or less and size 40 with strokes of 30 mm or less. Check for interference with workpieces before selecting a model.
- *5 The mounting bracket is shipped together with the product but does not come assembled.
- *6 For the horizontal cantilever mounting of the rod flange, head flange, or ends tapped types, use the actuator within the following stroke range. LEY25: 200 or less LEY40: 100 or less

∕!∖ Caution [CE/UKCA-compliant products]

EMC compliance was tested by combining the electric actuator LEY series and the controller JXC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

■ Trademark

EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

- *7 For the mounting of the double clevis type, use the actuator within the following stroke range.


 LEY16: 100 or less LEY25: 200 or less LEY40: 200 or less
- *8 The rod flange type is not available for the LEY16 with strokes of 50 mm or less and LEY40 with strokes of 30 mm or less, and motor option With lock/motor cover.
- *9 The head flange type is not available for the LEY40.
- *10 Produced upon receipt of order
- *11 The DIN rail is not included. It must be ordered separately.
- Select "Nil" for anything other than parallel input. Select "Nil," "1," "3," or "5" for parallel input.

The actuator and controller are sold as a package.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

*1 Check the actuator label for the model number.

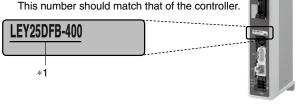

Refer to the Operation Manual for using the products. Please download it via our website: https://www.smcworld.com

mnatible Controllers

Compatible Controlle	rs						
Туре	Step data input type	EtherCAT direct input type	EtherNet/IP™ direct input type	PROFINET direct input type			
Series	JXC5H JXC6H	JXCEH	ЈХС9Н	ЈХСРН			
Features	Parallel I/O	EtherCAT direct input	EtherNet/IP™ direct input	PROFINET direct input			
Compatible motor	Step motor 24 VDC	Step motor (Servo/24 VDC)					
Max. number of step data	64 points		64 points				
Power supply voltage	24 VDC	24 VDC					
Reference page	61		68				



Specifications

		Model			LEY16F		LEY25F			LEY40F		
		Horizontal	(10000 [mm/s ²])	4	8	30	13	25	40	30	34	70
	Work load	Tionzoniai	(3000 [mm/s ²])	6	18	36	26	40	70	50	90	100
	[kg]*1	Vertical	(5000 [mm/s ²])	2	4	8	7	14	25	8	22	32
			(3000 [mm/s ²])	2	4	8	8	16	30	13	26	46
	Pushing 1	orce [N]*2 *	3 *4	14 to 38	27 to 74	51 to 141	63 to 122	126 to 238	232 to 452	132 to 283	266 to 553	562 to 1058
Su	Speed	04	Up to 300	15 to 700	8 to 350	4 to 175	18 to 700	9 to 450	5 to 225	24 to 800	12 to 400	6 to 200
뜵	[mm/s]*4	Stroke range	350 to 400	_	_	_	18 to 600	9 to 300	5 to 150	24 to 640	12 to 320	6 to 160
pecifications	[IIIII/5]	runge	400 to 500	_	_	_	_	_	_	24 to 640	12 to 320	6 to 160
ec.	Max. accel	eration/dece	eleration [mm/s ²]					10000				
S	Pushing speed [mm/s]*5				50 or less			35 or less			30 or less	
Actuator	Positioning repeatability [mm]			±0.02								
ţ	Lost motion [mm]*6		0.1 or less									
Ac	Screw lea	ad [mm]		10	5	2.5	12	6	3	16	8	4
	Impact/Vi	bration resi	stance [m/s ²]*7	50/20								
	Actuation	n type		Ball screw + Belt (LEY□F)/Ball screw (LEY□DF)								
	Guide ty	ре		Sliding bushing (Piston rod)								
	Operating	g temperat	ure range [°C]	5 to 40								
	Operating humidity range [%RH]			90 or less (No condensation)								
ions	Motor siz	ze			□28			□42			□56.4	
specifications	Motor typ	ре		Step motor (Servo/24 VDC)								
sbec	Encoder			Incremental								
Electric		ipply volta	ge [V]				2	4 VDC ±109	6	1	,	
ä	Power [V	V] *8 *9		M	ax. power 10	02	M	ax. power 10	32	М	ax. power 2	02
it ons	Type*10						Non-	magnetizing	lock			
a i	Holding 1	force [N]		20	39	78	78	157	294	127	265	519
Lock unit ecification	Power [V	V] *9			2.9		5				5	
Spe	Rated vo	Itage [V]					2	4 VDC ±109	6			

^{*1} Horizontal: Please use an external guide (friction coefficient: 0.1 or less). The work load shows the maximum value. The actual work load and transfer speed change according to the condition of the external guide.

For the speed, acceleration, and duty ratio according to the work load, check the "Speed-Work Load Graph" on pages 37 to 39. the rod orientation is vertical or radial load is applied to the rod, please use an external guide (friction coefficient: 0.1 or less). The work lo

Vertical: If the rod orientation is vertical or radial load is applied to the rod, please use an external guide (friction coefficient: 0.1 or less). The work load represents the maximum value. The actual work load and transfer speed change according to the condition of the external guide.

For the speed, acceleration, and duty ratio according to the work load, check the "Speed-Work Load Graph" on pages 37 to 39.

The values shown in () are the max. acceleration/deceleration. Set the acceleration/deceleration speed to 10000 [mm/s²] or less for the horizontal direction and 5000 [mm/s²] or less for the vertical direction.

- *2 Pushing force accuracy is ±20% (F.S.).
- *3 The pushing force set values for LEY16□F are 35% to 85%, for LEY25□F are 35% to 65%, and for LEY40□F are 35% to 65%.
 - The pushing force values change according to the duty ratio and pushing speed. Check the "Force Conversion Graph" on page 41.
- *4 The speed and force may change depending on the cable length, load, and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. (At 15 m: Reduced by up to 20%)
- *5 The allowable speed for pushing operation. When push conveying a workpiece, operate at the vertical work load or less.
- *6 A reference value for correcting errors in reciprocal operation
- *7 Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)
 - Vibration resistance: No malfunction occurred in a test ranging between 45 to 2000 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)
- *8 Indicates the max. power during operation (including the controller). This value can be used for the selection of the power supply.
- *9 For an actuator with lock, add the power for the lock.
- *10 With lock only





Weight

Weight: Top/Right/Left Side Parallel Motor Type

Series	LEY16							LEY25								
Stroke [mm]	30	50	100	150	200	250	300	30	50	100	150	200	250	300	350	400
Product weight [kg]	0.75	0.79	0.90	1.04	1.15	1.26	1.37	1.43	1.50	1.67	1.93	2.11	2.28	2.46	2.63	2.81

Series						LEY40					
Stroke [mm]	30	50	100	150	200	250	300	350	400	450	500
Product weight [kg]	2.88	2.99	3.28	3.56	3.96	4.25	4.53	4.82	5.11	5.39	5.68

Weight: In-line Motor Type

Series								LEY25D								
Stroke [mm]	30	50	100	150	200	250	300	30	50	100	150	200	250	300	350	400
Product weight [kg]	0.72	0.76	0.87	1.01	1.12	1.23	1.34	1.36	1.43	1.60	1.86	2.04	2.21	2.39	2.56	2.74

Series						LEY40D)				
Stroke [mm]	30	50	100	150	200	250	300	350	400	450	500
Product weight [kg]	2.80	2.91	3.20	3.48	3.88	4.17	4.45	4.74	5.03	5.31	5.60


Additional Weight

Additional We	ght			[kg]
	Size	16	25	40
Lock/Motor cover		0.16	0.33	0.65
Rod end male	Male thread	0.01	0.03	0.03
thread	Nut	0.01	0.02	0.02
Foot bracket (2 sets	including mounting bolt)	0.06	0.08	0.14
Rod flange (includi	ng mounting bolt)	0.10	0.17	0.20
Head flange (include	ling mounting bolt)	0.13	0.17	0.20
Double clevis (including pir	, retaining ring, and mounting bolt)	0.08	0.16	0.22



Dimensions: Top Side Parallel Motor

LEY16F

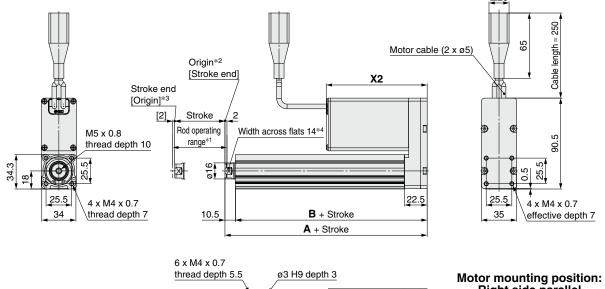

XX

ML + Stroke


XX (2:1)

MC


2

MD


Motor option: With lock/motor cover

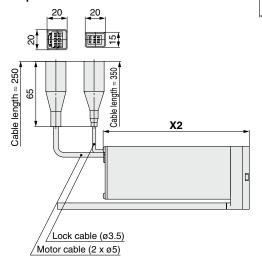

Right side parallel

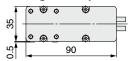

Motor mounting position: Left side parallel

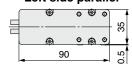

- st 1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin

(35.5)

*3 [] for when the direction of return to origin has changed
*4 The direction of rod end width across flats differs depending on the products.


Dimonolono


Dimension	15						[mm]
0						Х	2
Stroke range [mm]	Α	В	МС	MD	ML	With motor cover	With lock/ motor cover
30 to 35	101	90.5	17	23.5	40		
40 to 100	101	90.5	32	31	40	100.5	145.5
105 to 300	121	110.5	62	46	60		





Dimensions: Top Side Parallel Motor

LEY25F

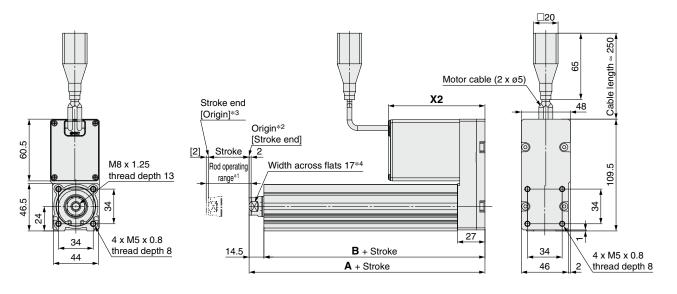


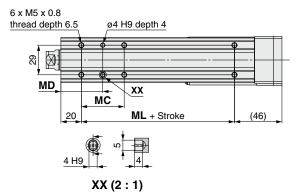

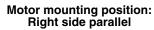


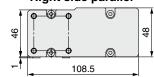

Motor mounting position: Left side parallel

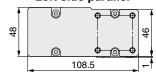

Motor option: With lock/motor cover

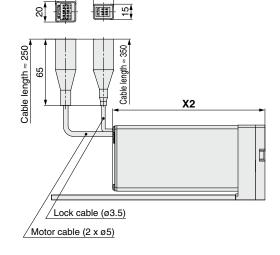

- *1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin
- *3 [] for when the direction of return to origin has changed
- *4 The direction of rod end width across flats differs depending on the products.


Dimensions


Dimension	15						[mm]
0						Х	2
Stroke range [mm]	Α	В	МС	MD	ML	With motor cover	With lock/ motor cover
30 to 35	130.5	116	24	32	50		
40 to 100	130.5	110	42	44	30		
105 to 120			42	41		95	140
125 to 200	155.5	141	59	49.5	75		
205 to 400			76	58			




Dimensions: Top Side Parallel Motor

LEY40F

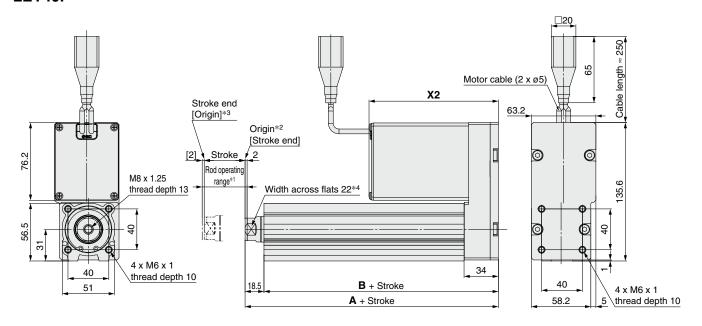


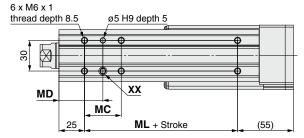

Motor mounting position: Right side parallel

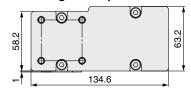


Motor option: With lock/motor cover

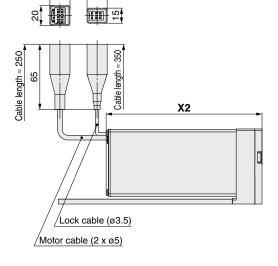



XX (2:1)

Motor mounting position: Left side parallel

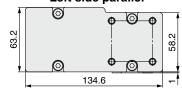


- *1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin
- *3 [] for when the direction of return to origin has changed
- st4 The direction of rod end width across flats differs depending on the products.


Dimension	าร						[mm]
Chualsa wamana						Х	2
Stroke range [mm]	Α	В	MC	MD	ML	With motor cover	With lock/ motor cover
30 to 35	148.5	130	22	36	50		
40 to 100	140.5	130	36	43	30		
105 to 120			30	43		127	176
125 to 200	178.5	160	53	51.5	80		
205 to 500			70	60			

Dimensions: In-line Motor



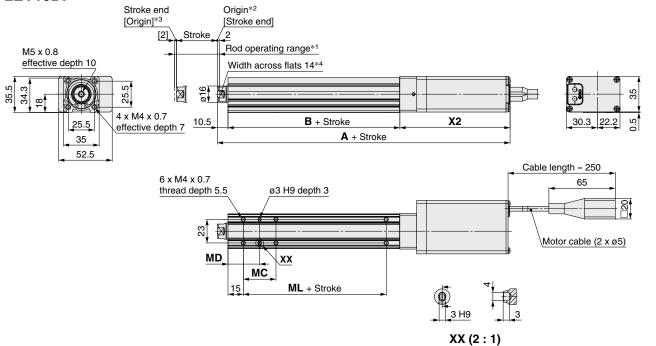


Motor option: With lock/motor cover

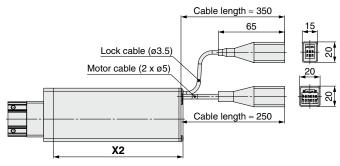

- *1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin
- *3 [] for when the direction of return to origin has changed
- *4 The direction of rod end width across flats differs depending on the products.

Motor Mounting Position/Motor Cover Direction

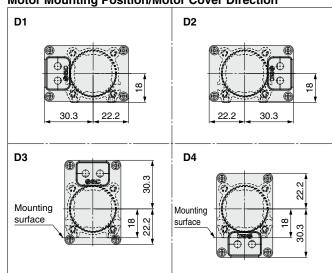


Dimensions

Dimension	าร							[mm]
0		4	В				Х	2
Stroke range [mm]	With motor cover	With lock/ motor cover		MC	MD	ML	With motor cover	With lock/ motor cover
30 to 35	186.5	231.5	68	17	23.5	40		
40 to 100	100.3	231.5	00	32	31	40	108	153
105 to 300	206.5	251.5	88	62	46	60		




Dimensions: In-line Motor

LEY25DF

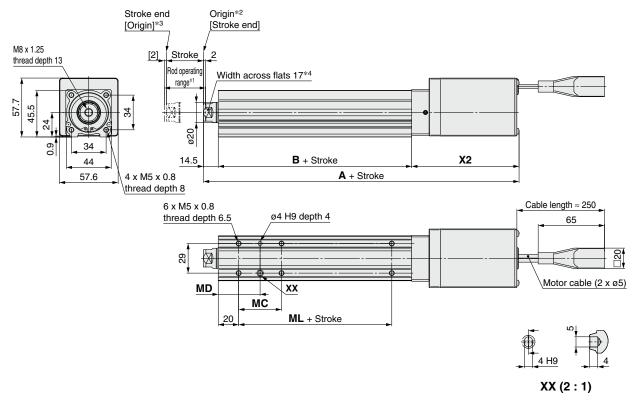

Motor option: With lock/motor cover

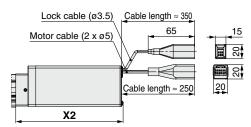


- *1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin
- *3 [] for when the direction of return to origin has changed
- *4 The direction of rod end width across flats differs depending on the products.


Dimension	าร							[mm]
0		4					Х	2
Stroke range [mm]	With motor	With lock/ motor cover	В	МС	MD	ML	With motor cover	With lock/ motor cover
30 to 35	209	254	89.5	24	32	50		
40 to 100	209	234	69.5	42	41	50		
105 to 120				42	41		105	150
125 to 200	234	279	114.5	59	49.5	75		
205 to 400				76	58			




Dimensions: In-line Motor

LEY40DF

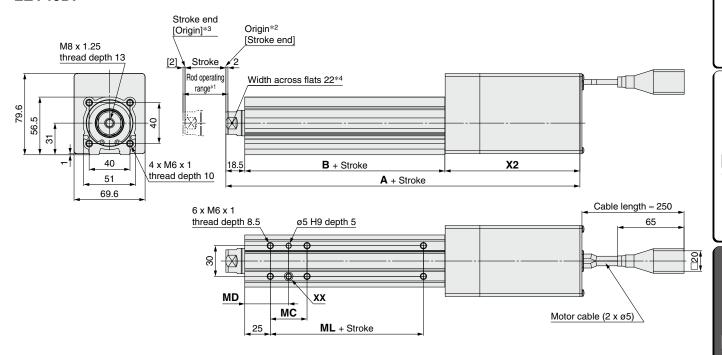

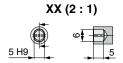

Motor option: With lock/motor cover

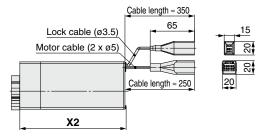

- *1 This is the range within which the rod can move when it returns to origin. Make sure that workpieces mounted on the rod do not interfere with other workpieces or the facilities around the rod.
- *2 Position after returning to origin

[mm]

X2

- *3 [] for when the direction of return to origin has changed
- *4 The direction of rod end width across flats differs depending on the products.


Dimensior	าร						
Stroke range	- 1	4					
[mm]	With motor	With lock/	В	MC	MD	ML	With mo
[]	cover	motor cover					cove
		i e					

[mm]	With motor	With lock/ motor cover	В	MC	MD	ML	With motor cover	With lock/ motor cover
30 to 35	250.5	290.5	96	22	36	50		
40 to 100	250.5	290.5	90	36	43	50		
105 to 120				30	43		136	176
125 to 200	280.5	320.5	126	53	51.5	80		
205 to 500				70	60			



Dimensions




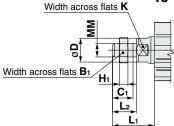


	[mm]							
Size	B ₁	C ₁	ø D	H ₁	K	Lı	L ₂	ММ
16	13	12	16	5	14	24.5	14	M8 x 1.25
25	22	20.5	20	8	17	38	23.5	M14 x 1.5
40	22	20.5	25	8	22	42	23.5	M14 x 1.5

- * The L₁ measurement is when the unit is in the original position. At this position, 2 mm at the end.
- * Refer to the **Web Catalog** for details on the rod end nut and mounting bracket.
- Refer to the "Handling" precautions in the Web Catalog when mounting end brackets such as knuckle joint or workpieces.



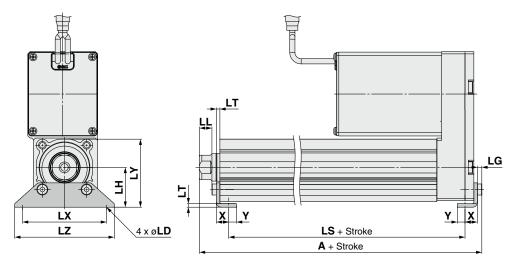

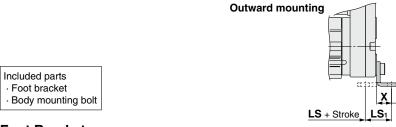


Foo	t Bracket													[mm]
Size	Stroke range [mm]	A	LS	LS ₁	LL	LD	LG	LH	LT	LX	LY	LZ	X	Y
16	30 to 100	106.1	76.7	16.1	16.1 5.4	6.6	6.6 2.8	2.8 24	4 2.3	48	40.3	62	9.2	5.8
- 10	101 to 300	126.1	96.7	16.1 5.4	0.0	2.6	24	2.0	40	40.5	02	9.2	5.6	
25	30 to 100	136.6	98.8	10.0	0.4	6.6	3.5	30	2.6	57	51.5	71	11.2	5.8
25	101 to 400	161.6	123.8	19.8	8.4	0.6	3.5	30						
40	30 to 100	155.7	114	10.2	19.2 11.3	6.6		4 00	2.2	70	C1 F	00	11.0	7
40	101 to 500	185.7	144	19.2		0.6	4	30	3.2	/6	01.5	90	11.2	
40			-	19.2	11.3	6.6	4	36	3.2	76	61.5	90	11.2	7

Material: Carbon steel (Chromating)


- * The A measurement is when the unit is in the original position. At this position, 2 mm at the end.
- * When the motor mounting is the right or left side parallel type, the head side foot bracket should be mounted outward.



Dimensions

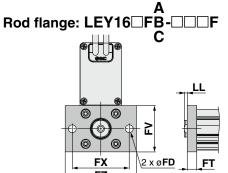





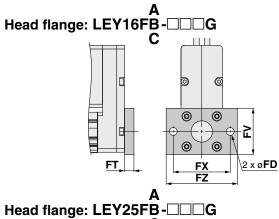

0

φ⊚

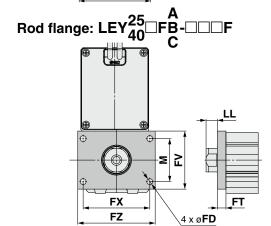

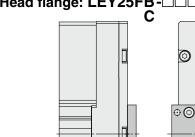

The head flange type is not available for the LEY40. 0 **O** \oplus

· Body mounting bolt Rod/Head Flan Size FD

Σ ≧

©

FX

16

25

40

6.6 8

5.5 8


5.5

nge								
FV	FX	FZ	LL	М				
39	48	60	2.5	_				
48	56	65	6.5	34				
54	62	72	10.5	40				

Included parts Flange

8 Material: Carbon steel (Nickel plating)

Double clevis: LEY16FB-	□□ D	
CL + Stroke A + Stroke	©CD hole H10 axis d9	

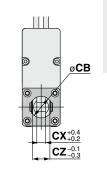

- Included parts · Double clevis
- · Body mounting bolt
- · Clevis pin · Retaining ring
- * Refer to the Web Catalog for details on the rod end nut and mounting bracket.

Double clevis: LEY ₄₀ FB-C		
CL + Stroke A + Stroke	CT ØCD hole H1 axis d9 CU CW RR	O O CX+0.4 CX+0.2 CZ-0.3

For the models and dimensions of the mounting bracket and simple joint bracket, refer to the **Web Catalog** for the LEY series.

Dou	Double Clevis								
Size	Stroke range [mm]	Α		CL	СВ	CD	СТ		
16	30 to 100	128		119	20	8	5		
25	30 to 100	160.	5	150.5		10	5		
25	101 to 200	185.	5	175.5					
40	30 to 100	180.	5	170.5		10	6		
40	101 to 200	210.	5	200.5		10			
			,						
Size	Stroke range	CU	CW	СХ	cz	L	RR		

Size	Stroke range [mm]	CU	cw	сх	cz	L	RR	
16	30 to 100	12	18	8	16	10.5	9	
25	30 to 100	14	20	18	36	14.5	10	
25	101 to 200	14	20	10	30	14.5	10	
40	30 to 100	14	22	18	36	40.5	10	
40	101 to 200	14	22	10	30	18.5	10	

Material: Cast iron (Coating)


The A and CL measurements are when the unit is in the original position. At this position, 2 mm at the end.



LEY F Series Auto Switch Mounting

Auto Switch Proper Mounting Position


Applicable auto switch: D-M9 \square (V), D-M9 \square E(V), D-M9 \square W(V), D-M9 \square A(V)

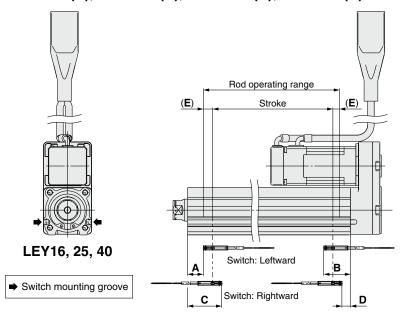

[mm] Auto switch position Return to origin Operating range Size Leftward mounting distance Stroke range Rightward mounting С Ε 30 to 100 21.5 33.5 16 46.5 34.5 (2)2.9 105 to 300 41.5 53.5 30 to 100 27 39 25 62.5 50.5 (2) 4.2 105 to 400 64 30 to 100 30.5 42.5 40 65.5 53.5 (2)4.9 105 to 500 60.5 72.5

- * The values in the table above are to be used as a reference when mounting auto switches for stroke end detection. Adjust the auto switch after confirming the operating conditions in the actual setting.
- * An auto switch cannot be mounted on the same side as a motor.
- * For LEYG series models (with a guide), an auto switch cannot be mounted on the guide attachment side (rod side).
- * Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming approx. ±30% dispersion). It may change substantially depending on the ambient environment.

Auto Switch Mounting

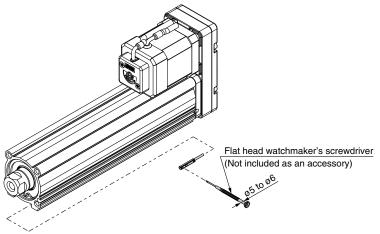

Tightening Torque for Auto Switch Mounting Screw

Mounting Screw	[m·m]
Auto switch model	Tightening torque
D-M9□(V) D-M9□E(V) D-M9□W(V)	0.05 to 0.15
D-M9□A(V)	0.05 to 0.10

When tightening the auto switch mounting screw (included with the auto switch), use a watchmaker's screwdriver with a handle diameter of 5 to 6 mm.



Solid State Auto Switch Direct Mounting Type

D-M9N(V)/D-M9P(V)/D-M9B(V) **(** € RoHS



Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard



. Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□, D-M9□V (With indicator light)									
Auto switch model	D-M9N	D-M9NV	D-M9P D-M9PV D-M9B D-M9B						
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular			
Wiring type		3-wire 2-wire			vire				
Output type	N	PN	PI	VΡ	_	_			
Applicable load		IC circuit, Relay, PLC 24 VDC relay, PLC							
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)					_			
Current consumption		10 mA	or less		_				
Load voltage	28 VDC	or less	_	_	24 VDC (10	to 28 VDC)			
Load current		40 mA	or less		2.5 to	40 mA			
Internal voltage drop	0.8 V or l	ess at 10 mA	(2 V or less	at 40 mA)	4 V o	r less			
Leakage current		100 μA or less at 24 VDC 0.8 mA or less				or less			
Indicator light		Red L	ED illuminate	es when turne	d ON.				
Standard	<u>'</u>		CE marki	ng, RoHS					

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto sw	Auto switch model		D-M9P(V)	D-M9B(V)		
Sheath	Outside diameter [mm]	2.6				
Insulator	Number of cores	3 cores (Brow	3 cores (Brown/Blue/Black) 2			
Insulator	Outside diameter [mm]	0.88				
Conductor	Effective area [mm²]		0.15			
Conductor	Strand diameter [mm]					
Min. bending radius [Min. bending radius [mm] (Reference values)		17			


- * Refer to the Web Catalog for solid state auto switch common specifications.
- * Refer to the Web Catalog for lead wire lengths.


Weight

Auto swit	Auto switch model		D-M9P(V)	D-M9B(V)
0.5 m	0.5 m (Nil)	8	7	
Lead wire length	1 m (M)	1	13	
Lead wife length	3 m (L)	4	38	
	5 m (Z)	6	63	

Dimensions

D-M9□

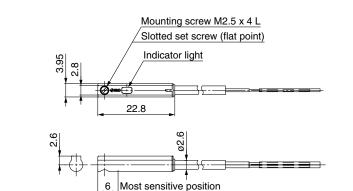

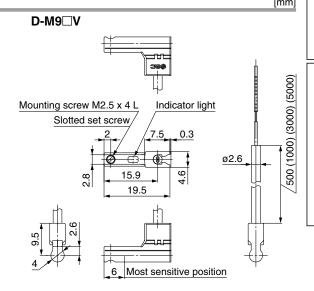

Normally Closed Solid State Auto Switch Direct Mounting Type D-M9NE(V)/D-M9PE(V)/D-M9BE(V) (ROH

PE(V)/D-IVI9BE(V) (E RoHS)

Refer to the SMC website for details

Grommet

- Output signal turns on when no magnetic force is detected.
- Can be used for the actuator adopted by the solid state auto switch D-M9 series (excluding special order products)



∆ Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□E, D-M	D-M9□E, D-M9□EV (With indicator light)									
Auto switch model	D-M9NE	D-M9NEV	D-M9PE	D-M9PEV	D-M9BE D-M9BEV					
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular				
Wiring type		3-v	/ire		2-wire					
Output type	N	PN	PI	NΡ	_	_				
Applicable load		IC circuit, Relay, PLC 24 VDC relay, P								
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V)				_					
Current consumption		10 mA	or less		_					
Load voltage	28 VDC	or less	_	_	24 VDC (10 to 28 VDC)					
Load current		40 mA	or less		2.5 to	40 mA				
Internal voltage drop	0.8 V or le	ess at 10 mA	(2 V or less	at 40 mA)	4 V o	r less				
Leakage current	100 μA or less at 24 VDC 0.8 mA or les				or less					
Indicator light		Red L	ED illuminate	s when turne	d ON.					
Standard			CE marki	ng, RoHS	-					

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto sw	itch model	D-M9NE(V)	D-M9PE(V)	D-M9BE(V)		
Sheath	Outside diameter [mm]					
Insulator	Number of cores	3 cores (Brow	2 cores (Brown/Blue)			
Insulator	Outside diameter [mm]					
Conductor	Effective area [mm²]	0.15				
Conductor	Strand diameter [mm]	0.05				
Min. bending radius	[mm] (Reference values)		17			

- * Refer to the Web Catalog for solid state auto switch common specifications.
- * Refer to the Web Catalog for lead wire lengths.

Weight

[g]


Auto swit	ch model	D-M9NE(V)	D-M9NE(V) D-M9PE(V)			
	0.5 m (Nil)	8	7			
Lead wire length	1 m (M)*1	1	13			
Lead wire length	3 m (L)	4	38			
	5 m (Z)*1	6	8	63		


^{*1} The 1 m and 5 m options are produced upon receipt of order.

Dimensions

D-M9□E

[mm]

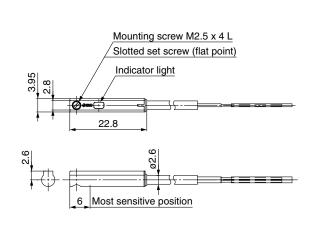

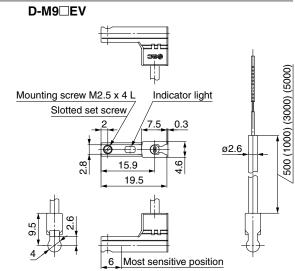

[g]

2-Color Indicator Solid State Auto Switch Direct Mounting Type

D-M9NW(V)/D-M9PW(V)/D-M9BW(V) $\subset \in$

RoHS

Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard spec.
- The proper operating range can be determined by the color of the light. (Red → Green ← Red)



Precautions

D-M9□W

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□W, D-M	D-M9□W, D-M9□WV (With indicator light)											
Auto switch model	D-M9NW	D-M9NWV	D-M9PW	D-M9PWV	D-M9BW	D-M9BWV						
Electrical entry direction	In-line	r In-line Perpendicul										
Wiring type	3-wire 2-wire											
Output type	NPN PNP —											
Applicable load		IC circuit, F	24 VDC relay, PLC									
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V) —											
Current consumption		10 mA	or less		_							
Load voltage	28 VDC	or less	_	_	24 VDC (10	to 28 VDC)						
Load current		40 mA	or less		2.5 to	40 mA						
Internal voltage drop	0.8 V or l	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less										
Leakage current	100 μA or less at 24 VDC 0.8 mA or less											
Indicator light	C	perating rang	ge ······ Re	d LED illumin	ates.							
mulcator light	F	roper operati	ng range ·····	····· Green LE	ED illuminate	S.						
Standard			CE marki	ng, RoHS								

Oilproof Flexible Heavy-duty Lead Wire Specifications


Auto sw	itch model	D-M9NW(V)	D-M9PW(V)	D-M9BW(V)		
Sheath	Outside diameter [mm]	2.6				
Insulator	Number of cores	3 cores (Brow	2 cores (Brown/Blue)			
msulator	Outside diameter [mm]					
Conductor	Effective area [mm²]	0.15				
Conductor	Strand diameter [mm]	0.05				
Min. bending radius [mm] (Reference values)		17			


- $\ast\,$ Refer to the Web Catalog for solid state auto switch common specifications.
- * Refer to the Web Catalog for lead wire lengths.

Weight

Auto switch model D-M9NW(V) D-M9PW(V) D-M9BW(V) 0.5 m (Nil) 8 1 m (**M**) 14 13 Lead wire length 3 m (**L**) 41 38 5 m (**Z**) 68 63

Dimensions [mm]

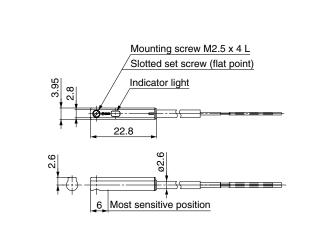

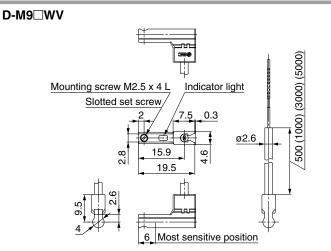

Controllers JXC Series





p. 61

High Performance Incremental (Step Motor 24 VDC)

JXC5H/6H Series



EtherCAT/EtherNet/IP™/PROFINET Direct Input Type







EtherNet/IP







Precautions Relating to Differences in Controller Versions p.74


High Performance Controller (Step Data Input Type)


JXC5H/6H Series



(RoHS)



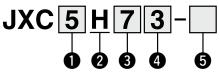

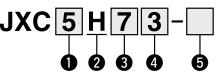

1 Controller type

5	Parallel I/O (NPN) type
6	Parallel I/O (PNP) type

2 Specification

Н	1 axis/High performance type

3 Mounting

7	Screw mounting
8	DIN rail



4 I/O cable length

Nil	None
1	1.5 m
3	3 m
5	5 m

Actuator part number

Without cable specifications and actuator options Example: Enter "LEFS25FA-100" for the LEFS25FA-100B-R1□. Blank controller*1


*1 Requires dedicated software (JXC-BCW)

The controller is sold as single unit after the compatible actuator is set.

Connect to an actuator (LEFS□F) designated for a high performance controller. Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

- 1) Check the actuator label for the model number. This number should match that of the controller.
- 2 Check that the Parallel I/O configuration matches (NPN or PNP).

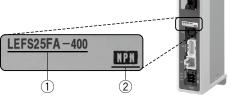

Refer to the operation manual for using the products. Please download it via our website: https://www.smcworld.com

Specifications

Model	JXC5H JXC6H
Compatible motor	Step motor (Servo/24 VDC)
Power supply	Power supply voltage: 24 VDC ±10%
Current consumption (Controller)	100 mA or less
Compatible encoder	Incremental
Parallel input	11 inputs (Photo-coupler isolation)
Parallel output	13 outputs (Photo-coupler isolation)
Serial communication	RS485 (Only for the LEC-T1 and JXC-W2)
Memory	EEPROM
LED indicator	PWR, ALM
Cable length [m]	Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40
Operating humidity range [%RH]	90 or less (No condensation)
Insulation resistance [M Ω]	Between all external terminals and the case: 50 (500 VDC)
Weight [g]	180 (Screw mounting), 200 (DIN rail mounting)

Precautions for blank controllers $(JXC\Box 1\Box\Box -BC)$

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. For data writing, use the controller setting software ACT Controller 2 or the dedicated software JXC-BCW.

- Both ACT Controller 2 and JXC-BCW can be downloaded from the SMC website.
- To use this software, order the communication cable for controller setting (JXC-W2A-C) and the USB cable (LEC-W2-U) separately.

Hardware Requirements

Haiawai	naraware nequirements								
	NA!" @4.0	Windows®7							
os	Windows [®] 10 (64 bit)	Windows®8							
	(O4 Bit)	Windows®10							
Software	ACT Controller 2 (With JXC-BCW function)	JXC-BCW							

 Windows®7, Windows®8, and Windows®10 are registered trademarks of Microsoft Corporation in the United States

> SMC website https://www.smcworld.com


⚠ Caution

[CE/UKCA-compliant products]


EMC compliance was tested by combining the electric actuator LE series and the JXC5H/6H series The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.



a) Screw mounting (JXC□H7□) (Installation with two M4 screws)

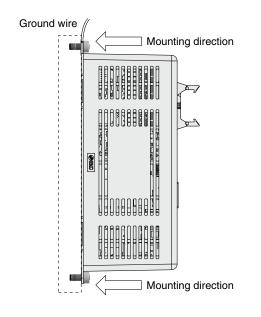

b) DIN rail mounting (JXC□H8□) (Installation with the DIN rail)

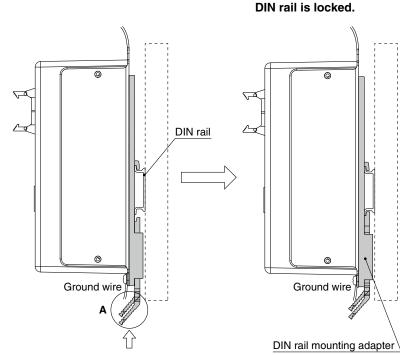


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

* When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail

AXT100-DR-□

* For □, enter a number from the No. line in the table below. Refer to the dimension drawings on page 63 for the mounting dimensions.

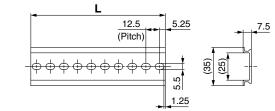

L Dimensions [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
			20			20				00	01	02	00	•	00	00	0,	00	- 00	70


DIN rail mounting adapter

LEC-3-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

JXC5H/6H Series

Dimensions

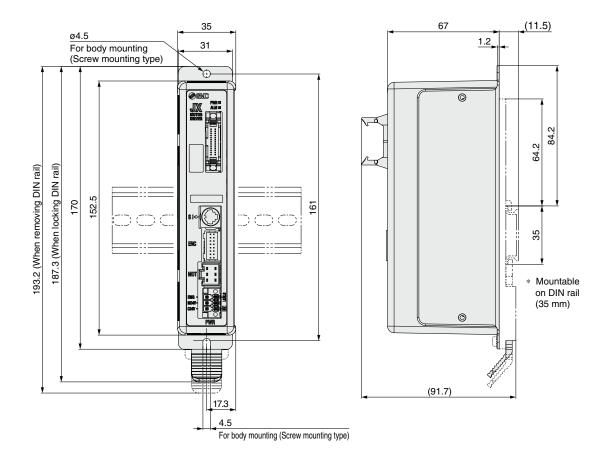


Wiring Example 1

Parallel I/O Connector

- * When you connect a PLC to the parallel I/O connector, use the I/O cable (LEC-CN5-□).

 * The wiring changes depending on the type of parallel I/O (NEXT).
- The wiring changes depending on the type of parallel I/O (NPN or PNP).

Wiring diagram JXC5H□□ (NPN)

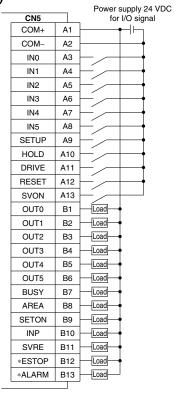

Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
IN0 to IN5	Step data specified bit no. (Input is instructed by combining IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Temporarily stops operation
DRIVE	Instruction to drive
RESET	Resets alarm and interrupts operation
SVON	Servo ON instruction

JXC6H□□ (PNP)

_			Power supply 24 VD
	CN5		for I/O signal
	COM+	A1	
	COM-	A2	├
	IN0	А3	
	IN1	A4	
	IN2	A5	
	IN3	A6	
	IN4	A7	
	IN5	A8	
	SETUP	A9	
	HOLD	A10	
	DRIVE	A11	
	RESET	A12	
	SVON	A13	
	OUT0	B1	Load
	OUT1	B2	Load
	OUT2	В3	Load
	OUT3	B4	Load
	OUT4	B5	Load
	OUT5	В6	Load
	BUSY	B7	Load
	AREA	B8	Load
	SETON	В9	Load
	INP	B10	Load
	SVRE	B11	Load
	*ESTOP	B12	Load
	*ALARM	B13	Load
_	·		

Output Signal		
Details		
Outputs the step data no. during operation		
Outputs when the actuator is moving		
Outputs within the step data area output setting range		
Outputs when returning to origin		
Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)		
Outputs when servo is on		
OFF when EMG stop is instructed		
OFF when alarm is generated		

^{*1} Signal of negative-logic circuit (N.C.)


JXC5H/6H Series

Step Data Setting

1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

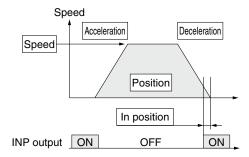

: Need to be set.

○: Need to be adjusted as required.


Step Data (Positioning) —: Setting is not required.

<u> </u>		. Cotting to not required.	
Necessity	Item	Details	
0	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.	
0	Speed	Transfer speed to the target position	
0	Position	Target position	
0	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.	
0	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.	
0	Pushing force	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)	
_	Trigger LV	Setting is not required.	
	Pushing speed	Setting is not required.	
0	Moving force	Max. torque during the positioning operation (No specific change is required.)	
0	Area 1, Area 2	Condition that turns on the AREA output signal.	
0	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.	

2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

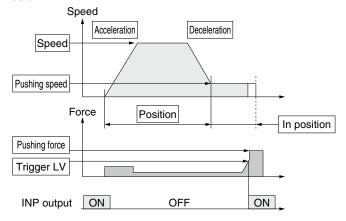


Step Data (Pushing)

O: Need to be set.

O: Need to be adjusted as required.


Necessity	Item	Details
©	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
0	Speed	Transfer speed to the pushing start position
0	Position	Pushing start position
0	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
0	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
0	Pushing force	Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator.
0	Trigger LV	Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less.
0	Pushing speed	Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator.
0	Moving force Max. torque during the positioning operat (No specific change is required.)	
0	Area 1, Area 2	Condition that turns on the AREA output signal.
0	In position	Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on.



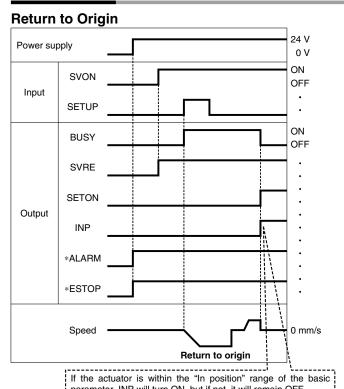


"*ALARM" and "*ESTOP" are expressed as negative-logic circuits.

parameter, INP will turn ON, but if not, it will remain OFF.

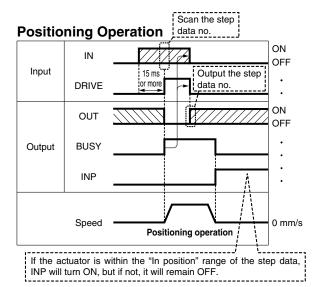



"OUT" is output when "DRIVE" is changed from ON to OFF. Refer to the operation manual for details on the controller for the LEM series. (When power supply is applied, "DRIVE" or "RESET" is turned ON or *ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

HOLD

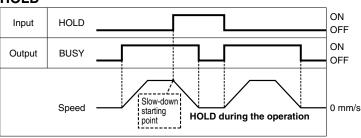

When the actuator is within the "In position" range in the pushing operation, it does not stop even if HOLD signal is input.

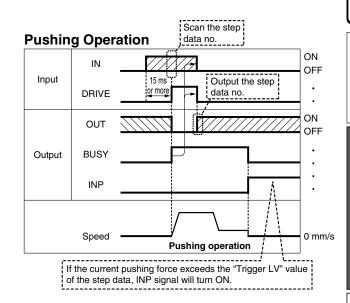

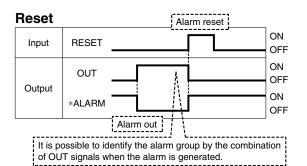

"*ALARM" is expressed as a negative-logic circuit.




JXC5H/6H Series

Options


■ Communication cable for controller setting

1) Communication cable JXC-W2A-C

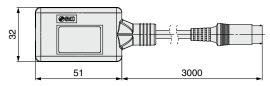

* It can be connected to the controller directly.

② USB cable LEC-W2-U

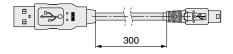

③ Controller setting kit JXC-W2A

A set which includes a communication cable (JXC-W2A-C) and a USB cable (LEC-W2-U)

<Controller setting software/USB driver>

- Controller setting software
- USB driver (For JXC-W2A-C)

Download from SMC's website: https://www.smcworld.com

Hardware Requirements

OS		Windows [®] 7, Windows [®] 8.1, Windows [®] 10
	Communication interface	USB 1.1 or USB 2.0 ports
	Display	1024 x 768 or more


Windows®7, Windows®8.1, and Windows®10 are registered trademarks of Microsoft Corporation in the United States.


■ Conversion cable P5062-5 (Cable length: 300 mm)



* To connect the teaching box (LEC-T1-3 G) or controller setting kit (LEC-W2□) to the controller, a conversion cable is required.

I/O cable

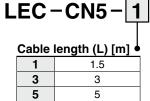

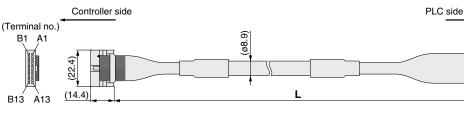


* Conductor size: AWG28

Weight

Weight	
Product no.	Weight [g]
LEC-CN5-1	170
LEC-CN5-3	320
LEC-CN5-5	520

ctor	Insulation	Dot	Dot
0.	color	mark	color
	Light brown		Black
	Light brown		Red
	Yellow		Black
.	Yellow		Red
	Light green		Black
	Light green		Red
	Gray		Black
	Gray		Red
	White		Black
)	White		Red
1	Light brown		Black
2	Light brown		Red
3	Yellow		Black
	ctor oo.	o. color Light brown Light brown Yellow Yellow Light green Light green Gray Gray White White Light brown	o. color mark Light brown Light brown Yellow Yellow Light green Light green Gray Gray White White Utight brown Light brown Lig

■ Power supply plug JXC-CPW

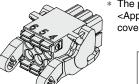

The power supply plug is an accessory. <Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

> 6 5 4 321

④ 0V ① C24V

(2) M24V 3 EMG

⑤ N.C. (6) LK RLS


A13

B1

B13

Power supply plug

	. che cappi, piag			
Terminal name	Function	Details		
0V	Common supply (–)	The M24V terminal, C24V terminal, EMG terminal, and LK RLS terminal are common (–).		
M24V	Motor power supply (+)	Motor power supply (+) of the controller		
C24V	Control power supply (+)	Control power supply (+) of the controller		
EMG	Stop (+)	Connection terminal of the external stop circuit		
LK RLS	Lock release (+)	Connection terminal of the lock release switch		

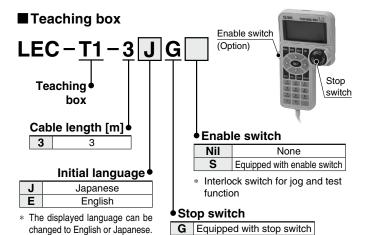

Specifications

Item	Description	
Switch	Stop switch, Enable switch (Option)	
Cable length [m]	3	
Enclosure	IP64 (Except connector)	
Operating temperature range [°C]	5 to 50	
Operating humidity range [%RH]	90 or less (No condensation)	
Weight [g]	350 (Except cable)	

Connector	Insulation	Dot	Dot
pin no.	color	mark	color
B1	Yellow		Red
B2	Light green		Black
B3	Light green		Red
B4	Gray		Black
B5	Gray		Red
B6	White		Black
B7	White		Red
B8	Light brown		Black
B9	Light brown		Red
B10	Yellow		Black
B11	Yellow		Red
B12	Light green		Black
B13	Light green		Red
_		Shield	




High Performance Step Motor Controller


JXCEH/9H/PH Series





How to Order

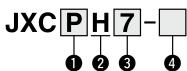

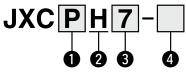

Communication protocol

E	EtherCAT	
9	EtherNet/IP™	
P	PROFINET	

2 Specifications

Н	1 axis/High performance type
---	------------------------------



Ether CAT:

EtherNet/IP

3 Mounting

7	Screw mounting
8 *1	DIN rail

*1 The DIN rail is not included. It must be ordered separately. (Refer to page 71.)

4 Actuator part number

Without cable specifications and actuator options Example: Enter "LEFS16FB-100" for the LEFS16FB-100B-S1□.

Blank controller*1


- *1 Requires dedicated software (JXC-BCW)
- Configuration of the ACT Controller 2 is possible using Windows 10 and 11.

With Windows 7 and 8, the configuration is by means of dedicated software (JXC-BCW).

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

(1) Check the actuator label for the model number. This number should match that of the controller.

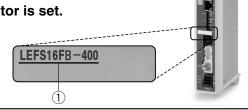

Refer to the operation manual for using the products. Please download it via our website: https://www.smcworld.com

Precautions for blank controllers (JXC□H□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. For data writing, use the controller setting software ACT Controller 2 or the dedicated software JXC-BCW.

- Both ACT Controller 2 and JXC-BCW can be downloaded from the SMC website.
- To use this software, order the communication cable for controller setting (JXC-W2A-C) and the USB cable (LEC-W2-U) separately.

Hardware Requirements

os	Windows®10 (64 bit)	Windows®7	Windows®8	Windows®10
Software	ACT Controller 2 (With JXC-BCW function)		JXC-BCW	

 Windows®7, Windows®8, and Windows®10 are registered trademarks of Microsoft Corporation in the United States

SMC website: https://www.smcworld.com

⚠ Caution

[CE/UKCA-compliant products]

1) EMC compliance was tested by combining the electric actuator LE series and the JXCEH/PH

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

2 For the JXCEH/PH series (step motor controller), EMC compliance was tested by installing a noise filter set (LEC-NFA).

Refer to page 72 for the noise filter set. Refer to the JXCEH/PH Operation Manual for instal-



JXCEH/9H/PH Series

Specifications

	Mod	lel	JXCEH	JXC9H	JXCPH				
Network			EtherCAT	EtherNet/IP™	PROFINET				
Co	mpatible	motor		Step motor (Servo/24 VDC)					
Po	wer suppl	у		Power voltage: 24 VDC ±10%					
Cui	rent consumpt	ion (Controller)	200 mA or less	200 mA or less	200 mA or less				
Co	mpatible	encoder		Incremental					
s	Annliachla	Protocol	EtherCAT*2	EtherNet/IP™*2	PROFINET*2				
흲	Applicable system	Version*1	Conformance Test	Volume 1 (Edition 3.14)	Specification				
ica	System	version	Record V.1.2.6	Volume 2 (Edition 1.15)	Version 2.32				
Communication specifications	Communication speed		100 Mbps*2	10/100 Mbps*2 (Automatic negotiation)	100 Mbps*2				
nica	Configura	ation file*3	ESI file	EDS file	GSDML file				
ommu	I/O occup	ation area	Input 20 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 36 bytes Output 36 bytes				
ပ	Terminat	ing resistor		Not included					
Me	emory			EEPROM					
LE	D indicate	or	PWR, RUN, ALM, ERR	PWR, ALM, MS, NS	PWR, ALM, SF, BF				
Ca	ble length	[m]	Actuator cable: 20 or less						
Co	oling syst	em	Natural air cooling						
Op	erating tempera	ature range [°C]	0 to 40 (No freezing)						
Op	erating humidi	ty range [%RH]	90 or less (No condensation)						
Ins	ulation resi	stance [MΩ]	Between	n all external terminals and the case: 50 (5)	00 VDC)				
W	eight [g]		260 (Screw mounting) 280 (DIN rail mounting)	250 (Screw mounting) 270 (DIN rail mounting)	260 (Screw mounting) 280 (DIN rail mounting)				

- *1 Please note that versions are subject to change.
- *2 Use a shielded communication cable with CAT5 or higher for the PROFINET, EtherNet/IP™, and EtherCAT.
- *3 The files can be downloaded from the SMC website.

■Trademark

EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Example of Operation Command

In addition to the step data input of 64 points maximum in each communication protocol, the changing of each parameter can be performed in real time via numerical data defined operation.

* Numerical values other than "Moving force," "Area 1," and "Area 2" can be used to perform operation under numerical instructions from JXCL1.

< Application example > Movement between 2 points

No.	Movement mode	Speed	Position	Acceleration	Deceleration	Pushing force	Trigger LV	Pushing speed	Moving force	Area 1	Area 2	In position
0	1: Absolute	100	10	3000	3000	0	0	0	100	0	0	0.50
1	1: Absolute	100	100	3000	3000	0	0	0	100	0	0	0.50

<Step no. defined operation>

Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 to input the DRIVE signal.

Sequence 4: Specify step data No. 1 after the DRIVE signal has been temporarily turned OFF to input the DRIVE signal.

<Numerical data defined operation>


Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 and turn ON the input instruction flag (position). Input 10 in the target position. Subsequently the start flag turns ON.


Sequence 4: Turn ON step data No. 0 and the input instruction flag (position) to change the target position to 100 while the start flag is ON.


The same operation can be performed with any operation command.

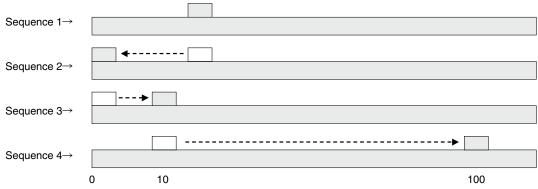





JXCEH

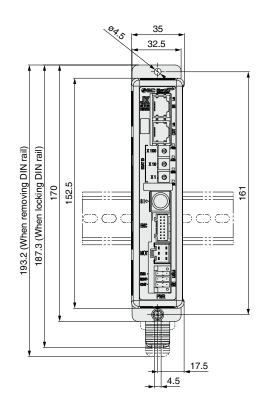

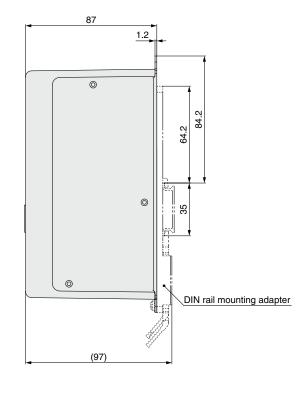

JXC9H

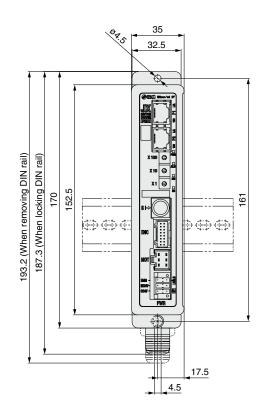


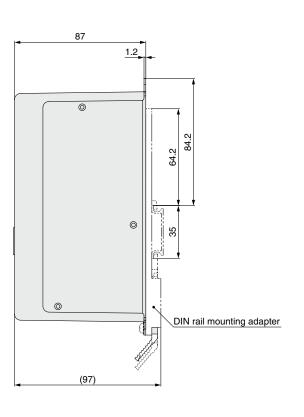


JXCEH/9H/PH Series

Dimensions


JXCPH

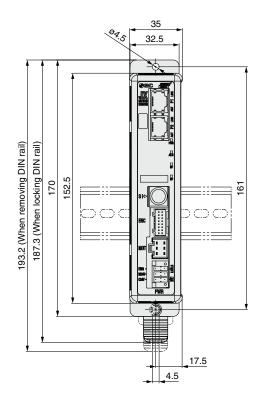

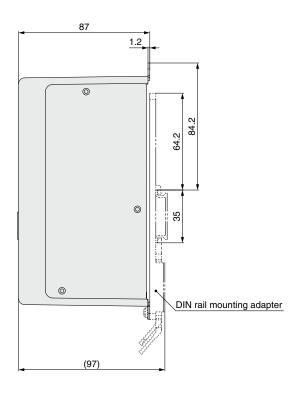

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below. Refer to the dimension drawings on pages 70 and 71 for the mounting dimensions.

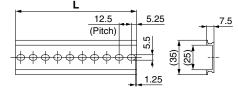

L Dimensions [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

DIN rail mounting adapter

LEC-3-D0 (with 2 mounting screws)


This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

High Performance Step Motor Controller JXCEH/9H/PH Series

Options


■ Communication cable for controller setting

1) Communication cable JXC-W2A-C

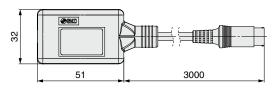

* It can be connected to the controller directly.

② USB cable LEC-W2-U

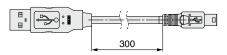

3Controller setting kit JXC-W2A

A set which includes a communication cable (JXC-W2A-C) and a USB cable (LEC-W2-U)

<Controller setting software/USB driver>

- · Controller setting software
- · USB driver (For JXC-W2A-C)

Download from SMC's website: https://www.smcworld.com

Hardware Requirements

OS	Windows®7, Windows®8.1, Windows®10
Communication interface	USB 1.1 or USB 2.0 ports
Display	1024 x 768 or more

 Windows®7, Windows®8.1 and Windows®10 are registered trademarks of Microsoft Corporation in the United States.


■ DIN rail mounting adapter LEC-3-D0

With 2 mounting screws

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

■ DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table on page 71. Refer to the dimension drawings on pages 70 and 71 for the mounting dimensions.

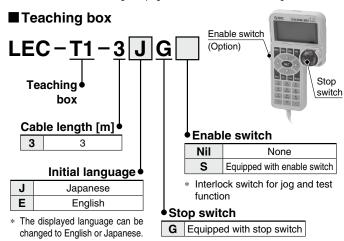


Specifications

opecifications	
Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

■ Power supply plug JXC-CPW

* The power supply plug is an accessory.

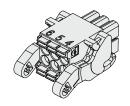

(6)(5)(4)
(3)(2)(1)


① C24V ④ 0V ② M24V ⑤ N.C.

3 EMG 6 LK RLS

Power supply plug

. 01101 0	appiy piag	
Terminal name	Function	Details
0V	Common supply (–)	The M24V terminal, C24V terminal, EMG terminal, and LK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) of the controller
C24V	Control power supply (+)	Control power supply (+) of the controller
EMG	Stop (+)	Connection terminal of the external stop circuit
LK RLS	Lock release (+)	Connection terminal of the lock release switch

■ Conversion cable P5062-5 (Cable length: 300 mm)

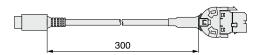


 * To connect the teaching box (LEC-T1-3□G□) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.

■ Noise filter set

LEC-NFA


Contents of the set: 2 noise filters (Manufactured by WURTH ELEKTRONIK: 74271222)

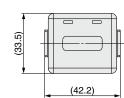




* Refer to the JXCEH/PH series Operation Manual for installation.

JXC5H/6H Series JXCEH/9H/PH Series Actuator Cable (Option)

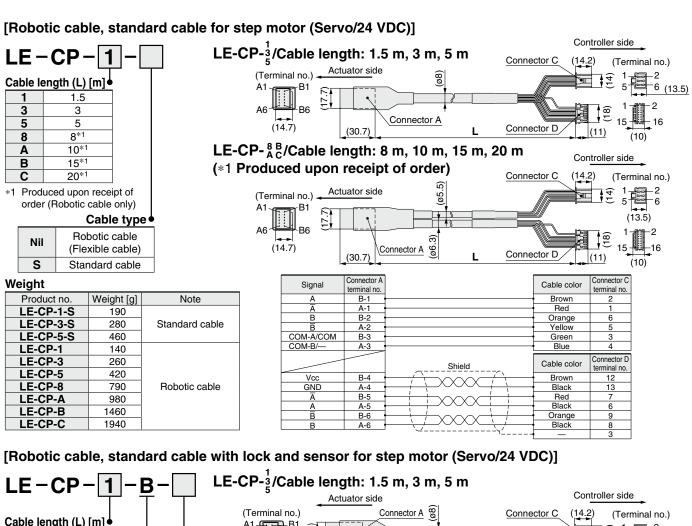

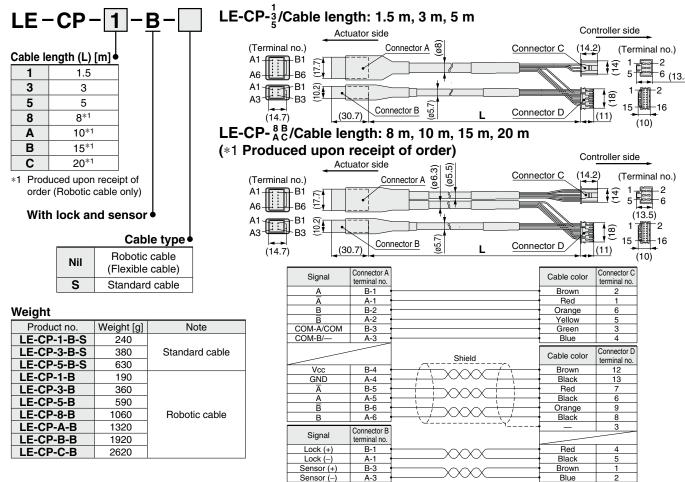



JXC5H/6H/EH/9H/PH Series Precautions Relating to Differences in Controller Versions


As the controller version of the JXC series differs, the internal parameters are not compatible.


- If using the JXC□1□-BC or JXC□1□-BC-E, please use the latest version of the JXC-BCW (parameter writing tool).
- There are currently 3 versions available: version 1 products (V1.□ or S1.□), version 2 products (V2.□ or S2.□), and version 3 products (V3.□ or S3.□). Keep in mind that in order to write a backup file (.bkp) to another controller with the JXC-BCW, it needs to be the same version as the controller that created the file. (For example, a backup file created by a version 1 product can only be written to another version 1 product, and so on.) A backup file for the electric actuator with battery-less absolute encoder can only be written between version 3.4 or higher product (the backup file of version 2 or earlier products cannot be written).

Identifying Version Symbols





JXC□1 Series Version V3.□ or S3.□ Products

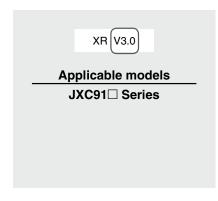

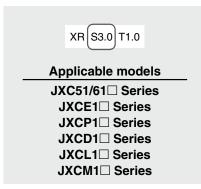

JXC□1 Series Version V2.□ or S2.□ Products

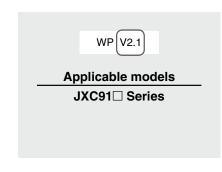

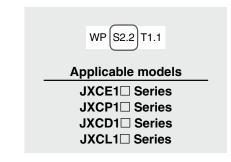

JXC□1 Series Version V1.□ or S1.□ Products



Applicable models JXCE1□ Series JXCP1□ Series JXCD1□ Series JXCL1□ Series		XR S1.	.0 T1.0	
JXCP1□ Series JXCD1□ Series	Ар	plicabl	e mod	els
JXCD1□ Series	J	XCE1	Serie	s
	J	XCP1	☐ Serie	s
JXCL1□ Series	J	XCD1	☐ Serie	S
	J	XCL1	Series	S

■Trademark

EtherNet/IP® is a registered trademark of ODVA, Inc. DeviceNet® is a registered trademark of ODVA, Inc. EtherCAT® is registered trademark and patented tech

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



CE/UKCA/UL-compliance List

* For CE, UKCA, and UL-compliant products, refer to the tables below.

As of February 2022

■ Controllers "○": Compliant "×": Not compliant

Compatible motor	Series	CE UK (€		c 91 2°us
		CA	Compliance	Certification No. (File No.)
	JXC5H/6H	0	0	E480340
High performance	JXCEH	0	0	E480340
(Step motor 24 VDC)	JXC9H	0	0	E480340
	JXCPH	0	0	E480340

■ Actuators "○": Compliant "×": Not compliant

Compatible motor	Series	ŬĶ		c '91 1° us
		CA	Compliance	Certification No. (File No.)
High performance	LEFS□F	0	×	_
(Step motor 24 VDC)	LEY□F	0	×	_

■ Actuators (When ordered with a controller) "○": Compliant "x": Not compliant "—": Not applicable

	Series	JXC5H/6H			JXCEH			JXC9H			JXCPH		
Compatible motor		(€ UK	c SL us		ŬĶ		c FL °us	C K	c 'All us		(€	c 'AL 'us	
		CA	Compliance	Certification No. (File No.)	CA	Compliance	Certification No. (File No.)	CA	Compliance	Certification No. (File No.)	CA	Compliance	Certification No. (File No.)
High performance	LEF□F	0	0	E339743	0	0	E339743	0	0	E339743	0	0	E339743
(Step motor 24 VDC)	LEY□F	0	0	E339743	0	0	E339743	0	0	E339743	0	0	E339743



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

⚠ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, ⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
- replacement parts. Please consult your nearest sales branch. 2. For any failure or damage reported within the warranty period which is clearly our
- responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

- Edition B * The rod type LEY F series has been added.
 - * The number of pages has been increased from 36 to 80.

AW

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F.

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com

© 2022 SMC Corporation All Rights Reserved