



Operation Manual

PRODUCT NAME

Air cylinder

MODEL / Series / Product Number

C * A2 * (F) 40 & 100 - * Z
C * A2 * 40 & 100 (TN/TF) - * Z
C * A2 * 40 & 100 - * Z - XC7
C * A2 * 40 & 100 - * Z - XC22
C * A2D40 & 100 - * Z - XC27
C * A2 * 40 & 100 - * Z - XC28
C * A2 * 40 & 100 - * Z - XC29
C * A2 * 40 & 100 - * Z - XC65
C * A2 * 40 & 100 - * Z - XC68
C * A2 * 40 & 100 - * Z - XC85

SMC Corporation

Contents

Safety Instructions	P2
1. Specifications	P4
1-1. Specifications	
2. Installation and Handling	P4
2-1. Air supply	
2-2. Design	
2-3. Mounting and Installation	
2-4. Environment	
2-5. Speed control	
2-6. Allowable kinetic energy	
2-7. Air cushion	
2-8. Control direction	
2-9-1. Mounting brackets	
2-9-2. Auto switches	
3. Maintenance	P25
3-1. Checks	
3-2. Replacement of seals	
3-3. Consumable parts	
3-4. Troubleshooting	
4. Made to order product (XC85)	P32
4-1. Food Machinery Grease Specification	
5. Basic Circuit for Cylinder Operation	P33
6. Construction	P34

Revision history

A XC5 削除、文をカタログと整合させる

SMC Corporation

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021 JAPAN
Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362
URL <http://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.
© 2012 SMC Corporation All Rights Reserved