



# Operation Manual

## PRODUCT NAME

SMC Wireless System  
EtherNet/IP® compatible

## MODEL / Series / Product Number

*EX600-WEN# (Base)*  
*EX600-WSV# (Remote)*

**SMC Corporation**

# Contents

|                                   |     |
|-----------------------------------|-----|
| Safety Instructions               | 2   |
| SMC Wireless System Features      | 10  |
| SMC Wireless System Outline       | 11  |
| Outline                           | 11  |
| System configuration              | 12  |
| Base                              | 13  |
| Remote                            | 14  |
| Definition and terminology        | 15  |
| Assembly                          | 17  |
| Mounting and Installation         | 20  |
| Installation                      | 20  |
| Model Indication and How to Order | 23  |
| Summary of Product Parts          | 24  |
| Connector (Base only)             | 25  |
| LED Display                       | 26  |
| LED indication of base            | 26  |
| LED indication of remote          | 28  |
| Setting and Adjustment            | 29  |
| Setting                           | 30  |
| Dimensions                        | 46  |
| I/O Map                           | 48  |
| I/O mapping                       | 49  |
| I/O mapping order of base/remote  | 50  |
| Diagnostic allocation             | 56  |
| Detailed diagnostic data          | 57  |
| Specifications                    | 64  |
| Troubleshooting                   | 70  |
| <b>End Plate</b>                  |     |
| Model Indication and How to Order | 86  |
| Summary of Product parts          | 87  |
| Mounting and Installation         | 89  |
| Wiring                            | 89  |
| Specifications                    | 91  |
| Dimensions                        | 92  |
| Accessories                       | 102 |



# Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution", "Warning" or "Danger". They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

\*1) ISO 4414: Pneumatic fluid power -- General rules relating to systems.

ISO 4413: Hydraulic fluid power -- General rules relating to systems.

IEC 60204-1: Safety of machinery -- Electrical equipment of machines .(Part 1: General requirements)

ISO 10218: Manipulating industrial robots -Safety.

etc.



## Caution

**Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



## Warning

**Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



## Danger

**Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

## Warning

### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results.

The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product.

This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly.

The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

### 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



# Safety Instructions

## Caution

### **1. The product is provided for use in manufacturing industries.**

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
If anything is unclear, contact your nearest sales branch.

## **Limited warranty and Disclaimer/Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

### **Limited warranty and Disclaimer**

#### **1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)**

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

#### **2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.**

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

#### **3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.**

##### **\*2) Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### **Compliance Requirements**

#### **1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.**

#### **2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulation of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.**

## Operator

- ◆ This operation manual is intended for those who have knowledge of machinery using pneumatic equipment, and have sufficient knowledge of assembly, operation and maintenance of such equipment. Only those persons are allowed to perform assembly, operation and maintenance.
- ◆ Read and understand this operation manual carefully before assembling, operating or providing maintenance to the product.

### ■ Safety Instructions

#### **Warning**

- Do not disassemble, modify (including changing the printed circuit board) or repair.  
An injury or failure can result.
- Do not operate or set with wet hands.  
This may lead to an electric shock.
- Do not operate the product outside of the specifications.  
Do not use for flammable or harmful fluids.  
Fire, malfunction, or damage to the product can result.  
Verify the specifications before use.
- Do not operate in an atmosphere containing flammable or explosive gases.  
Fire or an explosion can result.  
This product is not designed to be explosion proof.
- If using the product in an interlocking circuit:
  - Provide a double interlocking system, for example a mechanical system.
  - Check the product regularly for proper operation.Otherwise malfunction can result, causing an accident.
- The following instructions must be followed during maintenance:
  - Turn off the power supply.
  - Stop the air supply, exhaust the residual pressure and verify that the air is released before performing maintenance.Otherwise an injury can result.

## **Caution**

- When handling the unit or assembling/replacing units:
  - Do not touch the sharp metal parts of the connector or plug for connecting units.
  - Take care not to hit your hand when disassembling the unit.  
The connecting portions of the unit are firmly joined with seals.
  - When joining units, take care not to get fingers caught between units.  
An injury can result.

- After maintenance is complete, perform appropriate functional inspections.  
Stop operation if the equipment does not function properly.  
Safety cannot be assured in the case of unexpected malfunction.

- Provide grounding to assure noise resistance of the Fieldbus system.  
Individual grounding should be provided close to the product with a short cable.

## **Caution**

### Notice:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Caution**

When operating the product, please be sure to maintain a separation distance of at least 20 cm between your body (excluding fingers, hands, wrists, ankles and feet) and the product to meet RF exposure safety requirements as determined by FCC and Innovation, Science and Economic Development Canada. Installation of this device must ensure that at 20 cm separation distance is maintained between the device and end users.

### **警語**

經型式認證合格之低功率射頻電機，非經許可，公司，商號或使用者均不得擅自變更頻率，加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業，科學及醫療用電波輻射性電機設備之干擾。

## ■NOTE

○Follow the instructions given below when designing, selecting and handling the product.

- The instructions on design and selection (installation, wiring, environment, adjustment, operation, maintenance, etc.) described below must also be followed.

### \*Product specifications

- Use the specified voltage.

Otherwise failure or malfunction can result.

- Reserve a space for maintenance.

Allow sufficient space for maintenance when designing the system.

- Do not remove any nameplates or labels.

This can lead to incorrect maintenance, or misreading of the operation manual, which could cause damage or malfunction to the product.

It may also result in non-conformity to safety standards.

- Beware of inrush current when the power supply is turned on.

Some connected loads can apply an initial charge current which will activate the over current protection function, causing the unit to malfunction.

### ●Product handling

#### \*Installation

- Do not drop, hit or apply excessive shock to the SI unit.

Otherwise damage to the product can result, causing malfunction.

- Tighten to the specified tightening torque.

If the tightening torque is exceeded the mounting screws may be broken.

IP67 protection cannot be guaranteed if the screws are not tightened to the specified torque.

- If a large manifold valve is mounted, lift the unit so that stress is not applied to the connecting part while transporting.

The stress may cause breakage of the connecting part. The unit may become very heavy depending on the combination. Transportation/installation shall be performed by multiple operators.

- Never mount a product in a location that will be used as a foothold.

The product may be damaged if excessive force is applied by stepping or climbing onto it.

#### \*Wiring

- Avoid repeatedly bending or stretching the cables, or placing heavy load on them.

Repetitive bending stress or tensile stress can cause breakage of the cable.

- Wire correctly.

Incorrect wiring can break the product.

- Do not perform wiring while the power is on.

Otherwise damage to the wireless unit and/or input or output device can result, causing malfunction.

- Do not route wires and cables together with power or high voltage cables.

Otherwise the wireless unit and/or input or output device can malfunction due to interference of noise and surge voltage from power and high voltage cables to the signal line.

Route the wires (piping) of the wireless unit and/or input or output device separately from power or high voltage cables.

- Confirm proper insulation of wiring.

Poor insulation (interference from another circuit, poor insulation between terminals, etc.) can lead to excess voltage or current being applied to the product, causing damage.

- Take appropriate measures against noise, such as using a noise filter, when the Fieldbus system is incorporated into equipment.

Otherwise noise can cause malfunction.



#### \*Environment

- Select the proper type of protection according to the environment of operation.

IP67 protection class is achieved when the following conditions are met.

- (1) The units are connected properly with fieldbus cable with M12 connector and power cable with M12 (M8) connector.

- (2) Suitable mounting of each unit and manifold valve.

- (3) Be sure to fit a waterproof cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

Do not use in an environment where moisture or water vapor are present. Otherwise failure and malfunction can result.

- Do not use in a place where the product could be splashed by oil or chemicals.

If the product is to be used in an environment containing oils or chemicals such as coolant or cleaning solvent, even for a short time, it may be adversely affected (damage, malfunction etc.).

- Do not use the product in an environment where corrosive gases or fluids could be splashed.

Otherwise damage to the product and malfunction can result.

- Do not use in an area where surges are generated.

If there is equipment generating large surge near the unit (magnetic type lifter, high frequency inductive furnace, welding machine, motor, etc.), this can cause deterioration of the internal circuitry element of the unit or result in damage. Take measures against the surge sources, and prevent the lines from coming into close contact.

- When a surge-generating load such as a relay, valve or lamp is driven directly, use a product with a built-in surge absorbing element.

Direct drive of a load generating surge voltage can damage the unit.

- The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in the system.

- Prevent foreign matter such as dust or wire debris from getting inside the product.

- Mount the product in a place that is not exposed to vibration or impact.

Otherwise failure or malfunction can result.

- Do not use the product in an environment that is exposed to temperature cycle.

Heat cycles other than ordinary changes in temperature can adversely affect the inside of the product.

- Do not expose the product to direct sunlight.

If using in a location directly exposed to sunlight, shade the product from the sunlight.

Otherwise failure or malfunction can result.

- Keep within the specified ambient temperature range.

Otherwise malfunction can result.

- Do not operate close to a heat source, or in a location exposed to radiant heat.

Otherwise malfunction can result.

#### \*Adjustment and Operation

- Please refer to the I/O configuration manual for details of parameter settings.

- Perform settings suitable for the operating conditions.

Incorrect setting can cause operation failure.

(Refer to page 29 for the Setting and Adjustment.)

- Please refer to the PLC manufacturer's manual etc. for details of programming and addresses.

For the PLC protocol and programming refer to the relevant manufacturer's documentation.

\*Maintenance

- Turn off the power supply, stop the supplied air, exhaust the residual pressure and verify the release of air before performing maintenance.

There is a risk of unexpected malfunction.

- Perform regular maintenance and inspections.

There is a risk of unexpected malfunction.

- After maintenance is complete, perform appropriate functional inspections.

Stop operation if the equipment does not function properly.

Otherwise safety is not assured due to an unexpected malfunction or incorrect operation.

- Do not use solvents such as benzene, thinner etc. to clean each unit.

They could damage the surface of the body and erase the markings on the body.

Use a soft cloth to remove stains.

For heavy stains, use a cloth soaked with diluted neutral detergent and fully squeezed, then wipe up the stains again with a dry cloth.

## SMC Wireless System Features

The SMC wireless system has the following features:

- High-speed start up. The minimum connection time to the system after supplying power to the remote is 0.25 seconds. \*<sup>1</sup>
- Parameter setting by Near Field Communication (NFC) using a PC (no HW setting).
- Up to 127 remote can be registered to one base. \*<sup>2</sup>
- The maximum number of I/O points of the wireless system is 1280 for input and output. \*<sup>3, 4</sup>
- The maximum number of I/O points of the base is 128 for input and output.
- The maximum number of I/O points of the remote is 128 for input and output.

\*1: The base should be in the start upstate. The connection time varies depending on the timing of the power supply to the remote, the number of connected EX600 I/O units and other external influences.

\*2: The maximum number of units that can be connected is 127. If 127 units is exceeded, the unit I/O will not be recognized. There might be a communication delay depending on the communication load status.

\*3: The maximum number of I/O point is 1280 for input and output. When exceeding 1280 points, the unit I/O is not recognized. There might be a communication delay depending on the communication load status.

\*4: The total number of I/O points of the base and the registered I/O points of the remote.

### <Important >

- This product is a wireless unit in accordance with the Radio Act.

Be sure to comply with the following precautions.

- Do not disassemble or modify the product. Disassembly and modification are prohibited by law.
- This product is compliant with the Radio Act in Japan, European countries and the US. Refer to the product catalog or SMC website (URL <https://www.smcworld.com>) for the latest information.

\*: If this product is to be imported into Malaysia (including if the product is integrated into other equipment), an SMC Wireless System Certificate of Compliance and a test report may be required in some cases. Please contact SMC for further details.

- This product communicates by radio waves, and the communication may stop instantaneously due to ambient environments and operating methods. SMC will not be responsible for any secondary failure which may cause an accident or damage to other devices or equipment.
- When several units are installed closely to each other, slight interference may occur due to the characteristics of the wireless product.
- The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.

Please use extreme caution when operating equipment which may have an adverse effect on your implantable medical device. Be sure to thoroughly read the precautions stated in the catalog, operation manual, etc., of your implantable medical device, or contact the manufacturer directly for further details on what types of equipment need to be avoided.

- The communication performance is affected by the ambient environment, so please perform the communication testing before use.

## SMC Wireless System Outline

### ■Outline

This operation manual describes the **distributed I/O system** which can provide a wireless connection to the EX600 series with complete interchangeability.

It consists of a combination of the **base** which has upper level communication (EtherNet/IP™) and wireless connection function and the **remote** which offers wireless connection.

The base and remote can be constructed into **modules** by combining them with EX600 series I/O units.

Each base and remote is able to provide **up to 128 inputs and 128 outputs**, and up to 9 I/O units can be connected to each module.


Although the base is able to provide up to 128 inputs and 128 outputs as a base, it is possible to have up to 1280 inputs and 1280 outputs by matching the number of I/O points of the registered remote.

Therefore, the maximum number of I/O points per 1 node can be 1280 points (160 bytes)/1280 points (160 bytes) visible from the upper level communication such as a PLC.

It is possible to prevent malfunction when multiple base and remote are being operated in the same area by registering each PID (Product ID) of the base and the remote.

The packet of the wireless transmit and receive data is encrypted. It is therefore difficult to manipulate the data.


## ■ System configuration

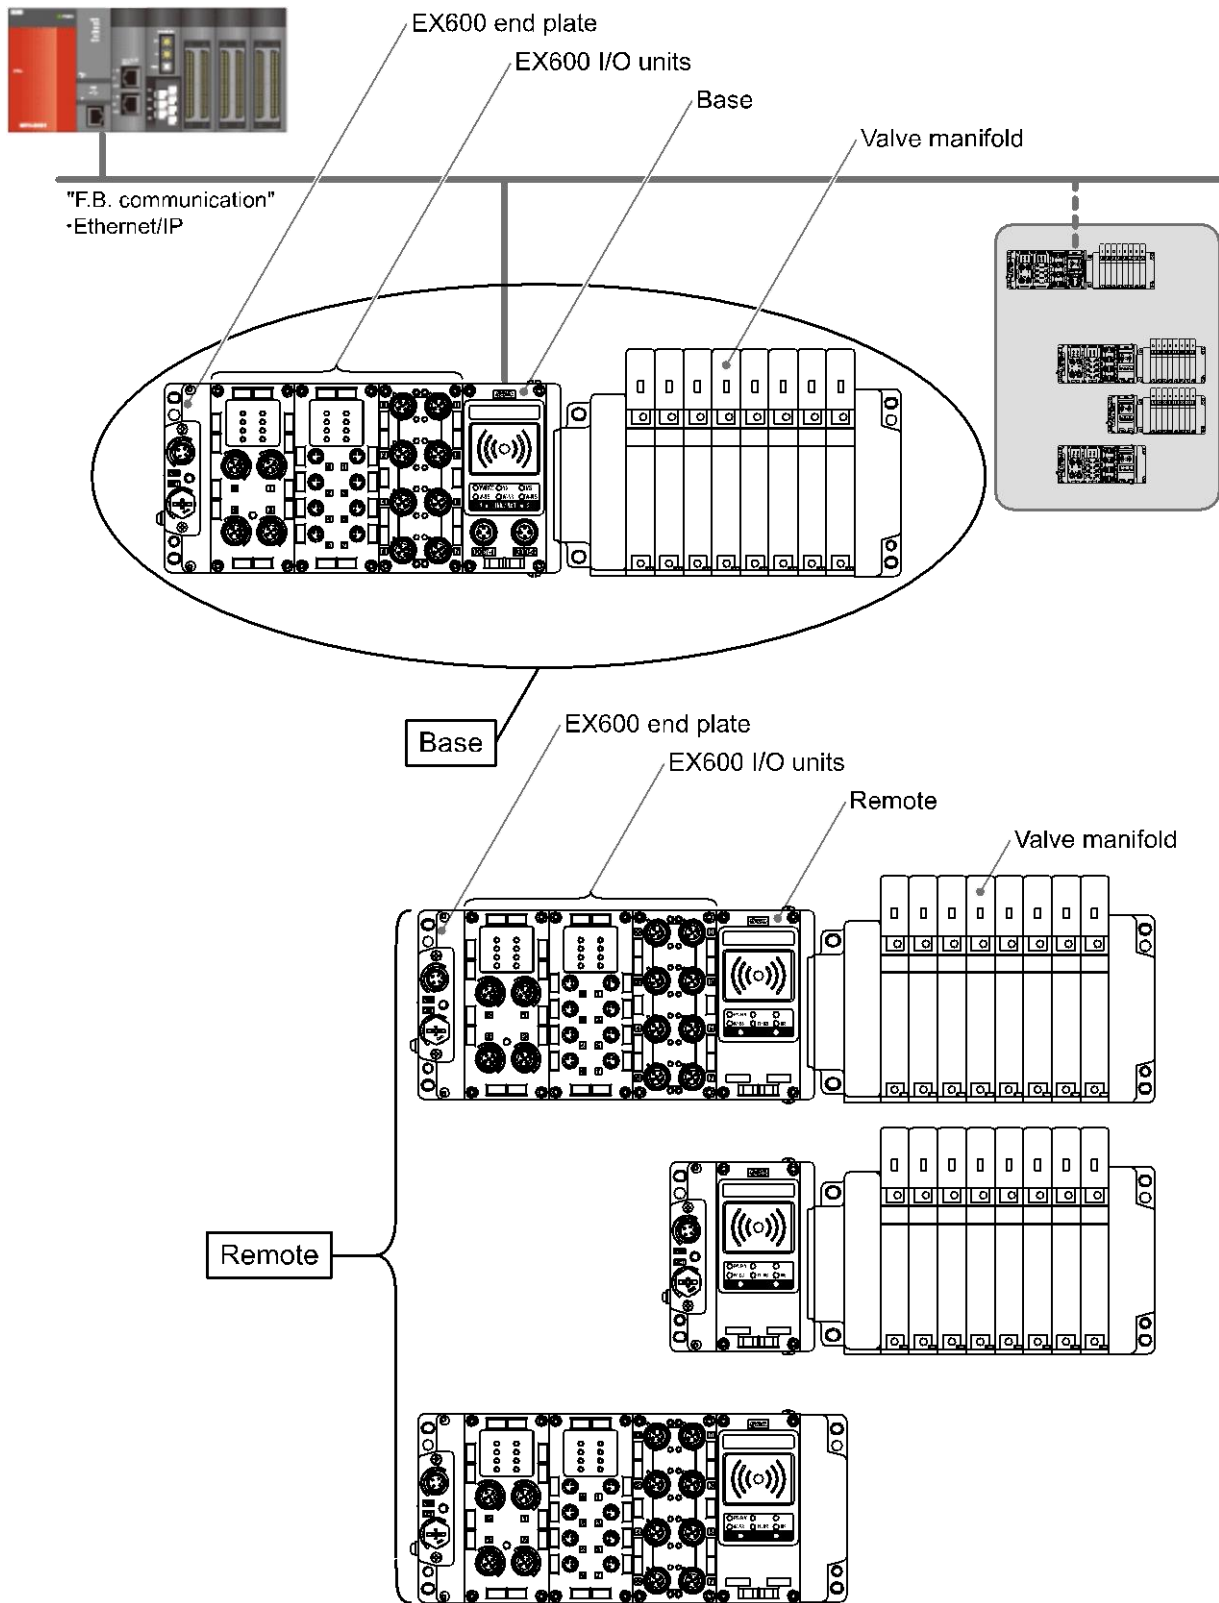

Wireless system configuration example

## ■Base

The construction of the base is shown below.

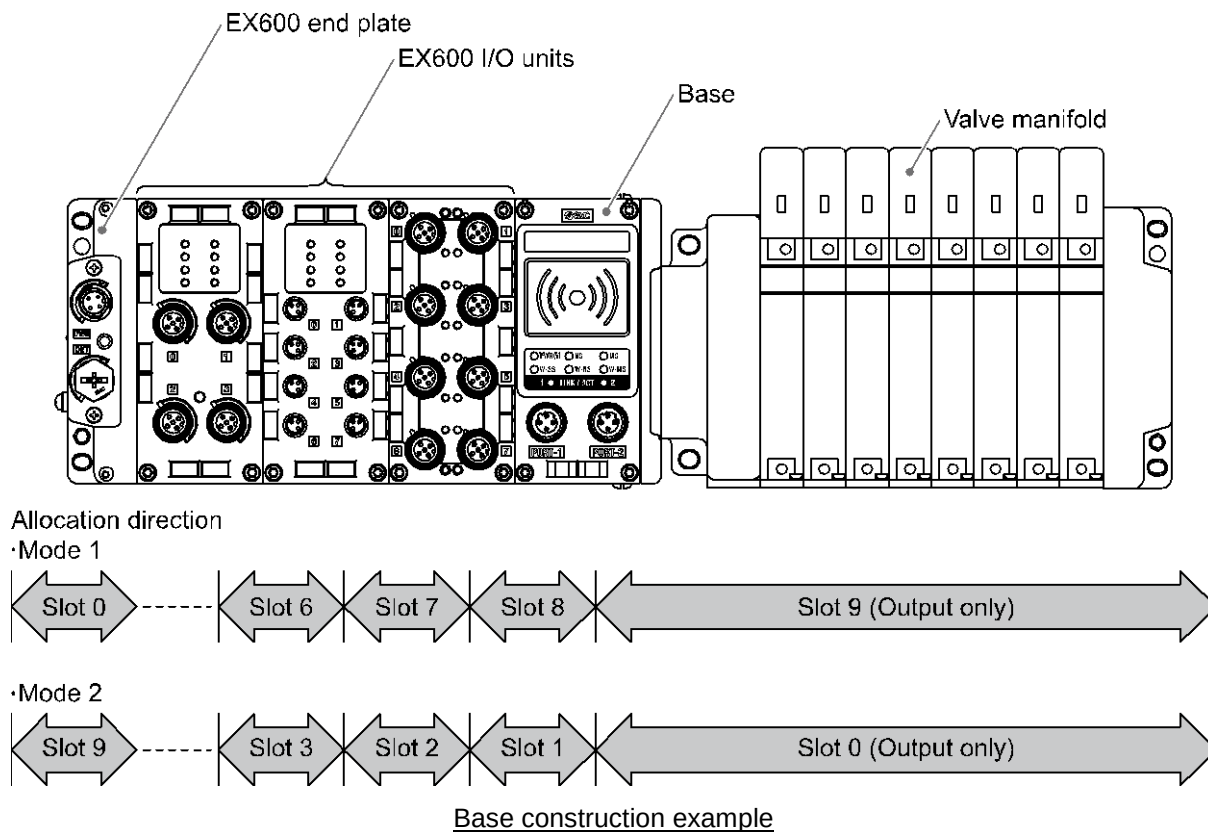

The **base** is positioned at the center of the **base**, so that the EX600 I/O units can be connected to the left side of the base and the valve manifold can be connected to the right side of the base.

Refer to the SMC catalogue for the EX600 series serial transmission system for the wiring method.

[http://ca01.smcworld.com/catalog/BEST-5-1-en/mpv/e02-24-ex600/pageview.html#page\\_num=C1](http://ca01.smcworld.com/catalog/BEST-5-1-en/mpv/e02-24-ex600/pageview.html#page_num=C1)


The base transmits and receives the I/O unit information from the base and remote when connected to the upper level communication EtherNet/IP™ system.

With the wireless system the allocation direction of the address (Slot No.) setting allocated to the EX600 I/O unit and the connected valve manifold can be varied for each wireless unit.

(Refer to page 36 the section "Setting and Adjustment" for details.)

## ■ Remote

The construction of the remote is shown below.

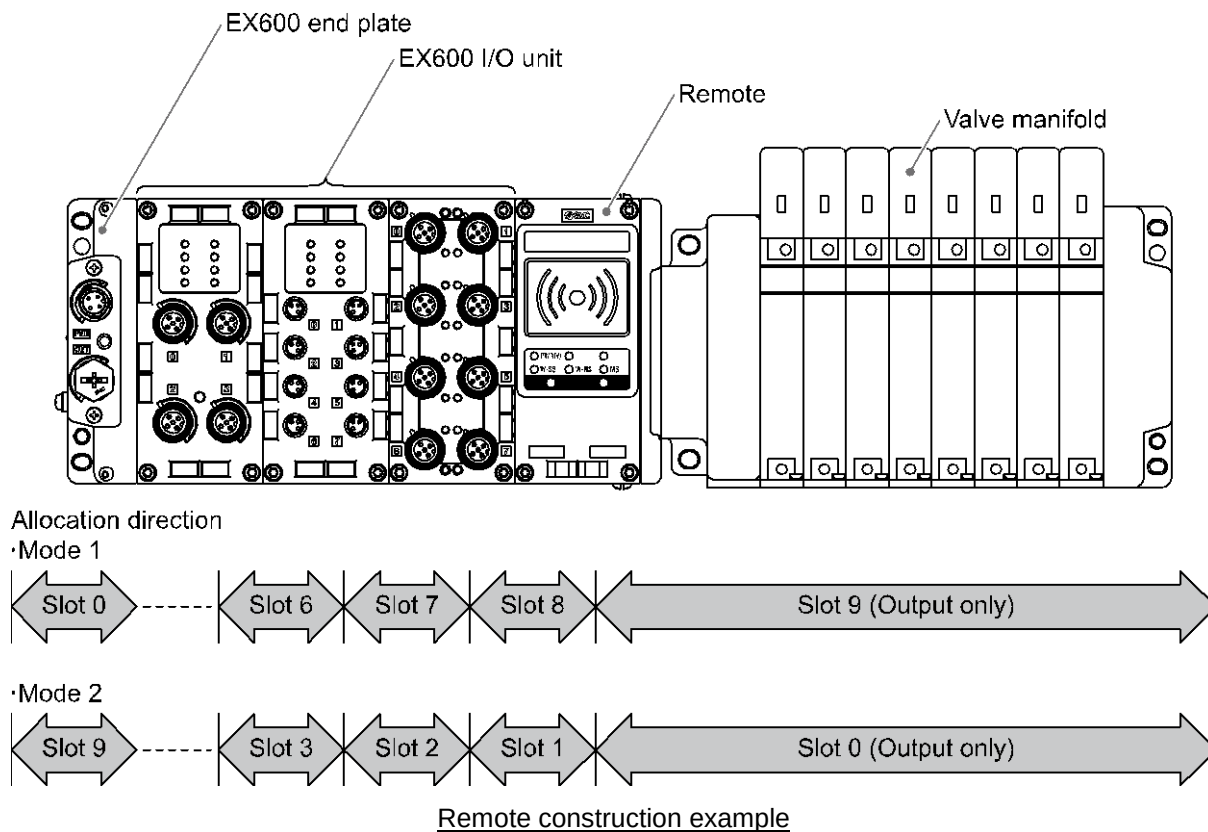

The remote is positioned at the center of the remote, so that the EX600 I/O units can be connected to the left side of the remote and the valve manifold can be connected to the right side of the remote, similar to the base.

Refer to the SMC catalogue for the EX600 series serial transmission system for the wiring method.  
[http://ca01.smcworld.com/catalog/BEST-5-1-en/mpv/e02-24-ex600/pageview.html#page\\_num=C1](http://ca01.smcworld.com/catalog/BEST-5-1-en/mpv/e02-24-ex600/pageview.html#page_num=C1)

The remote has a construction that is separated from the EtherNet/IP™ communication function by the base unit, and therefore it transmits/receives the information of the connected I/O units and valve manifold to/from the base.

With the wireless system the allocation direction of the address (Slot No.) setting allocated to the EX600 I/O unit and the connected valve manifold can be varied for each wireless unit.  
 (Refer to page 42 the section "Setting and Adjustment" for details.)

## ■ Definition and terminology

|     | Term                  | Definition                                                                                                                                                                                         |
|-----|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 100 | 100BASE-TX            | Standard LAN transmission line with communication speed of 100 Mbps.                                                                                                                               |
| B   | Base                  | A unit which establishes wireless communication of input or output data to the remote. It is connected to a PLC to establish communication of input or output data.                                |
|     | Broken line detection | A broken wire to the input or output equipment has been detected by the diagnostic function.                                                                                                       |
| C   | Current consumption   | Current which is necessary to operate each unit.                                                                                                                                                   |
| D   | DHCP                  | A protocol that automatically allocates information, necessary to be registered to use the network, such as an IP address, to individual devices connected to the TCP/IP network.                  |
|     | DIN rail              | A metal rail conforming with the DIN (German) standard.                                                                                                                                            |
|     | DLR                   | DLR (Device level ring) protocol: a protocol which establishes communication continuously by providing a high speed recovery even when a communication error occurs somewhere on the ring network. |
|     | D Side                | The side connected to the end plate when the product is connected to a manifold.                                                                                                                   |
| E   | EDS                   | Outer disc which stores configurable attribute information, such as object address of each parameter, related to the device.                                                                       |
|     | Enclosure (IP)        | Abbreviation of International Protection. Standard related to protection against extraneous matter, such as hand, steel ball, steel wire, dust particle or water, applied to the product.          |
| F   | FE                    | Abbreviation of functional earth. The word "earth" refers to this functional earth.                                                                                                                |
|     | Fieldbus              | Network protocol to establish digital communication between an automated industrial system such as a measurement tool or manipulation tool and a PLC.                                              |
|     | Full duplex           | Communication system that can send and receive data at the same time bi-directionally.                                                                                                             |
| H   | Half-duplex           | Communication method that can send and receive data reciprocally in bi-directional communication.                                                                                                  |
| I   | Idle                  | Base has received the FAIL SAFE command, and remains idle. The output state can be set to CLEAR, HOLD or Software Control using the parameter settings.                                            |
|     | IP address            | A 32 bit digit sequence which is assigned to identify devices which are connected to the network.                                                                                                  |
| M   | MAC address           | A unique number inherent to all devices connected to an EtherNet/IP™ network.                                                                                                                      |
|     | Manifold              | Aggregate.                                                                                                                                                                                         |
| N   | NFC                   | Abbreviation of Near Field Communication. Non-contact short distance wireless communication. It is accessible using a card reader/writer by using a special application.                           |
|     | NPN output            | The output type that uses an NPN transistor to operate an output device. This is also known as a positive common type since a positive potential is applied to the power supply line.              |
|     | NPN input             | Accepts a sensor output that uses the NPN transistor output signal.                                                                                                                                |
|     | Number of inputs      | Number of points which can receive information from input equipment such as a sensor or switch.                                                                                                    |
|     | Number of outputs     | Number of points which can operate output equipment such as a valve, lamp or motor starter.                                                                                                        |




|   | Term                     | Definition                                                                                                                                                                           |
|---|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P | Paring                   | Registration of the PID (Product ID) of the remote to be connected to the base. Registration occurs at the initial setting, then wireless system will activate.                      |
|   | PID                      | Abbreviation of Product ID. A 32 bit digit sequence which is assigned to identify the wireless unit (base/remote).                                                                   |
|   | PLC                      | Abbreviation of Programmable Logic Controller. A digital computer used for automation of electromechanical processes.                                                                |
|   | PNP output               | The output type that uses a PNP transistor to operate an output device. This is also known as a negative common type since a negative potential is applied to the power supply line. |
|   | PNP input                | Accepts a sensor output that uses the PNP transistor output signal .                                                                                                                 |
| Q | QuickConnect™            | Function to shorten the time from initial operation of the equipment after supplying power to starting communication.                                                                |
| R | Remote                   | A unit which establishes wireless communication of input or output data to the base.                                                                                                 |
| S | Short circuit detection  | Diagnostic function which detects generation of over current due to a short circuit between the output and the positive power supply line or the ground line.                        |
|   | Short circuit protection | Function which avoids damage to the internal circuit when over current is generated due to short circuit between the output and the positive power supply line or the ground line.   |
| U | U side                   | The side connected to the valve manifold when the EX600 is connected to a manifold.                                                                                                  |
| W | WiFi                     | Abbreviation of Wireless Fidelity. Brand name which indicates the wireless LAN equipment is compliant to an international standard.                                                  |
|   | Wireless channel         | Identification number of the remote connected to the base.                                                                                                                           |
|   | Wireless system          | This is a general term for the network including base and remote.                                                                                                                    |
|   | Wireless unit            | A unit which establishes wireless communication. This is a generic name of the base and remote.                                                                                      |


## Assembly

### •Assembling the unit as a manifold

- (1) Connect a unit to the end plate.  
Digital and analogue units can be connected in any order.  
(Tightening torque: 1.5 to 1.6 Nm)

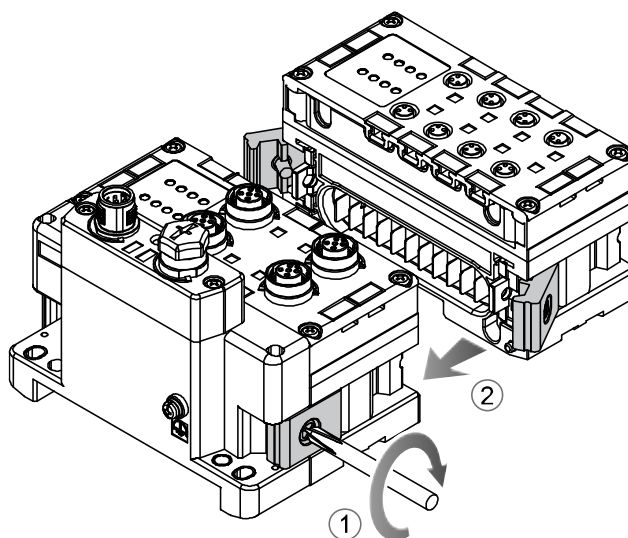

- (2) Add more units.  
Up to 9 units can be connected to one manifold.

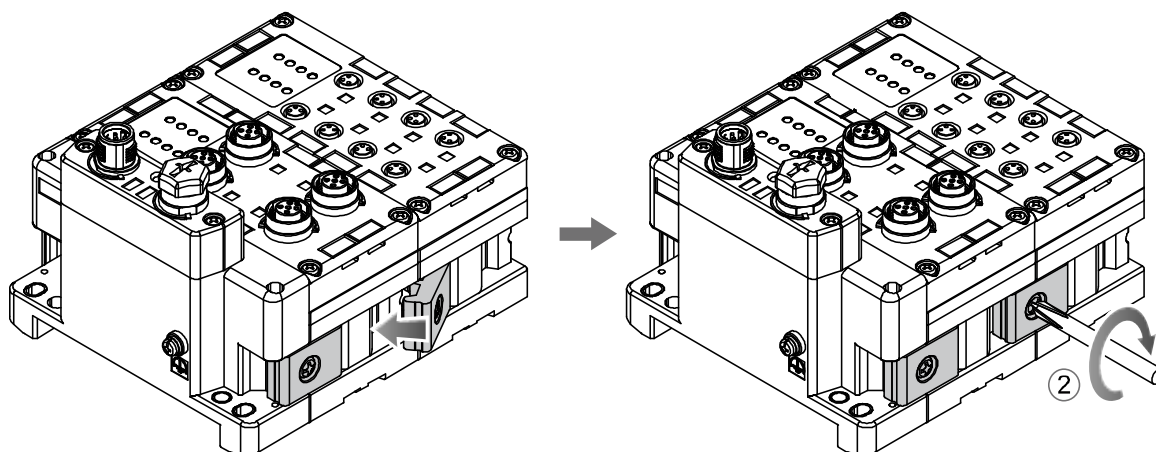

- (3) Connecting the wireless unit  
After connecting the required I/O units, connect the wireless unit.  
The connection method is as above.

(4) Mounting the valve plate. (Valve manifold not connected → Refer to page 19)

Mount the valve plate (EX600-ZMV#) to the valve manifold using the set screws (M3 x 8) provided with the product. (Tightening torque: 0.6 to 0.7 Nm)

Screw mounting  
places

SV: 2 places


S0700: 2 places

VQC1000: 2 places

VQC2000: 3 places


VQC4000: 4 places

SY: 2 places

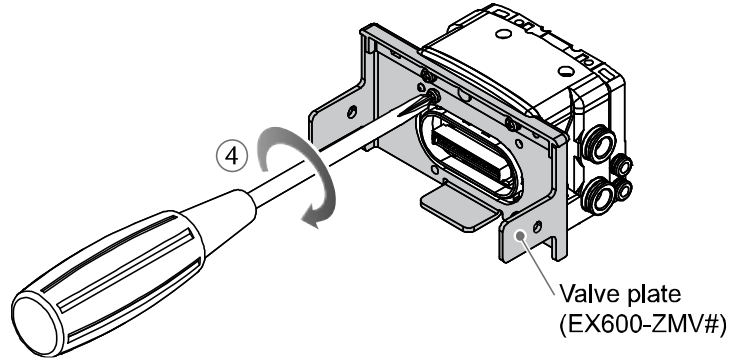


(5) Connect the wireless unit to the valve manifold.

Insert the valve plate into the valve plate mounting groove on the side of the wireless unit, and then fix both surfaces of the plate using the valve plate mounting screws (M4 x 6) provided with the product. (Tightening torque: 0.7 to 0.8 Nm)

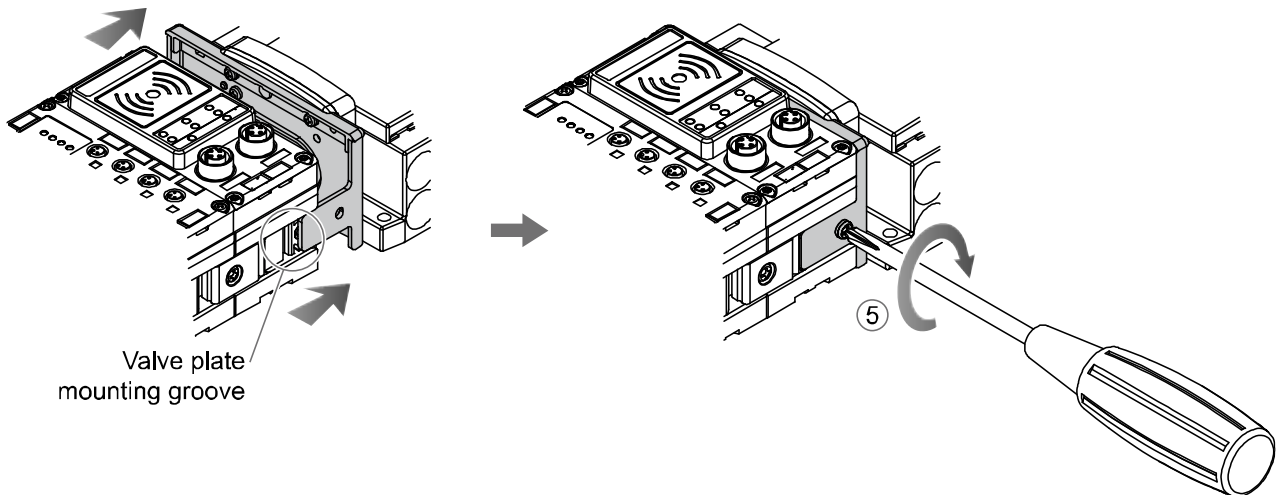

(6) When valve manifold is not connected.

Insert the end plate (EX600-EU1) into the valve plate mounting groove on the side of the wireless unit, and then fix both surfaces of the plate using the valve plate mounting screws (M4 x 6) provided with the product. (Tightening torque: 0.7 to 0.8 Nm)

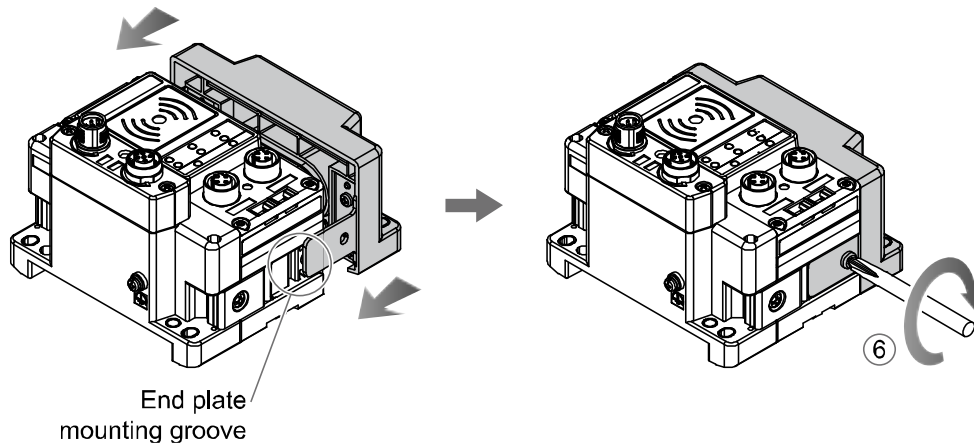

• Handling Precautions


- Do not connect units with power supplied.
- Be careful not to drop the nut for the joint bracket.
- Tighten the screws to the specified torque.  
Insufficient tightening may lead to equipment malfunction, injury or equipment damage.

# Mounting and Installation


## ■ Installation

### • Direct mounting

- (1) When joining six or more units, fix the middle part of the complete EX600 unit with an intermediate reinforcing brace (EX600-ZMB1) before mounting, using 2-M4x5 screws. (Tightening torque: 0.7 to 0.8 Nm)

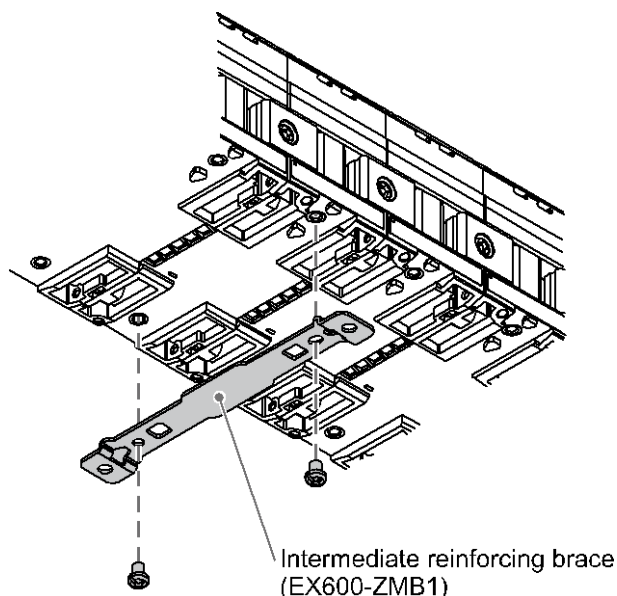

- (2) Mount and tighten the end plate and the valve manifold (intermediate reinforcing brace if necessary) at one end of the unit. (M4)  
(Tightening torque: 0.7 to 0.8 Nm)  
Refer to the Operation Manual of the applicable valve manifold for the mounting method of the valve side.

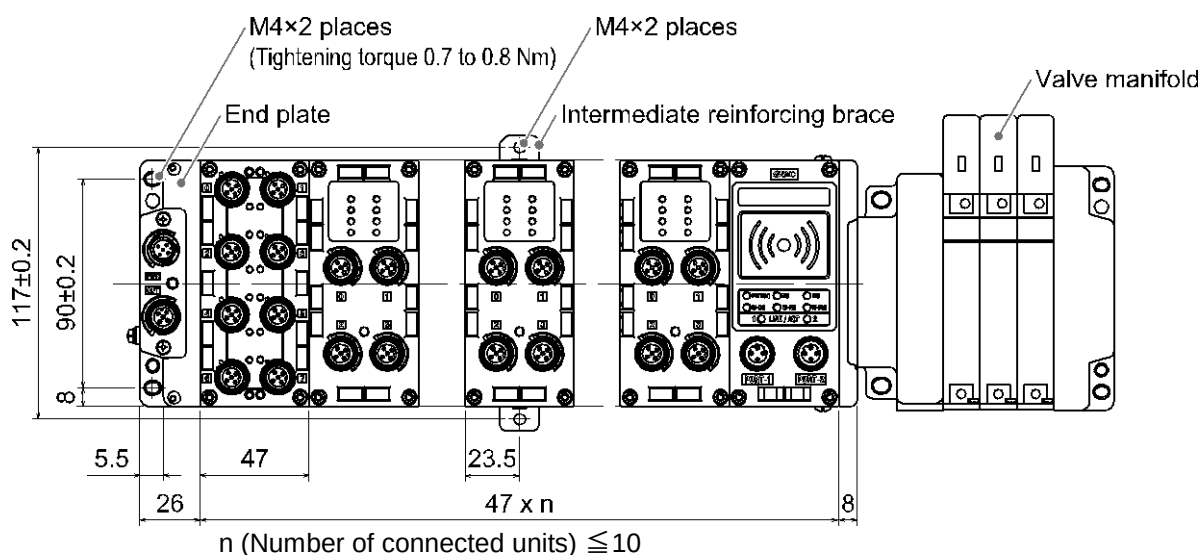


### • Handling Precautions


- When joining six or more units, fix the middle part of the complete unit with an intermediate reinforcing brace to prevent incorrect connection between the units due to deflection.

### •DIN rail mounting

- (1) When joining six or more units, fix the middle part of the complete EX600 unit with an intermediate reinforcing brace (EX600-ZMB2) for DIN rail before mounting, using 2-M4 x 6 screws.  
(Tightening torque: 0.7 to 0.8 Nm)
- (2) Mount the end plate bracket (EX600-ZMA2) to the end plate using 2-M4 x 14 screws.  
(Tightening torque: 0.7 to 0.8 Nm) For the SY series, use the end plate bracket (EX600-ZMA3).

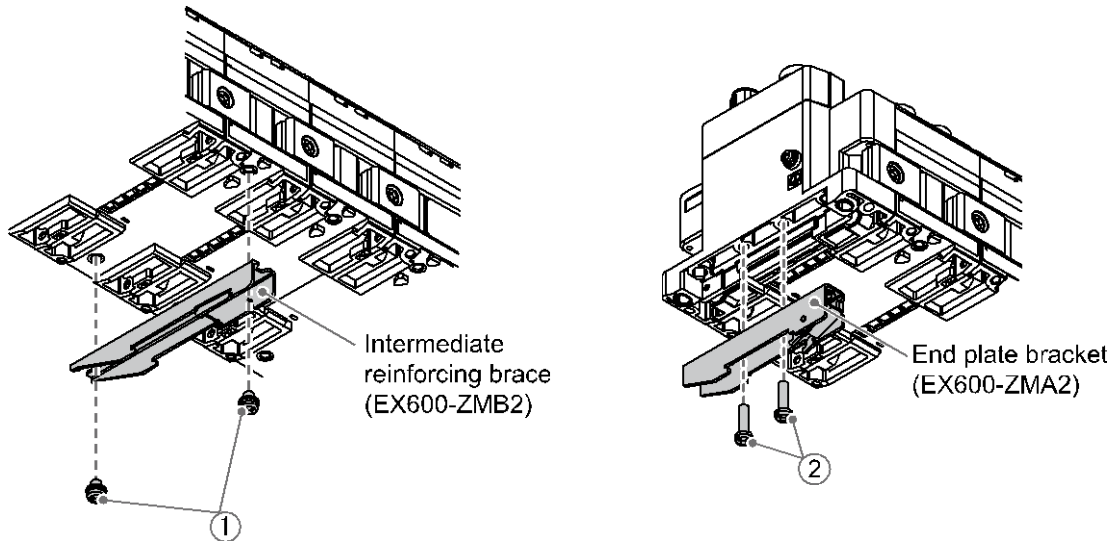

- (3) Hook the DIN rail mounting groove on to the DIN rail.
  - (4) Press the manifold using its side hooked to the DIN rail as a fulcrum until the manifold is locked.
  - (5) Fix the end plate bracket (EX600-ZMA2) to the manifold using the M4 x 20 screws provided with the product. (Tightening torque: 0.7 to 0.8 Nm)
- Refer to the Operation Manual of the applicable valve manifold for the mounting method of the valve side.

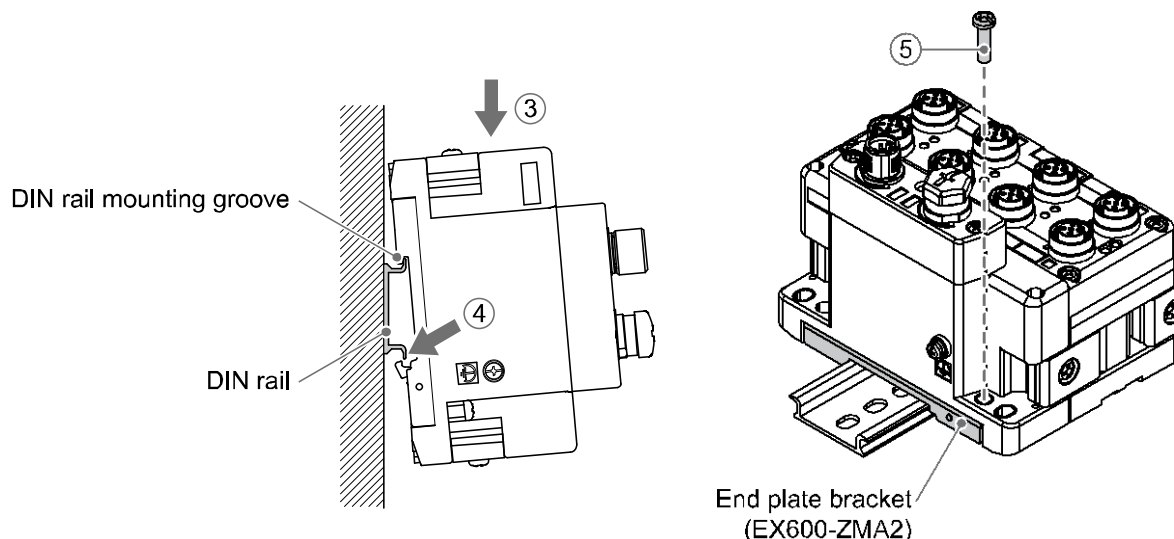


### • Handling Precautions

- When joining six or more units, fix the middle part of the complete unit with an intermediate reinforcing brace to prevent incorrect connection between the units due to deflection.

#### •Mounting the marker


The signal name of the input or output devices and unit address can be written on the marker, and can be installed on each unit.

Mount the marker (EX600-ZT1) into the marker groove as required.

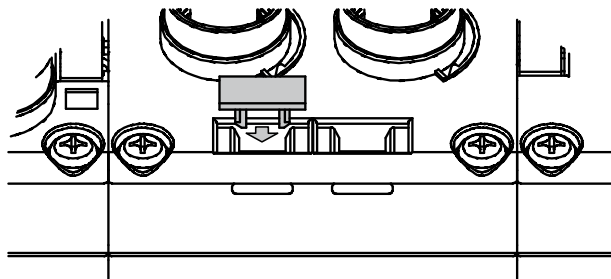


## Model Indication and How to Order

### •Base

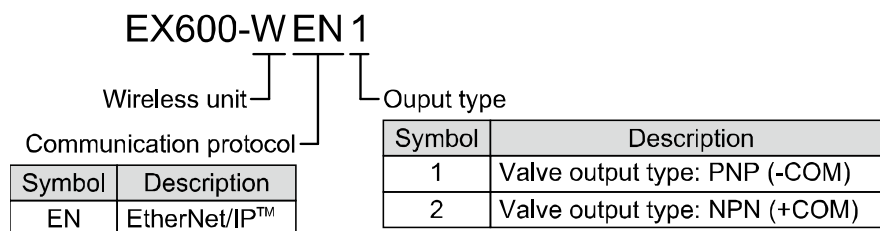


### •Remote

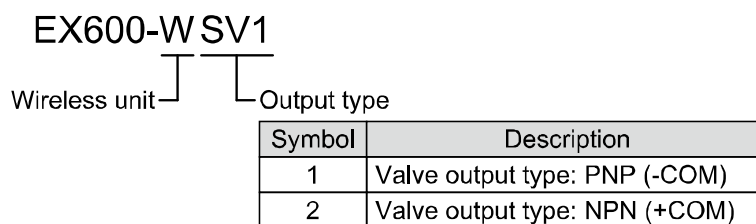




## Summary of Product Parts

### •Base

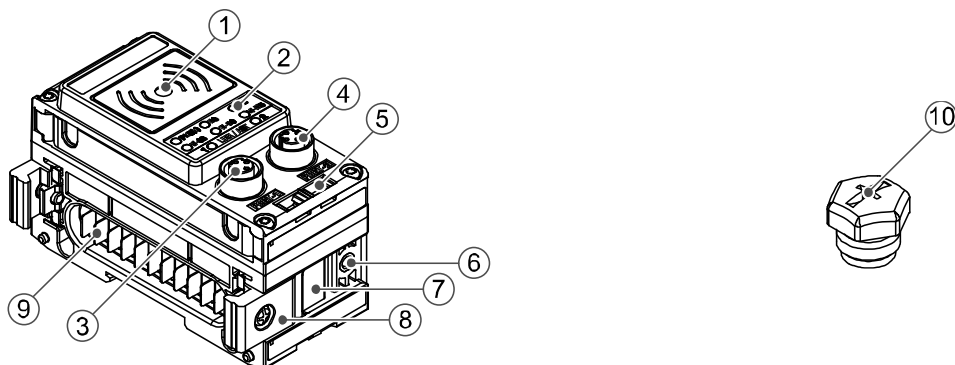

| No. | Item                                | Application                                                                                        |
|-----|-------------------------------------|----------------------------------------------------------------------------------------------------|
| 1   | Area close to NFC antenna           | This area is in close contact with the NFC reader/writer.<br>"O" is the center of the NFC antenna. |
| 2   | Status indication LED               | LED display to indicate the unit status.                                                           |
| 3   | Connector (PORT-1)                  | Fieldbus input/output cable connection.                                                            |
| 4   | Connector (PORT-2)                  | Fieldbus input/output cable connection.                                                            |
| 5   | Marker groove                       | Marker(EX600-ZT1) can be mounted.                                                                  |
| 6   | Screw hole for valve plate mounting | For fixing the valve plate.                                                                        |
| 7   | Valve plate mounting groove         | Groove to insert the valve plate.                                                                  |
| 8   | Joint bracket                       | Bracket for mounting adjacent units.                                                               |
| 9   | Unit connector (plug)               | Transfers signals to the next unit and supplies power.                                             |
| 10  | Seal cap (1 pc.)                    | To be mounted on unused connectors (PORT 1 or PORT 2).                                             |

### •Remote

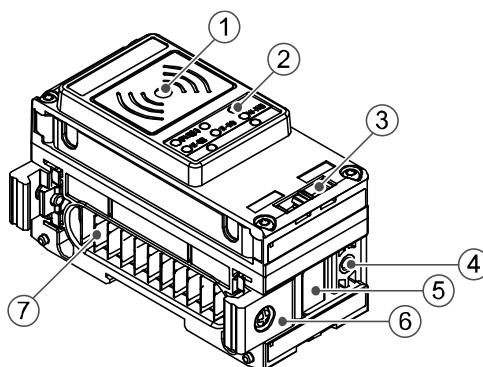

| No. | Item                                | Application                                                                                        |
|-----|-------------------------------------|----------------------------------------------------------------------------------------------------|
| 1   | Area close to NFC antenna           | This area is in close contact with the NFC reader/writer.<br>"O" is the center of the NFC antenna. |
| 2   | Status indication LED               | LED display to indicate the unit status.                                                           |
| 3   | Marker groove                       | Marker(EX600-ZT1) can be mounted.                                                                  |
| 4   | Screw hole for valve plate mounting | For fixing the valve plate.                                                                        |
| 5   | Valve plate mounting groove         | Groove to insert the valve plate.                                                                  |
| 6   | Joint bracket                       | Bracket for mounting adjacent units.                                                               |
| 7   | Unit connector (plug)               | Transfers signals to the next unit and supplies power.                                             |

## ■Connector (Base only)



This system is operated using power supplied from the EX600-ED\* end plate.  
Refer to the end plate details for the power supply connection.

The base is connected to the upper level communication (Ethernet). The connector has 2 ports, PORT-1 and PORT-2, and both ports can connect to Ethernet.

The EtherNet/IP™ topology corresponds to star, line, tree and DLR (Device Level Ring).

### •Connector pin No.


#### M12 4-pin Socket D code
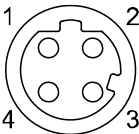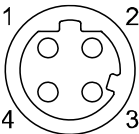
| Connector                                                                         |                                                                                   | Pin No. | Signal name |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------|-------------|
| PORT-1                                                                            | PORT-2                                                                            |         |             |
|  |  | 1       | TX+         |
|                                                                                   |                                                                                   | 2       | RX+         |
|                                                                                   |                                                                                   | 3       | TX-         |
|                                                                                   |                                                                                   | 4       | RX-         |

Ethernet connector of base

## LED Display

### ■LED indication of base

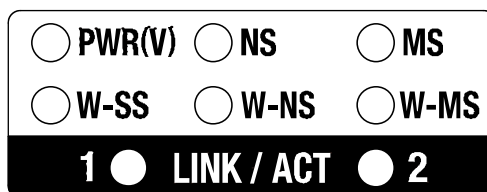

LED indication of base


### •LED specifications of base

| LED name | Function                                                               | Colour of LED             | Operation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|------------------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PWR (V)  | Power supply voltage for output (US2)                                  | Green LED is ON.          | Power supply voltage for output (US2) is normal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|          |                                                                        | Red LED flashes.          | Power supply voltage for output (US2) is abnormal. (Indication only. The product can be operated) (Power Supply voltage monitor (Output) is valid)                                                                                                                                                                                                                                                                                                                                                                                                                |
|          |                                                                        | OFF                       | Power supply for control and input (US1) is not supplied.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| NS       | EtherNet/IP™ connection status                                         | Green LED is ON.          | EtherNet/IP™ communication is established.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|          |                                                                        | Green LED flashes.        | EtherNet/IP™ communication is not established.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|          |                                                                        | Red LED flashes.          | EtherNet/IP™ communication time out.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|          |                                                                        | Red LED is ON.            | Duplicated IP addresses are detected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|          |                                                                        | OFF                       | IP address not set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| MS       | Base system status                                                     | Green LED is ON.          | Base is normal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|          |                                                                        | Green LED flashes.        | EtherNet/IP™ communication is not connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|          |                                                                        | Red LED flashes.          | Restorable error is detected. (LED flashes when more than one diagnostic information item is detected.)<br>•Abnormal power supply voltage level for control and input (Power Supply voltage monitor (Control/Input) is valid)<br>•Excessive I/O setting inputs/outputs<br>•Analogue I/O upper and lower set limit exceeded<br>•Analogue Input range upper and lower limit exceeded<br>•Abnormal number of remote connections<br>•Error in communication between units<br>•EX600 I/O unit detects diagnostic information<br>•Valve diagnostic information detected |
|          |                                                                        | Red LED is ON.            | Non-restorable error is detected. (e.g. Hardware failure)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|          |                                                                        | OFF                       | Power supply for control and input (US1) is not supplied.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|          |                                                                        |                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| W-SS     | Radio wave receiving intensity (For communication from remote to base) | Green LED is ON.          | Received power level of all remote is 3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|          |                                                                        | Green LED flashes. (1 Hz) | There are connected remote with received power level 2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|          |                                                                        | Green LED flashes. (2 Hz) | There are connected remote with received power level 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|          |                                                                        | Red LED flashes.          | No remote connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|          |                                                                        | OFF                       | Remote is not registered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

| LED name                | Function                                           | Colour of LED       | Operation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------|----------------------------------------------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| W-NS                    | Wireless communication connection status           | Green LED is ON.    | All remote are connected correctly.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                         |                                                    | Green LED flashes.  | There are unconnected remote.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                         |                                                    | Red LED flashes.    | All remote are unconnected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                         |                                                    | Red LED is ON.      | All remote are unconnected.<br>(non-restorable error in wireless communication)                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                         |                                                    | Red/green           | Wireless communication connection is under construction.<br>(Pairing)                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                         |                                                    | Orange LED is ON.   | Forced output mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                         |                                                    | OFF                 | Remote is not registered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| W-MS                    | Remote connection system status                    | Green LED is ON.    | Remote is normal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                         |                                                    | Red LED flashes.    | Restorable error is detected (LED flashes when more than one diagnostic information item is detected)<br>•Abnormal power supply voltage level for control and input (US1)<br>•Abnormal power supply voltage level for output (US2)<br>•Excessive I/O setting inputs/outputs<br>•Analogue I/O upper and lower set limit exceeded<br>•Analogue Input range upper and lower limit exceeded<br>•Error in communication between units<br>•EX600 I/O unit detects diagnostic information<br>•Valve diagnostic information detected |
|                         |                                                    | Red LED is ON.      | Non-restorable error is detected. (e.g. Hardware failure)                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                         |                                                    | OFF                 | No remote connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| LINK/ACT1<br>LINK/ACT2. | Communication status of EtherNet/IP™ ports 1 and 2 | Green LED is ON.    | Link, No Activity (100 Mbps)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                         |                                                    | Green LED flashes.  | Link, Activity (100 Mbps)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                         |                                                    | Orange LED is ON.   | Link, No Activity (10 Mbps)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                         |                                                    | Orange LED flashes. | Link, Activity (10 Mbps)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                         | 100 Mbps: Green<br>10 Mbps: Orange                 | Red LED is ON.      | IP address has been duplicated.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                         |                                                    | OFF                 | EtherNet/IP™ is not connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

\*: If there are multiple conditions for LED ON/Flashing, the detailed information can be seen only when the setting of the diagnostic information is "Simple" or "Detailed".

## ■LED indication of remote

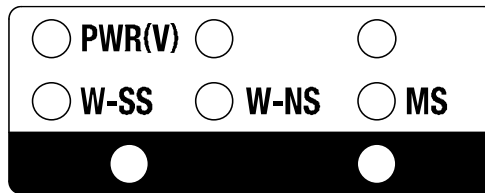

LED indication of remote


### •LED Indication of remote

| LED name | Function                                                           | Colour of LED             | Operation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------|--------------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PWR (V)  | Power supply voltage for output (US2)                              | Green LED is ON.          | Power supply voltage for output (US2) is normal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|          |                                                                    | Red LED flashes.          | Power supply voltage for output (US2) is abnormal. (Indication only. The product can be operated) (Power Supply voltage monitor (Output) is valid)                                                                                                                                                                                                                                                                                                                                                                      |
|          |                                                                    | OFF                       | Power supply for control and input (US1) is not supplied.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| W-SS     | Radio wave receiving intensity (Communication from base to remote) | Green LED is ON.          | Received power level is 3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|          |                                                                    | Green LED flashes. (1 Hz) | Received power level is 2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|          |                                                                    | Green LED flashes. (2 Hz) | Received power level is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|          |                                                                    | Red LED flashes.          | Wireless communication is not connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|          |                                                                    | OFF                       | Base is not registered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| W-NS     | Wireless communication connection status                           | Green LED is ON           | Remote is connected correctly.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|          |                                                                    | Red LED flashes.          | No remote connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|          |                                                                    | Red LED is ON.            | No remote connected. (non-restorable error in wireless communication)                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|          |                                                                    | Red/green                 | Wireless communication connection is under construction. (Pairing)                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|          |                                                                    | Orange LED is ON.         | Forced output mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|          |                                                                    | OFF                       | Base is not registered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| MS       | Remote system status                                               | Green LED is ON.          | Remote is normal.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|          |                                                                    | Red LED flashes.          | Restorable error is detected. (LED flashes when more than one diagnostic information item is detected.)<br>•Abnormal power supply voltage level for control and input (Power Supply voltage monitor (Control/Input) is valid)<br>•Excessive I/O setting inputs/outputs<br>•Analogue I/O upper and lower set limit exceeded<br>•Analogue Input range upper and lower limit exceeded<br>•Error in communication between units<br>•EX600 I/O unit detects diagnostic information<br>•Valve diagnostic information detected |
|          |                                                                    | Red LED is ON.            | Non-restorable error is detected. (e.g. Hardware failure)                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|          |                                                                    | OFF                       | Power supply for control and input (US1) is not supplied.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

\*: If there are multiple conditions for LED ON/Flashing, the detailed information can be seen only when the setting of the diagnostic information is "Simple" or "Detailed".

## Setting and Adjustment

### ■Flow chart for using the wireless system

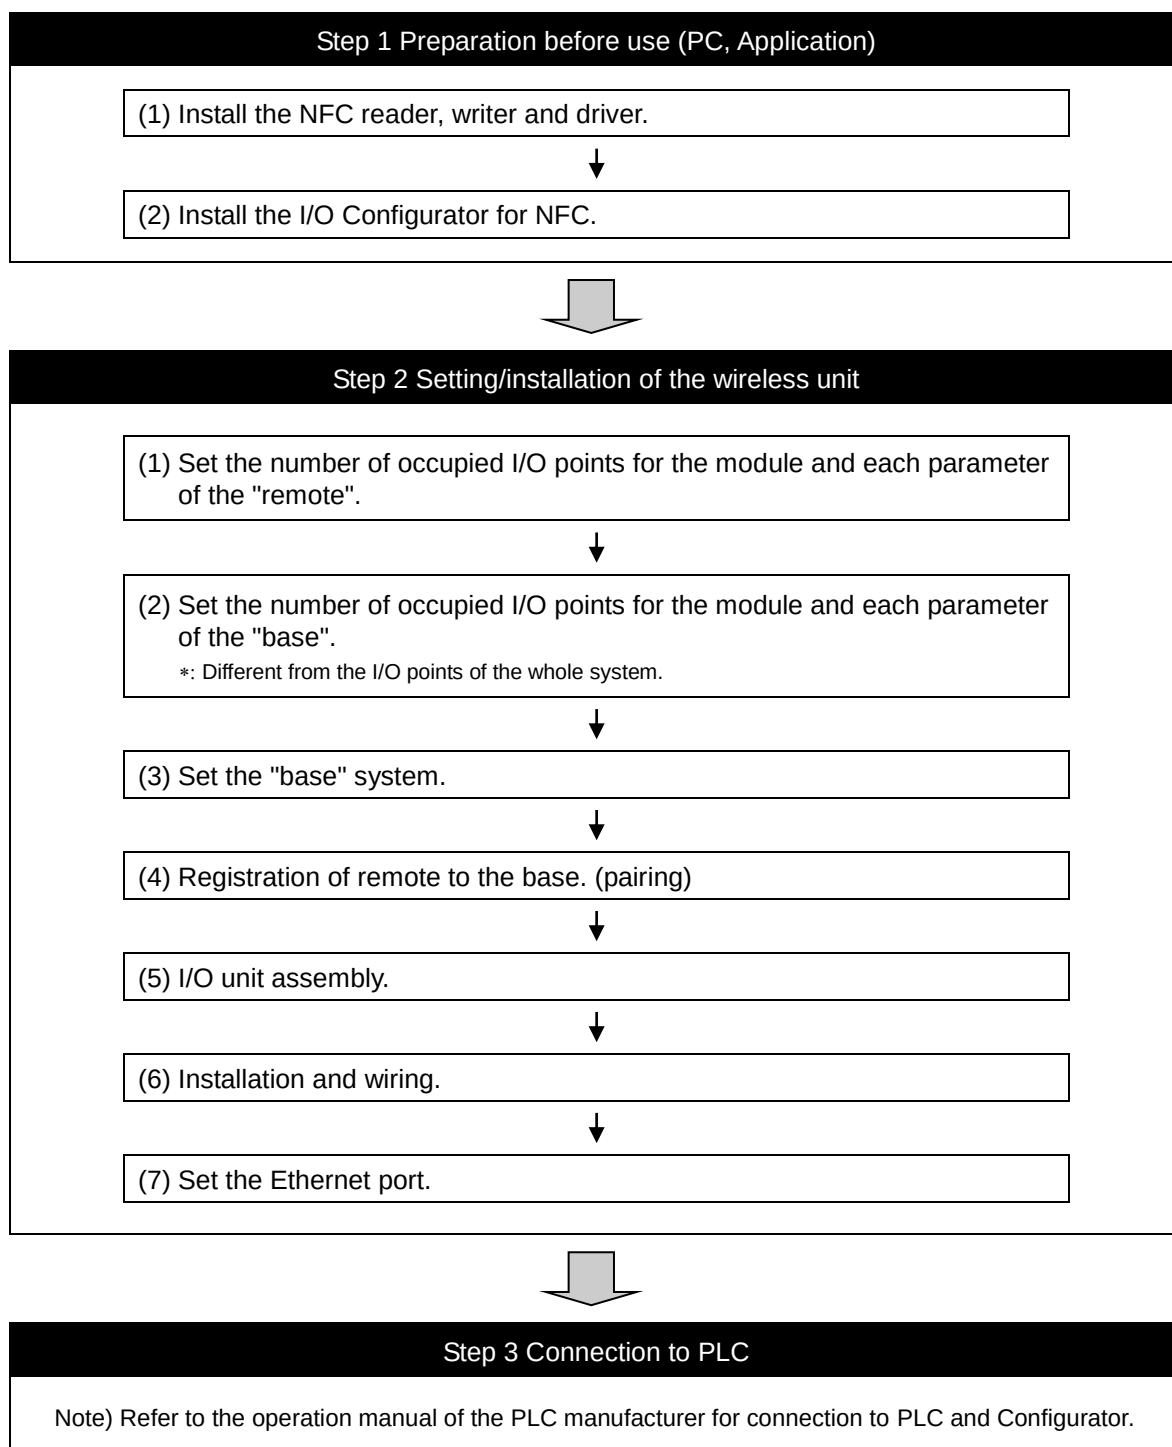

With the above settings, it is possible to control the upper level controller.

Refer to the operation manual for each manufacturer for how to set the controller and the PLC.

Refer to the I/O Configurator for NFC operation manual for details of the I/O Configurator.


## ■ Setting

### • SMC wireless system I/O Configurator for NFC

The SMC wireless system I/O Configurator for NFC can be used to check the parameter setting of the wireless unit and the contents and status of the constructed wireless system, using an NFC reader/writer and a PC.

There are two types of settable parameters with the I/O Configurator: the parameters which can be read or written **when no power is supplied to the product** and the parameters which can be read or written **only when the power is supplied to the product**.

The connection details of the I/O Configurator for NFC and the wireless unit is shown in the below figure.

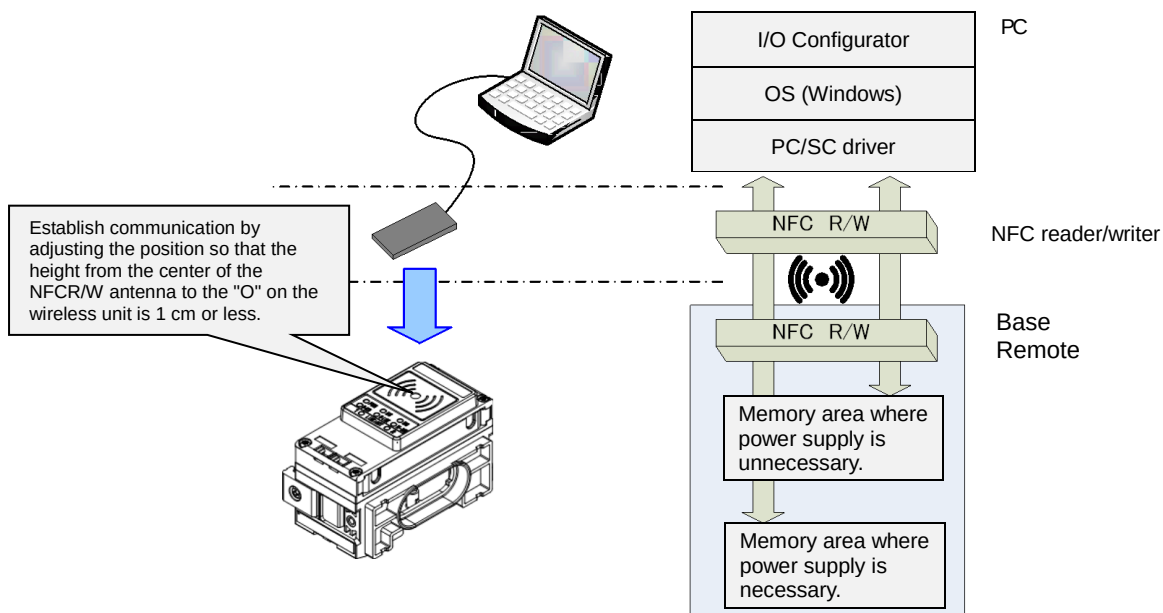

Connection details of the I/O Configurator for NFC and the wireless unit

To use the I/O Configurator for NFC, it is necessary to install a driver and set the NFC reader/writer on the PC beforehand.

Refer to the Operation Manual for the I/O Configurator for further details.

\*: About the communication timing

The NFC communication is not accessed all the time. Therefore, it is necessary to update the contents displayed on the screen by clicking the "Refresh button" when reading the parameters. The parameters changed are valid after re-supplying the power supply or by pressing the reset button in the I/O Configurator screen. As the parameter setting requires time for settlement, do not turn off the power supply for 2 seconds.

\*: Establishing communication after changing units

As the settings between the base and the remote are different, it is necessary to update the displayed parameter by clicking the "Refresh button" on the screen of the I/O Configurator for NFC after changing the unit in which the parameter is set.


\*: Operation already checked. NFC reader/writer

Refer to the operation manual for the I/O Configurator (NFC version)

\*: I/O Configurator (Web version)

This operation manual explains the outline of the setting using the I/O Configurator (NFC). I/O Configurator (Web) is used to set the module I/O occupied points and parameters for the "base" and parameters for the "I/O devices". Refer to the operation manual for the I/O Configurator (Web version).

## •Configuration of the I/O Configurator for NFC

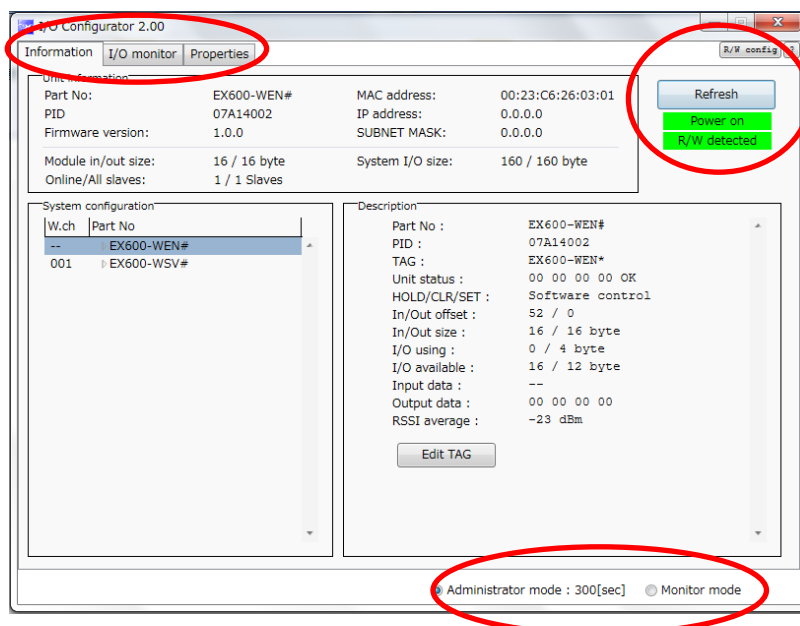

The I/O Configurator for NFC is mainly configured using the following three tabs.

### Information tab

- Module information: shows information about the wireless unit.
- System configuration: shows the configuration information (connected units) of the base/remote.  
The system configuration of only the base is shown in a tree-like profile.
- Detailed information: shows detailed information about the unit selected in the system configuration.

### Input/Output monitor tab

- Input: shows the input map information of the wireless unit.
- Output: shows the output map information of the wireless unit.

### Setting tab

- Set item: Sets the parameter required to operate the base/remote.
- \*: The contents of the setting tab is different between the base and the remote.  
Refer to the wireless system parameter list for details.

The function of the upper right button of the "I/O Configurator (NFC)" is described below.

#### Refresh button

- Clicking the refresh button while holding the NFC reader/writer to the base and remote can reflect the setting of the base/remote on the I/O Configurator screen.

#### Power supply ON/OFF button

- "Power supply ON" is displayed when power is supplied to the base/remote, and "Power supply OFF" is displayed when power is not supplied.

#### R/W detection/ R/W no-detection button

- When the NFC reader/writer (R/W) is inserted into the USB port of the PC and the PC detects the NFC reader and writer, "R/W detected" is displayed. When the PC cannot detect it, "R/W undetected" is displayed.

#### NFC setting button

- When the NFC setting button is clicked, "NFC port/PaSoRi" is displayed on the setting screen.




The I/O Configurator for NFC has two modes: Administrator mode which can change the parameter setting and Monitor mode which can only read the parameter.

Administrator mode: available to read and write the parameters.


Monitor mode: available to read the parameter only. Writing parameter is not available.

Enter the correct password to enter administrator mode.

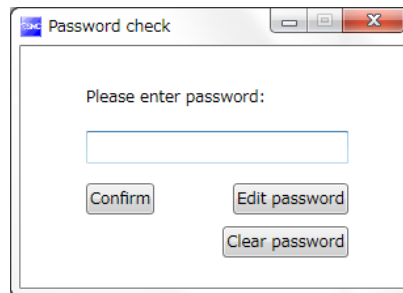

Default password: admin

If the password is forgotten, use the [Clear password] function. When the [Clear password] button is pressed, the password clear window will appear. The password will be cleared when the master factory key is entered. Then it is possible to enter administrator mode without inputting the password.

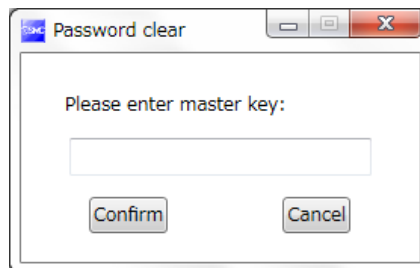

Master key: ADMIN

A password can be set using Administrator mode to prevent mischievous action by others. It is recommended to change the password at the time of first accessing.

# •Wireless system parameter list

## •Base setting parameters

| Classification   | Parameter name |                            | Set value                                                                  | Default                  | Setting when not energized | Note                                                                                                                                                     |
|------------------|----------------|----------------------------|----------------------------------------------------------------------------|--------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Base setting     | a)             | Hold/Clear (unit)          | Clear/Hold/Software control                                                | CLEAR                    | Available                  | Setting of output operation status when EtherNet/IP™ communication is disconnected.                                                                      |
|                  | b)             | Input size                 | 0 to 128 points (0 to 16 bytes)<br>Increase and decrease by 16 points.     | 128 points/<br>16 byte   | Available                  |                                                                                                                                                          |
|                  | c)             | Output size                | 0 to 128 points (0 to 16 bytes)<br>Increase and decrease by 16 points.     | 128 points/<br>16 bytes  | Available                  |                                                                                                                                                          |
|                  | d)             | Valve manifold output size | 0 to 32 points (0 to 4 bytes)<br>Increase and decrease by 8 points.        | 32 points/<br>4 bytes    | Available                  | The valve output size is included in the output size of each station. The number of effective points is limited within the set range of the output size. |
|                  | e)             | Wireless communication     | Active/Idle                                                                | Active                   | Available                  | If it is set to "Idle", the wireless communication is disconnected.                                                                                      |
|                  | f)             | Unit address order         | Mode 1/<br>Mode 2                                                          | Mode 1                   | Available                  | Mode 1: Allocation to the right from the end plate.<br>Mode 2: Allocation to the left from the wireless unit.                                            |
| Ethernet setting | a)             | IP address type            | Manual/BOOTP, DHCP                                                         | Manual                   | Available                  | The IP address can be input manually only when "Manual" is selected.                                                                                     |
|                  | b)             | Auto MDI/MDI-X             | Auto MDI/MDI-X                                                             | Auto                     | Available                  |                                                                                                                                                          |
|                  | c)             | Duplex                     | Full duplex/Half duplex                                                    | Full duplex              | Available                  |                                                                                                                                                          |
|                  | d)             | Speed                      | Auto/100 Mbps/10 Mbps                                                      | Auto                     | Available                  |                                                                                                                                                          |
| System setting   | a)             | I/O mapping                | Auto mapping/fixed mapping                                                 | Fixed mapping            | Available                  | When the total size (byte) of the I/O mapping is an odd number, 1 byte will be added automatically so that an even number will be allocated.             |
|                  | b)             | System input size          | 16 to 1280 points (2 to 160 bytes)<br>Increase and decrease by 128 points. | 1280 points/<br>160 byte | Available                  | This is not settable when the I/O mapping is set to "Auto".                                                                                              |
|                  | c)             | System output size         | 16 to 1280 points (2 to 160 bytes)<br>Increase and decrease by 128 points. | 1280 points/<br>160 byte | Available                  | This is not settable when the I/O mapping is set to "Auto".                                                                                              |
|                  | d)             | Diagnostic allocation      | None/Simple/Detailed                                                       | Detailed                 | Available                  | Diagnostic information is allocated to the head of the input data of the I/O map.                                                                        |
|                  | e)             | Max remote                 | 0/15/31/63/127 pcs.                                                        | 15 pcs.                  | Available                  | The wireless channel equivalent to the number of set units is valid.                                                                                     |
|                  | f)             | DA refresh time            | 0.1/0.2/0.5/1/2/5/<br>10/30/60s                                            | 1s                       | Available                  | Set the sampling frequency of the analogue output equipment.                                                                                             |

| Classification      | Parameter name |                     | Set value                                                          | Default              | Setting when not energized | Note                                                                                                                                                             |
|---------------------|----------------|---------------------|--------------------------------------------------------------------|----------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote registration | a)             | Pairing             | Pairing disable/Pairing enable                                     | Pairing disable      | Available                  | Pairing disable: Remote cannot be registered (wireless communication to the registered remote will be established).<br>Pairing enable: Remote can be registered. |
|                     | b)             | Remote registration | Allocation and registration of the remote to the wireless channel. | No remote registered | Not available              |                                                                                                                                                                  |
|                     | c)             | Dummy               | Addition of dummy remote to the wireless channel                   | Dummy remote unset   | Not available              | Refer to dummy remote registration for details setting.                                                                                                          |

•Remote setting parameters

| Classification  | Parameter name |                            | Set value                                                              | Default                 | Setting when not energized | Note                                                                                                                                                             |
|-----------------|----------------|----------------------------|------------------------------------------------------------------------|-------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote setting  | a)             | Hold/Clear (unit)          | Clear/Hold/Software control                                            | Clear                   | Available                  | Setting of output operation status when EtherNet/IP™ communication is disconnected.                                                                              |
|                 | b)             | Input size                 | 0 to 128 points (0 to 16 bytes)<br>Increase and decrease by 16 points. | 128 points/<br>16 bytes | Available                  |                                                                                                                                                                  |
|                 | c)             | Output size                | 0 to 128 points (0 to 16 bytes)<br>Increase and decrease by 16 points. | 128 points/<br>16 bytes | Available                  |                                                                                                                                                                  |
|                 | d)             | Valve manifold output size | 0 to 32 points (0 to 4 bytes)<br>Increase and decrease by 8 points.    | 32 points/<br>4 bytes   | Available                  | The valve output size is included in the output size of each station. The number of effective points is limited within the set range of the output size.         |
|                 | e)             | Wireless communication     | Active/Idle                                                            | Active                  | Available                  | If it is set to "Idle", the wireless communication is disconnected.                                                                                              |
|                 | f)             | AD refresh time            | 0.1/0.2/0.5/1/2/5/<br>10/30/60s                                        | 1s                      | Available                  | Set the sampling frequency of the analogue input equipment.                                                                                                      |
|                 | g)             | Unit address order         | Mode 1/<br>Mode 2                                                      | Mode 1                  | Available                  | Mode 1: Allocation to the right from the end plate.<br>Mode 2: Allocation to the left from the wireless unit.                                                    |
| Pairing setting | a)             | Pairing                    | Pairing disable/Pairing enable                                         | Pairing disable         | Unavailable                | Pairing disable: Remote cannot be registered (wireless communication to the registered remote will be established).<br>Pairing enable: Remote can be registered. |

•Common parameter of base and the remote


| Classification | Parameter name |  | Set value       | Default                     | Setting when not energized | Note                                                                                                                                                                                         |
|----------------|----------------|--|-----------------|-----------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Information    | TAG            |  | Max. 15 letters | Product No.<br>(EX600-WEN#) | Available                  | Letters which can be input are half-width characters (alphabets, numbers, symbols) that correspond to ASCII code.<br>It is not possible to write to the remote during a non-energized state. |
|                |                |  |                 | Product No.<br>(EX600-WSV#) |                            |                                                                                                                                                                                              |

## •Detailed base parameters

The following four settings need to be performed to set the parameters of the base.

- (1) Base setting
- (2) Ethernet setting
- (3) System setting
- (4) Remote registration

### (1) Base setting

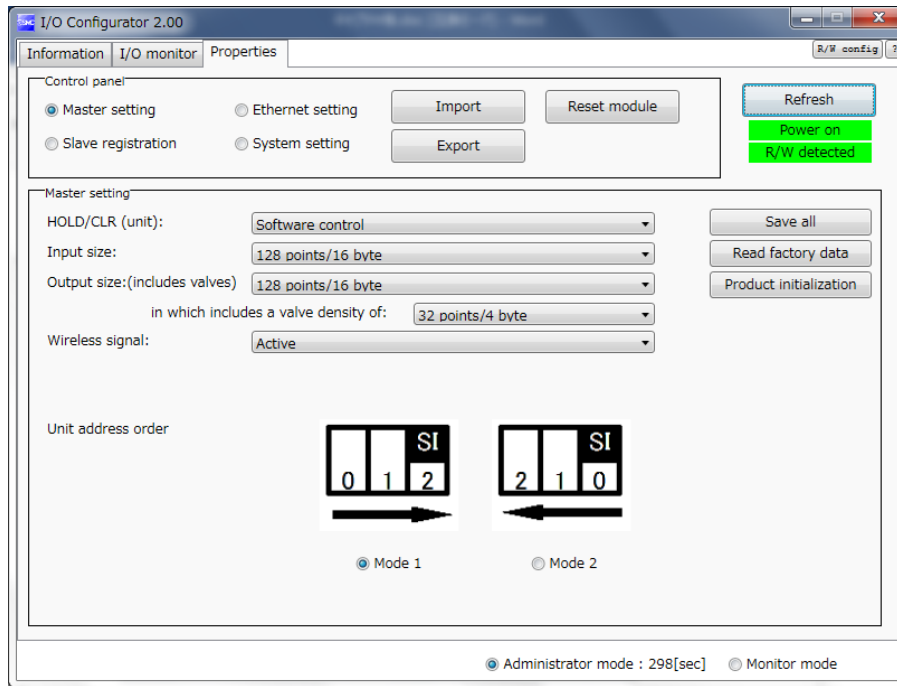

#### a) Hold/Clear (unit)

Define all settings in the output operation status when the EtherNet/IP™ communication is disconnected.

CLEAR: Clear the output.

HOLD: Fix the output at the current value.

Software control: Clear, Hold or Set can be set by software bit.

(The detailed setting of the Software control can be performed using the I/O Configurator for NFC.)

#### b) Input size

Set the number of inputs which can be controlled by the base.

Setting range: 0 to 128 points (0 to 16 bytes). Increase or decrease by 16 points.

#### c) Output size

Set the number of outputs which can be controlled by the base.

Setting range: 0 to 128 points (0 to 16 bytes). Increase or decrease by 16 points.

The output size includes the number of points of the valve manifold output.

#### d) Valve manifold output size

Set the number of outputs to be allocated to the valve manifold output from the number of points set in the Output size.

As the Valve manifold output size is included in the Output size, the number of effective points are limited within the setting range of the Output size.

Setting range: 0 to 32 points (0 to 4 bytes). Increase or decrease by 8 points.

e) Wireless communication

Define the operation status of wireless communication.

Active: Implement the wireless communication.

Idle: Disconnect the wireless communication.

f) Unit address order

Define the address allocation direction of the EX600 I/O units connected to the base.

The address allocation direction is selected by changing the mode to Mode 1 or Mode 2. Be careful about the I/O map. (Refer to the section "I/O Map" for details.)

Mode 1: Allocation from the end plate side to the right.

Mode 2: Allocation from the wireless unit side to the left.

## (2) Ethernet setting

The screenshot shows the 'I/O Configurator 2.00' window. The 'Properties' tab is active, and the 'Ethernet setting' radio button is selected in the 'Control panel'. The 'Ethernet setting' section displays the MAC address as '00:23:C6:26:03:01'. The 'IP address type' is set to 'Manual', and the 'IP address' is entered as '192.168.0.1'. There are buttons for 'Import', 'Export', 'Reset module', 'Refresh', 'Power on', 'R/W detected', 'Save all', and 'Read factory data'. The 'Auto MDI/MDI-X', 'Duplex', and 'Speed' settings are shown for both 'Port-1' and 'Port-2', all set to 'Auto'. At the bottom, the status bar indicates 'Administrator mode : 297[sec]' and 'Monitor mode'.

### a) IP address type

Select the IP address setting mode. Select the mode suitable for your network environment.

Manual: The IP address is set by inputting it directly.

(The IP address is valid only when "Manual" mode is selected.)

BOOTP, DHCP: The IP address is set automatically via the DHCP server.

### b) Auto MDI/MDI-X

Select settings for straight cable or crossed cable. Select the settings suitable for your environment.

Setting range: Auto/MDIX/MDI

### c) Duplex

Set the Duplex. Select the Duplex suitable for your environment.


Setting range: Full Duplex/Half Duplex

### d) Speed

Set the communication speed. Select the speed suitable for your environment.

Setting range: Auto/100 Mbps/10 Mbps

### (3) System setting

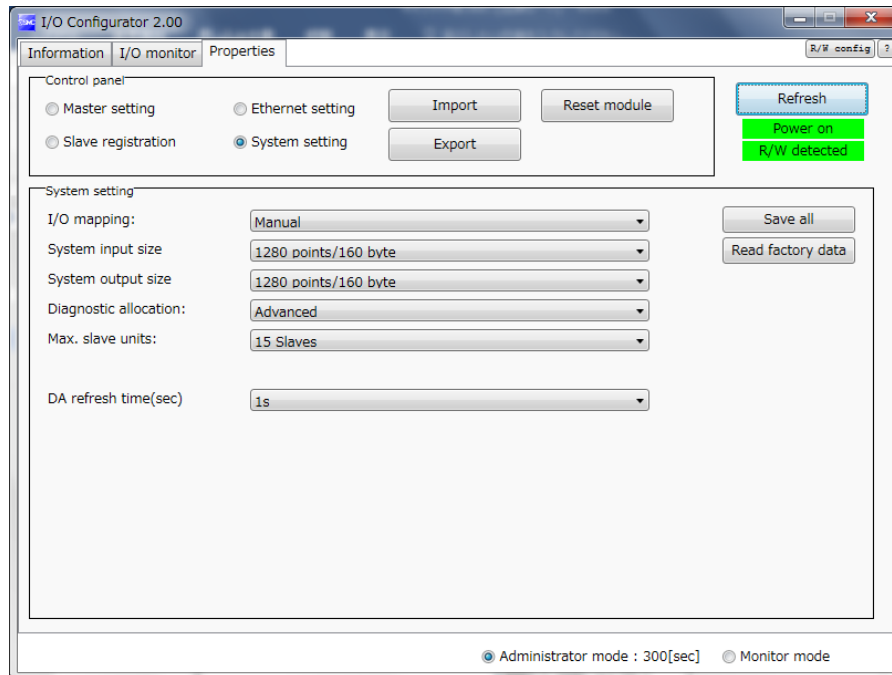

#### a) I/O mapping

Define the I/O mapping of the entire wireless system including the remote registered to the base.

Auto mapping: All I/O points mapped to the base and remote are identified and mapped automatically.

(The total number of connected I/O points is the total number of I/O points connected to the diagnostic information, base and remote.)

Fixed mapping: Fixed at the number of I/O points set in the System input size and System output size.

#### b) System input size

Set the number of inputs which can be controlled by the entire wireless system.

Setting range: 16 to 1280 points (2 to 160 bytes). Increase or decrease by 128 points.

#### c) System output size

Set the number of outputs which can be controlled by the entire wireless system.

Setting range: 16 to 1280 points (2 to 160 bytes). Increase or decrease by 128 points.

#### d) Diagnostic allocation

Set the diagnostic information allocated to the I/O map. (Refer to the section "Diagnostic allocation" for details.)

None: No diagnostic data

Simple: System diagnosis

Detailed: System diagnosis + Remote connection/diagnosis/registration information

#### e) Max remote

Set the number of remote which are registered to the base.

Wireless channels for the number of the set units are valid.

Setting range: 0/15/31/63/127 pcs.



f) DA refresh time

Analogue output update time


Set the data update time of the analogue output unit.

Setting range: 0.1/0.2/0.5/1/2/5/10/30/60s

Note) Analogue I/O unit

This product is applicable to the analogue I/O unit.

The initial setting of the update time is 1 second for input and output respectively.

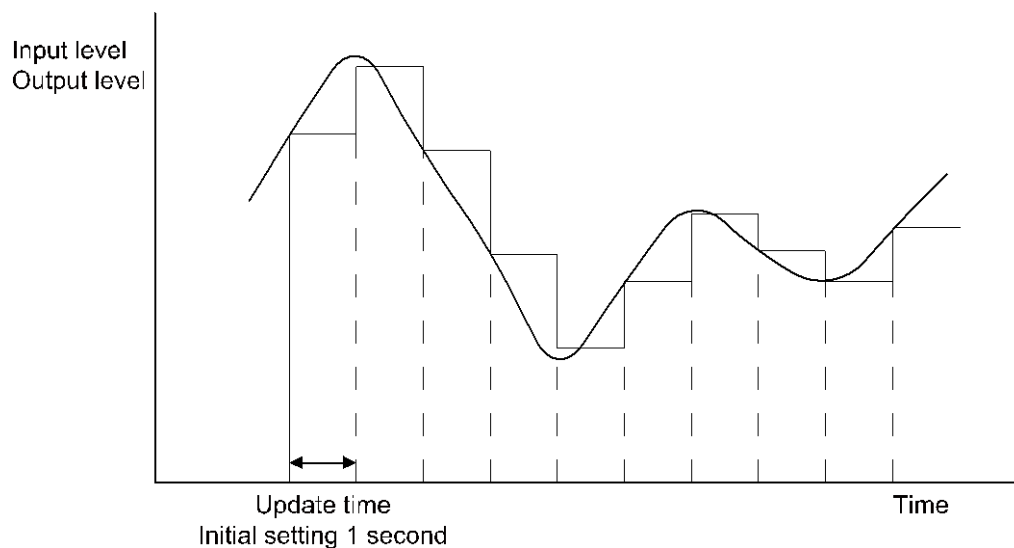

#### (4) Remote registration

Registration for wireless communication between the base and the remote.


For this wireless system, it is necessary to register the PID (Product ID) of each product to establish communication without interference from another network.

The minimum required settings for registration of the base are pairing (change of operation mode) and remote registration.

Wireless communication can be established even if the dummy remote is not registered. Register the dummy remote as necessary.



- After changing the operation mode in the Pairing, the mode is changed by clicking **Reset module** or by re-supplying power so that the mode will be changed to "Remote registration" or "Listening for connection".

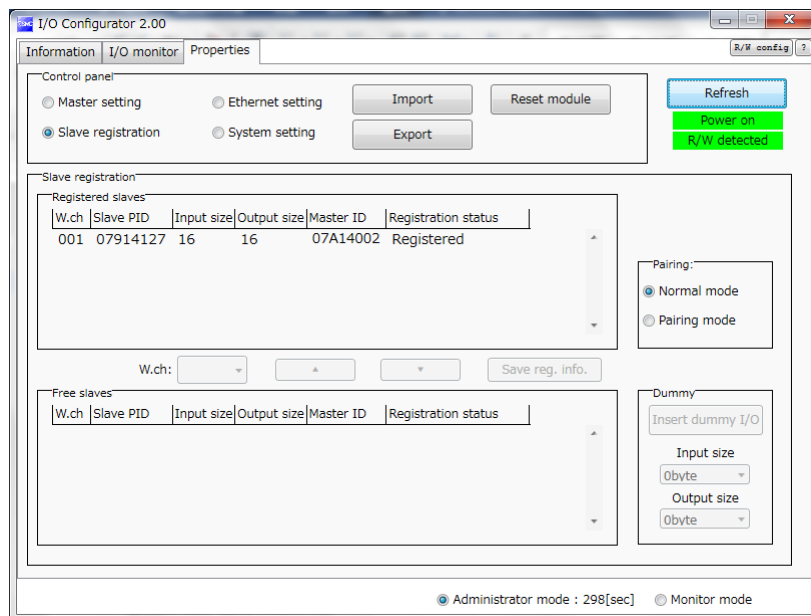

##### a) Pairing

Select operation mode of the base.

The remote can be registered only when "Pairing enable" is selected.

Pairing disable: Remote cannot be registered (Communication with the registered remote will be established).

Pairing enable: Remote and dummy remote can be registered.

##### b) Remote registration

Register and delete the remote to/from the base; and check the registration status of the remote.

Refer to remote registration procedure for details.

##### c) Dummy

Register the dummy remote to the wireless channel.


Refer to remote registration procedure for details.

## •Detailed remote parameters

The following two settings need to be performed to set the parameters of the remote.

- (1) Remote setting
- (2) Pairing setting

### (1) Remote setting

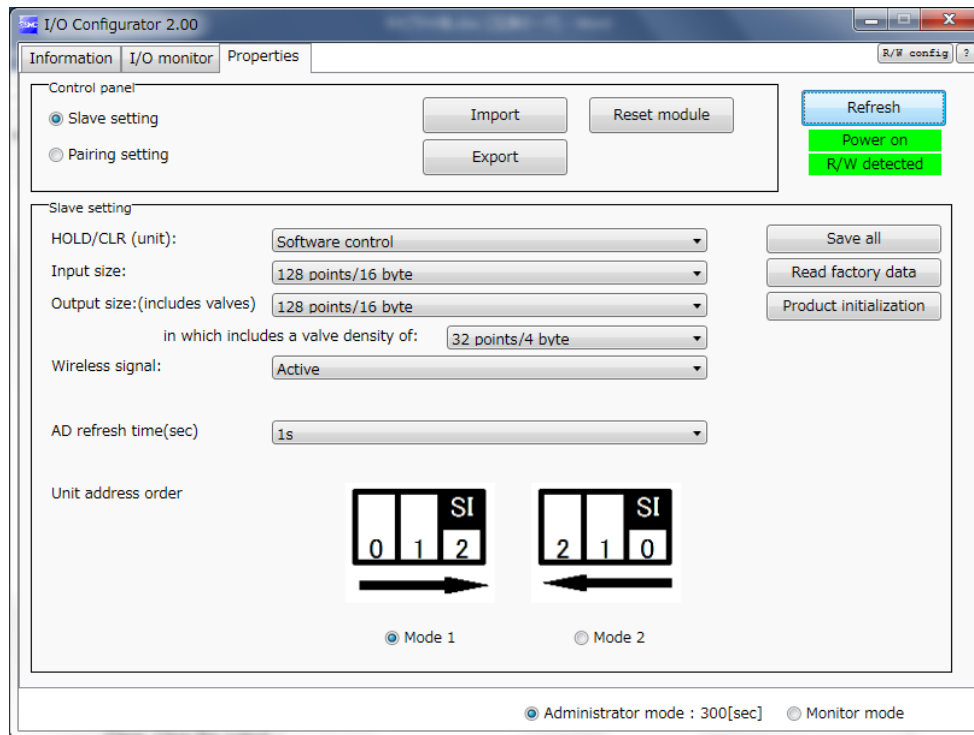

#### a) Hold/CLR (unit)

Define settings for the output operation status when the EtherNet/IP™ communication is disconnected.

Clear: Clear the output.

Hold: Fix the output at the current value.

Software control: Clear, Hold or Set can be set by software bit.

(The detailed setting of the Software control can be performed using the I/O Configurator for NFC.)

#### b) Input size

Set the number of inputs which can be controlled by the remote.

Setting range: 0 to 128 points (0 to 16 bytes). Increase or decrease by 16 points.

#### c) Output size

Set the number of outputs which can be controlled by the remote.

Setting range: 0 to 128 points (0 to 16 bytes). Increase or decrease by 16 points.

#### d) Valve manifold output size

Set the number of outputs to be allocated to the valve manifold output from the number of points set in the Output size.

As the Valve manifold output size is included in the Output size, the number of effective points are limited within the setting range of the Output size.

Setting range: 0 to 32 points (0 to 4 bytes). Increase or decrease by 8 points.

e) Wireless communication

Define the operation status of wireless communication.

Active: Implement the wireless communication.

Idle: Disconnect the wireless communication.

f) AD refresh time

Set the data update time of the analogue input unit.

Setting range: 0.1/0.2/0.5/1/2/5/10/30/60s

g) Unit address order

Define the address allocation direction of the EX600 I/O units connected to the remote.

The address allocation direction is selected by changing the mode to Mode 1 or Mode 2. Be careful about the I/O map.

Mode 1: Allocation from the end plate side to the right.

Mode 2: Allocation from the wireless unit side to the left.


(2) Pairing setting

Setting for wireless communication between the base and remote.

The required setting for wireless registration of the remote is Pairing (change of operation mode) only.

After changing the operation mode in the Pairing, the mode is changed by clicking Reset module or by re-supplying power so that the mode will be changed to "Base registration" or "Listening for connection".

\* : After switching the operation mode with the Pairing setting, check that the W-NS LED on the wireless unit flashes in green and red alternately.

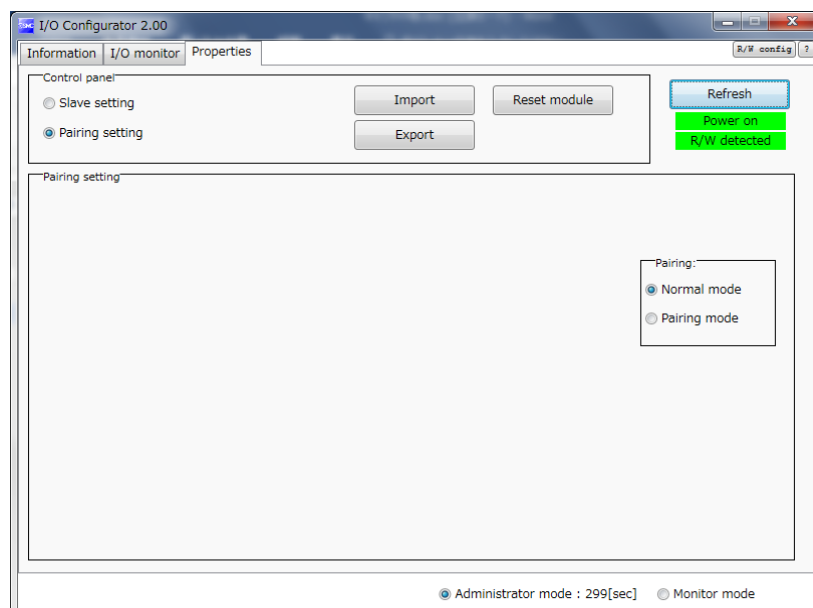

a) Pairing

Select the operation mode of the remote.

The base can be registered only when "Pairing enable" is selected.

Pairing disable: Remote cannot be registered.

(Communication with the registered remote will be established)

Pairing enable: Remote and reserve remote can be registered.

## •Wireless unit registration procedure

•Registration procedure for the base and the remote

(1) **Change of operation mode** of the remote

Change the pairing setting of the remote to "Pairing enable" and reflect the change by clicking **Reset module** or by re-supplying power.

(2) **Change of operation mode** of the base

Change the pairing setting of the remote registration of the base to "Pairing enable" and reflect the change by clicking **Reset module** or by re-supplying power. Then, update the contents on the screen by clicking **Refresh all**.

(Registered remote information will be displayed in the free remote.)

(3) **Selection of wireless channel**

Select the required wireless channel in the remote setting of the base and select the remote to be registered so that items in the box "Remote to be registered" will be moved to the box "Registered remote".

(Registration is not complete at this point. The status of the remote will be shown as "Waiting for registration".)

(4) **Determination of information to be registered**

Click **Save the remote** to the base.

Then, click **Refresh all** to confirm that the setting has been reflected.

(When registration has been completed correctly, the status of the selected remote will change from "Waiting for registration" to "registered".)

(When the remote is registered correctly, the mode will change automatically.)

(5) **Change of operation mode** of the base

Change the pairing setting on the remote registration screen of the base to "Pairing disable" and reflect the change by clicking **Reset module** or by re-supplying power.

Now, the registration procedure for the base and the remote are complete.

When registering more than one remote is required, repeat procedures (3) and (4).

It is also possible to register more than one remote simultaneously to the base.



- Registration should be performed with power supplied to both base and remote.
- For the Input size and Output size of the remote, the setting of wireless registration will be reflected to the base. When changing the number of Input size and Output size of the remote, wireless registration should be performed again.
- The setting of the Input size and Output size of the base are valid all the time. Be careful that the I/O map will be different if the setting is changed after constructing the I/O map. After changing, the setting is reflected by pressing the [Reset] button or by supplying the power again.

#### •Dummy remote

The dummy remote can register a "Dummy area" in the I/O map. A remote can be added without changing the I/O map by registering the remote to the "Dummy area" even after system construction.

The remote allocation order to the I/O map is from smallest channel to largest channel registered by the wireless channel which has been set during remote registration.

At the time, the wireless channel in which no remote is registered will be ignored.

When adding new remote, it may be required to change the I/O map depending on the wireless channel number.

The dummy remote can be registered only with the base.

#### •Precautions

- For dummy remote registration, it is necessary to set the number of inputs/outputs.  
If a remote with inputs/outputs which are different from the set numbers is registered, the I/O map should be changed.


#### •Dummy remote registration

- (1) **Change of operation mode** of the base  
Change the pairing setting of the remote registration of the base to "Pairing enable" and reflect the change by clicking **Reset module** or by re-supplying power. Then, update the contents on the screen by clicking **Refresh all**.
- (2) **Inputs/outputs setting** of dummy remote  
Set the number of inputs and outputs of the dummy remote.
- (3) **Allocation** of the dummy remote **to the required wireless channel**  
Select the required wireless channel and click **Insert** so that the set dummy remote is displayed in the box "Registered remote".  
(Dummy remote registration is not complete at this point. The status is "Waiting for registration".)
- (4) **Determination** of dummy remote **registration information**  
Click **Save reg-info** to reflect the registered information.  
(When registration has been completed correctly, the status of the dummy remote will change to "registered".)


Now, the registration procedure for the dummy remote are complete.

## ■Dimensions

•EX600-WEN#

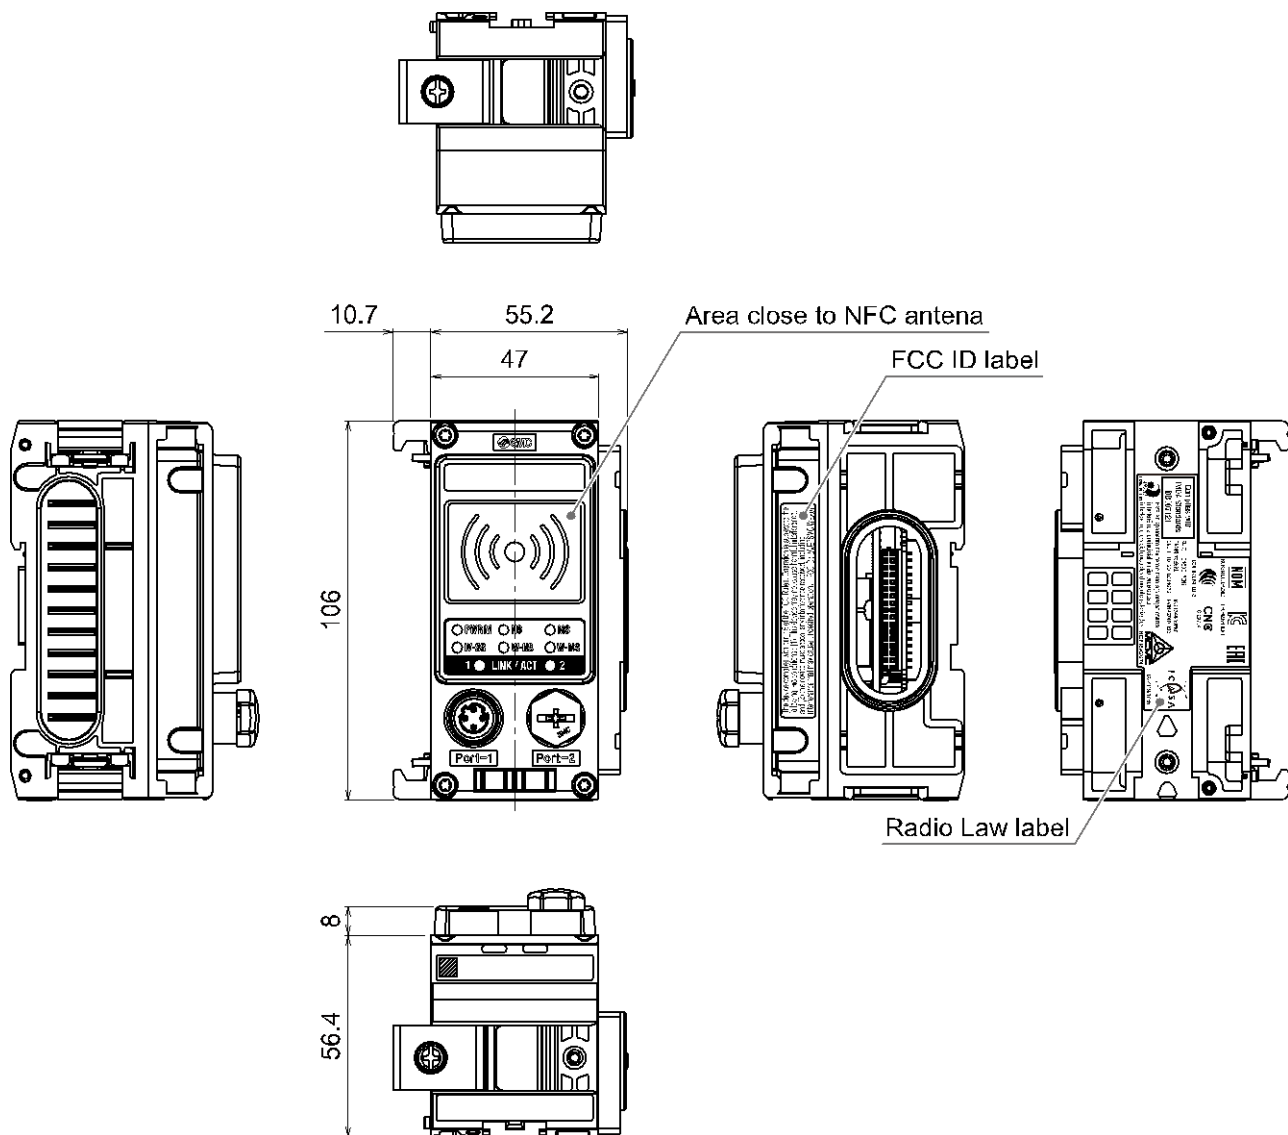

•EX600-WSV#

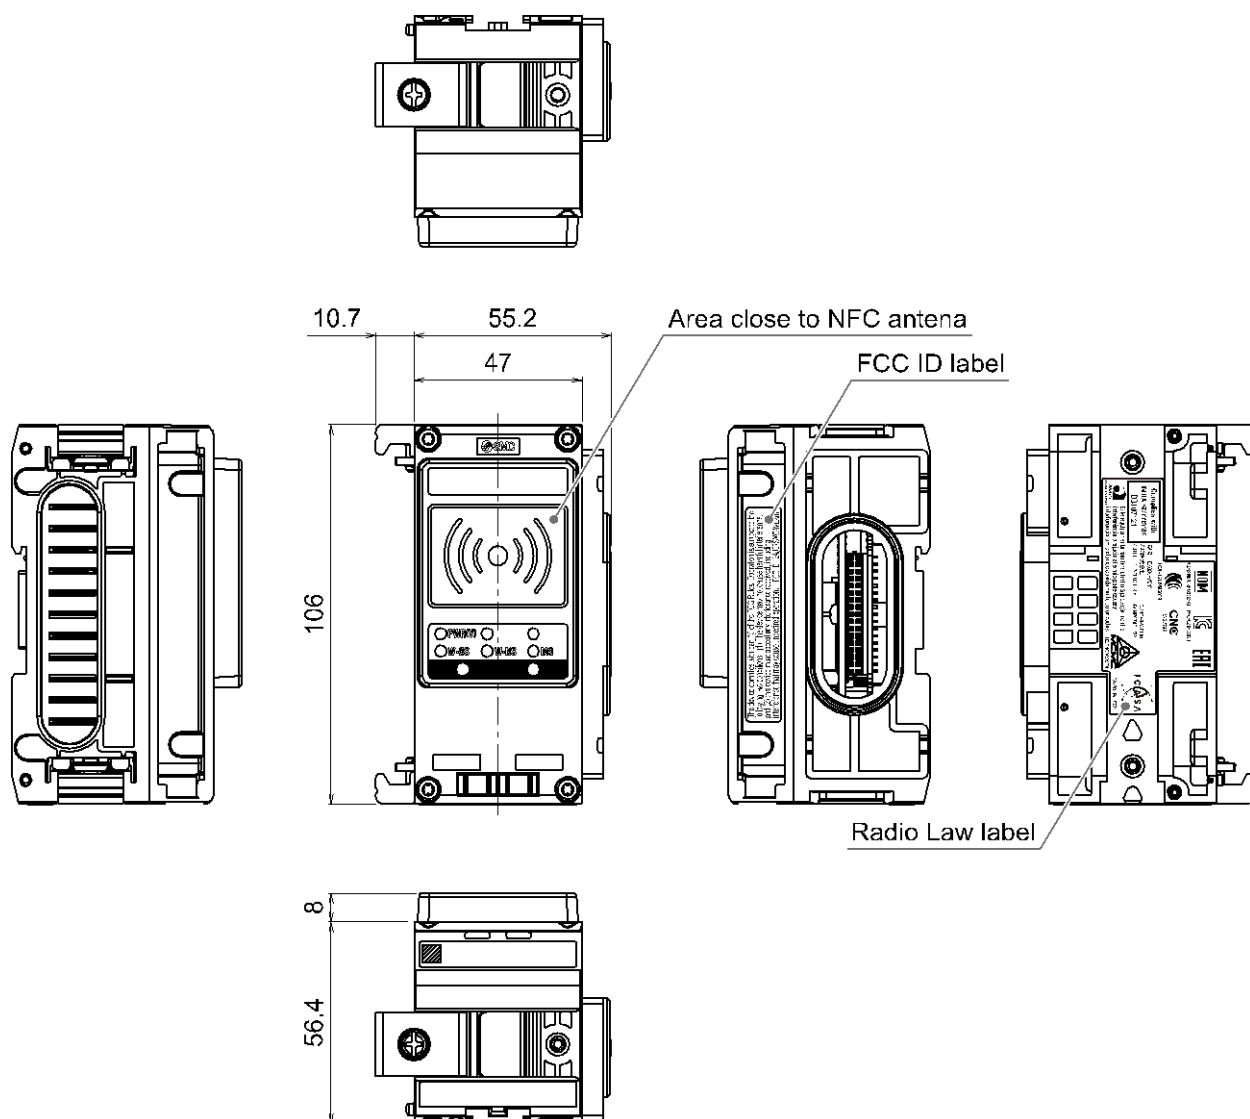



## I/O Map

The table below shows the number of occupied bytes for each input/output unit of EX600 which can be connected to the base and remote.

The allocated input/output sizes can be changed depending on the occupied bytes of the diagnostic allocation and the EX600 I/O unit connected to the wireless unit.

Refer to the table below for the number of input/output bytes for each unit.

| Unit name            | Model      | Unit product No.            | I/O Occupation area |        |
|----------------------|------------|-----------------------------|---------------------|--------|
|                      |            |                             | Input               | Output |
| Wireless unit        | WEN<br>WSV | EX600-W###<br>(32 points)   | 0 *1                | 4      |
|                      |            | EX600-W###<br>(24 points)   | 0 *1                | 3      |
|                      |            | EX600-W###<br>(16 points)   | 0 *1                | 2      |
|                      |            | EX600-W###<br>(8 points)    | 0 *1                | 1      |
|                      |            | EX600-W###<br>(0 point)     | 0 *1                | 0      |
| Digital input unit   | DX         | EX600-DX#B<br>(8 points)    | 1                   | 0      |
|                      |            | EX600-DX#C<br>(8 points)    | 1                   | 0      |
|                      |            | EX600-DX#C1<br>(16 points)  | 2                   | 0      |
|                      |            | EX600-DX#D<br>(16 points)   | 2                   | 0      |
|                      |            | EX600-DX#E<br>(16 points)   | 2                   | 0      |
|                      |            | EX600-DX#F<br>(16 points)   | 2                   | 0      |
| Digital output unit  | DY         | EX600-DY#B<br>(8 points)    | 0                   | 1      |
|                      |            | EX600-DY#E<br>(16 points)   | 0                   | 2      |
|                      |            | EX600-DY#F<br>(16 points)   | 0                   | 2      |
| Digital I/O unit     | DM         | EX600-DM#E<br>(8/8 points)  | 1                   | 1      |
|                      |            | EX600-DM#F<br>(8/8 points)  | 1                   | 1      |
| Analogue input unit  | AX         | EX600-AXA*2<br>(2 points)   | 4                   | 0      |
| Analogue output unit | AY         | EX600-AYA*2<br>(2 points)   | 0                   | 4      |
| Analogue I/O unit    | AM         | EX600-AMB*2<br>(2/2 points) | 4                   | 4      |

\*1: The occupied bytes of input of the wireless unit (EX600-W###) will vary depending on the setting of the diagnostic allocation.  
Refer to the section "Diagnostic allocation" for details.

\*2: The minus ranges of the user setting are not supported.


## ■ I/O mapping

Please note the following points when configuring the I/O data size.

- The minimum data size for both input and output is 2 bytes.

When the total data size of the wireless system is 0 byte or 1 byte, the configuration size should be 2 bytes.

- If the data size of the actual input or output is an odd number, 1 byte (Padding data) will be added to the configuration size automatically so that it is adjusted to an even number.
- The remote allocation order to the I/O map is decided by the wireless channel at the remote registration. As they are allocated from the smallest registered channel number, the channel in which no remote is registered will be ignored (Refer to the figure below).

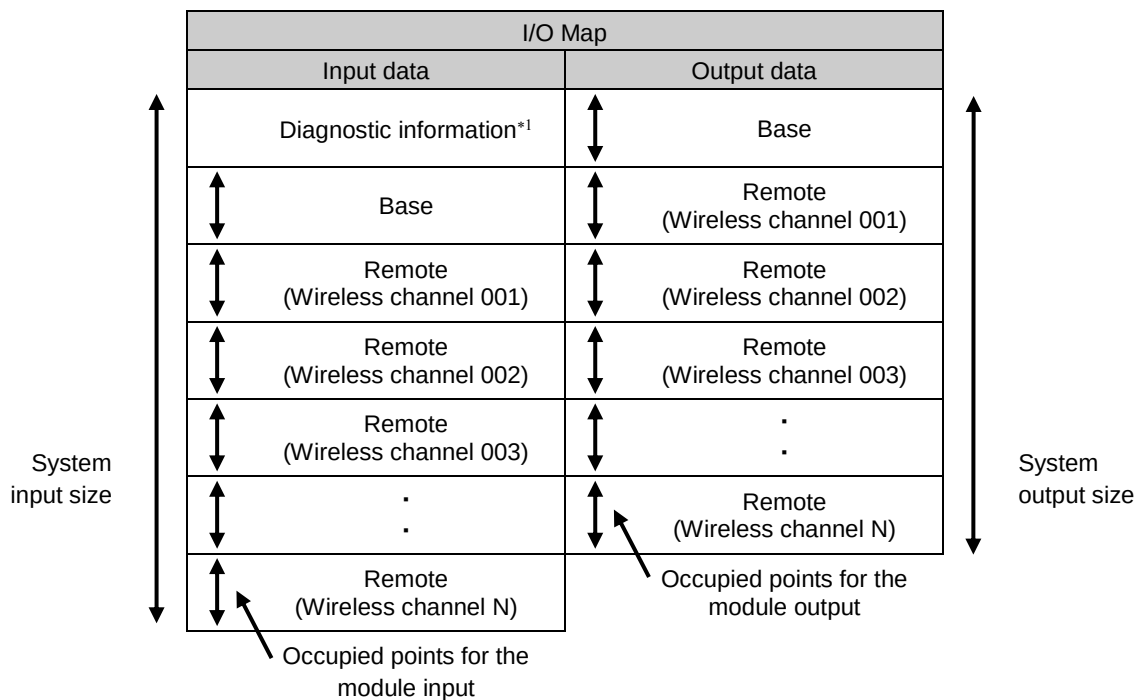

\*1: This is selected according to the diagnostic allocation parameter setting of the base.  
Refer to the section "Diagnostic allocation" for details.

## ■ I/O mapping order of base/remote

Please note that the allocation order of the EX600 I/O unit and the valve manifold connected to the base or remote is different depending on the I/O unit layout mode in the wireless system parameter setting.

Mode 1: **Allocation from the end plate side to the right.**

Mode 2: **Allocation from the wireless unit side to the left.**

I/O mapping examples in Mode 1 and Mode 2 are shown below.

### <Example 1>

#### ● Mode 1

|           | Unit 0         | Unit 1        | Unit 2        |                |
|-----------|----------------|---------------|---------------|----------------|
|           | DY#B           | DX#D          | EX600-WEN#    |                |
| End plate | Digital output | Digital input | Base          | Valve manifold |
|           | 1-byte output  | 2-byte output | 2-byte output | (16 points)    |

#### Base setting parameter

Diagnostic allocation: None/Simple/Detailed  
 I/O mapping: Auto  
 Input size: 32 points/4 bytes  
 Output size: 32 points/4 bytes  
 Valve manifold output size: 16 points/2 bytes  
 I/O unit layout mode: Mode 1  
 Number of remote connection: 15 pcs.

#### Base construction

Input data: [Unit 1] Digital input unit (EX600-DX#D): 2 bytes occupied  
 Output data: [Unit 0] Digital output unit (EX600-DY#B): 1 byte occupied  
 [Unit 2] Base (EX600-WEN#): 2 bytes occupied

|           | Unit 0         | Unit 1         | Unit 2        | Unit 3        |                |
|-----------|----------------|----------------|---------------|---------------|----------------|
|           | DY#B           | AXA            | DX#D          | EX600-WSV#    |                |
| End plate | Digital output | Analogue input | Digital input | Remote        | Valve manifold |
|           | 1-byte output  | 4-byte input   | 2-byte input  | 4-byte output | (32 points)    |

#### Remote setting parameter (Wireless channel 001)

Input size: 64 points/8 bytes  
 Output size: 48 points/6 bytes  
 Valve manifold output size: 32 points/4 bytes  
 I/O unit layout mode: Mode 1

#### Remote construction (Wireless channel 001)

Input data: [Unit 1] Analogue input unit (EX600-AXA): 4 bytes occupied  
 [Unit 2] Digital input unit (EX600-DX#D): 2 bytes occupied  
 Output data: [Unit 0] Digital output unit (EX600-DY#B): 1 byte occupied  
 [Unit 3] Remote (EX600-WSV#): 4 bytes occupied

|           | Unit 0         | Unit 1        | Unit 2        | Unit 3        |               |
|-----------|----------------|---------------|---------------|---------------|---------------|
|           | DY#B           | DX#D          | DX#B          | EX600-WSV#    |               |
| End plate | Digital output | Digital input | Digital input | Remote        | End plate     |
|           | 1-byte output  | 2-byte input  | 1-byte input  | 0-byte output | (Output side) |

#### Remote setting parameter (Wireless channel 002)

Input size: 32 points/4 bytes  
 Output size: 16 points/2 bytes  
 Valve manifold output size: 0 point/0 byte  
 I/O unit layout mode: Mode 1

#### Remote construction (Wireless channel 002)

Input data: [Unit 1] Digital input unit (EX600-DX#D): 2 bytes occupied  
 [Unit 2] Digital input unit (EX600-DX#B): 1 byte occupied  
 Output data: [Unit 0] Digital output unit (EX600-DY#B): 1 byte occupied  
 [Unit 3] Remote (EX600-WSV#): 0 byte occupied

•Diagnostic allocation: None

|         | Input data                       |               | Output data                      |                                                |
|---------|----------------------------------|---------------|----------------------------------|------------------------------------------------|
|         | Module name                      | Unit name     | Module name                      | Unit name                                      |
| byte 0  | Base                             | DX#D (Unit 1) | Base                             | DX#B (Unit 0)                                  |
| byte 1  |                                  | Reserved      |                                  | EX600-WEN# (Unit 2)<br>Valve output: 16 points |
| byte 2  |                                  |               |                                  |                                                |
| byte 3  |                                  | Reserved      |                                  | Reserved                                       |
| byte 4  | Remote<br>(Wireless channel 001) | AXA (Unit 1)  | Remote<br>(Wireless channel 001) | DY#B (Unit 0)                                  |
| byte 5  |                                  |               |                                  | EX600-WSV# (Unit 3)<br>Valve output: 32 points |
| byte 6  |                                  |               |                                  |                                                |
| byte 7  |                                  |               |                                  |                                                |
| byte 8  |                                  | DX#D (Unit 2) | Reserved                         |                                                |
| byte 9  |                                  | Reserved      | DY#B (Unit 0)                    |                                                |
| byte 10 |                                  | Reserved      | Reserved                         |                                                |
| byte 11 |                                  |               |                                  |                                                |
| byte 12 | Remote<br>(Wireless channel 002) | DX#D (Unit 1) |                                  |                                                |
| byte 13 |                                  | DX#B (Unit 2) |                                  |                                                |
| byte 14 |                                  |               |                                  |                                                |
| byte 15 |                                  | Reserved      |                                  |                                                |
| Total   | 16 byte                          |               | 12 byte                          |                                                |

•Diagnostic allocation: Simple

|         | Input data                       |               | Output data                      |                                                |               |
|---------|----------------------------------|---------------|----------------------------------|------------------------------------------------|---------------|
|         | Module name                      | Unit name     | Module name                      | Unit name                                      |               |
| byte 0  | System diagnosis 1               |               | Base                             | DY#B (Unit 0)                                  |               |
| byte 1  | System diagnosis 2               |               |                                  | EX600-WEN# (Unit 2)<br>Valve output: 16 points |               |
| byte 2  | System diagnosis 3               |               |                                  | Reserved                                       |               |
| byte 3  | System diagnosis 4               |               |                                  |                                                |               |
| byte 4  | Base                             | DX#D (Unit 1) | Remote<br>(Wireless channel 001) | DY#B (Unit 0)                                  |               |
| byte 5  |                                  | Reserved      |                                  | EX600-WSV# (Unit 3)<br>Valve output: 32 points |               |
| byte 6  |                                  | Reserved      |                                  |                                                |               |
| byte 7  | Remote<br>(Wireless channel 001) | AXA (Unit 1)  |                                  | Remote<br>(Wireless channel 002)               | Reserved      |
| byte 8  |                                  |               |                                  |                                                | DY#B (Unit 0) |
| byte 9  |                                  |               |                                  | Reserved                                       |               |
| byte 10 |                                  | DX#D (Unit 2) |                                  |                                                |               |
| byte 11 |                                  |               |                                  | Reserved                                       |               |
| byte 12 |                                  |               |                                  |                                                |               |
| byte 13 |                                  |               |                                  |                                                |               |
| byte 14 |                                  | Reserved      |                                  |                                                |               |
| byte 15 |                                  |               |                                  |                                                |               |
| byte 16 | Remote<br>(Wireless channel 002) |               |                                  | DX#D (Unit 1)                                  |               |
| byte 17 |                                  |               |                                  | DX#B (Unit 2)                                  |               |
| byte 18 |                                  | Reserved      |                                  |                                                |               |
| byte 19 |                                  |               |                                  |                                                |               |
| Total   | 20 byte                          |               | 12 byte                          |                                                |               |

•Diagnostic allocation: Detailed

|         | Input data                                                                         |                                  | Output data                      |                                                |
|---------|------------------------------------------------------------------------------------|----------------------------------|----------------------------------|------------------------------------------------|
|         | Module name                                                                        | Unit name                        | Module name                      | Unit name                                      |
| byte 0  | System diagnosis 1                                                                 |                                  | Base                             | DY##B (Unit 0)                                 |
| byte 1  | System diagnosis 2                                                                 |                                  |                                  | EX600-WEN# (Unit 2)<br>Valve output: 16 points |
| byte 2  | System diagnosis 3                                                                 |                                  |                                  | Reserved                                       |
| byte 3  | System diagnosis 4                                                                 |                                  |                                  |                                                |
| byte 4  | Remote connection information<br>(Wireless channel 1-7; bit 0 are fixed at "0".)   |                                  | Remote<br>(Wireless channel 001) | DY#B (Unit 0)                                  |
| byte 5  | Remote connection information<br>(Wireless channel 8-15)                           |                                  |                                  | EX600-WSV# (Unit 3)<br>Valve output: 32 points |
| byte 6  | Remote diagnostic information *1<br>(Wireless channel 1-7)                         |                                  |                                  |                                                |
| byte 7  | Remote diagnostic information<br>(Wireless channel 8-15)                           |                                  |                                  |                                                |
| byte 8  | Remote registration information<br>(Wireless channel 1-7; bit 0 are fixed at "0".) |                                  |                                  |                                                |
| byte 9  | Remote registration information<br>(Wireless channel 8-15)                         |                                  |                                  | Reserved                                       |
| byte 10 | Base                                                                               | DX#D (Unit 1)                    | Remote<br>(Wireless channel 002) | DY#B (Unit 0)                                  |
| byte 11 |                                                                                    | Reserved                         |                                  | Reserved                                       |
| byte 12 |                                                                                    |                                  | Reserved                         |                                                |
| byte 13 |                                                                                    | Remote<br>(Wireless channel 001) | AXA (Unit 1)                     |                                                |
| byte 14 |                                                                                    |                                  |                                  |                                                |
| byte 15 |                                                                                    |                                  |                                  |                                                |
| byte 16 | DX#D (Unit 2)                                                                      |                                  |                                  |                                                |
| byte 17 |                                                                                    |                                  |                                  |                                                |
| byte 18 |                                                                                    |                                  |                                  |                                                |
| byte 19 | Remote<br>(Wireless channel 002)                                                   | Reserved                         |                                  |                                                |
| byte 20 |                                                                                    | Reserved                         |                                  |                                                |
| byte 21 |                                                                                    | Reserved                         |                                  |                                                |
| byte 22 |                                                                                    | DX#D (Unit 1)                    |                                  |                                                |
| byte 23 | DX#B (Unit 2)                                                                      |                                  |                                  |                                                |
| byte 24 |                                                                                    |                                  |                                  |                                                |
| byte 25 | Reserved                                                                           |                                  |                                  |                                                |
| Total   | 26 byte                                                                            |                                  | 12 byte                          |                                                |

\*: When the setting of diagnostic allocation is "Detailed", areas of the number of remote set at the Number of remote connection are occupied. (The occupied area also occupies the area for remote which has not been registered.)

\*1: The remote diagnostic information bit 0 indicates the diagnostic information of the base.

## <Example 2>

### ●Mode 2

|           | Unit 2         | Unit 1        | Unit 0        |                |
|-----------|----------------|---------------|---------------|----------------|
|           | DY#B           | DX#D          | EX600-WEN#    |                |
| End plate | Digital output | Digital input | Base          | Valve manifold |
|           | 1-byte output  | 2-byte input  | 2-byte output | (16 points)    |

#### Base setting parameter

Diagnostic allocation: None/Simple/Detailed  
 I/O mapping: Auto  
 Input size: 32 points/4 bytes  
 Output size: 32 points/4 bytes  
 Valve manifold output size: 16 points/2 bytes  
 I/O unit layout mode: Mode 2  
 Number of remote connection: 15 pcs.

#### Base construction

Input data: [Unit 1] Digital input unit (EX600-DX#D): 2 bytes occupied  
 Output data: [Unit 0] Base (EX600-WEN#): 2 bytes occupied  
 [Unit 2] Digital output unit (EX600-DY#B): 1 byte occupied

|           | Unit 3         | Unit 2         | Unit 1        | Unit 0        |                |
|-----------|----------------|----------------|---------------|---------------|----------------|
|           | DY#B           | AXA            | DX#D          | EX600-WSV#    |                |
| End plate | Digital output | Analogue input | Digital input | Remote        | Valve manifold |
|           | 1-byte output  | 4-byte input   | 2-byte input  | 4-byte output | (32 points)    |

#### Remote setting parameter (Wireless channel 001)

Input size: 64 points/8 bytes  
 Output size: 48 points/6 bytes  
 Valve manifold output size: 32 point/4 byte  
 I/O unit layout mode: Mode 2

#### Remote construction (Wireless channel 001)

Input data: [Unit 1] Digital input unit (EX600-DX#D): 2 bytes occupied  
 [Unit 2] Analogue input unit (EX600-AXA): 4 bytes occupied  
 Output data: [Unit 0] Remote (EX600-WSV#): 4 bytes occupied  
 [Unit 3] Digital output unit (EX600-DY#B): 1 byte occupied

|           | Unit 3         | Unit 2        | Unit 1        | Unit 0        |               |
|-----------|----------------|---------------|---------------|---------------|---------------|
|           | DY#B           | DX#D          | DX#B          | EX600-WSV#    |               |
| End plate | Digital output | Digital input | Digital input | Remote        | End plate     |
|           | 1-byte output  | 2-byte input  | 1-byte input  | 0-byte output | (Output side) |

#### Remote setting parameter (Wireless channel 002)

Input size: 32 points/4 bytes  
 Output size: 16 points/2 bytes  
 Valve manifold output size: 0 point/0 byte  
 I/O unit layout mode: Mode 2

#### Remote construction (Wireless channel 002)

Input data: [Unit 1] Digital input unit (EX600-DX#D): 2 bytes occupied  
 [Unit 2] Digital input unit (EX600-DX#B): 1 byte occupied  
 Output data: [Unit 0] Remote (EX600-WSV#): 0 bytes occupied  
 [Unit 3] Digital output unit (EX600-DY#B): 1 byte occupied

•Diagnostic allocation: None

|         | Input data                       |               | Output data                      |                                                |
|---------|----------------------------------|---------------|----------------------------------|------------------------------------------------|
|         | Module name                      | Unit name     | Module name                      | Unit name                                      |
| byte 0  | Base                             | DX#D (Unit 1) | Base                             | EX600-WEN# (Unit 0)<br>Valve output: 16 points |
| byte 1  |                                  | Reserved      |                                  | DY#B (Unit 2)                                  |
| byte 2  |                                  |               |                                  |                                                |
| byte 3  |                                  | Reserved      |                                  | Reserved                                       |
| byte 4  | Remote<br>(Wireless channel 001) | DX#D (Unit 1) | Remote<br>(Wireless channel 001) | EX600-WSV# (Unit 0)<br>Valve output: 32 points |
| byte 5  |                                  | AXA (Unit 2)  |                                  |                                                |
| byte 6  |                                  |               |                                  |                                                |
| byte 7  |                                  |               |                                  |                                                |
| byte 8  |                                  | Reserved      | DY#B (Unit 3)                    |                                                |
| byte 9  |                                  |               | Reserved                         |                                                |
| byte 10 |                                  |               | Remote<br>(Wireless channel 002) | DY#B (Unit 3)                                  |
| byte 11 |                                  | Reserved      |                                  |                                                |
| byte 12 | Remote<br>(Wireless channel 002) | DX#B (Unit 1) |                                  |                                                |
| byte 13 |                                  | DX#D (Unit 2) |                                  |                                                |
| byte 14 |                                  |               |                                  |                                                |
| byte 15 |                                  | Reserved      |                                  |                                                |
| Total   | 16 byte                          |               | 12 byte                          |                                                |

•Diagnostic allocation: Simple

|         | Input data                       |                                  | Output data                      |                                                |
|---------|----------------------------------|----------------------------------|----------------------------------|------------------------------------------------|
|         | Module name                      | Unit name                        | Module name                      | Unit name                                      |
| byte 0  | System diagnosis 1               |                                  | Base                             | EX600-WEN# (Unit 0)<br>Valve output: 16 points |
| byte 1  | System diagnosis 2               |                                  |                                  | DY#B (Unit 2)                                  |
| byte 2  | System diagnosis 3               |                                  |                                  |                                                |
| byte 3  | System diagnosis 4               |                                  |                                  | Reserved                                       |
| byte 4  | Base                             | DX#D (Unit 1)                    | Remote<br>(Wireless channel 001) | EX600-WSV# (Unit 0)<br>Valve output: 32 points |
| byte 5  |                                  | Reserved                         |                                  |                                                |
| byte 6  |                                  | Reserved                         |                                  |                                                |
| byte 7  | Remote<br>(Wireless channel 001) | DX#D (Unit 1)                    |                                  | DY#B (Unit 3)                                  |
| byte 8  |                                  |                                  | Reserved                         |                                                |
| byte 9  |                                  | AXA (Unit 2)                     | DY#B (Unit 3)                    |                                                |
| byte 10 |                                  |                                  | Reserved                         |                                                |
| byte 11 |                                  |                                  | Reserved                         |                                                |
| byte 12 |                                  |                                  |                                  |                                                |
| byte 13 |                                  |                                  |                                  |                                                |
| byte 14 |                                  | Remote<br>(Wireless channel 002) | DX#B (Unit 1)                    |                                                |
| byte 15 |                                  |                                  | DX#D (Unit 2)                    |                                                |
| byte 16 | Reserved                         |                                  |                                  |                                                |
| byte 17 | Reserved                         |                                  |                                  |                                                |
| byte 18 | Remote<br>(Wireless channel 002) | Reserved                         |                                  |                                                |
| byte 19 |                                  |                                  |                                  |                                                |
| Total   | 20 byte                          |                                  | 12 byte                          |                                                |

•Diagnostic allocation: Detailed

|         | Input data                                                                         |               | Output data |                                                |                                                |                                  |
|---------|------------------------------------------------------------------------------------|---------------|-------------|------------------------------------------------|------------------------------------------------|----------------------------------|
|         | Module name                                                                        | Unit name     | Module name | Unit name                                      |                                                |                                  |
| byte 0  | System diagnosis 1                                                                 |               | Base        | EX600-WEN# (Unit 0)<br>Valve output: 16 points |                                                |                                  |
| byte 1  | System diagnosis 2                                                                 |               |             | Remote<br>(Wireless channel 001)               | DY#B (Unit 2)                                  |                                  |
| byte 2  | System diagnosis 3                                                                 |               |             |                                                | EX600-WSV# (Unit 0)<br>Valve output: 32 points | Reserved                         |
| byte 3  | System diagnosis 4                                                                 |               |             |                                                |                                                | Remote<br>(Wireless channel 002) |
| byte 4  | Remote connection information<br>(Wireless channel 1-7; bit 0 are fixed at "0".)   |               | Reserved    |                                                |                                                |                                  |
| byte 5  | Remote connection information<br>(Wireless channel 8-15)                           |               |             |                                                |                                                |                                  |
| byte 6  | Remote diagnostic information *1<br>(Wireless channel 1-7)                         |               |             |                                                |                                                |                                  |
| byte 7  | Remote diagnostic information<br>(Wireless channel 8-15)                           |               |             |                                                |                                                |                                  |
| byte 8  | Remote registration information<br>(Wireless channel 1-7; bit 0 are fixed at "0".) |               |             |                                                |                                                |                                  |
| byte 9  | Remote registration information<br>(Wireless channel 8-15)                         |               |             | Base                                           | DY#B (Unit 3)                                  |                                  |
| byte 10 | Base                                                                               | DX#D (Unit 1) | Reserved    |                                                |                                                |                                  |
| byte 11 |                                                                                    | Reserved      |             |                                                |                                                |                                  |
| byte 12 |                                                                                    | Reserved      |             |                                                |                                                |                                  |
| byte 13 |                                                                                    | Reserved      |             |                                                |                                                |                                  |
| byte 14 | Remote<br>(Wireless channel 001)                                                   | DX#D (Unit 1) |             |                                                |                                                |                                  |
| byte 15 |                                                                                    | AXA (Unit 2)  |             |                                                |                                                |                                  |
| byte 16 |                                                                                    |               |             |                                                |                                                |                                  |
| byte 17 |                                                                                    |               |             |                                                |                                                |                                  |
| byte 18 |                                                                                    |               |             |                                                |                                                |                                  |
| byte 19 |                                                                                    | Reserved      |             |                                                |                                                |                                  |
| byte 20 |                                                                                    |               |             |                                                |                                                |                                  |
| byte 21 | Remote<br>(Wireless channel 002)                                                   | Reserved      |             |                                                |                                                |                                  |
| byte 22 |                                                                                    | DX#D (Unit 1) |             |                                                |                                                |                                  |
| byte 23 |                                                                                    | DX#B (Unit 2) |             |                                                |                                                |                                  |
| byte 24 |                                                                                    | Reserved      |             |                                                |                                                |                                  |
| byte 25 | Reserved                                                                           |               |             |                                                |                                                |                                  |
| Total   | 26 byte                                                                            |               |             | 12 byte                                        |                                                |                                  |

\*: When the setting of diagnostic allocation is "Detailed", areas of the number of remote set at the Number of remote connection are occupied. (The occupied area also occupies the area for remote which has not been registered.)

\*1: The remote diagnostic information bit 0 indicates the diagnostic information of the base.




## ■Diagnostic allocation

By setting the diagnostic allocation of the base, the following diagnostic data will be allocated to the head of the input data of the I/O map.

When the diagnostic allocation is set to "Detailed", the diagnostic size varies depending on the number of remote connections.

| Diagnostic allocation | Diagnostic data                                                                          | Diagnostic size                        |
|-----------------------|------------------------------------------------------------------------------------------|----------------------------------------|
| None                  | No diagnostic data                                                                       | 0 bytes                                |
| Simple                | System diagnostics                                                                       | 4 bytes                                |
| Details               | System diagnostics<br>+<br>Remote connection/<br>diagnostics/registration<br>information | Number of remote connections: 0 pcs.   |
|                       |                                                                                          | Number of remote connections: 15 pcs.  |
|                       |                                                                                          | Number of remote connections: 31 pcs.  |
|                       |                                                                                          | Number of remote connections: 63 pcs.  |
|                       |                                                                                          | Number of remote connections: 127 pcs. |

## •Wireless system configuration

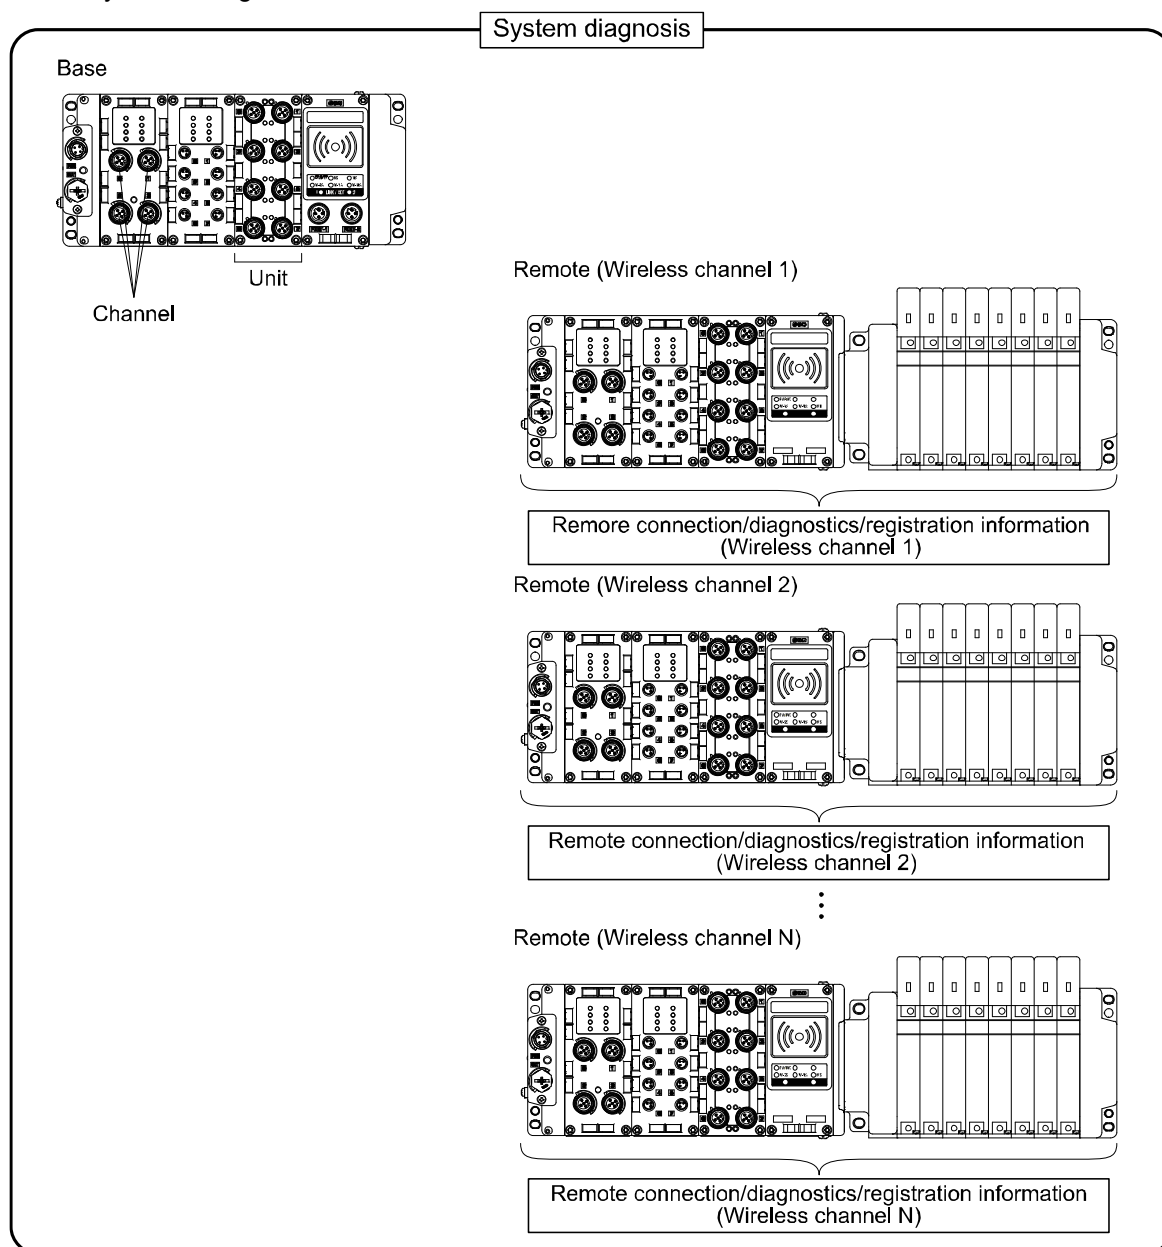

## ■ Detailed diagnostic data

When an error occurs in the wireless system (base or remote), a flag will be generated in a Bit corresponding to each diagnostic information.

The errors for the system diagnostics 1 to 4 are for the entire system. Therefore, even if there is only one unit which has an error in the constructed system, a flag will be generated in a Bit corresponding to the error content.

It is possible to check the classification of the remote which is generating an error using the remote diagnostic information.

(It is necessary to set the diagnostic allocation to "Detailed".)

Regardless of the setting of the diagnostic allocation, the module and unit which are generating errors can be specified using the SMC wireless system application.

| Item               | Byte | Bit No. | Content of diagnostics                             |                                                                                        | Diagnosis area and condition when error occurs |                                           | How to reset           | Reset conditions                                                                                                                      | Note (LED indications, etc.)                                                             |
|--------------------|------|---------|----------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
|                    |      |         | Item                                               | Details                                                                                | Effective diagnosis area                       | I/O condition when diagnosis is conducted |                        |                                                                                                                                       |                                                                                          |
| System diagnosis 1 | 0    | 0       | User setting lower level detection                 | Detected that the analogue setting has exceeded the lower limit of the user set value. | Unit                                           | Continue                                  | Automatic reset        | Select the range so that the analogue setting will be within the appropriate range of the user set value. Or disable the diagnostics. | Base MS: Red LED flashes<br>or<br>W-MS: Red LED flashes *1<br>Remote MS: Red LED flashes |
|                    |      | 1       | User setting upper limit detection                 | Detected that the analogue setting has exceeded the upper limit of the user set value. | Unit                                           | Continue                                  | Automatic reset        | Select the range so that the analogue setting will be within the appropriate range of the user set value. Or disable the diagnostics. |                                                                                          |
|                    |      | 2       | Detection of the range lower limit                 | Detected that the analogue setting has exceeded the lower limit of the setting range.  | Unit                                           | Continue                                  | Automatic reset        | Select an appropriate range so that the input value is within the set range.                                                          |                                                                                          |
|                    |      | 3       | Detection of the range upper limit                 | Detected that the analogue setting has exceeded the upper limit of the setting range.  | Unit                                           | Continue                                  | Automatic reset        | Select an appropriate range so that the input value is within the set range.                                                          |                                                                                          |
|                    |      | 4       | Detection of upper limit of ON/OFF operation cycle | ON/OFF operating cycles has exceeded the upper limit of the setting value.             | Unit                                           | Continue                                  | Automatic reset        | Reset the ON/OFF cycles to zero. Or disable the diagnostics.                                                                          |                                                                                          |
|                    |      | 5       | Detection of unconnected load                      | Detects the broken wire.                                                               | Unit                                           | Continue                                  | Manual/automatic reset | (1) Replace the valve or I/O device to check the operation.<br>(2) Replace the valve or output device to check the operation.         |                                                                                          |

| Item                | Byte | Bit No. | Content of diagnostics                                     |                                                                                                 | Diagnosis area and condition when error occurs |                                           | How to reset             | Reset conditions                                                                                                                                         | Note (LED indications, etc.)                                                                        |
|---------------------|------|---------|------------------------------------------------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------|-------------------------------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|                     |      |         | Item                                                       | Details                                                                                         | Effective diagnosis area                       | I/O condition when diagnosis is conducted |                          |                                                                                                                                                          |                                                                                                     |
| System diagnostic 1 | 0    | 6       | Short circuit detection of output load                     | A short-circuit of the valve or the output equipment has been detected.                         | Unit                                           | Continue                                  | Manual/<br>Auto          | (1) Replace the valve or the input/output equipment, and check the operation.<br>(2) Replace the valve or the output equipment, and check the operation. | Base<br>MS: Red LED flashes<br>or<br>W-MS: Red LED flashes <sup>*1</sup>                            |
|                     |      | 7       | Short circuit detection of power supply for control/input  | A short-circuit of the input equipment power supply has been detected.                          | Unit                                           | Continue                                  | Auto                     | Check the part which has been generating the error and review the wiring or check if the input equipment is normal.                                      | Remote<br>MS: Red LED flashes                                                                       |
| System diagnostic 2 | 1    | 0       | Detection of output (US2) power supply voltage drop        | A voltage drop of the power supply voltage for output (US2) has been detected.                  | Unit                                           | Continue                                  | Auto                     | Supply 24 VDC±10% to the power supply voltage for output (US2).                                                                                          | Base<br>PWR(V): Red LED flashes<br>or<br>W-MS: Red LED flashes<br>Remote<br>PWR(V): Red LED flashes |
|                     |      | 1       | Detection of control/input (US1) power supply voltage drop | A voltage drop of the power supply voltage for control/input (US1) has been detected.           | Unit                                           | Continue                                  | Auto                     | Supply 24 VDC±10% to the power supply voltage for control/input (US1).                                                                                   | Base<br>MS: Red LED flashes<br>or<br>W-MS: Red LED flashes<br>Remote<br>MS: Red LED flashes         |
|                     |      | 2       | Reserved                                                   | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                                                        | -                                                                                                   |
|                     |      | 3       | Connection failure between units (during operation)        | An error has been generated in the communication between the wireless unit and EX600 I/O units. | Unit                                           | Stop (HOLD)                               | Turn the power on again. | Confirm that there is no loose connection between the EX600 I/O units, and connect them correctly.                                                       | Base<br>MS: Red LED flashes<br>or<br>W-MS: Red LED flashes<br>Remote<br>MS: Red LED flashes         |

| Item                | Byte | Bit No. | Content of diagnostics                                    |                                                                                                 | Diagnosis area and condition when error occurs |                                           | How to reset             | Reset conditions                                                                                                              | Note (LED indications, etc.)                                                          |
|---------------------|------|---------|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------|-------------------------------------------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|                     |      |         | Item                                                      | Details                                                                                         | Effective diagnosis area                       | I/O condition when diagnosis is conducted |                          |                                                                                                                               |                                                                                       |
| System diagnostic 2 | 1    | 4       | Connection failure between units (when power is supplied) | An error has been generated in the communication between the wireless unit and EX600 I/O units. | Unit                                           | Stop (HOLD)                               | Turn the power on again. | Confirm that there is no loose connection between the EX600 I/O units, and connect them correctly.                            | Base MS: Red LED flashes<br>or<br>W-MS: Red LED flashes<br>Remote MS: Red LED flashes |
|                     |      | 5       | Reserved                                                  | -                                                                                               |                                                | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 6       | Detection of system error (when power is supplied)        | A non-restorable error has been generated in the system.                                        | Unit                                           | Stop (HOLD)                               | Manual                   | Supply power again. If the error is not restored, contact your SMC sales representative.                                      | Base MS: Red LED is ON<br>Remote MS: Red LED is ON                                    |
|                     |      | 7       | Detection of hardware error (during operation)            | A non-restorable error has been generated in the hardware.                                      | Unit                                           | Stop (HOLD)                               | Manual                   | Supply power again. If the error is not restored after resupplying power, contact your SMC sales representative.              | Base MS: Red LED is ON<br>or<br>W-MS: Red LED is ON<br>Remote MS: Red LED is ON       |
| System diagnostic 3 | 2    | 0       | Number of input/output points setting error               | The number of occupied input/output points of the baser and remote has exceeded the set value.  | System                                         | Continue                                  | Manual                   | Change the user's set value. Or, adjust the unit configuration so that the number of occupied points is within the set value. | Base MS: Red LED flashes<br>or<br>W-MS: Red LED flashes<br>Remote MS: Red LED flashes |
|                     |      | 1       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 2       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 3       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 4       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 5       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 6       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |
|                     |      | 7       | Reserved                                                  | -                                                                                               | -                                              | -                                         | -                        | -                                                                                                                             | -                                                                                     |

| Item                | Byte | Bit No. | Content of diagnostics                                                                     |                                                                                       | Diagnosis area and condition when error occurs |                                           | How to reset | Reset conditions                                                                                                                          | Note (LED indications, etc.)                        |
|---------------------|------|---------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|------------------------------------------------|-------------------------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
|                     |      |         | Item                                                                                       | Details                                                                               | Effective diagnosis area                       | I/O condition when diagnosis is conducted |              |                                                                                                                                           |                                                     |
| System diagnostic 4 | 3    | 0       | Number of system input/output points setting error                                         | The number of occupied system input/output points has exceeded the set value.         | System                                         | Continue                                  | Manual       | Change the user's set value. Or, adjust the unit configuration so that the number of occupied points is within the set value.             | Base MS: Red LED flashes                            |
|                     |      | 1       | Number of remote connections setting error (Outside of the wireless channel setting range) | Wireless channels other than those set at the remote connection have been registered. | System                                         | Continue                                  | Manual       | Change the number of remote connection set value. Or, delete the registration of the remote (wireless channels) outside of the set range. | Base MS: Red LED flashes                            |
|                     |      | 2       | Reserved                                                                                   | -                                                                                     | -                                              | -                                         | -            | -                                                                                                                                         | -                                                   |
|                     |      | 3       | Reserved                                                                                   | -                                                                                     | -                                              | -                                         | -            | -                                                                                                                                         | -                                                   |
|                     |      | 4       | Reserved                                                                                   | -                                                                                     | -                                              | -                                         | -            | -                                                                                                                                         | -                                                   |
|                     |      | 5       | Number of system input/output points has exceeded the upper limit                          | The number of occupied system input/output points has exceeded 1280/1280 points.      | System                                         | Stop (HOLD)                               | Manual       | Adjust the unit configuration so that the number of system input/output points is within the controllable numbers.                        | Base MS: Red LED is ON<br>or<br>W-NS: Red LED is ON |
|                     |      | 6       | Wireless registration data failed                                                          | An error has been generated in the wireless registration information.                 | System                                         | Stop (HOLD)                               | Manual       | Supply power again. If the error is not restored after resupplying power, contact your SMC sales representative.                          | Base MS: Red LED is ON<br>or<br>W-NS: Red LED is ON |
|                     |      | 7       | Detection of wireless hardware error                                                       | A Non-restorable error has been generated in the hardware of the wireless units.      | System                                         | Stop (HOLD)                               | Manual       | Supply power again. If the error is not restored after resupplying power, contact your SMC sales representative.                          | Base MS: Red LED is ON<br>or<br>W-NS: Red LED is ON |

| Item                                                                              | Byte | Bit No. | Content of diagnostics                                                 |         | Diagnosis area and condition when error occurs |                                           | How to reset | Reset conditions | Note (LED indications, etc.)                                                                                                                                                         |
|-----------------------------------------------------------------------------------|------|---------|------------------------------------------------------------------------|---------|------------------------------------------------|-------------------------------------------|--------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   |      |         | Item                                                                   | Details | Effective diagnosis area                       | I/O condition when diagnosis is conducted |              |                  |                                                                                                                                                                                      |
| Remote connection information<br>Wireless channel 1-7<br>(Bit 0 is fixed at "0".) | 4    | 0       | -                                                                      | -       | -                                              | -                                         | -            | -                | When the connection data is "0", the wireless communication with the remote is not connected. When the connection data is "1", the wireless communication with the remote is normal. |
|                                                                                   |      | 1       | Connection condition of the remote communication (Wireless channel 1)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 2       | Connection condition of the remote communication (Wireless channel 2)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 3       | Connection condition of the remote communication (Wireless channel 3)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 4       | Connection condition of the remote communication (Wireless channel 4)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 5       | Connection condition of the remote communication (Wireless channel 5)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 6       | Connection condition of the remote communication (Wireless channel 6)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 7       | Connection condition of the remote communication (Wireless channel 7)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
| Remote connection information<br>Wireless channel 8-15                            | 5    | 0       | Connection condition of the remote communication (Wireless channel 8)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 1       | Connection condition of the remote communication (Wireless channel 9)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 2       | Connection condition of the remote communication (Wireless channel 10) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 3       | Connection condition of the remote communication (Wireless channel 11) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 4       | Connecting condition of the remote communication (Wireless channel 12) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 5       | Connection condition of the remote communication (Wireless channel 13) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 6       | Connection condition of the remote communication (Wireless channel 14) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |
|                                                                                   |      | 7       | Connection condition of the remote communication (Wireless channel 15) | -       | -                                              | -                                         | -            | -                |                                                                                                                                                                                      |

| Item                                                                             | Byte | Bit No. | Content of diagnostics                                                       |         | Diagnosis area and condition when error occurs |                                           | How to reset | Reset conditions | Note (LED indications, etc.)                                                                                                                    |
|----------------------------------------------------------------------------------|------|---------|------------------------------------------------------------------------------|---------|------------------------------------------------|-------------------------------------------|--------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                  |      |         | Item                                                                         | Details | Effective diagnosis area                       | I/O condition when diagnosis is conducted |              |                  |                                                                                                                                                 |
| Remote diagnostic information<br>Wireless channel 1-7<br>(Bit 0 is for the base) | 6    | 0       | Presence/absence of system information error of base                         |         | -                                              | -                                         | -            | -                | No error in the base/remote when the diagnostic data is "0".<br>An error has been generated in the base/remote when the diagnostic data is "1". |
|                                                                                  |      | 1       | Presence/absence of system information error of remote (Wireless channel 1)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 2       | Presence/absence of system information error of remote (Wireless channel 2)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 3       | Presence/absence of system information error of remote (Wireless channel 3)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 4       | Presence/absence of system information error of remote (Wireless channel 4)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 5       | Presence/absence of system information error of remote (Wireless channel 5)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 6       | Presence/absence of system information error of remote (Wireless channel 6)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 7       | Presence/absence of system information error of remote (Wireless channel 7)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
| Remote diagnostic information<br>(Wireless channel 8-15)                         | 7    | 0       | Presence/absence of system information error of remote (Wireless channel 8)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 1       | Presence/absence of system information error of remote (Wireless channel 9)  |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 2       | Presence/absence of system information error of remote (Wireless channel 10) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 3       | Presence/absence of system information error of remote (Wireless channel 11) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 4       | Presence/absence of system information error of remote (Wireless channel 12) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 5       | Presence/absence of system information error of remote (Wireless channel 13) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 6       | Presence/absence of system information error of remote (Wireless channel 14) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |
|                                                                                  |      | 7       | Presence/absence of system information error of remote (Wireless channel 15) |         | -                                              | -                                         | -            | -                |                                                                                                                                                 |

| Item                                                                          | Byte | Bit No. | Content of diagnostics                       |         | Diagnosis area and condition when error occurs |                                           | How to reset | Reset conditions | Note (LED indications, etc.)                                                                                                      |
|-------------------------------------------------------------------------------|------|---------|----------------------------------------------|---------|------------------------------------------------|-------------------------------------------|--------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------|
|                                                                               |      |         | Item                                         | Details | Effective diagnosis area                       | I/O condition when diagnosis is conducted |              |                  |                                                                                                                                   |
| Remote registration information Wireless channel 1-7 (Bit 0 is fixed at "0".) | 8    | 0       | -                                            | -       | -                                              | -                                         | -            | -                | When the registration data is "0", no remote has been registered. When the registration data is "1", remote have been registered. |
|                                                                               |      | 1       | Registration of remote (Wireless channel 1)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 2       | Registration of remote (Wireless channel 2)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 3       | Registration of remote (Wireless channel 3)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 4       | Registration of remote (Wireless channel 4)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 5       | Registration of remote (Wireless channel 5)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 6       | Registration of remote (Wireless channel 6)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 7       | Registration of remote (Wireless channel 7)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
| Remote registration information (Wireless channel 8-15)                       | 9    | 0       | Registration of remote (Wireless channel 8)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 1       | Registration of remote (Wireless channel 9)  | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 2       | Registration of remote (Wireless channel 10) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 3       | Registration of remote (Wireless channel 11) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 4       | Registration of remote (Wireless channel 12) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 5       | Registration of remote (Wireless channel 13) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 6       | Registration of remote (Wireless channel 14) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |
|                                                                               |      | 7       | Registration of remote (Wireless channel 15) | -       | -                                              | -                                         | -            | -                |                                                                                                                                   |

\*: The LED indicator W-MS on the base indicates the system status of the remote.

If it is ON or flashes, errors have been generated in the registered remote.

\*: When the diagnostic data of the system diagnostics 1-4 is "0", no error is generated. When it is "1", errors have been generated.

\*: This table is for 15 connected remote as set in the base setting.

The diagnostic size of the remote connection information, diagnostic information and registration information vary depending on the setting for the number of connected remote. Refer to the diagnostic size shown in the section "Diagnostic allocation" for details.



# Specifications

## •Base specifications

| Models                                |                             |                      | EX600-WEN1                                                                                                                                                                                                                                                                                                                                                        | EX600-WEN2 |
|---------------------------------------|-----------------------------|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| Communication specifications          | Communication protocol      |                      | EtherNet/IP™ (Conformance test version: Composit 12)                                                                                                                                                                                                                                                                                                              |            |
|                                       | Transmission medium (cable) |                      | Standard Ethernet cable (CAT5 or higher, 100BASE-TX)                                                                                                                                                                                                                                                                                                              |            |
|                                       | Transmission speed          |                      | 10 Mbps/100 Mbps                                                                                                                                                                                                                                                                                                                                                  |            |
|                                       | Transmission method         |                      | Full duplex/Half duplex                                                                                                                                                                                                                                                                                                                                           |            |
|                                       | Configuration file          |                      | EDS file *1                                                                                                                                                                                                                                                                                                                                                       |            |
|                                       | IP address setting range    |                      | Manual/BOOTP, DHCP                                                                                                                                                                                                                                                                                                                                                |            |
|                                       | Device information          |                      | Vender ID: 7 (SMC Corporation)<br>Device Type: 12 (Communication adapter)<br>Product Code: 186                                                                                                                                                                                                                                                                    |            |
|                                       | Topology                    |                      | Star, bus, ring (including DLR), line, tree                                                                                                                                                                                                                                                                                                                       |            |
|                                       | QuickConnect™ function      |                      | Applicable                                                                                                                                                                                                                                                                                                                                                        |            |
|                                       | DLR function                |                      | Applicable                                                                                                                                                                                                                                                                                                                                                        |            |
|                                       | Web server function         |                      | Applicable                                                                                                                                                                                                                                                                                                                                                        |            |
| Wireless communication specifications | Protocol                    |                      | SMC original protocol (SMC encryption)                                                                                                                                                                                                                                                                                                                            |            |
|                                       | Radio wave type (spread)    |                      | Frequency Hopping Spread Spectrum (FHSS)                                                                                                                                                                                                                                                                                                                          |            |
|                                       | Frequency                   |                      | 2.4 GHz (2403 to 2481 MHz)                                                                                                                                                                                                                                                                                                                                        |            |
|                                       | Frequency channel           |                      | 79 ch (Bandwidth: 1.0 MHz)                                                                                                                                                                                                                                                                                                                                        |            |
|                                       | Communication speed         |                      | 250 kbps                                                                                                                                                                                                                                                                                                                                                          |            |
|                                       | Communication distance      |                      | Within 10 m (depending on the operating environment)                                                                                                                                                                                                                                                                                                              |            |
|                                       | Radio Law certificate       |                      | Japanese radio law (Japan), RE (EU *2), FCC (USA),<br>ANATEL (Brazil), NOM (Mexico), ETA (India),<br>IC (Canada), NBTC (Thailand), SRRC (China),<br>NCC (Taiwan), KC (Korea), ACMA (Australia/New Zealand),<br>IMDA (Singapore), SIRIM (Malaysia),<br>ENACOM (Argentina), ICASA (South Africa), NCT (Philippines),<br>FAC (Russia), CoC (Ukraine), ANRT (Morocco) |            |
| Electrical specifications             | For control and input (US1) | Power supply voltage | 24 VDC ±10%                                                                                                                                                                                                                                                                                                                                                       |            |
|                                       |                             | Current consumption  | 150 mA or less                                                                                                                                                                                                                                                                                                                                                    |            |
|                                       | For output (US2)            | Power supply voltage | 24 VDC±10%                                                                                                                                                                                                                                                                                                                                                        |            |
|                                       |                             | Max. supply current  | 4 A                                                                                                                                                                                                                                                                                                                                                               |            |

| Models                             |                                             |                    | EX600-WEN1                                                                                                                  | EX600-WEN2      |
|------------------------------------|---------------------------------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------|
| Input/Output specifications        | Number of inputs                            | System input size  | Max. 1280 points together with the registered remote                                                                        |                 |
|                                    |                                             | Input size         | Max. 128 points (increase or decrease by 16 points)                                                                         |                 |
|                                    | Number of outputs                           | System output size | Max. 1280 points together with the registered remote                                                                        |                 |
|                                    |                                             | Output size        | Max. 128 points (increase or decrease by 16 points)                                                                         |                 |
|                                    | Analogue input/output                       | AD refresh time    | 10 ms or less (the input connected to the base)<br>0.1/0.2/0.5/1/2/5/10/30/60 s<br>(the input connected to the remote) *3   |                 |
|                                    |                                             | DA refresh time    | 10 ms or less (the output connected to the base)<br>0.1/0.2/0.5/1/2/5/10/30/60 s<br>(the output connected to the remote) *3 |                 |
|                                    | Valve output                                | Output type        | Source/PNP (-COM)                                                                                                           | Sink/NPN (+COM) |
|                                    |                                             | Number of outputs  | Max. 32 points (0/8/16/24/32 points)                                                                                        |                 |
|                                    |                                             | Connected load     | Solenoid valve with surge voltage suppressor of 24 VDC and 1.5W or less (manufactured by SMC)                               |                 |
|                                    | Number of remote connected                  |                    | Max. 127 pcs. (0/15/31/63/127 pcs.)                                                                                         |                 |
| General specifications             | Enclosure rating                            |                    | Conforms to IP67 (with manifold assembled)                                                                                  |                 |
|                                    | Ambient temperature (Operating temperature) |                    | -10 to +50°C                                                                                                                |                 |
|                                    | Ambient temperature (storage temperature)   |                    | -20 to +60°C                                                                                                                |                 |
|                                    | Ambient humidity                            |                    | 35 to 85% RH (no condensation)                                                                                              |                 |
|                                    | Withstand voltage                           |                    | 500 VAC-1 minute between external terminals and metallic parts                                                              |                 |
|                                    | Insulation resistance                       |                    | 10 MΩ or more<br>(500 VDC between external terminals and metallic parts)                                                    |                 |
|                                    | Vibration resistance                        |                    | Conforms to EN61131-2<br>5 ≤ f < 8.4 Hz 3.5 mm<br>8.4 ≤ f < 150 Hz 9.8 m/s <sup>2</sup><br>(Excluding valve manifold)       |                 |
|                                    | Impact resistance                           |                    | Conforms to EN61131-2<br>147 m/s <sup>2</sup> , 11 ms<br>(Excluding valve manifold)                                         |                 |
|                                    | Standard                                    |                    | CE marked                                                                                                                   |                 |
|                                    | Weight                                      |                    | 300 g                                                                                                                       |                 |
| NFC communication specifications * | Communication standard                      |                    | ISO/IEC14430B (Type-B)                                                                                                      |                 |
|                                    | Frequency                                   |                    | 13.56 MHz                                                                                                                   |                 |
|                                    | Communication speed                         |                    | 20 to 100 kHz (I2C)                                                                                                         |                 |
|                                    | Communication distance                      |                    | Up to 1 cm                                                                                                                  |                 |

\*1: The configuration file can be downloaded from the SMC website: <https://www.smcworld.com>

\*2: Austria, Belgium, Bulgaria, Croatia, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, U.K., Turkey.  
(As of March 2018)

\*3: Varies depending on the wireless communication status and the surrounding environment.

\*4: The NFC communication RFID tag of the 13.56 MHz passive type.

\*: "เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช."

(This telecommunication equipment conforms to the technical standards or requirements of NBTC.)

## 적합성 평가의 인증표시



|          |                                    |
|----------|------------------------------------|
| 인증 취득 상호 | S M C 주식회사                         |
| 기기 명칭    | 무선 데이터 통신 시스템용 무선기기<br>(무선 마스터 유닛) |
| 제조년월     | 별도 표시                              |
| 인증번호     | R-C-OZK-WEN1                       |
| 제조사/제조국가 | SMC 주식회사/일본                        |

### A급 기기

(업무용 방송 통신 기자재)

본 기기는 업무용(A급) 전자파 적합기기이므로 판매자 또는 사용자는 이를 주의하여 주십시오.

가정 이외의 지역에서의 사용을 목적으로 합니다.

해당 무선 설비는 운용중 전파 혼신의 가능성이 있습니다.

인명 안전에 관련된 서비스는 할 수 없습니다.

# •Remote specifications

| Models                                |                                     |                      | EX600-WSV1                                                                                                                                                                                                                                                                                                                                                | EX600-WSV2      |
|---------------------------------------|-------------------------------------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Electrical specifications             | For control and input (US1)         | Power supply voltage | 24 VDC $\pm 10\%$                                                                                                                                                                                                                                                                                                                                         |                 |
|                                       |                                     | Current consumption  | 70 mA or less                                                                                                                                                                                                                                                                                                                                             |                 |
|                                       | For output (US2)                    | Power supply voltage | 24 VDC $\pm 10\%$                                                                                                                                                                                                                                                                                                                                         |                 |
|                                       |                                     | Max. supply current  | 4 A                                                                                                                                                                                                                                                                                                                                                       |                 |
| Input/output specifications           | Number of inputs                    | Input size           | Max. 128 points (increase or decrease by 16 points)                                                                                                                                                                                                                                                                                                       |                 |
|                                       | Number of outputs                   | Output size          | Max. 128 points (increase or decrease by 16 points)                                                                                                                                                                                                                                                                                                       |                 |
|                                       | AD/DA refresh time                  |                      | 0.1/0.2/0.5/1/2/5/10/30/60 s <sup>*1</sup>                                                                                                                                                                                                                                                                                                                |                 |
|                                       | Number of connected EX600 I/O units |                      | Max. Nine EX600 I/O units<br>(I/O = 128, I/O above 128 cannot be recognized)                                                                                                                                                                                                                                                                              |                 |
|                                       | Valve output                        | Output type          | Source/PNP (-COM)                                                                                                                                                                                                                                                                                                                                         | Sink/NPN (+COM) |
|                                       |                                     | Number of outputs    | Max. 32 points (0/8/16/24/32 points)                                                                                                                                                                                                                                                                                                                      |                 |
|                                       |                                     | Connected load       | Solenoid valve with surge voltage suppressor of 24 VDC and 1.5 W or less (manufactured by SMC)                                                                                                                                                                                                                                                            |                 |
| Wireless communication specifications | Protocol                            |                      | SMC original protocol (SMC encryption)                                                                                                                                                                                                                                                                                                                    |                 |
|                                       | Radio wave type (spread)            |                      | Frequency Hopping Spread Spectrum (FHSS)                                                                                                                                                                                                                                                                                                                  |                 |
|                                       | Frequency                           |                      | 2.4 GHz (2403 to 2481 MHz)                                                                                                                                                                                                                                                                                                                                |                 |
|                                       | Frequency channel                   |                      | 79 ch (Bandwidth: 1.0 MHz)                                                                                                                                                                                                                                                                                                                                |                 |
|                                       | Communication speed                 |                      | 250 kbps                                                                                                                                                                                                                                                                                                                                                  |                 |
|                                       | Communication distance              |                      | Within 10 m (depending on the operating environment)                                                                                                                                                                                                                                                                                                      |                 |
|                                       | Radio Law certificate               |                      | Japanese radio law, RE (European <sup>*2</sup> ), FCC (USA), ANATEL (Brazil), NOM (Mexico), ETA (India), IC (Canada), NBTC (Thailand), SRRC (China), NCC (Taiwan), KC (Korea), ACMA (Australia/New Zealand), IMDA (Singapore), SIRIM (Malaysia), ENACOM (Argentina), ICASA (South Africa), NCT (Philippines), FAC (Russia), CoC (Ukraine), ANRT (Morocco) |                 |

| Models                             |                                                | EX600-WSV1                                                                                                            | EX600-WSV2 |
|------------------------------------|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|------------|
| General specifications             | Enclosure rating                               | Conforms to IP67 (with manifold assembled)                                                                            |            |
|                                    | Ambient temperature<br>(Operating temperature) | -10 to +50 °C                                                                                                         |            |
|                                    | Ambient temperature<br>(storage temperature)   | -20 to +60 °C                                                                                                         |            |
|                                    | Ambient humidity                               | 35 to 85%RH (no condensation)                                                                                         |            |
|                                    | Withstand voltage                              | 500 VAC-1 minute between external terminals and metallic parts                                                        |            |
|                                    | Insulation resistance                          | 10 MΩ or more<br>(500 VDC between external terminals and metallic parts)                                              |            |
|                                    | Vibration resistance                           | Conforms to EN61131-2<br>5 ≤ f < 8.4 Hz 3.5 mm<br>8.4 ≤ f < 150 Hz 9.8 m/s <sup>2</sup><br>(Excluding valve manifold) |            |
|                                    | Impact resistance                              | Conforms to EN61131-2<br>147 m/s <sup>2</sup> , 11 ms<br>(Excluding valve manifold)                                   |            |
|                                    | Standard                                       | CE marked                                                                                                             |            |
|                                    | Weight                                         | 280 g                                                                                                                 |            |
| NFC communication specifications * | Communication standard                         | ISO/IEC14430B (Type-B)                                                                                                |            |
|                                    | Frequency                                      | 13.56 MHz                                                                                                             |            |
|                                    | Communication speed                            | 20 to 100 kHz (I2C)                                                                                                   |            |
|                                    | Communication distance                         | Up to 1 cm                                                                                                            |            |

\*1: Varies depending on the wireless communication status and the surrounding environment.

\*2: Austria, Belgium, Bulgaria, Croatia, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, U.K., Turkey.  
(As of March 2018)

\*3: The NFC communication RFID tag of the 13.56 MHz passive type.

\*: "เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของกสทช."

(This telecommunication equipment conforms to the technical standards or requirements of NBTC.)

## 적합성 평가의 인증표시



|          |                                     |
|----------|-------------------------------------|
| 인증 취득 상호 | S M C 주식회사                          |
| 기기 명칭    | 무선 데이터 통신 시스템용 무선기기<br>(무선 슬레이브 유닛) |
| 제조년월     | 별도 표시                               |
| 인증번호     | R-C-OZK-WSV1                        |
| 제조사/제조국가 | SMC 주식회사/일본                         |

### A급 기기

(업무용 방송 통신 기자재)

본 기기는 업무용(A급) 전자파 적합기기이므로 판매자 또는 사용자는 이를 주의하여 주십시오.

가정 이외의 지역에서의 사용을 목적으로 합니다.

해당 무선 설비는 운용중 전파 혼신의 가능성이 있습니다.

인명 안전에 관련된 서비스는 할 수 없습니다.

## Troubleshooting

When problems occur, take appropriate countermeasures while referring to the LED indication, troubleshooting and parameter settings.

If a cause applicable to the failure cannot be identified, this indicates that the equipment itself is broken. The fieldbus system damage can be caused by the operating environment. Contact SMC to obtain countermeasures.

### •Troubleshooting list for base

| LED                                                     | Description                        | Error indication                       | No.                      |
|---------------------------------------------------------|------------------------------------|----------------------------------------|--------------------------|
| -                                                       | All LEDs are OFF.                  | -                                      | Refer to problem No. 1.  |
| PWR (V)                                                 | PWR(V) LED does not turn on green. | Red LED flashes.                       | Refer to problem No. 2.  |
| NS                                                      | NS LED does not turn on green.     | Green LED flashes.                     | Refer to problem No. 3.  |
|                                                         |                                    | Red LED flashes.                       |                          |
|                                                         |                                    | Red LED is ON.                         |                          |
|                                                         |                                    | OFF                                    |                          |
| MS                                                      | MS LED does not turn on green.     | Green LED flashes.                     | Refer to problem No. 4.  |
|                                                         |                                    | Red LED flashes.                       |                          |
|                                                         |                                    | Red LED is ON.                         |                          |
|                                                         |                                    | OFF                                    |                          |
| W-SS                                                    | Red W-SS LED flashes or is OFF.    | Red LED flashes.                       | Refer to problem No. 5.  |
|                                                         |                                    | OFF                                    |                          |
| W-NS                                                    | W-NS LED does not turn on green.   | Green LED flashes.                     | Refer to problem No. 6.  |
|                                                         |                                    | Red LED flashes.                       |                          |
|                                                         |                                    | Red LED is ON.                         |                          |
|                                                         |                                    | Orange LED is ON.                      |                          |
|                                                         |                                    | Red and green LEDs are ON alternately. |                          |
|                                                         |                                    | OFF                                    |                          |
| W-MS                                                    | W-MS LED does not turn on green.   | Red LED flashes.                       | Refer to problem No. 7.  |
|                                                         |                                    | Red LED is ON.                         |                          |
|                                                         |                                    | OFF                                    |                          |
| LINK/ACT                                                | LINK/ACT1 and 2 LED are ON or OFF. | ON                                     | Refer to problem No. 8.  |
|                                                         |                                    | OFF                                    |                          |
| The valve does not operate correctly.                   |                                    |                                        | Refer to problem No. 9.  |
| Digital input/output device does not operate correctly. |                                    |                                        | Refer to problem No. 10. |
| Analogue input/output device does not operate correctly |                                    |                                        | Refer to problem No. 11. |
| Problems related to NFC.                                |                                    |                                        | Refer to problem No. 12. |

•Troubleshooting for base

| Problem No. | Error indication         | Possible cause                                                  | Investigation and countermeasures                                                                                                                                                                          |
|-------------|--------------------------|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1           | All LEDs are OFF.        | Power supply for control and input (US1) has not been supplied. | Supply a voltage of 24 VDC $\pm$ 10% to the power supply for control and input (US1).                                                                                                                      |
| 2           | PWR(V): Red LED flashes. | Output power supply voltage (US2) is low.                       | The power supply voltage for output (US2) has dropped. Check that a voltage of 24 VDC $\pm$ 10% is applied.                                                                                                |
|             | PWR(V): LED is OFF.      | Power supply for control and input (US1) has not been supplied. | Supply a voltage of 24 VDC $\pm$ 10% to the power supply for control and input (US1).                                                                                                                      |
| 3           | NS: Green LED flashes.   | EtherNet/IP™ communication has not been established.            | Check the following and restart.<br>•Signal line from PLC is connected correctly.<br>•The communication speed of the PLC and base is appropriate.<br>•Wire the communication line away from noise sources. |
|             | NS: Red LED flashes.     | EtherNet/IP™ communication time out.                            | Check the following and restart.<br>•Signal line from PLC is connected correctly.<br>•The communication speed of the PLC and base is appropriate.<br>•Wire the communication line away from noise sources. |
|             | NS: Red LED is ON.       | IP address has been duplicated.                                 | The set IP address has been used for other equipment.<br>Set an IP address which has not been used.                                                                                                        |
|             | NS: LED is OFF.          | IP address not set.                                             | Set the IP address correctly.                                                                                                                                                                              |



| Problem No. | Error indication       | Possible cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Investigation and countermeasures                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4           | MS: Green LED flashes. | (1) Abnormal configuration.<br>(2) The PLC is in idling state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | (1) Set up the configuration correctly.<br>(2) Set the PLC to RUN status.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|             | MS: Red LED flashes.   | The following diagnostic information is detected.<br><br>(1) Low power supply voltage for control and input (US1).<br>(2) Excessive I/O setting inputs/outputs.<br><br>(3) Abnormal number of remote connection<br><br>(4) Error in communication between units.<br>(4)-1 Abnormal digital input unit.<br>(4)-2 Abnormal digital output unit.<br>(4)-3 Abnormal digital input/output unit.<br><br>(5) EX600 I/O unit detects diagnostic information.<br>(5)-1 Short-circuited power supply voltage for control and input (US1).<br>(5)-2 Short-circuited power supply voltage for output (US2).<br>(5)-3 Short-circuited output load<br>(5)-4 Analogue I/O upper and lower set limit exceeded<br>(5)-5 Analogue Input range upper and lower limit exceeded<br>(5)-6 ON/OFF operations has exceeded the set value<br><br>(6) Valve diagnostic information detected.<br>(6)-1 Valve short-circuited.<br>(6)-2 Broken valve wire | After checking the error contents referring to the system diagnostic information and LED indication, refer to the following countermeasures.<br><br>(1) The power supply voltage for control and input (US1) has dropped. Check that a voltage of 24 VDC $\pm$ 10% is applied.<br>(2)-1 The number of system input/output points has exceeded the set value. Check the total number of input/output points allocated to the wireless system (base and remote).<br>(2)-2 The input and output sizes have exceeded the set value. Check the occupied bytes of the EX600 I/O unit and valve manifold connected to the wireless base.<br>(3) Change the set number of remote connections. Delete the registration of the remote (wireless channels) outside of the set range or change the channel setting.<br>(4) Confirm that there is no loose connection between the units and connect them correctly.<br><br>(5) Check the part where the error occurs by checking the LED indication and information of the system diagnostics, and refer to the operation manual for the digital and analogue unit.<br><br>6) Replace the valve and check the operation. |
|             | MS: Red LED is ON.     | (1) Number of system input/output points has exceeded the upper limit.<br>(2) Base broken                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | (1) Check the number of input/output points allocated to the wireless system (base and remote) is more than 1280 points. Adjust the number of input/output points so that it is not more than 1280 points.<br>(2) Replace the base.<br>If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|             | MS : LED is OFF.       | Base power OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Check that the power supply voltage for control and input (US1) is supplied to the base.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

| Problem No. | Error indication         | Possible cause                                                                                    | Investigation and countermeasures                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5           | W-SS: Red LED flashes.   | (1) Power has not been supplied to the remote.<br>(2) Low signal power on wireless communication. | (1) Check that the power supply voltage for control and input (US1) is supplied to the remote.<br>(2) The distance which wireless communication between wireless systems can be established may have been exceeded. Reconsider the operating environment, such as the installation conditions, of the base and remote. |
|             | W-SS: LED is OFF.        | Remote has not been registered.                                                                   | Check the registration status of the remote and conduct pairing correctly.                                                                                                                                                                                                                                             |
| 6           | W-NS: Green LED flashes. | (1) Power to the remote is OFF.<br>(2) Low signal power on wireless communication.                | (1) Check that the power supply voltage for control and input (US1) is supplied to the remote.<br>(2) The distance which wireless communication between wireless systems can be established may have been exceeded. Reconsider the operating environment, such as the installation conditions, of the base and remote. |
|             | W-NS: Red LED flashes.   | (1) Power to the remote is OFF.<br>(2) Low signal power on wireless communication.                | (1) Check that the power supply voltage for control and input (US1) is supplied to the remote.<br>(2) The distance which wireless communication between wireless systems can be established may have been exceeded. Reconsider the operating environment, such as the installation conditions, of the base and remote. |
|             | W-NS: Red LED is ON.     | No remote are connected.                                                                          | Replace the base.<br>If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.                                                                                                                                                                               |
|             | W-NS: Orange LED is ON.  | Forced output.                                                                                    | The base has been set to Forced output mode. Change the mode according to the application.                                                                                                                                                                                                                             |
|             | W-NS: Red/green          | Wireless communication connection is in paring mode.                                              | The system has been set to "Paring enable". Change the setting to "Paring disable" when pairing is not conducted.                                                                                                                                                                                                      |
|             | W-NS: LED is OFF.        | Remote has not been registered.                                                                   | Check the registration status of the wireless unit and conduct pairing correctly.                                                                                                                                                                                                                                      |

| Problem No. | Error indication       | Possible cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Investigation and countermeasures                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7           | W-MS: Red LED flashes. | <p>The following diagnostic information is detected.</p> <p>(1) Low power supply voltage for control and input (US1).</p> <p>(2) Low power supply voltage level for output (US2).</p> <p>(3) Excessive I/O setting for inputs/outputs.</p> <p>(4) Error in communication between units.<br/> (4)-1 Abnormal digital input unit.<br/> (4)-2 Abnormal digital output unit.<br/> (4)-3 Abnormal digital input/output unit.</p> <p>(5) EX600 I/O unit detects diagnostic information.<br/> (5)-1 Short-circuited power supply voltage for control and input (US1).<br/> (5)-2 Short-circuited power supply voltage for output (US2).<br/> (5)-3 Short-circuited output load.<br/> (5)-4 Analogue I/O upper and lower set limit exceeded<br/> (5)-5 Analogue Input range upper and lower limit exceeded</p> <p>(6) Valve diagnostic information detected.<br/> (6)-1 Valve short-circuited.<br/> (6)-2 Broken valve wire</p> | <p>After checking the error contents while referring to the system diagnostic information and LED indication, refer to the following countermeasures.</p> <p>As this LED indicates the system status of the remote, the following diagnoses can be conducted only when the diagnostic allocation is set to "Detailed".</p> <p>(1) The power supply voltage for control and input (US1) has dropped. Check that a voltage of 24 VDC<math>\pm</math>10% is supplied.</p> <p>(2) The power supply voltage for output (US2) has dropped. Check that a voltage of 24 VDC<math>\pm</math>10% is supplied.</p> <p>(3) The input and output sizes have exceeded the set value. Check the occupied bytes of the EX600 I/O unit and valve manifold connected to the remote.</p> <p>(4) Confirm that there is no loose connection between the units and connect them correctly.</p> <p>(5) Check the part where the error occurs by checking the LED indication and information of the system diagnosis, and refer to the operation manual for the digital and analogue unit.</p> <p>(6) Replace the valve, and check the operation.</p> |
|             | W-MS: Red LED is ON.   | Remote broken.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <p>Replace the remote.</p> <p>If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|             | W-MS: LED is OFF.      | <p>(1) Remote has not been registered.</p> <p>(2) Power has not been supplied to the remote.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <p>(1) Check the registration status of the remote and conduct pairing correctly.</p> <p>(2) Check that the power supply voltage for control and input (US1) is supplied to the remote.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

| Problem No. | Error indication                      | Possible cause                                          | Investigation and countermeasures                                                                                                                                                                                                                                                                    |
|-------------|---------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8           | LINK/ACT: LED is ON.<br>(PORT-1, -2)  | LINK is established, but no data has been received.     | Check the following items and restart.<br>(1) Check the PLC condition and run the PLC.<br>(2) Check for looseness and broken lines of the connector.<br>(3) Keep noise sources away from the communication cable.                                                                                    |
|             | LINK/ACT: LED is OFF.<br>(PORT-1, -2) | LINK has not been established.                          | Check the following items and restart.<br>(1) Check that power is supplied to the EtherNet/IP™ device one level above.<br>(2) Check for looseness and broken lines of the connector of the LINK/ACT PORT 1/PORT 2 communication cables.<br>(3) Keep noise sources away from the communication cable. |
| 9           | Abnormal valve operation.             | Abnormal program.                                       | Check if the program such as PLC ladder logic program works correctly.                                                                                                                                                                                                                               |
|             |                                       | Output power supply voltage (US2) is low.               | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC±10% to the power supply for output (US2).                                                                                                                                        |
|             |                                       | Connection failure between the base and valve manifold. | Confirm that the connector between the base and valve manifold has not been damaged, such as bent pins, and connect them correctly.                                                                                                                                                                  |
|             |                                       | Mismatched output type.                                 | If the polarity of the valve does not match with the base, replace one of them to make the combination match.<br>•EX600-WEN1 (PNP output)<br>⇒ Negative common type valve (-COM)<br>•EX600-WEN2 (NPN output)<br>⇒ Positive common type valve (+COM)                                                  |
|             |                                       | Base broken.                                            | Replace the base and check the operation.                                                                                                                                                                                                                                                            |
|             |                                       | Valve failure.                                          | Replace the valve, and check the operation.<br>Or refer to Troubleshooting for the valve.                                                                                                                                                                                                            |

| Problem No. | Error indication                             | Possible cause                                        | Investigation and countermeasures                                                                                                                                   |
|-------------|----------------------------------------------|-------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10          | Abnormal digital input device operation.     | Mismatched input type.                                | If the polarities (PNP, NPN) of the digital input unit do not match with those of digital input equipment, replace one of them to make the combination match.       |
|             |                                              | Low power supply voltage for control and input (US1). | Check that the power supply voltage for control and input (US1) of 24 VDC $\pm$ 10% is supplied to the base.                                                        |
|             |                                              | Wiring or connection failure.                         | Connect the wiring between the digital input unit and the digital input equipment correctly.                                                                        |
|             |                                              | Digital input unit broken.                            | Replace the digital input unit, and check the operation.                                                                                                            |
|             |                                              | Digital input equipment broken.                       | Replace the digital input equipment, and check the operation. Or, refer to Troubleshooting for the applicable digital input equipment.                              |
|             | Abnormal digital output equipment operation. | Mismatched output type.                               | If the polarities (PNP, NPN) of the digital output unit do not match with those of digital output equipment, replace one of them to make the combination match.     |
|             |                                              | Output power supply voltage (US2) is low.             | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC $\pm$ 10% to the power supply for output (US2). |
|             |                                              | Wiring or connection failure.                         | Connect the wiring between the digital output unit and the digital output equipment correctly.                                                                      |
|             |                                              | Digital output unit broken.                           | Replace the digital output unit, and check the operation.                                                                                                           |
|             |                                              | Digital output equipment broken.                      | Replace the digital output equipment, and check the operation. Or, refer to Troubleshooting for the applicable digital output equipment.                            |
|             |                                              | Abnormal program.                                     | Check that the program such as PLC ladder logic program operates correctly.                                                                                         |

| Problem No. | Error indication                                    | Possible cause                                    | Investigation and countermeasures                                                                                                                                    |
|-------------|-----------------------------------------------------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11          | Abnormal operation of the analogue input equipment  | Abnormal power supply for control and input (US1) | Check that the power supply voltage for control and input (US1) supplied to the base is 24 VDC $\pm 10\%$ .                                                          |
|             |                                                     | Analogue input signal range setting failure       | Check the analogue input equipment specification, and set the input signal range according to the specification.                                                     |
|             |                                                     | Analogue data format does not match.              | Check that the data format setting of the analogue input unit is correct.                                                                                            |
|             |                                                     | Wiring or connection is defective.                | Connect the wiring between the digital input unit and the digital input equipment correctly.                                                                         |
|             |                                                     | Analogue input unit faulty                        | Replace the analogue input unit, and check the operation.                                                                                                            |
|             |                                                     | Analogue input equipment faulty                   | Replace the analogue input equipment, and check the operation. Or, refer to Troubleshooting for the applicable analogue input equipment.                             |
|             | Abnormal operation of the analogue output equipment | Abnormal power supply for output (US2)            | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC $\pm 10\%$ to the power supply for output (US2). |
|             |                                                     | Analogue output signal range setting failure      | Check the analogue output equipment specification, and set the output signal range according to the specification.                                                   |
|             |                                                     | Analogue data format does not match.              | Check that the data format setting of the analogue output unit is correct.                                                                                           |
|             |                                                     | Wiring or connection is defective.                | Connect the wiring between the analogue output unit and the analogue output equipment correctly.                                                                     |
|             |                                                     | Analogue output unit faulty                       | Replace the analogue output unit, and check the operation.                                                                                                           |
|             |                                                     | Analogue output equipment faulty                  | Replace the analogue output equipment, and check the operation. Or, refer to Troubleshooting for the applicable analogue output equipment.                           |
|             |                                                     | Abnormal program, etc.                            | Check that the ladder logic program works correctly.                                                                                                                 |

| Problem No. | Error indication        | Possible cause                                                | Investigation and countermeasures                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|-------------------------|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12          | NFC communication error | NFC communication is not established (communication failure). | <p>Check the following items and check the operation again.</p> <ul style="list-style-type: none"> <li>•Check if the specifications of the NFC reader/writer to be used are appropriate.</li> <li>•Confirm that the settings of the NFC port and PaSoRi of the PC are correct.</li> <li>•Confirm that the NFC reader/writer are connected correctly.</li> <li>•The communication distance is outside of the NFC range. Place the body (area close to NFC antenna) close to the NFC reader/writer.</li> </ul> |
|             |                         | NFC reader/writer broken.                                     | <p>Replace the NFC reader/writer and check the operation. If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.</p>                                                                                                                                                                                                                                                                                                                            |

•Troubleshooting list for remote

| LED                                                     | Details                            | Error indication                       | No.                     |
|---------------------------------------------------------|------------------------------------|----------------------------------------|-------------------------|
| -                                                       | All LEDs are OFF.                  | -                                      | Refer to problem No. 1. |
| PWR (V)                                                 | PWR(V) LED does not turn on green. | Red LED flashes.                       | Refer to problem No. 2. |
| MS                                                      | MS LED does not turn on green.     | Red LED flashes.                       | Refer to problem No. 3. |
|                                                         |                                    | Red LED is ON                          |                         |
|                                                         |                                    | OFF                                    |                         |
| W-SS                                                    | Red W-SS LED flashes or is OFF.    | Red LED flashes.                       | Refer to problem No. 4. |
|                                                         |                                    | OFF                                    |                         |
| W-NS                                                    | W-NS LED does not turn on green.   | Green LED flashes.                     | Refer to problem No. 5. |
|                                                         |                                    | Red LED flashes.                       |                         |
|                                                         |                                    | Red LED is ON.                         |                         |
|                                                         |                                    | Orange LED is ON.                      |                         |
|                                                         |                                    | Red and green LEDs are ON alternately. |                         |
|                                                         |                                    | OFF                                    |                         |
| The valve does not operate correctly.                   |                                    |                                        | Refer to problem No. 6. |
| Digital input/output device does not operate correctly. |                                    |                                        | Refer to problem No. 7. |
| Analog input/output device does not operate correctly.  |                                    |                                        | Refer to problem No. 8. |
| Problems related to the NFC.                            |                                    |                                        | Refer to problem No. 9. |



•Troubleshooting for remote

| Problem No. | Error indication         | Possible cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Investigation and countermeasures                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1           | All LEDs are OFF.        | Power supply for control and input (US1) is OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Supply a voltage of 24 VDC $\pm$ 10% to the power supply for control and input (US1).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 2           | PWR(V): Red LED flashes. | Output power supply voltage (US2) is low.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | The power supply voltage for output (US2) has dropped. Check that a voltage of 24 VDC $\pm$ 10% is supplied.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|             | PWR(V): LED is OFF.      | Power supply for control and input (US1) is OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Supply a voltage of 24 VDC $\pm$ 10% to the power supply for control and input (US1).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 3           | MS: Red LED flashes.     | <p>The following diagnostic information is detected.</p> <p>(1) Low power supply voltage level for control and input (US1).</p> <p>(2) Excessive I/O setting inputs/outputs.</p> <p>(3) Error in communication between units.<br/>           (3)-1 Abnormal digital input unit.<br/>           (3)-2 Abnormal digital output unit.<br/>           (3)-3 Abnormal digital input/output unit.</p> <p>(4) EX600 I/O unit detects diagnostic information<br/>           (4)-1 Short-circuited power supply voltage for control and input (US1).<br/>           (4)-2 Short-circuited power supply voltage for output (US2).<br/>           (4)-3 Short-circuited output load.<br/>           (4)-4 Analogue I/O upper and lower set limit exceeded<br/>           (4)-5 Analogue Input range upper and lower limit exceeded</p> <p>(5) Valve diagnostic information detected.<br/>           (5)-1 Valve short-circuited.<br/>           (5)-2 Broken valve wire</p> | <p>After checking the error contents while referring to the system diagnostic information and LED indication, refer to the following countermeasures.</p> <p>(1) The power supply voltage for control and input (US1) has dropped. Check the voltage of 24 VDC<math>\pm</math>10% is supplied.</p> <p>(2) The input and output sizes have exceeded the set value. Check the occupied bytes of the EX600 I/O unit and valve manifold connected to the remote.</p> <p>(3) Confirm that there is no loose connection between the units and connect them correctly.</p> <p>(4) Check the part where the error occurs by checking the LED indication and the system diagnostic information, and refer to the operation manual for the digital and analogue unit.</p> <p>(5) Replace the valve, and check the operation.</p> |
|             | MS: Red LED is ON.       | Remote broken                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <p>Replace the remote.</p> <p>If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|             | MS: LED is OFF.          | <p>(1) Remote has not been registered.</p> <p>(2) Power to the remote is OFF.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <p>(1) Check the registration status of the remote and conduct pairing correctly.</p> <p>(2) Check that the power supply voltage for control and input (US1) is supplied to the remote.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

| Problem No. | Error indication        | Possible cause                                                                     | Investigation and countermeasures                                                                                                                                                                                                                                                                                      |
|-------------|-------------------------|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4           | W-SS: Red LED flashes.  | (1) Power to the remote is OFF.<br>(2) Low signal power on wireless communication. | (1) Check that the power supply voltage for control and input (US1) is supplied to the remote.<br>(2) The distance which wireless communication between wireless systems can be established may have been exceeded. Reconsider the operating environment, such as the installation conditions, of the base and remote. |
|             | W-SS: LED is OFF.       | Remote unit has not been registered.                                               | Check the registration status of the remote and conduct pairing correctly.                                                                                                                                                                                                                                             |
| 5           | W-NS: Red LED flashes.  | (1) Power to the base is OFF.<br>(2) Low signal power on wireless communication.   | (1) Check that the power supply voltage for control and input (US1) is supplied to the base.<br>(2) The distance which wireless communication between wireless systems can be established may have been exceeded. Reconsider the operating environment, such as the installation conditions, of the base and remote.   |
|             | W-NS: Red LED is ON.    | No remote are connected.                                                           | Replace the remote.<br>If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.                                                                                                                                                                             |
|             | W-NS: Orange LED is ON. | Forced output                                                                      | The base has been set to Forced output mode. Change the mode according to the application.                                                                                                                                                                                                                             |
|             | W-NS: Red/green LED     | Wireless communication connection is in paring mode.                               | The system has been set to "Paring enable". Change the setting to "Paring disable" when pairing is not conducted.                                                                                                                                                                                                      |
|             | W-NS: LED is OFF.       | Remote has not been registered.                                                    | Check the registration status of the wireless unit and conduct pairing with the remote correctly.                                                                                                                                                                                                                      |

| Problem No. | Error indication         | Possible cause                                          | Investigation and countermeasures                                                                                                                                                                                                                   |
|-------------|--------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6           | Abnormal valve operation | Abnormal program                                        | Check that the program such as the PLC ladder logic program operates correctly.                                                                                                                                                                     |
|             |                          | Output power supply voltage (US2) is low.               | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC $\pm$ 10% to the power supply for output (US2).                                                                                 |
|             |                          | Connection failure between the base and valve manifold. | Confirm that the connector between the base and manifold valve has not been damaged, such as bent pins, and connect them correctly.                                                                                                                 |
|             |                          | Mismatched output type                                  | If the polarity of the valve does not match with the base, replace one of them to make the combination match.<br>•EX600-WSV1 (PNP output)<br>⇒ Negative common type valve (-COM)<br>•EX600-WSV2 (NPN output)<br>⇒ Positive common type valve (+COM) |
|             |                          | Base broken                                             | Replace the base and check the operation.                                                                                                                                                                                                           |
|             |                          | Valve failure                                           | Replace the valve, and check the operation.<br>Or, refer to Troubleshooting for the valve.                                                                                                                                                          |

| Problem No. | Error indication                            | Possible cause                                       | Investigation and countermeasures                                                                                                                                   |
|-------------|---------------------------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7           | Abnormal digital input device operation     | Input type does not match.                           | If the polarities (PNP, NPN) of the digital input unit do not match with those of digital input equipment, replace one of them to make the combination match.       |
|             |                                             | Low power supply voltage for control and input (US1) | Check that the power supply voltage for control and input (US1) of 24 VDC $\pm$ 10% is supplied to the base.                                                        |
|             |                                             | Wiring or connection is defective.                   | Connect the wiring between the digital input unit and the digital input equipment correctly.                                                                        |
|             |                                             | Digital input unit broken                            | Replace the digital input unit, and check the operation.                                                                                                            |
|             |                                             | Digital input equipment broken                       | Replace the digital input equipment, and check the operation. Or, refer to Troubleshooting for the applicable digital input equipment.                              |
|             | Abnormal digital output equipment operation | Mismatched output type                               | If the polarities (PNP, NPN) of the digital output unit do not match with those of digital output equipment, replace one of them to make the combination match.     |
|             |                                             | Output power supply voltage (US2) is low.            | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC $\pm$ 10% to the power supply for output (US2). |
|             |                                             | Wiring or connection is defective.                   | Connect the wiring between the digital output unit and the digital output equipment correctly.                                                                      |
|             |                                             | Digital output unit broken                           | Replace the digital output unit, and check the operation.                                                                                                           |
|             |                                             | Digital output equipment broken                      | Replace the digital output equipment, and check the operation. Or, refer to Troubleshooting for the applicable digital output equipment.                            |
|             |                                             | Abnormal program                                     | Check that the program such as the PLC ladder logic program operates correctly.                                                                                     |

| Problem No. | Error indication                                    | Possible cause                                    | Investigation and countermeasures                                                                                                                                    |
|-------------|-----------------------------------------------------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8           | Abnormal operation of the analogue input equipment  | Abnormal power supply for control and input (US1) | Check that the power supply voltage for control and input (US1) supplied to the base is 24 VDC $\pm 10\%$ .                                                          |
|             |                                                     | Analogue input signal range setting failure       | Check the analogue input equipment specification, and set the input signal range according to the specification.                                                     |
|             |                                                     | Analogue data format does not match.              | Check that the data format setting of the analogue input unit is correct.                                                                                            |
|             |                                                     | Wiring or connection is defective.                | Connect the wiring between the digital input unit and the digital input equipment correctly.                                                                         |
|             |                                                     | Analogue input unit faulty                        | Replace the analog input unit, and check the operation.                                                                                                              |
|             |                                                     | Analogue input equipment faulty                   | Replace the analogue input equipment, and check the operation. Or, refer to Troubleshooting for the applicable analogue input equipment.                             |
|             | Abnormal operation of the analogue output equipment | Abnormal power supply for output (US2)            | Check that the green PWR(V) LED of the base is ON.<br>If it is OFF or a red LED flashes, supply a voltage of 24 VDC $\pm 10\%$ to the power supply for output (US2). |
|             |                                                     | Analogue output signal range setting failure      | Check the analogue output equipment specification, and set the output signal range according to the specification.                                                   |
|             |                                                     | Analogue data format does not match.              | Check that the data format setting of the analogue output unit is correct.                                                                                           |
|             |                                                     | Wiring or connection is defective.                | Connect the wiring between the analogue output unit and the analogue output equipment correctly.                                                                     |
|             |                                                     | Analogue output unit faulty                       | Replace the analogue output unit, and check the operation.                                                                                                           |
|             |                                                     | Analogue output equipment faulty                  | Replace the analogue output equipment, and check the operation. Or, refer to Troubleshooting for the applicable analogue output equipment.                           |
|             |                                                     | Abnormal program, etc.                            | Check that the ladder logic program works correctly.                                                                                                                 |

| Problem No. | Error indication        | Possible cause                                               | Investigation and countermeasures                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|-------------------------|--------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9           | NFC communication error | NFC communication is not established (communication failure) | <p>Check the following items and check the operation again.</p> <ul style="list-style-type: none"> <li>•Check if the specifications of the NFC reader/writer to be used are appropriate.</li> <li>•Confirm that the settings of the NFC port and PaSoRi of the PC are correct.</li> <li>•Confirm that the NFC reader/writer are connected correctly.</li> <li>•The communication distance is outside of the NFC range. Place the body (area close to NFC antenna) close to the NFC reader/writer.</li> </ul> |
|             |                         | NFC reader/writer broken                                     | <p>Replace the NFC reader/writer and check the operation. If the error is not restored after replacement, stop using the equipment and contact your SMC sales representative.</p>                                                                                                                                                                                                                                                                                                                            |

## End plate

### Model Indication and How to Order

**EX600-ED** □ - □

End plate at D side

Connector

Mounting method

| Symbol | Connector         | Key type | Function               |
|--------|-------------------|----------|------------------------|
| 2      | M12 (5-pin)       | B-coded  | IN                     |
| 3      | 7/8 inch (5-pin)  | -        | IN                     |
| 4      | M12 (4-pin/5-pin) | A-coded  | IN/OUT (PIN layout 1*) |
| 5      | M12 (4-pin/5-pin) | A-coded  | IN/OUT (PIN layout 2)  |

| Symbol | Description                                |
|--------|--------------------------------------------|
| Nil    | No DIN rail bracket                        |
| 2      | With DIN rail bracket (VQC/SV/S0700 valve) |
| 3      | With DIN rail bracket (SY/JSY valve)       |

\*: Refer to Connector Pin No. (page 89) for details of the PIN layout 1 and 2.

**EX600-EU1** - □


End plate at U side

Mounting method


| Symbol | Description                         |
|--------|-------------------------------------|
| Nil    | No DIN rail bracket                 |
| 2      | With DIN rail bracket (EX600-ED#-2) |
| 3      | With DIN rail bracket (EX600-ED#-3) |

## Summary of Product parts


### •EX600-ED2-#

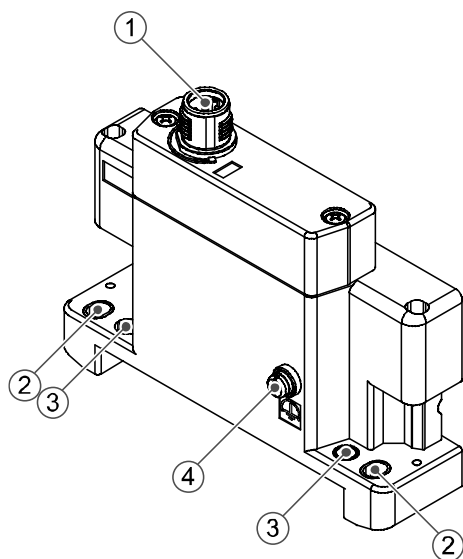

### •EX600-ED3-#

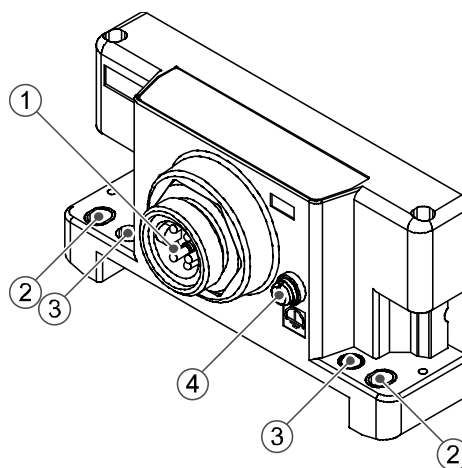

### •EX600-EU1-#

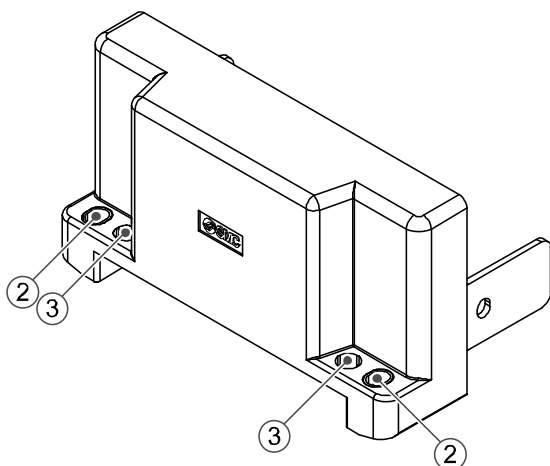


| No. | Description                     | Function                                                                         |
|-----|---------------------------------|----------------------------------------------------------------------------------|
| 1   | Power connector                 | Connector for power supply to SI unit and I/O unit.                              |
| 2   | Fixing hole for direct mounting | Holes for direct mounting.                                                       |
| 3   | DIN rail fixing hole            | Holes for fix DIN rail mounting.                                                 |
| 4   | F.E. terminal *                 | Functional Earth terminal - must be connected directly to system earth (ground). |

\*: Individual grounding should be provided close to the product with a short cable.



•EX600-ED4/ED5-#

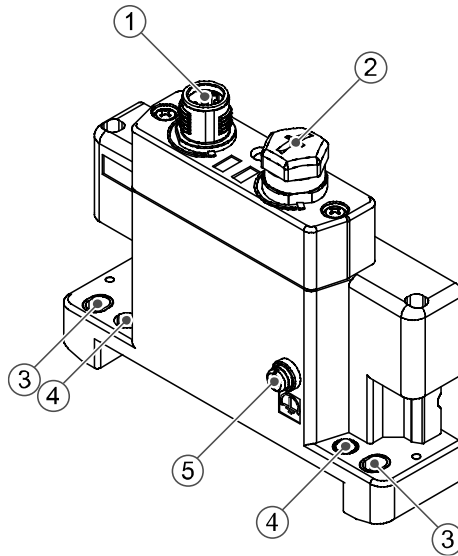

| No. | Description                     | Function                                                                         |
|-----|---------------------------------|----------------------------------------------------------------------------------|
| 1   | Power connector (PWR IN)        | Supplies power for each unit and input/output devices.                           |
| 2   | Power connector (PWR OUT)       | Provides power to downstream equipment.                                          |
| 3   | Fixing hole for direct mounting | Holes used for direct mounting.                                                  |
| 4   | DIN rail fixing hole            | Holes used for fix DIN rail.                                                     |
| 5   | F.E. terminal *                 | Functional Earth terminal - must be connected directly to system earth (ground). |

\*: Individual grounding should be provided close to the product with a short cable.


## Mounting and Installation

### ■Wiring

#### ○Connector pin assignment


##### (1) EX600-ED2-#

 PWR IN: M12 5-pin Plug B-coded

| Configuration                                                                     | Pin No. | Signal name                 |
|-----------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 24 V (Output)               |
|                                                                                   | 2       | 0 V (Output)                |
|                                                                                   | 3       | 24 V<br>(Control and input) |
|                                                                                   | 4       | 0 V<br>(Control and input)  |
|                                                                                   | 5       | F.E.                        |


##### (2) EX600-ED3-#

PWR IN: 7/8 inch 5-pin Plug
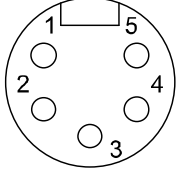
| Configuration                                                                      | Pin No. | Signal name                 |
|------------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 0 V (Output)                |
|                                                                                    | 2       | 0 V<br>(Control and input)  |
|                                                                                    | 3       | F.E.                        |
|                                                                                    | 4       | 24 V<br>(Control and input) |
|                                                                                    | 5       | 24 V (Output)               |

##### (3) EX600-ED4-#

 PWR IN: M12 4-pin Plug A-coded


| Configuration                                                                       | Pin No. | Signal name                 |
|-------------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 24 V<br>(Control and input) |
|                                                                                     | 2       | 24 V (Output)               |
|                                                                                     | 3       | 0 V<br>(Control and input)  |
|                                                                                     | 4       | 0 V (Output)                |

PWR OUT: M12 5-pin Socket A-coded

| Configuration                                                                       | Pin No. | Signal name                 |
|-------------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 24 V<br>(Control and input) |
|                                                                                     | 2       | 24 V (Output)               |
|                                                                                     | 3       | 0 V<br>(Control and input)  |
|                                                                                     | 4       | 0 V (Output)                |
|                                                                                     | 5       | Not used                    |

##### (4) EX600-ED5-#

 PWR IN: M12 4-pin Plug A-coded

| Configuration                                                                       | Pin No. | Signal name                 |
|-------------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 24 V (Output)               |
|                                                                                     | 2       | 0 V (Output)                |
|                                                                                     | 3       | 24 V<br>(Control and input) |
|                                                                                     | 4       | 0 V<br>(Control and input)  |



PWR OUT: M12 5-pin Socket A-coded

| Configuration                                                                       | Pin No. | Signal name                 |
|-------------------------------------------------------------------------------------|---------|-----------------------------|
|  | 1       | 24 V (Output)               |
|                                                                                     | 2       | 0 V (Output)                |
|                                                                                     | 3       | 24 V<br>(Control and input) |
|                                                                                     | 4       | 0 V<br>(Control and input)  |
|                                                                                     | 5       | Not used                    |

○Regarding the 2 types of power supply

The power supply consists of two power supply systems as follows:

- Power supply for control and input: Supplying power for control of each unit's power supply for control and also for device connected to input port of Digital and Analogue unit.
- Power supply for output: Supplying power for equipment connected to output port of Digital and Analogue unit, and also power supply for solenoid valve manifold.

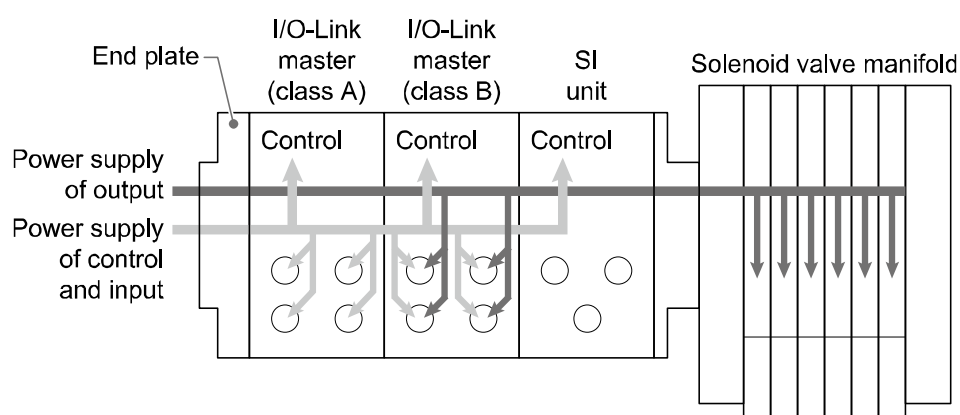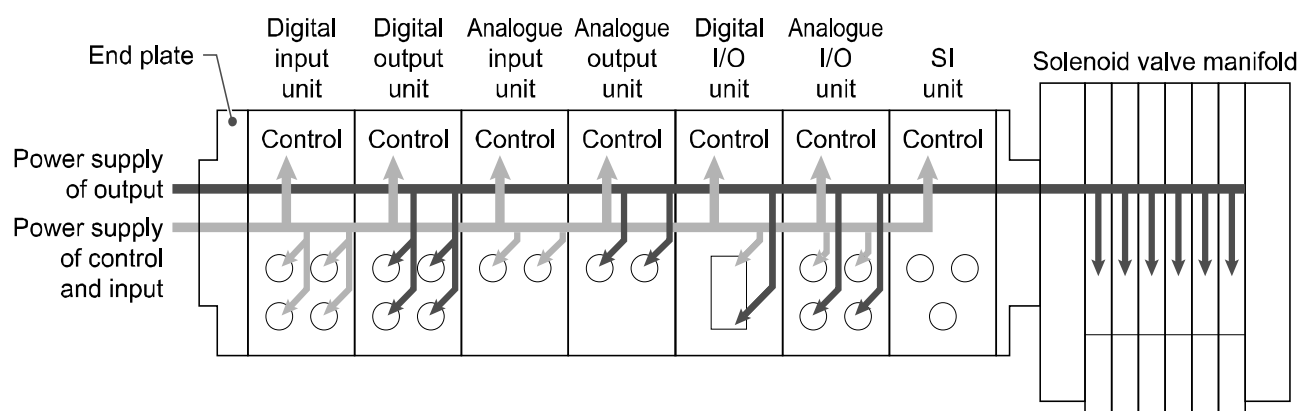

●Precautions for handling

Be sure to fit a seal cap on any unused connectors. Proper use of the seal cap enables the enclosure to achieve IP67 specification.


## Specifications

| Model       |                                  |         | EX600-ED2-#                                                      | EX600-ED3-#            | EX600-ED4-#                                  | EX600-ED5-#        |
|-------------|----------------------------------|---------|------------------------------------------------------------------|------------------------|----------------------------------------------|--------------------|
| Power       | Power connector                  | PWR IN  | M12 (5-pin) Plug                                                 | 7/8 inch (5-pin) Plug  | M12 (4-pin) Plug                             | M12 (4-pin) Plug   |
|             |                                  | PWR OUT | -                                                                | -                      | M12 (5-pin) Socket                           | M12 (5-pin) Socket |
|             | Power supply (Control and input) |         | 24 VDC ±10%,<br>2 A                                              | 24 VDC ±10%,<br>8 A    | DC24 V ±10%,<br>4 A                          |                    |
|             | Power supply (Output)            |         | 24 VDC +10/-5%,<br>2 A                                           | 24 VDC +10/-5%,<br>8 A | DC24 V +10/-5%,<br>4 A                       |                    |
| Environment | Enclosure                        |         | IP67 (With manifold assembled) *1                                |                        |                                              |                    |
|             | Operating temperature range      |         | -10 to 50 °C                                                     |                        |                                              |                    |
|             | Storage temperature range        |         | -20 to 60 °C                                                     |                        |                                              |                    |
|             | Operating humidity range         |         | 35 to 85%R.H. (No condensation)                                  |                        |                                              |                    |
|             | Withstand voltage                |         | 500 VAC for 1 minute between external terminals and F.E.         |                        |                                              |                    |
|             | Insulation resistance            |         | 500 VDC, 10 MΩ min. between external terminals and F.E.          |                        |                                              |                    |
| Standard    |                                  |         | UL/CSA(E209424)<br>CE marked<br>(EMC directive, RoHS directive), |                        | CE marked<br>(EMC directive, RoHS directive) |                    |
| Weight      |                                  |         | 170 g                                                            | 175 g                  | 170 g                                        |                    |


\*1: All unused connectors must have a seal cap fitted.

## ■Dimensions


### •EX600-ED2

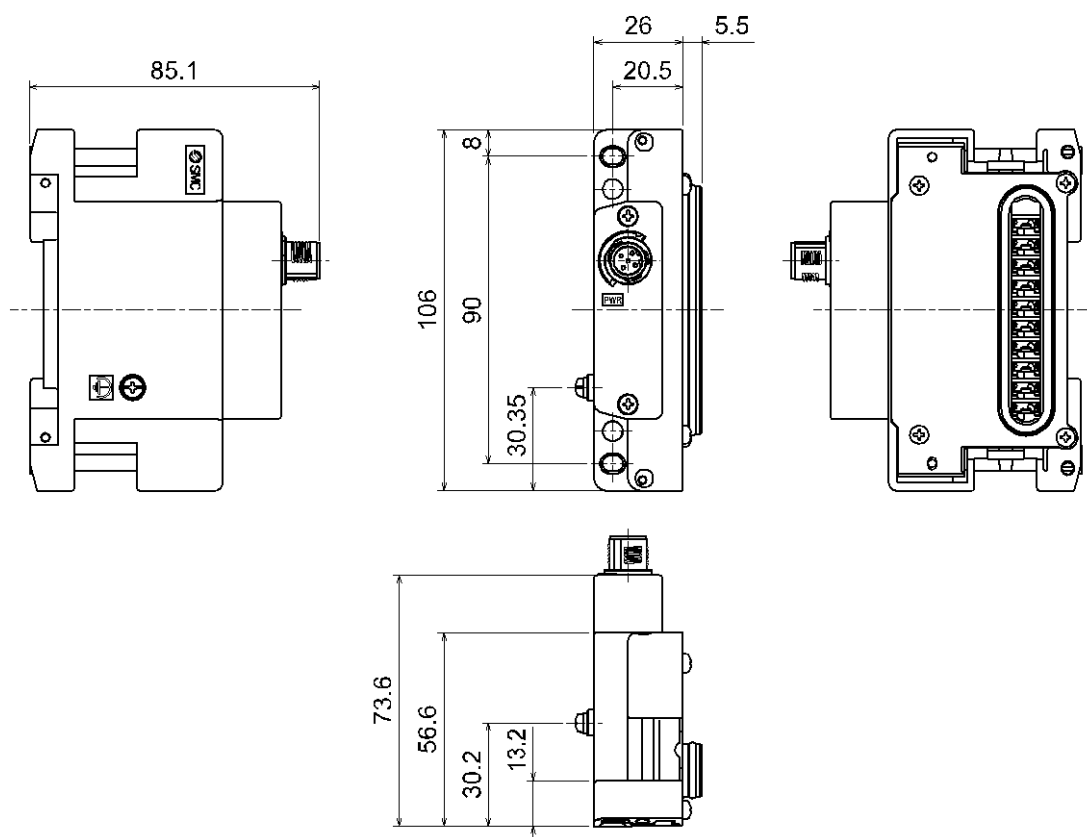


•EX600-ED2-2

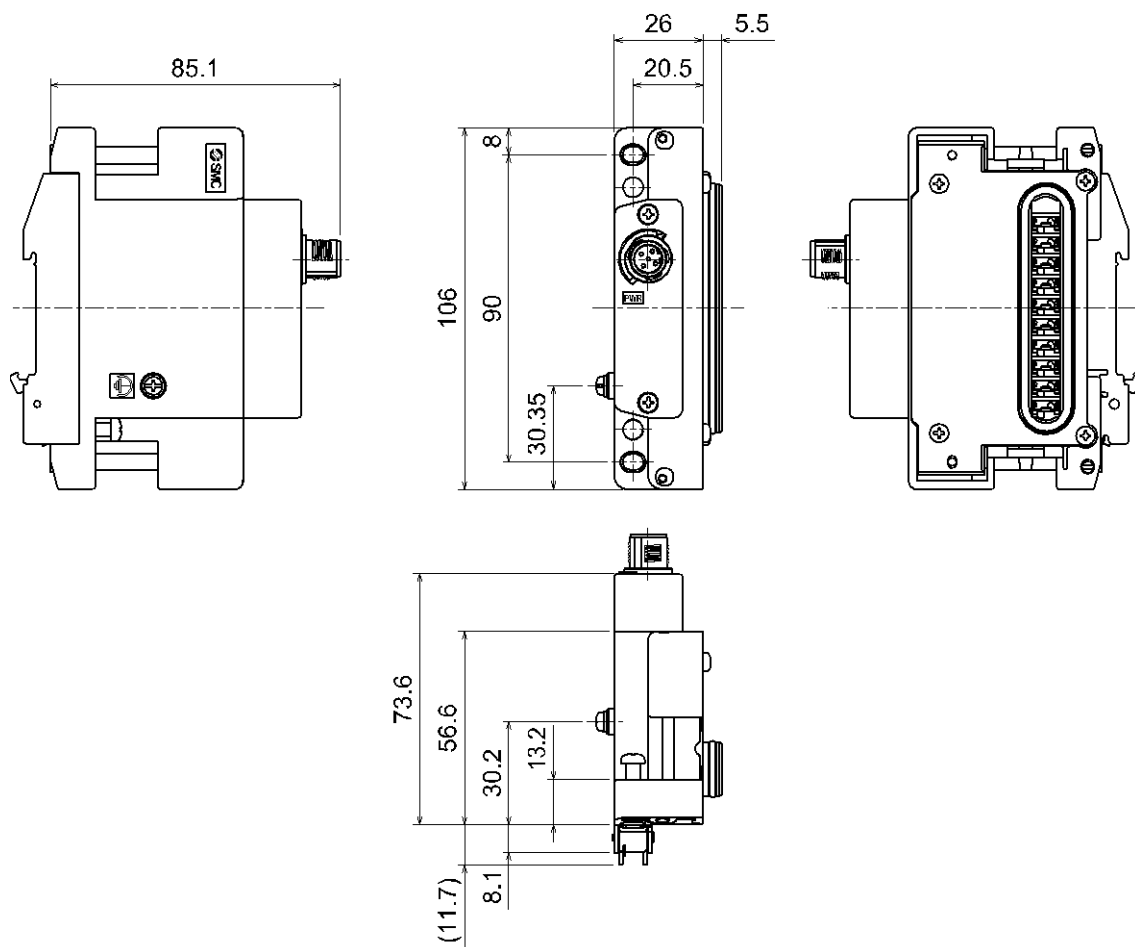


•EX600-ED2-3

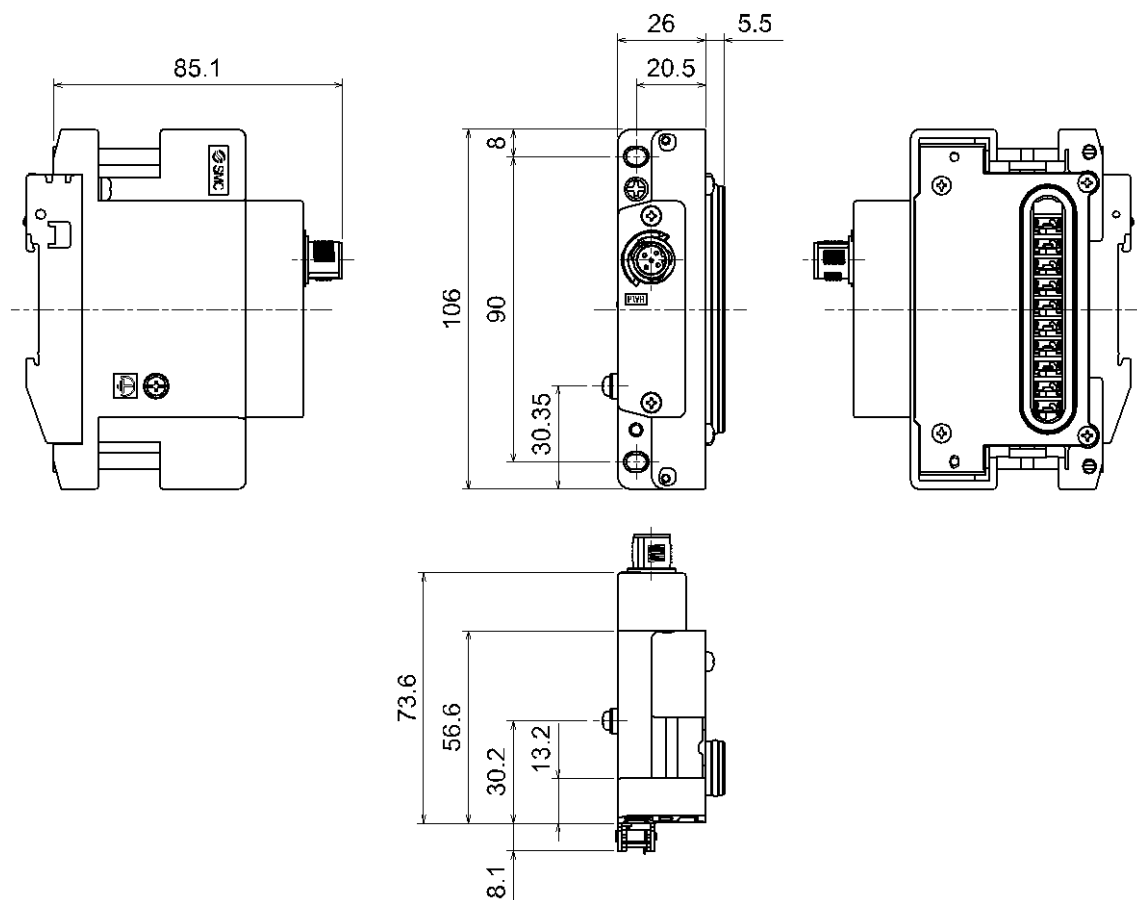

•EX600-ED3

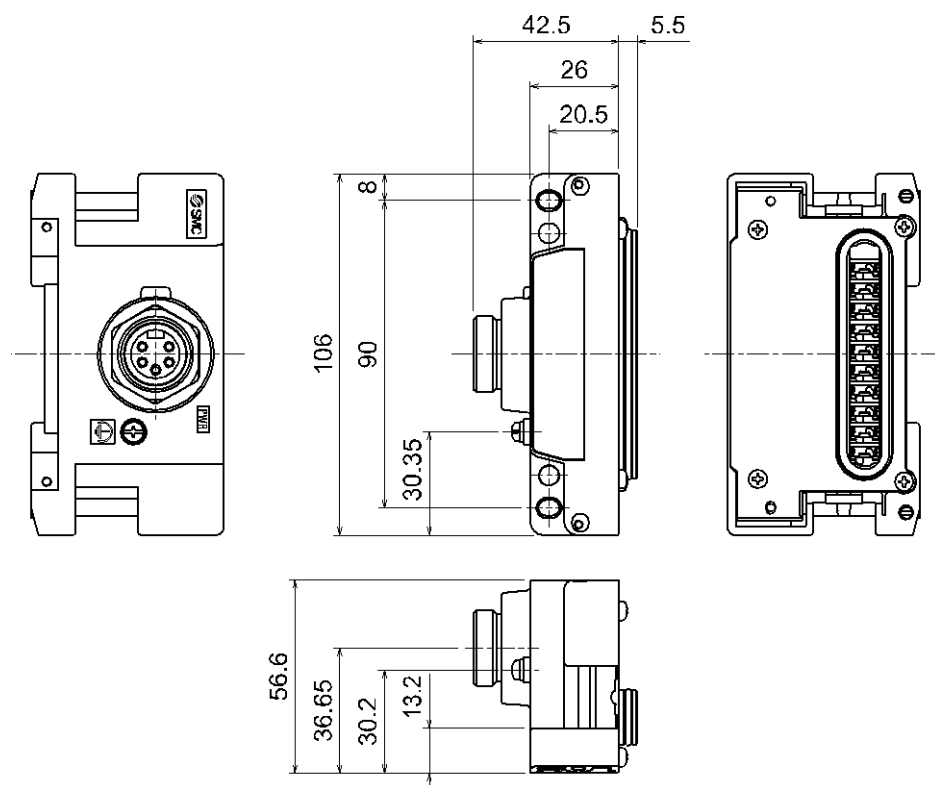


•EX600-ED3-2

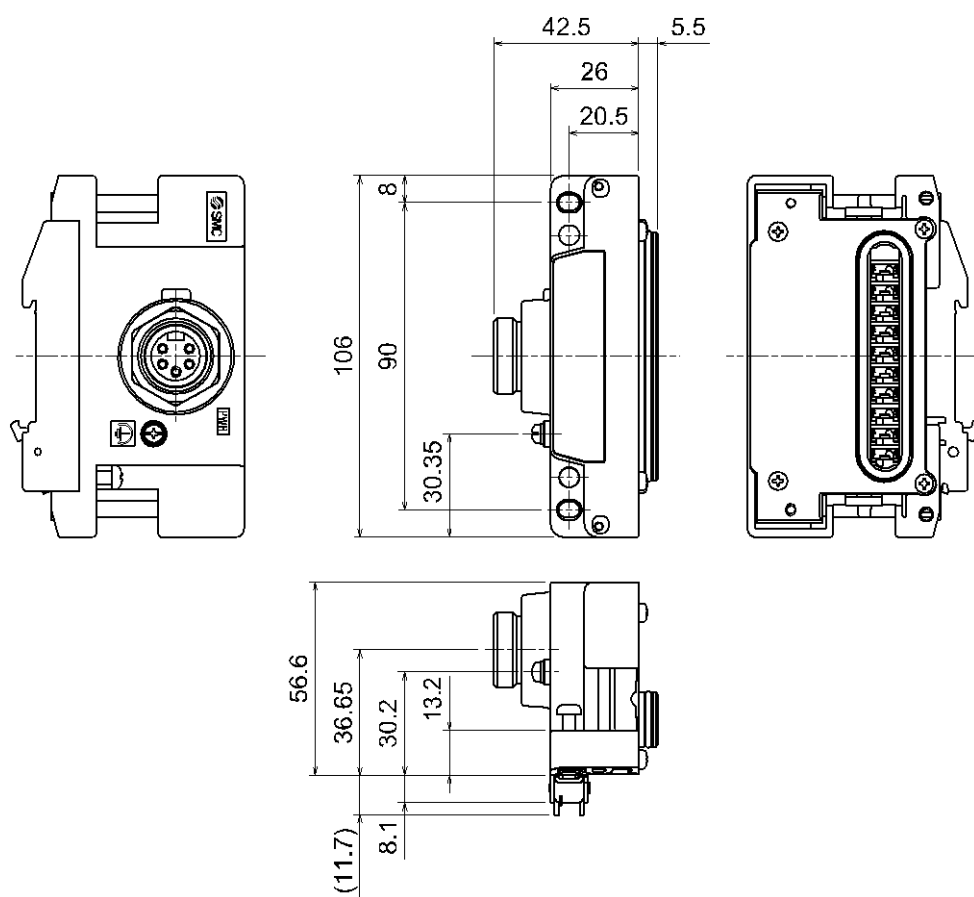





•EX600-ED3-3

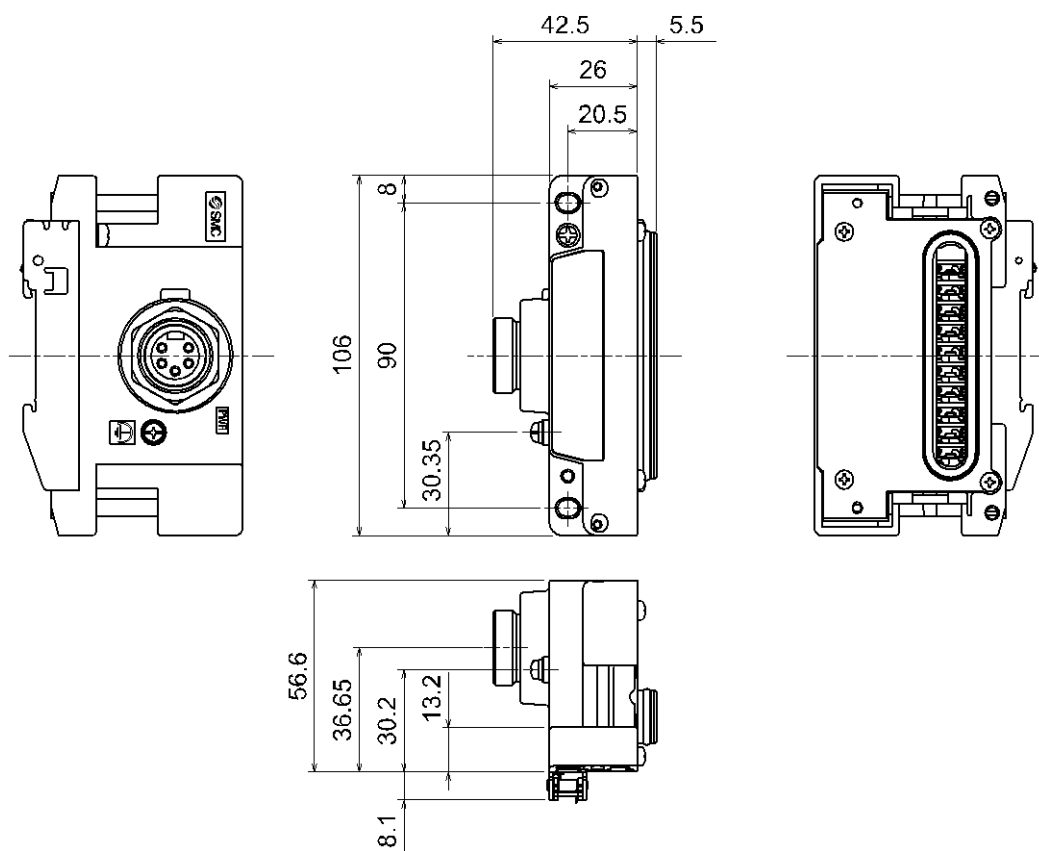


•EX600-ED4/ED5

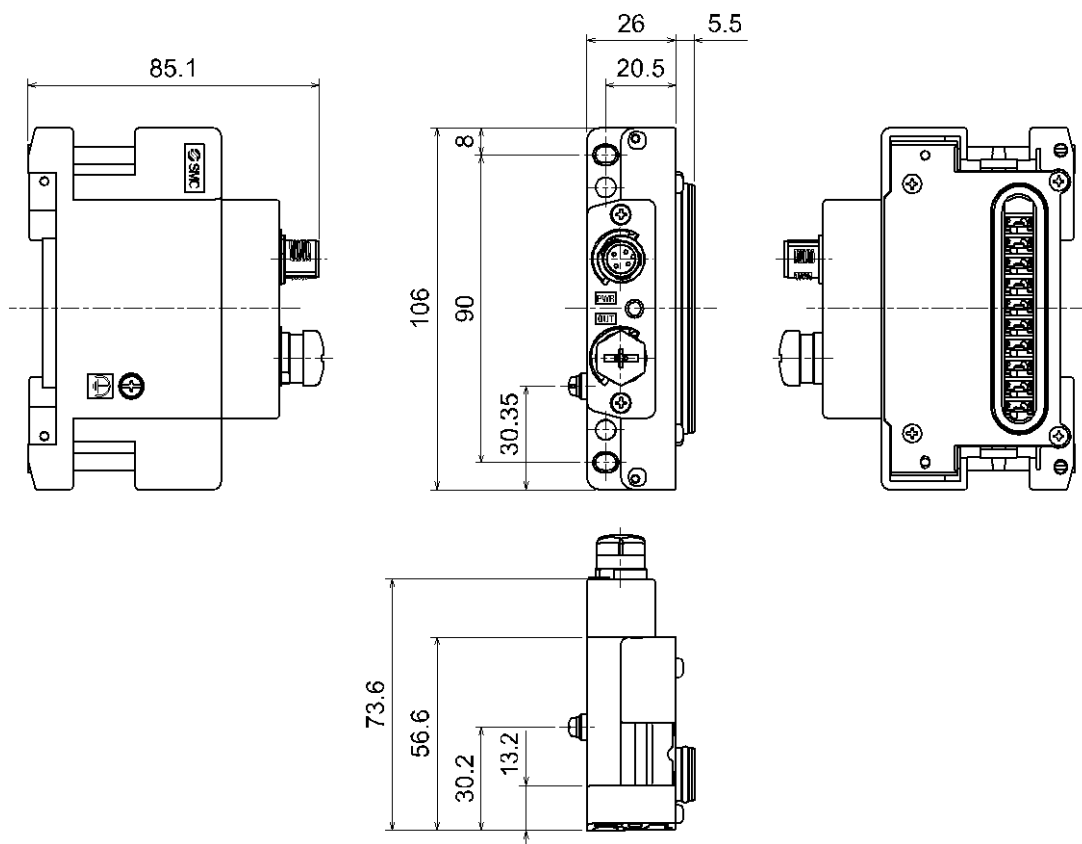


•EX600-ED4/ED5-2

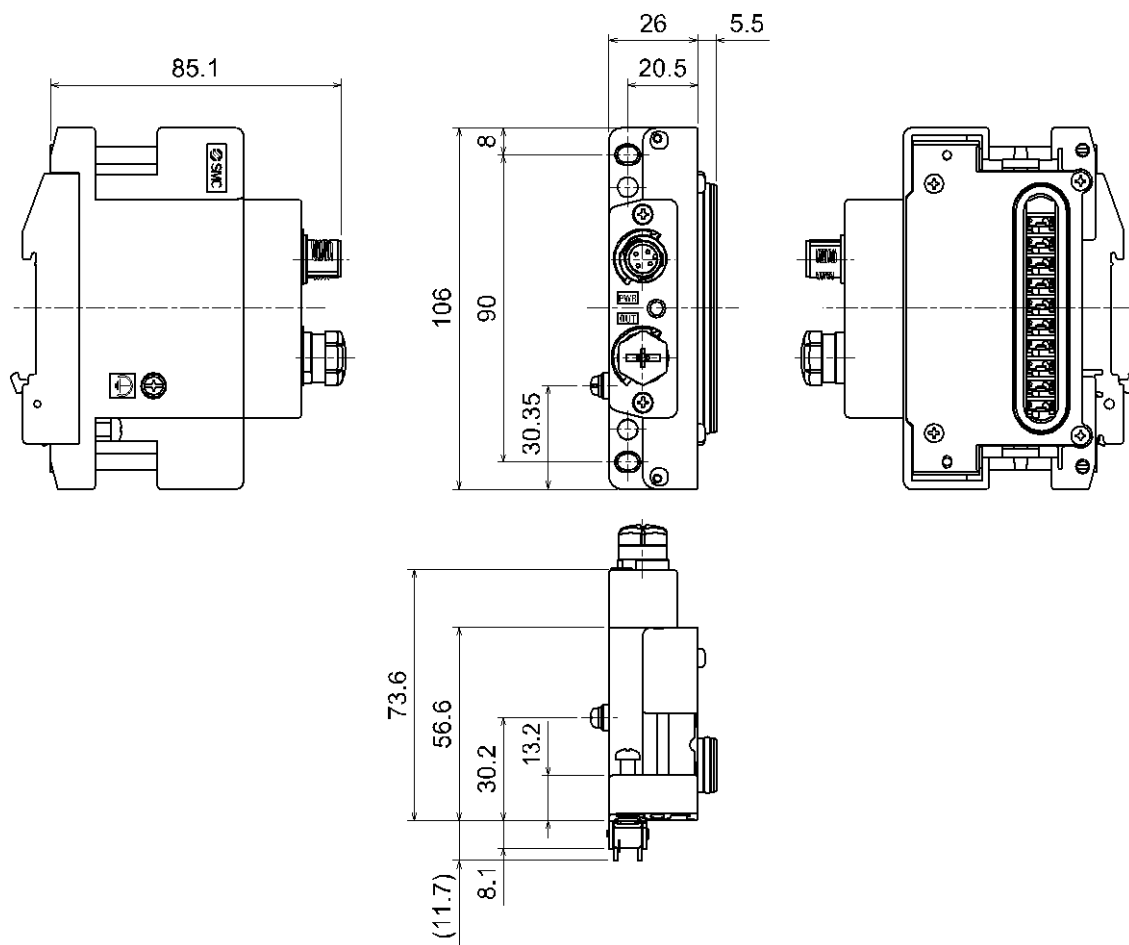


•EX600-ED4/ED5-3

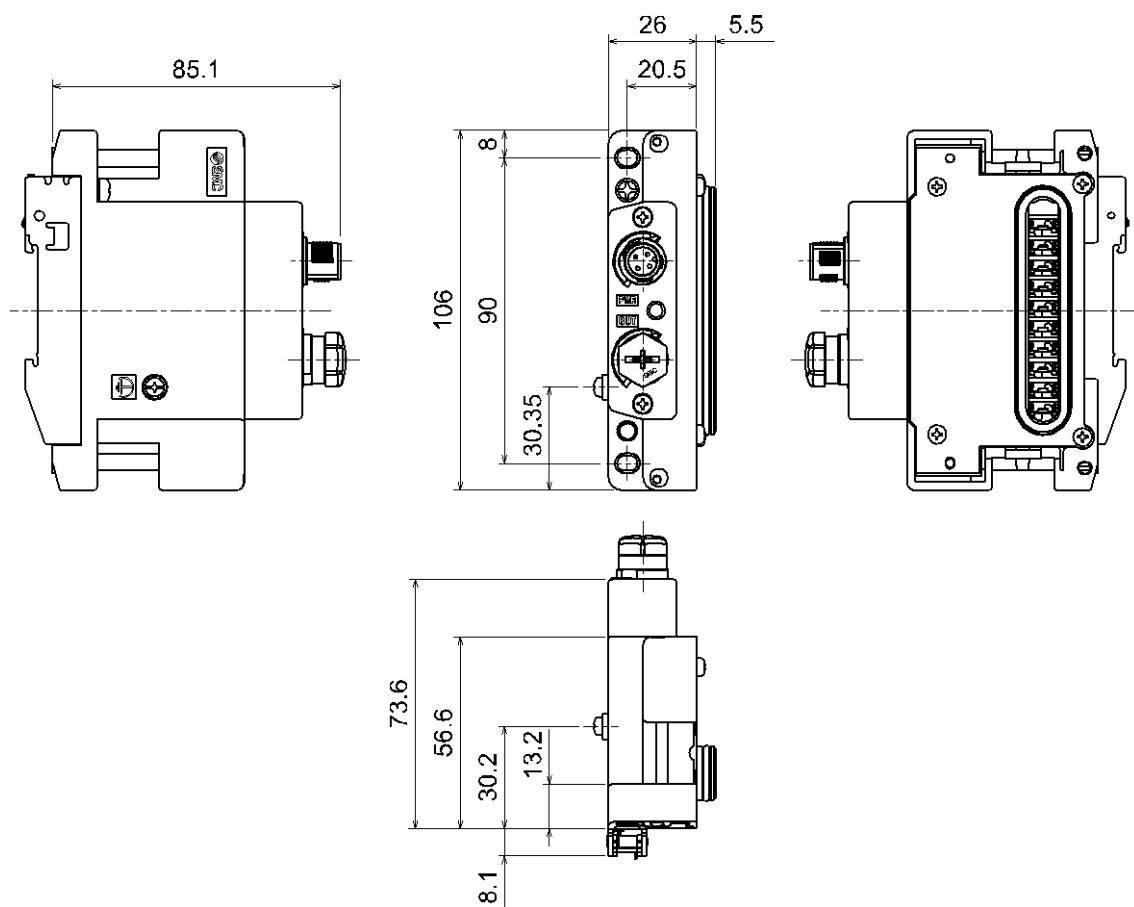


•EX600-EU1

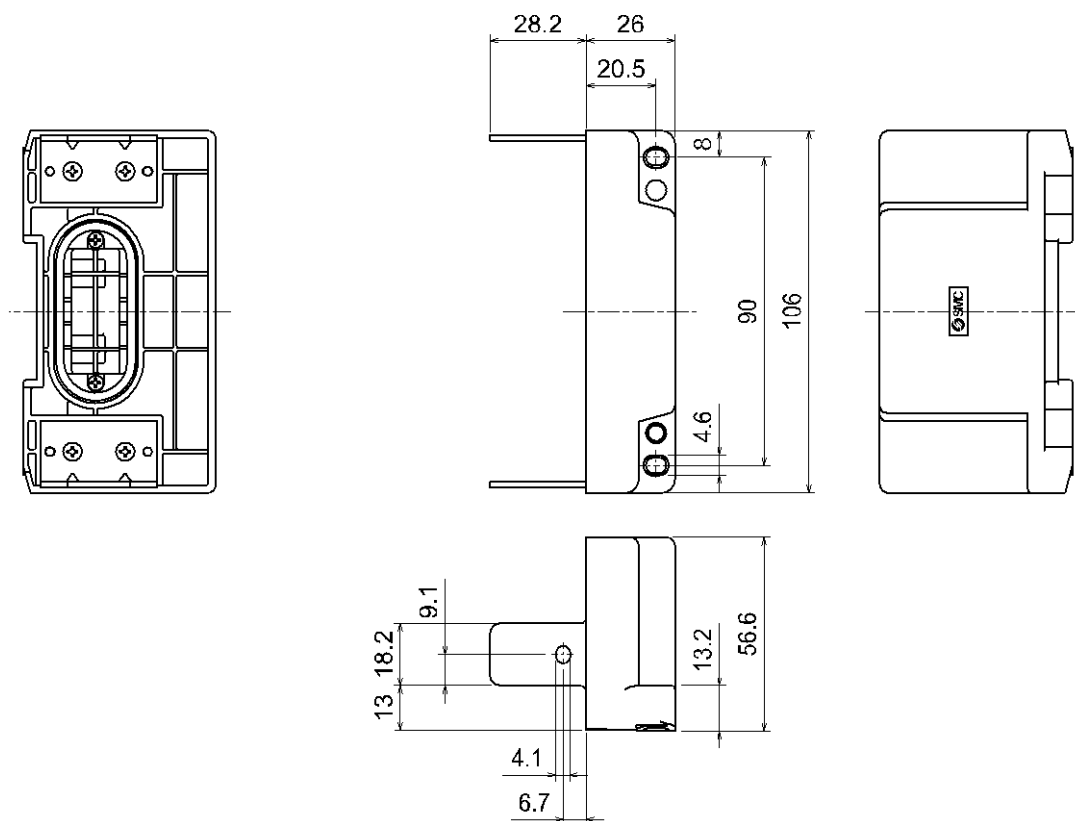


•EX600-EU1-2

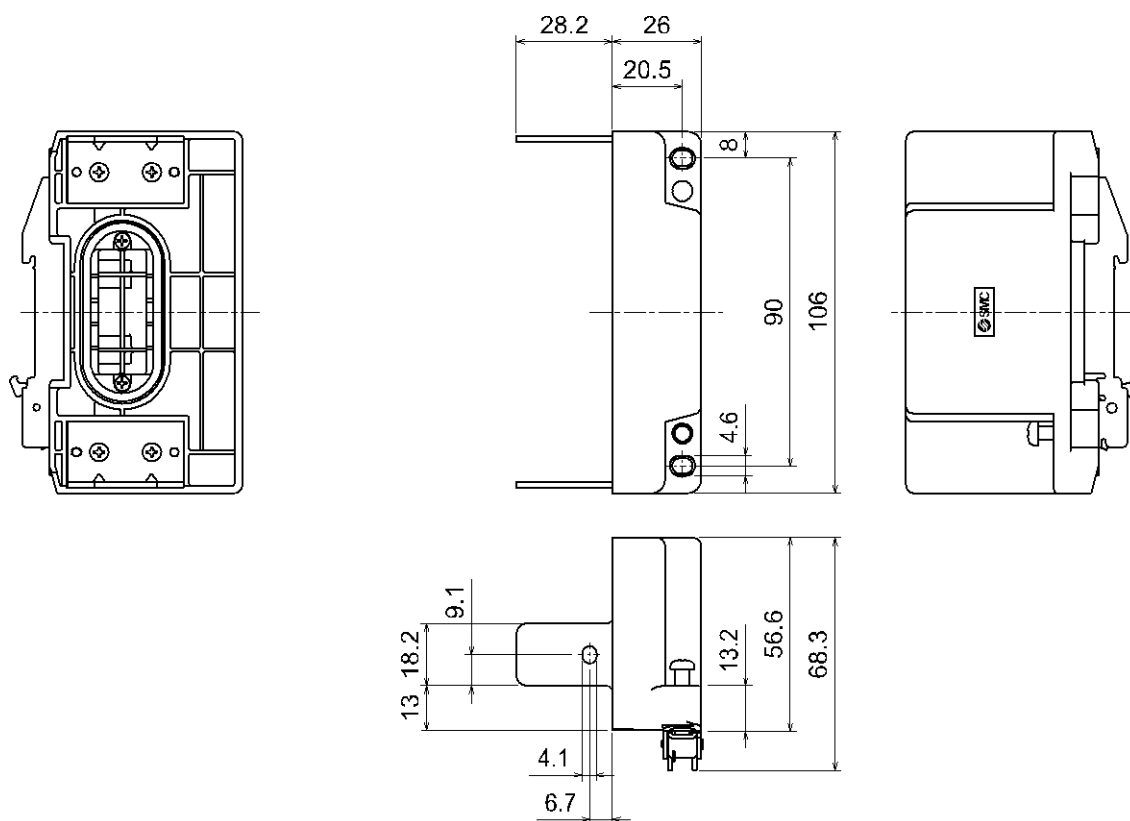

•EX600-EU1-3

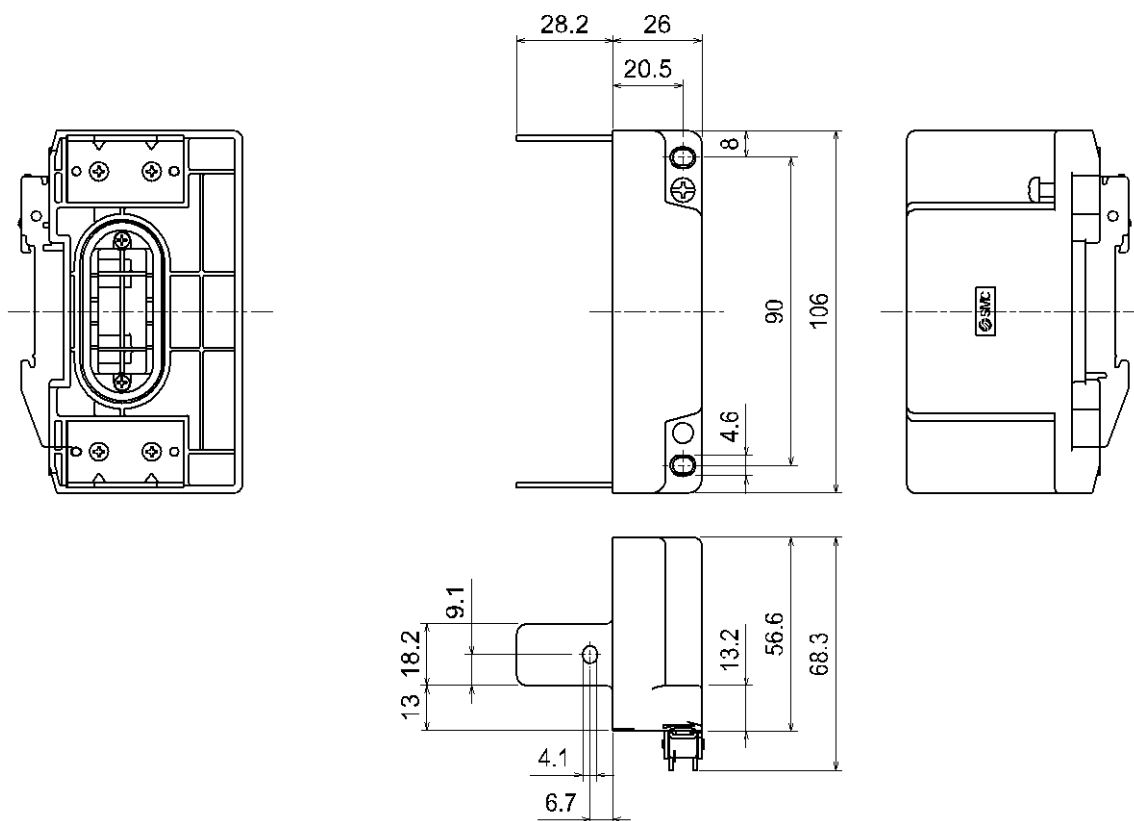

## Accessories

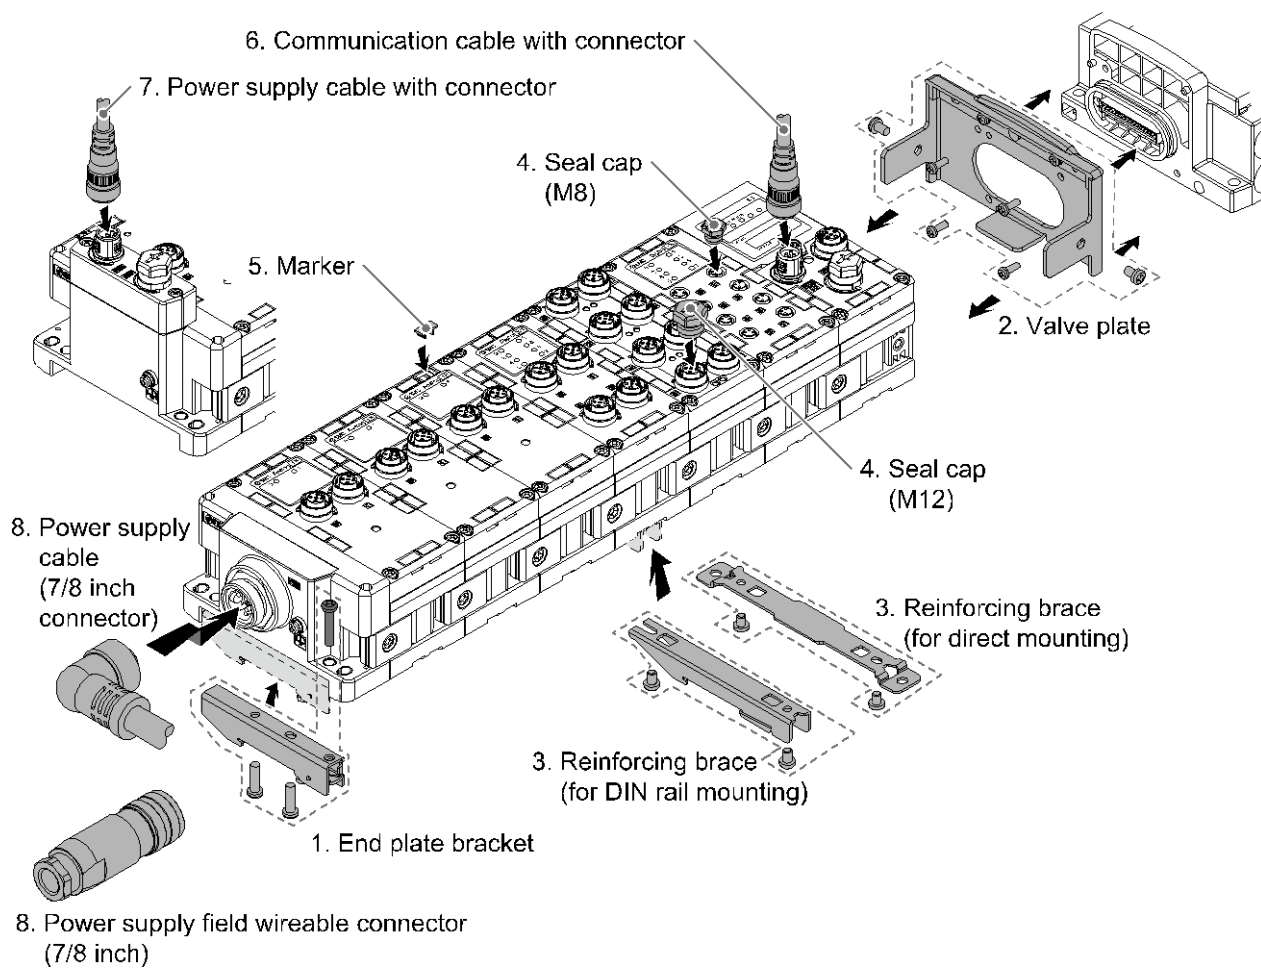

## 1. End Plate Bracket


This bracket is used for the end plate of DIN rail mounting.

### EX600-ZMA2

Enclosed parts: Round head screw (M4 x 20) 1 pc.  
P-tight screw (4 x 14) 2 pcs.

### EX600-ZMA3 (Specialized for the SY series)


Enclosed parts: Round head screw with washer (M4 x 20) 1 pc.  
P-tight screw (4 x 14) 2 pcs.

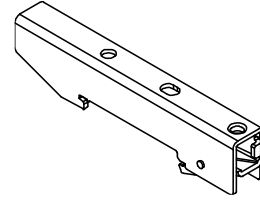

## 2. Valve Plate


### EX600-ZMV1

Enclosed parts: Round head screw (M4 x 6) 2 pcs.  
Round head screw (M3 x 8) 4 pcs.

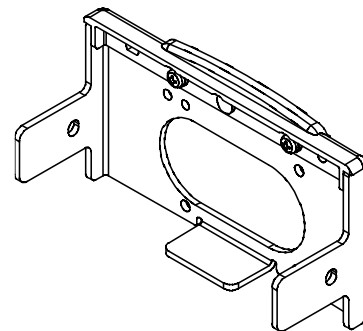

### EX600-ZMV2 (Specialized for the SY series)

Enclosed parts: Round head screw (M4 x 6) 2 pcs.  
Round head screw (M3 x 8) 2 pcs.

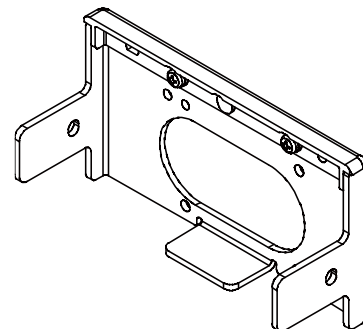




### 3. Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

\*: Be sure to attach this bracket to prevent connection failure between the units caused by deflection.


#### EX600-ZMB1 (For direct mounting)

Enclosed parts: Round head screw (M4 x 5) 2 pcs.

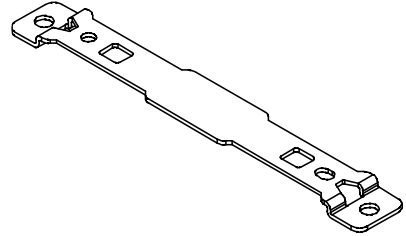

#### EX600-ZMB2 (For DIN rail mounting)

Enclosed parts: Round head screw (M4 x 6) 2 pcs.

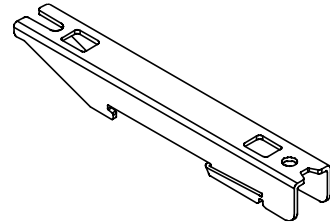

### 4. Seal Cap (10 pcs.)

Be sure to mount a seal cap on any unused I/O connectors.

Otherwise, the specified enclosure cannot be maintained.

#### EX9-AWES (For M8)




#### EX9-AWTS (For M12)



### 5. Marker (1 sheet, 88 pcs.)

The signal name of I/O device and each unit address can be entered and mounted on each unit.

#### EX600-ZT1

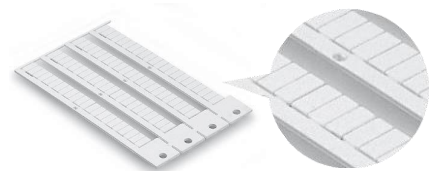


# 6. Communication Cable/Communication Cable with Connector/Communication Connector With connector on both sides (Plug/Plug)

EX9-AC 005 EN-PSPS

• Cable length (L)

| Symbol | Content  |
|--------|----------|
| 005    | 500 mm   |
| 010    | 1000 mm  |
| 020    | 2000 mm  |
| 030    | 3000 mm  |
| 050    | 5000 mm  |
| 100    | 10000 mm |

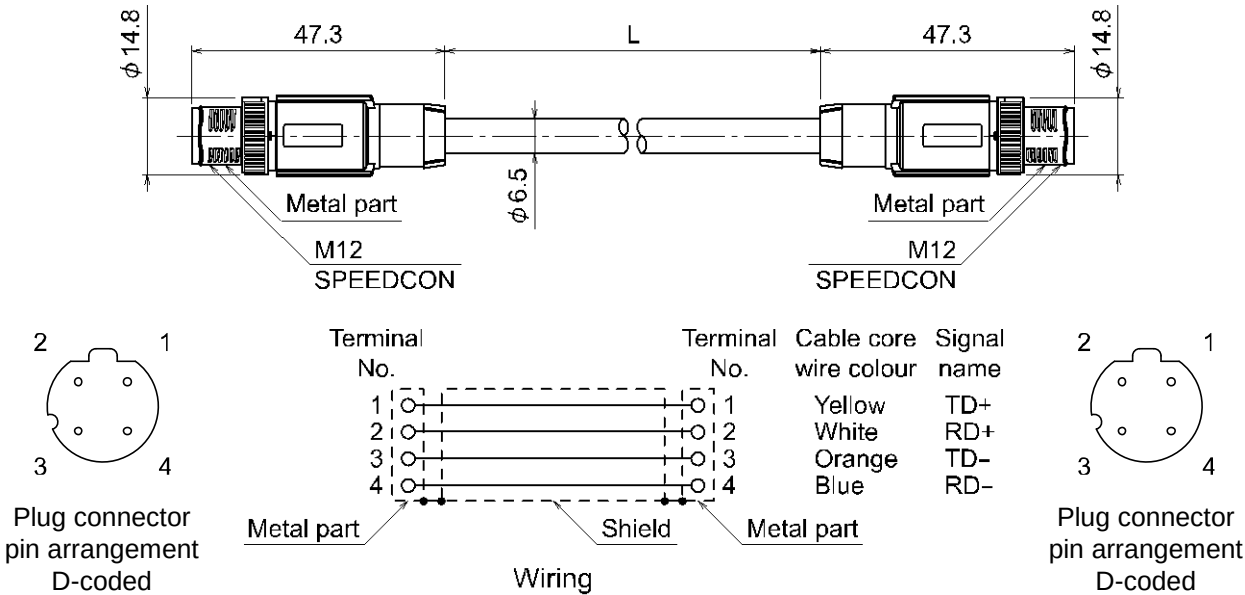





| Item                            | Specifications              |
|---------------------------------|-----------------------------|
| Cable O.D.                      | φ6.5 mm                     |
| Conductor nominal cross section | 0.34 mm <sup>2</sup> /AWG22 |
| Wire O.D. (Including insulator) | 1.55 mm                     |
| Min. bending radius (Fixed)     | 19.5 mm                     |

With angled connector on both sides (Plug/Plug)

## EX9-AC 005 EN-PAPA

- Cable length (L)

| Symbol | Content  |
|--------|----------|
| 005    | 500 mm   |
| 010    | 1000 mm  |
| 020    | 2000 mm  |
| 030    | 3000 mm  |
| 050    | 5000 mm  |
| 100    | 10000 mm |

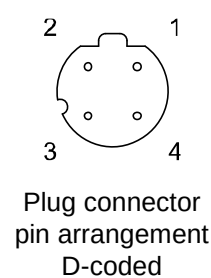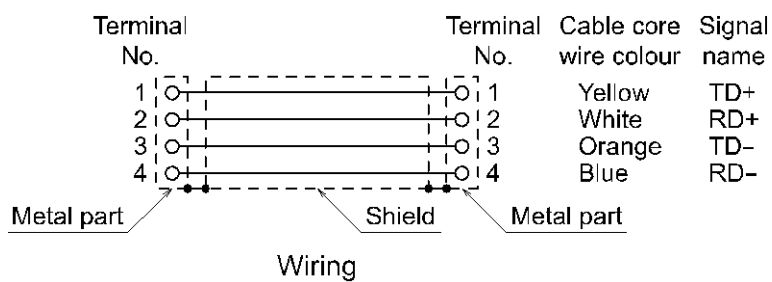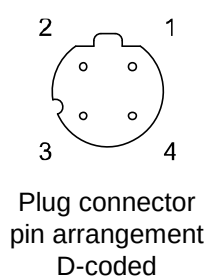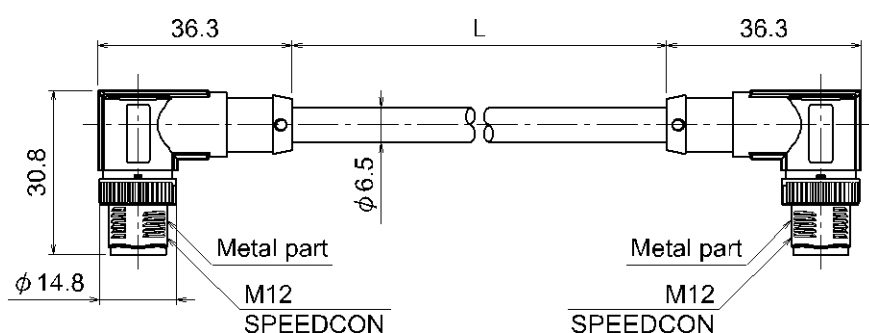


| Item                            | Specifications              |
|---------------------------------|-----------------------------|
| Cable O.D.                      | φ6.5 mm                     |
| Conductor nominal cross section | 0.34 mm <sup>2</sup> /AWG22 |
| Wire O.D. (Including insulator) | 1.55 mm                     |
| Min. bending radius (Fixed)     | 19.5 mm                     |

Cable with M12 ⇔ RJ-45 connector (Plug/RJ-45 connector)

EX9-AC **020** EN-PSRJ

• Cable length (L)

| Symbol | Content  |
|--------|----------|
| 010    | 1000 mm  |
| 020    | 2000 mm  |
| 030    | 3000 mm  |
| 050    | 5000 mm  |
| 100    | 10000 mm |

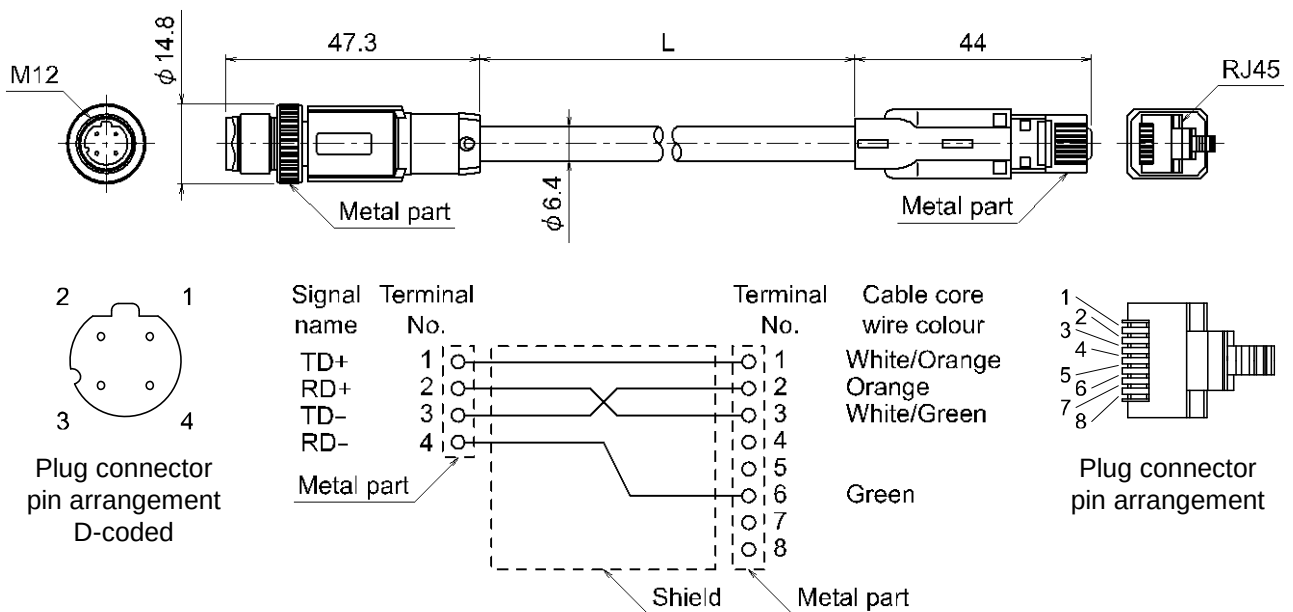


### Wiring

| Item                        | Specifications              |
|-----------------------------|-----------------------------|
| Cable O.D.                  | φ6.4 mm                     |
| Nominal cross section       | 0.14 mm <sup>2</sup> /AWG26 |
| Wire diameter               | 0.98 mm                     |
| Min. bending radius (Fixed) | 26 mm                       |

Cable with connector (Plug)



PCA-1446566

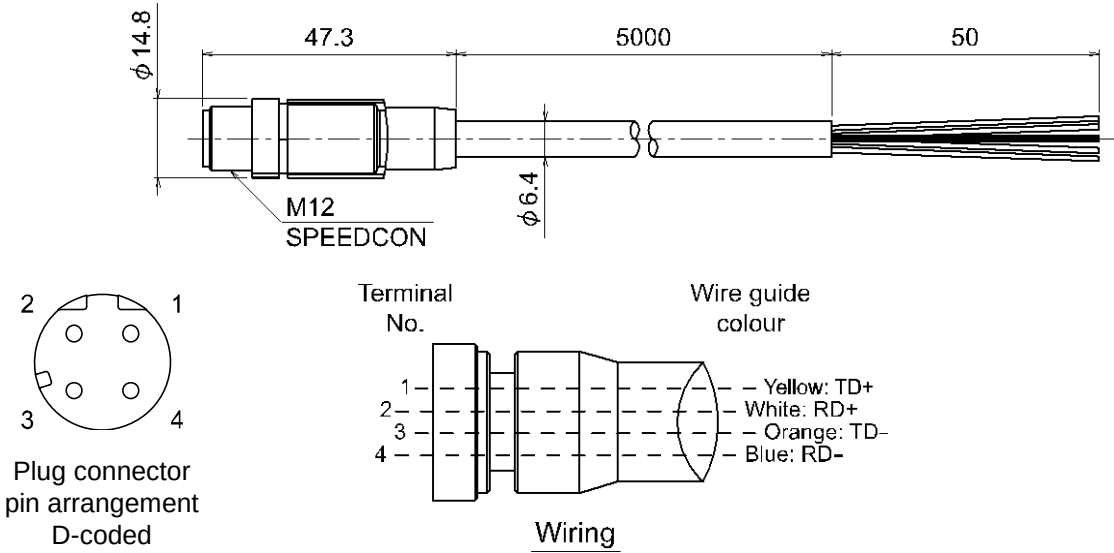

| Item                                | Specifications |
|-------------------------------------|----------------|
| Cable O.D.                          | φ6.5 mm        |
| Nominal cross section               | AWG22          |
| Wire diameter (Including insulator) | 1.5 mm         |
| Min. bending radius (Fixed)         | 45.5 mm        |

Field wireable connector

PCA-1446553

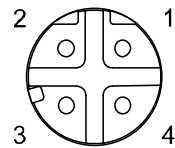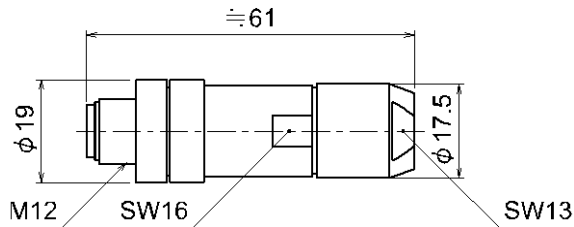

Plug connector  
pin arrangement  
D-coded

| Terminal No. | Wire guide colors |
|--------------|-------------------|
| 1            | Orange/White      |
| 2            | Green/White       |
| 3            | Orange            |
| 4            | Green             |

Applicable Cable

| Item                                        | Specifications                                |
|---------------------------------------------|-----------------------------------------------|
| Cable O.D.                                  | 4.0 to 8.0 mm                                 |
| Wire gauge<br>(Stranded wire cross section) | 0.14 to 0.34 mm <sup>2</sup> /<br>AWG26 to 22 |


\*: The table above shows the specifications for the applicable cable.  
Adaptation for the connector may vary on account of the conductor  
construction of the electric wire.

7. Power Supply Cable with M12 Connector (A-coded)

EX9-AC 005-SSPS

• Cable length (L)

| Symbol | Content  |
|--------|----------|
| 005    | 500 mm   |
| 010    | 1000 mm  |
| 020    | 2000 mm  |
| 030    | 3000 mm  |
| 050    | 5000 mm  |
| 100    | 10000 mm |

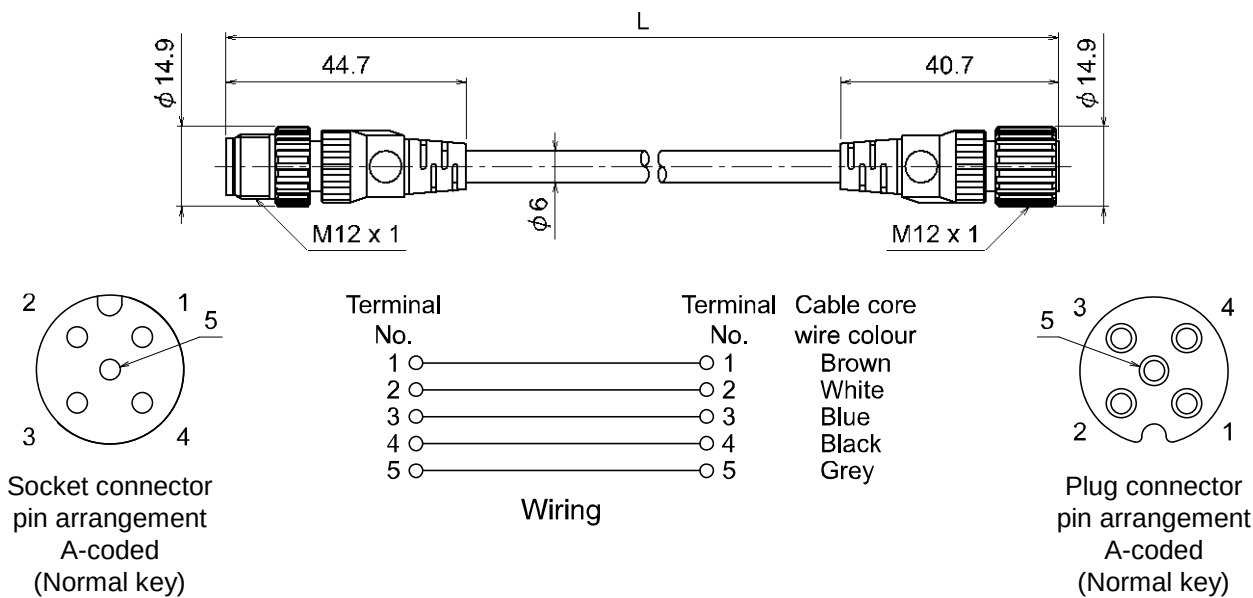

| Item                            | Specifications              |
|---------------------------------|-----------------------------|
| Cable O.D.                      | φ6.5 mm                     |
| Conductor nominal cross section | 0.34 mm <sup>2</sup> /AWG22 |
| Wire O.D. (Including conductor) | 1.55 mm                     |
| Min. bending radius (Fixed)     | 19.5 mm                     |

EX500-AP **050** - **S**


Cable length (L)

| Symbol | Content |
|--------|---------|
| 010    | 1000 mm |
| 050    | 5000 mm |




Connector specification

| Symbol | Content     |
|--------|-------------|
| S      | Straight    |
| A      | Right angle |

### Straight connector type

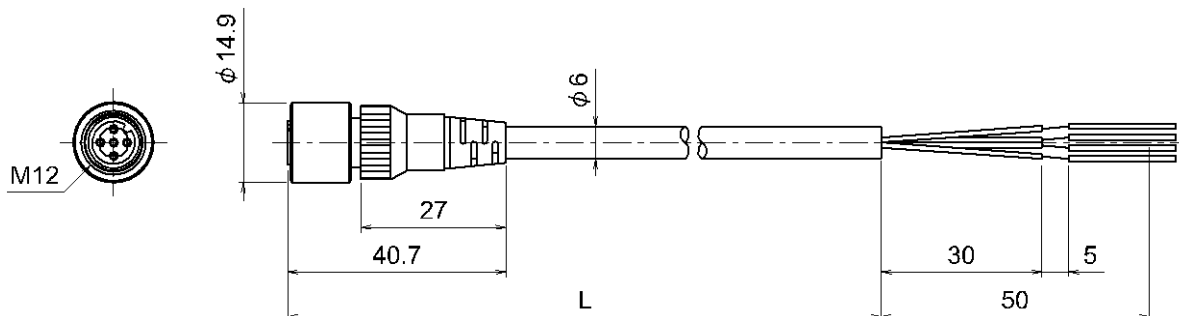

### Angle connector type

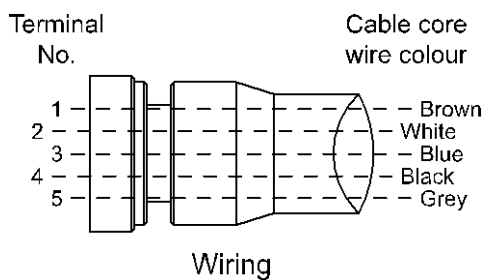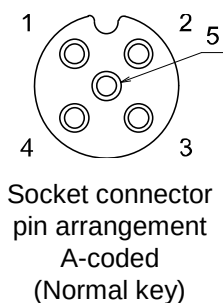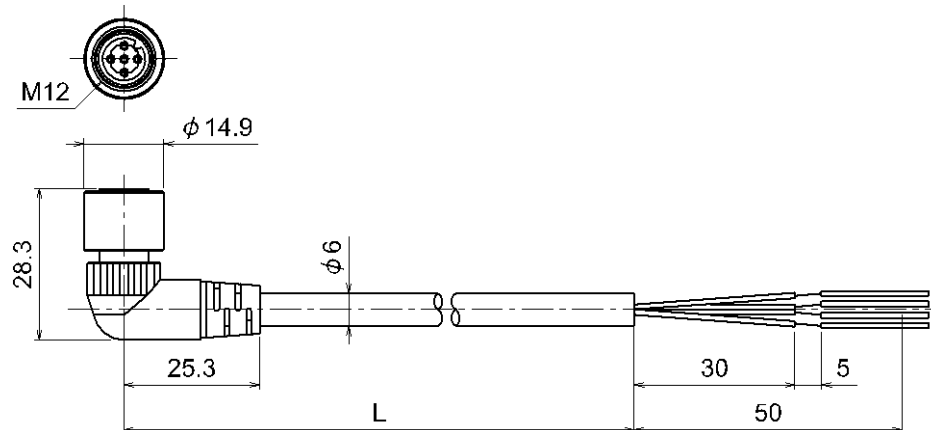

| Item                                | Specifications             |
|-------------------------------------|----------------------------|
| Cable O.D.                          | φ6 mm                      |
| Nominal cross section               | 0.3 mm <sup>2</sup> /AWG22 |
| Wire diameter (Including insulator) | 1.5 mm                     |
| Min. bending radius (Fixed)         | 40 mm                      |





## SPEEDCON


PCA-1401804

- Cable length (L)

| Symbol  | Content |
|---------|---------|
| 1401804 | 1500 mm |
| 1401805 | 3000 mm |
| 1401806 | 5000 mm |

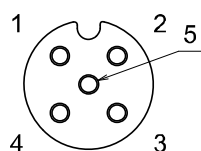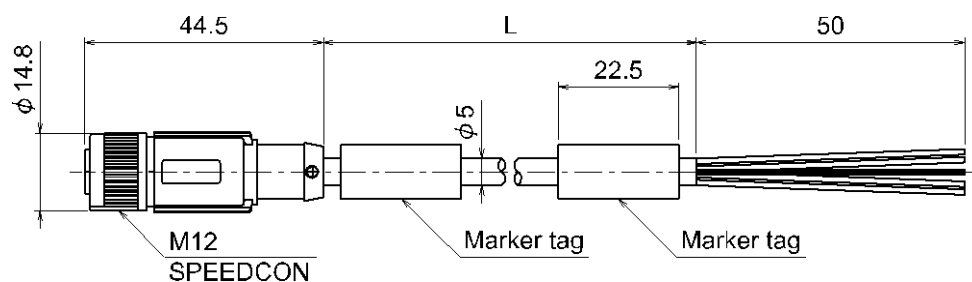

Socket connector  
pin arrangement  
A-coded  
(Normal key)


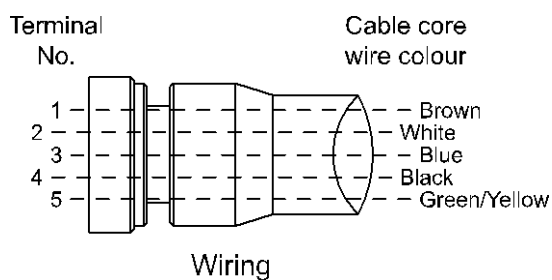


| Item                                | Specifications             |
|-------------------------------------|----------------------------|
| Cable O.D.                          | φ5 mm                      |
| Nominal cross section               | 0.3 mm <sup>2</sup> /AWG22 |
| Wire diameter (Including insulator) | 1.27 mm                    |
| Min. bending radius (Fixed)         | 21.7 mm                    |



## PCA-1557769

- Cable length (L)

| Symbol  | Content |
|---------|---------|
| 1557769 | 3000 mm |

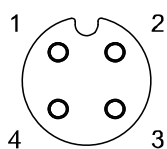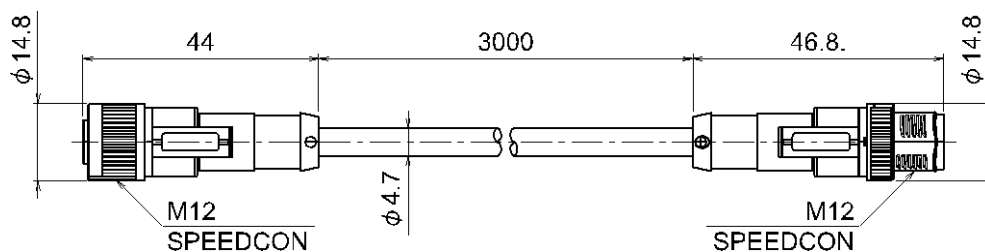

Socket connector  
pin arrangement  
A-coded  
(Normal key)

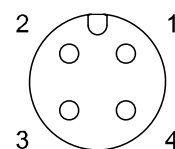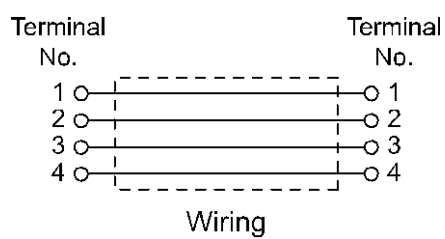

Plug connector  
pin arrangement  
A-coded  
(Normal key)

## 7. Power Supply Cable with M12 Connector (B-coded)


### SPEEDCON

PCA-1564927




#### • Specification

| Symbol  | Cable length (L) | Connector specification |
|---------|------------------|-------------------------|
| 1564927 | 2000 mm          | Straight                |
| 1564930 | 6000 mm          | Straight                |
| 1564943 | 2000 mm          | Right angle             |
| 1564969 | 6000 mm          | Right angle             |

#### Straight connector type

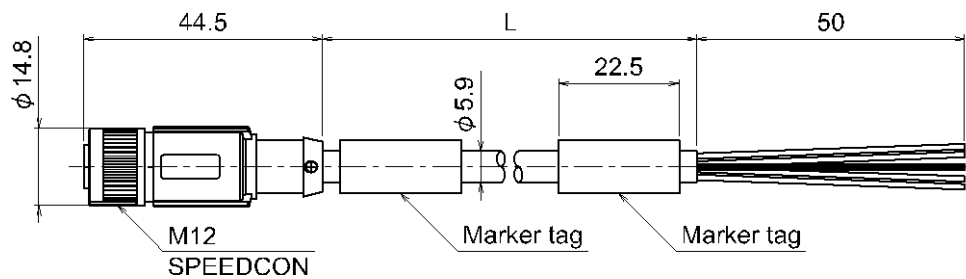

#### Angle connector type

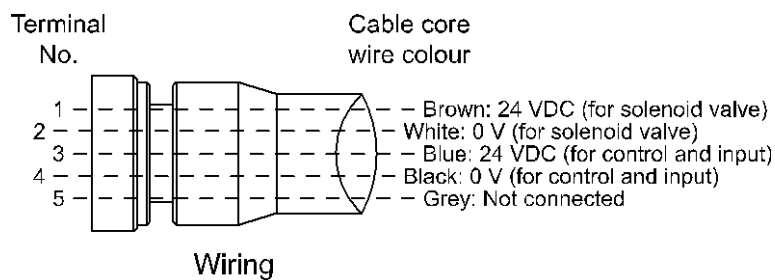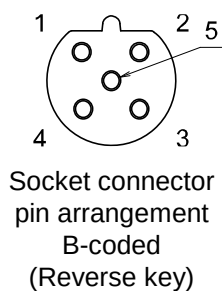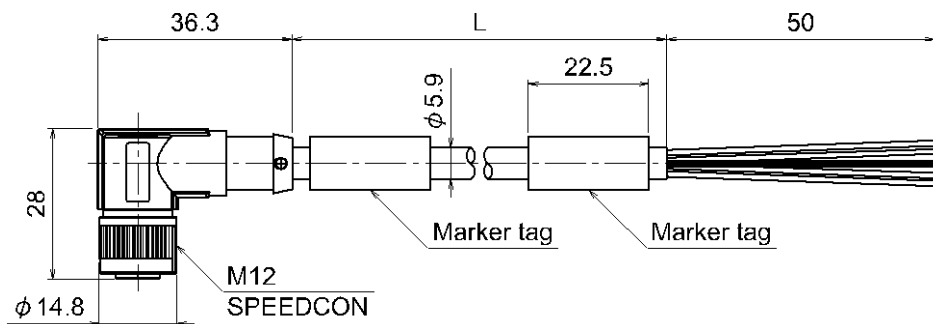


## 8. Power Supply Cable with 7/8 Inch Connector/Power Supply Connector

PCA-1558810


### • Specification

| Symbol  | Cable length (L) | Connector specification |
|---------|------------------|-------------------------|
| 1558810 | 2000 mm          | Straight                |
| 1558823 | 6000 mm          | Straight                |
| 1558836 | 2000 mm          | Right angle             |
| 1558849 | 6000 mm          | Right angle             |


### Straight connector type

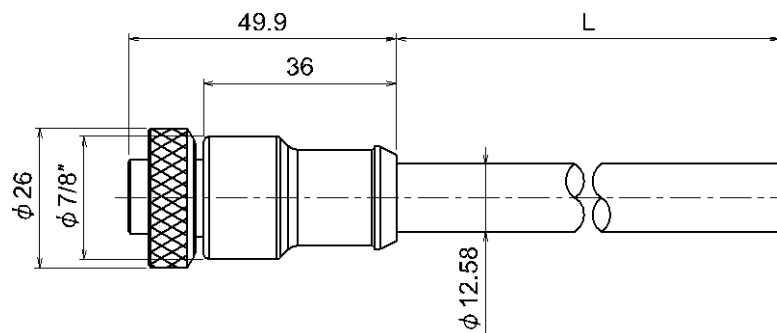

### Angle connector type

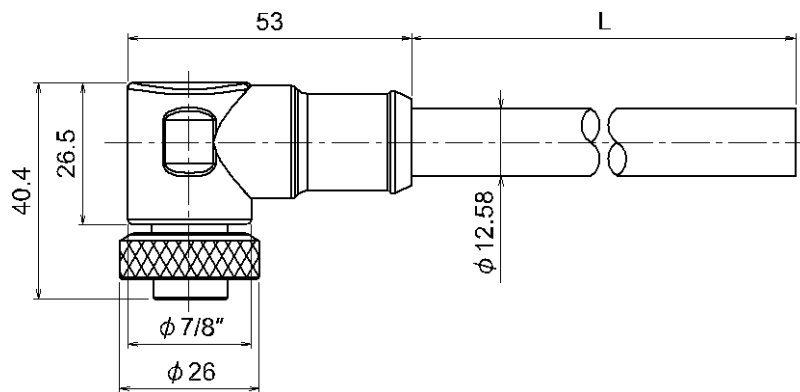

Socket connector  
pin arrangement  
7/8 inch  
(Mini style)


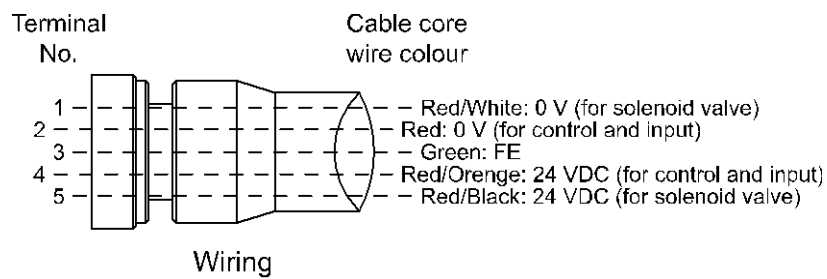


# Field wireable connector



PCA-1578078

- Connector specification

| Symbol  | Content |
|---------|---------|
| 1578078 | Plug    |
| 1578081 | Socket  |

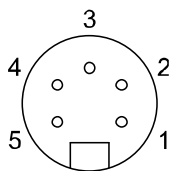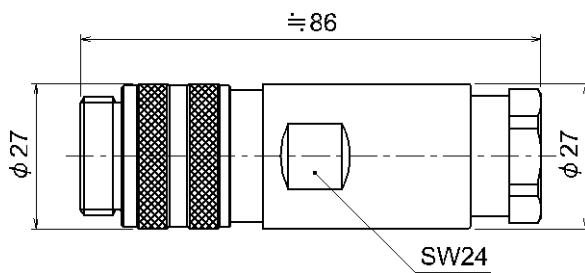

Plug connector  
pin arrangement  
7/8 inch  
(Mini style)

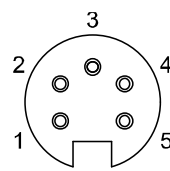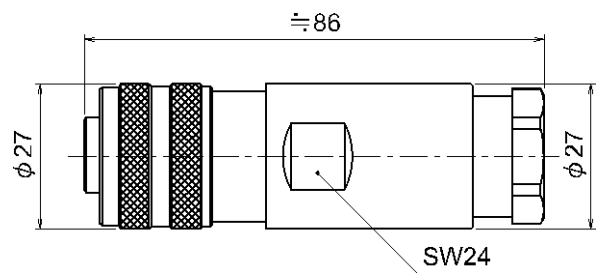

Socket connector  
pin arrangement  
7/8 inch  
(Mini style)

| Terminal No. | Wire guide colors |
|--------------|-------------------|
| 1            | Red/White         |
| 2            | Red               |
| 3            | Green             |
| 4            | Red/Orange        |
| 5            | Red/Black         |

## Applicable Cable

| Item                                        | Specifications                               |
|---------------------------------------------|----------------------------------------------|
| Cable O.D.                                  | 12.0 to 14.0 mm                              |
| Wire gauge<br>(Stranded wire cross section) | 0.34 to 1.5 mm <sup>2</sup> /<br>AWG22 to 16 |

\*: The table above shows the specifications for the applicable cable.  
Adaptation for the connector may vary on account of the conductor  
construction of the electric wire.

| Revision history                                         |
|----------------------------------------------------------|
| A: Contents are added. [May 2018]                        |
| B: Contents revised in several places.<br>[January 2019] |
| C: Contents are added. [May 2019]                        |
| D: Contents are added. [January 2022]                    |

# SMC Corporation

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021 JAPAN

Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362

URL <https://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.

EtherNet/IP® is a registered trademark of ODVA, Inc.

© 2017-2022 SMC Corporation All Rights Reserved

