



# Operation Manual

## PRODUCT NAME

# Refrigerated Air Dryer


## MODEL / Series

**IDF190D-3-C,M,R**

**IDF190D-9-\*\*\*V-C,M**

**IDF240D-3-C,M,R**

**IDF240D-9-\*\*\*V-C,M**

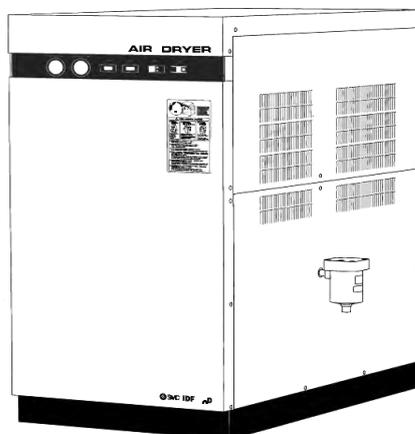

This manual is intended to explain the installation and operation of the product. Only those who have thorough understanding of the fundamental operating procedure or have basic knowledge and skills of handling industrial products are qualified to perform installation and operation.

Please read this manual prior of using the air dryer.  
Keep the manual readily available for reference.

## SMC Corporation

# Foreword

Thank you for purchasing SMC's refrigerated type air dryer (hereinafter referred to as the "product").

For safety and long life of the product, be sure to read this Operation Manual (hereinafter referred to as the "manual") and clearly understand the contents.

- For safe operation of SMC THERMODRYER, thoroughly read and follow the safety instructions, as well as regulations stated within ISO 4414\*<sup>1</sup> & JIS B 8370\*<sup>2</sup>.
  - \*1) ISO4414: Pneumatic fluid power - Recommendations for the application of equipment to transmission and control systems.
  - \*2) JIS B8370: General rules for pneumatic equipment
- This manual is intended to explain the installation and operation of the product. Only people who understand the basic operation of the product through this manual or who install and operate industrial machinery and have basic knowledge and ability to handle such equipment, are allowed to work on the product.
- This manual and other documents attached to the product do not constitute a contract, and will not affect any existing agreements or commitments.
- It is strictly prohibited to copy this manual entirely or partially for the use by a third party without prior permission from SMC.

**NOTE: The contents of this operation manual are subject to change without prior notice.**

# Contents

<b>Chapter 1</b>	<b>Safety</b>	<b>1-1</b>
1.1	Before Using the Air Dryer	1-1
1.1.1	Danger, Warning and Caution in This Manual	1-1
1.2	Hazard Classifications & Position of Hazard warning Labels	1-2
1.2.1	Hazard of Electricity	1-2
1.2.2	Hazard of Hot Surface	1-2
1.2.3	Hazard of Rotating Object	1-2
1.2.4	Hazard of Compressed Air Circuit	1-2
1.2.5	Cautions for usage	1-3
1.2.6	Cautions for refrigerant	1-3
1.2.7	Cautions for Rotating Object	1-4
1.3	Waste Disposal	1-5
1.4	Limited Warranty and Disclaimer/ Compliance Requirements	1-6
<b>Chapter 2</b>	<b>Name and Function of Parts</b>	<b>2-1</b>
2.1	Name and Function of Parts	2-1
<b>Chapter 3</b>	<b>Transportation and installation</b>	<b>3-1</b>
3.1	Transportation	3-1
3.2	Installation	3-2
3.2.1	Environment	3-2
3.2.2	Installation	3-2
3.2.3	Air piping	3-3
3.2.4	Replacement of auto drain	3-4
3.2.5	Electrical wiring	3-4
3.2.5.1	Wiring of the power supply cable	3-4
3.2.5.2	Wiring of signal cable (operation / error / remote operation)	3-6
3.3	Cautions about Reinstallation	3-7
<b>Chapter 4</b>	<b>Operation/ Shutdown</b>	<b>4-1</b>
4.1	Check points before operation	4-1
4.2	Operation	4-1
4.3	Stop	4-2
4.4	Cautions for re-start	4-2
4.5	Check points before restart	4-2
4.6	Cautions when the product is shut down for an extended period of time	4-2
4.7	Signal output	4-2
<b>Chapter 5</b>	<b>Checks, Maintenance and Adjustment</b>	<b>5-1</b>
5.1	Daily inspection	5-1
5.2	Regular maintenance	5-2
5.2.1	Cleaning the ventilation grille	5-2
5.2.2	Service parts	5-2
5.2.3	Auto Drain Maintenance	5-2
5.3	Adjustment	5-4
5.3.1	Capacity Control Valve	5-4

5.3.2 Sight glass (for IDF240D only) ..... 5-4

**Chapter 6 Troubleshooting..... 6-1**

6.1 Troubleshooting..... 6-1

6.2 Reset the Thermal relay and High Pressure Switch ..... 6-3

**Chapter 7 Documents ..... 7-1**

7.1 Specifications ..... 7-1

7.2 Refrigerant and GWP..... 7-2

7.3 Dimensions ..... 7-2

7.4 Electrical circuit diagram ..... 7-3

7.5 Air and refrigerant circuits and functions ..... 7-5

**Chapter 8 Option C..... 8-1**

8.1 Specifications ..... 8-1

8.2 Precautions for installation and handling ..... 8-1

**Chapter 9 Option M ..... 9-1**

9.1 Safety instructions for use ..... 9-1

9.2 Specifications ..... 9-2

9.3 Installation of Motor type Auto Drain..... 9-3

9.4 Electrical circuit diagram ..... 9-3

**Chapter 10 Option R..... 10-1**

10.1 Safety instructions for use ..... 10-1

10.2 Specifications ..... 10-1

10.3 Connection of power supply ..... 10-2

10.4 Handling Precautions of the Earth Leakage Breaker ..... 10-2

10.5 Electrical circuit diagram ..... 10-2

**Chapter 11 Inspection record..... 11-1**

11.1 Inspection record..... 11-1

# Chapter 1 Safety



**Before using the product, be sure to read and understand all the important actions highlighted in this manual.**

## 1.1 Before Using the Air Dryer

- This chapter is intended to specifically describe the safety related issues for handling the product. Read this before handling the product.
- This product is for dehumidification of compressed air. We, as the manufacturer, cannot take any responsibility if used for any other purpose.
- The product operates with high voltage and has some parts that get hot or rotates during operation. If a component needs to be replaced or repaired, contact a specialized vendor for parts and service.
- All personnel who work with or around the product should read and understand the safety related information in this manual carefully before starting work.
- This service manual is not a general safety manual.
- People who handle this product or work around it need to take training to understand the inherent risks and master safety measures.
- The safety manager is responsible for strictly observing safety standards, but responsibility in respect to safety standards during daily work resides with each individual operator and maintenance personnel.
- Operators and maintenance representatives should take the safety of all personnel in the work environment into account.
- It is necessary to think of the safety of working place and work environment for each task.
- If the product is subjected to a short power outage (including voltage sag), it may take a long time to resume normal operation or be unable to restart normally due to the protective equipment triggered after the power is recovered. Should this happen, turn the product off using the switch with light and reset the protection circuits referring to 6.2 - Reset the Thermal relay and High Pressure Switch. It is possible that the product starts suddenly after the power is recovered. Turn off the switch with light when removing the cover panel.
- This manual must be kept available to operators whenever necessary.

### 1.1.1 Danger, Warning and Caution in This Manual

The instructions given in this manual aim to ensure that the product is operate in a safe and correct way. These instructions are grouped into three categories, “Danger”, “Warning”, and “Caution”, which indicate the level of hazard, damage and also the degree of emergency. Read these statements carefully and thoroughly understand them and location of the instruction before operating or performing maintenance on the unit. “**DANGER**”, “**WARNING**” and “**CAUTION**” signs are in order according to severity (DANGER> WARNING> CAUTION). The meanings of these signs are as follows.

 <b>DANGER</b>
<p><b>“DANGER”:</b> Hazard that will cause serious personal injury or death during operation, maintenance or inspection due to incorrect handling or negligence of compliance to avoid the danger.</p>
 <b>WARNING</b>
<p><b>“WARNING”:</b> Hazard that may cause serious personal injury or death during operation, maintenance or inspection due to the negligence of required procedure or warning to avoid the danger.</p>
 <b>CAUTION</b>
<p><b>“CAUTION”:</b> Hazard that Will cause minor personal injury or damage to the device or equipment during operation, maintenance or inspection due to the negligence of required procedure or warning to avoid the danger.</p>

## 1.2 Hazard Classifications & Position of Hazard warning Labels

To ensure the safety of the operators, potential hazards are classified and marked with warning labels. Confirm the potential hazards and positions of the labels before operation.

 <b>WARNING</b>
<ul style="list-style-type: none"><li>- Transportation, installation, and maintenance involve risks and should only be carried out by people who have sufficient knowledge and experience about the product and its accessories.</li><li>- If there is abnormality, take actions below according to the operation manual.</li><li>- Read carefully the Chapter 6 Troubleshooting before taking actions.</li><li>- Do not start the product in any trouble. If failure occurs, immediately stop the product, and contact maintenance personnel or a qualified person.</li></ul>

### 1.2.1 Hazard of Electricity

 <b>WARNING</b>
Inside of this product, there is a power-supplying section with high voltage separated by the cover panel. Do not operate the product without the cover panel.

### 1.2.2 Hazard of Hot Surface

 <b>WARNING</b>
The product has surfaces that can reach high temperatures during operation. What is more, there is also the danger of burn injury due to remaining heat after the power supply is cut. Therefore, wait until the temperature of hot parts become 50°C and below.

### 1.2.3 Hazard of Rotating Object


 <b>WARNING</b>
Since this product has parts that rotate during operation, there is the danger of burn injury resulting from contact with them. Though sometimes those parts can temporarily stop the rotation, they will rotate again, and so do not work with them while running mode.

### 1.2.4 Hazard of Compressed Air Circuit

 <b>WARNING</b>
Before replacing or cleaning parts, be sure to bleed compressed air remaining inside of the product until the gauge indicates "0". If there is no relief to the pressure, high pressure can propel objects at high velocity when unscrewing parts and cause injury.


## 1.2.5 Cautions for usage

 <b>WARNING</b>
<p>Read with caution and pay attention to the notations on the caution labels.</p> <ul style="list-style-type: none"> <li>- Do not remove or rub the caution labels.</li> <li>- Ensure that the warning labels are placed in the correct position.</li> </ul>

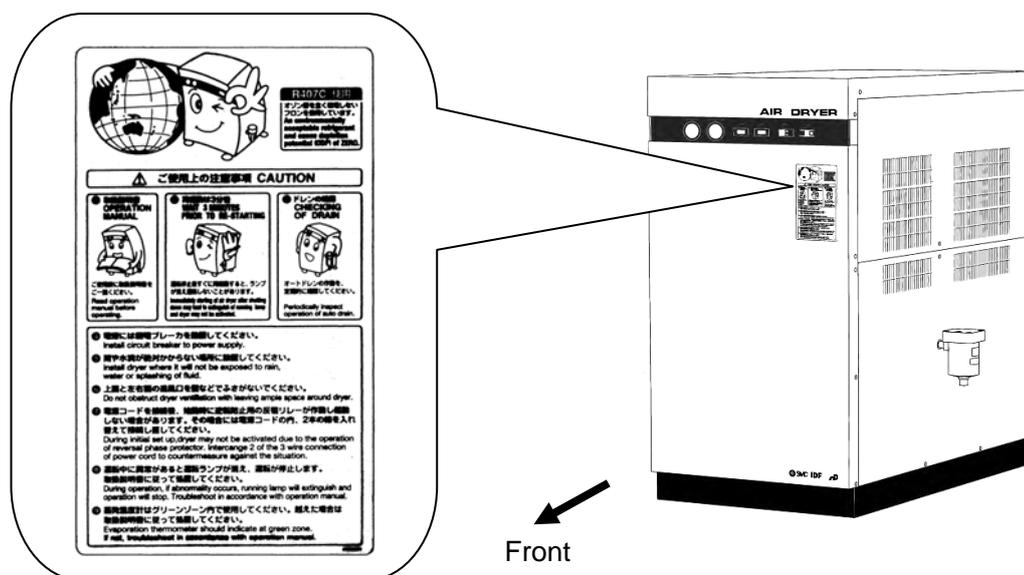

## 1.2.6 Cautions for refrigerant


 <b>CAUTION</b>
<ul style="list-style-type: none"> <li>- The product uses hydro fluorocarbon type refrigerant (HFC).</li> <li>- This product is a Class 1 specified products of the Act on Rational Use and Proper Management of Fluorocarbon in Japan.</li> </ul> <p>It is strictly forbidden to emit Fluorocarbon to the atmosphere. Before you repair this product, you should collect the refrigerant with “Refrigerant collector.” Then, ask a destruction agency to dispose of collected refrigerant. Only personnel with required knowledge and experience about the equipment and incidental device should perform the collection of the refrigerant.</p> <ul style="list-style-type: none"> <li>- Only maintenance personnel or qualified personnel are allowed to open the cover panels of the product.</li> <li>- The type and quantity of HFC are mentioned on the Chapter 7.1 Specifications.</li> </ul>

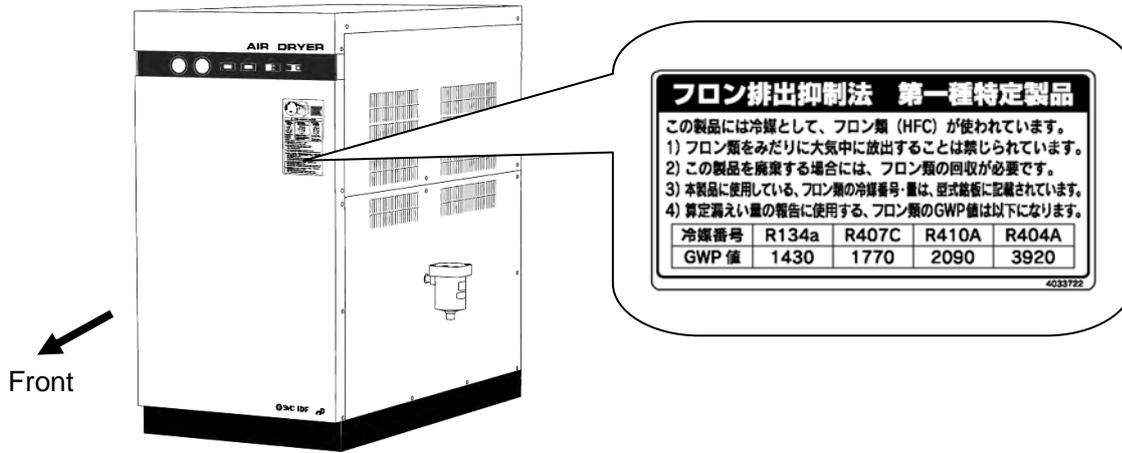

### 1.2.7 Cautions for Rotating Object

 **WARNING**

Since this product has parts that rotate during operation, there is the danger of burn injury resulting from contact with them. Though sometimes those parts can temporarily stop the rotation, they will rotate again, and so do not work with them while running mode.

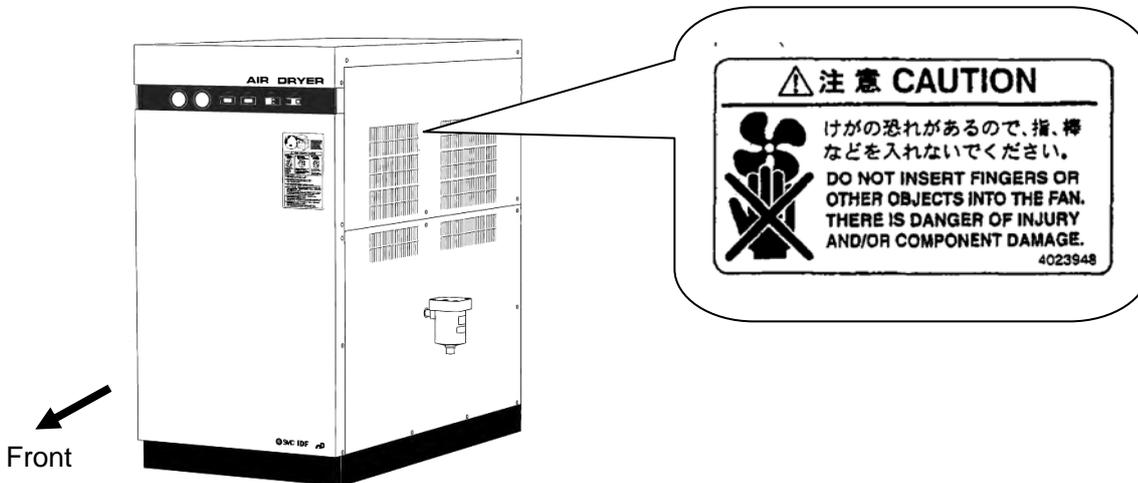

## 1.3 Waste Disposal

When you dispose of the product, you should collect the refrigerant and the refrigerant oil enclosed in the refrigerant circuit.



### CAUTION

- The product uses hydro fluorocarbon type refrigerant (HFC).
- This product is a Class 1 specified products of the Act on Rational Use and Proper Management of Fluorocarbon in Japan.  
It is strictly forbidden to emit Fluorocarbon to the atmosphere. Before you repair this product, you should collect the refrigerant with "Refrigerant collector." Then, ask a destruction agency to dispose of collected refrigerant. Only personnel with required knowledge and experience about the equipment and incidental device should perform the collection of the refrigerant.
- Only maintenance personnel or qualified personnel are allowed to open the cover panels of the product.
- The type and quantity of HFC can be found on the product label.



### CAUTION

- Dispose of the refrigerant and refrigerant oil according to the bylaw or regulation of local government.
- Only personnel with required knowledge and experience about the product and incidental device should perform the collection of the refrigerant.
- Only maintenance personnel or qualified personnel are allowed to open the cover panels of the product.
- If there is something not clear, please contact our service office.

## 1.4 Limited Warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### Limited Warranty and Disclaimer

1. The warranty period of the product is 1 year in service or within 1.5 years after the product is delivered. Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period for which we are responsible, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction(WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulation of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.



### CAUTION

The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If the product is being considered for use in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.




### CAUTION

SMC products are not intended for use as instruments for legal metrology.


Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

# Chapter 2 Name and Function of Parts


## 2.1 Name and Function of Parts

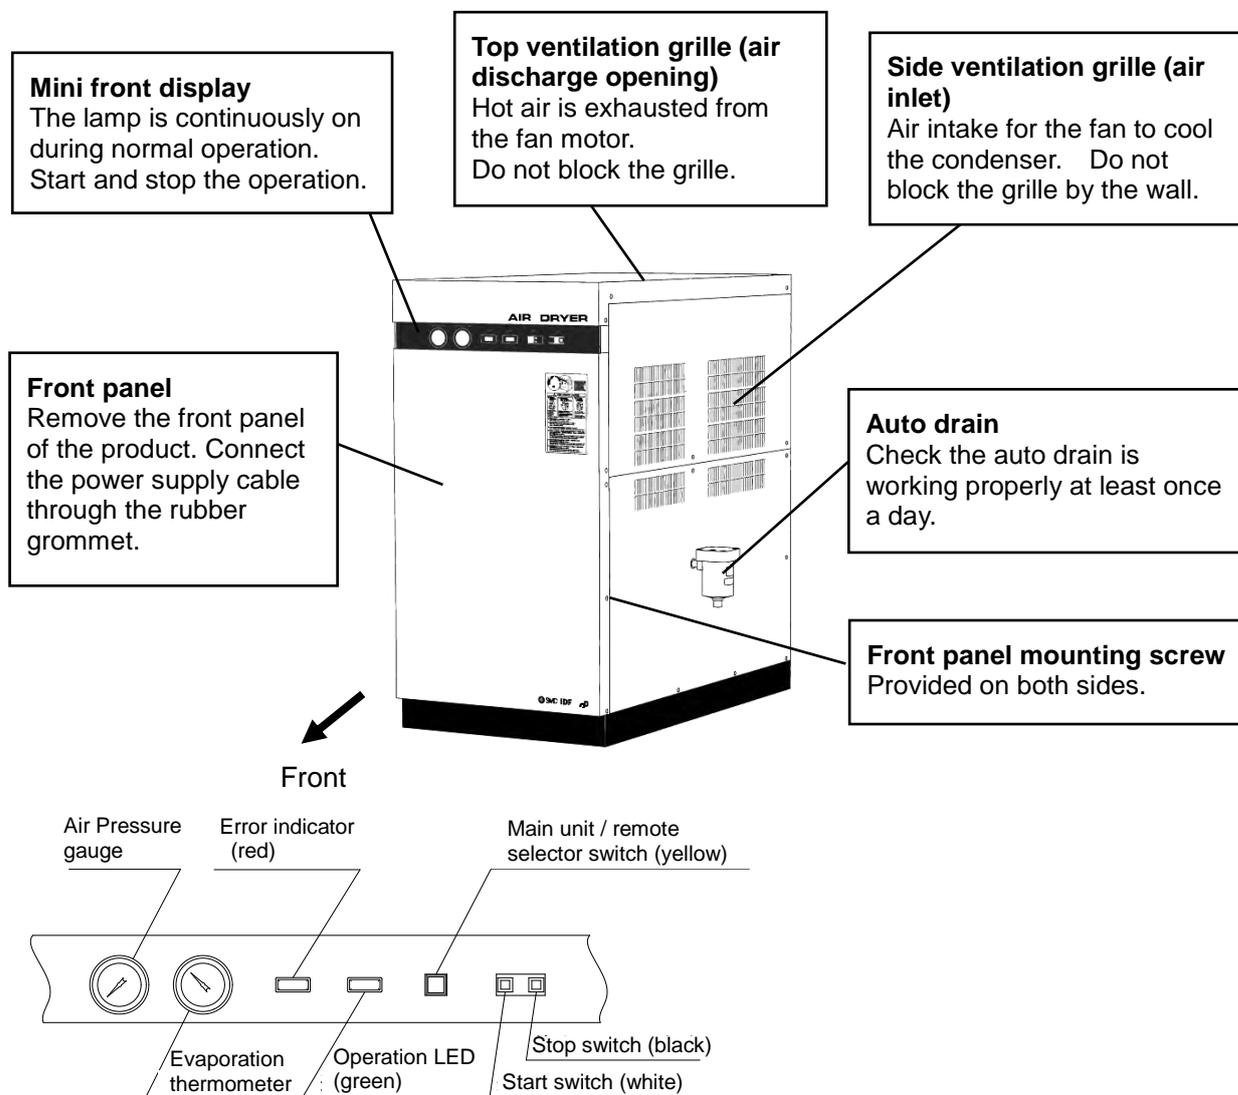

Front

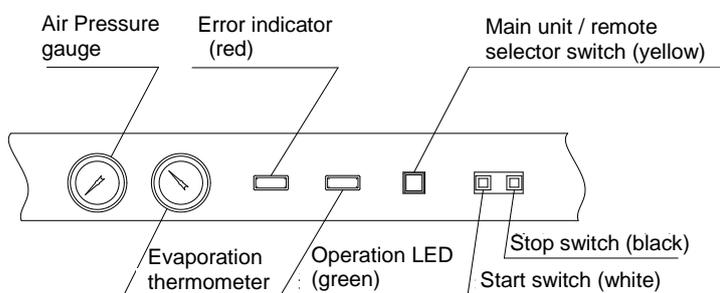

Enlarged view of the Mini-front display

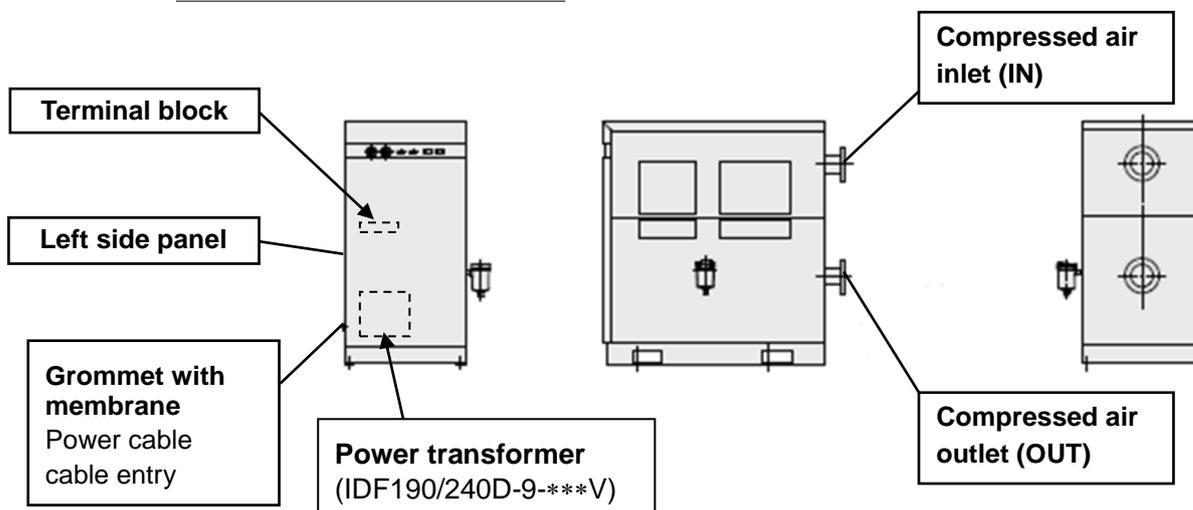



# Chapter 3 Transportation and installation



## WARNING

- Use the product in an appropriate manner, and pay attention to safety, particularly physical safety of operators, during the installation, operation, maintenance and checks of the product.
- When the product is used for a critical facility or equipment, prepare a spare product or alternative machine in case of failure or stoppage of the product due to the operation of the protective equipment.



## CAUTION

Transportation, installation, and maintenance including dangerous work must be done by personnel who have require knowledge and experience about the product and system.

## 3.1 Transportation

Follow the instructions below when transporting the product.

- For moving the product, lift it with care so that the product is not laid down on its side or dropped.
- Do not transport the product lying down on its side, or the product will be damaged.
- Do not suspend the product.



## WARNING

This product is heavy. Follow above cautions to avoid risk during transportation. This product weighs more than 450kg, only move the product using a forklift. Moving by forklift should be done by personnel who have the applicable licenses.

## 3.2 Installation

### 3.2.1 Environment

The product must not be operated or stored in the following conditions. Potential malfunction or damage to the product may occur if these instructions are disregarded.

- Place where the product is exposed to rain or wind. Humid place (more than 85% of relative humidity).
- Avoid locations where water, water vapor, salt water, or oil may splash on the product.
- Avoid locations where dust or other particles are present.
- Avoid locations where flammable or explosive gases are present.
- Avoid locations where corrosive gases, solvents or combustible gases present.
- Avoid locations which receive direct sunlight or radiated heat.
- Avoid locations where the ambient temperature exceeds the limits as mentioned below.  
 During operation: 2 to 45°C  
 During storage: 0 to 50°C (when there is no drain water inside of the piping)
- Avoid locations where temperature substantially changes.
- Avoid locations where strong magnetic noise occurs. (Avoid locations where strong electric field, strong magnetic fields, or surge voltage occur).
- Avoid locations where static electricity occurs or conditions which make the product discharge static electricity.
- Avoid locations where high frequencies occur.
- Avoid locations where damage is likely to occur due to lightning.
- Avoid installation on machines used for transporting, such as vehicles, ships, etc.
- Avoid locations at altitudes of 2000 meters or higher.
- Avoid locations where strong impacts or vibrations occur.
- Avoid locations where a massive force strong enough to deform the product is applied or the weight from a heavy object is applied.
- Avoid locations with insufficient space for maintenance.  
 Necessary maintenance space  
 Front face: 1.0 m  
 Rear: 1.0 m  
 Top: 1.0 m  
 Right side: 1.0 m  
 Left side: 1.0 m
- Avoid locations where the ventilation grille is obstructed.
- Avoid locations where the air dryer will draw in high-temperature air discharged from an air compressor or other dryer.
- Avoid pneumatic circuits where rapid pressure fluctuations or flow speed changes are generated.



#### **WARNING**


**Do not use or store the product in conditions of compressed air or an environment containing substances below. Otherwise, malfunction or parts damage may occur.**  
**- Corrosive gas, organic solvents or chemicals.**

### 3.2.2 Installation

- The product should be installed on a vibration-free, stable, horizontal flat surface.
- Refer to the 7.3 Dimensions of the Chapter 7.
- We recommend the anchor bolt sets.

### 3.2.3 Air piping

- Connect compressed air inlet and outlet using a JIS10K flange specified in Chapter 7- 7.1 Specifications
- It is recommended to install a main line filter in the air inlet piping. Main line filter prevents the auto drain from malfunctioning by stopping rust and particles.
- Be careful not to let the vibration of the air compressor transmit.
- When the pressure of the air source fluctuates a lot, install an air tank.
- Before piping, flush the inside of piping to eliminate foreign matter such as particles, seal tape or liquid gasket. Entry of the foreign matter may cause cooling failure or drain discharge failure.
- Use pipes and fittings that have enough endurance against the operating pressure and temperature. And connect it firmly to prevent air leakage.
- Provide bypass-piping to make it possible to do maintenance without stopping the air compressor.
- If rapid pressure fluctuation or flow change occurs, install a filter on the dryer outlet to prevent drain from splashing.

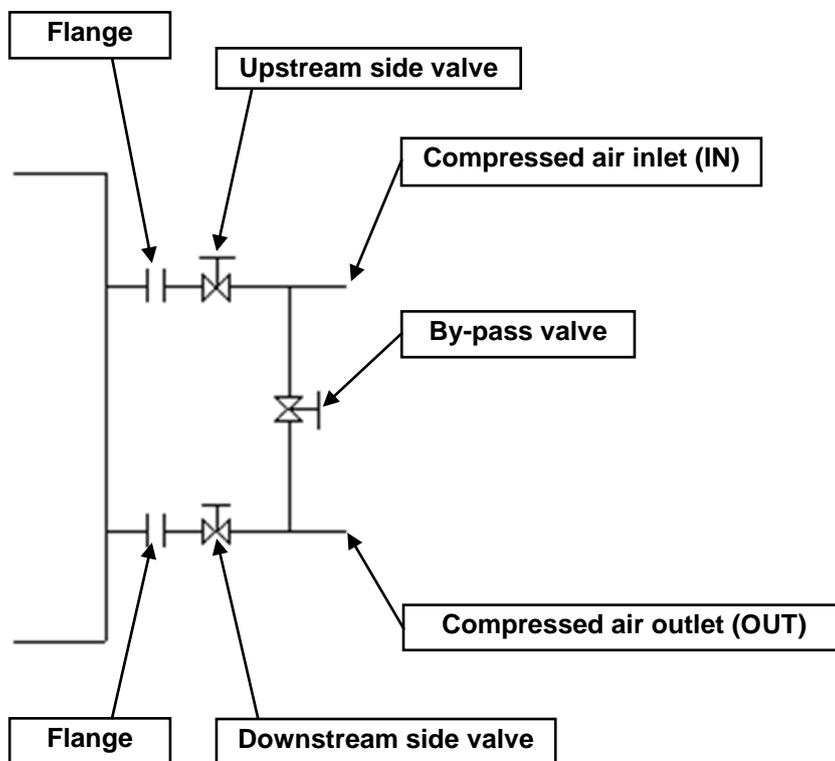

**By-pass piping**

### 3.2.4 Replacement of auto drain

- Mount the nipple to the auto drain (included in the same package). Then connect it to the drain inlet of the dryer.
- Connect the drain piping to the auto drain outlet. The drain piping should have an internal diameter of 8mm or more and be 5m or less in length. Make sure that it does not go upwards and it is not bent. The outlet end of the tube is released to atmosphere, and lets the drain flow through the tube.
- Ensure that the ball valve is opened. Refer to 7.3 Dimensions of the Chapter 7.
- Using the pressure of the compressed air, the drain will be discharged periodically. Fix the outlet end of the tube so as not to swing during discharge.

 <b>WARNING</b>
<p>- During drain work, follow the procedure that you define to keep the safety of worker. (ex. Put on protective glass, apron, and gloves).</p> <p>- In case that oil gets mixed in the wasted water that is discharged from the auto drain, the waste liquid treatment is necessary. Handle it following the bylaw or regulation of local government.</p>

### 3.2.5 Electrical wiring

 <b>WARNING</b>
<p>All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.</p> <ul style="list-style-type: none"> <li>- Be sure to shut off the user's power supply. Wiring with the product energized is strictly prohibited.</li> <li>- Ensure a stable power supply with no surge.</li> <li>- Install the correct electric earth leakage breaker of the specified leakage capacity and load capacity referring to 7.1 Specifications to prevent electric shock and burning of the compressor motor.</li> <li>- Use a power supply suitable for the specifications of the product. 3 phase power supply type cannot be operated by single phase power supply.</li> <li>- Be sure to connect the ground connection.</li> <li>- Never connect the ground to water line, gas pipe or lightning conductor.</li> <li>- Do not plug too many leads into a single socket. That causes exothermic heat or fire.</li> <li>- Do not modify the internal electrical wiring of the product.</li> <li>- For use in Europe, install a breaker compliant with applicable IEC standards to the power supply of the product.</li> </ul>

#### 3.2.5.1. Wiring of the power supply cable

- Remove the front panel of the product and connect the power cable to the terminal block.
- Install the earth leakage breaker on the power supply side. It needs to be prepared by the user.
- Allowable power supply fluctuation:  
 3 phase 200 VAC +/-10% (50Hz); 3 phase 200 VAC to 220V +/-10% (60Hz)  
 3 phase with different voltage (IDF190 / 240D-9-\*\*\*): AC220V, 240V, 380V, 400V, 415V, 440V +/-10%

**Power supply cable specification**

Prepare the power supply cables below.

Power supply cable: 10AWG (5.5mm<sup>2</sup> or greater), cable O.D. Approx. 16mm, 4 cores (including the ground)

Approx. 1.5m of cable is necessary for wiring in the product.

**Power supply cable length**

Power cable length for the product shall be less than 30m.


**Power supply**

Connect the power cable and grounding cable to the terminal block.

**Wiring procedure**


**[IDF190/ 240D-3]**

- 1) Remove the front panel.
- 2) Introduce the cable through the grommet with membrane to connect to the terminal block. (refer to the label on the terminal block)  
Do not touch any equipment other than the terminal block during wiring. (Refer to the layout of the terminal box).
- 3) Loosen the M4 screw of the terminal block using a screwdriver. Attach the round crimp terminal (R5.5-4) attached to the power cable and tighten it to the terminal block with the previously loosened screw. **【Tightening torque:1.0N·m】**
- 4) Mount the front panel back.

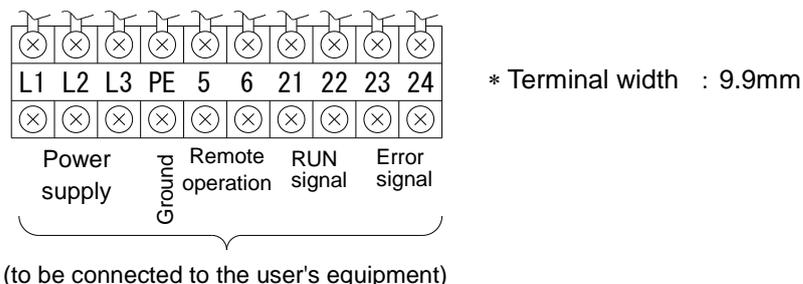

**[IDF190/ 240D-9-\*\*\*V]**

- 1) Remove the left panels.
- 2) Insert the cable through the rubber grommet. Remove the transducer cover, then connect the cable to the power supply transducer depending on the rated voltage. (Refer to the terminal block layout below).

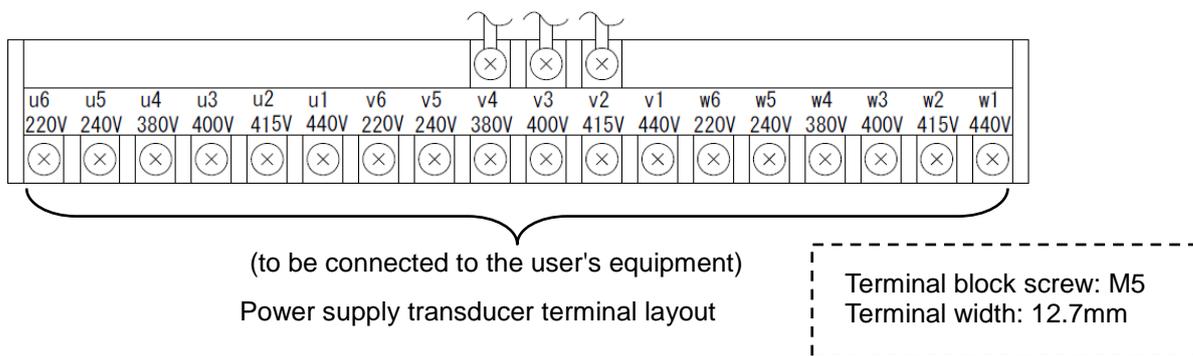

Power supply cable terminal location

Rated voltage	Power supply cable terminal location
AC220V	u6, v6, w6
AC240V	u5, v5, w5
AC380V	u4, v4, w4
AC400V	u3, v3, w3
AC415V	u2, v2, w2
AC440V	u1, v1, w1

- 3) After wiring, mount the transducer cover and left panel (lower part).
- 4) Mount the earth leakage breaker to the power supply side to protect equipment and for maintenance. Earth leakage breaker capacity shall be 50A.

### 3.2.5.2. Wiring of signal cable (operation / error / remote operation)

- Remove the front panel of the product and connect the signal cable to the terminal block.

#### Signal cable specification

Prepare the following signal cables:

Signal cable: 20AWG (0.5mm<sup>2</sup> or greater), cable O.D. Approx. 9mm, 6 cores

Approx. 1.5m of cable is necessary for wiring in the product.

#### Signal cable length

Signal cable length shall be less than 30m.

#### Signal cable Connection

Connect the signal cable to the terminal block.

#### Wiring procedure

- 1) Remove the front panel.
- 2) Introduce the cable through the grommet with membrane to connect to the terminal block. (refer to the label on the terminal block)  
Do not touch any equipment other than the terminal block during wiring. (Refer to the layout of the terminal box)
- 3) Loosen the M4 screw of the terminal block using a screwdriver. Attach the round crimp terminal (R1.25-4) attached to the signal cable and tighten it to the terminal block with the previously loosened screw. (Tightening torque: 1.0 N·m)
- 4) Mount the front panel back.

#### [Remote control]

- Voltage of AC200V is present on the terminal block. The black switch (stop) must be turned on while wiring. When wiring, shut off the supply breaker.
- 1) Connect the external switch terminals to the terminal blocks No.5 and No.6.  
Use a single pole type (non-voltage) external switch for remote operation.
  - 2) To enable remote operation, the yellow switch (main unit /remote selector switch) must be turned ON.  
Then, for remote operation, the product is turned on/off using the external switch.

### 3.3 Cautions about Reinstallation

 <b>CAUTION</b>
<p><b>Only someone who has enough knowledge about the equipment and incidental devices should reinstall it in another place.</b></p>

If you move the product and reinstall it into another place after some operations (including trial running), all installation instructions in chapter 3 should be followed as well as the following instructions.

**Disassembly of the power cable**

**Cut off the power source before you disassemble the power cable.**

 <b>WARNING</b>
<ul style="list-style-type: none"> <li>- All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.</li> <li>- Cut off the power supply for safety before the wiring. Wiring with the product energized is strictly prohibited.</li> </ul>


**Removal of air piping**

 <b>WARNING</b>
<ul style="list-style-type: none"> <li>- All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.</li> <li>- Separate the compressed air source from the product for safety before removing the piping.</li> <li>- Do not remove any piping when there is remaining compressed air pressure inside of it.</li> </ul>

Remove the seal tape completely after detaching the piping. Remaining tape could cause imperfect cooling or failure by entering into the product.

**Procedure to release residual compressed air**

- 1) Even while the dryer is removed, only when compressed air is needed, open the bypass piping valve.
- 2) Close the compressed air inlet and outlet valve.
- 3) Ensure that the ball valve of the auto drain is opened.
- 4) Open the bleed valve of the auto drain. When compressed air stops coming out, press the flush button to confirm that there is no compressed air left inside. Refer to the figure shown below

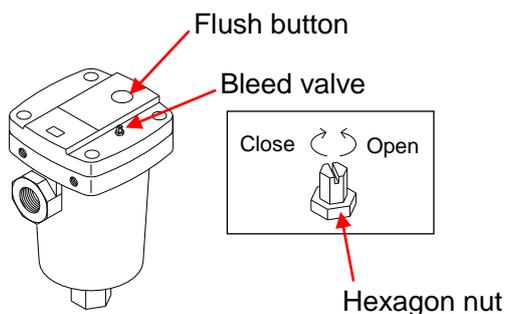



# Chapter 4 Operation/ Shutdown



## CAUTION

Only someone who has enough knowledge and experience about the product and incidental devices should operate or shut down the product.

## 4.1 Check points before operation

Before trial operation, check following points.

### Installation state

- By visual inspection check that the product is installed horizontally.
- Make sure the product is fixed properly with anchor bolts.
- Do not place heavy obstacles on the product and add unreasonable loading by piping and so on.

### Connection of cables

- Check that the power cable and grounding cable are connected correctly.

### Drain tube

- Drain tube should be connected correctly.

### Air piping

- Confirm that the piping to the compressed air is correctly connected. Check that the IN and OUT side of the product and bypass piping valves are completely closed.

### Ball valve

- Ensure that the ball valve of the auto drain is opened.

## 4.2 Operation

Start operation according to the procedure below.

- 1) Turn on the main power supply breaker. Then turn on the white switch (operation switch).
- 2) The operation LED (green) turns ON. Then, cooling fan for the condenser starts. Hot air comes from the outlet. Exhaust port: Top ventilation
- 3) Open the IN and OUT side valves slowly. Ensure the bypass valve is completely closed. Confirm that there is no air leakage.
- 4) The fan keeps starting and stopping depending on the compressed air and ambient temperature conditions, but the compressor keeps operating continuously, and the evaporation thermometer stays within the green area. When the evaporation thermometer is over the green area, refer to Chapter 6 - Troubleshooting.
- 5) After supplying compressed air for a while, the drain will be discharged from the drain tube automatically.
- 6) Continue the operation.



## CAUTION

- Frequent switching ON and OFF leads to malfunction.
- The auto drain is normally open and the valve closes when the air pressure is 0.15MPa or more. When the IN side valve starts to open, air bleeds from the drain outlet until the pressure reaches 0.15MPa. The pressure may not reach 0.1MPa when the air compressor discharge flow rate is small.
- Dehumidified drain may flow into the secondary piping if there is sudden change of pressure or flow speed. Do not use the product where those condition is present.

- 7) For remote operation, the product is turned on/off using the external switch while the yellow switch (main unit / remote selector switch) is turned ON. Allow at least 3 minutes before restarting remote operation. If restart is attempted within 3 minutes, the protective equipment may trip and restart will not be possible. Start-stop frequency: 5 times/ hour or less. This is to protect the motor.

### 4.3 Stop

- 1) Turn on the black switch (stop).
- 2) For remote operation, use the external switch.
- 3) Green LED (operation) turns off and operation stops.

### 4.4 Cautions for re-start

Allow at least 3 minutes before restarting the product. If the product is restarted within 3 minutes after being stopped, the protection circuit will be activated, and the dryer will not start. When operation does not start, restart it referring to the Chapter 6 Troubleshooting.

### 4.5 Check points before restart

When starting operation, check the following points. Immediately stop operation if any abnormalities occur. Turn on the black switch (stop) and then shut off the power supply breaker.

- There should be no leakage of compressed air.
- Compressed air pressure, temperature, flow rate and ambient temperature are within the specifications of the product.
- Confirm that drain comes out of the drain tube.
- The evaporation thermometer is in the green area.
- Drain should not be exhausted from the compressed air outlet of the air dryer.
- There should be no abnormality with noise or vibration or odor from the product.

### 4.6 Cautions when the product is shut down for an extended period of time

- When the product is not used for a period longer than 24 hours, turn on the black switch (stop) or turn off the power supply. It is recommended to discharge the residual pressure and drain from the compressed air piping.
- The residual drainage in the air dryer may splash over the outlet when the operation is re-started, so it is recommended to install a filter on the outlet of the air dryer.

### 4.7 Signal output

- Operation and error signals are non-voltage contact outputs.

	Signal Contact output
1) Operation signal	- During Operation: Closed - While stopped: Open (Including emergency stop): Open
2) Emergency stop signal	- Protective equipment in operation: Closed - Protective equipment not operated: Open

\* Error signals are not output when the product stops operation due to an operation of the built-in overload relay.

- Contact capacity  
AC220V/ 2A、 DC24V/ 2A (Minimum applicable load: 5 VDC, 1mA)

# Chapter 5 Checks, Maintenance and Adjustment



## WARNING

- Only people who have sufficient knowledge and experience about the product and its accessories are allowed to perform maintenance.
- Before maintenance, read and understand the important cautionary notifications in this operation manual.



## DANGER

- Cut off the power supply for upstream when removing the panel.
- Before replacing or cleaning parts, be sure to bleed compressed air remain inside of the product until the gauge indicates "0".  
Do not remove the auto drain case assembly with any air pressure remaining internally. If there is residual pressure in the product, there would be great danger of an unexpected accident, such as shooting out of parts when they are being unscrewed.
- Power supply parts become hot and will be applied with high voltage during operation. Heat may cause burns, or electric shock can result due to high voltage. Even if the switch with lamp is turned off and operation is stopped, electricity will be applied to the primary line. During the work for charging line, turn OFF the electrical leakage breaker of the user's equipment.
- Even if the device operation stops, there is a danger of burns due to residual heat. Do NOT start working on the parts inside the product until the temperature has decreased to 50°C or less. It may take 10 to 15 minutes.
- There is the possibility of contacting the condensate during the auto drain maintenance work. Follow enduser procedures ensure safety of operator.  
(example. Put on protective glass, apron, and gloves).
- Use an aqueous solution of neutral detergent for cleaning of the auto drain and do not use solvents.
- When removing the panels and auto drain case assembly, wear protective gloves to prevent injuries from sharp edges.

## 5.1 Daily inspection

Before daily operation, check the following points. When any abnormality is found, stop operation immediately and refer to the Chapter 6 Troubleshooting.

- There should be no leakage of compressed air.
- The green LED is ON during operation.
- Confirm that condensate comes out of the drain tube.
- The evaporation thermometer is in the green area when the product is operated with compressed air.
- The indicated value of the evaporation thermometer is about 5 to 10°C lower than ambient temperature in a state where the product is stopped and compressed air is not applied.
- There should be no abnormality with noise or vibration from the product.
- There should be no smell or smoke from the product.

## 5.2 Regular maintenance

### 5.2.1 Cleaning the ventilation grille

Vacuum or air-blow the filter every month to remove dust and particles of the ventilation grille.

 <b>CAUTION</b>
<b>Wear protective goggles or mask during air blow.</b>

### 5.2.2 Service parts

It is recommended to regularly replace the parts in the table below. Values in the table may vary depending on the operating conditions (ambient temperature, installation environment, etc.) and are not guaranteed values.

Table 5.1 Table of periodic replacement part

Description	Recommended replacement interval
Pressure switch	1 million cycles
Fan motor	20,000 h
Electromagnetic switch Electromagnetic contactor	1 million cycles

### 5.2.3 Auto Drain Maintenance

Remove the dust accumulated in the auto drain every month. Use neutral detergent for cleaning. When cleaning does not improve the operation, replace the element and bowl assembly. From the next time on, clean them in intervals shorter than a month.

 <b>WARNING</b>
<ul style="list-style-type: none"> <li>- <b>Be sure to release the residual pressure of the auto drain before starting maintenance.</b></li> <li>- <b>When the bowl assembly is broken or very dirty, replace it with a new one.</b></li> </ul>

- (1) Follow the procedure below for the auto drain maintenance.
  - 1) Turn on the stop switch of the product and stop the operation.
  - 2) Shut off the power supply from the earth leakage breaker.
  - 3) Fully close the valve at the compressed air IN and OUT piping. (Open the bypass valve, only when compressed air is required during maintenance.)
  - 4) Remove the exterior panel where it is necessary for the work.

**[Cleaning and replacement of the auto drain]**

Follow the procedure below for the auto drain maintenance.

**Note: Before maintenance**

When disassembling the auto drain for cleaning, replacing parts, etc., **be sure to completely remove the air pressure as follows. Do not disassemble the auto drain while pressurized.**

- \* Exhaust the compressed air from the auto drain < Fig. 1 >
- Close the inlet of the drain and open the bleed valve gradually.
- When compressed air stops coming out, press the flush button to confirm that compressed air is not left inside.

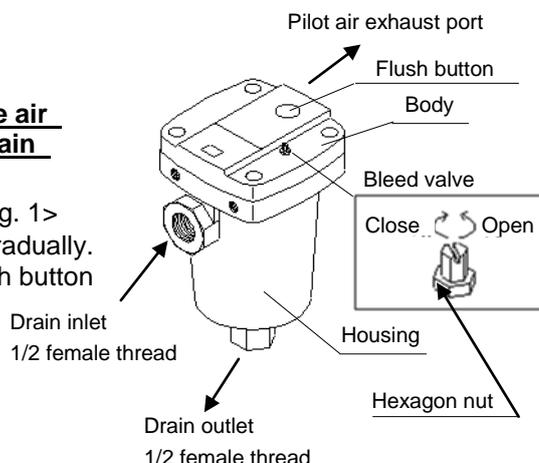


Fig.1 Name and Function of Parts

**(A) Disassembly < Fig.2 >**

Remove the 4 hexagon socket head cap screws using an allen key with nominal size 5, and lift up the body. The entire draining mechanism can be removed.

**(B) Cleaning of the interior**

- 1) Hold the body and rinse the lower half of the body (draining mechanism) with water or lukewarm water with neutral detergent.

**Caution! Never use anything other than neutral detergent.**

**DO NOT disassemble the draining mechanism.**

**The mechanism cannot be reused when disassembled.**

When scratches are seen on the main valve (discharge valve) or it is difficult to clean the dirt off, the main valve needs to be replaced.

Refer to (D) Replacement of the main valve.

- 2) Wipe the inner surface of the housing with a cloth. If there is dust stuck to the inside of the housing, leakage can occur after reassembly.

- 3) When O-ring is dirty, clean the surface with a soft cloth and check for gouges and deformation.

Damage or deformation could cause leakage when the product is reassembled. Replace the O-ring with a new one.

O-ring number: G85 (B)

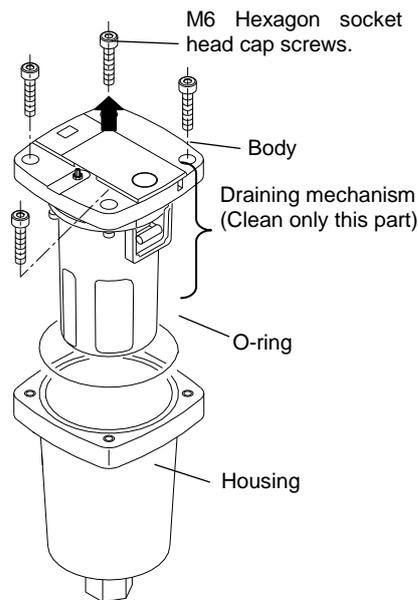


Fig. 2 Disassembly

**(C) Reassembly**

- 1) Place the O-ring onto the groove on top of the housing. **Make sure that the O-ring does not come out.**
- 2) Hold the body with the draining mechanism facing downwards. Place the mechanism into the housing so that the flush button comes to the opposite of the drain inlet. (If the body and housing are not completely engaged, there will be a gap of approx. 3mm between them. Rotate the body to the right or left)

- 3) Tighten the 4 hexagon socket head cap screws. (Appropriate tightening torque: 4.9Nm)

**Caution! Ensure there is no gap between the body and the housing before tightening. If the bolt is tightened with a gap, the parts will be broken.**

- 4) After reassembly, assemble the valve for the drain inlet slowly. Before use ensure that there is no leakage.

**(D) Replacement of the main valve (discharge valve)**

Purchase the replacement kit of the main valve and replace it referring to the attached Replacement Procedure. Replacement requires a specific tool. Replacement procedure must be followed to reuse the product and prevent the parts from being damaged. Replacement kit for exhaust valve mechanism.

## 5.3 Adjustment

### 5.3.1 Capacity Control Valve

The capacity control valve is set to the value in Table 5.2 at the time of shipment. Adjustment during operation is not necessary.

Table 5.2 Set value for capacity control valve

Description	Set value	Note
Capacity control valve	1 to 5°C (0.43 to 0.49)	Evaporation thermometer

However, if the evaporation temperature is not in the range of Table 5.2 during low-load operation, adjust the capacity adjustment valve to the value of the table. Make any adjustment based on the procedure of Table 5.3 while the load is not being applied.


Table 5.3 Adjustment for the capacity control valve

Evaporation temperature °C	Adjustment method
1°C or less	Remove the capacity adjustment valve cover. Then rotate the 6mm hexagon socket head cap screw clockwise

Note) It may take time for pressure to be stabilized. Rotate the capacity adjustment valve by 1/2 revolution. After about 5 minutes, when the value is stabilized, read the evaporation thermometer.

### 5.3.2 Sight glass (for IDF240D only)

Check the refrigerant condition in the refrigerant circuit with the table below

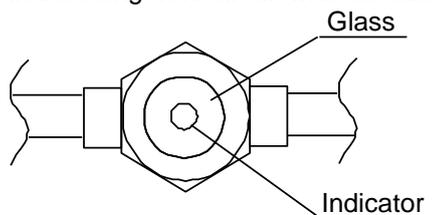

**(a) Check for refrigerant amount**

Sight glass (Refrigerant in the glass)	Condition
Filled with liquid	Correct
Air leaking positions	Correct
Bubbles keep coming	Refrigerant is insufficient *1
Liquid level and gas level are separated	Refrigerant

\*1) Air bubbles may be generated if the refrigerant circuit on the upstream of the sight glass is clogged and pressure drops occur even if the refrigerant amount is normal.

**(b) Moisture in the refrigerant circuit (colour of the indicator)**

- Green (DRY) ---- Good
- Yellow (WET) ---- Moisture is present in the refrigerant.  
(Moisture in the circuit may deteriorate the compressor oil for refrigeration and cause malfunction of the control equipment and shorten the service life.)

# Chapter 6 Troubleshooting

## 6.1 Troubleshooting

Refer to the table below if any abnormality is found. If there is something that is not clear, please turn off the power supply and contact our service office.

Problem	Possible causes	Action
Air dryer does not operate and the running lamp does not turn on, even when the switch is ON.	Power cable is loose or not connected.	- Connect the cable correctly.
	The earth leakage breaker is OFF.	- Please check the earth leakage breaker capacity. - Turn on the earth leakage breaker. If the earth leakage breaker keeps tripping, please shut off the power supply and contact our service office. Insulation failure is possible. [Option with earth leakage breaker is available (Option R)] - The earth leakage breaker is OFF at the time of shipment. Turn on before starting operation. - Be sure to solve the problem causing the breaker to trip before restarting. Restarting without solving the problem can cause serious incidents.
	Incorrect connection of 3-phase power supply.	- Exchange the order of 2 wires out of the 3 wires (R phase and T phase) and reconnect them.
	External switch for remote operation has not been turned ON.	- Turn on the switch.
	Wiring for remote operation is loose or keeps coming out.	- Connect the wiring correctly.
The lamp goes off and the compressor stops.	Poor ventilation in installation location. Ambient temperature is too high.	- Keep the ambient temperature low by ventilation.
	Ventilation grille is obstructed by a wall or blocked with dust.	- Install so that the ventilation grille is 1.0m or more away from the wall. - Clean the ventilation grille every month.
	Compressed air temperature is too high.	- Improve the ventilation condition of the air compressor or lower the ambient temperature to decrease the discharge air temperature of the air compressor. - Install an aftercooler after the air compressor to reduce the temperature.
	Large voltage fluctuation.	- Install the power transformer or revise the power supply for correct voltage. (Temporarily allowable fluctuation of the power supply voltage is within +/-10% of rated voltage)

<b>Problem</b>	<b>Possible causes</b>	<b>Action</b>
Evaporation thermometer indicates higher than green zone without warm air coming from the ventilation grille (air exhaust). (Refrigeration Compressor may stop with the lamp ON)	Poor ventilation in installation location. Ambient temperature is too high. Ventilation grille is obstructed by a wall or blocked with dust.	- Keep the ambient temperature low by ventilation.  - Install so that the ventilation grill are 1.0m or more away from the wall. - Clean the ventilation grille every month.
	Compressed air temperature is too high.	- Improve the ventilation condition of the air compressor or lower the ambient temperature to decrease the discharge air temperature of the compressor. - Install an aftercooler after the air compressor to reduce the temperature.
	Large voltage fluctuation.	- Install the power transformer or revise the power supply for correct voltage. - Ensure power supply voltage fluctuation is within +/-10% of the rated voltage.
	Overload relay of the compressor was activated.	- Check if the product was restarted within 3 minutes after stopping the operation. -Wait 3 minutes before restarting.
Evaporation thermometer indicates higher than green zone with warm air coming from the ventilation grille (air exhaust).	Poor ventilation in installation location. Ambient temperature is too high. Ventilation grille is obstructed by a wall or blocked with dust.	- Keep the ambient temperature low by ventilation.  - Install so that the ventilation grille is 1.0m or more away from the wall. - Clean the ventilation grille every month.
	Compressed air temperature is too high.	- Improve the ventilation condition of the air compressor or lower the ambient temperature to decrease the discharge air temperature of the compressor. - Install an aftercooler after the air compressor to reduce the temperature.
Moisture is generated downstream of the compressed air line.	The bypass valve is open.	- Be sure to use the dryer with the bypass valve fully closed.
	Drain is not discharged from the auto drain.	- Check that the drain tube is not trapped or bent. - Check the auto drain. - Ensure that the ball valve is opened. - Use the product within the specified pressure range.
	Large fluctuation (pulsation) of compressed air	- Install an air tank. - Avoid intermittent operation.
	- Residual drainage in the air dryer splashes over when the unit is re-started.	- Install a filter on the outlet of the air dryer. - Blow the unit with air to eliminate the residual drain after stopping or re-starting the operation.
	The piping converges downstream of the dryer with a different air line that does not have a dryer.	- Install a dryer in the line where this product is not installed. - Separate the two lines so they do not converge.
Large pressure drop	The valve in the inlet/ outlet piping is not fully opened.	- Be sure to fully open the IN and OUT valves.
	- The air filter in the compressed air piping is blocked.	- Replace the filter element. (Refer to the operation manual for used equipment).

## 6.2 Reset the Thermal relay and High Pressure Switch

When the lamp goes off and the compressor stops during operation, the thermal relay or high voltage pressure switch has activated to protect the compressor for refrigeration. It is necessary to reset it manually. The position of the thermal relay and high pressure switch can be checked among the electrical parts by removing the front panel.

Refer to the Chapter 6.1 Troubleshooting to eliminate the cause of activation of the thermal relay or high voltage pressure switch.




### WARNING

**Turn off the switch with lamp and shut off the power supply to the product before removing the panel.**


#### Reset the thermal relay (for IDF240D only)

- 1) Turn on the black (stop) switch of the product.
- 2) Remove the front panel.  
 There is a thermal relay (See Figure on the right)
- 3) Make sure that the green bar appears in the display window of the thermal relay.
- 4) Press the blue reset button. Confirm that green bar is shown in the display window.
- 5) Mount the front panel.
- 6) Operation restarts by turning on the white (operation) switch.

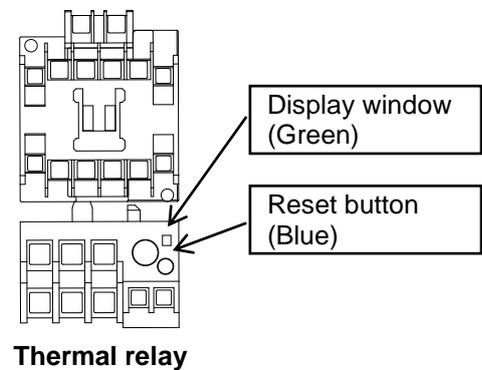

#### Reset the High Pressure Switch

- 1) Turn on the black (stop) switch of the product.
- 2) Remove the front panel.  
 There is pressure switch for high pressure (Figure on the right)
- 3) Press the red reset button.
- 4) Mount the front panel.
- 5) Operation restarts by turning on the white (operation) switch.

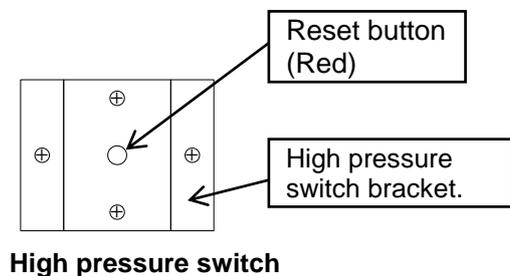



# Chapter 7 Documents

## 7.1 Specifications

Item		Models	IDF190D	IDF240D
Air flow capacity m <sup>3</sup> / min	Standard condition (ANR) <small>Note 1)</small>	50Hz	32	43
		60Hz	38	50
	Compressor inlet condition <small>Note 2)</small>	50Hz	34	46
		60Hz	40	53
Rated value  <small>Note 4)</small>	Inlet air pressure MPa		0.7	
	Inlet air temperature °C		40	
	Ambient temperature °C		32	
Operating range  <small>Note 3)</small>	Fluid		Compressed air	
	Inlet air temperature °C		5 to 50	
	Inlet air pressure MPa		0.15 to 0.97	
	Ambient temperature °C		2 to 45 (Relative humidity 85 % or less)	
Electrical specifications	Power supply <small>Note 5)</small>		3-Phase 200 VAC (50Hz), 200/ 220 VAC (60Hz)	
	Operation current <small>Note 6)</small> 50/60Hz 3-phase 200V	A	19.5	26.1
			20.1	26.4
	Power consumption 50/ 60Hz, 3 phase 200V	kW	4.9	6.3
			5.9	7.6
Earth leakage breaker capacity <small>Note 7)</small> (Sensitivity current 30mA)		A		50
Cooling method of the condenser			Air-cooled type	
Air reheater / after cooler			Second class pressure vessel	
Refrigerant			R407C (HFC)	
Amount of refrigerant to be filled		kg	2.48	4.5
Auto drain			ADH4000-04	
Port size			80A (3B) JIS10KFF flange	100A (4B) JIS10K flange
Weight		kg	450	660
Coating color			Body panel: White Base: Black	
Applicable air compressor output (as a guideline) (for screw type)		kW	190	240

Note 1) Air flow capacity in the standard condition (ANR) (20 °C, atmospheric pressure, relative humidity of 65 %).

Note 2) Air flow capacity converted by the compressor intake condition [32°C, Atmospheric pressure, and 75% relative humidity]

Note 3) The operating range does not guarantee use with normal air flow capacity.

Note 4) If the operating conditions are different from rated, select the product model according to the selection method specified in the catalogue.

Note 5) For the power supply voltage, refer to 'How to Order' in the catalogue.

Note 6) These values are reference values under rated conditions and are not guaranteed. - Do not use these values for the thermal setting values etc.

Note 7) Products other than Option R are not equipped with an earth leakage breaker. Purchase an appropriate earth leakage breaker separately.

For [IDF190/ 240D-9-\*\*\*V], it is necessary to purchase the applicable earth leakage breaker for the inlet voltage separately.

Note 8) If the product is subjected to a short power outage (including voltage sag), it may take a long time to resume normal operation or be unable to restart normally due to the protective equipment triggered after the power is recovered.


## 7.2 Refrigerant and GWP

Refrigerant name	Global Warming Potential (GWP)	
	Regulation (EU) No 517/2014 (IPCC AR4 standard)	Act for Rationalized Use and Proper Management of Fluorocarbons
R407C	1,774	1,770

Note 1: The product contains greenhouse gas.

Note 2) For information on the enforcement of the Act on Rational Use and Proper Management of Fluorocarbons, please visit our website below. [SMC's website]: <https://www.smcworld.com/products/ja/freon/>

## 7.3 Dimensions

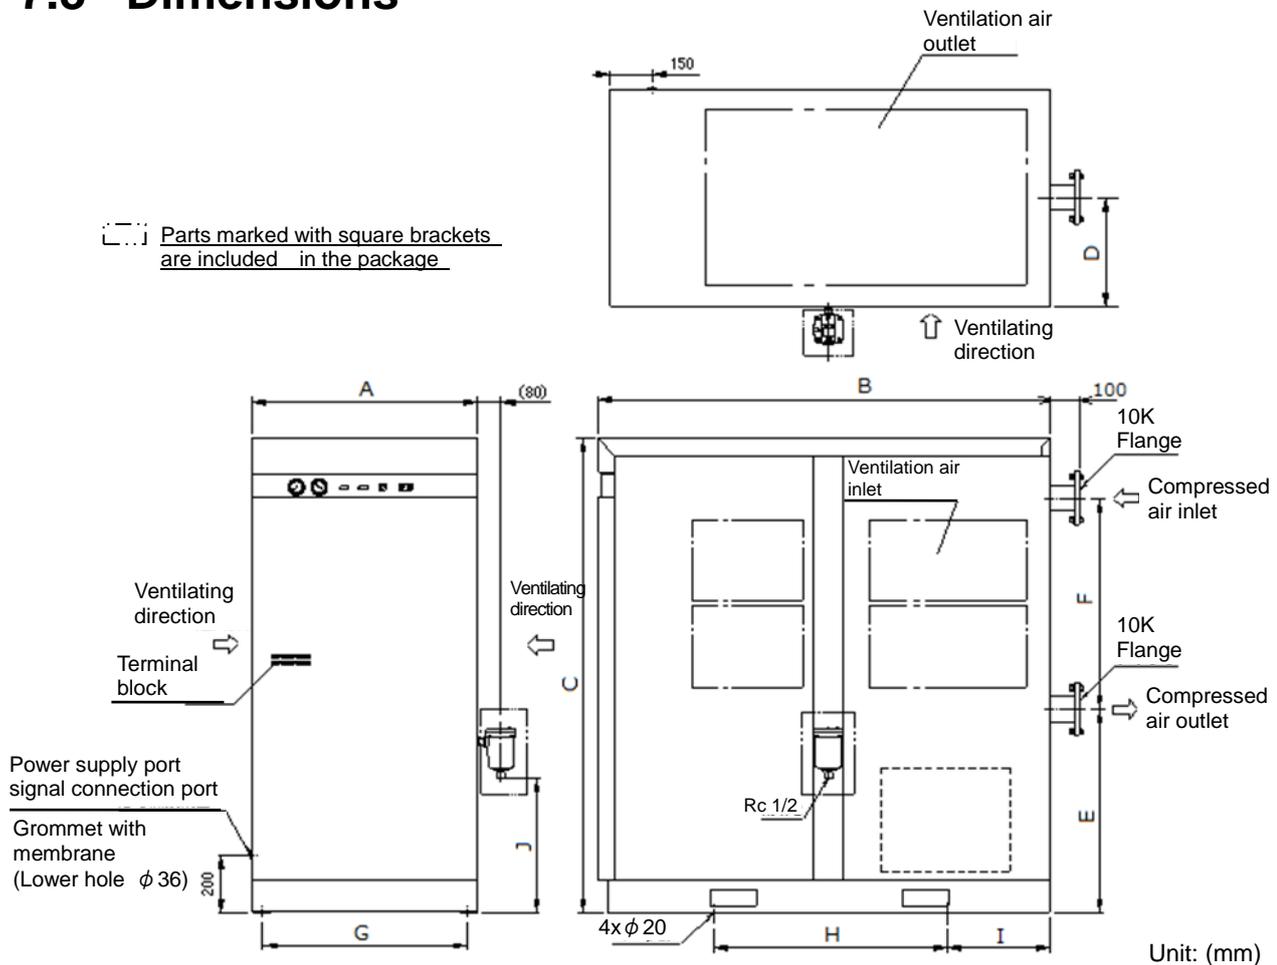


Model No.	Connected	A	B	C	D	E	F	G	H	I	J
IDF190D	JIS10KFF 80A(3B) flange	750	1510	1320	375	480	600	700	800	355	427
IDF240D	JIS10KFF 100A(4B) flange	770	1550	1640	385	703	730	700	800	355	467


\* Auto drain is included in the package. It must be installed by the customer.

## 7.4 Electrical circuit diagram


■IDF190D

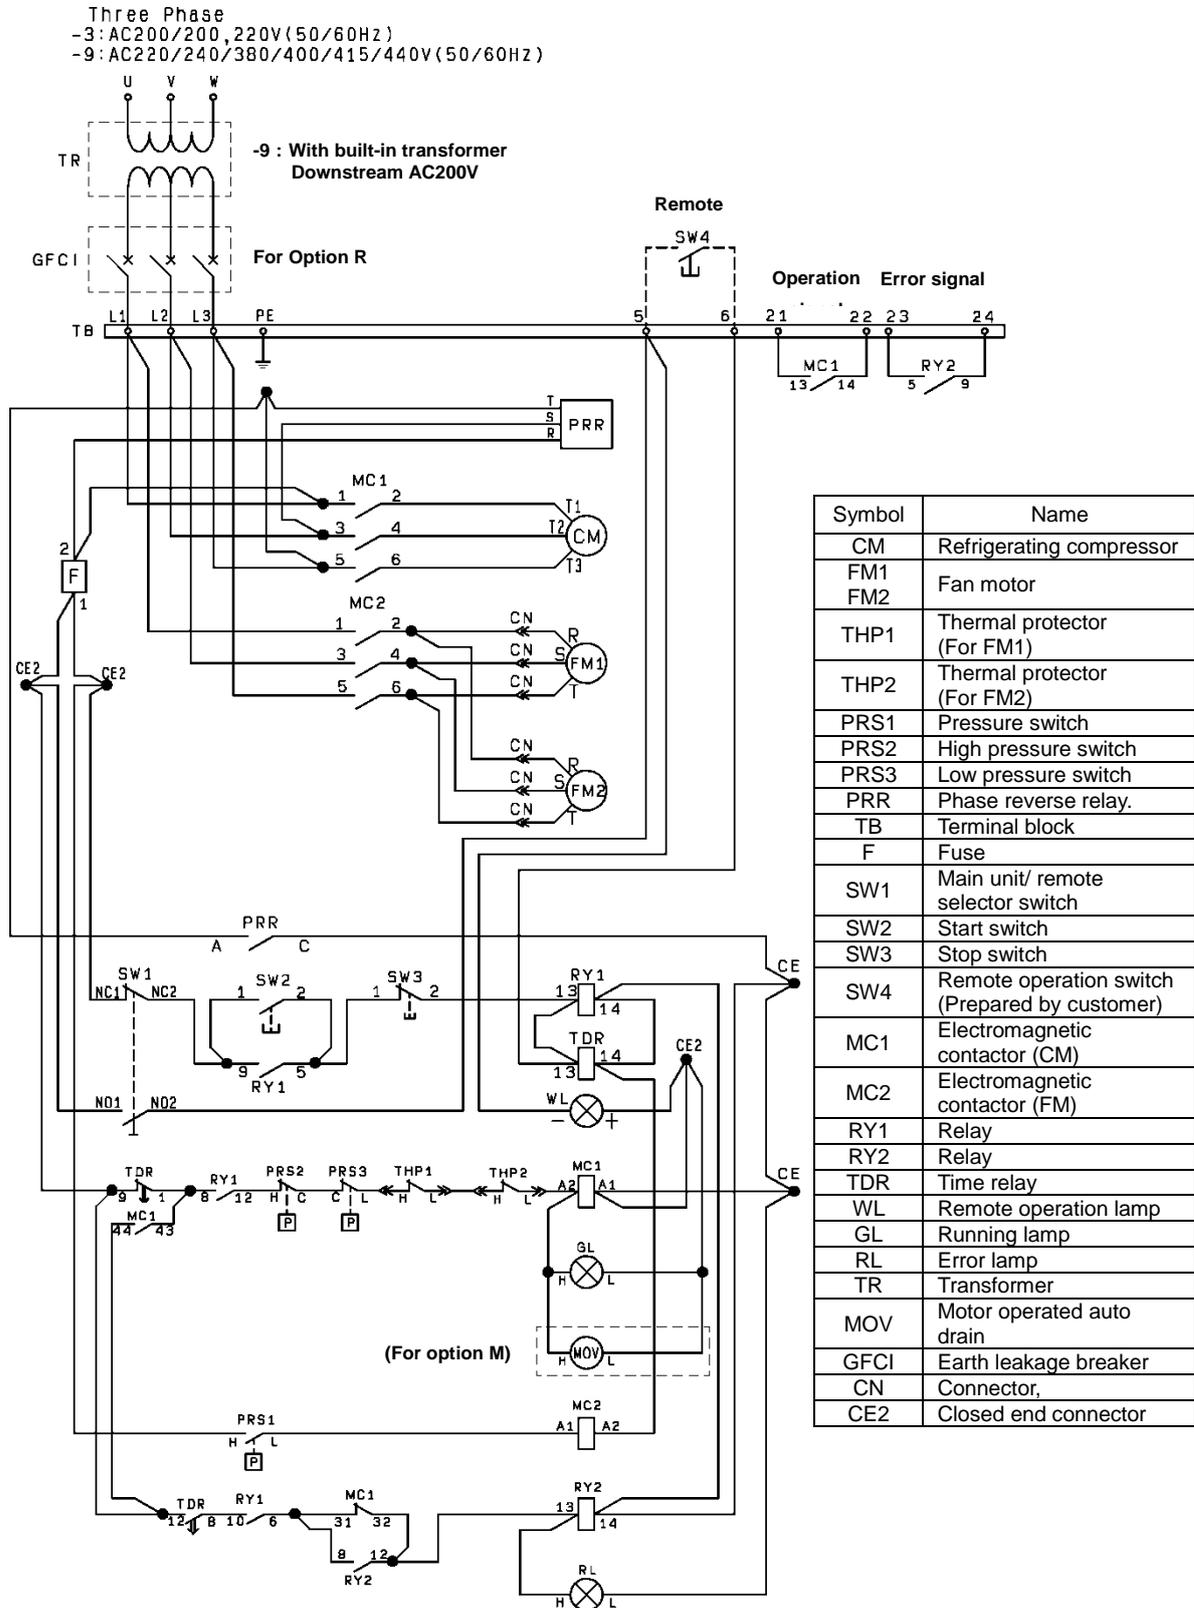


■IDF240D

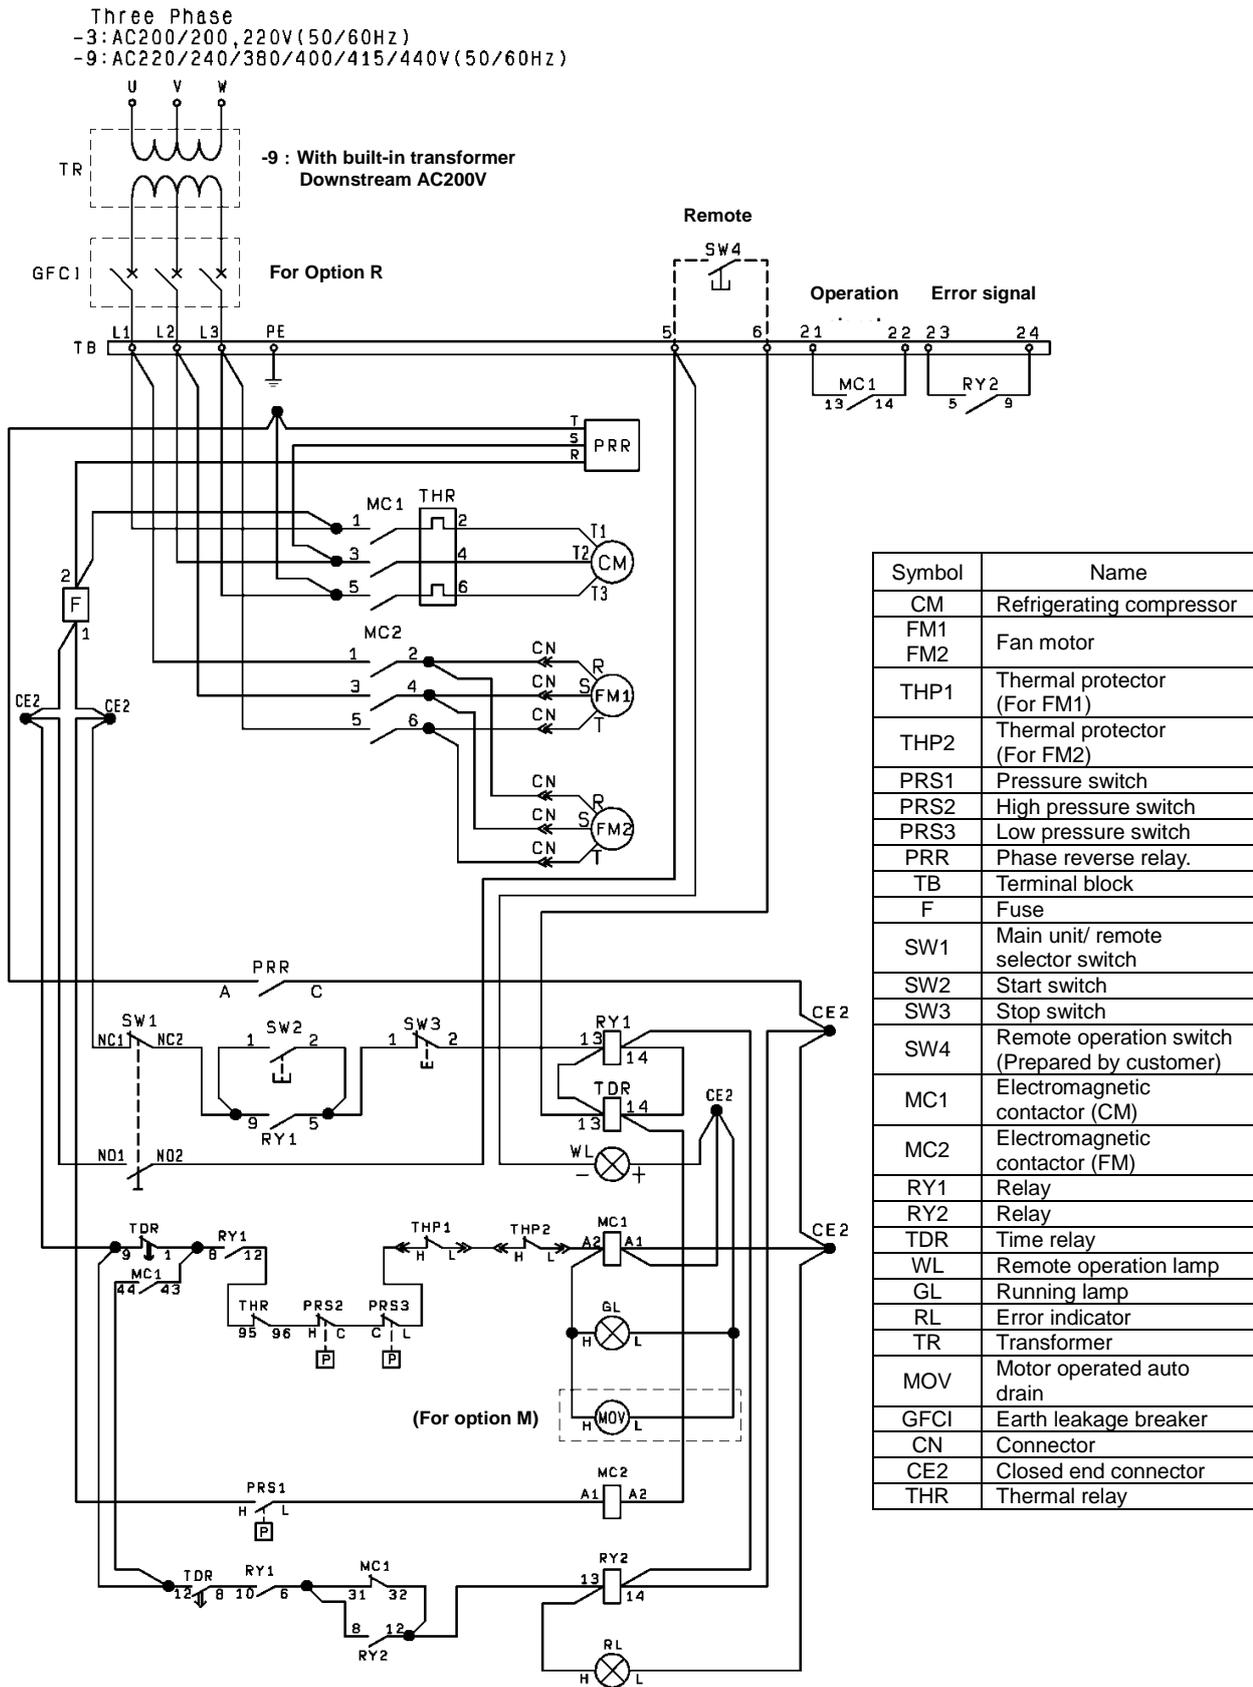

## 7.5 Air and refrigerant circuits and functions

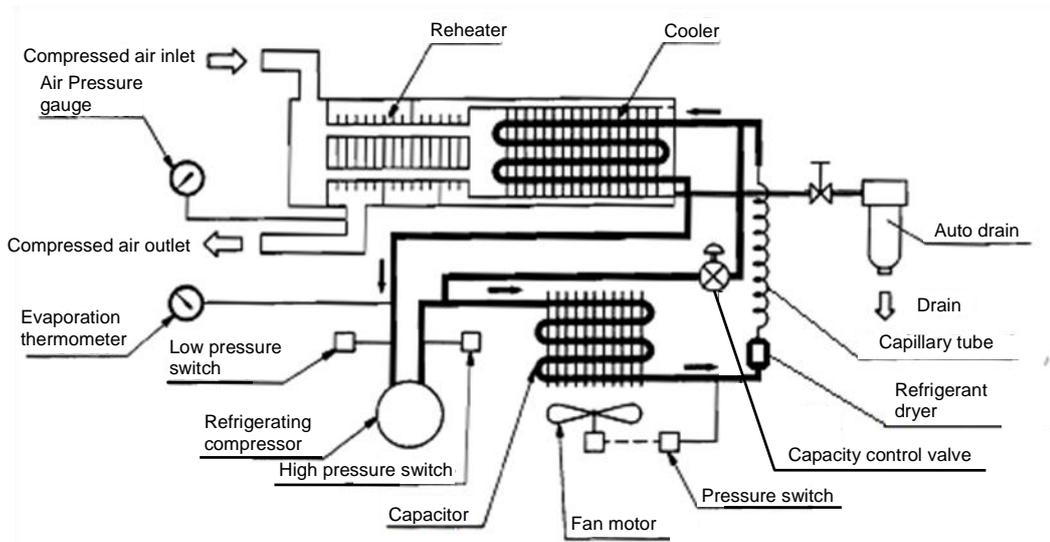

**IDF190D Compressed Air and refrigerant circuits**

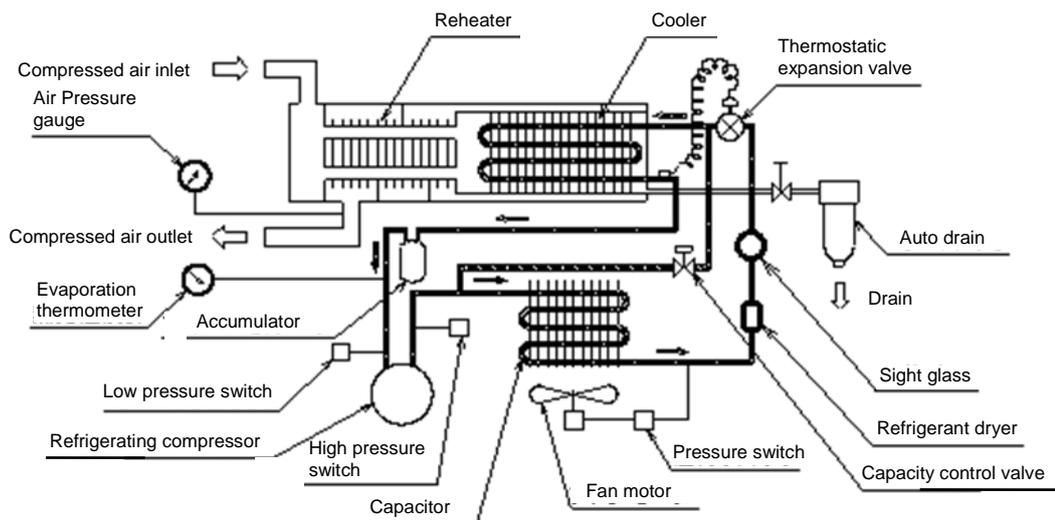

**IDF240D Compressed Air and refrigerant circuits**

### Air circuit

The humid hot air that enters the air dryer first goes into the reheater, and exchanges its heat with dehumidified cold air to pre-cool it. Then, the air enters the evaporator, where it releases its heat to a cold HFC, and is dehumidified and cooled further to let moisture separate. Finally, the air exchanges heat with the hot air coming to the air dryer and its temperature increases higher, and it leaves the air dryer as warm, dry air.

### Refrigerant circuit

The fluorocarbon gas (HFC) in the refrigerant circuit is compressed by the compressor and cooled by the condenser to become liquid. When passing through the capillary tube, the HFC gas is regulated and its temperature decreases. While passing through the cooler part, it evaporates rapidly, taking the heat from the compressed air, and is sucked in by the compressor. The volume control valve opens when the compressed air has been cooled sufficiently, and prevents condensed water from being frozen by excessive cooling.



# Chapter 8 Option C

## 8.1 Specifications

Special epoxy resin is coated on the copper tube surface to improve the corrosion resistance. The special epoxy resin is only applied where the copper tubes are not protected or insulated.

## 8.2 Precautions for installation and handling

- 1) The epoxy resin minimizes the corrosion of the coated copper tubes against corrosive gas. The corrosive cannot be completely prevented. Therefore, avoid using the product in environment where corrosive gases are present as much as possible.
- 2) Do not scratch the coated surface of the copper tube when removing the panels for maintenance. As the corrosion resistance can be deteriorated from the scratch position.



# Chapter 9 Option M

## 9.1 Safety instructions for use

Refer to the instructions below when handling the product



### WARNING

- Before replacing the auto drain, on the compressed air side confirm that the pressure gauge indicates zero.  
Do not remove the auto drain with any air pressure remaining internally. If there is residual pressure in the product, there would be great danger of an unexpected accident, such as shooting out of parts when they are being unscrewed.
- When removing the panels, wear protective gloves to prevent injuries.
- There is the possibility of contacting the condensate during the auto drain maintenance work. Follow enduser procedures ensure safety of operator. (example. Put on protective glass, apron, and gloves).
- In case that oil gets mixed in the wasted water that is discharged from the auto drain, the waste liquid treatment is necessary. Handle it following the bylaw or regulation of local government.



### WARNING


- All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.
- Be sure to shut off the user's power supply. Wiring with the product energized is strictly prohibited.
  - Ensure a stable power supply with no surge.
  - Mount the correct electric leakage breaker of the specified leakage capacity and load capacity to prevent electric shock and burning of the compressor motor.
  - Use a power supply suitable for the specifications of the product.
  - Be sure to connect the ground connection.
  - NEVER connect the ground to water line, gas pipe or lightning conductor.
  - Do not plug too many leads into a single socket. That causes exothermic heat or fire.
  - Do not modify the internal electrical wiring of the product.
  - For use in Europe, install a breaker compliant with applicable IEC standards to the power supply of the product.

## 9.2 Specifications

Motor type auto drain (ADM200) is installed instead of the float type auto drain (standard).

Table 1.

Item	Models	IDF190/ 240D-3-M IDF190/ 240D-9-***V-M
Product number		IDF-S0511
Maximum operating pressure		1.0MPa
Fluid		Compressed air
Operation cycle		4 cycles per minute
Operating time		2 sec/ cycle
Power supply		AC200V (50/ 60Hz)
Power consumption		4W

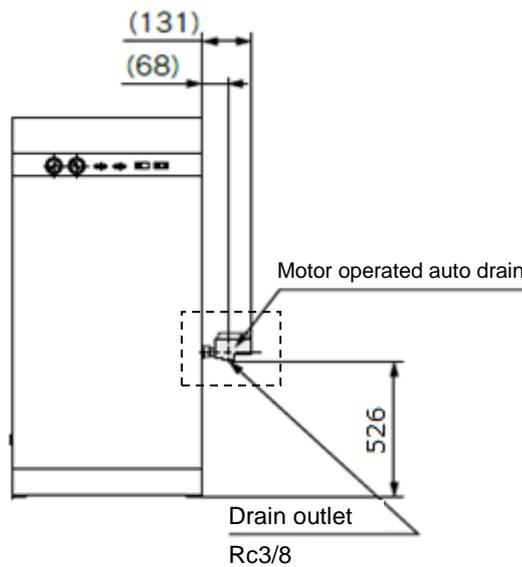


Parts in the square of dashed lines are included as accessories.

## 9.3 Installation of Motor type Auto Drain

- 1) Screw the nipple and the motor type auto drain (drain inlet port hex size: 30mm) into the connection port of this product in order. Mount the auto drain vertically while facing the drain port downwards. (Allowable inclination difference in the vertical direction is 5°)

Note 1) Apply sealant tape or sealant to fit the barrel nipple and long nipple. Tightening torque: 28 to 30N·m

- 2) Screw-in an elbow union (size: 17mm) to the drain outlet port and mount the drain tube.
- 3) Connect the two wires from the auto-drain to the two wires from the product. Drip proof connectors are used, which can be connected by hand. Ensure they are firmly connected.

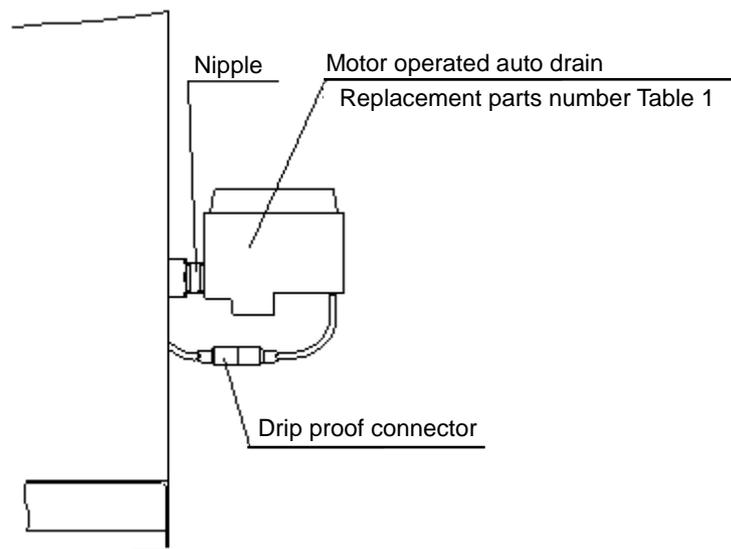

## 9.4 Electrical circuit diagram

Refer to 7.4 Electrical circuit diagram (page 7-3 and 7-4) for electric circuit.



# Chapter 10 Option R

## 10.1 Safety instructions for use

Refer to the instructions below when handling the product.

 <b>WARNING</b>
<p><b>All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.</b></p> <ul style="list-style-type: none"> <li>- <b>Be sure to shut off the user's power supply. Wiring with the product energized is strictly prohibited.</b></li> <li>- <b>Ensure a stable power supply with no surge.</b></li> <li>- <b>Use a power supply suitable for the specifications of the product.</b></li> <li>- <b>The equipment should be grounded for safety.</b></li> </ul> <p><b>Earth leakage breaker does not operate correctly without grounding.</b></p> <ul style="list-style-type: none"> <li>- <b>Do not connect the earth to a water pipe, a gas pipe, or a lightning rod.</b></li> <li>- <b>Do not plug too many leads into a single socket. That causes exothermic heat or fire.</b></li> <li>- <b>Do not modify the internal electrical wiring of the product.</b></li> </ul>

## 10.2 Specifications

An earth leakage breaker is installed in the product. The customer's power supply is connected to the primary side of the earth leakage breaker, and not directly to the terminal block of the standard product. The earth leakage breaker is located in the front panel.


Product No.	Earth leakage breaker specification
IDF190/ 240D-3-R	Breaker capacity: 50A, Sensitivity current 30mA

\*[IDF190/ 240D-9] does not have option R. It is necessary for customer to purchase the earth leakage breaker applicable for the primary side voltage.

### 10.3 Connection of power supply

Connect the power cable according to the procedure below.

- 1) Remove the case of the earth leakage breaker.
- 2) Insert the power supply cable prepared by customer into the rubber grommet and draw the power supply cable close to the earth leakage breaker through the base hole.
- 3) Connect the power cable to the earth leakage breaker terminal.

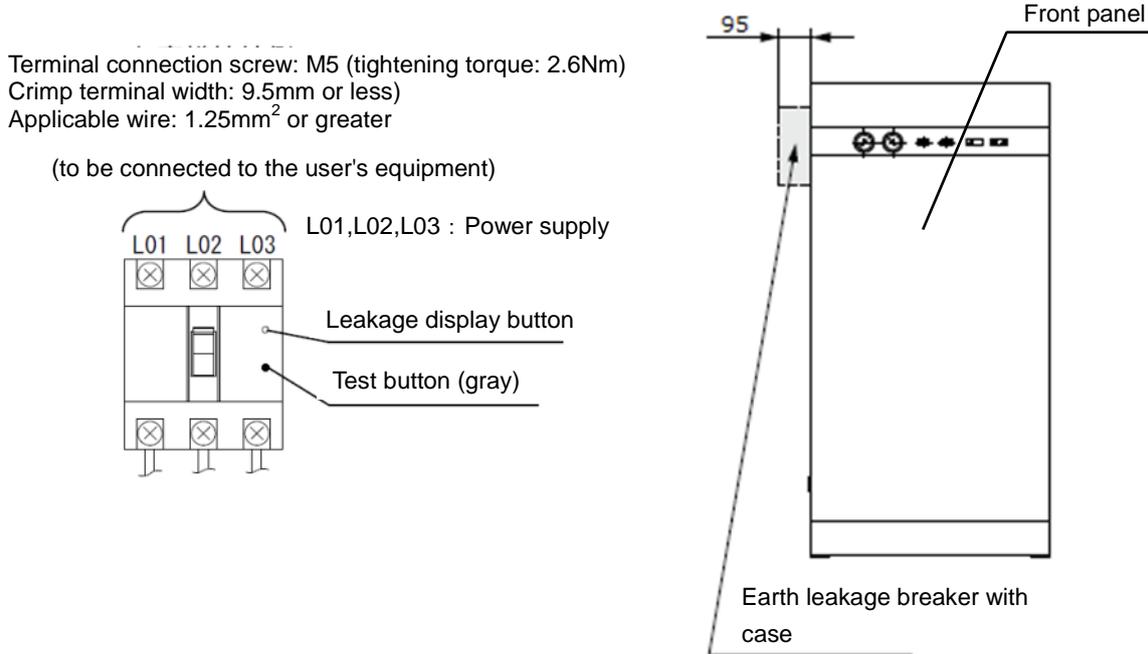

- 4) Connect the ground line.  
Connect to the M4 screw on the right of the earth leakage breaker (specified by ground label)  
Applicable crimp terminal → 1.25-4
- 5) Reinstall the case of the earth leakage breaker.

### 10.4 Handling Precautions of the Earth Leakage Breaker

- 1) When the breaker is tripped, please turn off the power supply and contact our service office.
  - White button (indicates earth leakage) has popped up → Earth leakage
  - White button (indicates earth leakage) has not popped up → Over current
- 2) Perform an operation check of the earth leakage breaker every month by pushing the gray button (test button) with the breaker and the black switch (stop switch) ON. The earth leakage breaker should trip when the test button is pressed. When the earth leakage breaker malfunctions, it does not trip.

### 10.5 Electrical circuit diagram

Refer to 7.4 Electrical circuit diagram (page 7-3 and 7-4) for electric circuit.

# Chapter 11 Inspection record

## 11.1 Inspection record

We recommend keeping the inspection record for maintenance or service.

Product No.	Description	Contents of check	Date

Revision
Rev A : Nobember,2020

# SMC Corporation

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021 JAPAN  
Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362  
URL <https://www.smcworld.com>

---

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.  
© 2020 SMC Corporation All Rights Reserved