IDX-OM-K073-D Initial issue: April, 2007 4th edition: December, 2013




Operation Manual

PRODUCT NAME

Refrigerated Air Dryer

MODEL / Series

IDU22E-23(-C,L,R,T,V) IDU37E-23(-C,L,R,T,V) IDU55E-23(-C,L,R,T,V) IDU75E-23(-C,L,R,T,V)

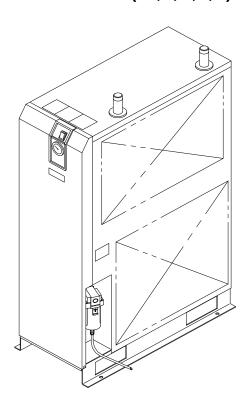

Please read this manual prior of using the air dryer. Keep the manual readily available for reference.

© 2013 SMC CORPORATION All Rights Reserved.

SMC Corporation

To Customers

Thanks for purchasing SMC Refrigerated Air Dryer.

This operation manual must be read and understood throughoutly before handling. It provides all essential information for maximizing product operating efficiency, as well as, for safe and longer life span operation.

For safety operation of SMC Refrigerated Air Dryer, read thoroughly and follow stated safety instructions, as well as regulation stated within ISO 4414^{*1} & JIS B 8370^{*2}.

*1) ISO 4414: Pneumatic fluid power – Recommendations for the application of equipment to transmission and control systems.

*2) JIS B 8370: Pneumatic fluid power - General rules relating to systems

This manual explains about installation and operation of the product. Only those who have thorough understanding of the fundamental operating procedure or have basic knowledge and skills of handling industrial product for the installation and operation of the product are qualified to perform installation and operation.

The contents of the operation manual and the other documents attached to the product cannot become a part of the contract clause or cannot change and modify existing agreements, promises, and relationship.

Any statements contained in the operation manual cannot be newly guaranteed and modify existing guarantee certificate.

You are not allowed to copy any part of this operation manual for usage of third person without informing it to us beforehand.

Caution: Please understand that the contents of this operation manual are subject to changed without previous notice.

Table of Contents

To Custome	rs	
Chapter i Sa	afety Instructions	
i - 1	Warning: Before Using Air Dryer	i - 1
i - 1 - 1	Meanings of signs: Caution, Warning, Danger	i - 1
i - 2	Danger Classifications/Position of Hazard warning Label	i - 2
i - 2 - 1	Danger Classifications	i - 2
i - 2 - 2	Danger of Electricity	i - 3
i - 2 - 3	Danger of high Heat	i - 3
i - 2 - 4	Danger of Rotor	i - 3
i - 2 - 5	Danger of Compressed Air Circuit	i - 3
i - 2 - 6	Positions of Danger Warning Label	i - 4
i - 2 - 7	Danger of Refrigerant	i - 5
i - 2 - 8	Cautions about Usage	i - 6
i - 2 - 9	Other Label	i - 6
i - 3	Disposal	i – 7
i - 4	Limited warranty and Disclaimer / Compliance Requirements	i –8
Chapter 1 Pa	arts Name and Functions	
1 - 1	Parts Names and Functions	1 - 1
Chapter 2 Tr	ansportation / Installation	
2 - 1	Transportation	2 - 1
2 - 2	Installation	2 - 2
2 - 2 - 1	Location	2 - 2
2 - 2 - 2	Anchorage	2 - 2
2 - 2 - 3	Air piping	2 - 3
2 - 2 - 4	Drain Tube	2 - 3
2 - 2 - 5	Electric Wiring	2 - 4
2 - 3	Cautions about reinstallation	2 - 5
Chapter 3 O	peration / Shutdown	
3 - 1	Check points before operation	3 - 1
3 - 2	Operation	3 - 1
3 - 3	Shutdown	3 - 2
3 - 4	Cautions about restart	3 - 2
3 - 5	Check points before restart	3 - 2
3 - 6	Precautions for long-term non-operation	3 - 2
Chapter 4 M		
4 - 1	Daily inspection	4 - 1
4 - 2	Periodical Maintenance	
4 - 2 - 1	Cleaning of ventilation grille (suction grille)	
4 - 2 - 2	Service parts	
4 - 2 - 3	Cleaning of the case assembly	
Chapter 5 Tr	oubleshooting	

Chapter 6 F	References	
6 - 1	Specifications	6 - 1
6 - 2	Dimensions	6 - 2
6 - 3	Electrical Circuit	6 - 3
6 - 4	Compressed Air and Refrigerant Circuit / Operation Principles	6 - 5
Chapter 7 C	Option Specification C	
7 - 1	Safety instructions	7 - 1
7 - 2	Precautions for the installation and handling of the product	t 7 - 1
7 - 3	Specifications	7 - 1
Chapter 8	Specification for Option L	
8 - 1	Safety instructions	8 - 1
8 - 2	Specification	8 - 1
8 - 3	Specification of heavy duty auto drain (ADH4000-04)	8 - 2
8 - 4	Maintenance	8 - 2
Chapter 9	Specification for Option R	
9 - 1	Safety instructions	9 - 1
9 - 2	Specifications of the GFCI	9 - 2
9 - 3	How to connect the power supply	9 - 2
Chapter 10	Specification for Option T	
10 - 1	Safety instructions	10 - 1
10 - 2	Specifications	10 - 1
10 - 3	Remote operation	10 - 2
10 - 4	How to connect the power supply and signal cable	10 - 2
10 - 5	Electric circuit	10 - 3
Chapter 11	Specification for Option V	
11 - 1	Safety instructions	.11 - 1
11 - 2	Specifications	.11 - 2
11 - 3	How to perform maintenance	.11 - 2
Chapter 12	Service Record	
12 - 1	Service Record	12 - 1





Before use, read and comprehend important cautionary notification well on this operattion manual.

i – 1 Warning: Before Useing Air Dryer

In this chapter, the stated contents are especially about safety way to use the product. for customer.

An Air Dryer is installed on the downstream of the air compressor to remove moisture. We, manufacturer, cannot take any responsibility if you use it for any other purpose.

An Air Dryer works with high voltage and has some parts that gets hot or rotates during operation. Ask vendor if you need component replacement and servicing.

Not only people handle the air dryer but every people who perform maintenance on or do works related to it should read safety instructions on this operation manual before handling.

This operation manual is not a general safety manual which is practiced by safety training representatives.

People who handle this product or work around it need to take training to comprehand inherent risks of it and master measures for safety.

It is usually responsible for super visor to follow the safety instructions, but each operator or maintenance representative should do daily operations on their own head.

Operators and maintemance representatives should take the safety of working place and work environment into account.

It is necessary to think of the safety of working place and work environment for each task

Take enough safety training before the operation training. It is very dangerous to do operation training without any safety training. Operation training must be paid attention to its safety.

Reset the protective circuit referring to "5-2 How to reset the thermal relay".

i – 1 – 1 Meaning of Signs: Caution, Warning, Danger

These safety instructions are intended to prevent hazardous situation and/or product damage. These instructions indicate the level of potential hazard by signs "Caution", "Warning" or "Danger". Contents with these signs state about important instructions concerning safety. Confirm where those signs are, and read and comprehend notices and cautionary notices well before handling.

"Caution", "Warning" or "Danger" is the order of importance (Danger>Warning>Caution). Followings are the meanings of those signs.



Danger

Statements with the "Danger" sign explain about conditions in which there is a possible result of serious injury or loss of life if someone handles wrongly during operation or maintenance and did not follow the procedure to avoid danger.

⚠ Warning

Statements with the "Danger" sign explain about possibilities that can result in serious injury or loss of life if someone handle wrongly during operation or maintenance and did not follow the procedure to avoid danger.

Statements with the "Danger" sign explain about possibilities that can result in injury or product damage if someone handles wrongly during operation or maintenance and did not follow the procedure to avoid danger.

<u>i – 2</u> <u>Danger Classifications / Position of Danger Warning Label</u>

To protect operator's sefety, we group danger into some types uniquely and attached labels indicating those types. Comfirm the contents of the danger types and positions of the labels before operation.

\triangle

Warning

No one but professionals should operate an air dryer.

Transportation, installation, and maintenance involve risks. These should be done by someone who have enough knowledge and experience about this product and incidental devices.

No one but our service personnel or qualified person should open the cover panel of this product.

Λ

Warning

Should any problem occur, address it according to statements on this manual.

- Identify problems according to "Chapter 5 Troubleshooting."
- Ask repair and maintenance.

⚠

Warning

The product should not be operated in the event of any problems.

When the product gets out of order, shutdown it immediatery, and contact our service person or qualified person.

Danger Classifications

Specific danger classification of this product is as follows.

Danger of Electricity

Since this product runs at high voltage, there is the danger of electric shock. So, we display a symbol with indications, "Caution", "Warning" or "Danger," on the product and this manual.



Danger of Heat

Since this product becomes hot while driving, there is the danger of burn injury. So, we display a symbol with indications, "Caution", "Warning" or "Danger," on the product and this manual.



Danger of Rotor

Since this product has parts that rotate while driving, there is the danger of catching your fingers in or injury. So, we display a symbol with indications, "Caution", "Warning" or "Danger," on the product and this manual.



i-2-2 Danger of Electricity



Inside of this product, there is power-supplying section with high voltage separated by the cover panel. Do not operate the product without the cover panel.

No one but trained qualified person should operate or inspect in the power transmission sections.

Marning

Read with caution and pay attention to the notations on danger warning labels.

Do not remove or rub danger warning labels.

Confirm the positions of danger warning labels.

i - 2 - 3 Danger of High Heat



Λ

Warning

Since this equipmant has parts that become hot during operation, there is the danger of burn injury resulting from contact with them. What is more, there is also the danger of burn injury due to remaining heat after the power supply is cut. Therefore, wait until the temperature of hot parts become 50°C and below.

i – 2 – 4 Danger of Rotor



⚠

Warning

Since this product has parts that rotate during operation, there is the danger of burn injury resulting from contact with them. Though sometimes those parts can temporarily stop the rotation, they will rotate again, and so do not work with them while driving.

i – 2 – 5 Danger of Compressed Air Circuit



Λ

Warning

Before replacing or cleaning parts, be sure to bleed compressed air remain inside of the product untill the gauge indicates "0". If you do not do this air-bleeding, there would be the great danger of unexpected accident, such as shooting out of parts when they are being unscrewed.


i – 2 – 6 Positions of Danger Warning Label

⚠ Warning

Read with caution and pay attention to the notations of danger warning labels.

Do not remove or rub danger warning labels.

Confirm the positions of danger warning labels.

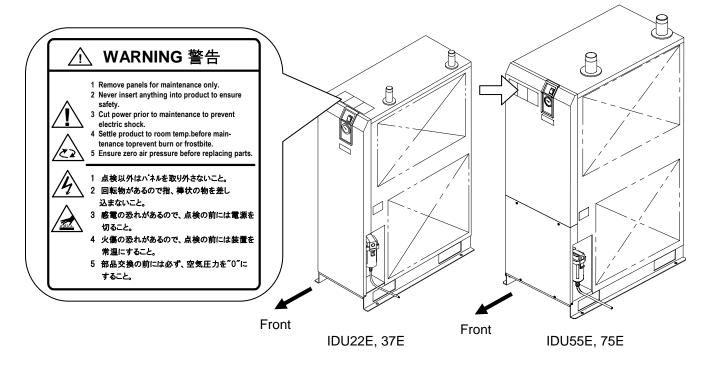

i-2-7 Danger of Refrigerant


Λ

Caution

This product uses Fluorocarbon (HFC) as a refrigerant.

This product is specified by "Class 1 Fluorocarbon Collection and Destruction Law in Japan." It is strictly forbitten to emit Fluorocarbon to the atmosphere. Before you repair this product, you should collect the refrigerant with "Refrigerant collector." Then, ask a destruction agency to dispose of collected refrigerant. No one but someone have enough knowledge and experience about the product and incidental device should do the collection of the refrigerant. No one but service person or qualified person should remove the cover panel of the product.

The quantity and the sort of the Fluorocarbon are mentioned on the specification label that are explained on Page i - 7.

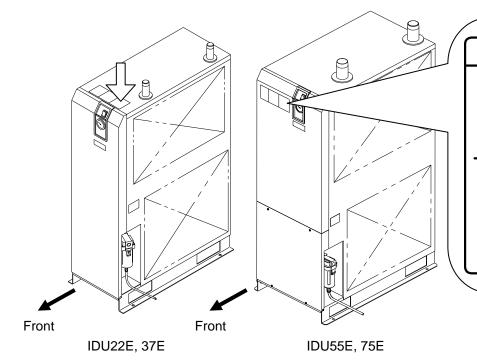

Fluorocarbon Collection and Destruction Law in Japan フロン回収破壊法第一種特定製品

This product uses

Fluorocarbon (HFC) as a refrigerant.

- It is strictly forbidden to emit Fluorocarbon to the atmosphere.
 When disposing this product, Fluorocarbon
- 2 When disposing this product, Fluorocarbon must be collected in an appropriate manner.
- 3 The kind of Fluorocarbon and the amount used in this product is prited on the name label.

この製品には冷媒として、

フロン類(HFC)が使われています。

- 1 フロン類をみだりに大気中に放出することは 禁じられています。
- 2 この製品を廃棄する場合には、フロン類の回収が 必要です。
- 3 フロン類の種類及び数量は、型式銘板に記載されています。


i – 2 – 8 Cautions about Usage

⚠ Warning

Read with caution and pay attention to the notations on danger warning labels.


Do not remove or rub danger warning labels.

Cimfirm the positions of danger warning labels.

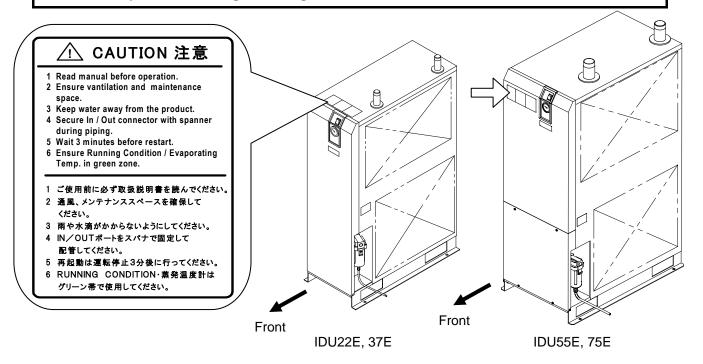

i - 2 - 9 Other Label

Comfirm the model, contents of specifications on the label.

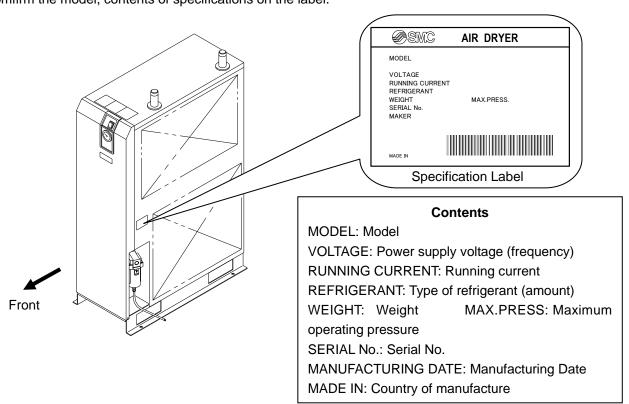

i – 3 Disposal

When you dispose of the product, you shoul collect the refrigerant and the refrigerat oil enclosed in the refrigerant circuit.

Caurion

A sort of Fluorocarbon (HFC) is used for this product as refrigerant.

This product is specified by "Class1 Fluorocarbon Collection Destruction Law in Japan." It is strictly forbitten by the law to emit the refrigerant to the atmosphere. Before you repair this product, you should collect the refrigirant with "Refrigerant collector." Then, ask a destruction agency to dispose of collected refrigerant.

No one but someone have ebough knowledge and experience about the product and incidental devices should do the collection of the refrigerant.

No one but service person or qualified person should remove the cover panel of the product.

The quantity and the sort of the Fluorocarbon are printed on the specification label.

Dispose of the refrigerant and refrigerant oil according to the bylaw or regulation of local government.

Do not dispose of refrigerant oil together with domestic garbage. And do not burn it in unauthorized incinerators.

No one but someone have enough knowledge and experience about the product and incidental devices should do the collection of the refrigerant oil.

No one but service person or qualified person shoul remove the cover panel of the product.

If there are something not clear, please contact our service office.

i – 4 Limited warranty and Disclaimer / Compliance Requirements

The product used subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements. Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.
 Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
 - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

Compliance Requirements


- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulation of the countries involved in the transaction. Prior to the shipment of a SMC product of a SMC product to another country, assure that all local rules governing that export are known and followed.


The Product is provided use in manufacturing industries.


The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contact if necessary. If anything is unclear, contact your nearest sales branch.

1 Parts Name and Functions

1 - 1 Parts Name and Functions

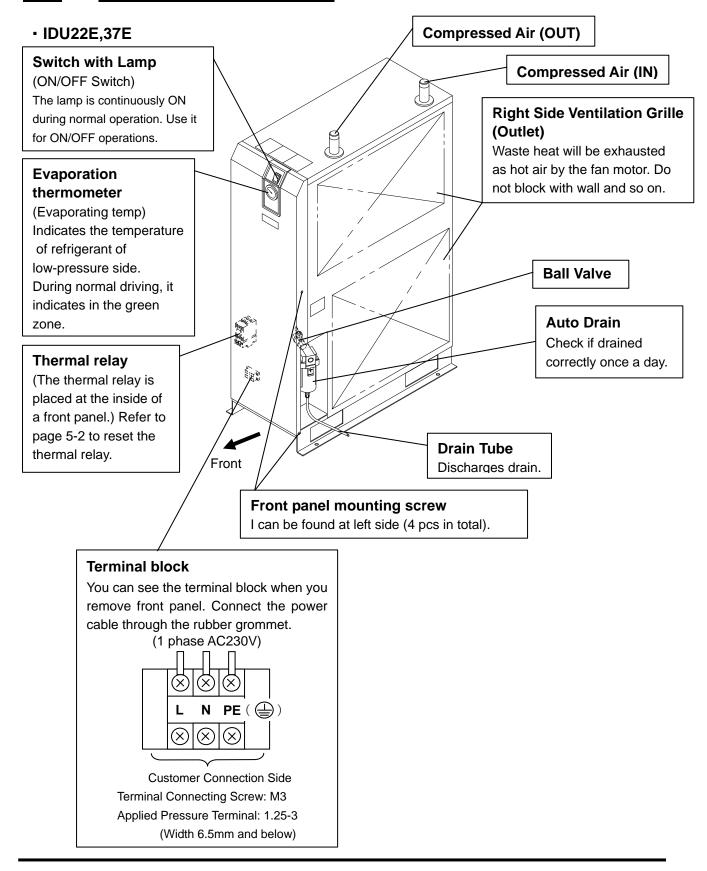


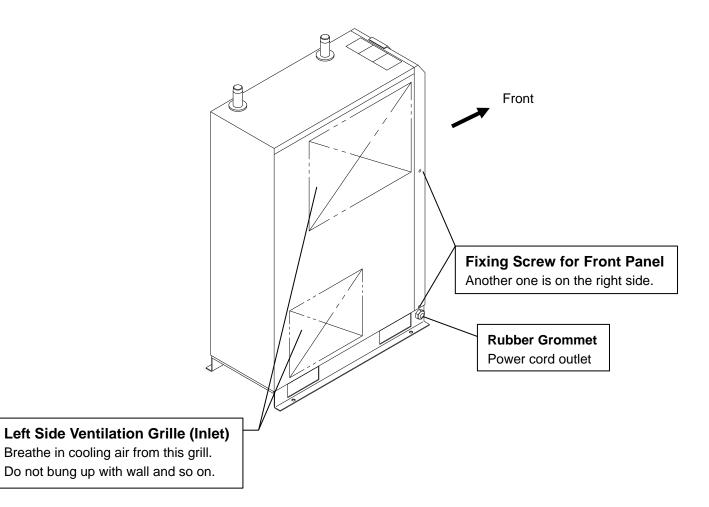

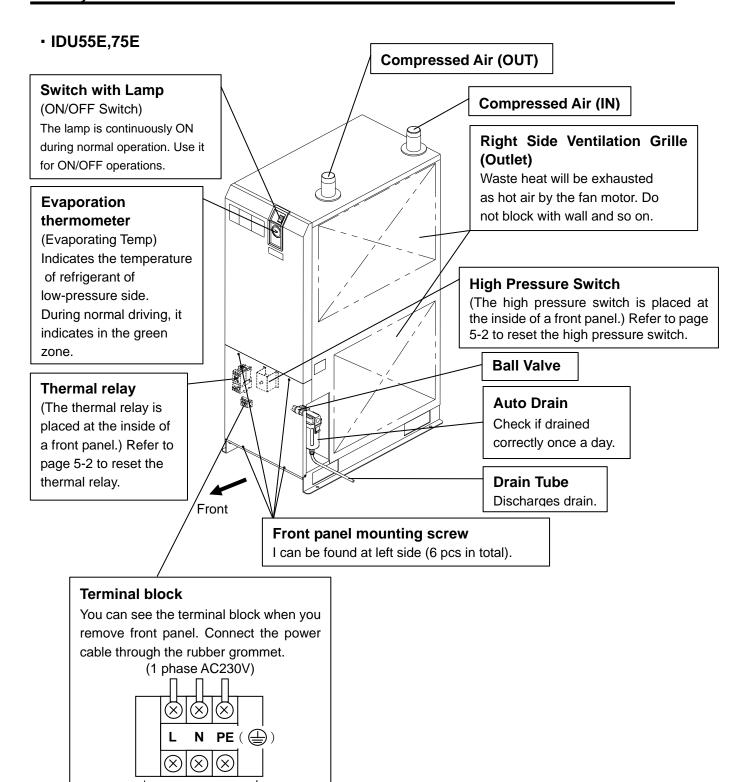

Customer Connection Side Terminal Connecting Screw: M3 Applied Pressure Terminal: 1.25-3

(Width 6.5mm and below)

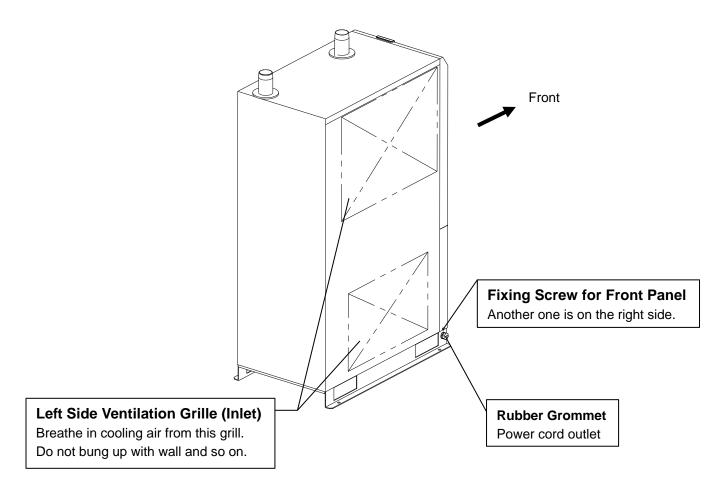

2 Transportation / Installation

Marning

Use the product in the right way. During Installation, operation, maintenance, and check, you should be careful in keeping the safety of human body.

Transportation, installation, and maintenance including dangerous work must be done by a personnel who has enough knowledge and experience about the product and the sysytem.

2-1 Transportation

When you transport the product, you should follow these instructions below.

- You should uplift the product from the base surface with careful attention to prevent falling sideways and drop.
- Do not bring the product lying sideways. If you lay it sideways, it will be broken.
- Do not hang up the product.
- Do not transport the product with any part such as an air filter mounted on the fittings at the air inlet or
 outlet port of the product. If it is unavoidable to transport the product with such a part mounted, support
 the mounted part with a bracket to prevent the product from being affected by vibration during
 transportation.

Those instructions above must be followed because the product is so heavy that it carries a great risk to transport.

IDU22E~75E are 90~170kg or more. They must be transported by forklift of IDU22E~75E.

2 - 2 Installation

2-2-1 Location

The product should not be used or stored in the circumstances as follows. Those circumstances will cause not only malfunction but also failures.

- Environment where the product is exposed to rainwater, moisture vapor, salty water, oil and so on.
- Locations where dust or particles are.
- Locations where inflammable or explosive gas are.
- Locations where corrosive gas, solvent, combustible gas are.
- Locations that receive direct sunlight or where radiant heat is generated.
- Locations where ambient temperature is beyond following range:

On-stream: 2 ~ 40°C

Storage: $0 \sim 50^{\circ}$ C (when there is no drain water inside of the piping)

- Locations where temperature changes rapidly.
- Locations where strong
- electromagnetic noise is generated (locations where electromagnetic field, strong magnetic field, surge is generated)
- Circumstances where static electricity is produced or discharged through the body of the product.
- Locations where strong high frequency wave is generated.

- Locations where danger of thunder is apparent.
- Locations by loading on vehicles, marine vessels, and so on.
- Locations whose altitude is higher than 2,000 meters.
- Circumstances where strong vibration or impact are transmitted.
- Circumstances where too much force and weight are put on the body of the product that causes it to deform.
- Circumstances where enough spaces cannot be taken to do maintenance (in the plant where the product is operated).

Spaces needed for maintenance

Front : 600 mm

Rear : 600 mm

Top : 600 mm

Right : 600 mm

Left : 600 mm

- Locations the ventilation grille of the product can be blocked.
- Place where rejection style air of air compressor or other driers (hot wind) is inhaled.

⚠ Warning

Do not use and store in environment having compressed air or ambinet atmosphere which includes the following substances. It could result in failure of the product and damage of components, which leads to injury.

- Corrosive gas, Organic solvent, Chemicals

2-2-2 Anchorage


- The air dryer should be installed on a vibration-free, stable, horizontal flat surface.
- Refer to "Chapter6 6-2 Dimensions" for the dimensions.
- Fix by bolts to prevent falling down. The bolts can be prepared separately as an accessory.

Model No.	Name	Quantity	Applicable Model
IDF-AB501	Anchor bolt set	1 (4 pcs/1 set)	IDU22E,IDU37E,IDU55E,IDU75E

2-2-3 Air piping

- Connection to the inlet and outlet of compressed air should be made removable by using union and so
 on.
- Pressing the hexagonal fitting with screw wrench and so on, connect the air piping fittings to the body.
- When mounting any part such as an air filter on the fitting at the compressed air inlet or outlet port, support the part to prevent excessive force from being applied to the product.
- Be careful not to let the vibration of the air compressor transmit.
- If the temperature of compressed air on the inlet side is higher than 80°C, place an aftercooler after the air compressor. Or, make the temperature of the place where the air compressor is installed lower than 80°C.
- Flash the piping sufficiently in order to avoid any foreign substances such as dust, sealing tape, liquid
 gasket, etc. when piping before piping connection. Foreign substances in the piping can cause cooling
 failure or drainage failure.
- Use pipes and fittings that have enough endurance against the operating pressure and temperature.

 And connect it firmly to prevent air leakage.
- Provide bypass piping to make it possible to do maintenance without stopping the air compressor.

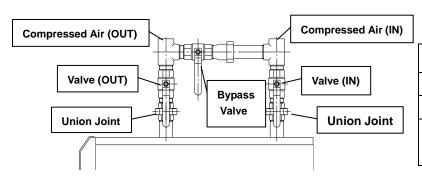

We recommend the bypass piping sets that we are selling separately as accessories.

Model No.	Name	Q.t	Applicable Model
IDU-BP336		1	IDU22E
IDU-BP337	Bypass	1	IDU37E
IDU-BP338	piping sets	1	IDU55E
IDO-BF330		1	IDU75E

2-2-4 Drain Tube

- A polyurethane tube of 10mm external diameter is attached to the drain tube. The outlet end of the tube is released to atmosphere. And let drain flow through the tube into a scupper and so on.
- Using the pressure of the compressed air, drain will be discharged periodically. Fix the outlet end of the tube so as not to swing during discharge.
- Prevent the drain tube from riser piping.
- Prevent the drain tube from being folded or flatted. Since the drain tube is coming from the bottom of the body, be careful to avoid the body from stomping over the tube during installation.

\land Warning

During drain work, follow the procedure that you define to keep the safety of worker (ex. Put on protective glass, apron, and gloves).

In case that oil gets in the washed water that is discharged from the auto drain, the waste liduid treatment is necessary. Handle following the bylaw or regulation of local government.

2-2-5 Electric Wiring

⚠ Warning

No one but qualified person should do the wiring work.

- Before wiring, you must cut the power off for safety. Do not work under any energized conditions.
- Supply power from a stable place, which is free from the effect of surge.
- Ensure that a Ground Fault Circuit Interrupter(GFCI) with appropriate capacity for earth leakage and load is used in the power supply of the product to prevent electrical shock and burnout of the compressor motor. See "6-1 List of specifications" for details.
- Supply power for the product should meet the specifications.
- · The product should be grounded for safety.
- · Do not connect the earth to a water pipe, a gas pipe, or a lightening rod.
- Do not plug too many leads into a single socket. That causes exothermic heat or fire.
- · Do not convert the wiring to use.
- In European countries, a circuit breaker that meets the IEC standard should be used for the supply power.

How to connect wiring

- Take off the front panel in front of the product and connect the power supply (AC230V) to the terminal base.
- Install a Ground Fault Circuit Interrupter(GFCI) to the power supply. (Prepare by yourself) [sensitivity of leak current: 30mA and below, Rated current 10A (IDU75E...Rated current 15A)]

Specification of power cable

Prepare following power cable.

Power cable: 1.25mm²(16AWG), External diameter: about 8 ~ 12mm

Additional length of about 0.2m is needed to wire inside of the product.

Length of the power cable

The length of the power cable should extend less than 30m from the product.

Connecting to the power supply

Connect the power cable and the earth to the terminal block. M3 screw is used for the connection part. Make sure to use round crimped terminal.

Applicable crimped terminal: 1.25-3 (Width: 6.5mm and below)

Wiring procedure

- Remove the front panel.
- Insert the cord through the rubber grommet and connect it to the terminal block (refer to the label on the terminal block).

M3 screw tightening torque: 0.6 ~ 1Nm

During wiring work, do not touch other sections except terminal block.

Attach the front panel as it were.

2-3 Cautions about Reinstallation

Λ

Caution

No one but someone who has enough knowledge about the product and incidental devices should reinstall in another place. And following instructions must be executed.

If you move the product and reinstall it into another place after some operations (including trial running), instructions that are not only following ones but also all of those in the chapter 2 should be followed.

Disassembly of the power cable

Cut off the power source when you disassemble the power cable.



Warning

No one but qualified personnel should do the electric wiring.

Cut off the power supply for safety before the wiring. Do not work under energized condition.

Disassembly of the air piping



Warning

No one but qualified personnel should do the air piping.


Separate the compressor from the product for safety before removing the iping. Do not remove any piping when there is remaining compressed air pressure inside of it.

• Remove the seal tape completely after detaching the piping. Remained tape will cause imperfect cooling and failure by entering into the body of the product.

Residual compressed air pressure release procedure

- Even while the dryer is removed, only when compressed air is needed, open the bypass piping valve.
- Close the compressed air inlet and outlet valve.
- Make sure the ball valve located next to the auto drain opened.
- Open the auto drain residual pressure release valve to release air pressure inside the product. Refer to the Figure at right.

Case Assembly

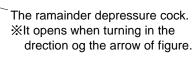

3 Operation / Shutdown

No one but someone who has enough knowledge and experience about the product and incidental devices should operate or shut down the product.

3-1 Check points before operation

Before a trial running, check following points.

• Installed Condition

By visual inspection check that the product is installed horizontally.

Make sure the product is fixed enough with anchor bolts.

Do not place heavy obstacles on the product and add unreasonable loading by piping and so on.

Wiring Connections

Power cord, and the earth should be connected firmly.

Drain Tube

Drain tube should be connected correctly.

Air Piping

Make sure the piping for compressed air is connected correctly. Those valves of IN / Out side and bypass piping of the product and of the bypass piping should be completely fasten.

Ball valve

Make sure the ball valve located next to the auto drain opened.

3-2 Operation

Start operation according to the procedure below.

- Turn on the breaker of the main power supply. Then, turn on the Switch with Lamp.
- The lamp will light up. Few minutes later, the cooling fan will rotate and hot air will be exhausted from the ventilation grille.

Place of the ventilation grille: Right Side Ventilation Grille

- Open the IN / OUT side valve slowly. Make sure the bypass valve is completely closed. Make sure the bypass
 valve is completely closed. Confirm there is no air leakage.
- Depending on the condition of compressed air or ambient temperature, the cooling fan sometimes alternates
 between rotation and stop at the beginning. Then, the refrigerator will go into continuous run and the pointer of
 the evaporation thermometer will indicate in the green zone. If the pointer of the evaporation thermometer
 indicates higher than the green zone, refer to "Chapter5 Troubleshooting."
- After a while from the start of flowing the compressed air, drain will be discharged from the drain tube automatically.
- Keep the condition of continuous run to use.

Caution

Avoid frequent On/Off operation, which can cause troubles.

The auto drain used for the product has a structre that closes the valve with air pressure higher than 0.15MPa. Therefore, until the pressure increase, air will be emitted form the drain outlet at the begining of opening the IN side valve. Keep in mind that sometime the pressure cannot increase enough with air compressor that has low dischage flow rate.

3-3 Shutdown

- Turn off the Switch with Lamp.
- The lamp will go out and then, the operation will be stopped. Depending on the condition of operation, hot air continues to be emitted from the ventilation grille by the cooling fan for a while after turning off the switch, which is not an abnormality but a process for safety shutdown.

3 - 4 Cautions about restart

One must wait for at least 3 minutes before restarting air dryer after it has been shut down. Failure to do this
may cause safety devices to trip due to over load.

If it is not possible to restart, refer to "Chapter 5 Troubleshooting."

3-5 Check points before restart

Check following points before you start operation. If any abnormalities occur, immediately stop the operation. Turn off the Switch with Lamp of the product and then the breaker to the power supply.

- There is no leakage of compressed air.
- Compressed air pressure, temperature, flow rate, and ambient temperature meet the specifications.
- Drain is being discharged from the drain tube.
- The pointer of evaporation thermometer is indicating in the green zone.
- There are no abnormal sound, vibration, or smelling.

3-6 Precautions for long-term non-operation

• If the product will not be operated for more than 24 hours, for example at the weekend, turn off the ILS (Switch with lamp) or power supply, for energy saving and safety. It is also recommended to release the pressure inside the compressed air piping and this air dryer.

Air Dryer 4 Maintenance



4 - 1 Daily Inspection

Check following points during usual operations. If you find some problems, immediately stop the operation and refer to "Chapter 5 Troubleshooting" as soon as possible.

- There is no air leakage
- The running lamp is lighting during operation
- Drain is being discharged from drain tube
- The pointer of the evaporation thermometer indicates in the green zone when it is running with pressurized air supply.
- The pointer of the evaporated thermometer indicates about 3~10°C lower than that of ambient temperature when the product is suspended with no pressurized air supply.
- There is no abnormal sound or vibration coming up from the product.
- There are no abnormal smell or smoke coming up from the product.
- It is recommended to keep a maintenance/service record. Please refer to "Chapter 12-1 Service Record"

4 - 2 Periodical Maintenance

4-2-1 Cleaning of ventilation grille (suction grille)

Clean dust and other foreign particles from the ventilation area with vacuum cleaner or air blow nozzle once a month.



During air blowing, put on protective glass and mask to prevent dusts from coming into throat or eyes.

4-2-2 Service parts

It is recommended to replace the following parts regularly. The interval shown in this operation manual depend on the operating conditions (ambient temperature, installation environment, etc.), so that they are for reference .

Table 1. List of parts to be replaced regularly

Description	Recommended replacement interval
Pressure switch	One Million times.
Fan motor	20,000 hours
Magnetic Contactor, Magnetic Switch (Note)	One Million times.

^{*}Note) If it is mounted by option "T" (With terminal block for power supply, run, alarm signal and remote operation) or special order.

4-2-3 Cleaning of the case assembly

Remove the dust deposited in the auto drain case assembly every month. Use neutral detergent for cleaning. If the degree of dirt is heavy and operating failure still continues even after cleaning, replace the product. Also, shorten cleaning interval from the next time.

· Part No. of case assembly

Part No.	Name	Quantity	Applicable Model
AD48	Case Assembly	1	IDU22E, IDU37E IDU55E. IDU75E

Air Dryer 4 Maintenance



Warning

• Maintenance of the air dryer should only be carried out by someone with sufficient knowledge and experience of air dryers and related equipment.

• Before carrying out maintenance, the important warnings in this manual must be thoroughly read and understood.












- When replacing or cleaning parts of the air dryer, be sure to remove the compressed air pressure inside the air dryer to "0". Never remove the case assembly when the air dryer is operated or air pressure remains inside. It is extremely dangerous if compressed air pressure remains inside the air dryer, as parts may come flying off at speed when loosened, or other unexpected accidents.
- This product has parts that become hot during operation and a power supply with high voltage applied. There is a risk of burns due to heat or electrification by high voltage. Even when operation is shut down after switching off the air dryer's illuminated light, there are also charging lines. When working on the charged sections, be sure to switch off the earth leakage breaker installed before starting work.
- As some parts of the air dryer will remain hot, there is a risk of burns due to residual heat after the power is switched off. So do not carry out replacement work until the temperature of these parts has fallen to 50°C or less. Wait for about 10 to 15 minutes as a guide.
- When carrying out maintenance work on the auto drain strainer and auto drain, there is a risk of touching the drain fluid during work. Please follow the safety procedure for operators specified by customer. (Example: carry out work wearing safety glasses, apron and gloves to prevent discharged fluid from touching the human body.)
- Use neutral detergent solution to clean parts such as the auto drain strainer and auto drain. Never use solvent such as thinner.
- When removing the outer casing panel or case assembly of the auto drain, wear gloves to prevent injuries.


Air Dryer 4 Maintenance

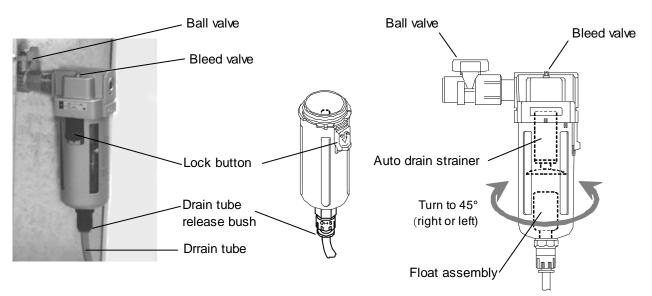

- · Close the ball valve.
- Open the bleed valve by turning it anticlockwise to release air left in the product.
- Remove the drain tube from the case assembly.
- Hold the case assembly lightly and pull down the lock button with thumb. Then, turn the case assembly to the left (or right) to 45° to align the marks,
 - Release your thumb from the lock button and slowly pull down the case assembly (vertically) to remove it.
- Pour solution of neutral detergent into the case assembly and shake it well to clean.
- Check the case O-ring for damage such as scratches, twisting or foreign particles attached to it. Then, apply grease thinly and fit it in the groove in the case assembly.
- Fit the case assembly to the auto drain body. Turn it untill the lock button clicks.
- Try to turn the case assembly lightly and check that it does not turn. If it turns, start with fitting the case assembly to the body again.
- Try to turn the case assembly lightly and check that it does not turn. If it turns, start with fitting the case assembly to the body again.
- Close the bleed valve by turning it clockwise and fit the drain tube as it was.
- · Open the ball valve.
- If the case assembly is damaged or very dirty, replace it with a new one.



Pull down the case assembly slowly

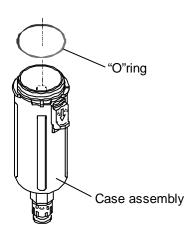

Air Dryer 5 Troubleshooting

5 Troubleshooting

5-1 Cause and countermeasure of errors

Should any problem occur, inspect the following table, and if the problem cannot be solved, shut off the power supply and then contact one of our sales offices for further instructions.

Problem	Probable Causes	Remedy
Air dryer does not operate and running	Power cord or plug is in loosening state or completely pulling out.	Perform proper connection on the power cord and plug.
lamp does not light on, even switch is ON.	Circuit breaker is OFF.	Confirm whether the proper capacity of the circuit breaker is used. It is not possible to restart the air dryer within 3 minutes after shutdown. Wait for 3 minutes before restarting. Resume the operation after resetting the circuit breaker to ON. If the circuit breaker still trips to OFF, failure of electrical insulation may have occurred. Remove the power supply and contact one of our agents for further instructions.
	Connect the 3-phase power supply incorrectly.	Replace 2 wires (R phase and T phase) among 3 each other.
Running lamp extinguishes and compressor stops during operation but	Installation place is poorly ventilated. Ambient temperature is too high.	Improve the ventilation system to lower the ambient temperature. Reset the protective circuit referring to "5-2 How to reset the thermal relay and high pressure switch".
resumes normal operation illuminating the lamp after a period of time.	The ventilation grilles are obstructed by wall or clogged with dust.	Install the air dryer more than 40cm away from the wall. Clean the ventilation grilles once a month. Reset the protective circuit referring to "5-2 How to reset the thermal relay".
	Temperature of the compressed air is too high.	Improve the ventilation system around air compressor or make ambient temperature around air compressor low to lower the temperature of discharge from compressor. Reduce the temperature of the compressed air by installing an additional after-cooler after air dryer. Reset the protective circuit referring to "5-2 How to reset the thermal relay".
	The power supply voltage changes largely.	Install a power supply transformer and review the power supply to keep the voltage adequate value. Allowable fluctuation of the power supply voltage is +-/10% at max. of the rated voltage. eset the protective circuit referring to "5-2 How to reset the thermal relay".
Evaporation thermometer points the value exceeding a	Installation place is poorly ventilated. Ambient temperature is too high.	Improve the ventilation system to lower the ambient temperature.
green range under the condition where no hot wind blows out from the ventilation port (exhaust port) at right side face.	The ventilation grilles are obstructed by wall or clogged with dust.	Install the air dryer more than 40cm away from the wall. Clean the ventilation grilles once a month.
	Temperature of the compressed air is too high.	Improve the ventilation system around air compressor or make ambient temperature around air compressor low to lower the temperature of discharge from compressor. Reduce the temperature of the compressed air by installing an additional after-cooler after air dryer.
Moisture occurs downstream of the	Bypass valve of air dryer is not fully closed.	Close the valve completely.

Air Dryer 5 Troubleshooting

compressed air lines.	Drain is not discharged from auto drain properly.	Check if the drain pipe has been raised up or bent. Check auto drain. Check auto drain strainer.
	Confluence of piping with another unit without air dryer.	Install air dryer on the line that does not have it. Separate two lines not to converge.
Large pressure drop	IN / OUT valve on the air dryer side is not fully opened.	Open IN/OUT valve thoroughly.
	Filter that is installed separately in compressed air line is clogged.	Replace the filter element. (Follow the instruction manual of each individual device.)

5 - 2 How to reset the thermal relay and high pressure switch

If light goes off during operation and refrigerating compressor stops, the thermal relay or high pressure switch (for only the IDU55E and IDU75E) to protect the refrigerating compressor starts operating and needs to be reset manually. For the position of the thermal relay and high pressure switch, refer to page 1-1.

Remove causes to start the thermal relay or high pressure switch referring to "5-1 Cause and countermeasure


<u> </u>	Danger	
Be sure to turn off the switch with light of the body.		

How to reset a thermal relay

for errors".

- ①Turn off the switch with lamp of the body.
- ②Take off the front panel. The thermal relay as shown on right figure can be found on the power supply terminal base.
- ③Confirm that a green indication does not appear at an indication window of thermal relay.


 If the green indication appears, there are other possible causes and contact SMC with remaining the power supply on.
- Press the blue reset button and confirm that the green indication comes to appear at the indication window.
- ⑤Put back the front panel.
- (6) When the switch with lamp is turned on, the product will restart operation.

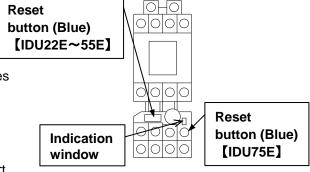

Thermal relay

How to reset a high pressure switch

- ①Turn off the switch with lamp of the body.
- ②Take off the front panel. The high pressure switch can be found at upper right part of power supply terminal base.
- 3 Press the red rest button.
- 4 Put back the front panel.
- (5) When the switch with lamp is turned on, the product will restart operation.

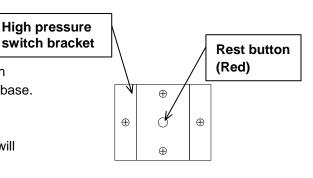

High pressure switch

6 References

6-1 Specifications

Model Specification			IDU22E-23	IDU37E-23	IDU55E-23	IDU75E-23
	Air Flow Rate m³/min (ANR)(Note 1)	50Hz	3.9	5.7	8.4	11.0
ndit	Operating Pressure	MPa		0	.7	
Rated Condition	Inlet Air Temperature	°C		5	5	
Rate	Ambient Temperature	°C		3	2	
	Pressurized Dew Point	°C		1	0	
	Working Fluid			Compre	ssed Air	
Operating Range	Inlet Air Temperature	°C		5~	·80	
Oper Rar	Inlet Air Pressure	MPa		0.15	~1.0	
	Ambient Temperature	°C	2~4	2~40 (Relative Humidity of 85% or less)		
	Power source	Phase	1 phase			
sal	(Note 4)	Voltage V	,	AC230V±10%	50Hz (Note 4)
Electrical pecification	Operating current (Note 2) Power consumption (Note 2) Voltage V A Power consumption (Note 2)		4	.3	7.5	10.7
Spec	Power consumption (Note 2) W		960 1600 2300		2300	
	Circuit Breaker (Note 3) A		10 20			20
Conc	denser			Air co	ooling	
Refri	gerant			R407C	(HFC)	
Refri	Refrigerant Charge g		450±10	830±10	550±10	745±10
Air IN	Air IN/OUT Connection		R1 R1·1/2 R2		2	
Drain Connection mm			1	0		
Coat	Coating Color			Panel : Ur Base : Ur	banwhite 1 bangray 2	
Weig	ht	kg	90±3	120±3	160±3	166±3
Applicable Compressor(Standard) kW		22	37	55	75	

Note1: The data for m³/h (ANR) is referring to the conditions of 20°C, 1atm . pressure & relative humidity of 65%.


Note 2: The value is that of under specified condition.

Note 3: Install GFCI breaker with sensivity of 30mA.

Note 4: When short period power shortage (including instantly recovered shortage) is recovered, it may take a longer starting period than usual starting or may not start due to the protective devices.

6-2 External Dimentions


IDU22E~75E

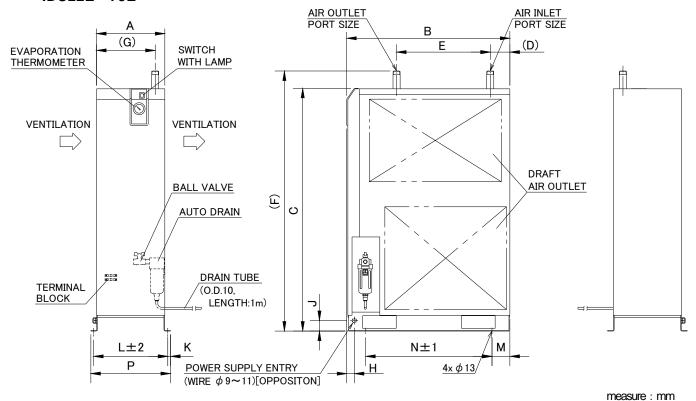


Port F В С Ε Ρ Model Α D G Н Κ Ν J L Μ size IDU22E R1 325 775 1153 1235 600 379 93 445 279 353 46 85 IDU37E R1·1/2 388 414 360 1258 64 550 1350 290 50 680 13 IDU55E 855 1345 1440 470 R2 53 530 360 36 500 75 700 526 IDU75E 1480 1575 70

6-3 Electrical Circuit

IDU22E, 37E-23 (1 phase AC230V)

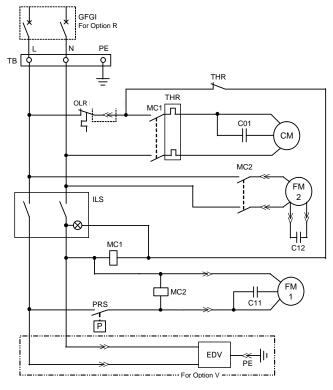


IDU55E,IDU75E-23 (1 phase AC230V)

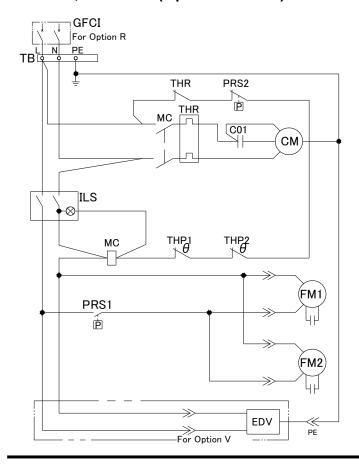

SYMBOL	DESCRIPTION
СМ	Compressor Motor
FM1,FM2	Fan Motor
МС	Magnetic Contactor
MC1,2	Magnetic Contactor
C01	Capacitor For Compressor
C11	Capacitor For Fan Motor
PRS	Pressure Switch
PRS1	Pressure Switch
PRS2	High Pressure Switch
ILS	Switch with Lamp
THR	Thermal Relay
OLR	Overload Relay (Inside of terminal cover)
THP	Thermal Protector
THP1,2	Fan Motor Thermostat
ТВ	Terminal Block
GFCI	Ground Fault Circuit Interrupter
EDV	Electronic Drain Valve

6-4 Compressed Air and Refrigerant Circuit / Operation Principles

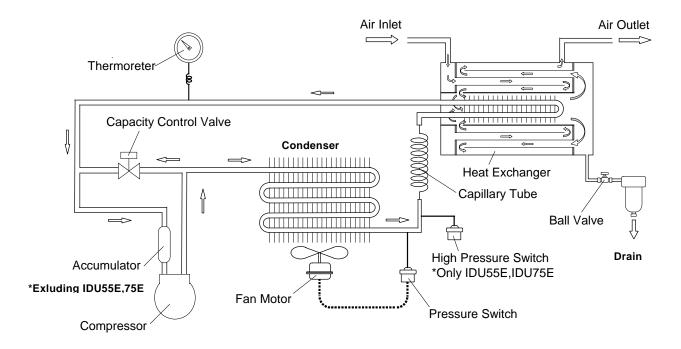

Compressed Air Circuit

Hot and humid air which has come in an air dryer firstly enters air-cooled aftercooler part, and is cooled. Then, it enters reheating part and exchanges its heat with dehumidified cold air and becomes cooler. Then, it enters cooling part and gives its heat to cold fleon, which cools and dehumidifies further, and separates its moisture. Finally, it exchanges its heat with hot and humid air which comes in the air dryer and it goes out from the air dryer as warm and dry air.

Refrigerant Circuit

The fluorocarbon charged in the refrigerant circuit is compressed by the compressor and cooled by the condenser to become liquid. Then, going through the capillary tube, it is decreased the pressure to reach a low temperature. Passing through the cooler part, it draws heat from compressed air and intensely boils. Finally it is inhaled into the compressor again. The capacity control valve opens to prevent dew drops from freezing when compressed air is cooled enough.

7 Specification for Option C

This product adds Specifications in Item 3 as option. When performing the installation and maintenance of the product, the following points must be understood and followed.

7 - 1 Safety instructions

When handling the product, take care to the following precautions.

🟡 Warning

Shut off the power supply when removing the panel for maintenance work, etc. The product has a fan(s) and could cause serious danger to operators.

7-2 Precautions for the installation and handling of the product

- 1) The surface of cooper tube is painted with a special epoxy to improve the rust proof effect to corrosive gas, but it is not perfect rust proof. Therefore, avoid installing the product in the place exposed to corrosive gas as much as possible.
- 2) If any flaw is given on the painted surface of copper tube such the case as panels are removed for maintenance, the effect of its rust proof painting is lost. Do not give any flaw on the painted surface of copper tube.

7 - 3 Specifications

The surface of copper tube is painted with a special epoxy resin for the rust proof. The parts covered with aluminum fins and insulations are not painted.

8 Specification for Option L

8 - 1 Safety instructions


When handling the product, take care to the following precautions.

Marning

- 1. Do not remove the auto drain if air pressure remains of the product. When removing the auto drain, stop the supply of air to the primary side of the product, exhaust the air from the secondary side and ensure there is no residual pressure. If the air pressure is left at the inside of the product, parts could suddenly pop out and cause accident when loosened.
- 2. Put gloves to prevent injury when removing the auto drain.
- 3. Operator could touch the drain waste from repalced auto drain. Follow the procedures prepared by the customer to keep safety of operators. (Ex. Put protective goggles, apron and/or gloves to protect body from toucing the drain waste for replacement worken replacing the product.)

8-2 Specification

The specification of this product is dryer with heavy duty Auto drain .The heavy duty auto drain will be assembled by the customer.

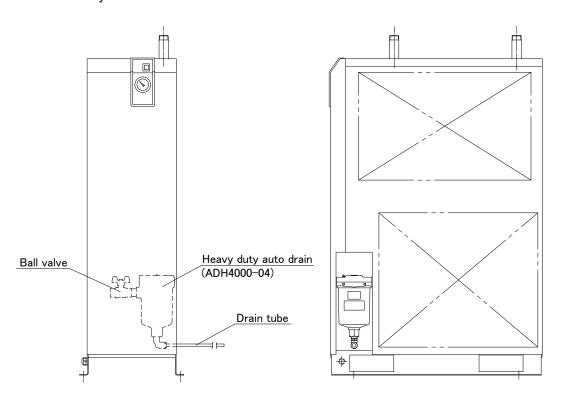

Heavy duty auto drain assembly

8 - 3 Specification of heavy duty auto drain (ADH4000-04).

Model	IDU22E to 75E-23-L
Auto drain type	Floating type
Auto drain valve type	N.O(normally opened: Open in the case of pressure loss)
Max. operating pressure	1.6MPa
Working pressure range	0.05 to 1.6MPa
Working fluid	Compressed air
Max. drain discharge	400cc/min(Pressure 0.7MPa,the case of water)

Note) Use for air compressor with flow more than 50l/min (ANR).

8 - 4 Maintenance

- 1. Check drain condition periodically (more than once a day).

 Then push flushing button to open exhaust valve.
- 2. Pilot air is exhaust from the port indicated in the figure. Do not cover this exhaust port. Clean exhaust port so that port is not blocked by dust, etc.
- 3. Close the ball valve before removing the heavy duty auto drain and open the bleed valve or push the flushing button and confirm air pressure is 0.

9 Specification for Option R

This product mounts the Ground Fault Circuit Interrupter (GFCI) in Item 2. It will shut off the power supply in case the product should have over current or current leakage. Additionally, the power supply should be connected directly to the primary side of the GFCI. For the details of the GFCI such as the specifications and mounting position, refer to Item 2 or later.

9 - 1 Safety instructions

When handling the product, take care to the following precautions.



Warning

Only qualified person must perform wiring and obserbing the following points.

- 1. Be sure to shut off the power supply before wiring. For safety, do not perform any work on the unit with the power supply on. The power supply cannot be completely shut off just by turning off the illuminated switch. Be sure to turn off all power lines connected to the product.
- 2. Supply the power from a stable source, free from surges.
- 3. Provide the power suitable for the product specifications.
- 4. Be sure to ground the product for the safety. Without grounding, the GFCI can not operate normally.
- 5. Do not ground to water pipe, gas tube or lightening rod line.
- 6. Do not connect too many wires to the same outlet, which could results in heat generation and fire.
- 7. Do not retrofit the wiring of the dryer and the power supply line.


9 - 2 Specifications of the GFCI

Dryer model number	Specifications of GFCI	
IDU22E/37E/55E-23-R	Rated current: 10A, Current sensitivity: 30mA	
IDU75E-23-R	Rated current: 20A, Current sensitivity: 30mA	

9-3 How to connect the power supply

Connect the power cables in the following procedure.

- 1) Take off the front panel.
- 2) Insert the power cable prepared by the customer into the power code fixture and bring the power cable near the terminal base through the base hole.
- 3) Connect the power cable to the terminal of the GFCI.
- 4) Put back the front panel.

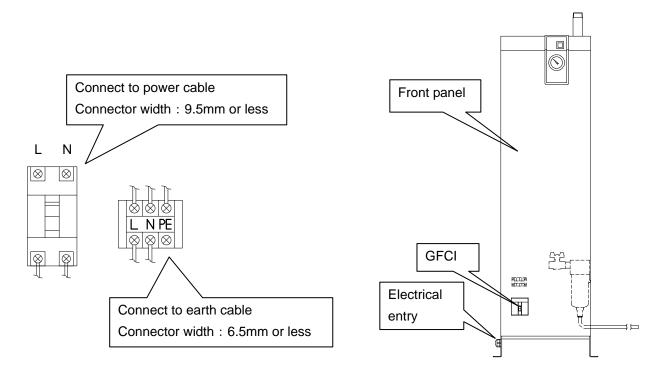

Specification for Option T

This product mounts the terminal block which can transfer the operation and failure signals to Item 2 Specifications. The signals are a no voltage contact style. For details, refer to Item 2 or later.

10 - 1 Safety instructions

When handling the product, take care to the following precautions.



Warning

Only qualified person must perform wiring and obserbing the following points.

- 1. Be sure to shut off the power supply before wiring. For safety, do not perform any work on the unit with the power supply on. The power supply cannot be completely shut off just by turning off the illuminated switch. Be sure to turn off all power lines connected to the product.
- 2. Supply the power from a stable source, free from surges.
- Be sure to mount the Ground Fault Circuit Interrupter (GFCI) with adequate sensitivity and load capacity to prevent electrical shock and protect the refrigerating compressor motor from burning out.
- 4. Provide the power suitable for the product specifications.
- 5. Be sure to ground the product for the safety. Without grounding, the GFCI can not operate normally.
- 6. Do not ground to water pipe, gas tube or lightening rod line.
- 7. Do not connect too many wires to the same outlet, which could results in heat generation and fire.
- 8. Do not retrofit the wiring of the dryer and the power supply line.
- 9. For the use of the product in Europe, mount the breaker compatible to IEC standard to the power supply for the product.

10 - 2 Specifications

The product mounts the terminal block which can transfer the operation and failure signals on the standard product.

- The operation and failure signals are no voltage contact style.
 - Operation • • When the product is operating; Close

Failure • • • When the product stops due to failure; Close

Contact capacity

AC230V,4A DC24V,5A

Minimum current for signal 20V,5mA(AC/DC)

10 - 3 Remote operation


- For the remote operation, turn on and off the power supply side under the condition of the illuminated switch ON.
- Keep 3 min. at minimum after stopping the product to restart even for the remote operation. If the product is restarted within less than 3 min., protective equipment (overload relay) may activate and prevent the product from restarting.

Additionally, the frequency to start and stop the operation must be restricted to 5 times per hour (to prevent breakage of the motor).

10 - 4 How to connect the power supply and signal cable


Connect the power cable and signal cable in the following procedures.

- 1) Take off the front panel.
- 2) Insert the power cable prepared by the customer into the power code inlet (with rubber grommet) and bring the power cable near the terminal block through the base hole.
- 3) Connect the power cable to the terminal.
- 4) Insert the signal cable prepared by the customer into the signal code inlet (with rubber grommet) and bring the signal cable near the terminal block.
- 5) Connect the signal cable to the each terminal.
- 6) Put back the front panel.

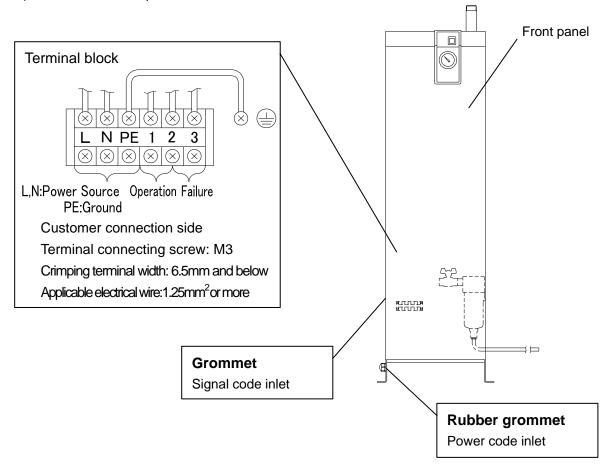


10 - 5 Electric circuit

IDU22E, 37E-23-T

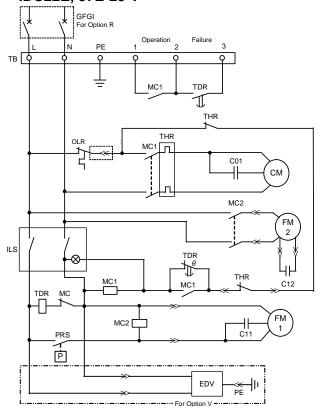

IDU55,75E-23-T

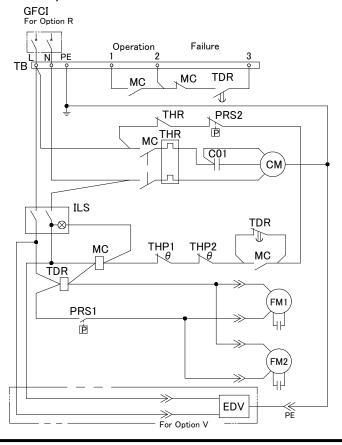

SYMBOL	DESCRIPTION		
СМ	Compressor Motor		
FM1,FM2	Fan Motor		
MC	Magnetic Contactor		
MC1,2	Magnetic Contactor		
C01	Capacitor For Compressor		
C11	Capacitor For Fan Motor		
C12	Capacitor For Fan Motor		
PRS	Pressure Switch		
PRS1	Pressure Switch		
PRS2	High Pressure Switch		
ILS	Switch with Lamp		
THR	Thermal Relay		
OLR	Overload Relay (Inside of terminal cover)		
THP	Thermal Protector		
THP1,2	Fan Motor Thermostat		
TDR	Time Delay Realy		
ТВ	Terminal Block		
GFCI	Ground Fault Circuit Interrupter		
EDV	Electronic Drain Valve		

Specification for Option V

This product mounts the timer operated auto drain in Item 2 Specifications. When performing the installation and maintenance work for the product, the following points must be understood and followed. Additionally, read Item 3 for replacement work.

11 - 1 Safety instructions

When handling the product, take care to the following precautions.

⚠ Warning

- 1. Do not remove the auto drain if air pressure remains of the product. When removing the auto drain, stop the supply of air to the primary side of the product, exhaust the air from the secondary side and ensure there is no residual pressure. If the air pressure is left at the inside of the product, parts could suddenly pop out and cause accident when loosened.
- 2. Put gloves to prevent injury when removing the auto drain.
- 3. Operator could touch the drain waste from repalced auto drain. Follow the procedures prepared by the customer to keep safety of operators. (Ex. Put protective goggles, apron and/or gloves to protect body from toucing the drain waste for replacement worken replacing the product.)

🛕 Warning

Only qualified person must perform wiring.


- 1. Provide the power suitable for the product specifications.
- 2. Be suer to ground the product for the safety. Do not ground to water pipe, gas tube or lightening rod line.
- 3. Do not connect too many wires to the same outlet, which could results in heat generation and fire.
- 4. Do not retrofit the wiring of the dryer and the power supply line.

<u>11 - 2</u> Specifications
The timer is set to have ON time of 0.5sec and OFF time of 0.5min. at the time of shipment from the factory. Do not change this timer setting. If it is changed, water could be discharged from the outlet line of the dryer. Service parts number will change depending on the power supply voltage of the dryer.

Dryer model number	IDU22E/37E-23-V	IDU55E/75E-23-V	
Order number (service parts)	IDF-S0198	IDF-S0302	
Max. operating pressure	1.6MPa		
Fluid	Drain		
Power supply voltage of drain timer	AC230V±10% (50Hz)		
ON time	0.5sec	2.0sec	
OFF time	0.5min		

<u>11 - 3</u> How to perform maintenance The product needs to be maintained. Clean it in the following procedure periodically.

- 1) Close the ball valve.
- 2) Press the test switch and make the residual pressure zero.
- 3) Remove the strainer and clean it.
- 4) Reassemble the strainer and open the ball valve.

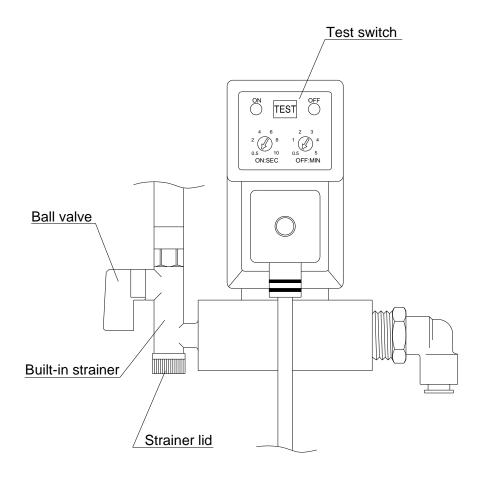



12-1 Service Record

It is recommended to keep a maintenance/service record.

Parts No.	Description	Maintenance/Service Work Description	Date