

# Water Cooled Aftercooler

# HAW Series

RoHS

**The HAW series can cool high temperature compressed air from compressors down to 40°C or less and efficiently remove moisture from the air. As the HAW series is water-cooled, it can be used where there is high temperature, high moisture and heavy foreign particles.**

### 25 times heat transfer area

As compared to shell and bare tube, the flower fin tube has 25 times the heat transfer area.

### Even heat exchange

Sharp edge of flower fin causes air turbulence resulting in even heat exchange and high cooling efficiency.

### High efficiency drain


Drainage is efficiently removed by built-in drain separator.

### Visible outlet air temperature

Outlet air temperature is easily checked by thermometer, resulting in easy maintenance.



Symbol



## Model/Standard Specifications

Model		HAW2	HAW7	HAW22	HAW37	HAW55	HAW75	HAW110	
Applicable compressor (kW)	Screw type compressor	2.2	7.5	22	37	55	75	110	
	Reciprocating type compressor	2.2	7.5	15	22	37	55	75	
Air flow rate L/min (ANR) <sup>(1)</sup>	Screw type compressor	300	1000	3300	5700	8600	12000	18000	
	Reciprocating type compressor	300	1000	2100	4300	5600	8000	11000	
Rated performance	Inlet air temperature (°C)	Screw type compressor		70					
		Reciprocating type compressor		70		180			
	Inlet air pressure dew point (°C)		67						
	Inlet air pressure (MPa)		0.7						
	Cooling water flow (L/min)		5	5	17	25	36	40	45
	Cooling water inlet temperature (°C)		30						
Outlet air temperature (°C)		40							
Cooling water pressure drop (MPa)		0.002		0.02		0.03	0.06	0.03	
Operating range	Fluid	Air: Compressed air, Cooling water: Industrial water/Tap water							
	Inlet air temperature (°C)	5 to 100			5 to 200				
	Inlet air pressure (MPa)	0.05 to 1.0 (With auto drain: 0.15 to 1.0)			0.05 to 0.97 (With auto drain: 0.3 to 0.97)				
	Ambient temperature (°C)	2 to 50							
	Proof pressure (MPa)	1.5							
Port size	Air side	Rc 1/2	Rc 3/4	Rc 1 1/2	Rc 2		3B JIS 10K FF flange		
	Cooling water side	Rc 1/2		Rc 3/4	Rc 1			Rc 1 1/4	
	Drain side	Rc 1/2			Rc 3/4			Rc 1	
Weight (kg)	9.7	11.5	32	59	67	78	95		
Accessory <sup>(2)</sup>	Drain valve (1 pc.)	Rc 1/2		Rc 3/4			Rc 1		
	Outlet air thermometer (1 pc.)	R 1/2 (Temperature range: 0 to 150°C)							

Note 1) ANR indicates the flow rate converted to the value at 20°C under the atmospheric pressure and the state of relative humidity 65%.

Note 2) The accessories should be mounted by user.

## Accessory (Option)

Applicable model	HAW2	HAW7	HAW22	HAW37	HAW55	HAW75	HAW110
Screw flange (With companion flange)	—	—	HAWF-141	HAWF-142	HAWF-200		—
Note) Normally open	AD402-04D-6-A		AD600-06			AD600-10	
Auto drain Normally closed	AD402-04C-6-A		—				

Note) When the air quantity of the compressor is less than 400 L/min [ANR], select the normally closed type.

## Model Selection (Flow Capacity L/min (ANR))

Model		HAW2-04	HAW7-06	HAW22-14	HAW37-14	HAW55-20	HAW75-20	HAW110-30
Inlet air temperature	50°C	1000	2000	6000	12000	12000	12000	18000
	70°C	300	1000	3300	5700	8600	12000	18000
	100°C	150	700	2500	5000	7000	10500	14000
	180°C	—	—	2100	4300	5600	8000	11000

Conditions: • Supply pressure 0.7 MPa, Outlet air temperature 40°C, Cooling water inlet temperature 30°C.  
• Inlet air temperature 50°C is saturated air. At 70°C or more, it is humid air with dew point 67°C.

**How to Order**

**HAW 22 - 14**

**Accessory (Option)**

Symbol	Description
NII	—
C	Auto drain (Normally closed)
D	Auto drain (Normally open)
F	Screw flange

**Basic size**

Symbol	Applicable air compressor kW	
	Screw type	Reciprocating type
2	2.2	
7	7.5	
22	22	15
37	37	22
55	55	37
75	75	55
110	110	75

**Port size**

Symbol	Size	Applicable model
04	Rc 1/2	HAW2
06	Rc 3/4	HAW7
14	Rc 1 1/2	HAW22, 37
20	Rc 2	HAW55, 75
30	3B JIS 10K FF flange	HAW110

**How to Calculate Outlet Air Temperature**

Outlet air temperature can be calculated with inlet air temperature, cooling water temperature and amount of air in the following procedure.

(Example) Inlet air temperature: 100°C, Cooling water temperature: 20°C, Cooling water flow: 17 L/min


Air flow: 2000 L/min (ANR), Air pressure: 0.7 MPa, Model: HAW22-14

**Outlet air temperature at above conditions**

- Use outlet air temperature of 37°C from outlet air temperature table. At this time correction factor line becomes (A).
- To get correction factor of 1.3 use cooling water temperature correction factor (B) at 20°C.
- To get outlet air temperature divide 37°C from (1) by 1.3 from (2).  
Outlet air temperature = 37 ÷ 1.3 = 28.5°C

**Correction Factor by Cooling Water Temperature**

Air pressure 0.7 MPa

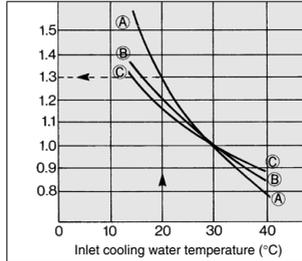

**Outlet Air Temperature**

Model	Cooling water (L/min)	Correction factor	Air flow (L/min (ANR))	Inlet air temperature			
				50°C	70°C	100°C	180°C
HAW2	5	(A)	200	35.5	38.5	41.5	—
		(B)	300	36	40	43	—
		(C)	400	36.5	42	45.5	—
HAW7	5	(A)	500	33.5	36	37	—
		(B)	1000	36	40	43	—
		(C)	1500	38	45.5	49.5	—
HAW22	17	(A)	2000	33.5	36	37	37.5
		(B)	3300	36	40	43	47
		(C)	4000	36.5	42.5	45.5	51
HAW37	25	(A)	4000	33.5	36	37	38
		(B)	5700	35	40	42	44.5
		(C)	7000	36	41	43.5	48
HAW55	36	(A)	7000	34.5	38	40	43
		(B)	8600	36	40	44	49
		(C)	10000	37	42.5	46	54
HAW75	40	(A)	10000	34.5	38	39.5	42
		(B)	12000	35.5	40	43	47
		(C)	14000	36	41.5	44.5	49.5
HAW110	45	(A)	15000	34.5	39	41	45
		(B)	18000	35.5	40	43	48.5
		(C)	20000	36	42.5	45.5	52

Conditions: • Air pressure 0.7 MPa, Cooling water temperature 30°C.  
• Inlet air temperature 50°C is saturated air. At 70°C or more, it is humid air with dew point 67°C.

**⚠ Precautions**

- Be sure to read this before handling the products.
- Refer to back page 50 for Safety Instructions and pages 6 to 8 for Air Preparation Equipment Precautions.

**Caution on Design**

**⚠ Warning**

- If the supply of cooling water is disrupted, the system will overheat, creating a dangerous situation. Therefore, make sure to take safety measures against water failure.
- An excess or insufficient flow of cooling water can damage the heat exchanger tube. Therefore, design within the rated water flow range (refer to the model column).

**⚠ Caution**

- Design the piping for cooling water and compressed air with a bore that is greater than the bore of the piping connections.
- The quality of the cooling water to be used must exceed the water quality that has been specified by the Japan Refrigeration and Air Conditioning Industry Association. (Refer to the instruction manual.) Poor quality cooling water damages the heat exchanger and reduces performance. Therefore, inspect the water quality and replace the circulating water on a regular basis.
- Never use sea water for cooling.

**Mounting**

**⚠ Caution**

- Install the unit horizontal with pipe line.
- Make sure to correctly connect the compressed air inlet/outlet and the cooling water inlet/outlet.
- Use union joints to connect the cooling water pipes so that they can be easily removed during maintenance.
- Connect a drain pipe because a large amount of drainage is generated when the compressed air is cooled. The drain pipe must have a minimum pipe bore of 10 mm, and a maximum length of 5 m (when installing an optional auto drain).

**Maintenance**

**⚠ Caution**

- Inspect the quality of the cooling water and replace the circulating water on a regular basis. If the cooling water is cooled in a cooling tower, it is susceptible to the adhesion of water scale.
- If there is a likelihood that the cooling water will be frozen, drain the cooling water to prevent damage. Also, drain the cooling water when the equipment will not be used for a long period of time.
- If the cooling performance has been reduced, clean the inside of the cooling water pipes. (Refer to the instruction manual for details on the cleaning.)

HAA  
HAW

AT

IDF  
IDU

IDF  
IFS

IDFA

IDFB

IDH

ID

IDG

IDK

AMG

AFF

AM

AMD

AMH

AME

AMF

ZFC

SF

SFD


LLB

AD


GD

# HAW Series

## Construction Principle

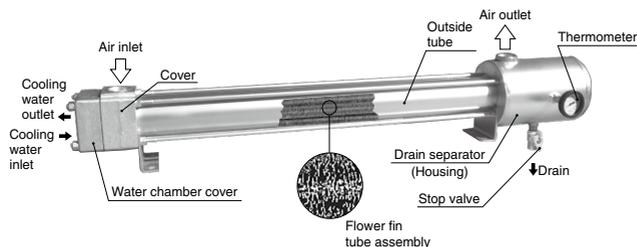

## Flow Rate Characteristics

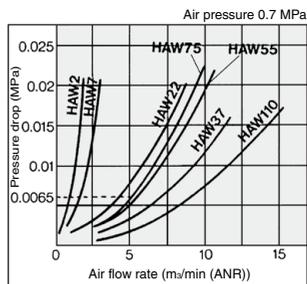


(Example) To get pressure drop at 0.3 MPa of air pressure, 5 m<sup>3</sup>/min (ANR) of air flow and model HAW75-20, use  $\Delta P = 0.0065$  MPa at 0.7 MPa from the table and convert P<sub>1</sub> to 0.3 MPa.


$$\text{Pressure drop} = \frac{(0.7 + 0.1013) \times \Delta P}{P_1 + 0.1013} = \frac{0.8013 \times 0.0065}{0.3 + 0.1013} = 0.013 \text{ MPa}$$

## Construction

### HAW2/7

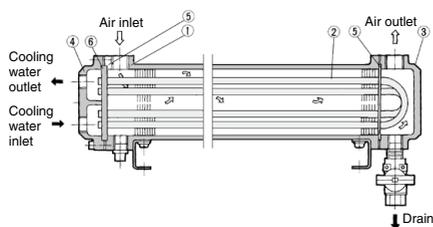

### HAW22 to 110

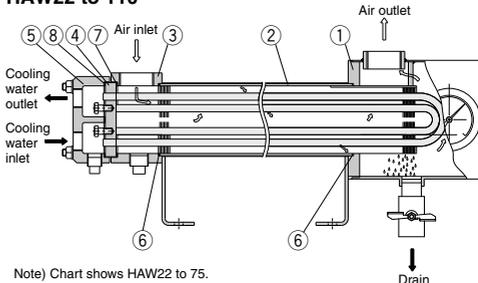

Note) Chart shows HAW22 to 75.  
As HAW110 is flange-connection, it differs from the above graph.

### Component Parts (HAW2/7)

No.	Description	Material	Note
1	Outside tube	AC2A-F	—
2	Flower fin tube assembly	C1220T	Flower fin
3	Housing	AC2A-F	—
4	Water chamber cover	FC200	—

### Component Parts (HAW22 to 110)

No.	Description	Material	Note
1	Housing	SGP, SS400	—
2	Outside tube	STK	—
3	Body	FC200	—
4	Flower fin tube assembly	C1220T	Flower fin
5	Water chamber cover	FC200	—

### Replacement Parts

No.	Description	Material	HAW2	HAW7
2	Flower fin tube assembly	Aluminum, Copper, Carbon steel	42012 (1 pc.)	42022 (1 pc.)
5	Seal	Non-asbestos	42013 (2 pcs.)	42013 (2 pcs.)
6	Seal	Non-asbestos	42015 (1 pc.)	42015 (1 pc.)


### Replacement Parts

No.	Description	Material	HAW22	HAW37	HAW55	HAW75	HAW110
4	Flower fin tube assembly	Aluminum, Copper, Carbon steel	42036 (1 pc.)	42046 (1 pc.)	42054 (1 pc.)	42062 (1 pc.)	42073 (1 pc.)
6	Seal	Non-asbestos	42032#1 (2 pcs.)	42042#1 (2 pcs.)	42042#1 (2 pcs.)	42042#1 (2 pcs.)	—
7	Seal	Non-asbestos	42035#1 (1 pc.)	42045#1 (1 pc.)	42045#1 (1 pc.)	42045#1 (1 pc.)	42072#1 (1 pc.)
8	Seal	Non-asbestos	42037#1 (1 pc.)	42047#1 (1 pc.)	42047#1 (1 pc.)	42047#1 (1 pc.)	42074#1 (1 pc.)


Note) Please contact SMC if the parts cannot be replaced because of sticking.

## Dimensions

### HAW2/7

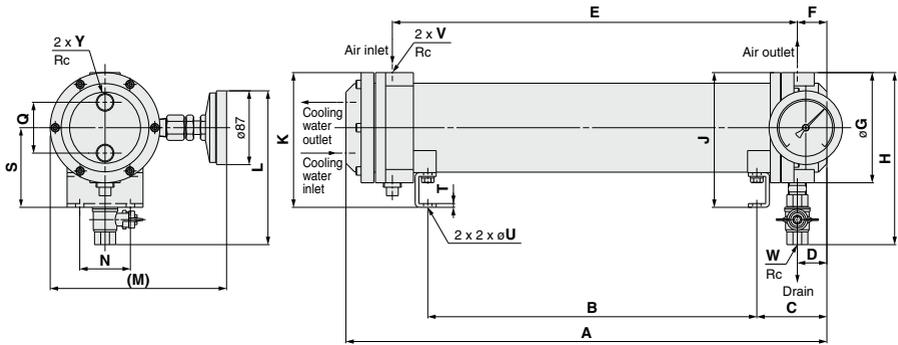

### HAW22 to 110

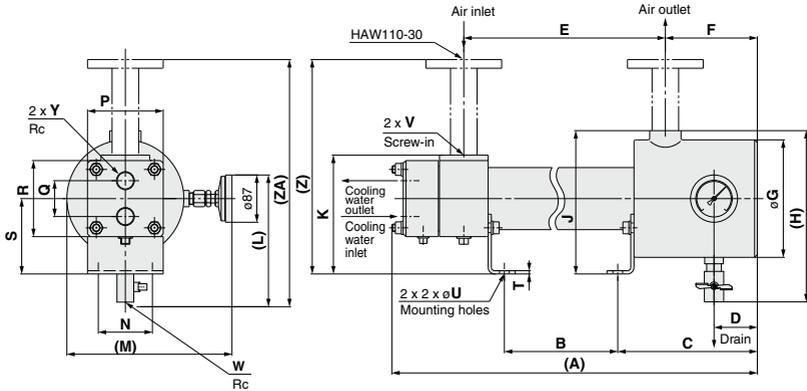

Model	A	B	C	D	E	F	øG	H	J	K	L	M	N	P	Q	R	S	T	øU	V	W	Y	Z	ZA
HAW2-04	360	190	83	35	270	35	130	203	159	159	182	193	60	—	60	—	94	4.5	10	1/2	1/2	1/2	—	—
HAW7-06	570	390	83	35	480	35	130	203	159	159	182	193	60	—	60	—	94	4.5	10	3/4	1/2	1/2	—	—
HAW22-14	948	575	212	37	704	138	165	266	245	215	215	238	90	120	60	120	150	4.5	12	1 1/2	3/4	3/4	359	371
HAW37-14	1354	893	258	80	1056	170	216	324	264	219	242	289	100	140	66	140	139	6.0	18	1 1/2	3/4	1	380	431
HAW55-20	1612	1038	366	150	1203	276	216	324	264	219	242	289	100	140	66	140	139	6.0	18	2	3/4	1	375	426
HAW75-20	2112	1538	366	150	1703	276	216	324	264	219	242	289	100	140	66	140	139	6.0	18	2	3/4	1	375	426
HAW110-30	1724	950	500	72	1210	365	267.3	473	—	—	317	357	200	220	70	—	195	8.0	18	3	1	1 1/4	395	473

(mm)

- HAA
- HAW
- AT
- IDF
- IDU
- IDF
- IFS
- IDFA
- IDFB
- IDH
- ID
- IDG
- IDK
- AMG
- AFF
- AM
- AMD
- AMH
- AME
- AMF
- ZFC
- SF
- SFD
- LLB
- AD
- GD