
Circulating Fluid Temperature Controller (C C MET



Thermo-chiler Standard Type

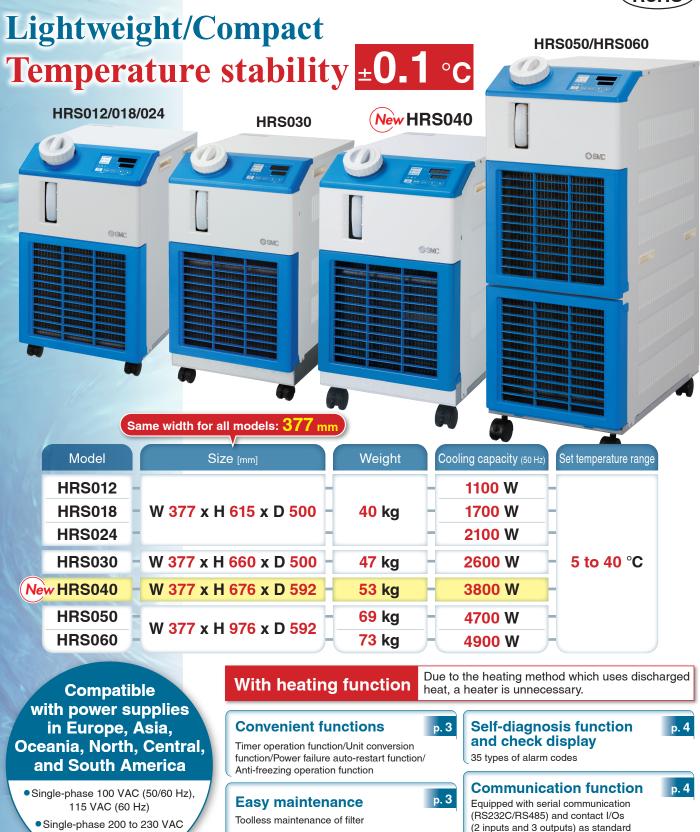



Environmentally friendly R407C R410A as refrigerant

HRS Series

(50/60 Hz)

CAT.EUS40-55G-UK


Temperature stability $\pm 0.1~^{\circ}\text{C}$ / Compact

A precision temperature control method which utilizes expansion valves and temperature sensors allowed for the realization of a product with a high temperature stability of ± 0.1 °C and a small-size tank.

■ Air-cooled HRS□-A-□

Air-cooled Condenser Ventilation Pressure sensor (For high-pressure gas) Dryer Dryer (For return) Evaporator Temperature sensor (For return) Pressure sensor (For discharge) Some pressure sensor (For discharge) Circulating fluid return port Resin tank 5 L Fluid level indicator Temperature sensor (For discharge) Circulating fluid outlet Refrigeration circuit Circulating fluid circuit

■ Water-cooled HRS□-W-□

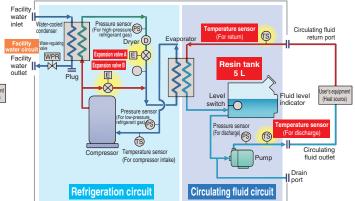

Refrigeration circuit

- The compressor compresses the refrigerant gas and discharges high-temperature, high-pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high-temperature, high-pressure
 refrigerant gas is cooled down by fan ventilation in the air-cooled condenser, where it is then liquefied. In the case of water-cooled refrigeration, the
 refrigerant gas is cooled by the facility water in the facility water circuit in
 the water-cooled condenser, where it is then liquefied.
- The liquefied high-pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A, where it vaporises after receiving heat from the circulating fluid in the evaporator.
- The vaporised refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high-pressure, hightemperature refrigerant gas is bypassed into the evaporator by expansion valve B to heat the circulating fluid.



Circulating fluid circuit

- After the circulating fluid discharged from the pump is heated or cooled by the user's equipment, it returns to the thermo-chiller.
- The circulating fluid is controlled to remain at a set temperature by the refrigeration circuit. It will then be discharged to the user's equipment side again by the thermo-chiller.


Point
Since the refrigeration circuit is controlled by the signals from 2 temperature sensors (for return and discharge), precise temperature control of the circulating fluid can be achieved. Therefore, there is no need for a tank with a large capacity to absorb the circulating fluid temperature difference, as high temperature stability can be achieved even with a small-size tank. This also contributes to space saving.

Facility water circuit


For water-cooled refrigeration HRS□-W-□


• The water-regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water-regulating valve.

Can be installed with both sides close to a wall

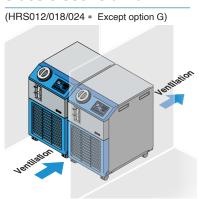

Reduced-height double condenser structure (HRS030/040/060)

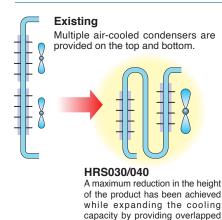

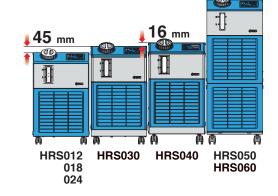



air-cooled condensers

Simple operation

Step 1 Press the RUN/ STOP key.

Step 2 Adjust the temperature setting with the v/keys.

Step 3 Press the RUN/ STOP key to stop operation. Easy operation



The large digital display (7-segment and 4 digits) and 2-row display provide a clearer view of the current value (PV) and set value (SV).

O REMOTE


RUN


O ALARM

⊒ ② ○

Power supply (24 VDC) available

Power can be supplied from the connector on the rear side of the HRS to external switches, etc.

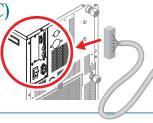

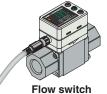

Flow switch Refer to the Web Catalogue for details.



Variations


Мо	odel Cooling capacity [W]		Single-phase 100 VAC (50/60 Hz) 115 VAC (50/60 Hz)	Single-phase 200 to 230 VAC (50/60 Hz)	Option p. 28	Optional accessories p. 31	International standards	
19 . 6	HRS012		1100/1300	•	•	· With earth leakage breaker · With automatic fluid fill function · Applicable to deionised	Anti-quake bracket Piping conversion fitting (For six cooled, water cooled, and actions)	
	HRS018	Air-cooled	1500/1700 1700/1900	• -	-		(For air-cooled, water-cooled, and options) Concentration meter Bypass piping set Power supply cable DI filter set Electric resistance sensor set/	UK CA *1
	HRS024		2100/2400	_	•			
	HRS030	refrigeration Water- cooled	2600/3200	_	water piping High-pressure pump mounted (* The HRS050/060 cannot be selected.)	Electric resistance control set · Electric conductivity sensor set/ Electric conductivity control set	set r set/ (UL Standards) Il set Refer to pages 11 to 14 for details	
	HRS040	HRS040 refrigeration 3800/4200	_	•	· SI unit only · High-temperature	Particle filter set Drain pan set (With water leakage sensor)		
	HRS050		4700/5100	_	•	environment specification (* The HRS030/040/050/060 cannot be selected.)	040/050/060 · Analogue gateway unit	models.
	HRS060		4900/5900	_	•		Separately-installed power transformer Filter for circulating fluid fill port	


Reduced maintenance hours for the pump

Now with a magnet pump*1

Due to the adoption of a sealless pump, no external leakage of the circulating fluid occurs. Also, periodic checking for pump leakage and replacement of the mechanical seal are not necessary.

*1 For products with the high-pressure pump option and for the HRS050/060, a mechanical seal pump is used.

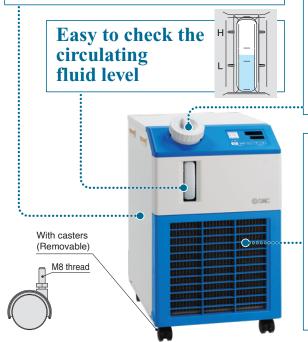

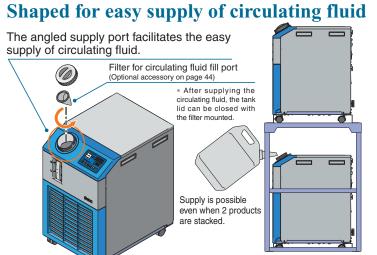


Toolless inspection and cleaning of air-cooled condenser

Dustproof filter

performed with ease.

Integrated with the grill of the front panel
Mounting and removal can be

Easy to remove dust, cutting chips, etc., stuck to the dustproof net with a brush or air blow

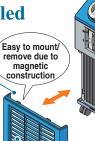



Replacement type dustproof filter set (p. 42)

Suitable for use in excessively dusty atmospheres
The disposable type filter reduces the time and effort required for cleaning.



Particle filter set (p. 40) Removes foreign matter in the circulating fluid Effective in preventing foreign matter from entering the user's equipment and chiller • Prevents pump malfunction • Prevents the water-cooled condenser performance from falling

Convenient functions (Refer to the Operation Manual for details.)

■ Timer operation function

Timer for ON and OFF can be set in units of 0.5 h up to 99.5 h.


Ex.) Can be set to stop on Saturday and Sunday and restart on Monday morning

Ex. SE.02 "ON timer"



■ Unit conversion function

Temperature and pressure units can be changed.

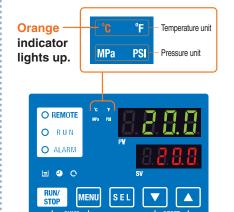

■ Power failure auto-restart function

Automatic restart after stoppage due to power failure, etc., is possible without pressing the ROW key, and remote operation is also possible.

Anti-freezing operation function

If the circulating fluid approaches its freezing point, for example, on a cold winter night, the pump operates automatically, and the heat generated by the pump warms the circulating fluid, preventing freezing.

■ Key-lock function

Can be set in advance to protect the set values from being changed by pressing keys by mistake.

Function to output a signal for completion of preparation
Notifies by communication when the temperature
reaches the pre-set temperature range

■ Independent operation of the pump

The pump can be operated independently while the chiller is powered off. This allows you to check for leakages in piping and to remove the air.



Self-diagnosis function and check display

Display of 35 types of alarm codes For details, refer to page 26.

Operation is monitored at all times by the integrated sensor.

Should any error occur, the self-diagnosis result is displayed by the applicable alarm code (35 types).

This makes it easier to identify the cause of the alarm.

Can be used before requesting service

Changeable alarm set values

Setting item	Set value
Circulating fluid discharge temperature rise	5 to 48 °C
Circulating fluid discharge temperature drop	1 to 39 °C
Circulating fluid discharge pressure rise	0.05 to 0.75 MPa*1
Circulating fluid discharge pressure drop	0.05 to 0.18 MPa*1


^{*1} Set values vary depending on the model.



Alarm codes can be used for the notification of upcoming recommended maintenance.


The codes notify you when it's time to check the pump and fan motor. Helpful for facility maintenance

* A fan motor is not used in water-cooled refrigeration.

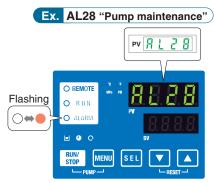

Check display

The internal temperature, pressure, and operating time of the product are displayed.

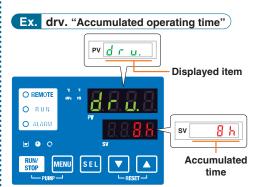

Displayed item
Circulating fluid outlet temperature
Circulating fluid return temperature
Compressor gas temperature
Circulating fluid outlet pressure
Compressor gas discharge pressure
Compressor gas return pressure
Accumulated operating time
Accumulated operating time of pump
Accumulated operating time of fan motor*1
Accumulated operating time of compressor


*1 These are displayed only for air-cooled refrigeration.

Communication function

Serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. This allows for communication with the user's equipment and system construction, depending on the application. A 24 VDC output can be also provided and is available for use with flow switches (SMC's PF2W, etc.).


Ex. 1 Remote signal I/O through serial communication

Remote operation is enabled (to start and stop operation) through serial communication.

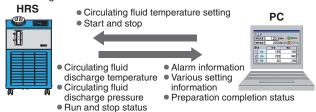

Ex. 3 Alarm and operation status (start, stop, etc.) signal output

The alarm and status generated in the product are assigned to 3 output signals based on their contents, which can then

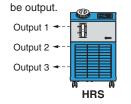


Output setting example

Output 1: Temperature rise
Output 2: Pressure rise

Output 3: Operation status (start, stop, etc.)

Ex. 2 Remote operation signal input


One of the contact inputs is used for remote operation and the other is used to monitor the flow of a flow switch. This is where their alarm outputs are taken in.

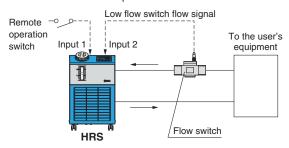

Power for flow switches (24 VDC) can be supplied by the thermo-chiller.




Application Examples

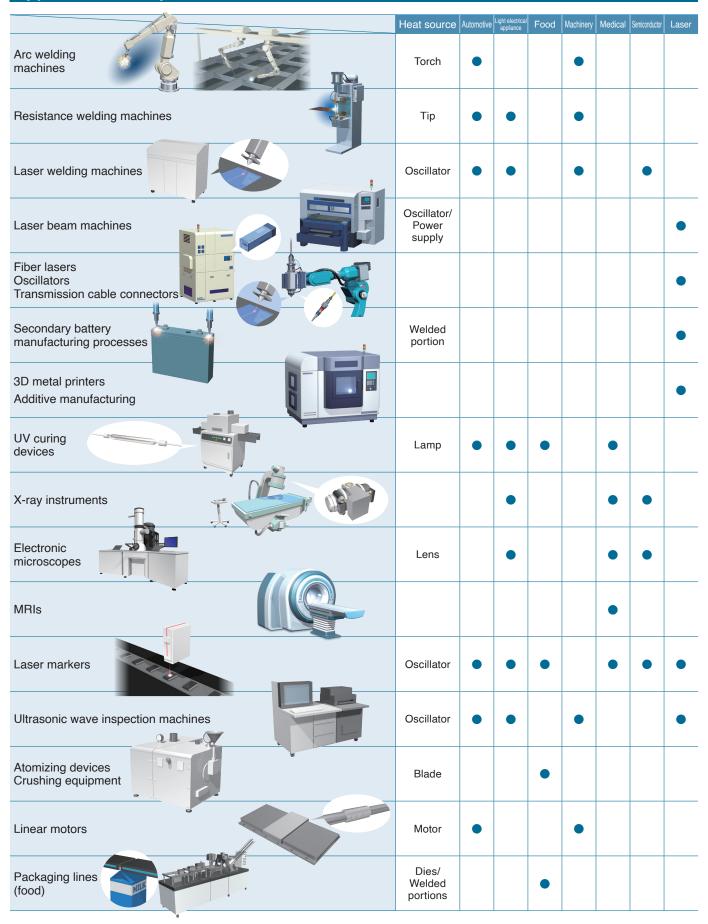



Application Examples

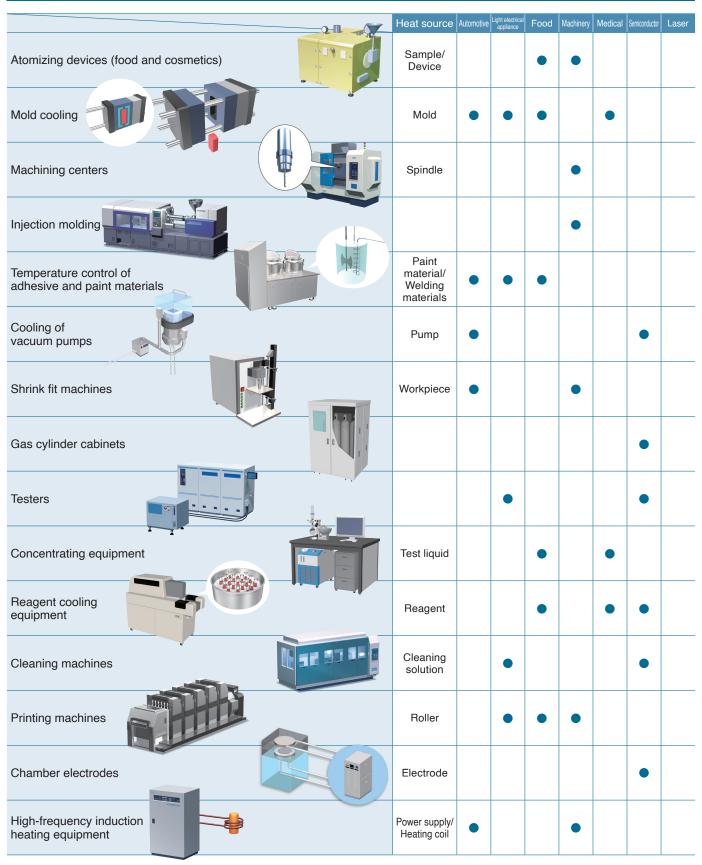



Global Supply Network

SMC has a comprehensive network in the global market.

We now have a presence of more than 500 branch offices and distributors in 83 countries and regions worldwide, such as Asia, Oceania, North/Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products and high-quality customer service. We also provide full support to local factories, foreign manufacturing companies, and Japanese companies in each country.





SMC Thermo-chiller Variations

Lots of variations are available according to the users' requirements.

Series		Temperature Set temperature		Cooling capacity [kW]									Environment	International				
		stability [°C]	range [°C]	1.2	1.8	2.4	3	4	5	6	9	10	15	20	25	28	Environment	standards
	HRSE Basic type	±2.0	10 to 30	•	•												Indoor use	(€ 분 (Only 230 VAC type)
	HRS Standard type	±0.1	5 to 40	•	•	•	•	•	•	•							Indoor use	(€ 본동 . (Only 60 Hz)
	HRS090 Standard type	±0.5	5 to 35								•						Indoor use	(€ 분 (400 V as standard)
	HRS100/150 Standard type	±1.0	5 to 35									•	•				Outdoor installation IPX4	(€ 년동 (400 V as standard)
	HRSH090 Inverter type	±0.1	5 to 40								•						Indoor use	C € 보옵 (400 V as standard, 200 V as an option) (()) (Only 200 V as an option)
	HRSH Inverter type	±0.1	5 to 35									•	•	•	•	•	Outdoor installation IPX4	C € ĽK (400 V as standard, 200 V as an option)

Circulating Fluid/Facility Water Line Equipment

Circulating Fluid Line Power supply (24 VDC) available Terminal block Particle Filter Circulating fluid return port Bypass valve User's **Pressure Switch** equipment Valve **Fittings and Tubing** Circulating fluid Facility Water Line (Water-cooled) Power supply (24 VDC) available Terminal block Facility water outlet User's equipment Facility water inlet For the control of pressure and flow rate: The digital display makes these aspects **visible**. **Pressure Switch Flow Switch**

Flow Switch: Monitors the flow rate and temperature of the circulating fluid and facility water

Refer to the Web Catalogue for details

3-Colour Display Digital Flow Switch for Water PF3W Integrated with temperature sensor PVC Piping

3-Colour Display
Electromagnetic Type Digital Flow Switch LFE

Digital Flow Switch for
Deionised Water and Chemical Liquids PF2D
4-Channel Flow Monitor PF2 200



Pressure Switch: Monitors the pressure of the circulating fluid and facility water

Refer to the Web Catalog for details.



2-Colour Display High-Precision Digital Pressure Switch *ISE80*







Particle Filter



Fittings and Tubing

S Coupler/Stainless Steel (Stainless Steel 304) KKA

Stainless Steel 316









Series	Material		
Т	Nylon		
TU	Polyurethane		
TH	FEP (Fluoropolymer)		
TD	Modified PTFE (Soft fluoropolymer)		
TL	Super PFA		
TLM	PFA		



















CONTENTS

HRS Series Standard Type



Thermo-chiller HRS Series

How to Order/Specifications	
Single-phase 100/115 VAC	· p. 11
Single-phase 200 to 230 VAC	· p. 13
Cooling Capacity ·····	· p. 15
Heating Capacity ·····	· p. 17
Pump Capacity/Required Facility Water Flow Rate ······	· p. 20
Dimensions ·····	· p. 21
Recommended External Piping Flow	· p. 25
Cable Specifications·····	· p. 25
Operation Display Panel ·····	-
Alarm·····	· p. 26
Communication Functions	· p. 27
Options	
With Earth Leakage Breaker ·····	· p. 28
With Automatic Fluid Fill Function	· p. 28
Applicable to Deionised Water Piping	· p. 28
High-Pressure Pump Mounted·····	· p. 28
SI Unit Only ·····	· p. 30
High-Temperature Environment Specification	· p. 30

Ontion	al Ac	റമാവ	ries

① Anti-Quake Bracket p. 33	
② Piping Conversion Fitting	
(For Air-Cooled Refrigeration/Water-Cooled Refrigeration) p. 33, 34	
$\ensuremath{\mathfrak{3}}$ Piping Conversion Fitting (For Option) p. 34	
•	
⑤ Bypass Piping Set ····· p. 35	
⑥ Power Supply Cable p. 36	
⑦ DI Filter Set p. 37	
$\ensuremath{\texttt{\$}}$ Electric Resistance Control Set $\cdots\cdots$ p. 38	
$\textcircled{9} \ Electric \ Conductivity \ Sensor \ Set/Electric \ Conductivity \ Control \ Set \cdots \cdots p. \ 39$	
10 Particle Filter Set p. 40	
① Drain Pan Set (With Water Leakage Sensor) p. 41	
① Connector Cover p. 42	
① Analogue Gateway Unit ···· p. 42	
(4) Replacement Type Dustproof Filter Set p. 42	
ⓑ Separately-Installed Power Transformer p. 43	
16 Filter for Circulating Fluid Fill Port p. 44	
Cooling Capacity Calculation	
Required Cooling Capacity Calculation p. 45	
Precautions on Cooling Capacity Calculation p. 46	
Circulating Fluid Typical Physical Property Values p. 46	
	② Piping Conversion Fitting (For Air-Cooled Refrigeration/Water-Cooled Refrigeration) p. 33, 34 ③ Piping Conversion Fitting (For Option) p. 34 ④ Concentration Meter p. 35 ⑤ Bypass Piping Set p. 35 ⑥ Power Supply Cable p. 36 ⑦ DI Filter Set p. 37 ⑧ Electric Resistance Sensor Set/Electric Resistance Control Set p. 38 ⑨ Electric Conductivity Sensor Set/Electric Conductivity Control Set p. 39 ⑩ Particle Filter Set p. 40 ⑪ Drain Pan Set (With Water Leakage Sensor) p. 41 ⑪ Connector Cover p. 42 ⑪ Analogue Gateway Unit p. 42 ⑪ Replacement Type Dustproof Filter Set p. 42 ⑪ Separately-Installed Power Transformer p. 43 ⑪ Filter for Circulating Fluid Fill Port p. 44

Specific Product Precautions p. 47





Thermo-chiller Standard Type Single-phase 100/115 VAC





How to Order

Air-cooled refrigeration HRS 018 - A - 10

Cooling capacity

012 Cooling capacity 1100/1300 W (50/60 Hz) **018** Cooling capacity 1500/1700 W (50/60 Hz)

* UL Standards: Applicable to only 60 Hz

Cooling method

A Air-cooled refrigeration

Pipe	thread	type	d

_	Rc
F	G (with PT-G conversion fitting set)
N	NPT (with PT-NPT conversion fitting set)

Power supply*1

Symbol	Power supply
10	Single-phase 100 VAC (50 Hz) 100 to 115 VAC (60 Hz)

*1 UL Standards: Applicable to only 60 Hz

Option

Symbol	Option		
_	None		
B With earth leakage breaker			
J With automatic fluid fill function			
M	Applicable to deionised water piping		
Т	High-pressure pump mounted*1		
W	SI unit only		

- When multiple options are combined, indicate symbols in alphabetical order.
- The cooling capacity will decrease by about 300 W from the value in the catalogue.
 - The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

Specifications * There are different values from standard specifications. Refer to pages 28 to 30 for details.


		Model		HRS012-A□-10	HRS018-A□-10		
Cooling method Air-cooled refrigeration					refrigeration		
Refrigerant				R407C (HFC)			
Refrigerant c	harge		kg	0.32	0.33		
Control meth	od			PID c	ontrol		
Ambient tem	perature/	Humidity/Altitude*1, 11		Temperature: 5 to 40 °C, Humidity: 3	0 to 70 %, Altitude: less than 3000 m		
Circulating fluid*2				Tap water, 15 % ethylene	glycol aqueous solution*4		
		perature range*1	°C	5 to	1.5		
		capacity (50/60 Hz)*3	W	1100/1300	1500/1700		
		capacity (50/60 Hz)*3	W	360	/450		
	Temper	ature stability*5	°C	±0			
Circulating		Rated flow (50/60 Hz)*6, 7	l/min	7 (0.13 MPa).	/7 (0.18 MPa)		
fluid	Pump		l/min	27/29			
system	. ump	Maximum pump head (50/60 Hz) m		14/19			
	Output W			200			
	Tank capacity L			Approx. 5			
	Port size			Rc1/2			
	Fluid co	ontact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic,			
	Fluid contact material			Carbon, PP, PE, POM, FKM, EPDM, PVC			
	Power s	vlaque		Single-phase 100 VAC (50 H			
				Allowable voltage range ±10 %*12			
Electrical		protector	Α_	15			
system	Applicable earth leakage breaker capacity*8 A			15			
		Rated operating current A		7.5/8.3	7.7/8.4		
		kVA	0.7/0.8	0.8/0.8			
Noise level (50/60 Hz)*9 dB			dB	58/55			
				Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Power supply connector 1 pc., Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1,			
Accessories				, , , , , , , , , , , , , , , , , , , ,	, ,		
Accessories				Alarm code list sticker 1, Ferrite core (for communication) 1 pc.,			
				Power supply cable: Option (sold separately) to be ordered or prepared by the user.			
Weight*10 kg				40			

- *1 It should have no condensation
- *2 If tap water is used, use water that conforms to Water Quality Standards of the Japan Refigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating type make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.
- 3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water
- Refer to the cooling capacity and heating capacity graphs on pages 15 and 17 for details.

 4. Use a 15 % ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less
- fluid temperature is 10 °C or less.

 *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C.
- *7 Required minimum flow rate for maintaining the cooling capacity or temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)
- *8 Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 28.)
- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions \rightarrow See *3.
- *10 Weight in the dry state without circulating fluids
- *11 If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 48) Item 14 "* For altitude of 1000 m or higher."
- *12 No continuous voltage fluctuation



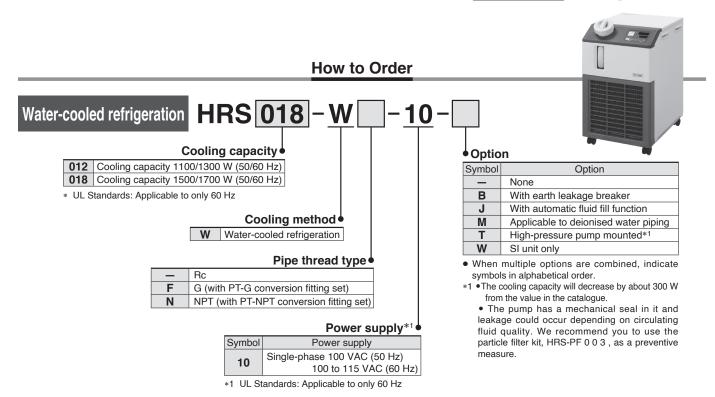

Specifications * There are different values from standard specifications. Refer to pages 28 to 30 for details.

		Model		HRS012-W□-10 HRS018-W□-10		
Cooling meth	nod			Water-cooled refrigeration		
Refrigerant				R407C (HFC)		
Refrigerant c	harge		kg	0.25	0.26	
Control meth	od			PID c	ontrol	
Ambient tem	perature/	Humidity/Altitude*1		Temperature: 5 to 40 °C, Humidity: 3	0 to 70 %, Altitude: less than 3000 m	
	Circula	ting fluid*2		Tap water, 15 % ethylene glycol aqueous solution*4		
	Set tem	perature range*1	°C	5 tc	0 40	
		capacity (50/60 Hz)*3	W	1100/1300 1500/1700		
		g capacity (50/60 Hz)*3	W	360	/450	
	Temper	rature stability*5	°C	±0).1	
Circulating		Rated flow (50/60 Hz)*6, 7	I/min	7 (0.13 MPa).		
fluid	Pump	Maximum flow rate (50/60 Hz)	I/min	27	/29	
system	1 ump	Maximum pump head (50/60 H		14/19		
		Output	W	20	00	
	Tank ca		L	Approx. 5		
	Port siz	e		Rc1/2		
	Fluid contact material			Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC		
	Temperature range °C			5 to	40	
Facility	Pressure range MPa			0.3 to 0.5		
Facility water	Required flow rate (50/60 Hz)*11 I/min			8 12		
system	Inlet-outle	t pressure differential of facility water	MPa	0.3 or		
System	Port siz	e		Rc	3/8	
	Fluid co	ontact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber		
	Power	sunnly		Single-phase 100 VAC (50 H		
	Power supply			Allowable voltage range ±10 %*12		
Electrical	Circuit protector A			15		
system		le earth leakage breaker capacity*8	Α	1		
		perating current	Α	7.5/8.3	7.7/8.4	
		ower consumption (50/60 Hz)*3	kVA	0.7/0.8	0.8/0.8	
Noise level (50/60 Hz)*9 dB				58		
Accessories				Fitting (for drain outlet) 1 pc., Input/output signal		
				Operation Manual (for installation/operation		
				Alarm code list sticker 1, Ferrite core (for communication) 1 pc.,		
				Power supply cable: Option (sold separately) to be ordered or prepared by the user.		
Weight*10 kg				40		

- *1 It should have no condensation
- *2 If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.
- ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25 °C
- Refer to the cooling capacity and heating capacity graphs on pages 15 and 17 for details. *4 Use a 15 % ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less.
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C.
- Required minimum flow rate for maintaining the cooling capacity or temperature stability The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

 *8 Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A
- product with an optional earth leakage breaker (option B) is also available. Refer to page 28.)

 *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3.
- *10 Weight in the dry state without circulating fluids
 *11 Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of 20 °C, and circulating fluid rated flow and facility water temperature of 25 °C. The actual facility water flow rate will vary depending on the operating conditions
- *12 No continuous voltage fluctuation



Thermo-chiller Standard Type Single-phase 200 to 230 VAC



HRS Series

How to Order

Air-cooled refrigeration HRS 018

Cooling capacity

012	Cooling capacity 1100/1300 W (50/60 Hz)
018	Cooling capacity 1700/1900 W (50/60 Hz)
024	Cooling capacity 2100/2400 W (50/60 Hz)
030	Cooling capacity 2600/3200 W (50/60 Hz)
040	Cooling capacity 3800/4200 W (50/60 Hz)
050	Cooling capacity 4700/5100 W (50/60 Hz)
060	Cooling capacity 4900/5900 W (50/60 Hz)

UL Standards: Applicable to only 60 Hz The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure.

Cooling method •

Air-cooled refrigeration

Pipe thread type

_	Rc
F	G (with PT-G conversion fitting set)
N	NPT (with PT-NPT conversion fitting set)

Option									
Symbol	Option	Applicable model							
_	None								
В	With earth leakage breaker	HRS012/018/024							
J	With automatic fluid fill function	030/040/050/060							
M	Applicable to deionised water piping								
Т	High-pressure pump mounted*1	HRS012/018/024/030/040							
G	High-temperature environment specification	HRS012/018/024							
W	SI unit only	HRS012/018/024 030/040/050/060							

- When multiple options are combined, indicate symbols in alphabetical order.
- *1 The cooling capacity will decrease by about 300 W from the value in the

The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

◆ Power supply*¹

Symbol	Power supply
20	Single-phase 200 to 230 VAC (50/60 Hz)

*1 UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 28 to 30 for details.

Model			HRS012-A□-20	HRS018-A□-20	HRS024-A□-20	HRS030-A□-20	HRS040-A□-20	HRS050-A□-20	HRS060-A□-20	
Cooling method			Air-cooled refrigeration							
Refrigerant				R4070	(HFC)		R410A (HFC)			
Refrigerant charge		kg	0.35	0.36	0.36	0.57	0.53	0.65	0.85	
Control method					PID control					
Ambient temperature/Hu		1, 12*و	Temperature:	5 to 40 °C, High-temp	perature environment s	pecification (option): 5	to 45 °C, Humidity: 30	to 70 %, Altitude: les	s than 3000 m	
Circulating fluid	 *2				Tap water, 15 %	ethylene glycol a	queous solution*	:4		
Set temperature		°C				5 to 40				
Cooling capacity	(50/60 Hz)*3	W	1100/1300	1700/1900	2100/2400	2600/3200	3800/4200	4700/5100	4900/5900	
Cooling capacity Heating capacity Temperature sta		W		530/650		600/640	900/1100	1100/1400	1000/1300	
		°C				±0.1				
Rated flow (5) Maximum flow r Maximum pump r Output Tank capacity Port size		l/min			7 (0.	13 MPa)/7 (0.18	MPa)			
Maximum pump h		l/min		27/29		34	/40	31/42	29/38	
L≦' ≧ Maximum pump h	nead (50/60 Hz)	m		14/19 50						
<u>ta</u> Output		W		200 550						
공 Tank capacity		L	Approx. 5							
ਰ Port size	Port size			Rc1/2						
Fluid contact ma	Fluid contact material			Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC						
Power supply Circuit protecto Applicable earth leakage I Rated operating			Single-phase 200 to 230 VAC (50/60 Hz) Allowable voltage range ±10 %							
Circuit protecto	r	Α		1	0		2	20 30		
. ఆ Applicable earth leakage I	preaker capacity*8	Α		1	0		2	0	30	
ਲ Rated operating	current	Α	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	7.9/9.6	8/11	8.9/11.5	
Rated power consumpt	ion (50/60 Hz)*3	kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.6/1.9	1.7/2.2	1.8/2.3	
Noise level (50/60 H	1z) * ⁹	dB		60/61		62/65	64/66	65/68	66/68	
Accessories			Fitting (for drain outlet) 1 pc.*11, Input/output signal connector 1 pc., Power supply connector 1 pc.*12, Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1*12, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by the user.							
Weight*10		kg		43		47	53	69	73	

- *1 It should have no condensation
- *2 If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigera-tion and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating
- type make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.

 *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water

 Refer to the cooling capacity and heating capacity graphs on pages 15 to 19 for details.
- *4 Use a 15 % ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less.
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- Required minimum flow rate for maintaining the cooling capacity or temperature stability
 The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).) Purchase an earth leakage breaker with current sensitivity of 30 mA separately.
- (A product with an optional earth leakage breaker (option B) is also available.)

 *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3.
- *10 Weight in the dry state without circulating fluids *11 It is not provided for the HRS050/060.

- *12 It is not provided for the HRS040/050/060.
 13 If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 48) Item 14 " For altitude of 1000 m or higher."



How to Order



Cooling capacity

012	Cooling capacity 1100/1300 W (50/60 Hz)
018	Cooling capacity 1700/1900 W (50/60 Hz)
024	Cooling capacity 2100/2400 W (50/60 Hz)
030	Cooling capacity 2600/3200 W (50/60 Hz)
040	Cooling capacity 3800/4200 W (50/60 Hz)
050	Cooling capacity 4700/5100 W (50/60 Hz)
060	Cooling capacity 4900/5900 W (50/60 Hz)
	•

* UL Standards: Applicable to only 60 Hz The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure.

Cooling method •

W Water-cooled refrigeration

_	Rc
F	G (with PT-G conversion fitting set)
N	NPT (with PT-NPT conversion fitting set)



Optio	• Option										
Symbol	Option	Applicable model									
_	None										
В	With earth leakage breaker	HRS012/018/024									
J	With automatic fluid fill function	030/040/050/060									
M	Applicable to deionised water piping										
Т	High-pressure pump mounted*1	HRS012/018/024/030/040									
10/	Cl unit only	HRS012/018/024									
VV	Si utili otily	030/040/050/060									
T W	High-pressure pump mounted*1 SI unit only	HRS012/018/02									

- When multiple options are combined, indicate symbols in alphabetical order.
- *1 The cooling capacity will decrease by about 300 W from the value in the catalogue.

The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

◆ Power supply*¹

Symbol	Power supply
20	Single-phase 200 to 230 VAC (50/60 Hz)

*1 UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 28 to 30 for details.

	Model		HRS012-W□-20	HRS018-W□-20	HRS024-W□-20	HRS030-W□-20	HRS040-W□-20	HRS050-W□-20	HRS060-W□-20
Cc	oling method		Water-cooled refrigeration						
Re	frigerant			R407C (HFC) R410A (HFC)					
Re	frigerant charge	0.3	0.31	0.31	0.5	0.6	0.65	0.75	
Cc	ntrol method			PID control					
An	bient temperature/Humidity/Altitu	ıde*1		Temperatur	e: 5 to 40 °C, Hu	midity: 30 to 70 9	%, Altitude: less t	than 3000 m	
	Circulating fluid*2				Гар water, 15 % (ethylene glycol a	queous solution*	:4	
	Set temperature range*1	°C		5 to 40					
le l	Cooling capacity (50/60 Hz)*3	W	1100/1300	1700/1900	2100/2400	2600/3200	3800/4200	4700/5100	4900/5900
S	Heating capacity (50/60 Hz)*3	W		530/650		400/600	700/1000	1000	/1300
S	Temperature stability*5	°C				±0.1			
Circulating fluid system	Rated flow (50/60 Hz)*6, 7	l/min			7 (0.	13 MPa)/7 (0.18	MPa)		
ΙĒ	Maximum flow rate (50/60 Hz) Maximum pump head (50/60 Hz)	l/min		27/29		34	/40	31/42	29/38
ng	Maximum pump head (50/60 Hz)	m			14/19			5	0
ati	Output	W			200			55	50
Ξ	Tank capacity	L				Approx. 5			
۱	Port size		Rc1/2						
0	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic,						
	Tidia contact material		Carbon, PP, PE, POM, FKM, EPDM, PVC						
E E	Temperature range	°C	5 to 40						
syst		MPa	0.3 to 0.5						
ter		l/min	8	12	14	15	15	16	17
Facility water system	Inlet-outlet pressure differential of facility water	MPa	0.3 or more						
∥≝	Port size		Rc3/8 Rc1/2						
굡	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber						
e l	Power supply		Single-phase 200 to 230 VAC (50/60 Hz)						
yst			Allowable voltage range ±10 %						
Electrical system	Circuit protector	Α			0		20		
<u>:</u>	Applicable earth leakage breaker capacity*8	Α			0	1		20	
ect	Rated operating current	Α	4.6/5.1	4.7/5.2	5.1/5.9	5.2/6.0	6.9/8.4	7.6/10	7.6/10.4
_		kVA	0.9/1.0	0.9/1.0	1.0/1.2	1.0/1.2	1.5/1.7	1.5/2.0	1.5/2.1
No	ise level (50/60 Hz)*9	dB		60/61		62/65	64/66	65/68	66/68
			Fitting (for drain outlet) 1 pc.*12, Input/output signal connector 1 pc., Power supply connector 1 pc.*13,						
Δα	cessories		Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1*13,						
		Alarm code list sticker 1, Ferrite core (for communication) 1 pc.,							
			Power supply cable: Option (sold separately) to be ordered or prepared by the user.						
We	eight*10	kg	43			46	53	6	7

- *2 If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration
- *2 If tap water is used, use water that conforms to water Quality Standards of the Japan Heringeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating type make-up water). Refer to "Specific Product Precautions" for other usable circulating fluids.
 *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25 °C Refer to the cooling capacity and heating capacity graphs on pages 15 to 19 for details.
- *4 Use a 15 % ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less.
 *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is rated flow, and the circulating fluid outlet and
- return port are directly connected. Installation environment and the power supply are within specification range and stable. *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C.
- *7 Required minimum flow rate for maintaining the cooling capacity or temperature stability The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)
- *8 Purchase an earth leakage breaker with current sensitivity of 30 mA separately (A product with an optional earth leakage breaker (option B) is also available.)
- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3. *10 Weight in the dry state without circulating fluids
- *11 Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of 20 °C, and circulating fluid rated flow and facility water temperature of 25 °C. The actual facility water flow rate will vary depending on the operating conditions
- *12 It is not provided for the HRS050/060.
- *13 It is not provided for the HRS040/050/060




HRS Series Standard Type


If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 48) Item 14 "* For altitude of 1000 m or higher."

Cooling Capacity


For models with high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

HRS012-A-10, HRS012-W-10 (Single-phase 100/115 VAC) (50 Hz)

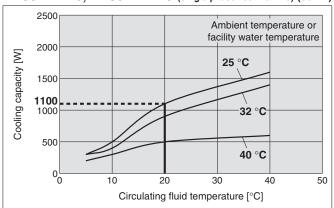


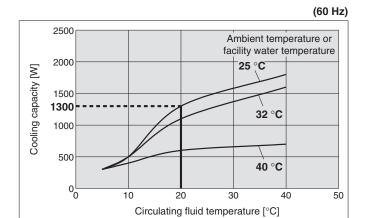


HRS018-A-10, HRS018-W-10 (Single-phase 100/115 VAC) (50 Hz)

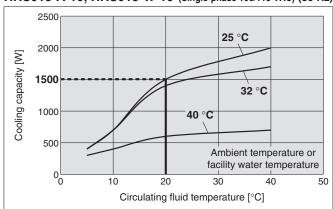


(60 Hz)

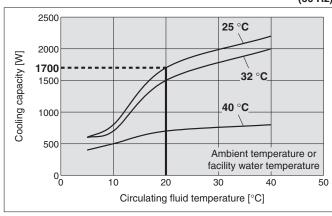


HRS012-A-20, HRS012-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

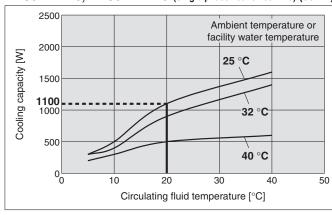


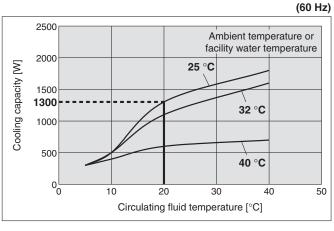

HRS018-A-20, HRS018-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

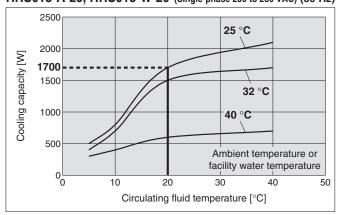

(60 Hz)

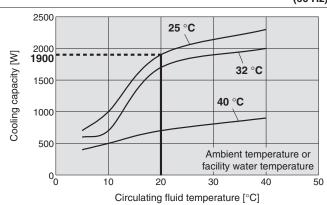


Thermo-chiller Standard Type HRS Series


* If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 48) Item 14 "* For altitude of 1000 m or higher."

Cooling Capacity


* For models with high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


HRS024-A-20, HRS024-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

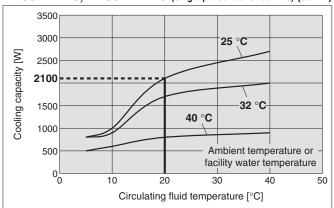

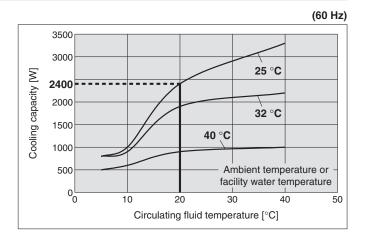


HRS030-A-20, HRS030-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

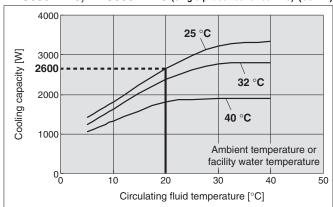


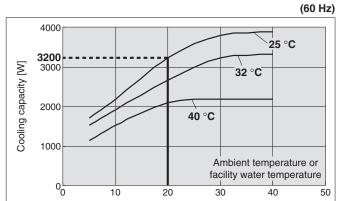


Circulating fluid temperature [°C]


HRS040-A-20, HRS040-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

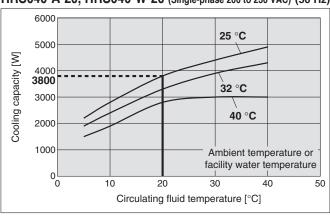

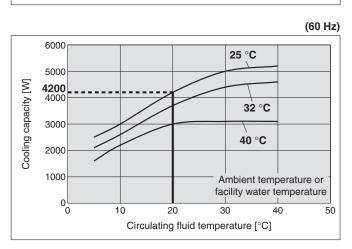

HRS050-A-20, HRS050-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

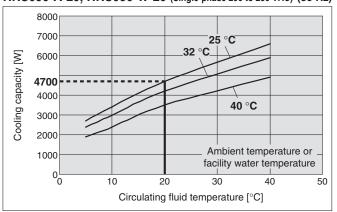

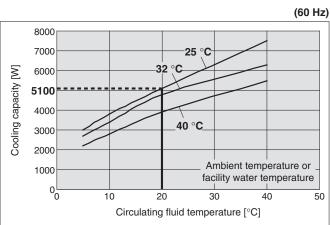


HRS Series Standard Type


If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 48) Item 14 "* For altitude of 1000 m or higher."

Cooling Capacity

* For models with high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.



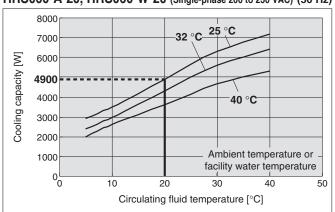

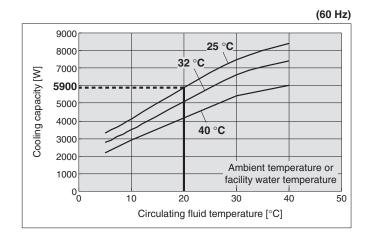

Heating Capacity

1000

800

600

400 360 200


5

Heating capacity [W]

$HRS_{018}^{012} - _{W}^{A} - 10$ (Single-phase 100/115 VAC)

Ambient


Ambient 5

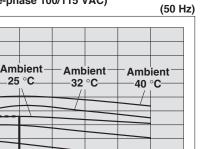


35

40

45

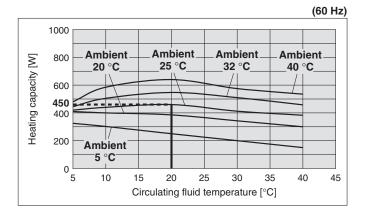


HRS 012 018 024 -20 (Single-phase 200 to 230 VAC)

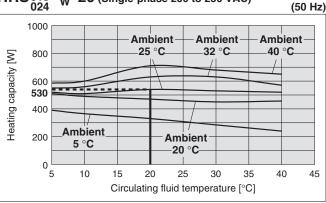


25


Circulating fluid temperature [°C]

30

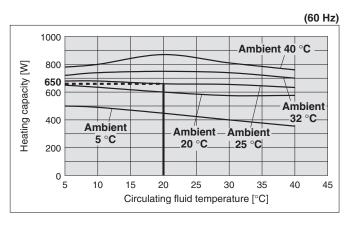



HRS030-A-20 (Single-phase 200 to 230 VAC)

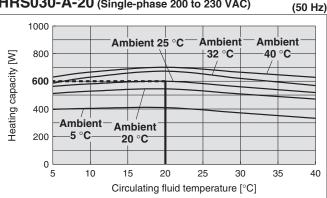


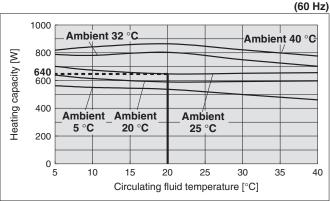



Heating Capacity

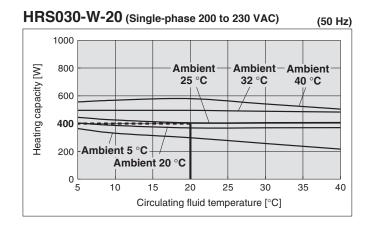


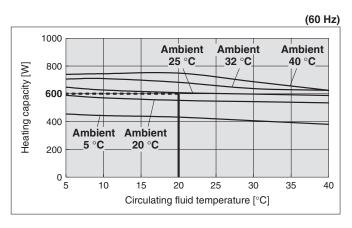


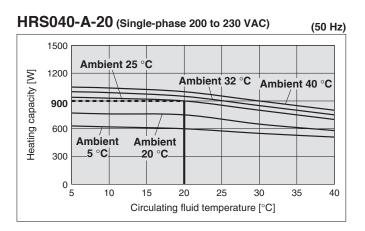


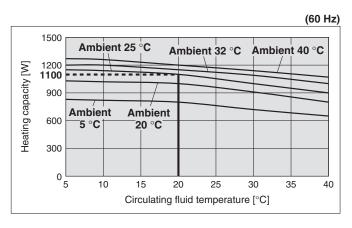

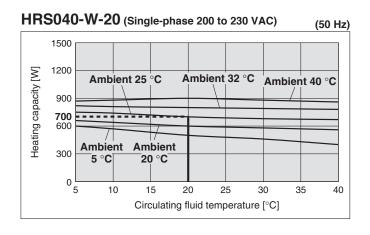

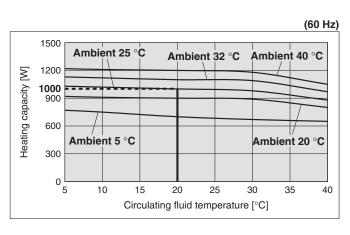


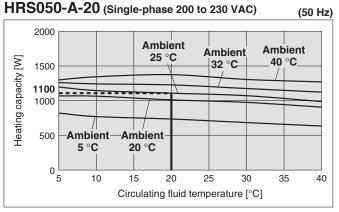


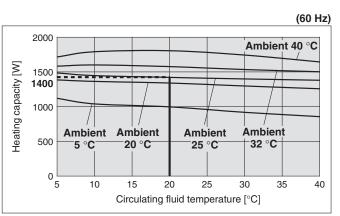



HRS Series Standard Type


Heating Capacity

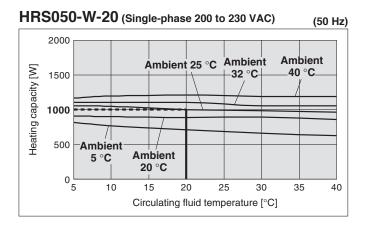


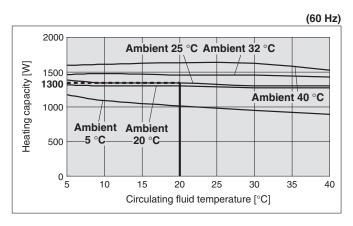

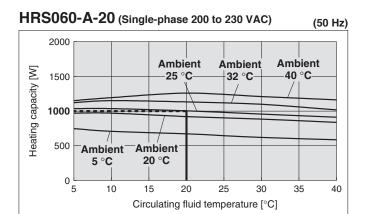

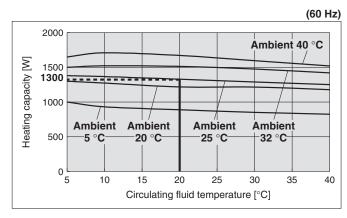


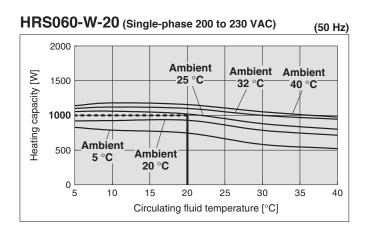

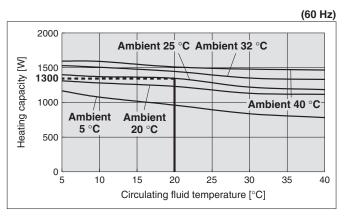


Pump Capacity


HRS₀₁₈ - A -10 (Single-phase 100/115 VAC)

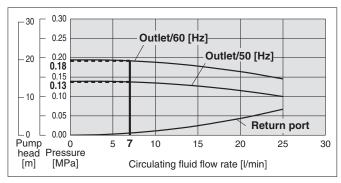

 HRS_{040}^{030} - $_{W}^{A}$ -20 (Single-phase 200 to 230 VAC)

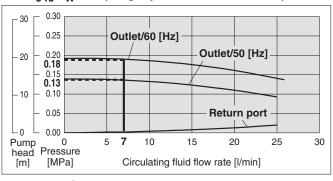


HRS060- A-20 (Single-phase 200 to 230 VAC)

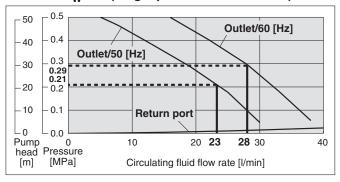


Required Facility Water Flow Rate


HRS012-W- $^{10}_{20}$, HRS018-W- $^{10}_{20}$, HRS024-W-20 HRS030-W-20, HRS040-W-20, HRS050-W-20 HRS060-W-20

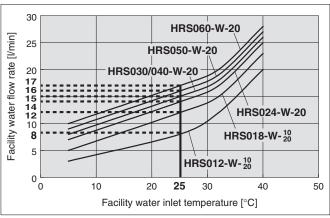

HRS $^{012}_{018}$ - $^{\rm A}_{\rm W}$ -20 (Single-phase 200 to 230 VAC)

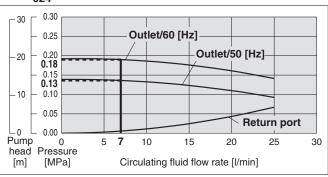


HRS050- A -20 (Single-phase 200 to 230 VAC)

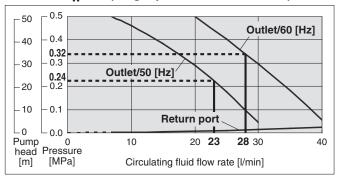

⚠ Caution

Mechanical Seal Pump


The pump used for the thermo-chiller HRS050/060 series uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

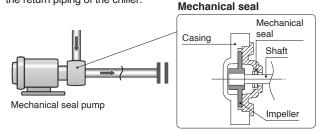


^{*} This is the facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.

HRS Series Standard Type

Dimensions

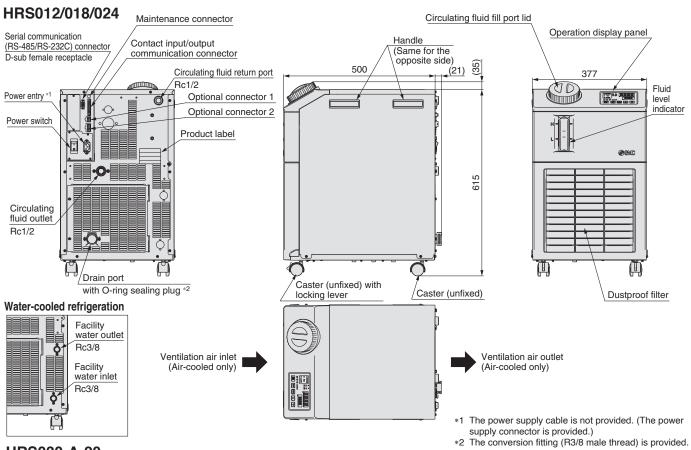

HRS030-A-20

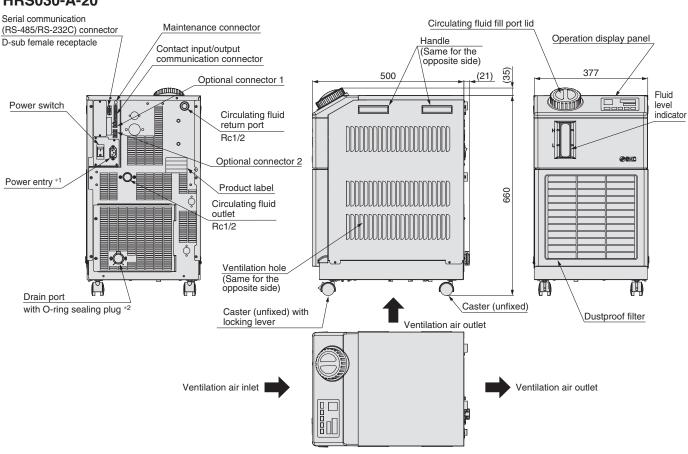


^{*1} The power supply cable is not provided. (The power supply connector is provided.)

Ventilation air outlet

^{*2} The conversion fitting (R3/8 male thread) is provided.

Dimensions

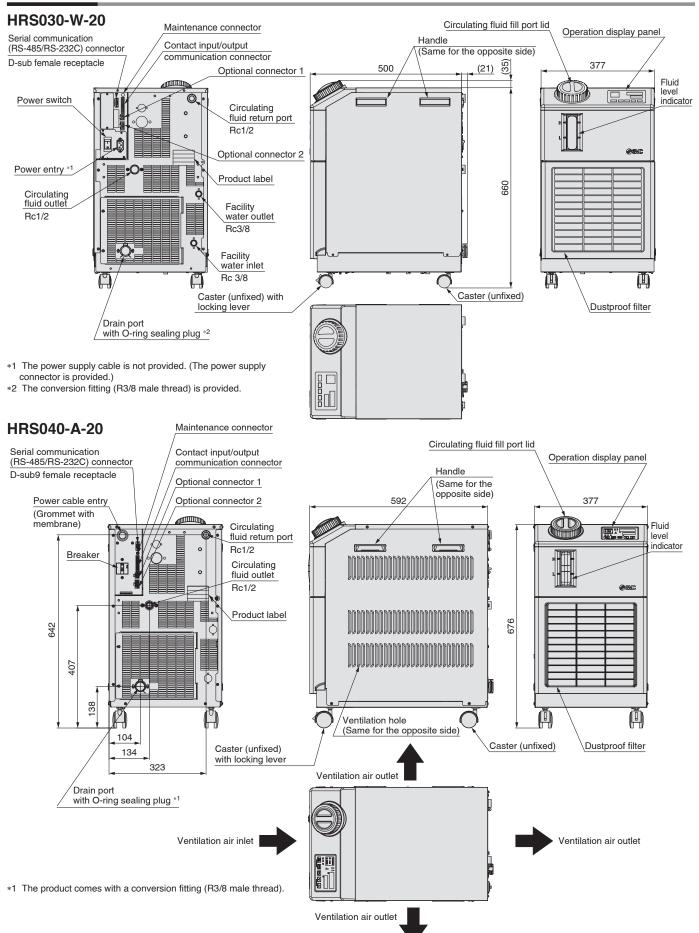

HRS Series Standard Type


Dimensions

HRS040-W-20 Maintenance connector Serial communication Contact input/output (RS-485/RS-232C) connector communication connector D-sub9 female receptacle Optional connector 1 Power cable entry Optional connector 2 (Grommet with Circulating fluid membrane) return port Rc1/2 Breaker Product label Circulating fluid outlet Rc1/2 Facility water 641 outlet Rc3/8 407 Facility water inlet 327 Rc3/8 165 138 Drain port with 104

*1 The product comes with a conversion fitting (R3/8 male thread).

134

329 345

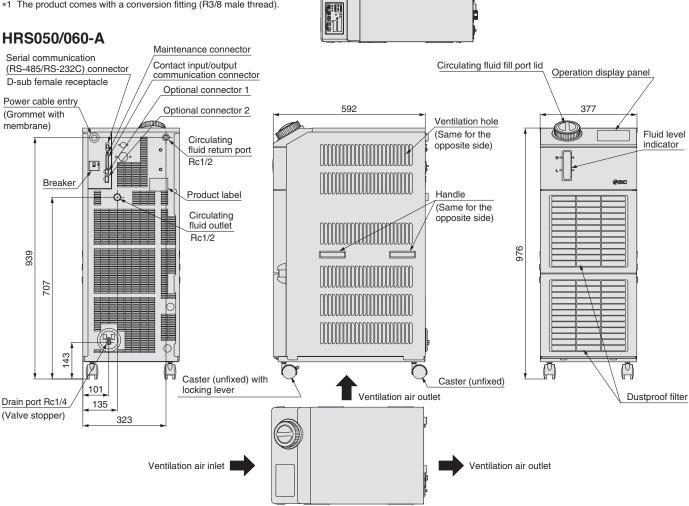

Operation display panel

377

Circulating fluid fill port lid

Fluid level indicator

Caster (unfixed)

9/9

Dustproof filter

(Same for the opposite side)

Handle

592

Caster (unfixed) with


locking lever

O-ring sealing plug *1

Ventilation air outlet

Dimensions

HRS050/060-W

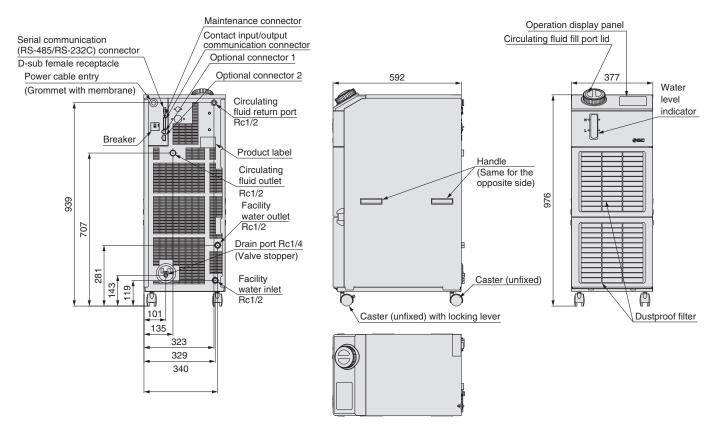






Recommended External Piping Flow

External piping circuit is recommended as shown below.

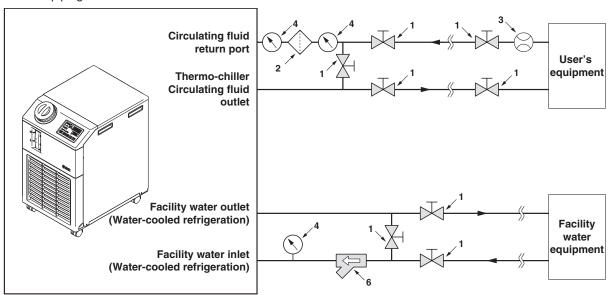

No.	Description	Size	Recommended part no.	Note		
1	Valve	Rc1/2	_ :	_		
2	Filter	Rc1/2 20 μm	HRS-PF□□□	If foreign matter with a size of 20 μ m or more are likely to enter, install the particle filter. For the recommended filter, refer to the optional accessory HRS-PF $\square\square\square$ (page 40).		
3	Flow meter	Flow meter 0 to 50 l/min —		_		
4	Pressure gauge	0 to 1.0 MPa	_	_		
5	Others (pipe, hose, etc.) Ø 15 or more		_	_		
6	Y-strainer	Rc1/2 #40	_	Install either the strainer or filter. If foreign matter with a size of 20 µm or more are likely to enter, install the particle		
6	Filter	Rc1/2 20 μm	FQ1011N-04-T020-B-X61*1	size of 20 µm or more are likely to enter, install the particle filter.		

^{*1} The filter shown above cannot be directly connected to the thermo-chiller. Install it in the user's piping system.

Cable Specifications

Power Cable Specifications

·	Rated value for thermo-	chiller		Power cable examples				
Applicable model	Power supply	Applicable breaker rated current	Terminal block screw diameter	Cable size	Recommended crimped terminal	Optional accessories*1		
HRS012-□□-10-□ HRS018-□□-10-□	Single-phase 100 VAC (50 Hz) Single-phase 100 to 115 VAC (60 Hz)	15 A			_	HRS-CA001		
HRS012-□□-20-□ HRS018-□□-20-□ HRS024-□□-20-□ HRS030-□□-20-□	Single-phase 200 to 230 VAC	10 A	M3.5	3 cores x 2.0 mm ² (3 cores x AWG14) * Including grounding cable	_	HRS-CA002		
HRS012-□□-20-□T HRS018-□□-20-□T HRS024-□□-20-□T HRS030-□□-20-□T	(50/60 Hz)	15 A		g.com.ng	_	HH3-CA002		
HRS040-□□-20-□ HRS050-□□-20-□ HRS060-W□-20-□	Single-phase 200 to 230 VAC	20 A	M4	3 cores x 3.5 mm² (3 cores x AWG12) * Including grounding cable	R5.5-4	HRS-CA004		
HRS060-A□-20-□	(50/60 Hz)	30 A	IVI	3 cores x 5.5 mm² (3 cores x AWG10) * Including grounding cable	H3.3-4	_		

^{*1} The length of HRS-CA $\square\square$ is 3 m.



Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.



No.	Description		Function			
(1)	Digital display	PV	Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes).			
	(7-segment, 4 digits)	sv	Displays the circulating fluid discharge temperature and the set values of other menus.			
2	[°C] [°F] lamp	Equip	ped with a unit conversion function. Displays the unit of display temperature (default setting: °C).			
3	[MPa] [PSI] lamp	Equip	ped with a unit conversion function. Displays the unit of display pressure (default setting: MPa).			
4	[REMOTE] lamp	Enable	es remote operation (start and stop) by communication. Lights up during remote operation.			
5	[RUN] lamp		up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or eezing function, or independent operation of the pump.			
6	[ALARM] lamp	Flashe	es with buzzer when alarm occurs.			
7	[🗏] lamp	Lights	Lights up when the surface of the fluid level indicator falls below the L level.			
8	[4] lamp	Equip	Equipped with a timer for start and stop. Lights up when this function is operated.			
9	[C] lamp		ped with a power failure auto-restart function, which restarts the product automatically after stopped due ower failure, is provided. Lights up when this function is operated.			
10	[RUN/STOP] key	Makes	s the product start or stop.			
11)	[MENU] key	[MENU] key Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values).				
12	[SEL] key	Chang	anges the item in menu and enters the set value.			
13	[▼] key	Decre	ecreases the set value.			
14)	[▲] key	Increa	ses the set value.			
15)	[PUMP] key	Press th	e [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).			
16	[RESET] key	Press	the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] indicator is reset.			

Alarm

This unit has 3 5 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Alarm code	Alarm message	Operation status
AL01	Low level in tank	Stop*1
AL02	High circulating fluid discharge temperature	Stop
AL03	Circulating fluid discharge temperature rise	Continue*1
AL04	Circulating fluid discharge temperature drop	Continue*1
AL05	High circulating fluid return temperature (60 °C)	Stop
AL06	High circulating fluid discharge pressure	Stop
AL07	Abnormal pump operation	Stop
AL08	Circulating fluid discharge pressure rise	Continue*1
AL09	Circulating fluid discharge pressure drop	Continue*1
AL10	High compressor intake temperature	Stop
AL11	Low compressor intake temperature	Stop
AL12	Low super heat temperature	Stop
AL13	High compressor discharge pressure	Stop
AL15	Refrigerating circuit pressure (high pressure side) drop	Stop
AL16	Refrigerating circuit pressure (low pressure side) rise	Stop
AL17	Refrigerating circuit pressure (low pressure side) drop	Stop
AL18	Compressor overload	Stop
AL19*2	Communication error*2	Continue*1

Alarm code	Alarm message	Operation status	
AL20	Memory error	Stop	
AL21	DC line fuse cut	Stop	
AL22	Circulating fluid discharge temperature sensor failure	Stop	
AL23	Circulating fluid return temperature sensor failure	Stop	
AL24	Compressor intake temperature sensor failure	Stop	
AL25	Circulating fluid discharge pressure sensor failure	Stop	
AL26	Compressor discharge pressure sensor failure	Stop	
AL27	Compressor intake pressure sensor failure	Stop	
AL28	Pump maintenance	Continue	
AL29	Fan motor maintenance*3	Continue	
AL30	Compressor maintenance	Continue	
AL31*2	Contact 1 input signal detection	Stop*1	
AL32*2	Contact 2 inputs signal detection	Stop*1	
AL33*4	Water leakage	Stop*1	
AL34*4	Electric resistance rise	Continue	
AL35*4	Electric resistance drop	Continue	
AL36*4	Electric resistance sensor failure	Continue	

- *1 "Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, refer to the Operation Manual.

 *2 "AL19, AL31, AL32" are disabled in the default setting. If this function is necessary, it should be set by the user, referring to the Operation Manual.
- *3 For water-cooled models, the alarm is not activated.
- *4 This alarm function can be used when the option (sold separately) is used.



Communication Functions

Contact Input/Output


Item		Specifications							
Connector type (to the	product/to the socket (Accessory))	MC1,5/12-GF-3,5 / MC1,5/12-STF-3,5 (made by PHOENIX CONTACT)							
	Insulation method	Photocoupler							
	Rated input voltage	24 VDC							
Input signal	Operating voltage range	21.6 VDC to 26.4 VDC							
	Rated input current	5 mA TYP							
	Input impedance	4.7 kΩ							
Contact output	Rated load voltage	48 VAC or less/30 VDC or less							
signal	Maximum load current	500 mA AC/DC (Resistance load)							
Signal	Minimum load current	5 VDC 10 mA							
Out	put voltage	24 VDC ±10 % 0.5 A MAX							
Circ	cuit diagram	To the thermo-chiller User's equipment side 24 VDC (0.5 A MAX)*2 11 24 VCOM output 24 VCOM output 24 VCOM output Run/Stop signal Not set when shipping from factory Operation status signal Remote signal Alarm signal Alarm signal							

- *1 The pin numbers and output signals can be set by the user. For details, refer to the Operation Manual.
- *2 When using with optional accessories, depending on the accessory, the allowable current of 2 4 VDC devices will be reduced. Refer to the operation manual of the optional accessories for details.

Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out.

For details, refer to the Operation Manual for communication.

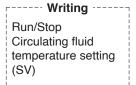

Circulating fluid present temperature

Circulating fluid present temperature Circulating fluid discharge pressure Electric resistance *1 Status information Alarm occurrence information

*1 When the optional accessory, "electric resistance sensor set" is used.

Item	Specifications					
Connector type	D-sub 9-pin, Female connector (Mounting screw: M2.6 x 0.45)					
Protocol	Modicon Modbus compliant/Simple communication protocol					
Standards	EIA standard RS-485	EIA standard RS-232C				
Circuit diagram	To the thermo-chiller User's equipment side	To the thermo-chiller User's equipment side				

^{*} The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual. Do not connect other than in the way shown above, as it can result in failure.



HRS Series **Options**

* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.




With Earth Leakage Breaker

Earth leakage breaker

In the event of a short circuit, overcurrent or overheating, the earth leakage breaker will automatically shut off the power supply.

Applicable model	Applicable model HRS012/018-□□-10-B		HRS040-□□-20-B HRS050-□□-20-B HRS060-W□-20-B	HRS060-A□-20-B	
Rated current sensitivity [mA]	30	30	30	30	
Rated shutdown current [A]	15	10	20	30	
Short circuit display method		Mechanic	al button		

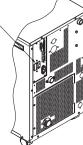



Option symbol


With Automatic Fluid Fill Function

With automatic fluid fill function

By installing this at the automatic fluid fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a fluid fill while the circulating fluid is decreasing.

Applicable model	HRS012/018/024/030/040/050/060-□□-□-J
Fluid fill method	Built-in solenoid valve for automatic fluid fill
Fluid fill pressure [MPa]	0.2 to 0.5

* When the option, with automatic fluid fill function, is selected, the weight increases by 1 kg.

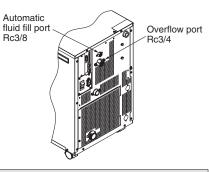



Applicable to Deionised Water Piping

Applicable to deionised water piping

Contact material of the circulating fluid circuit is made from non-copper materials.

Select this when using deionised water with a resistance of 1 MΩ·cm or more (1 μs/cm or less).

Applicable model	HRS012/018/024/030/040/050/060-□□-□-M
Contact material for circulating fluid	Stainless steel (including heat exchanger brazing), Alumina ceramic, SiC, Carbon, PP, PE, POM, FKM, NBR, EPDM, PVC

* No change in external dimensions

Option symbol

High-Pressure Pump Mounted

□−□□− T /MT

High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance.

Cooling capacity will decrease by heat generated in the pump.

* The HRS050/060 cannot be selected.

Applicable model			HRS012/018-□□-10-T/MT	HRS012/018/024/030-□□-20-T	HRS012/018/024/030-□□-20-MT*1	HRS040-□□-20-T/MT		
	Rated flow (50/60 Hz)*2, 3	I/min	7 (0.36 MPa)/10 (0.42 MPa)	(0.36 MPa)/10 (0.42 MPa) 10 (0.44 MPa)/14 (0.40 MPa) 10 (0.32 MPa)/14 (0.32 MPa) 23		23 (0.18 MPa)/28 (0.23 MPa)		
Pump	Maximum flow rate (50/60 Hz)	I/min		18/22				
Fullip	Maximum pump head (50/60 Hz)	m	55	70	60	50		
	Output	W	320	320 550				
Circuit	Circuit protector		15	20				
Recommended earth leakage breaker capacity A		Α	15 20					
Coolin	g capacity*4	W	The cooling capacity reduces about 300 W from the value in the catalogue. (due to an increase in the heat generation of the pump)					


- *1 -MT: Applicable to deionised water piping + High-pressure pump
- *2 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C.
- *3 Required minimum flow rate for maintaining the cooling capacity or temperature stability
- *4 Cooling capacity will decrease as pump power increases.
- * When the option, high-pressure pump mounted, is selected, the weight increases by 4 kg for -10 type and 6 kg for -20 type.
- * No change in external dimensions




HRS Series

Pump Capacity


HRS012/018-□□-10-T/MT

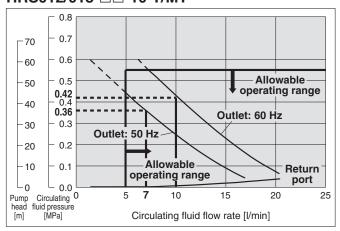

HRS012/018/024-□□-20-T

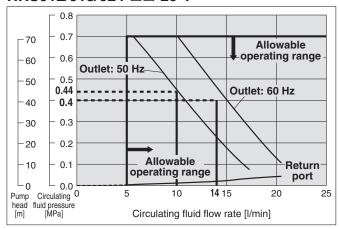


HRS030-□□-20-T

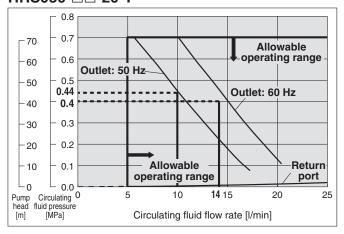

HRS040-□□-20-T/MT


29

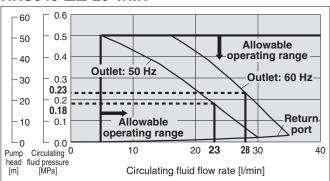


⚠ Caution

Mechanical Seal Pump


The pump used for the option T/MT of the thermo-chiller HRS 0 1 2 to 040 uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

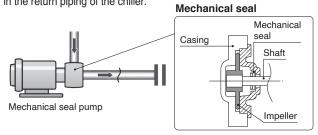

HRS012/018/024-□□-20-MT

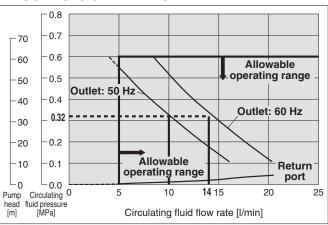


HRS030-□□-20-MT

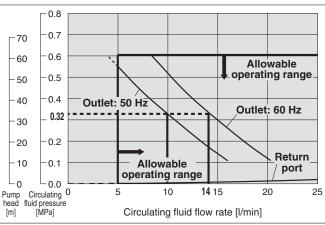

Options HRS Series

* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.



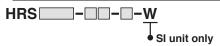

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only. If this option is not selected, a product with a unit selection function will be provided by default.

* No change in external dimensions

Option symbol

High-Temperature Environment Specification

A □-20-G

High-temperature environment specification

Applicable model	HRS012/018/024-A□-20-G
Cooling method	Air-cooled refrigeration
Power supply	Single-phase 200 to 230 VAC (50/60 Hz)

* No change in external dimensions

* The HRS030/040/050/060 cannot be selected.

This product makes use at ambient temperatures of up to 45 °C possible.

Also increases cooling capacity at ambient temperature of 32 °C. (Cooling capacity is equal to standard products at ambient temperatures of less than 32 °C.)

> * Ventilation slots are added to thermo-chiller side panels. For this reason, please provide 300 mm of ventilation space next to the side panels (do not install with sides touching walls).





Ventilation slots are added to side panels (on both sides).


Cooling Capacity


* If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 48) Item 14 "* For altitude of 1000 m or higher."


* For models with high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

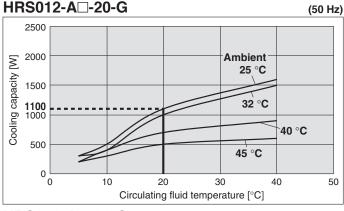


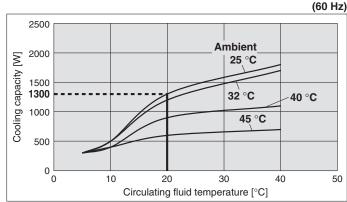

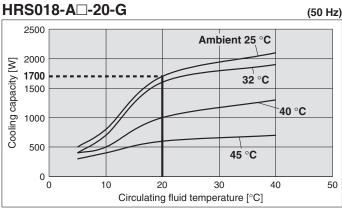

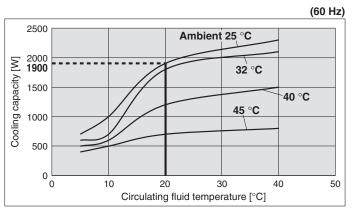

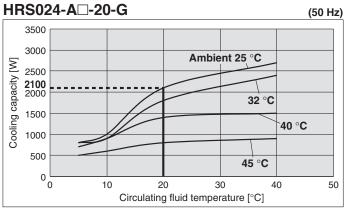

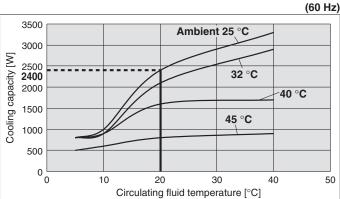

HRS Series **Optional Accessories**

Applicable Model List/Air-Cooled Refrigeration

- Optional accessories applicable to this model
- ★ Optional accessories recommended to be used for this model

No.	Descr	ription	Part no.			HRS024-A-20	HRS030-A-20	HRS040-A-20	HRS050-A-20 HRS060-A-20	Opt	tion	Page	
				-10	-20					(for -J)	(for -T)		
(1)	Anti-quake bracket		HRS-TK001	•	•	•	•	_	_	_	_	33	
	7 mm quanto praemot		HRS-TK002	<u> </u>	-	_	_	•	•	_		"	
		G thread conversion fitting set	HRS-EP001	•	•	•	•	•	_	_	_		
2	Piping conversion fitting	NPT thread conversion fitting set	HRS-EP002	•	•	•	•	•	_	_	_	33	
٠	(for air-cooled refrigeration)	G thread conversion fitting set	HRS-EP009	_	_	_	_	_	•		_		
		NPT thread conversion fitting set	HRS-EP010	-	-	_	_	_	•	_	_		
	Piping conversion fitting*1	G thread conversion fitting set	HRS-EP005	_	<u> </u>	_	_	_	_	•	_		
3	(for automatic fluid fill port)	NPT thread conversion fitting set	HRS-EP006	_	<u> </u>	-	_	_	_	•	_	34	
	Piping conversion fitting*2	G thread conversion fitting set	HRS-EP007	_	_	_	_	_	_	_	•] "	
	(for drain outlet)	NPT thread conversion fitting set	HRS-EP008	_	-	_	_	_	_	_	•		
4	Concentration meter		HRZ-BR002	•	•	•	•	•	•	•	•	35	
(5)	Bypass piping set		HRS-BP001	•	•	•	•	_	_	_	_	35	
	Dypass piping set		HRS-BP004	_	_	_	_	•	•	_	_	00	
		For single-phase 100/115 VAC type	HRS-CA001	•	-	_	_	_	_		_		
	Power supply cable	For single-phase 200 VAC type	HRS-CA002	_	•	•	•	_*3	_*3	_	_		
6	Tower supply cable	For single-phase 100/115 VAC type	HRS-CA003	•	-	_	_	_	_	_	_	36	
		For single-phase 200 VAC type	HRS-CA004	_	-	_	_	•	●*4		_		
	Retaining clip		HRS-S0074	•	•	•	•	_	_		_		
(7)	DI filter set		HRS-DP001	•	•	•	•	•	•		_	37	
<i>(</i>)) Di liller set		HRS-DP002	•	•	•	•	•	•	_	_	37	
	Electric resistance sensor set		HRS-DI001	•	•	•	•	•	•		_		
(8)		With control function/bypass	HRS-DI003	•	•	•	•	•	_	_	_	- 38	
0	Electric resistance control set	With bypass	HRS-DI004	•	•	•	•	•	_	_		50	
		With control function	HRS-DI005	•	•	•	•	•	•	_	_		
	Electric conductivity sensor set		HRS-DI008	•	•	•	•	•	•	_	–		
9	Electric conductivity control set	With control function/bypass	HRS-DI009	•	•	•	•	_	_	_	-	39	
	Liectific conductivity control set	With control function	HRS-DI011	•	•	•	•	•	•				
		(#5) OUT side	HRS-PF001	•	•	•	•	•	•	_	_		
(10)	Particle filter set	(#10) OUT side	HRS-PF002	_	-	_	_	_	•	_	_	40	
10	i ditiole liiter set	(#5) IN side	HRS-PF003	•	•	•	•	•	*	_	*] 40	
		(#10) IN side	HRS-PF004	-	-	_	_	_	*		*		
(11)	Drain pan set	With water leakage sensor	HRS-WL001	•	•	•	•	_	_	_	_	41	
11)	Diaiii paii set	Willi water leakage serisor	HRS-WL002	-	-	_	_	•	•		–		
(12)	Connector cover		HRS-BK001	•	•	•	•	_	_	_	_	42	
(12)	Connector cover		HRS-BK002	_	-	_	_	•	•	_	_	42	
13	Analogue gateway unit		HRS-CV001	•	•	•	•	•	•	_	_	42	
14)	Replacement type dustproof filter set		HRS-FL001	•	•	•	_	_	_	_	_	42	
·•	Replacement type dustproof filter		HRS-FL002	•	•	•	_	_	_	_	_	742	
			IDF-TR1000-1	•	-	_	_			_	_		
			IDF-TR1000-2	•	-	_	_				_		
	0		IDF-TR1000-3	•	_	_	_				_	1	
15)	Separately-installed*5 power transformer		IDF-TR1000-4	•	_	_	_	_	*3		_	43	
			IDF-TR2000-9		•	•	•				_		
			IDF-TR2000-10	_	•	•	•			_	_		
			IDF-TR2000-11	_	•	•	•			_	_		
(16)	Filter for circulating fluid fill port		HRS-PF007	•	•	•	•	•	•	•	•	44	

^{*1} When option J is selected.

^{*3} For the HRS040/050/060 models: To be prepared by the user.

*4 Not applicable for the HRS060-A□-20. To be prepared by the user.

*5 This product does not have CE/UKCA marking and is not compliant with UL standards.



^{*2} When option T or the HRS050/060 is selected.

Applicable Model List/Water-Cooled Refrigeration

- Optional accessories applicable to this model
 ★ Optional accessories recommended to be used for this model

No.	Description		Part no.)12-W)18-W	HRS024-W-20	HRS030-W-20	HRS040-W-20	HRS050-W-20 HRS060-W-20	Opt	tion	Page	
				-10	-20				11110000 11 20	(for -J) (for -T)			
(1)	Anti-quake bracket		HRS-TK001	•	•	•	•	_	_	_	_	33	
	7 IIII quano si donot		HRS-TK002		_	_	_	•	•	_	_	"	
		G thread conversion fitting set	HRS-EP003	•	•	•	•	•	_	_	_]]	
2	Piping conversion fitting (for water-cooled refrigeration)	NPT thread conversion fitting set	HRS-EP004	•	•	•	•	•	-	_	_	34	
		G thread conversion fitting set	HRS-EP011	_	_	_	_	-	•	_	_	04	
		NPT thread conversion fitting set	HRS-EP012		_	_	_	_	•		_		
	Piping conversion fitting*1	G thread conversion fitting set	HRS-EP005	_	_	-	1	_	•	•	_		
3	(for automatic fluid fill port)	NPT thread conversion fitting set	HRS-EP006	_	_	_	_	_	•	•	_	34	
(3)	Piping conversion fitting*2	G thread conversion fitting set	HRS-EP007	-	_	_	_	_	_	_	•	34	
	(for drain outlet)	NPT thread conversion fitting set	HRS-EP008	-	_	_	_	-	-	_	•		
4	Concentration meter		HRZ-BR002	•	•	•	•	•	•	•	•	35	
			HRS-BP001	•	•	•	•	_	_	_	_		
(5)	Bypass piping set		HRS-BP004	_	_	_	_	•	•	_	_	35	
		For single-phase 100/115 VAC type	HRS-CA001	•	_	_	_	_	_	_	_		
		For single-phase 200 VAC type	HRS-CA002	_	•	•	•	_*3	_*3	_	_	1	
6	Power supply cable	For single-phase 100/115 VAC type	HRS-CA003	•	_	_	_	_	_	_	_	36	
		For single-phase 200 VAC type	HRS-CA004		_	_	_	•	● *4	_	_	1	
	Retaining clip	1	HRS-S0074	•	•	•	•	_	_	_	_		
	riotag onp		HRS-DP001	•	•	•	•	•	•	_	_		
7	DI filter set		HRS-DP002		•	•		•	•	_		37	
	Electric resistance sensor set		HRS-DI001		•	•		•	•		_		
	Liectific resistance sensor set	With control function/bypass	HRS-DI003		•	•		•	_	_		1	
8	Electric resistance control set	lactric resistance control set	With bypass	HRS-DI003		•	•	•	•	_		_	38
		With control function	HRS-DI004		•	•	•	•	•			-	
_	Electric conductivity sensor set			•	•	•	•	•	•			_	
	Electric conductivity sensor set		HRS-DI008	-	-	_	•	_	_	_		39	
9	Electric conductivity control set	With control function/bypass	HRS-DI009	•	•	•		_	_	_	_		
_		With control function	HRS-DI011	•	•	•	•	•	•		_		
		(#5) OUT side	HRS-PF001	•	•	•	•	•	•	_	_	-	
10	Particle filter set	(#10) OUT side	HRS-PF002	-	_	_		_	•	_	_	40	
		(#5) IN side	HRS-PF003	•	•	•	•	•	*	_	*	1	
		(#10) IN side	HRS-PF004	<u> </u>	_	_	_		*		*		
11)	Drain pan set	With water leakage sensor	HRS-WL001	•	•	•	•	_	_		_	41	
			HRS-WL002		_	_		•	•				
(12)	Connector cover		HRS-BK001	•	•	•	•	_	_	_	_	42	
			HRS-BK002	_	_	_	_	•	•	_	_		
13	Analogue gateway unit		HRS-CV001	•	•	•	•	•	•	_	_	42	
14)	Replacement type dustproof filter set		_	_	_	_	_	_	_	_	_	_	
	Replacement type dustproof filter		_	_	_	_	_	_	_	_	_		
			IDF-TR1000-1	•	_		-			_	_		
			IDF-TR1000-2	•	_	_	_			_			
	0		IDF-TR1000-3	•	_	_	_			_	_		
15)	Separately-installed*5 power transformer		IDF-TR1000-4	•	_	_	_	_	*3	_	_	43	
			IDF-TR2000-9	-	•	•	•			_	_		
			IDF-TR2000-10	_	•	•	•			_	_	1	
			IDF-TR2000-11	-	•	•	•			_	_		
16	Filter for circulating fluid fill port		HRS-PF007	•	•	•	•	•	•	•	•	44	


^{*1} When option J is selected.
*2 When option T or the HRS050/060 is selected.
*3 For the HRS040/050/060 models: To be prepared by the user.
*4 Not applicable for the HRS060-A□-20. To be prepared by the user.
*5 This product does not have CE/UKCA marking and is not compliant with UL standards.




1 Anti-Quake Bracket

This bracket can be used to reduce product damage in the case of an earthquake. An anchor bolt (M 8) suitable for the flooring material should be prepared separately by the user. (Anti-quake bracket thickness: 1.6 mm)

			[mm]
Part no. (per unit)	Applicable model	Α	В
HRS-TK001	HRS012-□□-□ HRS018-□□-□ HRS024-□□-□	555	(590)
	HRS030-□□-□	546	(581)
	HRS040-□□-□	630	(675)
HRS-TK002	HRS050-□□-□ HRS060-□□-□	664	(698)

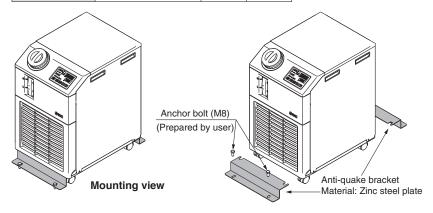

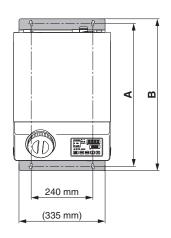

2 Piping Conversion Fitting (For Air-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet HRS012-A□-□, HRS018-A□-□, HRS024-A□-□, HRS030-A□-□, HRS040-A□-□

This fitting changes the port size for circulating fluid from Rc 1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


	Applicable model	
UPC EDO01	G thread conversion fitting set	HRS012-A-□
HN3-EP001	d thead conversion litting set	
	NPT thread conversion fitting set	HRS024-A-□
HRS-FP002		HRS030-A-□
11110 E1 002	The Famous conversion many cor	HRS040-A-□


HRS050-A□-□, HRS060-A□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP009 G thread conversion fitting set		HRS050-A-□
HRS-EP010	NPT thread conversion fitting set	HRS060-A-□

When the option, with automatic fluid fill function "-J", is selected, purchase ③ piping conversion fitting (for option), too.

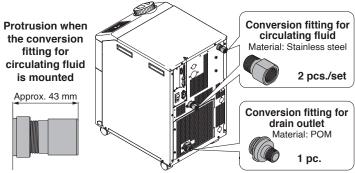

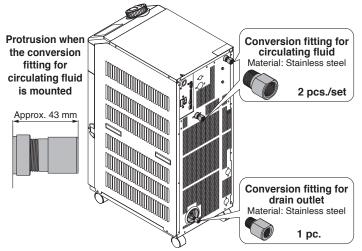



② Piping Conversion Fitting (For Water-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for facility water + Conversion fitting for drain outlet HRS012-W□-□, HRS018-W□-□, HRS024-W□-□, HRS030-W□-□, HRS040-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP003	G thread conversion fitting set	HRS012-W-□ HRS018-W-□ HRS024-W-□
HRS-EP004 NPT thread conversion fitting s		HRS030-W- HRS040-W-

When the options, with automatic fluid fill function "-J", or high-pressure pump mounted "-T" are selected, purchase 3 piping conversion fitting (for option), too.


HRS050-W□-□, HRS060-W□-□

This fitting changes the port size for circulating fluid or facility water from Rc1/2 to G1/2 or NPT1/2 and for drain from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP011 G thread conversion fitting set		HRS050-W-□
HRS-EP012	NPT thread conversion fitting set	HRS060-W-□

When the option, with automatic fluid fill function "-J", is selected, purchase 3 piping conversion fitting (for option), too.

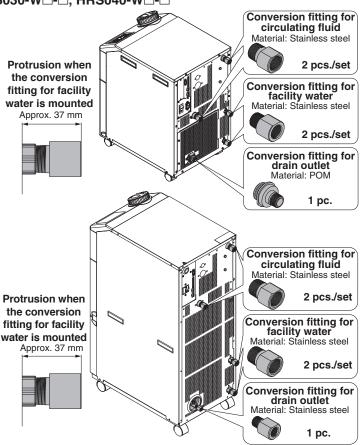

③ Piping Conversion Fitting (For Option)

■ Conversion fitting for automatic fluid fill port

This fitting changes the port size for the option, with automatic fluid fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.


It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

·				
Part no.		Applicable model		
HRS-EP005	G thread conversion fitting set	HRS012-□-□-J HRS018-□-□-J HRS024-□-□-J HRS030-□-□-J		
HRS-EP006	NPT thread conversion fitting set	HRS040J HRS050J HRS060J		

■ Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high-pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP007	G thread conversion fitting NPT thread conversion fitting	HRS012-□-□-T HRS018-□-□-T HRS024-□-20-T
HRS-EP008		HRS030-□-20-T HRS040-□-20-T HRS050-□-20*1 HRS060-□-20*1

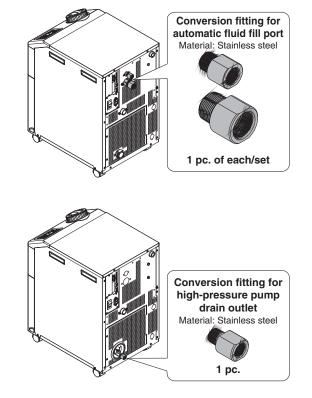


^{*1} It is not necessary to purchase this when you purchase the HRS-EP009 to 012 since it is included in the product.



4 Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model
HRZ-BR002	HRS012-□-□-□ HRS018-□-□-□ HRS024-□-□-□ HRS030-□-□-□ HRS040-□-□-□ HRS050-□-□

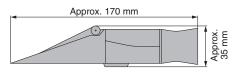

5 Bypass Piping Set

When the circulating fluid goes below the rated flow (7 l/min for the HRS012, 018, 024, 030 and 23/28 l/min for the HRS040, 050, 060), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set. A high-pressure pump is also available.

Part no.	Applicable model
HRS-BP001	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□


Parts List

No.	Description	Fluid contact material	Qty.
1	Bypass tube (Part no.: TL0806)	PFA	1
	(Part no.: TL0806)	PFA	(Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2

Part no.	Applicable model
HRS-BP004	HRS040-□□-□ HRS050-□□-□
	HRS060-□□-□

Parts List

No.	Description	Fluid contact material	Qty.
1	Hose	PVC	1 (Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2
(5)	Hose band	_	2

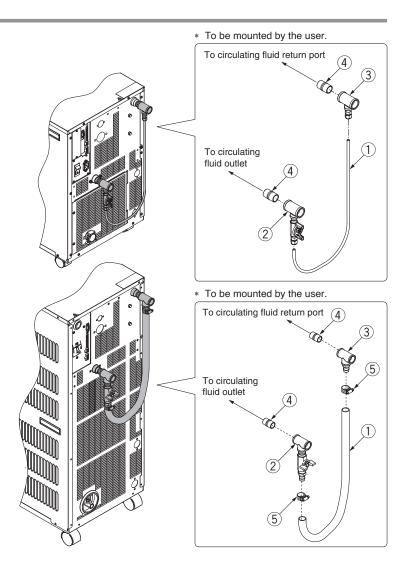

6 Power Supply Cable

■ For single-phase 100/115 VAC type


* Not applicable for the 200 V type.


Part no.	Applicable model		
HRS-CA001	HRS012-□□-10		
	HRS018-□□-10		

* Not applicable to retaining clip.

Part no.	Applicable model
HRS-CA003	HRS012-□□-10
	HRS018-□□-10

^{*} Applicable to retaining clip.

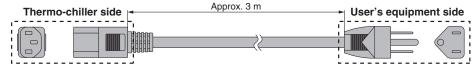

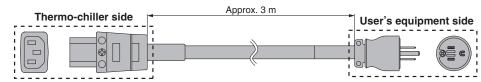

■ For single-phase 200 VAC type

* Not applicable for the 100 V type.


Part no.	Applicable model	
HRS-CA002	HRS012-□□-20 HRS018-□□-20	
nk5-CAUUZ	HRS024-□□-20 HRS030-□□-20	

* Applicable to retaining clip.

Part no. Applicable mode		
HRS-CA004	HRS040-□□-20 HRS050-□□-20 HRS060-W□-20	

- Not available for the HRS060-A□-20.
 To be prepared by the user.
- * Not applicable to retaining clip.


Thermo-chiller side Approx. 3 m Approx. 100 mm User's equipment side

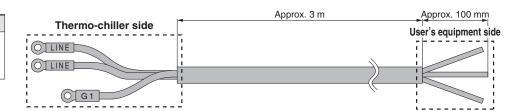

■ Retaining clip

Holds the connector on the thermo-chiller side in position.

Part no. Applicable power supply cable		
	HRS-CA002	
HRS-S0074	HRS-CA003	
	Power supply connector for accessory	

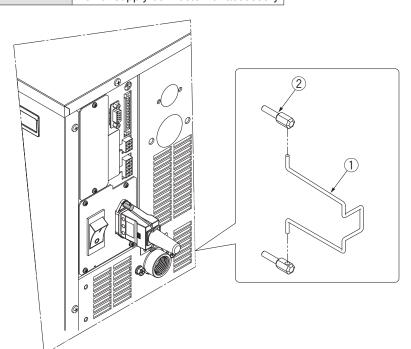

Parts List

No.	Description
1	Retaining clip
(2)	Holding screw



HRS Series


7 DI Filter Set

It is possible to retain the level of electric resistance and electric conductivity by flowing the circulating through the ion replacement resin (DI filter). The set parts are in order to install DI filter to bypass circuit and flow the fixed rate of the circulating fluid to DI filter.

It is not to control the value of electric resistance and electric conductivity. (Replacement cartridge: HRS-DF001)

■ Stainless steel type

Suitable for locations with dusty atmospheres.

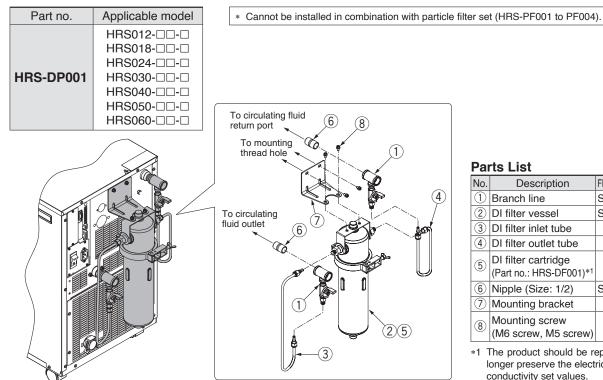

Parts List


	10 =101		
No.	Description	Fluid contact material	Qty.
1	Branch line	Stainless steel	2
2	DI filter vessel	Stainless steel	1
3	DI filter inlet tube	PFA, POM	1
4	DI filter outlet tube	PFA, POM	1
(5)	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1
6	Nipple (Size: 1/2)	Stainless steel	2
7	Mounting bracket	_	1
8	Mounting screw (M6 screw, M5 screw)	_	2 pcs. each

*1 The product should be replaced when it can no longer preserve the electrical resistivity/electrical conductivity set values.

■ Resin type

Lightweight and compact

Can be installed in combination with the HRS-PF001, PF002.

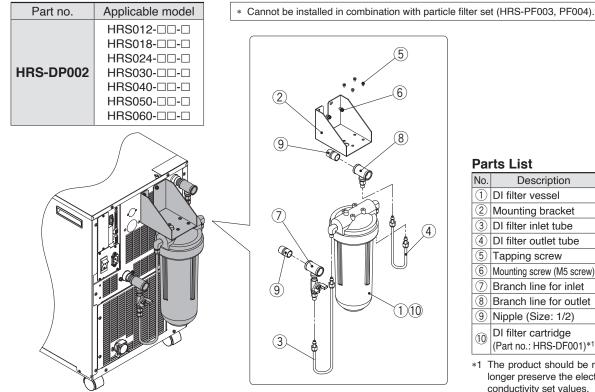

"to I iot

Pai	Parts List				
No.	Description	Fluid contact material	Qty.		
1	DI filter vessel	PC, PP	1		
2	Mounting bracket	_	1		
3	DI filter inlet tube	PFA, POM	1		
4	DI filter outlet tube	PFA, POM	1		
(5)	Tapping screw —		4		
6	Mounting screw (M5 screw) —		2		
7	Branch line for inlet Stainless steel		1		
8	Branch line for outlet	Stainless steel	1		
9	Nipple (Size: 1/2)	Stainless steel	2		
10	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1		

*1 The product should be replaced when it can no longer preserve the electrical resistivity/electrical conductivity set values.



8 Electric Resistance Sensor Set/Electric Resistance Control Set

Option M needs to be selected at the time of purchase. (When the electrical resistivity of the circulating fluid is 1 M Ω cm or higher)

This product can be used to display, maintain, and control the electric resistivity of the circulating fluid (deionised water). The function differs according to the model (Refer to the table below). Refer to the Operation Manual for details.

Part no.	Applicable model	
HRS-DI001 HRS-DI005	HRS012-□-□ HRS018-□-□ HRS024-□-□ HRS030-□-□ HRS040-□-□ HRS050-□-□ HRS060-□-□	
HRS-DI003 HRS-DI004	HRS012-□□-□ HRS018-□□-□ HRS024-□□-□ HRS030-□□-□	

List of Function


Optional accessories		Electric resistivity display*1, *2	Electric resistivity maintenance	Electric resistivity control	Bypass*3
HRS-DI001	Electric resistance sensor set	0	X	X	X
HRS-DI003	Electric resistance control set	0	0	0	0
HRS-DI004	Electric resistance sensor set	0	0	Х	0
HRS-DI005	Electric resistance control set	0	0	0	X

- *1 Display range is 0 to 4.5 MΩ·cm.
- *2 Readout using serial communications (RS-485/RS-232C) can be performed.
 *3 This function is dedicated for the HRS-BP001 and cannot be used for the HRS040/050/060.


Specifications

	Electric resistance sensor set	Electric resistance control set	
Measurement range of electric resistivity	0 to 4.5 MΩ·cm		
Set range of electric resistivity target	_	0.2 to 4.0 MΩ·cm	
Set range of electric resistivity hysteresis	_	0.1 to 0.9 MΩ·cm	
Operating temperature range (Circulating fluid temperature)	5 to 60 °C		
Operating pressure range	0.5 MPa or less		
Current consumption	100 mA or less 400 mA or less		
Installation environment	llation environment Indoors		

[Mounting example: HRS012-A-20-M + HRS-DI001]

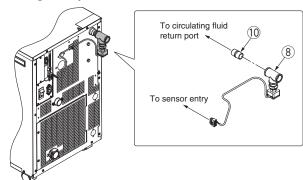

[Mounting example: HRS012-A-20-M + HRS-DI003]

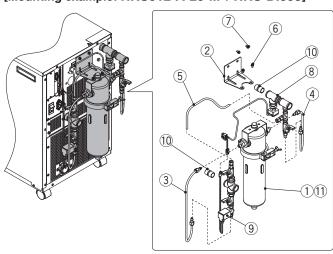

No.	Description	Fluid contact	Qty.			
INO.		material	DI001	DI003	DI004	DI005
1	DI filter vessel	Stainless steel	_	1	1	_
	Di liller vesser	PC, PP	_	_	_	1
2	Mounting bracket	_	_	1	1	1
3	DI filter inlet tube	PFA, POM	_	1	1	1
4	DI filter outlet tube	PFA, POM	_	1	1	1
(5)	Bypass tube	PFA	_	1	1	_
6	Mounting screw (M6 screw)	_	_	2	2	_
7	Mounting screw (M5 screw)	_	_	2	2	6
8	Electric resistance sensor	Stainless steel, PPS	1	1	1	1
9	Solenoid valve for control	Stainless steel, EPDM	_	1	_	1
10	Nipple (Size: 1/2)	Stainless steel	1	2	2	2
11)	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	_	1	1	1

^{*1} The product should be replaced when it can no longer preserve the electrical resistivity set value.



9 Electric Conductivity Sensor Set/Electric Conductivity Control Set

This product can be used to display, maintain, and control the electric conductivity of the circulating fluid (deionised water). The function differs according to the model (Refer to the table below). Refer to the Operation Manual for details.

Dort no	Applicable model
Part no.	Applicable model
HRS-DI008 HRS-DI011	HRS012-□□-□
	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□
	HRS040-□□-□
	HRS050-□□-□
	HRS060-□□-□
	HRS012-□□-□
HRS-DI009	HRS018-□□-□
	HRS024-□□-□
	HRS030-□□-□

List of Function


Optional accessories	LIESCRIPTION	Electric conductivity display*1, *2	Electric conductivity maintenance	Electric conductivity control	Bypass*3
HRS-DI008	Electric conductivity sensor set	0	X	X	Х
HRS-DI009	Electric conductivity control set	0	0	0	0
HRS-DI011	Electric conductivity control set	0	0	0	X

- *1 Display range is 2 to 48 µS/cm.
- *2 Readout using serial communications (RS-485/RS-232C) can be performed.
 *3 This function is dedicated for the HRS-BP001 and cannot be used for the HRS040/050/060.


Specifications

	Electric conductivity sensor set	Electric conductivity control set	
Measurement range of electric conductivity	2.0 to 48.0 μS/cm		
Set range of electric conductivity target	_	5.0 to 45.0 μS/cm	
Set range of electric conductivity hysteresis	_	2.0 to 10.0 μS/cm	
Operating temperature range (Circulating fluid temperature)	5 to 60 °C		
Operating pressure range	nge 0.5 MPa or less		
Current consumption	100 mA or less 400 mA or less		
Installation environment	Indoors		

[Mounting example: HRS012-A-20 + HRS-DI008]

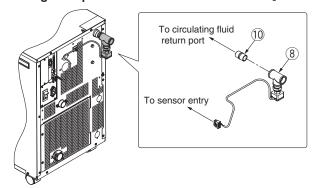

[Mounting example: HRS012-A-20 + HRS-DI009]

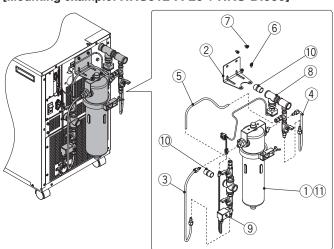


No.	Description	Fluid contact	Qty.			
INO.	Description	material	DI008	DI009	DI011	
1	DI filter vessel	Stainless steel	_	1	_	
	Di liller vesser	PC, PP	_	_	1	
2	Mounting bracket	_	_	1	1	
3	DI filter inlet tube	PFA, POM	_	1	1	
4	DI filter outlet tube	PFA, POM	_	1	1	
(5)	Bypass tube	PFA	_	1	_	
6	Mounting screw (M6 screw)	_	_	2	_	
7	Mounting screw (M5 screw)	_	_	2	6	
8	Electric conductivity sensor	Stainless steel, PPS	1	1	1	
9	Solenoid valve for control	Stainless steel, EPDM	_	1	1	
10	Nipple (Size: 1/2)	Stainless steel	1	2	2	
11)	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	_	1	1	

^{*1} The product should be replaced when it can no longer preserve the electrical conductivity set value.




10 Particle Filter Set

This set can be used to remove foreign matter from the circulating fluid.

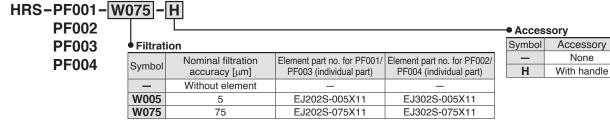

■ For circulating fluid outlet [Used to protect your tool]


Part no.	Applicable model	
HRS-PF001 (Element length L = 125 mm	HRS012-□□-□ HRS018-□□-□ HRS024-□□-□ HRS030-□□-□	HRS040-□□-□ HRS050-□□-□ HRS060-□□-□
HRS-PF002 (Element length) L = 250 mm	HRS050-□□-□ HRS060-□□-□	

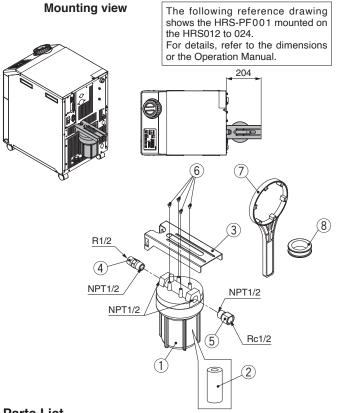

For circulating fluid return port [Used to protect thermo-chiller]

If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set.


Part no.	Applicable model	
HRS-PF003 (Element length L = 125 mm	HRS012-□□-□ HRS018-□□-□ HRS024-□□-□ HRS030-□□-□	HRS040-□□-□ HRS050-□□-□ HRS060-□□-□
HRS-PF004 (Element length L = 250 mm	HRS050-□□-□ HRS060-□□-□	

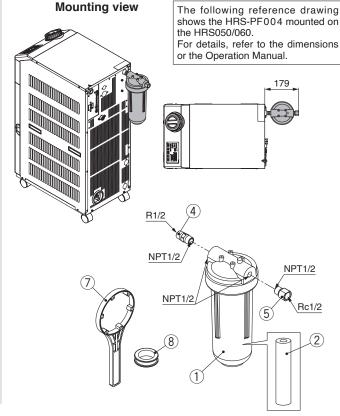

	arto Elot					
No.	Model	Description	Fluid contact material	Qty.	Note	
1	_	Body	PP	1	_	
	EJ202S-005X11	Floment (Longth L = 105 mm)		1	For HRS-PF001/003	The product chould be re
2	EJ202S-075X11	Element (Length L = 125 mm)	PP/PE	1	F01 HN3-PF001/003	The product should be re-
	EJ302S-005X11	Element (Length L = 250 mm)	PP/PE	1	For HRS-PF002/004	placed when the pressure drop reaches 0.1 MPa.
	EJ302S-075X11	Element (Length L = 250 mm)		1	F01 HK3-PF002/004	drop reaches 0.1 MF a.
3	_	Particle filter bracket	_	1	For HRS-PF001/002	
4	_	Nipple	Stainless steel	1	Conversion from R to NPT	
(5)	_	Extension piece	Stainless steel	1	Conversion from NPT to Rc	
6	_	Tapping screw	_	4	_	
7	_	Handle	_	1	When -H is selected	
8	_	Sealant tape	PTFE	1	_	


1 Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Anchor bolt (M8) suitable for the flooring material should be prepared separately by the user.

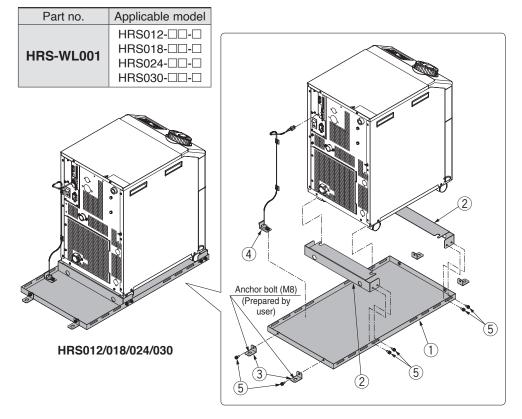

Parts List

No.	Description
1	Drain pan
2	Thermo-chiller fixing bracket (2 pcs.)
3	Drain pan fixing bracket (4 pcs.)
4	Water leakage sensor
(5)	Bracket fixing screw (M6 screw, 12 pcs.)

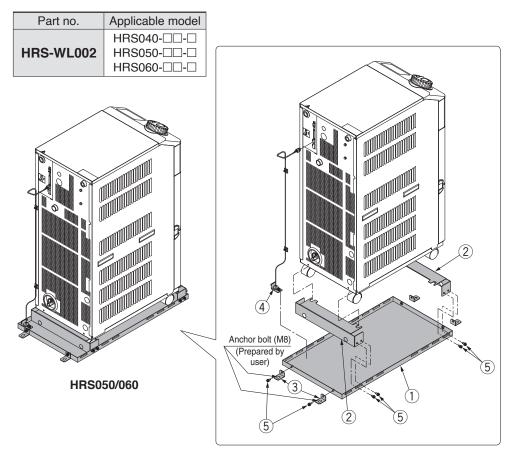


i di to Elot		
No.	Description	
1	Drain pan	
2	Thermo-chiller fixing bracket (2 pcs.)	
3	Drain pan fixing bracket (4 pcs.)	
4	Water leakage sensor	
(5)	Bracket fixing screw (M6 screw, 12 pcs.)	

(12) Connector Cover

This product can be used for protecting the connector on the rear side.

Applicable model
HRS012-□□-□ HRS018-□□-□ HRS024-□□-□
HRS030-□□-□

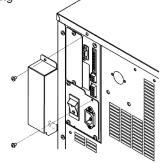

		. /
Part no.	Applicable model	
HRS-BK002	HRS040-□□-□ HRS050-□□-□ HRS060-□□-□	
	*	

13 Analogue Gateway Unit

This is an expansion unit for adding analogue communication functions.

"Analogue communication, contact input/output" functions can be used.

● Analogue communication

The set circulating fluid temperature can be changed by entering the analogue voltage.

Converts the current circulating fluid temperature and current electric resistance value (*1) to an analogue voltage for output.

*1 Displayed when optional "Electric resistance sensor set/HRS-DI001, DI003, DI004, and DI005" are used.

Contact input/output

The Run/Stop of the thermo-chiller HRS series can be operated by a contact signal.


The contact signal of the operation status, alarm occurrence status and the TEMP READY status can also be output.


Part no.	Applicable model	
	HRS012-□□-□	
	HRS018-□□-□	
	HRS024-□□-□	
HRS-CV001	HRS030-□□-□	
	HRS040-□□-□	
	HRS050-□□-□	
	HRS060-□□-□	

Parts List

No.	Description
1	Analogue gateway box
2	Connection cable
3	Mounting bracket
4	Mounting screw (M3, 2 pcs.)

When this product is used, the "contact input/output" and "serial communication" functions standardly equipped in the thermo-chiller HRS series cannot be used.

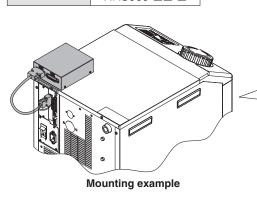

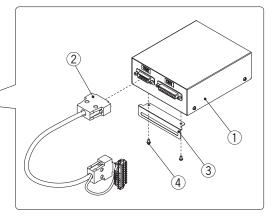


(4) Replacement Type Dustproof Filter Set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model
HRS-FL001	HRS012-A□-□ HRS018-A□-□ HRS024-A□-□

No.	Description	Part no.	Note
1	Replacement type dustproof filter set	HRS-FL001	A front panel with hook-and-loop fastener for holding the filter, 5 filters are included. (No dustproof net is included.)
2	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370

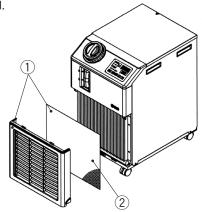



HRS Series

(15) Separately-Installed Power Transformer


This transformer does not have CE/UKCA marking and is not compliant with UL standards.


Specifications

Part no.	Applicable model	Volumo	Volume	Type	Inlet v	oltage	Outlet voltage								
Part no.	Applicable model	volume	туре	50 Hz	60 Hz	50 Hz	60 Hz								
IDF-TR1000-1	HRS012-□-10 HRS018-□-10			110 VAC	120 VAC		100, 110 VAC								
IDF-TR1000-2		018-□-10 1 kVA	/A Single-phase	240 VAC	240 to 260 VAC	100 VAC									
IDF-TR1000-3				380, 400, 415 VAC	380 to 420 VAC										
IDF-TR1000-4				420, 440, 480 VAC	420 to 520 VAC										
IDF-TR2000-9	HRS012-□-20											_	240 VAC		
IDF-TR2000-10	HRS018-□-20 HRS024-□-20 2 kVA	2 kVA	380, 400, 415 VAC	380 to 400, 400 to 415, 415 to 440 VAC	200 VAC	200, 220 VAC									
IDF-TR2000-11	HRS030-□-20			440, 460 VAC	440 to 460, 460 to 500 VAC										


 $[\]ast\,$ For the HRS040/050/060 models: To be prepared by the user.


IDF-TR1000-1

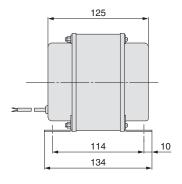

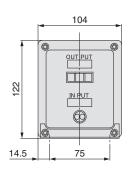



IDF-TR1000-2

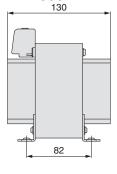

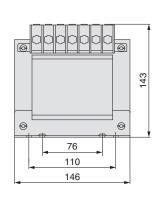



IDF-TR1000-3, 4

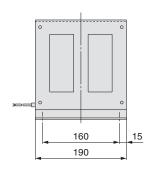

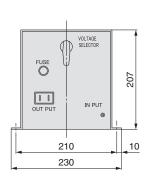



IDF-TR2000-9

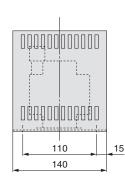

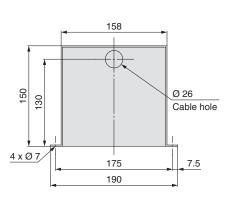

IDF-TR2000-10, 11

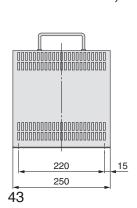

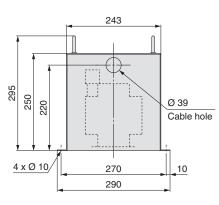




16 Filter for Circulating Fluid Fill Port

Prevents foreign matter from entering the tank when supplying the circulating fluid. Can be used just by fitting into the circulating fluid fill port.

■ Filter for circulating fluid fill port HRS-PF007

Material	Stainless steel 304, Stainless steel 316
Mesh size	200

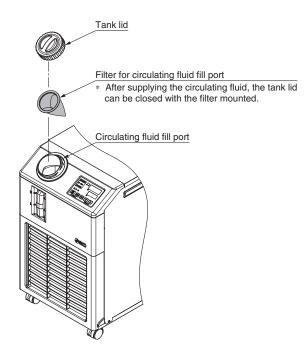

HRS Series

Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area - i.e. the area requiring cooling - within the user's equipment.*1 I: Current

① Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

$$Q = P = 1000 [W]$$

Cooling capacity = Considering a safety factor of 20 %,

② Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

$$= 1.0 [kVA] \times 0.85 = 0.85 [kW] = 850 [W]$$

Cooling capacity = Considering a safety factor of 20 %,

③ Derive the heat generation amount from the output.

V · Power

supply voltage

P

Power consumption

Q: Heat generation

User's equipment

Output (shaft power, etc.) W: 800 [W]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

Example of conventional units (Reference)

 $1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0$

1200000 [cal/h]

860

≈ 1400 [W]

$$=\frac{800}{0.7}=1143$$
 [W]

Cooling capacity = Considering a safety factor of 20 %,

*1 The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q: Unknown [W] ([J/s]) Circulating fluid : Tap water*1 Circulating fluid mass flow rate qm : $(= \rho \times qv \div 60) [kg/s]$ Circulating fluid density p : 1 [kg/dm³] Circulating fluid (volume) flow rate qv : 10 [dm³/min] : 4.2 x 10³ [J/(kg·K)] Circulating fluid specific heat C Circulating fluid outlet temperature T1 : 293 [K] (20 [°C]) Circulating fluid return temperature T2 : 295 [K] (22 [°C]) Circulating fluid temperature difference ΔT : 2.0 [K] (= **T**2 - **T**1) Conversion factor: minutes to seconds (SI units): 60 [s/min]


*1 Refer to page 46 for the typical physical property value of tap water or other circulating fluids.

$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_{V} \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^{3} \times 2.0}{60}$$

= 1400 [J/s] ≈ 1400 [W]

Cooling capacity = Considering a safety factor of 20 %,

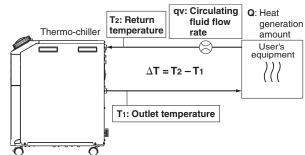

Heat generation amount by user's equipment Q: Unknown [cal/h] \rightarrow [W] : Tap water*1 Circulating fluid : (= $\rho x qv x 60$) [kgf/h] Circulating fluid weight flow rate qm : 1 [kgf/L] Circulating fluid weight volume ratio γ Circulating fluid (volume) flow rate qv : 10 [l/min] : 1.0 x 10³ [cal/(kgf·°C)] Circulating fluid specific heat C Circulating fluid outlet temperature T1 : 20 [°C] Circulating fluid return temperature T2 : 22 [°C] Circulating fluid temperature difference ΔT : 2.0 [°C] (= T₂ - T₁) Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W] qm x C x (T2 - T1) γ x qv x 60 x C x ΔT 860

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) ${\bf Q}$: Unknown [W] ([J/s])

Cooled substance : Water

Cooled substance mass \mathbf{m} : (= ρ x \mathbf{V}) [kg]

Cooled substance density ρ : 1 [kg/L]

Cooled substance total volume \mathbf{V} : 20 [dm³]


Cooled substance specific heat **C** : 4.2 x 10³ [J/(kg·K)]
Cooled substance temperature when cooling begins **To**: 305 [K] (32 [°C])

Cooled substance temperature after t hour Tt: 293 [K] (20 [°C]) Cooling temperature difference ΔT : 12 [K] (= T0 - Tt) Cooling time Δt : 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\triangle t} = \frac{\rho \times V \times C \times \triangle T}{\triangle t}$$
$$= \frac{1 \times 20 \times 4.2 \times 10^3 \times 12}{900} = 1120 \text{ [J/s]} \approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

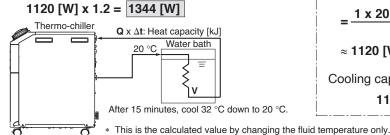

Example of conventional units (Reference)

Heat quantity by cooled substance (per unit time) \mathbf{Q} : Unknown [cal/h] \rightarrow [W]

Cooled substance specific heat **C** : 1.0 x 10³ [cal/(kgf·°C)]

Cooled substance temperature when

cooling begins T_0 : 32 [°C] Cooled substance temperature after t hour T_t : 20 [°C]

Cooling temperature difference ΔT : 12 [°C] (= $T_0 - T_t$)

Cooling time Δt : 15 [min]
Conversion factor: hours to minutes : 60 [min/h]
Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$\mathbf{Q} = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\Upsilon \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^{3} \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

1120 [W] x 1.2 = 1344 [W]

Thus, it varies substantially depending on the water bath or piping shape.

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalogue uses the following values for density and specific heat in calculating the required cooling capacity.

Density p: 1 [kg/L] (or, using conventional units, weight volume ratio Υ = 1 [kg/L]) Specific heat c: 4.19 x 10³ [J/(kg·K)] (or, using conventional units, 1 x 10³ [cal/(kgf·°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. Water 15 % Ethylene Glycol Aqueous Solution

Density ρ	Specific heat C	Convention	onal units
[kg/L]	[J/(kg·K)]	Weight volume ratio Υ [kgf/L]	Specific heat C [cal/(kgf·°C)]
1.00	4.2 x 10 ³	1.00	1 x 10 ³
1.00	4.19 x 10 ³	1.00	1 x 10 ³
1.00	4.19 x 10 ³	1.00	1 x 10 ³
1.00	4.18 x 10 ³	1.00	1 x 10 ³
1.00	4.18 x 10 ³	1.00	1 x 10 ³
1.00	4.18 x 10 ³	1.00	1 x 10 ³
0.99	4.18 x 10 ³	0.99	1 x 10 ³
0.99	4.18 x 10 ³	0.99	1 x 10 ³
	[kg/L] 1.00 1.00 1.00 1.00 1.00 1.00 0.99	[kg/L] [J/(kg-K)] 1.00 4.2 x 10³ 1.00 4.19 x 10³ 1.00 4.19 x 10³ 1.00 4.18 x 10³ 1.00 4.18 x 10³ 1.00 4.18 x 10³ 0.99 4.18 x 10³	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$

re /e = myterie dilycer / iqueeue detailer							
Physical property value	Density ρ	Specific heat C	Convention	onal units			
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio Υ [kgf/L]	Specific heat C [cal/(kgf.°C)]			
5 °C	1.02	3.91 x 10 ³	1.02	0.93×10^3			
10 °C	1.02	3.91 x 10 ³	1.02	0.93×10^3			
15 °C	1.02	3.91 x 10 ³	1.02	0.93×10^3			
20 °C	1.01	3.91 x 10 ³	1.01	0.93×10^3			
25 °C	1.01	3.91 x 10 ³	1.01	0.93×10^3			
30 °C	1.01	3.91 x 10 ³	1.01	0.94×10^3			
35 °C	1.01	3.91 x 10 ³	1.01	0.94×10^3			
40 °C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³			

Shown above are reference values. Contact circulating fluid supplier for details.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Design

- This catalogue shows the specifications of a single unit.
 - Check the specifications of the single unit (contents of this catalogue) and thoroughly consider the adaptability between the user's system and this unit.
 - 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.
- When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

Use non-corrosive material for fluid contact parts of circulating fluid.

The recommended circulating fluid is the tap water or 15 % ethylene glycol aqueous solution. Using corrosive materials such as aluminium or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Therefore, take sufficient care when selecting fluid contact part materials such as piping.

4. Design the piping so that no foreign matter enter the chiller.

If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. In particular, when the option T (High-pressure pump mounted) or HRS050/060 is used, it is strongly recommended to install the particle filter.

Selection

Warning

1. Model selection

For selecting a model of thermo-chiller, it is required to know the heat generation amount of the user's equipment. Obtain the heat generation amount, referring to "Cooling Capacity Calculation" on pages 45 and 46 before selecting a model.

Handling

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep the manual where it can be referred to as necessary.


Transportation/Carriage/Movement

⚠ Warning

- This product is heavy. Pay attention to safety and position of the product when it is transported, carried and moved.
- 2. Read the Operation Manual carefully to move the product after unpacking.

 Never put the product down sideway as this may cause failure.

The product will be delivered in the packaging shown below.

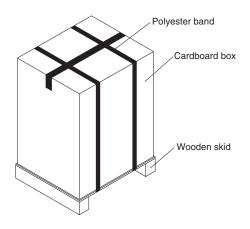

Model	Weight [kg]*1	Dimensions [mm]
HRS012-□□-10 HRS018-□□-10	49	Height 790 x Width 470 x Depth 580
HRS012-□□-20 HRS018-□□-20 HRS024-□□-20	52	Height 790 x Width 470 x Depth 580
HRS030-A□-20	56	Height 830 x Width 470 x Depth 580
HRS030-W□-20	55	height 630 x Width 470 x Depth 560
HRS040-□□-20	63	Height 900 x Width 450 x Depth 670
HRS050-A□-20	80	
HRS050-W□-20	78	Height 1160 x Width 450 x Depth 670
HRS060-A□-20	84	Height 1160 x Width 450 x Depth 670
HRS060-W□-20	78	

*1 For models with an option, the weights are increased as below.

Option symbol Description		Additional weight
-В	-B With earth leakage breaker	
-J With automatic fluid fill function		+1 kg
-M	-M Applicable to deionised water piping	
-т	High-pressure pump mounted (100 V type)	+4 kg
-1	High-pressure pump mounted (200 V type)	+6 kg
-G	High-temperature environment specification	No addition





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Operating Environment/Storage Environment

- 1. Do not use in the following environment as it will lead to a breakdown.
 - 1) Outdoors
 - In locations where water, water vapour, salt water, and oil may splash on the product
 - 3) In locations where there are dust and particles
 - 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present (This product is not explosion proof.)
 - 5) In locations where the ambient temperature exceeds the limits as mentioned below

During transportation/storage: 0 to 50 °C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 40 °C (When option G, high-temperature environment specification, is selected: 5 to 45 °C)

In locations where the ambient humidity is out of the following range or where condensation occurs

During transportation/storage: 15 to 85 % During operation: 30 to 70 %

- 7) In locations which receive direct sunlight or radiated heat
- 8) In locations where there is a heat source nearby and the ventilation is poor
- 9) In locations where temperature substantially changes
- In locations where strong magnetic noise occurs (In locations where strong electric fields, strong magnetic fields, and surge voltage occur)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity
- 12) In locations where high frequency occurs
- 13) In locations where damage is likely to occur due to lightning
- 14) In locations at altitude of 3000 m or higher (Except during storage and transportation)
 - * For altitude of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

	① Upper lin	2 Cooling	
Altitude [m]	40 °C	45 °C products (For high-temperature	capacity
	products	environment specification, Option G)	coefficient
Less than 1000 m	40	45	1.00
Less than 1500 m	38	42	0.85
Less than 2000 m	36	38	0.80
Less than 2500 m	34	35	0.75
Less than 3000 m	32	32	0.70

- 15) In locations where strong impacts or vibrations occur
- 16) In locations where a massive force strong enough to deform the product is applied or the weight from a heavy object is applied
- 17) In locations where there is not sufficient space for maintenance

2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalogue, which will activate the safety detector and stop the operation.

In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

- The product is not designed for clean room usage. It generates particles internally.
- 5. The product is not dust-proof.

If used in an environment with dust, it may accumulate inside the product and cause not only a malfunction but also a fire hazard.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Mounting/Installation

- 1. Do not use the product outdoors.
- Do not place heavy objects on top of this product, or step on it.The external panel can be deformed and danger can result.

∧ Caution


- Install on a rigid floor which can withstand this product's weight.
- When installing without the casters, use the adjuster feet, etc. to raise the chiller to the following heights or more.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.

- · HRS012 to 030 10 mm
- · HRS040 to 060 15 mm
- Refer to the Operation Manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

<Air-cooled refrigeration>

- 1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 40 °C* 1, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
 - *1 When option G, high-temperature environment specification, is selected: 45 °C
- For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

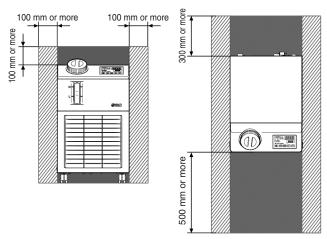

When option G, high-temperature environment specification, is selected: HRS030/HRS040/HRS050/HRS060 (A ventilation space is required since the ventilation slots are provided on the sides of the product.)

<Heat radiation amount/Required ventilation rate>

		•	
Heat radiation Required ventilation rate [m³/min]			
Model	amount	Differential temp. of 3 °C between	Differential temp. of 6 °C between
	[kW]	inside and outside of installation area	inside and outside of installation area
HRS012-A	Approx. 2	40	20
HRS018-A	Approx. 4	70	40
HRS024-A	Approx. 5	90	50
HRS030-A	Approx. 6	100	60
HRS040-A	Approx. 8	120	70
HRS050-A	Approx. 10	140	70
HRS060-A	Approx. 10	140	70

Piping

⚠ Caution

 Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminium or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid and facility water circuits but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.

- Select the piping port size which can exceed the rated flow.For the rated flow, refer to the pump capacity table.
- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 5. This product series is constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring


⚠ Warning

 Grounding should never be connected to a water line, gas line or lightning rod.

⚠ Caution

- 1. Communication cable should be prepared by the user.
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μ sec., it may result in malfunction.

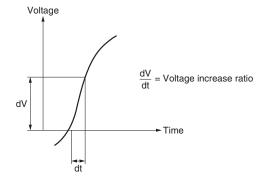



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Circulating Fluid

- 1. Avoid oil or other foreign matter entering the circulating fluid.
- When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

				Influ	ence
	Item	Unit	Standard value	Corrosion	Scale generation
	pH (at 25 °C)	_	6.0 to 8.0	0	0
=	Electric conductivity (25 °C)	[µS/cm]	100*1 to 300*1	0	
<u>ē</u>	Chloride ion (CI-)	[mg/L]	50 or less	0	
Standard item	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	50 or less	0	
g	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		
tar	Total hardness	[mg/L]	70 or less		0
S	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		
item	Iron (Fe)	[mg/L]	0.3 or less	0	
	Copper (Cu)	[mg/L]	0.1 or less	0	
l Ge	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
Reference	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
ď	Free carbon (CO ₂)	[mg/L]	4.0 or less	Ō	

- *1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15 %.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10 °C or lower and cause the thermo-chiller to break down.

A magnet pump or mechanical seal pump is used as the circulating pump for the circulating fluid.

It is particularly impossible to use liquid including metallic powders such as iron powder.

The circulating fluids listed below have been tested for thermo-chiller compatibility.

No.	Fluid	Manufacturer	Concentration	
1	Dowcal™ 100 Heat	The Dow Chemical	Dilute to 30 % in	
	Transfer Fluid	Company	water	
2	ControXid 1642	Oelheld GmbH	Ready to use	
3	Hexid A4	Applied Thermal Control Limited	Ready to use	
4	Coolflow IGE	Hydratech Division of Liquitherm Technologies Group Ltd	Dilute to 25 % in water	
5	NALCO® CCL105	Nalco Water, an Ecolab Company	Ready to use	

- The chiller cooling capacity and pump capacity performance may change with using the fluids listed. Customers should verify the performances with the fluid and decide to use the fluid.
- · Check the compatibility with the piping and the wetted parts of the customer's equipment before use.
- Check with the circulating fluid manufacturer for the following.
- 1) Countries and regions where it can be obtained and used 3) Safety data sheets
- 2) Handling and maintenance 4) Specifications and physical properties
 Concentration has to be value listed or less. Overly high concentrations can cause a
- Concentration has to be value listed or less. Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10°C or lower and cause the thermo-chiller to break down.
- Using the fluid listed for a long time, the chiller heat exchanger performance may be reduced due to
 additive deposits. It is recommended to regularly flush the inside of the piping and chiller with clean water.
- In the case of a mechanical seal pump, additive deposits may appear on the outside, it is not a malfunction.

Facility Water Supply

Marning

<Water-cooled refrigeration>

- 1 . The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.
 - Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

■ Required facility water system

<Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRS012-W□-□	Approx. 2	
HRS018-W□-□	Approx. 4	
HRS024-W□-20	Approx. 5	Refer to
HRS030-W□-20	Approx. 6	"Facility water system"
HRS040-W□-20	Approx. 8	in the specifications.
HRS050-W□-20	Approx. 10	
HRS060-W□-20	Approx. 12	

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below. If the water quality standards are not met, clogging or leakage in the facility water piping, or other problems such as refrigerant leakage, etc., may result.

<Tap Water (as a Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Circulating water"

	Item	Unit	Standard value	Influence	
	item	Offic	Standard value	Corrosion	Scale generation
	pH (at 25 °C)	_	6.5 to 8.2	0	0
	Electric conductivity (25 °C)	[µS/cm]	100*1 to 800*1	0	0
item	Chloride ion (CI-)	[mg/L]	200 or less	0	
- 1	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	200 or less	0	
g	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
Standard	Total hardness	[mg/L]	200 or less		0
	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
E	Iron (Fe)	[mg/L]	1.0 or less	0	0
item	Copper (Cu)	[mg/L]	0.3 or less	0	
Ge	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
eference	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
æ	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.001 to 0.01.
- O: Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- We recommend to use the filter kit, FQ1011N-04-T020-B-X61, when you do not know the quality of circulating fluid to prevent leakage and other issues.
- 3. Supply pressure of 0.5 MPa or less.

If the supply pressure is high, it will cause water leakage.

4. Be sure to prepare your utilities so that the pressure of the thermo-chiller facility water outlet is at 0 MPa (atmospheric pressure) or more.

If the facility water outlet pressure becomes negative, the internal facility water piping may collapse, and proper flow control of facility water will be impossible.

Using deionised water as facility water may cause problems such as clogging in the piping due to metal ion.

Do not use fluid that includes metallic powders and other foreign materials.

It can cause issues: clogging of the circulating fluid circuit or leakage.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Operation

⚠ Warning

1. Confirmation before operation

 The fluid level of a tank should be within the specified range of "HIGH" and "LOW."

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed. Pump can be operated independently.

2. Confirmation during operation

• Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 40 $^{\circ}$ C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

When an abnormality is confirmed, stop the machine immediately. After pushing the [OFF] switch, be sure to turn off the power switch.

Operation Restart Time/Operation and Suspension Frequency

⚠ Caution

- Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
- Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Protection Circuit

⚠ Caution

- 1. If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.
 - \bullet Power supply voltage is not within the rated voltage range of ± 10 %.
 - In case the water level inside the tank is reduced abnormally.
 - Circulating fluid temperature is too high.
 - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
 - Ambient temperature is too high. (40 °C or more)
 - Refrigerant pressure is too high.
 - Ventilation hole is clogged with dust or dirt.

Maintenance

Caution

<Periodical inspection every one month>

1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

1. Inspect the circulating fluid.

- 1) When using tap water
 - Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria and algae. Replace it regularly according to your usage conditions.

• Tank cleaning

Consider whether dirt, slime, or foreign matter may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.

2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15 %.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Contact a professional.

For additional methods to prevent freezing (such as commercially available tape heaters, etc.), contact a professional for advice.

■ Refrigerant with GWP reference

	Global Warming Potential (GWP)			
	Regulation (EU) 2024/573, AIM Act 40 CFR Part 84	Fluorocarbon Emissions Control Act (Japan)		
Refrigerant		GWP value labeled on products	GWP value to be used for reporting the calculated amount of leakage	
R134a	1,430	1,430	1,300	
R404A	3,922	3,920	3,940	
R407C	1,774	1,770	1,620	
R410A	2,088	2,090	1,920	
R448A	1,386	1,390	1,270	
R454C	146	145	146	

- * This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.
- * See specification table for refrigerant used in the product.

■ Trademark Information

Modbus® is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc.



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1), and other safety regulations.

♠ Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

Marning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate 1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components.

ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

etc

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments.

Use under such conditions or environments is not covered.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
- 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.

Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and **Disclaimer/Compliance** Requirements


The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. 2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

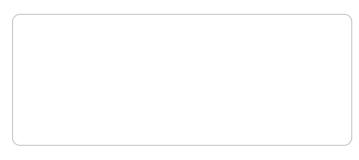

www.smclt.lt

www.smc.nl

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 Bulgaria +359 (0)2807670 +385 (0)13707288 Croatia Czech Republic +420 541424611 Denmark +45 70252900 Estonia +372 651 0370 Finland +358 207513513 France +33 (0)164761000 Germany +49 (0)61034020 Greece +30 210 2717265 +36 23513000 Hungary Ireland +353 (0)14039000 +39 03990691 Italy Latvia +371 67817700

www.smc.be www.smc.ba www.smc.hr www.smc.cz www.smcdk.com www.smcee.ee www.smc.fi www.smc-france.fr www.smc.de www.smchellas.gr www.smc.hu www.smcautomation.ie www.smcitalia.it www.smc.lv

office.at@smc.com info@smc.be sales.bg@smc.com sales.hr@smc.com office.at@smc.com smc.dk@smc.com info.ee@smc.com smc.fi@smc.com supportclient.fr@smc.com info.de@smc.com sales@smchellas.gr office.hu@smc.com technical.ie@smc.com mailbox.it@smc.com info.lv@smc.com

Lithuania +370 5 2308118 Netherlands +31 (0)205318888 Norway +47 67129020 +48 22 344 40 00 Poland +351 214724500 Portugal Romania +40 213205111 Russia +7 (812)3036600 Slovakia +421 (0)413213212 Slovenia +386 (0)73885412 Spain +34 945184100 Sweden +46 (0)86031240 +41 (0)523963131 Switzerland +90 212 489 0 440 Turkey UK +44 (0)845 121 5122

South Africa +27 10 900 1233

www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc.eu

www.smc.sk www.smc.si www.smc.eu www.smc.nu www.smc.ch

www.smcturkey.com.tr

www.smc.uk

www.smcza.co.za

info.lt@smc.com info@smc.nl post.no@smc.com office.pl@smc.com apoiocliente.pt@smc.com office.ro@smc.com sales@smcru.com sales.sk@smc.com office.si@smc.com post.es@smc.com order.se@smc.com helpcenter.ch@smc.com satis.tr@smc.com sales.gb@smc.com

Sales.za@smc.com