Air Saving Speed Controller



Reduce air consumption just by mounting to air cylinder

Air consumption 2

(33% reduction: Supply pressure at 73 psi [0.5 MPa], Air supply pressure at 15 psi [0.1 MPa])

Acquire two-pressure control just by mounting the product. Reduces the air supply pressure of the stroke on the nonworking side to 29 psi [0.2 MPa].

Mounting and operation are the same as a speed controller!!


AS-R/AS-Q Series



With pressure reduction function AS-R Series With rapid supply and exhaust function **AS-Q** Series

Equal response time! No delay of the response time with two-pressure control Side on which work does not take place (Return stroke) Side on which work takes place (Working stroke) Air supply pressure Supply pressure 29 psi [0.2 MPa] 73 psi [0.5 MPa] ζ1 Exhaust Exhaust ressure **«**--<u>.</u> Pressure Cvlinder movement Meter-out: Supply pressure Meter-out: Supply pressure 73 psi [0.5 MPa] Exhaust pr OUT Pressure charge completion Air saving effect Meter-out: xhaust pressure 25% reduction 29 psi 29 psi [0.2 MPa] [0.2 MPa] AS-R: AS-Q Air supply pressure Supply pressure AS-Q: AS-R: Exhaust pressure Exhaust pressure Time Stroke end Start of cylinder operation is Stroke end same as conventional Air supply pressure of 15 psi [0.1 MPa] is also available.



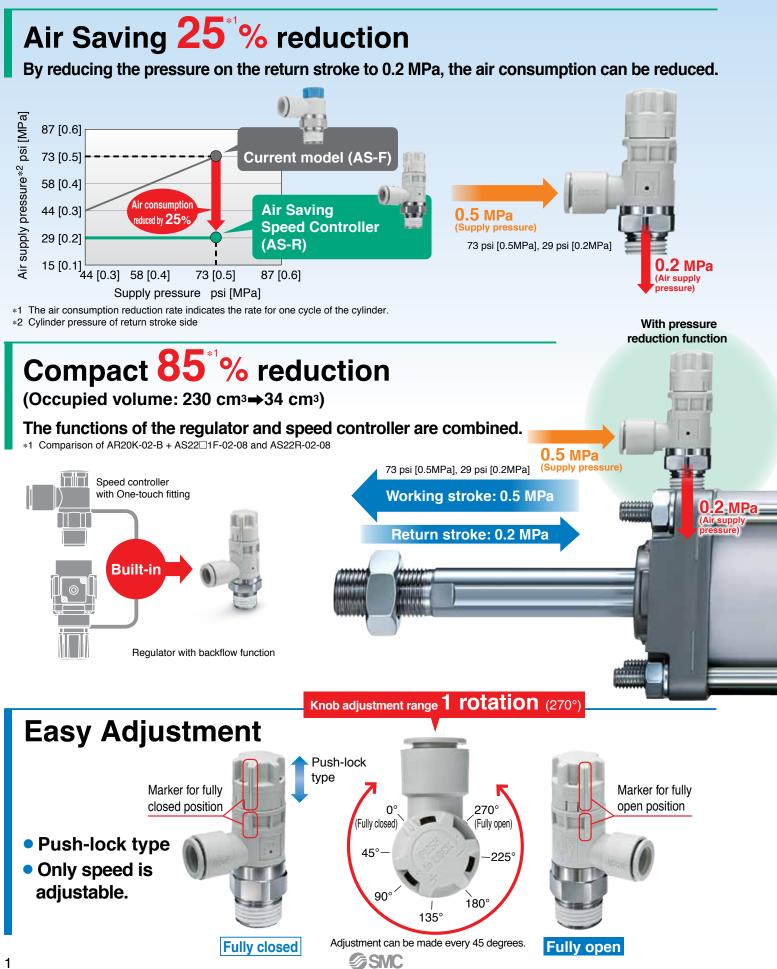


2

Equal Response Time

- Improved output response at the stroke end due to rapid air-charge.
- Improved response time of return stroke due to rapid air exhaust.

Lurch Prevention

As this product is operated by the return stroke at a reduced pressure by the meter-in circuit, a sudden extension of the working stroke is prevented.

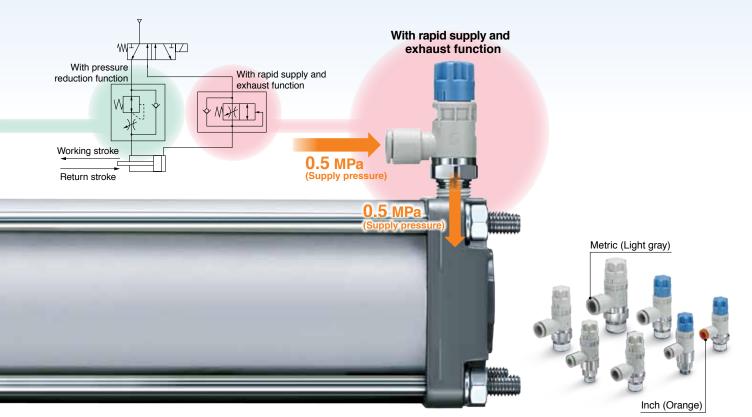


Variations

With pressure reduction function	With rapid supply and exhaust function	Model	Port	Matria			plicable					Applicable
AS-R Series	AS-Q Series	(Body size)	size	Metric s	12e (Appi 8	10	ead: R, G)	1/4"	ze (Applica 5/16"	able threa	1/2"	tubing material
AS22R-□01-□	_	2	1/8	•	-	-		•	•			Nylon (T, TIA series)
AS22R-□02-□	AS22Q-□02-□	2	1/4	—•				-•			_	Soft nylon
AS32R-□02-□	AS32Q-□02-□	3	1/4	•	-			_	•	-		(TS, TISA series)
AS32R-□03-□	AS32Q-□03-□	3	3/8	•	•			_	•	-		Polyurethane (TU, TIUB series)
AS42R-□03-□	AS42Q-□03-□		3/8					_				Fluororesin
AS42R-□04-□	AS42Q-□04-□	4	1/2					_			-•	(TLM, TILM series) (TH, TIH series)
				(S N	C						

Applications and Load

Press fitting, Pressing, Clamping

Applications which generate force: F (N) at the stroke end of the working stroke

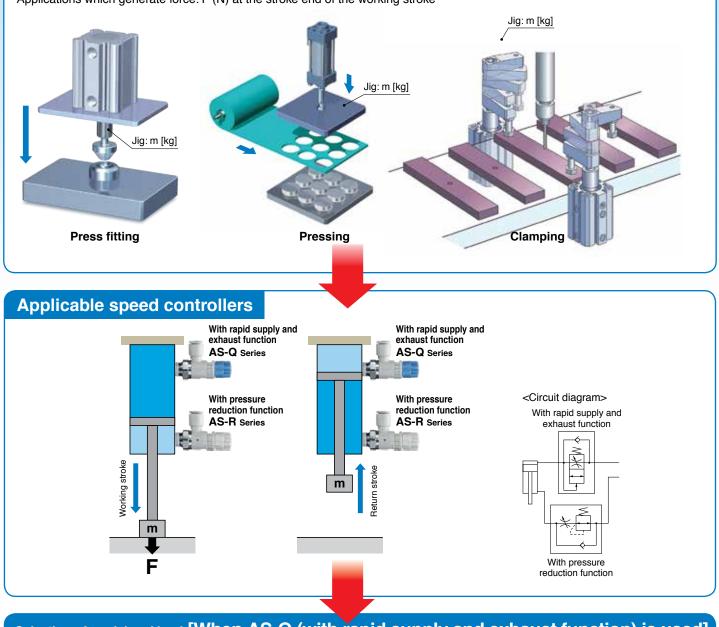

Selection of model and load [When AS-Q (with rapid supply and exhaust function) is used]




- 2 Jig weightFilling of air at the stroke end
- 3 Jig weight: m
 - Refer to the Model Selection section for Air Saving Speed Controllers (page 7 and 8).
- 4 Force: F

➡ Refer to the Air Cylinders Model Selection.

Caution Use the AS-Q for applications which perform operations at the stroke end. As the AS-Q has a rapid air supply function, items **1** and **2** must be specified.

Air Saving Speed Controller AS-R/AS-QSeries

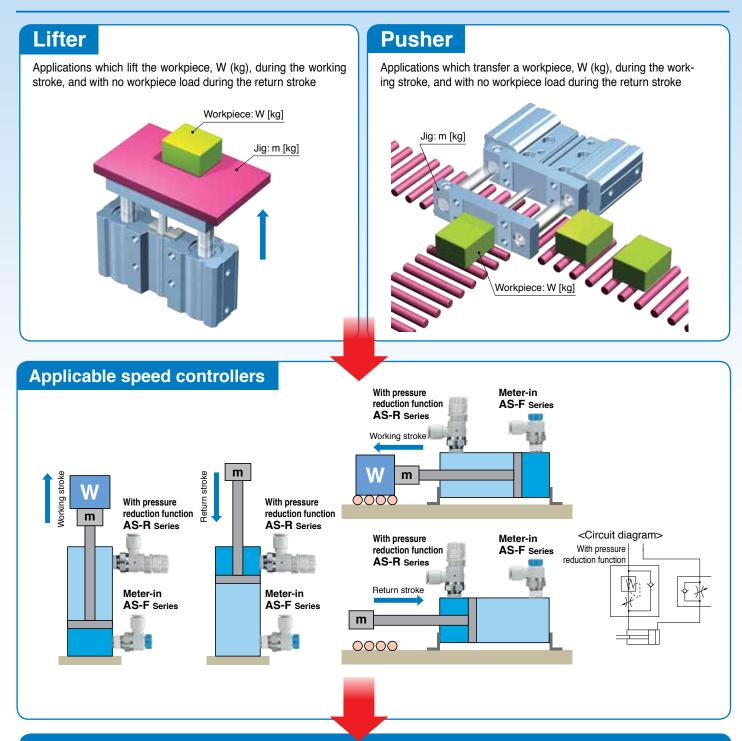

Selection of model and load [When a meter-in type speed controller (AS-F) is used]

1 Jig weight: m

⇒ Refer to the Model Selection section for Air Saving Speed Controllers (page 7 and 8).

2 Workpiece: W

⇒ Refer to the Air Cylinders Model Selection.

Caution

Use a meter-in type speed controller for applications which perform operations during the working stroke. When a meter-in type speed controller is used, pressure corresponding to the load, W, is supplied to the cylinder to transfer the workpiece. Refer to the technical instructions on page 19 for the characteristics of the meter-in and meter-out speed controllers.




Air Saving Speed Controller AS-R/AS-Q Series

Application Proposal for Air Saving Speed Controller

Air consumption reduction ratio: 50%


Comparison of air consumption when the supply pressure is 73 psi [0.5 MPa]
 In this case, the load to move the workpiece is piston area multiplied by 29 psi [0.2 MPa].

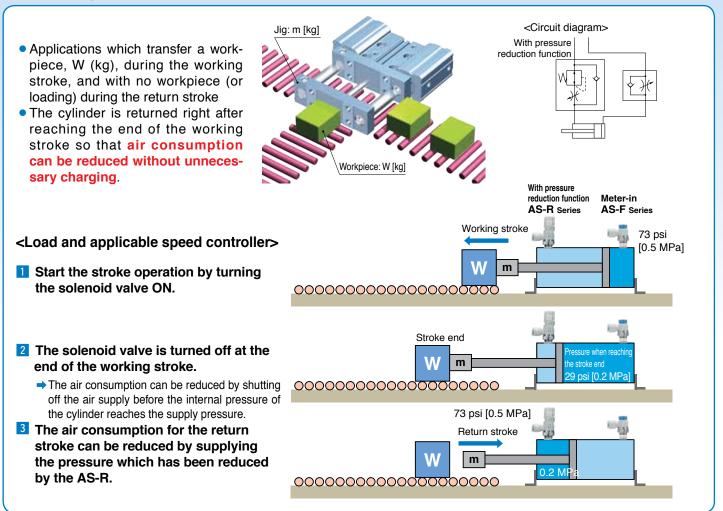

Air consumption reduction ratio: 46%

Combination with the Optimum Size of Cylinder Size

For example, when an ø80 bore cylinder is used in place a ø63 mm bore cylinder that does not have enough force, the customer can choose an optimally sized ø67 mm bore JMB series cylinder. In addition, an AS-R/AS-Q series combined with this cylinder can reduce air consumption by up to 46%.

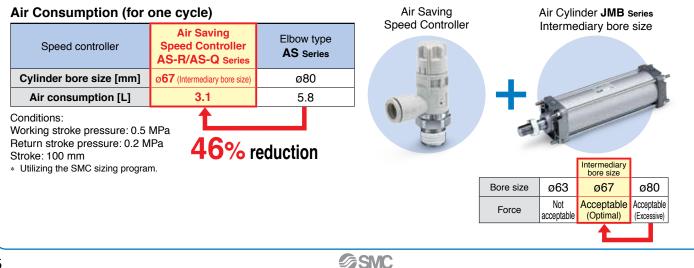

CONTENTS

Air Saving Speed Controller AS-R/AS-Q Series

Model Selection	····· P.7
Model	····· P.9
Specifications	····· P.9
Sonic Conductance and Critical Pressure Ratio	····· P.9
How to Order	··· P.10
Flow Rate Characteristics	··· P.11
Pressure Characteristics (AS-R)	··· P.11
Cylinder Speed at Maximum Needle Rotation Angle (Guide)	··· P.12
Construction	··· P.13
Dimensions: AS-R (Sealant)	··· P.14
Dimensions: AS-Q (Sealant)	··· P.15
Dimensions: AS-R (Face seal)	··· P.16
Dimensions: AS-Q (Face seal) ······	··· P.17
Pressure Time Chart	··· P.18
Construction Principle	··· P.18
Difference between Meter-in and Meter-out Control	··· P.19
Specific Product Precautions	··· P.20



AS-R/AS-Q Series Model Selection

1 Selection of Applicable Cylinder Bore Sizes

The bore sizes applicable to the air saving speed controller are shown in Table 1.

Table 1 Applicable Cylinder Bore Size

Cylinder bore size [mm]	AS22R-□-□ AS22Q-□-□	AS32R-□-□ AS32Q-□-□	AS42R-⊟-⊟ AS42Q-⊟-⊟
32	•		
40	•		
50	•	•	
63		•	
80		•	•
100			•
125			•

2 Selection of Allowable Jig Weights

When the air saving speed controller is used, the jig weight which is mounted to the cylinder should be below the values in the table below.*1

Selection Method

If a jig exceeding the allowable jig weight is mounted, the driving speed will change greatly in the middle of the cylinder stroke, which may cause a sudden extension.

- *1 If the load varies during the stroke, such to push out a workpiece, do not use the AS-Q for control on the extension side. This can cause a sudden extension. In this case, use a meter-in control type speed controller.
- *2 The coefficient of friction of the guide should be 0.5 or less.
- *3 Compare the weight specified based on the cylinder stroke and the allowable lateral load shown in the table and select a weight smaller than the actual weight of the jig.

	1 Horizontal movement with guide *2	②Vertical and horizontal movement of the load *3
Applicable cylinder bore size [mm]		
32	3.3	1.6
40	5.1	2.6
50	8.0	4.0
63	12.7	6.4
80	20.5	10.3
100	32.1	16.0
125	50.1	25.0

Table 2 Relation between Cylinder Bore Size and Allowable Weight of Jig Unit: kg


Model Selection AS-R/AS-Q Series

3 Calculation of Fill Time at the Stroke End of the AS-Q with Rapid Supply and Exhaust Function

The fill time at the stroke end can be calculated by multiplying the value read from the graph shown in Figure 1 by the actual fill volume. However, the applicable piston speed is 50 mm/sec or more.

Example: Use AS22Q,

Needle rotation angle: 90° Cylinder tube I.D.: 50 mm Stroke: 50 mm Fill time [s] = Fill time [s/L] read from Fig. 1 x Fill volume [L] Fill volume [L] = Bore size² [mm²] x $\pi/4$ x Stroke [mm]/10⁶




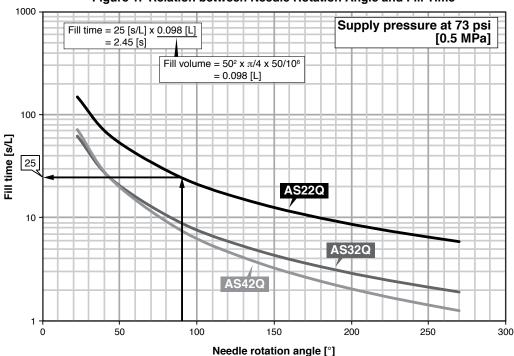


Figure 1. Relation between Needle Rotation Angle and Fill Time

Figure 2. Fill Time Diagram




Air Saving Speed Controller with Pressure Reduction Function/ with Rapid Supply and Exhaust Function AS-R/AS-Q Series

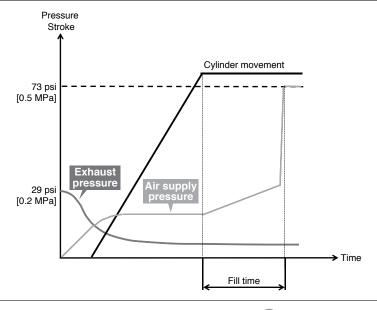

Model

			Applicable tubing O.D.										
Model		Port size			c size thread: R, G)		Inch size (Applicable thread: NPT)						
			6	8	10	12	1/4"	5/16"	3/8"	1/2"			
AS22R-01-0	_	1/8	•	•	•		•	•					
AS22R-02-0	AS22Q-□02-□	1/4	•	•	•		•	•					
AS32R-02-0	AS32Q-02-0	1/4	•	•	•			•	•				
AS32R-03-0	AS32Q-□03-□	3/8	•	•	•			•	•				
AS42R-03-0	AS42Q-□03-□	3/8			•	•			•	•			
AS42R-04-	AS42Q-□04-□	1/2			•				•				

Flow Direction Symbols on Body

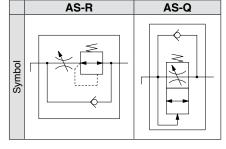

▲ Caution

- Be sure to read this before handling the
- products. Refer to the back cover for
 safety instructions. For flow control
- equipment precautions, refer to the
- Grading Precautions, refer to the I
 "Handling Precautions for SMC I
- Products" and the "Operation Manual"
- on the SMC website:
- http://www.smcworld.com

Specifications

	Item	With pressure reduction function AS-R	With rapid supply and exhaust function AS-Q				
Fluid		Air					
Proof pressure		152 psi [1	.05 MPa]				
Maximum operati	ng pressure	102 psi	[0.7 MPa]				
Minimum operatin	ng pressure	44 psi [0.3 MPa]					
Set pressure (Supply pressure	Set pressure for pressure reduction function	29 psi [0.2 MPa]	_				
at 73 psi [0.5 MPa])	Minimum pressure for rapid supply function initiation	_	29 psi [0.2 MPa]				
Ambient and fluid	I temperature	23 to 140°F [–5 to	60°C] (No freezing)				
Applicable tubing	ı material	Nylon, Soft nylon, Polyurethane*1 FEP, PFA					

*1 Use caution at the maximum operating pressure when using soft nylon or polyurethane tubing. (For details, refer to the Web Catalog or Best Pneumatics.)

Sonic Conductance and Critical Pressure Ratio for Air Saving Speed Controllers

With Pressure Reduction Function: AS-R Series

Model		-	2R-01 2R-02		S32R-0 S32R-0	AS42R-03 AS42R-04						
Tubing	Metric size	ø6	ø8 ø10	ø6	ø8	ø10	ø10	ø12				
O.D.	Inch size	ø1/4"	ø5/16"	ø1/4"	ø5/16"	ø3/8"	ø3/8"	ø1/2"				
C values: Sonic	Free flow	1.0	1.4	1.1	1.8	2.2	3.2	3.6				
conductance dm³/(s·bar)	Controlled flow	0	.3		0.5	1.0						
b values: Critical	Free flow	0.3	0.2	0.3	0.3 0.2			.3				
pressure ratio	Controlled flow	0.3	0.4		0.4		0.4					

* C and b values are for controlled flow with the needle fully open and free flow with the needle fully closed.


With Rapid Supply and Exhaust Function : AS-Q Series

Mod	el	AS22	Q-02		S32Q-0 S32Q-0	AS42Q-03 AS42Q-04			
Tubing	Metric size	ø6	ø8 ø10	ø6	ø8	ø10	ø10	ø12	
O.D.	Inch size	ø1/4"	ø5/16"	ø1/4"	ø5/16"	ø3/8"	ø3/8"	ø1/2"	
C values: Sonic	Free flow	1.0	1.4	1.1	1.8	2.2	3.2	3.6	
conductance dm³/(s·bar)	Controlled flow	0	.2		0.6			.9	
b values: Critical	Free flow	0.4	0.3	0.4	0.3	0.2	0.3		
Critical pressure ratio	Controlled flow	0	.6		0.6		0.5	0.6	

* C and b values are for controlled flow with the needle fully open and free flow with the needle fully closed.

Air Saving Speed Controller AS-R/AS-Q Series

How to Order

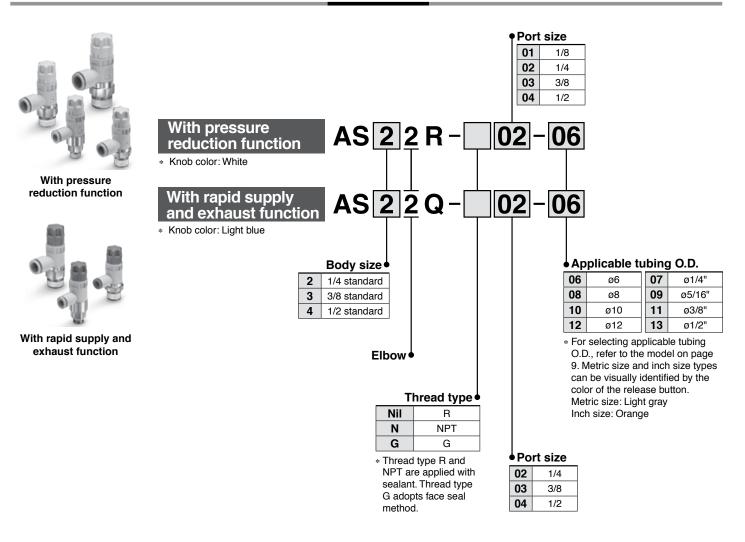


* Only meter-in type is available. The meter-out version is not available and therefore is not shown in this How to Order.


AS-R/AS-Q Series

Flow Rate Characteristics


With Pressure Reduction Function: AS-R Series (Inlet pressure: 73 psi [0.5 MPa)

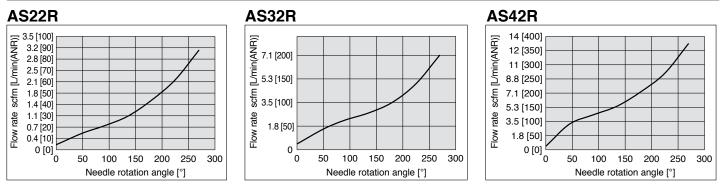


With Rapid Supply and Exhaust Function: AS-Q Series (Inlet pressure: 73 psi [0.5 MPa])

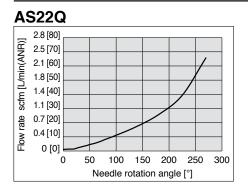

AS32Q

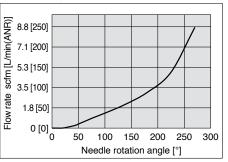



AS42Q

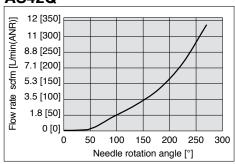


Pressure Characteristics (AS-R)


* AS-Q does not have a pressure reduction function. The pressure characteristics are not applicable.

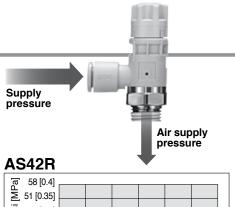

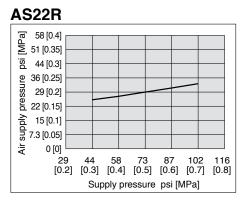

AS32R

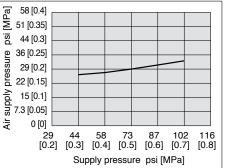

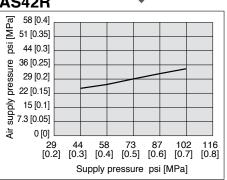


Cylinder Speed at Maximum Needle Rotation Angle (Guide)

				Unit: mm/s
Cylinder bore size [mm]	Port size	AS22□	AS32□	AS42□
ø50	1/4	220	350	_
ø80	3/8	—	240	330
ø100	1/2	—	—	220

Measurement conditions
 Cylinder stroke : 150 mm
 Supply pressure : 73 psi [0.5 MPa]
 Needle rotation angle: 270°
 Load : None
 Mounting orientation : Horizontal


* The values shown above are representative and not guaranteed.


As this product is the meter-in control type, it can be operated with less flow rate than the current (meter-out control) type.

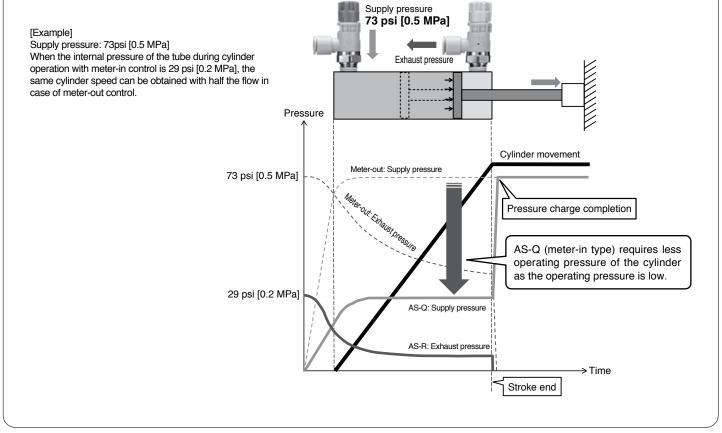

AS-R/AS-Q Series


Construction

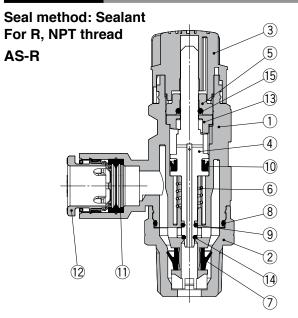


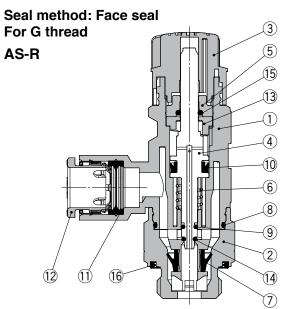

Component Parts

	-		1
No.	Description	Material	Note
1	Body A	PBT	
2	Body B	Brass	Electroless nickel plating
3	Knob	POM	
4	Needle	POM	
5	End cover	Brass	Electroless nickel plating
6	Spring	Steel wire	
7	U-seal	HNBR	
8	O-ring	NBR	
9	Needle O-ring	NBR	
10	Y-seal	NBR	
11	Seal for fitting	NBR	
12	Cassette	—	
13	Stator	POM	
14	Valve O-ring	HNBR	
15	Shaft O-ring	NBR	
16	Seal	NBR	

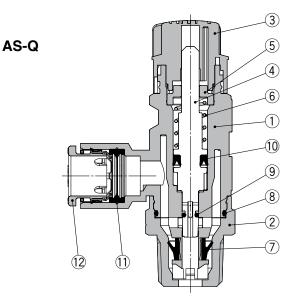


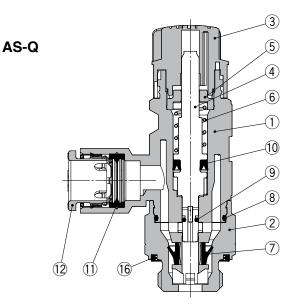

SMC

Air Saving Speed Controller For R, NPT thread AS-R/AS-Q Series


Dimensions: AS-R







N

 \ast The release button of ø6 One-touch fitting is oval as shown above. The button can be rotated freely.

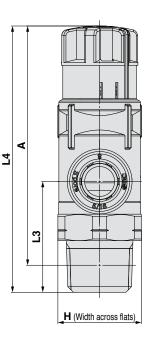

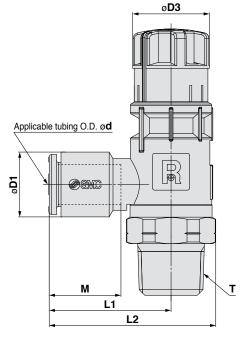



Metric Size														[mm]
Model	d	т	н	D1	D3	L1	L2	L3	L4	* 1	Α	*2	м	Weight
Model	u	l I	п		03	L I	LZ	LJ	Max.	Min.	Max.	Min.	IVI	[g]
AS22R-01-06	6			11.2	45.0	24.1	32.5						13.3	26
AS22R-01-08	8	1/8	13	13.2	15.6 (15.9)	24.8	33.2	27.1	60.3	58.7	57.1	55.5	14.2	26
AS22R-01-10	10]		15.9	(13.5)	28.2	36.6]					15.6	28
AS22R-02-06	6			11.2	45.0	24.1	33.4						13.3	25
AS22R-02-08	8	1/4	17	13.2	15.6 (15.9)	24.8	34.1	22.6	55.8	54.2	50.3	48.7	14.2	26
AS22R-02-10	10]		15.9	(13.8)	28.2	37.5]					15.6	27
AS32R-02-06	6			10.4	10.0	22	32.3	36.4					13.3	48
AS32R-02-08	8	1/4	19	13.2	18.3 (18.7)	23.6	33.9	30.4	73.8	72.2	68.3	66.7	14.2	49
AS32R-02-10	10]		15.9	(10.7)	28	38.3	35.7]				15.6	50
AS32R-03-06	6			10.4	10.0	22	32.3	00.7					13.3	41
AS32R-03-08	8	3/8	19	13.2	18.3 (18.7)	23.6	33.9	28.7	66.1	64.5	60.9	59.3	14.2	41
AS32R-03-10	10]		15.9	(10.7)	28	38.3	28]				15.6	42
AS42R-03-10	10	3/8	24	15.9	23.5	28.2	41.1	46	00.4	87.8	84.2	82.6	15.6	98
AS42R-03-12	12	3/8	24	19.3	(23.9)	32.3	45.2	44.9	89.4	07.8	04.2	02.0	17	100
AS42R-04-10	10	1/2	24	15.9	23.5	28.2	41.1	36.2	79.6	78	72.5	70.9	15.6	76
AS42R-04-12	12	1/2	24	19.3	(23.9)	32.3	45.2	35.1	/9.0	18	72.5	70.9	17	78

*1 Reference dimensions

*2 Reference dimensions of threads after installation

 $\ast\,$ The () D3 dimension is the maximum value.

Inch Size

Inch Size														[mm]
Model	d	т	н	D1	D3	L1	L2	L3	L4	*1	A	*2	м	Weight
woder	u		п	וט	03	L I		LJ	Max.	Min.	Max.	Min.	IVI	[g]
AS22R-N01-07	1/4"	1/8	12.7	11.2	15.6	24.1	32.5	27.1	60.3	58.7	57.1	55.5	13.3	26
AS22R-N01-09	5/16"	1/0	12.7	13.2	(15.9)	24.8	33.2	27.1	00.3	50.7	57.1	55.5	14.2	26
AS22R-N02-07	1/4"	1/4	17.5	11.2	15.6	24.1	33.5	22.6	55.8	54.2	50.3	48.7	13.3	26
AS22R-N02-09	5/16"	1/4	17.5	13.2	(15.9)	24.8	34.2	22.0	55.6	54.2	50.5	40.7	14.2	26
AS32R-N02-09	5/16"	1/4	19	13.2	18.3	23.6	33.9	36.4	73.8	72.2	68.3	66.7	14.2	51
AS32R-N02-11	3/8"	1/4	19	15.9	(18.7)	28	38.3	35.7		12.2	00.0	00.7	15.6	52
AS32R-N03-09	5/16"	3/8	19	13.2	18.3	23.6	33.9	28.7	66.1	64.5	60.9	59.3	14.2	42
AS32R-N03-11	3/8"	3/0	19	15.9	(18.7)	28	38.3	28	00.1	04.5	00.9	59.5	15.6	43
AS42R-N03-11	3/8"	3/8	<u> </u>	15.9	23.5	28.2	41	46	89.4	87.8	84.2	82.6	15.6	97
AS42R-N03-13	1/2"	3/0	23.8	19.3	(23.9)	32.3	45.1	44.9	09.4	07.0	04.2	02.0	17	99
AS42R-N04-11	3/8"	1/2	23.8	15.9	23.5	28.2	41	36.2	79.6	78	72.5	70.9	15.6	75
AS42R-N04-13	1/2"	1/2	23.0	19.3	(23.9)	32.3	45.1	35.1	79.0	70	72.5	70.9	17	77

*1 Reference dimensions

*2 Reference dimensions of threads after installation

* The () D3 dimension is the maximum value.



AS-R/AS-Q Series For R, NPT thread

Dimensions: AS-Q IIII Seal method: Sealant ø**D3** For R, NPT thread Applicable tubing O.D. ød ∢ 7 ē ØSMC 97 Ľ * The release button of ø6 One-touch fitting is oval as shown above. The button can be rotated freely. М Т L1 H (Width across flats) L2 [mm]

Matric Siza

Metric Size														[mm]
Model	d	т	н	D1	D3	L1	L2	L3	L4*1		A * ²		м	Weight
Model	a	l I	п	וט	03		LZ	LJ	Max.	Min.	Max.	Min.	IVI	[g]
AS22Q-02-06	6			11.2	45.0	24.1	33.4						13.3	25
AS22Q-02-08	8	1/4	17	13.2	15.6 (15.9)	24.8	34.1	22.6	55.8	54.2	50.3	48.7	14.2	26
AS22Q-02-10	10			15.9	(13.3)	28.2	37.5						15.6	27
AS32Q-02-06	6			10.4	10.0	22	32.3	36.4					13.3	48
AS32Q-02-08	8	1/4	19	13.2	18.3 (18.7)	23.6	33.9	30.4	73.8	72.2	68.3	66.7	14.2	48
AS32Q-02-10	10			15.9		28	38.3	35.7					15.6	49
AS32Q-03-06	6			10.4	10.0	22	32.3	28.7					13.3	40
AS32Q-03-08	8	3/8	19	13.2	18.3 (18.7)	23.6	33.9	20.7	66.1	64.5	60.9	59.3	14.2	41
AS32Q-03-10	10			15.9	(10.7)	28	38.3	28					15.6	42
AS42Q-03-10	10	3/8	24	15.9	23.5	28.2	41.1	46	89.4	87.8	84.2	82.6	15.6	97
AS42Q-03-12	12	3/0	24	19.3	(23.9)	32.3	45.2	44.9	09.4	87.8	04.2	02.0	17	100
AS42Q-04-10	10	1/2	24	15.9	23.5	28.2	41.1	36.2	79.6	78	72.5	70.9	15.6	76
AS42Q-04-12	12	1/2	24	19.3	(23.9)	32.3	45.2	35.1	79.0	10	12.5	70.9	17	78

*1 Reference dimensions

*2 Reference dimensions of threads after installation

* The () D3 dimension is the maximum value.

Inch Size

Inch Size														[mm]
Model	d	т	н	D1	D3	L1	L2	_2 L3 -	L4	! *1	A *2		м	Weight
woder	a		п	וט	03	L I	LZ	LJ	Max.	Min.	Max.	Min.	IVI	[g]
AS22Q-N02-07	1/4"	1/4	17.5	11.2	15.6	24.1	33.5	22.6	55.8	54.2	50.3	48.7	13.3	26
AS22Q-N02-09	5/16"	1/4	17.5	13.2	(15.9)	24.8	34.2	22.0	55.6	54.Z	50.3	40.7	14.2	26
AS32Q-N02-09	5/16"	1/4	19	13.2	18.3	23.6	33.9	36.4	73.8	72.2	68.3	66.7	14.2	50
AS32Q-N02-11	3/8"	1/4	19	15.9	(18.7)	28	38.3	35.7	75.0	12.2	00.5	00.7	15.6	52
AS32Q-N03-09	5/16"	3/8	19	13.2	18.3	23.6	33.9	28.7	00.1	64.5	60.9	50.0	14.2	42
AS32Q-N03-11	3/8"	3/0	19	15.9	(18.7)	28	38.3	28	66.1	64.5	60.9	59.3	15.6	43
AS42Q-N03-11	3/8"	3/8	23.8	15.9	23.5	28.2	41	46	89.4	87.8	84.2	82.6	15.6	97
AS42Q-N03-13	1/2"	3/8	23.0	19.3	(23.9)	32.3	45.1	44.9	09.4	07.0	04.2	82.0	17	99
AS42Q-N04-11	3/8"	1/2	23.8	15.9	23.5	28.2	41	36.2	79.6	78	72.5	70.9	15.6	75
AS42Q-N04-13	1/2"	1/2	23.8	19.3	(23.9)	32.3	45.1	35.1	79.0	70	12.5	70.9	17	76


*1 Reference dimensions

*2 Reference dimensions of threads after installation

* The () D3 dimension is the maximum value.



Air Saving Speed Controller For G thread AS-R/AS-Q Series

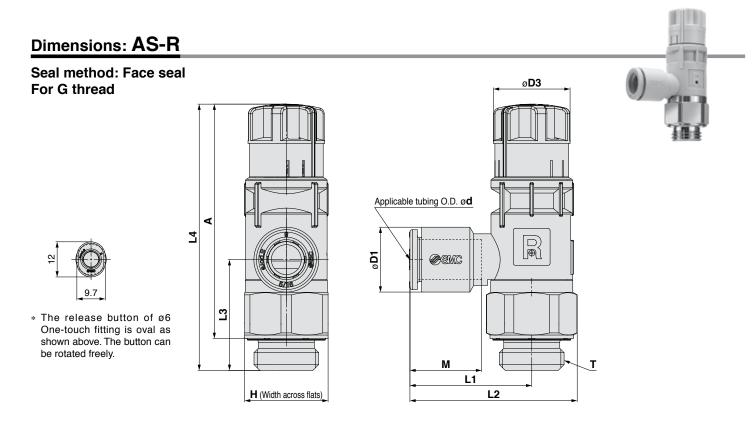

Metric Size

Metric Size														[mm]
Madal	d	-	н	D1	D3	L1	L2 L3	L3	L4*1		A *2		м	Weight
Model	a	I		וט	03	LI	LZ	LJ	Max.	Min.	Max.	Min.		[g]
AS22R-G01-06	6			11.2	45.0	24.1	32.5						13.3	28
AS22R-G01-08	8	1/8	13	13.2	15.6 (15.9)	24.8	33.2	27.5	60.7	59.1	55.2	53.6	14.2	28
AS22R-G01-10	10]		15.9	(13.3)	28.2	36.6]					15.6	29
AS22R-G02-06	6			11.2	45.0	24.1	33.4						13.3	28
AS22R-G02-08	8	1/4	17	13.2	15.6 (15.9)	24.8	34.1	22.6	55.8	54.2	49.3	47.7	14.2	28
AS22R-G02-10	10]		15.9	(13.9)	28.2	37.5]					15.6	29
AS32R-G02-06	6			10.4	10.0	22	33.2	36.4					13.3	60
AS32R-G02-08	8	1/4	21	13.2	18.3 (18.7)	23.6	34.8	30.4	73.8	72.2	67.3	65.7	14.2	61
AS32R-G02-10	10			15.9		28	39.2	35.7					15.6	62
AS32R-G03-06	6			10.4	10.0	22	33.2	28.7					13.3	48
AS32R-G03-08	8	3/8	21	13.2	18.3 (18.7)	23.6	34.8	20.7	66.1	64.5	58.6	57	14.2	49
AS32R-G03-10	10			15.9	(10.7)	28	39.2	28					15.6	50
AS42R-G03-10	10	3/8	27	15.9	23.5	28.2	42.6	46	89.4	87.8	81.9	80.3	15.6	116
AS42R-G03-12	12	3/0	21	19.3	(23.9)	32.3	46.7	44.9	09.4	07.0	01.9	00.3	17	118
AS42R-G04-10	10	1/2	27	15.9	23.5	28.2	42.6	36.2	79.6	78	70.6	69	15.6	93
AS42R-G04-12	12	1/2	21	19.3	(23.9)	32.3	46.7	35.1	/9.0	78	70.0	09	17	95

*1 Reference dimensions

*2 Reference dimensions of threads after installation

* The () D3 dimension is the maximum value.


AS-R/AS-Q Series For G thread


Dimensions: AS-Q

Seal method: Face seal For G thread



* The release button of ø6 One-touch fitting is oval as shown above. The button can be rotated freely.

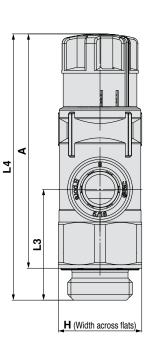

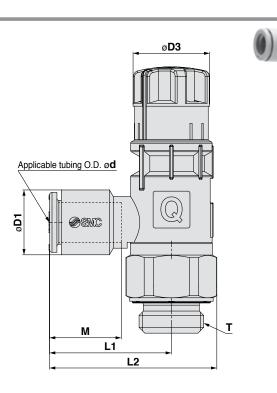

11

Metric Size

Metric Size														[mm]
Model	d	т	н	D1	D3	L1	L2	L3	L4*1		A *2		м	Weight
woder	a			וט	03		LZ	LJ	Max.	Min.	Max.	Min.	IVI	[g]
AS22Q-G02-06	6			11.2	45.0	24.1	33.4						13.3	28
AS22Q-G02-08	8	1/4	17	13.2	15.6 (15.9)	24.8	34.1	22.6	55.8	54.2	49.3	47.7	14.2	28
AS22Q-G02-10	10	1		15.9	(15.9)	28.2	37.5	1					15.6	29
AS32Q-G02-06	6			10.4	10.0	22	33.2	00.4					13.3	60
AS32Q-G02-08	8	1/4	21	13.2	- 18.3 - (18.7)	23.6	34.8	36.4	73.8	72.2	67.3	65.7	14.2	60
AS32Q-G02-10	10	1		15.9		28	39.2	35.7					15.6	61
AS32Q-G03-06	6			10.4	10.0	22	33.2	28.7					13.3	48
AS32Q-G03-08	8	3/8	21	13.2	18.3 (18.7)	23.6	34.8	28.7	66.1	64.5	58.6	57	14.2	49
AS32Q-G03-10	10]		15.9	(10.7)	28	39.2 28	28					15.6	50
AS42Q-G03-10	10	3/8	27	15.9	23.5	28.2	42.6	46	00.4	07.0	01.0	00.0	15.6	115
AS42Q-G03-12	12	3/8	21	19.3	(23.9)	32.3	46.7	44.9	89.4	87.8	81.9	80.3	17	117
AS42Q-G04-10	10	1/2	27	15.9	23.5	28.2	42.6	36.2	70.0	70	70.0	<u> </u>	15.6	92
AS42Q-G04-12	12	1/2	21	19.3	(23.9)	32.3	46.7	35.1	79.6	78	70.6	69	17	94


*1 Reference dimensions

*2 Reference dimensions of threads after installation

* The () D3 dimension is the maximum value.

Air Saving Speed Controller AS-R/AS-Q Series


Pressure Time Chart

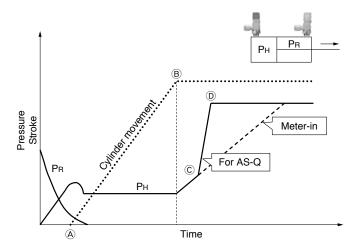

○ Working stroke pressure/Stroke change


Along the pressure supply, the piston moves from \underline{A} to \underline{B} . When the piston reaches \underline{B} , the head pressure (PH) **increases rapidly** from \underline{C} to \underline{D} .

Construction Principle

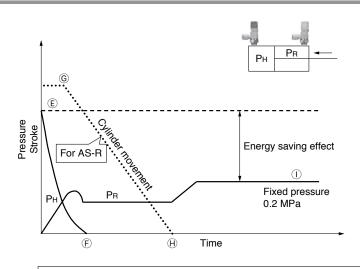

\bigcirc Return stroke pressure/Stroke change

To reduce the loss of time due to pressure difference, the head pressure (PH) is exhausted rapidly from (E) to (F), moving the piston from (G) to (H). The rod pressure (PR) **decreases to** (1) **by the built-in pressure reduction function**. This reduces air consumption by the amount of difference between supply pressure (E) and the differential pressure.

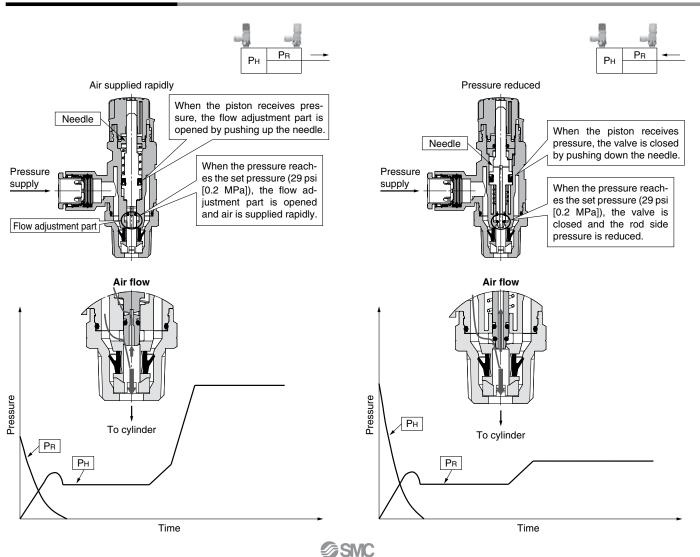

AS-R/AS-Q Series

Difference between Meter-in and Meter-out Control

Meter-out Control

Advantages
• Easy to adjust the speed.
 Speed is stabilized for the fluctuation of the load.

• Vertical control is available.


Disadvantages

• Compressed air on exhaust side is required (causing sudden extension).

• Regardless of the weight of the load, 100% of supply pressure is supplied during the movement of the cylinder. Air which is unnecessary for the load weight is consumed.

Caution

Make sure that compressed air is present at the exhaust side when starting the operation of the cylinder. Operation without compressed air at the exhaust side causes sudden extension.

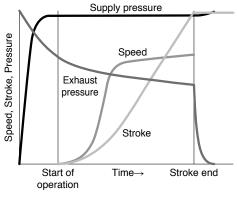

Feature of meter-out control

2 Meter-in Control

Advantages

- Not effected by exhaust condition.
- Operation starts quickly.
- Supply pressure depending on the weight load is supplied during the movement of the cylinder. Only air which is necessary for the load weight is consumed.

Disadvantages

- Susceptible for the changes in the load.
- Susceptible to the external or inertia force. Vertical control is difficult.
- Adiabatic expansion due to rapid exhaust of air may form dew in the cylinder.
- Use of air cushion is difficult.


Caution

Preventive measure against dew formation is necessary when compressed air is supplied.

For details, refer to the "Precautionary measures against condensation in a pneumatic system" in the Web Catalog.

Sudden extension...

When compressed air is not present at the exhaust side or pressure is lower than the supply pressure for meter-out circuit, orifice control is unavailable, making the actuator operate rapidly. There is no sudden extension usually for meter-in circuits.

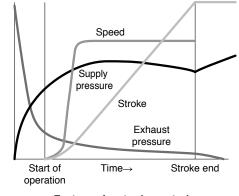



AS-R/AS-Q Series **Specific Product Precautions 1**



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Design and Selection

\land Warning

1. Check the specifications.

The products in this catalog are designed to be used in compressed air systems (including vacuum) only.

If the products are used in an environment where pressure or temperature is out of the specified range, damage and/or malfunction may result. Do not use under such conditions. (Refer to the specifications.)

Please contact SMC when using a fluid other than compressed air (including vacuum).

We do not guarantee against any damage if the product is used outside of the specification range.

2. The products in this catalog are not designed for the use as stop valve with zero air leakage.

A certain amount of leakage is allowed in the product's specifications. Tightening the needle to reduce leakage to zero may result in equipment damage.

- 3. Do not disassemble the product or make any modifications, including additional machining, It may cause human injury and/or an accident.
- 4. The flow rate characteristics for each product are representative values.

The flow rate characteristics are characteristics of each individual product. Actual values may differ depending on the piping, circuitry, pressure conditions, etc.

- 5. Sonic conductance (C) and critical pressure ratio (b) values for products are representative values. The speed controller's controlled flow values are with the needle fully open and free flow with the needle fully closed.
- 6. Check if PTFE can be used in application. PTFE powder (Polytetrafluoroethylene resin) is included in the seal material for piping taper thread of male thread type. Confirm that the

use of it will not cause any adverse effect on the system. Please contact SMC if the Safety Data Sheet (SDS) is required.

Mounting

\land Warning

1. Operation Manual

Install the products and operate them only after reading the Operation Manual carefully and understanding its contents. Also, keep the Operation Manual where it can be referred to as necessary.

- 2. Ensure sufficient space for maintenance activities. When installing the products, allow access for maintenance.
- 3. Tighten threads with the proper tightening torque. When installing the products, follow the listed proper torque.

Mounting


A Warning

4. After pushing the knob down to lock, confirm that it is locked. It should not be possible to rotate the knob to the right or to the left. If the knob is pulled with force, it may break. Do not pull the knob with excessive force.



5. Check the rotation angle of the knob.

Rotation angle is 270 degrees. The knob cannot be rotated more than this. Excessive rotation will cause damage to the product. Check the rotation angle before using the product.

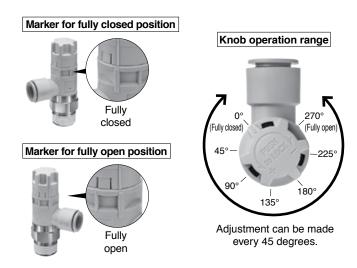

- 6. Do not use tools such as pliers to rotate the knob. It can cause idle rotation of the knob or damage.
- 7. Verify the air flow direction.

Mounting backward is dangerous, because the speed adjustment needle will not work and the actuator may lurch suddenly.

8. Adjust the speed by opening the needle slowly from the fully closed state.

Loose needle valves may cause unexpected sudden actuator lurching.

When a needle valve is turned clockwise, it is closed and actuator speed decreases. When a needle valve is turned counterclockwise, it is open and actuator speed increases.

9. Do not apply excessive force or shock to the body or fittings with an impact tool.

It can cause damage or air leakage.

Refer to the fittings & tubing precautions in the Best Pneumatics catalog for handling One-touch fittings.

10. Refer to the fittings & tubing precautions in the Best Pneumatics catalog for handling One-touch fittings.





AS-R/AS-Q Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Mounting

MWarning

11. To install/remove the product, use an appropriate wrench to tighten/loosen at the supplied nut on body B.

Do not apply torque at other points as the product may be damaged. Rotate body A manually for positioning after installation.

12. Do not use body A for applications involving continuous rotation.

Body A and the fitting section may be damaged.




≜Caution

1. This product has a stopper for fully closed/fully open in rotating direction. Excess torque may break the stopper. Table below shows the maximum allowable torque of the knob.

Body size	Max. allowable torque lbf·ft [N·m]					
2	0.05 [0.07]					
3	0.10 [0.13]					
4	0.18 [0.25]					



2. When performing the piping work, turn the tightening tool in the horizontal direction to the hexagon across flats of the body B so that any moment is not applied to the body A. If the tool is in contact with the body A, this may cause the body B to come off.



Caution For R, NPT Thread (With sealant)


Tightening method

 The proper tightening torques of the fittings are as shown in the table below. As a guide, tighten it by hand, then turn it two or three turns with a wrench. Check the dimensions of each product for the hexagon width across flats.

Connection thread size	Proper tightening torque lbf·ft [N·m]					
NPT, R1/8	2.2 to 3.7 [3 to 5]					
NPT, R1/4	5.9 to 8.9 [8 to 12]					
NPT, R3/8	11 to 15 [15 to 20]					
NPT, R1/2	15 to 18 [20 to 25]					

Chamfered area for female thread

By chamfering as shown in the table below, machining of threads is easier and effective for burr prevention.



For G Thread (Face seal)


Tightening method

First, tighten the threaded portion by hand, then use a proper wrench, which could be suitable for the width across flats of the hexagon body, to tighten it further at a wrench tightening angle shown in the table below. For a tightening torque guide, refer to the table below. Check the dimensions of each product for the hexagon width across flats.

Connection thread size	Wrench tightening angle after hand-tightening [deg]	Proper tightening torque lbf ft [N·m]
G1/8	10 to 20	2.2 to 3.0 [3 to 4]
G1/4	15 to 35	3.0 to 3.7 [4 to 5]
G3/8	15 to 35	5.9 to 6.6 [8 to 9]
G1/2	15 to 35	10 to 11 [14 to 15]

Chamfered area for female thread (Recommended value)

1. Conforming to ISO 16030-2001, the chamfered dimensions shown in the table below are recommended. By chamfering as shown in the table below, machining of threads is easier and effective for burr prevention.



SMC

Nominal	Chamfered dimension øD					
thread size	Min.	Max.				
1/8	9.8	10.2				
1/4	13.3	13.7				
3/8	16.8	17.2				
1/2	21.0	21.4				

2. Use G external threads with G internal threads.

AS-R/AS-Q Series Specific Product Precautions 3



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For flow control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com


Adjustment

A Warning


1. Adjust the knob with no pressure being supplied to the product.

If the adjustment is carried out on the pressurized product, it may cause idle rotation of the knob or a breakage of the internal components.

Example) When the product mounted on the head side is adjusted:

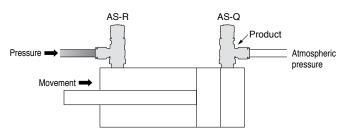

When the product mounted on the rod side is adjusted:

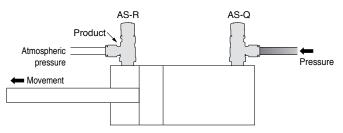

* Adjust the product when the cylinder operates in the direction of the arrow or completes the operation.

Piping Threads with Sealant

ACaution

- 1. If the fitting is tightened with excessive torque, a large amount of sealant will seep out. Remove the excess sealant.
- 2. Insufficient tightening may loosen the threads, or cause air leakage.

3. Reuse

- 1) Normally, fittings with a sealant can be reused up to 2 to 3 times.
- To prevent air leakage through the sealant, remove any loose sealant stuck to the fitting by blowing air over the threaded portion.
- 3) If the sealant no longer provides effective sealing, wind sealing tape over the sealant before reusing. Do not use the sealant in any form other than a tape type.
- 4) Normally, G thread (face seal) can be reused up to 6 to 10 times. Seals cannot be replaced.
- 4. Once the fitting has been tightened, backing it out to its original position often causes the sealant to become defective. Air leakage will occur.
- 5. Use R external threads with Rc internal threads and NPT external threads with NPT internal threads.

Piping

ACaution

1. Refer to the fittings & tubing precautions in the Best Pneumatics catalog for handling One-touch fittings.

2. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

3. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the pipe. Also, when the sealant tape is used, leave approx. 1 thread ridge exposed at the end of the threads.





These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury. Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 - (Part 1: General requirements) ISO 10218-1: Manipulating industrial robots – Safety.
 - etc.

- The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries.
- If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
- If anything is unclear, contact your nearest sales branch

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - •2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation of America 10100 SMC Blvd., Noblesville, IN 46060 www.smcusa.com

SMC Pneumatics (Canada) Ltd. www.smcpneumatics.ca



(800) SMC.SMC1 (762-7621) e-mail: sales@smcusa.com International inquiries: www.smcworld.com

© 2016 SMC Corporation of America, All Rights Reserved. All reasonable efforts to ensure the accuracy of the information detailed in this catalog were made at the time of publishing. However, SMC can in no way warrant the information herein contained as specifications are subject to change without notice