

# Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids



Low Particle Generation

Oil-free

Metal-free

\* Fluid contact parts

## Isolated structure

Direct operated rocker type/poppet type

The solenoid drive body is separated from the fluid area by a diaphragm.

## Power consumption

(With power saving circuit)

1.0\*1 W or less

\*1 Refer to page 1.

## Change in volume

(Pumping volume)

0.01  $\mu$ L or less

**New** A type with a sub-plate has been added to the LVM07 and LVM09/090 series.

LVM07 Series LVM09/090 Series



## New Variations/Options

7 mm width  
LVM07 Series



Body ported  
LVM09 Series



Plug connector, With light/surge  
voltage suppressor



Plug connector



Light



With reverse  
mounting prevention  
pin




**LVM Series**

**Direct Operated Rocker Type**

**LVM07, 09/090, 10/100, 15/150, 20/200**  
 p. 7 p. 11 p. 17 p. 24 p. 29

**Isolated structure**

The solenoid drive body is separated from the fluid area by a diaphragm.

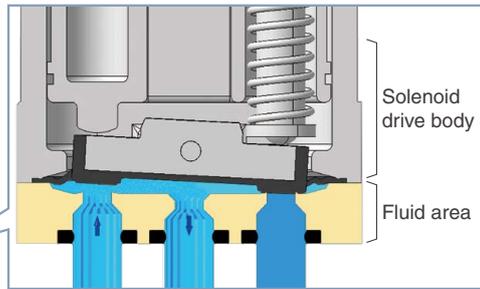


**Fluid contact material (Metal-free)**

Body/Plate

**PEEK**

Diaphragm

Choice of **EPDM, FKM, or Kalrez®**

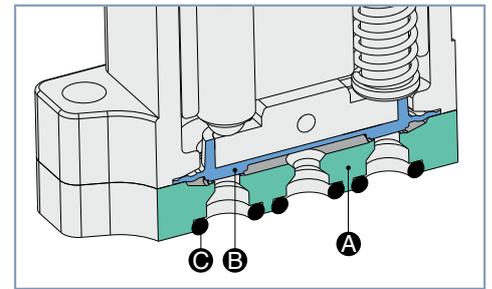


- A** Body/Plate material\*1: PEEK
- B** Diaphragm material: EPDM, FKM, or Kalrez®
- C** Interface gasket/O-ring material: EPDM, FKM, or Kalrez®

\*1 PFA can be selected for the plate material of the LVM10/100 base-mounted type.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

**Change in volume (Pumping volume)**

**0.01 μL or less**

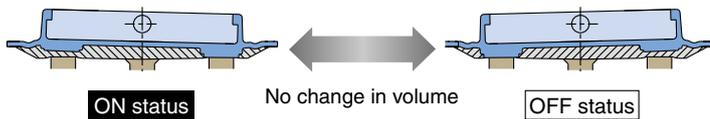

With a normal diaphragm valve, because the valve chamber volume varies depending on the ON or OFF status, the difference in volume is discharged into the outlet side of the valve when the valve is switched from ON to OFF.

However, with a rocker type valve, there is almost no change in volume, and thus **no fluid is discharged into the outlet side of the valve.**

**Valve chamber volume**

Residual liquid is reduced by suppressing the valve chamber volume.

Model	<b>New</b> LVM07	LVM09/090	LVM10/100	LVM15/150	LVM20/200
Valve chamber volume [μL]	8	18 (29)*1	20 (28)*1	50 (60)*1	84
Orifice diameter [mm]	0.8	1 (1.1)*2	1.4	1.6	2

\*1 ( ): For R6  
 \*2 ( ): For the base-mounted type


**A type with a power saving circuit can be selected.**

- Holding power consumption can be reduced substantially.
- Continuous energization for extended periods of time is possible.

Model		<b>New</b> LVM07	LVM09/090	LVM10/100	LVM15/150	LVM20/200
Power consumption [W]	Inrush	2.8	3.3	2.5	5.5	4
	Holding	0.8	0.9	1	1	0.6

Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time or used with a manifold.

## Space saving

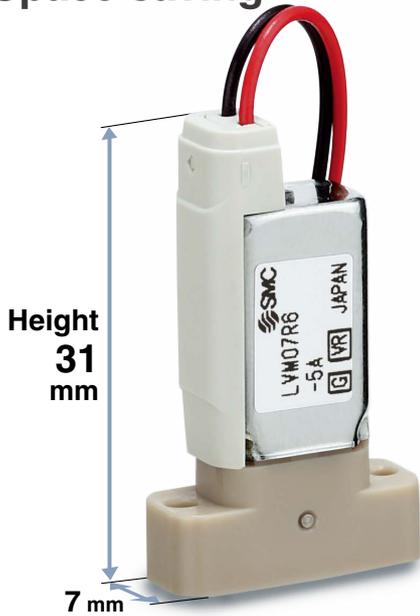


### New LVM07 Series

- Valve width: 7 mm
- Compact & Lightweight
  - Volume: 3.9 cm<sup>3</sup>
  - Height: 31 mm
  - Weight: 7 g

Unit: mm

Model	Valve width	Manifold pitch
New LVM07	7	8
LVM09/090	9.5	10.5
LVM10/100	13	14
LVM15/150	16	17
LVM20/200	20	21

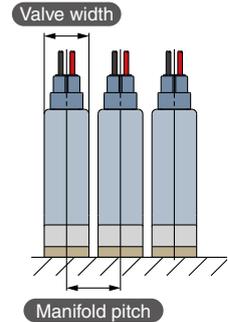

**Required space reduced by 50%**

Reduction in piping volume. Manifold can be designed to suit the space


**Weight reduced by 70%**

Weight reduced by using resin material

**No piping work required**


No piping work required between components

### Composite Manifold (Made to order)

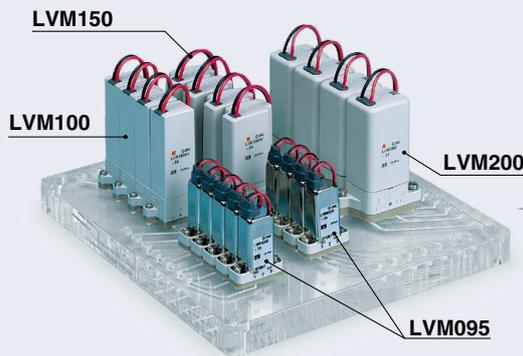

### Flow passage style with high flexibility

Three-dimensional flow passage that cannot be created by machining or injection molding

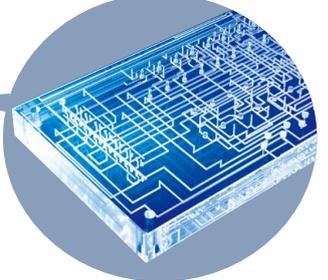

## New Options

### Plug connector, With light/surge voltage suppressor

#### Applicable models

Model	LVM07	LVM09/090	LVM10/100	LVM15/150	LVM20/200
Plug connector	—	●	●	●	●
With light/surge voltage suppressor	—	●	●	●	●

### With reverse mounting prevention pin

#### Applicable models

LVM07	LVM09/090	LVM10/100	LVM15/150	LVM20/200
●	●	●	●	●





## Direct Operated Rocker Type

### Series Variations

	Model	Valve type			Operating pressure range	Orifice dia. [mm]	Volume of valve chamber [ $\mu$ L]	Valve width [mm]	Weight [g]	Power consumption [W]	Options				
		N.C. (2-port)	N.O. (2-port)	Universal (3-port)							Reverse mounting prevention pin	Electrical entry Grommet	Plug connector	With light/surge voltage suppressor	
Base mounted	<p>p. 7</p>  <p>Without sub-plate      With sub-plate</p> <p><b>New LVM07R6</b></p>	<input checked="" type="checkbox"/>			-75 kPa to 0.1 MPa	0.8	8	7	7	Holding: 0.8 (With power saving circuit)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Body ported	<p>p. 11</p>  <p><b>New LVM09R1</b></p> <p><b>New LVM09R2</b></p> <p><b>New LVM092R</b></p>	<input checked="" type="checkbox"/>			-75 kPa to 0.2 MPa	1	18	9.5	22	Standard: 2 Power saving option Holding: 0.9 (With power saving circuit)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>												
				<input checked="" type="checkbox"/>											
Base mounted	<p>p. 11</p>  <p>Without sub-plate      With sub-plate</p> <p><b>New LVM09R6</b></p> <p>LVM093R</p> <p>LVM094R</p> <p>LVM095R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.2 MPa	1.1	18	9.5	20	Standard: 2 Power saving option Holding: 0.9 (With power saving circuit)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>								29				
		<input checked="" type="checkbox"/>									18				
				<input checked="" type="checkbox"/>											
Body ported	<p>p. 17</p>  <p>LVM10R1</p> <p>LVM10R2</p> <p>LVM102R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.25 MPa	1.4	20	13	34	Standard: 1.5 Power saving option Holding: 1 (With power saving circuit)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>												
				<input checked="" type="checkbox"/>											
Base mounted	<p>p. 17</p>  <p>Without sub-plate      With sub-plate</p> <p>LVM10R3</p> <p>LVM10R4</p> <p>LVM10R6</p> <p>LVM105R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.25 MPa	1.4	20	13	34	Standard: 1.5 Power saving option Holding: 1 (With power saving circuit)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>								28				
		<input checked="" type="checkbox"/>									20				
				<input checked="" type="checkbox"/>											
Base mounted	<p>p. 24</p>  <p>Without sub-plate      With sub-plate</p> <p><b>New LVM15R6</b></p> <p>LVM15R3</p> <p>LVM15R4</p> <p>LVM155R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.25 MPa [Max. 0.6 MPa]	1.6 [1]	50	16	45	Holding: 1 (With power saving circuit)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>								60				
		<input checked="" type="checkbox"/>									50				
				<input checked="" type="checkbox"/>											
Body ported	<p>p. 29</p>  <p>LVM20R1</p> <p>LVM20R2</p> <p>LVM202R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.25 MPa	2	84	20	80	Standard: 2.5 Power saving option Holding: 0.6 (With power saving circuit)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>												
				<input checked="" type="checkbox"/>											
Base mounted	<p>p. 29</p>  <p>Without sub-plate      With sub-plate</p> <p>LVM20R3</p> <p>LVM20R4</p> <p>LVM205R</p>	<input checked="" type="checkbox"/>			-75 kPa to 0.3 MPa	2	84	20	80	Standard: 2.5 Power saving option Holding: 0.6 (With power saving circuit)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
			<input checked="" type="checkbox"/>												
				<input checked="" type="checkbox"/>											

The [ ] indicate the values of the high-pressure type.


## Piping/Mounting Variations

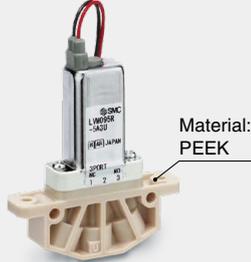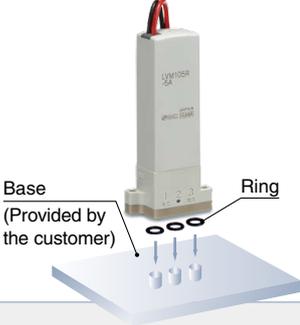Piping/ Mounting Model	Body ported	Base mounted		Page
		Without sub-plate	With sub-plate	
LVM07	—			7
LVM09/090				11
LVM10/100	<p>Manual override (Option)</p>  <p>Tubing (Provided by the customer)</p> <p>Bracket</p>	<p>Base (Provided by the customer)</p>  <p>Ring</p>		17
LVM15/150	—			24
LVM20/200				29

# Direct Operated Poppet Type LVM11/13


## Less clogging due to the poppet construction

- Isolated structure  
The solenoid drive body is separated from the fluid area by a diaphragm.
- Fluid contact material (Metal-free)

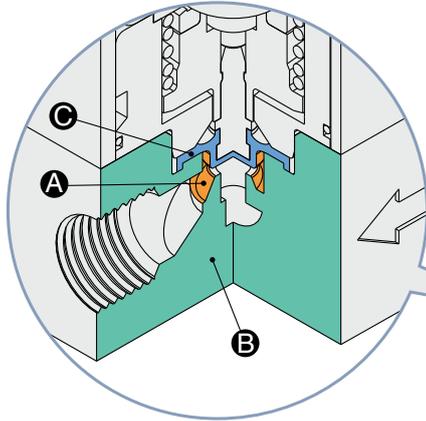


- A** Volume of valve chamber
- B** Body material: PEEK
- C** Diaphragm material: EPDM, FKM, or Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

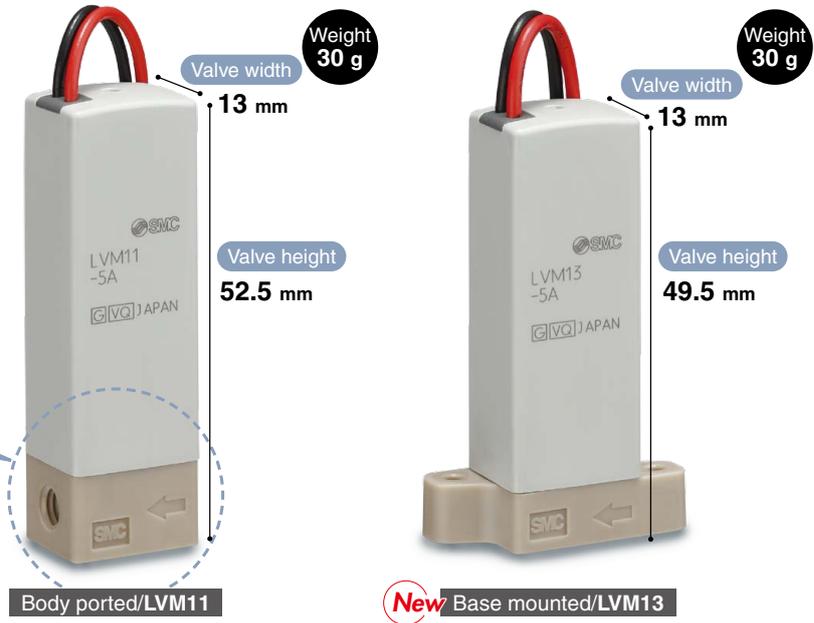

### Electrical entry

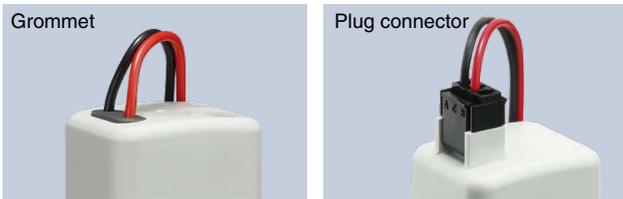

- Orifice diameter: 1.5 mm
- Volume of valve chamber Unit:  $\mu\text{L}$

Model	LVM11	LVM13
Volume of valve chamber	11	13

### Power saving circuit standardized

Holding power consumption can be reduced substantially. Continuous energization for extended periods of time is possible.

Model		LVM11	LVM13
Power consumption	Inrush	2.5	2.5
	Holding	1	1

Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time or used with a manifold.

- With light/surge voltage suppressor
- With reverse mounting prevention pin (Option)
- Application: Liquid discharge, etc.

## Series Variations

	Model	Valve type		Operating pressure range	Orifice dia. [mm]	Volume of valve chamber [ $\mu\text{L}$ ]	Valve width [mm]	Weight [g]	Power consumption [W]	Options			Body ported	Base mounted		Page
		N.C. (2-port)	N.O. (2-port)							Reverse mounting prevention pin	Electrical entry	With light/surge voltage suppressor		Without sub-plate	With sub-plate	
Body ported	LVM11	●		0 to 0.25 MPa	1.5	11	13	30	Inrush: 2.5 Holding: 1	—	●	●	●	●	—	36
Base mounted	<b>New</b> LVM13	●		0 to 0.25 MPa	1.5	13	13	30	Inrush: 2.5 Holding: 1	●	●	●	●	—	—	

# CONTENTS

## Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids

### LVM Series



#### Direct Operated Rocker Type LVM07 Series

How to Order	p. 7
Specifications	p. 8
Flow Rate Characteristics	p. 8
Construction: Base mounted	p. 9
Dimensions: Base mounted	p. 10

#### Direct Operated Rocker Type LVM09/090 Series

How to Order	p. 11
Specifications	p. 12
Flow Rate Characteristics	p. 12
Construction: Body ported	p. 13
Construction: Base mounted	p. 14
Dimensions: Body ported	p. 15
Dimensions: Base mounted	p. 16

#### Direct Operated Rocker Type LVM10/100 Series

How to Order	p. 17
Specifications	p. 18
Flow Rate Characteristics	p. 18
Construction: Body ported	p. 19
Construction: Base mounted	p. 20
Dimensions: Body ported	p. 21
Dimensions: Base mounted	p. 22

#### Direct Operated Rocker Type LVM15/150 Series

How to Order	p. 24
Specifications	p. 25
Flow Rate Characteristics	p. 25
Construction: Base mounted	p. 26
Dimensions: Base mounted	p. 27

#### Direct Operated Rocker Type LVM20/200 Series

How to Order	p. 29
Specifications	p. 30
Flow Rate Characteristics	p. 30
Construction: Body ported	p. 31
Construction: Base mounted	p. 32
Dimensions: Body ported	p. 33
Dimensions: Base mounted	p. 34

#### Direct Operated Poppet Type LVM11/13 Series

How to Order	p. 36
Specifications	p. 37
Flow Rate Characteristics	p. 37
Construction	p. 38
Dimensions: Body ported	p. 39
Dimensions: Base mounted	p. 40

Specific Product Precautions	p. 41
Spare Parts	p. 44
Safety Instructions	Back cover

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions


Spare Parts

Direct Operated Rocker Type



# Compact Direct Operated 2-Port Solenoid Valve for Chemical Liquids **LVM07 Series**

## How to Order

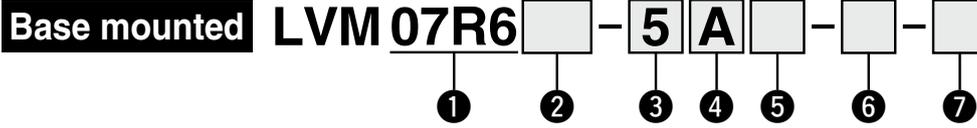

Without sub-plate  
Base mounted

With sub-plate  
Base mounted

### 1 Number of ports, Valve type

Symbol	Number of ports	Valve type	
07R6	2	N.C.	<p>IN (Symbol 1)      OUT (Symbol 2)</p>

### 2 Power saving circuit

Nil	None (Standard type)
Y1	Yes

### 3 Coil voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

### 4 Fluid contact material

Symbol	Body	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### 5 Sub-plate material/port size, Reverse mounting prevention pin

Symbol	Sub-plate		Reverse mounting prevention pin
	Material	Port size	
Nil			None
P	None		Yes <p>Reverse mounting prevention pin</p>
3	PEEK	M6	None
3U		1/4-28UNF	

### 6 Lead wire length

Nil	150 mm
3	300 mm
6	600 mm

### 7 CE/UKCA-compliant

Nil	No
Q	CE/UKCA-compliant

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

For the type without a sub-plate, mounting screws are included. (2 pcs.) M1.6 x 8.5/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

\* A sub-plate cannot be mounted for "P" (With reverse mounting prevention pin).

## Specifications



Without sub-plate  
Base mounted



With sub-plate  
Base mounted

Model		Base mounted	
		LVM07R6	
Valve construction		Direct operated rocker type	
Valve type		N.C.	
Number of ports		2	
Fluid*1		Air, Water, DI water (Pure water), Diluent, or Cleaning fluid	
Operating pressure range		-75 kPa to 0.1 MPa	
Orifice diameter		0.8 mm	
Response time*8		10 ms or less (at pneumatic pressure)	
Leakage		Zero leakage, both internal or external (at water pressure)	
Proof pressure*2		0.15 MPa	
Ambient temperature*9		0 to 50°C (No condensation)	
Fluid temperature*9		0 to 50°C	
Volume of valve chamber*3		8 μL	
Mounting orientation*4		Free	
Enclosure		IP40 or equivalent	
Weight		7 g (Without sub-plate), 11 g (With sub-plate)	
Rated voltage		12, 24 VDC	
Allowable voltage fluctuation*5		±10% of rated voltage	
Type of coil insulation		Class B	
Power consumption (When rated voltage is at 24 V)	Standard type	2.8 W (0.12 A)*6	
	With power saving circuit	Inrush	2.8 W (0.12 A)
		Holding	0.8 W
Coil switching noise*7		50 dB	

\*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.


\*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test

\*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted

\*4 When residual liquid needs to be taken into consideration, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.

\*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.

\*6 The LVM07R6 (standard type) requires power saving control. Conduct power saving control according to the figure below.

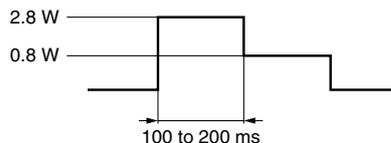

\*7 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.

\*8 In compliance with JIS B 8419:2010 (Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)

The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.

\*9 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when compared to the valve changeover time at room temperature (≈ 25°C).

## Flow Rate Characteristics

Water		Air	
Kv	Cv	C	b
0.004	0.005	0.02	0.2

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product  
Precautions


Spare Parts

# LVM07 Series

## Construction

---

### Base mounted LVM07R6

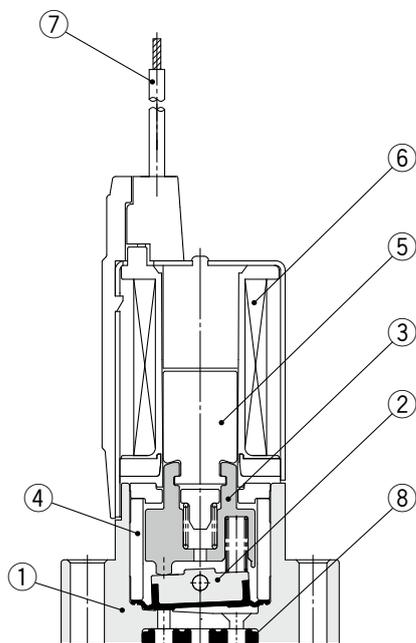

### Component Parts


No.	Description	Material
1	<b>Body</b>	PEEK
2	<b>Diaphragm assembly</b>	EPDM/FKM/Kalrez®
3	<b>Slide bushing assembly</b>	PPS/Stainless steel
4	<b>Bushing</b>	PPS
5	<b>Armature</b>	—
6	<b>Coil assembly</b>	—
7	<b>Lead wire</b>	—
8	<b>Interface gasket</b>	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.




## Dimensions

### Base mounted LVM07R6

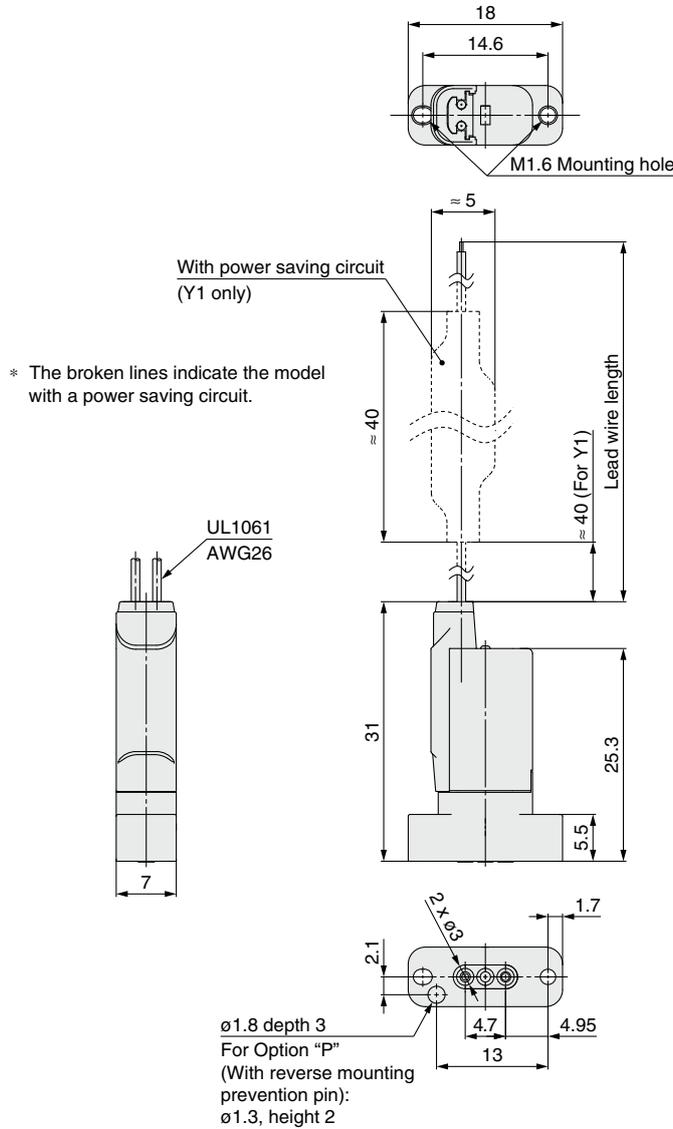

### Recommended interface dimensions \* Surface roughness = Rz3.2 or less

When using a positioning pin for mounting, the size should be  $\phi 1.5$ , and the height should be 2 or less.  
For Option "P" (With reverse mounting prevention pin), the size should be  $\phi 1.5$ , and the depth should be 2.3 or more.

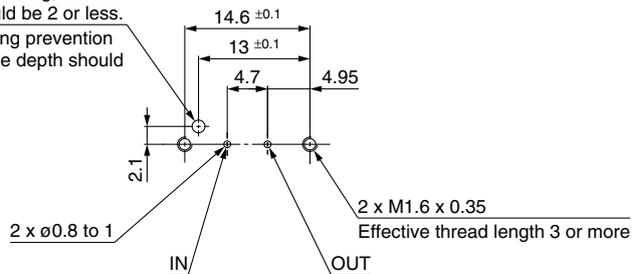

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/113

Specific Product Precautions



Spare Parts

# LVM07 Series

## Dimensions

With sub-plate

LVM07R6-□□□□□(N.C.)

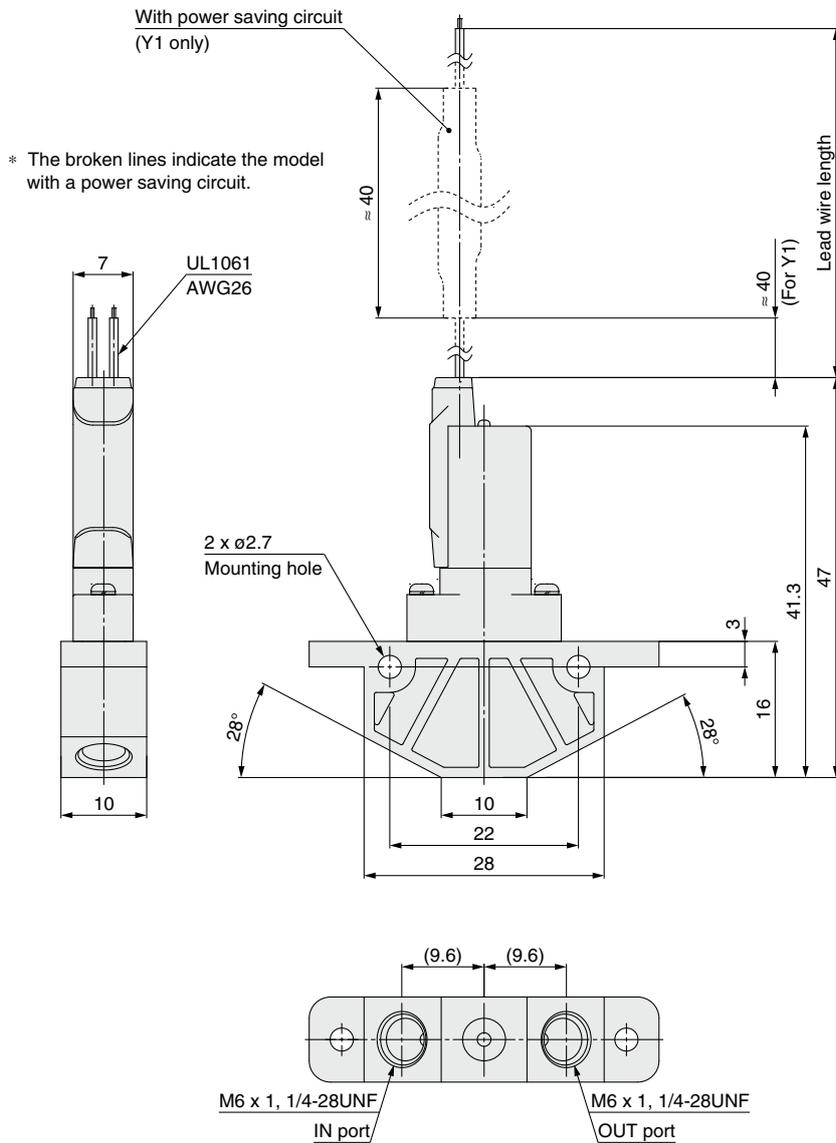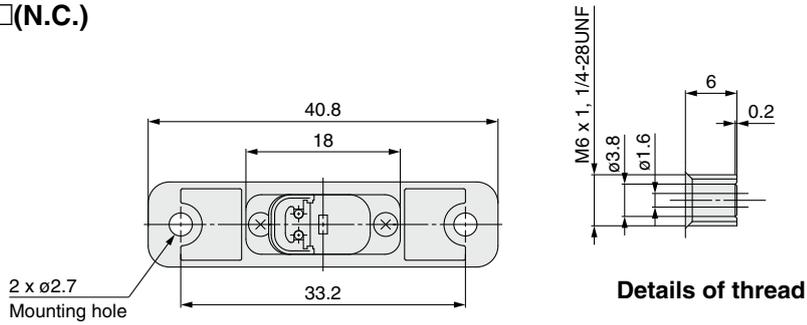





Direct Operated Rocker Type



# Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids LVM09/090 Series

## How to Order

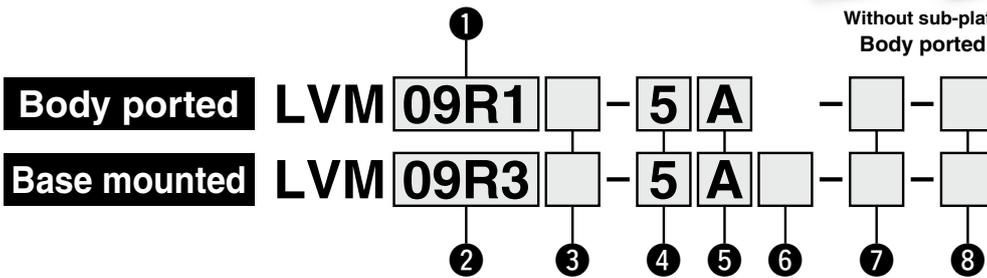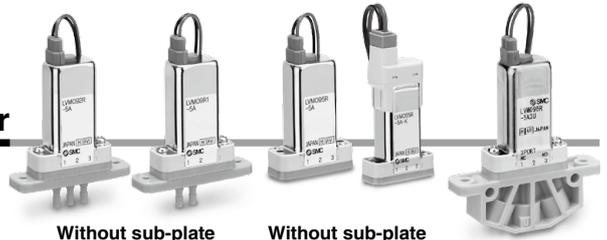

### 1 Number of ports, Valve type

Symbol	Number of ports	Valve type
09R1	2	N.C. 
09R2		N.O. 
092R	3	Universal 

### 2 Number of ports, Valve type

Symbol	Number of ports	Valve type
09R3	2	N.C. 
09R4		N.O. 
09R6		N.C. 
095R	3	Universal 

### 8 CE/UKCA-compliant

Symbol	Compliance
Nil	No
Q	CE/UKCA-compliant

### 3 Power saving circuit

Symbol	Power saving circuit
Nil	None (Standard type)
Y	Yes (Plug connector)
Y1	Yes (Grommet)

### 4 Coil voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

### 5 Fluid contact material

Symbol	Plate	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### 6 Sub-plate material/port size, Reverse mounting prevention pin

Symbol	Sub-plate		Reverse mounting prevention pin
	Material	Port size	
Nil			None
P		None	Yes 
3	PEEK	M6	None
3U		1/4-28UNF	

\* A sub-plate cannot be mounted for "P" (With reverse mounting prevention pin).

### 7 Electrical entry, Lead wire length, Light/surge voltage suppressor

Symbol	Electrical entry, Lead wire length	Light/surge voltage suppressor
Nil	Grommet, 150 mm	Cannot be selected
3	Grommet, 300 mm	
6	Grommet, 600 mm	
K	Plug connector, 300 mm	None
KO	Plug connector, Without connector	
KZ	Plug connector, 300 mm	Yes * Power saving circuit "Y" is equipped with a light/surge voltage suppressor.
KOZ	Plug connector, Without connector	

\* "3" or "6" must be selected for power saving circuit "Y1" (grommet). "Nil" cannot be selected.  
\* The plug connector is included but does not come assembled.  
\* If a lead wire length of 600 mm or more is required, select "KO□" (Without connector) and then add the connector part number shown below under the valve part number when ordering.

Plug connector part no.: SY100 - 30 - 4A -

Lead wire length

Symbol	Lead wire length
6	600 mm
10	1000 mm
30	3000 mm

Mounting screws are included with the base-mounted type (Without sub-plate). (2 pcs.)  
M2 x 11/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Specifications



Without sub-plate  
Body ported



Without sub-plate  
Body ported



Without sub-plate  
Base mounted



Without sub-plate  
Base mounted



With sub-plate  
Base mounted

Model	Body ported			Base mounted			
	LVM09R1	LVM09R2	LVM092R	LVM09R3	LVM09R4	LVM09R6	LVM095R
Valve construction	Direct operated rocker type						
Valve type	N.C.	N.O.	Universal	N.C.	N.O.	N.C.	Universal
Number of ports	2		3	2		3	
Fluid*1	Air, Water, DI water (Pure water), Diluent, or Cleaning fluid						
Operating pressure range	-75 kPa to 0.2 MPa						
Orifice diameter	1 mm			1.1 mm			
Response time*7	10 ms or less (at pneumatic pressure)						
Leakage	Zero leakage, both internal or external (at water pressure)						
Proof pressure*2	0.3 MPa						
Ambient temperature*8	0 to 50°C						
Fluid temperature*8	0 to 50°C (No freezing)						
Volume of valve chamber*3	18 μL			18 μL		29 μL	18 μL
Mounting orientation*4	Free						
Enclosure	IP40 or equivalent						
Weight	22 g			20 g (Without sub-plate), 24 g (With sub-plate)			
Rated voltage	12, 24 VDC						
Allowable voltage fluctuation*5	±10% of rated voltage						
Type of coil insulation	Class B						
Power consumption (When rated voltage is at 24 V)	Standard type		2 W (0.08 A)				
	With power saving circuit	Inrush	3.3 W (0.14 A)				
		Holding	0.9 W				
Coil switching noise*6	50 dB						

\*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.

\*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test

\*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted

\*4 Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.

\*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.

\*6 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.

\*7 In compliance with JIS B 8419:2010

(Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)

The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.

\*8 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when compared to the valve changeover time at room temperature (~ 25°C).

\* Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time.

## Flow Rate Characteristics

Water		Air	
Kv	Cv	C	b
0.015	0.018	0.06	0.2

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13


Specific Product Precautions

Spare Parts


# LVM09/090 Series

## Construction


Body ported  
LVM09R1

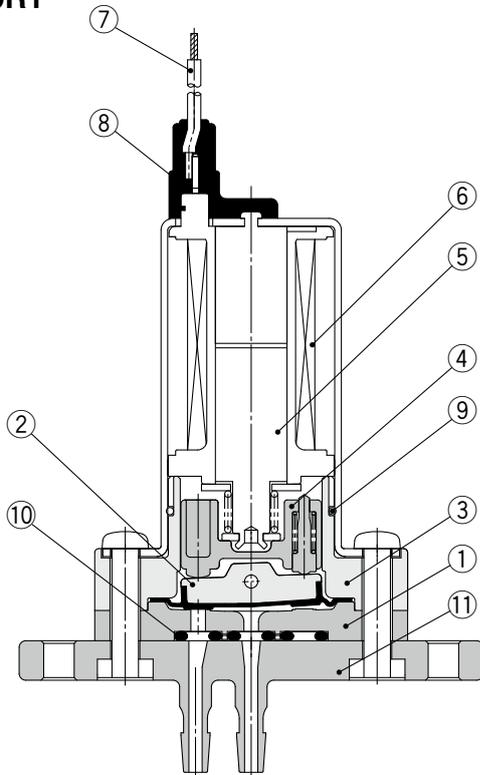

LVM09R2

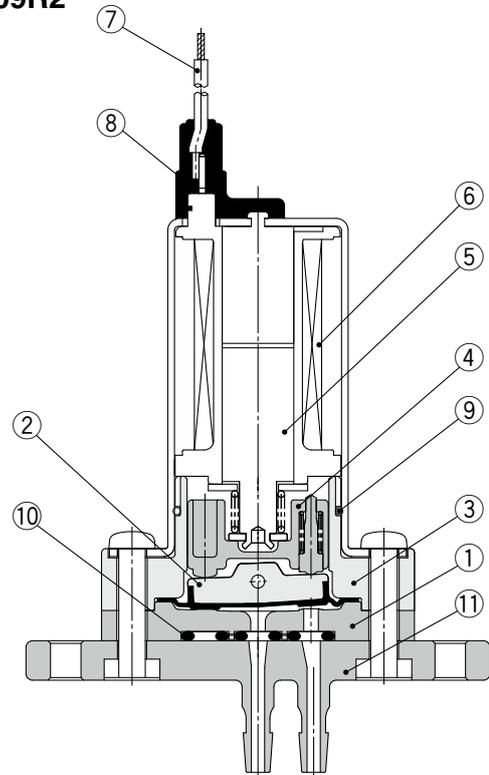

LVM092R

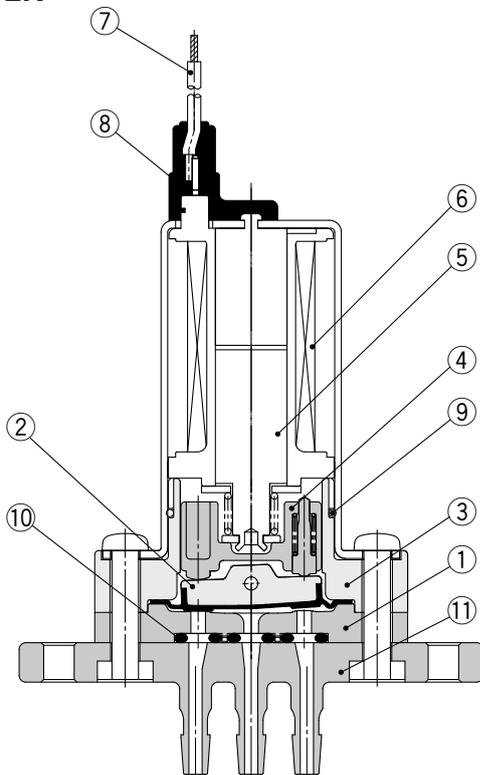


### Component Parts: LVM09R1, 09R2, 092R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	—
6	Coil assembly	—
7	Lead wire	—
8	Mold	PET
9	O-ring	NBR
10	Interface gasket	EPDM/FKM/Kalrez®
11	Piping plate	PEEK


\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Construction


Base mounted  
LVM09R3

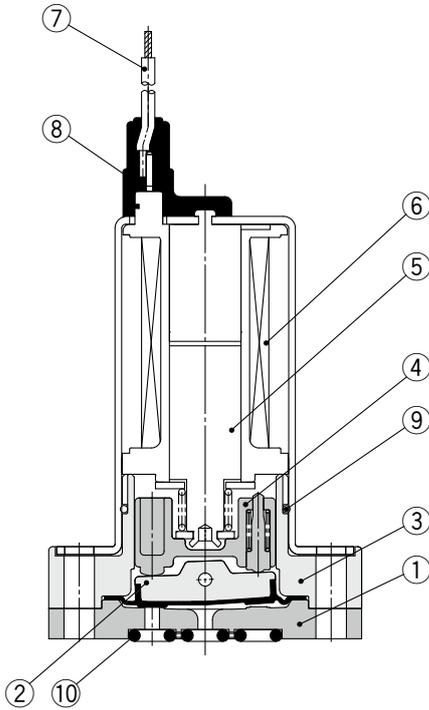


LVM09R4

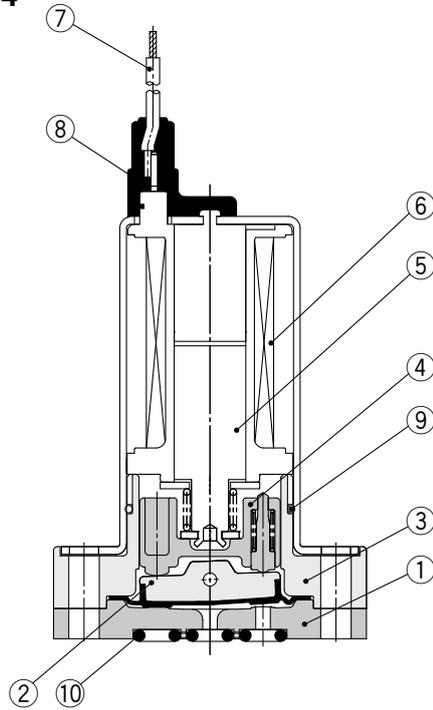

LVM09R6

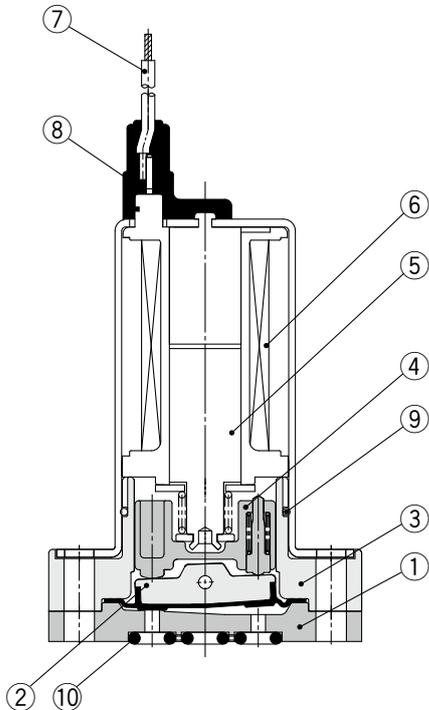

LVM095R

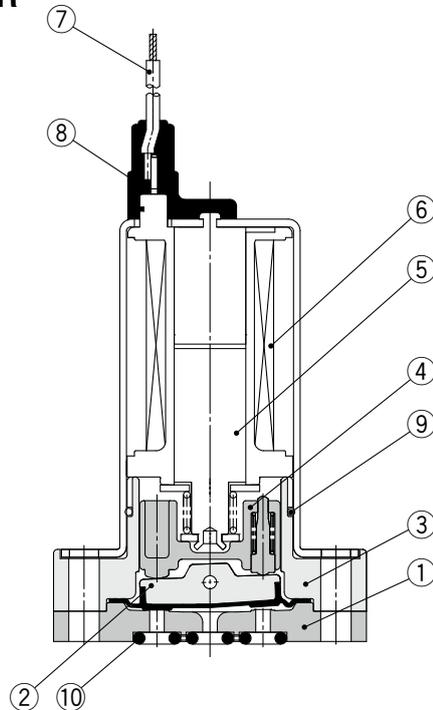

### Component Parts: LVM09R3, 09R4, 09R6, 095R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	—



No.	Description	Material
6	Coil assembly	—
7	Lead wire	—
8	Mold	PET
9	O-ring	NBR
10	Interface gasket	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

# LVM09/090 Series


## Dimensions

Body ported  
**LVM09R1**  
**LVM09R2**  
**LVM092R**

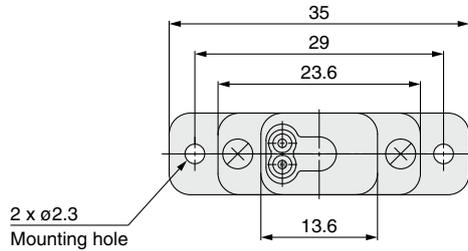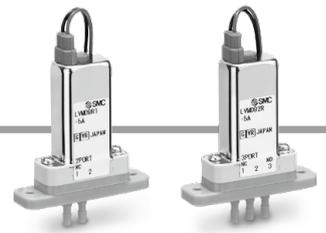


With power saving circuit  
 (Y1 only)


\* The broken lines indicate the model with a power saving circuit.

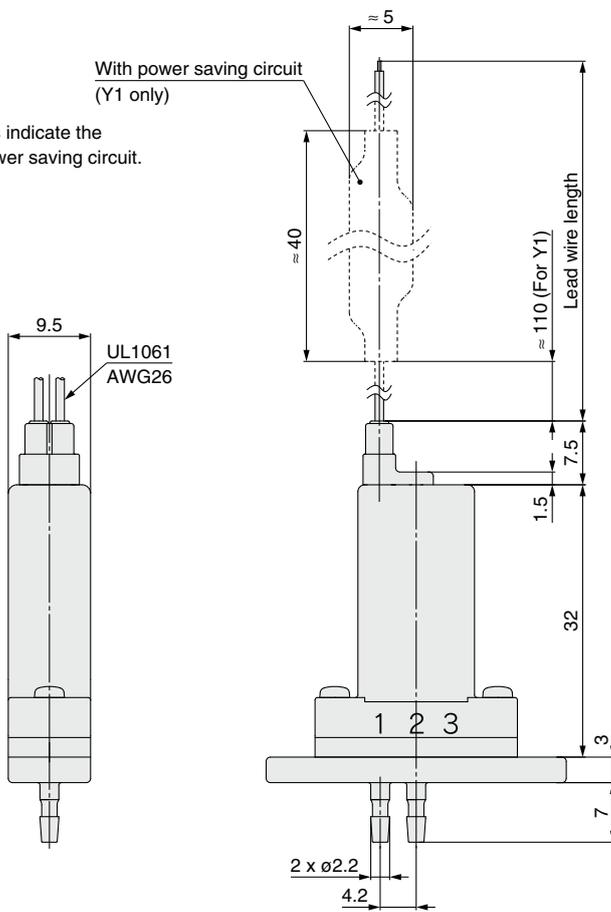



**LVM09R1**

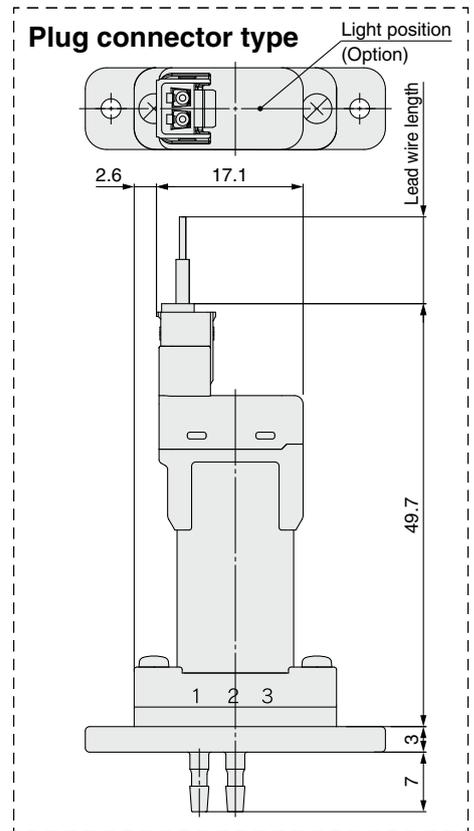

**LVM09R2**

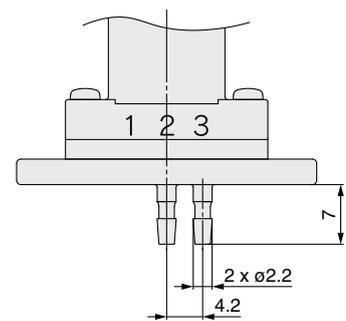

### Details of tube inlet

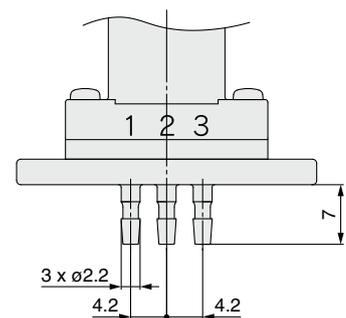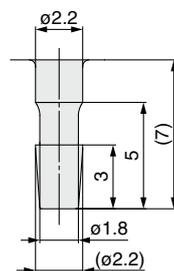

**LVM092R**



## Dimensions


With sub-plate

LVM09R3-□□□-□(N.C.)




LVM09R4-□□□-□(N.O.)

LVM09R6-□□□-□(N.C.)

LVM095R-□□□-□(Universal)

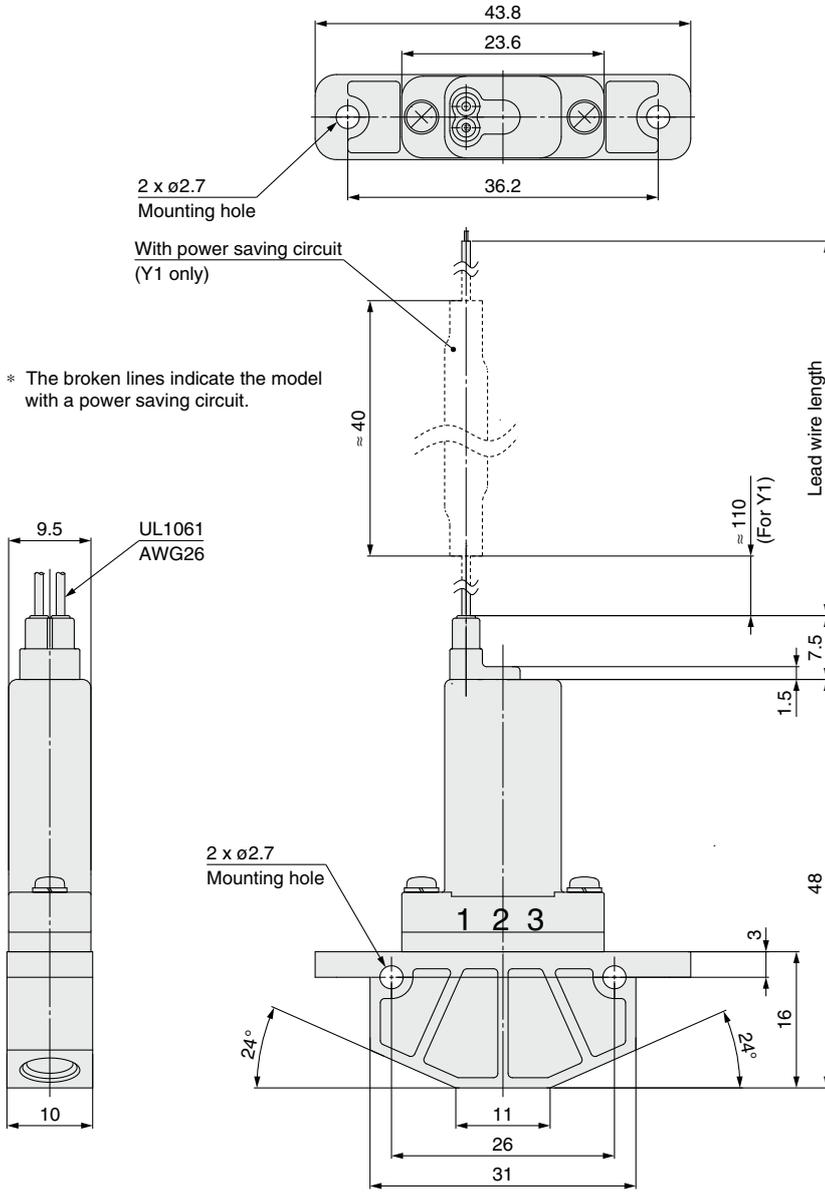

\* The broken lines indicate the model with a power saving circuit.

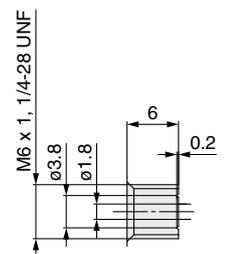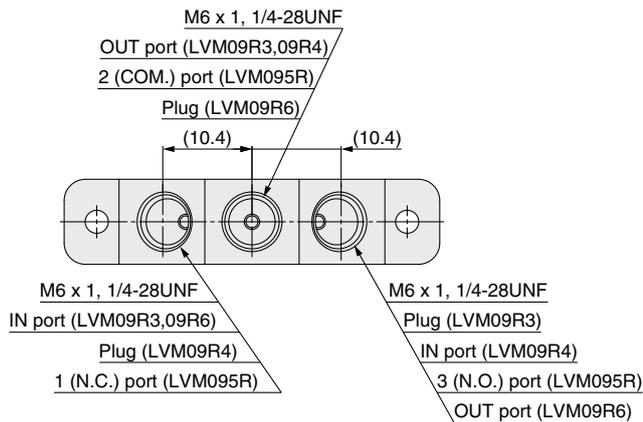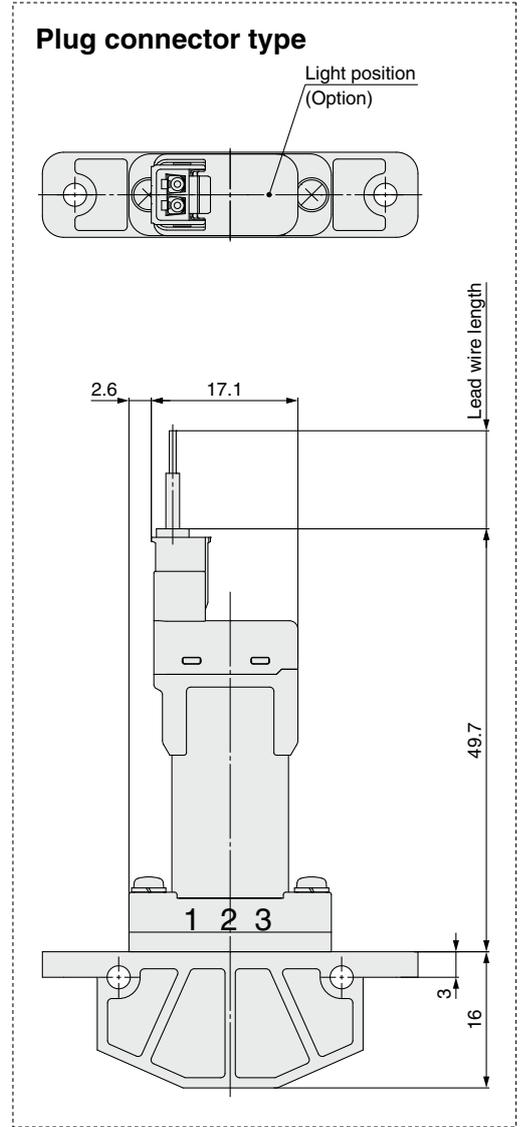

Details of thread

LVM07

LVM09/090

LVM10/100

LVM15/150


LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts




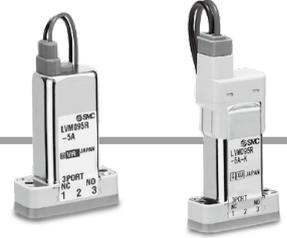






## Dimensions

Base mounted, Without sub-plate  
**LVM09R3/6-□□-□ (N.C.)**  
**LVM09R4-□□-□ (N.O.)**  
**LVM095R-□□-□ (Universal)**


\* The broken lines indicate the model with a power saving circuit.

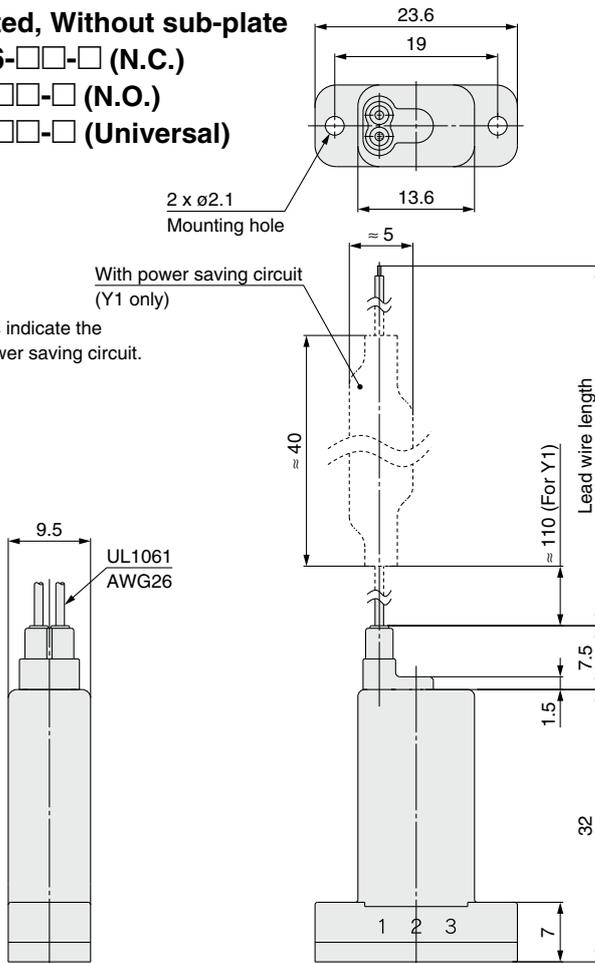

### Plug connector type

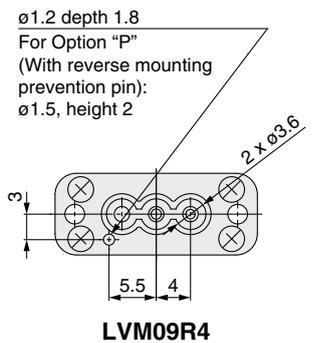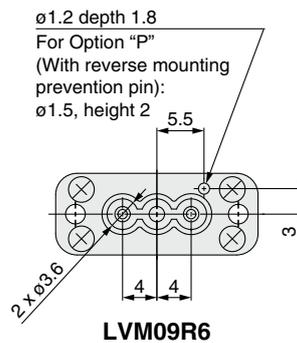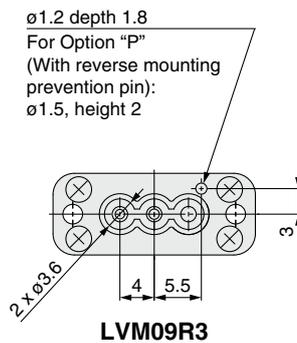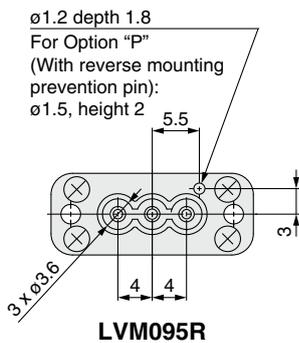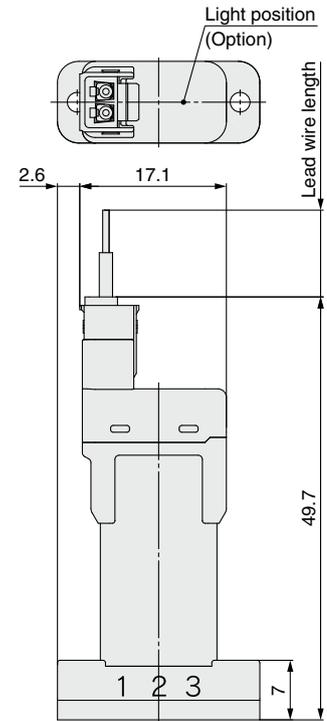


### Recommended interface dimensions \* Surface roughness = Rz3.2 or less

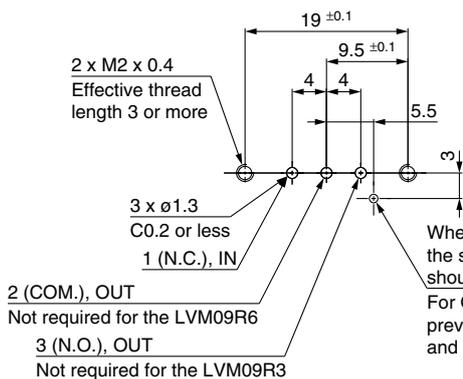

When using a positioning pin for mounting, the size should be  $\phi 1$ , and the height should be 1.5 or less.  
 For Option "P" (With reverse mounting prevention pin), the size should be  $\phi 1.7$ , and the depth should be 2.3 or more.

When using a positioning pin for mounting, the size should be  $\phi 1$ , and the height should be 1.5 or less.  
 For Option "P" (With reverse mounting prevention pin), the size should be  $\phi 1.7$ , and the depth should be 2.3 or more.

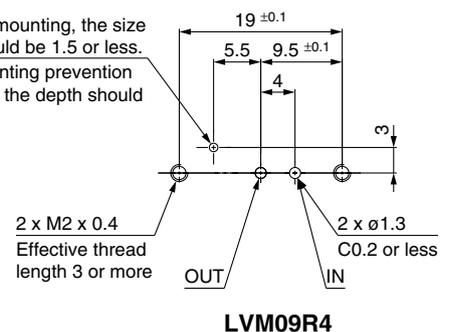

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts



Direct Operated Rocker Type



# Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids

# LVM10/100 Series

## How to Order

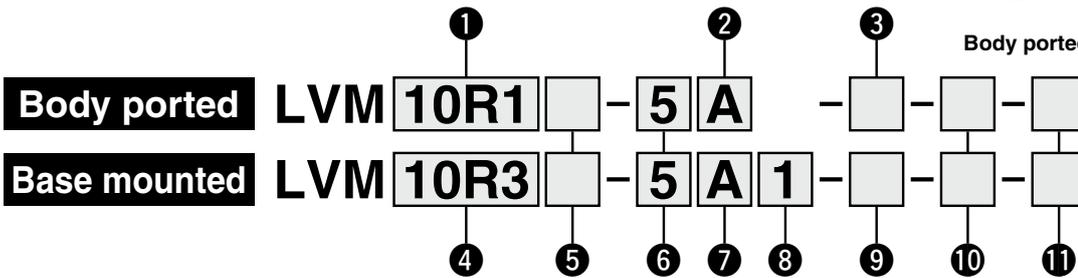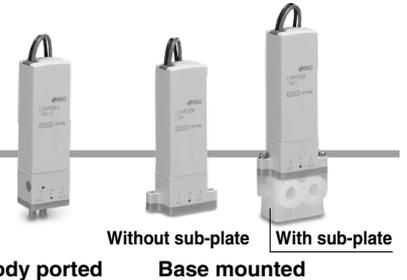

### 1 Number of ports, Valve type

Symbol	Number of ports	Valve type	
10R1	2	N.C.	
10R2		N.O.	
102R	3	Universal	

### 4 Number of ports, Valve type

Symbol	Number of ports	Valve type	
10R3	2	N.C.	
10R4		N.O.	
10R6	3	N.C.	
105R		Universal	

### 5 Power saving circuit

Nil	None (Standard type)
Y	Yes

### 6 Coil voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

### 11 CE-compliant

Nil	No
Q	CE-compliant

### 2 Fluid contact material

Symbol	Plate	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### 7 Fluid contact material

Symbol	Plate	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®
E	PFA	EPDM
F	PFA	FKM
G	PFA	Kalrez®

### 9 Option

Nil	None
1	Bracket
2	Manual override
3	Bracket, Manual override

\* Without a sub-plate, a bracket cannot be attached.

### 3 Option

Nil	None
1	Bracket
2	Manual override
3	Bracket, Manual override

### 8 Sub-plate material/port size, Reverse mounting prevention pin

Symbol	Sub-plate		Reverse mounting prevention pin	
	Material	Port size		
Nil	None	None	None	
P			Yes	
			Reverse mounting prevention pin	
1			PVDF	M6
1U	1/4-28UNF			
2	PFA	M6	None	
2U		1/4-28UNF		

\* "P," "1," and "1U" cannot be selected if the wetted parts material is "E," "F," or "G."  
\* A sub-plate cannot be mounted for "P" (With reverse mounting prevention pin).

### 10 Electrical entry, Lead wire length, Light/surge voltage suppressor

Symbol	Electrical entry, Lead wire length	Light/surge voltage suppressor
Nil	Grommet, 300 mm	Cannot be selected
6	Grommet, 600 mm	
10	Grommet, 1000 mm	
K	Plug connector, 300 mm	None
KO	Plug connector, Without connector	
KZ	Plug connector, 300 mm	Yes
KOZ	Plug connector, Without connector	

\* The plug connector is included but does not come assembled.

\* If a lead wire length of 600 mm or more is required, select "KO□" (Without connector) and then add the connector part number shown below under the valve part number when ordering.

Plug connector part no.: AXT661 - 14A - □

### Lead wire length

6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm

Mounting screws are included with the base-mounted type (without sub-plate). (2 pcs.)  
M2 x 11/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Specifications



Body ported



Without sub-plate  
Base mounted



With sub-plate  
Base mounted

Model	Body ported (Tube connection type)			Base mounted			
	LVM10R1	LVM10R2	LVM102R	LVM10R3	LVM10R4	LVM10R6	LVM105R
Valve construction	Direct operated rocker type						
Valve type	N.C.	N.O.	Universal	N.C.	N.O.	N.C.	Universal
Number of ports	2		3	2		3	
Fluid*1	Air, Water, DI water (Pure water), Diluent, or Cleaning fluid						
Operating pressure range	-75 kPa to 0.25 MPa						
Orifice diameter	1.4 mm						
Response time*7	10 ms or less (at pneumatic pressure)						
Leakage	Zero leakage, both internal or external (at water pressure)						
Proof pressure*2	0.38 MPa						
Ambient temperature*8	0 to 50°C						
Fluid temperature*8	0 to 50°C (No freezing)						
Volume of valve chamber*3	20 μL						
Mounting orientation*4	Free						
Enclosure	IP40 or equivalent						
Weight	34 g			34 g (Without sub-plate) 42 g (With sub-plate)			
Rated voltage	12, 24 VDC						
Allowable voltage fluctuation*5	±10% of rated voltage						
Type of coil insulation	Class B						
Power consumption (When rated voltage is at 24 V)	Standard type		1.5 W (0.06 A)				
	With power saving circuit	Inrush	2.5 W (0.1 A)				
		Holding	1 W				
Coil switching noise*6	50 dB						

\*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.

\*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test

\*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted

\*4 Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.

\*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.

\*6 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.

\*7 In compliance with JIS B 8419:2010

(Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)

The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.

\*8 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when compared to the valve changeover time at room temperature (≈ 25°C).

\* Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time.

## Flow Rate Characteristics

Water		Air	
Kv	Cv	C	b
0.025	0.03	0.1	0.2

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13


Specific Product Precautions

Spare Parts


# LVM10/100 Series

## Construction


Body ported  
LVM10R1

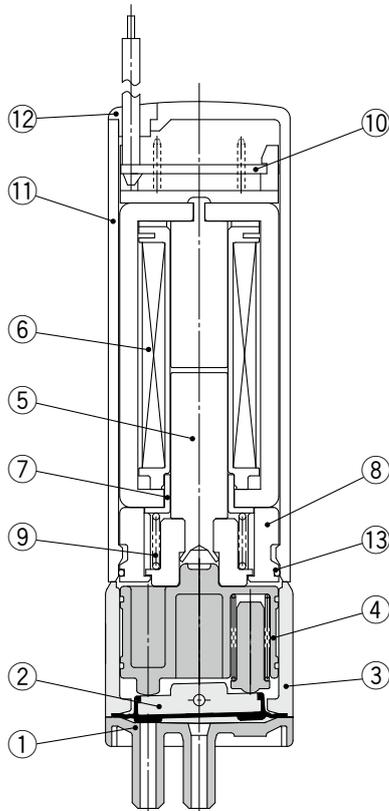

LVM10R2

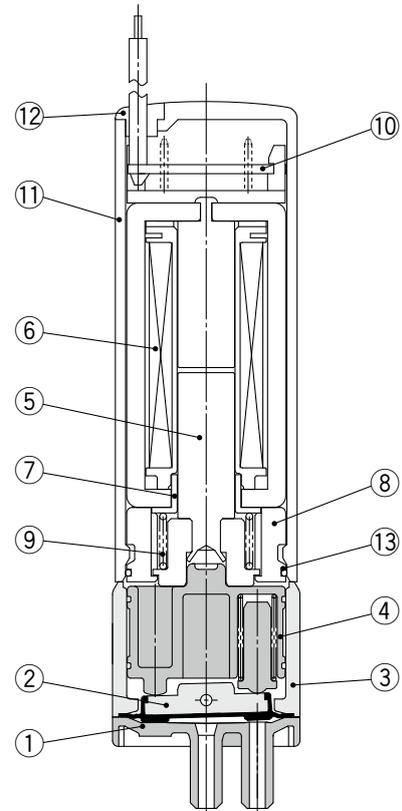

LVM102R

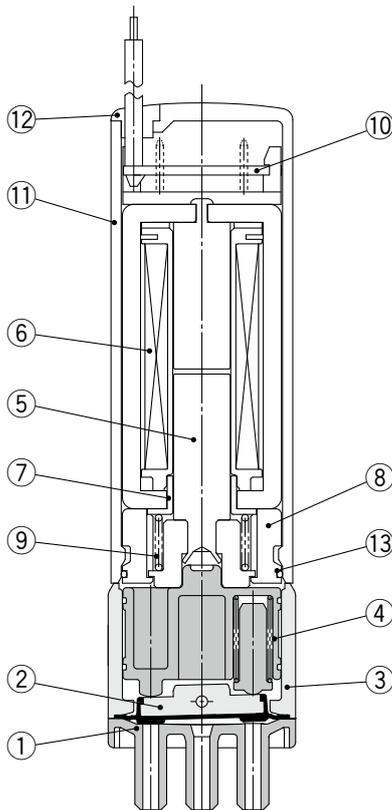


### Component Parts: LVM10R1, 10R2, 102R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	Stainless steel/PBT
6	Coil assembly	—
7	Sleeve	SUY (Iron)
8	Spacer	PBT
9	Return spring	Stainless steel
10	Board assembly	—
11	Casing	PBT
12	Plug	NBR
13	O-ring	NBR


\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Construction


### Base mounted LVM10R3

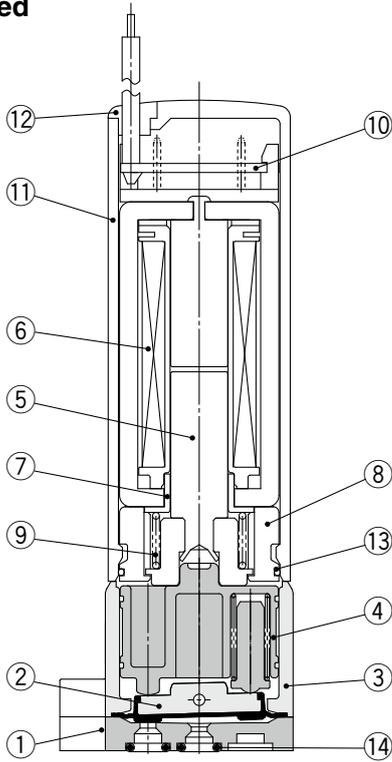


### LVM10R4

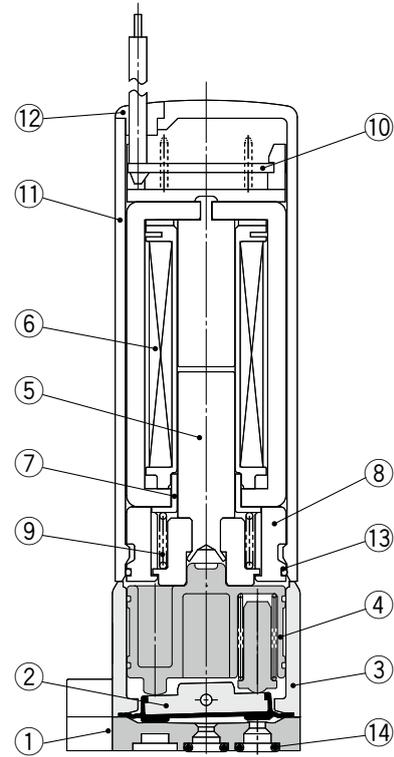

### LVM10R6

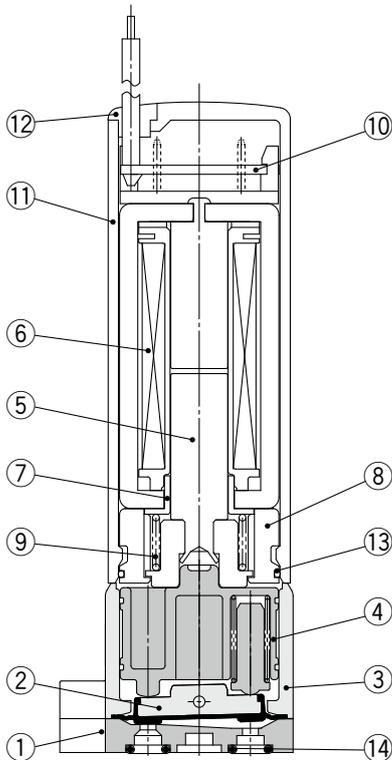

### LVM105R

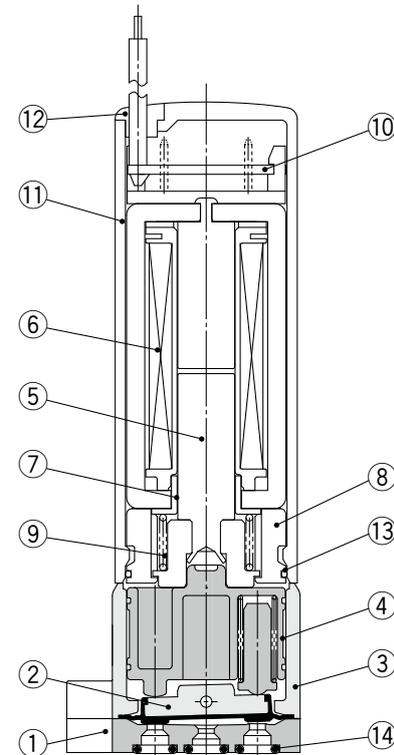

### Component Parts: LVM10R3, 10R4, 10R6, 105R

No.	Description	Material
1	Plate	PEEK/PFA
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	Stainless steel/PBT
6	Coil assembly	—
7	Sleeve	SUY (Iron)

No.	Description	Material
8	Spacer	PBT
9	Return spring	Stainless steel
10	Board assembly	—
11	Casing	PBT
12	Plug	NBR
13	O-ring	NBR
14	O-ring	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

# LVM10/100 Series




## Dimensions

Body ported

LVM10R1-□□-□ (N.C.)

LVM10R2-□□-□ (N.O.)

LVM102R-□□-□ (Universal)

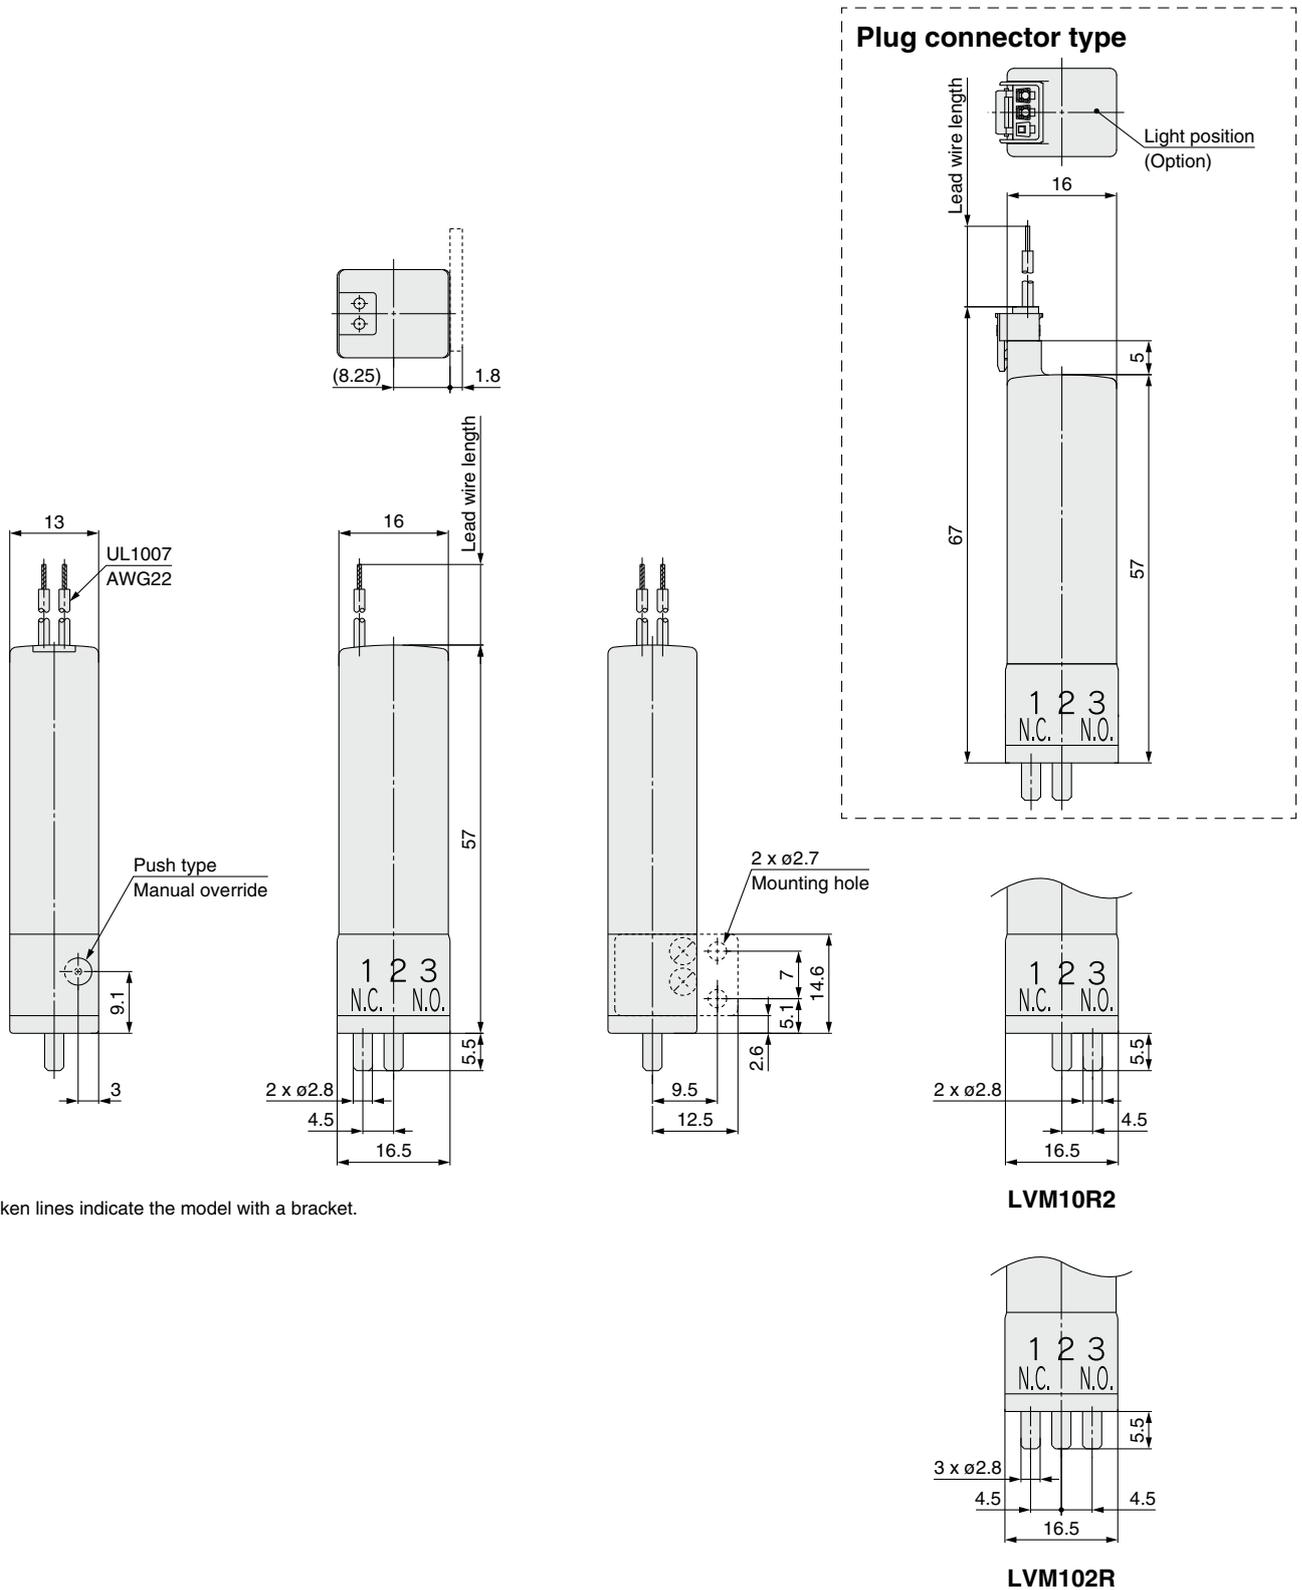

\* The broken lines indicate the model with a bracket.



## Dimensions



Base mounted, Without sub-plate

LVM10R3-□□-□ (N.C.)



LVM10R4-□□-□ (N.O.)

LVM10R6-□□-□ (N.C.)


LVM105R-□□-□ (Universal)

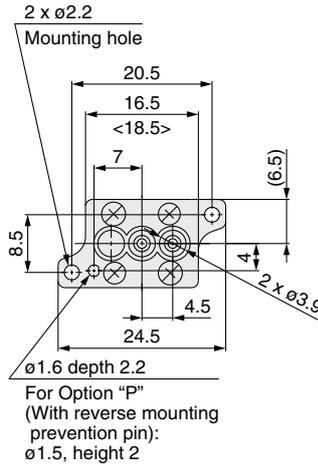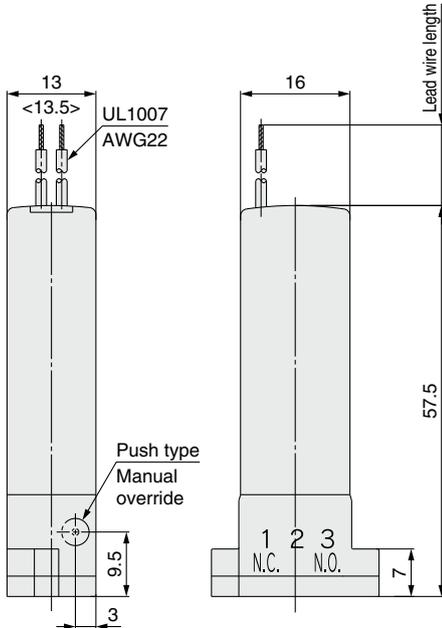


LVM10R4

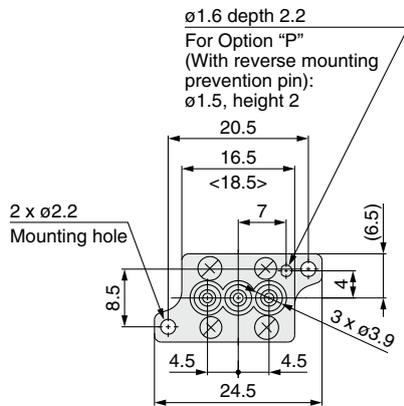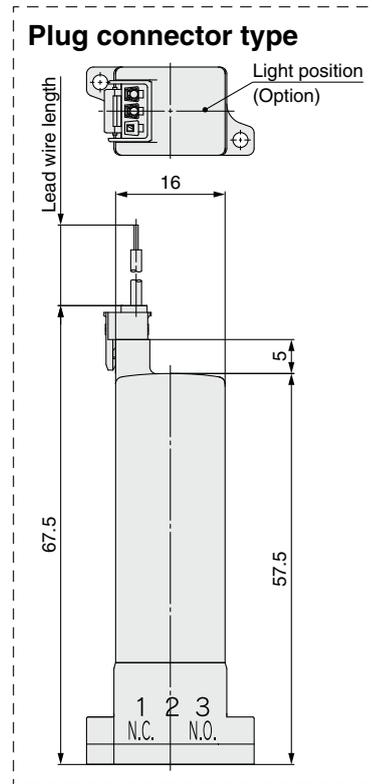

LVM105R

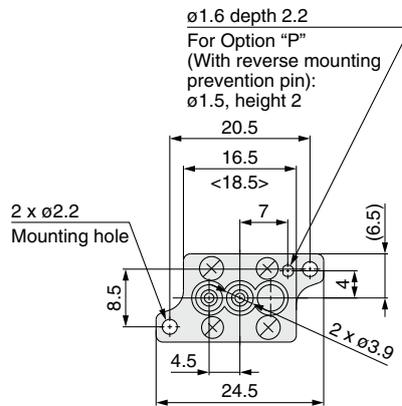


LVM10R3

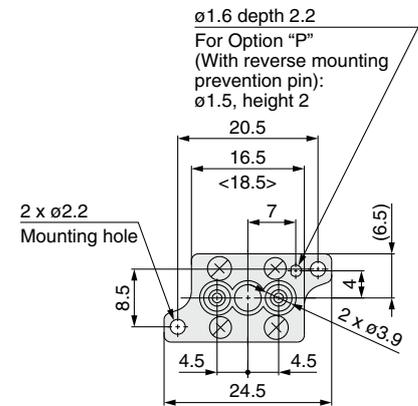

LVM10R6


\* The figures in brackets < > indicate the values when PFA is selected as the plate material (wetted parts material "E," "F," or "G"). When PFA is selected as the plate material (wetted parts material "E," "F," or "G"), there is no ø1.6 positioning hole or ø1.5 reverse mounting prevention pin.

## Recommended interface dimensions \* Surface roughness = Rz3.2 or less

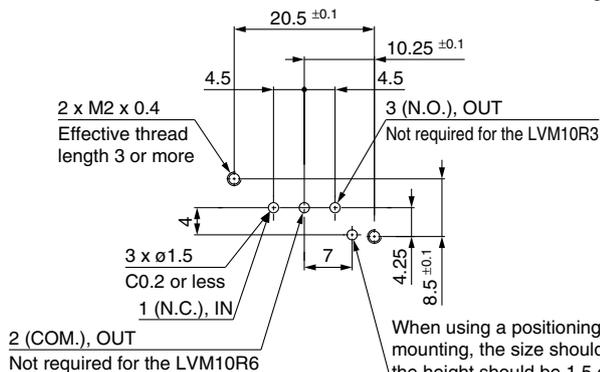

LVM10R3, 10R6, 105R

When using a positioning pin for mounting, the size should be ø1, and the height should be 1.5 or less. For Option "P" (With reverse mounting prevention pin), the size should be ø1.7, and the depth should be 2.3 or more.

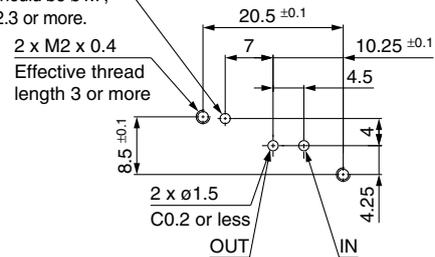

LVM10R4

When using a positioning pin for mounting, the size should be ø1, and the height should be 1.5 or less. For Option "P" (With reverse mounting prevention pin), the size should be ø1.7, and the depth should be 2.3 or more.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts



Direct Operated Rocker Type



# Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids

# LVM15/150 Series

## How to Order

**Base mounted** LVM **15R3** **Y** - **5** **A** **1** -    -   

1
2
3
4
5
6
7



Without sub-plate    With sub-plate

### 1 Number of ports, Valve type

Symbol	Number of ports	Valve type	
15R3	2	N.C.	
15R4		N.O.	
15R6		N.C.	
155R	3	Universal	

### 2 Max. operating pressure, Power saving circuit

Symbol	Max. operating pressure	Power saving circuit
Y	0.25 MPa (Standard type)	Yes
HY	0.6 MPa (High-pressure type)	Yes

### 3 Coil voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

### 4 Fluid contact material

Symbol	Plate	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### 5 Sub-plate material/port size, Reverse mounting prevention pin

Symbol	Sub-plate		Reverse mounting prevention pin
	Material	Port size	
Nil	None	None	None
P			Yes
1	PVDF	M6	 Reverse mounting prevention pin
1U		1/4-28UNF	

\* A sub-plate cannot be mounted for "P" (With reverse mounting prevention pin).

### 6 Electrical entry, Lead wire length, Light/surge voltage suppressor

Symbol	Electrical entry, Lead wire length	Light/surge voltage suppressor	
Nil	Grommet, 300 mm	Cannot be selected	
6	Grommet, 600 mm		
10	Grommet, 1000 mm		
KZ	Plug connector, 300 mm	Yes	
KOZ	Plug connector, Without connector		

\* The plug connector is included but does not come assembled.

\* If a lead wire length of 600 mm or more is required, select "KOZ" (Without connector) and then add the connector part number shown below under the valve part number when ordering.

Plug connector part no.: AXT661 - 14A -   

#### Lead wire length

6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm

### 7 CE-compliant

Nil	No
Q	CE-compliant

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

Mounting screws are included for models without sub-plate. (2 pcs.)  
M2.5 x 14/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

# LVM15/150 Series

## Specifications



Without sub-plate



With sub-plate

Model		Base mounted			
		LVM15R3	LVM15R4	LVM15R6	LVM155R
<b>Valve construction</b>		Direct operated rocker type			
<b>Valve type</b>		N.C.	N.O.	N.C.	Universal
<b>Number of ports</b>		2			3
<b>Fluid</b> *1		Air, Water, DI water (Pure water), Diluent, or Cleaning fluid			
<b>Operating pressure range</b>	<b>Standard type</b>	-75 kPa to 0.25 MPa			
	<b>High-pressure type</b>	Max. 0.6 MPa*7			
<b>Orifice diameter</b>	<b>Standard type</b>	1.6 mm			
	<b>High-pressure type</b>	1 mm			
<b>Response time</b> *8		15 ms or less (at pneumatic pressure)			
<b>Leakage</b>		Zero leakage, both internal or external (at water pressure)			
<b>Proof pressure</b> *2	<b>Standard type</b>	0.38 MPa			
	<b>High-pressure type</b>	0.9 MPa			
<b>Ambient temperature</b> *9		0 to 50°C			
<b>Fluid temperature</b> *9		0 to 50°C (No freezing)			
<b>Volume of valve chamber</b> *3		50 μL		60 μL	50 μL
<b>Mounting orientation</b> *4		Free			
<b>Enclosure</b>		IP40 or equivalent			
<b>Weight</b>		45 g (Without sub-plate), 56 g (With sub-plate)			
<b>Rated voltage</b>		12, 24 VDC			
<b>Allowable voltage fluctuation</b> *5		±10% of rated voltage			
<b>Type of coil insulation</b>		Class B			
<b>Power consumption (When rated voltage is at 24 V)</b>	<b>Inrush</b>	5.5 W (0.23 A)			
	<b>Holding</b>	1 W			
<b>Coil switching noise</b> *6		60 dB			

\*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.

\*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test

\*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted

\*4 Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.

\*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.

\*6 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.

\*7 The high-pressure type can also be used at a pressure level of up to -75 kPa. However, set the maximum operating pressure so that a difference in operating pressure becomes 0.6 MPa or less.

Example) When the valve is used at -50 kPa, the maximum operating pressure is up to 0.55 MPa.

\*8 In compliance with JIS B 8419:2010

(Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)

The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.

\*9 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when designed to the valve changeover time at room temperature (≈ 25°C).

\* Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time.

## Flow Rate Characteristics

Water		Air	
Kv	Cv	C	b
0.034 [0.012]	0.04 [0.015]	0.13 [0.05]	0.22 [0.2]


The [ ] indicate the values of the high-pressure type.

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.


\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Construction


### Base mounted LVM15R3

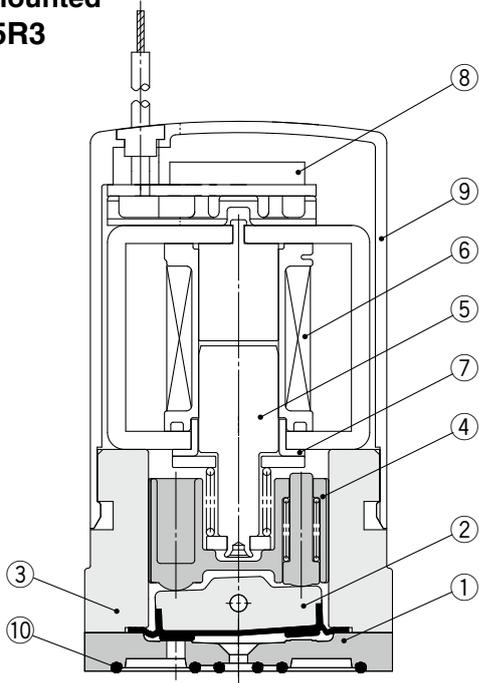


### LVM15R4

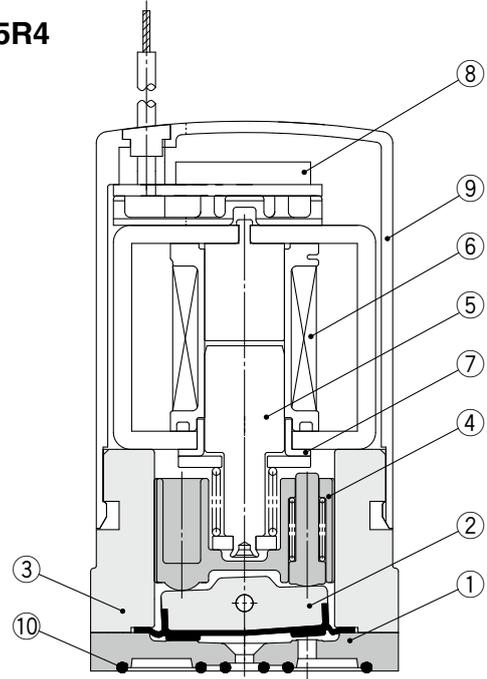

### LVM15R6

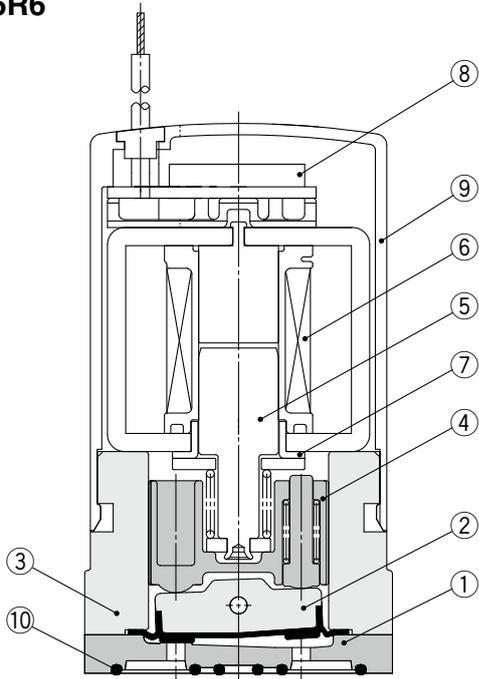

### LVM15R

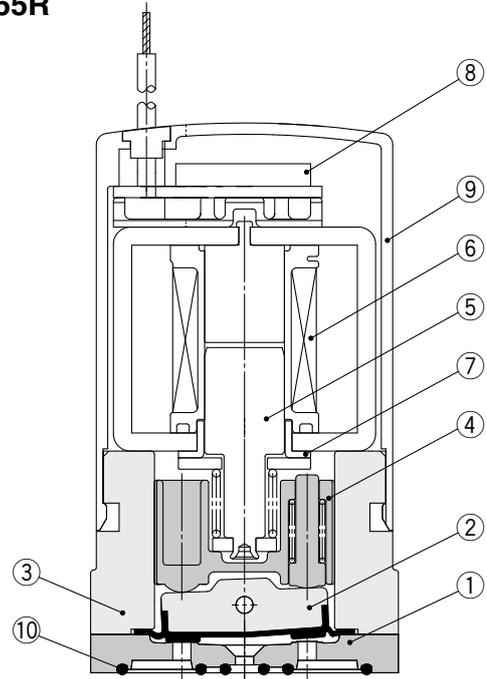

### Component Parts: LVM15R3, 15R4, 15R6, 15R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	—
6	Coil assembly	—
7	Sleeve	SUY (Iron)
8	Board assembly	—
9	Casing	PBT
10	Interface gasket	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts

# LVM15/150 Series



## Dimensions


Base mounted, Without sub-plate

LVM15R3-□□-□ (N.C.)


LVM15R4-□□-□ (N.O.)

LVM15R6-□□-□ (N.C.)

LVM155R-□□-□ (Universal)

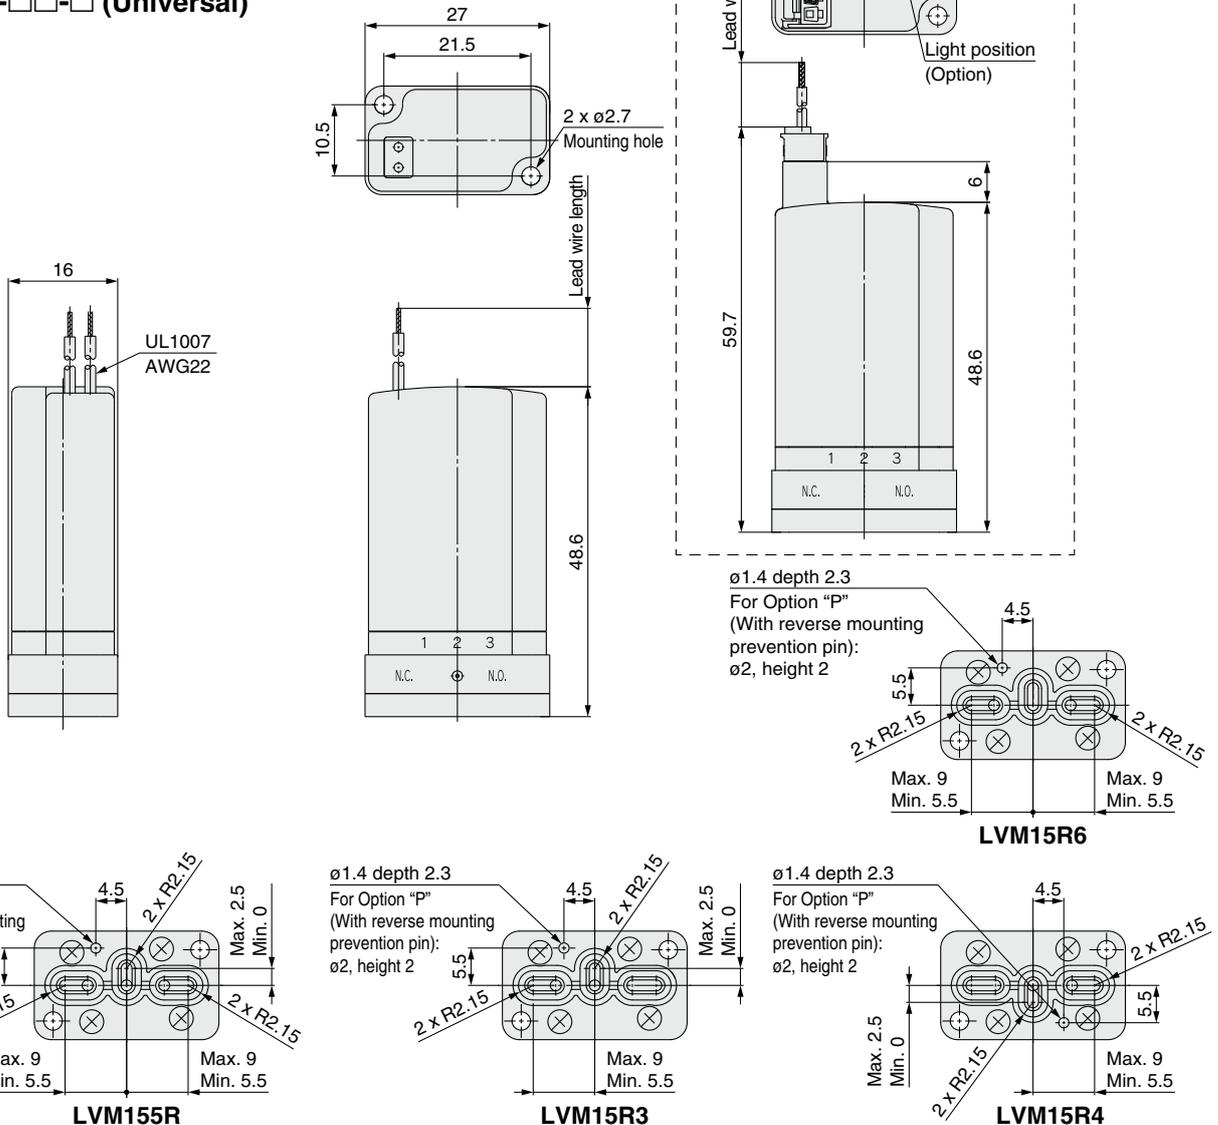

## Recommended interface dimensions \* Surface roughness = Rz3.2 or less

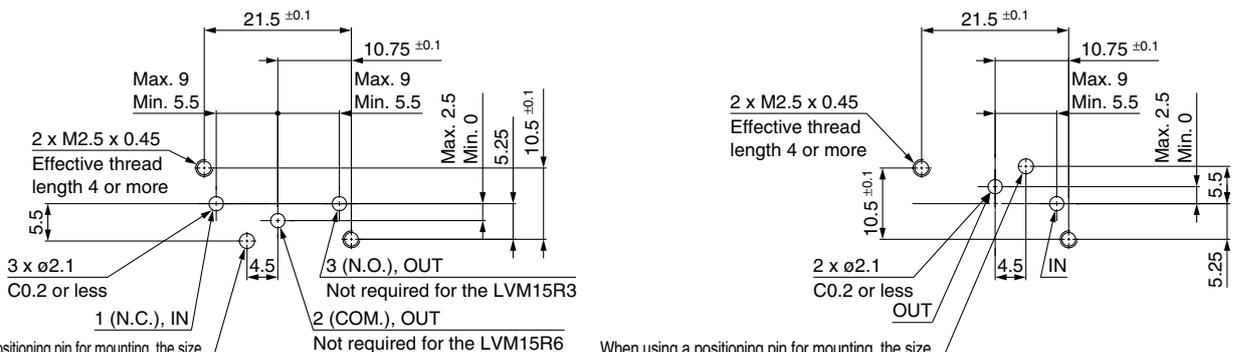

When using a positioning pin for mounting, the size should be  $\phi 1.2$ , and the height should be 2 or less.  
For Option "P" (With reverse mounting prevention pin), the size should be  $\phi 2.2$ , and the depth should be 2.3 or more.

LVM15R3, 15R6, 155R

When using a positioning pin for mounting, the size should be  $\phi 1.2$ , and the height should be 2 or less.  
For Option "P" (With reverse mounting prevention pin), the size should be  $\phi 2.2$ , and the depth should be 2.3 or more.

LVM15R4



## Dimensions







Base mounted, With sub-plate

LVM15R3-□□□-□ (N.C.)

LVM15R4-□□□-□ (N.O.)

LVM15R6-□□□-□ (N.C.)

LVM155R-□□□-□ (Universal)

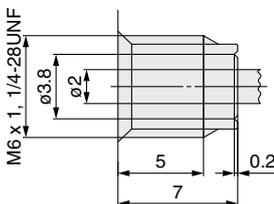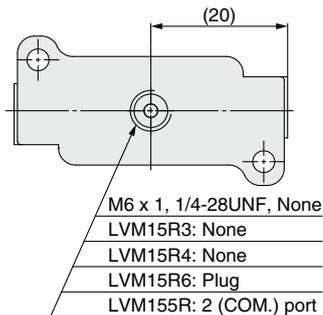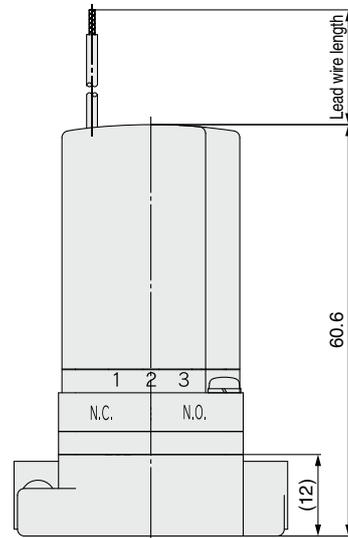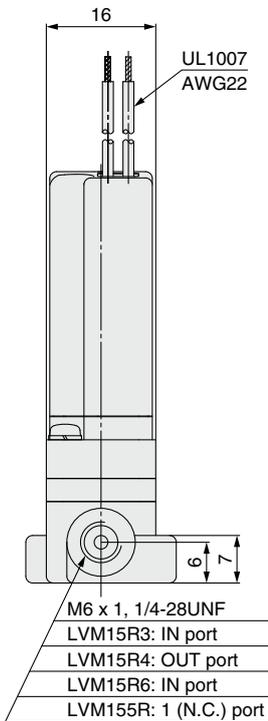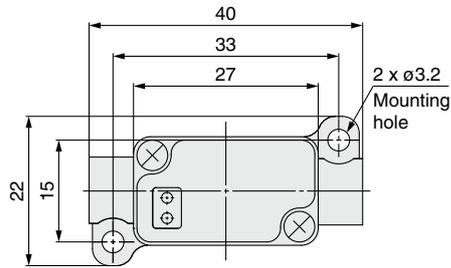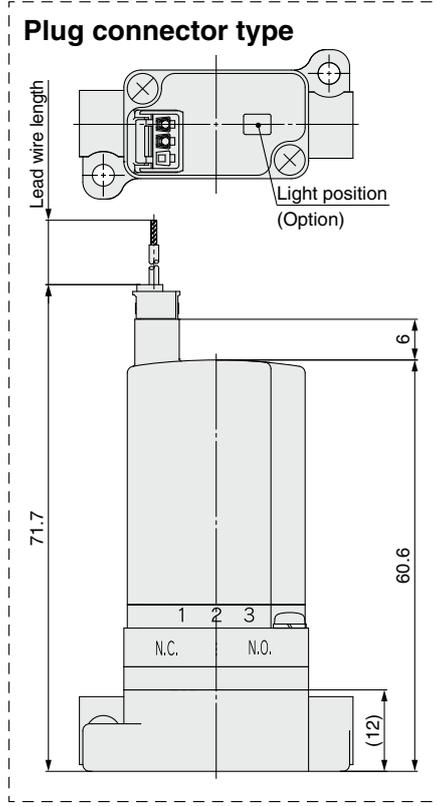

Details of thread

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts



Direct Operated Rocker Type






# Compact Direct Operated 2/3-Port Solenoid Valve for Chemical Liquids

# LVM20/200 Series




## How to Order

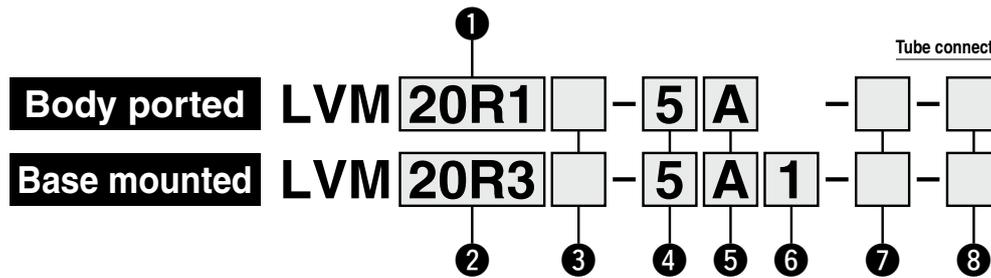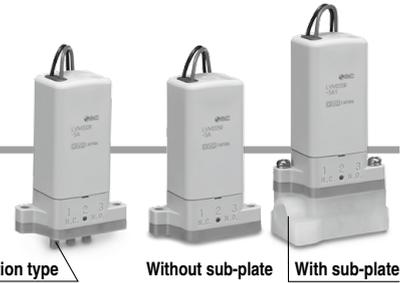

### 1 Number of ports, Valve type

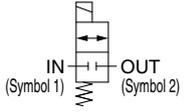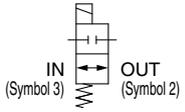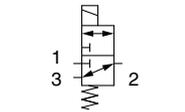Symbol	Number of ports	Valve type
20R1	2	N.C. 
20R2		N.O. 
202R	3	Universal 

### 2 Number of ports, Valve type

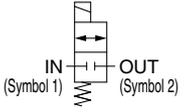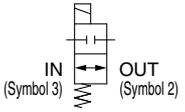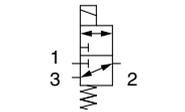Symbol	Number of ports	Valve type
20R3	2	N.C. 
20R4		N.O. 
205R	3	Universal 

### 3 Power saving circuit

Nil	None (Standard type)
Y	Yes

### 4 Coil voltage

Symbol	Voltage
5	24 VDC
6	12 VDC

### 5 Fluid contact material

Symbol	Plate	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### 6 Sub-plate material/port size, Reverse mounting prevention pin

Symbol	Sub-plate		Reverse mounting prevention pin	
	Material	Port size		
Nil	None		None	
P			Yes	
1			Rc1/8	None
1F			G1/8	
1N	NPT1/8			

\* A sub-plate cannot be mounted for "P" (With reverse mounting prevention pin).

### 8 CE-compliant

Nil	No
Q	CE-compliant

### 7 Electrical entry, Lead wire length, Light/surge voltage suppressor

Symbol	Electrical entry, Lead wire length	Light/surge voltage suppressor
Nil	Grommet, 300 mm	Cannot be selected
6	Grommet, 600 mm	
10	Grommet, 1000 mm	
K	Plug connector, 300 mm	None
KO	Plug connector, Without connector	
KZ	Plug connector, 300 mm	Yes * Power saving circuit "Y" is equipped with a light/surge voltage suppressor.
KOZ	Plug connector, Without connector	

\* The plug connector is included but does not come assembled.

\* If a lead wire length of 600 mm or more is required, select "KO□" (Without connector) and then add the connector part number shown below under the valve part number when ordering.

Plug connector part no.: AXT661 - 14A - □

#### Lead wire length

6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm


Mounting screws are included with the base-mounted type (without sub-plate). (2 pcs.)  
M3 x 14/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Specifications

Model	Body ported (Tube connection type)			Base mounted		
	LVM20R1	LVM20R2	LVM20R3	LVM20R3	LVM20R4	LVM20R5
<b>Valve construction</b>	Direct operated rocker type					
<b>Valve type</b>	N.C.	N.O.	Universal	N.C.	N.O.	Universal
<b>Number of ports</b>	2		3	2		3
<b>Fluid</b> *1	Air, Water, DI water (Pure water), Diluent, or Cleaning fluid					
<b>Operating pressure range</b>	-75 kPa to 0.25 MPa			-75 kPa to 0.3 MPa		
<b>Orifice diameter</b>	2 mm					
<b>Response time</b> *7	20 ms or less (at pneumatic pressure)					
<b>Leakage</b>	Zero leakage, both internal or external (at water pressure)					
<b>Proof pressure</b> *2	0.38 MPa			0.45 MPa		
<b>Ambient temperature</b> *8	0 to 50°C					
<b>Fluid temperature</b> *8	0 to 50°C (No freezing)					
<b>Volume of valve chamber</b> *3	84 μL					
<b>Mounting orientation</b> *4	Free					
<b>Enclosure</b>	IP40 or equivalent					
<b>Weight</b>	80 g			80 g (Without sub-plate), 94 g (With sub-plate)		
<b>Rated voltage</b>	12, 24 VDC					
<b>Allowable voltage fluctuation</b> *5	±10% of rated voltage					
<b>Type of coil insulation</b>	Class B					
<b>Power consumption (When rated voltage is at 24 V)</b>	<b>Standard type</b>		2.5 W (0.1 A)			
	<b>With power saving circuit</b>	<b>Inrush</b>	4 W (0.17 A)			
		<b>Holding</b>	0.6 W			
<b>Coil switching noise</b> *6	60 dB					

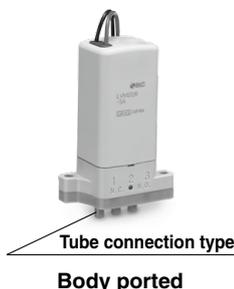

- \*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.
- \*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test
- \*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted
- \*4 Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.
- \*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.
- \*6 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.
- \*7 In compliance with JIS B 8419:2010  
(Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)  
The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.
- \*8 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when compared to the valve changeover time at room temperature (~ 25°C).
- \* Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time.

## Flow Rate Characteristics

Water		Air	
Kv	Cv	C	b
0.055	0.065	0.23	0.27

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13


Specific Product Precautions

Spare Parts


# LVM20/200 Series

## Construction


Body ported  
LVM20R1

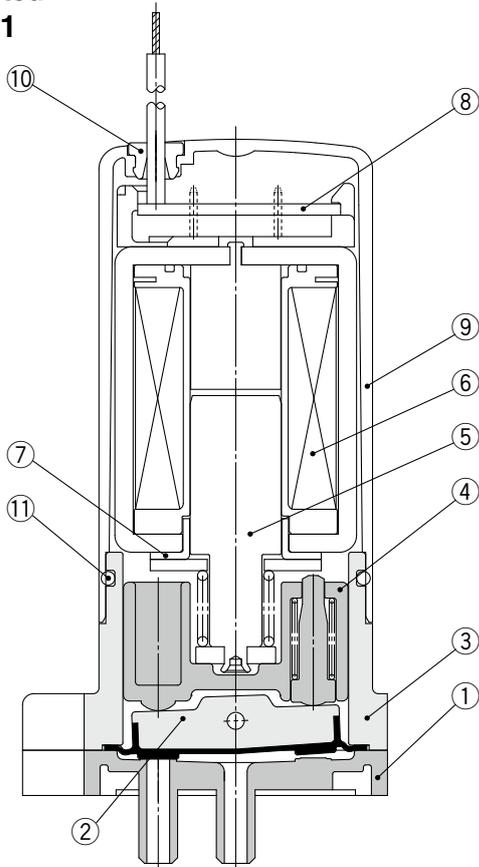

LVM20R2

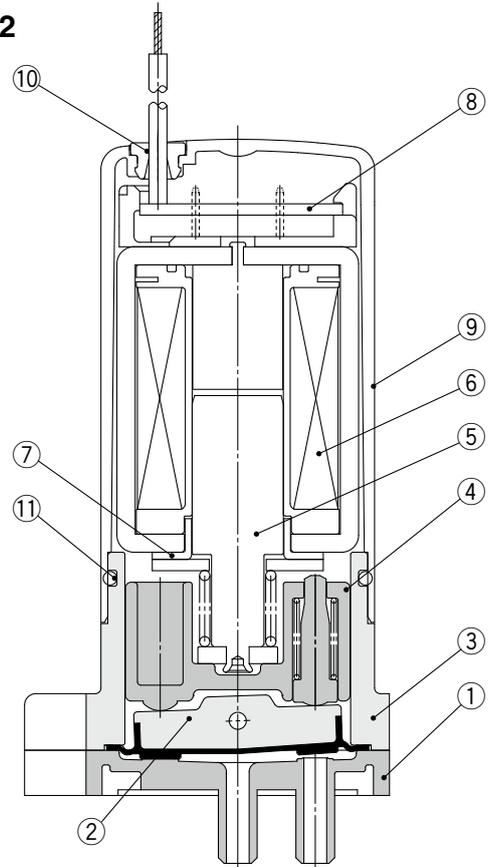

LVM202R

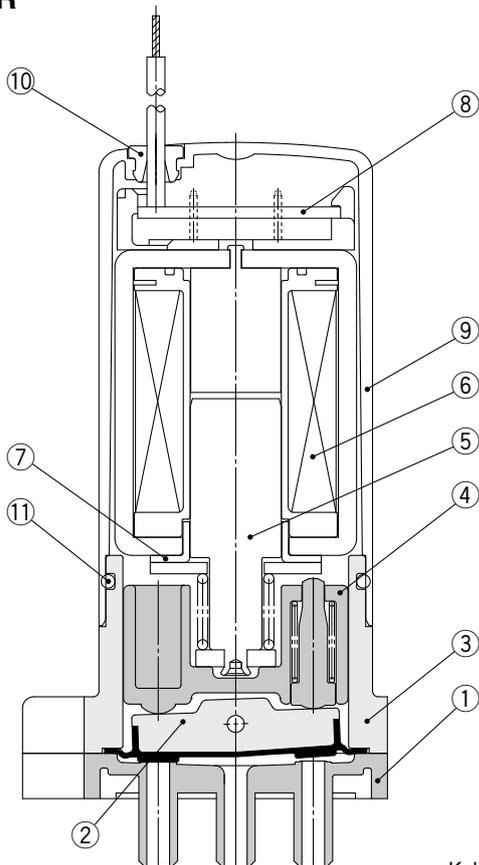


### Component Parts: LVM20R1, 20R2, 202R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	—
6	Coil assembly	—
7	Sleeve	SUY (Iron)
8	Board assembly	—
9	Casing	PBT
10	Plug	NBR
11	O-ring	NBR


\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Construction


### Base mounted LVM20R3

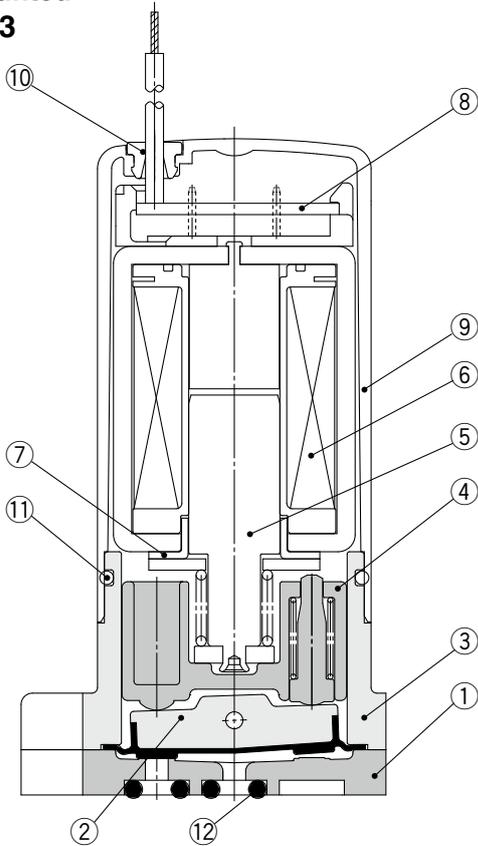

### LVM20R4

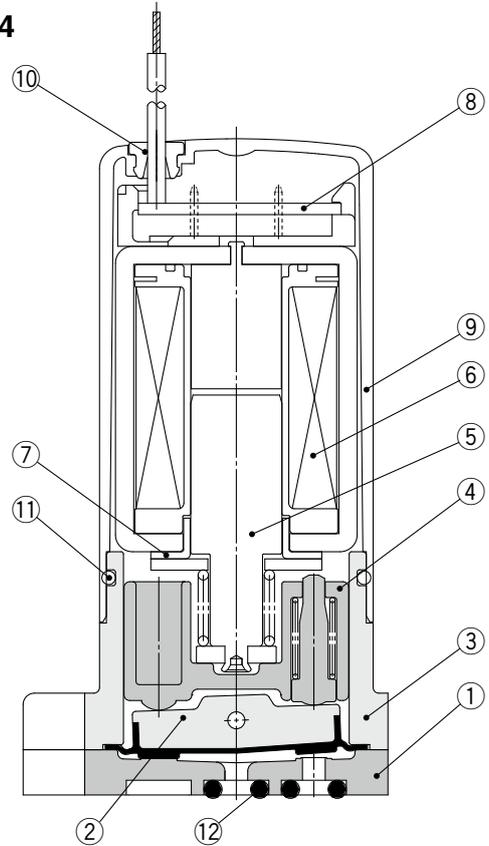

### LVM205R

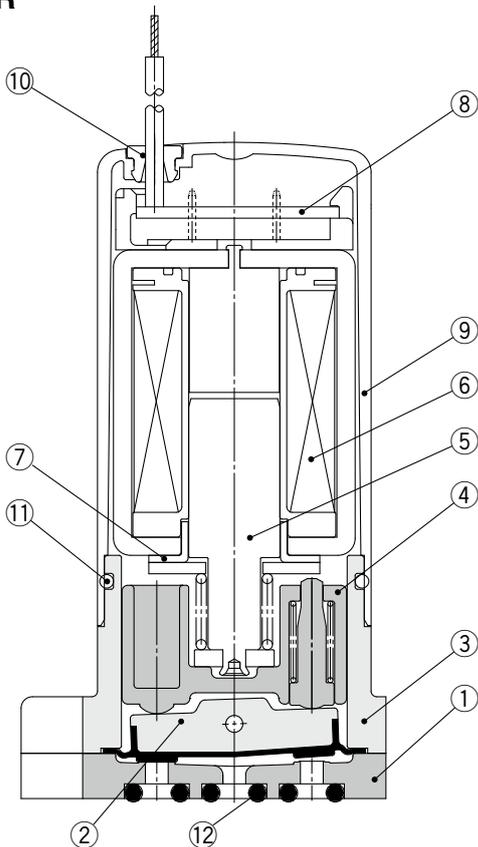

### Component Parts: LVM20R3, 20R4, 205R

No.	Description	Material
1	Plate	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Body	PBT
4	Slide bushing assembly	PPS/Stainless steel
5	Armature assembly	—
6	Coil assembly	—
7	Sleeve	SUY (Iron)
8	Board assembly	—
9	Casing	PBT
10	Plug	NBR
11	O-ring	NBR
12	O-ring	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

# LVM20/200 Series




## Dimensions

Body ported



LVM20R1-□□-□ (N.C.)

LVM20R2-□□-□ (N.O.)


LVM202R-□□-□ (Universal)

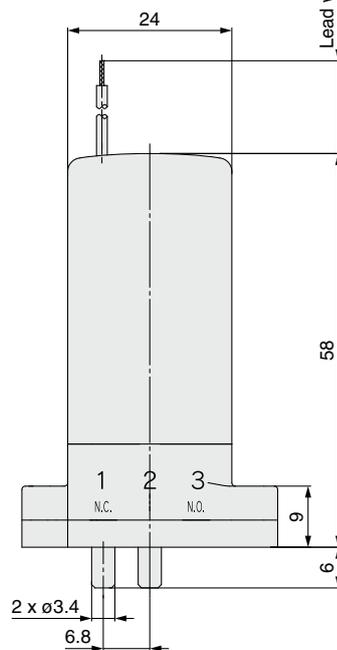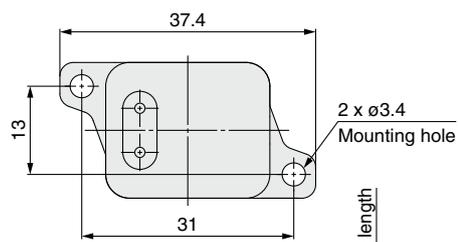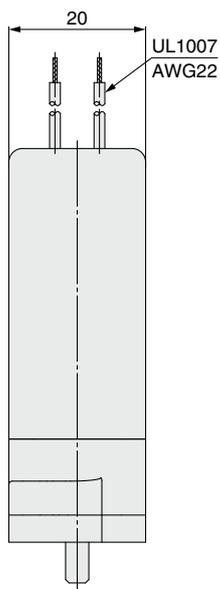

LVM20R1

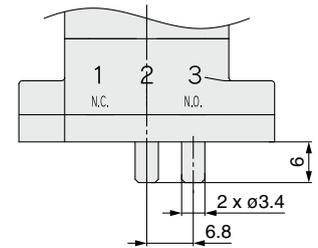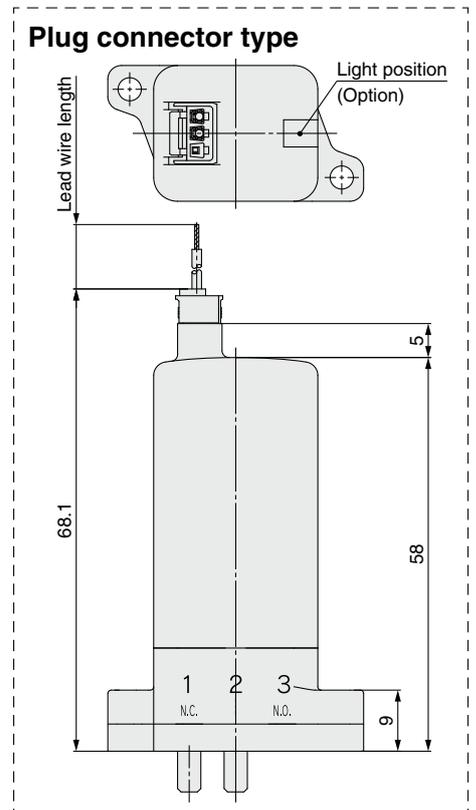

LVM20R2

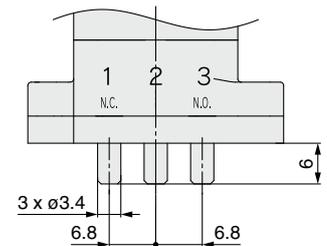

LVM202R

## Dimensions

Base mounted, Without sub-plate

LVM20R3-□□-□ (N.C.)

LVM20R4-□□-□ (N.O.)

LVM205R-□□-□ (Universal)



LVM07

LVM09/090

LVM10/100






LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions




Spare Parts

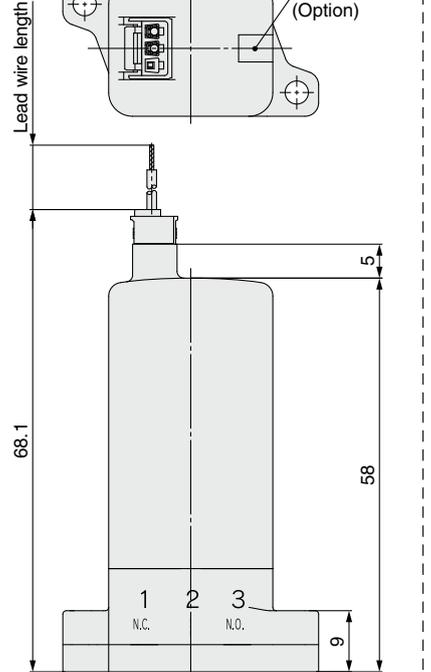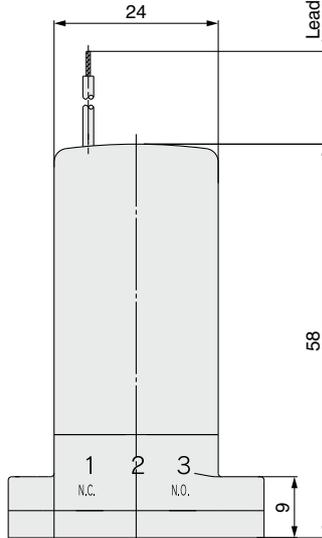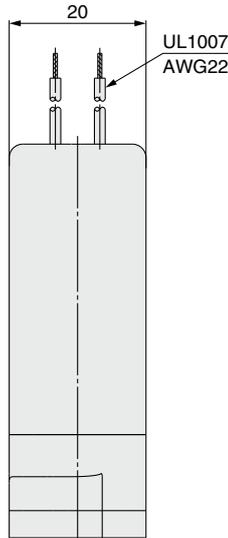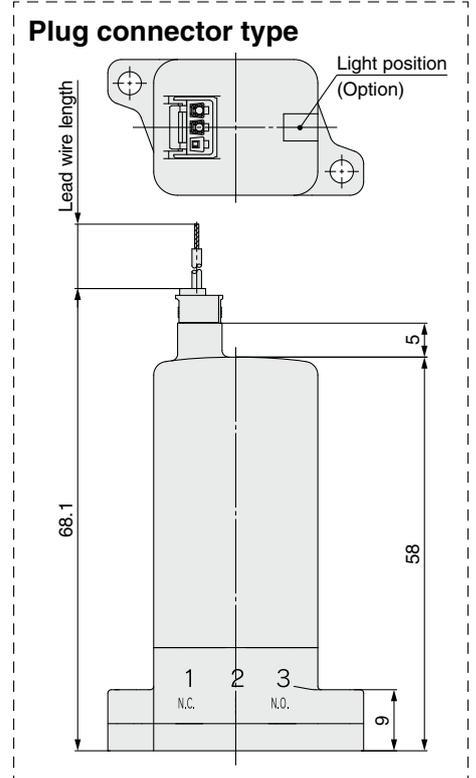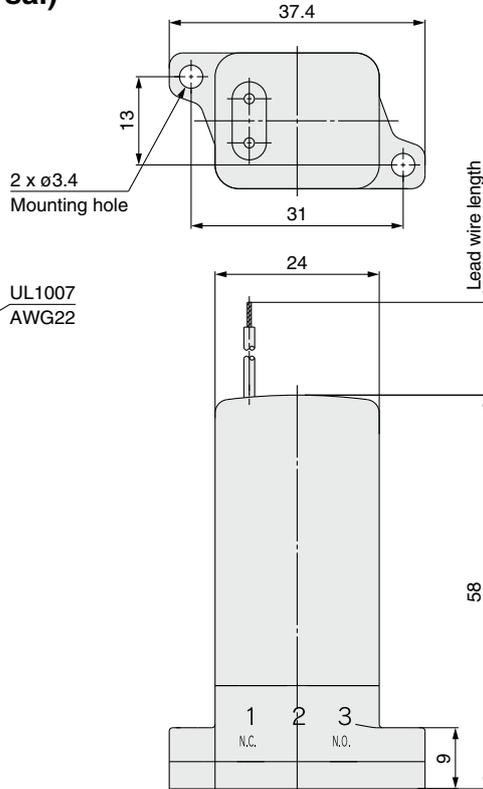

ø2 depth 3  
For Option "P"  
(With reverse mounting prevention pin):  
ø2.5, height 2

ø2 depth 3  
For Option "P"  
(With reverse mounting prevention pin):  
ø2.5, height 2

ø2 depth 3  
For Option "P"  
(With reverse mounting prevention pin):  
ø2.5, height 2

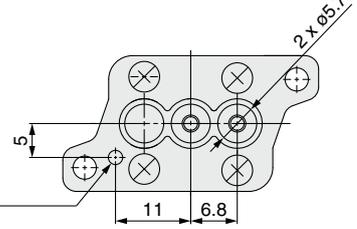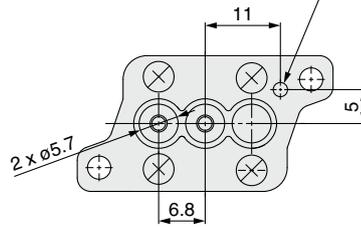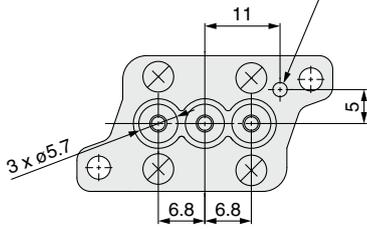


LVM205R


LVM20R3

LVM20R4

## Recommended interface dimensions \* Surface roughness = Rz3.2 or less

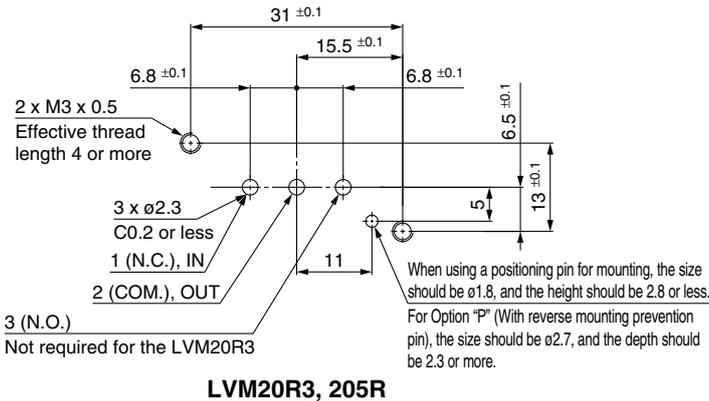

LVM20R3, 205R

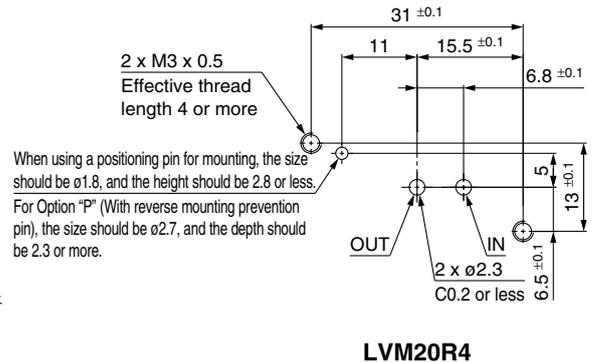

LVM20R4

# LVM20/200 Series









## Dimensions

Base mounted, With sub-plate

LVM20R3-□□□-□ (N.C.)

LVM20R4-□□□-□ (N.O.)

LVM205R-□□□-□ (Universal)

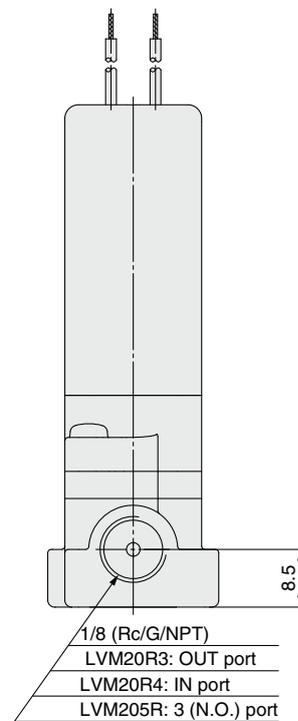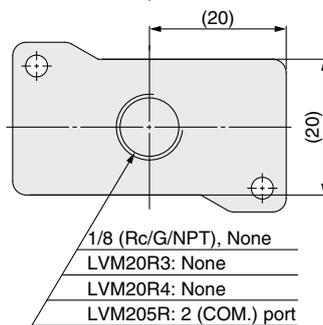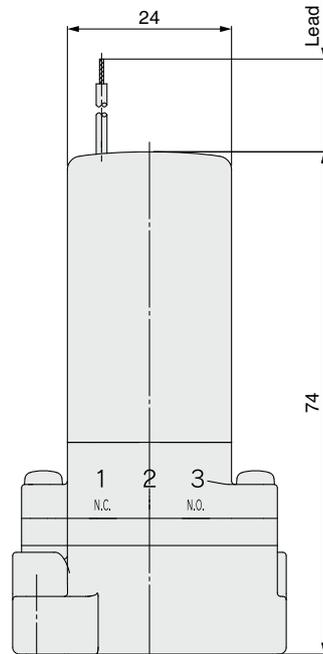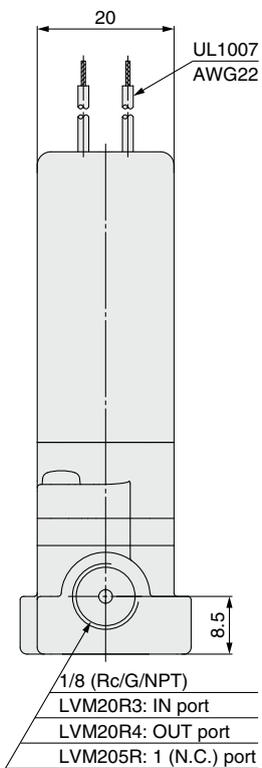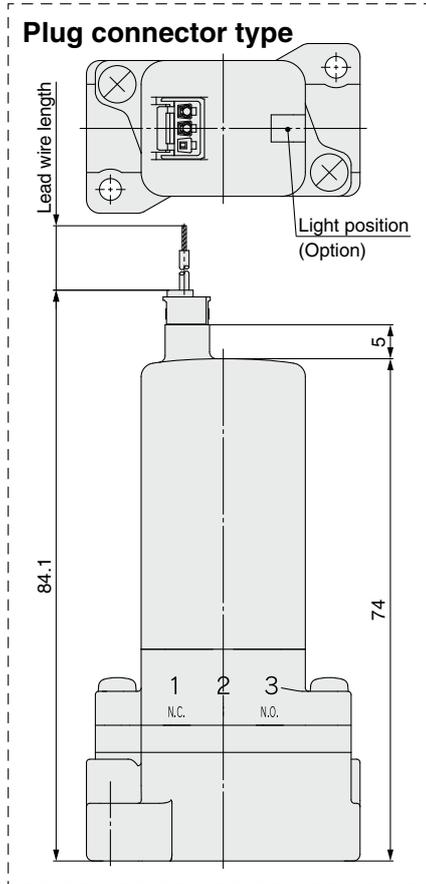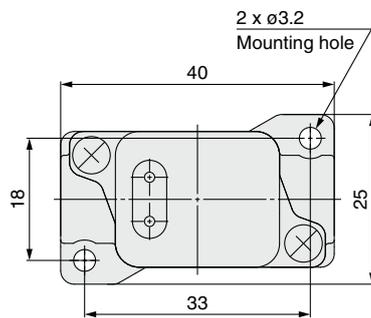



# Direct Operated Poppet Type



Compact Direct Operated  
2/3-Port Solenoid Valve for Chemical Liquids with Power Saving Circuit


# LVM11/13 Series

## How to Order

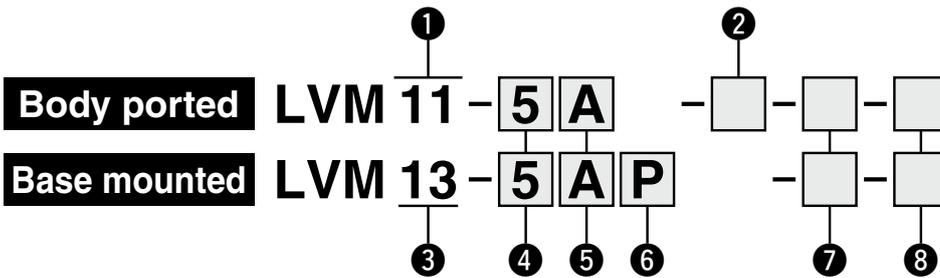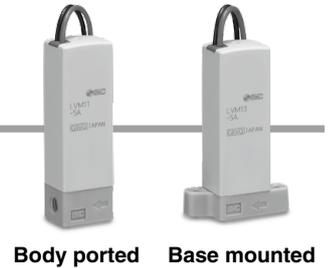

### ① Number of ports, Valve type

Symbol	Number of ports	Valve type
11	2	N.C.

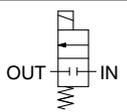


### ② Option

Nil	None
1	Bracket

### ③ Number of ports, Valve type

Symbol	Number of ports	Valve type
13	2	N.C.

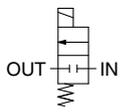

### ④ Coil voltage


Symbol	Voltage
5	24 VDC
6	12 VDC

### ⑤ Fluid contact material

Symbol	Body	Diaphragm
A	PEEK	EPDM
B	PEEK	FKM
C	PEEK	Kalrez®

### ⑥ Reverse mounting prevention pin


Nil	None
	Yes

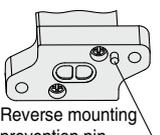

Reverse mounting prevention pin

### ⑦ Electrical entry, Lead wire length, Light/surge voltage suppressor

Symbol	Electrical entry, Lead wire length	Light/surge voltage suppressor
Nil	Grommet, 300 mm	Cannot be selected
6	Grommet, 600 mm	
10	Grommet, 1000 mm	
KZ	Plug connector, 300 mm	Yes
KOZ	Plug connector, Without connector	

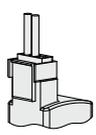

\* The plug connector is included but does not come assembled.

\* If a lead wire length of 600 mm or more is required, select "KOZ" (Without connector) and then add the connector part number shown below under the valve part number when ordering.

Plug connector part no.: AXT661 - 14A - [ ]

#### Lead wire length

6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm

### ⑧ CE-compliant

Nil	No
Q	CE-compliant

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

Mounting screws are included with the base-mounted type. (2 pcs.)  
M2 x 11/With spring washer (Material: Stainless steel)

For other spare parts, refer to page 44.

# LVM11/13 Series

## Specifications



Body ported



Base mounted

Model	Body ported	Base mounted	
	LVM11	LVM13	
Valve construction	Direct operated poppet type		
Valve type	N.C.		
Number of ports	2		
Fluid*1	Air, Water, DI water (Pure water), Diluent, or Cleaning fluid		
Operating pressure range	0 to 0.25 MPa		
Orifice diameter	1.5 mm		
Response time*7	10 ms or less (at pneumatic pressure)		
Leakage	Zero leakage, both internal or external (at water pressure)		
Proof pressure*2	0.38 MPa		
Ambient temperature*8	0 to 50°C		
Fluid temperature*8	0 to 50°C (No freezing)		
Volume of valve chamber*3	11 μL	13 μL	
Mounting orientation*4	Free		
Enclosure	IP40 or equivalent		
Weight	30 g		
Rated voltage	12, 24 VDC		
Allowable voltage fluctuation*5	±10% of rated voltage		
Type of coil insulation	Class B		
Power consumption (When rated voltage is at 24 V)	With power saving circuit	Inrush	2.5 W (0.1 A)
		Holding	1 W
Coil switching noise*6	50 dB		

\*1 Select an appropriate fluid contact material according to the fluid to be used. Additionally, check the chemical resistance beforehand.

\*2 Indicates the pressure which does not generate breakage or cracks after a one-minute airtight test

\*3 Indicates the volume of clearance inside the valve chamber after the volume of the diaphragm is subtracted

\*4 Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended. When residual liquid need not be taken into consideration, any mounting orientation is available.

\*5 When response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.

\*6 The value is based on SMC's measurement conditions. The noise level will vary according to the actual conditions.

\*7 In compliance with JIS B 8419:2010

(Value at ambient and fluid temperatures of 25°C, rated voltage, max. operating pressure (air), and when the N.C. (IN) port is pressurized)

The response time will vary depending on the supply pressure, fluid, piping conditions, and ambient temperature.

\*8 When the diaphragm material is Kalrez®, the valve changeover time will be significantly longer at ambient and fluid temperatures of 15°C or less when compared to the valve changeover time at room temperature (≈ 25°C).

\* Refer to 10 in "Design / Selection" on page 41 if the valve is to be energized continuously for extended periods of time.

## Flow Rate Characteristics


Water		Air	
Kv	Cv	C	b
0.034	0.04	0.13	0.22

\* The values of Kv and Cv are based on JIS B 2005:1995; the values of C and b are based on JIS B 8390:2000.


\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Construction

### Body ported LVM11

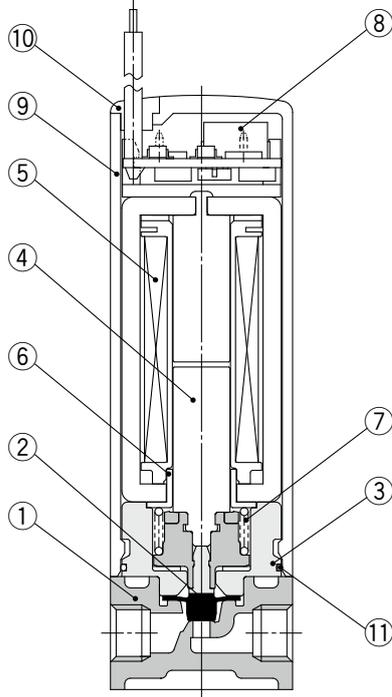

### Base mounted LVM13

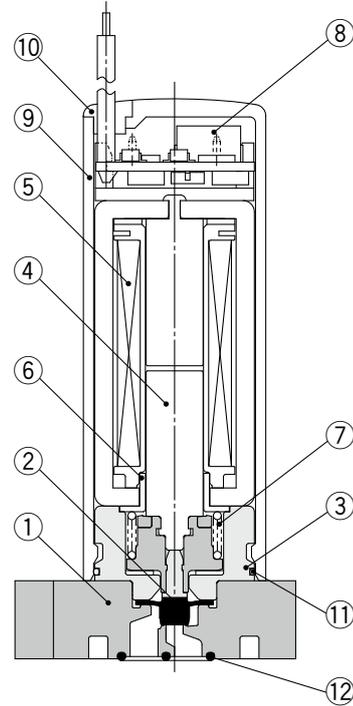

### Component Parts: LVM11

No.	Description	Material
1	Body	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Spacer	PBT
4	Armature assembly	Stainless steel/POM
5	Coil assembly	—
6	Sleeve	SUY (Iron)
7	Return spring	Stainless steel
8	Board assembly	—
9	Casing	PBT
10	Plug	NBR
11	O-ring	NBR

### Component Parts: LVM13

No.	Description	Material
1	Body	PEEK
2	Diaphragm assembly	EPDM/FKM/Kalrez®
3	Spacer	PBT
4	Armature assembly	Stainless steel/POM
5	Coil assembly	—
6	Sleeve	SUY (Iron)
7	Return spring	Stainless steel
8	Board assembly	—
9	Casing	PBT
10	Plug	NBR
11	O-ring	NBR
12	Gasket	EPDM/FKM/Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product  
Precautions



Spare Parts

# LVM11/13 Series



## Dimensions

Body ported  
LVM11-□□-□ (N.C.)

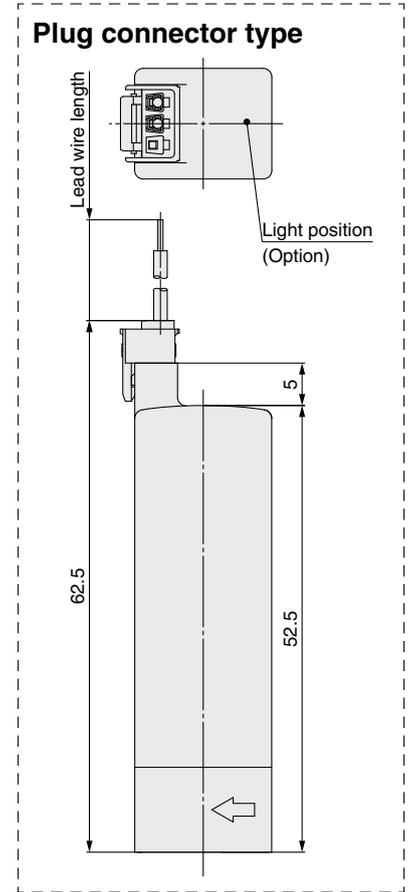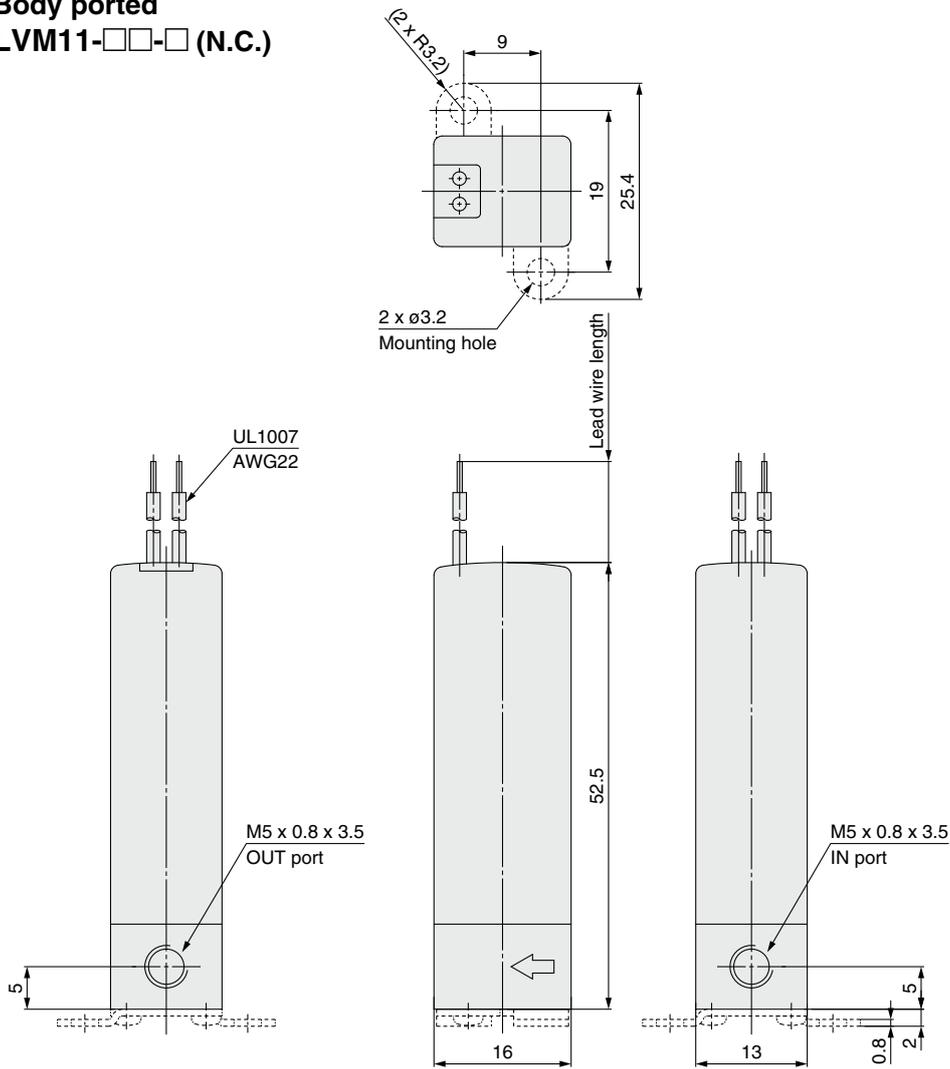





## Dimensions

Base mounted

LVM13-□□□□ (N.C.)

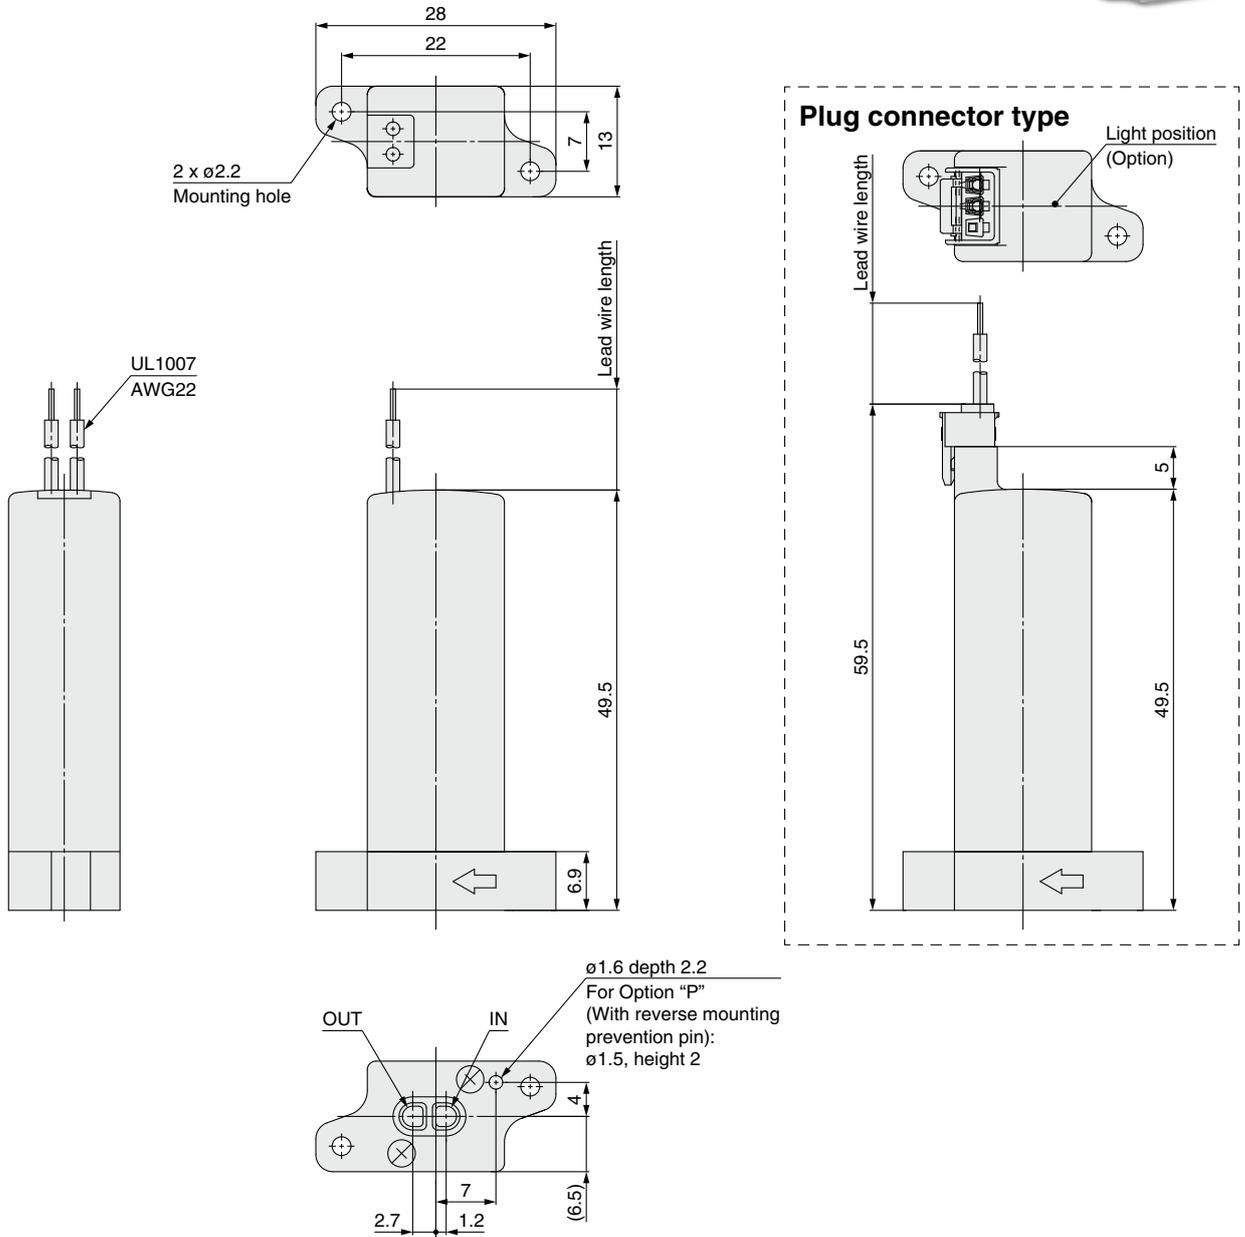

### Recommended interface dimensions \* Surface roughness = Rz3.2 or less

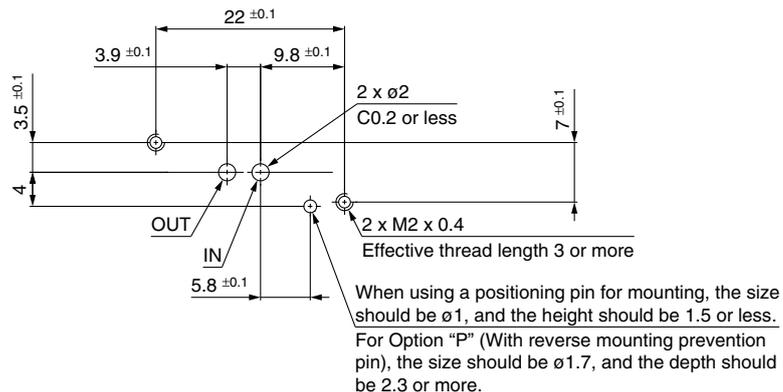

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts



# LVM Series Specific Product Precautions 1

Be sure to read this before handling the products. Please contact SMC when it is used in conditions other than the specifications.

## Design / Selection

### Warning

**1. Do not use this product in applications which may adversely affect human life (e.g. medical equipment connected to the human body for drip infusion).**

**2. Confirm the specifications.**

Give careful consideration to the operating conditions, such as the application, fluid, and environment, and use within the specified operating ranges indicated in the catalog.

**3. Fluid**

Be sure to confirm the compatibility between the component material and the fluid.

**4. Ensure sufficient space for maintenance activities.**

When installing the products, allow access for maintenance and inspection.

**5. Fluid pressure range**

Fluid pressure should be within the allowable pressure range.

**6. Ambient environment**

Use within the allowable ambient temperature range. Be sure that the liquid or corrosive gas does not touch the external surface of the product.

**7. Countermeasures against static electricity**

Take measures to prevent static electricity since some fluids can cause static electricity.

**8. Pressure (including vacuum) holding**

It is not usable for an application such as holding the pressure (including vacuum) inside of a pressure vessel because air leakage is entailed in a valve.


**9. Cannot be used as an emergency shut-off valve, etc.**

The valves presented in this catalog are not designed for safety applications such as an emergency shut-off valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

**10. Extended periods of continuous energization**

If solenoid valves are to be continuously energized for extended periods of time, use valves with power saving circuits to minimize the amount of heat released by the coil.

#### Power saving circuit waveform (example)

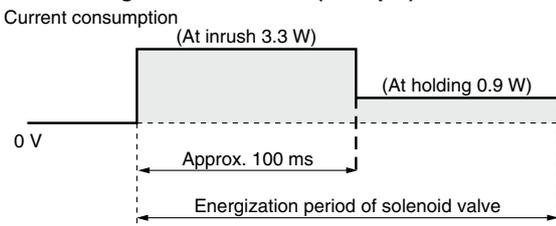

- \* Power consumption for the waveform shown above is that of the LVM09/090.
- \* For the LVM15/150, the type with power saving circuit is standard.
- \* For the LVM10/100, the inrush is 50 ms.

When a solenoid valve without a power saving circuit is continuously energized for long periods of time, temperature increase from coil heat release can result in worsening performance and shortened service life of the solenoid valve, as well as adverse effects on peripheral equipment in the vicinity. For this reason, when valves are to be continuously energized for extended periods, use a fan or take other measures to disperse heat and keep valve surface temperatures at 70°C or less.

The table below shows reference values for continuously energized valves (single unit) when surface temperature is 70°C or less.

Model	LVM09/090	LVM10/100	LVM20/200
Period of continuous energization	5 min. or less	30 min. or less	30 min. or less
Duty ratio	50% or less		
Ambient temperature	25°C or less		
Power saving circuit	None		

\* Duty ratio: ON time/(ON time + OFF time)

\* For the LVM15/150, the type with power saving circuit is standard.

Please use a fan or take other measures to disperse heat and keep temperatures within the specified range when mounting the solenoid valves inside control panels, etc. Be especially careful when using three or more adjacent valves with manifolds and keeping them continuously energized for extended period, as this may result in dramatic increases in temperature.

**11. Low temperature environments**

Be aware that the valve changeover time becomes extremely long when the ambient and fluid temperature becomes 15°C or less as a reference when compared to the valve changeover time at room temperature (approx. 25°C). Diaphragm material: Kalrez®

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Selection

### Caution

**1. Leakage voltage**

The leakage voltage should be 2% or less of the rated voltage. If the leakage voltage exceeds this value, solenoid valve may not turn OFF.

**2. Valves with a power saving circuit (PWM circuit built-in type)**

Valves with a power saving circuit (PWM circuit built-in type) perform the high-speed switching operation with the PWM control circuit inside the valve after the rated power has been applied for several tens of ms to reduce the power consumption. The problems shown below may occur in this type of valve due to the switch or drive circuit system by the PWM control. Be sure to check the operation with the customer's machine sufficiently when selecting the product.

1) The valve does not turn ON.

1. If the PWM circuit built-in type valve is driven by a mechanical relay, etc., and chattering occurs during the several tens of ms necessary for the valve to reach its rated voltage, the valve may not turn ON correctly.
2. If a filter, etc., is connected between the power supply and the PWM circuit built-in type valve, the current necessary to drive the valve lowers due to the effects of the filter, and then the valve may not turn ON correctly.

2) The valve does not turn OFF.

If the PWM circuit built-in type valve is driven by the photo coupler, the photo coupler cannot turn OFF and the valve is kept in an ON state. Therefore, take great care when using the photo coupler built-in SSR (solid state relay) or drive circuit.



# LVM Series

## Specific Product Precautions 2

Be sure to read this before handling the products. Please contact SMC when it is used in conditions other than the specifications.

### Mounting

#### ⚠ Caution

1. Always tighten threads with the proper tightening torque.

When mounting the solenoid valve, tighten it with the proper tightening torque shown below.

#### Tightening Torque for Base Mounting

Location	Model	Thread size	Proper tightening torque [N·m]
Base mounted, Body mounting	LVM07R6	M1.6	0.06 to 0.1
	LVM09R3, 09R4, 09R6, 095R	M2	0.1 to 0.14
	LVM13	M2	0.15 to 0.2
	LVM10R3, 10R4, 10R6, 105R	M2	0.15 to 0.2
	LVM15R3, 15R4, 15R6, 155R	M2.5	0.25 to 0.35
	LVM20R3, 20R4, 205R	M3	0.4 to 0.6

2. Mount the solenoid valve on the horizontal surface.

Applicable model: All models

3. Remove dust from the solenoid valve mounting surface completely. The surface roughness of the mounting surface should be Rz3.2 or less.

Applicable model: Base mounted

4. When mounting the solenoid valves next to each other, the valve pitch should be the value or more shown in the table below.

Model	LVM07	LVM09/090	LVM13	LVM10/100	LVM15/150	LVM20/200
Valve pitch	8	10.5	14	14	17	21

Applicable model: All models

#### ⚠ Warning

5. If air leakage increases or equipment does not operate properly, stop operation.

After mounting, perform suitable function and leak tests to confirm that the mounting is correct.

6. Since the body (orifice shape) is designed to eliminate residual liquid, mounting in a vertical direction with the coil at the top is recommended.

When residual liquid need not be taken into consideration, any mounting orientation is available.

### Piping

#### ⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

### Piping

#### ⚠ Caution

2. When tubing is connected to the body-ported solenoid valve, insert the tubing straight to the end of the tube inlet for a complete fit.

Select appropriate tubing while referring to the table below.

Model	Tube inside diameter (I.D.)	Tubing outside diameter (O.D.) (after mounting)
LVM09R1, 09R2, 092R	ø1.9 or less	ø4.2 or less
LVM10R1, 10R2, 102R	ø2.5 or less	ø4.5 or less
LVM20R1, 20R2, 202R	ø3.1 or less	ø6.8 or less

The holding force varies by the tubing material. Be sure to confirm the holding force of each material before operation.

After connecting the tubing, care should be taken not to put excessive force (tensile force, compression, bending, etc.) on the tubing. If an external force of 20 N or more is applied to the tube inlet, the inlet may become damaged, and leakage or breakage could occur.

3. When the tubing is long or according to the operating conditions, tubing may thrash about, causing damage to the tube inlet of the solenoid valve, or the tubing to come off or deteriorate.

In this case, secure the tubing to prevent its uncontrolled movement.

4. When piping the fitting to the solenoid valve, the installation method and tightening torque value may vary depending on the seal structure (shape) or material of the fitting to be used. Check the methods and precautions recommended by the fitting manufacturer to be used, and be sure to check for leakage.

The table below shows the tightening method using the KQ2 series.

Model	Location	Thread size	Tightening method	Tightening torque [N·m] (Reference)
LVM11	Body	M5	After tightening by hand, tighten 1/6 to 1/4 turn with a tightening tool.	Material PEEK: 0.5 to 0.7
LVM07R6, LVM09R3, 09R4, 09R6, 095R	Base mounted (With sub-plate)	M6 or 1/4-28UNF	After tightening by hand, tighten 1/6 to 1/4 turn with a tightening tool.	Material PEEK: 0.5 to 0.6
LVM10R3, 10R4, 10R6, 105R		M6 or 1/4-28UNF	After tightening by hand, tighten 1/6 to 1/4 turn with a tightening tool.	Material PVDF: 0.6 to 0.8 Material PFA: 0.2 to 0.25
LVM15R3, 15R4, 15R6, 155R		M6 or 1/4-28UNF	After tightening by hand, tighten 1/6 to 1/4 turn with a tightening tool.	Material PVDF: 0.6 to 0.8
LVM20R3, 20R4, 205R		Rc1/8 or NPT1/8	Tighten approximately 4 turns.	Material PVDF: 0.5 to 0.6
	G1/8	After tightening by hand, tighten 1/3 to 1/2 turn with a tightening tool.	Material PVDF: 0.4 to 0.6	

LVM07

LVM09/090

LVM10/100

LVM15/150

LVM20/200

LVM11/13

Specific Product Precautions

Spare Parts



# LVM Series Specific Product Precautions 3

Be sure to read this before handling the products. Please contact SMC when it is used in conditions other than the specifications.


## Wiring

### ⚠ Caution

1. Use electrical circuits which do not generate chattering in their contacts.
2. Use voltage which is within  $\pm 10\%$  of the rated voltage.  
However, when response time is prioritized, control the voltage so that there is no fluctuation below the rated voltage.
3. Apply the correct voltage.  
Applying incorrect voltage may cause a malfunction or a burned coil.
4. Connect the wires so that an external force of 10 N or more is not applied to the lead wire.  
Otherwise, the coil will burn.

5. Units with power saving circuits use polarized electrical connections.

Red (+), Black (-)

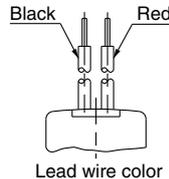

## Fluid Properties

### ⚠ Warning

#### Liquid (chemicals)

Component crystallizes or clots depending on its nature. Leakage will occur when a crystallized or clotted component is caught between the sealing parts.

Take measures to clean such component if necessary.

#### Water

Install a filter strainer of about 100 mesh on the inlet side of the piping.

#### Air

Compressed air filtered with a filter with filtration rating of 5  $\mu\text{m}$  or less, which is mounted on the inlet side of the piping, should be used.

## Operating Environment

### ⚠ Warning

1. Do not use the product in a place where there is contact with corrosive gases, chemicals or liquids.
2. Do not use in explosive atmospheres.
3. Do not use in locations subject to excessive vibration or impact.  
Impact resistance of this solenoid valve is 150  $\text{m/s}^2$ . Vibration resistance of this solenoid valve is 30  $\text{m/s}^2$ .
4. Do not use in locations where radiated heat will be received from nearby heat sources.

## Maintenance

### ⚠ Warning

1. Removing the product  
Shut off the fluid supply and release the fluid pressure in the system. Shut off the power supply. Remove the product.
2. Before operating, remove residual chemicals and completely replace it with pure water, air, etc.
3. Do not disassemble the product.  
Products which have been disassembled cannot be guaranteed. If disassembly is necessary, please contact SMC.

## How to Use Plug Connector


### ⚠ Caution

#### Attaching connectors

Hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.

#### Detaching connectors

Remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

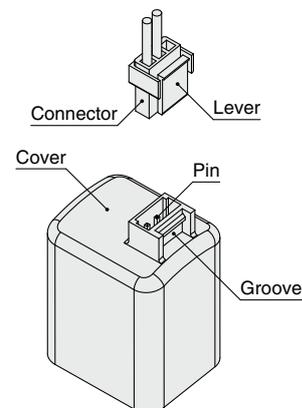

# LVM Series Spare Parts

## ■ Mounting Screw (Base mounted, For Body mounting)

Applicable model	Part number	Qty.
LVM07R6	LVM070-SC	20
LVM09R3, 09R4, 09R6, 095R	LVM090-SC	20
LVM13	LVM100-SC	20
LVM10R3, 10R4, 10R6, 105R		
LVM15R3, 15R4, 15R6, 155R	LVM150-SC	20
LVM20R3, 20R4, 205R	LVM200-SC	20

## ■ Sub-plate (Base mounted, Option)

Applicable model	Part number	Qty.
LVM07R6 (Material: PEEK)	LVM070-S2-3-□	1
LVM09R3, 09R4, 09R6 (Material: PEEK)	LVM090-S2-3-□	1
LVM095R (Material: PEEK)	LVM090-S1-3-□	1
LVM10R3, 10R4, 10R6 (Material: PVDF)	LVM100-S2-1-□	1
LVM10R3, 10R4, 10R6 (Material: PFA)	LVM100-S2-2-□	1
LVM105R (Material: PVDF)	LVM100-S1-1-□	1
LVM105R (Material: PFA)	LVM100-S1-2-□	1
LVM15R3, 15R4	LVM150-S2-1-□	1
LVM15R6	LVM150-S6-1-□	1
LVM155R	LVM150-S1-1-□	1
LVM20R3, 20R4	LVM200-S2-1-□	1
LVM205R	LVM200-S1-1-□	1

□: Port size  
M6: M6 x 1  
28: 1/4-28UNF

□: Port size  
M6: M6 x 1  
28: 1/4-28UNF

□: Port size  
O1: Rc1/8  
F1: G1/8  
N1: NPT1/8

## ■ Gasket, O-ring (Base mounted, For Interface mounting)

Applicable model	Part number	Qty.
LVM07R6	LVM070-GS-□	10
LVM09R3, 09R4, 09R6, 095R	LVM090-GS-□	10
LVM13	LVM13-GS-□	10
LVM10R3, 10R4, 10R6, 105R	LVM100-OR-□	30
LVM15R3, 15R4, 15R6, 155R	LVM150-GS-□	10
LVM20R3, 20R4, 205R	LVM200-OR-□	30

□: Material  
A: EPDM  
B: FKM  
C: Kalrez®

## ■ Bracket (Option)

Applicable model	Part number	Qty.	Note
LVM11	LVM10-14A-1	1	With mounting screws
LVM10R1, 10R2, 102R	LVM100-10A-1	1	
LVM10R3, 10R4, 10R6, 105R	LVM100-18A-1	1	

## ■ Plug Connector

Applicable model	Part number	Qty.
LVM09/090	SY100-30-4A-□	1
LVM11/13/10/100/15/150/20/200	AXT661-14A-□	1

□: Lead wire length  
Nil: 300 mm  
6: 600 mm  
10: 1000 mm  
30: 3000 mm

□: Lead wire length  
Nil: 300 mm  
6: 600 mm  
10: 1000 mm  
20: 2000 mm  
30: 3000 mm

\* Kalrez® is a registered trademark of E. I. du Pont de Nemours and Company or its affiliates.

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

 **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

 **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
ISO 4413: Hydraulic fluid power – General rules relating to systems.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
(Part 1: General requirements)  
ISO 10218-1: Manipulating industrial robots – Safety.  
etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### Caution

#### 1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.  
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
If anything is unclear, contact your nearest sales branch.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

#### \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.  
Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

### Revision History

**Edition B** \* The LVM09/090, LVM15/150, and LVM20/200 series have been added.  
\* The model numbers of the LVM10/100 series have been changed.  
\* Number of pages has been increased from 12 to 28. LU

**Edition C** \* The LVM07 series has been added.  
\* The body-ported type and new variations have been added to the LVM09 series.  
\* New variations have been added to the LVM15 series.  
\* Various options have been added.  
\* Number of pages has been increased from 28 to 48. YR

 **Safety Instructions** Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.