

Grippers for Collaborative Robots

YASKAWA Electric Corporation

collaborative robots

MOTOMAN-HC10DTP

MOTOMAN-HC20DTP

MOTOMAN-HC20SDTP

- MOTOMAN-HC10DT

- MOTOMAN-HC10

compliant



Plug and Play

* Only for the combination of a MOTOMAN-HC□□DTP and a compatible gripper

Vacuum Gripper

ZXP7□12-X1□

ZXP7□11-X1□



Magnet Gripper

MHM-X7400A

-DTP/HC10DT/HC10



Air Gripper

JMHZ2-X7400B

-DTP/HC10DT/HC10



CAT.EUS160-5B-UK

Grippers for Collaborative Robots

For Adsorption

Vacuum Gripper p. 4

ZXP7□12-X1□: Plug and Play

Compliant with the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP collaborative robots

ZXP7□11-X1□^{*1}

Compliant with the MOTOMAN-HC10DT collaborative robot

- Operation is possible simply by connecting 1 compressed air supply tube and 1 electrical wire (M8 connector)^{*2}. (ZXP7□12-X1□: HC10DTP, HC20DTP, HC20SDTP)
- Integrated vacuum ejector, air supply/release valve, pressure switch, and cups
- Features a rounded appearance without corners
- A wide variety of cup variations are available to support a wide range of workpieces.
- Standards: ISO 9409-1-50-4-M6 compliant
(ZXP7□12-X1□: HC10DTP, HC20DTP, HC20SDTP)

^{*1} It cannot be mounted on the MOTOMAN-HC10.

^{*2} The ZXP7□11-X1□ electrical wire is connected to the built-in cable (robot connector).

Max. work load [kg]	7
Max. vacuum pressure [kPa]	-84
Suction flow rate [l/min (ANR)]	17
Weight [g]	586 ^{*3}

^{*3} ZXP7□12-X1□, Without cup mounting flange



ZXP7□12-X1□

For Attraction

Magnet Gripper p. 10

MHM-X7400A-DTP: Plug and Play

Compliant with the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP collaborative robots

MHM-X7400A-HC10DT

Compliant with the MOTOMAN-HC10DT collaborative robot

MHM-X7400A-HC10

Compliant with the MOTOMAN-HC10 collaborative robot

- Attracts and holds heavy objects with a magnet
- Supports metal workpieces with holes and uneven surfaces
- Holding force: Max. 200 N (Ø 25, Workpiece thickness 6 mm)
- Continues to hold workpieces even when the air is shut off
- Operation is possible simply by connecting 1 compressed air supply tube and 1 electrical wire.
- Integrated solenoid valve, auto switch, and piston speed adjustment mechanism
- Standards: ISO 9409-1-50-4-M6 compliant
(MHM-X7400A-DTP-□: HC10DTP, HC20DTP, HC20SDTP)

Holding force [N]	Workpiece thickness: 2 mm	160
	Workpiece thickness: 6 mm	200
Weight [g]		590 ^{*1}

^{*1} For the MHM-X7400A-DTP



MHM-X7400A-HC10DT
(For the MOTOMAN-HC10DT)

YASKAWA Electric Corporation

collaborative robots

MOTOMAN-HC10DTP/HC20DTP/HC20SDTP/HC10DT/HC10

compliant products

For Gripping

Air Gripper p. 14

JMHZ2-X7400B-DTP: Plug and Play

Compliant with the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP collaborative robots

JMHZ2-X7400B-HC10DT

Compliant with the MOTOMAN-HC10DT collaborative robot

JMHZ2-X7400B-HC10

Compliant with the MOTOMAN-HC10 collaborative robot

- Compact, lightweight product with high gripping force due to air operation
- With high-precision linear guide, Repeatability: ± 0.01 mm
- Operation is possible simply by connecting 1 compressed air supply tube and 1 electrical wire.
- Integrated solenoid valve, speed adjustment mechanism, and auto switch
- Standards: ISO 9409-1-50-4-M6 compliant
(JMHZ2-X7400B-DTP: HC10DTP, HC20DTP, HC20SDTP)

Gripping force	External	32.7
Effective value per finger [N]	Internal	43.5
Opening/Closing stroke (Both sides) [mm]		10
Weight [g]		430*1

*1 For the JMHZ2-X7400B-DTP



JMHZ2-X7400B-HC10DT
(For the MOTOMAN-HC10DT)



C O N T E N T S

Grippers for Collaborative Robots

YASKAWA Electric Corporation

collaborative robots MOTOMAN-HC10DTP/HC20DTP/HC20SDTP/HC10DT/HC10 compliant products



For Adsorption

Vacuum Gripper

ZXP7□12-X1□/ZXP7□11-X1□

p. 4

Features	p. 4
Specifications	p. 5
Cup Variations	p. 5
How to Order	p. 6
Model Selection	p. 7
Dimensions	p. 7
Specific Product Precautions	p. 9



For Attraction

Magnet Gripper

MHM-X7400A-DTP/HC10DT/HC10

p. 10

Features	p. 10
Component Parts	p. 10
Specifications	p. 11
Characteristics	p. 11
How to Order	p. 11
Dimensions	p. 11
Specific Product Precautions	p. 13



For Gripping

Air Gripper

JMHZ2-X7400B-DTP/HC10DT/HC10

p. 14

Features	p. 14
Component Parts	p. 14
Specifications	p. 15
How to Order	p. 15
Characteristics	p. 15
Dimensions	p. 16
Specific Product Precautions	p. 17

Vacuum Gripper for Collaborative Robots

Plug and Play

(ZXP7□12-X1□ only)

ZXP7□12-X1□

Compliant with the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP
YASKAWA Electric Corporation collaborative robots

ZXP7□11-X1□

Compliant with the MOTOMAN-HC10DT
YASKAWA Electric Corporation collaborative robot

- Operation is possible simply by connecting 1 compressed air supply tube and 1 electrical wire (M8 connector)*1. (ZXP7□12-X1□)
- Integrated vacuum ejector, air supply/release valve, pressure switch, and cups
- Features a rounded appearance without corners
- A wide variety of cup variations are available to support a wide range of workpieces.
- Standards: ISO 9409-1-50-4-M6 compliant (ZXP7□12-X1□)
- As the air piping and electric wiring built into the robot are used, no external wiring or piping is required.

No interference with workpieces or workers (ZXP7□11-X1□)*2

*1 The ZXP7□11-X1□ electrical wire is connected to the built-in cable (robot connector).

*2 The ZXP7□11-X1□ cannot be mounted on the MOTOMAN-HC10.

It can be used with robot specifications with air piping.

Component Parts

ZXP7□12-X1□

(For the MOTOMAN-HC10DTP/
HC20DTP/HC20SDTP)





ZXP7□11-X1□

(For the MOTOMAN-HC10DT)



Details of internal parts

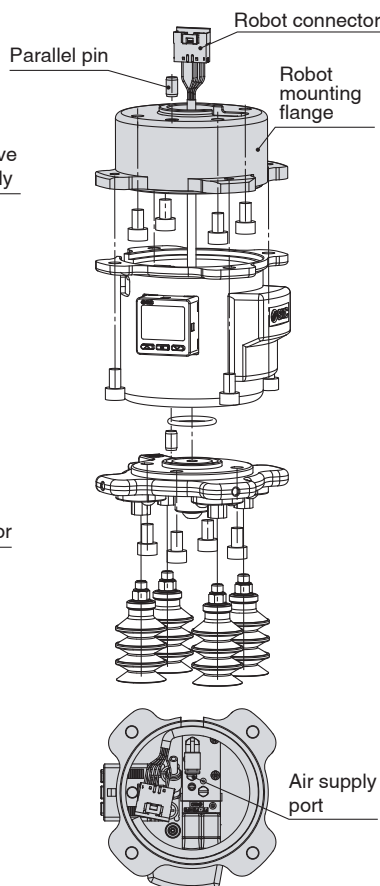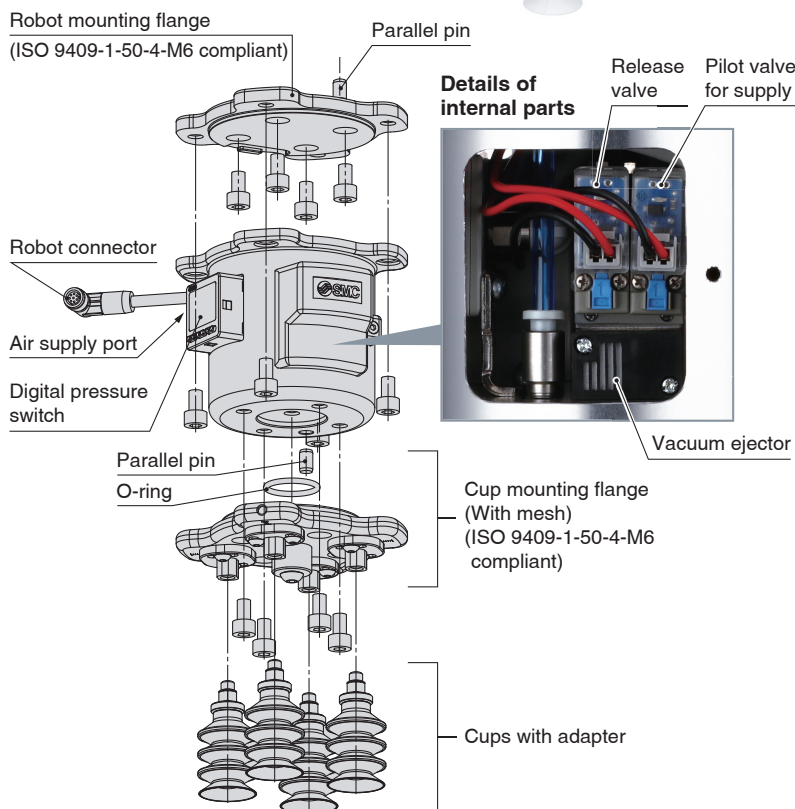

* The cup mounting flange and the cup with adapter are the same as those of the ZXP7□12-X1□.

Specifications

Model	ZXP7□12-X1□	ZXP7□11-X1□
Robot mounting flange standards	ISO 9409-1-50-4-M6 compliant	—
Common	Applicable fluid	Air
	Operating temperature range [°C]	5 to 50
	Weight [g]*1	810 (586)
	Max. work load [kg]*2	7
	Air pressure supply (P) port	One-touch fitting (O 6)
	Power supply voltage [V]	24 VDC ±10%
	Connector type	M8 8-pin connector (Socket)
Vacuum ejector	Max. vacuum pressure [kPa]*3	-84
	Suction flow rate [l/min (ANR)]*3	17
	Air consumption [l/min (ANR)]*3	57
	Supply pressure range [MPa]	0.3 to 0.55
	Standard supply pressure [MPa]*4	0.5
Pressure switch	Rated pressure range [kPa]	0 to -101
	Display accuracy	±2% F.S. ±1 digit (Ambient temperature of 25 ±3 °C)
	Repeatability	±0.2% F.S. ±1 digit
	Temperature characteristics	±2% F.S. (25 °C conversion)
Included parts	Robot mounting flange, Parallel pin, Mounting bolt, Cup with adapter*5, Plug*6, Piping tube (O 6 x 2 m), Piping fittings (2 types)	Robot mounting flange, Parallel pin, Mounting bolt, Cup with adapter*5, Plug*6

*1 The weight in parentheses refers to the weight of the product without a cup mounting flange. Add the weight of the suction cups with adapter for the weight with cups. (Refer to the "Suction Cup Part Numbers and Weight" on page 6.)

*2 May be restricted depending on the cup diameter, mounting orientation, or workpiece. Please use within the max. work load. Suction and transfer exceeding the max. work load may result in reduced vacuum pressure due to air leakage.

*3 Values are at the standard supply pressure and based on SMC's measurement standards. They depend on atmospheric pressure (weather, altitude, etc.) and the measurement method.

*4 This value indicates the pressure right before the air pressure supply (P) port when vacuum is generated. The pressure right before the P port of the vacuum gripper when vacuum is generated may fall below 0.5 MPa due to the air supply capacity, piping size, and the amount of air being consumed by other devices being operated simultaneously.

*5 Included only with cups *6 Included only for the ZXP7A

Cup Variations

The number of cups can be changed.

(Refer to the operation manual for details on changing the quantity.)



1 cup

2 cups

4 cups

The cup type can be changed.

(For details on selectable cups, refer to "How to Order.")



Flat (O 8),
Silicone rubber

Bellows (O 20),
NBR


Thin flat (O 16),
NBR



Flat (O 32),
Silicone rubber

Flat (O 32),
Urethane rubber

O 32, 2.5-stage,
Silicone rubber

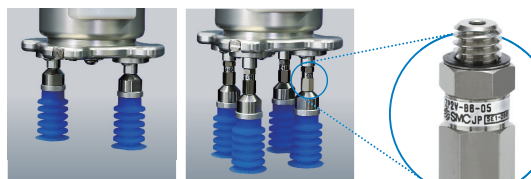

O 25, 5.5-stage,
Silicone rubber


O 25, 5.5-stage,
Silicone rubber
With vacuum
saving valve



Vacuum saving valve
ZP2V Series
(To be ordered separately)
Applicable part no.:
ZP2V-B6-05

* The silicone material is compliant with the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.


The cup pitch can be changed.

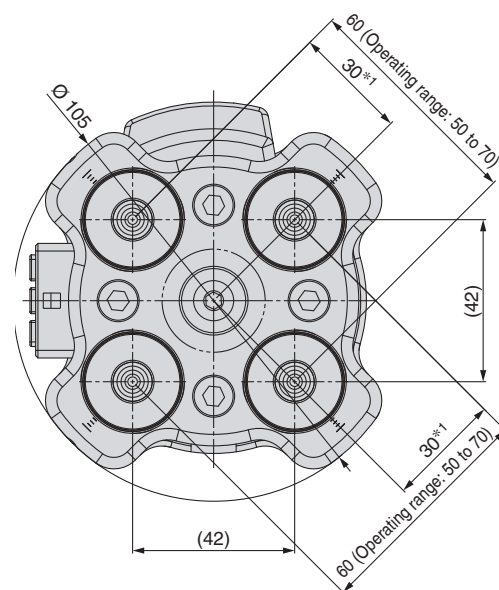

*1 Operating range: 25 to 35 (When a cup is mounted in the centre)

As interference between cups may occur depending on the cup diameter, select the cup diameter according to the pitch to be used.

How to Order

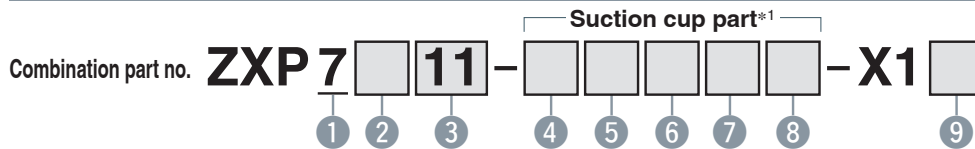

*1 Refer to the table below for the applicable cups. For models with cups, 4 cups with adapters are included in the package.


1 Body size

Symbol	Size
7	75 mm

2 Cup mounting flange shape

Symbol	Flange shape
A	With flange (42 mm x 42 mm)
N	Without flange

With flange Without flange

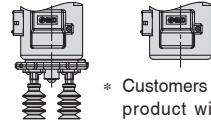

* Customers selecting the product without a cup mounting flange will be required to produce a flange that matches the mounting dimensions on their own.

6 Cup form

Symbol	Cup form
U	Flat
C	Flat with rib
B	Bellows
UT	Thin flat
J	Multistage bellows
JT2	2.5-stage bellows
JT5	5.5-stage bellows
—	Without cup

7 Cup material

Symbol	Material
N	NBR
S	Silicone rubber (White)*2
U	Urethane rubber
F	FKM
SF	Silicone rubber (Blue)*2
—	Without cup

*2 The silicone material is compliant with the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.

3 Compatible robot manufacturer

Symbol	Robot manufacturer
11	YASKAWA Electric Corporation: MOTOMAN-HC10DT
12	YASKAWA Electric Corporation: MOTOMAN-HC10DTP MOTOMAN-HC20DTP MOTOMAN-HC20SDTP

4 Cup series

Symbol	Cup series
ZP	Basic
ZP3P	Bellows type for film packaging workpieces
—	Without cup

5 Cup diameter

Symbol	Cup diameter	Symbol	Cup diameter
08	Ø 8	25	Ø 25
10	Ø 10	B25	Ø 25
13	Ø 13	B30	Ø 30
16	Ø 16	32	Ø 32
20	Ø 20	—	Without cup

9 Pressure switch output specifications/Unit

Symbol	Output/Unit
—	NPN/With unit switching function*4
A	NPN/With unit switching function*4
B	NPN/With unit switching function (Initial value psi)*4
C	PNP/With unit switching function*4
D	PNP/With unit switching function*4
E	PNP/With unit switching function (Initial value psi)*4

*4 Under the New Measurement Act, switches with the unit switching function are not permitted for use in Japan.

*5 Fixed unit: kPa, MPa

*1

Suction Cup Part Numbers and Weight

Part No. **ZXP7(A,N)(12/11) -** **- X1**

4 5 6 7 8

Applicable cups

4	5	6	7	8
Cup series	Cup diameter	Cup form	Cup material	Attachment
ZP	08	U	□	
ZP	08	B	□	
ZP	10	UT	□	
ZP	13	UT	□	
ZP	16	UT	□	
ZP	10	U	□	
ZP	13	U	□	
ZP	16	U	□	
ZP	20	U	□	
ZP	25	U	□	
ZP	32	U	□	
ZP	10	C	□	
ZP	13	C	□	
ZP	16	C	□	
ZP	20	C	□	
ZP	25	C	□	
ZP	32	C	□	
ZP	10	B	□	
ZP	13	B	□	
ZP	16	B	□	
ZP	20	B	□	
ZP	25	B	□	
ZP	32	B	□	
ZP	20	UT	□	
ZP	16	J	□	
ZP	B25	J	□	
ZP	B30	J	□	
ZP3P	20	JT2	SF	
ZP3P	20	JT2	SF	M
ZP3P	32	JT2	SF	
ZP3P	32	JT2	SF	M
ZP3P	20	JT5	SF	
ZP3P	25	JT5	SF	
ZP3P	32	JT5	SF	


Cup part numbers

Cup with adapter					Adapter unit Vacuum inlet: (Male thread M6 x 1)	Cup unit
Part no.	Weight by cup material (g/cup)					
	N (NBR)	S/SF (Silicone rubber)	U (Urethane rubber)	F (FKM)		
ZPT08U□-A6	4	4	4	4	ZPT1-A6	ZP08U□
ZPT08B□-A6	4	4	4	4		ZP08B□
ZPT10UT□-A6	4	4	4	4		ZP10UT□
ZPT13UT□-A6	4	4	4	4		ZP13UT□
ZPT16UT□-A6	4	4	4	4		ZP16UT□
ZPT10U□-AS6	7	7	7	7	ZPT2-7A-AS6	ZP10U□
ZPT13U□-AS6	7	7	7	8		ZP13U□
ZPT16U□-AS6	7	7	7	8		ZP16U□
ZPT20U□-AS6	9	10	10	10		ZP20U□
ZPT25U□-AS6	10	10	10	11		ZP25U□
ZPT32U□-AS6	10	11	11	12	ZPT3-7A-AS6	ZP32U□
ZPT10C□-AS6	7	7	7	7		ZP10C□
ZPT13C□-AS6	7	7	7	7		ZP13C□
ZPT16C□-AS6	7	7	7	8		ZP16C□
ZPT20C□-AS6	9	10	10	11		ZP20C□
ZPT25C□-AS6	10	10	10	11	ZPT2-7A-AS6	ZP25C□
ZPT32C□-AS6	10	11	11	12		ZP32C□
ZPT10B□-AS6	7	7	7	8		ZP10B□
ZPT13B□-AS6	7	8	8	8		ZP13B□
ZPT16B□-AS6	8	8	8	9		ZP16B□
ZPT20B□-AS6	11	11	11	13	ZPT3-7A-AS6	ZP20B□
ZPT25B□-AS6	11	12	12	14		ZP25B□
ZPT32B□-AS6	14	15	15	18		ZP32B□
ZPG20UT□-7A-X2	4	4	4	4		ZP2-20UT□
ZPG16J□-7A-X2	8	8	8	9		ZP2-16J□
ZPGB25J□-7A-X2	14	15	15	18	ZPT2-7A-AS6	ZP2-B25J□
ZPGB30J□-7A-X2	18	19	19	25		ZP2-B30J□
ZP3PG20JT2SF-7A-X2	—	21	—	—		ZP3P-20JT2SF-W
ZP3PG20JT2SF-M-7A-X2	—	21	—	—		ZP3P-20JT2SF-WM
ZP3PG32JT2SF-7A-X2	—	48	—	—		ZP3P-32JT2SF-W
ZP3PG32JT2SF-M-7A-X2	—	48	—	—	ZPT3-7A-AS6	ZP3P-32JT2SF-WM
ZP3PG20JT5SF-7A-X2	—	23	—	—		ZP3P-20JT5SF-WG
ZP3PG25JT5SF-7A-X2	—	25	—	—		ZP3P-25JT5SF-WG
ZP3PG32JT5SF-7A-X2	—	54	—	—		ZP3P-32JT5SF-WG


Input the material symbol ("N," "S," "U," or "F") into the □ in the part number.

Model Selection

Exhaust Characteristics*1

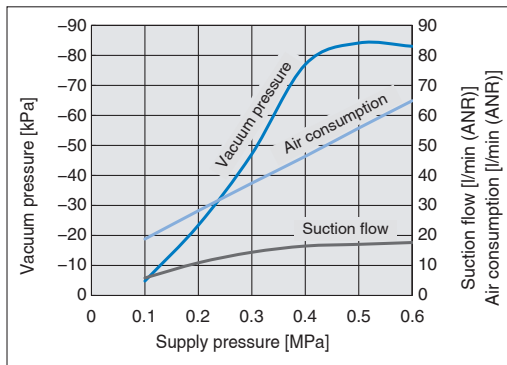


Flow Rate Characteristics

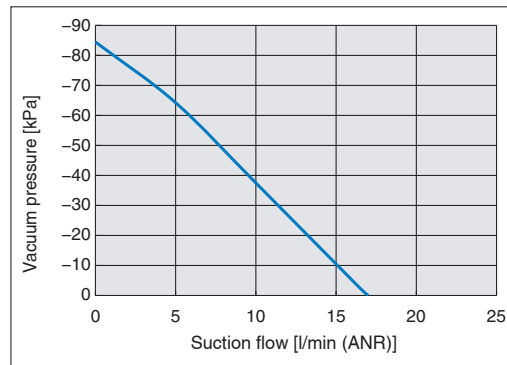



*1 The exhaust characteristics are different when the vacuum-saving valve (ZP2V-B6-05) is mounted.
For details, refer to "8.3 Suction cup precautions" in the operation manual.

Dimensions




ZXP7□12-X1□

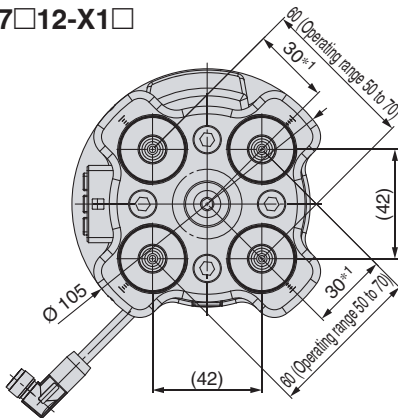

Circuit diagram

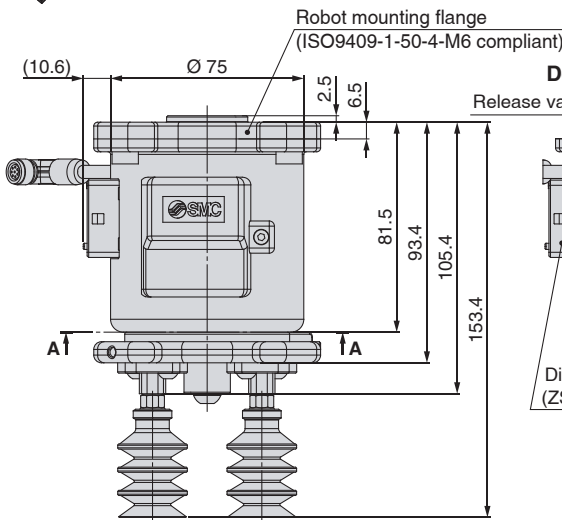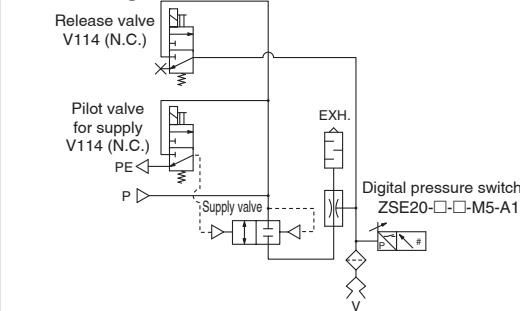


Details of internal parts

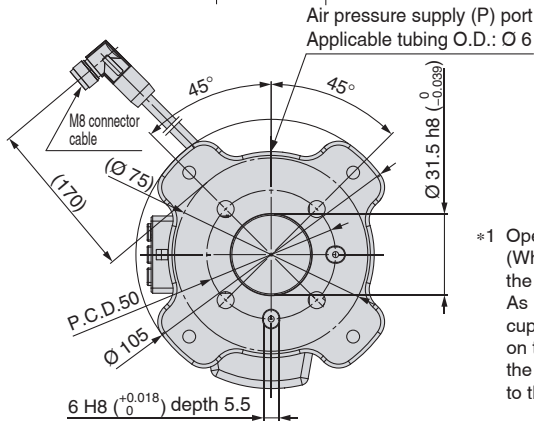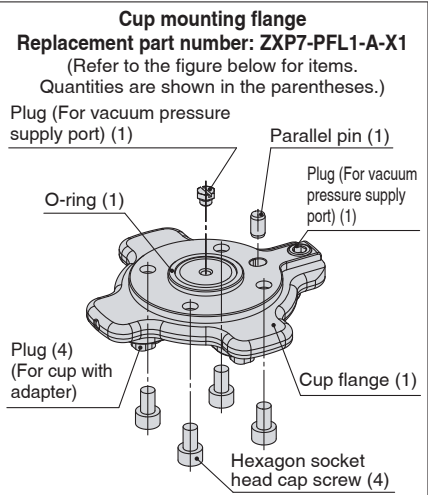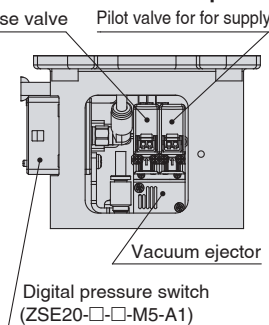

*1 Operating range: 25 to 35
(When a cup is mounted in the centre)
As interference between cups may occur depending on the cup diameter, select the cup diameter according to the pitch to be used.


Without cup mounting flange

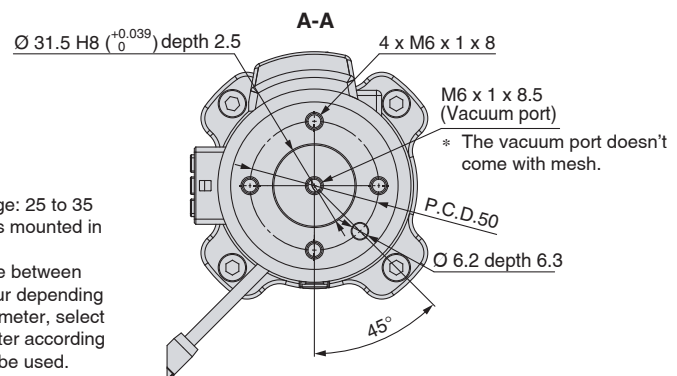


* The dimensions and mounting method described in this drawing (example) are for the following part number: ZXP7A12-ZPB25JS-X1□

Dimensions


ZXP7□11-X1□

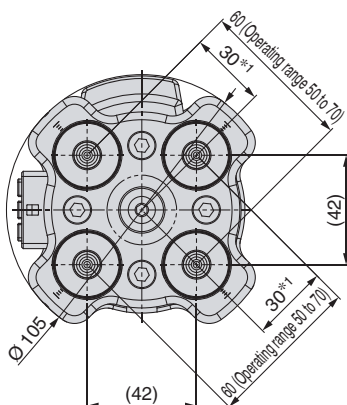


Details of internal parts

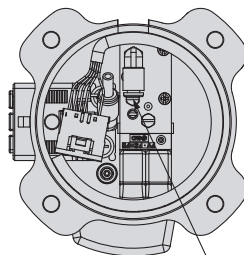

Air pressure supply (P) port
Applicable tubing O.D.: Ø 4

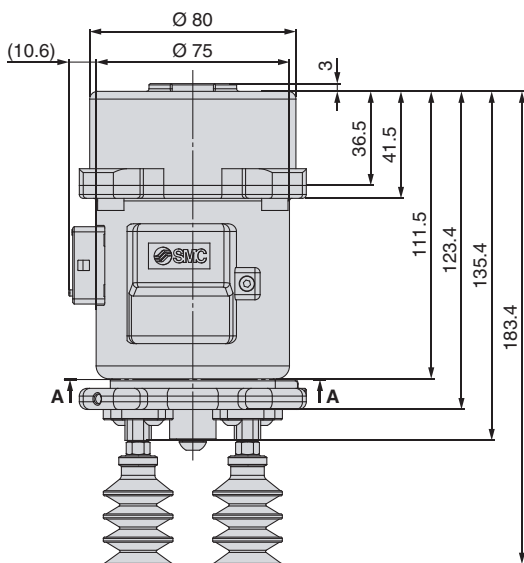



Circuit diagram

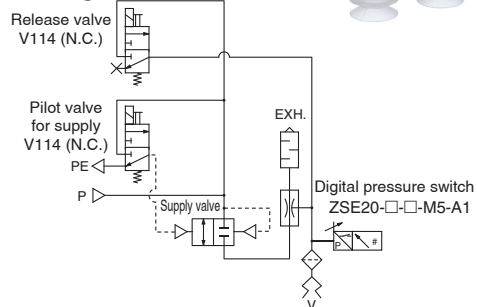

Cup mounting flange


Replacement part number: ZXP7-PFL1-A-X1

(Refer to the figure below for items.
Quantities are shown in the parentheses.)

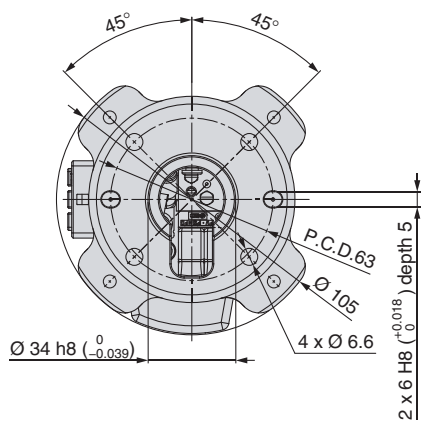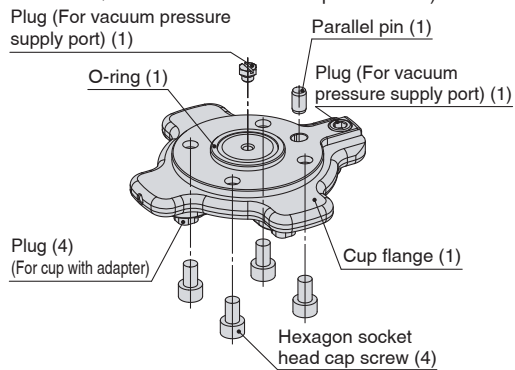

*1 Operating range: 25 to 35
(When a cup is mounted in the centre)
As interference between cups may occur depending on the cup diameter, select the cup diameter according to the pitch to be used.

Without cup mounting flange

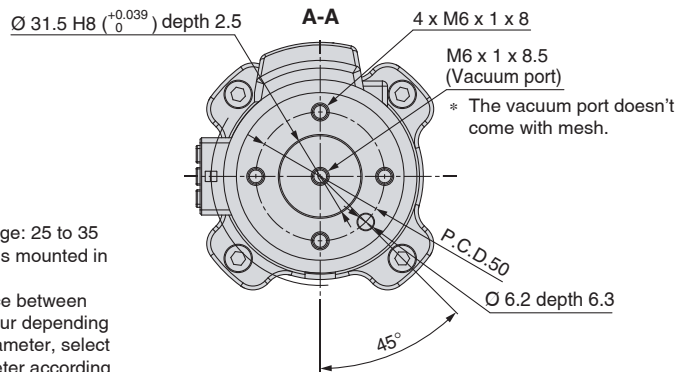

* The dimensions and mounting method described in this drawing (example) are for the following part number: ZXP7A11-ZPB25JS-X1□



ZXP7□12/11-X1□

Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smc.eu>

Handling

Caution

1. Strictly observe the precautions on vacuum equipment and safety when using the product. Additionally, select a cup size and material suitable to both the workpiece to be adsorbed and the atmosphere. Take safety measures so that any accident, such as the dropping of a workpiece, does not occur during adsorption transfer. For details, refer to the Web Catalogue.
2. Use the product within the specification range. Use exceeding the compressed air pressure or voltage may result in serious damage due to reduced product performance.
3. Exhaust air is released from the opening in the product. Therefore, this exhaust air opening must not be blocked or restricted.

Mounting

Caution

1. For details on the mounting method, refer to the Operation Manual.
2. Tighten to the specified tightening torque. If the tightening torque is exceeded, the body and the mounting screws may break. However, insufficient torque may cause displacement of the body and loosening of the mounting screws.
3. Do not drop, strike, or apply excessive impact to this product.
Doing so may result in damage to the internal parts of the body, solenoid valve, or pressure switch. In some cases, this damage may result in a malfunction.
4. Hold the body when handling the product. Do not pull excessively on the cable or pinch the cable when lifting the body. Failure to do so may result in damage to the solenoid valve or pressure sensor. In some cases, this damage may result in a failure or malfunction.
5. The bolts may loosen due to the operating conditions and environment. Be sure to conduct maintenance such as tightening the bolts periodically.

Wiring

Caution

1. Do not wire while energising the product. Doing so may result in damage to the internal parts of the solenoid valve or pressure switch. In some cases, this damage may result in a malfunction.
2. Do not disassemble the cable or make any modifications, including additional machining. Doing so may cause human injury and/or an accident.

Piping

Caution

1. Flushing of the inside of the pipes

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

2. Tube attachment

- Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, 3, 5, or 6. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

3. Tube detachment

- Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.

4. Other Tube Brands

When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

- Nylon tube within ± 0.1 mm
- Soft nylon tube within ± 0.1 mm
- Polyurethane tube within $+0.15$ mm, within -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

5. Piping

- Do not apply unnecessary forces, such as twisting, pulling, moment loads, vibration, impact, etc., on fittings or tubing. This will cause damage to fittings and will crush, burst, or release tubing.
- Do not lift the product by the piping after the tube is connected. Doing so may result in damage to the One-touch fitting. For details, refer to the “Handling Precautions for SMC Products” on the SMC website: <https://www.smc.eu>

Magnet Gripper for Collaborative Robots

Plug and Play

(MHM-X7400A-DTP only)

MHM-X7400A-DTP

Compliant with the MOTOMAN-HC10DTP/
HC20DTP/HC20SDTP collaborative robots

MHM-X7400A-HC10DT

Compliant with the MOTOMAN-HC10DT
collaborative robot

MHM-X7400A-HC10

Compliant with the MOTOMAN-HC10
collaborative robot

- Attracts and holds heavy objects with a magnet
- Supports metal workpieces with holes and uneven surfaces
- Compact with high holding force


Holding force: Max. 200 N (Ø 25, Workpiece thickness 6 mm)

- Continues to hold workpieces even when the air is shut off
- Operate by simply connecting 1 compressed air supply tube and an electrical wiring connector.
- Integrated solenoid valve, auto switch, and piston speed adjustment mechanism
- Standards: ISO 9409-1-50-4-M6 compliant (MHM-X7400A-DTP)

Component Parts

MHM-X7400A-DTP


(For the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP)

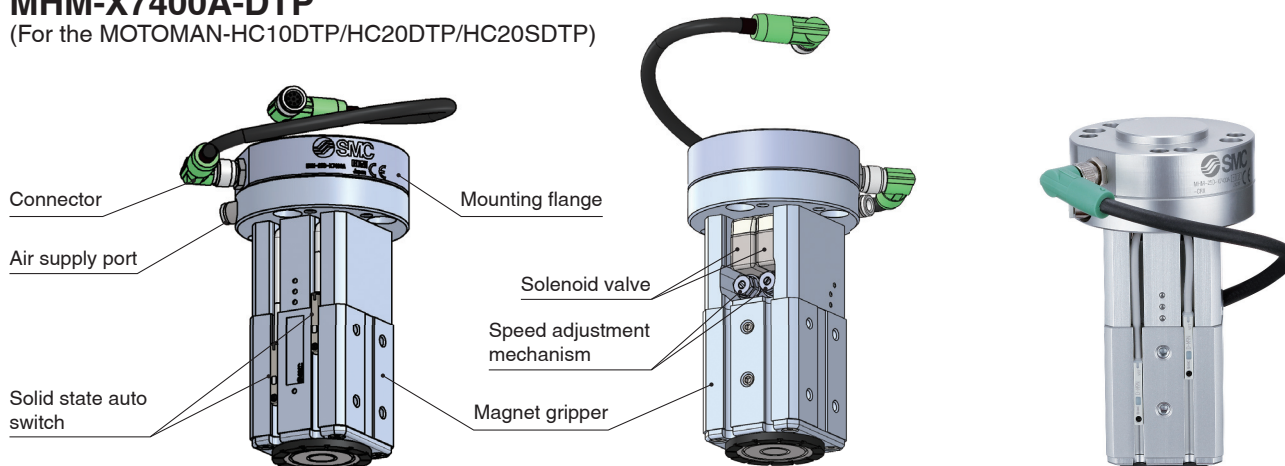

MHM-X7400A-HC10DT/HC10

(For the MOTOMAN-HC10DT/HC10)

* Aside from the mounting flange, it is the same as the MHM-X7400A-DTP.

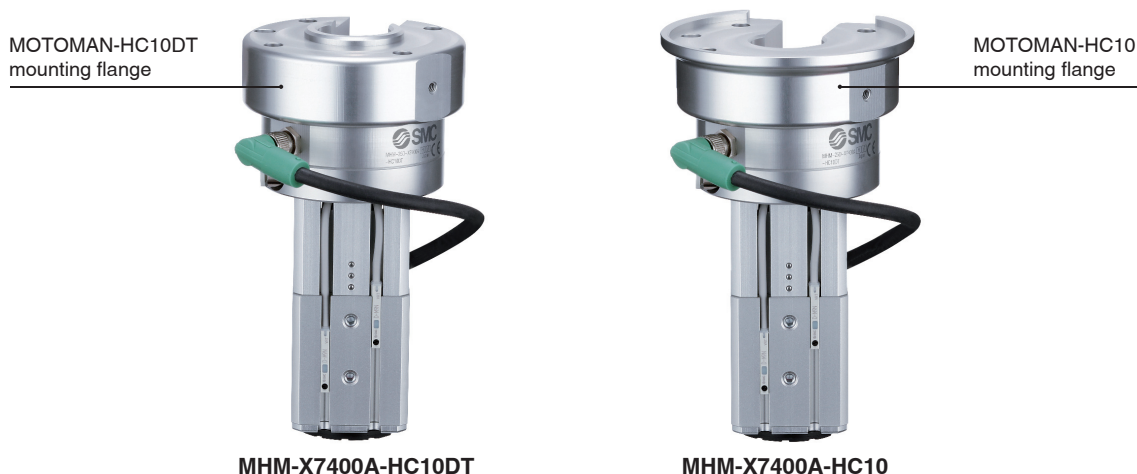

Vacuum Gripper

Magnet Gripper

Air Gripper

Specifications

Model	MHM-X7400A-DTP	MHM-X7400A-HC10DT/HC10
Robot mounting flange standards	ISO 9409-1-50-4-M6 compliant	—
Fluid	Air	
Action	Double acting	
Operating pressure [MPa]	0.2 to 0.6	
Proof pressure [MPa]	0.9	
Ambient and fluid temperatures [°C]	-10 to 50 (No freezing)	
Holding force [N]	Workpiece thickness: 2 mm	160
	Workpiece thickness: 6 mm	200
Residual holding force [N]	0.3 or less	
Lubrication	Non-lube	
Weight [g]	590	820
Auto switch model	D-M9N, D-M9P	
Connector type	M8 8-pin connector (Socket)	I/O cable connector: 51227-0800

■ **Included parts:** Robot mounting flange, Conversion cable, Mounting bolt, Piping tube (Ø 4 x 2 m), Cable fixture

Characteristics

Holding force

The holding force graph shows the theoretical value for low-carbon steel plates. Holding forces vary depending on the material and shape of the workpiece. Please perform a holding test while referring to the value selected based on the graph.

MHM-25



How to Order



MHM-25D-X7400A-DTP-P

Compatible robot

DTP	ISO 9409-1-50-4-M6 flange (MOTOMAN-HC10DTP, MOTOMAN-HC20DTP, MOTOMAN-HC20SDTP)
HC10DT	Comes with a flange for the HC10DT (MOTOMAN-HC10DT)
HC10	Comes with a flange for the HC10 (MOTOMAN-HC10)

Auto switch output type


Symbol	Auto switch model	Output type
N	D-M9N	NPN
P	D-M9P	PNP

* The supplied flange differs depending on the product number.

* It can be used with robot specifications with air piping.


Dimensions

MHM-25D-X7400A-DTP-□

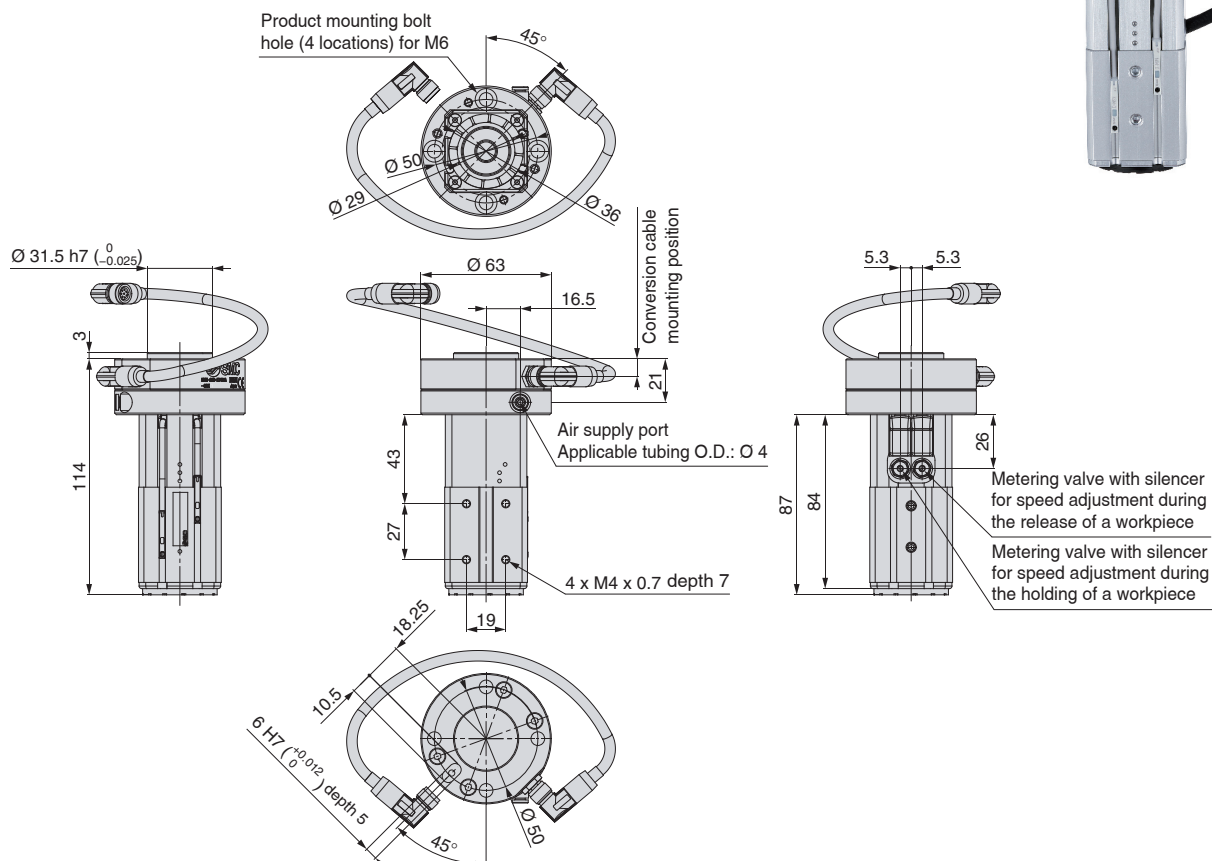


Dimensions

MHM-25D-X7400A-HC10DT-□

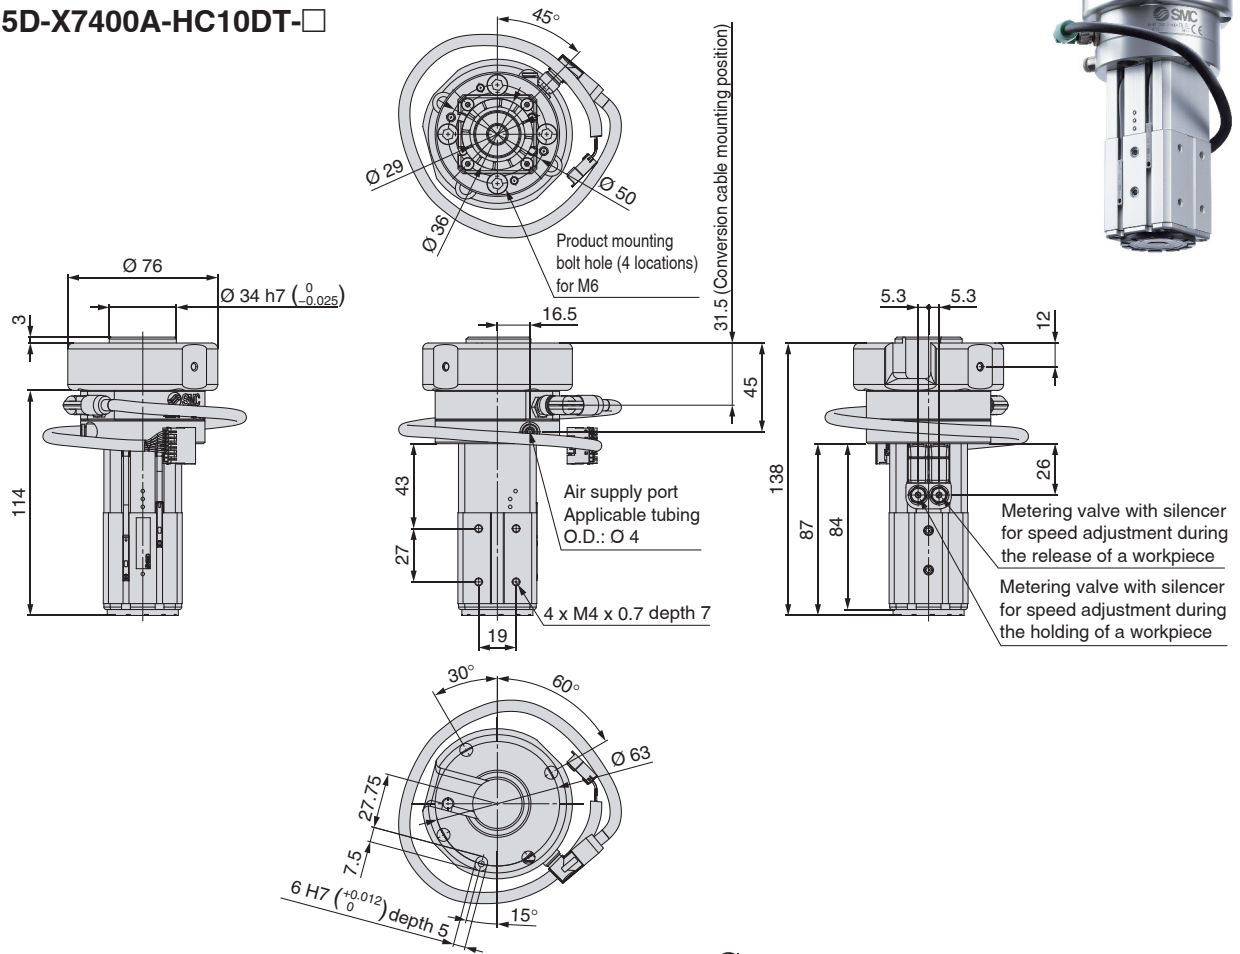

MHM-25D-X7400A-HC10-□

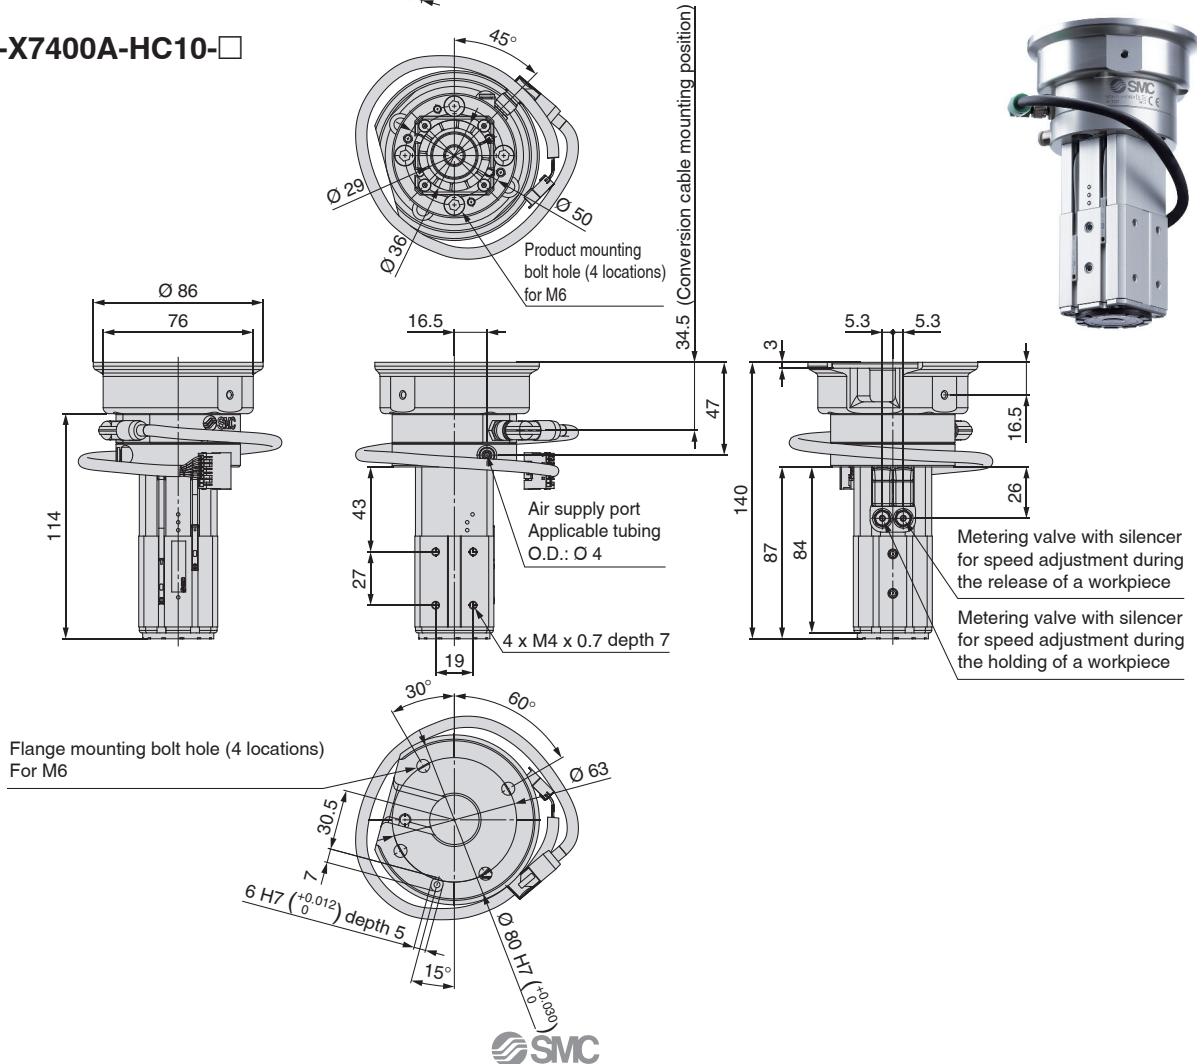

Vacuum Gripper

Magnet Gripper

Air Gripper



MHM-X7400A-DTP/HC10DT/HC10


Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator precautions, magnet gripper specific product precautions, and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smc.eu>

Handling

Caution

1. If pressure is applied to the external magnet gripper parts, there is a possibility that air will get inside the cylinder from the rod seal section. (Example: inside a chamber, etc.)
2. As the body magnets are built-in, do not allow close contact with magnetic disks, magnetic cards, or magnetic tapes. Data may be erased.

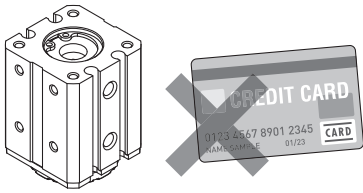

Mounting

Caution

1. For details on the mounting method, refer to the Operation Manual.
2. Tighten to the specified tightening torque. If the tightening torque is exceeded, the body and the mounting screws may break. However, insufficient torque may cause displacement of the body and loosening of the mounting screws.
3. Do not drop, strike, or apply excessive impact to this product.
Doing so may result in damage to the internal parts of the body, solenoid valve, or auto switch. In some cases, this damage may result in a malfunction.
4. Hold the body when handling the product. Do not pull excessively on the connector cable or pinch the cable when lifting the body. Failure to do so may result in damage to the solenoid valve or auto switch. In some cases, this damage may result in a failure or malfunction.
5. The bolts may loosen due to the operating conditions and environment. Be sure to conduct maintenance such as tightening the bolts periodically.

Wiring

Caution

1. Avoid repeatedly bending or stretching the connector cable as well as applying force to it.
2. Do not wire while energising the product. Doing so may result in damage to the internal parts of the solenoid valve or auto switch. In some cases, this damage may result in a malfunction.
3. Do not disassemble the connector cable or make any modifications, including additional machining. Doing so may cause human injury and/or an accident.

Piping

Caution

1. Flushing of the inside of the pipes

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

2. Tube attachment

- Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, 3, 5, or 6. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

3. Tube detachment

- Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.

4. Other Tube Brands

When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

- Nylon tube within ± 0.1 mm
- Soft nylon tube within ± 0.1 mm
- Polyurethane tube within $+0.15$ mm, within -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

5. Piping

- Do not apply unnecessary forces, such as twisting, pulling, moment loads, vibration, impact, etc., on fittings or tubing. This will cause damage to fittings and will crush, burst, or release tubing.
- Do not lift the product by the piping after the tube is connected. Doing so may result in damage to the One-touch fitting. For details, refer to the "Handling Precautions for SMC Products" on the SMC website: <https://www.smc.eu>

Air Gripper

for Collaborative Robots

Plug and Play

(JMHZ2-X7400B-DTP only)

JMHZ2-X7400B-DTP

Compliant with the MOTOMAN-HC10DTP/
HC20DTP/HC20SDTP collaborative robots

JMHZ2-X7400B-HC10DT

Compliant with the MOTOMAN-HC10DT
collaborative robot

JMHZ2-X7400B-HC10

Compliant with the MOTOMAN-HC10
collaborative robot

- Compact, lightweight product with high gripping force due to air operation
- An air gripper that realises high rigidity and high precision due to its guide-integrated construction

With high-precision linear guide

Repeatability: ± 0.01 mm

Linear guide of the higher rigidity and precision is used.


Higher rigidity (Compared with the same size of the existing MHZ2)

- Operate by simply connecting 1 compressed air supply tube and an electrical wiring connector.
- Integrated solenoid valve, speed adjustment mechanism, and auto switch
- A split protective cover for easy air gripper maintenance
Allows you to maintain the air gripper without removing the user-specific attachment
- Standards: ISO 9409-1-50-4-M6 compliant (JMHZ2-X7400B-DTP)

Component Parts

JMHZ2-X7400B-DTP

(For the MOTOMAN-HC10DTP/HC20DTP/HC20SDTP)

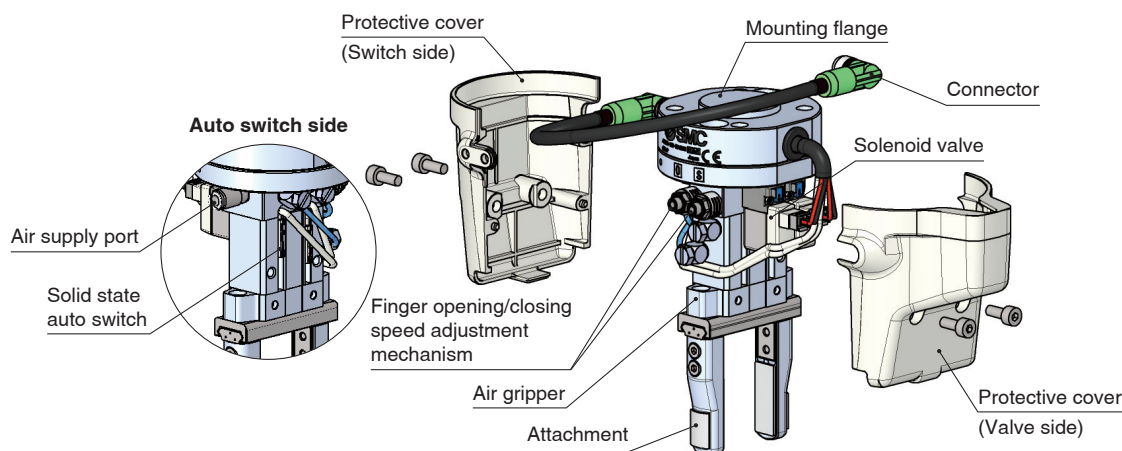

JMHZ2-X7400B-HC10DT/HC10

(For the MOTOMAN-HC10DT/HC10)

* Aside from the mounting flange, it is the same as the JMHZ2-X7400B-DTP.

MOTOMAN-HC10DT
mounting flange



JMHZ2-X7400B-HC10DT

MOTOMAN-HC10
mounting flange



JMHZ2-X7400B-HC10

Specifications

Model	JMHZ2-X7400B-DTP	JMHZ2-X7400A-HC10DT/HC10
Robot mounting flange standards	ISO 9409-1-50-4-M6 compliant	—
Bore size [mm]	16	—
Fluid	Air	—
Action	Double acting	—
Operating pressure [MPa]	0.1 to 0.7	—
Repeatability [mm]	±0.01	—
Gripping force	32.7	—
Effective value per finger [N]	43.5	—
Opening/Closing stroke (Both sides) [mm]	0.3 or less	—
Weight [g]	440	720
Auto switch model	D-M9N-5, D-M9P-5	—
Connector type	M8 8-pin connector (Socket)	I/O cable connector: 51227-0800

■ **Included parts:** Robot mounting flange, Conversion cable, Mounting bolt, Piping tube (O 4 x 2 m), Cable fixture

How to Order



RoHS

JMHZ2-16D-X7400B-DTP-P

Compatible robot

DTP	ISO 9409-1-50-4-M6 flange (MOTOMAN-HC10DTP, MOTOMAN-HC20DTP, MOTOMAN-HC20SDTP)
HC10DT	Comes with a flange for the HC10DT (MOTOMAN-HC10DT)
HC10	Comes with a flange for the HC10 (MOTOMAN-HC10)

Auto switch output type

Symbol	Auto switch model	Output type
N	D-M9N-5	NPN
P	D-M9P-5	PNP

* The supplied flange differs depending on the product number.

* It can be used with robot specifications with air piping.



Characteristics

Gripping force



● Indication of effective gripping force

The gripping force shown in the graphs below represents the gripping force of one finger when all fingers and attachments are in contact with the workpiece. **F** = One finger thrust

External gripping force

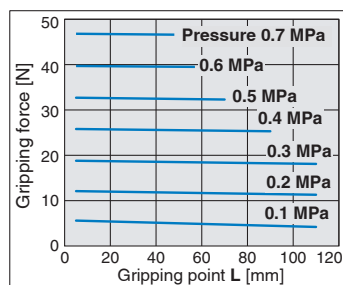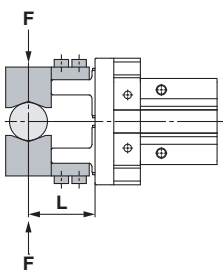

Internal gripping force

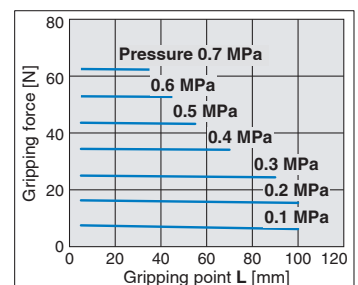
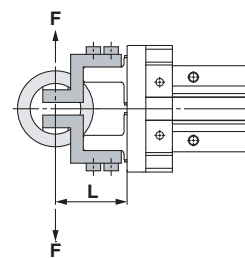


Gripping point



● The air gripper should be operated so that the workpiece gripping point "L" and the amount of overhang "H" stay within the range shown for each operating pressure given in the graphs below.

● If the workpiece gripping point goes beyond the range limits, this will have an adverse effect on the life of the air gripper.

External grip

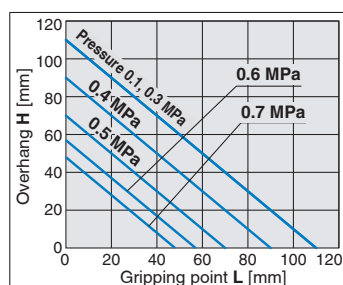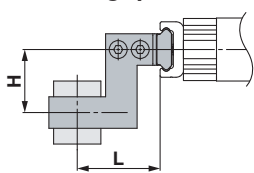


Internal grip

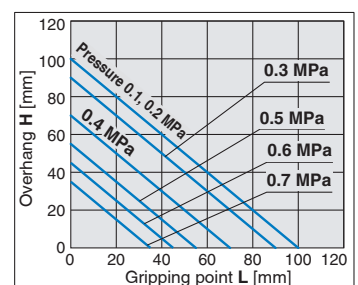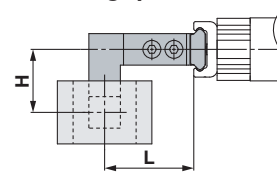


Dimensions

JMHZ2-16D-X7400B-DTP-□

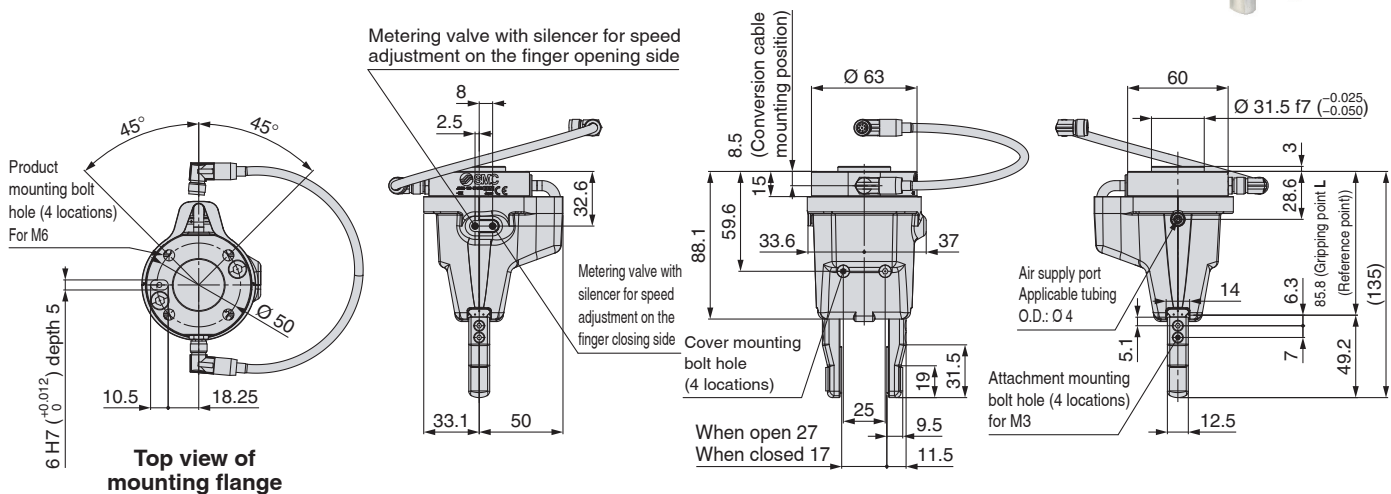


Vacuum Gripper

JMHZ2-16D-X7400B-HC10DT-□

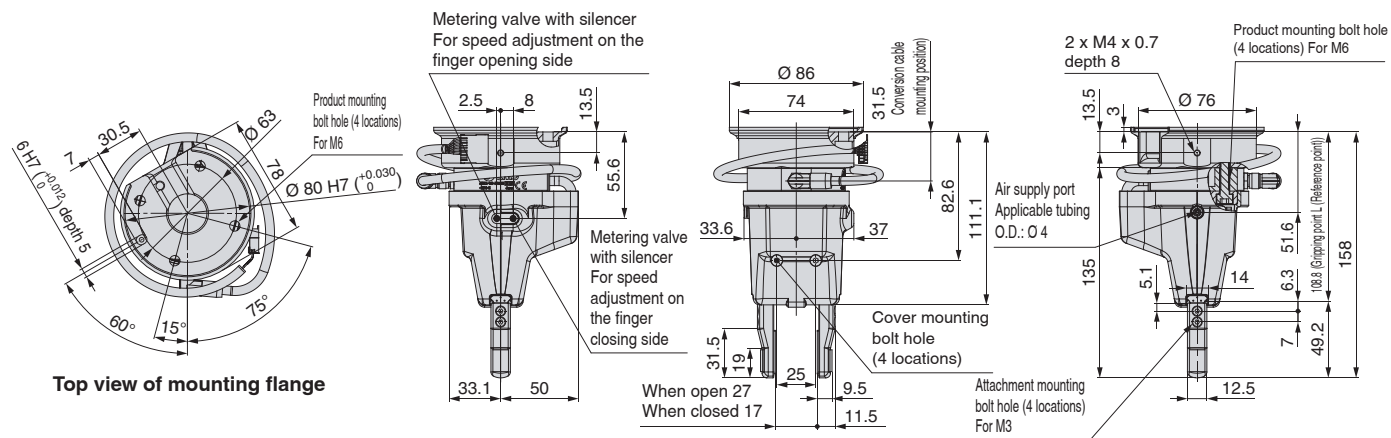

Vacuum Gripper

JMHZ2-16D-X7400B-HC10-□

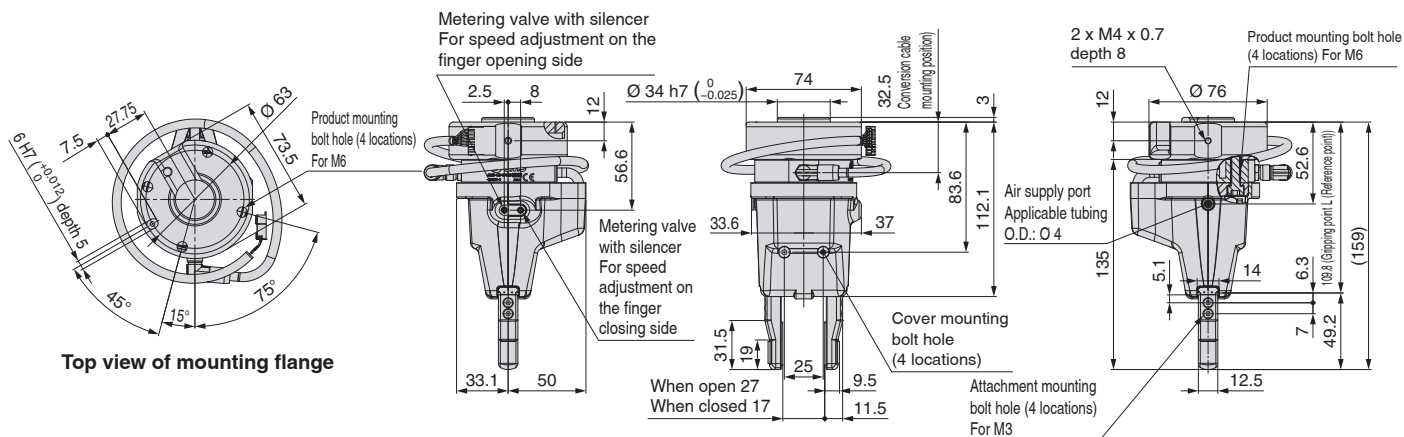

Air Gripper



JMHZ2-X7400B-DTP/HC10DT/HC10

Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For air gripper precautions, air gripper specific product precautions, and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: <https://www.smc.eu>

Handling

Caution

1. Martensitic stainless steel is used for the finger guide. However, the anti-corrosiveness of this steel is inferior to that of austenitic stainless steel. In particular, rust may be generated in environments where waterdrops are likely to adhere to the product due to condensation, etc.
2. Finite orbit type guide is used in the actuator finger part. By using this, when there are inertial force which cause by movements or rotation to the actuator, steel ball will move to one side and this will cause a large resistance and degrade the accuracy. When there are inertial force which cause by movements or rotation to the actuator, operate the finger to full stroke.
3. When mounting or removing the attachment, use the following tightening torque: 0.59 N. The weight of the attachment is generally about 70 g per side of a finger.

Mounting

Caution

1. For details on the mounting method, refer to the Operation Manual.
2. Tighten to the specified tightening torque. If the tightening torque is exceeded, the body and the mounting screws may break. However, insufficient torque may cause displacement of the body and loosening of the mounting screws.
3. Do not drop, strike, or apply excessive impact to this product.
Doing so may result in damage to the internal parts of the body, solenoid valve, or auto switch. In some cases, this damage may result in a malfunction.
4. Hold the body when handling the product. Do not pull excessively on the connector cable or pinch the cable when lifting the body. Failure to do so may result in damage to the solenoid valve or auto switch. In some cases, this damage may result in a failure or malfunction.
5. The bolts may loosen due to the operating conditions and environment. Be sure to conduct maintenance such as tightening the bolts periodically.

Wiring

Caution

1. Avoid repeatedly bending or stretching the connector cable as well as applying force to it.
2. Do not wire while energising the product. Doing so may result in damage to the internal parts of the solenoid valve or auto switch. In some cases, this damage may result in a malfunction.
3. Do not disassemble the connector cable or make any modifications, including additional machining. Doing so may cause human injury and/or an accident.

Piping

Caution

1. Flushing of the inside of the pipes

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

2. Tube attachment

- Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, 3, 5, or 6. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

3. Tube detachment

- Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.

4. Other Tube Brands

When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

- Nylon tube within ± 0.1 mm
- Soft nylon tube within ± 0.1 mm
- Polyurethane tube within $+0.15$ mm, within -0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

5. Piping

- Do not apply unnecessary forces, such as twisting, pulling, moment loads, vibration, impact, etc., on fittings or tubing. This will cause damage to fittings and will crush, burst, or release tubing.
- Do not lift the product by the piping after the tube is connected. Doing so may result in damage to the One-touch fitting. For details, refer to the "Handling Precautions for SMC Products" on the SMC website: <https://www.smc.eu>

Vacuum Gripper/ZXP7□12-X1□ Magnet Gripper/MHM-X7400A-DTP Air Gripper/JMHZ2-X7400B-DTP



YASKAWA Plug and Play Kit

Easy programming

By installing the YASKAWA Plug and Play Kit of the SMC gripper, instructions can be given via the dedicated setting display.




A USB flash drive with the YASKAWA Installation Packages stored in it (provided by SMC) can be inserted into the Smart Pendant for easy installation.

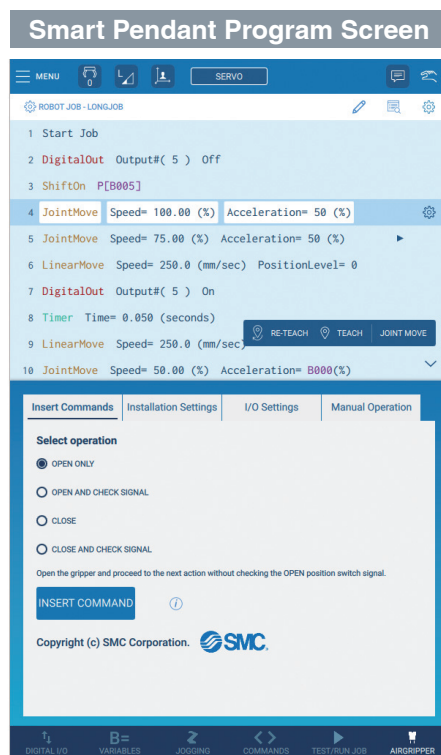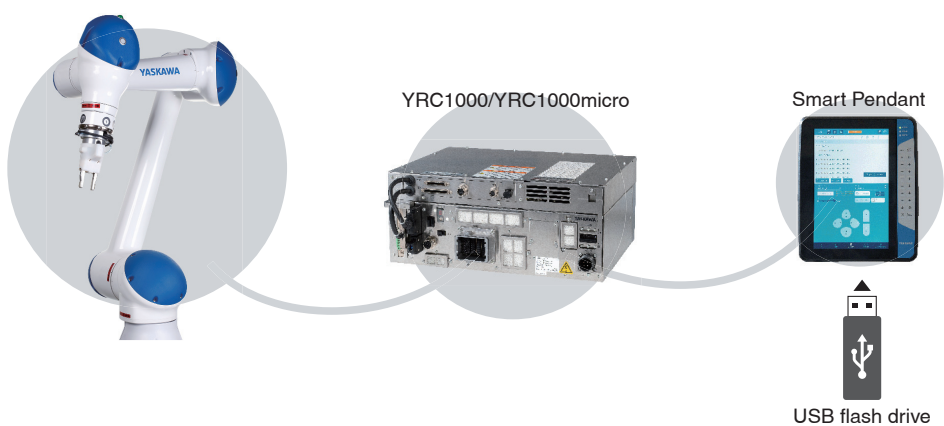* Download the YASKAWA Installation Packages from the SMC website and save it to a USB flash drive.



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)¹⁾, and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

Revision History

Edition B	- A vacuum gripper, magnet gripper, and air gripper compliant with MOTOMAN-HC10DTP/HC20DTP/HC20SDTP cooperative robots have been added. - The number of pages has been increased from 16 to 20.	AX
-----------	--	----

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smc.dk.com	smc@smcdk.com
Estonia	+372 651 0370	www.smcee.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smc@smc.fi
France	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	office@smc.pl
Portugal	+351 214724500	www.smc.eu	apoiocliente@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	satis@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk

South Africa	+27 10 900 1233	www.smcza.co.za	zasales@smcza.co.za
--------------	-----------------	-----------------	---------------------