## Series 10-SV1000/2000/3000/4000 5 Port Solenoid Valve

#### Serial wiring

#### Decentralized serial wiring

P.182



Cassette base manifold Applicable 10-SV1000/10-SV2000 series Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000/10-SV4000

· Number of outputs: 32/16

EX500 gateway communication specifications

Serial wiring with input/output unit Applicable Tie-rod base manifold

P.192



IP67 compliant

Applicable

series

10-SV1000/10-SV2000/10-SV3000 · Number of inputs/outputs: 32 each

Tie-rod base manifold

Number of valve outputs: 32

10-SV1000/10-SV2000/10-SV3000 Digital inputs/outputs: Max. 144/144 Analog input: Max. 18 channels



#### Dedicated output serial wiring

P.208

P.198

Applicable series

Cassette base manifold 10-SV1000/10-SV2000 Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000/10-SV4000


Number of outputs: 16

IP67 compliant (Some products are IP40)

Applicable Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000 series

P.218

Number of outputs: 32/16

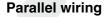

#### For circular connector

P.230

P 240



IP67 compliant

Applicable series

Cassette base manifold 10-SV1000/10-SV2000

Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000/10-SV4000

Number of connectors: 26 pins



D-sub connector

Cassette base manifold Applicable 10-SV1000/10-SV2000 Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000/10-SV4000

· Number of connectors: 25 pins

MIL-C-24308

Conforming to JIS-X-5101



#### Flat ribbon cable connector

series

P.250

Applicable series

Cassette base manifold 10-SV1000/10-SV2000 Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000/10-SV4000

· Number of connectors: 26, 20, 10 pins

With strain relief Conforming to MIL-C-83503

Valve manifold specifications

P.260

Manifold option



P.265



Applicable

10-SV1000/10-SV2000/10-SV3000/10-SV4000 With waterproof M12 connector



**ØSM**C

# Series 10-SV Valve Manifold Common Specifications

#### Cassette base manifold



Manifold Specifications

An	olicable series	10-SV1000	10-SV2000
App	Jilicable series	10-341000	10-342000
Manifold typ	e	Stacking type case	sette base manifold
1 (P: SUP), 3	/5 (E: EXH) type	Common	SUP, EXH
Valve stations (maximum)		18 stations	20 stations
Max. number of solenoids		18 points	26 points
	1(P), 3/5(E) port	C8, N9	C10, N11
Port size	4(A), 2(B) port	C3, C4, C6	C4, C6, C8
	4(A), 2(B) port	N1, N3, N7	N3, N7, N9

#### Flow Rate Characteristics

	Port	size	Flow rate characteristics					
Model	1, 5, 3	4, 2		1→4/2 (P→A/B)		4/2→3/5 (A/B→E)		
	(P, EA, EB)	(A, B)	C [dm3/(s·bar)]	b	Cv	C [dm3/(s-bar)]	b	Cv
10-SS5V1-16	C8	C6	0.89	0.22	0.22	0.98	0.21	0.23
10-SS5V2-16	C10	C8	2.3	0.28	0.50	2.7	0.18	0.56
Note) The values are for individually operated 2 position type manifold bases with 5 stations								

Note) The values are for individually operated 2 position type manifold bases with 5 stations.

#### Tie-rod base manifold



**Manifold Specifications** 

marinola ope	Cilications						
Applicable series		10-SV1000	10-SV2000	10-SV3000	10-SV4000		
Manifold type			Tie-rod base manifold				
1 (P: SUP), 3/5 (E: EXH) type			Common SUP, EXH				
Valve stations (maximum)		20 stations					
Max. number of solenoids		32 points					
	1(P), 3/5(E) port	C8, N9	C10, N11	C12, N11	C12, N11, 03		
Port size	4(A), 2(B) port	C3, C4, C6	C4, C6, C8	C6, C8, C10	C8, C10, C12		
	4(A), 2(B) port	N1, N3, N7	N3, N7, N9	N7, N9, N11	N9, N11, 02, 03		

#### Flow Rate Characteristics

ı		Port	size	Flow rate char 1→4/2 (P→A/B)		aracteristics			
	Model	1, 5, 3	4, 2			4/2→3/5 (A/B→E)			
		(P, EA, EB)	(A, B)	C [dm3/(s·bar)]	b	Cv	C [dm3/(s·bar)]	b	Cv
	10-SS5V1-10	C8	C6	0.98	0.26	0.24	1.1	0.35	0.28
	10-SS5V2-10	C10	C8	2.1	0.20	0.46	2.4	0.18	0.48
	10-SS5V3-10	C12	C10	4.2	0.22	0.91	4.3	0.21	0.93
	10-SS5V4-10	C12	C12	6.2	0.19	1.3	7.0	0.18	1.6

Note) The values are for individually operated 2 position type manifold bases with 5 stations.

#### Enclosure of Manifold Variations (Common for cassette base and tie-rod base)

Series	Enclosure (Based on IEC529)
EX500 Decentralized serial wiring	IP67 *1
EX250 Serial wiring with input/output unit	IP67
EX600 Serial wiring with input/output unit	IP67 (Manifold assembly)
EX120 Dedicated output serial wiring	Dusttight (IP40)
EX260 Dedicated output serial wiring	IP67 *2
For circular connector	IP67
D-sub connector	Dusttight (IP40)
Flat ribbon cable	Dusttight (IP40)

- \*1 Enclosure of a gateway unit and input manifold is IP65.
- \*2 Enclosure is IP40 when the communication connector is D-sub.



#### Series 10-SV Solenoid Valve Specifications



#### Fluid Air 2 position single Internal pilot 0.15 to 0.7 4 position dual 3 port valve operating pressure range 2 position double 0.1 to 0.7 (MPa) 3 position 0.2 to 0.7 External pilot Operating pressure range -100 kPa to 0.7 operating 2 position single, double pressure range (MPa) 0.25 to 0.7 3 position Ambient and fluid temperature (°C) -10 to 50 (No freezing. Refer to page 680.) 2 position single, double Max. operating 5 4 position dual 3 port valve frequency 3 Non-locking push type Manual override Push-turn locking slotted type Internal pilot Main/Pilot valve common exhaust Pilot exhaust method External pilot Pilot valve individual exhaust Lubrication Not required Mounting orientation Unrestricted Impact/Vibration resistance (m/s2) 150/30 Enclosure IP67 (Based on IEC60529) Coil rated voltage 24 VDC, 12 VDC Allowable voltage fluctuation ±10% of rated voltage Power consumption 0.6 (With indicator light: 0.65) Surge voltage suppressor Zener diode

Note) Impact resistance: No malfunction occurred when it was tested in the axial direction and at right angles to the main valve and armature in both energized and de-energized states once for each condition. (Default settings)

right angles to the main valve and armature. (Default settings)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was

Indicator light

#### Symbol

#### Series 10-SV1000/2000/3000/4000

2 position single



#### 2 position double



#### Series Series 10-SV1000/2000/3000 10-SV4000 3 position closed center (A)4 2(B) (EA)5 1 3(EB) (EA)5 1 3(EB) 3 position exhaust center (A)4 2(B) (A)4 2(B) (EA)5 1 3(EB) (EA)5 1 3(EB) (P) 3 position pressure center 2(B) (A)4 2(B)

(EA)5 1 3(EB) (P)	(EA)5 1 3(EB)			
Series 10-SV1000	Series 10-SV2000			
4 position dual 3 port valve				
N.C./N.C.	N.C./N.C.			
4(A) 2(B)	4(A) 2(B)			
	751-180 M-180			
5(EA) 1(P) 3(EB)	5(EA) 1(P) 3(EB)			
N.O./N.O.	N.O./N.O.			
4(A) 2(B)	4(A) 2(B)			
5(EA) 1(P) 3(EB)	5(EA) 1(P) 3(EB)			
N.C./N.O.	N.C./N.O.			
4(A) 2(B)	4(A) 2(B)			

\* SV3000 and 4000 are not available with 4 position dual 3 port valve.

5(EA)

3(FB)

3(EB)

#### Response Time

	Response time (ms) (at the pressure of 0.5 MPa)				
Actuation type	10-SV1000	10-SV2000	10-SV3000	10-SV4000	
2 position single	11 or less	25 or less	28 or less	40 or less	
2 position double	10 or less	17 or less	26 or less	40 or less	
3 position	18 or less	29 or less	32 or less	82 or less	
4 position dual 3 port valve	15 or less	33 or less	_	_	

performed in both energized and de-energized states in the axial direction and at

LED

Note) Based on dynamic performance test, JIS B 8375-1981 (Coil temperature: 20°C, at rated voltage)

#### Weight

Series Actuation type Weight (c Single solenoid 66	3)
10-SV1000 Double solenoid 71	
3 position 73	
4 position dual 3 port 71	
Single solenoid 74	
10-SV2000 Double solenoid 78	
3 position 83	
4 position dual 3 port 78	
Single solenoid 99	
10-SV3000 Double solenoid 102	
3 position 110	
Single solenoid 186	
10-SV4000 Double solenoid 190	
3 position 211	

Note) Weight of solenoid valve only



## Decentralized Serial Wiring


## EX500 Series

**IP67** compliant



### EX500 Gateway Decentralized System 2 P.182

Applicable series	Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000
	Number of outputs: 32     Connected to the SI unit of the EX500

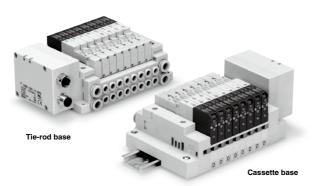

### EX500 Gateway Decentralized System P.183

Applicable series	Cassette base manifold 10-SV1000/10-SV2000
	Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000/10-SV4000
	Number of outputs: 16     Connected to the SI unit of the EX500



#### **How to Order Manifold**



#### 1 Series

1	10-SV1000
2	10-SV2000
3	10-SV3000

#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A3N	32 outputs Note 1, 3), 2 to 16 stations (20 stations Note 2))

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

#### Valve stations

Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring Note 1)	
16	16 stations		
02	2 stations	O: Noto 2)	
:	:	Specified layout Note 2) (Available up to 32 solenoids)	
20	20 stations		

Note 1) Double wiring: single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

#### 4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

#### 5 SUP/EXH block assembly

	· · · · · · · · · · · · · · · · · · ·
Nil	Internal pilot
R	External pilot

#### Mounting

wounting			
Nil	Direct mounting		
D	With DIN bracket, DIN rail with standard length		
D0	With DIN bracket, without DIN rail		
D3 Note)	With DIN bracket, DIN rail for 3 stations		
:			
D20 Note)	With DIN bracket, DIN rail for 20 stations		

Note) Specify a longer rail than the length of valve stations.

If the DIN rail must be mounted without an SI Unit, select "DO" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the WEB catalog or the SV series catalog (CAT. ES11-81).

#### 6 A, B port size

#### Metric size

Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8	
C4	ø4 One-touch fitting	One-touch	10-SV1000
C6	ø6 One-touch fitting	fitting	
C4	ø4 One-touch fitting	ø10	
C6	ø6 One-touch fitting	One-touch	10-SV2000
C8	ø8 One-touch fitting	fitting	
C6	ø6 One-touch fitting	ø12	
C8	ø8 One-touch fitting	One-touch	10-SV3000
C10	ø10 One-touch fitting	fitting	
M Note)	A, B port mixed		


#### Inch size

	10.1 0.120					
Symbol	A, B port	P, E port	Applicable series			
N1	ø1/8" One-touch fitting	ø5/16"				
N3	ø5/32" One-touch fitting	One-touch	10-SV1000			
N7	ø1/4" One-touch fitting	fitting				
N3	ø5/32" One-touch fitting	ø3/8"				
N7	ø1/4" One-touch fitting	One-touch	10-SV2000			
N9	ø5/16" One-touch fitting	fitting				
N7	ø1/4" One-touch fitting	ø3/8"				
N9	ø5/16" One-touch fitting	One-touch	10-SV3000			
N11	ø3/8" One-touch fitting	fitting				
M Note)	A, B port mixed					

Note) Indicate the sizes on the manifold specification sheet.

\* The X and PE port size of external pilot type [R] are ø4 (mm) or ø5/32" (inch) for the 10-SV1000/2000 series, and ø6 (mm) or ø1/4" (inch) for the 10-SV3000 series.

#### **How to Order Valves**

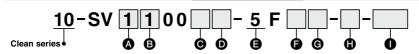

#### A Series

1	10-SV1000
2	10-SV2000
3	10-SV3000

#### B Type of actuation

-	0 111 1 1	
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A Note)	4-position dual 3-port valve (N.C./N.C.)	
B Note)	4-position dual 3-port valve (N.O./N.O.)	
C Note)	4-position dual 3-port valve (N.C./N.O.)	

Note) Select the 10-SV1000 or 10-SV2000 series for the 4-position dual 3-port valve.

 series for the 4-position dual 3-port valve.
 Select the internal pilot type for the 4-position dual 3-port valve.

#### Back pressure check valve

1411	None					
K		Built-in			Ι	
* Built-in	back	pressure	check	valve	type	ī

- \* Built-in back pressure check valve type applicable to the 10-SV1000 series only.
- \* The product with a back pressure check valve is not available for 3-position valves.
- \* Refer to the **WEB catalog** for built-in back pressure check valve type.


#### Rated voltage

5 24 VDC
----------

#### • Light/surge voltage suppressor

U	With light/surge voltage suppressor
R	Without light, with surge voltage suppressor

#### Manual override

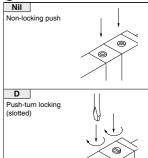

Manifold block

If stations are to be added, order the product with manifold block.
(For details, refer to the **WEB catalog**.)


Made to Order


Nil	_
	Main valve fluororubber specification (For details, refer to the <b>WEB catalog</b>


### Pilot type

Nil	Internal pilot
R	External pilot


#### **How to Order Manifold Assembly**

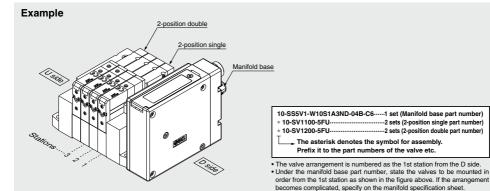

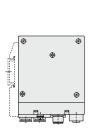

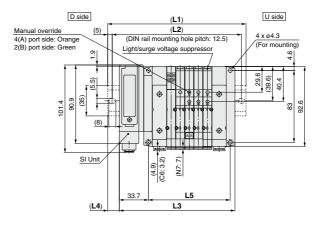

(Station 1) ----(Station n)

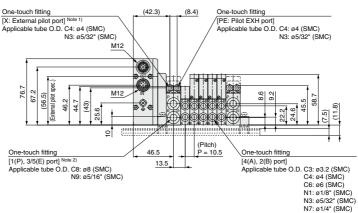

Note 1) External pilot port positions are the same as P, E port outlet positions.


Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L: DIN Rail Overall Length


n: Stations

L_n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

Tie-rod Base 10-SV2000 Series **Dimensions** 

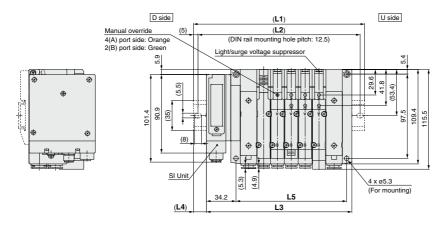


(Station 1) ----- (Station n)

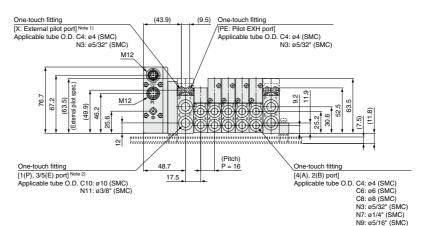


Note 1) External pilot port positions are the same as P. E port outlet positions. Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L: DIN	:: DIN Rail Overall Length																		
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
1.5	80	96	112	128	1///	160	176	102	208	224	240	256	272	288	304	320	336	352	368

#### Tie-rod Base 10-SV3000 Series

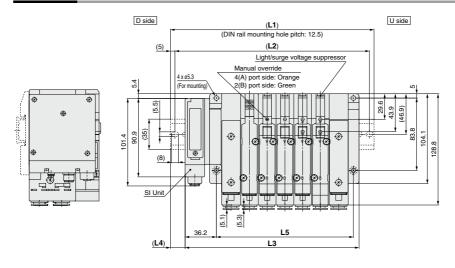

(Station 1) ----- (Station n)

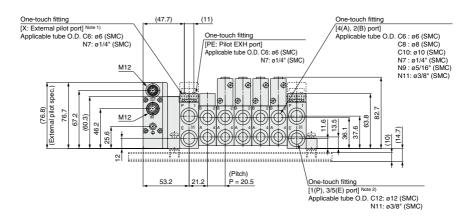


Note 1) External pilot port positions are the same as P, E port outlet positions.

Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

٠.	Statio	ne

L_n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	185.5	210.5	235.5	248	273	298	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5
L2	162.5	175	200	225	237.5	262.5	287.5	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	512.5	525
L3	139.7	160.2	180.7	201.2	221.7	242.2	262.7	283.2	303.7	324.2	344.7	365.2	385.7	406.2	426.7	447.2	467.7	488.2	508.7
L4	16.5	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

#### **How to Order Manifold**

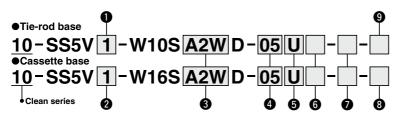

#### A Series

U Jelles						
	1	10-SV1000				
	2	10-SV2000				
	3	10-SV3000				
	4	10-SV4000				

#### 2 Series

	01100
1	10-SV1000
2	10-SV2000

#### 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A2W	16 outputs, 2 to 8 stations (16 stations) Note)

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 4 Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring Note 1)
08	8 stations	
02	2 stations	Considered Invested Note 2)
:	- :	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolus)

Note 1) Double wiring: single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

6 P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)
-	

#### 6 SUP/EXH block assembly

<u> </u>	I /EXII BIOOK GOOCHIBIY
Nil	Internal pilot
R	External pilot

#### 8 DIN rail length specified

Nil	With DIN bracket, DIN rail with standard length
3 Note)	With DIN bracket, DIN rail for 3 stations
:	:

16 Note) With DIN bracket, DIN rail for 16 stations Note) Specify a longer rail than the length of valve stations

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the **WEB catalog** or the SY series catalog (CAT. ES11-103).

#### Mounting Mounting

•	unung						
Nil	Direct mounting						
D	With DIN bracket, DIN rail with standard length						
D0	With DIN bracket, without DIN rail						
D3 Note)	With DIN bracket, DIN rail for 3 stations						
:	:						
D16 Note)	With DIN bracket, DIN rail for 16 stations						

Note) Specify a longer rail than the length of valve stations

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the WEB catalog or the SV series catalog (CAT. ES11-81).

#### A. B port size


Metric size									
Symbol	A, B port	P, E port	Applicable series						
C3	ø3.2 One-touch fitting								
C4	ø4 One-touch fitting	Ø8 One-touch fitting	10-SV1000						
C6	ø6 One-touch fitting	One-touch litting							
C4	ø4 One-touch fitting								
C6	ø6 One-touch fitting	Ø10 One-touch fitting	10-SV2000						
C8	ø8 One-touch fitting	One-touch litting							
C6	ø6 One-touch fitting	10							
C8	ø8 One-touch fitting	Ø12 One-touch fitting	10-SV3000						
C10	ø10 One-touch fitting	One-touch litting							
C8	ø8 One-touch fitting	10							
C10	ø10 One-touch fitting	Ø12 One-touch fitting							
C12	ø12 One-touch fitting	One-touch litting							
02	Rc1/4	Bc3/8	10-SV4000						
03	Rc3/8	nu3/6							
02F	G1/4	G3/8	]						
03F	G3/8	3/8							
M Note)	A. B port mixed								

Note) Indicate the sizes on the manifold specification sheet.

\* The X and PE port size of external pilot type [R] are ø4 (mm) or ø5/32" (inch) for the 10-SV1000/2000 series, and ø6 (mm) or ø1/4" (inch) for the 10-SV3000/4000 series.

Symbol	A, B port	P, E port	Applicable series		
N1	ø1/8" One-touch fitting				
N3	ø5/32" One-touch fitting	ø5/16" One-touch fitting	10-SV1000		
N7	ø1/4" One-touch fitting	- One-touch litting			
N3	ø5/32" One-touch fitting	0.101			
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	10-SV2000		
N9	ø5/16" One-touch fitting	One-touch litting			
N7	ø1/4" One-touch fitting	0/01	10-SV3000		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting			
N11	ø3/8" One-touch fitting	One-touch litting			
N9	ø5/16" One-touch fitting	ø3/8"			
N11	ø3/8" One-touch fitting	One-touch fitting			
02N	NPT1/4	NPT3/8	10-SV4000		
03N	NPT3/8	INF 13/6	10-374000		
02T	NPTF1/4	NPTF3/8			
03T	NPTF3/8	INF 1 F 3/6			
M Note)	A, B port mixed				

#### **How to Order Valves**

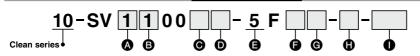

#### A Series

1	10-SV1000
2	10-SV2000
3	10-SV3000
4	10-SV4000

#### Type of actuation

<u> </u>	pe or actuation
1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A Note)	4-position dual 3-port valve (N.C./N.C.
B Note)	
C Note)	4-position dual 3-port valve (N.C./N.O.

Note) Select the 10-SV1000 or 10-SV2000 series for the 4-position dual 3-port valve.

\* Select the internal pilot type for the 4-position dual 3-port valve.

#### Back pressure check valve

INII							
K			Built-in				
* Built-in	hack	proceuro	chack	valvo	type	i	

- applicable to the 10-SV1000 series only. \* The product with a back pressure check valve
- is not available for 3-position valves.
- \* Refer to the WEB catalog for built-in back pressure check valve type.


#### Rated voltage

5	24 VDC

### Light/surge voltage suppressor

U	With light/surge voltage suppressor
R	Without light, with surge voltage suppressor

#### Manual override

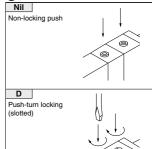

Manifold block

If stations are to be added, order the product with manifold block. (For details, refer to the WEB catalog.)


#### Made to Order

Nil	_
	Main valve fluororubber specification (For details, refer to the <b>WEB catalog</b>
A9U	(For details, refer to the WEB catalog

#### Pilot type


Nil	Internal pilot
R	External pilot


#### **How to Order Manifold Assembly**

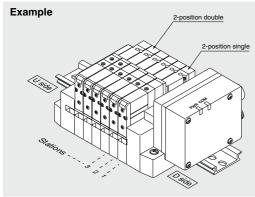


- 10-SS5V1-W16SA2WD-06B-C6----1 set (Manifold base part number) \* 10-SV1100-5FU ------4 sets (2-position single part number) \* 10-SV1200-5FU · ····2 sets (2-position double part number)
  - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. . Under the manifold base part number, state the valves to be mounted in
- order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.


Cassette Base 10-SV1000 Series

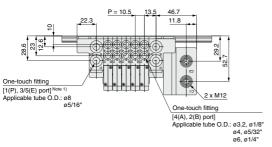


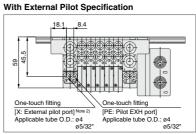

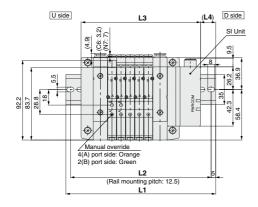



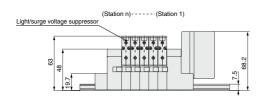


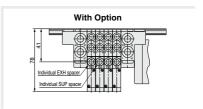


Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.


L: Dimensions										n: Stations						
	<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5
	L2	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275
	L3	106.5	117	127.5	138	148.5	159	169.5	180	190.5	201	211.5	222	232.5	243	253.5
	L4	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16

Cassette Base 10-SV2000 Series

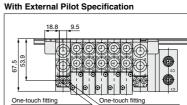


[X: External pilot port] Applicable tube O.D.: ø4

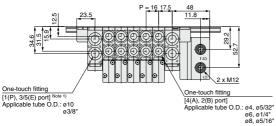


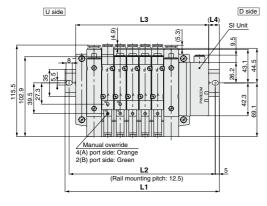



[PE: Pilot EXH port] Note 2 Applicable tube O.D.: ø4

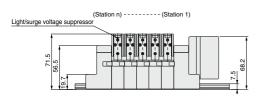


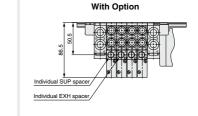



Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.


L: DIL	iensic	ons												n: 8	stations
n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373
L2	137.5	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5
L3	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5
L4	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5


Tie-rod Base 10-SV1000 Series

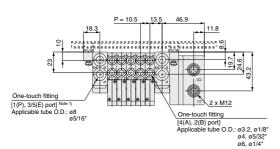


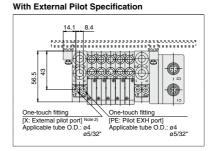

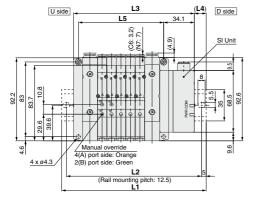

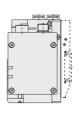

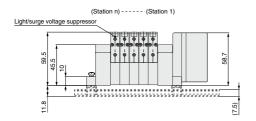


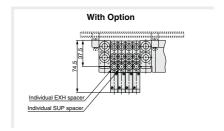



Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.


L	L: Dimensions n: Stations															
ì		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273
ı	L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5
	L3	102.6	113.1	123.6	134.1	144.6	155.1	165.6	176.1	186.6	197.1	207.6	218.1	228.6	239.1	249.6
Ī	L4	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16	17	11.5
	1.5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210


Tie-rod Base 10-SV2000 Series **Dimensions** 

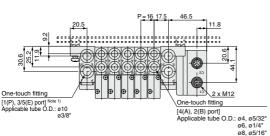


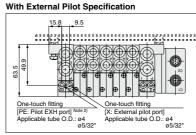

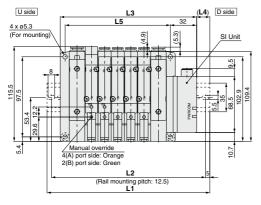

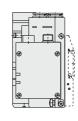

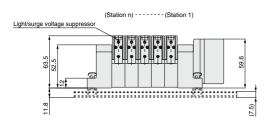

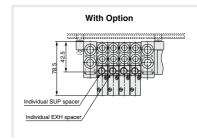



Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L: I	Dimer	nsic	ons
$\overline{}$	nl .	^	$\overline{}$


L: Din	L: Dimensions n: Stations														
n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	185.5	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373
L2	137.5	150	175	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5
L3	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342
L4	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304

Tie-rod Base 10-SV3000 Series

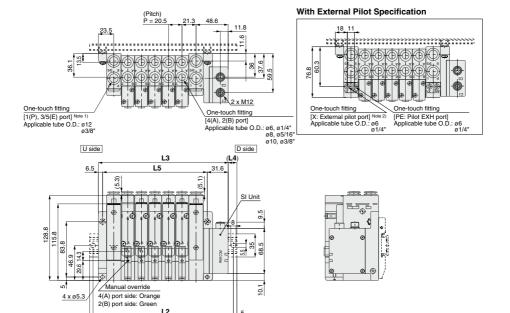

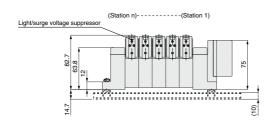

(Rail mounting pitch: 12.5)

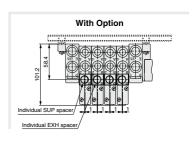



Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.


Note 2) External pilot port positions are the same as P, E port outlet positions.


L: Dim	nensio	ons												n: 8	Stations
n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	160.5	185.5	210.5	223	248	273	285.5	310.5	323	348	373	385.5	410.5	435.5	448
L2	150	175	200	212.5	237.5	262.5	275	300	312.5	337.5	362.5	375	400	425	437.5
L3	135.1	155.6	176.1	196.6	217.1	237.6	258.1	278.6	299.1	319.6	340.1	360.6	381.1	401.6	422.1
L4	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384


Tie-rod Base 10-SV4000 Series **Dimensions** 

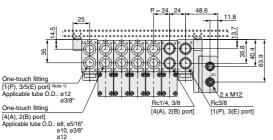


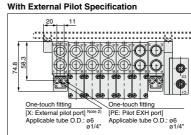

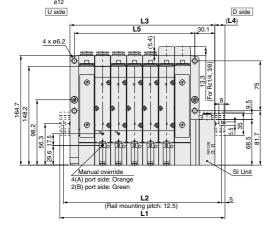

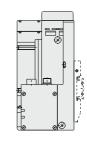

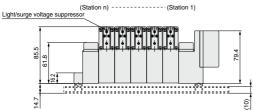

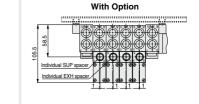

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L:	Dimensions

L: Dim	nensio	ons												n: 5	Stations
n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	198	223	248	273	298	323	348	373	385.5	410.5	435.5	460.5	485.5	510.5
L2	162.5	187.5	212.5	237.5	262.5	287.5	312.5	337.5	362.5	375	400	425	450	475	500
L3	145.6	169.6	193.6	217.6	241.6	265.6	289.6	313.6	337.6	361.6	385.6	409.6	433.6	457.6	481.6
L4	13.5	14	14.5	15	15.5	16	16.5	17	17.5	12	12.5	13	13.5	14	14.5
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445

## Serial Wiring with Input/Output Unit

## Series EX250

IP67 compliant



Applicable series

Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000

· Number of inputs/outputs: 32 each

#### How to Order





Series SV1000 2 SV2000 3 SV3000

#### Input block stations •

Nil	None				
1	1 station				
:					
8	8 stations				
Note) The symbol is nil for no SI unit.					

Input block type Nil Without input block M12, 2 inputs EX250-IE1 2 M12, 4 inputs EX250-IE2 M8, 4 inputs EX250-IE3 3

Note) The symbol is nil for no SI unit.

Enclosure IP67

#### Input block specifications •

Nil	PNP sensor input (Positive common) or without input block
N	NPN sensor input (Negative common)

Note Symbol Stations 2 stations Double wiring Note 1) 16 16 stations 02 2 stations Specified layout Note 2) (Up to 32 solenoids possible) 20 20 stations

When the SI unit is for AS-i, the maximum numbers of solenoids are as follows.
TAW, TCW: Maximum 8 solenoids

TBW, TDW: Maximum 4 solenoids
Note 1) Double wiring: Single, double, 3 position and 4 position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate wiring specifications on the manifold specification sheet. (Note that double, 3 position and 4 position valves cannot be used where single solenoid wiring has been specified.)

#### P. E port location

Valve stations

	, , , , , , , , , , , , , , , , , , , ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

#### SUP/EXH block assembly

Nil	Internal pilot
R	External pilot

Symbol	Protocol type
0	Without SI unit
QW	DeviceNet™
NW	PROFIBUS DP
TAW	AS-Interface (8 in/8 out, 31 slave modes, 2 power supply systems)
TBW	AS-Interface (4 in/4 out, 31 slave modes, 2 power supply systems)
TCW Note)	AS-Interface (8 in/8 out, 31 slave modes, 1 power supply system)
TDW Note)	AS-Interface (4 in/4 out, 31 slave modes, 1 power supply system)
YW	CANopen
ZEN	EtherNet/IP™

Input blocks cannot be mounted without SI unit

SI unit

When the DIN rail is included without an SI unit, the DIN rail length will accommodate an SI unit and one input block.

Note) There is a limit to the supply current to the input block and valve from SI units that have AS-Interface-compliant 1 power supply system. For details, refer to the WEB catalog

#### A. B port size (Metric)

#### A, B port size (Inch)

Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting		
C4	ø4 One-touch fitting	ø8 One-touch fitting	10-SV1000
C6	ø6 One-touch fitting	illung	
C4	ø4 One-touch fitting	400	
C6	ø6 One-touch fitting	ø10 One-touch fitting	10-SV2000
C8	ø8 One-touch fitting	illung	
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	ø12 One-touch	10-SV3000
C10	ø10 One-touch fitting	iiung	
M	Mixed		

	Symbol	A, b port	F, ⊑ poit	Applicable selles	1
1	N1	ø1/8" One-touch fitting			П
	N3	ø5/32" One-touch fitting	ø5/16" One-touch	10-SV1000	П
	N7	ø1/4" One-touch fitting	fitting		П
1	N3	ø5/32" One-touch fitting			П
	N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	10-SV2000	Н
	N9	ø5/16" One-touch fitting	illuing		
	N7	ø1/4" One-touch fitting	0/01/0		
	N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	10-SV3000	
	N11	ø3/8" One-touch fitting	illuing		
1	M	Mixed			

D20 For 20 stations the standard length.) Note) For D0, only DIN

Mounting ● Nil Direct mounting

D

D0<sup>N</sup>

D3

rail mounting bracket is attached

DIN rail mounting (With DIN rail)

DIN rail mounting (Without DIN rail) For 3 stations When a longer DIN rail is

lesired than the specified stations (Specify a longer rail than

For mixed specifications (M), indicate separately on the manifold specification sheet.


External pilot type (R) X, PE port sizes are σ4 (metric), σ5/32" (inch) for the 10-SV1000/2000 series and σ6 (metric), σ1/4" (inch) for the 10-SV3000 series.

### 194

#### **How to Order Valve Manifold Assembly**

#### Ordering example (10-SV1000)


10-SS5V1-W10S1QW11ND-05B-C6 (1 set)

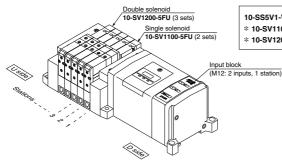

10-SS5V1-W10S1QW11ND-05B-C6..........1 set (Manifold part no.) \* 10-SV1100-5FU-----2 sets (Single solenoid part no.)

\* 10-SV1200-5FU-----3 sets (Double solenoid part no.)

#### **How to Order Solenoid Valve**

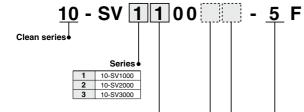

#### Actuation type

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
Α	4 position dual 3 port valve: N.C./N.C.
В	4 position dual 3 port valve: N.O./N.O.
С	4 position dual 3 port valve: N.C./N.O.

\* 4 position dual 3 port valves are applicable to the 10-SV1000/10-SV2000 series only.

#### Nil R

\* External pilot specifications are not available for 4 position dual 3 port valves.

#### Back pressure check valve

14			OFIC	
H	(	В	uilt-in	
va	lve	ap	pressure plicable lv.	

- \* The product with back pressure check
- valve is not available for 3 position

Note) Refer to the Specific Product Precautions 2 on page 274.

Pilette	
Pilot type	
Internal pilot	
External pilot	
21 . 20	فاميد مسيده/فطمة الأم

 Rated voltage 5 24 VDC

### Light/surge voltage suppressor

Note) Available with manifold block

for station additions. Refer to the WEB catalog.

X90 Main valve fluororubber (Refer to page 272.)

D: Push-turn locking

slotted type

Made to Order

U	With light/surge voltage suppres
R	With surge voltage suppresso

Manual override

Nil: Non-locking push type


Switches/ e Sensors Pressure S Pressure 5


### Dimensions: Series 10-SV1000 for EX250 Serial Wiring with Input/Output Unit


### • Tie-rod base manifold: 10-SS5V1-W10S1 D-Stations (R) C3, N1 (-D)


· When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged · External pilot port positions are the same as P, E port outlet positions.


#### (With 2 input blocks)

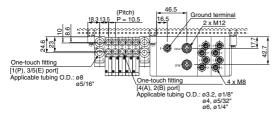

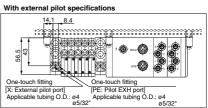

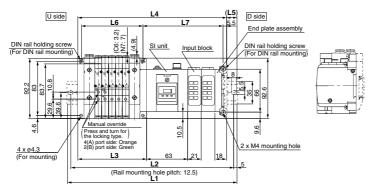

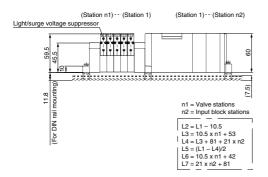

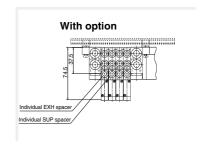



#### L1: DIN rail overall length


Valve stations Input block (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373
1	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398
2	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5
3	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5
4	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498
7	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523
8	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5


#### Dimensions: Series 10-SV2000 for EX250 Serial Wiring with Input/Output Unit


• Tie-rod base manifold: 10-SS5V2-W10S1 D-Stations (R)-Stations (R)-Stations (R)-Stations (R)-Stations

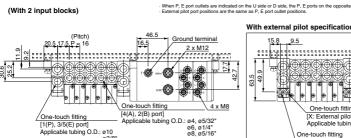

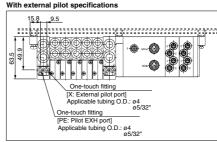

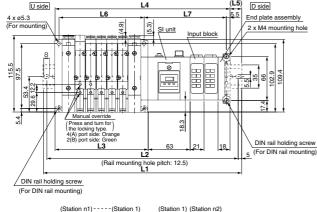

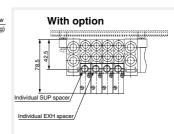

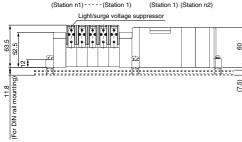

n1 = Valve stations n2 = Input block stations

L2 = L1 - 10.5 L3 = 16 x n1 + 60 L4 = L3 + 81 + 21 x n2 L5 = (L1 - L4)/2L6 = 16 x n1 + 48 L7 = 21 x n2 + 81.5

L1: DIN rail overall	lenath
----------------------	--------


Valve stations Input block (n1) stations(n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	510.5	535.5
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548
4	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5
8	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5


#### Dimensions: Series 10-SV3000 for EX250 Serial Wiring with Input/Output Unit


### • Tie-rod base manifold: 10-SS5V3-W10S1 D-Stations (R)-C6, N7 (-D)


(With 2 input blocks)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged
 External pilot port positions are the same as P, E port outlet positions.

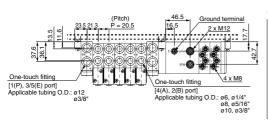

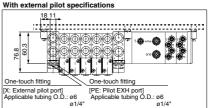

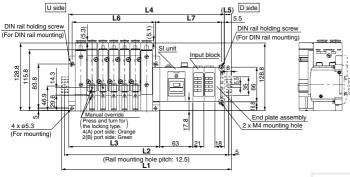

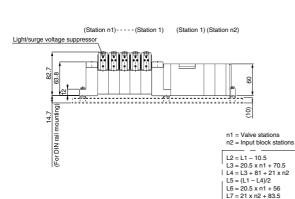

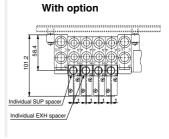

#### L1: DIN rail overall length

Valve stations Input block (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	248	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5
1	248	260.5	285.5	310.5	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5	610.5
2	260.5	285.5	310.5	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5
3	285.5	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	648
4	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673
5	323	348	373	385.5	410.5	435.5	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698
6	348	373	385.5	410.5	435.5	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723
7	373	385.5	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5
8	385.5	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5	760.5

## Integrated Type (For Input/Output) Serial Transmission System

## Series EX600

**IP67** compliant



Tie-rod base manifold Applicable series

10-SV1000/10-SV2000/10-SV3000

· Digital inputs/outputs: Max. 144/144

· Analog input: Max. 18 channels

· Number of valve outputs: 32

## Series 10-SV EX600 Integrated-type (For Input/Output) Serial Transmission System




When I/O Unit EX600-D□□E or EX600-D□□F are selected, enclosure is IP40. For details, refer to the WEB catalog.

Tie-rod base

**How to Order Manifold** 

Refer to Best Pneumatics No. 1-1 and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, http://www.smcworld.com

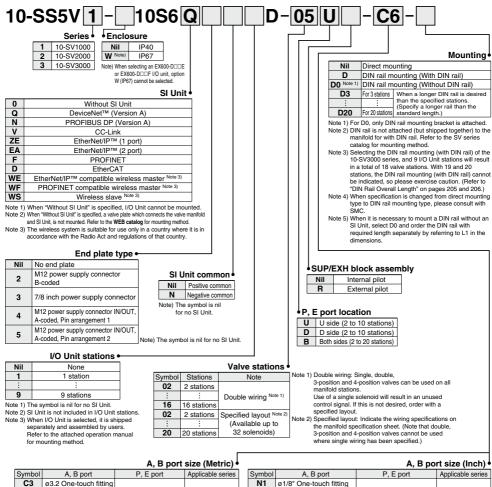

ø8 One-touch fitting 10-SV2000

C6 ø6 One-touch fitting C4 ø4 One-touch fitting C6 ø6 One-touch fitting ø10 One-touch fitting ø8 One-touch fitting C8 C<sub>6</sub> ø6 One-touch fitting ø12 One-touch fitting 10-SV3000 C8 ø8 One-touch fitting C10 ø10 One-touch fitting

Syml	ool A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting		
N3	ø5/32" One-touch fitting	ø5/16" One-touch fitting	10-SV1000
N7	ø 1/4" One-touch fitting		
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	10-SV2000
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	10-SV3000
N1	1 ø3/8" One-touch fitting		
M	Mixed		


For mixed specifications (M), indicate separately on the manifold specification sheet. External pilot type (R) X, PE port sizes are ø4 (mm) or ø5/32\* (inch) for the 10-SV1000/2000 series, and ø6 (mm) or ø1/4\* (inch) for the 10-SV3000 series.


10-SV1000

C4


ø4 One-touch fitting

#### How to Order Manifold Assembly

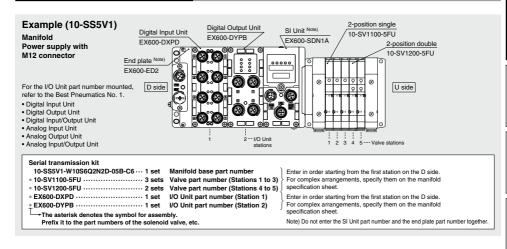

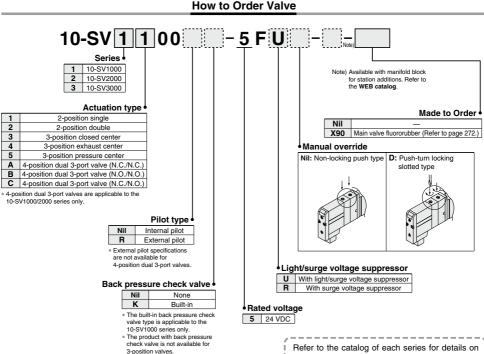

manifold solenoid valve specifications, Common Precautions and Specific Product Precautions.

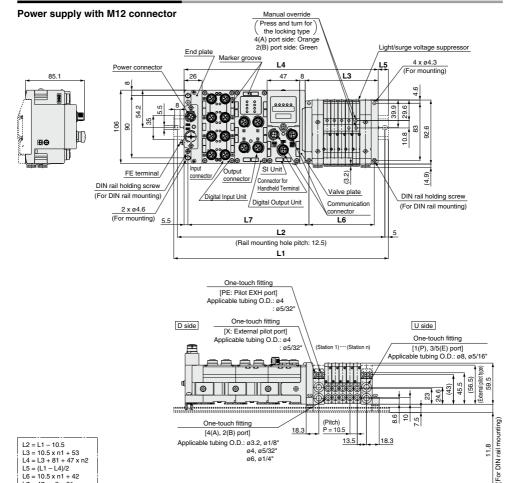

L3 = 10.5 x n1 + 53 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 $L6 = 10.5 \times n1 + 42$  $L7 = 47 \times n2 + 81$ 

L2 = L1 - 10.5

201

L1: DIN Rail Overall Length

D	Er. Bir Hair Overair Length																		
Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373
1	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423
2	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473
3	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	435.5	448	460.5	473	485.5	498	498	510.5
4	373	385.5	398	398	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5
5	423	435.5	435.5	448	460.5	473	485.5	498	498	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5
6	460.5	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5
7	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5	623	623	635.5	648	660.5	673	685.5	698	698
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	723	735.5	748
9	610.5	623	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798

ø4, ø5/32"

ø6, ø1/4"

[4(A), 2(B) port]


Applicable tubing O.D.: ø3.2, ø1/8"

18.3


P = 10.5


13.5

18.3

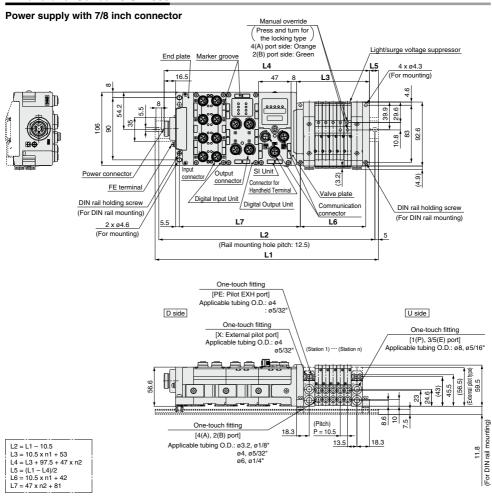


D			,g																
Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5
2	298	310.5	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5
3	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5
4	385.5	398	410.5	423	435.5	435.5	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573
5	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623
6	485.5	498	498	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673
7	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5
9	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	723	735.5	748	760.5	773	785.5	798	798	810.5

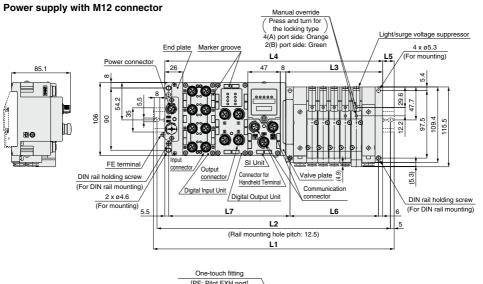

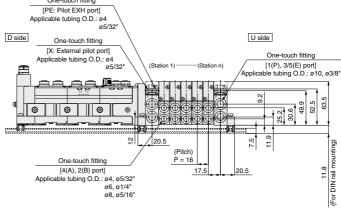



L2 = L1 - 10.5 L3 = 16 x n1 + 60 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 L6 = 16 x n1 + 48 L7 = 47 x n2 + 81.5

LI. DIN N	all Ove	ian L	zngui																
Valve I/O stations Unit (n1 stations (n2)	9	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5
3	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723
6	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5
9	623	635.5	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5

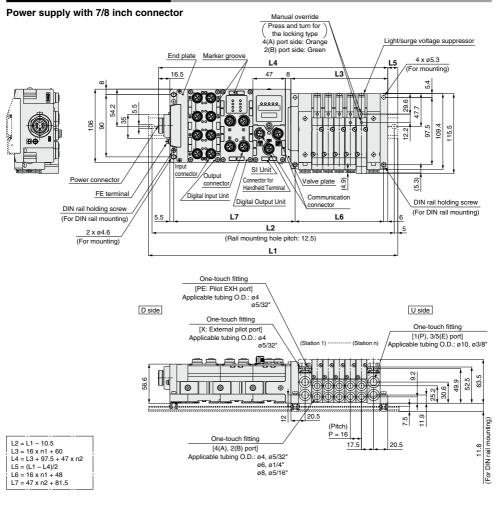

	• • •	= .	···a···																
Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548
2	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698
5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
6	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
9	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5

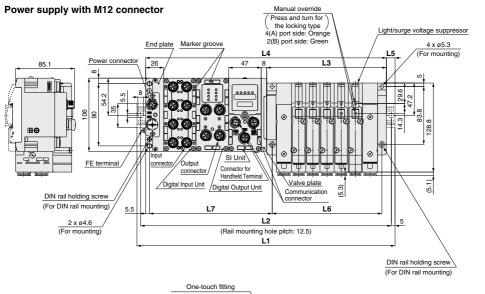

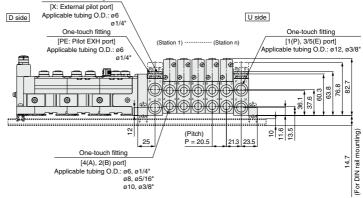



L2 = L1 - 10.5 L3 = 20.5 x n1 + 70.5 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 L6 = 20.5 x n1 + 56 L7 = 47 x n2 + 83.5

L1: DIN Rail Overall Length

Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	248	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5
1	273	285.5	310.5	335.5	348	373	398	410.5	435.5	448	473	498	510.5	535.5	560.5	573	598	623	635.5
2	310.5	335.5	360.5	373	398	423	435.5	460.5	485.5	498	523	535.5	560.5	585.5	598	623	648	660.5	685.5
3	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548	573	585.5	610.5	635.5	648	673	685.5	710.5	735.5
4	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5	760.5	773
5	460.5	473	498	523	535.5	560.5	585.5	598	623	635.5	660.5	685.5	698	723	748	760.5	785.5	810.5	823
6	498	523	548	560.5	585.5	610.5	623	648	673	685.5	710.5	735.5	748	773	785.5	810.5	835.5	848	873
7	548	573	598	610.5	635.5	648	673	698	710.5	735.5	760.5	773	798	823	835.5	860.5	873	898	923
8	598	623	635.5	660.5	685.5	698	723	735.5	760.5	785.5	798	823	848	860.5	885.5	910.5	923	948	973
9	648	660.5	685.5	710.5	723	748	773	785.5	810.5	835.5	848	873	885.5	910.5	935.5	948	973	_	_

**SMC** 

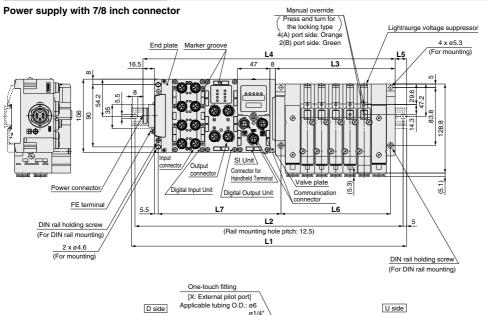


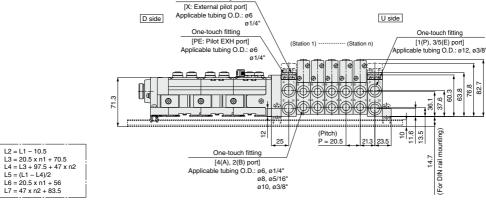

Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	235.5	260.5	285.5	298	323	335.5	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548	560.5	585.5	610.5
1	285.5	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5
2	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5	560.5	573	598	623	635.5	660.5	685.5	698
3	385.5	398	423	435.5	460.5	485.5	498	523	548	560.5	585.5	610.5	623	648	660.5	685.5	710.5	723	748
4	423	448	473	485.5	510.5	523	548	573	585.5	610.5	635.5	648	673	698	710.5	735.5	760.5	773	798
5	473	498	510.5	535.5	560.5	573	598	623	635.5	660.5	673	698	723	735.5	760.5	785.5	798	823	848
6	523	535.5	560.5	585.5	598	623	648	660.5	685.5	710.5	723	748	760.5	785.5	810.5	823	848	873	885.5
7	573	585.5	610.5	623	648	673	685.5	710.5	735.5	748	773	798	810.5	835.5	860.5	873	898	910.5	935.5
8	610.5	635.5	660.5	673	698	723	735.5	760.5	773	798	823	835.5	860.5	885.5	898	923	948	960.5	985.5
9	660.5	685.5	698	723	748	760.5	785.5	810.5	823	848	860.5	885.5	910.5	923	948	973	985.5	_	

## **Dedicated Output Serial Wiring**

## Series EX120

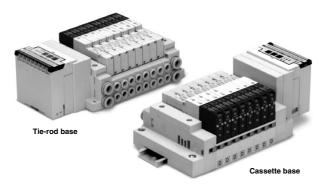

Cassette base manifold 10-SV1000/10-SV2000


Applicable series

Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000/10-SV4000

· Number of outputs: 16

## Series 10-5V EX120 Dedicated Output Serial Wiring

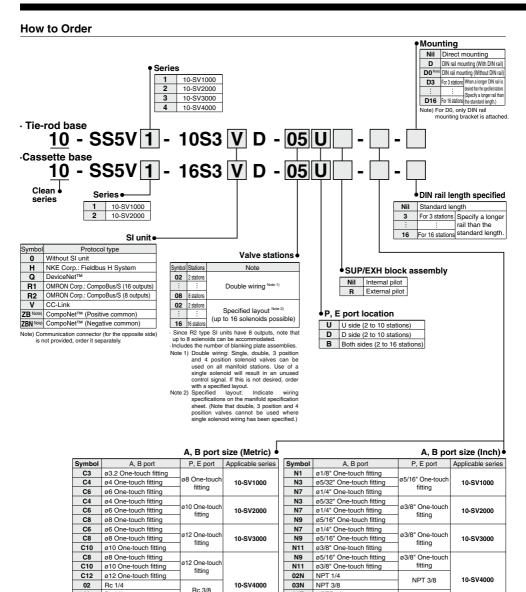

G 3/8

02T

03T

NPTF 1/4

NPTF 3/8

Mixed

NPTF 3/8

03 Bc 3/8

02F G 1/4

03F G 3/8


M Mixed

<sup>\*</sup> For mixed specifications (M), indicate separately on the manifold specification sheet.

\* External pilot type (R) X, PE port sizes are 64 (metric), 65/32\* (inch) for the 10-SV1000/2000 series and 66 (metric), 61/4\* (inch) for the 10-SV3000/4000 series.

Rotary

#### **How to Order Valve Manifold Assembly**

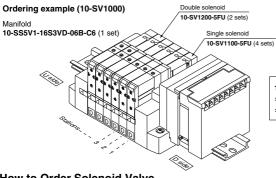

10-SS5V1-16S3VD-06B-C6......1 set (Manifold part no.) \* 10-SV1100-5FU-----4 sets (Single solenoid part no.)

\* 10-SV1200-5FU-----2 sets (Double solenoid part no.)

Nil

Manual override Nil: Non-locking push type

Light/surge voltage suppressor

R

Rated voltage 5 24 VDC

With light/surge voltage suppressor

With surge voltage suppressor

Note) Available with manifold block


the WEB catalog.

for station additions. Refer to

Made to Order

D: Push-turn locking slotted type

#### How to Order Solenoid Valve

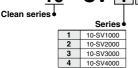

#### Actuation type

	2 position single solenola
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
Α	4 position dual 3 port valve: N.C./N.C.
В	4 position dual 3 port valve: N.O./N.O
С	4 position dual 3 port valve: N.C./N.O

\* 4 position dual 3 port valves are applicable to the 10-SV1000 and 10-SV2000 series only.

### Pilot type •

Nil	Internal pilot
R	External pilot

\* External pilot specifications are not available for 4 position dual 3 port valves.

#### Back pressure check valve

Nil	None
K	Built-in

- The built-in back pressure check valve type is applicable to the 10-SV1000
- type is applicable to the 10-5V1000 series only.

  \* The product with back pressure check valve is not available for 3 position solenoid valves.

Note) Refer to the Specific Product Precautions 2 on page 274.


5





#### Dimensions: Series 10-SV1000 for EX120 Dedicated Output Serial Wiring


• Cassette base manifold: 10-SS5V1-16S3 D-Stations P (R)-C3, N1


•When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
•External pilot port positions are the same as P, E port outlet positions.

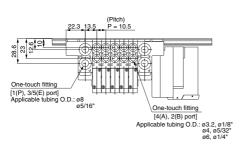


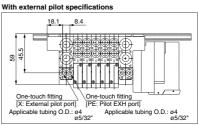

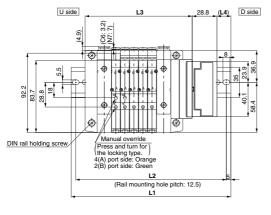

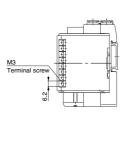

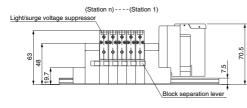

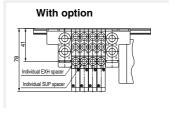



L	L Dimension n: Stations															
ī	/5	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Ξ	L1	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
	L2	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
	L3	92.9	103.4	113.9	124.4	134.9	145.4	155.9	166.4	176.9	187.4	197.9	208.4	218.9	229.4	239.9
	14	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5


# Dimensions: Series 10-SV2000 for EX120 Dedicated Output Serial Wiring


• Cassette base manifold: 10-SS5V2-16S3 D-Stations P (R) - C6, NS (R) (R) - C6, NS


•When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
•External pilot port positions are the same as P, E port outlet positions.

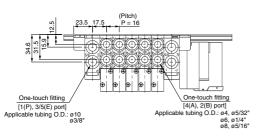

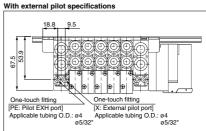

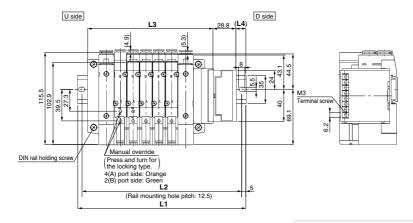

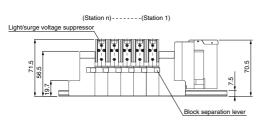

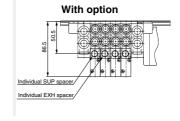



L Dir	L Dimension n: Stations														
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L2	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L3	108.9	124.9	140.9	156.9	172.9	188.9	204.9	220.9	236.9	252.9	268.9	284.9	300.9	316.9	332.9
L4	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5	12


# Dimensions: Series 10-SV1000 for EX120 Dedicated Output Serial Wiring


# • Tie-rod base manifold: 10-SS5V1-10S3 D-Stations D (R) - C4, N3 (-D)


•When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
•External pilot port positions are the same as P, E port outlet positions.

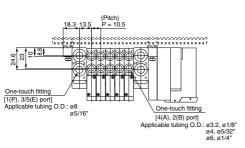

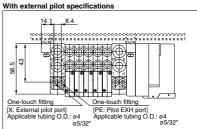

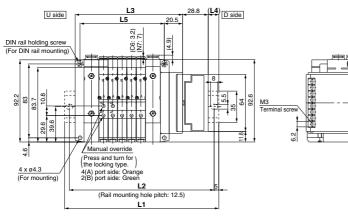

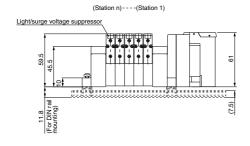

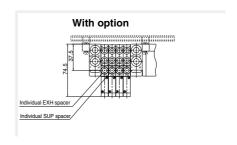



L Din	L Dimension n: Stations														
_ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298
L2	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5
L3	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236
L4	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5	15.5	16.5
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210


# Dimensions: Series 10-SV2000 for EX120 Dedicated Output Serial Wiring


# • Tie-rod base manifold: 10-SS5V2-10S3 D-Stations D(R) - C6, NG (-D)


•When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
•External pilot port positions are the same as P, E port outlet positions.

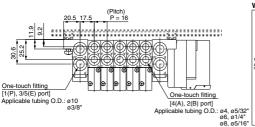


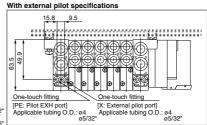

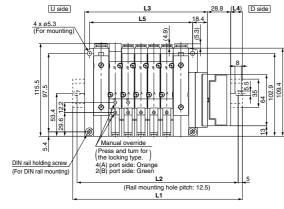

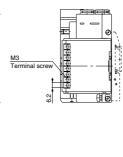

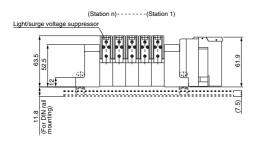

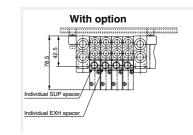

n: Stations


LD	)im	ens	ic	n
$\overline{}$	n			


<u>L</u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5
L2	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375
L3	104.4	120.4	136.4	152.4	168.4	184.4	200.4	216.4	232.4	248.4	264.4	280.4	296.4	312.4	328.4
L4	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304


# Dimensions: Series 10-SV3000 for EX120 Dedicated Output Serial Wiring


• Tie-rod base manifold: 10-SS5V3-10S3 D-Stations D (R) - C6, N7 (-D)

•When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
•External pilot port positions are the same as P, E port outlet positions.

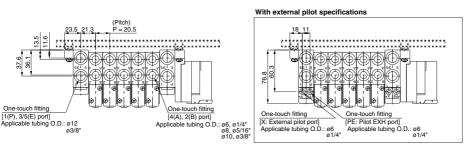

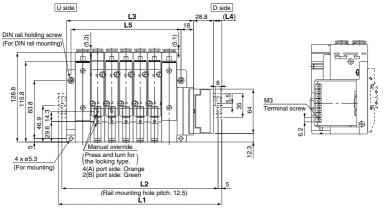

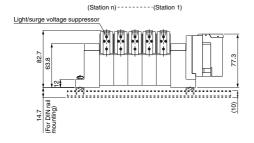

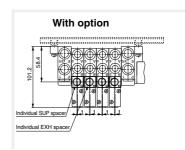



L Dir	L Dimension n: Stations														
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	185.5	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	460.5
L2	175	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	400	412.5	437.5	450
L3	121.5	142	162.5	183	203.5	224	244.5	265	285.5	306	326.5	347	367.5	388	408.5
L4	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5	11.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384


# Dimensions: Series 10-SV4000 for EX120 Dedicated Output Serial Wiring


• Tie-rod base manifold: 10-SS5V4-10S3 D-Stations | U | R | (R) - 02 | C10, N9 | (-D)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

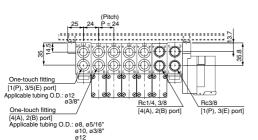


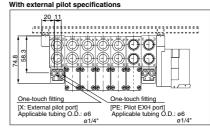

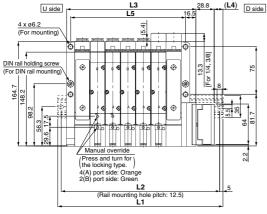

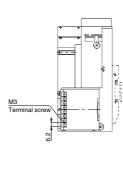

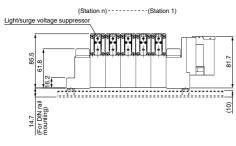

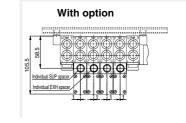


L Din	L Dimension n: Stations														
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	448	473	498	523
L2	175	200	225	250	275	300	325	350	375	400	425	437.5	462.5	487.5	512.5
L3	132	156	180	204	228	252	276	300	324	348	372	396	420	444	468
L4	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445

# Integrated Type (For Output) Serial Transmission System

# Series EX260

IP67 compliant (Some products are IP40)

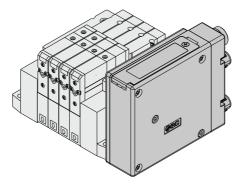

Tie-rod base

Applicable series Tie-rod base manifold

10-SV1000/10-SV2000/10-SV3000

· Number of outputs: 16, 32





## How to Order Manifold



#### Series

1	10-SV1000
2	10-SV2000
3	10-SV3000

#### 2 SI unit specifications

(Output polarit	y, protocol, nun	nber of outputs, comn	nunication	n connector
	put polarity) Negative common (PNP)	Protocol	Number of outputs	Communication connector
	)	Without	SI un	it
QA	QAN	DeviceNet™	32	M12
QB	QBN	Device Net	16	IVITZ
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	IVITZ
NC	NCN	DP	32	Note 3)
ND	NDN		16	D-sub
VA	VAN	CC-Link	32	M12
VB	VBN	CC-LIIK	16	IVITZ
DA	DAN	EtherCAT	32	M12
DB	DBN	Lilleloat	16	IVITZ
FA	FAN	PROFINET	32	M12
FB	FBN	THOFINET	16	IVITZ
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Luiciiieuii	16	IVITZ
_ Note 2)	GAN	Ethernet	32	M12
_ Note 2)	GBN	POWERLINK	16	14112

Note 1) DIN rail cannot be mounted without SI unit. Note 2) Positive common (NPN) type is not applicble. Note 3) IP40 for the D-sub applicable communication connector specification.(The manifold part number is "10-SS5V -10S1NC/ND D".)

Note 4) For SI unit part number, refer to the table below

## Valve stations

#### For 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	O: Note 2)
i i		Specified layout Note 2) (Available up to 32 solenoids)
20	20 stations	(Available up to 32 soleriolds)

#### For 16-output SI unit

Symbol	Stations	Note					
02	2 stations						
	:	Double wiring Note 1)					
08	8 stations						
02	2 stations	O III I Note 2)					
:	:	Specified layout Note 2) (Available up to 16 solenoids)					
16	16 stations	(Available up to 16 solenoids)					

Note 1) Double wiring: Single, double, 3-position and 4-position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet

> (Note that double, 3-position and 4position valves cannot be used where single solenoid wiring has been specified.)

## A P. E port location

O : , = po::::oouo								
U	U side (2 to 10 stations)							
D	D side (2 to 10 stations)							
В	Both sides (2 to 20 stations)							

# SUP/EXH block assembly

Nil	Internal pilot
R	External pilot

## Mounting

• mounting					
Nil	Direct mounting				
D	DIN rail r	nounting (With DIN rail)			
D0	DIN rail mounting (Without DIN r				
D3		When a longer DIN rail is desired			
:		than the specified stations. (Specify a longer rail than the			
D20		standard length.)			

\* If the DIN rail must be mounted without SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the WEB catalog or SV series catalog (CAT.ES11-81).

## 6 A. B port size (Metric)

Symbol	A, B port	P, E port	Applicable series	
C3	ø3.2 One-touch fitting	ø8		
C4	ø4 One-touch fitting	One-touch fitting	10-SV1000	
C6	ø6 One-touch fitting	One-touch litting		
C4	ø4 One-touch fitting	~10		
C6	ø6 One-touch fitting	ø10 One-touch fitting	10-SV2000	
C8	ø8 One-touch fitting	One-touch litting		
C6	ø6 One-touch fitting	ø12		
C8	ø8 One-touch fitting	Ø 12 One-touch fitting	10-SV3000	
C10	ø10 One-touch fitting	One-touch litting		
M	Mixed			

A, B port size (Inch)

Symbol	A, B port	P, E port	Applicable series	
N1	ø1/8" One-touch fitting	ø5/16"		
N3	ø5/32" One-touch fitting	One-touch fitting	10-SV1000	
N7	ø1/4" One-touch fitting	One-touch litting		
N3	ø5/32" One-touch fitting	ø3/8"	10-SV2000	
N7	ø1/4" One-touch fitting	One-touch fitting		
N9	ø5/16" One-touch fitting	One-touch litting		
N7	ø1/4" One-touch fitting	ø3/8"		
N9	ø5/16" One-touch fitting	One-touch fitting	10-SV3000	
N11	ø3/8" One-touch fitting	One-touch litting		
M	Mixed			

\* For mixed specifications (M), indicate separately on the manifold specification sheet.

\* External pilot type (R) X, PE port sizes are ø4 (mm) or ø5/32" (inch) for the 10-SV1000/2000 series, and ø6 (mm) or ø1/4" (inch) for the 10-SV3000 series.

#### EX260 SI unit part no.

Symbol	Protocol		Communication	SI unit part no.			
Syllibol	FIOLOCOI	of outputs	connector	+COM.	-COM.		
QA	DeviceNet™		1440	EX260-SDN2	EX260-SDN1		
QB	Devicemet		EX260-SDN4	EX260-SDN3			
NA	PROFIBUS DP	32		EX260-SPR2	EX260-SPR1		
NB		16		EX260-SPR4	EX260-SPR3		
NC		32	D-sub		EX260-SPR5		
ND		16	D-Sub	EX260-SPR8	EX260-SPR7		
VA	CC-Link	32	M12	EX260-SMJ2	EX260-SMJ1		
VB		16	IVIIZ	EX260-SMJ4	EX260-SMJ3		

EX260 SI unit part no.

Symbol	Protocol		Communication	SI unit part no.		
Symbol	Protocor	of outputs	connector	+COM.	-COM.	
DA	EtherCAT	32	M12	EX260-SEC2	EX260-SEC1	
DB	EllierCAT	16	EX260-SEC4	EX260-SEC3		
FA	PROFINET	32	M12	EX260-SPN2	EX260-SPN1	
FB		16	IVIIZ	EX260-SPN4	EX260-SPN3	
EA	EtherNet/	32	M12	EX260-SEN2	EX260-SEN1	
EB	IР™	16	W12	EX260-SEN4	EX260-SEN3	
GA	Ethernet	32	M12	-	EX260-SPL1	
GB	POWERLINK	16	IVIIZ	_	EX260-SPL3	

Air

Note) Available with manifold block for station

8 Made to Order

Nil


X90

additions. Refer to the WEB catalog.


Main valve fluororubber

(Refer to page 272.)

## **How to Order Manifold Assembly**

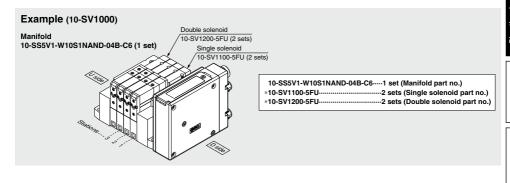

#### **How to Order Valve**

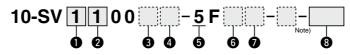

# Series

10-SV1000
10-SV2000
10-SV3000

Actuation type

G Addation type					
1	2-position single				
2	2-position double				
3	3-position closed center				
4	3-position exhaust center				
5	3-position pressure center				
Α	4-position dual 3-port valve: N.C./N.C.				
В	4-position dual 3-port valve: N.O./N.O.				
С	4-position dual 3-port valve: N.C./N.O.				

\* 4-position dual 3-port valves are applicable to the 10-SV1000/2000 series only.

# Pilot type

Nil	Internal pilot
R	External pilot

\* External pilot specifications are not available for 4-position dual 3-port valves.

# 4 Back pressure check valve

Nil None			
K	Built-in		
* The bu	ilt-in back pressure check valve type is		

applicable to the 10-SV1000 series only.

\* The product with back pressure check valve is not available for 3-position valves. Note) Refer to the Specific Product Precautions


2 in the Best Pneumatics No. 1. Datad voltage

e na	teu voitage	
5	24 VDC	

# 6 Light/surge voltage suppressor

U	With light/surge voltage suppressor
R	With surge voltage suppressor


# Manual override

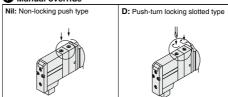



Refer to the SMC website or the SV series in the Best Pneumatics No. 1 for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.

# Dimensions: Series 10-SV1000 for EX260 Integrated-type (For Output) Serial Transmission System

- Tie-rod base manifold: 10-SS5V1-W10S1□□D-Stations DR (R)-C4, N3 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions are the same as P, E port outlet positions.

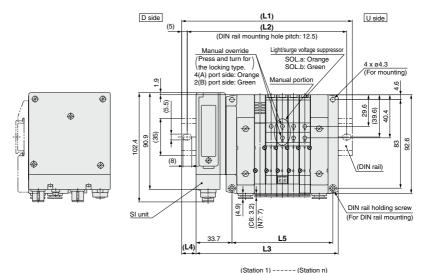

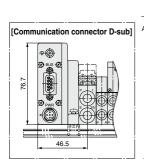

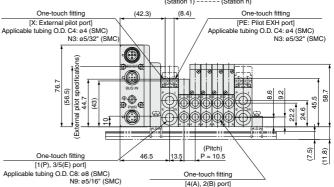

Applicable tubing O.D. C3: ø3.2 (SMC) C4: ø4 (SMC) C6: ø6 (SMC) N1: ø1/8" (SMC) N3: ø5/32" (SMC) N7: ø1/4" (SMC)

		Rail			

L: DIN Rail Overall Length n: Stations																			
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252


U side


# Dimensions: Series 10-SV2000 for EX260 Integrated-type (For Output) Serial Transmission System

- Tie-rod base manifold: 10-SS5V2-W10S1□□D-Stations DR (R)-C6, N7 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

(L1)


. External pilot port positions are the same as P, E port outlet positions.

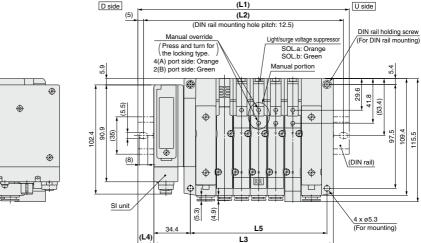

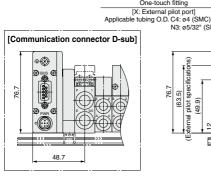

CA E

⊗

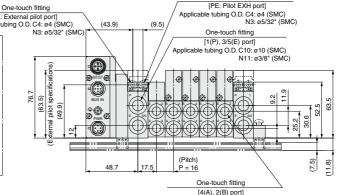

(Station 1) ----- (Station n)

One-touch fitting

Applicable tubing O.D. C4: ø4 (SMC)


C6: ø6 (SMC)

C8: ø8 (SMC) N3: ø5/32" (SMC) N7: ø1/4" (SMC) N9: ø5/16" (SMC)

L: DIN Rail Overall Length n: Stations																			
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

# Dimensions: Series 10-SV3000 for EX260 Integrated-type (For Output) Serial Transmission System


- Tie-rod base manifold: 10-SS5V3-W10S1□□D-Stations DR (R)-C6, N7 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions are the same as P, E port outlet positions.

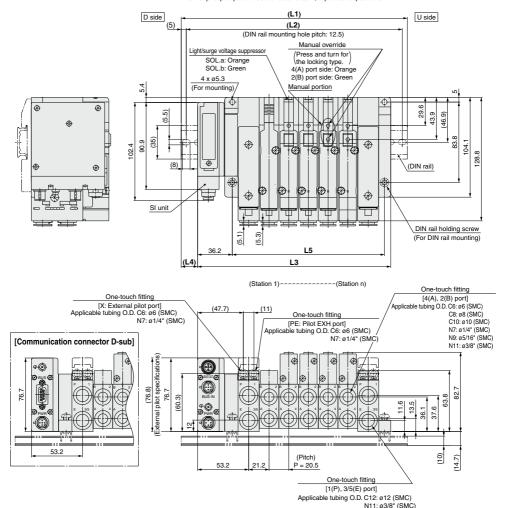

L: DIN Rail Overall Length n: Stations												Stations							
r u	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	185.5	210.5	235.5	248	273	298	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5
L2	162.5	175	200	225	237.5	262.5	287.5	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	512.5	525
L3	139.7	160.2	180.7	201.2	221.7	242.2	262.7	283.2	303.7	324.2	344.7	365.2	385.7	406.2	426.7	447.2	467.7	488.2	508.7
L4	16.5	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

# Integrated Type (For Output) Serial Transmission System

# Series EX126

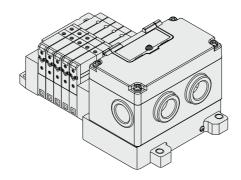


#### IP67 compliant

Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

· Number of outputs: 16



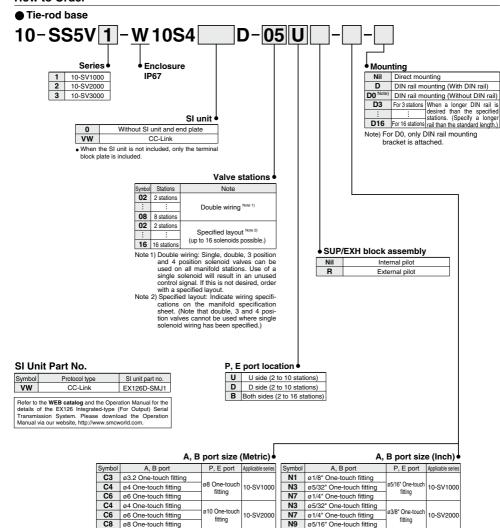

<sup>\*</sup> For mixed specifications (M), indicate separately on the manifold specification sheet.

ø12 One-touch

fitting

C6 ø6 One-touch fitting

C10 ø10 One-touch fitting

ø8 One-touch fitting

C8

M Mixed

10-SV3000

N7

N9

N11

М Mixed

ø1/4" One-touch fitting

ø5/16" One-touch fitting

ø3/8" One-touch fitting

ø3/8" One-touch

10-SV3000


<sup>\*</sup> External pilot type (R) X, PE port sizes are ø4 (metric), ø5/32" (inch) for the 10-SV1000/2000 series and ø6 (metric), ø1/4" (inch) for the 10-SV3000 series.

Actuators

Air

**∌SMC** 


**How to Order Manifold Assembly** 

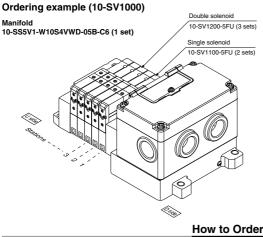

10-SS5V1-W10S4VWD-05B-C6 ····· 1 set (manifold part no.)

- \* 10-SV1100-5FU ······· 2 sets (manifold part no.)
- \* 10-SV1200-5FU ······· 3 sets (manifold part no.)

## **How to Order Valve**

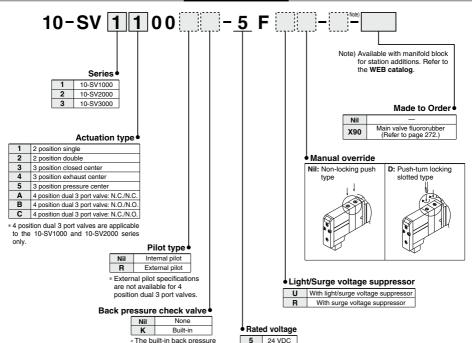

Note) Refer to the Specific Product Precautions 2 on page 274.


check valve type is applicable to the 10-SV1000 series only.

\* The product with back

pressure check valve is not available for 3 position

# Dimensions: Series 10-SV1000 for EX126 Integrated-type (For Output) Serial Transmission System

# ● Tie-rod base manifold: 10-SS5V1-W10S4 D-Stations D(R)-C3, N1 (-D)

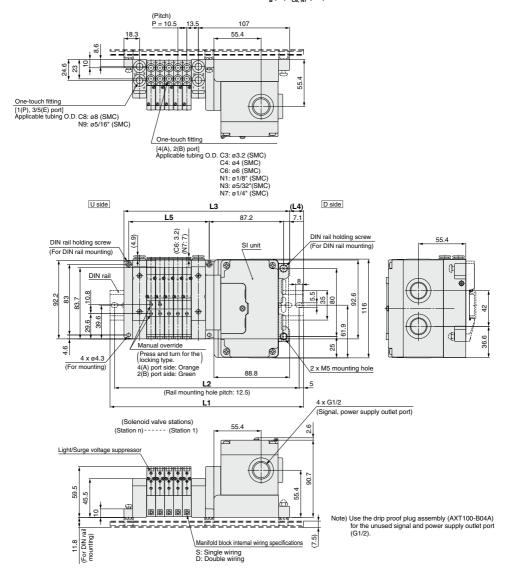



L Di	L Dimension n: Station													Stations	
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5
L2	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325
L3	162.8	173.3	183.8	194.3	204.8	215.3	225.8	236.3	246.8	257.3	267.8	278.3	288.8	299.3	309.8
L4	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

# Dimensions: Series 10-SV2000 for EX126 Integrated-type (For Output) Serial Transmission System

N9: ø5/16" (SMC)

● Tie-rod base manifold: 10-SS5V2-W10S4 D-Stations (R)-C4, N3 (-D)

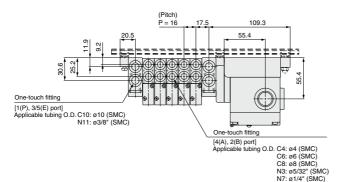

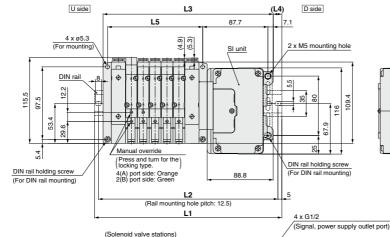

d d		7			
	$\mathbb{C}$	<del>)</del> )	•	1	21
	A	2		<u> </u>	45
	y		<b>G</b>	╛	36.6
Ч					_'

55.4

(Station n) 55.4

Light/Surge voltage suppressor

(Station 1) 55.4

(Station n) 55.4

(Station n) 60

(Station n) 60

(Station n) 70


(Station

Note) Use the drip proof plug assembly (AXT100-B04A) for the unused signal and power supply outlet port (G1/2).

		1 -	_												
L Di	mens	ion												n: \$	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	180.8	196.8	212.8	228.8	244.8	260.8	276.8	292.8	308.8	324.8	340.8	356.8	372.8	388.8	404.8
L4	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304

# Dimensions: Series 10-SV3000 for EX126 Integrated-type (For Output) Serial Transmission System

● Tie-rod base manifold: 10-SS5V3-W10S4 D-Stations (R)-C6, N7 (-D)

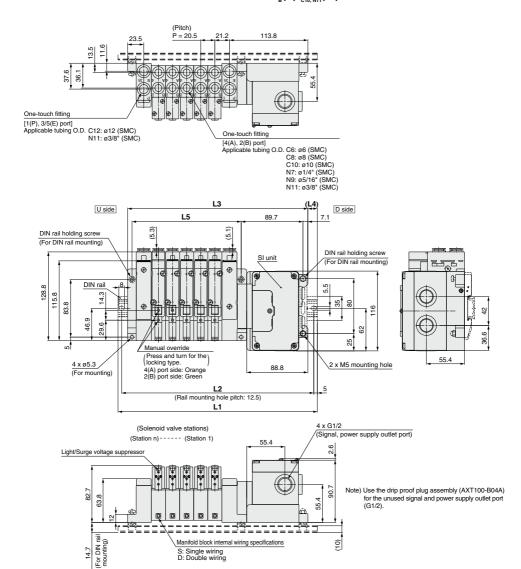


L Di	L Dimension n: Station													Stations	
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	235.5	248	273	285.5	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	510.5
L2	225	237.5	262.5	275	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	500
L3	200.3	220.8	241.3	261.8	282.3	302.8	323.3	343.8	364.3	384.8	405.3	425.8	446.3	466.8	487.3
L4	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5	11.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384

Flow Control Equipment

# **Circular Connector**

IP67 compliant

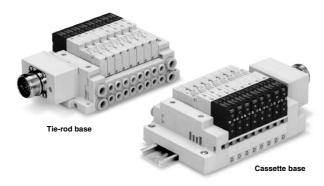

Applicable series Cassette base manifold 10-SV1000/10-SV2000 Tie-rod base manifold


10-SV1000/10-SV2000/10-SV3000/10-SV4000

· Number of connectors: 26 pins

# Series 10-SV Circular Connector ( C C RU US



#### **How to Order**

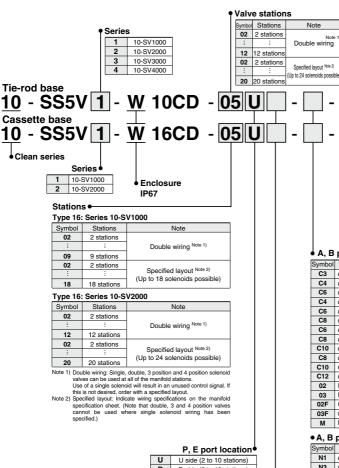

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

#### SLID/FYH block assembly

Nil	Internal pilot
R	External pilot

Note 1) Double wiring: Single, double, 3 position and 4 position solenoid valves can be used at all of the manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout. Note 2) Specified layout: Indicate wiring specifications on the manifold specification sheet. (Note that double, 3 and 4 position valves cannot be used where single solenoid wiring has been specified.)

Mounting

Nil	Direct m	ounting							
D	DIN rail	mounting (With DIN rail)							
DO Note)	DIN rail	mounting (Without DIN rail)							
D3		When a longer DIN rail is							
:	:	desired than the specified stations. (Specify a longer							
D20	For 20 stations rail than the standard length.)								
Note) Fo	or D0, only DIN rail mounting bracket is								
at	tached.	-							

#### DIN rail length specified

Nil	Standard length							
3	For 3 stations	Specify a longer rail						
:	:	than the standard						
20 Note)	For 20 stations	length.						

Note) Able to specify the length for 3 stations up to 18 stations for 10-SV1000, which is available with 18 stations at the maximum.

#### A. B port size (Metric)

, -	port 5:25 (5ti5)		
Symbol	Specifications	P, E port	Applicable series
C3	ø3.2 One-touch fitting		
C4	ø4 One-touch fitting	ø8 One-touch fitting	10-SV1000
C6	ø6 One-touch fitting	illing	
C4	ø4 One-touch fitting	-10 0 1	
C6	ø6 One-touch fitting	ø10 One-touch	10-SV2000
C8	ø8 One-touch fitting	iiiiiiig	
C6	ø6 One-touch fitting	ø12 One-touch	
C8	ø8 One-touch fitting	fitting	10-SV3000
C10	ø10 One-touch fitting	iitiiig	
C8	ø8 One-touch fitting	ø12 One-touch	
C10	ø10 One-touch fitting	fitting	
C12	ø12 One-touch fitting	iiiiiig	
02	Rc 1/4	Bc 3/8	10-SV4000
03	Rc 3/8	NC 3/6	10-3 44000
02F	G 1/4	G 3/8	
03F	G 3/8	G 3/6	
М	Mixed		

#### A, B port size (Inch)

Symbol	Specifications	P, E port	Applicable series
N1	ø1/8" One-touch fitting	54010	
N3	ø5/32" One-touch fitting	ø5/16" One-touch	10-SV1000
N7	ø1/4" One-touch fitting	illang	
N3	ø5/32" One-touch fitting	0/01/0	
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	10-SV2000
N9	ø5/16" One-touch fitting	inturing	
N7	ø1/4" One-touch fitting	0/01.0	
N9	ø5/16" One-touch fitting	ø3/8" One-touch	10-SV3000
N11	ø3/8" One-touch fitting	inturing	
N9	ø5/16" One-touch fitting	ø3/8" One-touch	
N11	ø3/8" One-touch fitting	fitting	
02N	NPT 1/4	NPT 3/8	10-SV4000
03N	NPT 3/8	141 1 3/6	10-3 74000
02T	NPTF 1/4	NPTF 3/8	
03T	NPTF 3/8	INFIF 3/0	
М	Mixed		

- \* For mixed specifications (M), indicate separately on the manifold
- specification sinest.


  \*External pilot type (R) X, PE port sizes are ø4 (metric), ø5/32" (inch) for the 10-SV1000/2000 series and ø6 (metric), ø1/4" (inch) for the 10-SV3000/4000 series



Grippers

Air

# **How to Order Manifold Assembly**

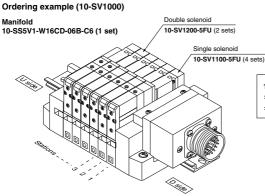


10-SS5V1-W16CD-06B-C6·······1 set (Manifold part no.) \* 10-SV1100-5FU------4 sets (Single solenoid part no.)

\* 10-SV1200-5FU-----2 sets (Double solenoid part no.)

With surge voltage suppresser

#### How to Order Solenoid Valve

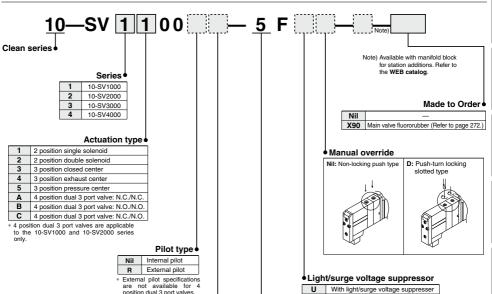

# position dual 3 port valves. Back pressure check valve

Nil	None								
K	Built-in								
* The built-in back pressure									
check valve type is									
applica	ble to the 10-SV1000								

- series only.

  \* The product with back
- pressure check valve is not available for 3 position solenoid valve

Note) Refer to the Specific Product Precautions 2 on page 274.

 Rated voltage 5

6

24 VDC

12 VDC

# **Manifold Electrical Wiring**

10C/16C Circular Conr	nector Type (26 pins)
Tern	minal no. Polarity
Station 1 { \textstyle	(-) (+) (-) (+)
Station 2 { Sola of So	(-) (+) (-) (+)
Station 3 { \textstyle	(-) (+) (-) (+)
Station 4 { \times \text{SOL6 \ 8} \\ SOL6 \	(-) (+) (-) (+)
Station 5 { \times \text{SOLE 9 9 \\ \text{SOLE 10} \\ SOLE	(-) (+) (-) (+)
Station 6 { \( \frac{-\lime{\text{MSULa} \cdot 12}}{\text{MSULa} \cdot 12} \)	
Station 7 { \textstyle	(-) (+) (-) (+)
Station 8 Station 8	(-) (+) (-) (+)
Station 9 { SOLD 018	(-) (+) (-) (+)
Station 10 {SOLb_019	(-) (+) (-) (+)
Station 11 {	(-) (+)
Station 12 { \frac{\text{SOLa o 23} \text{SOLb o 24}}{\text{SOLb o 24}}	(-) (+)
COM. o25 COM. o26	(+) (-) (+) (-)
	Positive Negative
s	common common specification specification

- · This circuit is for the double wiring specification with up to 12 stations. Since the usable must clicult is of the double willing specification with p to P stations. Since the data for single solenoids differs depending on the manifold type, refer to the table below. For single solenoids, connect to SOLA. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \to 2 \to 3 \to 4$ , etc.

  Stations are counted from the D side (connector side) as the 1st one.
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

#### Usable No. of Solenoids


Model		Max. no. of solenoids
Type 10, Tie-rod base	10-SV1000 to 10-SV4000	24
Type 16, Cassette base	10-SV1000	18
Type 10, Casselle base	10-SV2000	24


# Pressure Switches/ Pressure Sensors


# Dimensions: Series 10-SV1000 for Circular Connector


# • Cassette base manifold: 10-SS5V1-W16CD-Stations | Cassette base manifold: 10-SS5V1-W16CD-Stati


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

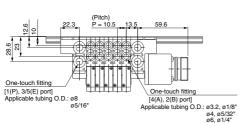


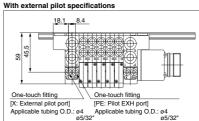

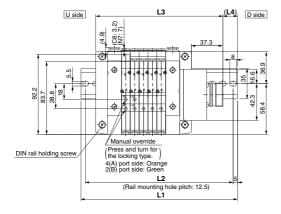

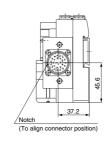

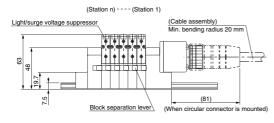

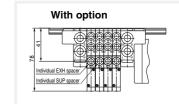


L DIP	nensic	n														n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5
L2	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300
L3	119.3	129.8	140.3	150.8	161.3	171.8	182.3	192.8	203.3	213.8	224.3	234.8	245.3	255.8	266.3	276.8	287.3
L4	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16	17	11.5


**SMC** 


#### Dimensions: Series 10-SV2000 for Circular Connector


# • Cassette base manifold: 10-SS5V2-W16CD-Stations | Cassette base manifold: 0-SS5V2-W16CD-Stations | Cassette base manifold: 0-SS5V2-W1


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

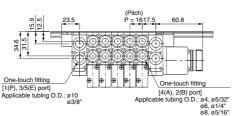


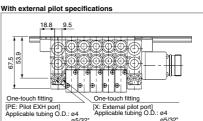

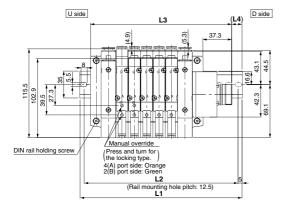

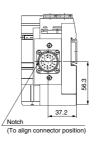

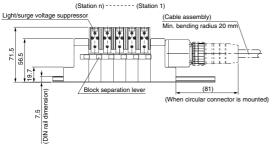

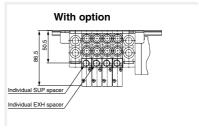



L Dir	nensio	n																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	185.5	198	210.5	223	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448
L2	150	175	187.5	200	212.5	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425	437.5
L3	135.3	151.3	167.3	183.3	199.3	215.3	231.3	247.3	263.3	279.3	295.3	311.3	327.3	343.3	359.3	375.3	391.3	407.3	423.3
L4	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5


# Dimensions: Series 10-SV1000 for Circular Connector


# • Tie-rod base manifold: 10-SS5V1-W10CD-Stations $\frac{0}{0}$ (R) - $\frac{C3, N1}{C4, N3}$ (-D)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

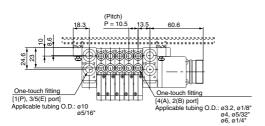


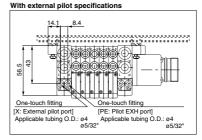

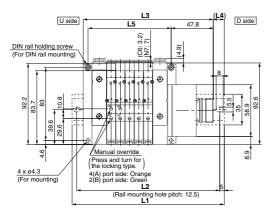

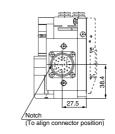

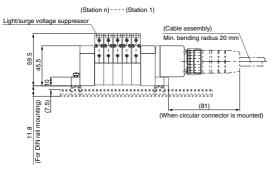

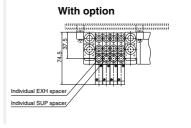



L DIN	nensic	n																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5
L2	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325
L3	116.3	126.8	137.3	147.8	158.3	168.8	179.3	189.8	200.3	210.8	221.3	231.8	242.3	252.8	263.3	273.8	284.3	294.8	305.3
L4	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252


# Dimensions: Series 10-SV2000 for Circular Connector


# • Tie-rod base manifold: 10-SS5V2-W10CD-Stations $\frac{U}{R}$ (R) - $\frac{C4}{C6}$ , $\frac{N3}{N9}$ (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

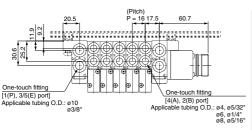


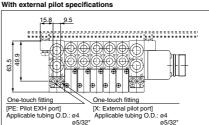


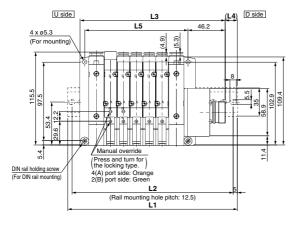

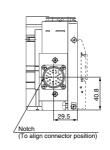

(Station n) ----- (Station 1)

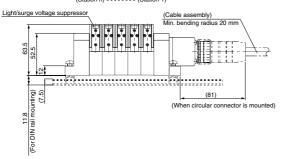

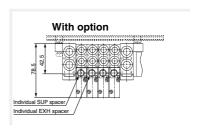


L DII	nensic	on																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448
L2	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5
L3	132.2	148.2	164.2	180.2	196.2	212.2	228.2	244.2	260.2	276.2	292.2	308.2	324.2	340.2	356.2	372.2	388.2	404.2	420.2
L4	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


I Dimension


# Dimensions: Series 10-SV3000 for Circular Connector


# • Tie-rod base manifold: 10-SS5V3-W10CD-Stations | (R) - C6, N7 (-D)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged
 External pilot port positions are the same as P, E port outlet positions.

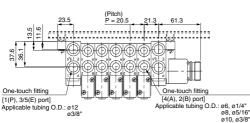


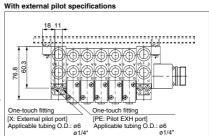

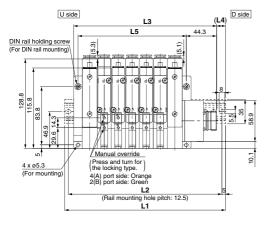

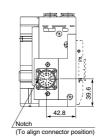

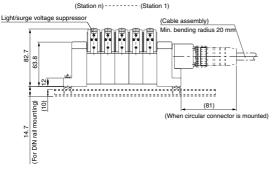

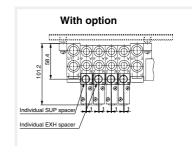


L Dir	Dimension n: Stations																		
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	198	223	235.5	260.5	285.5	298	323	335.5	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548
L2	162.5	187.5	212.5	225	250	275	287.5	312.5	325	350	375	387.5	412.5	437.5	450	475	500	512.5	537.5
L3	147.8	168.3	188.8	209.3	229.8	250.3	270.8	291.3	311.8	332.3	352.8	373.3	393.8	414.3	434.8	455.3	475.8	496.3	516.8
L4	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466


238


#### Dimensions: Series 10-SV4000 for Circular Connector


# • Tie-rod base manifold: 10-SS5V4-W10CD-Stations | U | R | C12, N11 (-D)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged. External pilot port positions are the same as P, E port outlet positions.

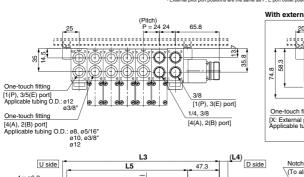


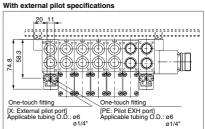

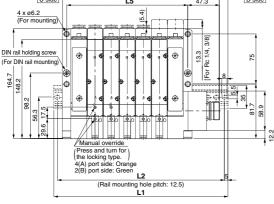

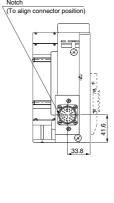

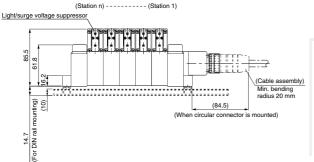


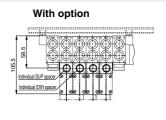

L DIr	nensio	on																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	198	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	498	523	548	573	598	623
L2	187.5	200	225	250	275	300	325	350	375	400	425	450	475	487.5	512.5	537.5	562.5	587.5	612.5
L3	162.8	186.8	210.8	234.8	258.8	282.8	306.8	330.8	354.8	378.8	402.8	426.8	450.8	474.8	498.8	522.8	546.8	570.8	594.8
L4	17.5	12	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13	13.5	14
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541

I Dimension

# **D-sub Connector**

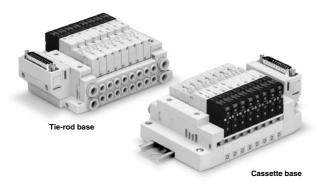


Applicable	Cassette base manifold 10-SV1000/10-SV2000
series	Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000/10-SV4000
	Number of connectors: 25 pins     MIL-C-24308     Conforming to JIS-X-5101

# Series 10-SV D-sub Connector ( CRU'US



#### How to Order

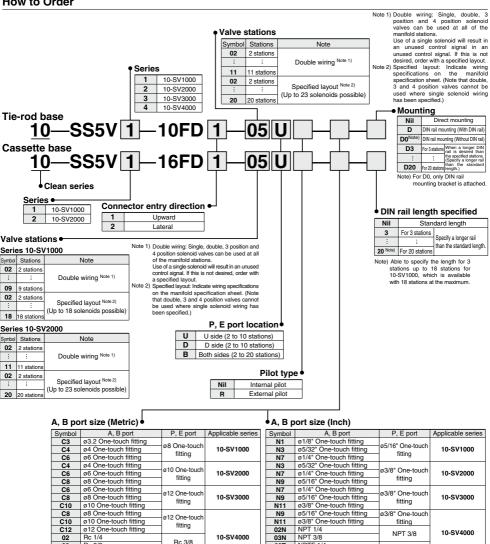

<sup>\*</sup> For mixed specifications (M), indicate separately on the manifold specification sheet

G 3/8

02T

03T

NPTF 1/4

NPTF 3/8

Mixed

NPTF 3/8

03 Rc 3/8

02F G 1/4


03F G 3/8

Mixed

<sup>\*</sup> External pilot type (R) X, PE port sizes are 4 (metric), o5/32" (inch) for the 10-SV1000/2000 series and ø6 (metric), ø1/4" (inch) for the 10-SV3000/4000 series.

## **How to Order Manifold Assembly**



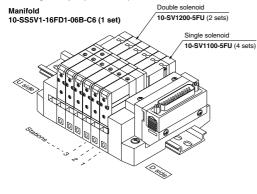


10-SS5V1-16FD1-06B-C6------1 set (Manifold part no.)

\* 10-SV1100-5FU-----4 sets (Single solenoid part no.)

\* 10-SV1200-5FU-----2 sets (Double solenoid part no.)

# How to Order Solenoid Valve

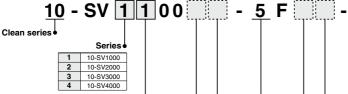

#### Actuation type

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
Α	4 position dual 3 port valve: N.C./N.C
В	4 position dual 3 port valve: N.O./N.O
С	4 position dual 3 port valve: N.C./N.O

4 position dual 3 port valves are applicable to the 10-SV1000 and 10-SV2000 series only.

# Pilot type

Nil	Internal pilot
R	External pilot

\* External pilot specifications are not available for 4 position dual 3 port valves.

#### Note) Available with manifold block for station additions. Refer to the WEB catalog

# X90 Main valve fluororubber (Refer to page 272.)

#### Manual override



D: Push-turn locking slotted type

Made to Order

Light/surge voltage suppressor U

U	With light/surge voltage suppress
R	With surge voltage suppressor

#### Rated voltage 5 24 VDC

12 VDC

#### Back pressure check valve


Nil	None
ĸ	Ruilt-in

- \* The built-in back pressure check valve type is applicable
- to the 10-SV1000 series only.

  \* The product with back pressure check valve is not
- available for 3 position solenoid valves. Note) Refer to the Specific Product Precautions 2 on page 274.



# **Manifold Electrical Wiring**

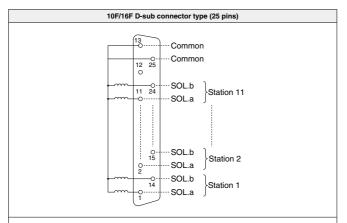

- · This circuit is for the double wiring specification with up to 11 stations. Since the usable • Inis circuit is for the double winning specification with up to 11 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. For single solenoids, connect to SOL.A. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1-14-2-75, etc.

  Stations are counted from the D side (connector side) as the 1st one.
- · Since solenoid valves do not have polarity, either the +COM or -COM can be use.


#### Usable No. of Solenoids


OSADIE NO. OI SCIENCIC	13	
Model	Max. no. of solenoids	
Type 10, Tie-rod base	10-SV1000 to 10-SV4000	23
Type 16, Cassette base	10-SV1000	18
Type 10, Casselle base	10-SV2000	23


# Dimensions: Series 10-SV1000 for D-sub Connector


# • Cassette base manifold: 10-SS5V1-16FD 1- Stations | V | (R)- C4, N3 | (R) - C4,

· When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged · External pilot port positions are the same as P, E port outlet positions.

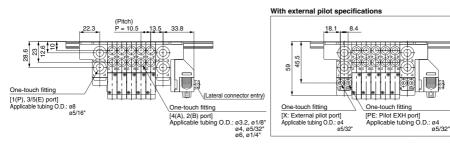

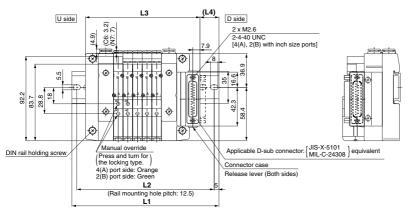

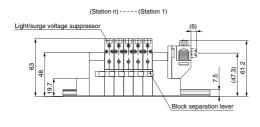

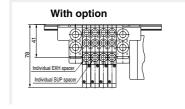



L Dii																Stations	
_ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5	251	261.5
L4	18	19	20	21	22	23	24	18.5	19.5	20.5	21.5	22.5	23.5	18.5	19.5	20.5	21.5


#### Dimensions: Series 10-SV2000 for D-sub Connector


# 

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

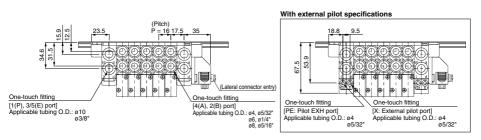

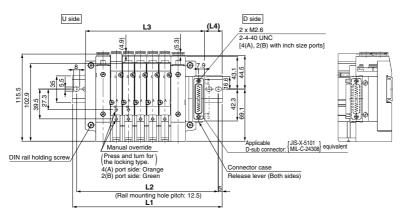

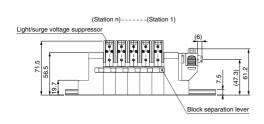

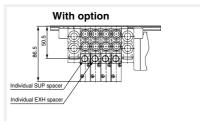



L Dir																Stations			
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
L4	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22


# Dimensions: Series 10-SV1000 for D-sub Connector


# • Tie-rod base manifold: 10-SS5V1-10FD $_2^1$ - $\frac{\text{Stations}}{\text{B}} | _{\text{D}}^{\text{U}}(R)$ - $\frac{\text{C3. N1}}{\text{C6. N7}}(-D)$

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged
 External pilot port positions are the same as P, E port outlet positions.

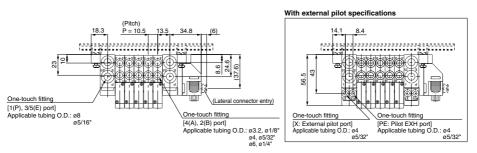

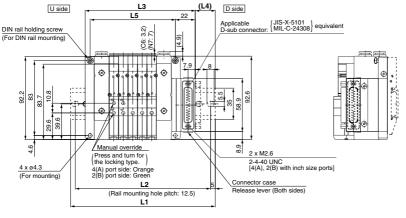

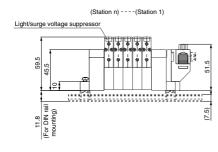

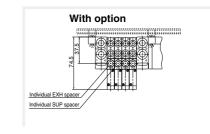



L DII	nensi	on																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	310.5	310.5
L2	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	300	300
L3	90.5	101	111.5	122	132.5	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
L4	19.5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	24	18.5
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.9	189	199.5	210	220.5	231	241.5	252


#### Dimensions: Series 10-SV2000 for D-sub Connector


# • Tie-rod base manifold: 10-SS5V2-10FD $_2^1$ - Stations $_B^U(R)$ - $_C^{C4, N3}(-D)$

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

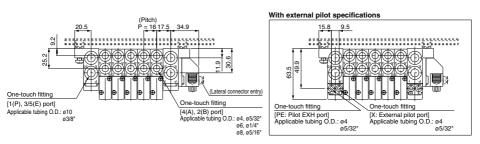

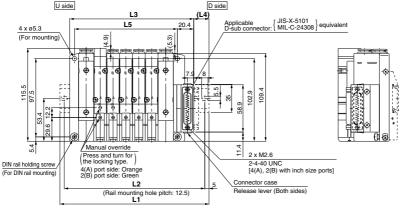

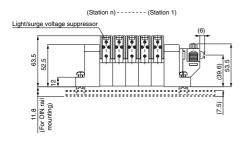

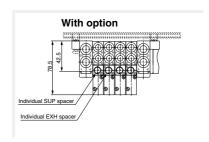



L Dir																Stations			
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5
L2	125	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425
L3	106.4	122.4	138.4	154.4	170.4	186.4	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4
L4	17.5	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


# Dimensions: Series 10-SV3000 for D-sub Connector


# • Tie-rod base manifold: 10-SS5V3-10FD 1- Stations | V | (R) - C6, N7 | (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

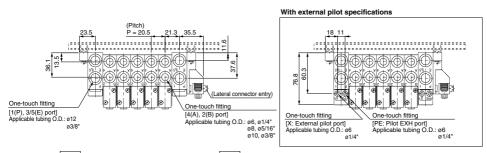

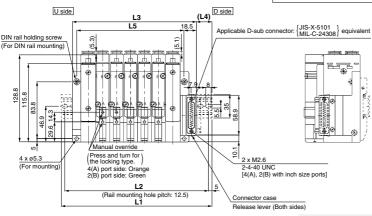

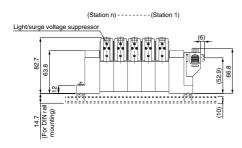

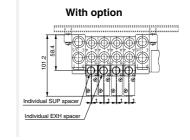


L Din	nensio	on																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2	150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3	122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
L4	22.5	18.5	20.5	23	19	21	23.5	19.5	21.5	24	20	22	18	20.5	22.5	18.5	21	23	19
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

### Dimensions: Series 10-SV4000 for D-sub Connector

### • Tie-rod base manifold: 10-SS5V4-10FD 1- Stations | U | (R) - 02 | C50, N9 (C10, N9) (C10, N9) (C10, N9)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged External pilot port positions are the same as P, E port outlet positions.

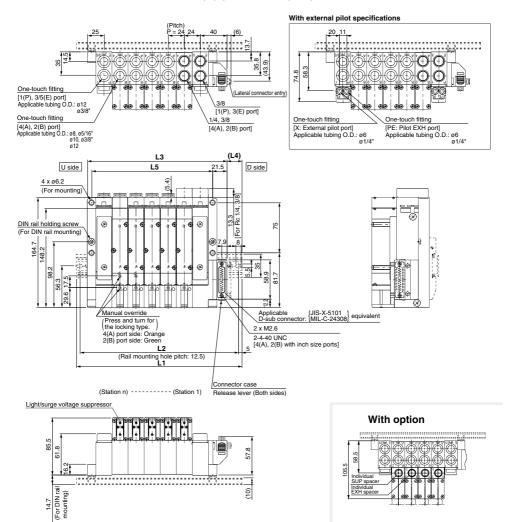


L Dir	nensio	n																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	198	223	248	273	298	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5	585.5	610.5
L2	162.5	187.5	212.5	237.5	262.5	287.5	300	325	350	375	400	425	450	475	500	525	550	575	600
L3	137	161	185	209	233	257	281	305	329	353	377	401	425	449	473	497	521	545	569
L4	21	21.5	22	22.5	23	23.5	18	18.5	19	19.5	20	20.5	21	21.5	22	22.5	23	23.5	24
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541

14.7

Fittings & Tubing

# **Flat Ribbon Cable Connector**

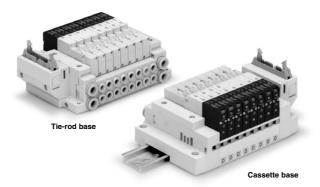


Applicable	Cassette base manifold 10-SV1000/10-SV2000
series	Tie-rod base manifold 10-SV1000/10-SV2000/10-SV3000/10-SV4000
	Number of connectors: 26, 20, 10 pins     With strain relief     Conforming to MIL-C-83503

# Series 10-SV Flat Ribbon Cable Connector

# 

#### How to Order

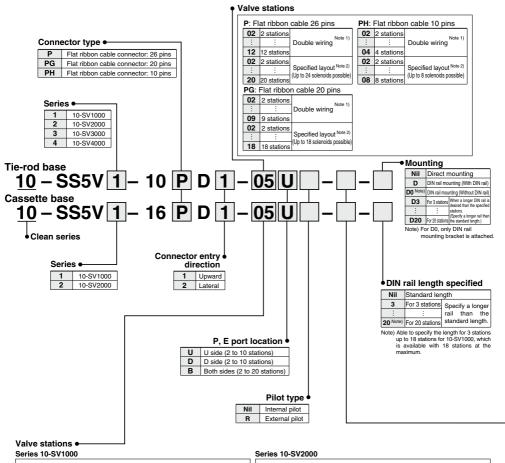

P: FI	at ribbon	cable 26 pins		PH:	Flat ribbo	n cable 10 pins
02	2 stations	Note 1)		02	2 stations	Note 1)
1	:	Double wiring		:		Double wiring Note 1)
09	9 stations			04	4 stations	
02	2 stations	a war and a Note of		02	2 stations	Aleke (I)
- :	:	Specified layout Note 2)		:	- :	Specified layout Note 2)
18	18 stations	(Up to 18 solenoids possible)	08		8 stations	(Up to 8 solenoids possible)
PG:	Flat ribbo	n cable 20 pins				
02	2 stations	Note 1)				
1	:	Double wiring				
09	9 stations	-				
02	2 stations					
- :	:	Specified layout Note 2) (Up to 18 solenoids possible)				
18	18 stations	(up to 16 soleriolds possible)				

on all manifold stations.
Use of a single solenoid will result in an unused control signal. If this is not desired,


order with a specified layout.


P: FI	at ribbon	cable 26 pins	PH:	Flat ribbo	n cable 10 pins
02	2 stations	Note 1)	02	2 stations	Note 1)
- :	:	Double wiring	:	:	Double wiring
12	12 stations		04	4 stations	
02	2 stations	N-t- 0	02	2 stations	- Nete M
- :	:	Specified layout Note 2) (Up to 24 solenoids possible)	:		Specified layout Note 2 (Up to 8 solenoids possible
20	20 stations	(up to 24 soleriolds possible)	08	8 stations	
PG:	Flat ribbo	n cable 20 pins			
02	2 stations	Note 1)			
- :	- :	Double wiring Note 1)			
09	9 stations				
02	2 stations				
- :	- :	Specified layout Note 2)			
18	18 stations	(Up to 18 solenoids possible)			

Note 1) Double wiring: Single, double, 3 position and 4 position solenoid valves can be used Note 2) Specified layout: Indicate wiring specifications on the manifold specification sheet. (Note that double, 3 and 4 position valves cannot be used wiring has been specified.)



### **How to Order Valve Manifold Assembly**

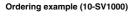

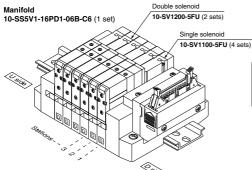

10-SS5V1-16PD1-06B-C6------1 set (Manifold part no.)

\* 10-SV1100-5FU------4 sets (Single solenoid part no.) \* 10-SV1200-5FU ......2 sets (Double solenoid part no.)

### How to Order Solenoid Valve



Clean series

1	10-SV1000
2	10-SV2000
3	10-SV3000
4	10-SV4000

### Actuation type

Series

	1	2 position single solenoid				
Г	2	2 position double solenoid				
Г	3	3 position closed center				
Г	4	3 position exhaust center				
Г	5	3 position pressure center				
Г	Α	4 position dual 3 port valve: N.C./N.C.				
	В	4 position dual 3 port valve: N.O./N.O.				
Г	С	4 position dual 3 port valve: N.C./N.O.				

\* 4 position dual 3 port valves are applicable to the 10-SV1000 and 10-SV2000 series only.

#### Pilot type

Nil	Internal pilot
R	External pilot

External pilot specifications are not available for 4 position dual 3 port valves

### Rated voltage 24 VDC 12 VDC

#### Back pressure check valve

Nil	None
K	Built-in


\*The built-in back pressure check valve type is applicable to the 10-SV1000 series only. \*The product with back

pressure check valve is not available for 3 position Note) Refer to the Specific Product Precautions 2 on page 274.

#### Note) Available with manifold block for station additions. Refer to the WEB catalog.

Made to Order X90 Main valve fluororubber (Refer to page 272.)

Manual override

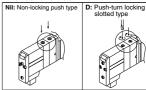

Light/surge voltage suppressor

With light/surge voltage suppressor With surge voltage suppressor

D E port Applicable series

### A, B port size (Metric)

### A, B port size (Inch)

Symbol	A, B port	P, E port	Applicable series	
СЗ	ø3.2 One-touch fitting			
C4	ø4 One-touch fitting	ø8 One-touch	10-SV1000	
C6	ø6 One-touch fitting	fitting		
C4	ø4 One-touch fitting	400		
C6	ø6 One-touch fitting	ø10 One-touch fitting	10-SV2000	
C8	ø8 One-touch fitting	litting		
C6	ø6 One-touch fitting			
C8	ø8 One-touch fitting	ø12 One-touch fitting	10-SV3000	
C10	ø10 One-touch fitting	illing		
C8	ø8 One-touch fitting			
C10	ø10 One-touch fitting	ø12 One-touch		
C12	ø12 One-touch fitting	fitting		
02	Rc 1/4	D 0/0	10-SV4000	
03 Rc 3/8		Rc 3/8	10-3 4 4 0 0 0	
02F	G 1/4	G 3/8		
03F	G 3/8	G 3/8		
М	Mixed			

	Symbol	A, B port	P, E port	Applicable series	
1	N1	ø1/8" One-touch fitting			
1	N3	ø5/32" One-touch fitting	ø5/16" One-touch	10-SV1000	
1	N7	ø1/4" One-touch fitting	fitting		
٦	N3	ø5/32" One-touch fitting			
1	N7 Ø1/4" One-touch fitting		ø3/8" One-touch fitting	10-SV2000	
	N9	ø5/16" One-touch fitting	illung		
٦	N7	ø1/4" One-touch fitting			
1	N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	10-SV3000	
1	N11	ø3/8" One-touch fitting	illung		
٦	N9	ø5/16" One-touch fitting	ø3/8" One-touch		
1	N11	ø3/8" One-touch fitting	fitting		
1	02N	NPT 1/4	NPT 3/8	10-SV4000	
1	03N	NPT 3/8	NP13/8	10-374000	
1	02T	NPTF 1/4			
1	03T	NPTF 3/8	NPTF 3/8		
	M	Mixed			

\* For mixed specifications (M), indicate separately on the manifold specification sheet.

\* External pilot type (R) X, PE port sizes are ø4 (metric), ø5/32" (inch) for the 10-SV1000/2000 series and ø6 (metric), ø1/4" (inch) for the 10-SV3000/4000 series.

### **Manifold Electrical Wiring**

### 10P/16P flat ribbon cable type (26 pins) SOL h - SOL.a - SOL.b - SOL a ģ SOL.b Station 2 SOL.a ò SOL b þ SOL a Triangle mark

This circuit is for the double wiring specification with up to 12 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. For single solenoids, connect to SOLA. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $\rightarrow$  2  $\rightarrow$  3  $\rightarrow$  4. etc

Stations are counted from the D side (connector side) as the 1st one.
Since terminal numbers are not indicated on the flat ribbon cable, use the triangle mark as a reference for wiring.


Since solenoid valves do not have polarity, either the +COM or -COM

can be used

#### Usable no. of solenoids

Model		Max. no. of solenoids
Type 10, Tie-rod base	10-SV1000 to 10-SV4000	24
Type 16, Cassette base	10-SV1000	18
Type To, Casselle base	10-SV2000	24

### 10PH/16PH flat ribbon cable type (10 pins)

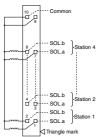

This circuit is for the double wiring specification with up to 4 stations. Since the usable number of scienoids differs depending on the manifold type, refer to the table below. For single sclenoids, connect to SOL.A. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ , etc. Stations are counted from the D side (connector side) as the 1st one. Since terminal numbers are not indicated on the flat ribbon cable, use the triangle mark as a reference for wiring.

the triangle mark as a reference for wiring.


Since solenoid valves do not have polarity, either the +COM or -COM

can be used

#### Usable no. of solenoids

Model		Max. no. of solenoids
	10-SV1000	
Type 10, Tie-rod base	to	
	10-SV4000	. •
Type 16, Cassette base	10-SV1000	
Type 10, Cassette base	10-SV2000	

#### 10PG/16PG flat ribbon cable type (20 pins)

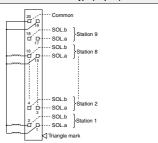

-This circuit is for the double wiring specification with up to 9 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. For single solenoids, connect to SOL.A. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ , etc.

Stations are counted from the D side (connector side) as the 1st one. Since terminal numbers are not indicated on the flat ribbon cable, use

the triangle mark as a reference for wiring.

Since solenoid valves do not have polarity, either the +COM or -COM can be used.

#### Usable no. of solenoids


Model		Max. no. of solenoids
Type 10, Tie-rod base	10-SV1000 to 10-SV4000	18
Type 16, Cassette base	10-SV1000	
Type 16, Casselle base	10-SV2000	


### Dimensions: Series 10-SV1000 for Flat Ribbon Cable


• Cassette base manifold: 10-SS5V1-16  $\stackrel{P}{\stackrel{P}{p}{q}}$  D<sub>2</sub><sup>1</sup> - Stations  $\stackrel{U}{\stackrel{P}{p}}$  (R) -  $\stackrel{C3, N1}{\stackrel{C4, N3}{\stackrel{N3}{=}}}$ 

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged. External pilot port positions are the same as P, E port outlet positions.

With external pilot specifications

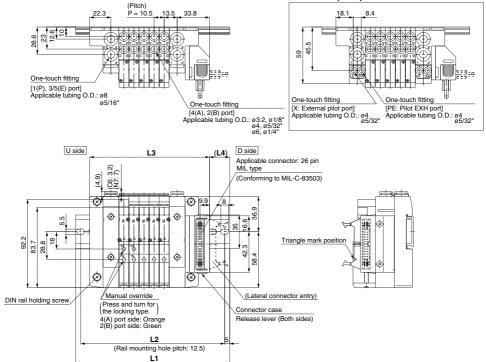

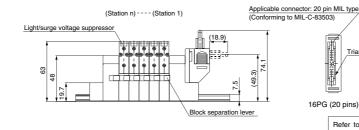

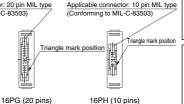


Refer to page 244 (for D-sub connector) for dimensions with individual SUP/EXH spacer.


L Dir	nensio	on														n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5	251	261.5
L4	24.5	19	20	21	22	23	24	19	20	21	22	23	24	18.5	19.5	20.5	21.5


#### Dimensions: Series 10-SV2000 for Flat Ribbon Cable

• Cassette base manifold: 10-SS5V2-16  $\stackrel{P}{P}{}_{PH}$  D<sub>2</sub> - Stations  $\stackrel{U}{P}{}_{P}$  (R) -  $\stackrel{C4, N3}{C6, N9}$ 

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged. External pilot port positions are the same as P, E port outlet positions.

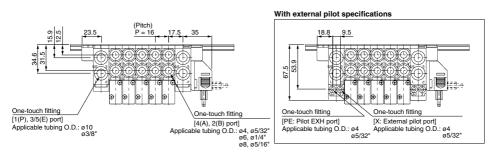

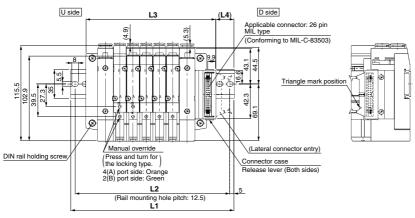

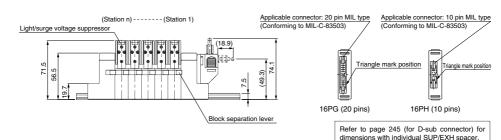



L Dir	nensio	n																n:	Stations
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
L4	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	24	22.5

### Dimensions: Series 10-SV1000 for Flat Ribbon Cable

### • Tie-rod base manifold: 10-SS5V1-10 $\stackrel{\text{PG}}{\stackrel{\text{PG}}{\stackrel{\text{}}{\rightarrow}}}$ D<sub>2</sub> - Stations $\stackrel{\text{U}}{\stackrel{\text{}}{\rightarrow}}$ (R) - $\stackrel{\text{C3, N1}}{\stackrel{\text{}}{\leftarrow}}$ (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged. External pilot port positions are the same as P, E port outlet positions.

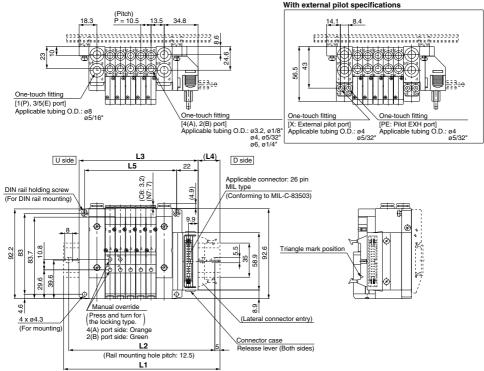

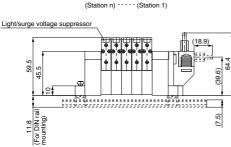

(Conforming to MIL-C-83503) (Conforming to MIL-C-83503) Triangle mark position Triangle mark position

> 10PG (20 pins) 10PH (10 pins) Refer to page 246 (for D-sub connector) for

Applicable connector: 10 pin MIL type

dimensions with individual SUP/EXH spacer.


Applicable connector: 20 pin MIL type


L Dir	nensio	on																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5
L2	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300
L3	90.5	101	111.5	122	132.5	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
L4	19.5	20.5	21.5	22.5	23.5	18.5	19.5	20.5	21.5	22.5	23.5	24.5	19	20	21	22	23	24	19
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252


### Dimensions: Series 10-SV2000 for Flat Ribbon Cable

### • Tie-rod base manifold: 10-SS5V2-10 $\stackrel{PG}{PH}$ D<sub>2</sub> - Stations $\stackrel{U}{p}$ (R) - $\stackrel{C4. NS}{\stackrel{C6. NG}{\stackrel{NS}{NO}}}$ (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions are the same as P, E port outlet positions.

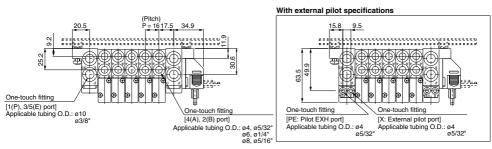

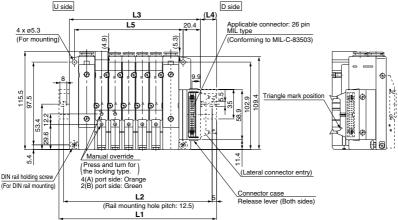

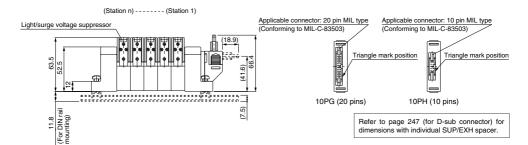


L Dir	nensio	n																n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5
L2	137.5	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425
L3	106.4	122.4	138.4	154.4	170.4	186.4	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4
L4	24	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

### Dimensions: Series 10-SV3000 for Flat Ribbon Cable

### • Tie-rod base manifold: 10-SS5V3-10 $_{PH}^{PG}$ $D_2^1$ - Stations $_{D}^{U}$ (R) - $_{C10,N11}^{C6,N7}$ (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged. External pilot port positions are the same as P, E port outlet positions.

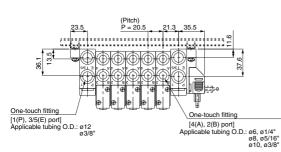



**L5** 97


117.5 138

158.5 179

199.5 220

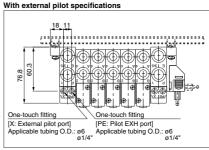

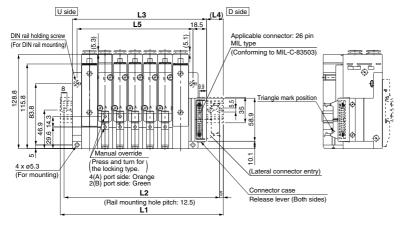

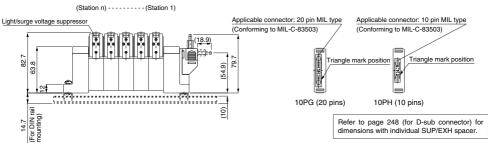

L Dir	nensio	on																n:	Stations
<u>L</u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2	150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3	122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
14	22.5	18.5	21	23	19	21.5	23.5	19.5	22	24	20	22.5	18.5	20.5	23	19	21	23.5	19.5

240.5 261

281.5 302

322.5 343

363.5 384

404.5 425


445.5 466

#### Dimensions: Series 10-SV4000 for Flat Ribbon Cable

### • Tie-rod base manifold: 10-SS5V4-10 $_{PH}^{PG}$ $D_2^1$ - Stations $_{R}^{U}$ (R) - $_{OSL}^{CC0}$ , $_{NS1}^{N9}$ (-D)

When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

External pilot port positions are the same as P, E port outlet positions.

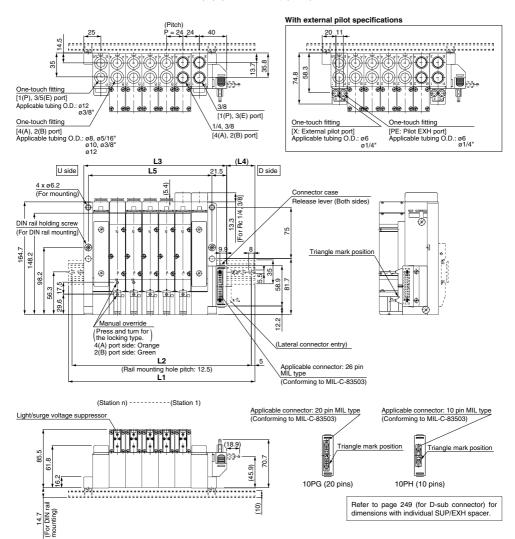

L Dir	nensio	on																n:	Stations
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	348	373	398	423	448	473	498	523	548	573	598	623
L2	175	200	225	250	275	300	325	337.5	362.5	387.5	412.5	437.5	462.5	487.5	512.5	537.5	562.5	587.5	612.5
L3	137	161	185	209	233	257	281	305	329	353	377	401	425	449	473	497	521	545	569
L4	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541


# Series 10-SV

# Manifold Option (Common for Type 16 and 10)

### ■Relay output module

By adding a relay output module to the 10-SV series manifold, devices up to 110 VAC, 3 A (large type solenoid valves, etc.) can be controlled together with 10-SV series valves.

#### How to Order

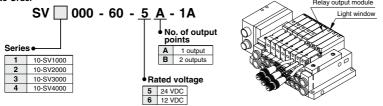

<sup>\*</sup> Note that serial wiring manifolds (EX500, EX250 and EX120) are available with 24 VDC only.

### Relay output module specifications

Item		Specific	ations						
No. of output points	1 output [connector wit	th lead wire (M12)]	2 outputs [connector	with lead wire (M12)]					
Output type		O 2 O 4 " contact)	Contact type						
Load voltage	110 VAC	30 VDC	110 VAC	30 VDC					
Load current	3 A	3 A	0.3 A	1 A					
Indicator light	Orange	е	A side: Orange	B side: Green					
Enclosure	Based on IP67 (IEC60529)								
Current consumption		20 mA	or less						
Polarity		Non-p	oolar						
Weight (g)	48								


### ■Y type connector


Used to branch a two output relay output module to two separate systems.

#### How to Order

EX500 - ACY00 - S




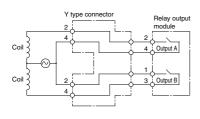

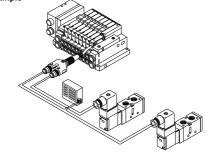

### ■Blanking plate assembly

Used in situations where valves will be added in the future.

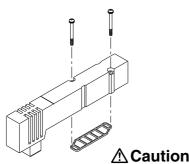

Series	Blanking plate assembly part no.
10-SV1000	SV1000-67-1A
10-SV2000	SV2000-67-1A
10-SV3000	SV3000-67-1A
10-SV4000	SV4000-67-1A

Mounting screw tightening torques M2: 0.15 N·m M3: 0.6 N·m M4: 1.4 N·m

#### ■Label for block disk

These labels are attached to manifolds in which SUP and EXH block disks have been installed, in order to identify the installed locations. (Three sheets each included.)

### SV1000 - 74 - 1A

Label for SUP block disk PP


Label for SUP/EXH block disk



Label for EXH

PP

When a block disk is concurrently ordered by specifying on the manifold specification sheet, etc., a label will be stuck on the position where block disk is mounted.

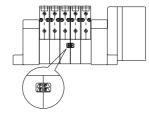

#### ■SUP/EXH block disk

#### [SUP block disk]

By placing a SUP block disk in a manifold valve's pressure supply passage, two different high and low pressures can be supplied to one

#### [EXH block disk]

By installing an EXH block disk in a manifold valve's exhaust passage, the valve's exhaust can be separated so that it will not affect other valves. It can also be used on a manifold with mixed positive pressure and vacuum. (Two pieces are required to block EXH on both sides. However, the 10-SV1000 and 2000 series type 10 manifolds require only one piece.)






Type 16, Cassette base

Type 10, Tie-rod base

Series	Manifold type	SUP block disk	EXH block disk
10-SV1000	10	SV1000-59-1A	SV1000-59-2A
10-57 1000	16	SX3000-77-1A	SX3000-77-1A
10-SV2000	10	SV2000-59-1A	SV2000-59-2A
10-572000	16	SV2000-59-3A	SV2000-59-3A
10-SV3000	10	SV3000-59-1A	SV3000-59-1A
10-SV4000	10	SY9000-57-1A	SY9000-57-1A

### ■Plug

These are inserted in unused cylinder ports and P, E ports.

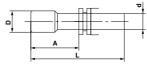


Applicable fitting size d	Model	Α	L	D
ø4	10-KQP-04	16	32	ø6
ø6	10-KQP-06	18	35	ø8
ø8	10-KQP-08	20.5	39	ø10
ø10	10-KQP-10	22	43	ø12
ø12	10-KQP-12	24	44.5	ø14
ø1/8"	10-KQP-01	16	31.5	ø5
ø5/32"	10-KQP-03	16	32	ø6
ø1/4"	10-KQP-07	18	35	ø8.5
ø5/16"	10-KQP-09	20.5	39	ø10
ø3/8"	10-KQP-11	22	43	ø11.5

### ■Circular connector / Cable assembly (26 pins) ■D-sub connector / Cable assembly (25 pins)

### **AXT100 – MC26** – □

Lead wire length

Part no.	L dimension
AXT100-MC26-015	1.5 m
AXT100-MC26-030	3 m
AXT100-MC26-050	5 m

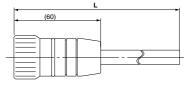

Plug terminal no. (Arrangement as seen from lead wire side)



#### Circular connector cable assembly Terminal no.

Terminal no.	Lead wire color	Dot marking			
1	Black	None			
2	Brown	None			
3	Red	None			
4	Orange	None			
5	Yellow	None			
6	Pink	None			
7	Blue	None			
8	Purple	White			
9	Gray	Black			
10	White	Black			
11	White	Red			
12	Yellow	Red			
13	Orange	Red			
14	Yellow	Black Black			
15	Pink				
16	Blue	White			
17	Purple	None			
18	Gray	None			
19	Orange	Black			
20	Red	White			
21	Brown	White			
22	Pink	Red			
23	Gray	Red			
24	Black	White			
25	White	None			


Note) Terminal no. 26 is connected to 25 inside the connector.

### AXT100 - DS25 - □

Lead wire length

Part no.	L dimension
AXT100-DS25-015	1.5 m
AXT100-DS25-030	3 m
AXT100-DS25-050	5 m

When a commercially available connector is required, use a 25 pin female connector conforming to MIL-C-24308.

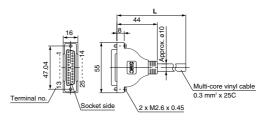

#### D-sub connector cable assembly Terminal no.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

#### Circular connector, D-sub connector cable assembly Electric characteristics


Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Withstand voltage VAC, 1 minute	1000
Insulation resistance MΩkm, 20°C	5 or less

Note) The minimum bending radius of each cable is 20 mm.

### ■Flat ribbon cable / Cable assembly

Cable length (L)	10 pins	20 pins	26 pins
1.5 m	AXT100-FC10-1	AXT100-FC20-1	AXT100-FC26-1
3 m	AXT100-FC10-2	AXT100-FC20-2	AXT100-FC26-2
5 m	AXT100-FC10-3	AXT100-FC20-3	AXT100-FC26-3
Connector width (W)	17.2	30	37.5

\* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

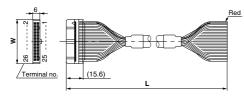

#### **Example of connector manufacturers**

- HIROSE ELECTRIC CO., LTD.
- Japan Aviation Electronics Industry, Limited
- 3M Japan Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited

# ■10-SV1000/2000 and EX500 series input unit DIN rail dimensions and weights

\* As for  $\square$ , enter the number from the DIN rail dimensions table.




No.	0	1	2	3	4	5	6	7	8	9
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5
Weight (g)	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9
No.	10	11	12	13	14	15	16	17	18	19
L dimension	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5
Weight (g)	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1	60.4
No.	20	21	22	23	24	25	26	27	28	29
L dimension	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5
Weight (g)	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9
No.	30	31	32	33	34	35	36	37	38	39
L dimension	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5
Weight (g)	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9	103.1	105.4
No.	40	41	42	43	44	45	46	47	48	49
L dimension	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5
Weight (g)	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9
No.	50	51	52	53	54	55	56	57	58	59
L dimension	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5
Weight (g)	130.1	132.4	134.6	136.9	139.1	141.4	143.6	145.9	148.1	150.4
No.	60	61	62	63	64	65	66	67	68	69
L dimension	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5
Weight (g)	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9
No.	70	71								
I diamenta	070	005.5	1							

No.	70	71
L dimension	973	985.5
Weight (g)	175.1	177.4


### ■10-SV3000/4000 DIN rail dimensions and weights

 $\ast$  As for  $\square,$  enter the number from the DIN rail dimensions table.

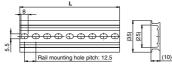


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	233.5	248	260.5	273	285.5	298	310.5	323	335.5	348
Weight (g)	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7	84.9	88
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
L dimension	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5
Weight (g)	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8	145	148.1	151.3	154.5
No.	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
L dimension	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873
Weight (g)	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9	205.1	208.2	211.4	214.5	217.7	220.9

INO.	63	64	65	66	67	68	69	70	/1
L dimension	885.5	898	910.5	923	935.5	948	960.5	973	985.5
Weight (g)	224	227.2	230.4	233.5	236.7	239.8	243	246.2	249.3

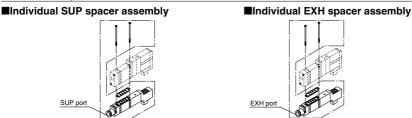

### How to order individual SUP/EXH spacer assembly

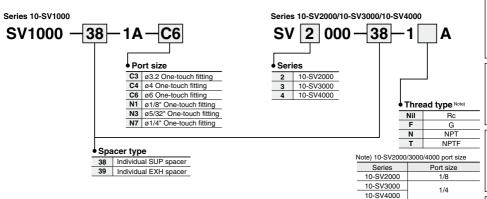


### Accessory

Series	Round head combination screw	Gasket	
10-SV1000	SX3000-22-9	SX3000-57-4	
10-57 1000	(M2 x 39.5)	SA3000-57-4	
10-SV2000	SV2000-21-6	SY5000-11-15	
10-3 7 2 0 0 0	(M3 x 46)	313000-11-13	
10-SV3000	SV3000-21-3	SY7000-11-11	
10-3 7 3000	(M4 x 53)	31/000-11-11	
10-SV4000	SV2000-21-5	SY9000-11-2	
10-374000	(M3 x 60)	318000-11-2	

# Series 10-SV1000/2000/3000/4000 Single Unit/Sub-plate Type [IP67 Compliant]

#### **How to Order**

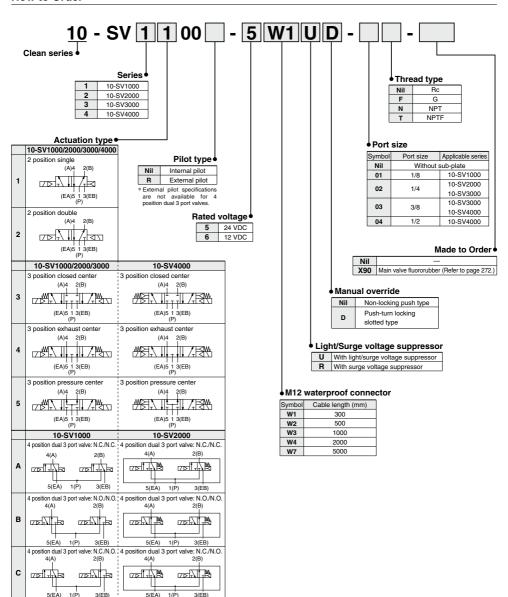

<sup>\* 10-</sup>SV3000 and 4000 are not available with 4 position dual 3 port valve

Air Cylinders

### 10-SV Series Solenoid Valve Specifications



Fluid			Air			
Internal pilot operating pressure		osition single osition dual 3 port valve	0.15 to 0.7			
range (MPa)	2 p	osition double	0.1 to 0.7			
(MPa)	3 p	osition	0.2 to 0.7			
External pilot	Op	erating pressure range	-100 kPa to 0.7			
operating pressure range (MPa)		osition single, double osition	0.25 to 0.7			
Ambient and fluid te	mpe	rature (°C)	-10 to 50 (No freezing. Refer to page 680.)			
Max. operating frequency		osition single, double osition dual 3 port valve	5			
(Hz)	3 p	osition	3			
Manual override			Non-locking push type			
Maridai Override			Push-turn locking slotted type			
Pilot exhaust metho	ч	Internal pilot	Main/Pilot valve common exhaust			
Filot exhaust metho	<u> </u>	External pilot	Pilot valve individual exhaust			
Lubrication			Not required			
Mounting orientation	ı		Unrestricted			
Impact/Vibration res	istaı	nce (m/s²)	150/30 (8.3 to 2000 Hz)			
Enclosure			IP67 (Based on IEC60529)			
Electrical entry			M12 waterproof connector			
Coil rated voltage			24 VDC, 12 VDC			
Allowable voltage flu	ıctu	ation	±10% of rated voltage			
Power consumption	(W)		0.6 (With light: 0.65)			
Surge voltage suppr	ess	or	Zener diode			
Indicator light			LED			
Note) Impact recistores: N	- ma	If westion against when it was t	sected with a dreat teater in the avial discretion and at righ			

Note) Impact resistance: No malfunction occurred when it was tested with a drop tester in the axial direction and at right angles to the main valve and armature in both energized and deenergized states once for each condition. (Default settings)


Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in both energized and de-energized states in the axial direction and at right angles to the main valve and armature. (Default settings)

#### Response Time

	icoponico innic										
ĺ	Astrotion tune	Respor	Response time (ms) (at the pressure of 0.5 MPa)								
	Actuation type	10-SV1000	10-SV2000	10-SV3000	10-SV4000						
	2 position single	11 or less	25 or less	28 or less	40 or less						
	2 position double	10 or less	17 or less	26 or less	40 or less						
	3 position	18 or less	29 or less	32 or less	82 or less						
	4 position dual 3 port valve	15 or less	33 or less	_	_						

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)

#### M12 Waterproof Connector Wiring Specifications

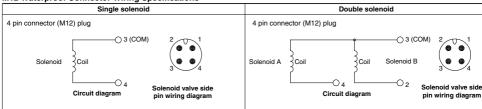

Note) Solenoid valves have no polarity.

#### Connection (Female Side) Connector Cable

As the parts are not supplied from SMC, refer to the application examples listed in the below. (For detail such as catalog availability, etc., please contact each manufacturer.)

	, , , , ,						
	Connector size	Number of pins	Manufacturer	Applicable series example			
Г			Correns Corporation	VA-4D			
			OMRON Corporation	XS2			
	M12	4	Azbil Corporation	PA5-41			
			HIROSE ELECTRIC CO., LTD.	HR24			
			DDK Ltd.	CM01-8DP4S			

<sup>\*</sup> This connector is a female connector for ① relay output module and ② single unit/sub-plate.



### Single Unit/Sub-plate Type 10-SV

### Flow Rate Characteristics/Weight

#### 10-SV1000

10-54 1000										
	Actuation type		Port size		Weight (g) Note 2)					
Valve model				$1 \rightarrow 4/2 \ (P \rightarrow A/B)$			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
				C[dm3/(s-bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv	(Cable length 300 mm)
	Onacition	Single		1.0	0.30	0.24	1.1	0.30	0.26	123 (88)
	2 position	Double		1.0	0.30	0.24	1.1			128 (93)
	3 position	Closed center	1/8	0.77	0.28	0.18	0.85	0.30	0.19	
10-SV1□00-□-01□		Exhaust center		0.73	0.31	0.18	1.1 [0.55]	0.26 [0.52]	0.24 [0.16]	130 (95)
		Pressure center		1.2 [0.51]	0.24 [0.45]	0.29 [0.14]	0.89	0.47	0.24	
	4 position dual	N.C./N.C.		0.68	0.35	0.18	1.1	0.39	0.29	
	4 position duai	N.O./N.O.		0.87	0.31	0.23	0.77	0.44	0.21	

Note 1) []: Denotes normal position. Note 2) (): Denotes without sub-plate.

#### 10-SV2000

	Actuation type		Port	Flow rate characteristics Note 1)						Weight (g) Note 2)
Valve model				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
				C[dm3/(s-bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv	(Cable length 300 mm)
	2 position	Single		2.4	0.41	0.64	2.8	0.29	0.66	159 (96)
	2 position	Double	1/4							163 (100)
	3 position	Closed center		1.8	0.47	0.50	1.8	0.40	0.47	
10-SV2□00-□-02□		Exhaust center		1.4	0.55	0.44	3.0 [1.2]	0.33 [0.48]	0.72 [0.37]	168 (105)
		Pressure center		3.3 [0.84]	0.36 [0.60]	0.85 [0.28]	1.8	0.40	0.48	
	4 position dual	N.C./N.C.		2.2	0.40	0.55	2.6	0.31	0.60	163 (100)
	4 position dual	N.O./N.O.		2.7	0.24	0.57	2.3	0.36	0.54	163 (100)

Note 1) []: Denotes normal position. Note 2) (): Denotes without sub-plate.

#### 10-SV3000

	Actuation type		Port	Flow rate characteristics Note 1)						Weight (g) Note 2)
Valve model				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
			size	C[dm3/(s-bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv	(Cable length 300 mm)
	Opposition	Single		4.1	0.41	1.1	4.1	0.29	1.0	250 (121)
	2 position	Double		4.1	0.41	1.1	4.1	0.23	1.0	253 (124)
10-SV3□00-□-02□	3 position	Closed center	1/4	3.0	0.43	0.80	2.6	0.41	0.72	
		Exhaust center		2.6	0.42	0.71	4.7 [1.7]	0.35 [0.48]	1.1 [0.49]	26 (132)
		Pressure center		5.3 [2.3]	0.39 [0.49]	1.3 [0.65]	2.2	0.49	0.63	
	2 position	Single		4.9	0.29	1.2	4.5	0.27	1.1	235
	2 position	Double		4.3	0.29	1.2	4.5	0.27	Cv 1.0 0.72 1.1 [0.49] 0.63 1.1	238
10-SV3□00-□-03□		Closed center	3/8	3.0	0.40	0.80	2.6	0.45	0.73	
	3 position	Exhaust center		2.6	0.42	0.71	4.8 [1.7]	0.35 [0.48]	1.1 [0.34]	246
		Pressure center		5.3 [2.3]	0.31 [0.51]	1.3 [0.64]	2.3	0.45	0.66	

Note 1) []: Denotes normal position. Note 2) (): Denotes without sub-plate.


#### 10-SV4000

	Actuation type		Port		Weight (g) Note 2)					
Valve model				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
				C[dm3/(s-bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv	(Cable length 300 mm)
	2 position	Single		7.9	0.34	2.0	9.6	0.43	2.5	505 (208)
	2 position	Double		7.9	0.54	2.0	9.0	0.43	2.5	509 (212)
10-SV4□00-□-03□	3 position	Closed center	3/8	7.5	0.33	1.8	7.3	0.30	1.7	530 (233)
		Exhaust center		7.2	0.34	1.7	13 [4.0]	0.23 [0.41]	2.8 [0.95]	
		Pressure center		12 [3.3]	0.26 [0.41]	2.8 [0.84]	6.7	0.40	1.9	
	Opposition	Single		8.0	0.48	2.2	10	0.29	2.5	484
	2 position	Double		6.0	0.40	2.2	10	0.29	2.5	488
10-SV4□00-□04□		Closed center	1/2	7.6	0.32	1.8	7.3	0.32	1.8	509
	3 position	Exhaust center		7.3	0.42	2.0	13 [4.7]	0.32 [0.54]	3.6 [1.5]	
		Pressure center		12 [3.3]	0.33 [0.51]	3.3 [0.94]	7.4	0.33	1.9	


Note 1) []: Denotes normal position. Note 2) (): Denotes without sub-plate.




# 2 position single/double, 4 position dual 3 port [M12 waterproof connector type] 10-SV1□00(R)-□W□□-01□

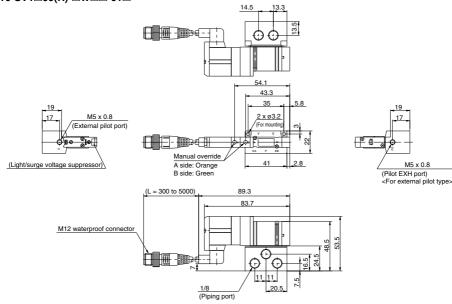


# 3 position closed center / exhaust center / pressure center [M12 waterproof connector type] 10-SV1□00(R)-□W□□-01□

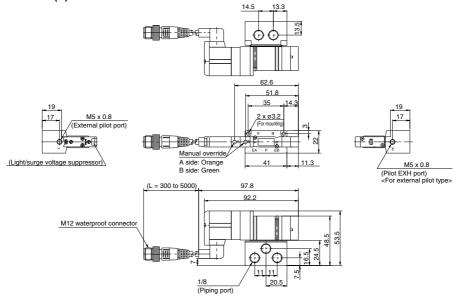


# 2 position single/double, 4 position dual 3 port [M12 waterproof connector type] 10-SV2\(\subseteq 00(R)\)-\(\subseteq \subseteq 02\)\(\subseteq \)

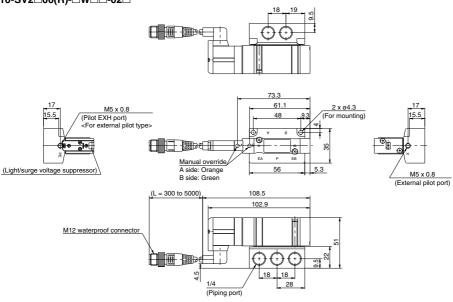


### 3 position closed center / exhaust center / pressure center [M12 waterproof connector type]

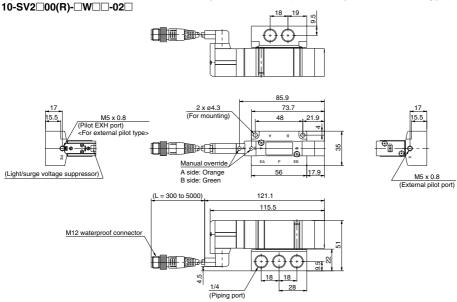


2 position single/double [M12 waterproof connector type]

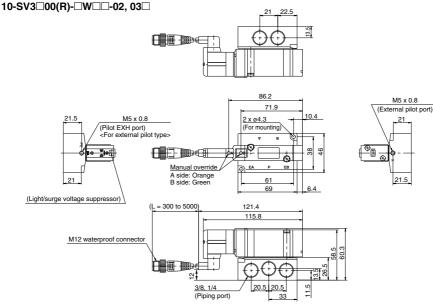


3 position closed center / exhaust center / pressure center [M12 waterproof connector type] 10-SV3□00(R)-□W□□-02, 03□

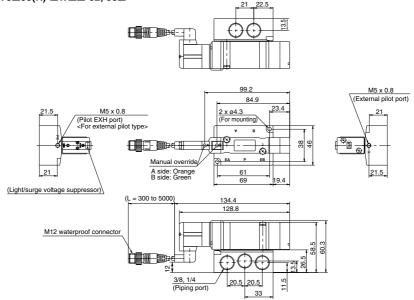

### 2 position single/double [M12 waterproof connector type]

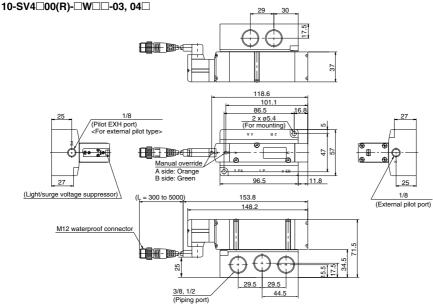

# 3 position closed center / exhaust center / pressure center [M12 waterproof connector type] 10-SV4□00(R)-□W□□-03, 04□

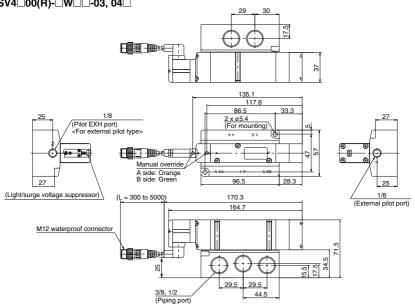

# Series 10-SV Made to Order


For detailed specifications, delivery and pricing, please contact SMC.



Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

- When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.
- 2. When ozone enters or is generated in the air supply.

#### Part no

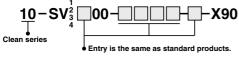

Note) Because in series -X90 fluororubber is used for only main valve, the rubber parts of the application/usage in conditions requiring heat resistance should be avoided.

### **⚠Specific Product Precautions 1**

Be sure to read this before handling.

### **⚠** Warning

### **Operating Environment**


- Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water, steam, or where there is direct contact with any of these.
- Products compliant with IP65 and IP67 enclosures (Based on IEC529) are protected against dust and water, however, these products cannot be used in water.
- Products compliant with IP65 and IP67 enclosures satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.

### 

### **Manual Override Operation**


Handle carefully, as connected equipment can be actuated through manual override operation.

### ■Non-locking push type

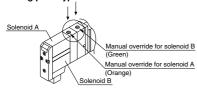

#### ■Push-turn locking slotted type

While pressing the lock down, turn it in the direction of the arrow. If it does not turn, it can be operated the same way as the non-locking type.

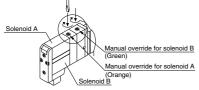

#### **⚠** Caution

When locking the manual override with the push-turn locking slotted type, be sure to push the lock down before turning it.

Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

### **⚠** Caution

### **Exhaust Throttle**

With the 10-SV series, pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when installing the piping.

### 

### Series 10-SV Used as a 3 Port Valve

#### When using a 5 port valve as a 3 port valve

The 10-SV series can be used as normally closed (N.C.) or normally open (N.O.) 3 port valves by closing one of the cylinder ports (A or B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3 port valve is required.

Plug	position	B port	A port				
Actuation		N.C.	N.O.				
solenoids	Single	(EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB)				
Number of	Double	(A)4 2(B) (EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB)				

### **⚠** Caution

### **Light/Surge Voltage Suppressor**

#### Solenoid valves have no polarity. Light/Surge voltage suppressor

Single solenoid



Double solenoid, 3 position type



#### Surge voltage suppressor

Single solenoid




#### Double solenoid, 3 position type



### **⚠** Caution

### Light Indication

When equipped with light and surge voltage suppressor, the light window turns orange when solenoid A is energized, and it turns green when solenoid B is energized.

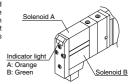

Rotary 1

Cylinde

### ▲Specific Product Precautions 2

Be sure to read this before handling.

### **∕∖∖** Caution


#### Valve Replacement, Adding/Removing Manifold Stations

Replacing solenoid valves and adding/removing manifold stations may cause external leakage. So, it is recommended to ask SMC for repair. When repair work is performed by the user, the user shall be responsible for the work since SMC cannot perform the inspection or check.

### ∕!∖ Caution

### **Connector Entry Directions**

Connector entry directions for D-sub connectors and flat ribbon cables can be changed. To change the connector's entry direction, press the levers on both sides of the connector, take it off, and change the direction as shown in the drawing. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

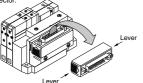

### 

# Manifold Mounting

There will be slight variations in the width of manifold blocks due to tolerance for the stacking manifold type.

As the manifold is made up of a combination of manifold blocks, there will be an error due to accumulated tolerance between the actual pitch dimensions of the mounting holes used to secure the manifold and the values stated in the catalog. Keep this in mind when increasing the number of stations.

#### Manifold Block Width Tolerance Chart


Series	Block width tolerance
SS5V1-(W)10□ series	±0.15 mm
SS5V2-(W)10□ series	±0.2 mm
SS5V3-(W)10□ series	±0.15 mm
SS5V4-(W)10□ series	±0.15 mm

### 

#### **How to Order Manifold**

The letter "S" or "D" is indicated on manifold blocks for the 10-SV series as shown below. This indication refers to the type of substrate assembly (single wiring or double wiring) inside the manifold blocks.

When the manifold specification sheet does not include wiring specifications, all stations will be double wiring specification (D). In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification (S) and double wiring specification (D) on the manifold specification sheet. (Note that double, 3 or 4 position valves cannot be used for manifolds blocks with single wiring specification (S).)

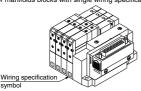

### 

#### Substrate Assemblies inside Manifolds

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

### **⚠** Caution

### **One-touch Fittings**

- 1. Tubing attachment/detachment for One-touch fittings
  - 1) Attaching tubing
  - (1) Take a tubing with no flaws on its periphery and cut it off at a right angle. When cutting the tubing, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, the tubing may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tubing coming out after installation or air leakage.
    - Allow some extra length in the tubing.
  - (2) Grasp the tubing, slowly push it straight (0 to 5°) into the One-touch fitting until it comes to a stop
  - (3) After inserting the tubing, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tubing coming out.

#### 2) Detaching tubing

- (1) Push in the release button sufficiently, pushing its collar equally around the circumference
- (2) Pull out the tubing while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tubing and it will become more difficult to pull it out.
- (3) When the removed tubing is to be used again, cut off the portion which had been secured before reusing it. If the some portion of the tubing is reused, this can cause trouble such as air leakage or difficulty in removing the tubing.

### 

#### Other Tubing Brands

- When using tubing other than SMC brand tubing, confirm that the following specifications are satisfied with respect to the outside diameter tolerance of the tubing.
  - 1) Nylon tubing within ±0.1 mm
  - 2) Soft nylon tubing within ±0.1 mm
  - 3) Polyurethane tubing within +0.15 mm

within -0.2 mm

Do not use tubing which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tubing coming out after connection.

### **∕** Caution

### Built-in Back Pressure Check Valve Type

- 1. Valves with built-in back pressure check valve are to protect the back pressure inside a valve. For this reason, use caution the valves with external pilot specifications cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. For details, please contact SMC.
- 2. Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. The back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.



### **<b>★Specific Product Precautions 3**

Be sure to read this before handling.

#### EX500/EX250/EX260/EX120

### **⚠** Warning

 These products are intended for use in general factory automation equipment.

Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.

- 2. Do not use in an explosive atmosphere, environment with inflammable gases, or corrosive atmosphere.
  - This can cause injury or fire, etc.
- Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by personnel with specialized knowledge.

There is a danger of electrocution, injury or fire, etc.

- Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.
- Do not remodel these products, as there is a danger of injury and damage.
- 6. Do not wipe the product with chemicals, etc.

### 

- Read the operation manual carefully, strictly observe the precautions and operate within the range of the specifications.
- 2. Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction, etc.
- 3. In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause malfunction, damage to the unit, electrocution or fire, etc.
- 4. Do not touch connector terminals or internal substrates when current is being supplied. There is a danger of malfunction, damage to the unit or electrocution if connector terminals or internal substrates are touched when current is being supplied.
  - Be sure that the power supply is OFF when adding or removing manifold valves or input blocks, etc., or when connecting or disconnecting connectors.
- 5. Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.
- Keep wire scraps and other extraneous material from getting inside these products. This can cause fire, failure or malfunction, etc.
- 7. Give consideration to the operating environment depending on the type of enclosure being used.

To achieve IP65 or IP67 protection, provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of input units, input blocks, SI units and manifold valves, etc. Provide a cover or other protection for applications in which there is constant exposure to water.

8. Obey the proper tightening torque.

There is a possibility of damaging threads if tightening exceeds the tightening torque range.

- Provide adequate protection when operating in locations such as the following:
  - · Where noise is generated by static electricity, etc.
  - · Where there is a strong electric field
  - · Where there is a danger of exposure to radiation
  - . When in close proximity to power supply lines

### 

- When these products are installed in equipment, provide adequate protection against noise by using noise filters, etc.
- 11. Since these products are components that are used after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.
- 12. Do not remove the name plate.
- 13. Perform periodic inspections and confirm normal operation. It may otherwise be impossible to guarantee safety due to unexpected malfunction or erroneous operation.
- Do not use in places where there are cyclic temperature changes.
  - In case that the cyclic temperature is beyond normal temperature changes, the inside the product is likely to be adversely affected.
- 15. Do not use in direct sunlight.
  - Do not use in direct sunlight. It may cause malfunction or damage.
- 16. Do not use in places where there is radiated heat around it. Such a place is likely to cause malfunction.

#### Safety Instructions for Power Supply

### 

- Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for input and control units).
- 2. Use the following UL approved products for DC power supply combinations.
  - Controlled voltage current circuit conforming to UL508
     Circuit uses the secondary coil of an isolated transformer as the power supply, satisfying the following conditions.
    - Max. voltage (with no load): 30 Vrms (42.4 V peak) or less
    - Max. current: (1) 8 A or less (including shorts), and
      - (2) When controlled by a circuit protector (fuse, etc.) with the following rating

No-load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Over 00 IVI to 20 IVI	100
Over 20 [V] to 30 [V]	Peak voltage value

2) A circuit (class 2 circuit) with maximum 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit confirming to UL1310, or a class 2 transformer confirming to UL1585

### Safety Instructions for Cable

### **⚠** Caution

- Be careful of miswiring. This can cause malfunction, damage and fire in the unit.
- 2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high voltage lines. Otherwise, this can cause malfunction.
- Check wiring insulation, as defective insulation can cause damage to the unit due to excessive voltage or current.
- 4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.

Cylinde

Rotary

### **▲Specific Product Precautions 4**

Be sure to read this before handling.

#### EX600

### Design/Selection

### **⚠** Warning

1. Use this product within the specification range.

Using beyond the specified range can cause fire, malfunction, or damage to the system.


Confirm the specifications when operating.

- 2. When using for an interlock circuit:
  - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
  - Perform an inspection to check that it is working properly.

This may cause possible injury due to malfunction.

### 

- When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.
- Use this product within the specified voltage range.
   Using beyond the specified voltage range is likely to cause the units and connecting devices to be damaged or to malfunction.
- The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.

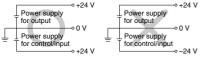

 Do not install a unit in a place where it can be used as a foothold.

Applying any excessive load such as stepping on the unit by mistake or placing a foot on it, will cause it to break.

- Keep the surrounding space free for maintenance.
   When designing a system, take into consideration the amount of free space needed for performing maintenance.
- 6. Do not remove the name plate.

Improper maintenance or incorrect use of operation manual can cause failure and malfunction. Also, there is a risk of losing conformity with safety standards.

7. Beware of inrush current when the power supply is turned on.

Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the unit to malfunction.

### Mounting

### **⚠** Caution

- 1. When handling and assembling units:
  - Do not touch the sharp metal parts of the connector or plug.
  - Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with seals.

- When joining units, take care not to get fingers caught between units.

  Injury can result.
- 2. Do not drop, bump, or apply excessive impact.

Otherwise, the unit can become damaged, malfunction, or fail to function.

3. Observe the tightening torque range.

Tightening outside of the allowable torque range will likely damage the screw.

IP67 cannot be guaranteed if the screws are not tightened to the specified torque.

When lifting a large size manifold solenoid valve unit, take care to avoid causing stress to the valve connection joint.

Connection joint.

The connection parts of the unit may be damaged.

Because the unit may be heavy, carrying and installation should be performed by more than one operator to avoid

strain or injury.

5. When placing a manifold, mount it on a flat surface.

Torsion in the whole manifold can lead to trouble such as air leakage or defective insulation.

#### Wiring

### **⚠** Caution

 Confirm grounding to maintain the safety of the reduced wiring system and for anti-noise performance.

Provide a specific grounding as close to the unit as possible to minimize the distance to grounding.

2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.

Wiring applying repeated bending and tensile stress to the cable can break the circuit.

3. Avoid miswiring.

If miswired, there is a danger of malfunction or damage to the reduced wiring system.

4. Do not wire while energizing the product.

There is a danger of malfunction or damage to the reduced wiring system or input/output equipment.

Avoid wiring the power line and high pressure line in parallel.

Noise or surge produced by signal line resulting from the power line or high pressure line could cause malfunction. Wiring of the reduced wiring system or input/output device and the power line or high pressure line should be separated from each other.

### **▲ Specific Product Precautions 5**

Be sure to read this before handling.

#### **EX600**

#### Wiring

### **⚠** Caution

6. Confirm the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.

When a reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause malfunction.

8. When connecting wires of input/output device or Handheld Terminal, prevent water, solvent or oil from entering inside from the connecter section. This can cause damage, equipment failure or malfunction.

Avoid wiring patterns in which excessive stress is applied to the connector.

This may cause malfunction or damage to the unit due to contact failure.

### Operating Environment

### **⚠** Warning

Do not use in an atmosphere containing an inflammable gas or explosive gas.

Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

### **∧** Caution

1. Select the proper type of enclosure according to the environment of operation.

IP65/67 is achieved when the following conditions are met.

- Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Suitable mounting of each unit and manifold valve.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to EX600-D□□E or EX600-D□□F, manifold enclosure is IP40.

Also, the Handheld Terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Provide adequate protection when operating in locations such as the following.

Failure to do so may cause damage or malfunction.
The effect of countermeasures should be checked in individual equipment and machine.

- 1) Where noise is generated by static electricity, etc.
- 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation
- 4) When in close proximity to power supply lines

#### Operating Environment

### **⚠** Caution

Do not use in an environment where oil and chemicals are used.

Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the unit even in a short period of time.

4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.

This may damage the unit and cause it to malfunction.

Do not use in locations with sources of surge generation.

Installation of the unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.

Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.

When a surge generating load is directly driven, the unit may be damaged.

- 7. The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.
- 8. Keep dust, wire scraps and other extraneous material from getting inside the product.

This may cause malfunction or damage.

9. Mount the unit in such locations, where no vibration or shock is affected.

This may cause malfunction or damage.

 Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the internal unit is likely to be adversely effected.

11. Do not use in direct sunlight.

Do not use in direct sunlight. It may cause malfunction or damage.

12. Use this product within the specified ambient temperature range.

This may cause malfunction.

13. Do not use in places where there is radiated heat around it.

Such a place is likely to cause malfunction.

#### Adjustment/Operation

### **⚠** Warning

Do not perform operation or setting with wet hands.
 There is a risk of electrical shock.

Rotary

### **▲Specific Product Precautions 6**

Be sure to read this before handling.

#### **EX600**

#### Adjustment/Operation

### **⚠** Warning

<Handheld Terminal>

2. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

3. The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

Otherwise, injury or equipment damage could result.

4. Incorrect setting of parameters can cause malfunction. Be sure to check the settings before use. This may cause injury or equipment damage.

### **∖Caution**

1. Use a watchmaker's screwdriver with thin blade for the setting of each switch of the SI Unit. When setting the switch, do not touch other unrelated parts.

This may cause parts damage or malfunction due to a short circuit.

2. Provide adequate setting for the operating conditions. Failure to do so could result in malfunction.

Refer to the operation manual for setting of the switches.

3. For the details of programming and address setting, refer to the manual from the PLC manufacturer.

The content of programming related to protocol is designed by the manufacturer of the PLC used.

#### <Handheld Terminal>


4. Do not press the setting buttons with a sharp pointed object.

This may cause damage or malfunction.

5. Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI Unit, the valve plate to connect the manifold and SI Unit is not mounted. Use attached valve holding screws and mount the valve plate. (Tightening torque: 0.6 to 0.7 N·m)

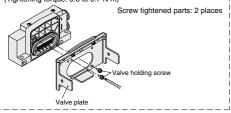

#### Maintenance

### **⚠** Warning

1. Do not disassemble, modify (including circuit board replacement) or repair this product.

Such actions are likely to cause injuries or breakage.

- 2. When an inspection is performed,
  - · Turn off the power supply.
- . Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.

Unexpected malfunction of system components and injury can result.

### **⚠** Caution

- 1. When handling and replacing the unit:
  - . Do not touch the sharp metal parts of the connector or plug.
  - · Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with

· When joining units, take care not to get fingers caught between units.

Injury can result.

2. Perform periodic inspection.

Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

3. After maintenance, make sure to perform an appropriate functionality inspection.

In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.

4. Do not use benzene and thinner for cleaning units.

Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.

If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

#### Other

### **∕** Caution

Refer to the catalog of each series for Common Precautions and Specific Product Precautions on manifold solenoid valves.

■ Trademark

DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA. CompoNet™ is a trademark of ODVA. EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

