

# Low Friction Cylinders

## Metal Seal Type

**ø30, ø40 newly added**



### Compact Low Friction Cylinder Series *MQQ*

Series	Bore size (mm)	Operating pressure range (MPa)	Actuation speed (mm/s)
<b>MQQT</b> Standard type	10	0.005 to 0.5	0.3 to 300
	16		
	20		
<b>MQQL</b> Lateral load resisting type (Built-in ball bushing)	25	0.005 to 0.7	0.5 to 500
	30		
	40		



### Lateral Load Resisting Low Friction Cylinder Series *MQM*

Series	Bore size (mm)	Operating pressure range (MPa)	Actuation speed (mm/s)
<b>MQML</b> Standard type	6 (Standard only)	ø6: 0.02 to 0.7 ø10 to ø25: 0.005 to 0.7	0.5 to 1000
	10		
	16		
<b>MQML</b> □ □ H High speed/frequency	20	0.01 to 0.7	5 to 3000
	25		

**NEW**



### Low Friction Cylinder (Single Acting) Series *MQP*

Series	Bore size (mm)	Operating pressure range (MPa)	Thrust control standard (N)
<b>MQP</b>	ø4	0.001 to 0.7 (Except for moving parts weight)	0.01 to 8
	ø6		0.03 to 19
	ø10		0.08 to 50
	ø16		0.20 to 140
	ø20		0.30 to 200

## Low breakaway pressure

Minimal sliding resistance allows low pressure actuation at 0.005 MPa.

\* Contact SMC regarding vacuum applications.

# Low Friction Cylinders

## Series MQQ

## Series MQM

Metal seal structure with low sliding speeds and output control, which

## Long service life


Long service life of 10,000 km or 100 million full cycles.

## Low & Uniform speed actuation

Smooth, uniform speed actuation ranges as low as 0.3 mm/s.

Rod: Carbon steel (chrome plated)  
(Metal seal)

Sleeve: Special stainless steel  
(Metal seal)

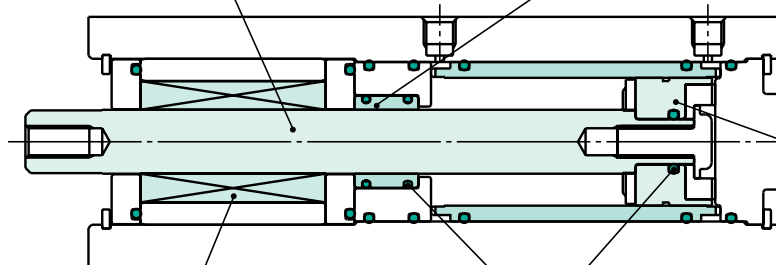

Piston: Special stainless steel  
(Metal seal)

Lateral load resistance increased by built-in ball bushing

\* MQQT type made of fluororesin.

Patented floating mechanism facilitates stable operating resistance without galling due to shaft slippage.

## Low friction

Low sliding resistance and high stability allow force control as low as 0.05 N.

(Based on cylinder Piston area x Pressure accuracy)

No increased sliding resistance after periods of non-operation.


## Lateral load resistance

Lateral load resistance is increased by built-in ball bushing.  
(MQQL/MQML)

## Series Variations

### Series MQQ

Compact low friction cylinders designed for low pressure, low speed, uniform speed or low friction applications

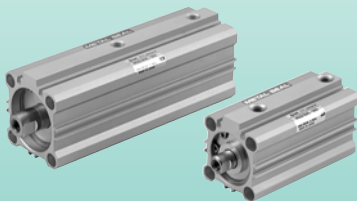

Series	Bore size (mm)	Stroke (mm)								Operating pressure range (MPa)	Actuation speed (mm/s)
		10	20	30	40	50	60	75	100		
MQQT Standard type	10	●	●	●	●					0.005 to 0.5	0.3 to 300
	16	●	●	●	●	●	●				
	20	●	●	●	●	●	●				
MQQL Lateral load resisting type (Built-in ball bushing)	25	●	●	●	●	●	●		●	0.005 to 0.7	0.5 to 500
	30	●	●	●	●	●	●		●		
	40	●	●	●	●	●	●		●		

### Series MQM

Lateral load resisting low friction cylinders for low pressure, low speed, uniform speed, low friction high pressure, high speed and high speed response (high frequency) actuation



Series	Bore size (mm)	Stroke (mm)						Operating pressure range (MPa)	Actuation speed (mm/s)
		15	30	45	60	75	100		
MQML Standard type	6 (standard only)	●	●	●	●			ø6: 0.02 to 0.7 ø10 to ø25: 0.005 to 0.7	0.5 to 1000
	10	●	●	●	●	●	●		
	16	●	●	●	●	●	●		
MQML□□H High speed/frequency	20	●	●	●	●	●	●	0.01 to 0.7	5 to 3000
	25	●	●	●	●	●	●		

# (Metal Seal Type)


/  $\phi 10, \phi 16, \phi 20, \phi 25, \phi 30, \phi 40$

/  $\phi 6, \phi 10, \phi 16, \phi 20, \phi 25$

## Application Examples

For pressure control with fine pressure variations


Applicable models: **MQQT/MQML**

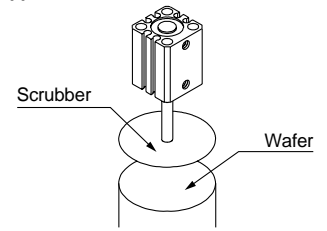

Polishing wafers

For cutting glasses and lenses, requiring constant force


Applicable models: **MQQL/MQML**

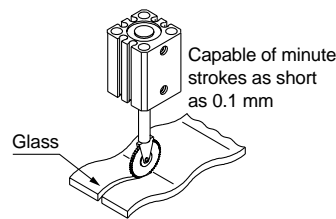

Cutting wavy surfaces

For tension control responding to very low pressure and minute pressure variations

Applicable models: **MQQL/MQML**

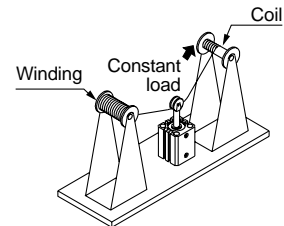


Coil winding

## High speed, High frequency actuation

H type achieves speeds up to 3,000 mm/s (without fixed orifice), and continuous actuation up to 50 cps. (MQML□□H)

For transferring precision components, etc., that require low or uniform speed actuation


Applicable models: **MQQT/MQML**

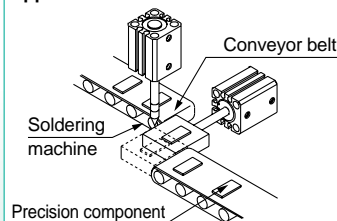

Transferring precision components

For eliminating non-conforming articles requiring high speed actuation


Applicable models: **MQML/MQML□□H**

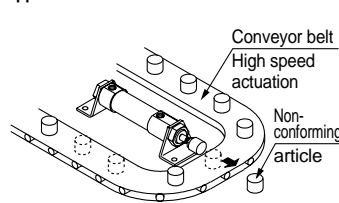

Eliminating non-conforming articles

For punching operations requiring high frequency actuation


Applicable models: **MQML/MQML□□H**

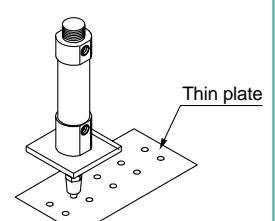

Punching


## Recommended Circuit Examples

Example 1) Uniform & low speed actuation (no control of cylinder output)

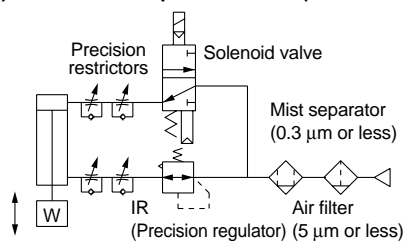


\* When using a solenoid valve, use a metal seal type (Series VQ, VQZ, SQ, etc.).

Example 3) High speed & high frequency actuation

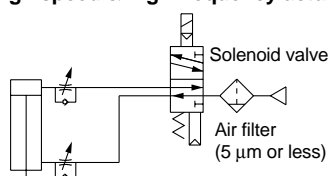

\* When using a solenoid valve, use a metal seal type (Series VQ, VQZ, SQ, etc.).

Example 2) Low speed with output control

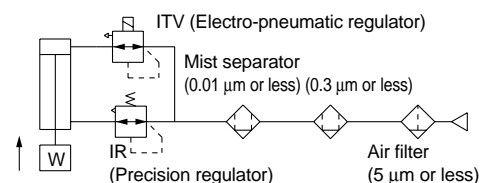

\* When performing control of cylinder output, do not create a restriction circuit using a speed controller, etc. Pressure inside the cylinder will drop and control will become impossible. Always control actuation by means of pressure control.

Applications based on low friction specification

- 1) Operating resistance will vary with an offset load. Be sure to properly align the rod axis with the load and direction of movement when connecting. When an offset load is expected, provide a suitable mechanism such as a floating joint.
- 2) Use clean air (atmospheric pressure dew point temperature -10°C or less). Using Series AM mist separator (filtration rating of 0.3 μm or less), or Series AM + AMD (filtration rating of 0.01 μm or less) is recommended.

# Low Friction Cylinder Series MQP



Fully covers a pressure force



## No lurching

Even extremely small degree lurching such as 0.01 mm does not occur. In addition, special air supply to a bearing for fluid is unnecessary.

## No piston

Sliding resistance is drastically decreased because the piston and the rod share the same shaft.

## Special single acting/Piston retraction by external force

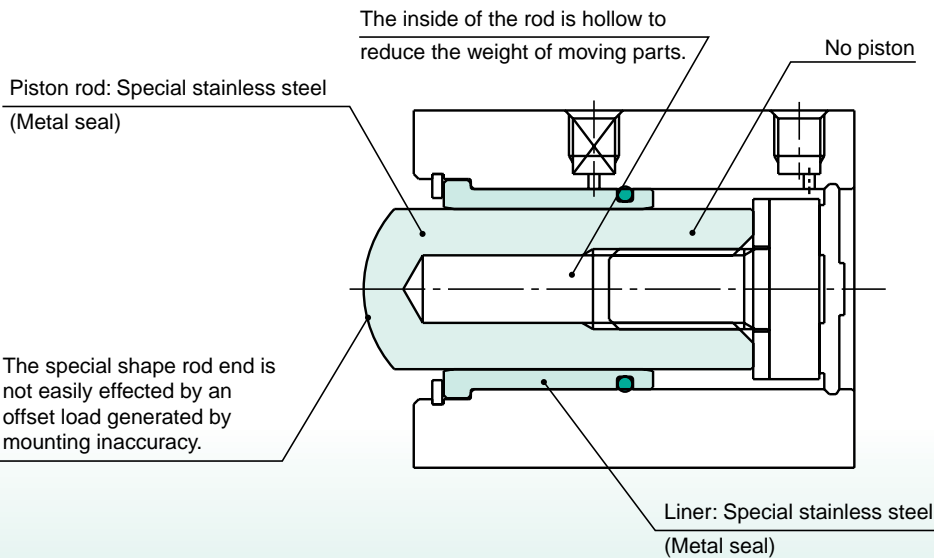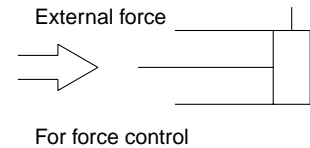

## Decreases dispersion of thrust

Dispersion of piston diameter: 3  $\mu\text{m}$  or less  
Readjusting thrust is not necessary when the cylinder is replaced.  
Dispersion of thrust does not occur even more than one cylinder is connected to the same circuit, either. (Depends on the operation environment.)

## Low friction and soft-touching

Possible to control the output in increments of 0.01 N. (Depends on the piston area of a cylinder x pressure accuracy)  
In addition, sliding resistance does not change after periods of non-operation.

## Highly accurate control of linear movement

Delicate and precise linear movement control is possible.

### Series MQP

Low friction cylinder suitable for low friction, force control.

Bore size [mm] (Pressure receiving diameter)	Stroke [mm]	Operating pressure range [MPa]	Weight of moving parts [g]	Thrust control standard [N]
$\varnothing 4$	10	0.001 to 0.7 (Except for moving parts weight)	4	0.01 to 8
$\varnothing 6$			8	0.03 to 19
$\varnothing 10$			24	0.08 to 50
$\varnothing 16$			62	0.20 to 140
$\varnothing 20$			103	0.30 to 200


# (Metal Seal Type/Single Acting)

/ø4, ø6, ø10, ø16, ø20


control range of 0.01 N to 200 N

## Application Examples/For force control responding to a slight pressure fluctuation

### Application examples for a single acting model

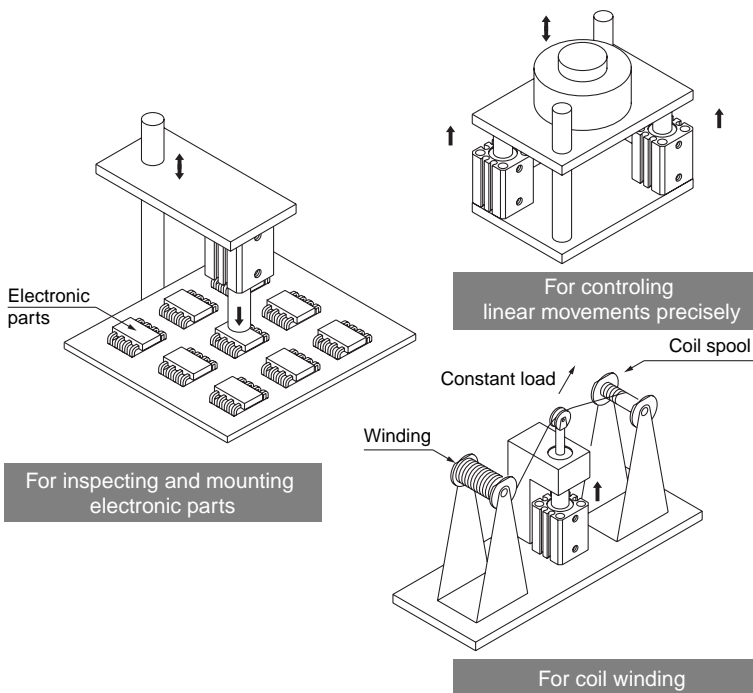


### Application example for a double acting model

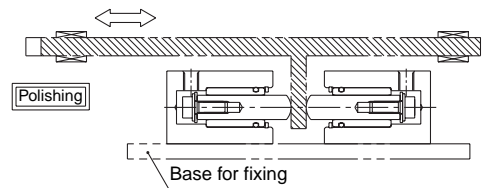

Two MQP cylinders applying pressure can improve the thrusting accuracy of a MQQ and a MQM double acting metal cylinder. In addition, equal strength of both extension and retracting thrust can be acquired simultaneously.


## Recommended Circuit Examples

### Example 1) Normal operation

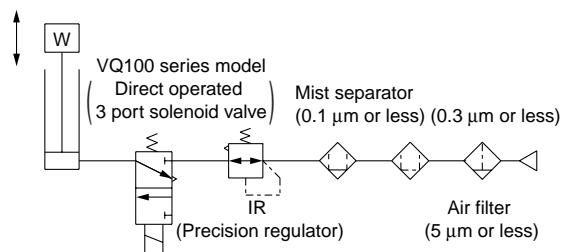

- 1) SMC recommends the VQ100 series if a solenoid valve is required because the lubricant in the main valve will not flow out.
- 2) Do not use a speed controller in the circuit. If it is used, accurate thrust control may be impossible because the internal pressure of the cylinder will drop. Please use pressure control for control operations without fail.

### Example 2) Soft-touch operation

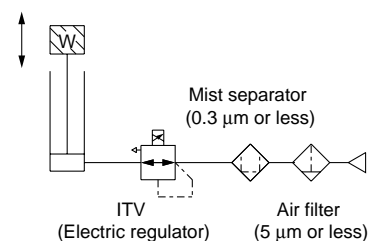

### Made-to-order

- Vacuum retraction cylinder
- Single acting, spring return type (Built-in springs)
- No exterior leakage (For clean rooms)
- Tubing with a maximum of ø40 (I.D.) is available.

Metal Seal

# Compact Low Friction Cylinder

## Series **MQQ**

ø10, ø16, ø20, ø25, ø30, ø40

### How to Order

**MQQ T B 10 10 D**

**Compact low friction specification**

Type	T	Standard type
L	Lateral load resisting type (Built-in ball bushing)	

**Mounting**

B	Through hole & Double end tapped (Standard)
L	Foot type
F	Front flange type
G	Rear flange type
D <sup>Note)</sup>	Double clevis type

Note) Available only for MQQL□.

\* Mounting brackets are included when shipped, but are not assembled.

**Bore size**

10	10 mm
16	16 mm
20	20 mm
25	25 mm
30	30 mm
40	40 mm

**Body option**

-	Standard (Rod end female thread)
M <sup>Note)</sup>	Rod end male thread

Note) A rod end thread adapter is attached.  
\* A rod end thread adapter is assembled before shipping.

**Action**

D	Double acting
---	---------------

**Cylinder stroke**

Bore size (mm)	Standard stroke (mm)
10	10, 20, 30, 40
16	10, 20, 30, 40, 50, 60
20	10, 20, 30, 40, 50, 60
25	10, 20, 30, 40, 50, 75, 100
30	10, 20, 30, 40, 50, 75, 100
40	10, 20, 30, 40, 50, 75, 100

\* Strokes are available in 1 mm increments by installing spacers in standard stroke cylinders.

**Port thread type**

-	M thread	ø10 to ø20
	Rc	
TN	NPT	ø25 to ø40
TF	G	

\* Series MQQ is not auto switch capable.

### Mounting Bracket Part No.

Bore size (mm)	Foot <sup>Note 1)</sup>	Flange	Double clevis	Rod end thread adapter (with nut)
10	CQS-L016	CQS-F016	CQS-D016	MQ10-M
16	CQS-L020	CQS-F020	CQS-D020	MQ16-M
20	CQS-L025	CQS-F025	CQS-D025	MQ20-M
25	MQ-L032	MQ-F032	MQ-D032	MQ25-M
30	MQ-L040	MQ-F040	MQ-D040	MQ28-M
40	CQ-L050	CQ-F050	MQ-D050	

Note 1) When ordering foot brackets, order 2 pcs. for each cylinder.

Note 2) The following parts are included with the respective brackets.

Foot, Flange ..... Body mounting bolts

Double clevis ..... Clevis pin, C type snap ring for shaft, Body mounting bolts



### Specifications: Standard Type/MQQT



Bore size (mm)		10	16	20	25	30	40
<b>Seal construction</b>		Metal seal					
<b>Action</b>		Double acting, Single rod					
<b>Fluid</b>		Air					
<b>Proof pressure</b>		1.05 MPa					
<b>Maximum operating pressure</b>		0.5 MPa					
<b>Minimum operating pressure</b> <sup>Note 1)</sup>		0.005 MPa					
<b>Ambient and fluid temperature</b>		-10 to 80°C					
<b>Cushion</b>		Rubber bumper (Provided as standard)					
<b>Lubrication</b> <sup>Note 2)</sup>		Not required (Non-lube)					
<b>Rod end thread</b>		Female thread					
<b>Rod end thread tolerance</b>		JIS class 2					
<b>Stroke length tolerance</b>		+1.0 0					
<b>Piston speed</b> <sup>Note 3)</sup>		0.3 to 300 mm/s (Refer to page 19.)					
<b>Total allowable leakage</b>	Supply pressure 0.1 MPa	150 cm <sup>3</sup> /min or less	200 cm <sup>3</sup> /min or less	300 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less
	Supply pressure 0.3 MPa	800 cm <sup>3</sup> /min or less	1000 cm <sup>3</sup> /min or less	1200 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less
	Supply pressure 0.5 MPa	1500 cm <sup>3</sup> /min or less	2000 cm <sup>3</sup> /min or less	3000 cm <sup>3</sup> /min or less	3000 cm <sup>3</sup> /min or less	4000 cm <sup>3</sup> /min or less	4000 cm <sup>3</sup> /min or less


Note 1) Value when horizontal. (Use clean, dry, and nonfreezing air) However, as the stroke increases, it will likely be affected by the weight of the moving parts and the pressure will likely increase by approx. 0.003 to 0.005 MPa. This is due to an offset load from the weight of the rod.

Note 2) Refer to precautions on page 18 regarding lubrication.

Note 3) Control low speed actuation with differential pressure and a speed controller, etc. (Refer to recommended circuit examples for further details.)

**Symbol**

Double acting, Single rod



### Specifications: Lateral Load Resisting Type/MQQL

Bore size (mm)		10	16	20	25	30	40
<b>Seal construction</b>		Metal seal					
<b>Action</b>		Double acting, Single rod					
<b>Fluid</b>		Air					
<b>Proof pressure</b>		1.05 MPa					
<b>Maximum operating pressure</b>		0.7 MPa					
<b>Minimum operating pressure</b> <sup>Note 1)</sup>		0.005 MPa					
<b>Ambient and fluid temperature</b>		-10 to 80°C					
<b>Cushion</b>		Rubber bumper (Provided as standard)					
<b>Lubrication</b> <sup>Note 2)</sup>		Not required (Non-lube)					
<b>Rod end thread</b>		Female thread					
<b>Rod end thread tolerance</b>		JIS class 2					
<b>Stroke length tolerance</b>		+1.0 0					
<b>Piston speed</b> <sup>Note 3)</sup>		0.5 to 500 mm/s (Refer to page 19.)					
<b>Total allowable leakage</b>	Supply pressure 0.1 MPa	150 cm <sup>3</sup> /min or less	200 cm <sup>3</sup> /min or less	300 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less	400 cm <sup>3</sup> /min or less
	Supply pressure 0.3 MPa	800 cm <sup>3</sup> /min or less	1000 cm <sup>3</sup> /min or less	1200 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less	1600 cm <sup>3</sup> /min or less
	Supply pressure 0.5 MPa	1500 cm <sup>3</sup> /min or less	2000 cm <sup>3</sup> /min or less	3000 cm <sup>3</sup> /min or less	3000 cm <sup>3</sup> /min or less	4000 cm <sup>3</sup> /min or less	4000 cm <sup>3</sup> /min or less

Note 1) Value when horizontal. (Use clean, dry, and nonfreezing air) However, as the stroke increases, it will likely be affected by the weight of the moving parts and the pressure will likely increase by approx. 0.003 to 0.005 MPa. This is due to an offset load from the weight of the rod.

Note 2) Refer to precautions on page 18 regarding lubrication.

Note 3) Control low speed actuation with differential pressure and a speed controller, etc. (Refer to recommended circuit examples for further details.)

### Weight: Standard Type/MQQT

Unit: g

Bore size (mm)	Cylinder stroke (mm)							
	10	20	30	40	50	60	75	100
10	94	118	142	166	—	—	—	—
16	166	206	246	286	326	366	—	—
20	228	290	352	414	476	538	—	—
25	395	487	579	671	763	—	993	1223
30	479	567	655	743	831	—	1052	1272
40	728	846	964	1082	1200	—	1495	1790

### Weight: Lateral Load Resisting Type/MQQL (Built-in Ball Bushing)

Unit: g

Bore size (mm)	Cylinder stroke (mm)							
	10	20	30	40	50	60	75	100
10	148	172	196	220	—	—	—	—
16	284	324	364	404	444	484	—	—
20	383	445	507	569	631	693	—	—
25	552	644	736	828	920	—	1150	1380
30	911	999	1087	1175	1263	—	1485	1705
40	1337	1455	1573	1691	1809	—	2104	2399

### Theoretical Output


Unit: N

Bore size (mm)	Rod size (mm)	Direction	Piston area (mm <sup>2</sup> )	Operating pressure (MPa)						
				0.1	0.2	0.3	0.4	0.5	0.6	0.7
10	6	IN	50.3	5.0	10.1	15.1	20.1	25.2	30.2	35.2
		OUT	78.5	7.9	15.7	23.6	31.4	39.3	47.1	55.0
16	8	IN	145.8	14.9	29.2	43.7	58.3	72.9	87.5	102.1
		OUT	196.1	19.6	39.2	58.9	78.4	98.1	117.7	137.3
20	10	IN	235.6	23.6	47.1	70.7	94.2	117.8	141.4	164.9
		OUT	314.2	31.4	62.8	94.3	125.7	157.1	188.5	219.9
25	12	IN	377.8	37.8	75.6	113.3	151.1	188.9	226.7	262.5
		OUT	490.9	49.1	98.2	147.3	196.4	245.5	294.5	343.6
30	16	IN	505.8	50.6	101.2	151.8	202.4	253.0	303.6	354.2
		OUT	706.9	70.7	141.4	212.1	282.8	353.5	424.2	494.9
40	16	IN	1055.6	105.6	211.2	316.8	422.4	528.0	633.6	739.2
		OUT	1256.6	125.7	251.4	377.1	502.8	628.5	754.2	879.9


# Series MQQ

## Construction

### Standard type: MQQT

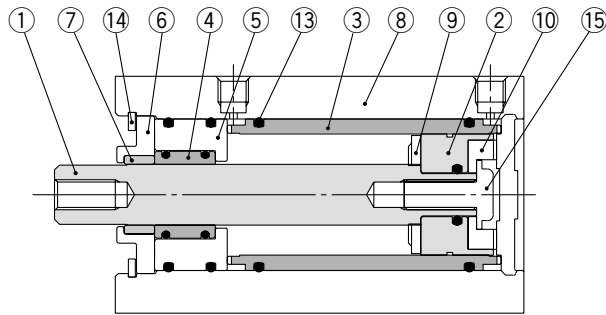

### Lateral load resisting type: MQQL (Built-in ball bushing)

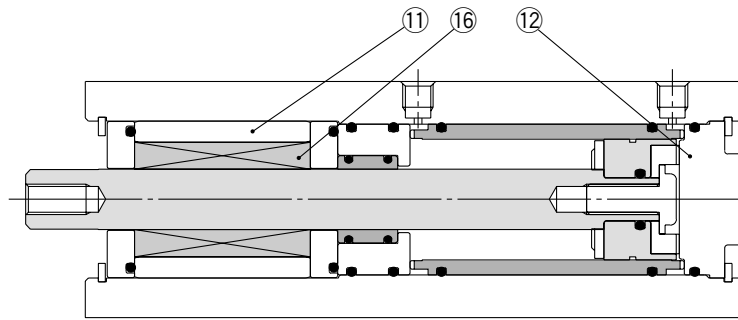

### Component Parts


No.	Description	Material	Note
1	Rod	Carbon steel	Hard chrome plated
2	Piston	Special stainless steel	
3	Liner	Special stainless steel	
4	Sleeve	Special stainless steel	
5	Sleeve retainer	Aluminum alloy	
6	Plate	Aluminum alloy	Hard anodized
7	Guide	Fluororesin	
8	Cylinder tube	Aluminum alloy	Hard anodized
9	Bumper A	Polyurethane	
10	Bumper B	Polyurethane	
11	Bushing	Aluminum alloy	
12	Bottom plate	Aluminum alloy	Hard anodized
13	O-ring	NBR	
14	Retaining ring	Carbon tool steel	Nickel plated
15	Bolt	Carbon tool steel	Nickel plated
16	Ball bushing		



## Mounting


### Mounting bolts

a) **A type mounting** (when using the mounting plate threads)

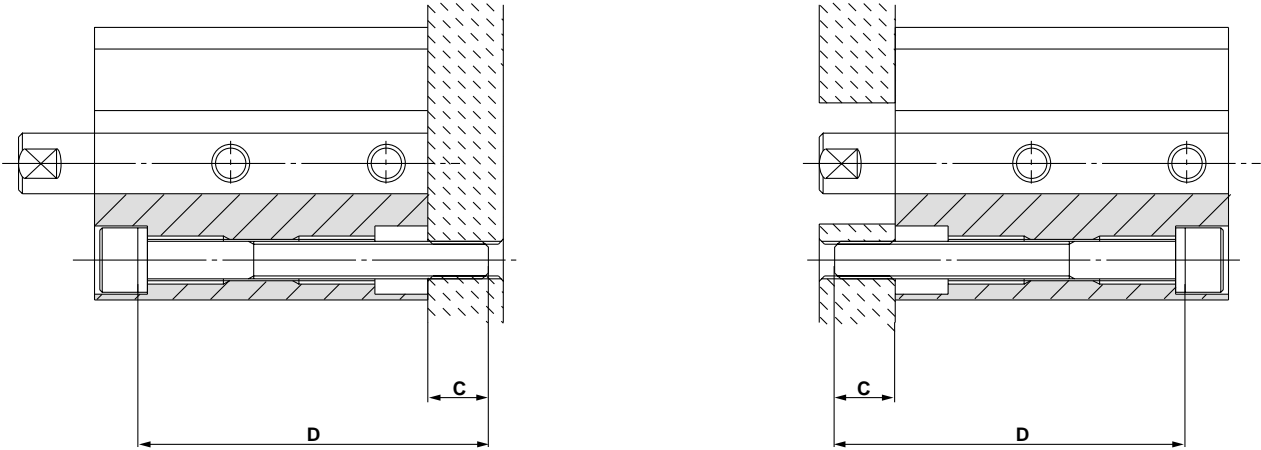

Note) Be sure to use a flat washer for the A type mounting.

b) **B type mounting** (when using the cylinder tube threads)

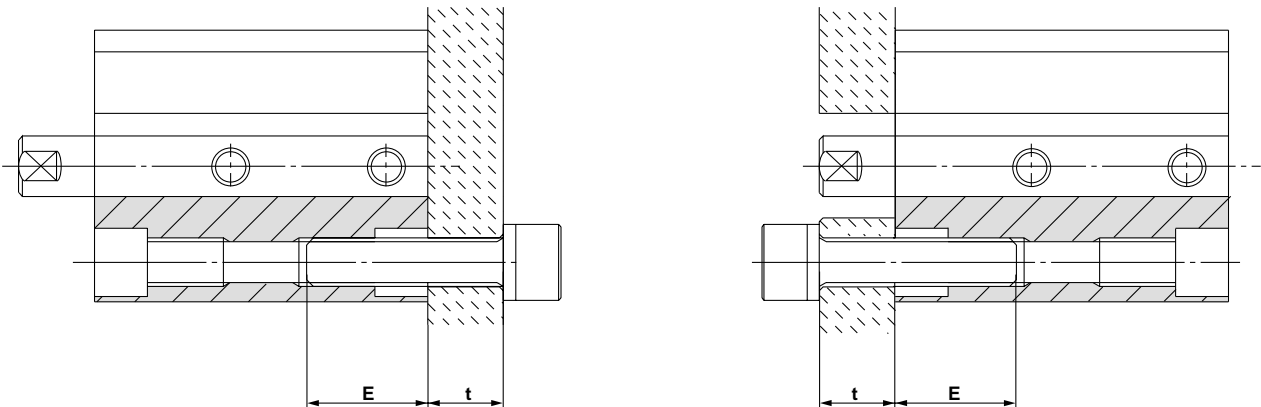

### Compatible Mounting Bolt Dimensions

Model		A type mounting			B type mounting	
		Mounting bolt size	C (mm)	D: Bolt length (mm)	Mounting bolt size	E (mm)
Standard type MQQT	MQQTB10-□D	M3	7	35 + Stroke	M4	8 to 11
	MQQTB16-□D	M5	7	35 + Stroke	M6	13 to 17
	MQQTB20-□D		8.5	40 + Stroke		
	MQQTB25-□D		9	45 + Stroke		
	MQQTB30-□D		7.5	50 + Stroke		
	MQQTB40-□D	M6	6	50 + Stroke	M8	16 to 22
Lateral load resisting type MQQL (Built-in ball bushing)	MQQLB10-□D	M3	7	65 + Stroke	M4	8 to 11
	MQQLB16-□D	M5	5.5	70 + Stroke	M6	13 to 17
	MQQLB20-□D		8	80 + Stroke		
	MQQLB25-□D		6.5	85 + Stroke		
	MQQLB30-□D		7	105 + Stroke		
	MQQLB40-□D	M6	7	105 + Stroke	M8	16 to 22



□: Stroke

# Series MQQ



## Dimensions

### Standard/Basic type (Through hole & Double end tapped): MQQT<sub>B</sub>

ø10, ø16, ø20

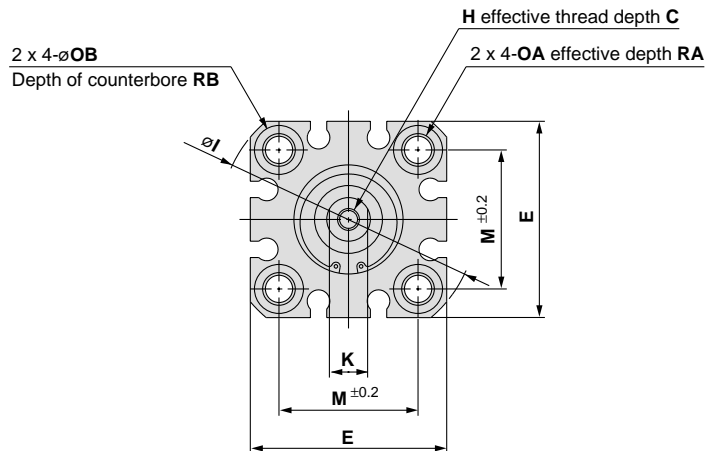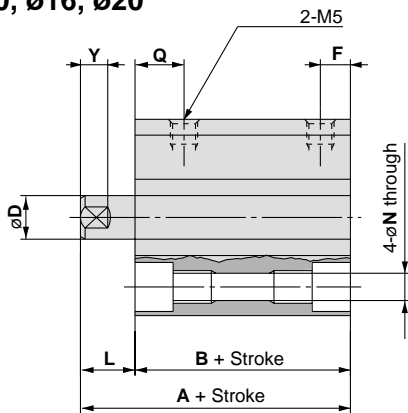


ø25, ø30, ø40

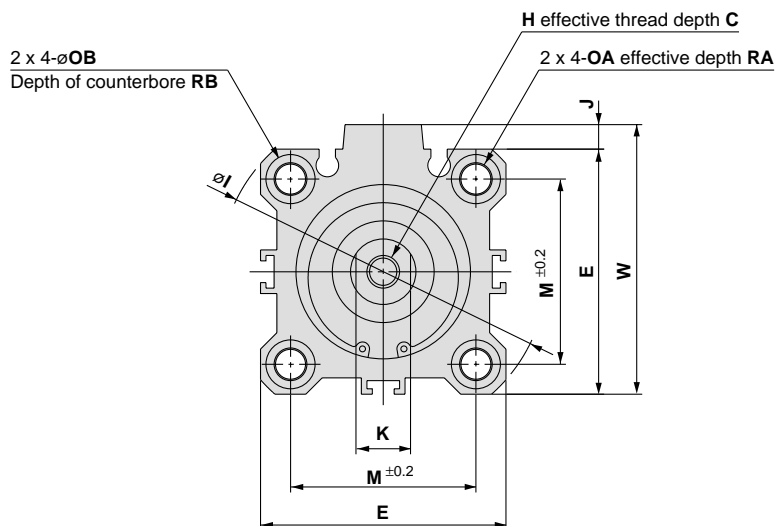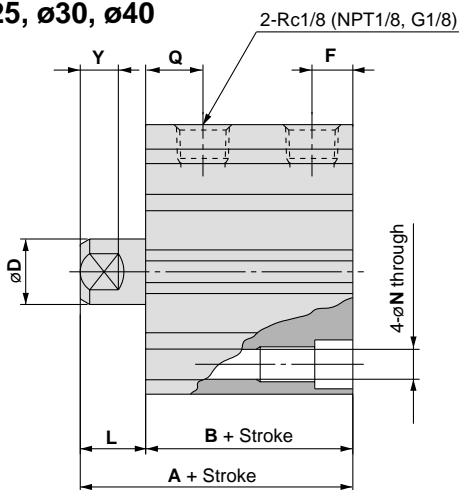

Bore size (mm)	Stroke range (mm)	A	B	C	<sup>Note)</sup> D	E	F	H	I	J	K	L	M	N	OA	OB	Q	RA	RB	W	Y
10	10 to 40	39.5	31.5	6	6( 5.8)	29	5.5	M3	38	—	5	8	20	3.5	M4	6.5	14.5	7	4	—	5
16	10 to 60	44	34	8	8( 7.8)	36	5.5	M4	47	—	7	10	25.5	5.4	M6	9	18	10	7	—	5
20	10 to 60	47.5	37.5	10	10( 9.8)	40	5.5	M5	52	—	8	10	28	5.4	M6	9	19.5	10	7	—	6
25	10 to 50, 75, 100	54	42	12	12(11.8)	45	8.5	M6	60	4.5	10	12	34	5.5	M6	9	23	10	7	49.5	7
30	10 to 50, 75, 100	60.5	48.5	13	16(15.8)	52	8.5	M8	69	5	14	12	40	5.5	M6	9	26	10	7	57	10
40	10 to 50, 75, 100	62	50	13	16(15.8)	64	12	M8	86	7	14	12	50	6.6	M8	11	26	14	8	71	10

Note) Figures in ( ) are the dimensions for applying a wrench.

### With rod end male thread: MQQ□-□DM

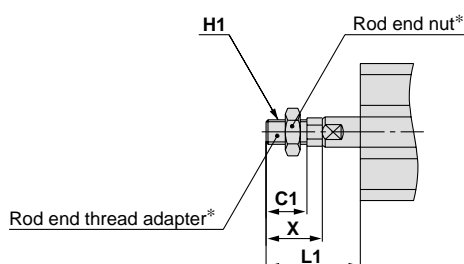


Bore size (mm)	L1	C1	H1	X
10	23.5	10.5	M5	15.5
16	26.5	11.5	M6	16.5
20	28.5	13.5	M8	18.5
25	34.5	16.5	M10 x 1.25	22.5
30	40.5	22.5	M14 x 1.5	28.5
40	40.5	22.5	M14 x 1.5	28.5


\* Refer to page 9 for details regarding the rod end thread adapter and the rod end nut.

**Foot type: MQQTL**

**ø10, ø16, ø20**

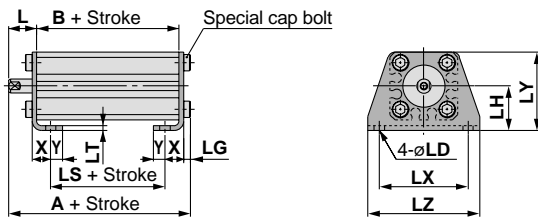

**ø25, ø30, ø40**

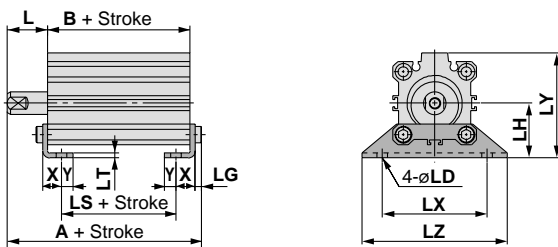


(mm)

Bore size (mm)	Stroke range (mm)	A	B	L	LD	LG	LH
10	10 to 40	44.3	31.5	8	4.5	2.8	19
16	10 to 60	51.2	34	10	6.6	4	24
20	10 to 60	54.7	37.5	10	6.6	4	26
25	10 to 50,75,100	61.2	42	12	6.6	4	30
30	10 to 50,75,100	67.7	48.5	12	6.6	4	33
40	10 to 50,75,100	70.2	50	12	9	5	39


Bore size (mm)	LS	LT	LX	LY	LZ	X	Y
10	19.5	2	38	33.5	48	8	5
16	22	3.2	48	42	62	9.2	5.8
20	22.5	3.2	52	46	66	10.7	5.8
25	26	3.2	57	57	71	11.2	5.8
30	32.5	3.2	64	64	78	11.2	7
40	27	3.2	79	78	95	14.7	8

**Front flange type: MQQTF**

**ø10, ø16, ø20**

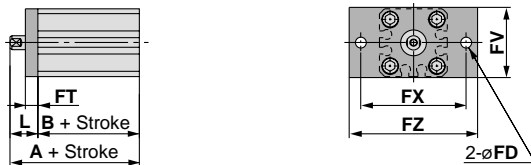

**ø25, ø30, ø40**

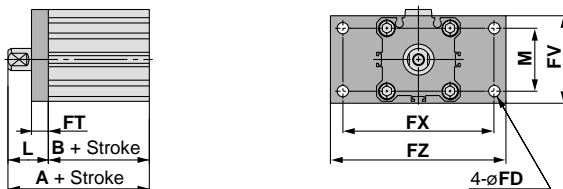

(mm)


Bore size (mm)	Stroke range (mm)	A	B	FD	FT	FV	FX
10	10 to 40	49.5	31.5	4.5	5.5	30	45
16	10 to 60	54	34	6.6	8	39	48
20	10 to 60	57.5	37.5	6.6	8	42	52
25	10 to 50,75,100	64	42	5.5	8	48	56
30	10 to 50,75,100	70.5	48.5	5.5	8	54	62
40	10 to 50,75,100	72	50	6.6	9	67	76

Bore size (mm)	FZ	L	M
10	55	18	—
16	60	20	—
20	64	20	—
25	65	22	34
30	72	22	40
40	89	22	50

**Rear flange type: MQQTG**

**ø10, ø16, ø20**

**ø25, ø30, ø40**

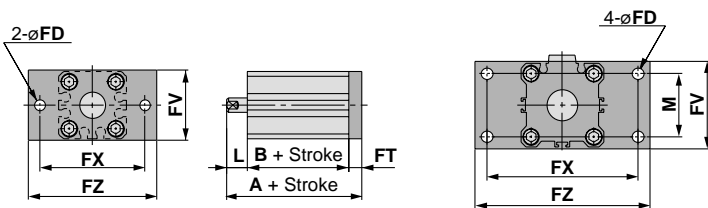

(mm)


Bore size (mm)	Stroke range (mm)	A	L
10	10 to 40	45	8
16	10 to 60	52	10
20	10 to 60	55.5	10
25	10 to 50,75,100	62	12
30	10 to 50,75,100	68.5	12
40	10 to 50,75,100	70	12

(Dimensions other than A and L are the same as the front flange type.)


# MQQ Series

## Dimensions

### Lateral load resisting/Basic type (Through hole & Double end tapped): MQQLB $\phi 10, \phi 16, \phi 20$

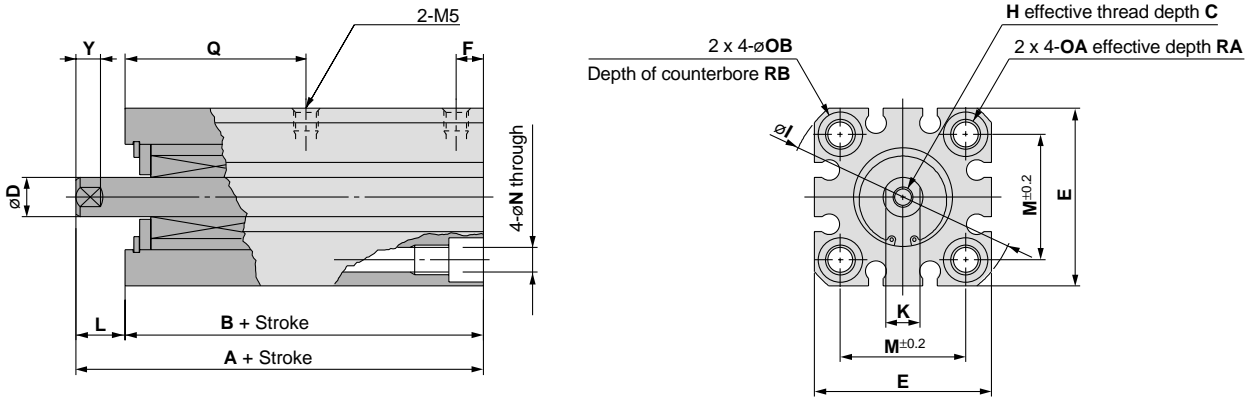


### $\phi 25, \phi 30, \phi 40$

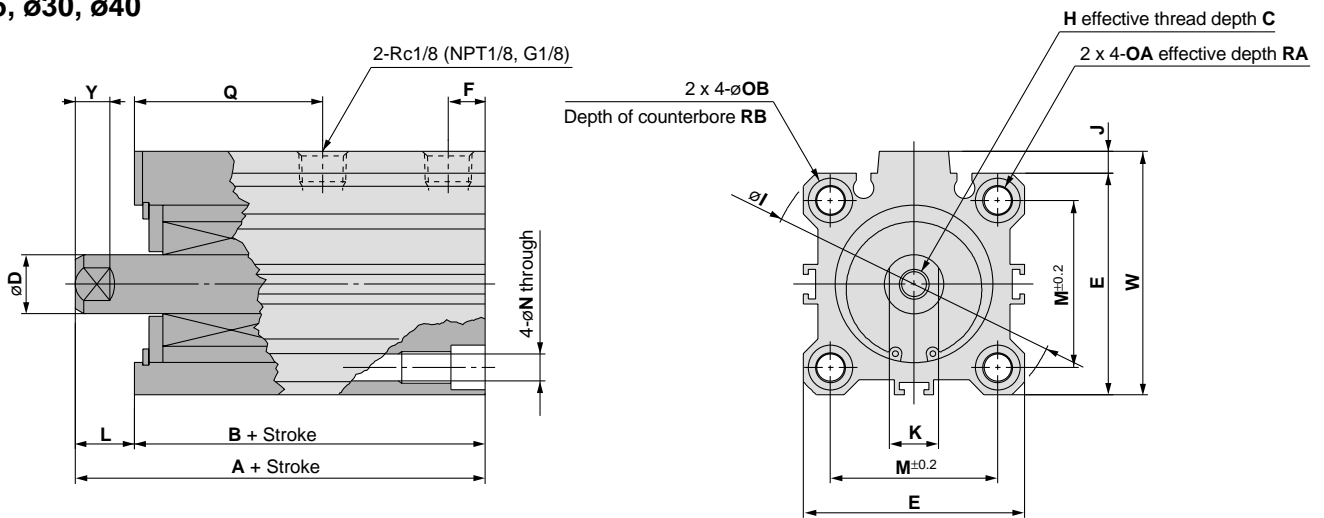

Bore size (mm)	Stroke range (mm)	A	B	C	Note) D	E	F	H	I	J	K	L	M	N	OA	OB	Q	RA	RB	W	Y
10	10 to 40	69.5	61.5	6	6 ( 5.8)	29	9	M3	38	—	5	8	20	3.5	M4	6.5	39.5	7	4	—	5
16	10 to 60	80.5	70.5	8	8 ( 7.8)	36	11.5	M4	47	—	7	10	25.5	5.4	M6	9	48.5	10	7	—	5
20	10 to 60	89	79	10	10 ( 9.8)	40	12	M5	52	—	8	10	28	5.4	M6	9	55	10	7	—	6
25	10 to 50, 75, 100	96.5	84.5	12	12 (11.8)	45	13.5	M6	60	4.5	10	12	34	5.5	M6	9	58	10	7	49.5	7
30	10 to 50, 75, 100	116	104	13	16 (15.8)	52	17.5	M8	69	5	14	12	40	5.5	M6	9	71	10	7	57	10
40	10 to 50, 75, 100	116	104	13	16 (15.8)	64	17.5	M8	86	7	14	12	50	6.6	M8	11	71	14	8	71	10

Note) Figures in ( ) are the dimensions for applying a wrench.

### With rod end male thread: MQQ□-□DM

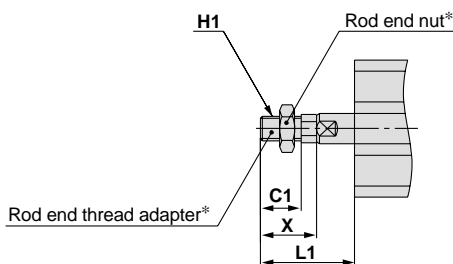


Bore size (mm)	L1	C1	H1	X
10	23.5	10.5	M5	15.5
16	26.5	11.5	M6	16.5
20	28.5	13.5	M8	18.5
25	34.5	16.5	M10 x 1.25	22.5
30	40.5	22.5	M14 x 1.5	28.5
40	40.5	22.5	M14 x 1.5	28.5


\* Refer to page 9 for details regarding the rod end thread adapter and the rod end nut.

**Foot type: MQQLL**

**ø10, ø16, ø20**

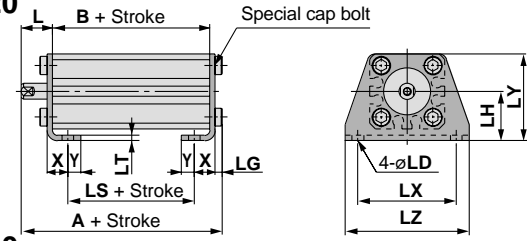


**ø25, ø30, ø40**

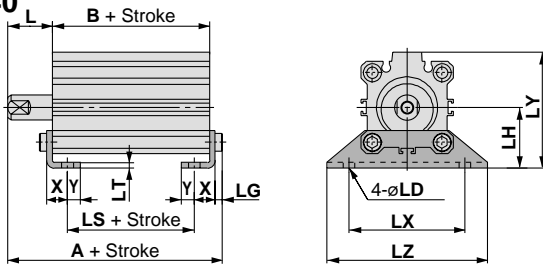


**Front flange type: MQQLF**

**ø10, ø16, ø20**

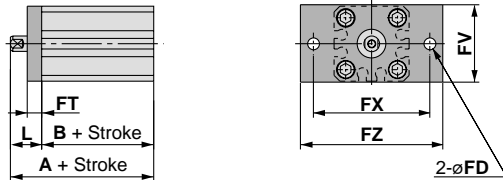


**ø25, ø30, ø40**

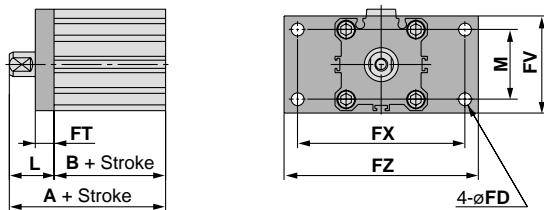


**Rear flange type: MQQLG**


**ø10, ø16, ø20**

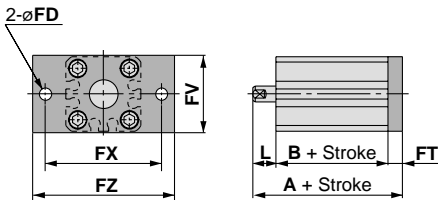

**ø25, ø30, ø40**

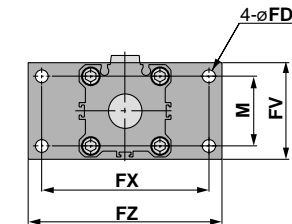

**Double clevis type: MQQLD**

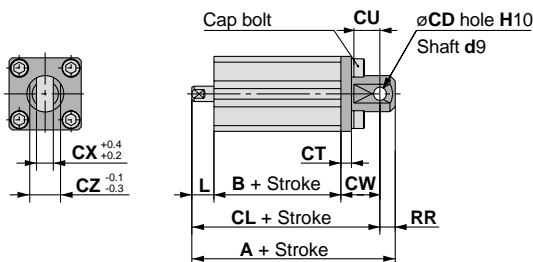

(mm)

Bore size (mm)	Stroke range (mm)	A	B	L	LD	LG	LH
10	10 to 40	74.3	61.5	8	4.5	2.8	19
16	10 to 60	87.7	70.5	10	6.6	4	24
20	10 to 60	96.2	79	10	6.6	4	26
25	10 to 50,75,100	103.7	84.5	12	6.6	4	30
30	10 to 50,75,100	123.2	104	12	6.6	4	33
40	10 to 50,75,100	124.2	104	12	9	5	39

Bore size (mm)	LS	LT	LX	LY	LZ	X	Y
10	49.5	2	38	33.5	48	8	5
16	58.5	3.2	48	42	62	9.2	5.8
20	64	3.2	52	46	66	10.7	5.8
25	68.5	3.2	57	57	71	11.2	5.8
30	88	3.2	64	64	78	11.2	7
40	81	3.2	79	78	95	14.7	8

(mm)

Bore size (mm)	Stroke range (mm)	A	B	FD	FT	FV	FX
10	10 to 40	79.5	61.5	4.5	5.5	30	45
16	10 to 60	90.5	70.5	6.6	8	39	48
20	10 to 60	99	79	6.6	8	42	52
25	10 to 50,75,100	106.5	84.5	5.5	8	48	56
30	10 to 50,75,100	126	104	5.5	8	54	62
40	10 to 50,75,100	126	104	6.6	9	67	76

Bore size (mm)	FZ	L	M
10	55	18	—
16	60	20	—
20	64	20	—
25	65	22	34
30	72	22	40
40	89	22	50

(mm)

Bore size (mm)	Stroke range (mm)	A	L
10	10 to 40	75	8
16	10 to 60	88.5	10
20	10 to 60	97	10
25	10 to 50,75,100	104.5	12
30	10 to 50,75,100	124	12
40	10 to 50,75,100	124	12

(Dimensions other than A and L are the same as the front flange type.)

(mm)


Bore size (mm)	Stroke range (mm)	A	B	CD	CL	CT	CU
10	10 to 40	90.5	61.5	5	84.5	4	10
16	10 to 60	107.5	70.5	8	98.5	5	12
20	10 to 60	119	79	10	109	5	14
25	10 to 50,75,100	126.5	84.5	10	116.5	5	14
30	10 to 50,75,100	148	104	10	138	6	14
40	10 to 50,75,100	158	104	14	144	7	20

Bore size (mm)	CW	CX	CZ	L	RR
10	15	6.5	12	8	6
16	18	8	16	10	9
20	20	10	20	10	10
25	20	18	36	12	10
30	22	18	36	12	10
40	28	22	44	12	14

# Series MQQ

## Accessory Dimensions


### Female-male thread conversion joint

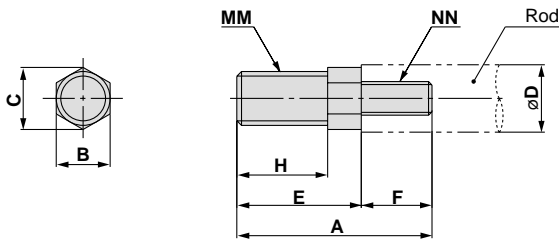

Part no.	Applicable bore size (mm)	A	B	C	D	E	F
<b>MQ10-M</b>	10	20.5	8	9.2	6	15.5	5
<b>MQ16-M</b>	16	22.5	8	9.2	8	16.5	6
<b>MQ20-M</b>	20	24.5	8	9.2	10	18.5	6
<b>MQ25-M</b>	25	33.5	10	11.5	12	22.5	11
<b>MQ28-M</b>	30, 40	40.5	14	16	16	28.5	12


Part no.	Applicable bore size (mm)	H	MM	NN
<b>MQ10-M</b>	10	10.5	M5	M3
<b>MQ16-M</b>	16	11.5	M6	M4
<b>MQ20-M</b>	20	13.5	M8	M5
<b>MQ25-M</b>	25	16.5	M10 x 1.25	M6
<b>MQ28-M</b>	30, 40	22.5	M14 x 1.5	M8

### Rod end nut

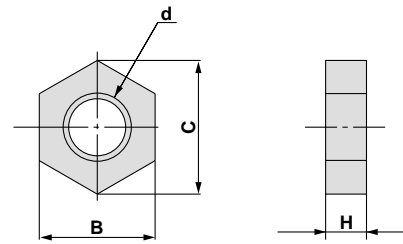

Part no.	Applicable bore size (mm)	B	C	d	H
<b>NTJ-015A</b>	10	8	9.2	M5	4
<b>NT-015A</b>	16	10	11.5	M6	5
<b>NT-02</b>	20	13	15	M8	5
<b>NT-03</b>	25	17	19.6	M10 x 1.25	6
<b>NT-04</b>	30, 40	22	25.4	M14 x 1.5	8

### Clevis pin

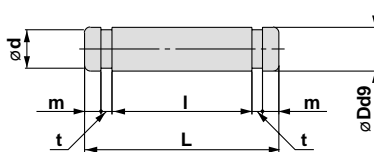

Part no.	Applicable bore size (mm)	Dd9	L	d	l	m	t	Applicable snap ring
<b>IY-J015</b>	10	5 <sup>-0.030</sup> <sub>-0.040</sub>	16.6	4.8	12.2	1.5	0.7	C type 5 for shaft
<b>IY-G02</b>	16	8 <sup>-0.040</sup> <sub>-0.076</sub>	21	7.6	16.2	1.5	0.9	C type 8 for shaft
<b>IY-G03</b>	20	10 <sup>-0.040</sup> <sub>-0.076</sub>	25.6	9.6	20.2	1.55	1.15	C type 10 for shaft
<b>IY-G04</b>	25, 30	10 <sup>-0.040</sup> <sub>-0.076</sub>	41.6	9.6	36.2	1.55	1.15	C type 10 for shaft
<b>IY-G05</b>	40	14 <sup>-0.050</sup> <sub>-0.093</sub>	50.6	13.4	44.2	2.05	1.15	C type 14 for shaft

Metal Seal

# Lateral Load Resisting Low Friction Cylinder Series MQM

ø6, ø10, ø16, ø20, ø25

## How to Order

**MQML B 10 15 D**

**Lateral load resisting low friction specification**

**Type**

**L** Lateral load resisting type (Built-in basic bushing)

**Mounting**

<b>B</b>	Basic type
<b>L</b>	Foot type
<b>F</b>	Front flange type
<b>G</b>	Rear flange type (Except for ø6)
<b>C</b> <small>Note 1)</small>	Single clevis type (Non-integrated type)
<b>D</b> <small>Note 2)</small>	Double clevis type

Note 1) Bore size: 20, 25 mm only

\* Mounting brackets are included when shipped, but are not assembled. (Except for clevis type.)

Note 2) ø6, ø10, ø16 ..... Integrated type  
ø20, ø25 ..... Non-integrated type

**Bore size**

<b>6</b>	6 mm
<b>10</b>	10 mm
<b>16</b>	16 mm
<b>20</b>	20 mm
<b>25</b>	25 mm

**Action**

**D** Double acting

**Cylinder stroke**

Bore size (mm)	Standard stroke (mm)
<b>6</b>	15, 30, 45, 60
<b>10</b>	15, 30, 45, 60, 75, 100
<b>16</b>	15, 30, 45, 60, 75, 100
<b>20</b>	15, 30, 45, 60, 75, 100
<b>25</b>	15, 30, 45, 60, 75, 100

\* Strokes are available in 1mm increments by installing spacers in standard stroke cylinders.


**Function**

-	Standard type
<b>H</b> <small>Note)</small>	High speed/High frequency type (Without fixed orifice)

Note) Except for 6 mm bore size.

**Port thread type**

-	M thread	ø6 to ø16
-	Rc	
<b>TN</b>	NPT	ø20, ø25
<b>TF</b>	G	

 \* Series MQM is not auto switch capable.

## Mounting Bracket/Accessories

Mounting bracket		B: Basic	L: Foot	F: Front flange	G: Rear flange	C: Single clevis	D: Double clevis	Note
<b>Standard</b>	<b>Mounting nut</b> <small>Note 1)</small>	● (1 pc.)	● (2 pcs.)	● (1 pc.)	● (1 pc.)	— <small>Note 1)</small>	— <small>Note 2)</small>	
	<b>Rod end nut</b>	●	●	●	●	●	●	
	<b>Clevis pin</b>	—	—	—	—	—	●	
<b>Option</b>	<b>T-bracket</b>	—	—	—	—	—	●	With pin

Note 1) Mounting nut is not included with integral clevis, single clevis and double clevis types.  
Note 2) Pin and snap ring are packed with double clevis type.

## Mounting Bracket Part No.

Bore size (mm)	Foot <small>Note 1)</small>	Flange	Single clevis	Double clevis (with pin) <small>Note 2)</small>	T-bracket <small>Note 3)</small>
<b>6</b>	CJK-L016B	CJK-F016B	—	—	CJ-T010B
<b>10</b>			—	—	
<b>16</b>	CLJ-L016B	CLJ-F016B	—	—	CJ-T016B
<b>20</b>	CM-L020B	CM-F020B	CM-C020B	CM-D020B	—
<b>25</b>	CM-L032B	CM-F032B	CM-C032B	CM-D032B	—


Note 1) Two foot brackets and one mounting nut are included.  
Note 2) Clevis pin and snap ring are included in package.  
Note 3) T-bracket is applicable to the double clevis type (D).



# Series MQM



**Symbol**  
Double acting, Single rod



## Specifications

Bore size (mm)		6	10	16	20	25
<b>Seal construction</b>		Metal seal				
<b>Action</b>		Double acting, Single rod				
<b>Fluid</b>		Air				
<b>Proof pressure</b>		1.05 MPa				
<b>Maximum operating pressure</b>		0.7 MPa				
<b>Minimum operating pressure</b> <sup>Note 1)</sup>	Standard type	0.02MPa	0.005 MPa			
	H (High speed/High frequency type)	—	0.01 MPa			
<b>Ambient and fluid temperature</b>		-10 to 80°C				
<b>Cushion</b>		Rubber bumper (Standard)				
<b>Lubrication</b> <sup>Note 2)</sup>		Not required (Non-lube)				
<b>Rod end thread tolerance</b>		JIS class 2				
<b>Stroke length tolerance</b>		+1.0 0				
<b>Piston speed</b> <sup>Note 3)</sup>	Standard type	0.5 to 1000 mm/s (Refer to page 20.)				
	H (High speed/High frequency type)	—	5 to 3000 mm/s (Refer to page 20.)			
<b>Total allowable leakage</b>	Supply pressure 0.1 MPa	150 cm <sup>3</sup> /min or less	250 cm <sup>3</sup> /min or less	300 cm <sup>3</sup> /min or less		
	Supply pressure 0.3 MPa	800 cm <sup>3</sup> /min or less	1000 cm <sup>3</sup> /min or less	1200 cm <sup>3</sup> /min or less		
	Supply pressure 0.5 MPa	1500 cm <sup>3</sup> /min or less	2500 cm <sup>3</sup> /min or less	3000 cm <sup>3</sup> /min or less		

Note 1) Value when horizontal. (Use clean, dry, and nonfreezing air) However, as the stroke increases, it will likely be affected by the weight of the moving parts and the pressure will likely increase by approx. 0.003 to 0.005 MPa. This is due to an offset load from the weight of the rod.

Note 2) Refer to precautions on page 18 regarding lubrication.

Note 3) Control low speed actuation with differential pressure and a speed controller, etc. (Refer to recommended circuit examples for further details.)

## Weight: Standard Type, High Speed/High Frequency Type

Unit: g


Bore size (mm)	Cylinder stroke (mm)					
	15	30	45	60	75	100
6	52.5	60.7	68.9	77.1	—	—
10	92.4	102.7	113.0	123.3	133.6	143.9
16	152.4	175.2	198.0	220.8	243.6	266.4
20	349.8	392.6	435.4	478.2	521.0	563.8
25	460.8	510.0	559.2	608.4	657.6	706.8

## Theoretical Output

Unit: N

Bore size (mm)	Rod size (mm)	Direction	Piston area (mm <sup>2</sup> )	Operating pressure (MPa)						
				0.1	0.2	0.3	0.4	0.5	0.6	0.7
6	4	IN	15.7	1.6	3.2	4.7	6.3	7.9	9.4	11.0
		OUT	28.3	2.8	5.7	8.5	11.3	14.2	17.0	19.8
10	4	IN	66.0	6.6	13.2	19.8	26.4	33.0	39.6	46.2
		OUT	78.5	7.9	15.7	23.6	31.4	39.3	47.1	55.0
16	5	IN	181.4	18.1	36.3	54.4	72.6	90.7	108.8	127.0
		OUT	201.1	20.1	40.2	60.3	80.4	100.6	120.7	140.8
20	8	IN	263.9	26.4	52.8	79.2	105.6	132.0	158.3	184.7
		OUT	314.2	31.4	62.8	94.3	125.7	157.1	188.5	219.9
25	10	IN	412.3	41.2	82.5	123.7	164.9	206.2	247.4	288.6
		OUT	490.9	49.1	98.2	147.3	196.4	245.5	294.5	343.6

## Construction

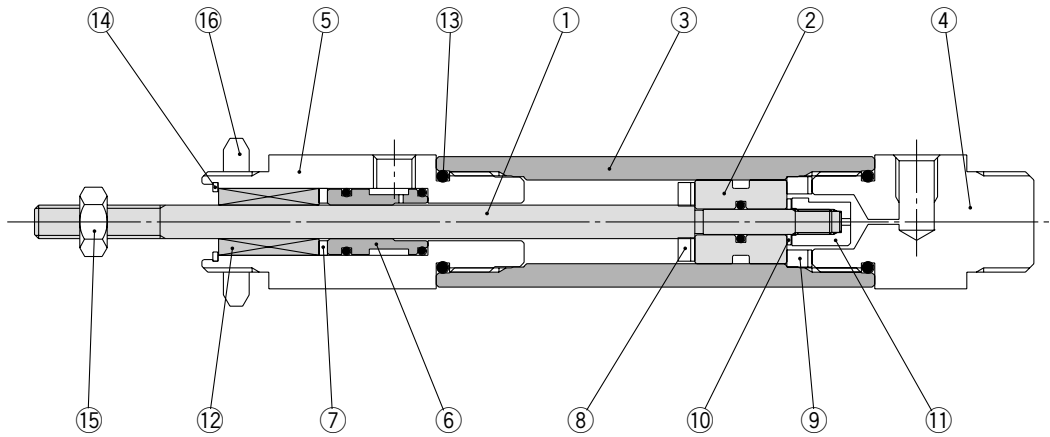

### Component Parts


No.	Description	Material	Note
1	Rod	Carbon steel	Hard chrome plated
2	Piston	Special stainless steel	
3	Tube	Special stainless steel	
4	Head cover	Aluminum alloy	Hard anodized
5	Rod cover	Aluminum alloy	Hard anodized
6	Sleeve	Special stainless steel	
7	Seat	NBR	
8	Bumper A	Polyurethane	
9	Bumper B	Polyurethane	
10	Bumper C	Polyurethane	
11	Nut	Aluminum alloy	
12	Ball bushing		
13	O-ring	NBR	
14	Snap ring	Carbon tool steel	Nickel plated
15	Rod end nut	Steel	Nickel plated
16	Mounting nut	Steel	

# Series MQM


## Dimensions

### Basic type: MQMLB

ø6

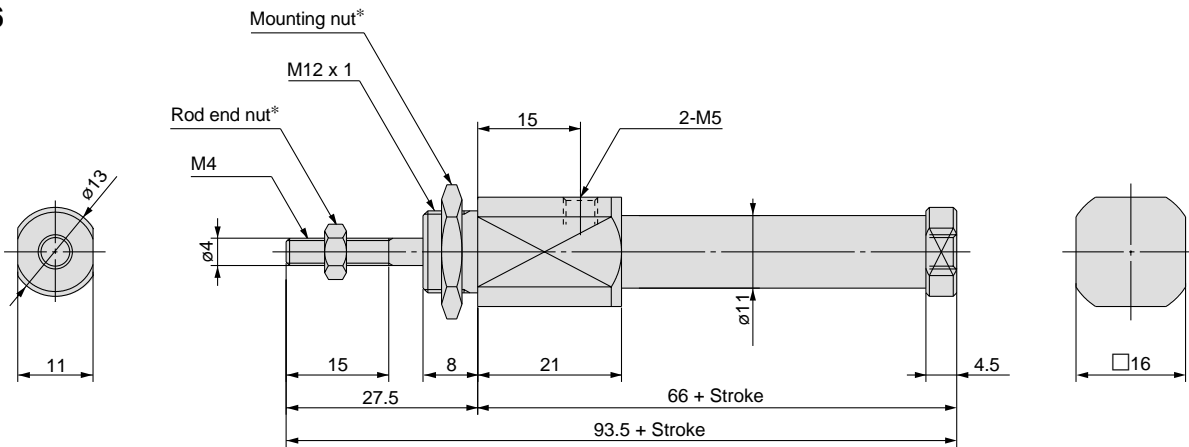

ø10, ø16, ø20, ø25

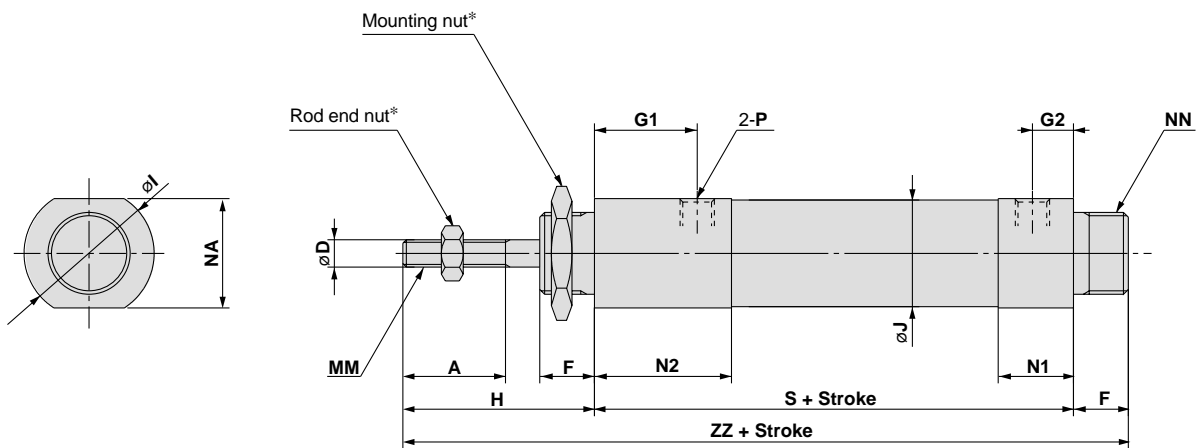

(mm)

Bore size (mm)	A	D	F	G1	G2	H	I	J	MM	N1	N2	NA	NN	P			S	ZZ
														—	TN	TF		
10	15	4	8	15	6	28	18.5	16	M4	11	20	16	M12	M5	—	—	65	101
16	15	5	10	15	6	30	22	22	M5	12	21	19.5	M14	M5	—	—	74	114
20	18	8	13	25	8.5	40.5	31.5	28.5	M8	20.5	33	29	M20 x 1.5	Rc1/8	NPT1/8	G1/8	97.5	151
25	18	10	13	30	8.5	44.5	34.5	32	M10 x 1.25	20.5	38	32	M26 x 1.5	Rc1/8	NPT1/8	G1/8	102.5	160



\* Refer to page 17 for details regarding the rod end nut and the mounting nut.

Refer to the basic type on page 13 for other dimensions.



## Dimensions

### Foot type: MQMLL

ø6

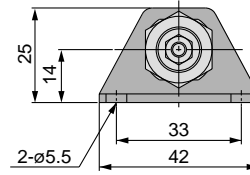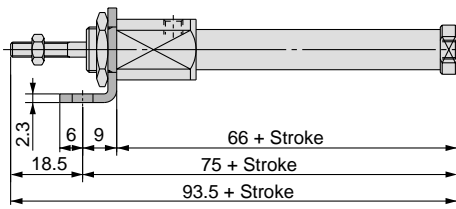

### ø10, ø16, ø20, ø25

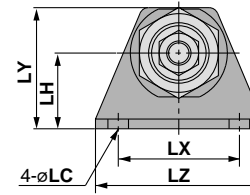
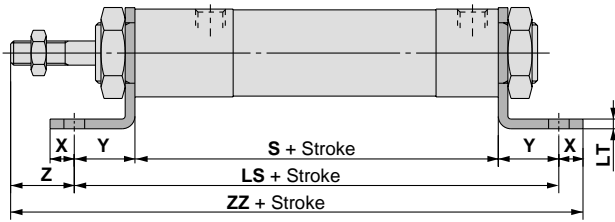


(mm)



Bore size (mm)	LC	LH	LS	LT	LX	LY	LZ	S	X	Y	Z	ZZ
10	5.5	14	83	2.3	33	25	42	65	6	9	19	108
16	5.5	18	92	2.3	42	30	54	74	6	9	21	119
20	6.8	25	137.5	3.2	40	40	55	97.5	8	20	20.5	166
25	6.8	28	142.5	3.2	40	47	55	102.5	8	20	24.5	175

### Front flange type: MQMLF

ø6

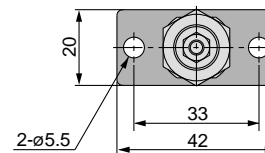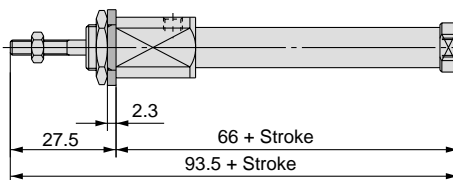

### ø10, ø16, ø20, ø25

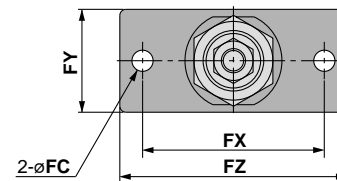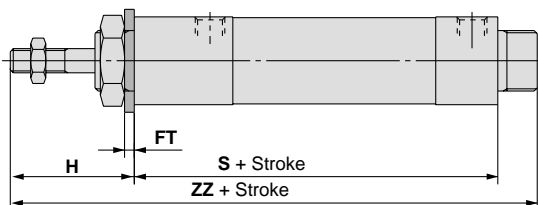

(mm)


Bore size (mm)	FC	FT	FX	FY	FZ	H	S	ZZ
10	5.5	2.3	33	20	42	28	65	101
16	5.5	2.3	42	24	54	30	74	114
20	7	4	60	34	75	40.5	97.5	151
25	7	4	60	40	75	44.5	102.5	160

# Series MQM

Refer to the basic type on page 13 for other dimensions.

## Dimensions


Rear flange type: MQMLG (Except for  $\phi 6$ )  
 $\phi 10$ ,  $\phi 16$ ,  $\phi 20$ ,  $\phi 25$

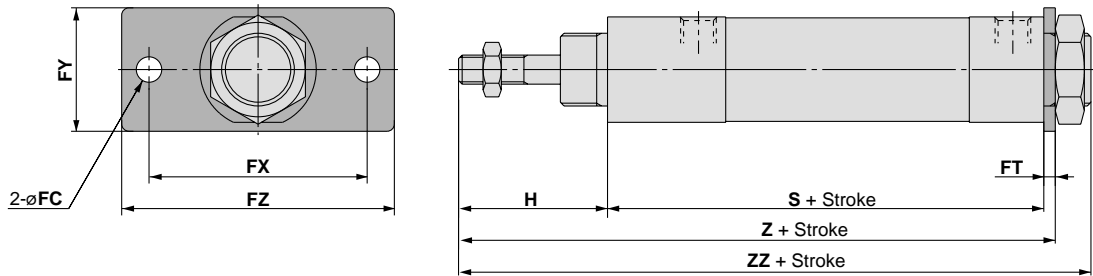

(mm)

Bore size (mm)	FC	FT	FX	FY	FZ	H	S	Z	ZZ
10	5.5	2.3	33	20	42	28	65	95.3	101
16	5.5	2.3	42	24	54	30	74	106.3	114
20	7	4	60	34	75	40.5	97.5	142	151
25	7	4	60	40	75	44.5	102.5	151	160

Single clevis type: MQMLC ( $\phi 20$  and  $\phi 25$  only)  
 $\phi 20$ ,  $\phi 25$  (Non-integrated type)

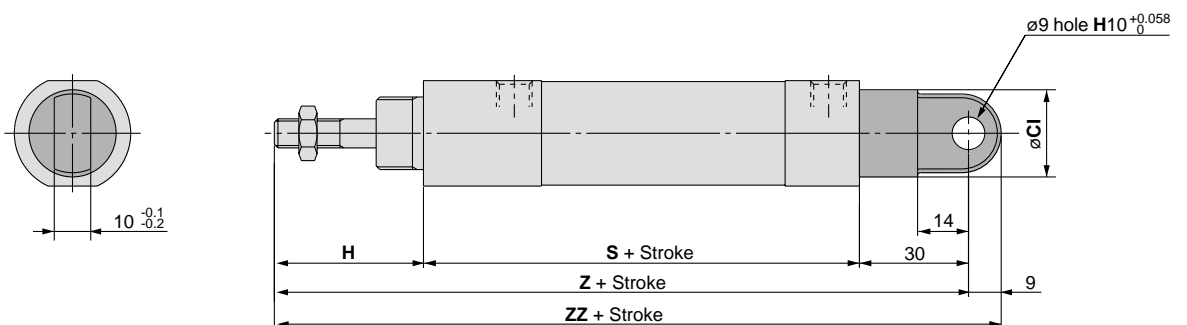


(mm)

Bore size (mm)	CI	H	S	Z	ZZ
20	24	40.5	97.5	168	177
25	30	44.5	102.5	177	186

Refer to the basic type on page 13 for other dimensions.

## Dimensions

### Double clevis type: MQMLD ø6, ø10, ø16 (Integrated type)

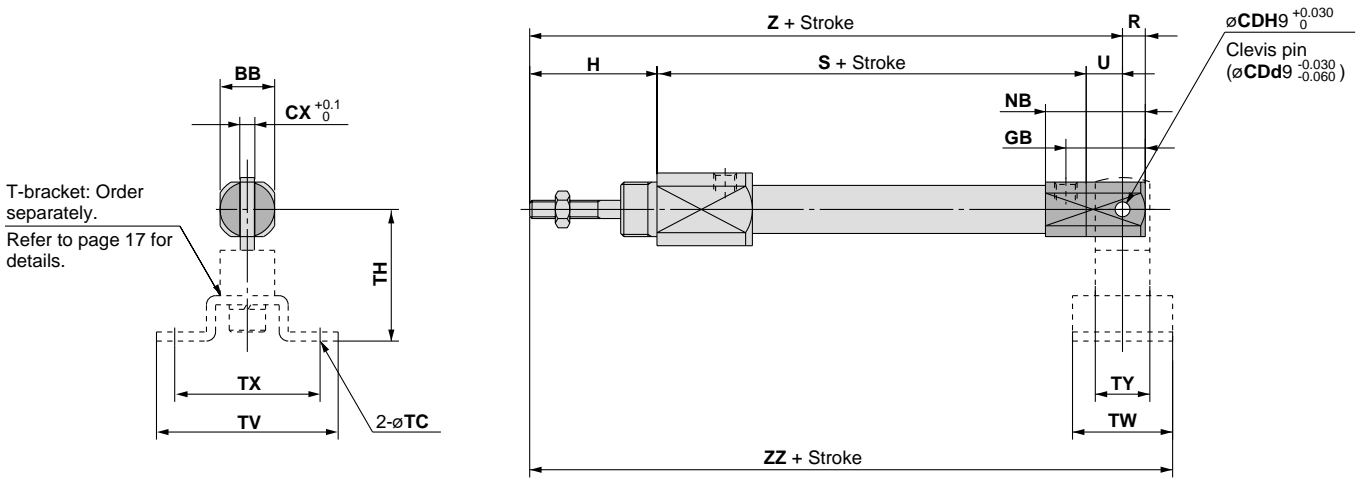

(mm)


Bore size (mm)	BB	CD	CX	GB	H	NB	R	S	U	Z	ZZ
6	12	3.3	3.3	17.5	27.5	22	5	70.5	8	106	117
10	12	3.3	3.3	19	28	24	5	65	8	101	112
16	18	5	6.6	24	30	30	8	74	10	114	128

#### T-bracket Related Dimensions (Note)

Part no.	Applicable bore size (mm)	TC	TH	TV	TW	TX	TY
CJ-T010B	6, 10	4.5	29	40	22	32	12
CJ-T016B	16	5.5	35	48	28	38	16

Note) Refer to page 17 for details.

### ø20, ø25 (Non-integrated type)

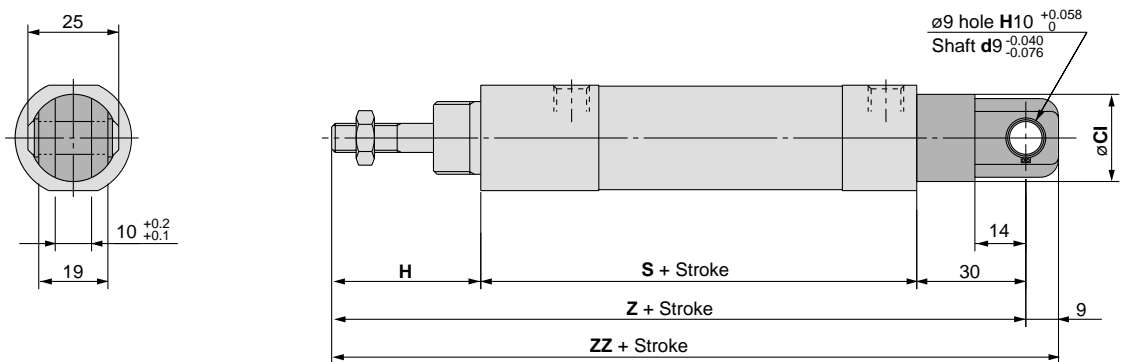


(mm)

Bore size (mm)	CI	H	S	Z	ZZ
20	24	40.5	97.5	168	177
25	30	44.5	102.5	177	186


# Series MQM

## Accessory Dimensions

### Mounting nut

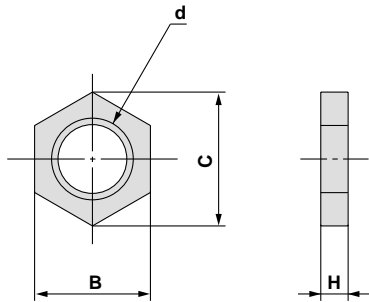

### Rod end nut

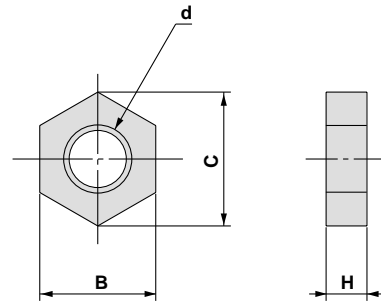


Material: Carbon steel

Part no.	Applicable bore size (mm)	B	C	d	H
<b>SNKJ-016B</b>	6, 10	17	19.6	M12 x 1	4
<b>SNLJ-016B</b>	16	19	21.9	M14 x 1	5
<b>SN-020B</b>	20	26	30	M20 x 1.5	8
<b>SN-032B</b>	25	32	37	M26 x 1.5	8

Material: Carbon steel


Part no.	Applicable bore size (mm)	B	C	D	H
<b>NTJ-010A</b>	6, 10	7	8.1	M4	3.2
<b>NTJ-015A</b>	16	8	9.2	M5	4
<b>NT-02</b>	20	13	15	M8	5
<b>NT-03</b>	25	17	19.6	M10 x 1.25	6

### T-bracket

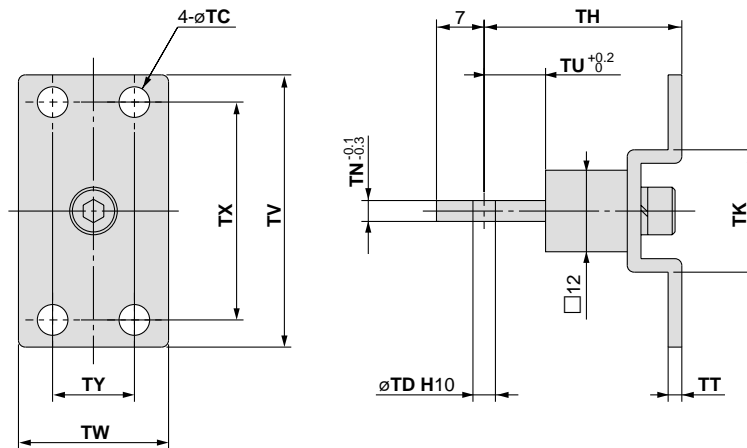

Part no.	Applicable bore size (mm)	TC	TD	TH	TK	TN	TT	TU	TV	TW	TX	TY
<b>CJ-T010B</b>	6, 10	4.5	3.3	29	18	3.1	2	9	40	22	32	12
<b>CJ-T016B</b>	16	5.5	5	35	20	6.4	2.3	14	48	28	38	16

### Clevis pin

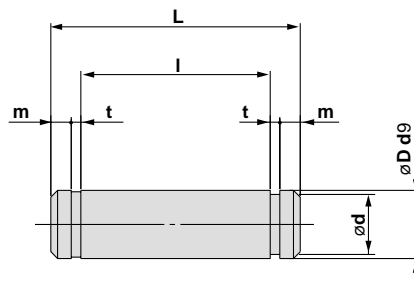

Material: Stainless steel

Part no.	Applicable bore size (mm)	d	D	l	L	m	t
<b>CD-J010</b>	6, 10	3	3.3	12.2	15.2	1.2	0.3
<b>CD-Z015</b>	16	4.8	5	18.3	22.7	1.5	0.7
<b>CDP-1</b>	20,25	8.6	9	19.2	25	1.75	1.15





## Series MQQ/MQM

# Specific Product Precautions 1

Be sure to read before handling.

Refer to back page 1 through to 3 for Safety Instructions and Actuator Precautions.

### Operation

#### Caution

1. When mounting, thoroughly flush out the connector piping and be sure that dirt and chips, etc., do not get inside the cylinder.
2. Install an air filter with a filtration degree of  $5\mu\text{m}$  or less on the air supply. Furthermore, when controlling for low speed or controlled output, use clean air (atmospheric pressure dew point temperature of  $-10^{\circ}\text{C}$ ). Installation of a mist separator (filtration degree  $0.3\mu\text{m}$  or less) is also recommended.
3. Use a metal seal type when using solenoid valves for cylinder actuation. If a rubber seal type is used, there may be an increase in operating resistance due to grease sprayed from the main valve.
4. Operate so that the load applied to the piston rod is normally in the axial direction.  
In the event that a lateral load is unavoidable, do not exceed the range of the allowable lateral load at the rod end (refer to pages 19 and 20). (Use outside of the operating limits may cause an adverse effect on the life of the unit through problems such as looseness in the guide unit and a loss of precision.)
5. Take care not to scratch or gouge the sliding portion of the rod. This may cause malfunction or shorten the unit's life.
6. When attaching a work piece to the end of the rod, move the rod to the fully retracted position and use the wrench flats at the end of the rod. Fasten the work piece without applying a large amount of torque to the rod.
7. Be certain to connect a load so that the rod axis is aligned with the load and its direction of movement.  
Especially when a cylinder rod is connected directly to a guide function (such as bearings, etc.) on the equipment side, the following is likely to occur. Either an offset load will occur and the sliding resistance will not be stable or galling will occur on the metal seal parts. Therefore, be sure to use a floating joint or a spherical joint.
8. When a piston rod is driven with a circuit from an external force such as force, control, tension control, etc., a stick-slip phenomenon will likely occur and sliding resistance will not be stable if the amount of displacement is  $0.05\text{mm}$  or less.
9. When it is used in locations where a constant vibration is applied, such as a polishing machine, etc., consult with us.

### Disassembly

#### Caution

1. The component parts of the metal seal cylinder are manufactured to precision tolerances, and therefore cannot be disassembled.

### Lubrication

#### Caution

##### 1. Lubrication of non-lube type cylinder

Do not apply lubrication when controlling for low speed or controlled output. If lubrication is applied, there may be changes in operating resistance due to factors such as the viscosity and surface tension of the oil. Also, use a metal seal type when using solenoid valves for cylinder actuation. If a rubber seal type is used, there may be an increase in operating resistance due to grease sprayed from the main valve.

Lubrication is also unnecessary for high speed actuation, but in the event that lubrication is applied, use turbine oil class 1 (with no additives) ISO VG32. (Do not use spindle oil or machine oil.)



# Series MQQ/MQM

## Specific Product Precautions 2

Be sure to read before handling.


Refer to back page 1 through to 3 for Safety Instructions and Actuator Precautions.

### Selection

#### Series MQQ

#### Caution Operating Speed

#### Load Weight and Maximum Speed: MQQT/MQQL

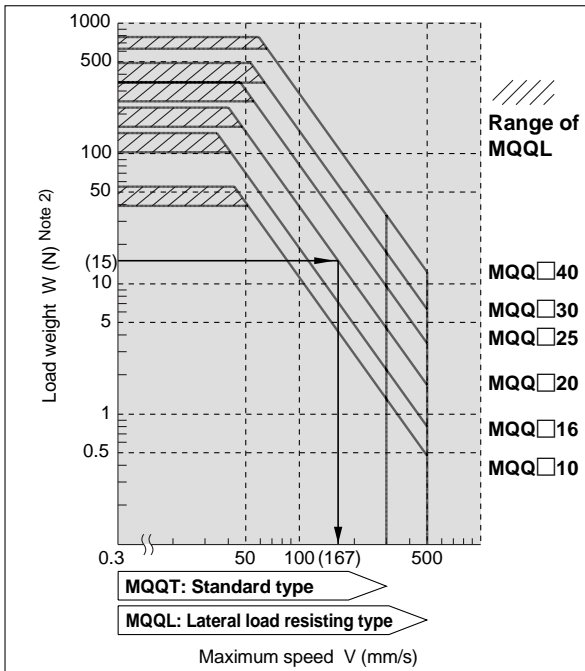

Example)  
Driving a load of  
15(N) using MQQ□20  
with a maximum  
speed of 167 (mm/sec)

#### Lateral load resisting type: MQQ□

Bore size (mm)	Allowable kinetic energy (J)
10	0.006
16	0.010
20	0.022
25	0.044
30	0.080
40	0.160

Note 1) When a load is attached to the rod end, adjust the speed so that the maximum speed is no more than that shown in the graph for the corresponding load weight.

Note 2) The weight of cylinder's moving parts is included in the load weight. (See the graph on the right.)

#### Moving Parts Weight

#### MQQ□□ Moving Parts

Bore size (mm)	MQQT□: Moving parts weight (g)	MQQL□: Moving parts weight (g)
10	Weight = 8.9 + {3.1 x (stroke/10)}	Weight = 16.7 + {3.1 x (stroke/10)}
16	Weight = 22.9 + {4.0 x (stroke/10)}	Weight = 34.9 + {4.0 x (stroke/10)}
20	Weight = 34.8 + {6.6 x (stroke/10)}	Weight = 57.9 + {6.6 x (stroke/10)}
25	Weight = 66.9 + {8.8 x (stroke/10)}	Weight = 97.7 + {8.8 x (stroke/10)}
30	Weight = 115.0 + {15.8 x (stroke/10)}	Weight = 190.2 + {15.8 x (stroke/10)}
40	Weight = 182.2 + {15.8 x (stroke/10)}	Weight = 257.4 + {15.8 x (stroke/10)}


Note) For the front flange type, add 10 mm to the stroke length of MQQ□F

#### Allowable Lateral Load at Rod End




(Mounting orientation: Horizontal)  
supply pressure: 0.5 MPa  
1N = 0.102 kgf

#### Standard type: MQQT□

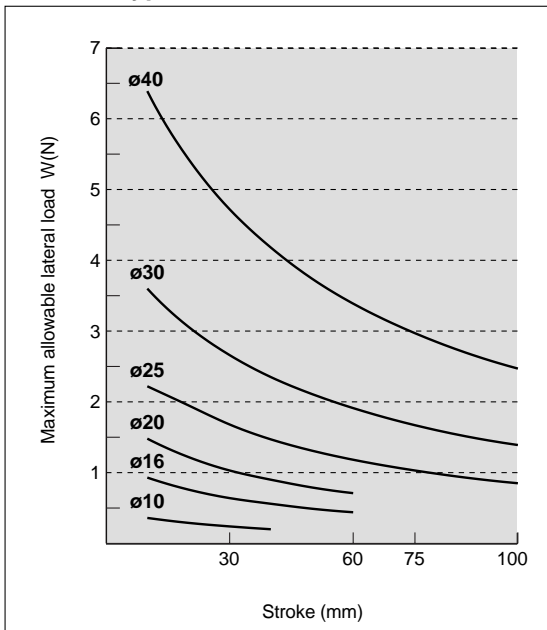

#### Lateral Load Resisting Type: MQQL□/Built-in Ball Bushing

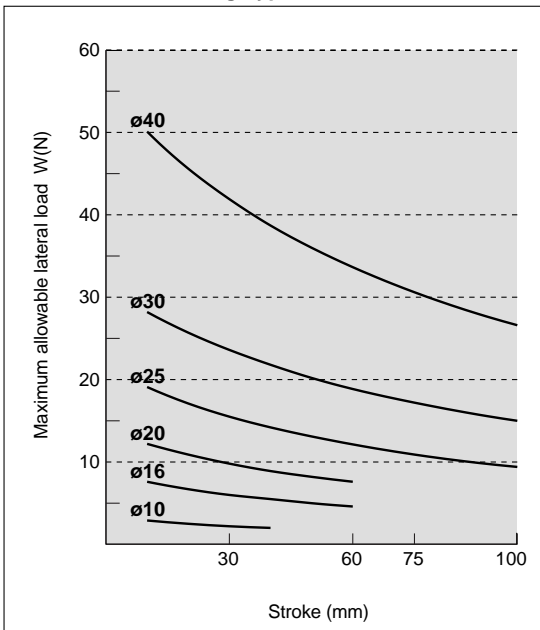

Note 1) The indicated allowable lateral load at the rod end is for the rod end female thread.

Note 2) The allowable lateral load varies depending on the size of a load (the distance to the load's center of gravity). Contact SMC for further details.



# Series MQQ/MQM

## Specific Product Precautions 3

Be sure to read before handling.

Refer to back page 1 through to 3 for Safety Instructions and Actuator Precautions.


### Selection

#### Series MQM

#### ⚠ Caution

#### Operating Speed

##### Load Weight and Maximum Speed

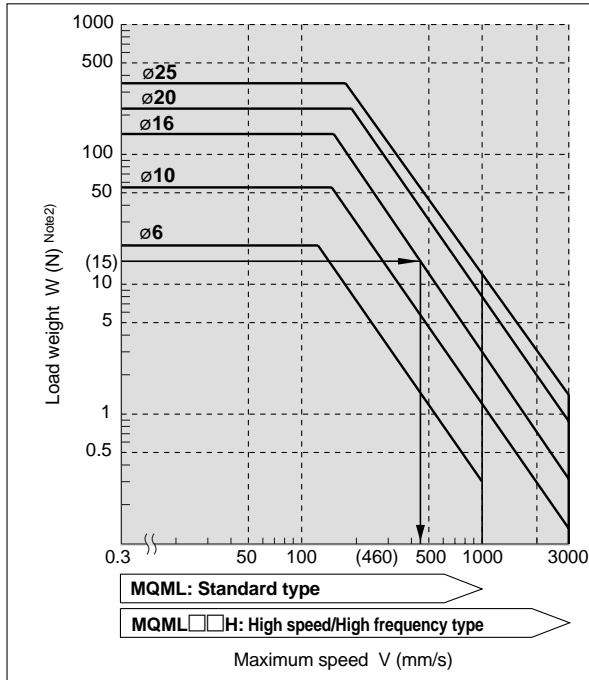

Example)  
Driving a load of 15(N) using **MQM16** with a maximum speed of 460 (mm/sec)

##### Lateral load resisting type: MQML/MQML□□H

Bore size (mm)	Allowable kinetic energy (J)
6	0.015
10	0.059
16	0.161
20	0.386
25	0.597

Note 1) When a load is attached to the rod end, adjust the speed so that the maximum speed is no more than that shown in the graph for the corresponding load weight.


Note 2) The weight of cylinder's moving parts is included in the load weight. (See the graph on the right.)

#### Moving Parts Weight


##### MQM Moving Parts Weight

Bore size (mm)	Moving parts weight (g)
6	Weight = 8.2 + {1.6 x (stroke/15)}
10	Weight = 12.0 + {1.6 x (stroke/15)}
16	Weight = 28.6 + {2.2 x (stroke/15)}
20	Weight = 72.0 + {6.4 x (stroke/15)}
25	Weight = 117.6 + {9.2 x (stroke/15)}

#### Allowable Lateral Load at Rod End



##### Allowable Lateral Load at Rod End

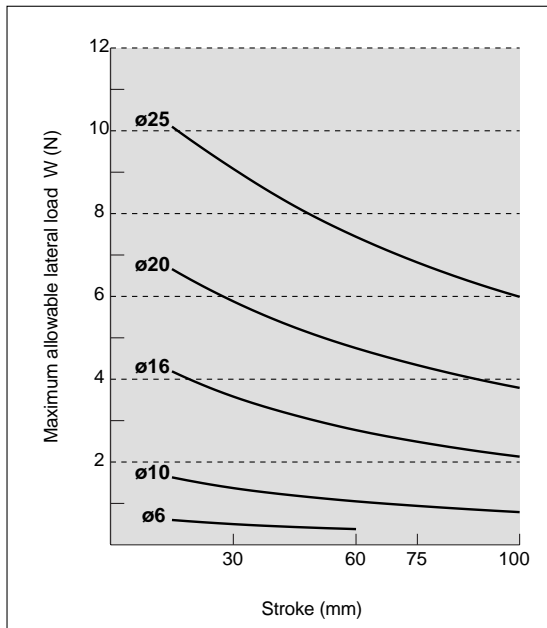


Note 1) The allowable lateral load varies depending on the size of a load (the distance to the load's center of gravity). Contact SMC for further details.


# Low Friction Cylinder (Single Acting)

## Series MQP

ø4, ø6, ø10, ø16, ø20

### How to Order

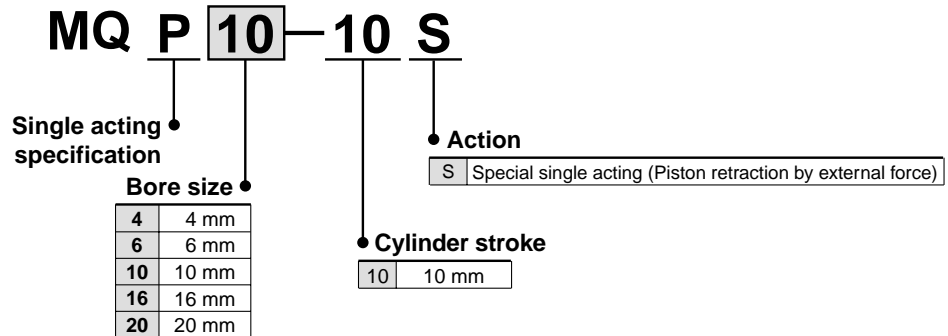

 \* Series MQP is not auto switch capable.

### Specifications



Bore size (mm)		4	6	10	16	20
Seal construction		Metal seal				
Action		Special single acting (Piston retraction by external force)				
Proof pressure		1.05 MPa				
Maximum operating pressure		0.7 MPa				
Minimum operating pressure <sup>Note 1)</sup>		0.001 MPa				
Ambient and fluid temperature		-5 to +80°C				
Lubrication <sup>Note 2)</sup>		Not required (Non-lube)				
Stroke length tolerance		+1.0 0				
Total allowable leakage	Supply pressure 0.1 MPa	100 cm <sup>3</sup> /min or less				
	Supply pressure 0.3 MPa	500 cm <sup>3</sup> /min or less				
	Supply pressure 0.5 MPa	1000 cm <sup>3</sup> /min or less				

Note 1) Except for the moving parts weight.

Note 2) Refer to precautions on page 22 regarding lubrication.

### Moving Parts and Total Weight

Unit: g


Bore size (mm)	Moving parts weight	Total weight
4	4	43
6	8	55
10	24	96
16	62	161
20	103	239

### Theoretical Output

Unit: N

Bore size (mm)	Piston area (mm <sup>2</sup> )	Operating pressure (MPa)						
		0.1	0.2	0.3	0.4	0.5	0.6	0.7
4	12.6	1.3	2.6	3.9	5.2	6.5	7.8	9.1
6	28.3	2.8	5.6	8.4	11.2	14.0	16.8	19.6
10	78.5	7.9	15.7	23.6	31.4	39.3	47.1	55.0
16	196.1	19.6	39.2	58.9	78.4	98.1	117.7	137.3
20	314.2	31.4	62.8	94.3	125.7	157.1	188.5	219.9

## Construction


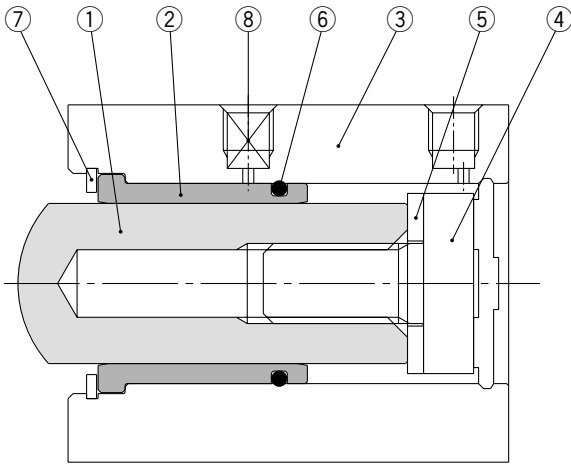


### Component Parts



No.	Description	Material	Note
1	Piston rod	Special stainless steel	
2	Liner	Special stainless steel	
3	Cylinder tube	Aluminum alloy	Hard anodized
4	Bolt	Carbon tool steel	
5	Bumper	Fluororesin	
6	O-ring	NBR	
7	Retaining ring	Carbon tool steel	Nickel plated
8	Plug	Carbon tool steel	Nickel plated

## Dimensions

ø4, ø6

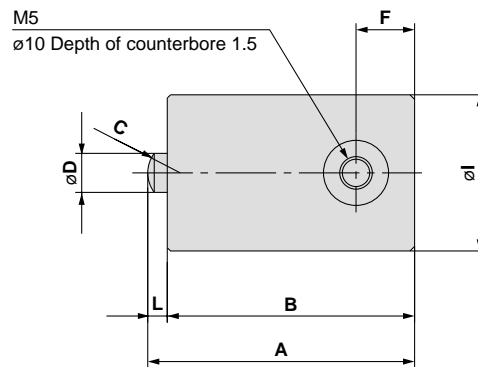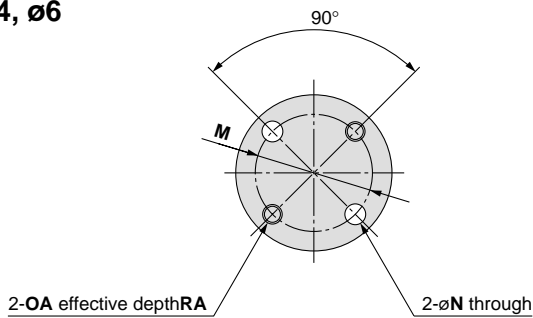

ø10, ø16, ø20

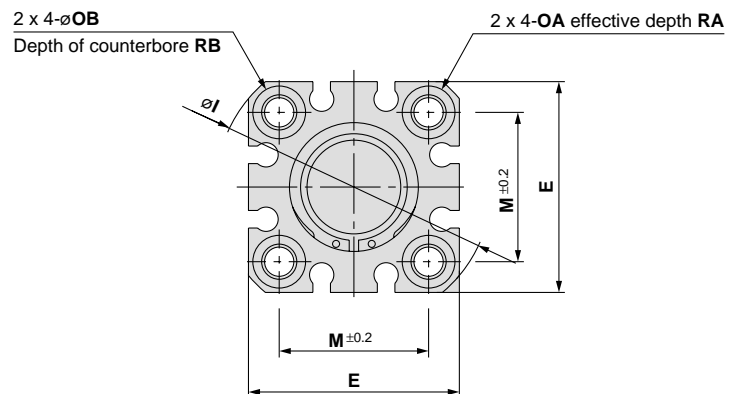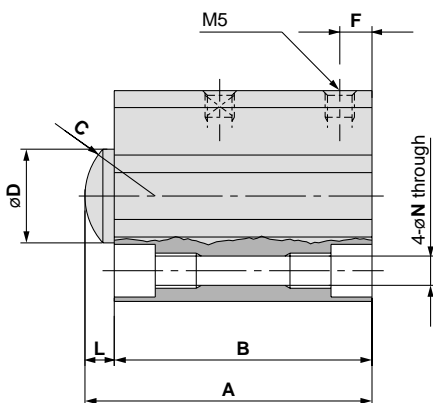

(mm)

Bore size (mm)	A	B	C	D <sup>Note)</sup>	E	F	I	L	M	N	OA	OB	RA	RB
4	41	38	SR3	4	—	9	22	3	16	3.2	M3	—	6	—
6	41	38	SR5	6	—	9	24	3	18	3.2	M3	—	6	—
10	46.5	41.5	SR8	10	29	5.5	38	5	20	3.5	M4	6.5	7	4
16	49	44	SR12	16	36	5.5	47	5	25.5	5.4	M6	9	10	7
20	52.5	47.5	SR15	20(19)	40	5.5	52	5	28	5.4	M6	9	10	7

Note) Figures in ( ) are the diameter in the rod end part.



# Series MQP

## Specific Product Precautions


Be sure to read before handling.

Refer to back page 1 through to 3 for Safety Instructions and Actuator Precautions.

### Operation

#### ⚠ Caution

1. When mounting, thoroughly flush out the connector piping and be sure that dirt and chips, etc., do not get inside the cylinder.
2. Install an air filter with a filtration degree of 5 μm or less on the air supply. Furthermore, when controlling for low speed or controlled output, use clean air (atmospheric pressure dew point temperature of -10°C or less). Installation of a mist separator (filtration degree 0.3 μm or less) is also recommended.
3. Use a metal seal type when using solenoid valves for cylinder actuation. If a rubber seal type is used, there may be an increase in operating resistance due to grease sprayed from the main valve.
4. This cylinder cannot be used at the end of its stroke. Use it with an intermediate stroke of 10 mm.
5. The rod end should not be directly attached to the equipment or workpiece. Also, make sure that the opposite side of the rod end is flat to make point-contact with the spherical surface of the rod end.

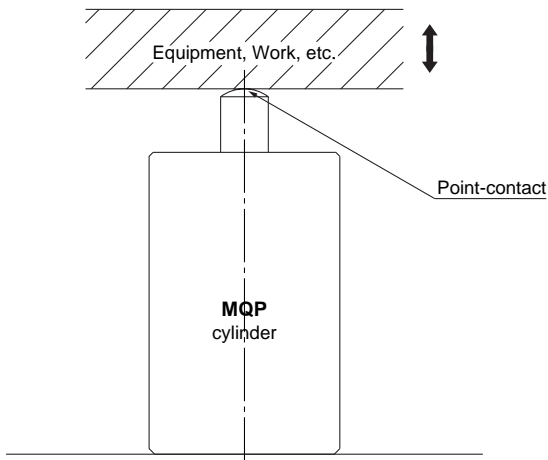

The material of the cylinder rod is heat-treated stainless steel (HRC60). The roughness of the spherical contact of the attaching part (Equipment, Work, etc) should be Rz6.3 and the material should be HB100 or greater (Aluminum material: 2000 line or 7000 line or equivalent) When higher precision or longer service life is required, we recommend using a heat-treated material + flat polished machined material (Rz0.8)


Also, although applying grease on the spherical contact parts will make the operation more smooth and reduce the abrasion, use caution to prevent any grease from being applied to the cylinder's sliding surface.

### Operation

6. When connecting, be sure to align the rod axis with the load and the direction of movement.

The allowable angle of the cylinder's mounting surface in an equipment should be 3° or less.

(1° or less is recommended.) When not properly aligned, a lateral load will likely be applied to the rod and the spherical surface will likely skid. This will result in a reduction or dispersion of thrust and likely a malfunction.

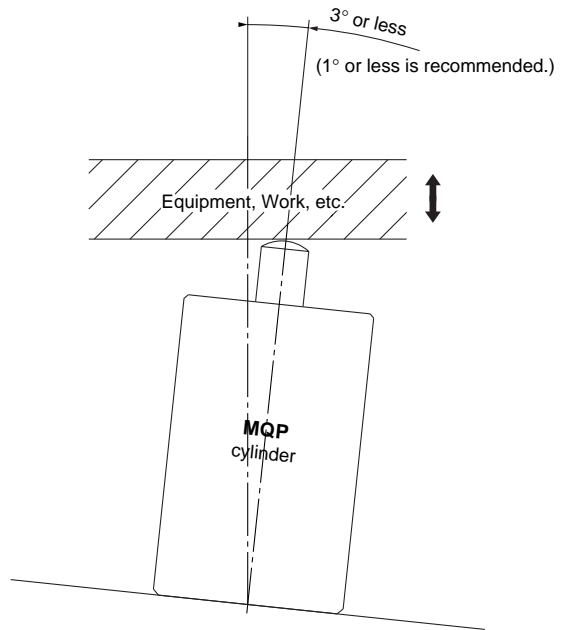

### Disassembly

#### ⚠ Caution

1. The component parts of the metal seal cylinder are manufactured to precision tolerances, and therefore cannot be disassembled.

### Lubrication

#### ⚠ Caution

1. Lubrication of non-lube type cylinder

Do not apply lubrication when controlling for low speed or controlled output. If lubrication is applied, there may be changes in operating resistance due to factors such as the viscosity and surface tension of the oil. Also, use a metal seal type when using solenoid valves for cylinder actuation. If a rubber seal type is used, there may be an increase in operating resistance due to grease sprayed from the main valve.

Lubrication is also unnecessary for high speed actuation, but in the event that lubrication is applied, use turbine oil class 1 (with no additives) ISO VG32. (Do not use spindle oil or machine oil.)



# Series *MQQ/MQM/MQP* Safety Instructions

The following safety instructions are intended to prevent a hazardous situation and/or equipment damage. The instructions indicate the level of potential hazard by labels of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, please observe all safety practices, including ISO 4414 <sup>Note 1)</sup> and JIS B 8370 <sup>Note 2)</sup>.

**⚠ Caution :** Operator error could result in injury or equipment damage.

**⚠ Warning :** Operator error could result in serious injury or loss of life.

**⚠ Danger :** In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – General rules relating to systems

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

## **⚠ Warning**

### **1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.**

Since the products specified here are used in various operating conditions, their compatibility with a specific pneumatic system must be based on specifications, post analysis and/or tests to meet a specific requirement. The expected performance and safety assurance is the responsibility of the person who determines the compatibility of the system. This person should continuously review the suitability of all specified items by referring to the latest information in the catalogue and by taking into consideration the possibility of equipment failure when configuring the system.

### **2. Only trained personnel should operate pneumatic machinery and equipment.**

Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

### **3. Do not service machinery/equipment or attempt to remove components until the safety of the worker is confirmed.**

1. Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driver objects have been confirmed.
2. When equipment is to be removed, confirm that all safety precautions have been followed. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
3. Before restarting any machinery/equipment exercise caution to prevent quick extension of a cylinder piston rod, etc.

### **4. Contact SMC if the product will be used in any of the following conditions:**

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
3. An application which has the possibility of having a negative affect on people, property, or animals, requiring special safety analysis.





# Series MQQ/MQM/MQP Actuator Precautions 1

Be sure to read before handling.

## Caution on Design

### ⚠ Warning

- 1. There is a possibility of dangerous sudden action by air cylinders if sliding parts of machinery are twisted due to external forces, etc.**

In such cases, human injury may occur; e.g., by catching hands or feet in the machinery, or damage to the machinery itself may occur. Therefore, the machine should be adjusted to operate smoothly and designed to avoid such dangers.

- 2. A protective cover is recommended to minimize the risk of personal injury.**

If a stationary object and moving parts of a cylinder are in close proximity, personal injury may occur. Design the structure to avoid contact with the human body.

- 3. Securely tighten all stationary parts and connected parts so that they will not become loose.**

Especially when a cylinder operates with high frequency or is installed where there is a lot of vibration, ensure that all parts remain secure.

- 4. A deceleration circuit or shock absorber may be required.**

When a driven object is operated at high speed or the load is heavy, a cylinder's cushion will not be sufficient to absorb the impact. Install a deceleration circuit to reduce the speed before cushioning, or install an external shock absorber to relieve the impact. In this case, the rigidity of the machinery should also be examined.

- 5. Consider a possible drop in circuit pressure due to a power outage, etc.**

When a cylinder is used in a clamping mechanism, there is a danger of workpieces dropping if there is a decrease in clamping force due to a drop in circuit pressure caused by a power outage, etc. Therefore, safety equipment should be installed to prevent damage to machinery and human injury. Suspension mechanisms and lifting devices also require consideration for drop prevention.

- 6. Consider a possible loss of power source.**

Measures should be taken to protect against bodily injury and equipment damage in the event that there is a loss of power to equipment controlled by pneumatics, electricity, or hydraulics.

- 7. Design circuitry to prevent sudden lurching of driven objects.**

When a cylinder is driven by an exhaust center type directional control valve or when starting up after residual pressure is exhausted from the circuit, etc., the piston and its driven object will lurch at high speed if pressure is applied to one side of the cylinder because of the absence of air pressure inside the cylinder. Therefore, equipment should be selected and circuits designed to prevent sudden lurching, because there is a danger of human injury and/or damage to equipment when this occurs.

- 8. Consider emergency stops.**

Design so that human injury and/or damage to machinery and equipment will not be caused when machinery is stopped by a safety device under abnormal conditions, a power outage or a manual emergency stop.

- 9. Consider the action when operation is restarted after an emergency stop or abnormal stop.**

Design the machinery so that human injury or equipment damage will not occur upon restart of operation.

When the cylinder has to be reset at the starting position, install manual safety equipment.

## Selection

### ⚠ Warning

- 1. Confirm the specifications.**

The products featured in this catalogue are designed for use in industrial compressed air systems. If the products are used in conditions where pressure and/or temperature are outside the range of specifications, damage and/or malfunctions may occur. Do not use in these conditions. (Refer to the specifications.)

Consult with SMC if you use a fluid other than compressed air.

- 2. Intermediate stops**

When intermediate stopping of the cylinder piston is performed by a 3 position closed center type directional control valve, it is not possible to maintain the stop position for an extended time due to the construction of the metal seal cylinder.

### ⚠ Caution

- 1. Operate the piston within a range such that collision damage will not occur at the stroke end.**
- 2. When controlling cylinder output, do not create a restricting circuit by using a speed controller, etc. Pressure inside the cylinder will drop and control will become impossible. Be sure to control actuation through pressure control.**

## Mounting

### ⚠ Caution

- 1. Be certain to match the rod shaft center with the direction of the load and movement when connecting.**

When not properly matched, problems may arise with the rod and tube, and damage may be caused due to friction on areas such as the inner tube surface, bushings, rod surface and seals.

- 2. When an external guide is used, connect the rod end and the load in such a way that there is no interference at any point within the stroke.**

- 3. Do not scratch or gouge the sliding parts of the cylinder tube or tube rod, etc., by striking or grasping them with other objects.**

Cylinder bores are manufactured to precise tolerances, so that even a slight deformation may cause malfunction. Also, scratches or gouges, etc., in the tube rod may lead to damaged seals and cause air leakage.

- 4. Prevent the seizure of rotating parts.**

Prevent the seizure of rotating parts (pins, etc.) by applying grease.



# Series MQQ/MQM/MQP Actuator Precautions 2

Be sure to read before handling.

## Mounting

### ⚠ Caution

5. Do not use until you verify that the equipment can operate properly.

After mounting, repairs, or modification, etc., connect the air supply and electric power, and then confirm proper mounting by means of appropriate function and leak tests.

6. Instruction manual

Install the products and operate them only after reading the instruction manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

## Piping

### ⚠ Caution


1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When screwing in pipes and fittings, etc., be certain that chips from the pipe threads and sealing material will not ingress inside the piping.

Also, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

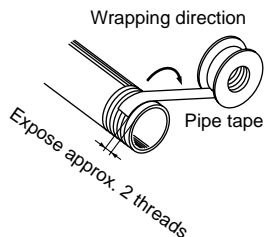

## Lubrication

### ⚠ Caution

1. Lubrication of non-lube type cylinder

Do not apply lubrication when controlling for low speed or controlled output. If lubrication is applied, there may be changes in operating resistance due to factors such as the viscosity and surface tension of the oil. Also, use a metal seal type when using solenoid valves for cylinder actuation. If a rubber seal type is used, there may be an increase in operating resistance due to grease sprayed from the main valve.

Lubrication is also unnecessary for high speed actuation, but in the event that lubrication is applied, use turbine oil class 1 (with no additives) ISO VG32. (Do not use spindle oil or machine oil.)

## Air Supply

### ⚠ Warning

1. Use clean air.

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

## Air Supply

### ⚠ Caution

1. Install air filters.

Install air filters near valves on their upstream side. The filtration degree should be 5  $\mu\text{m}$  or less. Furthermore, when controlling for low speed or controlled output, use clean air (atmospheric pressure dew point temperature of  $-10^{\circ}\text{C}$  or less). Installation of mist separator series AM (filtration degree 0.3  $\mu\text{m}$  or less) or series AM + AMD (filtration degree 0.01  $\mu\text{m}$  or less) is also recommended.

2. Install an aftercooler, air dryer, or water separator (Drain Catch).

Air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an air dryer, aftercooler or water separator, etc.

3. Use the product within the specified range of fluid and ambient temperature.

Take measures to prevent freezing when below  $5^{\circ}\text{C}$ , since moisture in circuits can freeze and cause damage to seals and lead to malfunctions.

For compressed air quality, refer to "Best Pneumatics" catalogue.

## Operating Environment

### ⚠ Warning

1. Do not use in atmospheres or locations where corrosion hazards exist.
2. In dusty locations or where water or oil, etc., splash on the equipment, take suitable measures to protect the rod.

## Maintenance

### ⚠ Warning

1. Perform maintenance procedures as shown in the instruction manual.

If it is handled improperly, malfunction or damage of machinery or equipment may occur.

2. Removal of equipment, and supply/exhaust of compressed air

Before any machinery or equipment is removed, first ensure that the appropriate measures are in place to prevent the fall or erratic movement of driven objects and equipment, then cut off the electric power and reduce the pressure in the system to zero. Only then should you proceed with the removal of any machinery and equipment.

When machinery is restarted, proceed with caution after confirming that appropriate measures are in place to prevent cylinders from sudden movement.

### ⚠ Caution

1. Drain flushing

Remove drainage from air filters regularly. (Refer to the specifications.)


**EUROPEAN SUBSIDIARIES:**

**Austria**

SMC Pneumatik GmbH (Austria).  
Girakstrasse 8, A-2100 Korneuburg  
Phone: +43 2262-62280, Fax: +43 2262-62285  
E-mail: office@smc.at  
http://www.smc.at


**France**

SMC Pneumatique, S.A.  
1, Boulevard de Strasbourg, Parc Gustave Eiffel  
Bussy Saint Georges F-77607 Marne La Vallée Cedex 3  
Phone: +33 (0)1-6476 1000, Fax: +33 (0)1-6476 1010  
E-mail: contact@smc-france.fr  
http://www.smc-france.fr


**Netherlands**

SMC Pneumatics BV  
De Ruyterkade 120, NL-1011 AB Amsterdam  
Phone: +31 (0)20-5318888, Fax: +31 (0)20-5318880  
Tel: +47 67 12 90 20, Fax: +47 67 12 90 21  
E-mail: info@smcpneumatics.nl  
http://www.smcpneumatics.nl


**Spain**

SMC España, S.A.  
Zuazobidea 14, 01015 Vitoria  
Phone: +34 945-184 100, Fax: +34 945-184 124  
E-mail: post@smc.smces.es  
http://www.smces.es


**Belgium**

SMC Pneumatics N.V./S.A.  
Nijverheidsstraat 20, B-2160 Wommelgem  
Phone: +32 (0)3-355-1464, Fax: +32 (0)3-355-1466  
E-mail: post@smcpneumatics.be  
http://www.smcpneumatics.be


**Germany**

SMC Pneumatik GmbH  
Boschring 13-15, D-63329 Egelsbach  
Phone: +49 (0)6103-4020, Fax: +49 (0)6103-402139  
E-mail: info@smc-pneumatik.de  
http://www.smc-pneumatik.de


**Norway**

SMC Pneumatics Norway A/S  
Vollsveien 13 C, Granfos Næringspark N-1366 Lysaker  
Tel: +47 67 12 90 20, Fax: +47 67 12 90 21  
E-mail: post@smc-norge.no  
http://www.smc-norge.no


**Sweden**

SMC Pneumatics Sweden AB  
Ekhagsvägen 29-31, S-141 71 Huddinge  
Phone: +46 (0)8-603 12 00, Fax: +46 (0)8-603 12 90  
E-mail: post@smcpneumatics.se  
http://www.smc.nu


**Bulgaria**

SMC Industrial Automation Bulgaria EOOD  
16 kiment Ohridski Blvd., fl.13 BG-1756 Sofia  
Phone: +359 2 9744492, Fax: +359 2 9744519  
E-mail: office@smc.bg  
http://www.smc.bg


**Greece**

S. Parianopoulos S.A.  
7, Konstantinoupoleos Street, GR-11855 Athens  
Phone: +30 (0)1-3426076, Fax: +30 (0)1-3455578  
E-mail: parianos@hol.gr  
http://www.smceu.com


**Poland**

SMC Industrial Automation Polska Sp.z.o.o.  
ul. Konstruktorska 11A, PL-02-673 Warszawa,  
Phone: +48 22 548 5085, Fax: +48 22 548 5087  
E-mail: office@smc.pl  
http://www.smc.pl


**Switzerland**

SMC Pneumatik AG  
Dorfstrasse 7, CH-8484 Weisslingen  
Phone: +41 (0)52-396-3131, Fax: +41 (0)52-396-3191  
E-mail: info@smc.ch  
http://www.smc.ch


**Croatia**

SMC Industrijska automatika d.o.o.  
Crnomerec 12, 10000 ZAGREB  
Phone: +385 1 377 66 74, Fax: +385 1 377 66 74  
E-mail: office@smc.hr  
http://www.smceu.com


**Hungary**

SMC Hungary Ipari Automatizálási Kft.  
Budafoki út 107-113, H-1117 Budapest  
Phone: +36 1 371 1343, Fax: +36 1 371 1344  
E-mail: office@smc-automation.hu  
http://www.smc-automation.hu


**Portugal**

SMC Sucursal Portugal, S.A.  
Rua de Engº Ferreira Dias 452, 4100-246 Porto  
Phone: +351 22-610-89-22, Fax: +351 22-610-89-36  
E-mail: office@smc.es  
http://www.smces.es


**Turkey**

Entek Pnömatik San. ve Tic Ltd. Sti.  
Perpa Tic. Merkezi Kat: 11 No: 1625, TR-80270 Olmeydani Istanbul  
Phone: +90 (0)212-221-1512, Fax: +90 (0)212-221-1519  
E-mail: smc-entek@entek.com.tr  
http://www.entek.com.tr


**Czech Republic**

SMC Industrial Automation CZ s.r.o.  
Hudcova 78a, CZ-61200 Brno  
Phone: +420 5 414 24611, Fax: +420 5 412 18034  
E-mail: office@smc.cz  
http://www.smc.cz


**Ireland**

SMC Pneumatics (Ireland) Ltd.  
2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin  
Phone: +353 (0)1-403 9000, Fax: +353 (0)1-464-0500  
E-mail: sales@smcpneumatics.ie  
http://www.smcpneumatics.ie


**Romania**

SMC Romania srl  
Str Frunzei 29, Sector 2, Bucharest  
Phone: +40 213205111, Fax: +40 213261489  
E-mail: smcromania@smcromania.ro  
http://www.smcromania.ro


**UK**

SMC Pneumatics (UK) Ltd  
Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN  
Phone: +44 (0)800 1382930 Fax: +44 (0)1908-555064  
E-mail: sales@smcpneumatics.co.uk  
http://www.smcpneumatics.co.uk


**Denmark**

SMC Pneumatik A/S  
Knudsminde 4B, DK-8300 Odder  
Phone: +45 70252900, Fax: +45 70252901  
E-mail: smc@smc-pneumatik.dk  
http://www.smcdk.com


**Italy**

SMC Italia S.p.A  
Via Garibaldi 62, I-20061 Carugate, (Milano)  
Phone: +39 (0)2-92711, Fax: +39 (0)2-9271365  
E-mail: mailbox@smcitalia.it  
http://www.smcitalia.it


**Russia**

SMC Pneumatik LLC.  
36/40 Sredny pr. St. Petersburg 199004  
Phone: +812 118 5445, Fax: +812 118 5449  
E-mail: smcfa@peterlink.ru  
http://www.smc-pneumatik.ru


**Estonia**

SMC Pneumatics Estonia OÜ  
Laki 12-101, 106 21 Tallinn  
Phone: +372 (0)6 593540, Fax: +372 (0)6 593541  
E-mail: smc@smcpneumatics.ee  
http://www.smcpneumatics.ee


**Latvia**

SMC Pneumatics Latvia SIA  
Smerla 1-705, Riga LV-1006, Latvia  
Phone: +371 (0)777-94-74, Fax: +371 (0)777-94-75  
E-mail: info@smclv.lv  
http://www.smclv.lv


**Slovakia**

SMC Priemysel'na Automatizacia, s.r.o.  
Námestie Martina Benku 10, SK-81107 Bratislava  
Phone: +421 2 444 56725, Fax: +421 2 444 56028  
E-mail: office@smc.sk  
http://www.smc.sk


**Finland**

SMC Pneumatics Finland OY  
PL72, Tiistinniityntie 4, SF-02031 ESPOO  
Phone: +358 207 513513, Fax: +358 207 513595  
E-mail: smcffi@smc.fi  
http://www.smc.fi


**Lithuania**

UAB Ottensten Lietuva  
Savanoriu pr. 180, LT-2600 Vilnius, Lithuania  
Phone/Fax: +370-2651602


**Slovenia**

SMC industrijska Avtomatika d.o.o.  
Grajski trg 15, SLO-8360 Zuzemberk  
Phone: +386 738 85240 Fax: +386 738 85249  
E-mail: office@smc-ind-avtom.si  
http://www.smc-ind-avtom.si


**OTHER SUBSIDIARIES WORLDWIDE:**

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE,  
CHINA, HONG KONG, INDIA, INDONESIA, MALAYSIA, MEXICO,  
NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA,  
TAIWAN, THAILAND, USA, VENEZUELA

<http://www.smceu.com>  
<http://www.smcworld.com>