# 3 Port Direct Operated Poppet Rubber Seal

# Series VT317

Large Flow Capacity, yet Compact Size.

Dimensions(W X H X D)······45 X 89.5 X 45

VT317······Nt/min 687.05 1/4

Suitable for Use in Vacuum Applications
-101.2kPa

(Vacuum Model: VT/VO317V)


### 1 Valve, 6 Functions.

(Universal Porting)

Selective porting can provide 6 valve functions, such as N.C. valve, N.O. valve, Divider valve, Selector valve etc.



### JIS Symbol

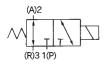

### Model

	Single unit	Manifold style
Standard	VT317	VO317
Continuous duty	VT317E	VO317E
Vacuum	VT317V	VO317V

### Manifold

Moldel	Applicable manifold style	Accessories
VO317□	Common or individual exhaust	O ring (P10-4 pcs.) Bolts (M4 X 20-2 pcs.)

### **Standard Specifications**

Actuation			Direct operated 2 positon single solenoid	
Fluid		Air		
Operating pressure range			0 to 0.9MPa	
Ambient and fluid temperatur	e		0 (No condensation) to 50°C	
Response time (1)			30ms or less (0.5MPa)	
Max. operating frequency			10Hz	
Lubrication			Not required (If using a lubricant, use turbine oil Class 1 ISO VG32.)	
Manual override			Non-locking push style	
Mounting position			Free	
Impact/Vibration resistance (2	!)		150/50m/s <sup>2</sup>	
Enclosure			Dust proof	
Effective area mm <sup>2</sup> (Nt/min) (3	Effective area mm <sup>2</sup> (Nt/min) (3)		12.6(687.05)	
Weight		0.29kgf		
Electrical entry	Electrical entry		DIN connector	
Malka na	AC(50	0/60Hz)	100, 200, 24*, 48*, 110*, 220*, 240*	
Voltage		oc i	24, 6*, 12*, 48*, 100*	
Allowable voltage			-15% to+10% of rated voltage	
A ====================================	AC	Inrush	19VA (50Hz), 16VA (60Hz)	
Apparent power (4)	AC	Holding	11VA (50Hz), 7VA (60Hz)	
Power consumption (4)		C	Without light: 6W, With light: 6.3W	
Indicator light and surge suppressor	/	AC DA	ZNR (Varister), Neon lamp	
		C	ZNR (Varister), LED (Neon lamp for 100V or more)	



Note 1) Based on dynamic performance test JIS B8374-1981. (Coil temperature 20C°, at rated voltage, without surge voltage suppressor.)

Note 2) Impact resistance: No malfunction resulted from the impact test using a drop impact tester.

The test was performed on the axis and right angle directions of the main valve and armature, for both energized and de-energized states.

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz.

Test was performed at both energized and de-energized states to the

axis and right angle directions of the main valve and armature. (Value in the initial stage.)

Note 3) This is the value for single valve. For manifold type, refer to "Manifold Specifications" on p.2.5-12.

Note 4) At rated voltage.



Protective class

class I (Mark: (4))

### **Option Specifications**

### Continuous Duty Style: VT317E

Exclusive use of VT317E is recommended for continuous duty with long time loading.

### 

- This model is for continuous duty, not for high cycle rates. But even in low cycle rates, if energizing the valve more than once a day, consult SMC.
- Energizing solenoid should be done at least once in 30 days.

### Vacuum Style: VT317V

This vacuum model has less air leakage than the standard model under low pressure. It is recommended for vacuum applications.

### 

 Since this valve has slight air leakage, it can not be used for vacuum holding (including positive pressure holding) in the pressure container.

Specifications different from standard are as follows.


Operating pressure range | -101.2kPa to 0.1MPa

### 

Be sure to read before handling.
Refer to p.0-33 to 0-36 for Safety
Instruction and common precautions.


### 

- A bleed port for the main valve is located at the bottom of the solenoid valve. Since blocking it causes malfunction, do not block it.
- \* When mounted on the metallic surface, bleeding is normally done from the bleed port through the bleed groove, but when mounted on an elastic surface, elastic shape deformation may close the port.
- Make sure that dust and/or other foreign materials should not enter the valve from the unused port such as exhaust port. Also, since there is a bleed port for the armature in the manual override, do not allow accumulation of dust and/or other foreign materials to block bleed port.

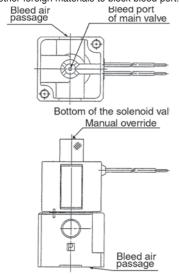

### **How to Calculate Flow Rate**

Refer to p.0-36 for the calculation of flow rate.

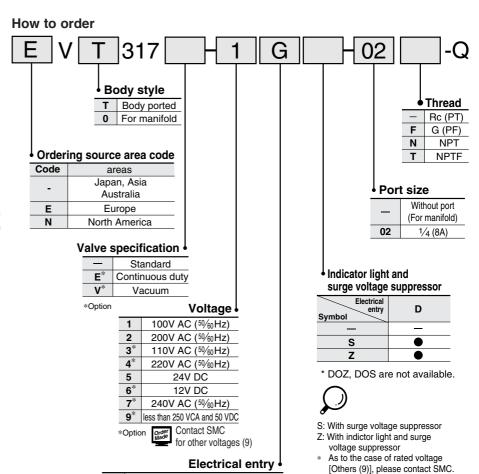


DIN connector (with connector)

**DO** DIN connector (without connector)

D

### Construction


## De-energized

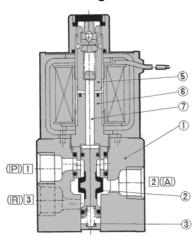

### Operation principles <De-energized>

Spool valve 2 is pushed upward by the return spring 3, port [P] is closed, and port [A] and port [R] are opened.

### **Energized**

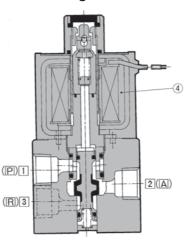

### <Energized>

When an electric current is applied to the molded coil 4), the armature 5 is attracted to the pole 6, and through the push rod ⑦, it pushes down the spool valve ②. Then port [P] and port [A] are connected. At this time, there will be gaps between will be magnetically attracted to the pole 6.

### **Component Parts**


No.	Description	Materrial	Notes
1	Body	Aluminum die cast	Color: Platinum silver
2	Spool valve	Aluminum, NBR	

### 

### **Change of Electrical Entry Angle**

- 1) Series VT317 can change electrical entry angle. (4 positions)
- 2) How to change:

Loosen the nut ①, remove the coil ② from the body assembly 3, place the positioning pin 4 at the required place, put back the coil 2 to its place, and tighten sufficiently with lock nut 1.

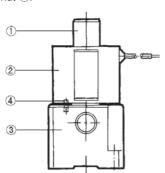


### Indicator light and surge voltage supressor

### **DIN** connector/Conduit terminal

· With surge voltage suppressor (S)




· With indicator light and surge suppressor (Z) 48V DC or less 100V DC

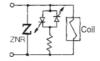



### Wiring

DIN connector is connected inside as in the figure below. Connect to the corresponding power supply.

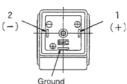

Applicable cable O.D.

ø6 to ø12


Note)For those with an external measurement of ø9 to ø12, remove the inner portion of the ground gasket before using.

Applicable crimping terminal

The maximum size for the round termi-


nal is 1.25mm2-3.5 and for the Y terminal is 1.25mm -4.

### Dimensions (mm)

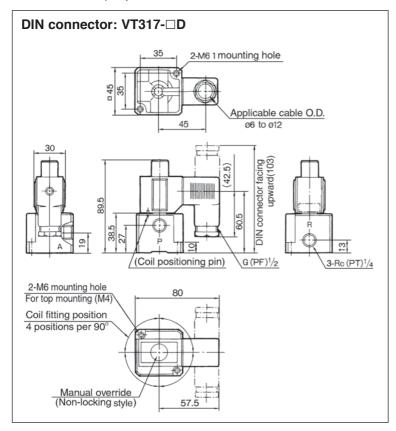

## Series VT317 Manifold


VT307 manifold is B mount style and available both as a common exhaust and individual exhaust model.

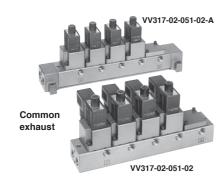



### **Specifications**

Manifold style				B Mount		
Ma	Max. number of stations			20 (1)		
Applicable solenoid valve			VO317□-□□□ <sup>(3)</sup> -Q			
Exhaust Port lo			cation (piping)/Po	ort size	Effective area (mm²)	
Code	le Style P		Α	R	(Nℓ/min)	
1	Common (2)	Base (side) 1/4 (3/8)	Base (side)	Base (side) 1/4 (3/8)	10	
3	Individual	$\frac{\text{Base (side)}}{\frac{1}{4}}$	Base (side)	Base (side)	(549.64)	

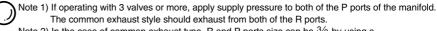

Note 2) In the case of common exhaust type, R and P ports size can be  $\frac{3}{8}$  by using a mounting adaptor.

Note 3) Can also be applied to Series VVT320 manifold.

### Caution

### Changing from NC to NO

Universal porting permits convertibility NC/NO by a simple 180-degree rotation.

Exhaust Valve	N.C.	N.O.
Common exhaust	A A	
Individual exhaust	R R R A	



Option

\*) Changing from NC to NO

This product is delivered as N.C. valve.

If N.O. valve is needed, remove mounting screws of the required valve and turn the valve at 180 degrees. (Make sure that there are O rings fixed on 4 positions of the valve surface.) Then, tighten the mounting screws to fix the valve to the manifold base.

## Mounting

Precautions

Be sure to read before handling.

Refer to p.0-33 to 0-36 for Safety Instruction and common precautions.

### 


- Each valve is fixed to the manifold base with two M4 mounting screws. Tighten the screws evenly when re-mounting. Tightening torque of the mounting screw (M4): 1.4Nm
- ② For mounting, tighten M4 or equivalent screws evenly into the mounting holes of the manifold base.


### Ordering source area code

Code	areas
-	Japan, Asia
	Australia
E	Europe
N	North America

# Description Part No. Blank plate (With screw, O ring) PVT317-53-1A Mounting adaptor DXT010-37-4 (with screw) (for common exhaust)


## How to Order Manifold Base

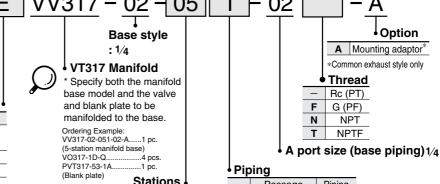

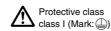


	<u> </u>		
02		2 stations	
	:	:	
	20	20 (Max)	

### Common Exhaust/Dimensions (Interchangeable with VVT320 for mounting.)

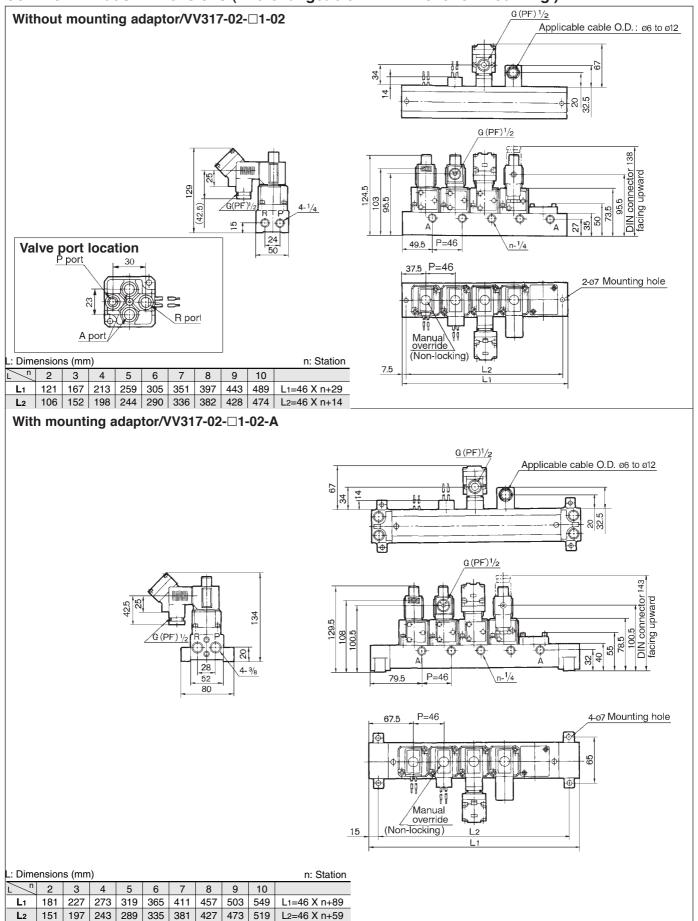

## VT317

### Individual Exhaust/Dimensions (mm)

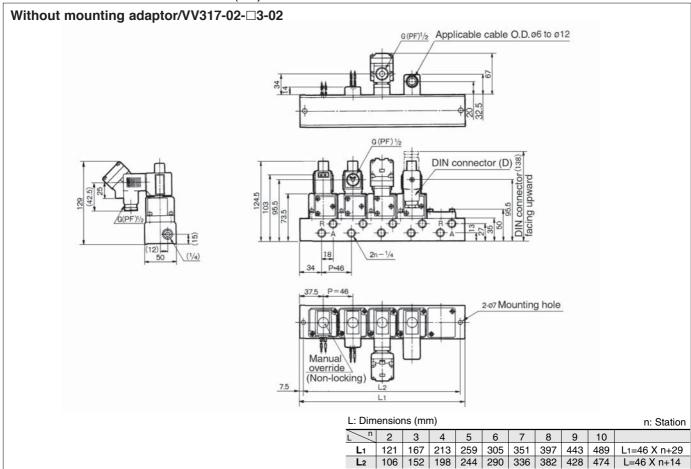

# 3 Port Poppet Rubber Seal

## Series VT325

Compact yet provides a large valve capacity

Dimensions (W X H X D) ...55 X 118 X 53 VT325: N/min 1472.25...3/8


## A single valve with 6 valve functions (Universal porting style)

Six valve functions can be attained by selecting the piping ports. (Enabling the NC valve, NO valve, divider valve, selector valve, etc. to be used as desired.)

### Can be used for vacuum applications

-101.2kPa

(Vacuum style: VT/VO325V)

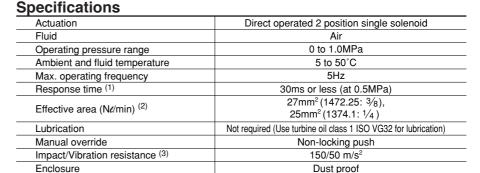

Not Not

Note 1) As per JIS B8374-1981 (Coil temperature 20°C, at rated voltage, without surge suppressor)

Note 2) Value for valve unit. It varies in case of manifold. Refer to p.2.5-18 for manifold specifications.

Note 3) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve and armature, each one time when energized and de-energized. (Initial value)

Vibration resistance: No malfunction from test with 45 to 1000Hz 1 sweep, to axis and right angle directions of main valve and armature, each one time when energized and de-energized. (Initial value)



VT325-□□D

### **Solenoid Specifications**

Electrical entry				DIN connector
Coil rated voltage			100 aı	nd 200 VAC, (50/60Hz), 24VDC
Allowable voltage		-15% to +10% of rated voltage		
	AC	T	50Hz	75VA
A ====== (3)		Inrush	60Hz	60VA
Apparent power (3)		11-1-6	50Hz	27VA
		Holding	60Hz	17VA
Power consumption (3)	DC		12W	



Note 3) At rated voltage


### Model


Model	Port size	Piping	Weight
VT325-02□D	1/4	Pody ported	0.551.5
VT325-03□D	3/8	Body ported	0.55kg

### Manifold

Model	Applicable manifold	Accessories	
VO325-00□□	B mount common exhaust style	Seal (DXT083-13-1), Bolt (DXT083-19-1, 2 pcs.)	

### **Symbol**

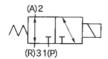

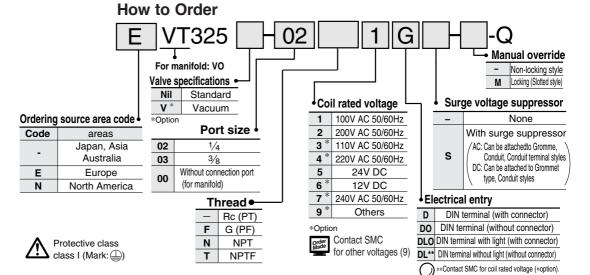

### **Option Specifications**

### 1.For vacuum

Pressure range -101.2kPa to 0.1MPa

In contrast to the standard product, this vacuum specification valve has less air leakage at low pressures, a feature that should be taken into consideration when using this valve for vacuum applications.

### **⚠** Caution

 Because this valve leaks air, it cannot be used for maintaining a vacuum (or pressure) in a pressure vessel.

#### 2.Manual override with lock


- Using a screwdriver, push the manual override button that is located in the head portion of the solenoid valve in order to directry push the spool valve downward, thus causing the valve to switch.
- 2) With the button remaining pushed down, turn it approximately 90° clockwise or counterclockwise to maintain the manual override locked state.
- 3) To revert to the original state, keep the button pushed down and turn it approximately 90° clockwise or counterclockwise.

### **↑** Precaution

Be sure to read before handling.
Refer to p.0-33 to 0-36 for Safety
Instructions and common precautions.

### **⚠** Caution


- 1. The bottom of the solenoid valve has a breather hole for the main valve. Take proper measures to prevent this hole from being blocked as this will lead to a malfunction.
- \* Ordinarily, when the solenoid valve is mounted on a metal surface, it can breathe through the breather hole, via the breather groove, However, in particular, if the surface to be mounted is made of rubber, the rubber could deform and block the hole.

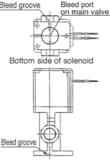

2. Take proper measures to prevent dust or foreign matter from entering through unused ports.

The grommet portion contains a breather hole for the core. Take proper measures to prevent dust or foreign matter from accumulating in this area.

### Construction

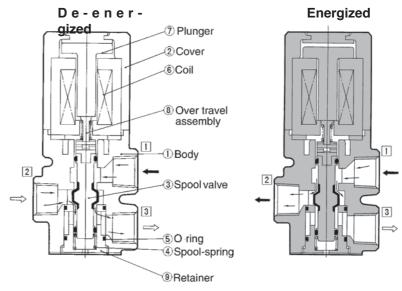

## Operation principles <De-energized>

The spool ③ is pushed upward by the force of the spring ④ and the air passage between port ② and port ③ is opened and port ① is blocked.

Air flow direction:  $\boxed{1} \longleftrightarrow \mathsf{Block}, \boxed{2} \longleftrightarrow \boxed{3}$ 

### <Energized>

When the coil (§) is energized the plunger (⑦) is pulled down depressing the spool (③) via the overtravel assembly (§) and the air passage between port (①) and port (②) is opened and port (③) is blocked.

Air flow direction:  $\boxed{1} \longleftrightarrow \boxed{2}$ ,  $\boxed{3} \longleftrightarrow \mathsf{Block}$ 

#### Parts list

	No.	Description	Material	Notes
	1	Body	ADC	Platinum silver
	<ul><li>Cover</li><li>Spool valve</li></ul>		ADC	Platinum silver
			Aluminum, NBR	

### **How to Use DIN Connector**

### 1. How to wire

- 1) Loosen the fix screw and pull off the connector from the pin plug.
- 2) Make sure to pull out the retaining screw before inserting a screwdriver into the groove at the lower portion of the terminal board. Then, push the screwdriver up to separate the terminal board and the terminal cover.
- 3) Following the wiring procedure, properly connect the wires to the specified terminals.
- As a rule, wires are connected to the terminals using crimp-style terminals. Therefore, select crimp-style terminals that do not overstrain the terminal hardware.

Wiring figure

Single sole [2 1] (-),3,(+) Terminal block view (1)
Connect wires to
terminals 1 and 2.
Terminal 3 is not used.

Pin plug

### 2. Change of electrical entry

Once the terminal cover is separated from the terminal block, it can be rotated in any direction (4 directions, each 90°) to change the orientation of the electrical entry.

### Flow rate

Refer to p.0-36 for flow rate calculation.

### 3. Caution

To insert the connector into the pin plug or to pull it out, do so as vertically as possible, without tilting.


### 4. Applicable cable

Cord external: ø6 to ø12

Note: For those with external measure ments of ø9 to ø12, remove the inner portion of the ground gasket before use.


#### 5. Applicable crimp-style terminals

The maximun size for the round terminal is 1.25mm<sup>2</sup>-3.5 and for the Y terminal is 1.25mm<sup>2</sup>-4.

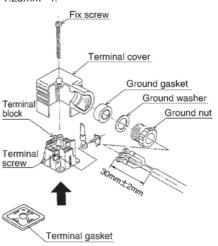




### Dimensions (mm)

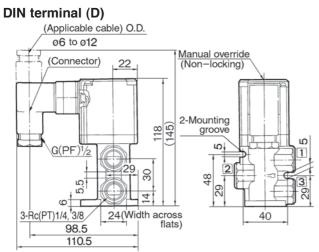


### With locking manual override

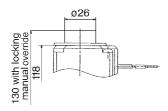

## Series VT325 Manifold

### VT325 Series Manifold Model has a Bmount style with common exhaust.

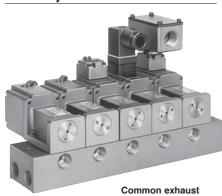

### 


### How to Change from NC to


TN@ves are asembled as NC valves at the time of shipment. By removing the two retaining screws from the desired valves, and rotating each valve body 180° and reassembling it on the manifold base, it is possible to reassemble an NC valve as an NO valve. (When doing so, make sure that a gasket is attached to the mounting surface of the valve.) Properly tighten the screws. The tightening torque of the retaining screws is 3Nm.

**Manifold Specifications** 


Manifold				B-mount			
Max. number of stations				17 <sup>(1)</sup>			
Applicable solenoid valve				VO325-00□□-Q			
Exhaust	Port location/Port size			Piping			Effective area (mm²)
port style	Р	Α	R	Р	Α	R	(Nℓ/min)
Common	Base 1/4,3/8	Base 1/4,3/8	Base 1/4, 3/8	Side	Side/ Bottom	Side	19 (1030.58)
Option			Blank plat	e (packing w/screw)			DXT083-21A

Note 1) If there are more than 4 stations, supply air from both P ports and exhaust from both R ports.

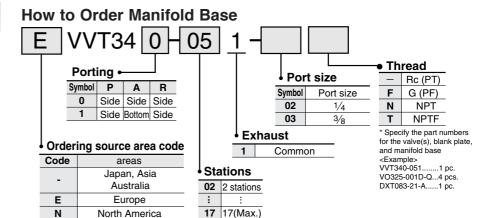

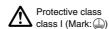

### **Dimensions**

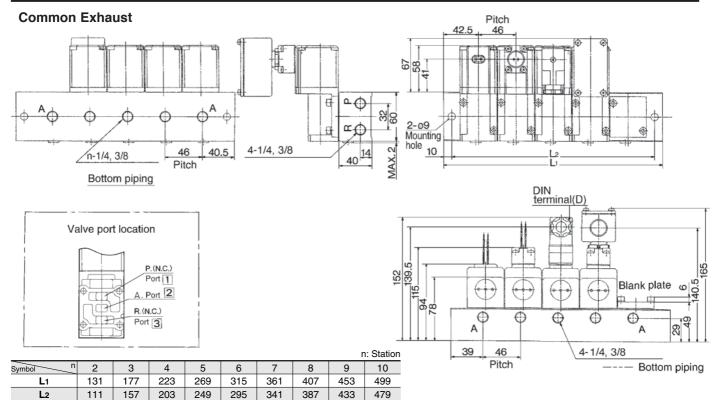

Equation: L1=46n+39, L2=46n+19

