

# Air Cylinder Short Type

New

CAT.EUS20-212A-UK

Compact with a new construction!
New release with full functions

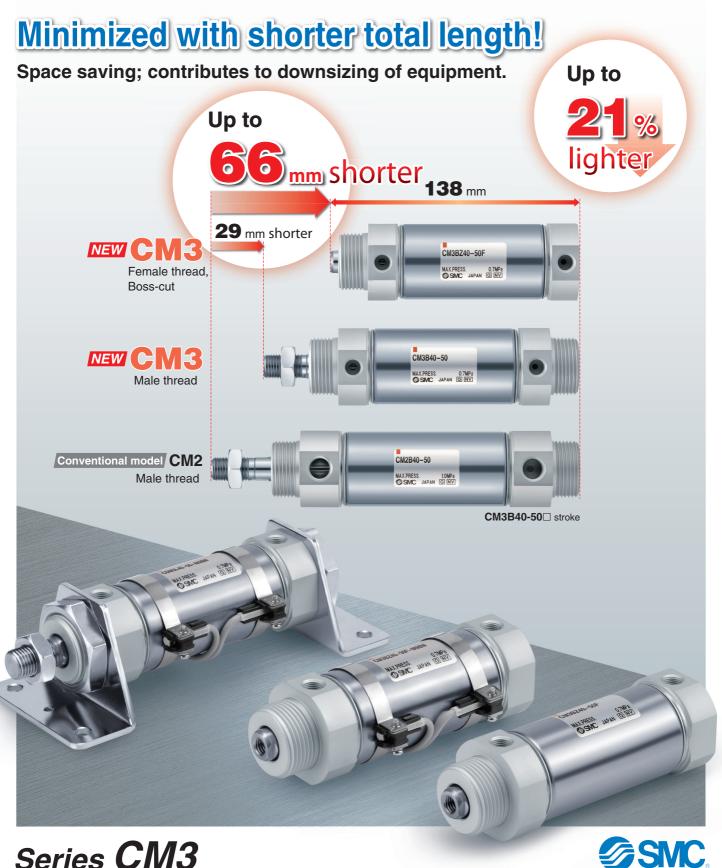

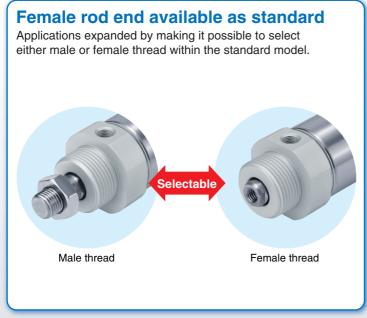




# Shorter total length than CM2 series Bore size (mm) Shortened by 20 17 mm 25 17 mm 32 13 mm 40 29 mm \* Compared with the basic type with male thread Tube is resistant against external shock. Prevents deformation and damage by external shock. Small auto switches are mountable. 86° Single clevis Pivoting single clevis and trunnion bracket are mountable. Max. rotating angle 202° Rotation: Max. 202° (CM3C40) 90° Pivoting bracket Rod trunnion

## **Series Variations**

Series	Bore size (mm)	Standard stroke (mm)	Action	Rod	Mounting	Built-in magnet for auto switch	Rubber bumper	Auto switch
СМЗ	20, 25, 32, 40	25 to 300	Double acting	Single rod	Basic, Foot, Flange, Clevis, Trunnion, etc.			D-M9□(W), D-A90

# Air Cylinder Short Type Standard: Double Acting, Single Rod Series CN3 ø20, ø25, ø32, ø40

## **How to Order**

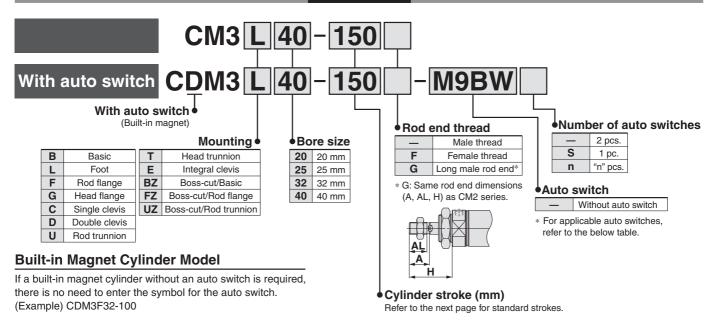

Applicable Auto Switches/Refer to pages 1263 to 1371 in Best Pneumatics No. 2 for further information on auto switches.

		Electrical	tor	Wiring		Load vol	tage	Auto switch	Lead	d wir	e ler	ngth	(m)	Pre-wired					
Type	Special function	entry	Indicator light	(Output)	ı	DC	AC	model	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	None (N)	connector	Applica	ble load			
				3-wire (NPN)		5 V, 12 V		M9N		•		0	_	0	IC circuit				
_		Grommet		3-wire (PNP)		5 V, 12 V		M9P	•	•		0	_	0	ic circuit				
switch				2-wire		12 V		M9B	•	•		0	_	0	_				
S		Connector	ctor			12 V		H7C	•	_		•		_					
anto		Terminal		3-wire (NPN)		5 V, 12 V		G39A		_	-	_		_	IC circuit	Relay,			
a		conduit	Yes	2-wire	24 V	12 V	] — [	K39A		_	_	_		_	_	PLC			
state	Diagnostic indication			3-wire (NPN)		5 V, 12 V		M9NW	•	•		0	_	0	IC circuit				
<u> </u>	(2-colour indication)	cation) 3-wire (PNP)		5 V, 12 V		M9PW	•	•		0	_	0	10 on our						
Solid	,	Grommet		2-wire					12 V		M9BW	•	•		0	_	0	_	
	Water resistant (2-colour indication)							H7BA	_	_	•	0	_	0					
	With diagnostic output (2-colour indication)			4-wire (NPN)		5 V, 12 V		H7NF	•	_		0	_	0	IC circuit				
			Yes	3-wire (NPN equivalent)	_	5 V	_	A96	•	_	•	_	_	_	IC circuit	_			
ڃ		Grommet					100 V	A93		_			_	_	_				
switch		arominot	No				100 V or less	A90		_		_	_	_	IC circuit				
S			Sə				100 V, 200 V	B54		_			_	_		Relay,			
auto			No Yes No Yes No				200 V or less	B64	•	_		_	_	_	_	PLC			
ā		Connector	Yes	2-wire	24 V	12 V	_	C73C		_									
Reed		Commodia	9	2-WII 6	24 V		24 V or less	C80C	•	_		•		_	IC circuit	IC circuit			
ď		Terminal			_	A33A		_	-	_		_		PLC					
		conduit	Yes				100 V, 200 V	A34A		<u> </u>	_	_		_	_	Rolay			
		DIN terminal	۳				100 V, 200 V	A44A		_	_	_		_	— Relay,	PLC			
	Diagnostic indication (2-colour indication)	Grommet				_	_	B59W		_		_	<u>  — </u>	_		. 20			

- \* Lead wire length symbols: 0.5 m ......Nil (Example) M9NW
  - 1 m ······ M (Example) M9NWM 3 m ······ L (Example) M9NWL
  - 5 m ······· Z (Example) M9NWZ None ······ N (Example) H7CN
- \* Solid state auto switches marked with "  $\bigcirc$  " are produced upon receipt of order.
- \* Do not indicate suffix "N" for no lead wire on the D-A3□A/A44A/G39A/K39A types.
- \* The D-G39A/K39A cannot be mounted on the bore size  $\varnothing 20$ .
- \* The D-A9 $\square$ V/M9 $\square$ V/M9 $\square$ WV types and the D-M9 $\square$ A(V)L type cannot be mounted.
- \* Since there are other applicable auto switches than listed above, refer to page 16 for details.
- \* For details about auto switches with pre-wired connector, refer to pages 1328 and 1329 in Best Pneumatics No. 2.
- \* The D-A9 \( /M9 \) /M9 \( /M9 \) W type auto switches are shipped together, (but not assembled). (However, auto switch mounting brackets are assembled when being shipped.)
- \* Water resistant type auto switch can be mounted to the models with the above mentioned part numbers, but this does not guarantee the water resistance of the cylinder. A water resistant type cylinder is recommended for use in an environment which requires water resistance.
- \* For other applicable auto switches, please contact SMC.





# JIS Symbol

### Double acting, Single rod



Refer to pages 13 to 16 for cylinders with auto switches.

- Auto switch proper mounting position (detection at stroke end) and its mounting height
- Minimum stroke for auto switch mounting
- Operating range
- Auto switch mounting brackets/Part no.

# **∧** Warning

- Operate the cylinder within the specified cylinder speed, kinetic energy and lateral load at the rod end.
- The allowable kinetic energy is different between the cylinders with male rod end and with female rod end due to the different thread sizes. Refer to page 4.
- When female rod end is used, use a washer, etc. to prevent the contact part at the rod end from being deformed depending on the material of the workpiece.

# **⚠** Caution

 Use a thin wrench when tightening the piston rod.

# **Specifications**

Bore siz	e (mm)	20	25	32	40	
Туре		Pneumatic				
Action			Double actin	g, Single rod		
Fluid			Д	ir		
Proof pressure			1.0	MPa		
Maximum operatir	ng pressure		0.7	MPa		
Minimum operatin	g pressure	0.05 MPa				
Ambient and fluid	temperature	Without auto switch: -10 to +70°C (No freezing) With auto switch: -10 to +60°C (No freezing)				
Lubrication		Not required (Non-lube)				
Stroke length tole	rance	+1.4 0 mm				
Piston speed		50 to 750 mm/s				
Cushion		Rubber bumper				
Allowable kinetic	0.2 J	0.29 J	0.46 J	0.84 J		
energy	0.11 J	0.18 J	0.29 J	0.52 J		

<sup>\*</sup> Operate the cylinder within the allowable kinetic energy. Refer to page 4 for details.

# **Standard Strokes**

Bore size (mm)	Standard stroke (mm) Note)
20	
25	05 50 75 100 105 150 000 050 000
32	25, 50, 75, 100, 125, 150, 200, 250, 300
40	



Other intermediate strokes can be manufactured upon receipt of order. Manufacture of intermediate strokes in 1 mm intervals is possible. (Spacers are not used.)

#### **Boss-cut**

Boss for the head cover bracket is eliminated and the total length of cylinder is shortened.



# Comparison of the Full Length Dimension (Versus CM3□-□ type)

(versus sinon in type)						
	ø <b>20</b>	ø <b>25</b>	ø <b>32</b>	ø <b>40</b>		
	-13	-13	-13	-16		

#### Mounting

- Boss-cut/Basic (BZ)
- Boss-cut/Rod flange (FZ)
- Boss-cut/Rod trunnion (UZ)

# Mounting Brackets/Part No.

Min.		В	ore siz	ze (mn	n)	Contents	
Mounting bracket	order qty.	20	25	32	40	(for minimum order quantity)	
Foot *	2	CM-L020B	CM-L	.032B	CM-L040B	2 foots, 1 mounting nut	
Flange	1	CM-F020B	CM-F	032B	CM-F040B	1 flange	
Single clevis **	1	CM-C020B	CM-C	032B	CM-C040B	1 single clevis, 3 liners	
Double clevis *** (with pin)	1	CM-D020B	CM-D	CM-D032B CM-D040B		1 double clevis, 3 liners, 1 clevis pin, 2 retaining rings	
Trunnion (with nut)	1	CM3-T020B	CM3-	Г032В	CM3-T040B	1 trunnion, 1 trunnion nut	

- \* Order 2 foots per cylinder.
- \*\* 3 liners are included with a clevis bracket for adjusting the mounting angle.
- \*\*\* A clevis pin and retaining rings (split pins for ø40) are included.



# **Mounting and Accessories**

Accessories		Standard		Option			
Mounting	Mounting nut	Rod end nut (male thread)	Clevis pin	Single knuckle joint	Double knuckle joint Note 3)	Pivoting clevis bracket Note 4)	
Basic	●(1 pc.)	•	-	•	•	_	
Foot	<b>●</b> (2)	•	_	•	•	_	
Rod flange	●(1)	•	_	•	•	_	
Head flange	●(1)	•	_	•	•	_	
Integral clevis	Note 1)	•	_	•	•	•	
Single clevis	Note 1)	•	_	•	•	_	
Double clevis Note 3)	Note 1)	•	Note 5)	•	•	_	
Rod trunnion	●(1) Note 2)	•	_	•	•	_	
Head trunnion	●(1) Note 2)	•	_	•	•	_	
Boss-cut/Basic	●(1)	•	_	•	•	_	
Boss-cut/Rod flange	<b>●</b> (1)	•	_	•	•	_	
Boss-cut/Rod trunnion	●(1)	•	_	•	•	_	



- Note 1) Mounting nuts are not attached to the integral clevis, single clevis and double clevis types.
- Note 2) Trunnion nuts are attached to the rod trunnion and head trunnion types.
- Note 3) A pin and retaining rings (split pins for ø40) are included with the double clevis and double knuckle joint.
- Note 4) A pivoting clevis bracket pin and retaining rings are included with the pivoting clevis bracket.
- Note 5) Retaining rings (split pins for ø40) are included with the clevis pin.

# Mounting Brackets, Accessories/Material, Surface Treatment

Segment	Description	Material	Surface treatment
	Foot	Iron	Nickel plated
N 4	Flange	Iron	Nickel plated
Mounting brackets	Single clevis	Iron	Nickel plated
Diackets	Double clevis	Iron	Nickel plated
	Trunnion	Iron	Electroless nickel plated
	Rod end nut (male thread)	Iron	Nickel plated
	Mounting nut	Iron	Nickel plated
	Trunnion nut	Iron	Nickel plated
	Pivoting clevis bracket	Iron	Nickel plated
Accessories	Pivoting clevis bracket pin	Iron	(None)
Accessories	Single knuckle joint	Iron	Electroless nickel plated
	Double knuckle joint	Iron	Electroless nickel plated Metallic silver colour painted for ø40
	Double clevis pin	Iron	(None)
	Double knuckle joint pin	Iron	(None)

# **⚠** Warning

1. Do not rotate the cover.

If a cover is rotated when installing a cylinder or screwing a fitting into the port, it is likely to damage the junction part with cover.

# **⚠** Caution

1. Do not touch the cylinder during operation at a high speed and a high frequency.

Use caution when handling a cylinder, which is running at a high speed and a high frequency, because the surface of a cylinder tube could get so hot enough as to cause you get burned.

2. Do not use the air cylinder as an air-hydro cylinder.

If it uses turbine oil in place of fluids for cylinder, it will result in oil leakage and damage the product.

# Weights

					(kg
	Bore size (mm)	20	25	32	40
	Basic	0.12	0.18	0.25	0.45
	Long male rod end (G)	0.13	0.20	0.27	0.48
	Female rod end (F)	0.11	0.17	0.23	0.41
Di-	Boss-cut/Basic	0.11	0.17	0.23	0.42
Basic weight	Boss-cut/Long male rod end	0.12	0.18	0.25	0.45
weignt	Boss-cut/Female rod end	0.10	0.15	0.22	0.38
	Integral clevis	0.12	0.18	0.26	0.46
	Integral clevis/Long male rod end	0.13	0.19	0.28	0.48
	Integral clevis/Female rod end	0.11	0.16	0.25	0.41
	Foot	0.15	0.16	0.16	0.27
Additional	Flange	0.06	0.09	0.09	0.12
weight for	Single clevis	0.04	0.04	0.04	0.09
bracket	Double clevis	0.05	0.06	0.06	0.13
	Trunnion	0.04	0.07	0.07	0.10
Pivoting bracket		0.08	0.09	0.17	0.25
Single knuckle joint		0.05	0.09	0.09	0.10
Double knuckle joint (with pin)		0.05	0.09	0.09	0.13
Addition	al weight per 50 mm of stroke	0.04	0.06	0.08	0.11
Addition	al weight for switch magnet	0.01	0.01	0.01	0.01

Calculation: (Example) CDM3F20-100G

(Flange type, ø20, 100 mm stroke)

- Basic weight ······ 0.12 (Basic type G, ø20)
- Additional weight for bracket ··· 0.06 (Flange)
- Additional weight for bracket ···· 0.06 (Flange
   Additional weight for stroke ···· 0.04/50 mm
- Air cylinder stroke · · · · · · 100 mm
   Additional weight for switch magnet · · · 0.01

 $0.12 + 0.06 + 0.04 \times (100/50) + 0.01 = 0.27 \text{ kg}$ 



# Allowable Kinetic Energy

#### Table (1) Max. Allowable Kinetic Energy Bore size (mm) 20 25 40 0.29 Male rod end 0.2 0.46 0.84 0.11 0.18 Female rod end 0.29 0.52

Kinetic energy E (J) =  $\frac{(m_1 + m_2) V^2}{2}$ 

m1: Weight of cylinder movable parts kg m2: Load weight

V: Piston speed at the end m/s

# Table (2) Weight of Cylinder Movable Parts:

At Each Rod End/Without Built-in Magnet/0 Stroke [gl]

Bore size (mm)	20	25	32	40
Basic	31.2	55.8	82.5	147.3
Long male rod end (G)	39.4	69.4	102.0	172.7
Female rod end (F)	22.4	38.5	66.5	102.3

\* Weight of the rod end nut is included for the basic type and the long male rod end type (G).

Table (3) Additional Weight

Table (6) Additional Weight									
Bore size (mm)	20	25	32	40					
Additional weight per 50 mm of stroke	19.6	30.6	44.1	60.6					
Switch magnet	3.5	4.0	5.0	6.0					

 $\ast$  Do not apply a lateral load over the allowable range to the rod end when it is mounted horizontally.

Calculation: (Example) CDM3B40-175


• Basic weight of movable parts: Table (2) Rod end [Basic], Bore size [40]------ 147.3 g Additional weight of stroke  $60.6 \times 175/50 = 212.1 \text{ g} \cdot \cdot \cdot 212.1 \text{ g}$ • Additional weight: Switch magnet----- 6.0 g


Total 365.4 g

[6]

# Construction

# With rubber bumper

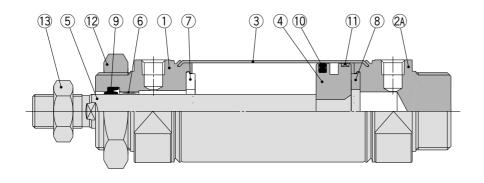


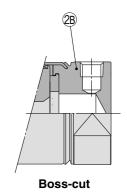

**Component Parts** 

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Anodized
2A	Head cover A	Aluminum alloy	Anodized
2B	Head cover B	Aluminum alloy	Anodized
3	Cylinder tube	Stainless steel	
4	Piston	Aluminum alloy	Chromated
5	Piston rod	Iron	Hard chrome plated
6	Bushing	Copper alloy	
7	Bumper A	Urethane	
8	Bumper B	Urethane	
9	Rod seal	NBR	
10	Piston seal	NBR	
11	Wear ring	Resin	
12	Mounting nut	Iron	Nickel plated
13	Rod end nut	Iron	Nickel plated

# Allowable Lateral Load at Rod End

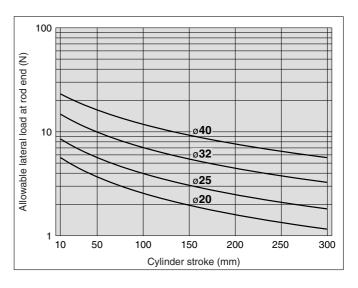

# **⚠** Caution

# 1. Not able to disassemble.

Cover and cylinder tube are connected to each other by crimping method, thus making it impossible to disassemble.

ZZ

MM

M4 x 0.7

M5 x 0.8

M6 x 1

M8 x 1.25

Bore size

Α

AL

15.5


19.5

19.5

Н

ZZ

# **Dimensions**

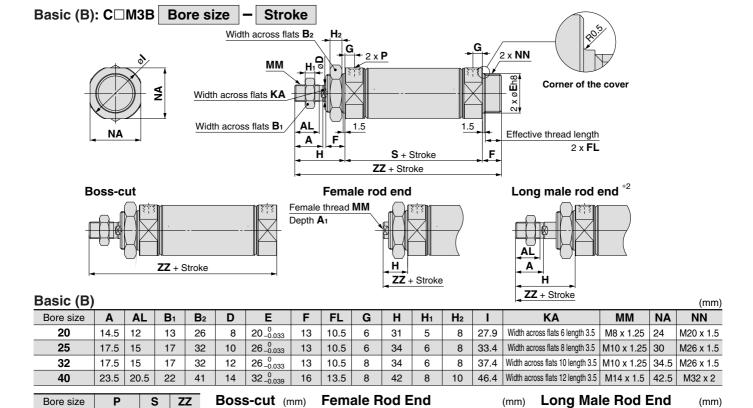

\*1 Use a thin wrench when tightening the piston rod.

M5 x 0.8

M5 x 0.8

Rc1/8

Rc1/8

\*2 The dimension from the rod cover to the male rod end of the long male rod end type is the same as the CM2 series.


ZZ

Bore size

\*3 When female thread is used, use a washer, etc. to prevent the contact part at the rod end from being deformed depending on the material of the workpiece.

Bore size


Αı

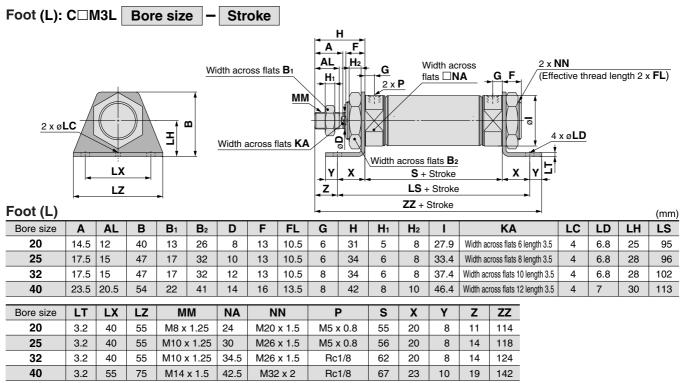

- \* Use a thin wrench when tightening the piston rod.
- st Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.



# **Dimensions**

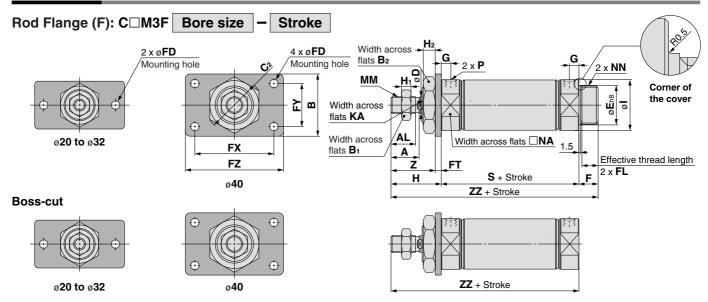

	Rod Flange	(F)																		(mm)
	Bore size	Α	AL	В	B <sub>1</sub>	B <sub>2</sub>	C <sub>2</sub>	D	E	F	FD	FL	FT	FX	FY	FZ	G	Н	H <sub>1</sub>	H <sub>2</sub>
	20	14.5	12	34	13	26	30	8	20 _0.033	13	7	10.5	4	60	_	75	6	31	5	8
	25	17.5	15	40	17	32	37	10	26_0.033	13	7	10.5	4	60	_	75	6	34	6	8
	32	17.5	15	40	17	32	37	12	26_0.033	13	7	10.5	4	60	_	75	8	34	6	8
	40	23.5	20.5	52	22	41	47.3	14	32_0,039	16	7	13.5	5	66	36	82	8	42	8	10

Bore size	ı	KA	MM	NA	NN	Р	S	Z	ZZ
20	27.9	Width across flats 6 length 3.5	M8 x 1.25	24	M20 x 1.5	M5 x 0.8	55	27	99
25	33.4	Width across flats 8 length 3.5	M10 x 1.25	30	M26 x 1.5	M5 x 0.8	56	30	103
32	37.4	Width across flats 10 length 3.5	M10 x 1.25	34.5	M26 x 1.5	Rc1/8	62	30	109
40	46.4	Width across flats 12 length 3.5	M14 x 1.5	42.5	M32 x 2	Rc1/8	67	37	125

Boss-cut
 (mm)

 Bore size
 ZZ


 20
 86

 25
 90

 32
 96

 40
 109

 $<sup>\</sup>ast$  Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.

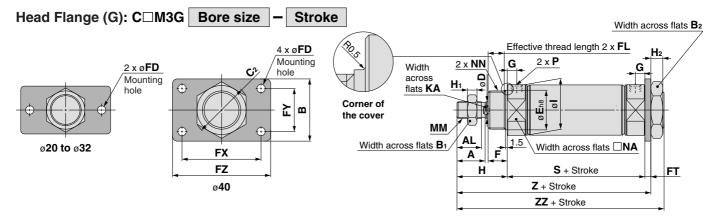

ŀ	lead Flange	e (G)																		(mm)
	Bore size	Α	AL	В	B <sub>1</sub>	B2	C <sub>2</sub>	D	E	F	FD	FL	FT	FX	FY	FZ	G	Н	H <sub>1</sub>	H <sub>2</sub>
	20	14.5	12	34	13	26	30	8	20_0.033	13	7	10.5	4	60		75	6	31	5	8
	25	17.5	15	40	17	32	37	10	26_0.033	13	7	10.5	4	60	_	75	6	34	6	8
	32	17.5	15	40	17	32	37	12	26_0.033	13	7	10.5	4	60	_	75	8	34	6	8
	40	23.5	20.5	52	22	41	47.3	14	32_0.039	16	7	13.5	5	66	36	82	8	42	8	10


Bore size	I	KA	MM	NA	NN	Р	S	Z	ZZ
20	27.9	Width across flats 6 length 3.5	M8 x 1.25	24	M20 x 1.5	M5 x 0.8	55	90	99
25	33.4	Width across flats 8 length 3.5	M10 x 1.25	30	M26 x 1.5	M5 x 0.8	56	94	103
32	37.4	Width across flats 10 length 3.5	M10 x 1.25	34.5	M26 x 1.5	Rc1/8	62	100	109
40	46.4	Width across flats 12 length 3.5	M14 x 1.5	42.5	M32 x 2	Rc1/8	67	114	125

 $<sup>\</sup>ast$  Use a thin wrench when tightening the piston rod.

<sup>\*</sup> Use a thin wrench when tightening the piston rod.

<sup>\*</sup> Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.

# **Dimensions**

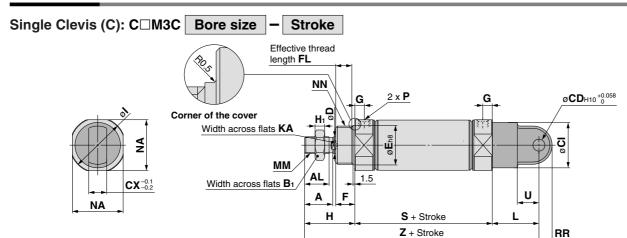

Single Clavic (C)

3	ingle Clevis	s (C)															(mm)
	Bore size	Α	AL	B <sub>1</sub>	CD	CI	СХ	D	E	F	FL	G	Н	H <sub>1</sub>	ı	KA	L
	20	14.5	12	13	9	24	10	8	20_0.033	13	10.5	6	31	5	27.9	Width across flats 6 length 3.5	30
	25	17.5	15	17	9	30	10	10	26_0.033	13	10.5	6	34	6	33.4	Width across flats 8 length 3.5	30
	32	17.5	15	17	9	30	10	12	26_0.033	13	10.5	8	34	6	37.4	Width across flats 10 length 3.5	30
	40	23.5	20.5	22	10	38	15	14	32_0.039	16	13.5	8	42	8	46.4	Width across flats 12 length 3.5	39


ZZ + Stroke

Bore size	MM	NA	NN	Р	RR	S	U	Z	ZZ
20	M8 x 1.25	24	M20 x 1.5	M5 x 0.8	9	55	14	116	125
25	M10 x 1.25	30	M26 x 1.5	M5 x 0.8	9	56	14	120	129
32	M10 x 1.25	34.5	M26 x 1.5	Rc1/8	9	62	14	126	135
40	M14 x 1.5	42.5	M32 x 2	Rc1/8	11	67	18	148	159

<sup>\*</sup> Use a thin wrench when tightening the piston rod.

<sup>\*</sup> Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.



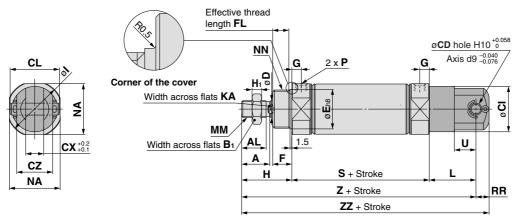

# **Double Clevis (D)**

(mm)

Bore size	Α	AL	B <sub>1</sub>	CD	CI	CL	СХ	CZ	D	E	F	FL	G	Н	H <sub>1</sub>	ı	KA
20	14.5	12	13	9	24	25	10	19	8	20_0.033	13	10.5	6	31	5	27.9	Width across flats 6 length 3.5
25	17.5	15	17	9	30	25	10	19	10	26_0.033	13	10.5	6	34	6	33.4	Width across flats 8 length 3.5
32	17.5	15	17	9	30	25	10	19	12	26_0.033	13	10.5	8	34	6	37.4	Width across flats 10 length 3.5
40	23.5	20.5	22	10	38	41.2	15	30	14	32_0.039	16	13.5	8	42	8	46.4	Width across flats 12 length 3.5

Bore size	L	MM	NA	NN	Р	RR	S	U	Z	ZZ
20	30	M8 x 1.25	24	M20 x 1.5	M5 x 0.8	9	55	14	116	125
25	30	M10 x 1.25	30	M26 x 1.5	M5 x 0.8	9	56	14	120	129
32	30	M10 x 1.25	34.5	M26 x 1.5	Rc1/8	9	62	14	126	135
40	39	M14 x 1.5	42.5	M32 x 2	Rc1/8	11	67	18	148	159


<sup>\*</sup> A clevis pin and retaining rings (split pins for ø40) are shipped together.

<sup>\*</sup> Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.



 $<sup>\</sup>ast$  Use a thin wrench when tightening the piston rod.

# **Dimensions**

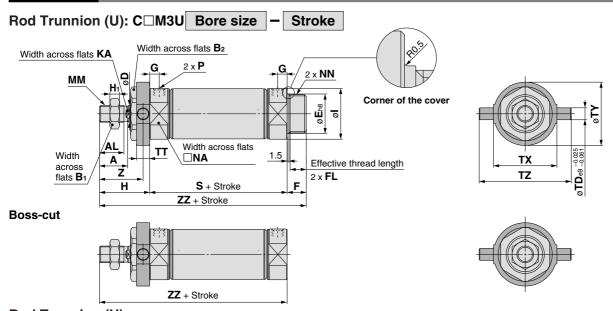


Rod Trunnio	n (U)	)													(mm)
Bore size	Α	AL	Вı	B2	D	E	F	FL	G	Н	H <sub>1</sub>	ı	KA	MM	NA
20	14.5	12	13	26	8	20_0.033	13	10.5	6	31	5	27.9	Width across flats 6 length 3.5	M8 x 1.25	24
25	17.5	15	17	32	10	26_0.033	13	10.5	6	34	6	33.4	Width across flats 8 length 3.5	M10 x 1.25	30
32	17.5	15	17	32	12	26_0.033	13	10.5	8	34	6	37.4	Width across flats 10 length 3.5	M10 x 1.25	34.5
40	23.5	20.5	22	41	14	32_0.039	16	13.5	8	42	8	46.4	Width across flats 12 length 3.5	M14 x 1.5	42.5

Bore size	NN	Р	S	TD	TT	TX	TY	TZ	Z	ZZ
20	M20 x 1.5	M5 x 0.8	55	8	10	32	32	52	26	99
25	M26 x 1.5	M5 x 0.8	56	9	10	40	40	60	29	103
32	M26 x 1.5	Rc1/8	62	9	10	40	40	60	29	109
40	M32 x 2	Rc1/8	67	10	11	53	53	77	36.5	125

Boss-cut	(mm)
Bore size	ZZ
20	86
25	90
32	96
40	109

<sup>\*</sup> Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.

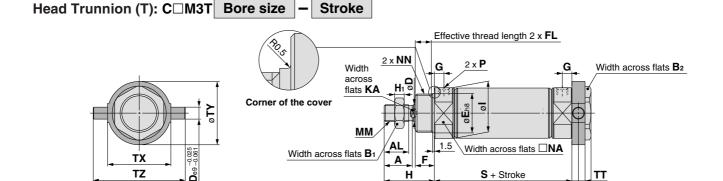

Head Trunni	on (1	<u>[</u> ]													(mm)
Bore size	Α	AL	Вı	B <sub>2</sub>	D	E	F	FL	G	Н	H <sub>1</sub>	ı	KA	MM	NA
20	14.5	12	13	26	8	20_0.033	13	10.5	6	31	5	27.9	Width across flats 6 length 3.5	M8 x 1.25	24
25	17.5	15	17	32	10	26_0.033	13	10.5	6	34	6	33.4	Width across flats 8 length 3.5	M10 x 1.25	30
32	17.5	15	17	32	12	26_0.033	13	10.5	8	34	6	37.4	Width across flats 10 length 3.5	M10 x 1.25	34.5
40	23.5	20.5	22	41	14	32_0_0	16	13.5	8	42	8	46.4	Width across flats 12 length 3.5	M14 x 1.5	42.5

Z + Stroke

Bore size	NN	Р	S	TD	TT	TX	TY	TZ	Z	ZZ
20	M20 x 1.5	M5 x 0.8	55	8	10	32	32	52	91	101
25	M26 x 1.5	M5 x 0.8	56	9	10	40	40	60	95	105
32	M26 x 1.5	Rc1/8	62	9	10	40	40	60	101	111
40	M32 x 2	Rc1/8	67	10	11	53	53	77	114.5	125


 $<sup>\</sup>ast$  Use a thin wrench when tightening the piston rod.

<sup>\*</sup> Use a thin wrench when tightening the piston rod.

<sup>\*</sup> Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.

# **Dimensions**

Integral Clevis (E): C□M3E Bore size Stroke

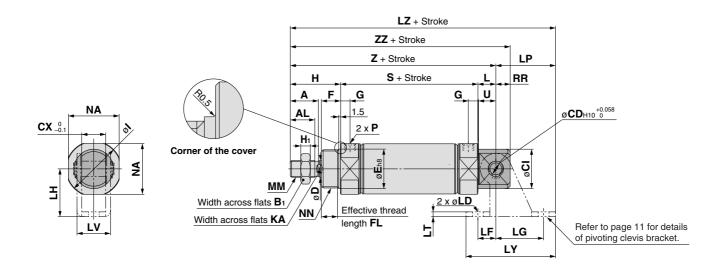

Integral Clevis (E)

(mm)	

- 3			7														(,
	Bore size	Α	AL	Вı	CD	CI	СХ	D	Е	F	FL	G	Н	H <sub>1</sub>	ı	KA	L
	20	14.5	12	13	8	20	12	8	20_0.033	13	10.5	6	31	5	27.9	Width across flats 6 length 3.5	12
	25	17.5	15	17	8	22	12	10	26_0.033	13	10.5	6	34	6	33.4	Width across flats 8 length 3.5	12
	32	17.5	15	17	10	27	20	12	26_0.033	13	10.5	8	34	6	37.4	Width across flats 10 length 3.5	15
	40	23.5	20.5	22	10	33	20	14	32_0.039	16	13.5	8	42	8	46.4	Width across flats 12 length 3.5	15

Bore size	MM	NA	NN	Р	RR	S	U	Z	ZZ
20	M8 x 1.25	24	M20 x 1.5	M5 x 0.8	9	55	11.5	98	107
25	M10 x 1.25	30	M26 x 1.5	M5 x 0.8	9	56	11.5	102	111
32	M10 x 1.25	34.5	M26 x 1.5	Rc1/8	12	62	14.5	111	123
40	M14 x 1.5	42.5	M32 x 2	Rc1/8	12	67	14.5	124	136

Pivoting	Clevis	Bracket
----------	--------	---------

(mm)


	110 0	, a o i i							(111111)
Bore size	LD	LF	LG	LH	LP	LT	LV	LY	LZ
20	6.8	15	30	30	37	3.2	18.4	59	135
25	6.8	15	30	30	37	3.2	18.4	59	139
32	9	15	40	40	50	4	28	75	161
40	9	15	40	40	50	4	28	75	174

<sup>\*</sup> Use a thin wrench when tightening the piston rod.
\* Refer to the dimensions of the basic type for the female rod end type and the long male rod end type.

# **Dimensions of Accessories 1**


# Single Knuckle Joint

(mm)





I-040B

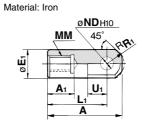

M	V	L


Part no.	Applicable bore size	Α	<b>A</b> 1	E <sub>1</sub>	L <sub>1</sub>	MM	ND <sub>H10</sub>	NX	R <sub>1</sub>	U <sub>1</sub>
I-020B	20	46	16	20	36	M8 x 1.25	9+0.058	9-0.1	10	14
I-032B	25, 32	48	18	20	38	M10 x 1.25	9 +0.058	9-0.1	10	14
I-040B	40	69	22	24	55	M14 x 1.5	12 +0.070	16-0.1	15.5	20

<sup>\*</sup> Use a thin wrench when tightening the piston rod.


# **Double Knuckle Joint**


(mm)

(mm)













Part no.	Applicable bore size	Α	<b>A</b> 1	E <sub>1</sub>	L	Lı	ММ	ND	NX	NZ	Rı	U₁	Included pin part no.	Retaining ring Split pin
Y-020B	20	46	16	20	25	36	M8 x 1.25	9	9 +0.2	18	5	14	CDP-1	Type C9 for axis
Y-032B	25, 32	48	18	20	25	38	M10 x 1.25	9	9 +0.2	18	5	14	CDP-1	Type C9 for axis
Y-040B	40	68	22	24	49.7	55	M14 x 1.5	12	16 <sup>+0.3</sup>	38	13	25	CDP-3	ø3 x 18ℓ


<sup>\*</sup> A knuckle pin and retaining rings (split pins for ø40) are included.


# Double Clevis Pin Bore size/ø20, ø25, ø32

(mm)

Bore size/ø40

CDP-1 Material: Iron





CDP-2 Material: Iron

Retaining ring: Type C9 for axis

Split pin: ø3 x 18ℓ

# \* Retaining rings (split pins for ø40) are included.


# **Double Knuckle Joint Pin**

Bore size/ø40

1.75 19.2 1.75 1.15 25 1.15

Bore size/ø20, ø25, ø32

CDP-1 Material: Iron



CDP-3 Material: Iron

Retaining ring: Type C9 for axis

Split pin: ø3 x 18ℓ




<sup>\*</sup> Retaining rings (split pins for ø40) are included.

# Dimensions of Accessories Series CM3

# **Rod End Nut**

(mm)

Material: Iron




Part no.	Applicable bore size	В	С	D	d	Н
NT-02	20	13	15.0	12.5	M8 x 1.25	5
NT-03	25, 32	17	19.6	16.5	M10 x 1.25	6
NT-04	40	22	25.4	21.0	M14 x 1.5	8

# **Pivoting Clevis Bracket (For CM3E)**

(mm)

Material: Iron

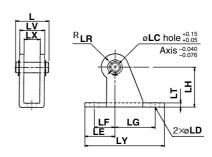

Part no.	Applicable bore size	L	LC	LD	LE	LF	LG	LH	LR
CM-E020B	20, 25	24.5	8	6.8	22	15	30	30	10
CM-E032B	32, 40	34	10	9	25	15	40	40	13

Part no.	Applicable bore size	LT	LX	LY	LV	Included pin part no.
CM-E020B	20, 25	3.2	12	59	18.4	CD-S02
CM-E032B	32, 40	4	20	75	28	CD-S03

Note 1) A pivoting clevis bracket pin and retaining rings are included.

Note 2) It cannot be used for the single clevis (CM3C) and double clevis


(CM3D) types.

# **Mounting Nut**

Material: Iron

(mm)

iviateriai. Ir




Part no.	Applicable bore size	В	С	D	d	Н
SN-020B	20	26	30	25.5	M20 x 1.5	8
SN-032B	25, 32	32	37	31.5	M26 x 1.5	8
SN-040B	40	41	47.3	40.5	M32 x 2.0	10

# **Trunnion Nut**

(mm)


Material: Iron



Part no.	Applicable bore size	В	С	D	d	Н
TN-020B	20	26	28	25.5	M20 x 1.5	10
TN-032B	25, 32	32	34	31.5	M26 x 1.5	10
TN-040B	40	41	45	40.5	M32 x 2	10

# Pivoting Clevis Bracket Pin (For CM3E) (mm)

Material: Iron




Part no.	Applicable bore size	D <sub>d9</sub>	d	L	e	m	t	Included retaining ring
CD-S02	20, 25	8-0.040	7.6	24.5	19.5	1.6	0.9	Type C8 for axis
CD-S03	32, 40	10-0.040	9.6	34	29	1.35	1.15	Type C10 for axis


Note) Retaining rings are included.

# **Dimensions of Accessories 2**

# **Dimensions**



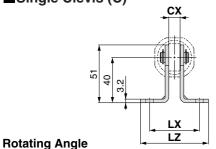

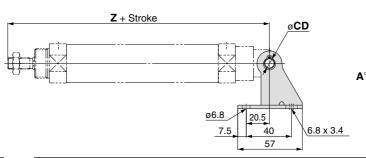



Bore size (mm)	A°	B°	$A^{\circ} + B^{\circ} + 90^{\circ}$
20	25	85	200
25, 32	21	81	192
40	26	86	202


Mounting	Part no.	Applicable bore size	CX	Z + Stroke	CD	LX	LZ
		20		116			
CM3C	CM-B032	25	10	120	9	44	60
(Single clevis)		32		126			
	CM-B040	40	15	148	10	49	65

Note 1) A pivoting bracket pin and retaining rings are not included with the pivoting bracket. Note 2) The above dimensions are for the male rod end type.

# ■Rod Trunnion (U)

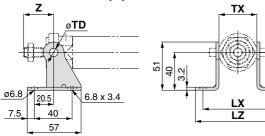

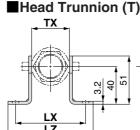

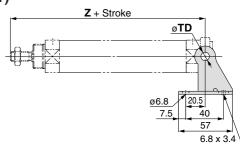

(mm)

(mm)


Mounting	Part no.	Applicable	тх	Rod trunnion	Head trunnion	TD	LX	LZ
Mounting	i aitiio.	bore size	'^	Z	Z + Stroke	וט	LA	LZ
	CM-B020	20	32	26	91	8	66	82
CM3U, CM3T	CM-B032	25	40	00	95		74	90
(Rod trunnion, Head trunnion)		32	40	29	101	9		
rioda dallillottj	CM-B040	40	53	36.5	114.5	10	87	103


Note 1) A pivoting bracket pin and retaining rings are not included with the pivoting bracket.

Note 2) The above dimensions are for the male rod end type.

# **Pivoting Bracket**

#### \* Pivoting brackets consist of a set of two brackets.

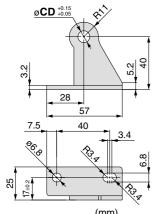


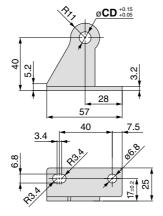

	(111111)
Part no.	CD
CM-B020	8
CM-B032	9
CM-B040	10

Note) A pivoting bracket pin and retaining rings are not included with the pivoting bracket.

# **Pivoting Bracket Pin**

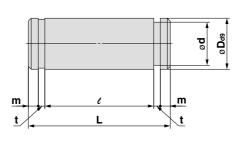

(mm)

Applicable bore size	Part no.	Dd9	d	L	e	m	t	Included retaining ring
20, 25, 32	CDP-1	9 -0.040	8.6	25	19.2	1.75	1.15	Type C9 for axis
40	CD-S03	10 -0.040	9.6	34	29	1.35	1.15	Type C10 for axis


Note) Retaining rings are included with the pivoting bracket pin.




# Auto Switch Proper Mounting Position (Detection at stroke end) and Its Mounting Height

# Reed auto switch


## **D-A9**□




# D-B54/B64/B59W




## **D-A33A/A34A**



# **D-A44A**




# D-C73C/C80C




# Solid state auto switch


D-M9□ D-M9□W




# D-H7NF/H7BAL




## **D-G5NTL**



# D-G39A/K39A



# D-H7C



# Auto Switch Proper Mounting Position (Detection at stroke end) and Its Mounting Height

# **Auto Switch Proper Mounting Position**

(mm)

Auto switch model	D-M	9□ 9□W	D-A	\9□		354 364		73C 80C	D-B	59W			D 117	BAL	D-G5	INTL
Bore size \	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
20	10	9	6	5	0.5	0	6.5	5.5	3.5	2.5	0	0	5.5	4.5	2	1
25	10	10	6	6	0.5	0.5	6.5	6.5	3.5	3.5	0	0	5.5	5.5	2	2
32	10	10	6	6	0.5	0.5	6.5	6.5	3.5	3.5	0	0	5.5	5.5	2	2
40	12	12	8	8	2.5	2.5	8.5	8.5	5.5	5.5	2	2	7.5	7.5	4	4

Note 1) Adjust the auto switch after confirming the operating condition in the actual setting.

Note 2) The D-G39A/K39A cannot be mounted on the bore size ø20.

Note 3) For the combination of the following auto switches, bore sizes and mounting positions, the auto switch cannot be mounted to the port side.

• D-G5□ type: On the head side and the rod side of the bore size ø32

• D-B5□/B64 types (except B59W) ··· On the head side of the bore size ø20, ø32, On the rod side of the bore size ø32

# **Auto Switch Mounting Height**

(mm)

Auto switch model		D-B54 D-B64 D-B59W D-G5NTL D-H7C	D-H7BAL D-H7NF	D-C73C D-C80C	D-A3□A D-G39A Note) D-K39A Note)	D-A44A
Bore size \	Hs	Hs	Hs	Hs	Hs	Hs
20	22	25.5	22.5	25	60	69.5
25	24.5	28	25	27.5	62.5	72
32	28	31.5	28.5	31	66	75.5
40	32	35.5	32.5	35	70	79.5


Note) The D-G39A/K39A cannot be mounted on the bore size ø20.

# **Minimum Stroke for Auto Switch Mounting**

n: Number of auto switches (mm)

			Number of auto switches		
Auto switch model	With 1 pc.	With 2	2 pcs.	With r	n pcs.
	will i pc.	Different surfaces	Same surface	Different surfaces	Same surface
D-M9□/M9□W D-A9□	10	15 Note 1)	45 Note 1)	$15 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6···)	45 + 45 (n – 2)
D-H7BAL/H7NF	10	15	60	$15 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6···)	60 + 45 (n – 2)
D-C73C/C80C D-H7C	10	15	65	$15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6···)	65 + 50 (n – 2)
D-B54/B64 D-G5NTL	10	15	75	$15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6···)	75 + 55 (n – 2)
D-B59W	15	20	75	$20 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6···)	75 + 55 (n – 2)
D-A3□A/A44A D-G39A D-K39A	10	35	100	35 + 30 (n – 2)	100 + 100 (n – 2)

Note 1) Auto switch mounting

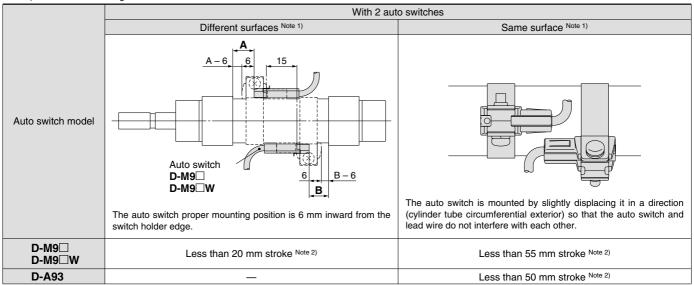

Note 2) Minimum stroke for auto switch mounting in styles other than those mentioned in Note 1

# **Operating Range**

				(mm)
Auto switch model		Bore	size	
Auto switch model	20	25	32	40
D-M9□ D-M9□W	3	3	4	3.5
D-A9□	6	6	6	6
D-C73C/C80C	7	8	8	8
D-B54/B64 D-A3□A/A44A	8	8	9	9
D-B59W	12	12	13	13
D-H7BAL D-G5NTL/H7NF	4	4	4.5	5
D-H7C	7	8.5	9	10
D-G39A/K39A	_	9	9	9

<sup>\*</sup> Values which include hysteresis are for guideline purposes only, they are not a guarantee (assuming approximately ±30% dispersion) and may change substantially depending on the ambient environment.



# CM3 Series **Auto Switch Mounting 3**

# **Operating Range**

				(mm)
Auto quitale medal	Bore size			
Auto switch model	20	25	32	40
D-M9□(V) D-M9□W(V) D-M9□A(V)	3	3	4	3.5
<b>D-A9</b> □	6	6	6	6
D-C7□/C80 D-C73C/C80C	7	8	8	8
D-B5□/B64 D-A3□A/A44A	8	8	9	9
D-B59W	12	12	13	13
D-H7□/H7□W/H7BA D-G5NT/H7NF	4	4	4.5	5
D-H7C	7	8.5	9	10
D-G39A/K39A	8	9	9	9

<sup>\*</sup> Values which include hysteresis are for guideline purposes only, they are not a guarantee (assuming approximately ±30% dispersion) and may change substantially depending on the ambient environment.

# Auto Switch Mounting Brackets/Part No.

Auto switch model	Bore size (mm)				
Auto switch model	20	25	32	40	
D-M9□(V) D-M9□W(V) D-A9□(V)	Note 1) BM5-020	Note 1) BM5-025	Note 1) BM5-032	Note 1) BM5-040	
D-M9□A(V)	Note 2) BM5-020S	Note 2) BM5-025S	Note 2) BM5-032S	Note 2) BM5-040S	
D-C7□/C80 D-C73C/C80C D-H7□ D-H7□W D-H7NF	BM2-020A	BM2-025A	BM2-032A	BM2-040A	
D-H7BA	BM2-020AS	BM2-025AS	BM2-032AS	BM2-040AS	
D-B5□/B64 D-B59W D-G5□/K59 D-G5□W/K59W D-G5BA/G59F D-G5NT	BA2-020	BA2-025	BA2-032	BA2-040	
D-A3□A/A44A D-G39A/K39A	BM3-020	BM3-025	BM3-032	BM3-040	

Note 1) Set part number which includes the auto switch mounting band (BM2-□□□A) and the holder kit (BJ5-1/Switch bracket: Transparent).

Since the switch bracket (made from nylon) are affected in an environment where alcohol, chloroform, methylamines, hydrochloric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

Note 2) Set part number which includes the auto switch mounting band (BM2-DDAS/Stainless steel screw) and the holder kit (BJ4-1/Switch bracket: White).

Note 3) For the D-M9□A (V) type auto switch, do not install the switch bracket on the indicator light.


#### [Stainless Steel Mounting Screw]

The following stainless steel mounting screw is available. Use it in accordance with the operating environment. (Since switch mounting bracket is not included, order it separately.)

BBA4: For D-C7/C8/H7 types

Note 4) Refer to www.smc.eu for details of BBA4 screws.

The above stainless steel screws are used when a cylinder is shipped with the D-H7BAL auto switches. When only an auto switch is shipped independently, the BBA4 screw is attached

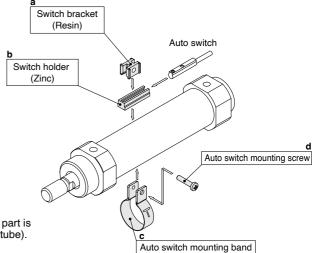

(1) BJ□-1 is a set of "a" and "b".(2) BM2-□□□A(S) is a set of "c" and "d".

Band (c) is mounted so that the projected part is on the internal side (contact side with the tube). BJ4-1 (Switch bracket: White)

BJ5-1 (Switch bracket: Transparent)

# Other than the applicable auto switches listed in "How to Order," the following auto switches are mountable.

Туре	Model	Electrical entry	Features	
Solid state auto switch	D-H7A1, H7A2, H7B		_	
	D-H7NW, H7PW, H7BW		Diagnostic indication (2-colour indicator)	
	D-H7BA	Grommet (In-line)	Water resistant (2-colour indicator)	
	D-G5NT	Gionnie (in-ine)	With timer	
Reed auto switch	D-B53, C73, C76		_	
	D-C80		Without indicator light	


- \* With pre-wired connector is also available for solid state auto switches. For details, refer to the Auto Switch Guide on www.smc.eu
- \* Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)) are also available. For details, refer to the Auto Switch Guide on www.smc.eu


# **Prior to Use Auto Switch Connection and Example**

# **Basic Wiring**


#### Solid state 3-wire, NPN Solid state 3-wire, PNP 2-wire (Solid state) 2-wire (Reed) Brown Brown Brown Load Indicator Load Main Main Main protection Black circuit of switch circuit circuit, Load Blue Blue Blue Blue (Power supply for switch and load are separate.) Brown Brown Brown Load Indicator Main Main protectio Black circuit, of switch Load Load Blue

# Example of Connection with PLC (Programmable Logic Controller)







#### Source input specifications 3-wire, PNP



Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.






# Example of AND (Series) and OR (Parallel) Connection


PLC internal circuit

#### • 3-wire


#### **AND connection for NPN output** (Using relays)



#### AND connection for NPN output (Performed with auto switches only)




#### **OR connection for NPN output**



The indicator lights will light up when both of the auto switches are in the ON state.

#### • 2-wire 2-wire with 2-switch AND connection




When two auto switches are connected in series, malfunction may occur because the load voltage will decrease in the ON state. The indicator lights will light up when both of the auto switches are in the

Load voltage at ON = Power supply voltage - Residual voltage x 2 pcs.  $= 24 V - 4 V \times 2 pcs.$ = 16 V

Example: Power supply voltage 24 VDC Auto switch internal voltage drop 4 V

#### 2-wire with 2-switch OR connection



(Solid state) When two auto switches are connected in parallel, malfunction may occur because the load voltage will increase in the OFF state

Load voltage at OFF = Leakage current x 2 pcs. x Load impedance = 1 mA x 2 pcs. x 3 k $\Omega$ 

Example: Load impedance 3 k $\Omega$ Auto switch leakage current 1 mA

(Reed)

kage current, the load voltage will not increase in the OFF state. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.

Because there is no lea-



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1), and other safety regulations.

Danger indicates a hazard with a high level of risk ♠ Danger: which, if not avoided, will result in death or serious

injury.

Warning indicates a hazard with a medium level of risk Marning: which, if not avoided, could result in death or serious

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components.

ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

# 

### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
- 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

# 

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.

#### Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

# Limited warranty and **Disclaimer/Compliance** Requirements


The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

# **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. 2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited

# **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

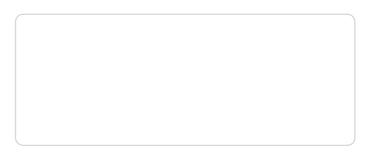

# **SMC Corporation (Europe)**

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be Bulgaria +359 (0)2807670 www.smc.bg +385 (0)13707288 www.smc.hr Croatia Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 www.smcdk.com Estonia +372 651 0370 www.smcee.ee Finland +358 207513513 www.smc.fi France +33 (0)164761000 www.smc-france.fr Germany +49 (0)61034020 www.smc.de Greece +30 210 2717265 www.smchellas.gr Hungary +36 23513000 www.smc.hu Ireland +353 (0)14039000 www.smcautomation.ie Italy +39 03990691 www.smcitalia.it Latvia +371 67817700 www.smc.lv

office@smc.at
info@smc.be
office@smc.bg
office@smc.bg
office@smc.cz
smc@smcdk.com
info@smcee.ee
smcfi@smc.fi
supportclient@smc-france.fr
info@smc.de
sales@smchellas.gr
office@smc.hu
sales@smcautomation.ie
mailbox@smcitalia.it
info@smc.ly

**Lithuania** +370 5 2308118 www.smclt.lt **Netherlands** +31 (0)205318888 www.smc.nl Norway +47 67129020 www.smc-norge.no +48 222119600 Poland www.smc.pl Portugal +351 214724500 www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch Turkey +90 212 489 0 440 www.smcturkey.com.tr UK +44 (0)845 121 5122 www.smc.uk

info@smclt.lt
info@smc.nl
post@smc-norge.no
sales@smc.pl
apoioclientept@smc.smces.es
smcromania@smcromania.ro
sales@smcru.com
office@smc.sk
office@smc.si
post@smc.smces.es
smc@smc.nu
info@smc.ch
info@smcturkey.com.tr
sales@smc.uk

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za