

Circulating Fluid Temperature Controller




# Thermo-chiller Standard Type



**No heater required,** as the circulating fluid is heated using only the heat exhausted by the refrigerating circuit.

■ Heating-up time: 1/10

HRS150-A-20

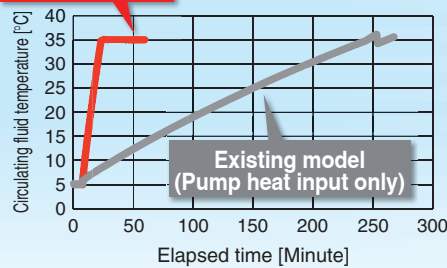


[Test conditions]  
 Circulating fluid temperature: 5→35 °C  
 Ambient temperature: 32 °C  
 Power supply: 200 VAC/50 Hz  
 Circulating fluid flow rate:  
 Rated flow  
 Circulating fluid: Water  
 External piping: Bypass piping

Cooling valve control

Air-cooled condenser fan

Heating valve control

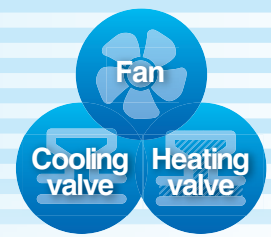

Cooling capacity **10 kW/15 kW**

Temperature stability **±1.0°C ±0.1°C**  
(When a load is stable) (460 VAC type)

Set temperature range **5°C to 35°C**

Low-noise design **70 dB(A)**

Max. ambient temperature **45°C**

Outdoor installation **IPX4**

Compact, Space-saving



- Added Variations!**
- Option**
- With fluid fill port
- Optional accessories**
- Electric conductivity control set
  - Relief valve set
  - Snow protection hood (Air-cooled only)

Compatible with power supplies in Europe, Asia, Oceania, and North, Central, and South America


- 3-phase 200 VAC
- 3-phase 400 VAC
- 3-phase 460 VAC

## HRS100/150 Series


Environmental friendly R410A as refrigerant



CAT.EUS40-62Ba-UK

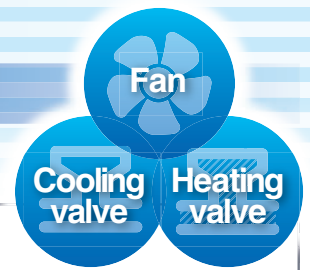

# Triple controller

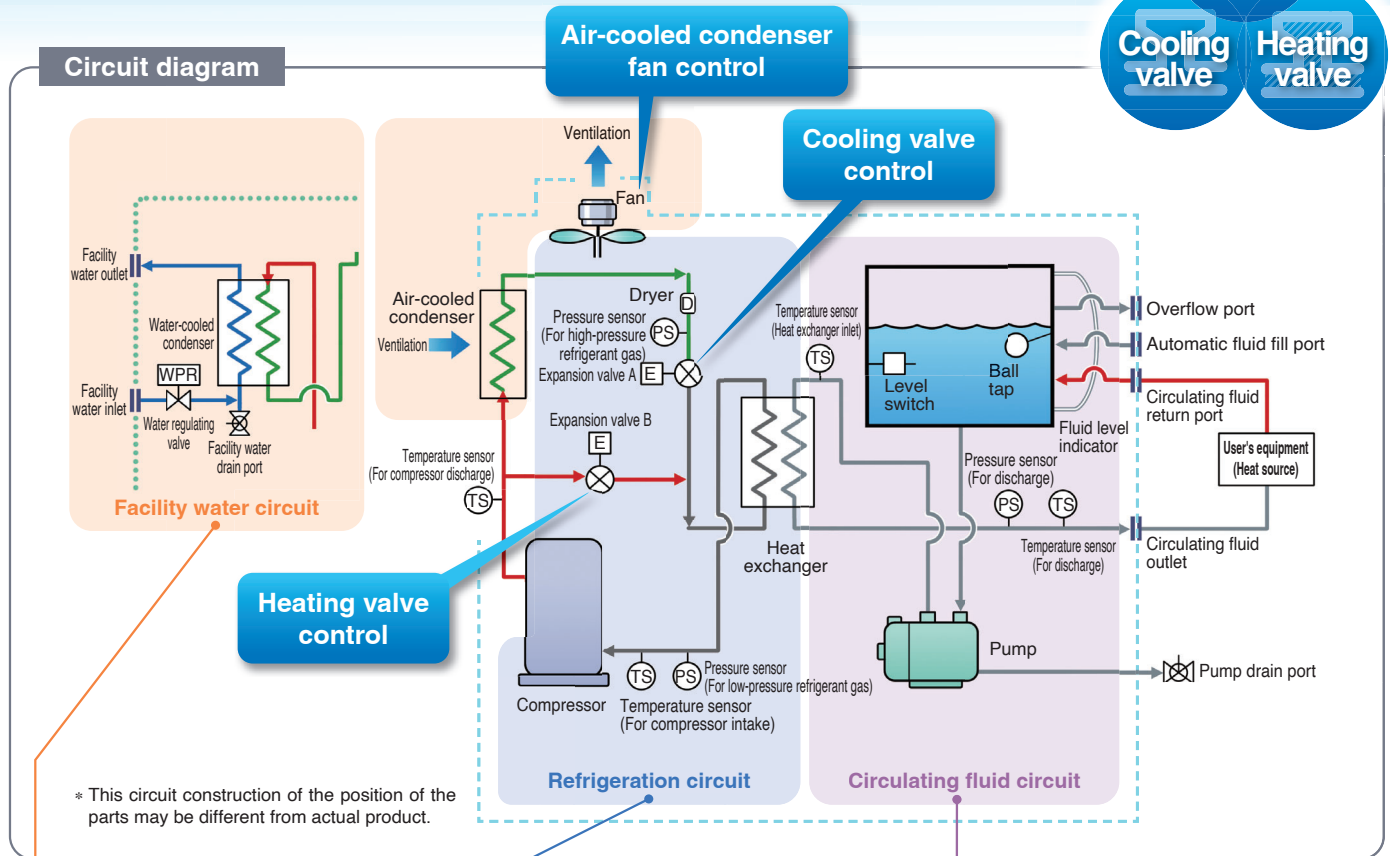

## Facility water circuit

### For water-cooled refrigeration HRS□-W-□

- The water regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water regulating valve.

## Refrigeration circuit

- The compressor compresses the refrigerant gas, and discharges the high temperature and high pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high temperature and high pressure refrigerant gas is cooled down by an air-cooled condenser with the ventilation of the fan, and becomes a liquid. In the case of water-cooled refrigeration, the refrigerant gas is cooled by a water-cooled condenser with the facility water in the facility water circuit, and becomes a liquid.
- The liquefied high pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A and vaporises by taking heat from the circulating fluid in the evaporator.
- The vaporised refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high pressure and high temperature refrigerant gas is bypassed into the evaporator by expansion valve B, to heat the circulating fluid.

### Point

The combination of precise control of **expansion valve A** for cooling, and **expansion valve B** for heating realised high temperature stability.

## Circulating fluid circuit

- The circulating fluid discharged from the pump, is heated or cooled by the user's equipment and returns to the thermo-chiller.
- The circulating fluid is controlled to a set temperature by the refrigeration circuit, to be discharged to the user's equipment side again by the thermo-chiller.

### Point



Since the refrigeration circuit is controlled by the signal from **2 temperature sensors (for return and discharge)**, precise temperature control of the circulating fluid can be performed. Therefore, there is no necessity of absorbing the temperature difference in the circulating fluid with a large tank capacity, and realises high temperature stability even with a **small-size tank**. Also, contributes to space-saving.

## Variations

Model	Cooling method	Cooling capacity [kW] (50/60 Hz)	Power supply	Option p. 16, 17	Optional accessories p. 18 to 23
	Air-cooled refrigeration	HRS100	· 3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) · 3-phase 380 to 415 VAC (50 Hz/60 Hz) · 3-phase 460 to 480 VAC (60 Hz)	· With caster adjuster-foot · With earth leakage breaker (For 400/460 V type as standard) · With earth leakage breaker with handle (For 400/460 V type as standard) · With fluid fill port · SI Unit Only	· Piping conversion fitting · Caster adjuster-foot kit · Electric conductivity control set · Bypass piping set · Relief valve set · Snow protection hood (Air-cooled only) · Particle filter set · Wired remote controller
		HRS150			
	Water-cooled refrigeration	HRS100			
		HRS150			


## Circulating fluid can be heated without a heater.

Heating method using discharged heat makes a heater unnecessary.

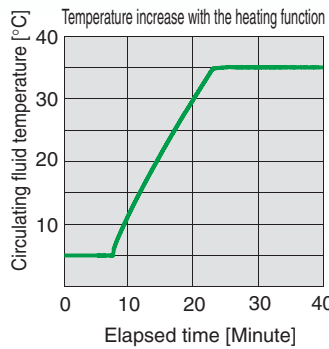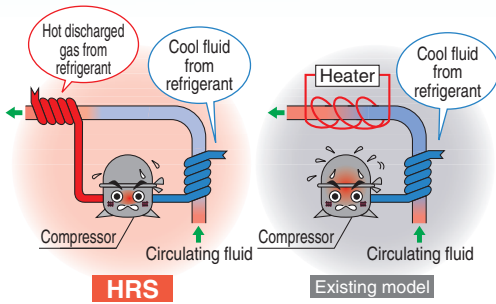

\* For HRS150-A-40


- Conditions**
- Circulating fluid temperature: 5→35 °C
  - Ambient temperature: 32 °C
  - Power supply: 200 V/50 Hz
  - Circulating fluid flow rate: Rated flow
  - Circulating fluid: Water
  - External piping: Bypass piping

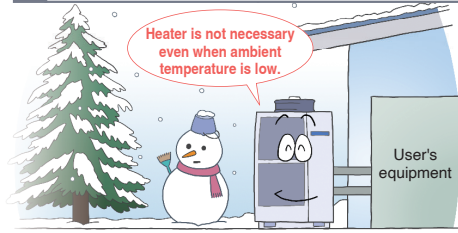

\* This is just an example diagram.


### Electric conductivity control set (Optional accessories) (With DI filter + Solenoid valve kit for control) p. 19

The electric conductivity of the circulating fluid can be set with the controller monitor arbitrarily.  
**Set control range: 5.0 to 45.0 μS/cm**

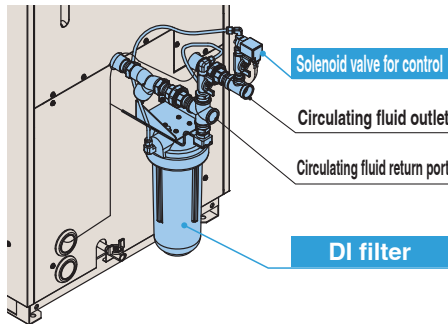


### Relief valve set (Optional accessories) p. 20

Prevents increase in circulating fluid discharge pressure.  
**(Relief pressure: 0.32 MPa)**

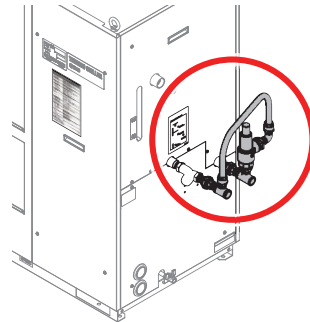

### Particle filter set p. 22

Removes foreign matter in the circulating fluid.  
 Effective to prevent foreign matter from entering the user's equipment and chiller.

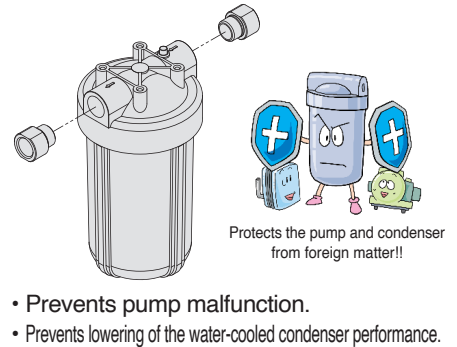

## Improved maintenance performance

### Circulating fluid fill port (Option)


Fluid fill port is equipped in the upper part of the tank in addition to the automatic fluid fill port for a tap water piping connection.

### Front side access

All the electrical components can be checked from the front side for the easier maintenance work.

### Alarm code list


Alarm code list stickers are included. This can be put under the operation panel for reference.  
 (Alarm ▶ Page 14)

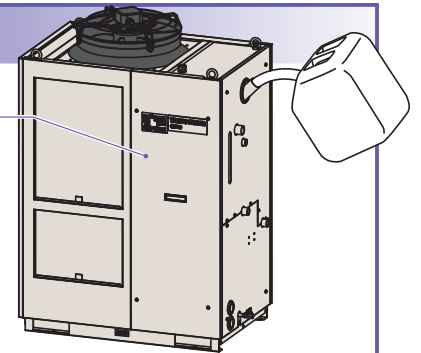

### Operation display panel Easy maintenance with the check display


**Alarm codes can be used for the notification of upcoming recommended maintenance.**  
 The codes notify you when it's time to check the pump and fan motor. Helpful for facility maintenance.

Ex. AL01 "Low level in tank"

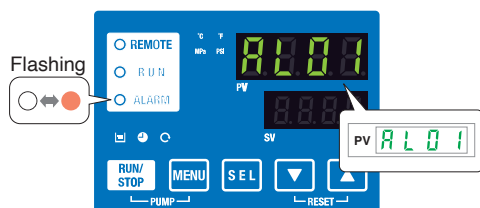

**Check display**  
 The internal temperature, pressure and operating time of the product are displayed.

Ex. drv. "Accumulated operating time"

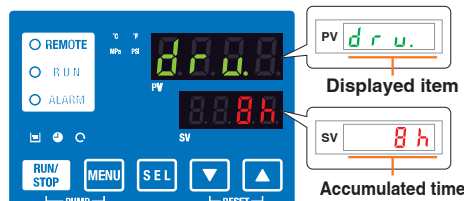

	Displayed item
Temperature	Circulating fluid outlet temperature
	Circulating fluid return temperature
	Compressor gas temperature
Flow rate	Circulating fluid flow rate*1
	Circulating fluid outlet pressure
Pressure	Compressor gas discharge pressure
	Compressor gas return pressure
Operating time	Accumulated operating time
	Accumulated operating time of pump
	Accumulated operating time of fan *2
	Accumulated operating time of compressor
	Accumulated operation time of dustproof filter *2

\*1 This is not measurement value. Use it for reference. \*2 These are displayed only for air-cooled refrigeration.

Convenient functions Details ▶ Page 14


Timer function, Anti-freezing function, Power failure auto-restart function, Warming-up function, Key-lock function, etc.

## Communication function

The serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. Communication with the user's equipment and system construction are possible, depending on the application. A 24 V DC output can be also provided, and is available for a flow switch (SMC's PF3W, etc.).


### Ex.1 Remote signal I/O through serial communication

The remote operation is enabled (to start and stop) through serial communication.

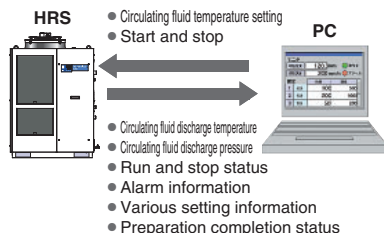

### Ex.2 Remote operation signal input


One of the contact inputs is used for remote operation and the other is used for a flow switch to monitor the flow, and their warning outputs are taken in.

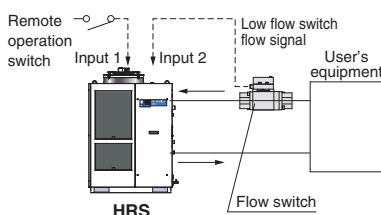

Power for flow switch (24 VDC) can be supplied from the thermo-chiller.

### Ex.3 Alarm and operation status (start, stop, etc.) signal output

The alarm and status generated in the product are assigned to 3 output signals based on their contents, and can be output.

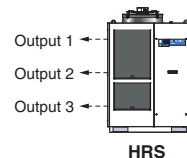


**Output setting example**

Output 1: Temperature rise

Output 2: Pressure rise

Output 3: Operation status (start, stop, etc.)

## Power supply (24 V DC) available

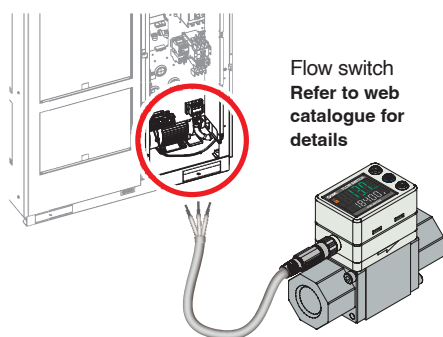

Power can be supplied from the terminal block of the thermo-chiller to external switches etc.

## IPX4

IP (International Protection) is the industrial standard for "Degrees of protection provided by outer defensive enclosures of electric equipment (IP Code)" according to IEC 60529 and JIS C 0920.

**IPX4: No harmful influence by water splash is acceptable from every direction.**

**Can be installed outdoors.**




## Globally compatible power supplies

(Europe, Asia, Oceania, Central and South America)



Existing model

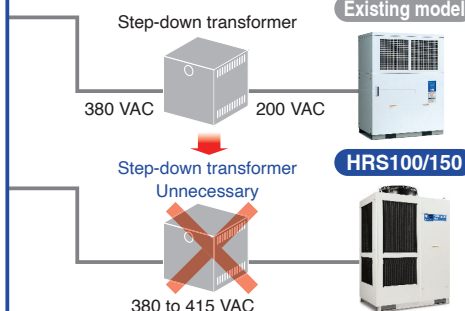

**Transformer unnecessary**

**Power supply** Applicable to 200 to 230 VAC, 380 to 415 VAC, or 460 to 480 VAC  
 Transformers are unnecessary even when used overseas.


## Wired remote controller

(Optional accessory on page 121)  
 Operable from a distance.



## With caster adjuster-foot (Option)

p. 18

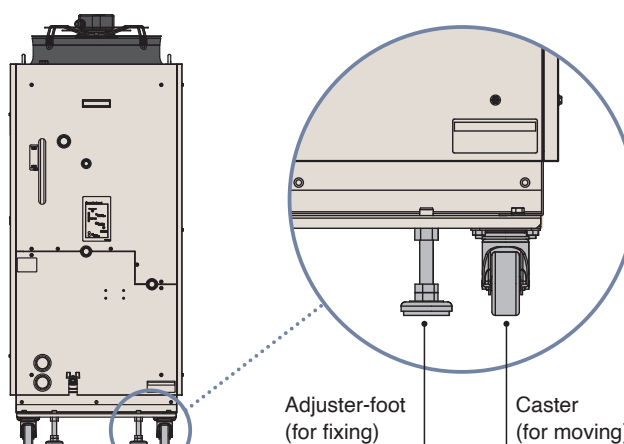

# CONTENTS

## **HRS100/150 Series** **Standard Type**



### **Thermo-chiller HRS100/150 Series**

#### How to Order/Specifications

<b>Air-cooled 200 V</b> .....	Page 5
<b>Water-cooled 200 V</b> .....	Page 6
<b>Air-cooled 400 V/460 V</b> .....	Page 7
<b>Water-cooled 400 V/460 V</b> .....	Page 8
Cooling Capacity .....	Page 9
Pump Capacity .....	Page 10
Dimensions .....	Page 11
Recommended External Piping Flow .....	Page 13
Cable Specifications .....	Page 13
Operation Display Panel .....	Page 14
List of Function .....	Page 14
Alarm .....	Page 14
Communication Functions .....	Page 15

#### ● **Options**

With Caster Adjuster-foot .....	Page 16
With Earth Leakage Breaker .....	Page 16
With Earth Leakage Breaker with Handle .....	Page 16
With Fluid Fill Port .....	Page 17
SI Unit Only .....	Page 17

#### ● **Optional Accessories**

① Piping Conversion Fitting .....	Page 18
② Caster Adjuster-foot Kit .....	Page 18
③ Electric Conductivity Control Set .....	Page 19
④ Bypass Piping Set .....	Page 19
⑤ Relief Valve Set .....	Page 20
⑥ Snow Protection Hood .....	Page 21
⑦ Particle Filter Set .....	Page 22
⑧ Wired Remote Controller .....	Page 23

#### ● **Cooling Capacity Calculation**

Required Cooling Capacity Calculation .....	Page 24
Precautions on Cooling Capacity Calculation .....	Page 25
Circulating Fluid Typical Physical Property Values .....	Page 25

Specific Product Precautions .....	Page 26
------------------------------------	---------

# Thermo-chiller Standard Type

## Air-cooled 200 V Type

### HRS100/150 Series

RoHS



#### How to Order

**HRS 100 - A □ - 20 - □**

**Cooling capacity**

100	10 kW
150	15 kW

**Cooling method**

A	Air-cooled refrigeration
---	--------------------------

**Pipe thread type**

—	Rc
F	G (with Rc-G conversion fitting)
N	NPT (with Rc-NPT conversion fitting)

**Power supply**

20	3-phase 200 VAC (50 Hz) 3-phase 200 to 230 VAC (60 Hz)
----	---

**Option**

—	None
A	With caster adjuster-foot
B	With earth leakage breaker
B1	With earth leakage breaker with handle
K*1	With fluid fill port
W	SI unit only

\*1 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel.  
(Fluid can be supplied manually for models without option -K if the side panel is removed.)

#### Specifications

Model		HRS100-A□-20-□	HRS150-A□-20-□
<b>Cooling method</b>		Air-cooled refrigeration	
<b>Refrigerant</b>		R410A (HFC)	
<b>Refrigerant charge</b>	kg	1.3	1.65
<b>Control method</b>		PID control	
<b>Ambient temperature/Altitude*1,9</b>		°C Temperature: -5 to 45 °C, Altitude: less than 3000 m	
<b>Circulating fluid*2</b>		Tap water, 15 % ethylene glycol aqueous solution, Deionised water	
<b>Set temperature range*1</b>		°C 5 to 35	
<b>Cooling capacity 50/60 Hz*3</b>		kW 9.0/9.5	
<b>Heating capacity 50/60 Hz*4</b>		kW 1.7/2.2	
<b>Temperature stability*5</b>		°C ±1.0	
<b>Pump capacity</b>	<b>Rated flow 50/60 Hz (Outlet)*6</b>	l/min 42/56	
	<b>Maximum flow rate 50/60 Hz</b>	l/min 55/68	
	<b>Maximum pump head</b>	m 50	
	<b>Minimum operating flow rate 50/60 Hz*7</b>	l/min 28/42	
<b>Tank capacity</b>		L 18	
<b>Circulating fluid outlet, circulating fluid return port</b>		Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)	
<b>Tank drain port</b>		Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)	
<b>Automatic fluid fill system (Standard)</b>	<b>Supply side pressure range</b>	MPa 0.2 to 0.5	
	<b>Supply side fluid temperature</b>	°C 5 to 35	
	<b>Automatic fluid fill port</b>	Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)	
	<b>Overflow port</b>	Rc1 (Symbol F: G1, Symbol N: NPT1)	
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, PTFE, PU, EPDM, PVC, NBR, PE, NR, PBT, PP, POM, Carbon, Ceramic	
<b>Power supply</b>		3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation)	
<b>Electrical system</b>	<b>Applicable earth leakage breaker*8</b>	<b>Rated current</b>	A 30
		<b>Sensitivity of leak current</b>	mA 30
	<b>Rated operating current 50/60 Hz*5</b>	A 14/15	16/19
	<b>Rated power consumption 50/60 Hz*5</b>	kW (kVA) 3.8/4.8 (4.9/5.3)	4.7/6.1 (5.6/6.7)
<b>Noise level (Front 1 m/Height 1 m)*5</b>		dB (A) 70	
<b>Waterproof specification</b>		IPX4	
<b>Accessories</b>		Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer 20A 1 pc., Barrel nipple 20A 1 pc., Drain pan for the pump	
<b>Weight (dry state)</b>		kg 171	

\*1 Use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less.

\*2 Use fluid in condition below as the circulating fluid.

Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)

15 % ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.

Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)

\*3 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 200 VAC

\*4 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 200 VAC

\*5 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 200 VAC, ⑦ Piping length: Shortest

\*6 When circulating fluid outlet port pressure – return port pressure = 0.25 MPa.

\*7 Fluid flow rate to maintain the cooling capacity and to keep the circulating fluid discharge pressure to 0.5 MPa or less. If the actual flow rate is lower than this, install a bypass piping.

\*8 To be prepared by user. A specified earth leakage breaker is installed for option B [With earth leakage breaker] and B1 [With earth leakage breaker with handle].

\*9 If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 24) Item 13 "\*" For altitude of 1000 m or higher."

# Thermo-chiller Standard Type


## Water-cooled 200 V Type

### HRS100/150 Series

RoHS



#### How to Order

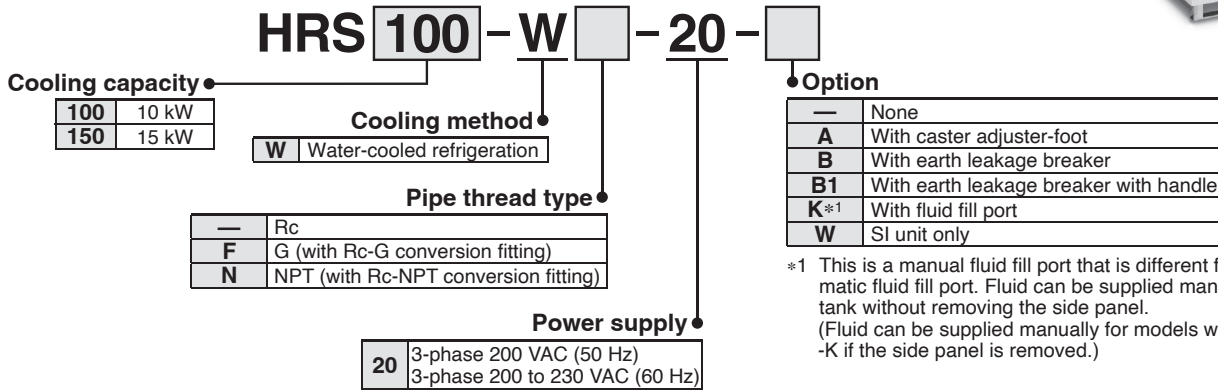

#### Specifications

Model		HRS100-W□-20-□	HRS150-W□-20-□
<b>Cooling method</b>		Water-cooled refrigeration	
<b>Refrigerant</b>		R410A (HFC)	
<b>Refrigerant charge</b>	kg	1.23	1.33
<b>Control method</b>		PID control	
<b>Ambient temperature/Altitude*1</b>		Temperature: 2 to 35 °C, Altitude: less than 3000 m	
<b>Circulating fluid*2</b>		Tap water, 15 % ethylene glycol aqueous solution, Deionized water	
<b>Set temperature range*1</b>		5 to 35	
<b>Cooling capacity 50/60 Hz*3</b>		10.0/11.0	14.5/16.5
<b>Heating capacity 50/60 Hz*4</b>		1.7/2.2	2.5/3.0
<b>Temperature stability*5</b>		±1.0	
<b>Circulating fluid system</b>	<b>Pump capacity</b>		
	<b>Rated flow 50/60 Hz (Outlet)*6</b>	l/min	
	<b>Maximum flow rate 50/60 Hz</b>	l/min	
	<b>Maximum pump head</b>	m	
	<b>Minimum operating flow rate 50/60 Hz*7</b>	l/min	
	<b>Tank capacity</b>	L	
	<b>Circulating fluid outlet, circulating fluid return port</b>	Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)	
<b>Tank drain port</b>		Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)	
<b>Automatic fluid fill system (Standard)</b>	<b>Supply side pressure range</b>	MPa	
	<b>Supply side fluid temperature</b>	°C	
	<b>Automatic fluid fill port</b>	5 to 35	
<b>Overflow port</b>		Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)	
<b>Fluid contact material</b>		Rc1 (Symbol F: G1, Symbol N: NPT1)	
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, PTFE, PU, EPDM, PVC, NBR, PE, NR, PBT, PP, POM, Carbon, Ceramic	
<b>Facility water system</b>	<b>Temperature range</b>	°C	
	<b>Pressure range</b>	MPa	
	<b>Required flow 50/60 Hz*9</b>	33/34	38/40
	<b>Facility water pressure differential</b>	MPa	
	<b>Facility water inlet/outlet</b>	Rc3/4	
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, PTFE, NBR, EPDM	
<b>Electrical system</b>	<b>Power supply</b>		3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation)
	<b>Applicable earth leakage breaker*8</b>	<b>Rated current</b>	A
		<b>Sensitivity of leak current</b>	mA
	<b>Rated operating current 50/60 Hz*5</b>		A
	<b>Rated power consumption 50/60 Hz*5</b>		kW (kVA)
<b>Noise level (Front 1 m/Height 1 m)*5</b>		dB (A)	
<b>Waterproof specification</b>		IPX4	
<b>Accessories</b>		Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer 20A 1 pc., Barrel nipple 20A 1 pc., Drain pan for the pump	
<b>Weight (dry state)</b>		kg	
		151	154

- \*1 Use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less. Also, when there is a possibility of the facility water being frozen, make sure to discharge all the facility water from the facility water circuit.
- \*2 Use fluid in condition below as the circulating fluid. Also, when there is a possibility of the facility water being frozen, make sure to discharge all the facility water from the facility water circuit.  
Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)  
15 % ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.  
Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
- \*3 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 200 VAC
- \*4 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 200 VAC
- \*5 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 200 VAC, ⑦ Piping length: Shortest
- \*6 When circulating fluid outlet port pressure – return port pressure = 0.25 MPa.
- \*7 Fluid flow rate to maintain the cooling capacity and to keep the circulating fluid discharge pressure to 0.5 MPa or less. If the actual flow rate is lower than this, install a bypass piping.
- \*8 To be prepared by user. A specified earth leakage breaker is installed for option B [With earth leakage breaker] and B1 [With earth leakage breaker with handle].
- \*9 The actual facility water flow rate will vary depending on the operating conditions.


# Thermo-chiller Standard Type

## Air-cooled 400 V/460 V Type

### HRS100/150 Series



#### How to Order

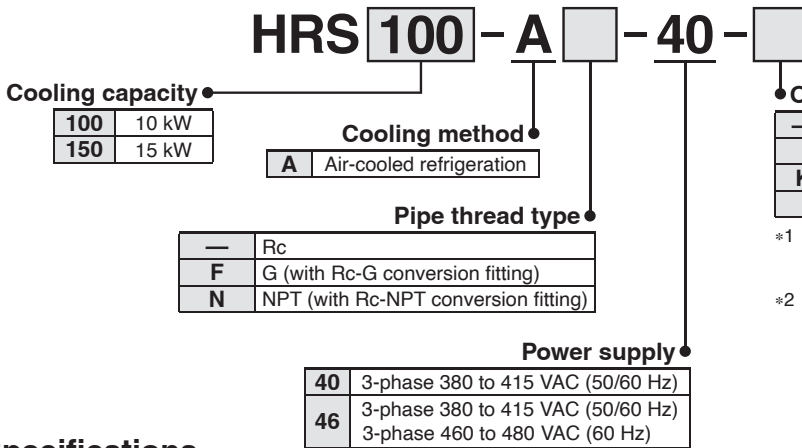

**Option**

—*1	None
A	With caster adjuster-foot
K*2	With fluid fill port
W	SI unit only

\*1 400/460 V type is provided with an earth leakage breaker with handle (-B1) as standard.  
\*2 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel.  
(Fluid can be supplied manually for models without option -K if the side panel is removed.)



#### Specifications

Model		HRS100-A□-40-□	HRS150-A□-40-□	HRS100-A□-46-□	HRS150-A□-46-□			
<b>Cooling method</b>		Air-cooled refrigeration						
<b>Refrigerant</b>		R410A (HFC)						
<b>Refrigerant charge</b>		kg	1.3	1.65	1.3	1.65		
<b>Control method</b>		PID control						
<b>Ambient temperature</b> *1, 8		°C	-5 to 45					
<b>Circulating fluid</b> *2		Tap water, 15 % ethylene glycol aqueous solution, Deionised water						
<b>Set temperature range</b> *1		°C	5 to 35					
<b>Cooling capacity 50/60 Hz</b> *3		kW	9.0/9.5	13.0/14.5	9.0/9.5	13.0/14.5		
<b>Heating capacity 50/60 Hz</b> *4		kW	1.7/2.2	2.5/3.0	1.7/2.2	2.5/3.0		
<b>Temperature stability</b> *5		°C	±1.0			±0.1		
<b>Circulating fluid system</b>	<b>Pump capacity</b>	<b>Rated flow 50/60 Hz (Outlet)</b> *6	l/min				42/56	
		<b>Maximum flow rate 50/60 Hz</b>	l/min				55/68	
	<b>Maximum pump head</b>		m				50	
	<b>Minimum operating flow rate 50/60 Hz</b> *7		l/min				28/42	
	<b>Tank capacity</b>		L				18	
	<b>Circulating fluid outlet, circulating fluid return port</b>		Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)					
	<b>Pump drain port</b>		Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)					
<b>Automatic fluid fill system (Standard)</b>	<b>Supply side pressure range</b>		MPa				0.2 to 0.5	
	<b>Supply side fluid temperature</b>		°C				5 to 35	
	<b>Automatic fluid fill port</b>		Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)					
	<b>Overflow port</b>		Rc1 (Symbol F: G1, Symbol N: NPT1)					
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, PTFE, PU, EPDM, PVC, NBR, PE, NR, PBT, PP, POM, Carbon, Ceramic						
<b>Electrical system</b>	<b>Power supply</b>		3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation)		3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation) 3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500 V and no continuous voltage fluctuation)			
	<b>Earth leakage breaker (Standard/With handle)</b>	<b>Rated current</b>	A				20	
		<b>Sensitivity of leak current</b>	mA				30	
	<b>Rated operating current 50/60 Hz</b> *5		A		6.9/7.5	8.1/9.6	6.9/7.5	8.1/9.6
	<b>Rated power consumption 50/60 Hz</b> *5		kW (kVA)		3.7/4.7 (4.7/5.3)	4.8/6.1 (5.7/6.6)	3.7/4.7 (4.7/5.3)	4.8/6.1 (5.7/6.6)
<b>Noise level (Front 1 m/Height 1 m)</b> *5		dB (A)		70	72	70	72	
<b>Waterproof specification</b>		IPX4						
<b>Accessories</b>		Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer 20A 1 pc., Barrel nipple 20A 1 pc., Drain pan for the pump 1 pc.						
<b>Weight (dry state)</b>		kg		171	177	171	177	

- \*1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less.
- \*2 Use fluid in condition below as the circulating fluid.  
Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)  
15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.  
Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
- \*3 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC
- \*4 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
- \*5 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest
- \*6 When circulating fluid outlet port pressure – return port pressure = 0.25 MPa.
- \*7 Fluid flow rate to maintain the cooling capacity and to keep the circulating fluid discharge pressure to 0.5 MPa or less. If the actual flow rate is lower than this, install a bypass piping.
- \*8 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 166) Item 13 "For altitudes of 1000 m or higher."




# Thermo-chiller Standard Type

## Water-cooled 400 V/460 V Type

### HRS100/150 Series



#### How to Order

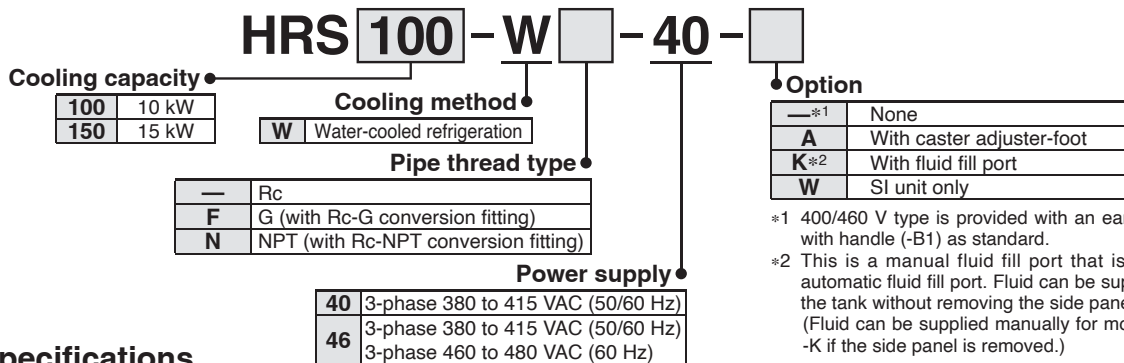

- \*1 400/460 V type is provided with an earth leakage breaker with handle (-B1) as standard.
- \*2 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel. (Fluid can be supplied manually for models without option -K if the side panel is removed.)

#### Specifications

Model		HRS100-W□-40-□	HRS150-W□-40-□	HRS100-W□-46-□	HRS150-W□-46-□	
<b>Cooling method</b>		Water-cooled refrigeration				
<b>Refrigerant</b>		R410A (HFC)				
<b>Refrigerant charge</b>	kg	1.23	1.33	1.23	1.33	
<b>Control method</b>		PID control				
<b>Ambient temperature*1</b>		2 to 45				
<b>Circulating fluid*2</b>		Tap water, 15 % ethylene glycol aqueous solution, Deionised water				
<b>Set temperature range*1</b>		5 to 35				
<b>Cooling capacity 50/60 Hz*3</b>		10.0/11.0	14.5/16.5	10.0/11.0	14.5/16.5	
<b>Heating capacity 50/60 Hz*4</b>		1.7/2.2	2.5/3.0	1.7/2.2	2.5/3.0	
<b>Temperature stability*5</b>		±1.0		±0.1		
<b>Circulating fluid system</b>	<b>Pump capacity</b>	42/56				
	<b>Rated flow 50/60 Hz (Outlet)*6</b> (When circulating fluid outlet port pressure - return port pressure = 0.25 MPa.)	l/min				
	<b>Maximum flow rate 50/60 Hz</b>	55/68				
	<b>Maximum pump head</b>	50				
	<b>Minimum operating flow rate 50/60 Hz*7</b>	28/42				
	<b>Tank capacity</b>	18				
	<b>Circulating fluid outlet, circulating fluid return port</b>	Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)				
	<b>Pump drain port</b>	Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)				
	<b>Automatic fluid fill system (Standard)</b>	Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)				
	<b>Supply side pressure range</b>	0.2 to 0.5				
<b>Supply side fluid temperature</b>	5 to 35					
<b>Automatic fluid fill port</b>	Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)					
<b>Overflow port</b>	Rc1 (Symbol F: G1, Symbol N: NPT1)					
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, PTFE, PU, EPDM, PVC, NBR, PE, NR, PBT, PP, POM, Carbon, Ceramic				
<b>Facility water system</b>	<b>Temperature range</b>	5 to 40				
	<b>Pressure range</b>	0.3 to 0.5				
	<b>Required flow 50/60 Hz*8</b>	33/34	38/40	33/34	38/40	
	<b>Facility water pressure differential</b>	0.3 or more				
	<b>Facility water inlet/outlet</b>	Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)				
<b>Fluid contact material</b>		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, PTFE, NBR, EPDM				
<b>Electrical system</b>	<b>Power supply</b>	3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation)		3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation) 3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500 V and no continuous voltage fluctuation)		
	<b>Earth leakage breaker (Standard/With handle)</b>	<b>Rated current</b>	A			
		<b>Sensitivity of leak current</b>	mA			
	<b>Rated operating current 50/60 Hz*5</b>	A	6.4/7.2	7.7/9.5	6.4/7.2	7.7/9.5
	<b>Rated power consumption 50/60 Hz*5</b>	kW (kVA)	3.4/4.4 (4.5/5.0)	4.5/6.0 (5.4/6.6)	3.4/4.4 (4.5/5.0)	4.5/6.0 (5.4/6.6)
<b>Noise level (Front 1 m/Height 1 m)*5</b>		dB (A)				
<b>Waterproof specification</b>		IPX4				
<b>Accessories</b>		Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer 20A 1 pc., Barrel nipple 20A 1 pc., Drain pan for the pump 1 pc.				
<b>Weight (dry state)</b>		kg	151	154	151	154


- \*1 Use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less. Also, when there is a possibility of the facility water being frozen, make sure to discharge all the facility water from the facility water circuit.
- \*2 Use fluid in condition below as the circulating fluid. Also, when there is a possibility of the facility water being frozen, make sure to discharge all the facility water from the facility water circuit.  
Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)  
15 % ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.  
Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
- \*3 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC
- \*4 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
- \*5 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest
- \*6 When circulating fluid outlet port pressure - return port pressure = 0.25 MPa.
- \*7 Fluid flow rate to maintain the cooling capacity and to keep the circulating fluid discharge pressure to 0.5 MPa or less. If the actual flow rate is lower than this, install a bypass piping.
- \*8 The actual facility water flow rate will vary depending on the operating conditions.

# HRS100/150 Series Standard Type


\* If the product is used at altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 26) Item 13 "\* For altitude of 1000 m or higher".

## Cooling Capacity


### HRS100-A□-20/40/46-□ (50 Hz)

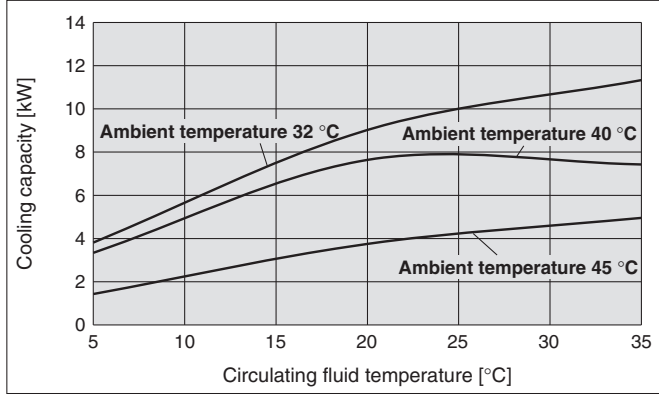


### HRS100-A□-20/40/46-□ (60 Hz)

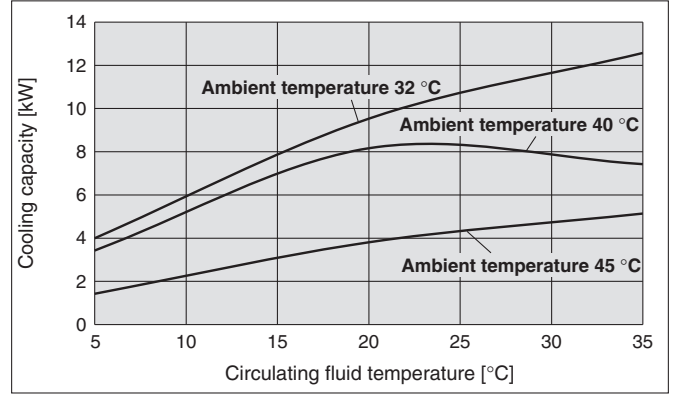


### HRS100-W□-20/40/46-□ (50 Hz)

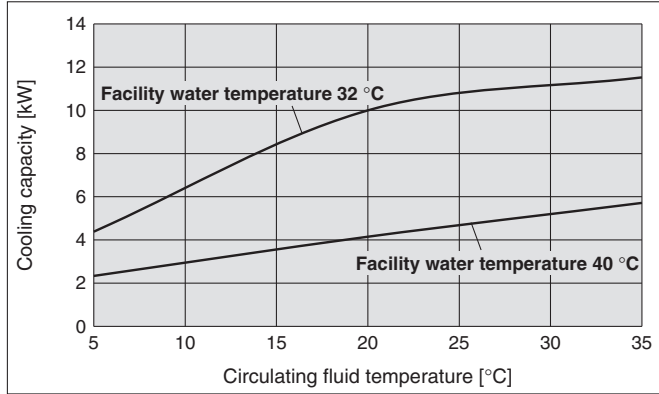


### HRS100-W□-20/40/46-□ (60 Hz)

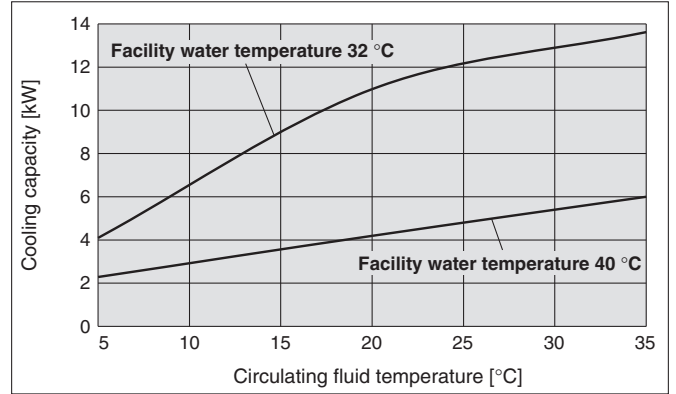


### HRS150-A□-20/40/46-□ (50 Hz)

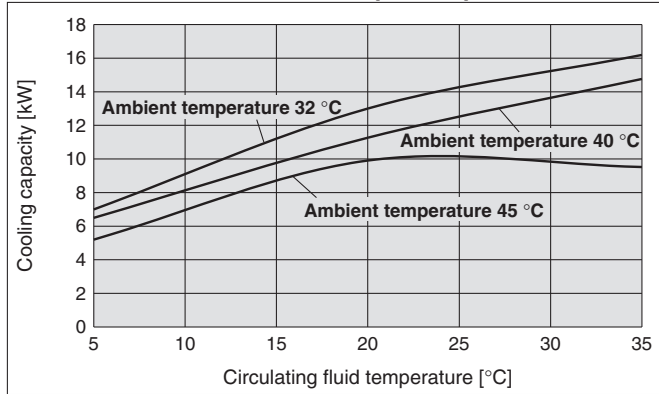


### HRS150-A□-20/40/46-□ (60 Hz)

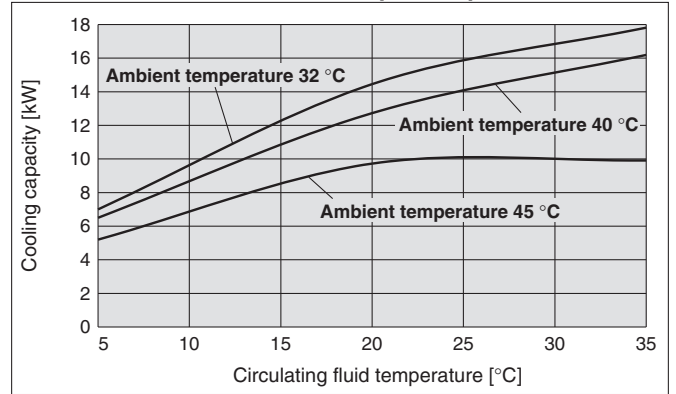

### HRS150-W□-20/40/46-□ (50 Hz)

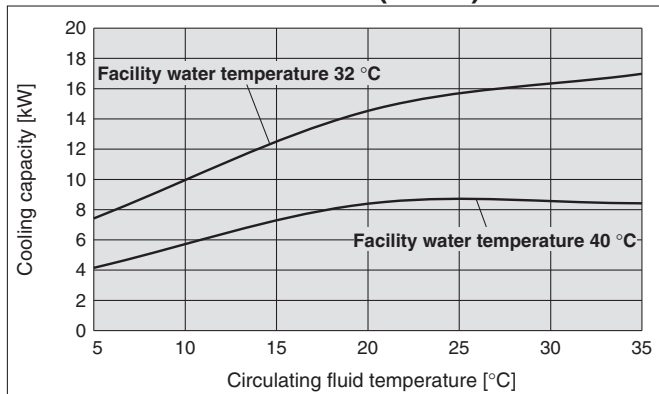


### HRS150-W□-20/40/46-□ (60 Hz)

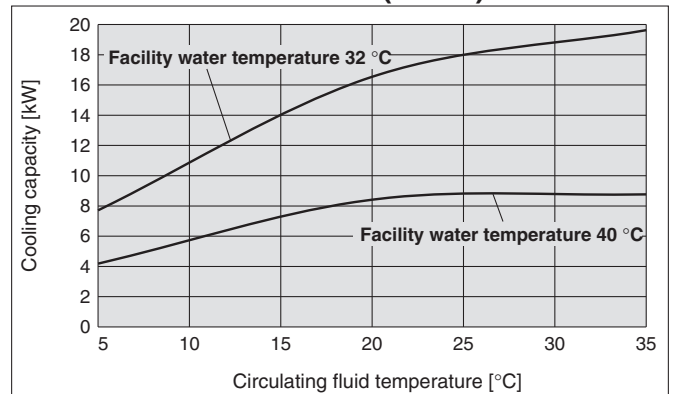

## Pump Capacity

HRS100/150-A□-20/40/46-□


HRS100/150-W□-20/40/46-□

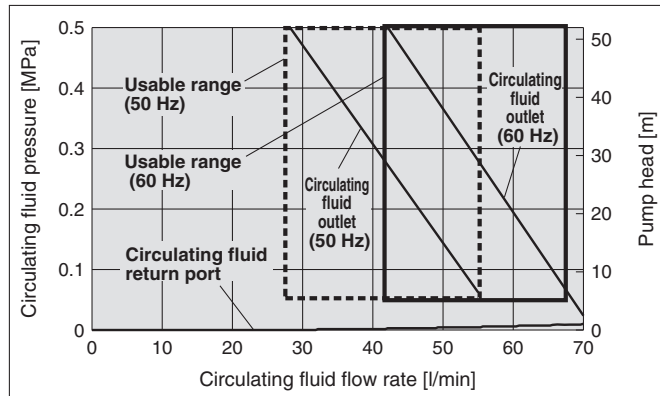

### ⚠ Caution

#### Mechanical Seal Pump


The pump used for the thermo-chiller HRS 100/150 series uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

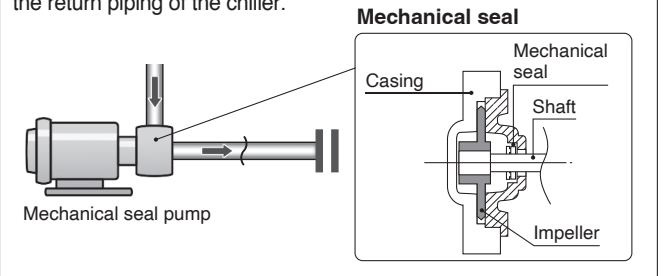

# HRS100/150 Series **Standard Type**


## Dimensions

**HRS100/150-A-20 (Air-cooled 200 V type)**  
**HRS100/150-A-40 (Air-cooled 400 V type)**  
**HRS100/150-A-46 (Air-cooled 460 V type)**

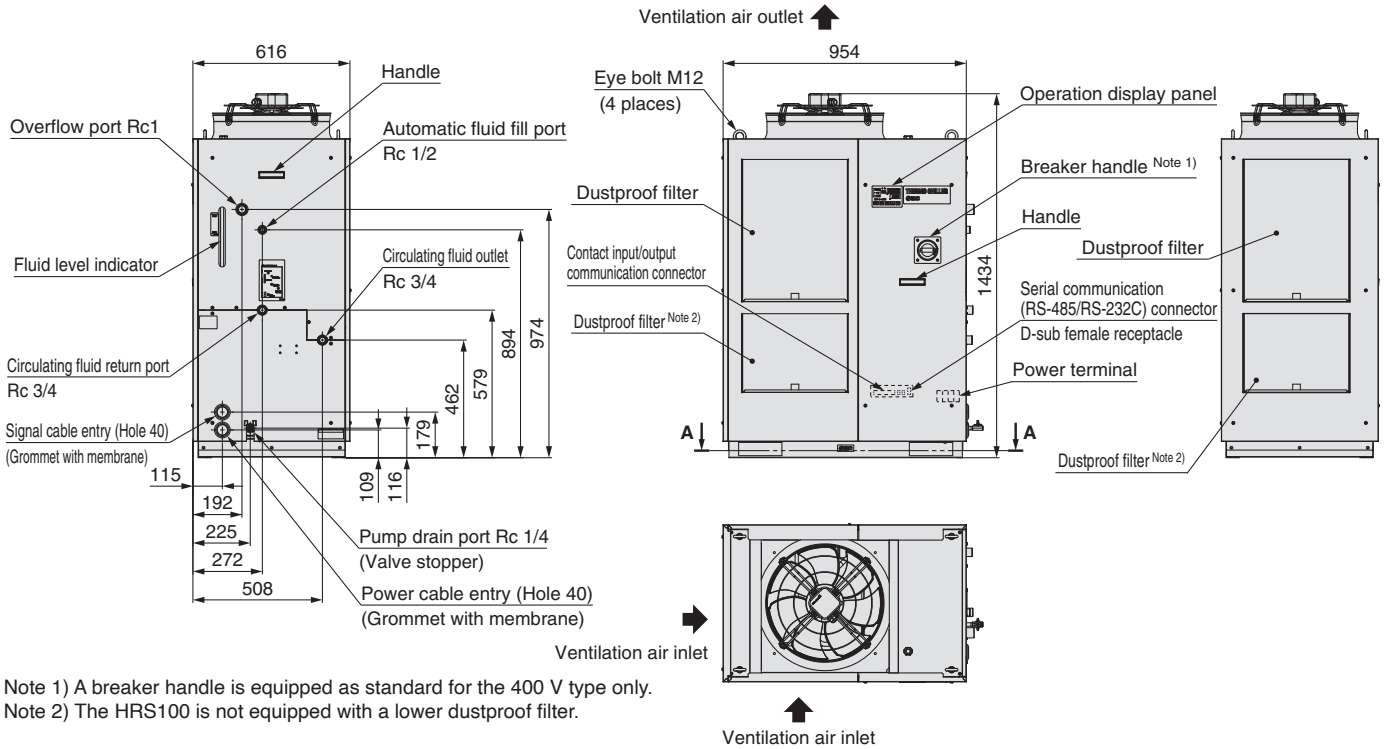

Note 1) A breaker handle is equipped as standard for the 400 V type only.  
 Note 2) The HRS100 is not equipped with a lower dustproof filter.


**HRS100/150-W-20 (Water-cooled 200 V type)**  
**HRS100/150-W-40 (Water-cooled 400 V type)**  
**HRS100/150-W-46 (Water-cooled 460 V type)**

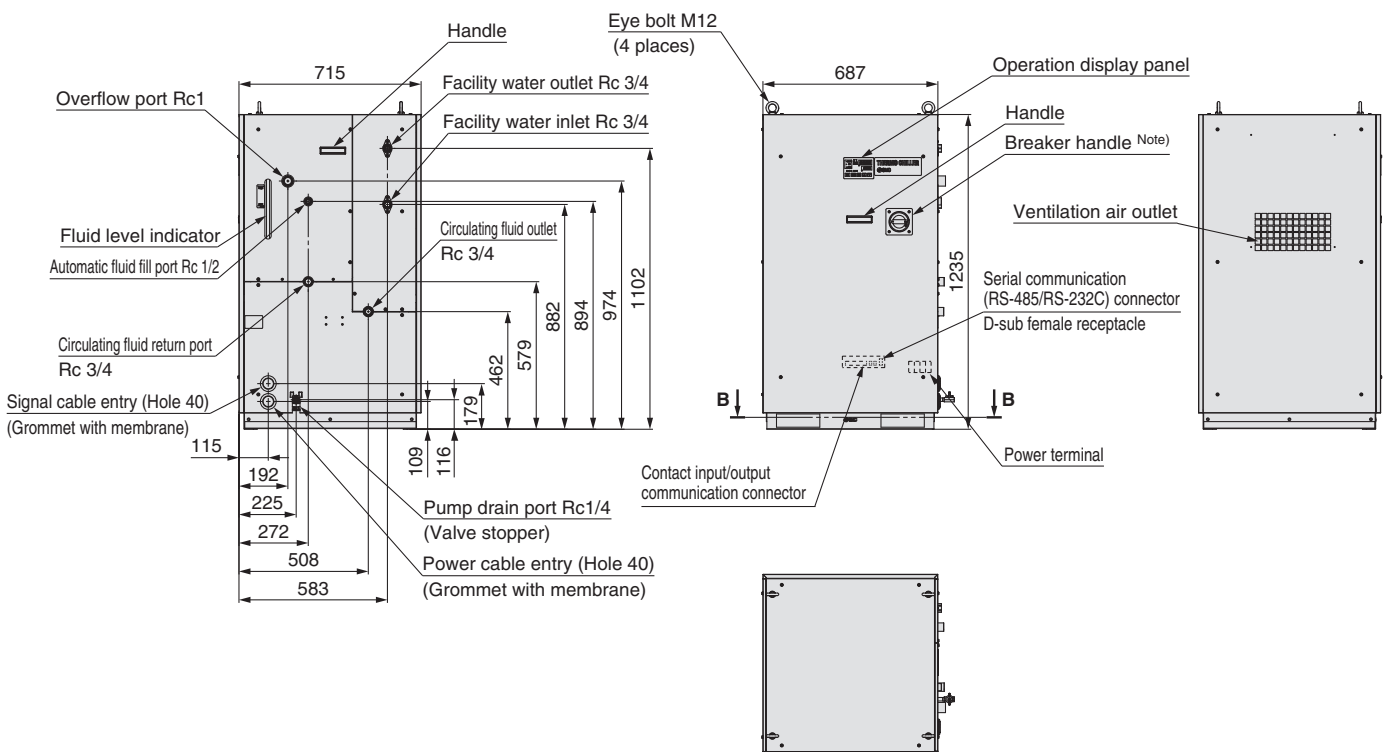


Note) A breaker handle is equipped as standard for the 400 V type only.

## Dimensions

HRS100/150-A-20 (Air-cooled 200 V type)  
 HRS100/150-A-40 (Air-cooled 400 V type)  
 HRS100/150-A-46 (Air-cooled 460 V type)  
 Anchor bolt fixing position A

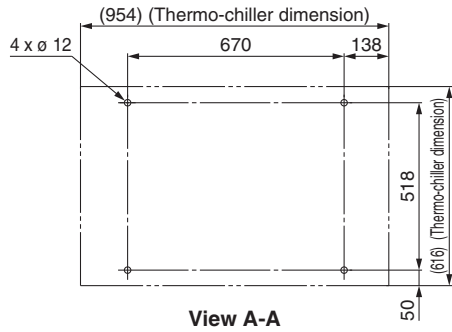


HRS100/150-W-20 (Water-cooled 200 V type)  
 HRS100/150-W-40 (Water-cooled 400 V type)  
 HRS100/150-W-46 (Water-cooled 460 V type)  
 Anchor bolt fixing position B

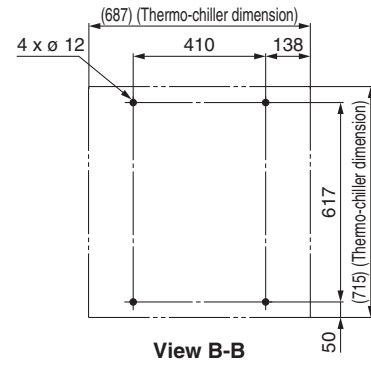

## Accessory: Y-strainer mounting view


\* Mount it by yourself on the circulating fluid return port.

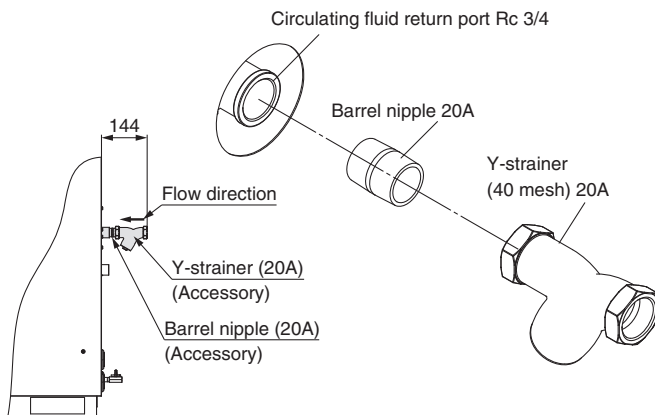

# HRS100/150 Series Standard Type

## Recommended External Piping Flow

External piping circuit is recommended as shown below.

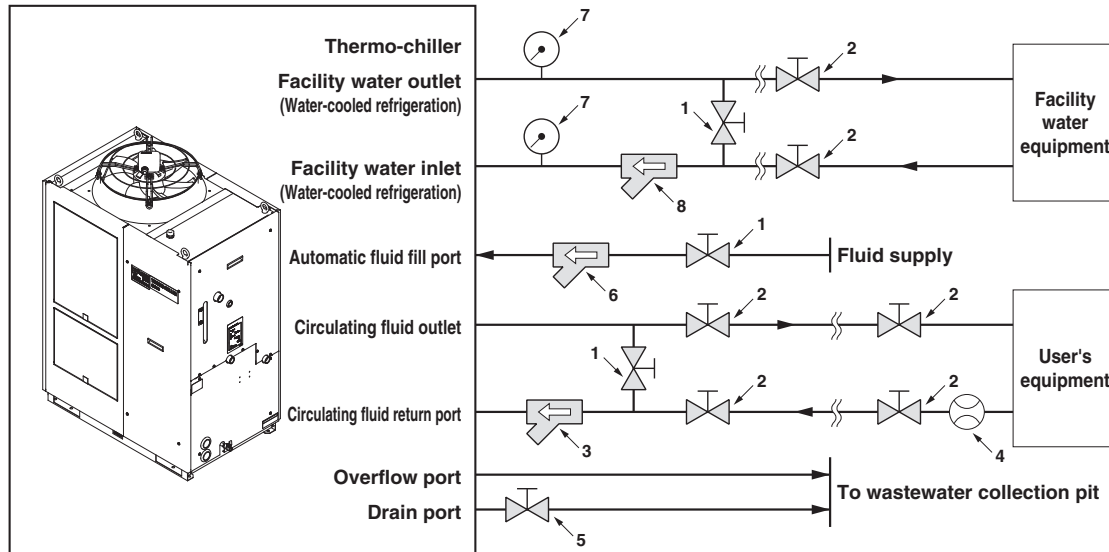

\* Ensure that the overflow port is connected to the wastewater collection pit in order to avoid damage to the tank of the thermo-chiller.

No.	Description	Size	Recommended part no.	Note
1	Valve	Rc1/2	—	—
2	Valve	Rc3/4	—	—
3	Y-strainer	Rc3/4 #40	Accessory	Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter. For the recommended filter, refer to the optional accessory HRS-PF005 (page 120).
	Filter	Rc3/4 20 μm	HRS-PF005*1, 2	
4	Flow meter	—	—	Prepare a flow meter with an appropriate flow range.
5	Valve (Part of thermo-chiller)	Rc1/4	—	—
	Y-strainer	Rc1/2 #40	—	
6	Y-strainer	Rc1/2 #40	—	Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter.
	Filter	Rc1/2 20 μm	—	
7	Pressure gauge	0 to 1.0 MPa	—	—
8	Y-strainer	Rc3/4 #40	HRS-S0378	Install either the strainer or filter. If foreign matter with a size of 20 μm or more are likely to enter, install the particle filter.
	Filter	Rc3/4 20 μm	FQ1012N-06-T020-B-X61*2	

\*1 Use the Rc3/4 bushing together as the HRS-PF005 is Rc1.

\*2 The filter shown above cannot be directly connected to the thermo-chiller. Install it in the user's piping system.

## Cable Specifications

Power supply and signal cable should be prepared by user.


### Power Cable Specifications

Applicable model	Rated value for thermo-chiller			Power cable examples	
	Power supply	Applicable breaker rated current	Terminal block screw dia.	Cable size	Crimped terminal on the thermo-chiller side
HRS100-A□-20-□ HRS100-W□-20-□	3-phase 200 VAC (50 Hz)	30 A	M5	4 cores x 5.5 mm <sup>2</sup> (4 cores x AWG10) (Including grounding cable R5.5-5)	R5.5-5
HRS150-A□-20-□ HRS150-W□-20-□	3-phase 200 to 230 VAC (60 Hz)			40 A	4 cores x 8 mm <sup>2</sup> (4 cores x AWG8) (Including grounding cable R8-5)
HRS100-A□-40-□ HRS100-W□-40-□	3-phase 380 to 415 VAC (50/60 Hz)	20 A	M5	4 cores x 5.5 mm <sup>2</sup> (4 cores x AWG10) (Including grounding cable R5.5-5)	R5.5-5
HRS150-A□-40-□ HRS150-W□-40-□				4 cores x 5.5 mm <sup>2</sup> (4 cores x AWG10) (Including grounding cable R5.5-5)	R5.5-5
HRS100-A□-46-□ HRS100-W□-46-□	3-phase 380 to 415 VAC (50/60 Hz)	20 A	M5	4 cores x 5.5 mm <sup>2</sup> (4 cores x AWG10) (Including grounding cable R5.5-5)	R5.5-5
HRS150-A□-46-□ HRS150-W□-46-□	3-phase 460 to 480 VAC (60 Hz)			4 cores x 5.5 mm <sup>2</sup> (4 cores x AWG10) (Including grounding cable R5.5-5)	R5.5-5

\* An example of the cable specifications is when two kinds of vinyl insulated wires with a continuous allowable operating temperature of 70°C at 600 V, are used at an ambient temperature of 30°C. Select the proper size of cable according to an actual condition.


### Signal Cable Specifications

Terminal specifications		Cable specifications
Terminal block screw diameter	Recommended crimped terminal	0.75 mm <sup>2</sup> (AWG18) Shielded cable
M3	Y-shape crimped terminal 1.25Y-3	

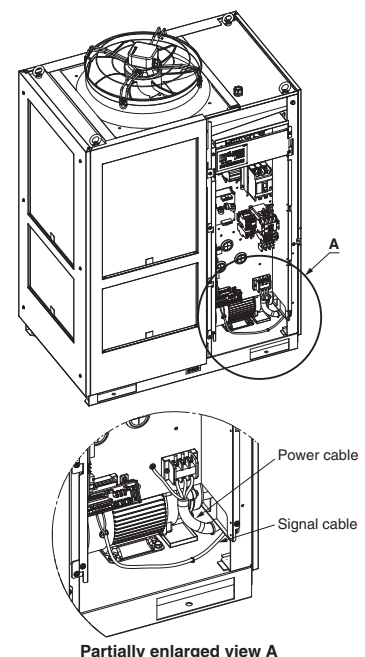

## Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.

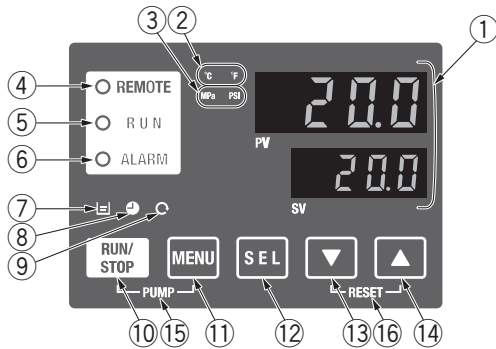

No.	Description	Function
①	<b>Digital display (7 segment, 4 digits)</b>	PV Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes). SV Displays the circulating fluid discharge temperature and the set values of other menus.
②	[°C] [°F] lamp	Equipped with a unit conversion function. Displays the unit of displayed temperature (default setting: °C).
③	[MPa] [PSI] lamp	Equipped with a unit conversion function. Displays the unit of displayed pressure (default setting: MPa).
④	[REMOTE] lamp	Enables remote operation (start and stop) by communication. Lights up during remote operation.
⑤	[RUN] lamp	Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump.
⑥	[ALARM] lamp	Flashes with buzzer when alarm occurs.
⑦	[L] lamp	Lights up when the surface of the fluid level indicator falls below the L level.
⑧	[⏸] lamp	Equipped with a timer for start and stop. Lights up when this function is operated.
⑨	[⏻] lamp	Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure. Lights up when this function is operated.
⑩	[RUN/STOP] key	Makes the product start or stop.
⑪	[MENU] key	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values).
⑫	[SEL] key	Changes the item in menu and enters the set value.
⑬	[▼] key	Decreases the set value.
⑭	[▲] key	Increases the set value.
⑮	[PUMP] key	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).
⑯	[RESET] key	Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] lamp is reset.

## List of Function

No.	Function	Outline
1	<b>Main display</b>	Displays the current and set temperature of the circulating fluid, discharge pressure of the circulating fluid. Changes the circulating fluid set temperature.
2	<b>Alarm display menu</b>	Indicates alarm number when an alarm occurs.
3	<b>Inspection monitor menu</b>	Product temperature, pressure and accumulated operating time can be checked as daily inspection. Use these for daily inspection.
4	<b>Key-lock</b>	Keys can be locked so that set values cannot be changed by operator error.
5	<b>Timer for operation start/stop</b>	Timer is used to set the operation start/stop.
6	<b>Signal for the completion of preparation</b>	A signal is output when the circulating fluid temperature reaches the set temperature, when using contact input/output and serial communication.
7	<b>Offset function</b>	Use this function when there is a temperature offset between the discharge temperature of the thermo-chiller and user's equipment.
8	<b>Reset after power failure</b>	Start operation automatically after the power supply is turned on.
9	<b>Key click sound setting</b>	Operation panel key sound can be set on/off.
10	<b>Changing temp. unit</b>	Temperature unit can be changed. Centigrade (°C) ↔ Fahrenheit (°F)
11	<b>Changing pressure unit</b>	Pressure unit can be changed. MPa ↔ PSI
12	<b>Data reset</b>	Functions can be reset to the default settings (settings when shipped from the factory).
13	<b>Accumulation time reset</b>	Reset function when the pump, the fan or the compressor is replaced. Reset the accumulated time here.
14	<b>Anti-freezing function</b>	Circulating fluid is protected from freezing during winter or at night. Set beforehand if there is a risk of freezing.
15	<b>Warming-up function</b>	When circulating fluid temperature rising time at starting needs shortening during winter or at night, set beforehand.
16	<b>Anti-snow coverage function</b>	If there will be a possibility of the snow coverage due to the change of the installation environment (season, weather), set beforehand.
17	<b>Alarm buzzer sound setting</b>	Alarm sound can be set to on/off.
18	<b>Alarm customising</b>	Operation during alarm condition and threshold values can be changed depending on the alarm type.
19	<b>Communication</b>	This function is used for contact input/output or serial communication.

## Alarm

This unit has alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Code	Alarm message
AL01	Low level in tank
AL02	High circulating fluid discharge temp.
AL03	Circulating fluid discharge temp. rise
AL04	Circulating fluid discharge temp. drop
AL05	High circulating fluid return temp.
AL06	High circulating fluid discharge pressure
AL07	Abnormal pump operation
AL08	Circulating fluid discharge pressure rise
AL09	Circulating fluid discharge pressure drop
AL10	High compressor intake temp.
AL11	Low compressor intake temp.
AL12	Low super heat temp.
AL13	High compressor discharge pressure
AL15	Refrigeration circuit pressure (high pressure side) drop
AL16	Refrigeration circuit pressure (low pressure side) rise

Code	Alarm message
AL17	Refrigeration circuit pressure (low pressure side) drop
AL18	Compressor running failure
AL19	Communication error
AL20	Memory error
AL21	DC line fuse cut
AL22	Circulating fluid discharge temp. sensor failure
AL23	Circulating fluid return temp. sensor failure
AL24	Compressor intake temp. sensor failure
AL25	Circulating fluid discharge pressure sensor failure
AL26	Compressor discharge pressure sensor failure
AL27	Compressor intake pressure sensor failure
AL28	Pump maintenance
AL29	Fan maintenance
AL30	Compressor maintenance
AL31	Contact input 1 signal detection

Code	Alarm message
AL32	Contact input 2 signal detection
AL37	Compressor discharge temp. sensor failure
AL38	Compressor discharge temp. rise
AL40	Dustproof filter maintenance <sup>Note 1)</sup>
AL41	Power stoppage
AL42	Compressor waiting
AL43	Fan failure <sup>Note 1)</sup>
AL45	Compressor over current
AL47	Pump over current
AL49	Air exhaust fan stoppage <sup>Note 2)</sup>
AL50	Incorrect phase error
AL51	Phase board over current

Note 1) Does not occur on the product of water-cooled refrigeration type.  
Note 2) Does not occur on the product of air-cooled refrigeration type.  
\* For details, read the Operation Manual.

For details, refer to the Operation Manual. Please download it via our website, <http://www.smc.eu>

## Communication Function

### Contact Input/Output

Item	Specifications												
<b>Connector type</b>	M3 terminal block												
<b>Input signal</b>	<b>Insulation method</b>	Photocoupler											
	<b>Rated input voltage</b>	24 V DC											
	<b>Operating voltage range</b>	21.6 to 26.4 V DC											
	<b>Rated input current</b>	5 mA TYP											
	<b>Input impedance</b>	4.7 kΩ											
<b>Contact output signal</b>	<b>Rated load voltage</b>	48 VAC or less/30 V DC or less											
	<b>Maximum load current</b>	500 mA AC/DC (resistance load)											
	<b>Minimum load current</b>	5 V DC 10 mA											
<b>Output voltage</b>	24 V DC ±10 % 500 mA MAX (No inductive load)												
<b>Circuit diagram</b>	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Signal description</th> <th>Default setting</th> </tr> </thead> <tbody> <tr> <td>Contact input signal 2</td> <td>—</td> </tr> <tr> <td>Contact input signal 1</td> <td>Run/stop signal input</td> </tr> <tr> <td>Contact output signal 3</td> <td>Alarm status signal output</td> </tr> <tr> <td>Contact output signal 2</td> <td>Remote status signal output</td> </tr> <tr> <td>Contact output signal 1</td> <td>Operation status signal output</td> </tr> </tbody> </table>	Signal description	Default setting	Contact input signal 2	—	Contact input signal 1	Run/stop signal input	Contact output signal 3	Alarm status signal output	Contact output signal 2	Remote status signal output	Contact output signal 1	Operation status signal output
Signal description	Default setting												
Contact input signal 2	—												
Contact input signal 1	Run/stop signal input												
Contact output signal 3	Alarm status signal output												
Contact output signal 2	Remote status signal output												
Contact output signal 1	Operation status signal output												

\*1 The pin numbers and output signals can be set by user. For details, refer to the Operation Manual for communication.

\*2 When using with optional accessories, depending on the accessory, the allowable current of 24 VDC devices will be reduced. Refer to the operation manual of the optional accessories for details.

### Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out.

For details, refer to the Operation Manual for communication.

Writing
Run/Stop Circulating fluid temperature setting (SV)

Readout
Circulating fluid present temperature Circulating fluid discharge pressure Status information Alarm occurrence information

Item	Specifications	
<b>Connector type</b>	D-sub 9-pin, Female connector (Mounting screw: M2.6 x 0.45)	
<b>Protocol</b>	Modicon Modbus compliant/Simple communication protocol	
<b>Standards</b>	EIA standard RS-485	EIA standard RS-232C
<b>Circuit diagram</b>		

\* The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual for communication. Do not connect other than in the way shown above, as it can result in failure.

Please download the Operation Manual via our website, <http://www.smc.eu>



# HRS100/150 Series Options

\* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

## A Option symbol With Caster Adjuster-foot


HRS□-□□-□-**A**

● With caster adjuster-foot

Unfixed casters and adjuster feet stops are mounted.

Applicable model	Dimension [mm]			Additional weight*1 [kg]
	A	B	C	
HRS100/150-A-20/40/46-A	830	302	1552	Approx. 16
HRS100/150-W-20/40/46-A	570	401	1353	Approx. 18

\*1 Refers to the amount of increase from the standard weight

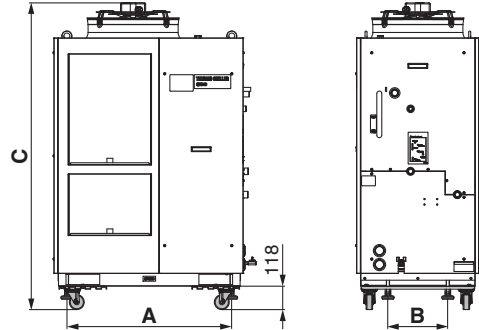

## B Option symbol With Earth Leakage Breaker

HRS□-□□-20-**B**


● With earth leakage breaker

A leakage breaker is built in to automatically stop the supply power when it has short-circuit, over current or electrical leakage.

Applicable model	Rated current [A]	Sensitivity of leak current [mA]	Short circuit display method
HRS100-A/W-20	30	30	Mechanical button
HRS150-A/W-20	40		

\* 400 V/460 V type is equipped as standard.

\* Cannot be selected together with option B1.

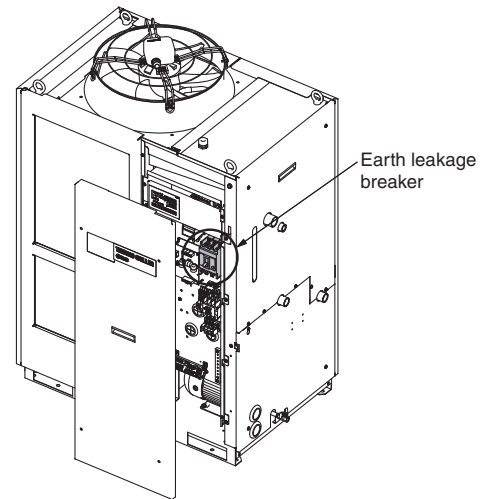

## B1 Option symbol With Earth Leakage Breaker with Handle



HRS□-□□-20-**B1**

● With earth leakage breaker with handle

A breaker operation handle that can be operated without removing the front panel for the electrical unit is mounted.

The capacity, sensitivity of leak current, and operating characteristics of the breaker are the same as option B.

(It is not necessary to select this option since an earth leakage breaker with a handle is installed for the models with power supply specification '-40' or '-46' as standard equipment.)

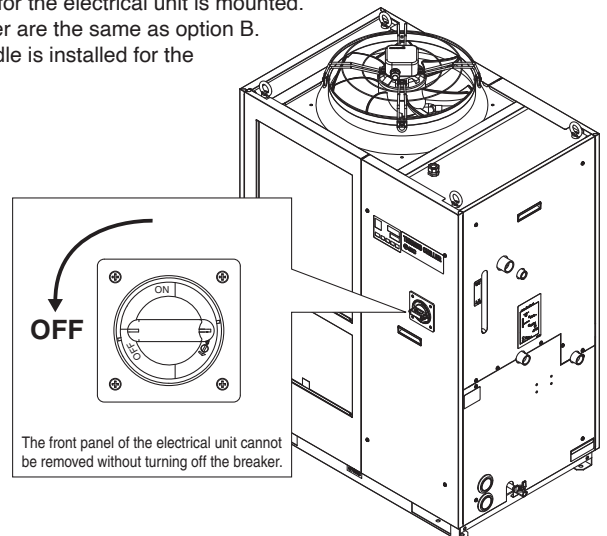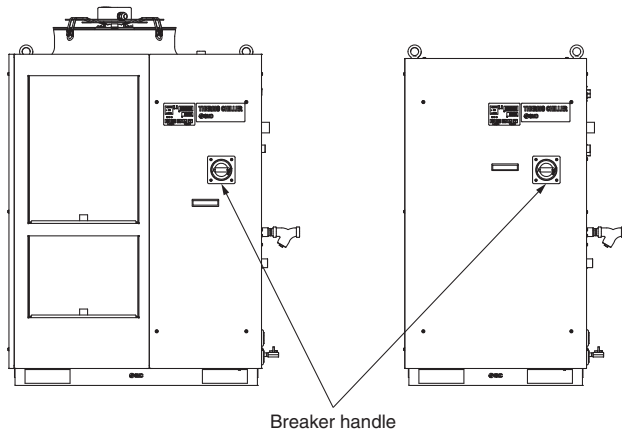

\* 400 V/460 V type is equipped as standard.

\* Cannot be selected together with option B.




# HRS100/150 Series

## **K** Option symbol With Fluid Fill Port

HRS□-□-□-□-**K**

● With fluid fill port

When the automatic fluid fill port is not used, fluid can be supplied manually without removing the panel.

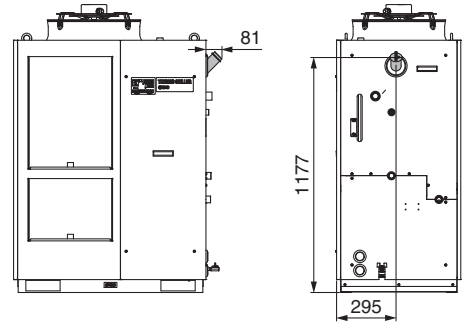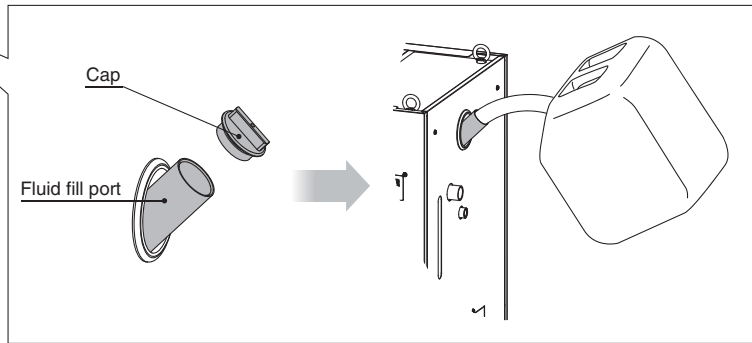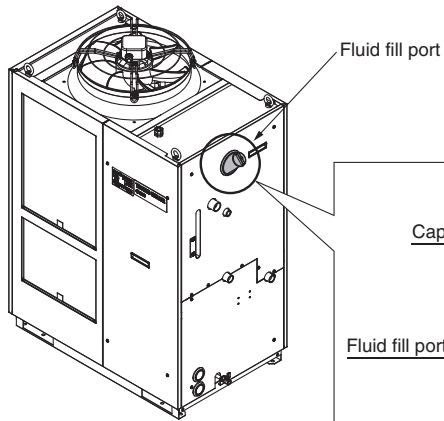

\* Dimensions are common to all models.

## **W** Option symbol SI Unit Only

HRS□-□-□-□-**W**

● SI unit only

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only.  
If this option is not selected, a product with a unit selection function will be provided by default.

\* No change in external dimensions

# HRS100/150 Series Optional Accessories


## ① Piping Conversion Fitting

This is a fitting to change the port from Rc to G or NPT.


- Circulating fluid outlet, Circulating fluid return port Rc 3/4 → NPT 3/4 or G 3/4
- Overflow port Rc 1 → NPT 1 or G 1
- Automatic fluid fill port Rc 1/2 → NPT 1/2 or G 1/2
- Facility water inlet, Facility water outlet Rc 3/4 → NPT 3/4 or G 3/4 (for HRS-EP029 or HRS-EP030)

(It is not necessary to purchase this when pipe thread type F or N is selected in “How to Order” since it is included in the product.)

Part no.	Contents	Applicable model	Material
HRS-EP027	NPT thread conversion fitting set	HRS100/150-A-□	Stainless steel
HRS-EP028	G thread conversion fitting set		
HRS-EP029	NPT thread conversion fitting set	HRS100/150-W-□	
HRS-EP030	G thread conversion fitting set		

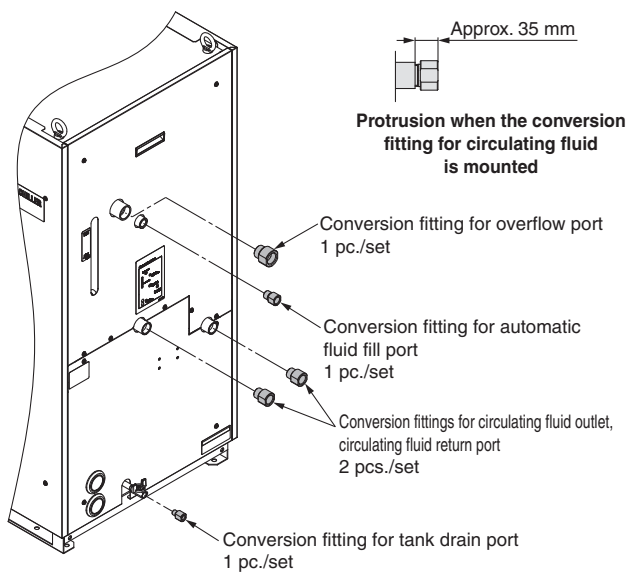

HRS-EP027, HRS-EP028

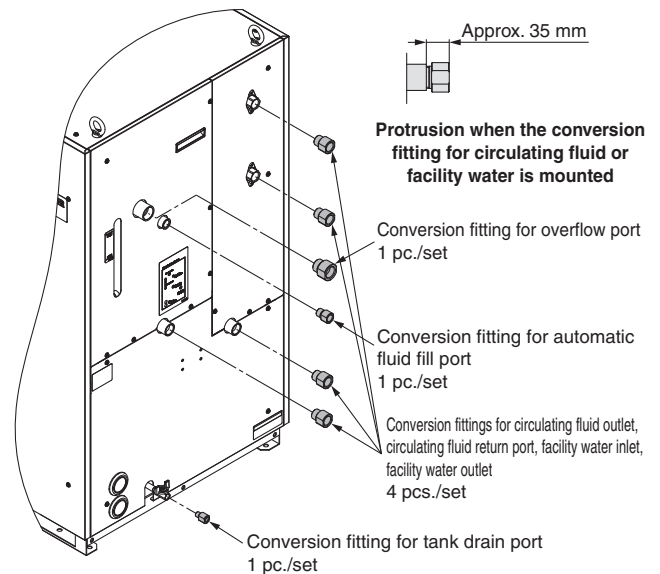

HRS-EP029, HRS-EP030

## ② Caster Adjuster-foot Kit

This is a set of unfixed casters and adjuster feet stop.

When installed by user, it is necessary to lift the thermo-chiller by a forklift or sling work.

Carefully read the procedure manual included with this kit before performing the installation.

Part no.	Applicable model	Dimension [mm]		Weight [kg]
		A	B	
HRS-KS003	HRS100/150-A-□-□	830	302	Approx. 16
HRS-KS002	HRS100/150-W-□-□	570	401	Approx. 18

### Parts List

Description
Procedure manual
Caster adjuster-foot bracket (2 pcs.)
Fixing bolt (M8) (8 pcs.)

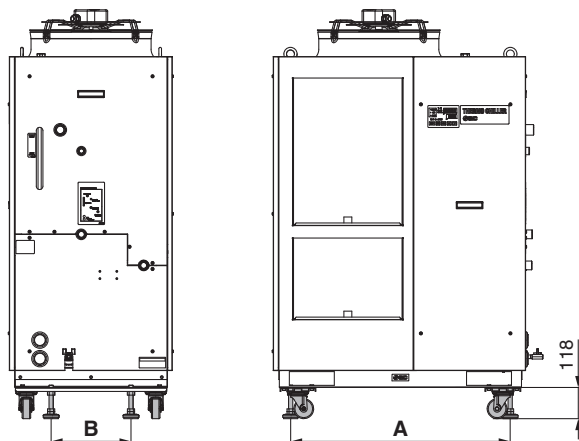


Fig. 1 Mounting view

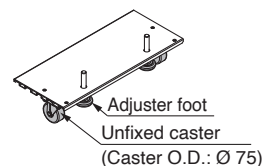


Fig. 2 Caster adjuster-foot bracket (2 pcs.)

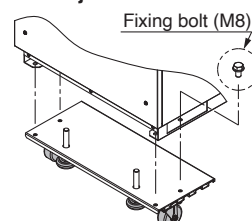


Fig. 3 Fixing bolt (8 pcs.)




# HRS100/150 Series

## ③ Electric Conductivity Control Set

The set indicates and controls the electric conductivity of the circulating fluid. Refer to the Operation Manual for details.

Part no.	Applicable model
HRS-DI010	HRS100-□□-□
	HRS150-□□-□

Measurement range of electric conductivity	2.0 to 48.0 $\mu\text{S/cm}$
Set range of electric conductivity target	5.0 to 45.0 $\mu\text{S/cm}$
Set range of electric conductivity hysteresis	2.0 to 10.0 $\mu\text{S/cm}$
Operating temperature range (Circulating fluid temperature)	5 to 60 °C
Power consumption	400 mA or less
Installation environment	Indoors

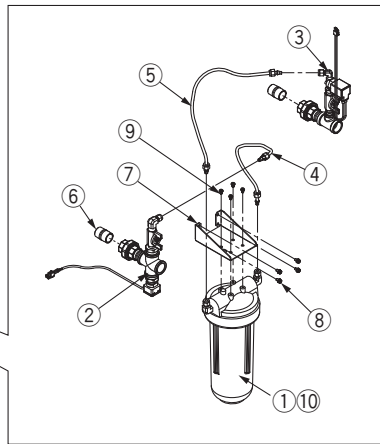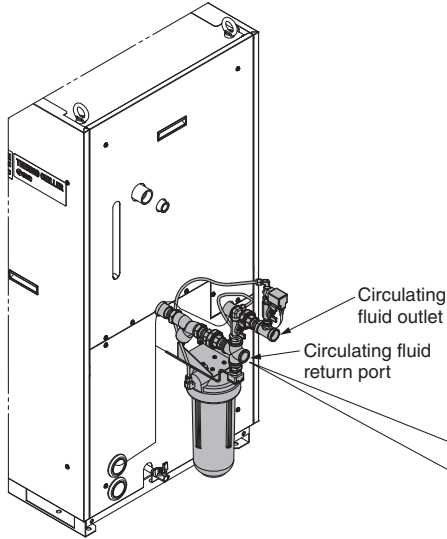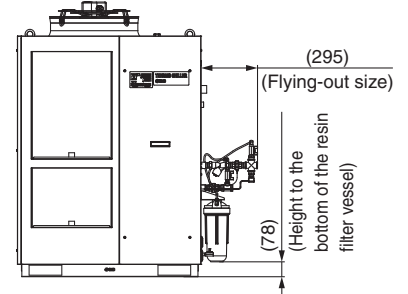

### Parts List



No.	Description	Fluid contact material	Qty.
①	DI filter vessel	PC, PP	1
②	DI sensor assembly	Stainless steel, PPS	1
③	DI control piping assembly	Stainless steel, EPDM	1
④	DI filter outlet tube	PFA, POM	1
⑤	DI filter inlet tube	PFA, POM	1
⑥	Nipple (Size: 3/4)	Stainless steel	2
⑦	Mounting bracket	—	1
⑧	Mounting screw (M5 screw)	—	4
⑨	Tapping screw (M5 screw)	—	4
⑩	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1

\*1 The product should be replaced when it can no longer preserve the electrical conductivity set value.

## ④ Bypass Piping Set

Ensure that the circulating fluid flow rate will be more than the minimum required flow rate using a bypass piping set so that the circulating fluid discharge pressure would be 0.5 MPa or less. Otherwise, an alarm due to circulating fluid discharge pressure or pump over current may occur.

Part no.	Applicable model	Minimum operating flow rate [l/min] (50 / 60 Hz)
HRS-BP007	HRS100-□□-□	28/42
	HRS150-□□-□	

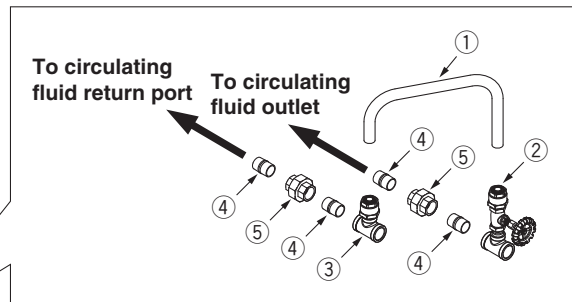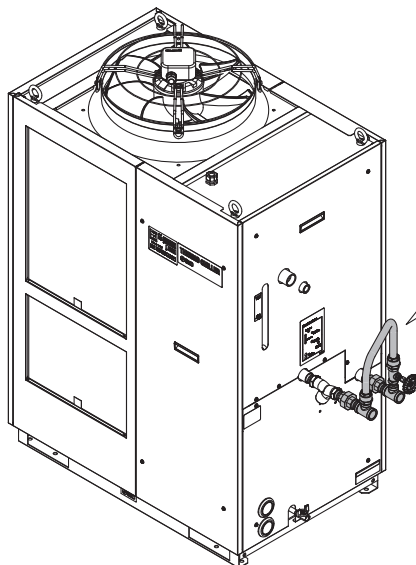


### Parts List

No.	Description	Fluid contact material	Qty.
①	Hose (I.D.: 15 mm)	PVC	1 (Approx. 700 mm)
②	Outlet piping assembly (With globe valve)	Stainless steel, Brass, Bronze	1
③	Return piping assembly	Stainless steel, Brass	1
④	Nipple (Size: 3/4)	Stainless steel	4
⑤	Union (Size: 3/4)	Stainless steel	2
⑥	Sealant tape	PTFE	1
⑦	Operation Manual	—	1

## ⑤ Relief Valve Set

If a solenoid valve is installed in the user's system and the circulating fluid supply stops or decreases during thermo-chiller operation, the circulating fluid discharge pressure of the thermo-chiller increases and an alarm may occur. The relief valve set opens the valve when the pressure exceeds the set pressure level, which prevents pressure increase.

Part no.	Applicable model
<b>HRS-BP008</b>	<b>HRS100-□□-□</b> <b>HRS150-□□-□</b>

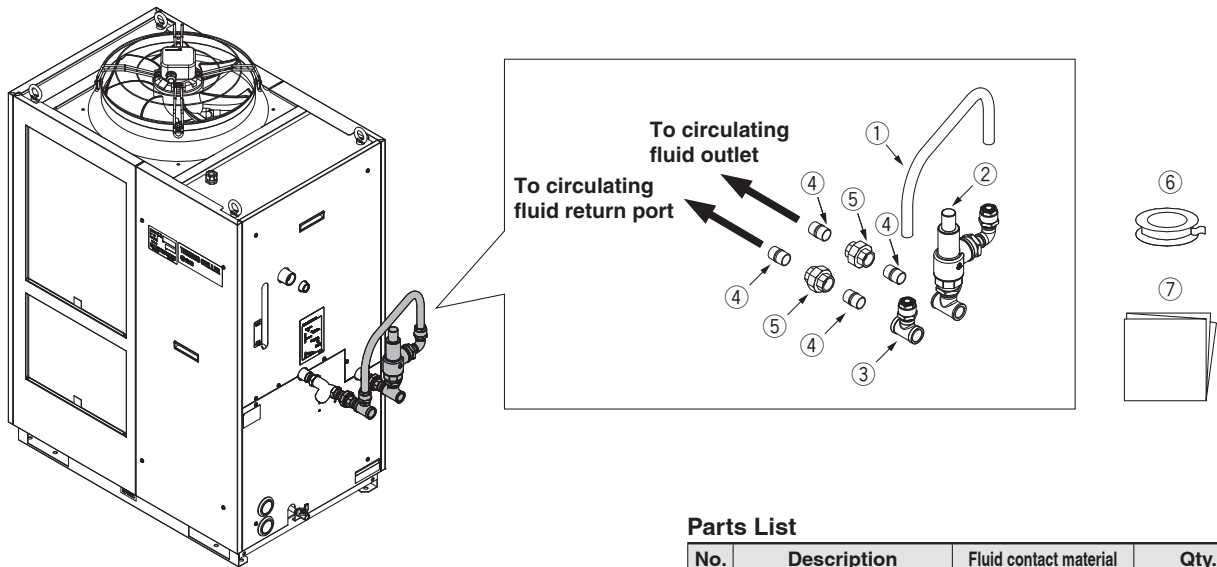

- Relief valve set pressure: 0.32 MPa (The relief valve starts to open when the circulating fluid discharge pressure reaches 0.32 MPa.)
- The setting is made so that the circulating fluid discharge pressure of the thermo-chiller does not exceed 0.5 MPa even when the thermo-chiller is operated at 60 Hz and the water is no longer supplied to the user's system.
- The set pressure of the relief valve should not be adjusted (or changed) by the user. If the set pressure needs to be adjusted, it should be conducted by authorised engineers.


### Parts List

No.	Description	Fluid contact material	Qty.
①	Hose (I.D.: 15 mm)	PVC	1 (Approx. 700 mm)
②	Outlet piping assembly	Stainless steel, Brass	1
③	Return piping assembly	Stainless steel, Brass	1
④	Nipple (Size: 3/4)	Stainless steel	4
⑤	Union (Size: 3/4)	Stainless steel	2
⑥	Sealant tape	PTFE	1
⑦	Operation Manual	—	1

# HRS100/150 Series

## ⑥ Snow Protection Hood



Snow protection hood for air-cooled chiller. According to the mounting direction of the snow protection hood, the ventilation from the fan can be selected from four directions, front, rear, left and right.

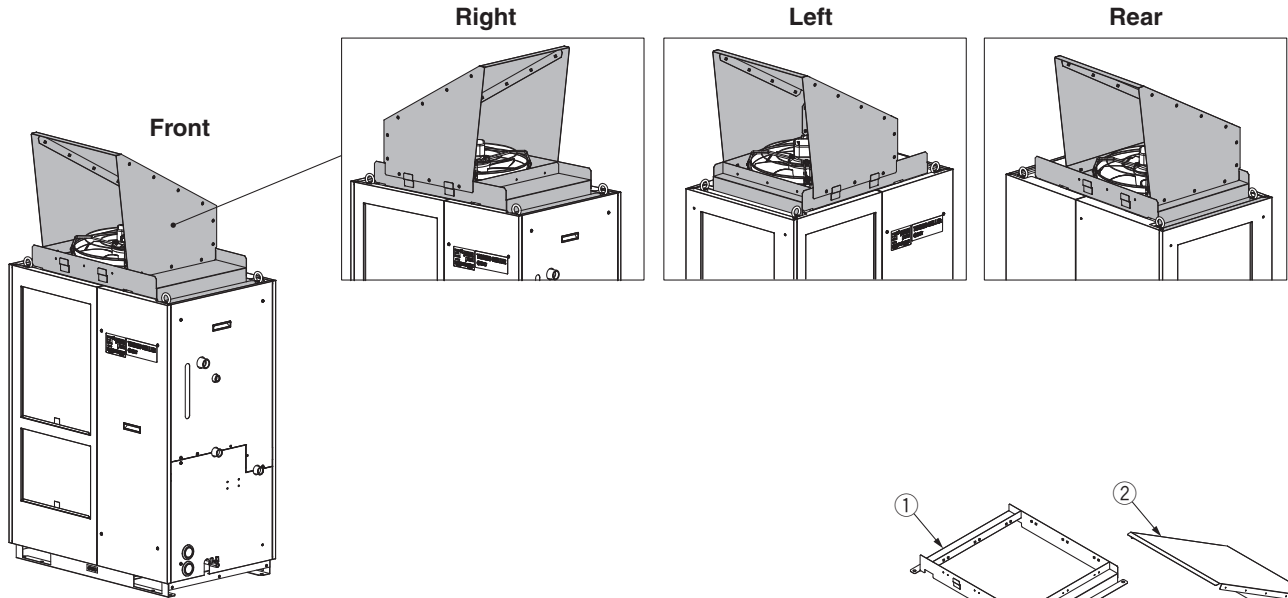

Part no.	Applicable model
<b>HRS-BK005</b>	<b>HRS100-A</b> □-□ <b>HRS150-A</b> □-□

### Parts List

No.	Description	Q'ty
①	Snow protection hood base	1
②	Snow protection hood A	1
③	Snow protection hood B	2
④	Assembly/Mounting screw	18

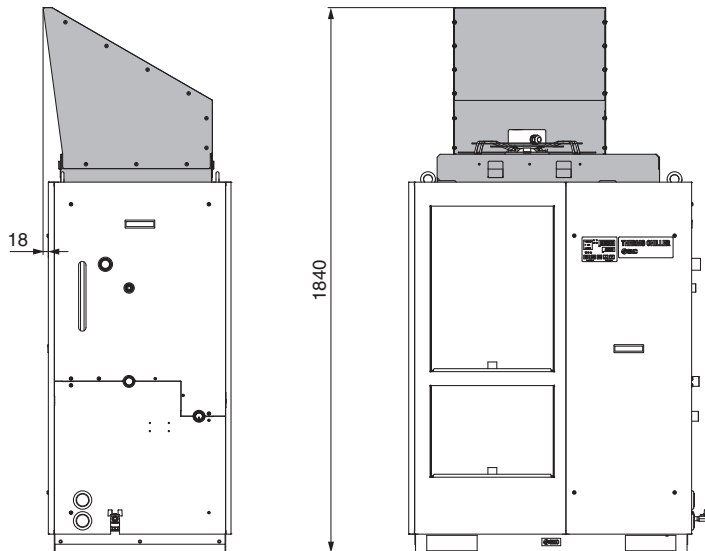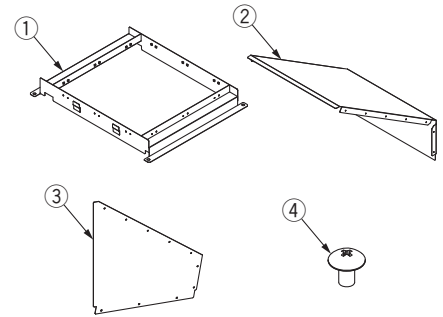

Mounting condition for HRS-BK005

\* This hood does not completely prevent snow from entering the inside of the chiller.

## ⑦ Particle Filter Set

Removes foreign matter in the circulating fluid. If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set. This set cannot be directly connected to the thermo-chiller. Install it in the user's piping system. For details, refer to the Operation Manual.

### Particle Filter Set

**HRS-PF005-H**

#### ● Accessory

Symbol	Accessory
—	None
H	With handle

Fluid	Tap water
Max. operating pressure	0.65 MPa
Operating temperature range	5 to 35°C
Nominal filtration accuracy	5 μm
Installation environment	Indoors

#### Parts List


No.	Description	Material	Qty.	Note
①	Body	PC, PP	1	—
②	Element	PP	1	—
③	Extension piece	Stainless steel	2	Conversion from NPT to Rc
④	Handle	—	1	When -H is selected
⑤	Sealant tape	PTFE	1	—

\* The product should be replaced when the pressure drop reaches 0.1 MPa.

### Replacement Element

**HRS-PF006**

The product should be replaced when the pressure drop reaches 0.1 MPa.

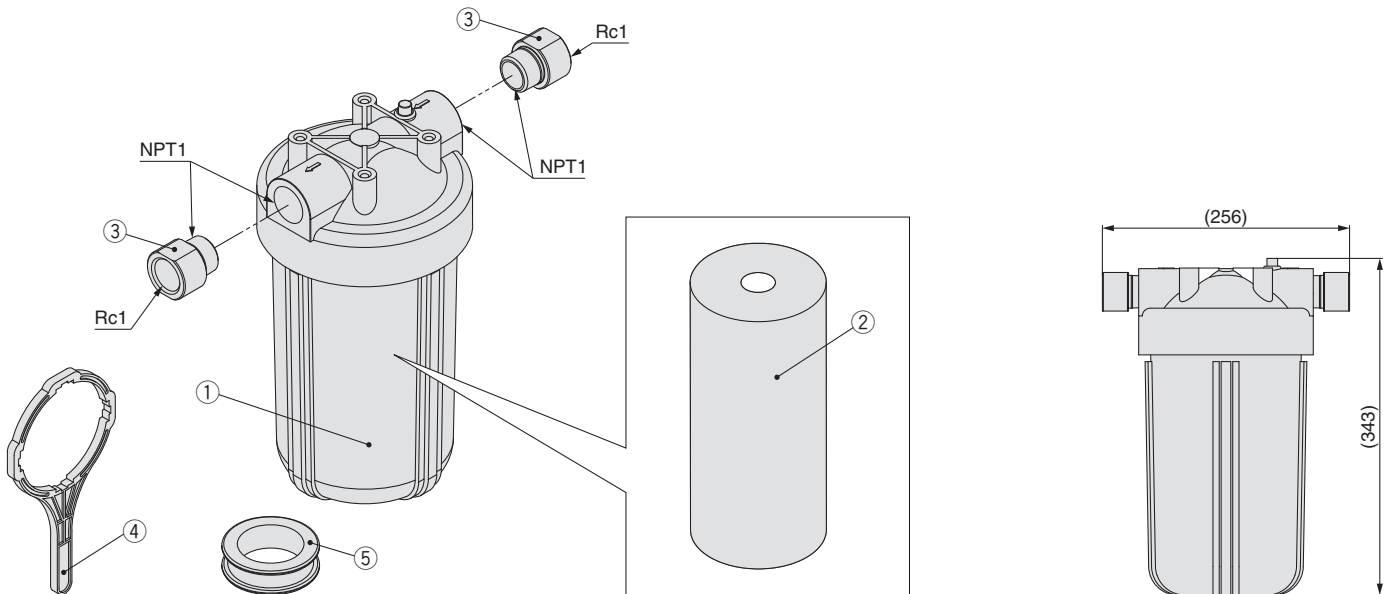

# HRS100/150 Series

## ⑧ Wired Remote Controller



When the wired remote controller is connected to the thermo-chiller, the operation start/stop setting or the set temperature can be changed from a place apart from the thermo-chiller. For details, refer to the Operation Manual.

### Wired Remote Controller

HRS-CV004-1

#### Accessories

Symbol	Accessories
—	None
1	With cable (Approx. 20 m)
2	With cable (Approx. 50 m)
3	With cable (Approx. 100 m)

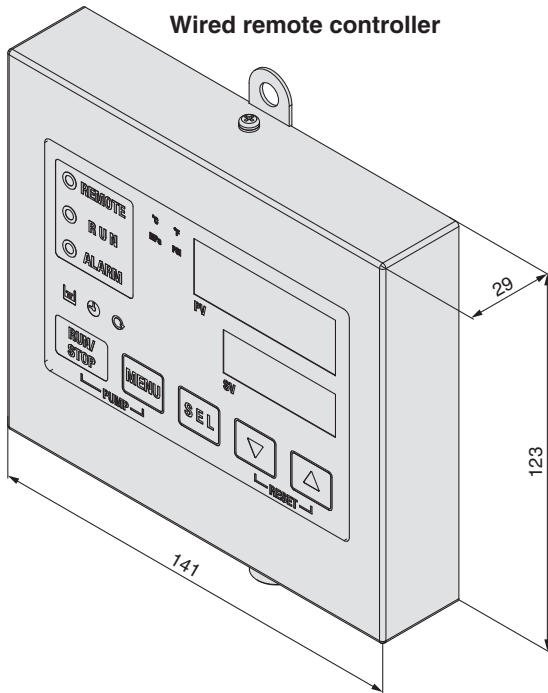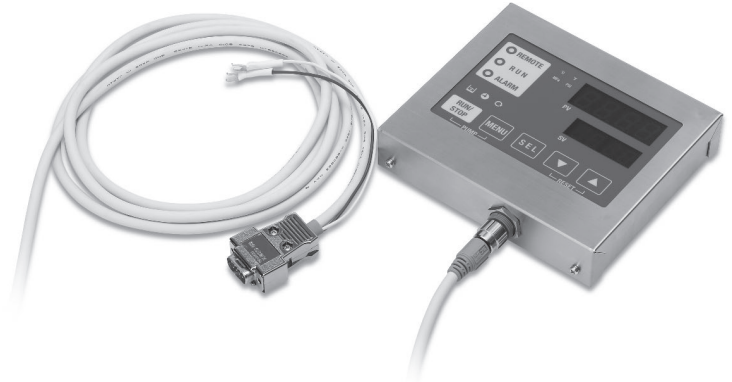

#### Displayed items


Circulating fluid discharge temperature
Circulating fluid discharge set temperature
Circulating fluid discharge pressure
Circulating fluid electric conductivity*1
Circulating fluid flow rate
Alarm code*2

\*1 Only when the electric conductivity control set is used.

\*2 Only when an alarm occurs. The alarm cannot be reset with the remote controller. Be sure to reset the alarm with the thermo-chiller main unit.

#### Operable items

Operation start/stop
Circulating fluid temperature setting
Alarm sound stop
Key-lock
Key operation sound ON/OFF
Digital display brightness adjustment
Alarm sound ON/OFF

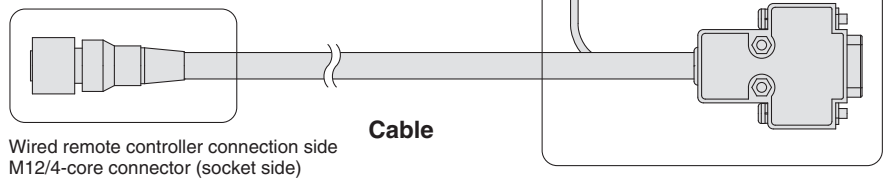

- \* To use the wired remote controller, the thermo-chiller main unit setting is needed.
- \* Use the wired remote controller indoors.
- \* Pass the cable through the duct, etc. so that it is not exposed to rain water or direct sunlight.



# HRS100/150 Series Cooling Capacity Calculation

## Required Cooling Capacity Calculation

**Example 1: When the heat generation amount in the user's equipment is known.**


The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.\*

- ① Derive the heat generation amount from the power consumption.

Power consumption **P**: 7 [kW]

$$Q = P = 7 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  $7 \text{ [kW]} \times 1.2 = \mathbf{8.4 \text{ [kW]}}$

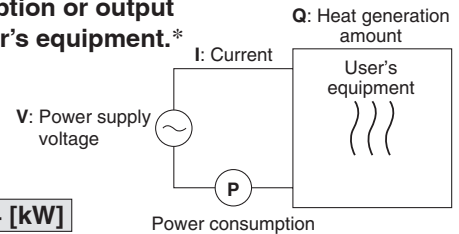

- ② Derive the heat generation amount from the power supply output.

Power supply output **VI**: 8.8 [kVA]

$$Q = P = V \times I \times \text{Power factor}$$

In this example, using a power factor of 0.85:

$$= 8.8 \text{ [kVA]} \times 0.85 = 7.5 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  $7.5 \text{ [kW]} \times 1.2 = \mathbf{9.0 \text{ [kW]}}$

- ③ Derive the heat generation amount from the output.

Output (shaft power etc.) **W**: 5.1 [kW]

$$Q = P = \frac{W}{\text{Efficiency}}$$

In this example, using an efficiency of 0.7:

$$= \frac{5.1}{0.7} = 7.3 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  $7.3 \text{ [kW]} \times 1.2 = \mathbf{8.8 \text{ [kW]}}$

\* The above examples calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

**Example 2: When the heat generation amount in the user's equipment is not known.**

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.


Heat generation amount by user's equipment **Q** : Unknown [W] [(J/s)]  
 Circulating fluid : Tap water\*  
 Circulating fluid mass flow rate **qm** : (=  $\rho \times qv \div 60$ ) [kg/s]  
 Circulating fluid density  $\rho$  : 1 [kg/l]  
 Circulating fluid (volume) flow rate **qv** : 35 [l/min]  
 Circulating fluid specific heat **C** :  $4.186 \times 10^3$  [J/(kg·K)]  
 Circulating fluid outlet temperature **T1** : 293 [K] (20 [°C])  
 Circulating fluid return temperature **T2** : 296 [K] (23 [°C])  
 Circulating fluid temperature difference  $\Delta T$  : 3 [K] (=  $T_2 - T_1$ )  
 Conversion factor: minutes to seconds (SI units) : 60 [s/min]

$$Q = qm \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times qv \times C \times \Delta T}{60} = \frac{1 \times 35 \times 4.186 \times 10^3 \times 3.0}{60}$$

$$= 7325 \text{ [J/s]} \approx 7325 \text{ [W]} = 7.3 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  $7.3 \text{ [kW]} \times 1.2 = \mathbf{8.8 \text{ [kW]}}$

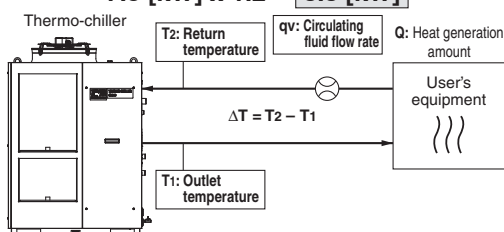

### Example of conventional measurement units (Reference)

Heat generation amount by user's equipment **Q** : Unknown [cal/h] → [W]  
 Circulating fluid : Tap water\*  
 Circulating fluid weight flow rate **qm** : (=  $\rho \times qv \times 60$ ) [kgf/h]  
 Circulating fluid weight volume ratio  $\gamma$  : 1 [kgf/l]  
 Circulating fluid (volume) flow rate **qv** : 35 [l/min]  
 Circulating fluid specific heat **C** :  $1.0 \times 10^3$  [cal/(kgf·°C)]  
 Circulating fluid outlet temperature **T1** : 20 [°C]  
 Circulating fluid return temperature **T2** : 23 [°C]  
 Circulating fluid temperature difference  $\Delta T$  : 3 [°C] (=  $T_2 - T_1$ )  
 Conversion factor: hours to minutes : 60 [min/h]  
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{qm \times C \times (T_2 - T_1)}{860}$$

$$= \frac{\gamma \times qv \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 35 \times 60 \times 1.0 \times 10^3 \times 3.0}{860}$$

$$\approx 7325 \text{ [W]} = 7.3 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  $7.3 \text{ [kW]} \times 1.2 = \mathbf{8.8 \text{ [kW]}}$

# HRS100/150 Series

## Required Cooling Capacity Calculation

**Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.**


Heat quantity by cooled substance (per unit time) **Q** : Unknown [W] ([J/s])  
 Cooled substance : Water  
 Cooled substance mass **m** : (=  $\rho \times V$ ) [kg]  
 Cooled substance density  $\rho$  : 1 [kg/l]  
 Cooled substance total volume **V** : 150 [L]  
 Cooled substance specific heat **C** :  $4.186 \times 10^3$  [J/(kg·K)]  
 Cooled substance temperature when cooling begins **To** : 303 [K] (30 [°C])  
 Cooled substance temperature after t hour **Tt** : 293 [K] (20 [°C])  
 Cooling temperature difference  $\Delta T$  : 10 [K] (=  $T_o - T_t$ )  
 Cooling time  $\Delta t$  : 900 [s] (= 15 [min])

\* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_o - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$

$$= \frac{1 \times 150 \times 4.186 \times 10^3 \times 10}{900} = 6977 \text{ [J/s]} \approx 7.0 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  
 $7.0 \text{ [kW]} \times 1.2 = \mathbf{8.4 \text{ [kW]}}$

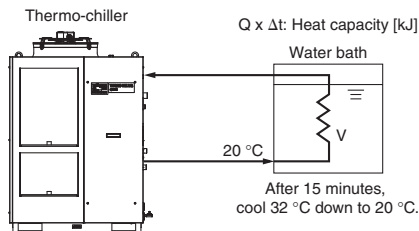

### Example of conventional measurement units (Reference)

Heat quantity by cooled substance (per unit time) **Q** : Unknown [cal/h] → [W]  
 Cooled substance : Water  
 Cooled substance weight **m** : (=  $\rho \times V$ ) [kgf]  
 Cooled substance weight volume ratio  $\gamma$  : 1 [kgf/l]  
 Cooled substance total volume **V** : 150 [L]  
 Cooled substance specific heat **C** :  $1.0 \times 10^3$  [cal/(kgf·°C)]  
 Cooled substance temperature when cooling begins **To** : 30 [°C]  
 Cooled substance temperature after t hour **Tt** : 20 [°C]  
 Cooling temperature difference  $\Delta T$  : 10 [°C] (=  $T_o - T_t$ )  
 Cooling time  $\Delta t$  : 15 [min]  
 Conversion factor: hours to minutes : 60 [min/h]  
 Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_o - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 150 \times 60 \times 1.0 \times 10^3 \times 10}{15 \times 860}$$

$$\approx 6977 \text{ [W]} = 7.0 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,  
 $7.0 \text{ [kW]} \times 1.2 = \mathbf{8.4 \text{ [kW]}}$

Note) This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping shape.

## Precautions on Cooling Capacity Calculation

### 1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

### 2. Pump capacity

#### <Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

#### <Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves.

Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

## Circulating Fluid Typical Physical Property Values

### 1. This catalogue uses the following values for density and specific heat in calculating the required cooling capacity.

Density  $\rho$ : 1 [kg/l] (or, using conventional unit system, weight volume ratio  $\gamma = 1$  [kgf/l])

Specific heat **C**:  $4.19 \times 10^3$  [J/(kg·K)] (or, using conventional unit system,  $1 \times 10^3$  [cal/(kgf·°C)])

### 2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.

#### Water

Physical property value Temperature	Density $\rho$ [kg/l]	Specific heat C [J/(kg·K)]	Conventional unit system	
			Weight volume ratio $\gamma$ [kgf/l]	Specific heat C [cal/(kgf·°C)]
5 °C	1.00	$4.2 \times 10^3$	1.00	$1 \times 10^3$
10 °C	1.00	$4.19 \times 10^3$	1.00	$1 \times 10^3$
15 °C	1.00	$4.19 \times 10^3$	1.00	$1 \times 10^3$
20 °C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
25 °C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
30 °C	1.00	$4.18 \times 10^3$	1.00	$1 \times 10^3$
35 °C	0.99	$4.18 \times 10^3$	0.99	$1 \times 10^3$
40 °C	0.99	$4.18 \times 10^3$	0.99	$1 \times 10^3$

#### 15 % Ethylene Glycol Aqueous Solution

Physical property value Temperature	Density $\rho$ [kg/l]	Specific heat C [J/(kg·K)]	Conventional unit system	
			Weight volume ratio $\gamma$ [kgf/l]	Specific heat C [cal/(kgf·°C)]
5 °C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
10 °C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
15 °C	1.02	$3.91 \times 10^3$	1.02	$0.93 \times 10^3$
20 °C	1.01	$3.91 \times 10^3$	1.01	$0.93 \times 10^3$
25 °C	1.01	$3.91 \times 10^3$	1.01	$0.93 \times 10^3$
30 °C	1.01	$3.91 \times 10^3$	1.01	$0.94 \times 10^3$
35 °C	1.01	$3.91 \times 10^3$	1.01	$0.94 \times 10^3$
40 °C	1.01	$3.92 \times 10^3$	1.01	$0.94 \times 10^3$

Note) The above shown are reference values. Contact circulating fluid supplier for details.



# HRS100/150 Series Specific Product Precautions 1

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

## Design

### Warning

#### 1. This catalogue shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalogue) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.

#### 2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

#### 3. Use non-corrosive materials for circulating fluid contact parts.

The recommended circulating fluid is tap water or 15% ethylene glycol aqueous solution. Using corrosive materials such as aluminium or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Therefore, take sufficient care when selecting fluid contact part materials such as piping.

#### 4. Design the piping so that no foreign matter enters the chiller.

If foreign matter, such as scales in the piping, enters the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter.

#### 5. The facility water outlet temperature (water-cooled type) may increase up to around 60 °C.

When selecting the facility water pipings, consider the suitability for temperature.

## Selection

### Warning

#### Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to “Cooling Capacity Calculation” on pages 132 and 133 before selecting a model.

## Handling

### Warning

#### Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep the manual where it can be referred to as necessary.

## Operating Environment/Storage Environment

### Warning

#### 1. Do not use in the following environment as it will lead to a breakdown.

- 1) In locations where water vapour, salt water, and oil may splash on the product.
- 2) In locations where there are dust and particles.
- 3) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)
- 4) In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: -15 °C to 50 °C (But as long as water or circulating fluid are not left inside the pipings)

During operation: -5 °C to 45 °C (However, use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature or circulating fluid temperature is 10 °C or less.)

- 5) In locations where condensation may occur.
- 6) In locations which receive direct sunlight or radiated heat.
- 7) In locations where there is a heat source nearby and the ventilation is poor.
- 8) In locations where temperature substantially changes.
- 9) In locations where strong magnetic noise occurs.  
(In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 10) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 11) In locations where high frequency occurs.
- 12) In locations where damage is likely to occur due to lightning.
- 13) In locations at altitude of 3000 m or higher (Except during storage and transportation)

\* For altitude of 1000 m or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	① Upper limit of ambient temperature [°C]	② Cooling capacity coefficient
Less than 1000 m	45	1.00
Less than 1500 m	42	0.85
Less than 2000 m	38	0.80
Less than 2500 m	35	0.75
Less than 3000 m	32	0.70

- 14) In locations where strong impacts or vibrations occur.
- 15) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 16) In locations where there is not sufficient space for maintenance.
- 17) In locations where liquid that exceeds the conditions required for the degrees of protection IPX4 may splash on the product.
- 18) Insects or plants may enter the unit.

#### 2. The product is not designed for clean room usage. It generates particles internally.



# HRS100/150 Series Specific Product Precautions 2


Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smc.eu>

## Transportation/Carriage/Movement

### Warning

1. This product will require an acceptance with the product not unloaded from the truck, and the user will need to unload the product by himself. Prepare a forklift.

The product will be delivered in the packaging shown below.

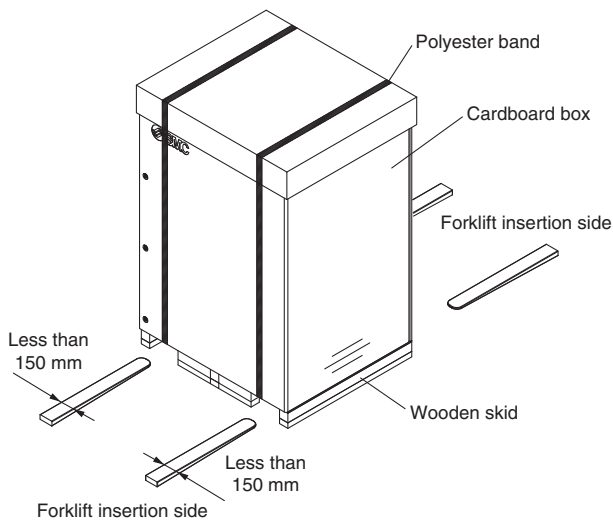

#### <When packaged>

Model	Weight [kg]	Dimensions [mm]
HRS100-A□-□	212	Height 1585 x Width 1185 x Depth 955
HRS150-A□-□	218	
HRS100-W□-□	186	Height 1485 x Width 925 x Depth 955
HRS150-W□-□	189	
HRS100-A□-□- <b>A</b>	231	Height 1710 x Width 1185 x Depth 955
HRS150-A□-□- <b>A</b>	242	
HRS100-W□-□- <b>A</b>	210	Height 1610 x Width 925 x Depth 955
HRS150-W□-□- <b>A</b>	213	


### 2. Transportation by forklift

- 1) A licensed driver should drive the forklift.
- 2) The proper place to insert the tines of the forklift differs depending on the model of cooler. Check the insert position, and be sure to drive the fork in far enough for it to come out the other side.
- 3) Be careful not to bump the fork to the cover panel or piping ports.

### Warning

#### 3. Hanging transportation

- 1) Crane manipulation and slinging work should be done by an eligible person.
- 2) Do not grip the piping on the right side or the handles of the panel.
- 3) When hanging by the eye bolts, be sure to use a 4-point hanging method. For the hanging angle, use caution regarding the position of the centre of gravity and hold it within 60°.

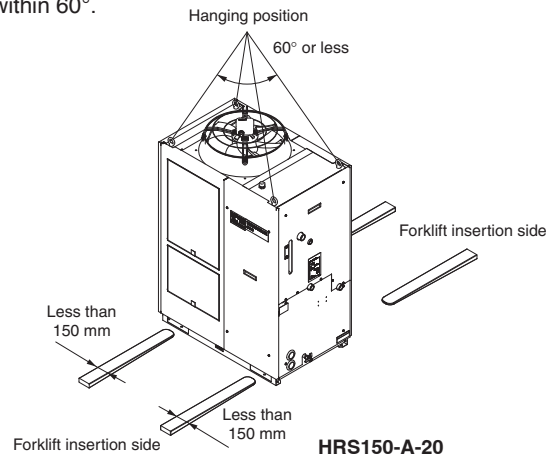

#### <When using option A>

#### 4. Transporting using casters

- 1) This product is heavy and should be moved by at least two persons.
- 2) Do not grip the piping port on the right side or the handles of the panel.
- 3) When transporting using a forklift, be sure not to let it hit the casters or adjusters, and drive the fork all the way through until it comes out the other side.
- 4) Do not get across steps with casters.

### Caution

If this product is to be transported after delivery, please use the original packaging the product was delivered in. If other packaging is to be used, carefully package the product so as to prevent the product from incurring any damage during transport.

## Mounting/Installation

### Warning

Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

### Caution

1. Install on a rigid floor which can withstand this product's weight.
2. Secure with bolts, anchor bolts, etc.



# HRS100/150 Series Specific Product Precautions 3

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

## Mounting/Installation


### ⚠ Caution

3. Refer to the Operation Manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

#### <Air-cooled refrigeration>

1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 45 °C, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
2. For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

Required installation space for ventilation and maintenance

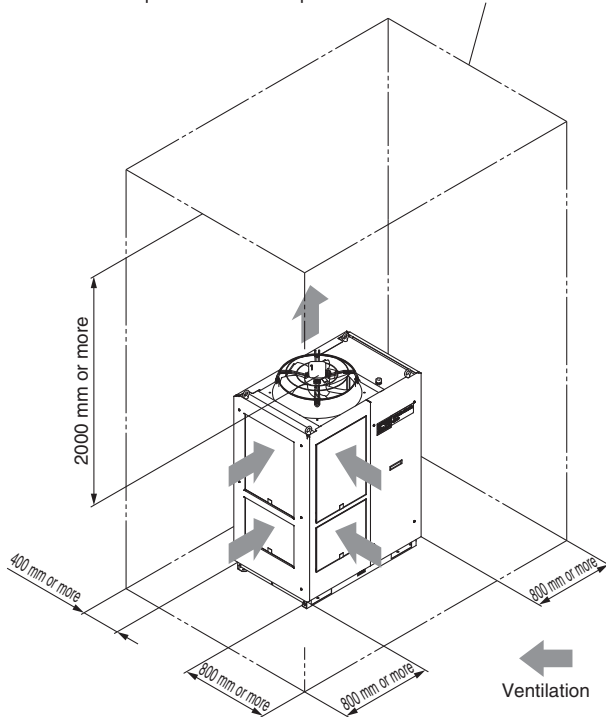

HRS150-A-20

3. If it is impossible to exhaust heat from the installation area indoors, or when the installation area is conditioned, provide a duct for heat exhaustion to the air outlet port of this product for ventilation. Do not mount the inlet of the duct (flange) directly to the air vent of the product, and keep a space larger than the diameter of the duct. Additionally, consider the resistance of the duct when making the air vent port for the duct.


#### <Heat radiation amount/Required ventilation rate>

Model	Heat radiation amount [kW]	Required ventilation rate [m <sup>3</sup> /min]	
		Differential temp. of 3 °C between inside and outside of installation area	Differential temp. of 6 °C between inside and outside of installation area
HRS100-A-□	Approx. 18	305	155
HRS150-A-□	Approx. 26	440	220

### ⚠ Caution

#### <Water-cooled refrigeration>

When installing the product, keep the space for maintenance as shown below.

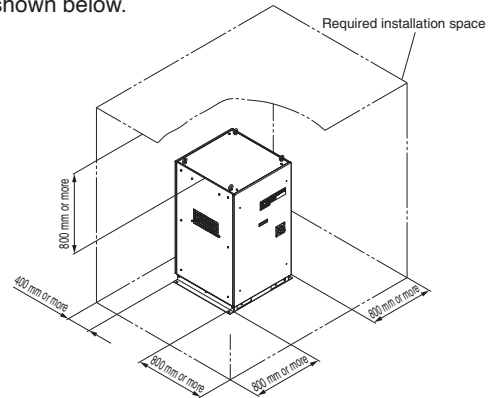

## Piping

### ⚠ Caution

1. Regarding the circulating fluid and facility water pipings, consider carefully the suitability for temperature, circulating fluid and facility water.

If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminum or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid and facility water circuits but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.

2. Select the piping port size which can exceed the rated flow. For the rated flow, refer to the pump capacity table.
3. When tightening at the drain port of this product, use a pipe wrench to clamp the connection ports.
4. Supply water pressure to the automatic fluid fill port of this product should be 0.2 to 0.5 MPa.

This product has a built-in ball (float) tap. If you attach it to the faucet of a sink etc. it will automatically supply water to the rated fluid level of the tank (halfway between HIGH and LOW.) If the water supply pressure is too high, the pipes may burst during use. Proceed with caution.

5. Ensure that piping is connected to the overflow port so that the circulating fluid can be exhausted to the drainage pit when the fluid level in the tank increases.
6. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
7. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

8. The facility water flow rate is adjusted automatically according to the operating conditions. In addition, the facility water return temperature is 60 °C at maximum.



# HRS100/150 Series Specific Product Precautions 4

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smc.eu>

## Electrical Wiring

### Warning


Grounding should never be connected to a water line, gas line or lightning rod.

### Caution

1. Power supply and communication cables should be prepared by user.

2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio ( $dV/dt$ ) at the zero cross should exceed  $40 \text{ V}/200 \mu\text{sec.}$ , it may result in malfunction.

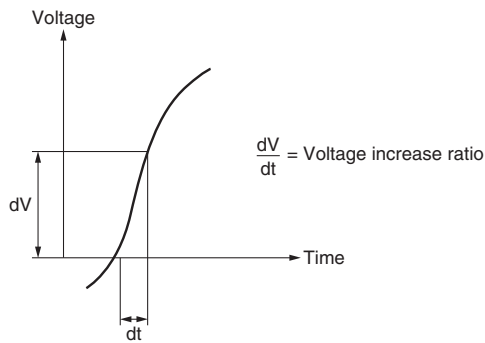


<For option B [With earth leakage breaker]>

3. This product is installed with a breaker with the following operating characteristics.


For the user's equipment (inlet side), use a breaker whose operating time is equal to or longer than the breaker of this product. If a breaker with shorter operating time is connected, the user's equipment could be cut off due to the inrush current of the motor of this product.

HRS100-A/W-20/40, HRS150-A/W-40

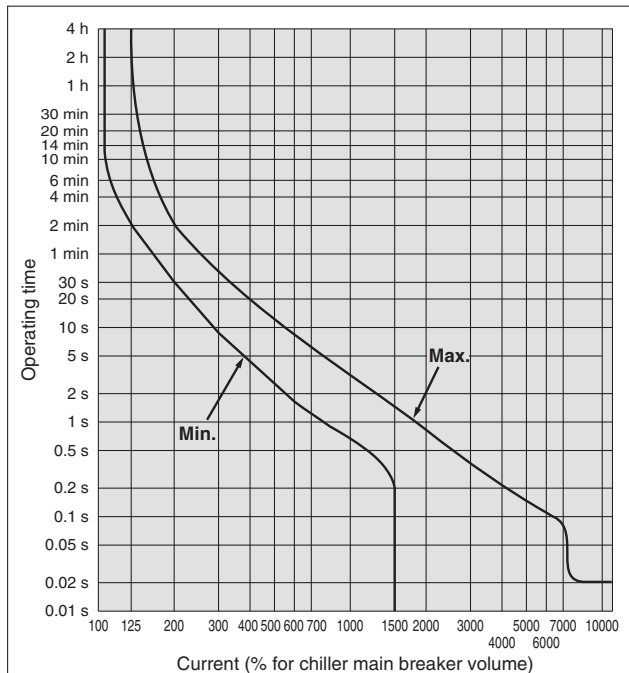


### Caution

HRS150-A/W-20

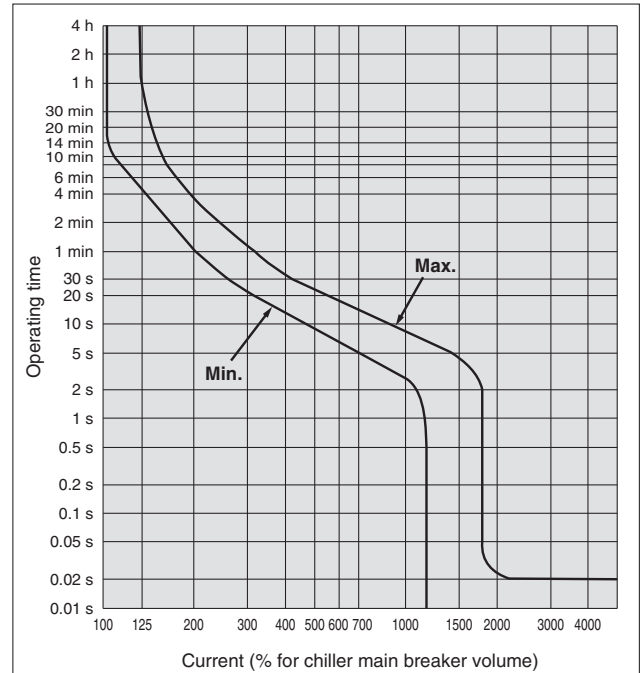

HRS100-A/W-46, HRS150-A/W-46

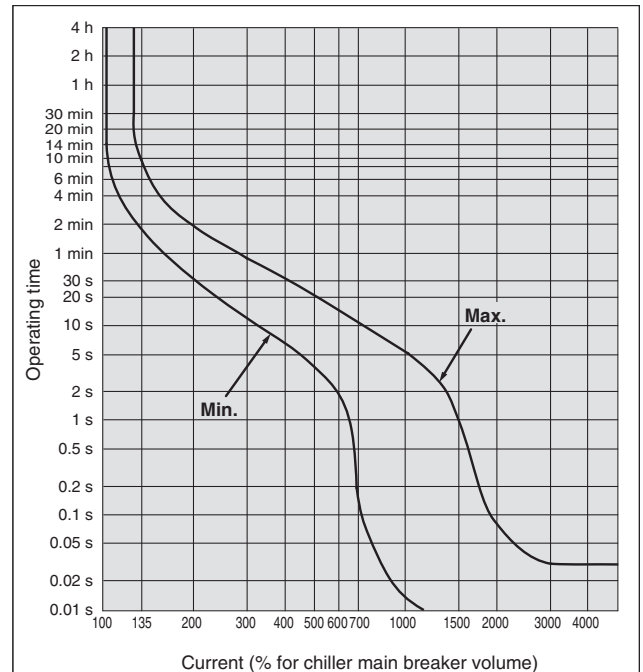



# HRS100/150 Series Specific Product Precautions 5

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, <http://www.smc.eu>

## Circulating Fluid

### ⚠ Caution

1. Avoid oil or other foreign objects entering the circulating fluid.
2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

#### Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association  
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	Item	Unit	Standard value	Influence	
				Corrosion	Scale generation
Standard item	pH (at 25 °C)	—	6.0 to 8.0	○	○
	Electric conductivity (25 °C)	[μS/cm]	100* to 300*	○	○
	Chloride ion (Cl <sup>-</sup> )	[mg/l]	50 or less	○	
	Sulfuric acid ion (SO <sub>4</sub> <sup>2-</sup> )	[mg/l]	50 or less	○	
	Acid consumption amount (at pH4.8)	[mg/l]	50 or less		○
	Total hardness	[mg/l]	70 or less		○
	Calcium hardness (CaCO <sub>3</sub> )	[mg/l]	50 or less		○
	Ionic state silica (SiO <sub>2</sub> )	[mg/l]	30 or less		○
Reference item	Iron (Fe)	[mg/l]	0.3 or less	○	○
	Copper (Cu)	[mg/l]	0.1 or less	○	
	Sulfide ion (S <sub>2</sub> <sup>-</sup> )	[mg/l]	Should not be detected.	○	
	Ammonium ion (NH <sub>4</sub> <sup>+</sup> )	[mg/l]	0.1 or less	○	
	Residual chlorine (Cl)	[mg/l]	0.3 or less	○	
	Free carbon (CO <sub>2</sub> )	[mg/l]	4.0 or less	○	

\* In the case of [MΩ·cm], it will be 0.003 to 0.01.

○: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Use an ethylene glycol that does not contain additives such as preservatives.
4. When using an ethylene glycol aqueous solution, maintain a maximum concentration of 15%.  
Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10 °C or lower and cause the thermo-chiller to break down.
5. When deionised water is used, the electric conductivity should be 1 μS/cm or higher (Electric resistivity: 1 MΩ·cm or lower).

## Facility Water Supply

### ⚠ Warning

<Water-cooled refrigeration>

1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.  
Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

#### ■ Required facility water system

<Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRS100-W-□	Approx. 19	Refer to "Facility water system" in the specifications on page 8.
HRS150-W-□	Approx. 28	

2. When using tap water as facility water, use water that conforms to the appropriate water quality standards.  
Use water that conforms to the standards shown below. If the water quality standards are not met, clogging or leakage in the facility water piping, or other problems such as refrigerant leakage, etc., may result.

#### Tap Water (as Facility Water) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association  
JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	Item	Unit	Standard value	Influence	
				Corrosion	Scale generation
Standard item	pH (at 25 °C)	—	6.5 to 8.2	○	○
	Electric conductivity (25 °C)	[μS/cm]	100* to 800*	○	○
	Chloride ion (Cl <sup>-</sup> )	[mg/l]	200 or less	○	
	Sulfuric acid ion (SO <sub>4</sub> <sup>2-</sup> )	[mg/l]	200 or less	○	
	Acid consumption amount (at pH4.8)	[mg/l]	100 or less		○
	Total hardness	[mg/l]	200 or less		○
	Calcium hardness (CaCO <sub>3</sub> )	[mg/l]	150 or less		○
	Ionic state silica (SiO <sub>2</sub> )	[mg/l]	50 or less		○
Reference item	Iron (Fe)	[mg/l]	1.0 or less	○	○
	Copper (Cu)	[mg/l]	0.3 or less	○	
	Sulfide ion (S <sub>2</sub> <sup>-</sup> )	[mg/l]	Should not be detected.	○	
	Ammonium ion (NH <sub>4</sub> <sup>+</sup> )	[mg/l]	1.0 or less	○	
	Residual chlorine (Cl)	[mg/l]	0.3 or less	○	
	Free carbon (CO <sub>2</sub> )	[mg/l]	4.0 or less	○	

\* In the case of [MΩ·cm], it will be 0.001 to 0.01.

○: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Set the supply pressure between 0.3 to 0.5 MPa. Ensure a pressure difference at the facility water inlet/outlet of 0.3 MPa or more.

If the supply pressure is high, it will cause water leakage. If the supply pressure and pressure difference at the facility water inlet/outlet is low, it will cause an insufficient flow rate of the facility water, and poor temperature control.



# HRS100/150 Series Specific Product Precautions 6

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

## Operation

### ⚠ Warning

#### 1. Confirmation before operation

- 1) The fluid level of a tank should be within the specified range of “HIGH” and “LOW”.  
When exceeding the specified level, the circulating fluid will overflow.
- 2) Remove the air.  
Conduct a trial operation, looking at the fluid level.  
Since the fluid level will go down when the air is removed from the user’s piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.  
Pump can be operated independently.

#### 2. Confirmation during operation

- Check the circulating fluid temperature.  
The operating temperature range of the circulating fluid is between 5 and 35 °C.  
When the amount of heat generated from the user’s equipment is greater than the product’s capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

#### 3. Emergency stop method

- When an abnormality is confirmed, stop the machine immediately. After the machine has stopped, make sure to turn off the breaker of the user’s equipment (on the upstream side).

## Operation Restart Time

### ⚠ Caution

1. **Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.**
2. **Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.**

## Protection Circuit

### ⚠ Caution

**If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.**

- Power supply voltage is not within the rated voltage range of  $\pm 10\%$ .
- In case the water level inside the tank is reduced abnormally.
- Circulating fluid temperature is too high.
- Compared to the cooling capacity, the heat generation amount of the user’s equipment is too high.
- Ambient temperature is over 45 °C.
- Ventilation hole is clogged with dust or dirt.

## Maintenance

### ⚠ Caution

#### <Periodical inspection every one month>

##### Clean the ventilation hole.

If the dustproof filter of water-cooled type product becomes clogged with dust or debris, a decline in cooling performance can result. In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

#### <Periodical inspection every three months>

##### Inspect the circulating fluid.

1. When using tap water or deionised water
  - Replacement of circulating fluid  
Failure to replace the circulating fluid can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.
2. When using ethylene glycol aqueous solution  
Use a concentration meter to confirm that the concentration does not exceed 15 %.  
Dilute or add as needed to adjust the concentration.

#### <Periodical inspection during the winter season>

##### 1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid and facility water freezing when the product is stopped, release the circulating fluid and facility water in advance.

##### 2. Consult a professional.

This product has an “anti-freezing function”, “warming-up function”, and “anti-snow coverage function”. Read the Operation Manual carefully, and if any additional anti-freezing function (e.g. tape heater) is needed, ask for it from the vendor.

### ■ Refrigerant with GWP reference




Refrigerant	Global warming potential (GWP)		
	Regulation (EU) No 517/2014 (Based on the IPCC AR4)	Fluorocarbon Emissions Control Act (Japan) GWP value labeled on products	GWP value to be used for reporting the calculated amount of leakage
R134a	1,430	1,430	1,300
R404A	3,922	3,920	3,940
R407C	1,774	1,770	1,620
R410A	2,088	2,090	1,920

- \* This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.
- \* See specification table for refrigerant used in the product.



## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)<sup>1)</sup>, and other safety regulations.

	<b>Danger:</b>	<b>Danger</b> indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	<b>Warning:</b>	<b>Warning</b> indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	<b>Caution:</b>	<b>Caution</b> indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

- 1) ISO 4414: Pneumatic fluid power – General rules and safety requirements for systems and their components.  
ISO 4413: Hydraulic fluid power – General rules and safety requirements for systems and their components.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)  
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.  
etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments.

##### Use under such conditions or environments is not covered.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

### Caution

**We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.**

**Use in non-manufacturing industries is not covered.**

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

## Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.<sup>2)</sup> Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.  
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

## Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

## SMC Corporation (Europe)

<b>Austria</b>	+43 (0)2262622800	www.smc.at	office@smc.at
<b>Belgium</b>	+32 (0)33551464	www.smc.be	info@smc.be
<b>Bulgaria</b>	+359 (0)2807670	www.smc.bg	office@smc.bg
<b>Croatia</b>	+385 (0)13707288	www.smc.hr	office@smc.hr
<b>Czech Republic</b>	+420 541424611	www.smc.cz	office@smc.cz
<b>Denmark</b>	+45 70252900	www.smc.dk.com	smc@smcdk.com
<b>Estonia</b>	+372 651 0370	www.smcee.ee	info@smcee.ee
<b>Finland</b>	+358 207513513	www.smc.fi	smc.fi@smc.fi
<b>France</b>	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
<b>Germany</b>	+49 (0)61034020	www.smc.de	info@smc.de
<b>Greece</b>	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
<b>Hungary</b>	+36 23513000	www.smc.hu	office@smc.hu
<b>Ireland</b>	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
<b>Italy</b>	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
<b>Latvia</b>	+371 67817700	www.smc.lv	info@smc.lv

<b>Lithuania</b>	+370 5 2308118	www.smclt.lt	info@smclt.lt
<b>Netherlands</b>	+31 (0)205318888	www.smc.nl	info@smc.nl
<b>Norway</b>	+47 67129020	www.smc-norge.no	post@smc-norge.no
<b>Poland</b>	+48 222119600	www.smc.pl	sales@smc.pl
<b>Portugal</b>	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
<b>Romania</b>	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
<b>Russia</b>	+7 (812)3036600	www.smc.eu	office@smcru.com
<b>Slovakia</b>	+421 (0)413213212	www.smc.sk	office@smc.sk
<b>Slovenia</b>	+386 (0)73885412	www.smc.si	office@smc.si
<b>Spain</b>	+34 945184100	www.smc.eu	post@smc.smces.es
<b>Sweden</b>	+46 (0)86031240	www.smc.nu	smc@smc.nu
<b>Switzerland</b>	+41 (0)523963131	www.smc.ch	info@smc.ch
<b>Turkey</b>	+90 212 489 0 440	www.smcturkey.com.tr	info@smcturkey.com.tr
<b>UK</b>	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk

**South Africa** +27 10 900 1233    www.smzca.co.za    zasales@smzca.co.za