
## **Floating Joint: For Compact Cylinders**

# Series **JB**



#### **Specifications**

Operating	Air pressure compact cylinder
pressure	1 MPa or less

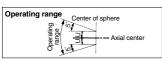




#### **Specifications**

Model	Applicable bore size	Applicable cylinder nominal thread	Maximum ope and compres		Allowable eccentricity	Rotating	
	(mm)	size	Compression side	compression side Tension side		angle	temperature
JB12-3-050	12	M3 x 0.5	M3 x 0.5 112 112		0.5		
JB16-4-070	16	M4 x 0.7	200	200	0.5		
JB20-5-080	20	M5 x 0.8	1100	300	0.5	±5°	-5 to 60°C
JB25-6-100	25	M6 x 1	2500	500	0.5		
JB40-8-125	32, 40	M8 x 1.25	6000	1300	0.75		
JB63-10-150			11000	3100	1	13	-5 10 00 0
JB80-16-200			18000	5000	1.25		
<b>JB100-20-250</b> 100		M20 x 2.5	28000	7900	2		
JB140-22-250	<b>3140-22-250</b> 125, 140		54000	15300	2.5		
JB160-24-300	160	M24 x 3	71000	20000	3		

#### **How to Order**

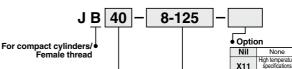

Applicable bore size (mm) •-

Symbol	Applicable bore size (mm)					
12	12					
16	16					
20	20					
25	25					
40	32, 40					
63	50, 63					
80	80					
100	100					
140	125, 140					
160	160					

X11 specifications
-5 to 100°C

Nominal thread size	Applicable cylinder nominal thread size					
3-050	M3 x 0.5					
4-070	M4 x 0.7					
5-080	M5 x 0.8					
6-100	M6 x 1 M8 x 1.25					
8-125						
10-150	M10 x 1.5					
16-200	M16 x 2					
20-250	M20 x 2.5					
22-250	M22 x 2.5					
24-300	M24 x 3					

### Precautions

Be sure to read before handling.
Refer to front matter 57 for Safety Instructions.

#### Mounting

#### 

- 1. To screw the male threads of the rod into the female threads of the socket or the case, make sure that it does not bottom out. If the floating joint is used with its rod bottomed out, the stud will not be able to float, causing damage. For the screw-in depth of the female threads, refer to the dimensions (page 1145). As a rule, after the rod bottoms out, back off 1 to 2 turns.
- The dust cover may adhere to the stud. In this case, move the dust cover at the neck of the stud by the finger or twist the stud slightly left or right to break in the dust cover before use.

- Additionally, when screwing the stud and socket or the case into a driven body, screw in such parts with the dust cover removed. When screwing in such parts without removing the dust cover, this may cause damage to the dust cover.
- 3. To use a floating joint to connect the cylinder rod to a driven body, secure it in place by applying a torque that is appropriate for the thread size. Also, if there is a risk of lossening during operation, take measures to prevent loosening, such as using a locking pin or thread adhesive.
  - In the event that the connected portion becomes loose, the driven body might lose control or fall off, leading to equipment damage or injury to personnel.
- This product is not a rotary joint. So, the product cannot be used for rotational or rotation acting applications.
- 5. Be sure to use the cushion mechanism of the cylinder or the buffer mechanism, such as the shock absorber so that any impact force is not applied to the floating joint when stopping a driven body. If there is no buffer mechanism, an excessive impact force is generated. As a result, the tensile compression force of the floating joint may exceed its maximum level.

#### Maintenance

#### **⚠** Warning


1. Do not reuse if disassembled.

High strength adhesive is applied to the portion of the connection that is threaded to prevent it from loosening, and it must not be disassembled. If it is forcefully disassembled, it could lead to damage.




#### Construction

ø12, ø16

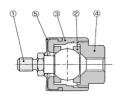

#### ø20 to ø160

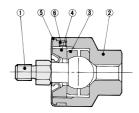

**Component Parts** 

No.	Description	Material	Note
1	Stud	Free-cutting steel	Electroless nickel plated
2	Case	Brass	Electroless nickel plated
3	Ring	Stainless steel	
4	Socket	Brass	Electroless nickel plated
5	Dust cover	Synthetic rubber	


Refer to page 1137 for replacement Parts.

No.	Description	Material	Note
1	Stud	Chromium molybdenum steel	Dyed black
2	Case	Carbon steel	Black zinc chromated
3	Ring	Chromium molybdenum steel	
4	Сар	Carbon steel	Black zinc chromated
5	Dust cover	Synthetic rubber	
6	Set screw	Carbon steel	Zinc chromated

#### Basic Style: JB


JB20, 16




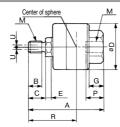




#### JB20 to 160

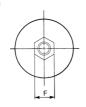

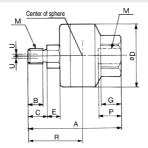

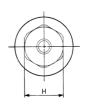

(mm)

Applicable bore size	Model	Nominal Pitch		A	В	С	D	E	F	G	н	Center of sphere	Maximum thread	Allowable eccentricity	Maximum operating tension and compression force (N)		Weight
(mm)		size	Pitch	^		Ŭ		_	•	"	٠.	R	depth P	U	Compression	Tension	(kg)
12	JB12-3-050	3	0.5	24.5	3	4	16	2	6	5	10	13	7	0.5	112	112	0.02
16	JB16-4-070	4	0.7	26.5	4.5	6	16	2	6	5	10	15	7	0.5	200	200	0.02
20	JB20-5-080	5	0.8	33	5	6.5	21	4.5	7	7	13	19.5	8	0.5	1100	300	0.04
25	JB25-6-100	6	1	38	6	8	24	5	8	8	17	22.5	9	0.5	2500	500	0.07
32, 40	JB40-8-125	8	1.25	51	8.5	11	31	6	11	11	22	29	13	0.75	6000	1300	0.15
50, 63	JB63-10-150	10	1.5	62.5	10	13	41	7.5	14	13.5	27	35.5	15	1	11000	3100	0.29
80	JB80-16-200	16	2	80.5	16	20	50	9.5	19	16	32	47.5	18	1.25	18000	5000	0.56
100	JB100-20-250	20	2.5	101	21	26	59.5	11.5	24	20	41	59	24	2	28000	7900	1.04
125, 140	JB140-22-250	22	2.5	129	17	22	79	14	30	22	46	71.5	38	2.5	54000	15300	2.6
160	JB160-24-300	24	3	149	20	26	96	16	36	24	55	83	42	3	71000	20000	4.5

