

Rotary Clamp Cylinder

Ø 12, Ø 16, Ø 20, Ø 25, Ø 32, Ø 40, Ø 50, Ø 63

New

Allowable moment of inertia **3 times** higher
New structure! **NEW MK** series is released!!

Overall length is the same as the existing products! Mounting dimensions are interchangeable with the MK series.

NEW MK



Conventional
MK

Conventional
MK2

Consolidated to the
New MK series and renewed!


Possible to mount small auto switches on **4 surfaces**

- Auto switches can be mounted on any of the **4** surfaces to suit the installation conditions (2 surfaces for Ø 20 and Ø 25).
- No projection of the auto switch.

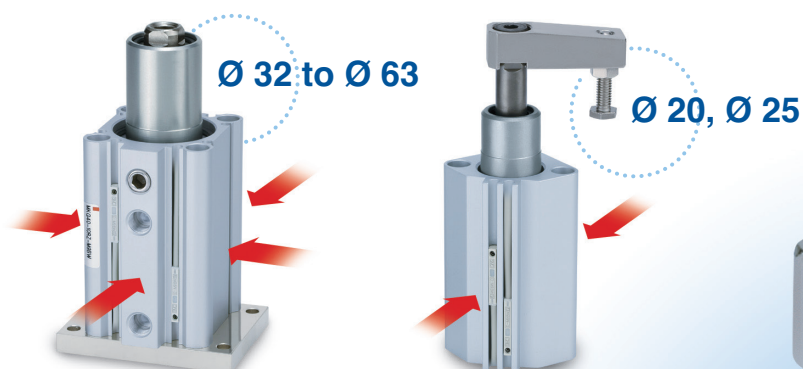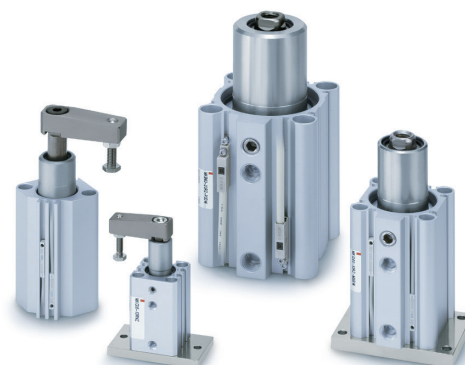



2-colour indication solid state auto switch

Accurate setting of the mounting position can be performed without mistakes.

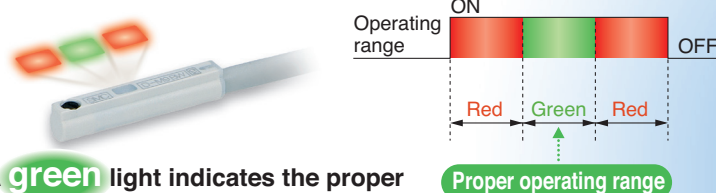

A **green** light indicates the proper operating range.

Application Example

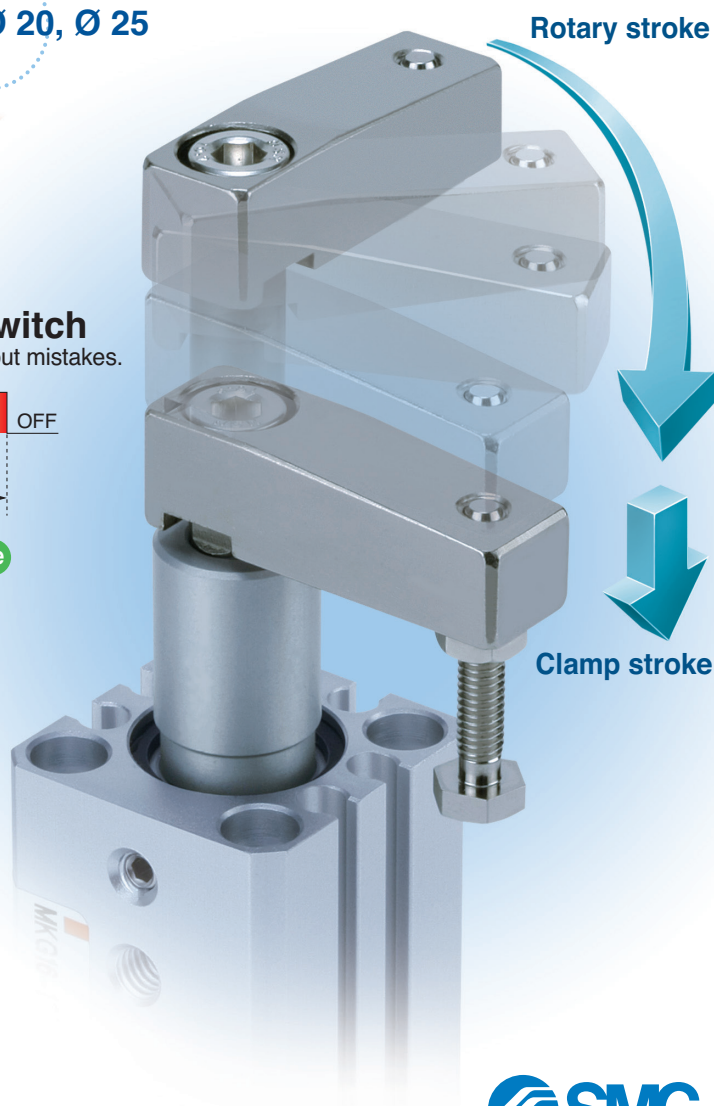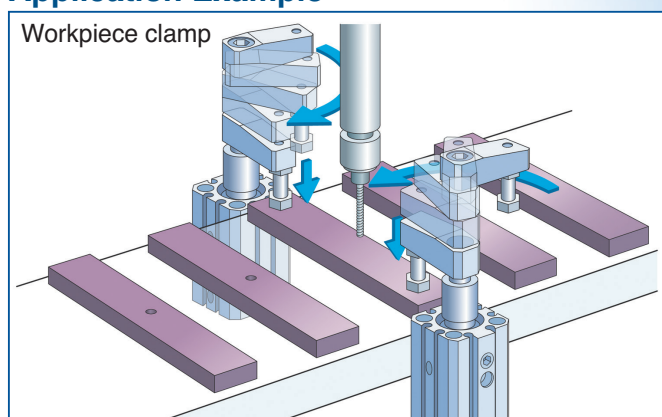

Series MK




CAT.EUS20-214A-UK

Allowable moment of inertia **3 times** higher


Allowable moment of inertia is the same as the heavy-duty MK2 series.

Allowable Moment of Inertia (Ø 32, Ø 40)

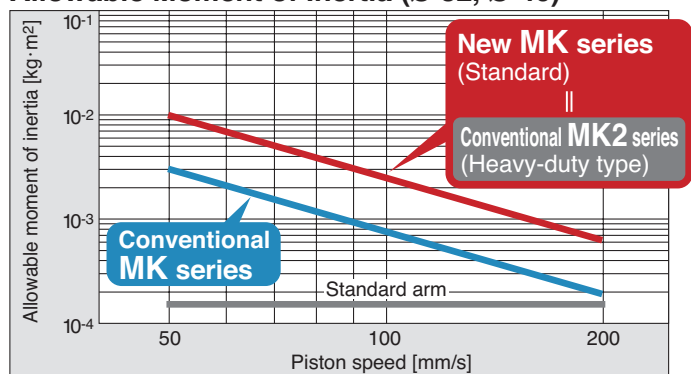


Maintenance can be performed for all sizes.

Seal kit and guide pin are replaceable.

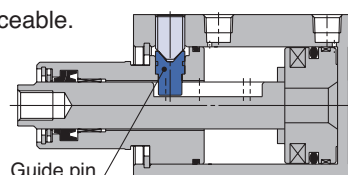

Magnetic field resistant auto switch can be used.

Applicable to the D-P3DW type

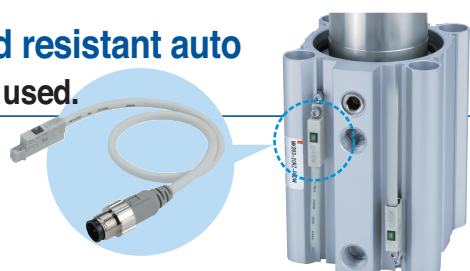


Standard stroke range has been expanded.

Strokes have been added to the **New MK** series, making a wide range of strokes available. (★ indicates the added strokes.)

Series	Bore size	Stroke			
		10	20	30	50
NEW MK	12	●	●	★	—
	16	●	●	★	—
	20	●	●	★	—
	25	●	●	★	—
	32	●	●	★	★
	40	●	●	★	★
	50	★	●	★	●
	63	★	●	★	●

Head flanges are newly available for Ø12 and Ø16.

Mounting type has been added to suit a wide range of applications.

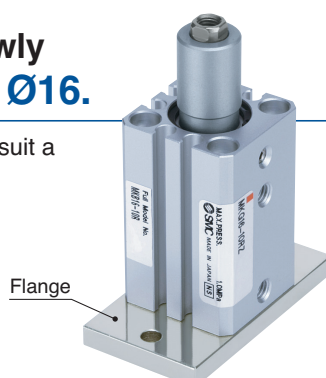

Overall length is **shortened**. (equivalent to the MK series)

3 to 10 mm shorter than the MK2 series, making the product more compact.

Overall length comparison



Overall Length Dimensions


Bore size	Shortened dimensions (compared to the conventional MK2 series)	NEW MK series overall length (at 20st)
20	3 mm	112.5
25	5 mm	113.5
32	8 mm	133.5
40	8 mm	134.5
50	10 mm	152
63	10 mm	155

2 types of cylinder mounting are available with one body.

2 types of cylinder mounting, **through-hole mounting** and **tap mounting**, are available for mounting the cylinder.


* For the tap mounting, the thread length is different from the existing product.

Mounting examples

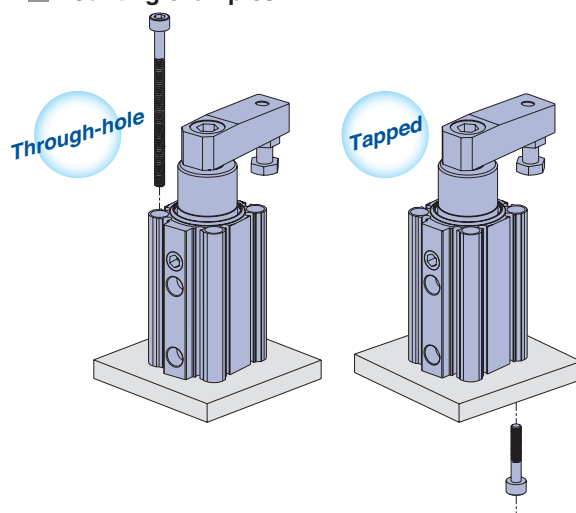

Clamping rotary direction can be selected from **2 types**.


Clamping rotary direction can be selected to suit the setting conditions.

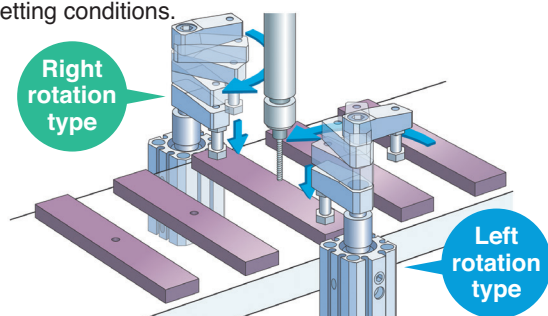

Series MK Model Selection

Item	Series	New MK
Max. piston speed ^{Note)} [mm/s]	Ø12 to Ø63	200
Non-rotating accuracy (Clamp part)	Ø12	1.4
	Ø16 to Ø25	1.2
	Ø32, Ø40	0.9
	Ø50, Ø63	0.7
Rotary angle		9010
Horizontal mounting		Not allowed

Note) Maximum piston speed indicates the maximum speed possible when employing a standard arm.

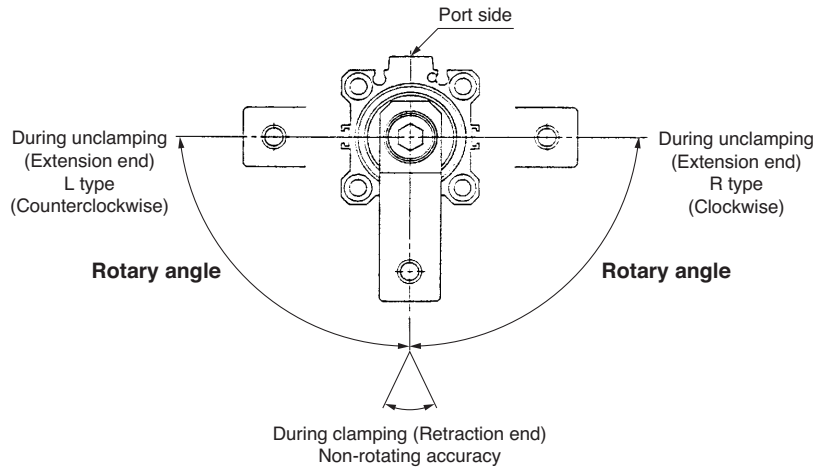

Designing Arms


⚠ Caution

When arms are to be made separately, their length and mass should be within the following range.

1. Allowable bending moment


Use the arm length and operating pressure within **Graph (1)** for allowable bending moment loaded piston rod.

Graph (1)

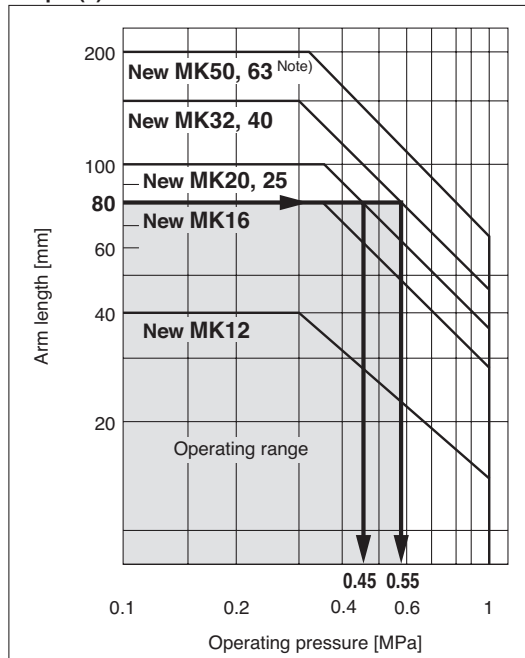

- When the arm length is 80 mm, pressure should be
New MK20/25: 0.45 MPa or less,
New MK32/40: 0.55 MPa or less.


Note) Use Ø 63 within a pressure range from 0.1 to 0.6 MPa.
 If Ø 63 is used within a pressure range from 0.61 to 1 MPa, please use -X2071.

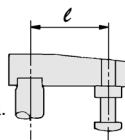

2. Moment of inertia

When the arm is long and heavy, damage of internal parts may be caused due to inertia. Use the moment of inertia and cylinder speed within **Graph (2)** based on arm requirements.

Graph (2)

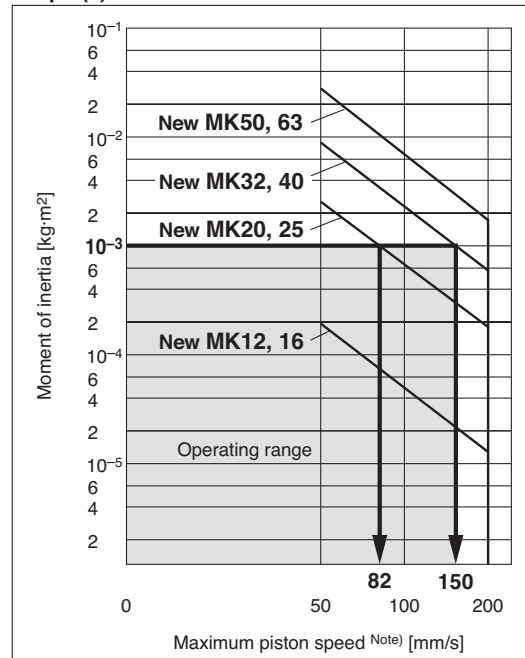

- When the arm's moment of inertia is $1 \times 10^{-3} \text{ kg} \cdot \text{m}^2$, cylinder speed should be
New MK20/25: 82 mm/s or less,
New MK32/40: 150 mm/s or less.
 - For calculating the moment of inertia, refer to page 3.
- Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)

Bore Size Selection

Moment of Inertia


Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)

Calculate the operating conditions and operate this product within the allowable range.


If the allowable range is exceeded, increase the bore size or use the MK2T series.

(Refer to SMC Best Pneumatics No. 3 for details of the MK2T series.)


Ø 12, Ø 16

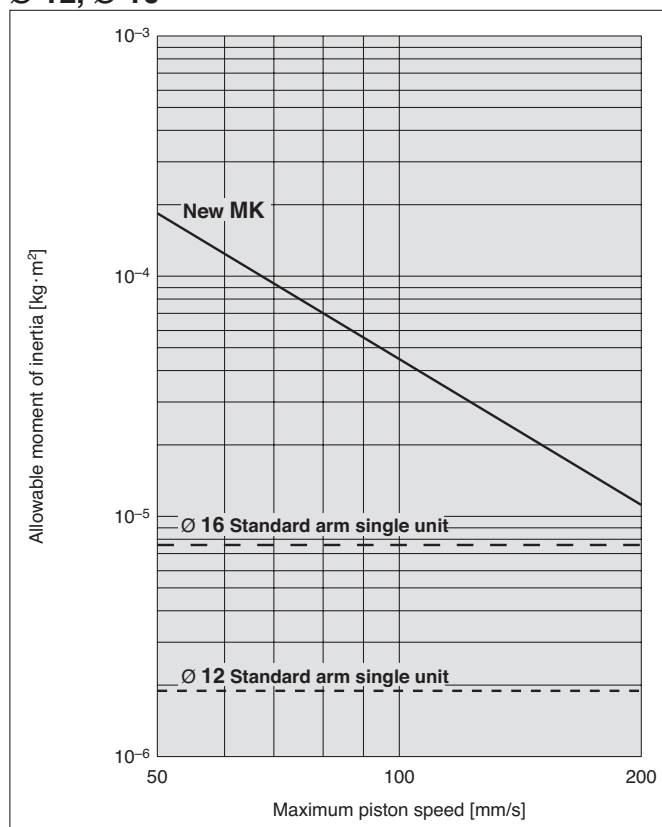


Ø 20, Ø 25

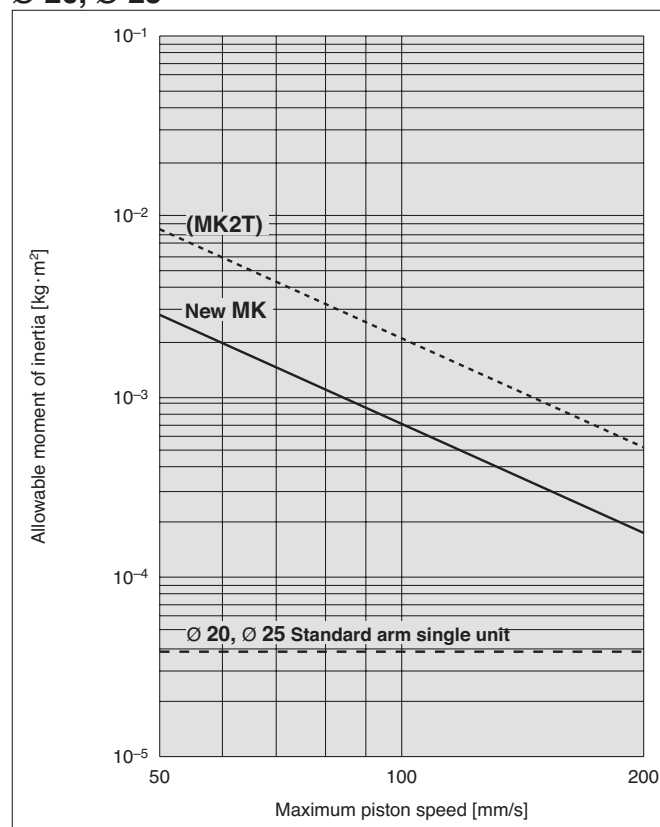

Ø 32, Ø 40

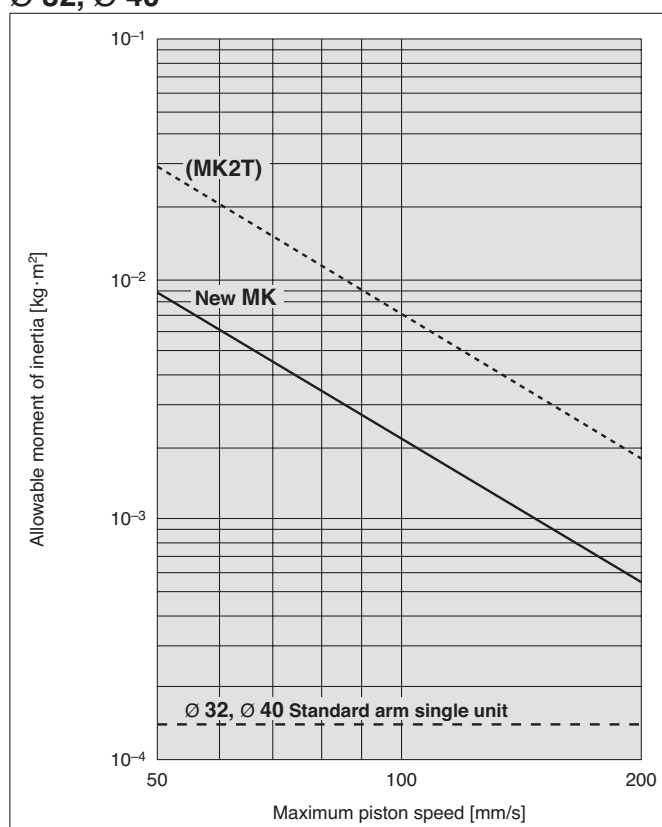

Ø 50, Ø 63

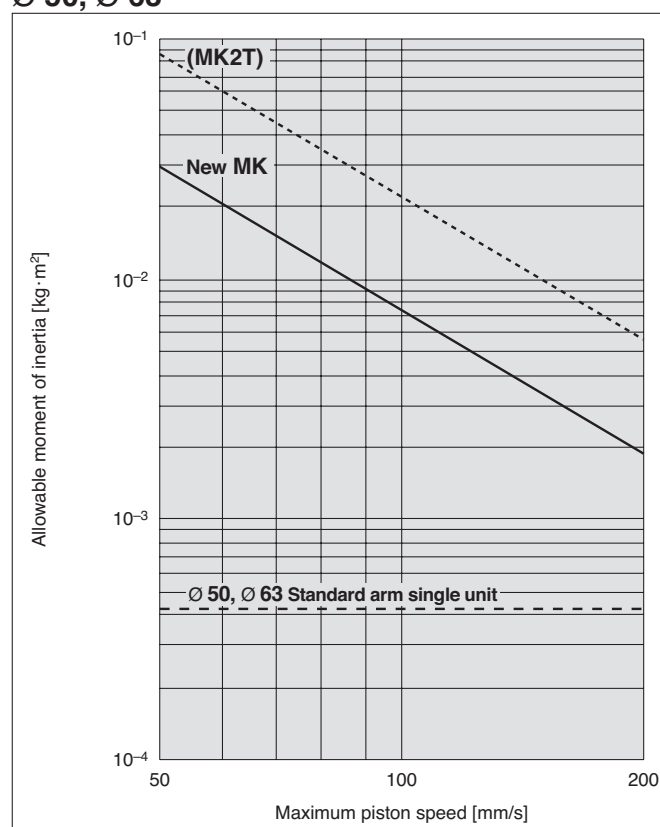

Moment of Inertia

Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)

Calculation example when arms other than the options are used.

- Calculate the moment of inertia of the arm.

$$I_1 = m_1 \cdot \frac{A^2 + B^2}{12} + m_1 \cdot \left(\frac{A}{2} - S \right)^2$$

- Calculate the moment of inertia of the clamping jig.

$$I_2 = m_2 \cdot \frac{D^2}{8} + m_2 \cdot L^2$$

<Calculation example> when the cylinder bore size is Ø 32.

$$\begin{aligned} A &= 0.1 \text{ m} & D &= 0.02 \text{ m} \\ B &= 0.03 \text{ m} & m_1 &= 0.35 \text{ kg} \\ S &= 0.012 \text{ m} & m_2 &= 0.15 \text{ kg} \\ L &= 0.076 \text{ m} \end{aligned}$$

$$I_1 = 0.35 \times \frac{0.1^2 + 0.03^2}{12} + 0.35 \times \left(\frac{0.1}{2} - 0.012 \right)^2 = 8.2 \times 10^{-4} \text{ kg} \cdot \text{m}^2$$

$$I_2 = 0.15 \times \frac{0.02^2}{8} + 0.15 \times 0.076^2 = 8.7 \times 10^{-4} \text{ kg} \cdot \text{m}^2$$

- Calculate the actual moment of inertia.

$$I_1 + I_2 = (8.2 + 8.7) \times 10^{-4} = 1.7 \times 10^{-3} \text{ kg} \cdot \text{m}^2$$

Calculation result (when the bore size is Ø 32 and clamp stroke is 10 mm.)


Model	Max. piston speed	Average piston speed <small>Note 1)</small>	Total stroke <small>Note 2)</small>	Stroke time <small>Note 3)</small>
New MK	115 mm/s	72 mm/s	25 mm	0.35 seconds

Note 1) Average piston speed = Max. piston speed ÷ 1.6


Note 2) Total stroke = Clamp stroke + Rotary stroke

Note 3) Total stroke ÷ Average piston speed

The stroke time should be longer than the above mentioned stroke time.

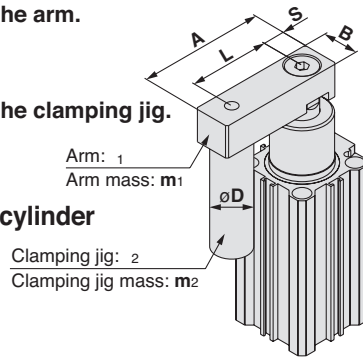

Ø 32, Ø 40

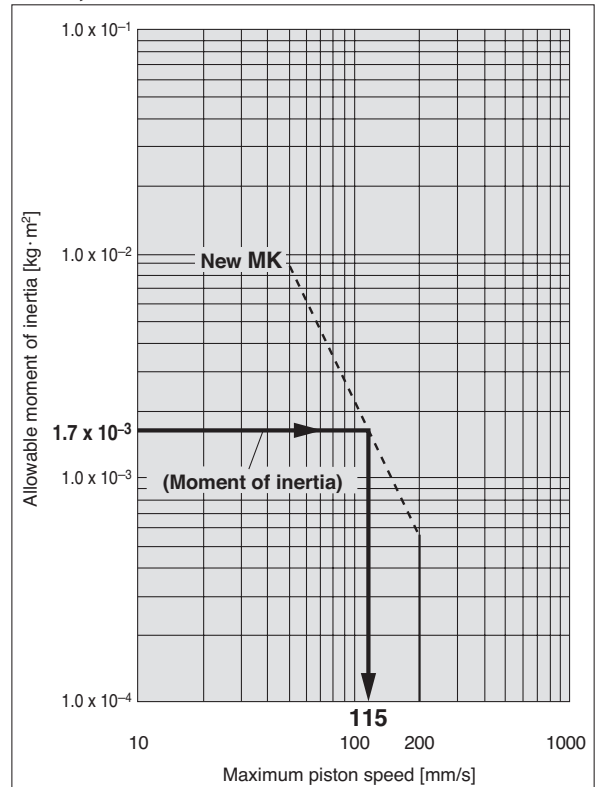

Calculation Equation List for Moment of Inertia

: Moment of inertia [kg·m²] m: Load mass [kg]

If arms other than the options are used, be sure to calculate the moment of inertia of the arm before selecting it.

1. Thin shaft

Position of rotational axis:
Perpendicular to the shaft, and attached near one end

$$= m_1 \cdot \frac{a_1^2}{3} + m_2 \cdot \frac{a_2^2}{3}$$

2. Thin shaft

Position of rotational axis:
Perpendicular to the shaft, and attached at the centre of gravity

$$= m \cdot \frac{a^2}{12}$$

3. Thin rectangular plate (Rectangular parallelepiped)

Position of rotational axis:
Parallel to side b, and attached at the centre of gravity

$$= m \cdot \frac{a^2}{12}$$

4. Thin rectangular plate (Rectangular parallelepiped)

Position of rotational axis:
Perpendicular to the plate, and attached near one end

$$= m_1 \cdot \frac{4a_1^2 + b^2}{12} + m_2 \cdot \frac{4a_2^2 + b^2}{12}$$

5. Thin rectangular plate (Rectangular parallelepiped)

Position of rotational axis:
Attached at the centre of gravity, and perpendicular to the plate
(Same as also thick rectangular plate)

$$= m \cdot \frac{a^2 + b^2}{12}$$

6. Load at the end of lever arm

$$= m_1 \cdot \frac{a_1^2}{3} + m_2 \cdot a_2^2 + k$$

$$k = m_2 \cdot \frac{2r^2}{5}$$

Bore Size Selection

Design/Selection

⚠ Caution

1. Do not use the cylinder under the following environments:

- An area in which fluids such as cutting oil splash on the piston rod
- An area in which foreign matter such as particles, cutting chips, or dust is present
- An area in which the ambient temperature exceeds the operating range
- An area exposed to direct sunlight
- An environment that poses the risk of corrosion

2. A cylinder could malfunction or the non-rotating accuracy could be affected if a rotational force is applied to the piston rod. Therefore, observe the particulars given below before operating the cylinder.

- 1) Make sure to mount the cylinder vertically (Fig. (1)).
- 2) Do not absolutely perform any work (such as clamping or acting as a stopper, etc.) in the rotary direction (Fig. (2)).
- 3) To clamp, make sure to do so within the clamp stroke (straight-line stroke) (Fig. (3)).
- 4) Make sure that the clamping surface of the workpiece is perpendicular to the cylinder's axial line (Fig. (4)).
- 5) Do not operate the cylinder in such a way that an external force causes the workpiece to move while being clamped (Fig. (5)).
- 6) Furthermore, do not operate the cylinder in an application in which a rotational force will be applied to the piston rod.

1) Do not operate the cylinder horizontally.

When using the cylinder horizontally, use the MK2T series.

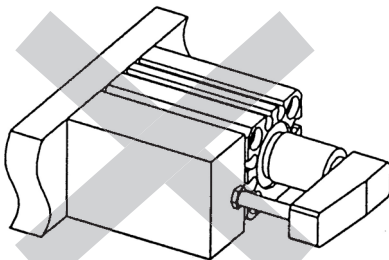


Fig. (1)

2) Do not perform any work in the rotary direction.


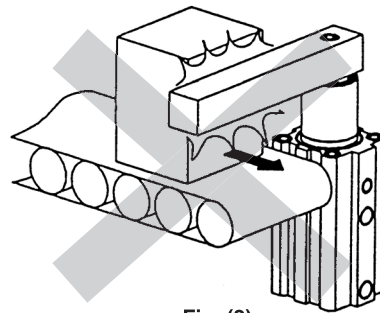



Fig. (2)

3) Do not clamp during the rotary stroke. Clamp should be performed within the clamp stroke.

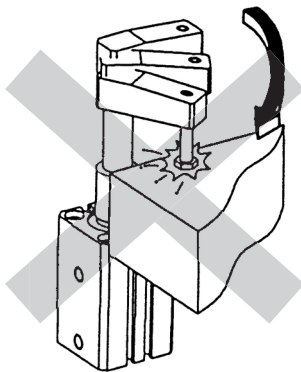

Rotary stroke

Fig. (3)

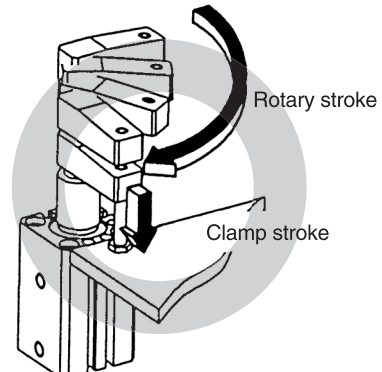

Rotary stroke

Clamp stroke

4) Do not clamp on a slanted surface.

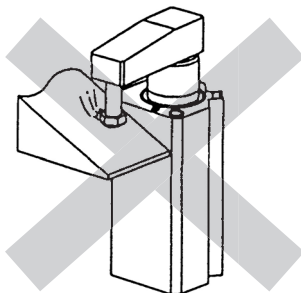


Fig. (4)

5) Make sure that the workpiece does not move during clamping.

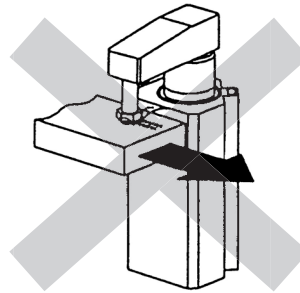


Fig. (5)

Rotary Clamp Cylinder: Standard Series *MK*

Ø 12, Ø 16, Ø 20, Ø 25, Ø 32, Ø 40, Ø 50, Ø 63

How to Order

Rotary clamp cylinder

Mounting bracket

Symbol	Mounting
B	Through-hole/Both ends tapped common (Basic)
G	Head flange

* Head flanges are shipped together, (but not assembled).

Bore size

Symbol	Bore size
12	12 mm
16	16 mm
20	20 mm
25	25 mm
32	32 mm
40	40 mm
50	50 mm
63	63 mm

Port thread type

Symbol	Thread	Applicable bore size
—	M thread	Ø 12 to Ø 25
—	Rc	—
TN	NPT	Ø 32 to Ø 63
TF	G	—

Clamp stroke

Symbol	Clamp stroke	Applicable bore size
10	10 mm	Ø 12 to Ø 63
20	20 mm	
30	30 mm	
50	50 mm	Ø 32 to Ø 63

Auto switch type

Symbol	Auto switch type
—	2 pcs.
S	1 pc.

Auto switch type

Symbol	Auto switch type
—	Without auto switch (Built-in magnet)

* For applicable auto switch models, refer to the below table.
* Auto switches are shipped together, (but not assembled).

Auto switch multiple side mounting

Body option

Symbol	Body option
—	Standard (Female thread)
N	With arm

* Arms are shipped together, (but not assembled).

Rotary direction (Unclamp → Clamp)

Symbol	Rotary direction
R	Clockwise
L	Counterclockwise

Diagram: Port side, During unclamping (Extension end) L type (Counterclockwise), During unclamping (Extension end) R type (Clockwise), During clamping (Retraction end)

* The coil scraper is not built-in.

Applicable Auto Switches/Refer to Best Pneumatics No. 3 for further information on auto switches. For D-P3DW, refer to the catalogue ES20-201.

Type	Special function	Electrical entry	Wiring (Output)	Load voltage		Auto switch model		Lead wire length (m)					Pre-wired connector	Applicable load	
				DC	AC	Perpendicular	In-line	0.5 (—)	1 (M)	3 (L)	5 (Z)	None (N)			
	Diagnostic indication (2-colour indication) Water resistant (2-colour indication) Magnetic field resistant (2-colour indication)	Grommet	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	●	●	●	○	—	○	IC circuit
			3-wire (PNP)		12 V		M9PV	M9P	●	●	●	○	—	○	—
			2-wire		12 V		M9BV	M9B	●	●	●	○	—	○	—
			3-wire (NPN)		5 V, 12 V		M9NWV	M9NW	●	●	●	○	—	○	IC circuit
			3-wire (PNP)		12 V		M9PWV	M9PW	●	●	●	○	—	○	—
			2-wire		12 V		M9BWV	M9BW	●	●	●	○	—	○	—
			3-wire (NPN)		5 V, 12 V		M9NAV	M9NA	○	○	●	○	—	○	IC circuit
			3-wire (PNP)		12 V		M9PAV	M9PA	○	○	●	○	—	○	—
			2-wire		12 V		M9BAV	M9BA	○	○	●	○	—	○	—
			2-wire (Non-polar)		—		—	P3DW*	●	—	●	●	—	●	—
		Grommet	3-wire (NPN equivalent)	24 V	5 V	—	A96V	A96	●	—	●	—	—	—	IC circuit
			2-wire		12 V	100 V	A93V	A93	●	—	●	—	—	—	—
			2-wire		5 V, 12 V	100 V or less	A90V	A90	●	—	●	—	—	—	IC circuit


* Lead wire length symbols: 0.5 m —
1 m M
3 m L
5 m Z
(Example) M9NW
(Example) M9NWL
(Example) M9NWL
(Example) M9NWL

* Solid state auto switches marked with "○" are produced upon receipt of order.
* For D-P3DW□, Ø 32 to Ø 63 are available.


* Since there are other applicable auto switches than listed, refer to page 15 for details.
* For details about auto switches with pre-wired connector, refer to Best Pneumatics No. 3.
* Auto switches are shipped together, (but not assembled).
* The coil scraper is not built-in.



Symbol



Rotary Angle

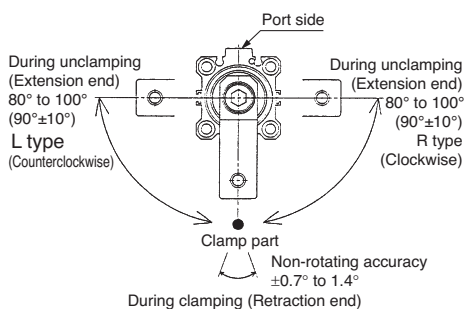

Made to Order: Individual Specifications
(For details, refer to pages 18 and 20)

Symbol	Description
-X2071	Max. operating pressure 1.0 MPa
-X2094	Overall length is the same as the previous MK2 series
-X2172	With boss in head end
-X2177	The dimension of head end flange is the same as the previous series MK and MK2.
-X2997	Rotary angle 60° specifications

Made to Order Specifications

Symbol	Description
-XB6	Heat resistant cylinder (-10 to 150 °C) w/o auto switch only ^{Note 1)}
-XC4	With heavy duty scraper ^{Note 2)}
-XC22	Fluororubber seals ^{Note 3)}

Note 1) Except Ø 12 and Ø 16.

Note 2) Applicable to Ø 16 to Ø 63 (Rod flange type only applicable to Ø 32 to Ø 63)

Note 3) The bumper is a standard product.

For details on the water-resistant cylinder and the series compatible with secondary batteries (25A-), refer to the **Catalogue on www.smc.eu**

Specifications

Bore size (mm)	12	16	20	25	32	40	50	63
Action	Double acting							
Rotary angle ^{Note 1)}	90° ±10°							
Rotary direction ^{Note 2)}	Clockwise, Counterclockwise							
Rotary stroke (mm)	7.5		9.5		15		19	
Clamp stroke (mm)	10, 20, 30				10, 20, 30, 50			
Theoretical clamp force (N) ^{Note 3)}	40	75	100	185	300	525	825	1400
Fluid	Air							
Proof pressure	1.5 MPa							
Operating pressure range	0.1 to 1 MPa							^{Note 4)} 0.1 to 0.6 MPa
Ambient and fluid temperature	Without auto switch: -10 to 70 °C (No freezing) With auto switch: -10 to 60 °C (No freezing)							
Lubrication	Non-lube							
Piping port size	M5 x 0.8				Rc1/8, NPT1/8 G1/8		Rc1/4, NPT1/4 G1/4	
Mounting	Through-hole/Both ends tapped common, Head flange, Rod flange							
Cushion	Rubber bumper							
Stroke length tolerance	+0.6 -0.4							
Piston speed ^{Note 5)}	50 to 200 mm/s							
Non-rotating accuracy (Clamp part) ^{Note 1)}	+1.4°	+1.2°			+0.9°		+0.7°	

Note 1) Refer to Rotary Angle figure.

Note 2) Direction of rotation viewed from the rod end when the piston rod is retracting

Note 3) Clamp force at 0.5 MPa

Note 4) When using the cylinder within a pressure range from 0.61 to 1 MPa, please use -X2071.

Note 5) Be sure to install a speed controller to the cylinder, and adjust the cylinder speed to make it within the range from 50 to 200 mm/s. To adjust the speed, start with the needle in the completely closed position, and then adjust it by opening gradually.

Theoretical Output

Unit: N

Bore size (mm)	Rod size (mm)	Operating direction	Piston area (cm ²)	Operating pressure (MPa)			
				0.3	0.5	0.7	1.0
12	6	IN	0.8	25	42	59	85
		OUT	1.1	34	57	79	113
16	8	IN	1.5	45	75	106	151
		OUT	2.0	60	101	141	201
20	12	IN	2.0	60	101	141	201
		OUT	3.1	94	157	220	314
25	12	IN	3.8	113	189	264	378
		OUT	4.9	147	245	344	491
32	16	IN	6.0	181	302	422	603
		OUT	8.0	241	402	563	804
40	16	IN	10.6	317	528	739	1056
		OUT	12.6	377	628	880	1257
50	20	IN	16.5	495	825	1155	1649
		OUT	19.6	589	982	1374	1963
63	20	IN	28.0	841	1402	—	—
		OUT	31.2	935	1559	—	—

Note) Theoretical output (N) = Pressure (MPa) x Piston area (cm²) x 100

Operating direction IN: Clamp OUT: Unclamp

Option/Arm

Bore size (mm)	Part no.	Accessories
12	MK-A012Z	Clamp bolt, Hexagon socket head cap screw, Hexagon nut, Spring washer
16	MK-A016Z	
20	MK-A020Z	
25		
32	MK-A032Z	
40		
50	MK-A050Z	
63		

Mounting Bracket/Flange

Bore size (mm)	Rod flange	Head flange	Accessories
12	MKZ-RF012	CQS-F012	Special hexagon socket head cap screw (4 pcs.)
16	MKZ-RF016	CQS-F016	
20	MKZ-RF020	MKZ-F020	Special hexagon socket head cap screw (2 pcs.)
25	MKZ-RF025	MKZ-F025	
32	MKZ-RF032	MK2T-F032	Special hexagon socket head cap screw (4 pcs.)
40	MKZ-RF040	MK2T-F040	
50	MKZ-RF050	MK2T-F050	
63	MKZ-RF063	MK2T-F063	

Weight

Clamp stroke (mm)	Bore size (mm)							
	12	16	20	25	32	40	50	63
10	69	94	222	282	445	517	921	1256
20	84	113	250	319	494	570	1001	1364
30	99	132	279	355	542	623	1081	1472
50	—	—	—	—	639	728	1241	1687

Unit: g

Additional Weight

Bore size (mm)	12	16	20	25	32	40	50	63
With arm	13	32	100	100	200	200	350	350
Head flange (including mounting bolt)	58	69	130	150	175	209	371	578


Unit: g

Calculation: (Example) **MKG20-10RNZ** • Standard calculation: MKB20-10RZ.....222 g
 • Extra weight calculation: Head flange130 g
 With arm100 g
 452 g

Mounting Bolt for MKB-Z

Mounting: Mounting bolt for through-hole type is available.
 Ordering: Add the word "Bolt" to the mounting bolt size.

Example) Bolt M5 x 75 L (4 pcs.)

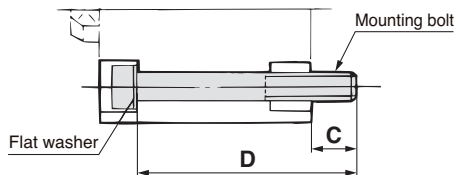

Note) Be sure to use a flat washer to mount cylinders via through-holes.

Cylinder model	C	D	Mounting bolt size
MKB12-10□Z	8	50	M3 x 50L
-20□Z		60	M3 x 60L
-30□Z		70	M3 x 70L
MKB16-10□Z	8	50	M3 x 50L
-20□Z		60	M3 x 60L
-30□Z		70	M3 x 70L
MKB20-10□Z	9	75	M5 x 75L
-20□Z		85	M5 x 85L
-30□Z		95	M5 x 95L
MKB25-10□Z	8	75	M5 x 75L
-20□Z		85	M5 x 85L
-30□Z		95	M5 x 95L
MKB32-10□Z	9.5	85	M5 x 85L
-20□Z		95	M5 x 95L
-30□Z		105	M5 x 105L
-50□Z		125	M5 x 125L
MKB40-10□Z	11	80	M5 x 80L
-20□Z		90	M5 x 90L
-30□Z		100	M5 x 100L
-50□Z		120	M5 x 120L
MKB50-10□Z	10.5	90	M6 x 90L
-20□Z		100	M6 x 100L
-30□Z		110	M6 x 110L
-50□Z		130	M6 x 130L
MKB63-10□Z	14.1	95	M8 x 95L
-20□Z		105	M8 x 105L
-30□Z		115	M8 x 115L
-50□Z		135	M8 x 135L

Clamp Arm Mounting

⚠ Caution

Use a clamp arm that is available as an option.

To fabricate a clamp arm, make sure that the allowable bending moment and the inertial moment will be within the specified range. Refer to Graph 1 and 2 on page 1.

Ensuring Safety

⚠ Caution

If one side of the piston is pressurized by supplying air with the clamp arm attached, the piston will move vertically while the clamp arm rotates.

This operation could be hazardous to personnel, as their hands or feet could get caught by the clamp arm, or could lead to equipment damage. Therefore, it is important to secure as a danger zone a cylindrical area with the length of the clamp arm as its radius, and the stroke plus 20 mm as its height.

Clamp Arm Mounting and Removal

⚠ Caution

When the arm is mounted onto or removed from the piston rod, do not fix the cylinder body, but hold the arm with a spanner when tightening or loosening the bolt (Fig. 1).

If the bolt is tightened with the cylinder body fixed, excessive rotation force will be applied to the piston rod, which may damage the internal components.

Note that when making an arm, machine it so that it engages with the width across flats on the rod end to prevent it from rotating.

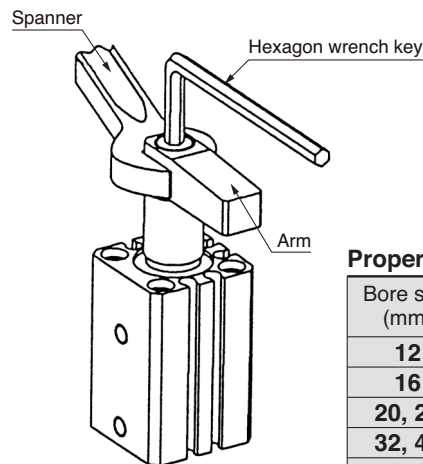


Fig. 1

Proper Tightening Torque

Bore size (mm)	Proper tightening torque (N·m)
12	0.5 to 0.7
16	2.8 to 3.5
20, 25	11.5 to 14.0
32, 40	24 to 30
50, 63	75 to 90

Head Flange Mounting

⚠ Caution


The mounting bolt for the head flange should be tightened to the torque shown in the below table.

Bore size	Thread size	Tightening torque
Ø 12, 16	M4 x 0.7	1.4 to 2.6 N·m
Ø 20 to 40	M6 x 1.0	9.0 to 12.0 N·m
Ø 50	M8 x 1.25	11.4 to 22.4 N·m
Ø 63	M10 x 1.5	25.0 to 44.9 N·m


Series MK

Construction

New MK12, 16

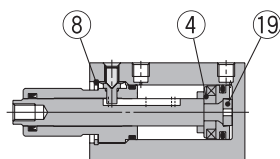


New MK20 to 32

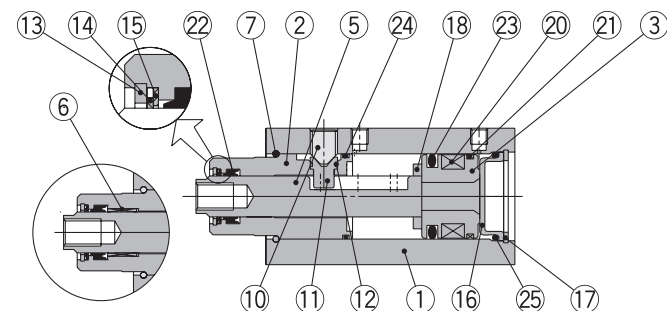


MK□32-□Z


New MK40 to 63

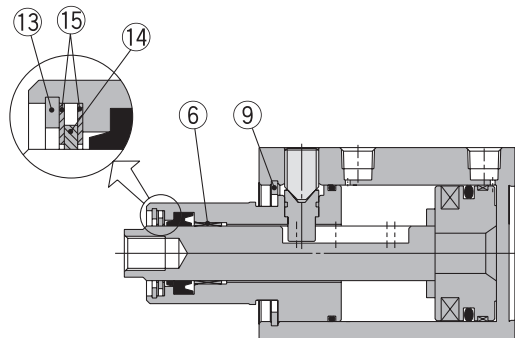


With arm (N)

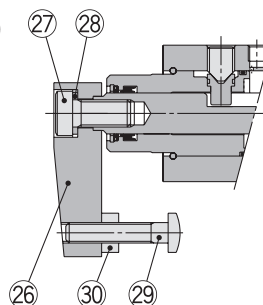

Rod flange (F)

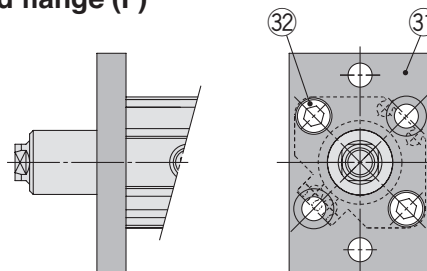

Head flange (G)

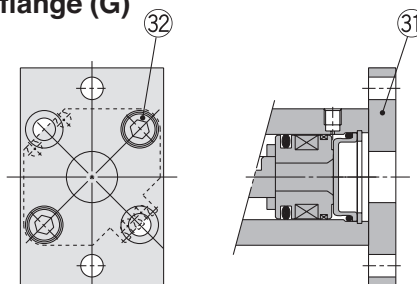

Component Parts

No.	Description	Material	Note
1	Cylinder tube	Aluminum alloy	Hard anodised
2	Rod cover	Aluminum alloy	Hard anodised
3	Piston	Aluminum alloy	Chromated
4	Magnet holder	Aluminum alloy	Chromated
5	Piston rod	Stainless steel	Ø 12 to Ø 25 Nitriding
		Carbon steel	Ø 32 to Ø 63 Heated, Nickel plated
6	Bushing	Copper bearing material	Ø 32 to Ø 63 only
7	Stop ring	Stainless steel	Ø 20 to Ø 32 only
8	Round R-type retaining ring	Carbon tool steel	Ø 12, Ø 16 only
9	C-type retaining ring	Carbon tool steel	Ø 40 to Ø 63 only
10	Hexagon socket head set screw	Chromium molybdenum steel	Sharp end section: 90
11	Guide pin	Stainless steel	Nitriding
12	O-ring	NBR	
13	Round R-type retaining ring	Carbon tool steel	Except Ø 12, Ø 16
14	Coil scraper	Phosphor bronze	Except Ø 12, Ø 16
15	Scraper pressure	Stainless steel	Except Ø 12, Ø 16
16	Head cover	Rolled steel	Electroless nickel plated
17	C-type retaining ring	Carbon tool steel	Ø 20 to Ø 32 only

Component Parts

No.	Description	Material	Note
18	Bumper	Urethane	
19	Bumper B	Urethane	Ø 12, Ø 16 only
20	Magnet	—	
21	Wear ring	Resin	Except Ø 12, Ø 16
22	Rod seal	NBR	
23	Piston seal	NBR	
24	Gasket	NBR	
25	O-ring	NBR	Ø 20 to Ø 32 only
26	Arm	Rolled steel	
27	Hexagon socket head cap screw	Chromium molybdenum steel	
28	Spring washer	Hard steel	
29	Clamp bolt	Chromium molybdenum steel	
30	Hexagon nut	Rolled steel	
31	Flange	Rolled steel	
32	Hexagon socket head cap screw	Chromium molybdenum steel	Qty. Ø 12, Ø 16, Ø 32 to Ø 40: 4 pcs. Ø 20, Ø 25: 2 pcs.

Replacement Parts/Seal Kit

Bore size (mm)	Ø 12	Ø 16	Ø 20	Ø 25	Ø 32	Ø 40	Ø 50	Ø 63
Kit no.	CQSB12-PS	CQSB16-PS	MK20Z-PS	MK25Z-PS	MK32Z-PS	MK40Z-PS	MK50Z-PS	MK63Z-PS
Contents	Set of nos. above 22 23 24				Set of nos. above 14 22 23 24			

* Seal kit includes numbers in the table. Order the seal kit, based on each bore size.


* Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)

Replacement Parts/Guide Pin Kit

Bore size (mm)	Ø 12	Ø 16	Ø 20	Ø 25	Ø 32	Ø 40	Ø 50	Ø 63
Kit no.	MK12Z-GS	MK16Z-GS	MK20Z-GS	MK25Z-GS	MK32Z-GS	MK40Z-GS	MK50Z-GS	MK63Z-GS
Contents	Set of nos. above 10 11 12							

* Guide pin kit includes numbers in the table. Order the guide pin kit, based on each bore size.


* For the replacement procedure of the replacement parts/seal and guide pin kits, refer to the Operation Manual.

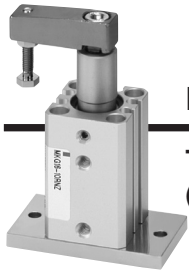

Dimensions: **Ø 12, Ø 16**

The outline dimensions shown are when the rod is retracted.

Through-hole/Both ends tapped common (Basic)

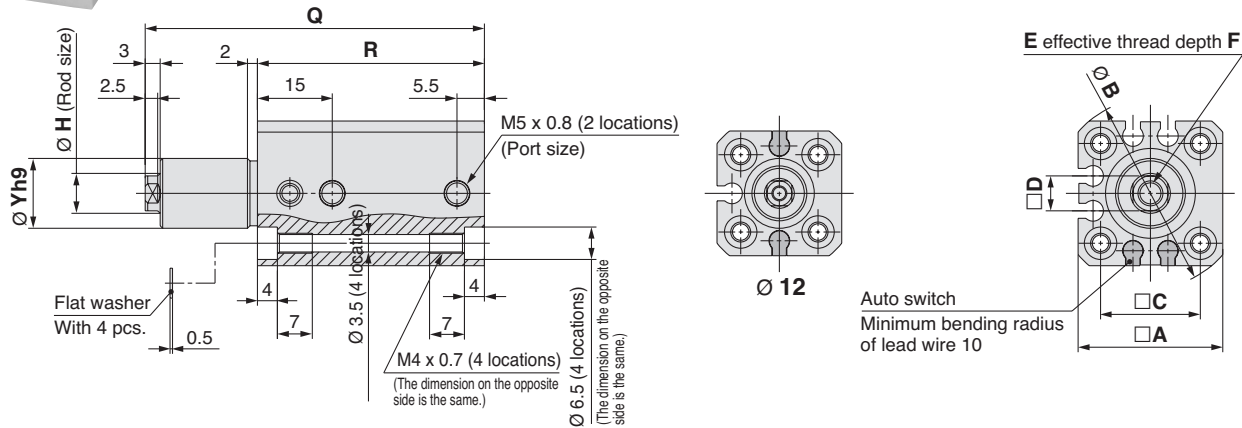

Basic (mm)


Model	A	B	C	D	E	F	H	Ø Yh9
MKB12-Z	25	32	15.5	5	M3 x 0.5	5.5	6	11 ⁰ _{-0.043}
MKB16-Z	29	38	20	7	M5 x 0.8	6.5	8	14 ⁰ _{-0.043}

(mm)

Model	Rod state	Clamp stroke					
		10 mm		20 mm		30 mm	
		Q	R	Q	R	Q	R
MKB12-Z	Retracted	68	45.5	88	55.5	108	65.5
	Extended	85.5		115.5		145.5	
MKB16-Z	Retracted	68	45.5	88	55.5	108	65.5
	Extended	85.5		115.5		145.5	

Note) The above figure is with the auto switch (D-M9□) mounted.

With arm

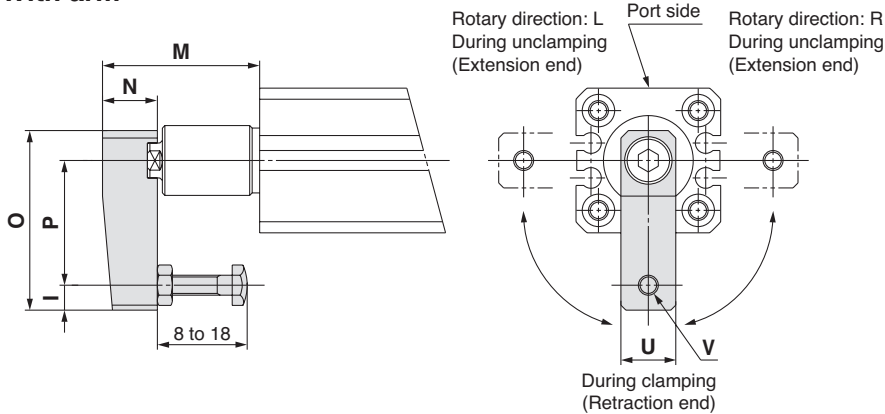


With Arm (mm)

Model	I	N	O	P	U	V
MKB12-Z	4	8	29	20	8	M3 x 0.5
MKB16-Z	5	11	36	25	11	M4 x 0.7

Model	Rod state	M		
		Clamp stroke		
		10 mm	20 mm	30 mm
MKB12-Z	Retracted	28.5	38.5	48.5
	Extended	46	66	86
MKB16-Z	Retracted	31.5	41.5	51.5
	Extended	49	69	89

Head flange

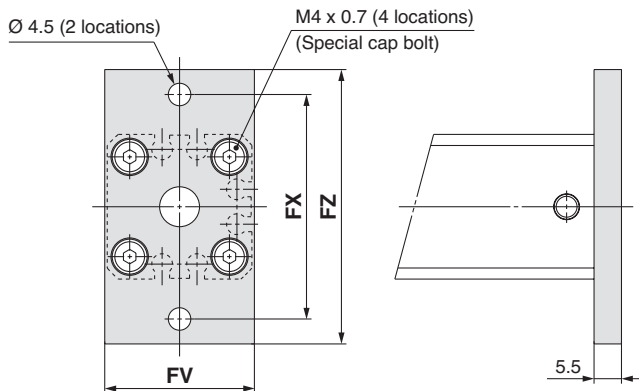


Head Flange (mm)

Model	FV	FX	FZ
MKG12-Z	25	45	55
MKG16-Z	30	45	55

Rod flange

* The dimensions other than MM dimensions are the same as those of head flange.
* The arm dimensions other than M dimensions are the same as those of with arm.

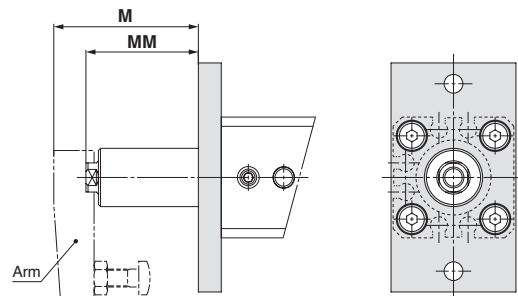

Rod Flange (mm)


Model	Rod state	M			MM		
		Clamp stroke			Clamp stroke		
		10 mm	20 mm	30 mm	10 mm	20 mm	30 mm
MKF12-Z	Retracted	23	33	43	17	27	37
	Extended	40.5	60.5	80.5	34.5	54.5	74.5
MKF16-Z	Retracted	26	36	46	17	27	37
	Extended	43.5	63.5	83.5	34.5	54.5	74.5

The outline dimensions shown are when the rod is retracted.

Technical drawing of a mechanical assembly showing a cross-section of a shaft with various components and dimensions.

Dimensions and Labels:

- Ø G**: Overall diameter of the shaft.
- Ø 12 (Rod size)**: Diameter of the rod passing through the assembly.
- 4**: Thickness of the top flange.
- 3**: Thickness of the bottom flange.
- Ø Yn9**: Diameter of the central hole in the shaft.
- 3**: Distance from the center of the shaft to the center of the top flange.
- S**: Distance from the center of the shaft to the center of the bottom flange.
- R**: Radius of the top flange.
- T**: Thickness of the top flange.
- M5 x 0.8 (2 locations)**: Screws securing the top flange.
- Port size**: Label for the top flange.
- Flat washer**: Washer used to secure the rod.
- With 2 pcs.**: Quantity of flat washers.
- 1**: Thickness of the flat washer.
- 7**: Distance from the center of the shaft to the center of the top flange.
- 10**: Distance from the center of the shaft to the center of the bottom flange.
- M6 x 1 (2 locations)**: Screws securing the bottom flange.
- (The dimension on the opposite side is the same.)**: Note for the bottom flange screws.
- Ø 5.5 (2 locations)**: Diameter of the holes in the bottom flange.
- Ø 9 (2 locations)**: Diameter of the holes in the top flange.
- (The dimension on the opposite side is the same.)**: Note for the top flange holes.

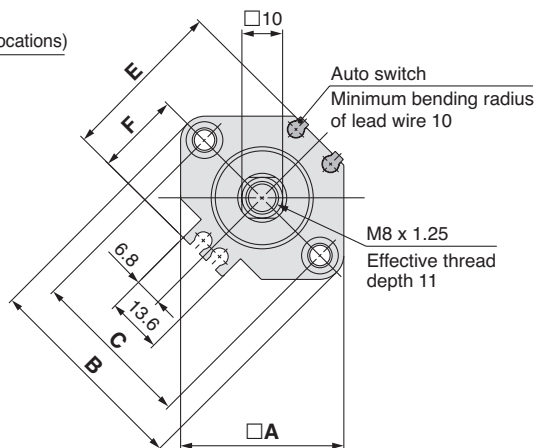

Basic (mm)									
Model	A	B	C	E	F	G	Ø Yh9	S	T
MKB20-Z	36	47	36	35.5	18	17.9	18 ⁰ _{0.043}	28	9
MKB25-Z	40	52	40	40.5	21	22.5	23 ⁰ _{0.052}	27.5	10.5

Model	A	B	C	E	F	G	Ø Yh9	S	T
MKB20-Z	36	47	36	35.5	18	17.9	18 ⁰ _{0.043}	28	9
MKB25-Z	40	52	40	40.5	21	22.5	23 ⁰ _{0.052}	27.5	10.5

								(mm)
Model	Rod state	Clamp stroke						
		10 mm		20 mm		30 mm		
		Q	R	Q	R	Q	R	
MKB20-Z	Retracted	92.5	72	112.5	82	132.5	92	
	Extended	112		142		172		
MKB25-Z	Retracted	93.5	73	113.5	83	133.5	93	
	Extended	113		143		173		

Note) The above figure is with the auto switch (D-M9□) mounted.

Rotary direction: L
During unclamping
(Extension end)


Port side

Rotary direction: R
During unclamping
(Extension end)

16

M6 x 1.0

During clamping
(Retraction end)

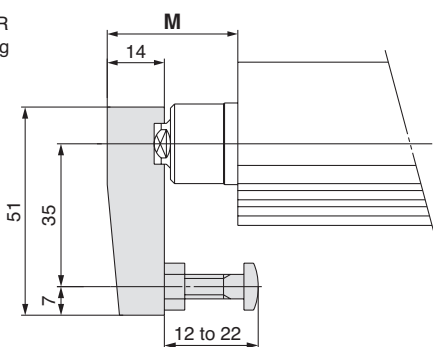

Technical drawing of a base plate showing dimensions and hole specifications:


- Top View:** A square plate with a central hole and four corner holes. Dimensions include:
 - FX:** Distance from the top edge to the center of the top corner hole.
 - FZ:** Total height of the plate.
 - FV:** Total width of the plate.
- Side View:** Shows the plate's thickness as **8**.
- Hole Specifications:**
 - Ø 6.6 (2 locations):** Two small holes, one on each of the long sides.
 - M6 x 1.0 (2 locations) (Special cap bolt):** Two larger holes, one in each of the top corners.

Head Flange (mm)

Model	FV	FX	FZ
MKG20-Z	39	48	60
MKG25-Z	42	52	64

Model	Rod state	M		
		Clamp stroke		
		10 mm	20 mm	30 mm
MKB20-Z	Retracted	32	42	52
	Extended	51.5	71.5	91.5
MKB25-Z	Retracted	32	42	52
	Extended	51.5	71.5	91.5

* The dimensions other than MM dimensions are the same as those of head flange.
* The arm dimensions other than M dimensions are the same as those of with arm.

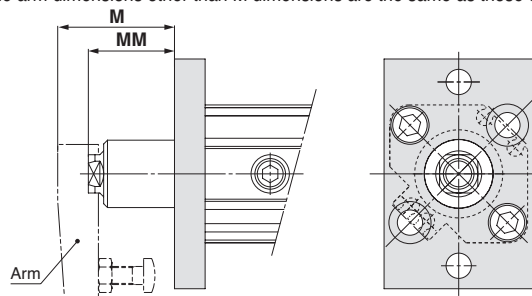


Model	Rod state	M			MM		
		Clamp stroke			Clamp stroke		
		10 mm	20 mm	30 mm	10 mm	20 mm	30 mm
MKF20-Z	Retracted	24	34	44	12.5	22.5	32.5
	Extended	43.5	63.5	83.5	32	52	72
MKF25-Z	Retracted	24	34	44	12.5	22.5	32.5
	Extended	43.5	63.5	83.5	32	52	72



Dimensions: **Ø 32, Ø 40, Ø 50, Ø 63** The outline dimensions shown are when the rod is retracted.

Through-hole/Both ends
tapped common (Basic)

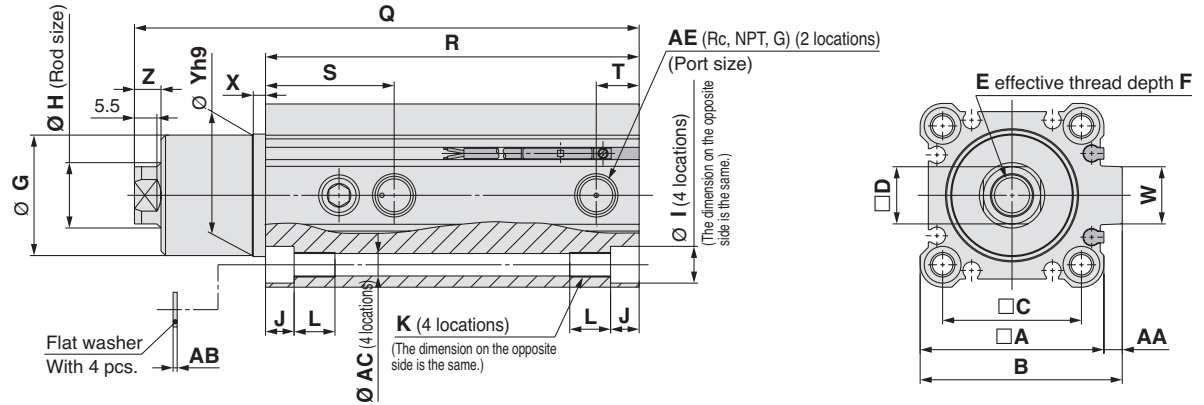


Basic

Model	A	B	C	D	E	F	G	H	I	J	K	L	S	T	W	X	Ø Yh9	Z	AA	AB	Ø AC	AE
MKB32-Z	45	49.5	34	14	M10 x 1.5	12	29.5	16	9	7	M6 x 1.0	10	31.5	10.5	14	3	30 ⁰ _{-0.062}	6.5	4.5	1	5.5	1/8
MKB40-Z	52	57	40	14	M10 x 1.5	12	29.5	16	9	7	M6 x 1.0	10	29	9	15	3	30 ⁰ _{-0.062}	6.5	5	1	5.5	1/8
MKB50-Z	64	71	50	17	M12 x 1.75	15	36.5	20	11	8	M8 x 1.25	14	34	11.5	19	3.5	37 ⁰ _{-0.062}	7.5	7	1	6.6	1/4
MKB63-Z	77	84	60	17	M12 x 1.75	15	47.5	20	14	10.5	M10 x 1.5	18	34.5	10.5	19	3.5	48 ⁰ _{-0.062}	7.5	7	1.4	9	1/4

Model	Rod state	Clamp stroke							
		10 mm		20 mm		30 mm		50 mm	
		Q	R	Q	R	Q	R	Q	R
MKB32-Z	Retracted	113.5		133.5		153.5		193.5	
	Extended	138.5	81.5	168.5	91.5	198.5	101.5	258.5	121.5
MKB40-Z	Retracted	114.5		134.5		154.5		194.5	
	Extended	139.5	75	169.5	85	199.5	95	259.5	115
MKB50-Z	Retracted	132		152		172		212	
	Extended	161	86.5	191	96.5	221	106.5	281	126.5
MKB63-Z	Retracted	135		155		175		215	
	Extended	164	90	194	100	224	110	284	130

Note) The above figure is with the auto switch (D-M9□) mounted.

With arm

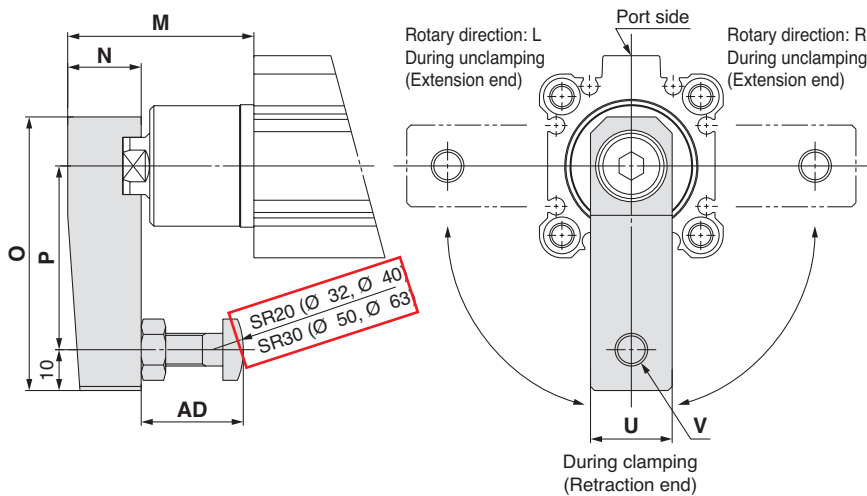

With Arm

Model	N	O	P	U	V	AD
MKB32-Z	18	67	45	20	M8 x 1.25	15 to 25
MKB40-Z	18	67	45	20	M8 x 1.25	15 to 25
MKB50-Z	22	88	65	22	M10 x 1.5	30 to 40
MKB63-Z	22	88	65	22	M10 x 1.5	30 to 40

Model	Rod state	M			
		Clamp stroke			
		10 mm	20 mm	30 mm	50 mm
MKB32-Z	Retracted	45.5	55.5	65.5	85.5
	Extended	70.5	90.5	110.5	150.5
MKB40-Z	Retracted	53	63	73	93
	Extended	78	98	118	158
MKB50-Z	Retracted	63	73	83	103
	Extended	92	112	132	172
MKB63-Z	Retracted	62.5	72.5	82.5	102.5
	Extended	91.5	111.5	131.5	171.5


Series MK



Dimensions: $\varnothing 32$, $\varnothing 40$, $\varnothing 50$, $\varnothing 63$

The outline dimensions shown are when the rod is retracted.

Head flange

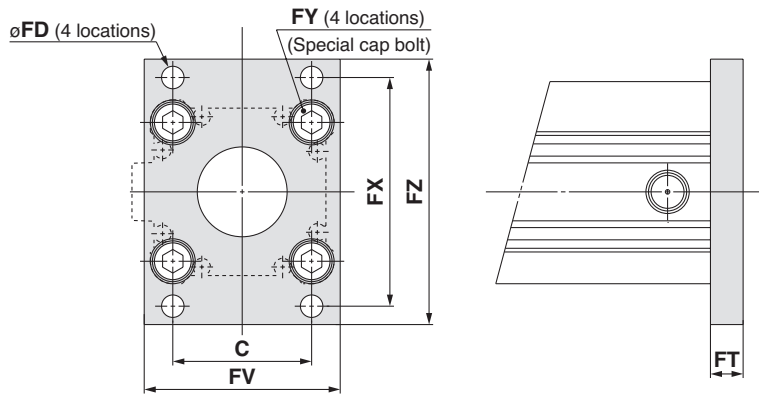


Head Flange

Model	C	\varnothing FD	FT	FV	FX	FY	FZ
MKG32-Z	34	5.5	8	48	56	M6 x 1.0	65
MKG40-Z	40	5.5	8	54	62	M6 x 1.0	72
MKG50-Z	50	6.6	9	67	76	M8 x 1.25	89
MKG63-Z	60	9	9	80	92	M10 x 1.5	108

Rod flange

- * The dimensions other than MM dimensions are the same as those of head flange.
- * The arm dimensions other than M dimensions are the same as those of with arm.

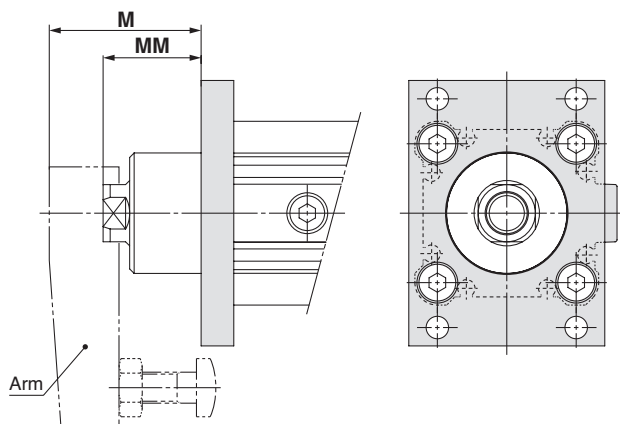


Rod flange


Model	Rod state	M				MM			
		Clamp stroke				Clamp stroke			
		10 mm	20 mm	30 mm	50 mm	10 mm	20 mm	30 mm	50 mm
MKF32-Z	Retracted	37.5	47.5	57.5	77.5	24	34	44	64
	Extended	62.5	82.5	102.5	142.5	49	69	89	129
MKF40-Z	Retracted	45	55	65	85	31.5	41.5	51.5	71.5
	Extended	70	90	110	150	56.5	76.5	96.5	136.5
MKF50-Z	Retracted	54	64	74	94	36.5	46.5	56.5	76.5
	Extended	83	103	123	163	65.5	85.5	105.5	145.5
MKF63-Z	Retracted	53.5	63.5	73.5	93.5	36	46	56	76
	Extended	82.5	102.5	122.5	162.5	65	85	105	145

Auto Switch Proper Mounting Position (Detection at Stroke End) and its Mounting Height

Ø 12

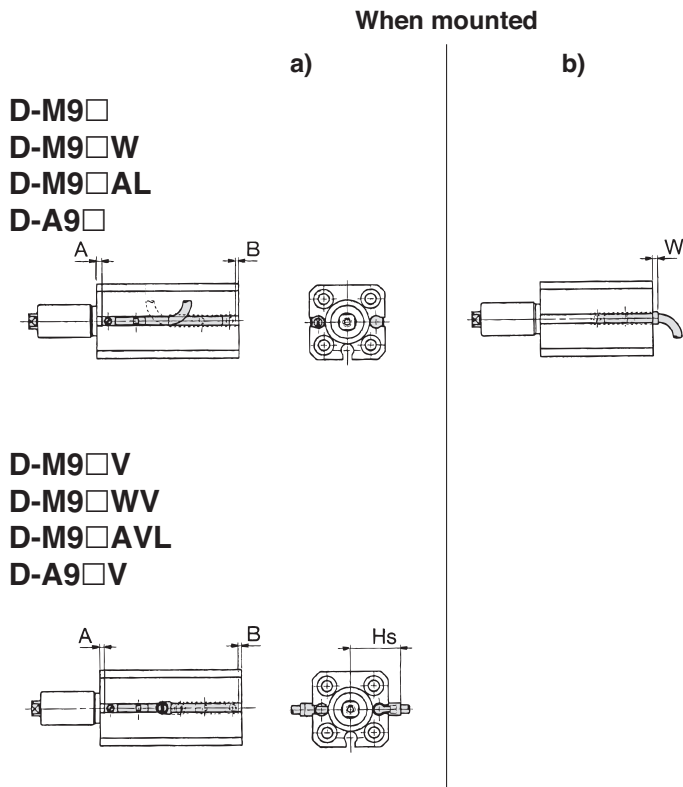

Ø 16

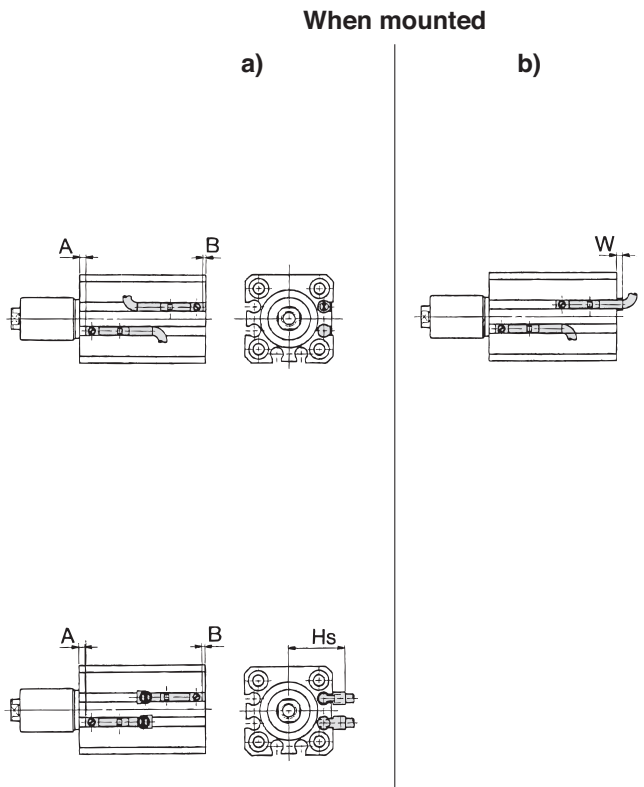

Auto Switch Proper Mounting Position

(mm)

Bore size (mm)	D-M9□ D-M9□W D-M9□AVL			D-M9□V D-M9□WV			D-M9□AL			D-A9□ D-A9□V		
	A	B	W	A	B	W	A	B	W	A	B	W
12	12	4	6	12	4	4	12	4	8	8	0	4.5 (2)
16	12	4	6	12	4	4	12	4	8	8	0	4.5 (2)

Note 1) () : D-A96, A9□V

Note 2) When setting an auto switch, confirm the operation and adjust its mounting position.

Auto Switch Mounting Height

(mm)

Auto switch model	D-M9□V D-M9□WV D-M9□AVL		D-A9□V
	Hs		Hs
Bore size			
12	19		17
16	21		19

Operating Range

(mm)

Auto switch model	Bore size							
	12	16	20	25	32	40	50	63
D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL	3	4	5	5.5	5	5	5	6.5
D-A9□/A9□V	6	7.5	10	9	9	9.5	9.5	11
D-F7□/J79 D-F7□V/J79C D-F7□W/F7□WV D-J79W D-F79F/F7BAL D-F7BAVL/F7NTL	—	—	6	6	6	6.5	6.5	7.5
D-A7□/A80 D-A7□H/A80H D-A73C/A80C	—	—	12	11	10.5	11.5	11	13
D-A79W	—	—	15.5	14	14	15.5	14.5	17
D-P3DWA	—	—	—	—	6.5	7	7	8

* Since this is a guideline including hysteresis, not meant to be guaranteed (assuming approximately 30 % dispersion).


There may be the case it will vary substantially depending on the ambient environment.

* The D-M9□(V), M9□W(V), M9□A(V)L, and A9□(V) with Ø 12 or Ø 16 (MK), or Ø 32 or more (MK, MK2) indicate the operating range when using the existing auto switch mounting groove, without using auto switch mounting bracket BQ2-012.

Series MK


D-M9□
D-M9□V
D-M9□W
D-M9□WV

D-M9□AL
D-M9□AVL
D-A9□
D-A9□V

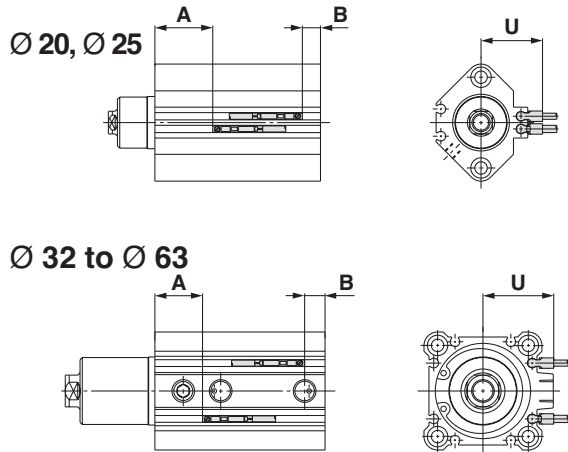

D-F7□/J79
D-F7□V
D-J79C
D-F7□W/J79W
D-F7□WV
D-F7BAL/F7BAVL

D-F79F/F7NTL
D-A7□/A80
D-A73C/A80C
D-A7□H/A80H
D-A79W

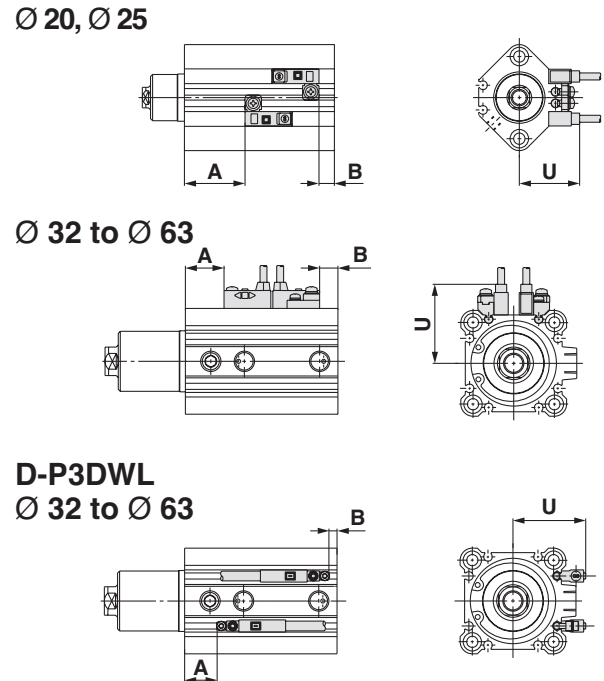

Auto Switch Proper Mounting Position

Bore size (mm)	D-M9□ D-M9□V D-M9□W D-M9□WV D-M9□AL D-M9□AVL		D-F7□/J79 D-F7□V D-J79C/F7□W D-F7□WV D-F7BAL D-F7BAVL D-F79F/J79W D-A7□H/A80H D-A73C/A80C D-A72		D-F7NTL		D-A9□ D-A9□V		D-A73 D-A80		D-A79W		D-P3DWL	
	A	B	A	B	A	B	A	B	A	B	A	B	A	B
20	30.5	10.0	28.0	7.5	33.0	12.5	26.5	6.0	27.5	7.0	25.0	4.5	—	—
25	29.5	12.0	27.0	9.5	32.0	14.5	25.5	8.0	26.5	9.0	24.0	6.5	—	—
32	31.5	13.0	29.0	10.5	34.0	15.5	27.5	9.0	28.5	10.0	26.0	7.5	22.5	3.5
40	25.0	13.0	22.5	10.5	27.5	15.5	21.0	9.0	22.0	10.0	19.5	7.5	16.0	4.0
50	29.0	16.5	26.5	14.0	31.5	19.0	25.0	12.5	26.0	13.5	23.5	11.0	20.0	7.5
63	29.5	19.5	27.0	17.0	32.0	22.0	25.5	15.5	26.5	16.5	24.0	14.0	20.5	10.5

Note) When setting an auto switch, confirm the operation and adjust its mounting position.

Auto Switch Mounting Height

Auto switch model	D-M9□V		D-A9□V		D-F7□/J79 D-F7□W D-J79W D-F7BAL D-F79F D-F7NTL D-A7□H D-A80H		D-F7□V D-F7□WV		D-J79C		D-A7□ D-A80		D-A73C D-A80C		D-A79W		D-P3DW□	
	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U
20	25	23	25.5	27.5	30	24.5	31	28	—	—	—	—	—	—	—	—	—	—
25	28	26	28	30.5	32.5	27.5	34	31	—	—	—	—	—	—	—	—	—	—
32	28.5	26.5	36	26.5	39.5	34	40.5	37.5	33	—	—	—	—	—	—	—	—	—
40	32	30	38	40	42.5	37.5	43.5	40.5	36.5	—	—	—	—	—	—	—	—	—
50	37.5	35	43.5	45	48	43	49	46	42	—	—	—	—	—	—	—	—	—
63	42.5	40.5	48.5	50.5	53.5	48	54.5	51.5	47	—	—	—	—	—	—	—	—	—

Auto Switch Mounting Bracket/Parts No.

Applicable auto switch	D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL D-A9□/A9□V	D-F7□/F7□V/J79/J79C/F7□W/J79W/F7□WV D-F7BAL/F7BAVL/F79F/F7NTL D-A7□/A80/A7□H/A80H/A73C/A80C/A79W		D-P3DW□								
Bore size (mm)	Ø 12 to Ø 63	Ø 20, Ø 25	Ø 32 to Ø 63	Ø 32 to Ø 63								
Auto switch mounting bracket part no.	—	BQ4-012	BQ5-032	BQ3-032S								
Auto switch mounting bracket fitting parts lineup/weight	—	<div>① Auto switch mounting screw (M2.5 x 8L)</div> <div>② Auto switch mounting nut</div> <div>Weight: 1.5 g</div>	<div>① Auto switch fixing screw (M2.5 x 10L)</div> <div>② Auto switch mounting screw (M3 x 8L)</div> <div>③ Auto switch spacer</div> <div>④ Auto switch mounting nut</div> <div>Weight: 3.5 g</div>	<div>① Hexagon socket head cap screw (M2.5 x 6L)</div> <div>② Hexagon socket head cap screw (M2.5 x 9L)</div> <div>③ Auto switch mounting bracket (nut)</div> <div>Weight: 2.5 g</div>								
When requesting the enclosure of the auto switch mounting bracket with the cylinder for shipment, add “-BQ” to the end of the cylinder part number. Standard model no. +BQ Example: MKB20-10LZ-BQ												
Auto switch mounting surface	Surfaces with auto switch mounting slot	Auto switch mounting rail side only	A/B/C side except port side	Surfaces with auto switch mounting slot								
	<div>Ø 12, Ø 16</div> <div></div> <div>Ø 20</div> <div></div> <div>Ø 25</div> <div></div> <div>Ø 32 to Ø 63</div> <div></div>	<div>—</div> <div></div> <div>Ø 20, Ø 25</div> <div></div>	<div>Port side</div> <div></div>	<div></div>								
Mounting of auto switch	<div></div> <div>Auto switch mounting screw</div> <div></div> <div>Auto switch</div> <div>• When tightening the auto switch mounting screw, use a watchmakers' screwdriver with a handle 5 to 6 mm in diameter.</div> <div>Tightening torque of auto switch mounting screw (N·m)</div> <table><tr><th>Auto switch model</th><th>Tightening torque</th></tr><tr><td>D-M9□(V) D-M9□W(V) D-A93</td><td>0.05 to 0.15</td></tr><tr><td>D-M9□A(V)</td><td>0.05 to 0.10</td></tr><tr><td>D-A9□(V) (Excludes the D-A93)</td><td>0.10 to 0.20</td></tr></table>	Auto switch model	Tightening torque	D-M9□(V) D-M9□W(V) D-A93	0.05 to 0.15	D-M9□A(V)	0.05 to 0.10	D-A9□(V) (Excludes the D-A93)	0.10 to 0.20	<div>① Insert the nut into the auto switch mounting slot on the cylinder tube, and place it in the roughly estimated setting position.</div> <div>② Engage the ridge on the auto switch mounting arm with the recess in the cylinder tube rail, and slide it to the position of the nut.</div> <div>③ Gently screw the auto switch mounting screw into the thread of the auto switch mounting nut through the mounting hole on the auto switch mounting arm.</div> <div>④ Confirm where the mounting position is, and tighten the auto switch mounting screw to fix the auto switch. The tightening torque of the M2.5 screw must be 0.25 to 0.35 N·m.</div> <div>⑤ The detection position can be changed under the conditions in step ③.</div> <div></div> <div>③ Auto switch mounting screw (M2.5 x 0.45 x 8L)</div> <div>② Auto switch</div> <div>① Auto switch mounting nut</div>	<div>① Insert the nut into the auto switch mounting slot on the cylinder tube, and place it in the roughly estimated setting position.</div> <div>② With the lower tapered part of the auto switch spacer facing the outside of the cylinder tube, line up the M2.5 through hole with the M2.5 female of the auto switch mounting nut.</div> <div>③ Gently screw the auto switch mounting nut fixing screw (M2.5) into the thread of the auto switch mounting nut through the mounting hole.</div> <div>④ Engage the ridge on the auto switch mounting arm with the recess in the auto switch spacer.</div> <div>⑤ Tighten the auto switch mounting screw (M3) to fix the auto switch. The tightening torque of the M3 screw must be 0.35 to 0.45 N·m.</div> <div>⑥ Confirm where the mounting position is, and tighten the auto switch fixing screw (M2.5) to fix the auto switch mounting nut. The tightening torque of the M2.5 screw must be 0.25 to 0.35 N·m.</div> <div>⑦ The detection position can be changed under the conditions in step ⑤.</div> <div></div> <div>③ Auto switch fixing screw (M2.5 x 0.45 x 10L)</div> <div>⑤ Auto switch mounting screw (M3 x 0.5 x 8L)</div> <div>④ Auto switch</div> <div>② Auto switch spacer</div> <div>① Auto switch mounting nut</div>	<div>① Insert the protrusion on the bottom of the auto switch into the mating part of the auto switch mounting bracket and fix the auto switch and the auto switch mounting bracket temporarily by tightening the hexagon socket head cap screw (M2.5 x 9L) 1 to 2 turns.</div> <div>② Insert the temporarily tightened mounting bracket into the mating groove of the cylinder tube, and slide the auto switch onto the cylinder tube through the groove.</div> <div>③ Check the detecting position of the auto switch and fix the auto switch firmly with the hexagon socket head cap screw (M2.5 x 6L, M2.5 x 9L)*.</div> <div>④ If the detecting position is changed, go back to step ②.</div> <div>* The hexagon socket head cap screw (M2.5 x 6L) is used to fix the mounting bracket and cylinder tube. This enables the replacement of the auto switch without adjusting the auto switch position.</div> <div>Note 1) Ensure that the auto switch is covered with the mating groove to protect the auto switch.</div> <div>Note 2) The tightening torque of the hexagon socket head cap screw (M2.5 x 6L, M2.5 x 9L) is 0.2 to 0.3 N·m.</div> <div>Note 3) Tighten the hexagon socket head cap screws evenly.</div> <div></div> <div>Hexagon socket head cap screw (M2.5 x 9L)</div> <div>Hexagon socket head cap screw (M2.5 x 6L)</div> <div>Protrusion</div> <div>Auto switch mounting bracket</div>
	Auto switch model	Tightening torque										
D-M9□(V) D-M9□W(V) D-A93	0.05 to 0.15											
D-M9□A(V)	0.05 to 0.10											
D-A9□(V) (Excludes the D-A93)	0.10 to 0.20											

Note) The auto switch mounting bracket and auto switch are enclosed with the cylinder for shipment.

Other than the models listed in “How to Order”, the following auto switches are applicable.
For detailed specifications, refer to Best Pneumatics No. 3.

Auto switch type	Model	Electrical entry	Features	Applicable bore size
Reed	D-A72, A73	Grommet (Perpendicular)	—	Ø 20 to Ø 63
	D-A80		Without indicator light	
	D-A79W		Diagnostic indication (2-colour indication)	
	D-A73C	Connector (Perpendicular)	—	
	D-A80C		Without indicator light	
	D-A72H, A73H, A76H	Grommet (In-line)	—	
	D-A80H		Without indicator light	
Solid state	D-F7NV, F7PV, F7BV	Grommet (Perpendicular)	—	Ø 20 to Ø 63
	D-F7NWV, F7BWV		Diagnostic indication (2-colour indication)	
	D-F7BAVL		Water resistant (2-colour indication)	
	D-J79C	Connector (Perpendicular)	—	
	D-F79, F7P, J79	Grommet (In-line)	—	
	D-F79W, F7PW, J79W		Diagnostic indication (2-colour indication)	
	D-F7BAL		Water resistant (2-colour indication)	
	D-F79F		With diagnostic output (2-colour indication)	
	D-F7NTL		With timer	

* With pre-wired connector is also available for solid state auto switches. For details, refer to Best Pneumatics No. 3.


Mounting

⚠ Caution


When a Magnetic Body Surrounds the Cylinder

- When a magnetic body surrounds the cylinder as shown in the figure below (including when the magnetic body is only on one side of the cylinder), the movement of the auto switch may become unstable, so please contact SMC.

Ø 12 to Ø 16
Ø 32 to Ø 63

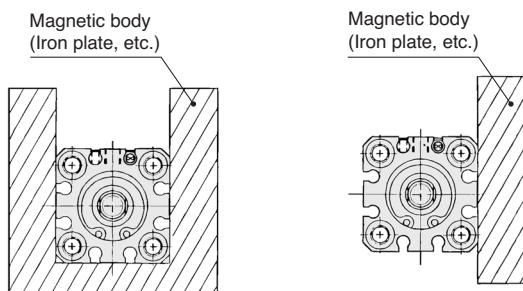

Ø 20, Ø 25

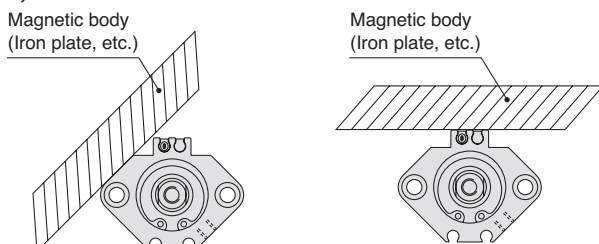


With Magnetic Field Resistant Auto Switch D-P3DWL

- If welding cables or welding gun electrodes are in the vicinity of the cylinder, the magnets in the cylinder could be affected by the external magnetic fields. (Please contact SMC if the welding amperage exceeds 16000 A.) If the source of strong magnetism comes in contact with the cylinder or an auto switch, make sure to install the cylinder away from the source of the magnetism. If the cylinder is to be used in an environment in which spatter will come in direct contact with the lead wires, cover the lead wires with a protective tube. For the protective tube, use a tube I.D. Ø 7 or more, which excels in heat resistance and flexibility. Please contact SMC if an inverter welder or a DC welder will be used.


Auto Switch Connections and Examples

Basic Wiring


Solid state 3-wire, NPN

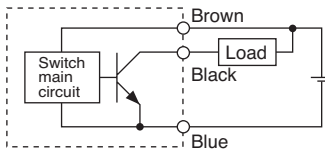


Solid state 3-wire, PNP

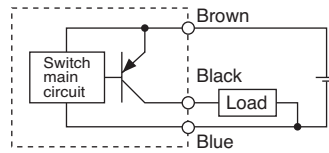




2-wire (Solid state)

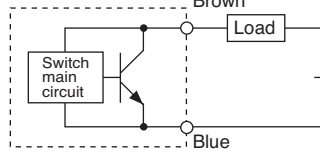

2-wire (Reed)

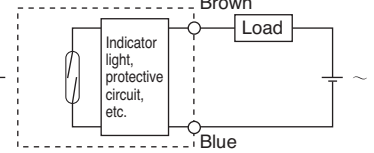


(Power supplies for switch and load are separate.)

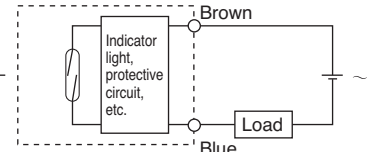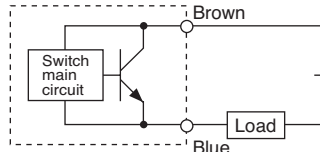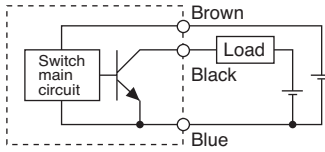


Example of Connection to PLC (Programmable Logic Controller)

• Sink input specification 3-wire, NPN

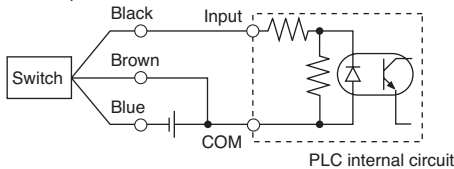


• Source input specification 3-wire, PNP

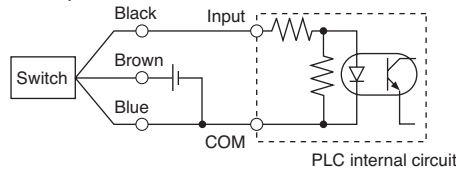


Connect according to the PLC input specifications, since the connection method will differ depending on the PLC input specifications.

2-wire

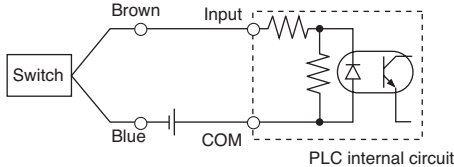


2-wire

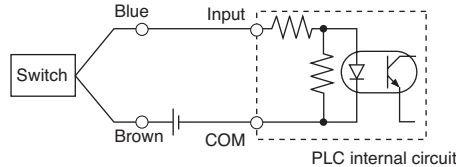


Example of AND (Serial) and OR (Parallel) Connection

• 3-wire


AND connection for NPN output (using relays)

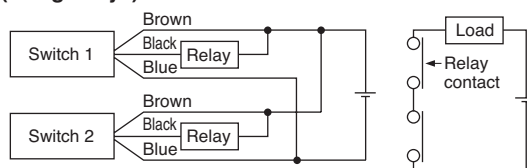

AND connection for NPN output (performed with switches only)

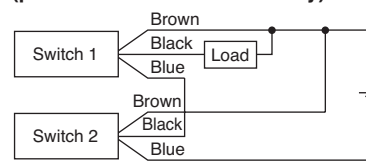


OR connection for NPN output

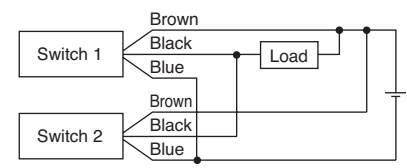

The indicator lights will illuminate when both switches are turned ON.

• 2-wire


2-switch AND connection

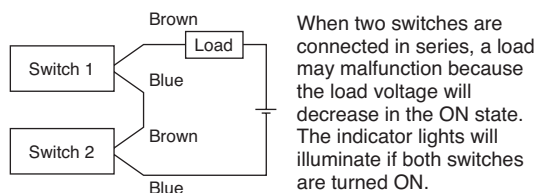

$$\begin{aligned} \text{Load voltage at ON} &= \text{Power supply voltage} - \text{Residual voltage} \times 2 \text{ pcs.} \\ &= 24 \text{ V} - 4 \text{ V} \times 2 \text{ pcs.} \\ &= 16 \text{ V} \end{aligned}$$

Example) Power supply voltage: 24 VDC
Auto switch internal voltage drop: 4 V

2-switch OR connection

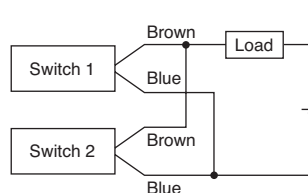

$$\begin{aligned} \text{Load voltage at OFF} &= \text{Leakage current} \times 2 \text{ pcs.} \\ &\quad \times \text{Load impedance} \\ &= 1 \text{ mA} \times 2 \text{ pcs.} \times 3 \text{ k} \\ &= 6 \text{ V} \end{aligned}$$

Example) Load impedance: 3 k
Auto switch leakage current: 1 mA

(Solid state)

When two switches are connected in parallel, malfunction may occur because the load voltage will increase in the OFF state.

(Reed)

Because there is no leakage current, the load voltage will not increase in the OFF state. However, depending on the number of switches in the ON state, the indicator lights may sometimes dim or not light because of the dispersion and reduction of the current flowing to the switches.

Rotary Clamp Cylinder Series MK

Made to Order Individual Specifications



Please contact SMC for detailed dimensions, specifications, and lead times.

Max. Operating Pressure 1.0 MPa **-X2071**

MK **Mounting** 63 – **Stroke** **Rotary direction** N Z – **X2071**

- Use this specification if the pressure is between 0.61 and 1.0 MPa when using MK□63-□□Z.
- The rod end and arm dimensions are different from the standard.
- When an arm assembly is ordered for this specification, order it with the part number [MK-A063-X2071]. (See below.)

Body option	
–	Without arm
N	With arm

Max. operating pressure
1.0 MPa

Specifications


Bore size (mm)	63
Operating pressure range	0.1 to 1.0 MPa

Specifications other than the above are the same as the standard.

Construction/ Dimensions


(The outline dimensions shown are when the rod is retracted.)
Dimensions other than those marked with “*” are the same as the standard.

Without arm

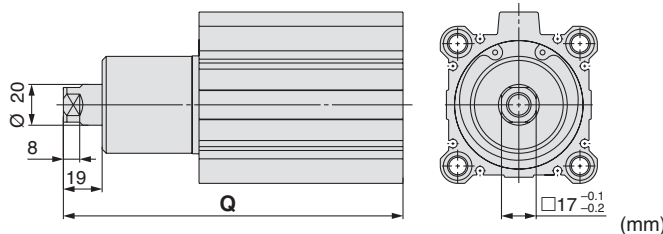

Model	Rod state	Q			
		10 mm	20 mm	30 mm	50 mm
MK□63-□Z-X2071	Retracted	146.5	166.5	186.5	226.5
	Extended	175.5	205.5	235.5	295.5

With arm

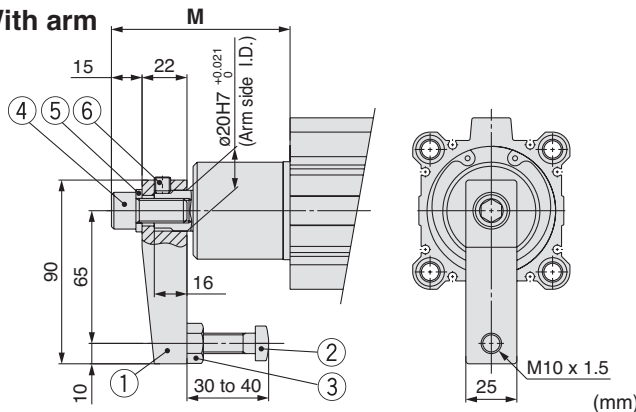

Model	Rod state	M			
		10 mm	20 mm	30 mm	50 mm
MK□63-□Z-X2071	Retracted	77.5	87.5	97.5	117.5
	Extended	106.5	126.5	146.5	186.5

Arm assembly

MK-A063-X2071

Max. operating pressure 1.0 MPa

Arm Assembly Component Parts

No.	Description	Material	Note
1	Arm	Roller steel	
2	Clamp bolt	Chromium molybdenum steel	
3	Hexagon nut	Roller steel	
4	Hexagon socket head cap screw	Chromium molybdenum steel	M12 x 25L
5	Spring washer	Hard steel	
6	Hexagon socket head set screw	Chromium molybdenum steel	Flat point M8 x 8L

The arm assembly consists of the parts No.1 to 6.

Overall Length Is the Same as the MK2 Series **-X2094**

MK **Mounting** **Bore size** – **Stroke** **Rotary direction** **Body option** Z – **X2094**

Overall length is the same as the MK2 series


- The overall length Q (from the end on the head side to the rod end) is the same as the MK2 series.

Applicable bore size/ Stroke

Bore size	Stroke
Ø 20	10, 20
Ø 25	
Ø 32	
Ø 40	
Ø 50	20, 50
Ø 63	

Dimensions

(The outline dimensions shown are when the rod is retracted.)
Dimensions other than those marked with “*” are the same as the standard.

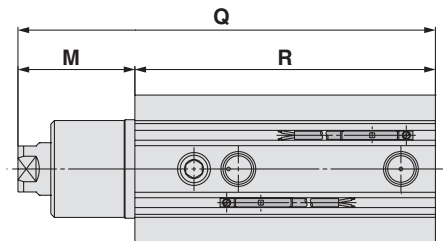


Bore size	Rod state	Clamp stroke								
		10 mm			20 mm			50 mm		
		Q	R	M	Q	R	M	Q	R	M
Ø 20	Retracted	95.5	72	23.5	115.5	82	33.5	—	—	—
	Extended	115	72	43	145	82	63	—	—	—
Ø 25	Retracted	98.5	73	25.5	118.5	83	35.5	—	—	—
	Extended	118	73	45	148	83	65	—	—	—
Ø 32	Retracted	121.5	81.5	40	141.5	91.5	50	—	—	—
	Extended	146.5	81.5	65	176.5	91.5	85	—	—	—
Ø 40	Retracted	122.5	75	47.5	142.5	85	57.5	—	—	—
	Extended	147.5	75	72.5	177.5	85	92.5	—	—	—
Ø 50	Retracted	—	—	—	162	96.5	65.5	222	126.5	95.5
	Extended	—	—	—	201	96.5	104.5	291	126.5	164.5
Ø 63	Retracted	—	—	—	165	100	65	225	130	95
	Extended	—	—	—	204	100	104	294	130	164

3 With Boss in Head End

Symbol
-X2172

MKB Bore size - Stroke Rotary direction Body option Z - X2172

• With boss in head end

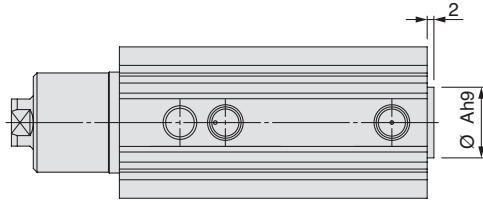

Bore size	Ø Ah9
Ø 20	13 ⁰ _{-0.043}
Ø 25	15 ⁰ _{-0.043}
Ø 32	21 ⁰ _{-0.052}
Ø 40	28 ⁰ _{-0.052}
Ø 50	35 ⁰ _{-0.062}
Ø 63	35 ⁰ _{-0.062}


4 The Dimension of Head End Flange is the Same as the Existing Series MK and MK2

Symbol
-X2177


MKG Bore size - Stroke Rotary direction Body option Z - X2177

• The dimension of head end flange is the same as the existing series MK and MK2

The mounting dimension of head end flange and pin hole size are the same as the existing series MK and MK2.
Note) A centering location ring is used for the connection part between the cylinder and head end flange.

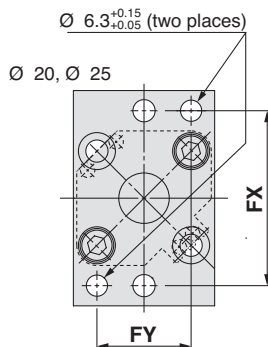

Bore size	FX	FY
Ø 20	48	25.5
Ø 25	52	28
Ø 32	56	—
Ø 40	62	—
Ø 50	76	—
Ø 63	92	—

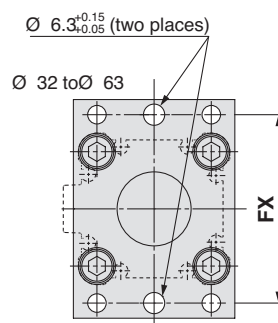

5

Rotary Angle 60° Specifications

Symbol
-X2997

MK Mounting Bore size - Stroke Rotary direction Body option Z - Auto switch - X2997

● Rotary angle 60° specifications


Specifications

Bore size (mm)	12	16	20	25	32	40	50	63
Rotary angle (°)	60 ±10							
Rotary stroke (mm)	5	5	6.3	6.3	10	10	12.7	12.7

* Specifications other than the above are the same as the standard.




Dimensions: Same as standard product

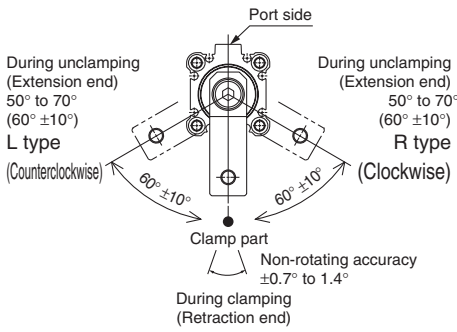Rotary Angle



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

- | | |
|---|---|
|  Danger: | Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury. |
|  Warning: | Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury. |
|  Caution: | Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury. |

- 1) ISO 4414: Pneumatic fluid power – General rules and safety requirements for systems and their components.
ISO 4413: Hydraulic fluid power – General rules and safety requirements for systems and their components.
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.
etc.

Warning

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**
Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- Only personnel with appropriate training should operate machinery and equipment.**
The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.**
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
 - Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.
Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.
The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office.at@smc.com
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	sales.bg@smc.com
Croatia	+385 (0)13707288	www.smc.hr	sales.hr@smc.com
Czech Republic	+420 541424611	www.smc.cz	office.at@smc.com
Denmark	+45 70252900	www.smc.dk.com	smc.dk@smc.com
Estonia	+372 651 0370	www.smc.ee	info.ee@smc.com
Finland	+358 207513513	www.smc.fi	smc.fi@smc.com
France	+33 (0)164761000	www.smc-france.fr	supportclient.fr@smc.com
Germany	+49 (0)61034020	www.smc.de	info.de@smc.com
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office.hu@smc.com
Ireland	+353 (0)14039000	www.smcautomation.ie	technical.ie@smc.com
Italy	+39 03990691	www.smcitalia.it	mailbox.it@smc.com
Latvia	+371 67817700	www.smc.lv	info.lv@smc.com

Lithuania	+370 5 2308118	www.smc.lt	info.lt@smc.com
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post.no@smc.com
Poland	+48 22 344 40 00	www.smc.pl	office.pl@smc.com
Portugal	+351 214724500	www.smc.eu	apoiocliente.pt@smc.com
Romania	+40 213205111	www.smcromania.ro	office.ro@smc.com
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	sales.sk@smc.com
Slovenia	+386 (0)73885412	www.smc.si	office.si@smc.com
Spain	+34 945184100	www.smc.eu	post.es@smc.com
Sweden	+46 (0)86031240	www.smc.nu	order.se@smc.com
Switzerland	+41 (0)523963131	www.smc.ch	helpcenter.ch@smc.com
Turkey	+90 212 489 0 440	www.smc-turkey.com.tr	satis@smc-turkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales.gb@smc.com
South Africa	+27 10 900 1233	www.smcza.co.za	Sales.za@smc.com