Circulating Fluid Temperature Controller







Thermo-chiller

Standard Type



Lightweight/Compact Temperature stability

±**0.18**°F (±0.1°C)

HRS050 (New HRS060



HRS012 HRS018 HRS024 New HRS030

HRS050

New HRS060

[W 377 x H 615 x D 500] W 14.8 x H 26.0 x D 19.7 [W 377 x H 660 x D 500] W 14.8 x H 38.4 x D 23.3

[W 377 x H 976 x D 500]

W 14.8 x H 24.2 x D 19.7

[40] 104 [47] 152 [69]

161 [73]

88

1300 w 1900 w **2400** w 3200 w 5100 w

5900 w

41 to 104°F (5 to 40°C)

Compatible power supplies in Europe, Asia, Oceania, North, Central and South America

- Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz)
 - Single-phase 200 to 230 VAC (50/60 Hz)

With heating function

Heating method using discharged heat makes a heater unnecessary.

Convenient functions

Timer operation function/Unit conversion function/Power failure auto-restart function/ Anti-freezing operation function

Page 3

Page 3

Self diagnosis function and check display

35 types of alarm codes

Communication function Equipped with serial communication

(RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) as standard.

Environmental friendly

Easy maintenance

Tool-less maintenance of filter



R407C R410A as refrigerant





Page 4

Page 4

Temperature stability ±0.18°F (±1.0°C)/Compact

The precision temperature control method by expansion valve and temperature sensor, realized high temperature stability of $\pm 0.18^{\circ}F$ ($\pm 0.1^{\circ}C$) and a small-size tank.

■ Air-cooled HRS□-A-□

Facility water I Circulating fluid Circulating fluid return port (S) return port Facility 0 0 Fluid level PS (S (S) Temperature senso (For compressor intake) (For compressor intake) Refrigeration circuit Circulating fluid circuit Refrigeration circuit Circulating fluid circuit

Refrigeration circuit

- The compressor compresses the refrigerant gas, and discharges the high temperature and high pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high temperature and high
 pressure refrigerant gas is cooled down by an air-cooled condenser
 with the ventilation of the fan, and becomes a liquid. In the case of
 water-cooled refrigeration, the refrigerant gas is cooled by a
 water-cooled condenser with the facility water in the facility water
 circuit, and becomes a liquid.
- The liquefied high pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A and vaporizes by taking heat from the circulating fluid in the evaporator.
- The vaporized refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high pressure and high temperature refrigerant gas is bypassed into the evaporator by expansion valve B, to heat the circulating fluid.



Circulating fluid circuit

■ Water-cooled HRS□-W-□

- The circulating fluid discharged from the pump, is heated or cooled by the user's equipment and returns to the thermo-chiller.
- The circulating fluid is controlled to a set temperature by the refrigeration circuit, to be discharged to the user's equipment side again by the thermo-chiller.




Facility water circuit


For water-cooled refrigeration HRS□-W-□

 The water regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water regulating valve.

Installation close to a wall is possible on both sides.


Reduced-height double condenser structure (HRS030/060)

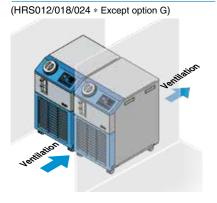

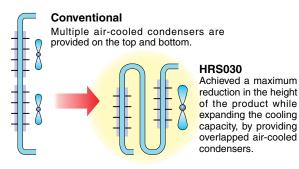





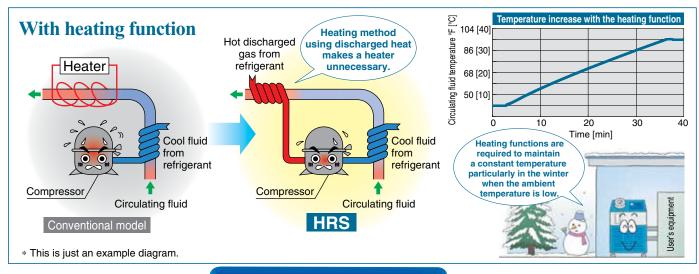

Simple operation

Step 1 Press the RUN/ STOP keys.

Step 2 Adjust the temperature setting with the \vee / \wedge keys.

Step 3 Press the RUN/ STOP key to stop. Easy operation by these steps




The "large digital display" (7-segment and 4 digits) and "2 row display" provide a clearer view of the current value (PV) and set value (SV).

O REMOTE

O ALARM

Power supply (24 VDC) available

Power can be supplied from the connector at the rear side of the HRS to external switches etc.

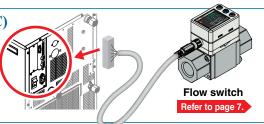

MENU



Variations

| | Mo | del | Cooling method | Cooling capacity [W] | Single- phase 100 VAC (50/60 | Single- phase 200 to 230 | Option Page 23 | Optional accessories Page 27 | International standards |
|---|----|--------|----------------------------|----------------------------|------------------------------------|--------------------------------|--|---|---|
| | | HRS012 | | 1100/1300 | • | • | · With earth leakage | Anti-quake bracket Piping conversion fitting (For air-cooled, water-cooled and option) | |
| | | HRS018 | | 1500/1700 | • | _ | breaker · With automatic | · Concentration meter | |
| | | HNSUIO | | 1700/1900 | _ | • | water fill function Applicable to DI water (deionized water) piping High pressure pump mounted (*The HRS050/060 cannot be selected.) | ble to DI water ed water) - Power supply cable - DI filter set - Electrical resistance sensor set - Particle filter set - Drain pan set | (UL Standards) Refer to pages 9 to 12 for details |
| | | HRS024 | refrigeration Water-cooled | 2100/2400 | _ | • | | | |
| | | HRS030 | | 2600/3200 | _ | • | | | |
| - | 1 | HRS050 | | 4700/5100 | _ | • | High temperature environment specification (* The HRS030/050/060) | (With water leakage sensor) Connector cover Analog gateway unit | on applicable models. |
| | | HRS060 | | 4900/5900 | _ | • | cannot be selected.) | Replacement type dustproof filter set Separately installed power | |

: Newly added models

• : Newly added optional accessories

* UL Standards: Applicable to only 60 Hz

Reduces the maintenance hours for the pump.

Adoption of the magnet pump*


No external leakage of the circulating fluid because the sealless pump is used, and a periodic check of the pump leakage and replacement of the mechanical seal are not necessary.

st When the option, high pressure pump, is selected and for the HRS050/060, the mechanical seal pump is chosen.



Shaped for easy supply of circulating fluid

The angled supply port facilitates the supply of circulating fluid.

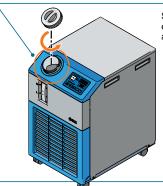

Supply is possible even when 2 products are stacked.




Dustproof filter

Integrated with the grill of the front panel. Mounting and removal can be done easily.


Easy to clean dust and cutting chips etc. stuck to the dustproof net by brush or air blow.



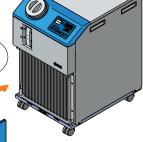

Replacement type dustproof filter set

Suitable for use in excessively dusty atmospheres. The disposable type filter saves time and effort of cleaning.

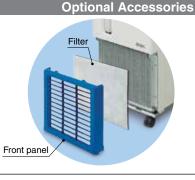




Convenient Functions (Refer to the Operation Manual for details.)

■ Timer operation function

Timer for ON and OFF can be set in units of 0.5 h up to 99.5 h.

Ex.) Can set to stop on Saturday and Sunday and restart on Monday morning.

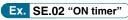

Timer The time remaining can be checked.



■ Unit conversion function

Temperature and pressure units can be changed.



O REMOTE O R U N O ALARM PV STOP MENU SEL PUMP RESET

Power failure auto-restart function

Automatic restart from stoppage due to power failure etc. is possible without pressing the stoppage key and remote operation.

Anti-freezing operation function

If the temperature approaches freezing point, e.g. in winter at night, the pump operates automatically and the heat generated by the pump warms the circulating fluid, preventing freezing.

Key-lock function

Can be set in advance to protect the set values from being changed by pressing keys by mistake.

Function to output a signal for completion of preparation Notifies by communication when the temperature reaches the pre-set temperature range.

Independent operation of the pump

The pump can be operated independently while chiller is powered off. You can check piping leak and remove the air.



Self Diagnosis Function and Check Display

Display of 35 types of alarm codes For details, refer to page 21.

Operation is monitored all the time by the integrated sensor.

Should any error occur, the self diagnosis result is displayed by the applicable alarm code from 35 types.

This makes it easier to identify the cause of the alarm.

Can be used before requesting service.

Changeable alarm set values

| Setting item | Set value |
|--|------------------------------------|
| Circulating fluid discharge temperature rise | 41 to 118°F (5 to 48°C) |
| Circulating fluid discharge temperature drop | 34 to 102°F (1 to 39°C) |
| Circulating fluid discharge pressure rise | 7.3 to 109 psi (0.05 to 0.75 MPa)* |
| Circulating fluid discharge pressure drop | 7.3 to 26 psi (0.05 to 0.18 MPa)* |


^{*} Set values vary depending on the model.



Alarm codes notify of checking times.


Notifies when to check the pump and fan motor. Helpful for facility maintenance.

* The fan motor is not used in water-cooled refrigeration.

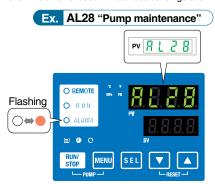

Check display

The internal temperature, pressure and operating time of the product are displayed.

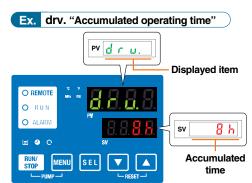

| Displayed item |
|--|
| Circulating fluid outlet temperature |
| Circulating fluid return temperature |
| Compressor gas temperature |
| Circulating fluid outlet pressure |
| Compressor gas discharge pressure |
| Compressor gas return pressure |
| Accumulated operating time |
| Accumulated operating time of pump |
| Accumulated operating time of fan motor* |
| Accumulated operating time of compressor |
| |


^{*} These are displayed only for air-cooled refrigeration.

Communication Function

The serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. Communication with the user's equipment and system construction are possible, depending on the application. A 24 VDC output can be also provided, and is available for a flow switch (SMC's PF2W etc.).


Ex. 1 Remote signal I/O through serial communication

The remote operation is enabled (to start and stop) through serial communication.

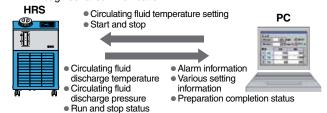

Ex. 3 Alarm and operation status (start, stop, etc.) signal output

The alarm and status generated in the product are assigned to 3 output signals based on their contents, and can be output.

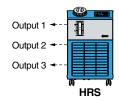


Output setting example

Output 1: Temperature rise Output 2: Pressure rise

Output 3: Operation status (start, stop, etc.)

Ex. 2 Remote operation signal input

One of the contact inputs is used for remote operation and the other is used for a flow switch to monitor the flow, and their warning outputs are taken in.

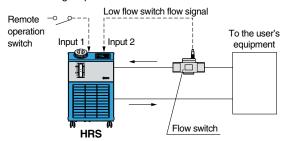

Power for flow switch (24 VDC) can be supplied from thermo-chiller.



| Application Examples | | | | | | | |
|--|----------------------------|-----------------|----------------------------------|------|-----------|---------|-------------------|
| f and the second | Heat source | Auto- motive | Light electrical appliance | Food | Machinery | Medical | Semi conductor |
| Arc welding machine | Torch | • | | | • | | |
| Resistance welding machine | Tip | • | • | | • | | |
| Laser welding machine | Oscillator | • | • | | • | | • |
| UV curing device | Lamp | • | • | • | | • | |
| X-ray instrument | | | • | | | • | • |
| Electronic microscope | Lens | | • | | | • | • |
| Laser marker | Oscillator | • | • | • | | • | • |
| Ultra sonic wave inspection machine | | • | • | | • | | |
| Atomizing device/ Crushing equipment | Blade | | | • | | | |
| Linear motor | Motor | • | | | • | | |
| Packaging machines (food products) | Dies/ Welded | | | • | | | |
| Mold cooling | Mold | • | • | • | | • | |
| Temperature control of adhesive and paint material | Paint material/ Welding | • | • | • | | | |
| Cooling of vacuum pump | Pump | • | | | | | • |
| Shrink fit machine | Workpiece | • | | | • | | |
| Gas cylinder cabinet | | | | | | | • |
| Concentrating equipment | Test liquid | | | • | | • | |
| Reagent cooling equipment | Reagent | | | • | | • | • |
| Cleaning machine (hydrocarbon-based) | Cleaning tank | • | • | | • | | |
| Printing machine | Roller | | • | • | • | | |
| Chamber electrode | Electrode | | | | | | • |
| High frequency induction heating equipment | Power supply/ | • | | | • | | |
| 5 SMC | 1 | 1 | 1 | | | | ı |

Global Supply Network-

SMC has a comprehensive network in the global market.

We now have a presence of more than 400 branch offices and distributors in 78 countries world wide such as Asia, Oceania, North/Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products with the best service. We also provide full support to local factories, foreign manufacturing companies and Japanese companies in each country.





SMC Thermo-chiller Variations


Lots of variations are available in response to the users' requirements.

As of August 2014

| Series | | Temperature | Cooling capacity [kW] | | | | | | | | | | Environment | | | |
|--------|-----------------------------|----------------------------------|------------------------|-----|-----|-----|---|---|---|---|----|----|-------------|----|---------------------------------|--|
| | | stability range °F [°C] °F [°C] | | 1.2 | 1.8 | 2.4 | 3 | 5 | 6 | 9 | 10 | 15 | 20 | 25 | Environment | International standards |
| | HRSE Basic type | ±3.6 [±2.0] | 50 to 86 [10 to 30] | • | • | • | | | | | | | | | Indoor use | _ |
| | HRS Standard type | ±0.18 [±0.1] | 41 to 104 [5 to 40] | • | • | • | • | • | • | | | | | | Indoor use | (Only 60 Hz) |
| | HRS100/150 Standard type | ±1.8 [±1.0] | 41 to 95 [5 to 35] | | | | | | | | • | • | | | Outdoor installation IPX4 | _ |
| | HRSH090 Inverter type | ±0.18 [±0.1] | 41 to 104 [5 to 40] | | | | | | | • | | | | | Indoor use | (400 V as standard) UL Standards (To be obtained) |
| | HRSH Inverter type | ±0.18 [±0.1] | 41 to 95 [5 to 35] | | | | | | | | • | • | • | • | Outdoor installation IPX4 | (400 V as standard, 200 V as an option) (Only 200 V as an option) |



Circulating Fluid/Facility Water Line Equipment

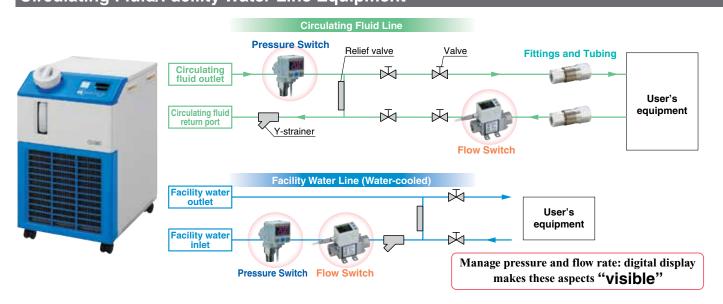



3-Color Display Digital Flow Switch for Water PF3W Integrated with temperature sensor



3-Color Display

Electromagnetic Type Digital Flow Switch LFE



Digital Flow Switch for Deionized Water and Chemical Liquids PF2D 4-Channel Flow Monitor PF2 200







Pressure Switch: Monitors pressure of the circulating fluid and facility water.



2-Color Display High-Precision Digital Pressure Switch ISE80



Refer to the Best Pneumatics No. 6 for details.

Pressure Sensor for General Fluids *PSE56* Pressure Sensor Controller *PSE200,300*

Fittings and Tubing





Stainless Steel 316 Insert Fittings *KFG2*

Metal One-touch Fittings KQB2

S Coupler/Stainless Steel (Stainless Steel 304) KKA



Stainless Steel 316

One-touch Fittings KQG2

Fluoropolymer Fittings LQ





Refer to the Best Pneumatics No. 6 for details.



| Material | | | | | |
|------------------------------------|--|--|--|--|--|
| Nylon | | | | | |
| Polyurethane | | | | | |
| FEP (Fluoropolymer) | | | | | |
| Modified PTFE (Soft fluoropolymer) | | | | | |
| Super PFA | | | | | |
| PFA | | | | | |
| | | | | | |



CONTENTS

Series HRS Standard Type







● Thermo-chiller Series HRS

How to Order/Specifications

| Single-phase 100/115 VAC Page | 9 |
|---|----|
| Single-phase 200 to 230 VAC Page | |
| Cooling CapacityPage | |
| Heating Capacity ·····Page | 15 |
| Pump Capacity/ | |
| Required Facility Water Flow RatePage | 17 |
| DimensionsPage | |
| Operation Display Panel ·····Page | |
| Alarm ·····Page | |
| Communication Function ·····Page | 22 |
| Options | |
| With Earth Leakage Breaker ·····Page | 23 |
| With Automatic Water Fill FunctionPage | 23 |
| Applicable to DI Water (Deionized Water) | |
| Piping ·····Page | 23 |
| High Pressure Pump Mounted ·····Page | 23 |
| $\textbf{High Temperature Environment Specification} \cdots \textbf{Page}$ | 25 |
| | |
| Optional AccessoriesPage | |
| ① Anti-quake Bracket ·····Page | 29 |
| ② Piping Conversion Fitting (For Air-Cooled Refrigeration/Water-Cooled Refrigeration)····· Page | 29 |
| ③ Piping Conversion Fitting (For Option)Page | |
| Concentration Meter | |
| 5 Bypass Piping Set ·····Page | |
| 6 Power Supply CablePage | |
| ① DI Filter Set ·····Page | |
| Electrical Resistance Sensor SetPage | |
| Particle Filter SetPage | |
| 10 Drain Pan Set (With Water Leakage Sensor) ··· Page | |
| ① Connector Cover Page | |
| 12 Analog Gateway Unit ·····Page | 37 |
| (13) Replacement Type Dustproof Filter Set Page | 37 |
| $\textcircled{14}$ Separately Installed Power Transformer $\cdots\cdots$ Page | 38 |
| | |
| Cooling Capacity Calculation | |
| Required Cooling Capacity CalculationPage | |
| Precautions on Cooling Capacity Calculation Page | 40 |
| Circulating Fluid Typical Physical | |
| Property ValuesPage | 40 |
| | |

Specific Product PrecautionsPage 41



Thermo-chiller Standard Type





How to Order

Air-cooled refrigeration HRS 018 - A

Cooling capacity

012 Cooling capacity 1100/1300 W (50/60 Hz) 018 Cooling capacity 1500/1700 W (50/60 Hz)

Note) UL Standards: Applicable to only 60 Hz

Cooling method • Air-cooled refrigeration

Pipe thread type

| Nil | Rc |
|-----|--|
| F | G (with PT-G conversion fitting set) |
| N | NPT (with PT-NPT conversion fitting set) |

Option

| Symbol | Option | | | | |
|------------------------------|---|--|--|--|--|
| Nil None | | | | | |
| B With earth leakage breaker | | | | | |
| J | With automatic water fill function | | | | |
| M | Applicable to DI water (deionized water) piping | | | | |
| Т | High pressure pump mounted Note) | | | | |

 When multiple options are combined, indicate symbols in alphabetical order.

Note) • The cooling capacity will decrease by about 300 W from the value in the catalog.

• Pending for CE marking and UL Standards

◆Power supply Note)

| Symbol | Power supply |
|--------|--|
| 10 | Single-phase 100 VAC (50/60 Hz) 115 VAC (60 Hz) |

Note) UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

| | | Model | HRS012-A□-10 | HRS018-A□-10 | |
|-----------------------------------|-----------|---|--|-----------------------------------|--|
| Cooling meth | od | | Air-cooled | refrigeration | |
| Refrigerant | | | R407C (HFC) | | |
| Control method | od | | PID | control | |
| Ambient temp | erature/ | humidity Note 1) | Temperature: 41 to 104°F (5 | to 40°C), Humidity: 30 to 70% | |
| | | ing fluid Note 2) | Tap water, 15% ethylene g | lycol aqueous solution Note 4) | |
| | Set tem | perature range Note 1) | 41 to 104°F | = (5 to 40°C) | |
| | | capacity Note 3) (50/60 Hz) | 1100/1300 | 1500/1700 | |
| | | capacity Note 3) (50/60 Hz) V | 360 | 0/450 | |
| | Tempera | ature stability Note 5) | | (±0.1°C) | |
| Circulating | | Rated flow Note 6) 7) (50/60 Hz) gal/mi [L/mi | | 7 (0.13 MPa)/7 (0.18 MPa)] | |
| fluid | Pump | Maximum flow rate (50/60 Hz) | 7.1/7.7 gal/mi | n [27/29 L/min] | |
| system | Fullip | Maximum pump head (50/60 Hz) | | [14/19 m) | |
| | | Output | 200 | | |
| | Tank ca | • • | Approx. 1.3 gal [5 L] | | |
| | Port siz | e | Rc1/2 | | |
| | Fluid co | ntact material | Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC | | |
| | Power s | nummh. | Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz) | | |
| | Powers | supply | Allowable voltage range ±10% | | |
| Electrical | Circuit p | rotector A | 15 | | |
| system | Applica | ble earth leakage breaker capacity Note 8) A | - | 15 | |
| | Rated o | perating current A | 7.5/8.3 | 7.7/8.4 | |
| | Rated p | ower consumption Note 3) (50/60 Hz) kV | 0.7/0.8 | 0.8/0.8 | |
| Noise level Note 9) (50/60 Hz) dB | | | 58 | 3/55 | |
| | | | Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Power supply connector 1 | | |
| Accessories | | | Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1, | | |
| Accessories | | | | e core (for communication) 1 pc., | |
| | | | Power supply cable: Option (sold separately) to be ordered or prepared by user. | | |
| Weight Note 10) | 1 | | 88 lbs (40 kg) | | |

Note 1) It should have no condensation.

Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water).

Note 3) ① Ambient temperature: 77°F (25°C), ② Circulating fluid temperature: 68°F (20°C), ③ Circulating fluid rated flow, 4 Circulating fluid: Tap water

Refer to the cooling capacity graph on page 13 for details.

Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 50°F (10°C) or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 68°F (20°C).


Required minimum flow rate for cooling capacity or maintaining the temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

Note 8) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.)

Note 9) Front: 3.3 ft (1 m), height: 3.3 ft (1 m), stable with no load, Other conditions \rightarrow Note 3) Note 10) Weight in the dry state without circulating fluids

Note 11) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 3281 ft (1000 m) or higher".



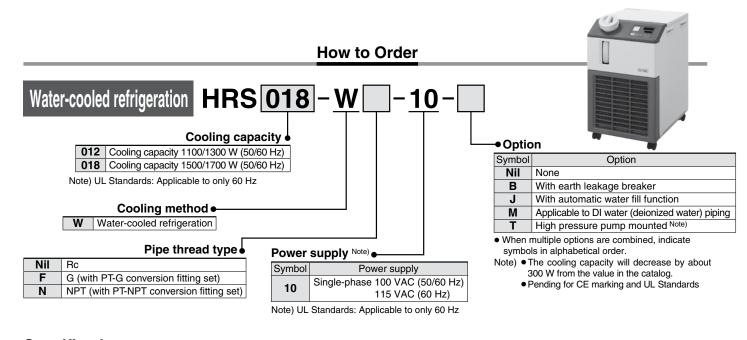

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

| | | Model | | HRS012-W□-10 | HRS018-W□-10 | | | |
|---|------------------------|---|----|---|---------------------------------------|--|--|--|
| Cooling meth | od | | | Water-cooled | refrigeration | | | |
| Refrigerant | | | | R407C (HFC) | | | | |
| Control meth | od | | | PID control | | | | |
| Ambient tem | perature/ | humidity Note 1) | | Temperature: 41 to 104°F (5 | to 40°C), Humidity: 30 to 70% | | | |
| | Circulat | ing fluid Note 2) | | Tap water, 15% ethylene gl | ycol aqueous solution Note 4) | | | |
| | Set tem | perature range Note 1) | | 41 to 104°F | (5 to 40°C) | | | |
| | Cooling | capacity Note 3) (50/60 Hz) | W | 1100/1300 | 1500/1700 | | | |
| | | | W | | /450 | | | |
| | Temper | ature stability Note 5) | | | (±0.1°C) | | | |
| Circulating | | Rated flow Note 6) 7) (50/60 Hz) | | | [7L/min (0.13 MPa)/7 L/min (0.18 MPa) | | | |
| fluid | Pump | Maximum flow rate (50/60 Hz) | | 7.1/7.7 gal/mir | | | | |
| system | i unip | Maximum pump head (50/60 Hz) | | 46/62 ft [| ,, | | | |
| | | | W | —————————————————————————————————————— | 00 | | | |
| | Tank capacity | | | Approx. 1.3 gal [5 L] | | | | |
| | Port size | | | Rc1/2 | | | | |
| | Fluid contact material | | | Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC | | | | |
| | Temperature range | | | 41 to 104°F (5 to 40°C) | | | | |
| Facility | | e range | | 44 to 73 psi (0.3 to 0.5 MPa) | | | | |
| water | Require | d flow rate Note 11) (50/60 Hz) | | 2.1 gal/min (8 L/min) 3.2 gal/min (12 L/min) | | | | |
| system | | let pressure differential of facility water | | 44 psi (0.3 M | IPa) or more | | | |
| System | Port siz | - | | | 3/8 | | | |
| | Fluid co | ontact material | | Stainless steel, Copper (Heat exchanger brazing), Bronze, Synthetic rubber | | | | |
| | Power s | supply | | Single-phase 100 VAC (50/60 Hz), 115 VAC (60 Hz) | | | | |
| | 11 7 | | | Allowable voltage range ±10% | | | | |
| Electrical | | | Α | | 5 | | | |
| system | | ole earth leakage breaker capacity Note 8) | _ | | 5 | | | |
| | | | A | 7.5/8.3 | 7.7/8.4 | | | |
| Rated power consumption Note 3 (50/60 Hz) kVA Noise level Note 9 (50/60 Hz) dB | | 0.7/0.8 0.8/0.8 | | | | | | |
| Noise level N |) (50/6 | U HZ) d | dB | 33/33 | | | | |
| Accessories | | | | Fitting (for drain outlet) 1 pc., Input/output signal connector 1 pc., Power supply connector 1 pc., Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1, Alarm code list sticker 1, Ferrite core (for communication) 1 pc., Power supply cable: Option (sold separately) to be ordered or prepared by user. | | | | |
| Weight Note 10 |) | | | 88 lbs (40 kg) | | | | |
| | | | | | , <u> </u> | | | |

Note 1) It should have no condensation.

Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water).

Note 3) ① Ambient temperature: 77°F (25°C), ② Circulating fluid temperature: 68°F (20°C), ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water

Refer to the cooling capacity graph on page 13 for details.

Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 50°F (10°C) or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 68°F (20°C).

Note 7) Required minimum flow rate for cooling capacity or maintaining the temperature stability.

The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

Note 8) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.)

Note 9) Front: 3.3 ft (1 m), height: 3.3 ft (1 m), stable with no load, Other conditions \rightarrow Note 3) Note 10) Weight in the dry state without circulating fluids

Note 11) Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of 68°F (20°C), and circulating fluid rated flow and facility water temperature of 77°F (25°C).

Note 12) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 3281 ft (1000 m) or higher".

Thermo-chiller Standard Type (& MET) US Single-phase 200 to 230 VAC ROHS



How to Order

Air-cooled refrigeration

HRS 018 - A - 20 -

Cooling capacity

| 012 | Cooling capacity 1100/1300 W (50/60 Hz) |
|-----|---|
| 018 | Cooling capacity 1700/1900 W (50/60 Hz) |
| 024 | Cooling capacity 2100/2400 W (50/60 Hz) |
| 030 | Cooling capacity 2600/3200 W (50/60 Hz) |
| 050 | Cooling capacity 4700/5100 W (50/60 Hz) |
| 060 | Cooling capacity 4900/5900 W (50/60 Hz) |

Note) UL Standards: Applicable to only 60 Hz

Cooling method

A Air-cooled refrigeration

Pipe thread type

| Nil | Rc |
|-----|--|
| F | G (with PT-G conversion fitting set) |
| N | NPT (with PT-NPT conversion fitting set) |

Option

| Optio | /11 | |
|--------|---|--------------------|
| Symbol | Option | Applicable model |
| Nil | None | |
| В | With earth leakage breaker | HRS012/018/024 |
| J | With automatic water fill function | 030/050/060 |
| M | Applicable to DI water (deionized water) piping | |
| Т | High pressure pump mounted Note) | HRS012/018/024/030 |
| G | High temperature environment specification | HRS012/018/024 |

When multiple options are combined, indicate symbols in alphabetical order.

Note) The cooling capacity will decrease by about 300 W from the value in the catalog.

Power supply Note)

| Symbol | Power supply |
|--------|--|
| 20 | Single-phase 200 to 230 VAC (50/60 Hz) |

Note) UL Standards: Applicable to only 60 Hz

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

| Model | HRS012-A□-20 | HRS018-A□-20 | HRS024-A□-20 | HRS030-A□-20 | HRS050-A□-20 | HRS060-A□-20 |
|---|--|---|-----------------------|---------------------------|--------------------------|--|
| Cooling method | | | Air-cooled r | efrigeration | | |
| Refrigerant | R407C (HFC) R410A (HFC) | | | (HFC) | | |
| Control method | | | PID c | ontrol | | |
| Ambient temperature/humidity Note 1) | Temperature: 41 to 10 | 4°F (5 to 40°C), High to | emperature environmer | nt specification (option) | : 41 to 113°F (5 to 45°C |), Humidity: 30 to 70% |
| Circulating fluid Note 2) | | Tap water, 15% ethylene glycol aqueous solution Note 4) | | | | |
| Set temperature range Note 1) | | | 41 to 104°F | (5 to 40°C) | | |
| Cooling capacity Note 3) (50/60 Hz) W Heating capacity Note 3) (50/60 Hz) W Temperature stability Note 5) | 1100/1300 | 1700/1900 | 2100/2400 | 2600/3200 | 4700/5100 | 4900/5900 |
| ৰ্ম্ভ Heating capacity Note 3) (50/60 Hz) W | | 530/650 | | 600/640 | 1100/1400 | 1000/1300 |
| | | | ±0.18°F | (±0.1°C) | | |
| Rated flow Note 6) 7) (50/60 Hz) gal/mi [L/min] | 1.8 (19 p | osi)/1.8 (26 psi) [7 | 7 (0.13 MPa)/7 (0. | 18 MPa)] | | 6.1 (30 psi)/7.4 (42 psi) [23 (0.21 MPa)/28 (0.29 MPa)] |
| Maximum flow rate (50/60 Hz) gal/mi [L/min] | | 7.1/7.7 [27/29] | | 9.0/11 [34/40] | 8.2/11 [31/42] | 7.7/10 [29/38] |
| Maximum flow rate (50/60 Hz) gal/mi [L/min] Maximum pump head (50/60 Hz) Output W Tank capacity | | 46/62 ft [| 14/19 m] | | 164 ft | [50m] |
| 징 Output W | | 20 | 00 | | 55 | 50 |
| Tank capacity | Approx. 1.3 gal [5 L] | | | | | |
| Port size | Rc1/2 | | | | | |
| Fluid contact material | Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina ceramic, Carbon, PP, PE, POM, FKM, EPDM, PVC | | | | | |
| ् Power supply | Single-phase 200 to 230 VAC (50/60 Hz) Allowable voltage range ±10% | | | | | |
| Circuit protector A Applicable earth leakage breaker capacity Note 8) A | | 1 | 0 | | 20 | 30 |
| | | 1 | 0 | | 20 | 30 |
| ■ Rated operating current A | 4.6/5.1 | 4.7/5.2 | 5.1/5.9 | 5.2/6.0 | 8/11 | 8.9/11.5 |
| Rated power consumption Note 3) (50/60 Hz) kVA | 0.9/1.0 | 0.9/1.0 | 1.0/1.2 | 1.0/1.2 | 1.7/2.2 | 1.8/2.3 |
| Noise level Note 9) (50/60 Hz) dB | | 60/61 | | 62/65 | 65/68 | 66/68 |
| | | | | | Power supply conn | |
| Accessories | Operation Manual (for installation/operation) 1, Quick Manual (with a clear case) 1 Note 11), | | | | | |
| 71000001100 | Alarm code list sticker 1, Ferrite core (for communication) 1 pc., | | | | | |
| | Power supply cable: Option (sold separately) to be ordered or prepared by user. | | | | | |
| Weight Note 10) Ib [kg] | | 95 [43] | | 104 [47] | 152 [69] | 161 [73] |

Note 1) It should have no condensation.

Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water).

Note 3) ① Ambient temperature: 77°F (25°C), ② Circulating fluid temperature: 68°F (20°C), ③ Circulating fluid rated flow, ④ Circulating fluid: Tap water

Refer to the cooling capacity graph on page 13 for details.

Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 50°F (10°C) or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable.

Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 68°F (20°C).

Note 7) Required minimum flow rate for cooling capacity or maintaining the temperature stability.

The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

Note 8) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.)

Note 9) Front: 3.3 ft (1 m), height: 3.3 ft (1 m), stable with no load, Other conditions \rightarrow Note 3)


Note 10) Weight in the dry state without circulating fluids

Note 11) Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of 68°F (20°C), and circulating fluid rated flow and facility water temperature of 77°F (25°C).

Note 12) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 ** For altitude of 3281 ft (1000 m) or higher".



Thermo-chiller Standard Type Series HRS

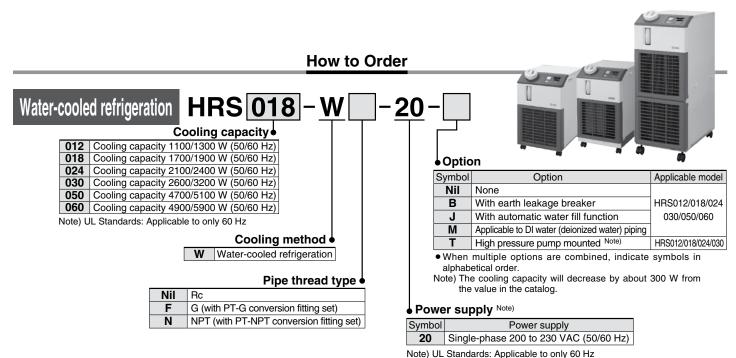

Specifications * There are different values from standard specifications. Refer to pages 23 to 25 for details.

| | | Model | HRS012-W□-20 | HRS018-W□-20 | HRS024-W□-20 | HRS030-W□-20 | HRS050-W□-20 | HRS060-W□-20 |
|----------------------|-----------------------------------|---|--|---------------------------|--|--|--|--|
| Cooling method | | | 11110012 11 20 | | Water-cooled | | TITIO000 TI | |
| Refrigerant | | | R407C (HFC) R410A (HFC) | | | (HFC) | | |
| | | trol method | | PID control | | | . (0) | |
| | | pient temperature/humidity Note 1) | Temperature: 41 to 10 | 04°F (5 to 40°C), High to | | | 41 to 113°F (5 to 45°C | C). Humidity: 30 to 70% |
| | | Circulating fluid Note 2) | | | | glycol aqueous s | | ,, |
| | | Set temperature range Note 1) | | | 41 to 104°F | | | - |
| _ | Ī | Cooling capacity Note 3) (50/60 Hz) W | 1100/1300 | 1700/1900 | 2100/2400 | 2600/3200 | 4700/5100 | 4900/5900 |
| system | | Heating capacity Note 3) (50/60 Hz) W | | 530/650 | | 400/600 | 1000 | /1300 |
| Ծ | r | Temperature stability Note 5) | | | ±0.18°F | (±0.1°C) | | |
| Circulating fluid sy | Γ | Rated flow (50/60 Hz) Note 6) 7) gal/min [1 /min] | 1.8 (19 | osi)/1.8 (26 psi) [7 | (0.13 MPa)/7 (0. | | | 6.1 (30 psi)/7.4 (42 psi) 23 (0.21 MPa)/28 (0.29 MPa) |
| Į≢ | | Maximum flow rate (50/60 Hz) gal/min [L/min] Maximum pump head (50/60 Hz) | | 7.1/7.7 [27/29 | | 9.0/11 [34/40] | 8.2/11 [31/42] | 7.7/10 [29/38] |
| lg | ĺ | Maximum pump head (50/60 Hz) | | 46/62 ft [| 14/19 m] | | 164 ft | 50m] |
| aţį | ĺ | Output W | | | 00 | | 5 | 50 |
| ਤੁ | Г | Tank capacity | | | Approx. 1 | .3 gal [5 L] | | |
| ≝ | | Port size | Rc1/2 | | | | | |
| 0 | | Fluid contact material | Stainless steel, Copper (Heat exchanger brazing), Bronze, Alumina cera Carbon, PP, PE, POM, FKM, EPDM, PVC | | | | | mic, |
| _ | 1 | Temperature range | | | | (5 to 40°C) | | |
| water | r | Pressure range | 44 to 73 psi [0.3 to 0.5 MPa] | | | | | |
| ≱ | r | Required flow rate Note 11) (50/60 Hz) gal/mi [L/min] | 2.1 [8] | 3.2 [12] | 3.7 [14] | 4.0 [15] | 4.2 [16] | 4.5 [17] |
| <u>∻</u> | | Inlet-outlet pressure differential of facility water | | | 44 psi (0.3 N | Pa) or more | | |
| Facility | Г | Port size | | | Rc | 3/8 | | |
| l _E | Γ | Fluid contact material | St | tainless steel, Cop | per (Heat exchan | ger brazing), Bron | ze, Synthetic rub | ber |
| <u>=</u> | T | Power supply | | Sir | | 230 VAC (50/60 I ge range ±10% | Hz) | |
| <u>ا</u> ن | | Circuit protector A | | 1 | 0 | - | | 20 |
| Electrical | | Applicable earth leakage breaker capacity Note 8) A | | 1 | 0 | | 2 | 20 |
| ∣≝ | | Rated operating current A | 4.6/5.1 | 4.7/5.2 | 5.1/5.9 | 5.2/6.0 | 7.6/10 | 7.6/10.4 |
| | | Rated power consumption Note 3) (50/60 Hz) kVA | 0.9/1.0 | 0.9/1.0 | 1.0/1.2 | 1.0/1.2 | 1.5/2.0 | 1.5/2.1 |
| No | Noise level Note 9) (50/60 Hz) dB | | | 60/61 | | 62/65 | 65/68 | 66/68 |
| | | essories | Operati | wer supply cable: 0 | allation/operation) st sticker 1, Ferrite | 1, Quick Manual (v core (for communately) to be ordered | with a clear case) lication) 1 pc., d or prepared by u | 1 Note 12), ser. |
| We | ei | ght Note 10) Ib [kg] | | 95 [43] | | 101 [46] | 148 | 3 [67] |

Note 1) It should have no condensation.

Note 2) If tap water is used, use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-up water).

Note 3) ① Ambient temperature: 77°F (25°C), ② Circulating fluid temperature: 68°F (20°C), ③ Circulating fluid rated flow, 4 Circulating fluid: Tap water

Refer to the cooling capacity graph on page 13 for details.

Note 4) Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 50°F (10°C) or less.

Note 5) Outlet temperature when the circulating fluid flow is rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment and the power supply are within specification range and stable

Note 6) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 68°F (20°C).

Note 7) Required minimum flow rate for cooling capacity or maintaining the temperature stability. The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)

Note 8) Purchase an earth leakage breaker with current sensitivity of 15 mA or 30 mA separately. (A product with an optional earth leakage breaker (option B) is also available. Refer to page 23.) Note 9) Front: 3.3 ft (1 m), height: 3.3 ft (1 m), stable with no load, Other conditions \rightarrow Note 3)

Note 10) Weight in the dry state without circulating fluids

Note 11) Required flow rate when a load for the cooling capacity is applied at a circulating fluid temperature of $68^{\circ}F$ ($20^{\circ}C$), and circulating fluid rated flow and facility water temperature of $77^{\circ}F$ ($25^{\circ}C$). Note 12) It is not provided for the HRS050/060.

Note 13) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Stor age Environment" (page 42) Item 14 "* For altitude of 3281 ft (1000 m) or higher".






Cooling Capacity


Note 1) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 3281 ft (1000 m) or higher".

Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


HRS012-A-10, HRS012-W-10 (Single-phase 100/115 VAC) (50 Hz)

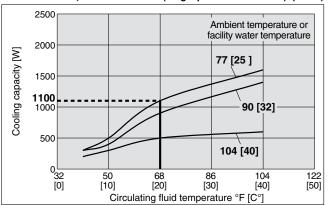


HRS018-A-10, HRS018-W-10 (Single-phase 100/115 VAC) (50 Hz)

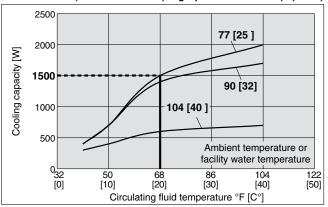


HRS012-A-20, HRS012-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

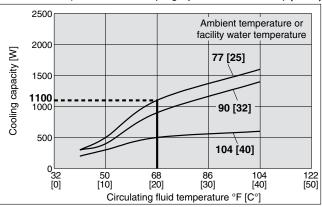


HRS018-A-20, HRS018-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

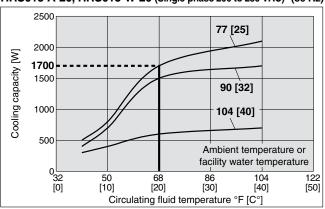


(60 Hz)

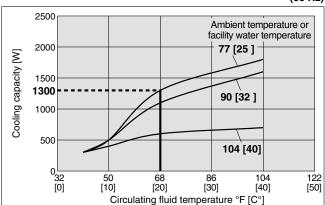


(60 Hz)

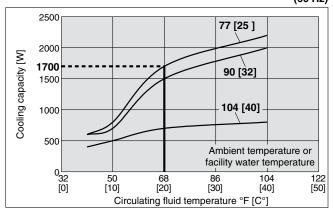

(60 Hz)

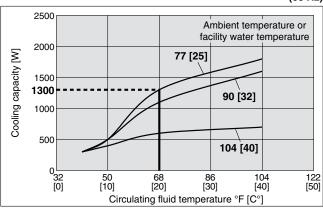

(60 Hz)

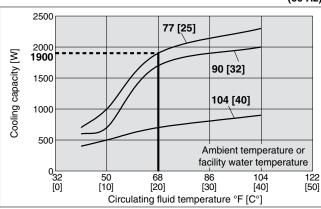


Thermo-chiller Standard Type Series

Cooling Capacity


Note 1) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 "* For altitude of 3281 ft (1000 m) or higher".

Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


HRS024-A-20, HRS024-W-20 (Single-phase 200 to 230 VAC)(50 Hz)

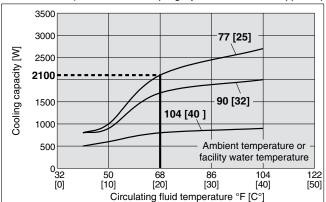


HRS030-A-20, HRS030-W-20 (Single-phase 200 to 230 VAC)(50 Hz)

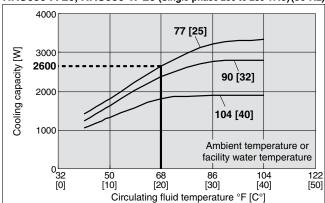


HRS050-A-20, HRS050-W-20 (Single-phase 200 to 230 VAC) (50 Hz)

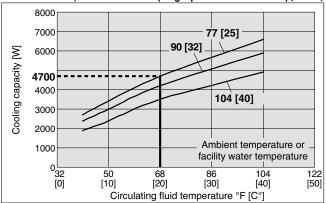


HRS060-A-20, HRS060-W-20 (Single-phase 200 to 230 VAC)(50 Hz)

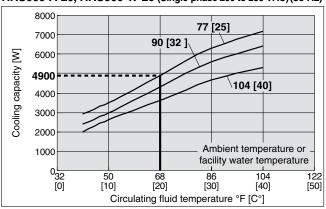


(60 Hz)

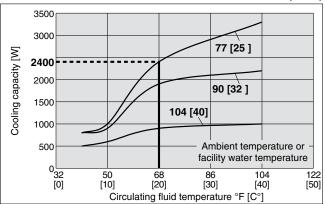


(60 Hz)

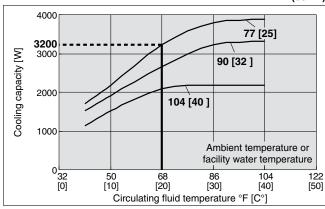

(60 Hz)

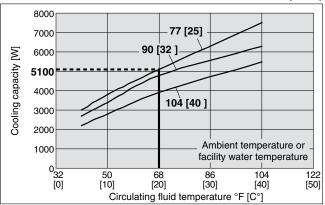


(60 Hz)

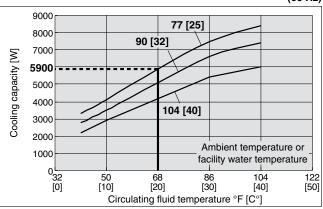


Series HRS Standard Type

Heating Capacity




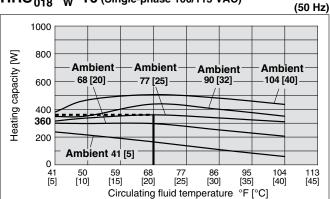




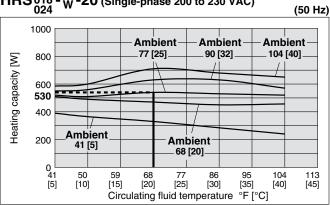


HRS030-A-20 (Single-phase 200 to 230 VAC)

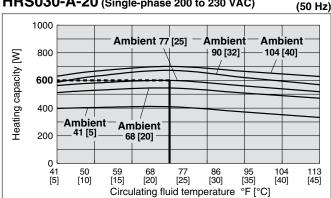



HRS030-W-20 (Single-phase 200 to 230 VAC)

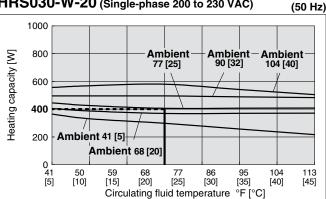

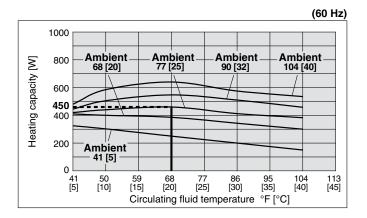

(60 Hz) 1000 Ambient 104 [40] -800 Heating capacity [W] 650 600 Ambient 400 **Ambient** Ambient – 68 [20] **Ambient** 41 [5] 77 [25] 200 0 L 41 [5] 50 [10] 59 [15] 68 [20] 77 [25] 86 [30] 95 [35] Circulating fluid temperature °F [°C]

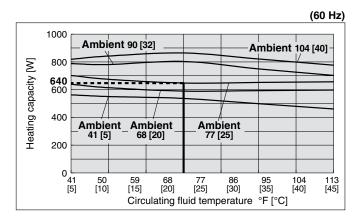

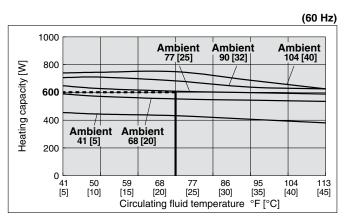





Heating Capacity

HRS050-A-20 (Single-phase 200 to 230 VAC)


(50 Hz)

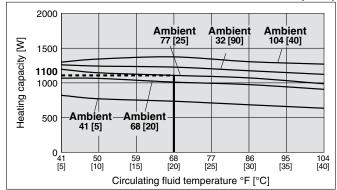


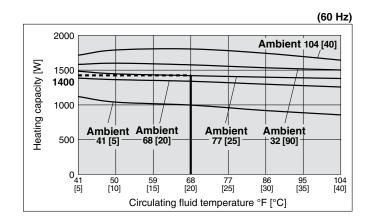

HRS050-W-20 (Single-phase 200 to 230 VAC)


(50 Hz)

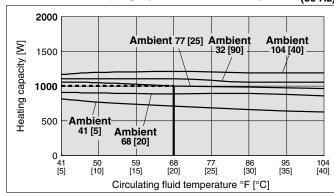


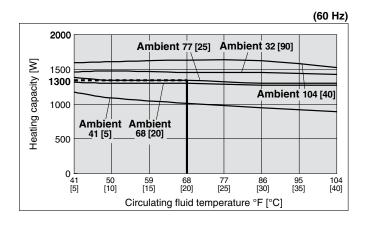

HRS060-A-20 (Single-phase 200 to 230 VAC)


(50 Hz)

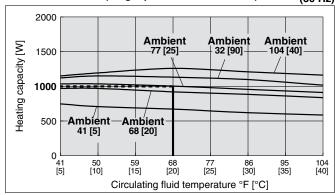


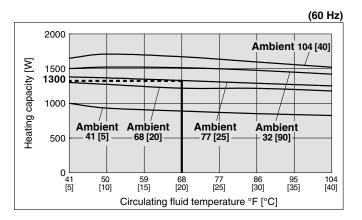

HRS060-W-20 (Single-phase 200 to 230 VAC)

(50 Hz)

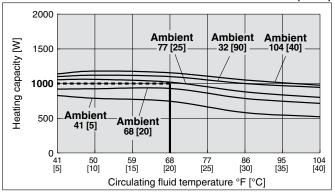


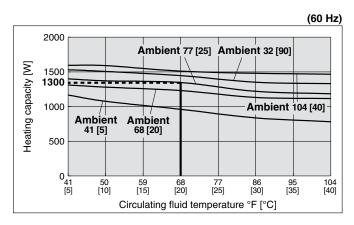


Series HRS Standard Type

Pump Capacity


HRS₀₁₈ - A -10 (Single-phase 100/115 VAC)

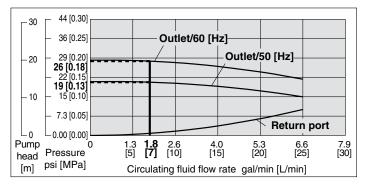

HRS030- A -20 (Single-phase 200 to 230 VAC)

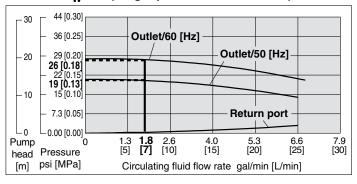


HRS060- A -20 (Single-phase 200 to 230 VAC)

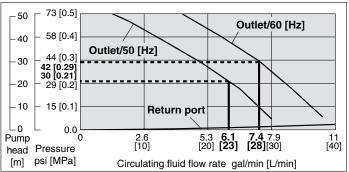


Required Facility Water Flow Rate


HRS012-W- $^{10}_{20}$, HRS018-W- $^{10}_{20}$, HRS024-W-20 HRS030-W-20, HRS050-W-20, HRS060-W-20

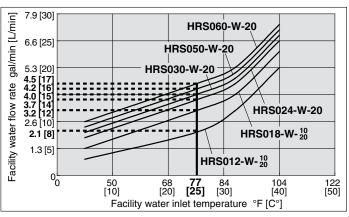

HRS $^{012}_{018}$ - $^{\rm A}_{\rm W}$ -20 (Single-phase 200 to 230 VAC)

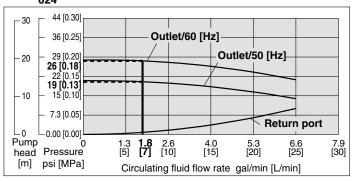

HRS050- A-20 (Single-phase 200 to 230 VAC)

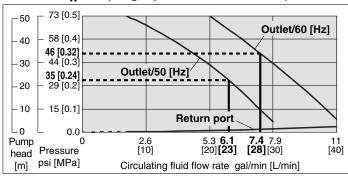


^{*} This is the facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.




Thermo-chiller Standard Type Series HRS

Dimensions in [mm]

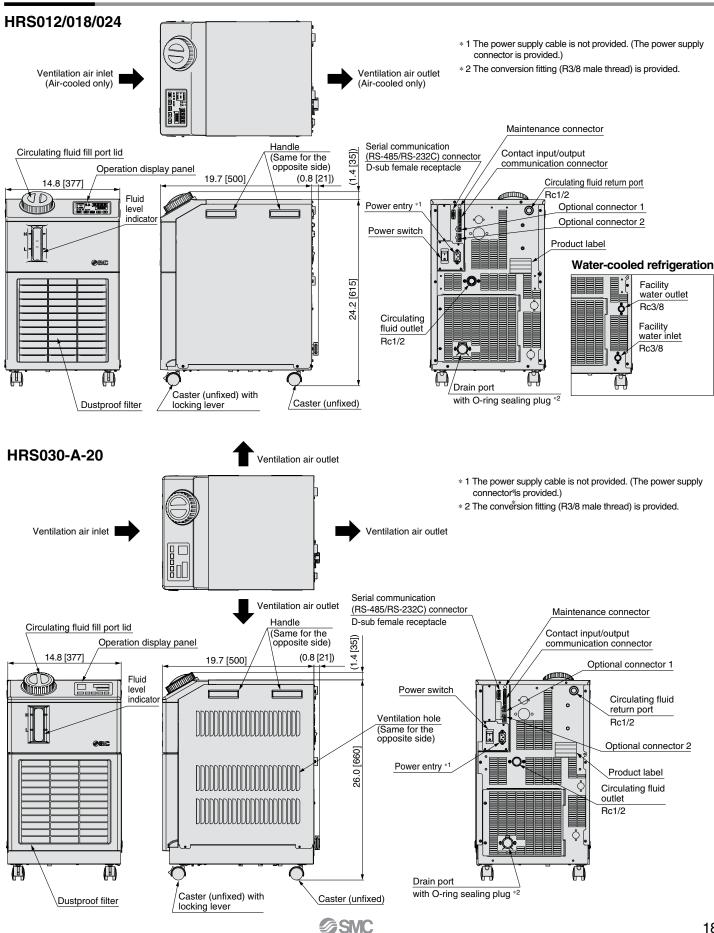


Series HRS Standard Type

Dimensions

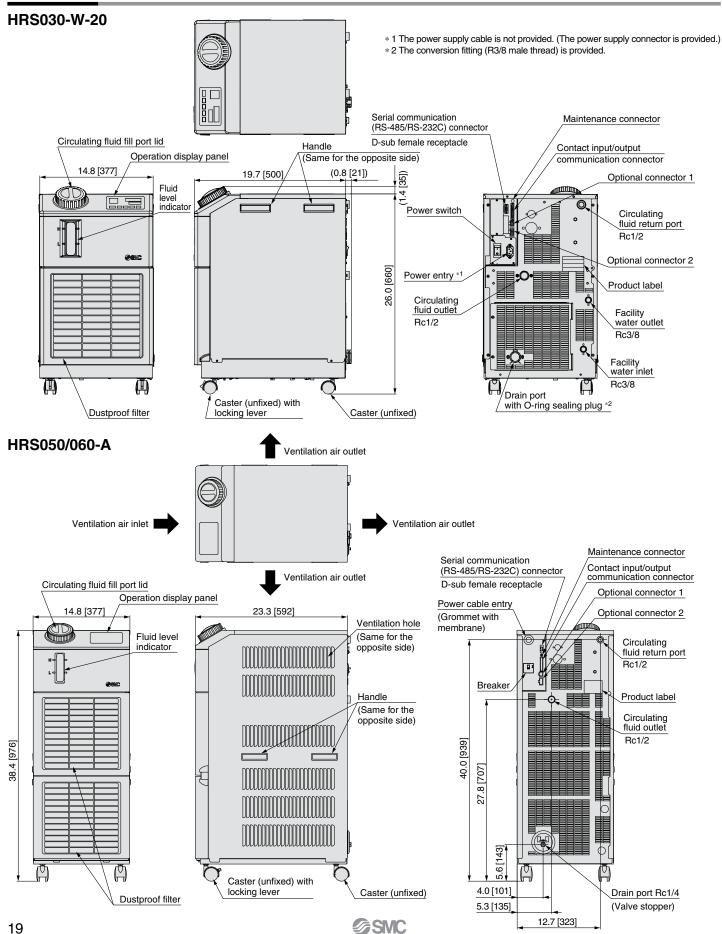

Dimensions in [mm]

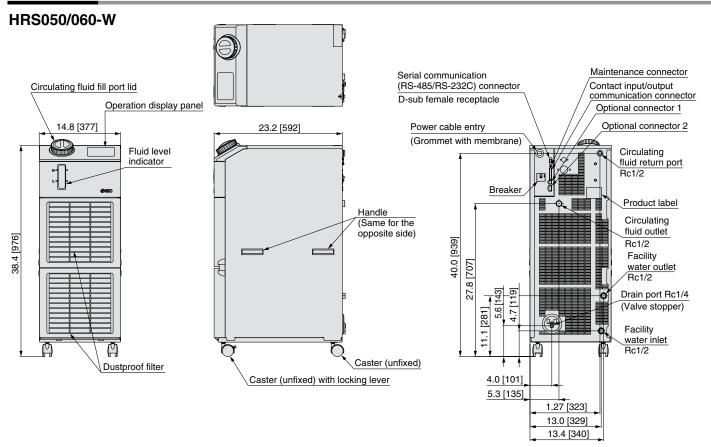

Operation Display Panel

Please download the Operation Manual via our website, http://www.smcworld.com

The basic operation of this unit is controlled through the operation display panel on the front of the product.



| No. | Description | Function | | | |
|-----|--------------------------|--|--|--|--|
| (1) | Digital display | PV Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes). | | | |
| | (7-segment and 4 digits) | SV Displays the circulating fluid discharge temperature and the set values of other menus. | | | |
| 2 | [°C] [°F] indicator | Equipped with a unit conversion function. Displays the unit of display temperature (default setting: °C). | | | |
| 3 | [MPa] [PSI] indicator | Equipped with a unit conversion function. Displays the unit of display pressure (default setting: MPa). | | | |
| 4 | [REMOTE] indicator | Enables remote operation (start and stop) by communication. Lights up during remote operation. | | | |
| 5 | [RUN] indicator | Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump. | | | |
| 6 | [ALARM] indicator | Flashes with buzzer when alarm occurs. | | | |
| 7 | [🖃] indicator | Lights up when the surface of the fluid level indicator falls below the L level. | | | |
| 8 | [4] indicator | Equipped with a timer for start and stop. Lights up when this function is operated. | | | |
| 9 | [O] indicator | Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure, is provided. Lights up when this function is operated. | | | |
| 10 | [RUN/STOP] key | UN/STOP] key Makes the product start or stop. | | | |
| 11) | [MENU] key | Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values). | | | |
| 12 | [SEL] key | Changes the item in menu and enters the set value. | | | |
| 13 | [▼] key | Decreases the set value. | | | |
| 14) | [▲] key | Increases the set value. | | | |
| 15) | [PUMP] key | Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air). | | | |
| 16 | [RESET] key | Press the [▼] and [▲] keys simultaneously. The alarm buzzer is stopped and the [ALARM] indicator is reset. | | | |

Alarm

This unit has 35 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

| Alarm code | Alarm message | Operation status |
|------------|--|------------------|
| AL01 | Low level in tank | Stop *1 |
| AL02 | High circulating fluid discharge temperature | Stop |
| AL03 | Circulating fluid discharge temperature rise | Continue *1 |
| AL04 | Circulating fluid discharge temperature drop | Continue *1 |
| AL05 | High circulating fluid return temperature (140°F [60°C]) | Stop |
| AL06 | High circulating fluid discharge pressure | Stop |
| AL07 | Abnormal pump operation | Stop |
| AL08 | Circulating fluid discharge pressure rise | Continue *1 |
| AL09 | Circulating fluid discharge pressure drop | Continue *1 |
| AL10 | High compressor intake temperature | Stop |
| AL11 | Low compressor intake temperature | Stop |
| AL12 | Low super heat temperature | Stop |
| AL13 | High compressor discharge pressure | Stop |
| AL15 | Refrigerating circuit pressure (high pressure side) drop | Stop |
| AL16 | Refrigerating circuit pressure (low pressure side) rise | Stop |
| AL17 | Refrigerating circuit pressure (low pressure side) drop | Stop |
| AL18 | Compressor overload | Stop |
| AL19 *2 | Communication error*2 | Continue *1 |

| Alarm code | Alarm message | Operation status |
|------------|--|------------------|
| AL20 | Memory error | Stop |
| AL21 | DC line fuse cut | Stop |
| AL22 | Circulating fluid discharge temperature sensor failure | Stop |
| AL23 | Circulating fluid return temperature sensor failure | Stop |
| AL24 | Compressor intake temperature sensor failure | Stop |
| AL25 | Circulating fluid discharge pressure sensor failure | Stop |
| AL26 | Compressor discharge pressure sensor failure | Stop |
| AL27 | Compressor intake pressure sensor failure | Stop |
| AL28 | Pump maintenance | Continue |
| AL29 | Fan motor maintenance 3 | Continue |
| AL30 | Compressor maintenance | Continue |
| AL31 *2 | Contact 1 input signal detection | Stop *1 |
| AL32 *2 | Contact 2 inputs signal detection | Stop *1 |
| AL33 *4 | Water leakage | Stop *1 |
| AL34 *4 | Electrical resistance rise | Continue |
| AL35 *4 | Electrical resistance drop | Continue |
| AL36 *4 | Electrical resistance sensor failure | Continue |
| | | |

- *1 "Stop" or "Continue" are default settings. Users can change them to "Continue" and "Stop". For details, refer to the Operation Manual. *2 "AL19, AL31, AL32" are disabled in the default setting. If this function is necessary, it should be set by user, referring to the Operation Manual.

- *3 For water-cooled models, the alarm is not activated.

 *4 This alarm function can be used when the option (sold separately) is used.



Communication Function


Contact Input/Output

| Item | | Specifications | | |
|---------------------------------|-------------------------|---|--|--|
| Connector type (to the product) | | MC 1,5/12-GF-3,5 | | |
| Insulation method | | Photocoupler | | |
| | Rated input voltage | 24 VDC | | |
| Input signal | Operating voltage range | 21.6 VDC to 26.4 VDC | | |
| | Rated input current | 5 mA TYP | | |
| | Input impedance | 4.7 kΩ | | |
| Contact output | Rated load voltage | 48 VAC or less/30 VDC or less | | |
| • | Maximum load current | 500 mA AC/DC (resistance load) | | |
| signal | Minimum load current | 5 VDC 10 mA | | |
| Ou | tput voltage | 24 VDC ±10% 0.5 A Max | | |
| Circ | cuit diagram | To the thermo-chiller 24 VDC (0.5 A MAX) 11 24 VCOM output 24 VCOM output 24 VCOM signal Not set when shipping from factory Operation status signal Remote signal Alarm signal Alarm signal Vser's equipment side 24 VDC output 24 VCOM output Settings at the time of shipment from the factory (Users can modify the settings.) | | |

 $[\]ast$ The pin numbers and output signals can be set by user. For details, refer to the Operation Manual.

Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out. For details, refer to the Operation Manual for communication.

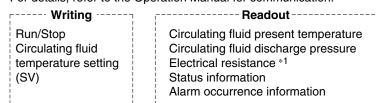

*1 When the optional accessory, "electrical resistance sensor set" is used.

| Item | Specifications | | | |
|-----------------|---|---|--|--|
| Connector type | D-sub 9-pin, Female connector | | | |
| Protocol | Modicon Modbus compliant/S | imple communication protocol | | |
| Standards | EIA standard RS-485 | EIA standard RS-232C | | |
| Circuit diagram | To the thermo-chiller User's equipment side | To the thermo-chiller User's equipment side | | |

^{*} The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual. Do not connect other than in the way shown above, as it can result in failure.



Series HRS **Options**

Note) Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.





With earth leakage breaker

In the event of a short circuit, overcurrent or overheating, the earth leakage breaker will automatically shut off the power supply.

| Applicable model | HRS012/018-□□-10-B | HRS012/018/024/030-□□-20-B | HRS050-□□-20-B HRS060-W□-20-B | HRS060-A□-20-B |
|--------------------------------|--|----------------------------|----------------------------------|----------------|
| Rated current sensitivity [mA] | 30 | 30 | 30 | 30 |
| Rated shutdown current [A] | 15 | 10 | 20 | 30 |
| Short circuit display method | t circuit display method Mechanical button | | | |





Option symbol


With Automatic Water Fill Function

With automatic water fill function

By installing this at the automatic water fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a water fill while the circulating fluid is decreasing.

| Applicable model | HRS012/018/024/030/050/060-□□-□-J |
|---------------------|--|
| Fluid fill method | Built-in solenoid valve for automatic water fill |
| Fluid fill pressure | 29 to 73 psi (0.2 to 0.5 MPa) |

^{*} When the option, with automatic water fill function, is selected, the weight increases by 2.2 lbs (1 kg).

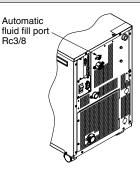

breaker



Option symbol

Applicable to DI Water (Deionized Water) Piping

HRS

Applicable to DI water (deionized water) piping

Contact material of the circulating fluid circuit is made from non-copper materials.

| Applicable model | HRS012/018/024/030/050/060-□□-□-M |
|--|--|
| Contact material for circulating fluid | Stainless steel (including heat exchanger brazing), Alumina ceramic, SiC, Carbon, PP, PE, POM, FKM, NBR, EPDM, PVC |

^{*} No change in external dimensions



Option symbol

High Pressure Pump Mounted

High pressure pump mounted

Possible to choose a high pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump.

* The HRS050/060 cannot be selected.

| | Applicable model | | HRS012/018-□□-10-T/MT | HRS012/018/024/030-□□ -20-T | HRS012/018/024/03020-MT Note 1) | |
|---------|--|--------------------|---|-----------------------------|--|--|
| | Rated flow (50/60 Hz) Note 2) 3) | gal/min [L/min] | 1.8 (52 psi)/ 2.6 (61psi) 2.6 (61 psi)/3.7 (58 psi) [7 (0.36 MPa)/10 (0.42 MPa)] [10 (0.44 MPa)/14 (0.40 MPa)] | | 2.6 (46 psi)/3.7 (46 psi) [10 (0.32 MPa)/14 (0.32 MPa)] | |
| Pump | INIAXIMUM HOW FAIR (50/60 HZ) | | | 4.8/5.8 [18/22] | | |
| Fullip | Maximum pump head (50/60 Hz) | m | 55 70 | | 60 | |
| | Output | W | 320 | 550 | | |
| Circuit | Circuit protector A | | 15 | 15 (10 A for standard) | | |
| Recomr | Recommended earth leakage breaker capacity A | | 15 | | | |
| Cooling | capacity Note 4) | W | The cooling capacity reduces about 300 W from the value in the catalog. (due to an increase in the heat generation of the pum | | | |

Note 1) -MT: Applicable to DI water (deionized water) piping + High pressure pump

Note 2) The capacity at the thermo-chiller outlet when the circulating fluid temperature is 68°F (20°C).

Note 3) Required minimum flow rate for cooling capacity or maintaining the temperature stability.


Note 4) Cooling capacity will decrease as pump power increases.

Note 5) When the option, high pressure pump mounted, is selected, the weight increases by 8.8 lbs (4 kg) for -10 type and 13 lbs (6 kg) for -20 type.


* No change in external dimensions




HRS012/018-□□-10-T/MT

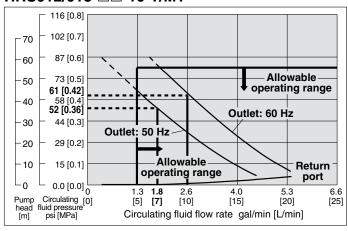


HRS012/018/024-□□-20-T

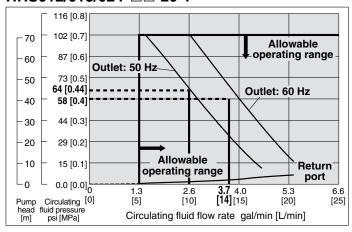


HRS030-□□-20-T

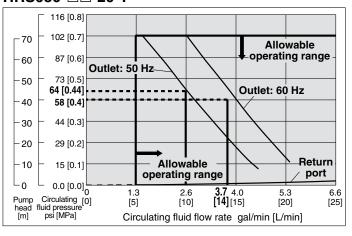

HRS012/018/024- □ □-20-MT

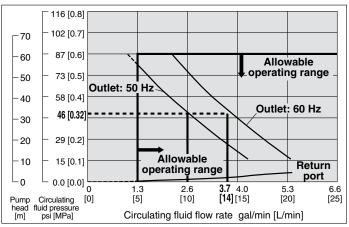

HRS030- □ □-20-MT

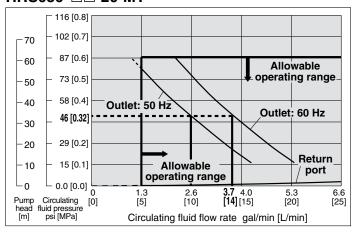

Note) Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.



High Temperature Environment Specification

HRS _____ - A __ - 20 - G


High temperature environment specification

Makes use at ambient temperatures up to 113°F (45°C) possible. Also increases cooling capacity at ambient temperature of 90°F (32°C). (Cooling capacity is equal to standard products at ambient temperatures of less than 90°F [32°C].)

| Applicable model HRS012/018/024-A□-20-G | |
|---|--|
| Cooling method Air-cooled refrigeration | |
| Power supply | Single-phase 200 to 230 VAC (50/60 Hz) |

* No change in external dimensions


* The HRS030/050/060 cannot be selected.

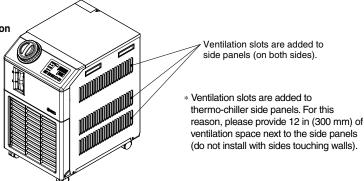



Note 1) If the product is used at altitude of 3281 ft (1000 m) or higher, refer to "Operating Environment/Storage Environment" (page 42) Item 14 " * For altitude of 3281 ft (1000 m) or higher".


Cooling Capacity


Note 2) For models with high pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

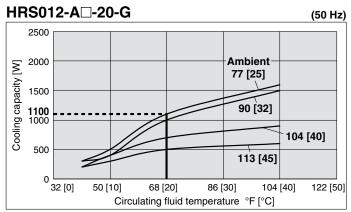


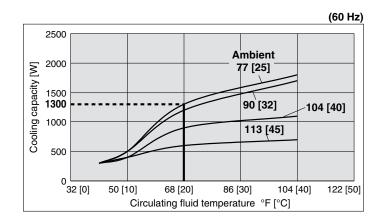

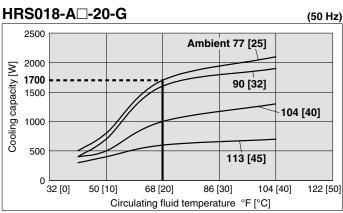

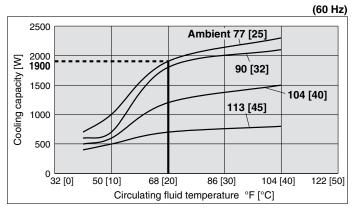

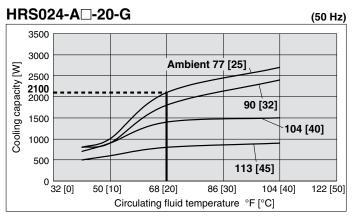

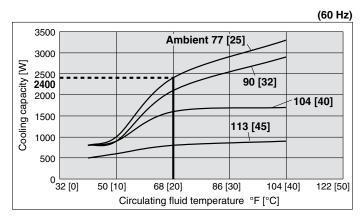

Series HRS

Optional Accessories

Applicable Model List/Air-Cooled Refrigeration

| No. | Desc | ription | Part no. | HRS012-A Part no. HRS018-A HRS060-A | | HRS060-A-20 | HRS024-A-20 | HRS030-A-20 | Option | | Page |
|------|---------------------------------------|-----------------------------------|---------------|--|-----|---------------|--------------|-------------|----------|----------|------|
| | | | | -10 | -20 | 71110000 A 20 | 111100217120 | HRS050-A-20 | (for -J) | (for -T) | |
| | Anti-quake bracket | | HRS-TK001 | • | • | • | • | _ | _ | _ | 29 |
| 1 | Anti-quake bracket | | HRS-TK002 | _ | _ | _ | _ | • | _ | _ | 23 |
| | | G thread conversion fitting set | HRS-EP001 | • | • | • | • | _ | _ | _ | |
| 2 | Piping conversion fitting | NPT thread conversion fitting set | HRS-EP002 | • | • | • | • | _ | _ | | 29 |
| ٧ | (for air-cooled refrigeration) | G thread conversion fitting set | HRS-EP009 | _ | _ | _ | _ | • | _ | _ | |
| | | NPT thread conversion fitting set | HRS-EP010 | _ | _ | _ | _ | • | _ | _ | |
| | Piping conversion fitting Note 1) | G thread conversion fitting set | HRS-EP005 | _ | _ | _ | _ | _ | • | _ | |
| | (for automatic water fill port) | NPT thread conversion fitting set | HRS-EP006 | _ | _ | _ | _ | _ | • | _ | 30 |
| 3 | Piping conversion fitting Note 2) | G thread conversion fitting set | HRS-EP007 | _ | _ | _ | _ | _ | _ | • | 30 |
| | (for drain outlet) | NPT thread conversion fitting set | HRS-EP008 | _ | _ | _ | _ | _ | _ | • | |
| 4 | Concentration meter | | HRZ-BR002 | • | • | • | • | • | • | • | 31 |
| _ | Pungga nining got | | HRS-BP001 | • | • | • | • | _ | _ | _ | 31 |
| (5) | Bypass piping set | | HRS-BP004 | _ | _ | _ | _ | • | _ | _ | 31 |
| | | For single-phase 100/115 VAC type | HRS-CA001 | • | _ | _ | _ | _ | _ | _ | |
| | Dawar aynah, aabla | For single-phase 200 VAC type | HRS-CA002 | _ | • | • | • | — Note 3) | _ | _ | |
| 6 | Power supply cable | For single-phase 100/115 VAC type | HRS-CA003 | • | _ | _ | _ | _ | _ | _ | 32 |
| | | For single-phase 200 VAC type | HRS-CA004 | _ | _ | _ | _ | Note 4) | _ | _ | |
| | Retaining clip | | HRS-S0074 | • | • | • | • | _ | _ | _ | |
| | DI files and | | HRS-DP001 | • | • | • | • | • | _ | _ | 00 |
| 7 | DI filter set | | HRS-DP002 | • | • | • | • | • | _ | _ | 33 |
| | | | HRS-DI001 | • | • | • | • | • | _ | _ | 0.4 |
| | Electrical resistance | | HRS-DI003 | • | • | • | • | • | _ | _ | |
| 8 | sensor set | With control function/bypass | HRS-DI004 | • | • | • | • | • | _ | _ | 34 |
| | | With bypass | HRS-DI005 | • | • | • | • | • | _ | _ | |
| | | With control function | HRS-PF001 | • | • | • | • | • | _ | _ | |
| | B | (#5) OUT side | HRS-PF002 | _ | _ | _ | _ | • | _ | _ | |
| 9 | Particle filter set | (#10) OUT side | HRS-PF003 | • | • | • | • | • | _ | _ | 35 |
| | | (#5) IN side | HRS-PF004 | _ | _ | _ | _ | • | _ | _ | |
| _ | | (#10) IN side | HRS-WL001 | • | • | • | • | _ | _ | _ | |
| 10 | Drain pan set | With water leakage sensor | HRS-WL002 | _ | _ | _ | _ | • | _ | _ | 36 |
| | | | HRS-BK001 | • | • | • | • | _ | _ | _ | |
| 11) | Connector cover | | HRS-BK002 | _ | _ | _ | _ | • | _ | _ | 37 |
| (12) | Analog gateway unit | | HRS-CV001 | • | • | • | • | • | _ | | |
| | Replacement type dustproof filter set | | HRS-FL001 | • | • | • | _ | _ | _ | _ | |
| 13 | Replacement type dustproof filter | | HRS-FL002 | • | • | • | _ | _ | _ | _ | 37 |
| | | | IDF-TR1000-1 | • | _ | _ | _ | | _ | _ | |
| | | | IDF-TR1000-2 | • | _ | _ | _ | | | _ | |
| | | | IDF-TR1000-3 | • | _ | _ | _ | | | _ | |
| 14) | Separately installed | | IDF-TR1000-4 | • | _ | _ | _ | — Note 3) | | _ | 38 |
| - | power transformer | | IDF-TR2000-9 | _ | • | • | • | , | | | |
| | | | IDF-TR2000-10 | _ | • | • | • | | | | |
| | | | IDF-TR2000-11 | _ | • | • | • | | | _ | |



Note 1) When option J is selected.

Note 2) When option T or the HRS050/060 is selected.

Note 3) For the $\dot{H}RS050/060$ models: To be prepared by user.

Note 4) Not applicable for the HRS060-A□-20. To be prepared by user.

Applicable Model List/Water-Cooled Refrigeration

| No. | Descr | iption | Part no. | HRS0 | | HRS024-W-20 | HRS030-W-20 | HRS050-W-20 | Opt | tion | Page |
|----------|---------------------------------------|-----------------------------------|---------------|------|-----|-------------|-------------|-------------|----------|----------|------|
| | | | | -10 | -20 | | | HRS060-W-20 | (for -J) | (for -T) | |
| (1) | Anti-quake bracket | | HRS-TK001 | • | • | • | • | _ | | _ | 29 |
| (| Anti quake bracket | | HRS-TK002 | _ | _ | _ | _ | • | | _ | 20 |
| | | G thread conversion fitting set | HRS-EP003 | • | • | • | • | _ | | _ | |
| (2) | Piping conversion fitting | NPT thread conversion fitting set | HRS-EP004 | • | • | • | • | _ | _ | _ | 30 |
| | (for water-cooled refrigeration) | G thread conversion fitting set | HRS-EP011 | _ | _ | _ | _ | • | | _ | 00 |
| | | NPT thread conversion fitting set | HRS-EP012 | _ | _ | _ | _ | • | | _ | |
| | Piping conversion fitting Note 1) | G thread conversion fitting set | HRS-EP005 | _ | _ | _ | _ | • | • | _ | |
| | (for automatic water fill port) | NPT thread conversion fitting set | HRS-EP006 | _ | _ | _ | _ | • | • | _ | 30 |
| 3 | Piping conversion fitting Note 2) | G thread conversion fitting set | HRS-EP007 | _ | _ | _ | _ | _ | | • | 00 |
| | (for drain outlet) | NPT thread conversion fitting set | HRS-EP008 | _ | _ | _ | _ | _ | _ | • | |
| 4 | Concentration meter | | HRZ-BR002 | • | • | • | • | • | • | • | 31 |
| <u> </u> | Pungga nining got | | HRS-BP001 | • | • | • | • | _ | _ | _ | 21 |
| 5 | Bypass piping set | | HRS-BP004 | _ | 1 | _ | _ | • | _ | _ | 31 |
| | | For single-phase 100/115 VAC type | HRS-CA001 | • | _ | _ | _ | _ | _ | _ | |
| | Dawan awan ka asala | For single-phase 200 VAC type | HRS-CA002 | _ | • | • | • | — Note 3) | _ | _ | |
| 6 | Power supply cable | For single-phase 100/115 VAC type | HRS-CA003 | • | _ | _ | _ | _ | _ | _ | 32 |
| | | For single-phase 200 VAC type | HRS-CA004 | _ | _ | _ | _ | Note 4) | _ | _ | |
| | Retaining clip | | HRS-S0074 | • | • | • | • | • | _ | _ | |
| | DI CII | | HRS-DP001 | • | • | • | • | • | _ | _ | |
| 7) | DI filter set | | HRS-DP002 | • | • | • | • | • | | _ | 33 |
| _ | | | HRS-DI001 | • | • | • | • | • | | | |
| <u></u> | Electrical resistance | With control function/bypass | HRS-DI003 | • | • | • | • | • | | _ | 1 |
| 8 | sensor set | With bypass | HRS-DI004 | • | • | • | • | • | T_ | _ | 34 |
| | | With control function | HRS-DI005 | • | • | • | • | • | T_ | _ | |
| _ | | (#5) OUT side | HRS-PF001 | • | • | • | • | • | | | |
| | D 11 1 1111 | (#10) OUT side | HRS-PF002 | _ | _ | _ | _ | • | _ | _ | |
| 9 | Particle filter set | (#5) IN side | HRS-PF003 | • | • | • | • | • | _ | _ | 35 |
| | | (#10) IN side | HRS-PF004 | _ | | _ | | • | | | |
| _ | | | HRS-WL001 | • | • | • | • | | | | |
| 10 | Drain pan set | With water leakage sensor | HRS-WL002 | _ | | _ | | • | | | 36 |
| | | | HRS-BK001 | • | • | • | • | _ | _ | | |
| 11) | Connector cover | | HRS-BK002 | | | _ | | • | T_ | | 37 |
| 12) | Analog gateway unit | | HRS-CV001 | • | • | • | • | • | | | |
| _ | Replacement type dustproof filter set | | _ | _ | | _ | _ | _ | | | |
| 13) | Replacement type dustproof filter | | _ | _ | | _ | _ | _ | | | _ |
| | | | IDF-TR1000-1 | • | _ | _ | _ | | _ | | |
| | | | IDF-TR1000-2 | • | | _ | _ | | | | |
| | | | IDF-TR1000-3 | • | _ | _ | _ | | | | |
| 14) | Separately installed | | IDF-TR1000-4 | • | | _ | | — Note 3) | | | 38 |
| J | power transformer | | IDF-TR2000-9 | _ | • | • | | <i>'</i> | | _ | |
| | | | IDF-TR2000-10 | | • | | • | | _ | | |
| | | | IDF-TR2000-11 | _ | • | _ | • | | _ | _ | |

Note 1) When option J is selected.

Note 2) When option T or the HRS050/060 is selected.

Note 3) For the HRS050/060 models: To be prepared by user.

Note 4) Not applicable for the HRS060-A

-20. To be prepared by user.





1 Anti-quake Bracket

in [mm]

Bracket for earthquakes. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user. (Anti-quake bracket thickness: 1.6 mm)

| | | | ın [mm] |
|---------------------|---|---------------|--------------|
| Part no. (per unit) | Applicable model | Α | В |
| HRS-TK001 | HRS012-□□-□ HRS018-□□-□ HRS024-□□-□ | 21.9 [555] | (23.2 [590]) |
| | HRS030-□□-□ | 21.5 [546] | (22.9 [581]) |
| HRS-TK002 | HRS050-□□-□ HRS060-□□-□ | 26.1 [664] | (27.5 [698]) |

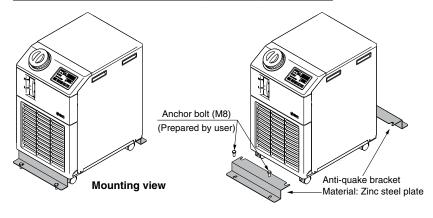

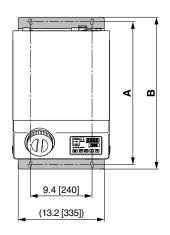

2 Piping Conversion Fitting (For Air-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet HRS012-A□-□, HRS018-A□-□, HRS024-A□-□, HRS030-A□-□

This fitting changes the port size for circulating fluid from Rc 1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


| | Applicable model | |
|-----------|---|--------------------------|
| HRS-EP001 | HRS-EP001 G thread conversion fitting set | |
| HRS-EP002 | NPT thread conversion fitting set | HRS024-A-□ HRS030-A-□ |

Protrusion when the conversion fitting for circulating fluid Material: Stainless steel Approx. 1.7 [43] Conversion fitting for circulating fluid is mounted Approx. 1.7 [43] Conversion fitting for circulating fluid Material: POM drain outlet Material: POM 1 pc.

HRS050-A□-□, HRS060-A□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

| | Applicable model | |
|-----------|-----------------------------------|------------|
| HRS-EP009 | HRS050-A-□ | |
| HRS-EP010 | NPT thread conversion fitting set | HRS060-A-□ |

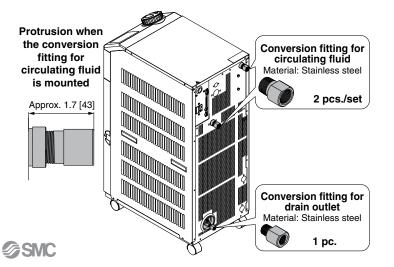

2 Piping Conversion Fitting (For Water-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for facility water + Conversion fitting for drain outlet HRS012-W□-□, HRS018-W□-□, HRS024-W□-□, HRS030-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc3/8 to G3/8 or NPT3/8.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

| | Applicable model | |
|-----------|-----------------------------------|--------------------------|
| HRS-EP003 | G thread conversion fitting set | HRS012-W-□ HRS018-W-□ |
| HRS-EP004 | NPT thread conversion fitting set | HRS024-W-□ HRS030-W-□ |

When the options, with automatic water fill function "-J", or high pressure pump mounted "-T" are selected, purchase ③ piping conversion fitting (for option), too.


HRS050-W□-□, HRS060-W□-□

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

| | Part no. | | | |
|-----------|-----------------------------------|------------|--|--|
| | G thread conversion fitting set | | | |
| HRS-EP012 | NPT thread conversion fitting set | HRS060-W-□ | | |

When the option, with automatic water fill function "-J", is selected, purchase 3 piping conversion fitting (for option), too.

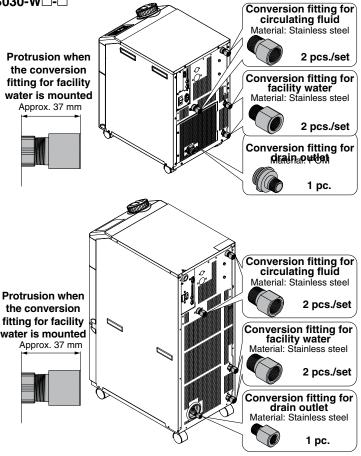

③ Piping Conversion Fitting (For Option)

■ Conversion fitting for automatic water fill port

This fitting changes the port size for the option, with automatic water fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


| | Applicable model | |
|-----------|-------------------------------|--|
| HRS-EP005 | G thread conversion fitting | HRS024-□-□-J |
| HRS-EP006 | NPT thread conversion fitting | HRS030-□-□-J HRS050-□-□-J HRS060-□-□-J |


■ Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

| Part no. | | Applicable model |
|-----------|-------------------------------|---|
| HRS-EP007 | G thread conversion fitting | HRS012-□-□-T HRS018-□-□-T HRS024-□-20-T |
| HRS-EP008 | NPT thread conversion fitting | HRS030-□-20-T HRS050-□-20 Note) HRS060-□-20 Note) |

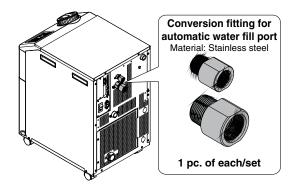

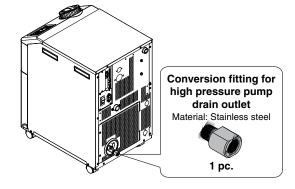




Series HRS

4 Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

| Part no. | Applicable model |
|-----------|------------------|
| HRZ-BR002 | HRS012-□□-□ |
| | HRS018-□□-□ |
| | HRS024-□□-□ |
| | HRS030-□□-□ |
| | HRS050-□□-□ |
| | HRS060-□□-□ |

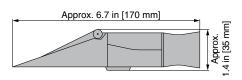

5 Bypass Piping Set

When the circulating fluid goes below the rated flow (1.8 gal/min [7 L/min] for the HRS012, 018, 024, 030 and 6.1/7.4 gal/min [23/28 L/min] for the HRS050, 060), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set. A high pressure pump is also available.

| Part no. | Applicable model |
|-----------|------------------|
| HRS-BP001 | HRS012-□□-□ |
| | HRS018-□□-□ |
| | HRS024-□□-□ |
| | HRS030-□□-□ |


Parts List

| No. | Description |
|-----|---------------------------------|
| 1 | Bypass tube (27.6 in [700 mm]) |
| | (Part no.: TL0806) |
| 2 | Outlet piping (with ball valve) |
| 3 | Return port piping |
| 4 | Nipple (Size: 1/2) (2 pcs.) |

| Part no. | Applicable model |
|-----------|------------------|
| HDC DD004 | HRS050-□□-□ |
| HRS-BP004 | HRS060-□□-□ |

Parts List

| No. | Description |
|-----|---------------------------------|
| 1 | Hose (Approx. 27.6 in [700 mm]) |
| 2 | Outlet piping (with ball valve) |
| 3 | Return port piping |
| 4 | Nipple (Size: 1/2) (2 pcs.) |
| (5) | Hose band (2 pcs.) |

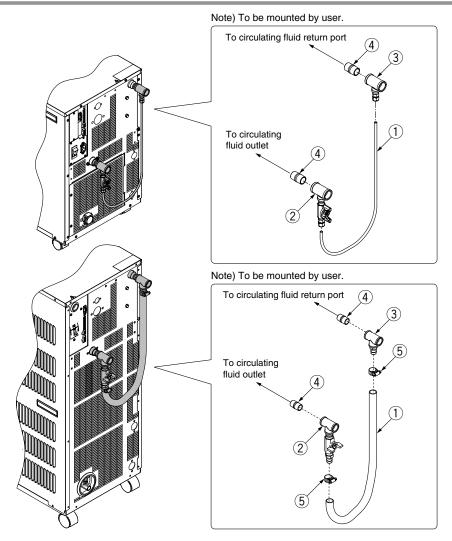

6 Power Supply Cable

■For single-phase 100/115 VAC type

* Not applicable for the 200 V type.


| Part no. | Applicable model |
|-----------|------------------------------|
| HRS-CA001 | HRS012-□□-10 HRS018-□□-10 |

* Not applicable to retaining clip.

| Part no. | Applicable model |
|-----------|------------------------------|
| HRS-CA003 | HRS012-□□-10 HRS018-□□-10 |

^{*} Applicable to retaining clip.



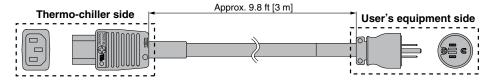

■For single-phase 200 VAC type


* Not applicable for the 100 V type.


| Part no. | Applicable model |
|-----------|------------------|
| HRS-CA002 | HRS012-□□-20 |
| | HRS018-□□-20 |
| | HRS024-□□-20 |
| | HRS030-□□-20 |

^{*} Applicable to retaining clip.

| Part no. | Applicable model |
|-----------|------------------------------|
| HRS-CA004 | HRS050-□□-20 HRS060-W□-20 |

^{*} Not available for the HRS060-A□-20. To be prepared by user.

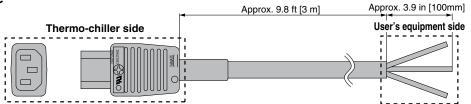


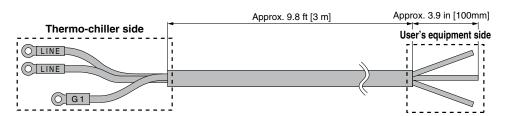

■ Retaining clip

Holds the connector on the thermo-chiller side in position.

| Part no. | Applicable power supply cable |
|-----------|--------------------------------------|
| | HRS-CA002 |
| HRS-S0074 | HRS-CA003 |
| | Power supply connector for accessory |

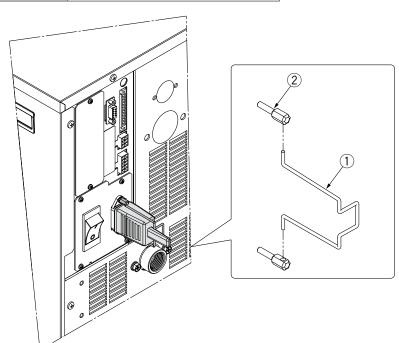

Parts List

| No. | Description |
|-----|----------------|
| 1 | Retaining clip |
| (2) | Holding screw |

^{*} Not applicable to retaining clip.


Series HRS

7 DI Filter Set

It is possible to keep electrical resistance by flowing the circulating fluid to the ion replacement resin (DI filter). The set parts are in order to install DI filter to bypass circuit and flow the fixed rate of the circulating fluid to DI filter. It is not to control the value of electrical resistance. (Replacement cartridge: HRS-DF001)

■ Stainless steel type

Suitable for locations with dusty atmospheres.

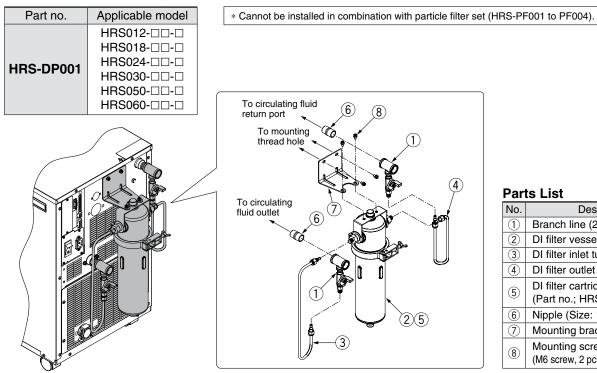


Parts List

| гаі | ai is Lisi | | | | |
|-----|---|--|--|--|--|
| No. | Description | | | | |
| 1 | Branch line (2 pcs.) | | | | |
| 2 | DI filter vessel (Stainless steel) | | | | |
| 3 | DI filter inlet tube | | | | |
| 4 | DI filter outlet tube | | | | |
| (5) | DI filter cartridge (Part no.; HRS-DF001) | | | | |
| 6 | Nipple (Size: 1/2) (2 pcs.) | | | | |
| 7 | Mounting bracket | | | | |
| 8 | Mounting screw (M6 screw, 2 pcs.) (M5 screw, 2 pcs.) | | | | |

■ Resin type

Lightweight and compact

Can be installed in combination with the HRS-PF001, PF002.

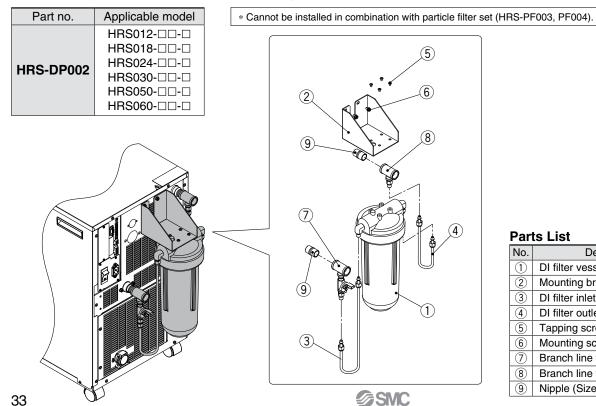

| Par | Parts List | | | | | |
|-----|-----------------------------|--|--|--|--|--|
| No. | Description | | | | | |
| 1 | DI filter vessel (Resin) | | | | | |
| 2 | Mounting bracket | | | | | |
| 3 | DI filter inlet tube | | | | | |
| 4 | DI filter outlet tube | | | | | |
| (5) | Tapping screw (4 pcs.) | | | | | |
| 6 | Mounting screw (M5, 2 pcs.) | | | | | |
| 7 | Branch line for inlet | | | | | |
| 8 | Branch line for outlet | | | | | |
| 9 | Nipple (Size: 1/2) (2 pcs.) | | | | | |

8 Electrical Resistance Sensor Set

Maintains, displays and controls electrical resistivity of the circulating fluid, DI water (deionized water). The function differs according to the model (Refer to Table 1). Refer to the Operation Manual for details.


| Part no. | Applicable model |
|-----------|------------------|
| | HRS012-□□-□ |
| HRS-DI001 | HRS018-□□-□ |
| HRS-DI003 | HRS024-□□-□ |
| HRS-DI004 | HRS030-□□-□ |
| HRS-DI005 | HRS050-□□-□ |
| | HRS060-□□-□ |

Table 1: Combination of Option and Optional Accessories

| | HRS model | Option M | | Feed- water *1 | | Electrical resistivity display *2, *3 | Electrical resistivity control | Bypass |
|----|--------------|-------------|--|-------------------|------|---------------------------------------|--------------------------------|--------|
| (| Standard | No | _ | 0 | × *4 | × | × | × |
| (2 | Standard | Yes | _ | 0 | × *5 | × | × | × |
| (| Standard | Yes | HRS-DI001 | 0 | × | 0 | × | × |
| (2 | Standard | Yes | HRS-DP001 | 0 | 0 | × | × | × |
| (į | Standard | Yes | HRS-DP001 + HRS-DI001 (DI filter set) | 0 | 0 | 0 | × | × |
| Œ | Standard | Yes | HRS-DI003 | 0 | 0 | 0 | 0 | 0 |
| (| Standard | Yes | HRS-DI004 | 0 | 0 | 0 | × | 0 |
| (8 | Standard | Yes | HRS-DI005 | 0 | 0 | 0 | 0 | × |

- *1: When only supplying or feeding DI water (deionized water) (at the start of use etc.)
- *2: Display range is 0 to 4.5 M Ω ·cm.
- *3: Readout using serial communications (RS-485/RS-232C) can be performed.
- *4: The DI water (deionized water) cannot flow continuously.
- *5: The DI water (deionized water) can flow continuously. (electrical resistance 4.5 M Ω -cm or less) However, the electrical resistance cannot be kept, displayed or controlled.


[3 Mounting example: HRS012-A-20 + HRS-DI001]

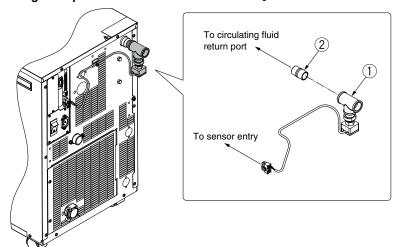

Parts List

| No. | Description | | | |
|-----|------------------------------|--|--|--|
| 1 | Electrical resistance sensor | | | |
| 2 | Nipple (Size: 1/2) (1 pc.) | | | |

[6 Mounting example: HRS012-A-20-M + HRS-DI003]

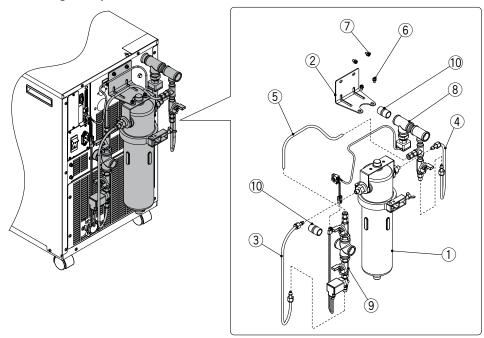


Parts List

| Par | Paris Lisi | | | | | |
|-----|------------------------------------|--|--|--|--|--|
| No. | Description | | | | | |
| 1 | DI filter vessel (Stainless steel) | | | | | |
| 2 | Mounting bracket | | | | | |
| 3 | DI filter inlet tube | | | | | |
| 4 | DI filter outlet tube | | | | | |
| (5) | Bypass tube | | | | | |
| 6 | Mounting screw (M6, 2 pcs.) | | | | | |
| 7 | Mounting screw (M5, 2 pcs.) | | | | | |
| 8 | Electrical resistance sensor | | | | | |
| 9 | Solenoid valve for control | | | | | |
| 10 | Nipple (Size: 1/2) (2 pcs.) | | | | | |

Series HRS

9 Particle Filter Set

Removes foreign objects in the circulating fluid.

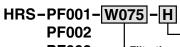

PF003 PF004

| • Filtrat | Filtration | | | | | |
|-----------|----------------------------------|--|--|--|--|--|
| Symbol | Nominal filtration accuracy [µm] | Element part no. for PF001/ PF003 (individual part) | Element part no. for PF002/ PF004 (individual part) | | | |
| Nil | Without element | _ | _ | | | |
| W005 | 5 | EJ202S-005X11 | EJ302S-005X11 | | | |
| W075 | 75 | EJ202S-075X11 | EJ302S-075X11 | | | |


Accessory

| Symbol | Accessory |
|--------|-------------|
| Nil | None |
| Н | With handle |

■ For circulating fluid outlet

| Part no. | Applicable model |
|---|----------------------------|
| | HRS012-□□-□ |
| HRS-PF001 | HRS018-□□-□ |
| / Element length \ | HRS024-□□-□ |
| L = 4.9 in | HRS030-□□-□ |
| \ [125 mm] / | HRS050-□□-□ |
| | HRS060-□□-□ |
| HRS-PF002 Element length L = 9.8 in [250 mm] | HRS050-□□-□ HRS060-□□-□ |



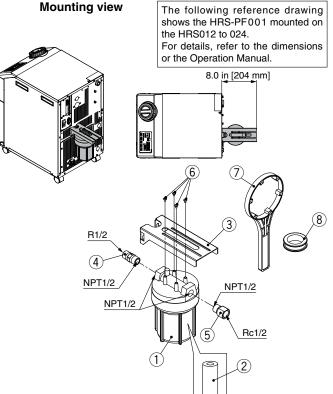


■ For circulating fluid return port


| Part no. | Applicable model |
|--|----------------------------|
| | HRS012-□□-□ |
| HRS-PF003 | HRS018-□□-□ |
| / Element length \ | HRS024-□□-□ |
| L = 4.9 in | HRS030-□□-□ |
| \ [125 mm] / | HRS050-□□-□ |
| | HRS060-□□-□ |
| HRS-PF004 (Element length L = 9.8 in [250 mm] | HRS050-□□-□ HRS060-□□-□ |

Mounting view

The following reference drawing shows the HRS-PF004 mounted on the HRS050/060.

For details, refer to the dimensions or the Operation Manual.

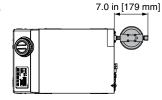

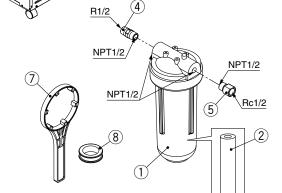


| P | aı | ts | L | ist |
|---|----|----|---|-----|
| | | | | |

| No. | Model | Description | Material | Qty. | Note | | |
|-----|---------------|---------------------------------------|------------------|------|---------------------------|--|-------------------|
| 1 | _ | Body | PP | 1 | _ | | |
| | EJ202S-005X11 | Element (Length L = 4.9 in [125 mm]) | 4.0 in [105 mm]) | | 1 Ear L | | For HRS-PF001/003 |
| 2 | EJ202S-075X11 | Liement (Length L = 4.9 [125 | PP/PE | 1 | FOI HRS-PF001/003 | | |
| | EJ302S-005X11 | Element (Length L = 9.8 in [250 mm]) | FF/FL | 1 | For HRS-PF002/004 | | |
| | EJ302S-075X11 | Liement (Length L = 9.8 in [250 min]) | | 1 | 1 01 11113-1 1 002/004 | | |
| 3 | _ | Particle filter bracket | SGCC | 1 | For HRS-PF001/002 | | |
| 4 | - | Nipple | Stainless steel | 1 | Conversion from R to NPT | | |
| 5 | _ | Extension piece | Stainless steel | 1 | Conversion from NPT to Rc | | |
| 6 | _ | Tapping screw | _ | 4 | _ | | |
| 7 | <u> </u> | Handle | _ | 1 | When -H is selected | | |
| (8) | <u> </u> | Sealant tape | PTFE | 1 | _ | | |


10 Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Anchor bolt (M8) suitable for the flooring material should be prepared separately by user.

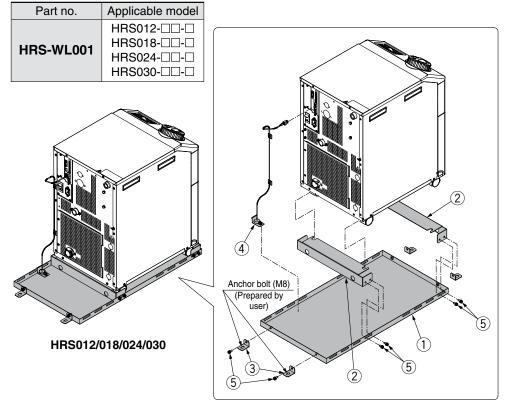

Parts List

| гаі | ai is Lisi | | | | | |
|-----|--|--|--|--|--|--|
| No. | Description | | | | | |
| 1 | Drain pan | | | | | |
| 2 | Thermo-chiller fixing bracket (2 pcs.) | | | | | |
| 3 | Drain pan fixing bracket (4 pcs.) | | | | | |
| 4 | Water leakage sensor | | | | | |
| (5) | Bracket fixing screw (M6 screw, 12 pcs.) | | | | | |

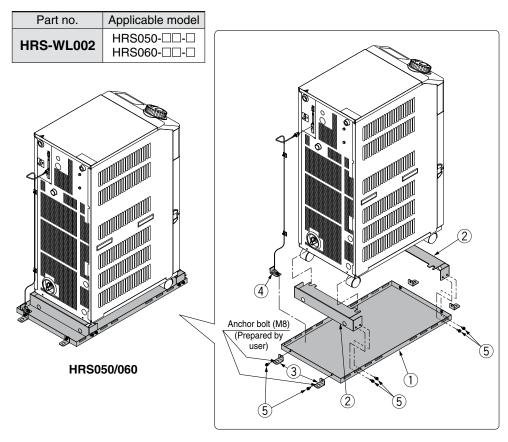

Parts List


| u | to List | | | | | |
|-----|--|--|--|--|--|--|
| No. | Description | | | | | |
| 1 | Drain pan | | | | | |
| 2 | Thermo-chiller fixing bracket (2 pcs.) | | | | | |
| 3 | Drain pan fixing bracket (4 pcs.) | | | | | |
| 4 | Water leakage sensor | | | | | |
| (5) | Bracket fixing screw (M6 screw, 12 pcs.) | | | | | |

Series HRS

11) Connector Cover

Protects the connector on the rear side.

| Part no. | Applicable model |
|------------|----------------------------|
| HRS-BK001 | HRS012-□□-□ HRS018-□□-□ |
| nno-bruu i | HRS024-□□-□ HRS030-□□-□ |

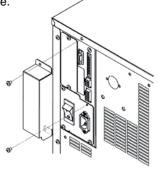

| Part no. | Applicable model | |
|-----------|----------------------------|--|
| HRS-BK002 | HRS050-□□-□ HRS060-□□-□ | |
| | ø | |

12 Analog Gateway Unit

This is an expansion unit for adding analog communication functions.

"Analog communication, contact input/output" functions can be used.

Analog communication

The set circulating fluid temperature can be changed by entering the analog voltage.

Converts the current circulating fluid temperature and current electrical resistance value (*1) to an analog voltage for output.

*1: Displayed when optional "Electrical resistance sensor set/HRS-DI001, DI003, DI004 and DI005" are used.

Contact input/output

The Run/Stop of the thermo-chiller HRS series can be operated by a contact signal.


The contact signal of the operation status, alarm occurrence status and the TEMP READY status can also be output.

| Part no. | Applicable model | |
|-----------|------------------|--|
| | HRS012-□□-□ | |
| | HRS018-□□-□ | |
| HRS-CV001 | HRS024-□□-□ | |
| nno-cvuui | HRS030-□□-□ | |
| | HRS050-□□-□ | |
| | HRS060-□□-□ | |

Parts List

| ı aı | i di la Lial | | | | | |
|------|-----------------------------|--|--|--|--|--|
| No. | Description | | | | | |
| 1 | Analog gateway box | | | | | |
| 2 | Connection cable | | | | | |
| 3 | Mounting bracket | | | | | |
| 4 | Mounting screw (M3, 2 pcs.) | | | | | |

When this product is used, the "contact input/output" and "serial communication" functions standardly equipped in the thermo-chiller HRS series cannot be used.

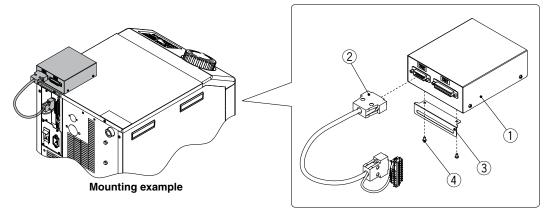


13 Replacement Type Dustproof Filter Set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

| Part no. | Applicable model |
|-----------|------------------|
| | HRS012-A□-□ |
| HRS-FL001 | HRS018-A□-□ |
| | HRS024-A□-□ |

Parts List

| No. | Description | Part no. | Note |
|-----|---------------------------------------|-----------|---|
| 1 | Replacement type dustproof filter set | HRS-FL001 | Front panel with hook-and-loop fastener for holding filter 5 filters are included. (No dustproof net is included.) |
| 2 | Replacement type dustproof filter | HRS-FL002 | 5 filters per set Size: 11.8 x 14.5 in [300 x 370 mm] |

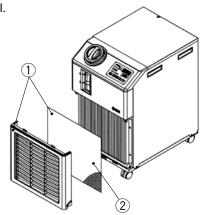



(14) Separately Installed Power Transformer


in [mm]


Specifications

| Dort no | Part no. Applicable model Volume | | T | Inlet voltage | | Outlet voltage | | | |
|---------------|---|-------------|------------------|-------------------|---|----------------|--------------|--|--|
| Part no. | | | Type | 50 Hz | 60 Hz | 50 Hz | 60 Hz | | |
| IDF-TR1000-1 | | | | | | 110 VAC | 120 VAC | | |
| IDF-TR1000-2 | HRS012-□-10 HRS018-□-10 | 1 kVA | Single- phase | 240 VAC | 240 to 260 VAC | 100 VAC | 100, 110 VAC | | |
| IDF-TR1000-3 | | | | 380, 400, 415 VAC | 380 to 420 VAC | | | | |
| IDF-TR1000-4 | | | | 420, 440, 480 VAC | 420 to 520 VAC | | | | |
| IDF-TR2000-9 | HRS012-□-20 HRS018-□-20 HRS024-□-20 | | | _ | 240 VAC | | | | |
| IDF-TR2000-10 | | 2 kVA | | 380, 400, 415 VAC | 380 to 400, 400 to 415, 415 to 440 VAC | 200 VAC | 200, 220 VAC | | |
| IDF-TR2000-11 | HRS030-□-20 | HRS030-□-20 | | 440, 460 VAC | 440 to 460, 460 to 500 VAC | | | | |

^{*} For the HRS050/060 models: To be prepared by user.

IDF-TR1000-1

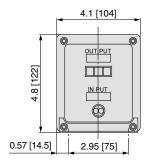

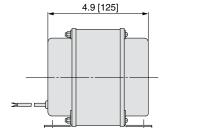


4.5 [114]

5.3 [134]


0.4 [10]


0.55 [14] 3.54 [90] 0.55 [14]

IDF-TR1000-2

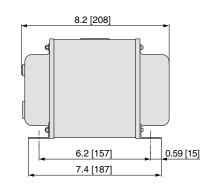


IDF-TR1000-3, 4

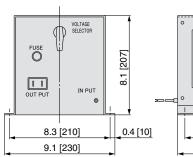


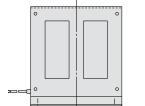


6.3 [160]


7.5 [190]

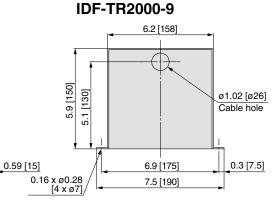

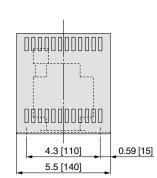

IDF-TR2000-10, 11

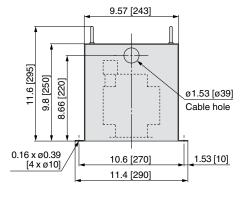

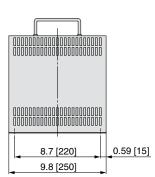

Series HRS

Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of

1 Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

$$Q = P = 1000 [W]$$

Cooling capacity = Considering a safety factor of 20%,

2 Derive the heat generation amount from the power supply output.


Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

$$= 1.0 [kVA] \times 0.85 = 0.85 [kW] = 850 [W]$$

Cooling capacity = Considering a safety factor of 20%,

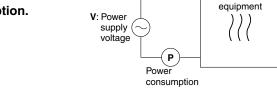

I: Current

Q: Heat generation amount

User's

3 Derive the heat generation amount from the output.

Output (shaft power etc.) W: 800 [W]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

$$=\frac{800}{0.7}=1143$$
 [W]

Cooling capacity = Considering a safety factor of 20%,

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment **Q**: Unknown [W] ([J/s]) Circulating fluid : Tap water* Circulating fluid mass flow rate qm : $(= \rho \times q_v \div 60) [kg/s]$ Circulating fluid density p : 1 [kg/dm³] Circulating fluid (volume) flow rate av : 10 [dm³/min] : $4.2 \times 10^3 \text{ [J/(kg·K)]}$ Circulating fluid specific heat C Circulating fluid outlet temperature T1 : 293 [K] (20 [°C]) Circulating fluid return temperature T2 : 295 [K] (22 [°C]) Circulating fluid temperature difference ΔT $: 2.0 [K] (= T_2 - T_1)$

Conversion factor: minutes to seconds (SI units): 60 [s/min]


* Refer to page 40 for the typical physical property value of tap water or other circulating fluids.

$$Q = q_m \times C \times (T_2 - T_1)$$

$$= \frac{\rho \times q_{V} \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^{3} \times 2.0}{60}$$

= 1400 [J/s] ≈ 1400 [W]

Cooling capacity = Considering a safety factor of 20%,

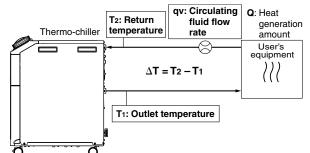

Example of conventional measurement units (Reference) Heat generation amount by user's equipment **Q**: Unknown [cal/h] \rightarrow [W] Circulating fluid : Tap water*

Circulating fluid weight flow rate am : $(= \rho \times q_v \times 60) [kgf/h]$

Circulating fluid weight volume ratio γ : 1 [kgf/L]

: 10 [L/min] Circulating fluid (volume) flow rate qv

: 1.0 x 10³ [cal/(kgf·°C)] Circulating fluid specific heat C

Circulating fluid outlet temperature T1 : 20 [°C] : 22 [°C] Circulating fluid return temperature T2

Circulating fluid temperature difference ΔT : 2.0 [°C] (= T₂ - T₁)

Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{q_m \times C \times (T_2 - T_1)}{860}$$
$$= \frac{\gamma \times q_v \times 60 \times C \times \Delta T}{}$$

$$= \frac{\gamma \times q_V \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 10 \times 60 \times 1.0 \times 10^3 \times 2.0}{960}$$

≈ 1400 [W]

Cooling capacity = Considering a safety factor of 20%,

^{*} The above examples calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) $\textbf{Q}\colon Unknown~[W]~([J/s])$

Cooled substance : Water

Cooled substance total volume V : 20 [dm 3] Cooled substance specific heat C : 4.2×10^3 [J/(kg·K)]


Cooled substance temperature when cooling begins To: 305 [K] (32 [°C]) Cooled substance temperature after t hour Tt : 293 [K] (20 [°C])

Cooling temperature difference ΔT : 12 [K] (= $T_0 - T_t$) : 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$
$$= \frac{1 \times 20 \times 4.2 \times 10^3 \times 12}{900} = 1120 \text{ [J/s]} \approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

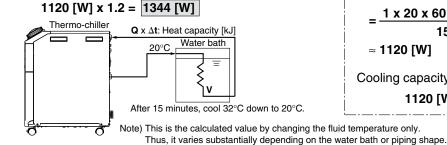

Example of conventional measurement units (Reference)

Heat quantity by cooled substance (per unit time) \mathbf{Q} : Unknown [cal/h] \rightarrow [W]

Cooled substance : Water

Cooled substance weight **m** : $(= \rho \times V)$ [kgf] Cooled substance weight volume ratio γ : 1 [kgf/L] Cooled substance total volume **V** : 20 [L]

Cooled substance specific heat **C** : 1.0 x 10³ [cal/(kgf·°C)]

Cooled substance temperature when

cooling begins T_0 : 32 [°C] Cooled substance temperature after t hour T_t : 20 [°C]

Cooling temperature difference ΔT : 12 [°C] (= $T_0 - T_t$)

Cooling time Δt : 15 [min] Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^{3} \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20%,

1120 [W] x 1.2 = 1344 [W]

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity.

Density per 1 [kg/L] (or, using conventional unit system, weight volume ratio $\gamma = 1$ [kg/L]) Specific heat c: 4.19 x 10³ [J/(kg·K)] (or, using conventional unit system, 1 x 10³ [cal/(kgf °C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. 15% Ethylene Glycol Aqueous Solution

| Physical property value | Density ρ | Specific heat C | C Conventional unit system | | |
|-------------------------|------------------|------------------------|--------------------------------------|--------------------------------|--|
| Temperature | [kg/L] | [J/(kg·K)] | Weight volume ratio γ [kgf/L] | Specific heat C [cal/(kgf.°C)] | |
| 41°F [5°C] | 1.00 | 4.2 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 50 [10] | 1.00 | 4.19 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 60 [15] | 1.00 | 4.19 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 68 [20] | 1.00 | 4.18 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 77 [25] | 1.00 | 4.18 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 86 [30] | 1.00 | 4.18 x 10 ³ | 1.00 | 1 x 10 ³ | |
| 95 [35] | 0.99 | 4.18 x 10 ³ | 0.99 | 1 x 10 ³ | |
| 104 [40] | 0.99 | 4.18 x 10 ³ | 0.99 | 1 x 10 ³ | |

| 10 /0 Emylone dryes. / iqueeus estation | | | | | | |
|---|---|------------------------|-------------------------------|--------------------------------|--|--|
| Physical property | Physical property value Density ρ Specific heat C [kg/L] [J/(kg·K)] | | Conventional unit system | | | |
| Temperature | | | Weight volume ratio γ [kgf/L] | Specific heat C [cal/(kgf.°C)] | | |
| 41°F [5°C] | 1.02 | 3.91 x 10 ³ | 1.02 | 0.93 x 10 ³ | | |
| 50 [10] | 1.02 | 3.91 x 10 ³ | 1.02 | 0.93 x 10 ³ | | |
| 60 [15] | 1.02 | 3.91 x 10 ³ | 1.02 | 0.93 x 10 ³ | | |
| 68 [20] | 1.01 | 3.91 x 10 ³ | 1.01 | 0.93 x 10 ³ | | |
| 77 [25] | 1.01 | 3.91 x 10 ³ | 1.01 | 0.93 x 10 ³ | | |
| 86 [30] | 1.01 | 3.91 x 10 ³ | 1.01 | 0.94 x 10 ³ | | |
| 95 [35] | 1.01 | 3.91 x 10 ³ | 1.01 | 0.94 x 10 ³ | | |
| 104 [40] | 1.01 | 3.92 x 10 ³ | 1.01 | 0.94 x 10 ³ | | |

Note) The above shown are reference values. Contact circulating fluid supplier for details.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Design

- 1. This catalog shows the specifications of a single unit.
 - Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
 - 2) Although the protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating condition. Also, the user is requested to carry out the safety design for the whole system.
- 2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks, and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for fluid contact parts of circulating fluid.

Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Provide protection against corrosion when you use the product.

Selection

⚠ Warning

1. Model selection

For selecting a model of thermo-chiller, it is required to know the heat generation amount of the user's equipment. Obtain the heat generation amount, referring to "Cooling Capacity Calculation" on pages 39 and 40 before selecting a model.

Handling

⚠ Warning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

Transportation/Carriage/Movement

⚠ Warning


- This product is heavy. Pay attention to safety and position of the product when it is transported, carried and moved.
- 2. Read the Operation Manual carefully to move the product after unpacking.

Transportation/Carriage/Movement

∧ Caution

 Never put the product down sideway as this may cause failure.

The product will be delivered in the packaging shown below.

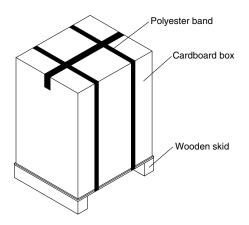

| Model | Weight lb [kg]Note) | Dimensions in [mm] | |
|--|---------------------|---|--|
| HRS012-□□-10 HRS018-□□-10 | 108 [49] | Height 31.1 x Width 18.5 x Depth 22.8 [Height 790 x Width 470 x Depth 580] | |
| HRS012-□□-20 HRS018-□□-20 HRS024-□□-20 | 115 [52] | Height 31.1 x Width 18.5 x Depth 22.8 [Height 790 x Width 470 x Depth 580] | |
| HRS030-A□-20 | 123 [56] | Height 32.7 x Width 18.5 x Depth 22.8 | |
| HRS030-W□-20 | 121 [55] | [Height 830 x Width 470 x Depth 580] | |
| HRS050-A□-20 | 176 [80] | | |
| HRS050-W□-20 | 172 [78] | Height 45.7 x Width 17.7 x Depth 26.4 | |
| HRS060-A□-20 | 185 [84] | [Height 1160 x Width 450 x Depth 670] | |
| HRS060-W□-20 | 172 [78] | | |

Note) For models with an option, the weights are increased as below

| Note) For models with all option, the weights are increased as below. | | | | | |
|---|---|-----------------|--|--|--|
| Option symbol | ption symbol Description | | | | |
| -B | With earth leakage breaker | No addition | | | |
| -J | -J With automatic water fill function +4.4 -M Applicable to deionized water piping No. | | | | |
| -M | | | | | |
| -Т | High pressure pump mounted (100 V type) | +8.8 lb [4 kg] | | | |
| -1 | High pressure pump mounted (200 V type) | +13.2 lb [6 kg] | | | |
| -G | -G High temperature environment specification | | | | |





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Operating Environment/Storage Environment

⚠ Warning

- Do not use in the following environment as it will lead to a breakdown.
 - 1) Outdoors
 - In locations where water, water vapor, salt water, and oil may splash on the product.
 - 3) In locations where there are dust and particles.
 - 4) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)
 - In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: 32 to 122°F [0 to 50°C] (But as long as water or circulating fluid are not left inside the pipings)

During operation: 41 to 104°F [5 to 40°C] (When option G, high temperature environment specification, is selected: 41 to 113°F [5 to 45°C])

In locations where the ambient humidity is out of the following range or where condensation occurs.

During transportation/storage: 15 to 85%

During operation:30 to 70%

- 7) In locations which receive direct sunlight or radiated heat.
- 8) In locations where there is a heat source nearby and the ventilation is poor.
- 9) In locations where temperature substantially changes.
- In locations where strong magnetic noise occurs. (In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 12) In locations where high frequency occurs.
- 13) In locations where damage is likely to occur due to lightning.
- In locations at altitude of 9842 ft [3000 m] or higher (Except during storage and transportation)
- * For altitude of 3281ft [1000 m] or higher

Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at altitude of 3281 ft [1000 m] or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

| Altitude ft [m] | 104°F [40°C] products 113°F [45°C] products 113°F | | ②Cooling capacity coefficient |
|-----------------------|---|----------|-------------------------------------|
| Less than 3281 [1000] | 104 [40] | 113 [45] | 1.00 |
| Less than 4921 [1500] | 100 [38] | 108 [42] | 0.85 |
| Less than 6562 [2000] | 97 [36] | 100 [38] | 0.80 |
| Less than 2500 [8202] | 93 [34] | 95 [35] | 0.75 |
| Less than 3000 [9842] | 90 [32] | 90 [32] | 0.70 |

- 15) In locations where strong impacts or vibrations occur.
- 16) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 17) In locations where there is not sufficient space for maintenance.

⚠ Warning

Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalog, which will activate the safety detector and stop the operation.

In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

The product is not designed for clean room usage. It generates particles internally.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Mounting/Installation

⚠ Warning

- 1. Do not use the product outdoors.
- Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

- Install on a rigid floor which can withstand this product's weight.
- 2. When installing without the casters, use the adjuster feet etc. to raise the chiller to the following heights or more.

This product cannot be directly installed on the floor as some screws come out from the bottom of the product.

- HRS012 to 030 10 mm
- HRS050/060 15 mm

Piping

⚠ Caution

 Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation. Also, using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid and facility water circuits. Provide protection against corrosion when you use the product.

2. Select the piping port size which can exceed the rated flow.

For the rated flow, refer to the pump capacity table.

- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 5. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring

∧ Warning

1. Grounding should never be connected to a water line, gas line or lightning rod.

⚠ Caution


1. Communication cable should be prepared by user.

Electrical Wiring

⚠ Caution

2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 $\mu sec.$, it may result in malfunction.

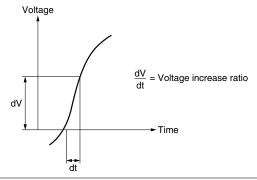

Circulating Fluid

- 1. Avoid oil or other foreign objects entering the circulating fluid.
- 2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

| | | | | | Influence | |
|----------------|--|--|---|-----------|------------------|--|
| | Item | Unit | Standard value | Corrosion | Scale generation | |
| | pH (at 77°F [25°C]) | _ | 6.0 to 8.0 | 0 | | |
| ے | Electric conductivity (25°C) | [µS/cm] | 100* to 300* | 0 | | |
| <u>i</u> ë | Chloride ion (Cl ⁻) | [mg/L] | 50 or less | 0 | | |
| Standard item | Sulfuric acid ion (SO ₄ ²⁻) | [mg/L] | 50 or less | 0 | | |
| g | Acid consumption amount (at pH4.8) | [mg/L] | 50 or less | | | |
| tar | Total hardness | [mg/L] | 70 or less | | | |
| S | Calcium hardness (CaCO ₃) | [mg/L] | 50 or less | | | |
| | Ionic state silica (SiO ₂) | [mg/L] | 30 or less | | | |
| E | Iron (Fe) | [mg/L] | 0.3 or less | 0 | 0 | |
| | Copper (Cu) | [mg/L] | 0.1 or less | 0 | | |
| Se | Sulfide ion (S ₂ -) | [mg/L] | Should not be detected. | 0 | | |
| l e | Ammonium ion (NH ₄ +) | [mg/L] | 0.1 or less | 0 | | |
|] Je | Residual chlorine (CI) | [mg/L] | 0.3 or less | 0 | | |
| ď | Free carbon (CO ₂) | [mg/L] | 4.0 or less | 0 | | |
| Reference item | Copper (Cu) Sulfide ion (S ₂ -) Ammonium ion (NH ₄ +) Residual chlorine (Cl) | [mg/L] [mg/L] [mg/L] [mg/L] [mg/L] | 0.1 or less Should not be detected. 0.1 or less 0.3 or less 4.0 or less | 0 | 0 | |

- * In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- When using ethylene glycol aqueous solution, maintain a maximum concentration of 15%.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 50°F [10°C] or lower and cause the thermo-chiller to break down.

A magnet pump is used as a circulating pump for circulating fluid.

It is particularly impossible to use liquid including metallic powder such as iron powder.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Facility Water Supply

⚠ Warning

<Water-cooled refrigeration>

 The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.

Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

■ Required facility water system

<Heat radiation amount/Facility water specifications>

| Model | Heat radiation | Facility water specifications |
|--------------|----------------|--|
| HRS012-W□-□ | Approx. 2 | |
| HRS018-W□-□ | Approx. 4 | |
| HRS024-W□-20 | Approx. 5 | Refer to |
| HRS030-W□-20 | Approx. 6 | "Facility water system" in the specifications. |
| HRS050-W□-20 | Approx. 10 | |
| HRS060-W□-20 | Approx. 12 | |

2. When using tap water as facility water, use water that conforms to the appropriate water quality standards.

Use water that conforms to the standards shown below.

<Tap Water (as Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

| | _ | - | Influ | | |
|-----------|--|---------|-------------------------|-----------|------------------|
| | Item | Unit | Standard value | Corrosion | Scale generation |
| | pH (at 77°F [25°C]) | _ | 6.5 to 8.2 | 0 | 0 |
| _ | Electric conductivity (25°C) | [µS/cm] | 100* to 800* | 0 | 0 |
| item | Chloride ion (CI-) | [mg/L] | 200 or less | 0 | |
| | Sulfuric acid ion (SO ₄ ²⁻) | [mg/L] | 200 or less | 0 | |
| g | Acid consumption amount (at pH4.8) | [mg/L] | 100 or less | | 0 |
| Standard | Total hardness | [mg/L] | 200 or less | | 0 |
| 0 | Calcium hardness (CaCO ₃) | [mg/L] | 150 or less | | 0 |
| | Ionic state silica (SiO ₂) | [mg/L] | 50 or less | | 0 |
| E | Iron (Fe) | [mg/L] | 1.0 or less | 0 | 0 |
| item | Copper (Cu) | [mg/L] | 0.3 or less | 0 | |
| e e | Sulfide ion (S ₂ -) | [mg/L] | Should not be detected. | 0 | |
| Reference | Ammonium ion (NH ₄ +) | [mg/L] | 1.0 or less | 0 | |
| efe | Residual chlorine (CI) | [mg/L] | 0.3 or less | 0 | |
| Œ | Free carbon (CO ₂) | [mg/L] | 4.0 or less | 0 | |

- * In the case of [M Ω ·cm], it will be 0.001 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Supply pressure of 73 psi [0.5 MPa] or less.

If the supply pressure is high, it will cause water leakage.

4. Be sure to prepare your utilities so that the pressure of the thermo-chiller facility water outlet is at 0 psi [0 MPa] (atmospheric pressure) or more.

If the facility water outlet pressure becomes negative, the internal facility water piping may collapse, and proper flow control of facility water will be impossible.

Using deionized water as facility water may cause problems such as clogging in the piping due to metal ion.

Operation

⚠ Warning

- 1. Confirmation before operation
- The fluid level of a tank should be within the specified range of "HIGH" and "LOW".

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

Pump can be operated independently.

2. Confirmation during operation

• Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 41 to $104^{\circ}F$ [5 and $40^{\circ}C$].

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

• When an abnormality is confirmed, stop the machine immediately. After pushing the [OFF] switch, be sure to turn off the power switch.

Operation Restart Time

⚠ Caution

 Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.

Protection Circuit

⚠ Caution

- If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.
 - Power supply voltage is not within the rated voltage range of ±10%.
 - In case the water level inside the tank is reduced abnormally.
 - Circulating fluid temperature is too high.
 - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
 - Ambient temperature is too high. (104°F [40°C] or more)
 - Refrigerant pressure is too high.
 - Ventilation hole is clogged with dust or dirt.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Temperature Control Equipment Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Maintenance

⚠ Caution

<Periodical inspection every one month>

1. Clean the ventilation hole.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

1. Inspect the circulating fluid.

1) When using tap water

usage conditions.

- Replacement of tap water
 Failure to replace the tap water can lead to the development of bacteria or algae. Replace it regularly depending on your
- Tank cleaning
 - Consider whether dirt, slime or foreign objects may be present in the circulating fluid inside the tank, and carry out regular cleanings of the tank.
- When using ethylene glycol aqueous solution
 Use a concentration meter to confirm that the concentration
 does not exceed 15%.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters etc.), consult a professional for advice.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots – Safety.

Marning

 The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2 Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.
 A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.
 Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

| Revision history | | | |
|--|-----------|---|----|
| Edition B * Added water-cooled refrigeration. | Edition D | * Not available | |
| * Added cooling capacity 1100 W (50 Hz)/1300 W (60 Hz), 2100 W (50 Hz)/2400 W (60 Hz). * Added single phase 100 VAC (50/60 Hz), 115 VAC (60 Hz). * All models: CE marking and UL compliant | Edition E | * Added cooling capacity [W] 2600/3200, 4900/5900 (50/60 Hz). * Added optional accessories. * Number of pages from 32 to 48 | SP |
| Edition C * Added cooling capacity 4700 W (50 Hz)/5100 W (60 Hz). * Added separately installed power transformer to optional accessories. * Number of pages from 20 to 32 PZ | Edition F | * HRS030/060: Obtained UL standard certification. * Added power supply cable (HRS-CA004) to optional accessories. | то |

⚠ Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

Global Manufacturing, Distribution and Service Network

Worldwide Subsidiaries

EUROPE

AUSTRIA

SMC Pneumatik GmbH (Austria)

BELGIUM

SMC Pneumatics N.V./S.A.

BULGARIA

SMC Industrial Automation Bulgaria EOOD

CROATIA

SMC Industrijska Automatika d.o.o.

CZECH

SMC Industrial Automation CZ s.r.o.

DENMARK

SMC Pneumatik A/S

ESTONIA

SMC Pneumatics Estonia

FINLAND

SMC Pneumatics Finland OY

FRANCE

SMC Pneumatique S.A.

GERMANY

SMC Pneumatik GmbH

GREECE SMC Hellas EPE

HUNGARY

SMC Hungary Ipari Automatizálási Kft.

IRELAND

SMC Pneumatics (Ireland) Ltd. ITALY

SMC Italia S.p.A.

LATVIA

SMC Pneumatics Latvia SIA

LITHUANIA

SMC Pneumatics Lietuva, UAB

NETHERLANDS

SMC Pneumatics BV

NORWAY SMC Pneumatics Norway A/S

POLAND

SMC Industrial Automation Polska Sp.z.o.o.

ROMANIA

SMC Romania S.r.I.

RUSSIA

SMC Pneumatik LLC.

SLOVAKIA

SMC Priemyselná Automatizáciá, s.r.o.

SLOVENIA

SMC Industrijska Avtomatika d.o.o.

SPAIN / PORTUGAL

SMC España S A

SWEDEN

SMC Pneumatics Sweden AB

SWITZERLAND

SMC Pneumatik AG

SMC Pneumatics (U.K.) Ltd.

ASIA

CHINA

SMC (China) Co., Ltd.

HONG KONG

SMC Pneumatics (Hong kong) Ltd.

SMC Pneumatics (India) Pvt. Ltd.

JAPAN

SMC Corporation

MALAYSIA

SMC Pneumatics (S.E.A.) Sdn. Bhd.

PHILIPPINES

SMC Pneumatics (Philippines), Inc.

SINGAPORE

SMC Pneumatics (S.E.A.) Pte. Ltd.

SOUTH KOREA

SMC Pneumatics Korea Co., Ltd.

TAIWAN

SMC Pneumatics (Taiwan) Co., Ltd.

Austin

THAILAND

SMC Thailand Ltd.

NORTH AMERICA

CANADA

SMC Pneumatics (Canada) Ltd.

MEXICO

SMC Corporation (Mexico) S.A. DE C.V.

USA

SMC Corporation of America

SOUTH AMERICA

ARGENTINA

SMC Argentina S.A.

BOLIVIA

SMC Pneumatics Bolivia S.R.L.

BRAZIL

SMC Pneumaticos do Brazil Ltda.

CHILE SMC Pneumatics (Chile) S.A.

PERU

SMC Corporation Peru S.A.C.

VENEZUELA

SMC Neumatica Venezuela S.A.

OCEANIA

AUSTRALIA

SMC Pneumatics (Australia) Pty. Ltd.

Montrea

NEW ZEALAND

SMC Pneumatics (N.Z.) Ltd.

U.S. & Canadian Sales Offices

WEST **EAST Austin** Atlanta **Dallas** Birmingham Los Angeles **Boston Phoenix** Charlotte **Portland Nashville** San Francisco **New Jersey** Rochester CENTRAL **Tampa**

Livermore

Chicago Cincinnati

Cleveland **Detroit**

Indianapolis Milwaukee **Minneapolis**

St. Louis

CANADA

Montreal **Toronto**

Vancouver Windsor

Sales Branches

SMC Corporation of America 10100 SMC Blvd., Noblesville, IN 46060

Central warehouse

Regional Distribution Centers

www.smcusa.com

SMC Pneumatics (Canada) Ltd. www.smcpneumatics.ca

(800) SMC.SMC1 (762-7621) è-mail: **sales@smcusa.com**

International inquiries: www.smcworld.com



All reasonable efforts to ensure the accuracy of the information detailed in this catalog were made at the time of publishing. However, SMC can in no way warrant the information herein contained as specifications are subject to change without notice