# Process Pump Automatically Operated Type (Internal Switching Type)

# Series PA3000/5000

# **How to Order**


#### PA3000




PA5000



## Symbol



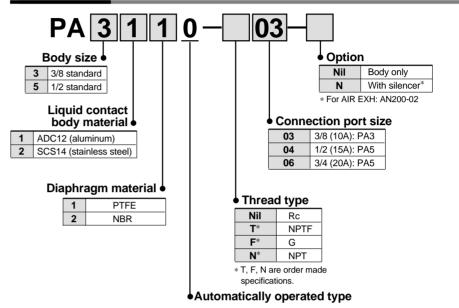

# **Specifications**


Model			Automatically operated type			
			PA31□0	PA32□0	PA51□0	PA52□0
Main fluid su discharge po			Rc 3/8		Rc 1/2, 3/4	
PORT SIZE	Pilot air supply/ exhaust port		Rc 1/4			
Material	Liquid contact areas		ADC12	SCS14	ADC12	SCS14
	Diaphragm		PTFE, NBR			
	Check valve		PTFE, PFA			
Discharge rate			1 to 20 /min		5 to 45 <b>/</b> min	
Average discharge pressure			0 to 0.6MPa			
Pilot air consumption			Maximum 200 /min (ANR)		Maximum 300 /min (ANR)	
Suction lifting range		1m		2m		
		Dry	(interior of pump dry)		(interior of pump dry)	
		Up to 6m				
Wet			(liquid inside pump)			
Fluid temperature			0 to 60°C (with no freezing)			
Ambient temperature			0 to 60°C			
Pilot air pressure			0.2 to 0.7MPa			
Withstand pressure			1.05MPa			
Mounting position			Horizontal (with mounting foot at bottom)			
Weight			1.7kg	2.2kg	3.5kg	6.5kg

<sup>\*</sup> Each of the values above indicates use at ordinary temperatures with fresh water.




# Performance Curves/Automatically Operated Type

PA3000 Flow rate characteristics

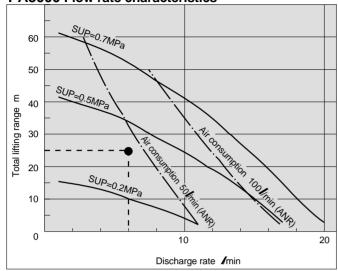

#### PA5000 Flow rate characteristics

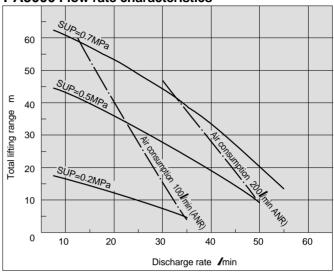

#### Selection from flow rate characteristic graphs (PA3000)

Required specification example:


Find the pilot air pressure and pilot air consumption for a discharge rate of 6/min and a total lifting range of 25m. The transfer fluid is fresh water (viscosity 1mPa·S, specific gravity 1.0).]

\* If the discharge pressure is required instead of the total lifting height, a total lift of 10m corresponds to discharge pressure of 0.1MPa.

Selection procedures

- 1. First mark the intersection point for a discharge rate of 6 /min and a lifting range of 25m.
- 2. Find the pilot air pressure for the marked point. In this case, the point is between the discharge curves (solid lines) for SUP=0.2MPa and SUP=0.5MPa, and based on the proportional relationship to these lines, the pilot air pressure for this point is approximately 0.38MPa.

Viscosity characteristics (flow rate correction for viscous fluids)

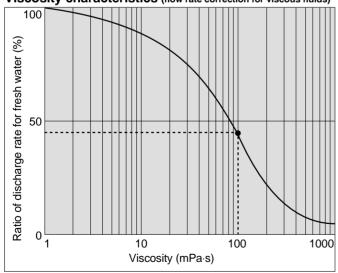

3. Next find the air consumption rate. Since the marked point is below the curve for 50 min (ANR), the maximum rate will be about 50 /min (ANR).

## **⚠** Caution

- 1. These flow rate characteristics are for fresh water (viscosity 1mPa·s, specific gravity 1.0).
- 2. The discharge rate differs greatly depending on properties (viscosity, specific gravity) of the fluid being transferred and operating conditions (lifting range, transfer distance), etc.
- 3. Use 0.75kW per 100 Imin of air consumption as a guide for the relationship of the air consumption to the compressor.

#### Selection from viscosity characteristic graph

Required specification example:

Find the pilot air pressure and pilot air consumption for a discharge rate of 2.7 min, a total lifting range of 25m, and a viscosity of 100mPa·s.

Selection procedures


- 1. First find the ratio of the discharge rate for fresh water when viscosity is 100mPa·s from the graph below. It is determined to be 45%.
- 2. Next, in the required specification example, the viscosity is 100mPa·s and the discharge rate is 2.7 Imin. Since this is equivalent to 45% of the discharge rate for fresh water, 2.7 Imin ÷ 0.45 = 6/min, indicating that a discharge rate of 6/min is required for fresh water.
- 3. Finally, find the pilot air pressure and pilot air consumption based on selection from the flow rate characteristic graphs.

# **⚠** Caution

Viscosities up to 1000mPa·s can be used.



# **Operating Principle/Automatically Operated Type**

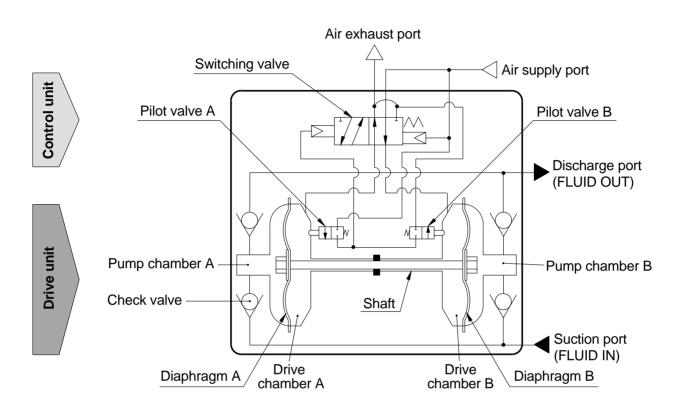

#### **Control unit**


- When air is supplied, it passes through the switching valve and enters drive chamber B.
- 2. Diaphragm B moves to the right, and at the same time diaphragm A also moves to the right pushing pilot valve A.
- When pilot valve A is pushed, air acts upon the switching valve, drive chamber A switches to a supply state, and the air which was in drive chamber B is exhausted to the outside.
- **Drive unit**
- When air enters drive chamber B, the fluid in pump chamber B is forced out, and at the same time fluid is sucked into pump chamber A.
- When the diaphragm moves in the opposite direction, the fluid in pump chamber A is forced out, and fluid is sucked into pump chamber B.

- 4. When air enters drive chamber A, diaphragm B moves to the left pushing pilot valve B.
- 5. When pilot valve B is pushed, the air which was acting upon the switching valve is exhausted, and drive chamber B once again switches to a supply state. A continuous reciprocal motion is generated by this repetition.
- Continuous suction and discharge is performed by the reciprocal motion of the diaphragm.



# **Piping and Operation/Automatically Operated Type**

#### Piping diagram

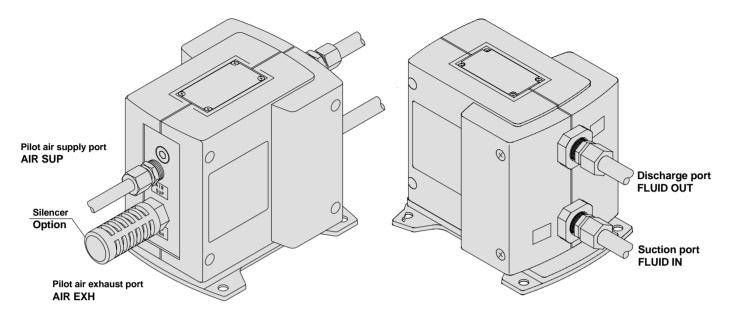

## Caution

Maintain the proper tightening torque for fittings and mounting bolts, etc. Looseness can cause problems such as fluid and air leaks, while over tightening can cause damage to threads and parts, etc.

#### Operation

- <Starting and Stopping> Refer to circuit example (1)
- 1. Connect air piping to the air supply port <AIR SUP> and connect piping for the fluid to be transferred to the suction port <FLUID IN> and the discharge port <FLUID OUT>.
- 2. Using a regulator, set the pilot air pressure within the range of 0.2 to 0.7MPa . Then, the pump operates when power is applied to the 3 port solenoid valve of the air supply port <AIR SUP>, the sound of exhaust begins from the air exhaust port <AIR EXH> and fluid flows from the suction port <FLUID IN> to the discharge port <FLUID OUT>. At this time, the ball valve on the discharge side is in an open state. The pump performs suction with its own power even without priming. (Dry state suction lifting range: max. 1m) To restrict exhaust noise, attach a silencer (AN200-02: option) to the air exhaust port <AIR EXH>.
- 3. To stop the pump, exhaust the air pressure being supplied to the pump by the 3 port solenoid valve of the air supply port <AIR SUP>. The pump will also stop if the ball valve on the discharge side is closed.


#### <Discharge Flow Rate Adjustment>

- 1. Adjustment of the flow rate from the discharge port <FLUID OUT> is performed with the ball valve connected on the discharge side or the throttle connected on the air exhaust side. For adjustment from the air side, use of the silencer with throttle ASN2 (port size 1/4) connected to the air exhaust port <AIR EXH> is effective. Refer to circuit example (1).
- 2. When operating with a discharge flow rate below the specification range, provide a by-pass circuit from the discharge side to the suction side to ensure the minimum flow rate inside the process pump. With a discharge flow rate below the minimum flow rate, the process pump may stop due to unstable operation. Refer to circuit example (2). (Minimum flow rates: PA3000 1/min, PA5000 5/min)


#### <Reset Button>

1. When the pump stops during operation, press the reset button. This makes it possible to restore operation in case the switching valve becomes clogged due to foreign matter in the supply air.

#### Circuit example (1)

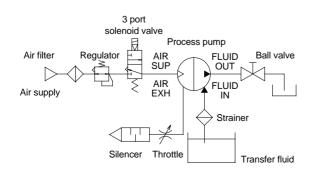

#### Circuit example (2)

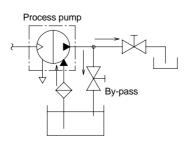



# Series PA3000/5000

# **Dimensions/Automatically Operated Type**

#### **PA3000**

