

Series SQ1000 Plug-in Unit

How to Order Manifold

SS5Q13 — **08** **FD2** **D** □

Stations

01	1 station
⋮	⋮
24 ^{Note1)}	24 stations

Note) The maximum number of stations depends on the type of electrical entries.

Option

Nil	None
02 to 24 ⁽¹⁾	DIN rail length specified
B	Back pressure check valve
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate (Side ported only)
R	External pilot specifications
S	Built-in silencer, direct exhaust

Note 1) Specify DIN rail length with "D□" at the end. (Enter the number of stations inside □.) Example: -D08






Note 2) Standard wiring specifications are for double wiring. Indicate wiring specifications for single wiring or mixed single and double wiring, or when exceeding the standard maximum number of stations. (Except L kit.)

Note 3) For specifying two or more options, enter them alphabetically. Example: -BKN

Manifold mounting

D	DIN rail mounting style
E	Direct mounting style

Electrical entry

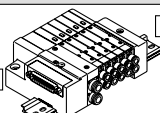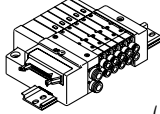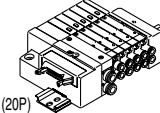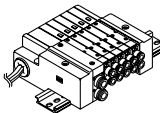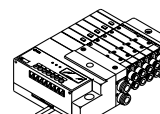Kit type	Lead wire connector location	Cable specifications	Station	Max. number of stations for special wiring specifications	Max. number of solenoids ⁽²⁾
F kit  D-sub connector kit	FD0	D side	1 to 12 stations	24 stations	24
	FD1	D-sub connector (25P) kit, without cable			
	FD2	D-sub connector (25P) kit, with 1.5 m cable			
	FD3	D-sub connector (25P) kit, with 3.0 m cable			
P kit  Flat ribbon cable connector kit (26P/20P)	PD0	D side ⁽¹⁾	1 to 12 stations	24 stations	24
	PD1	Flat ribbon cable (26P) kit, without cable			
	PD2	Flat ribbon cable (26P) kit, with 1.5 m cable			
	PD3	Flat ribbon cable (26P) kit, with 3.0 m cable			
	PDC	Flat ribbon cable (26P) kit, with 5.0 m cable			
J kit  Flat ribbon cable (20P) (PC Wiring System compatible)	JD0	D side	1 to 9 stations	18 stations	18
L kit  Lead wire kit	LD0	D side	1 to 12 stations	—	—
	LU0	U side			
	LD1	D side			
	LU1	U side			
	LD2	D side			
	LU2	U side			
S kit  Serial transmission kit	SDF	D side	1 to 8 stations	16 stations	16
	SDH				
	SDJ1		NKE Corp.: Uni-wire H System		
	SDJ2		SUNX Corp.: S-LINK System (16 output points)		
	SDQ		SUNX Corp.: S-LINK System (8 output points)		
	SDR1		DeviceNet, CompoBus/D (OMRON Corp.)		
	SDR2		1 to 8 stations	16 stations	16
	SDV		OMRON Corp.: CompoBus/S System (16 output points)		
	OMRON Corp.: CompoBus/S System (8 output points)	1 to 4 stations	8 stations	8	
	Mitsubishi Electric Corp.: CC-LINK System	1 to 8 stations	16 stations	16	

Note 1) Separately order the 20P type cable assembly for the P kit.

Note 2) The maximum number of stations should not be more than the maximum number of solenoids. (The number of solenoids are counted as: 1 for single solenoids and 2 for type 3P and 4P double solenoids.)

How to Order Valves

SQ1 **1** **3** **0** **5** **C6**

Type of actuation

1	2 position single
2	2 position double (Latching) Metal seal Rubber seal
	2 position double (Double solenoid) ⁽¹⁾ Metal seal Rubber seal
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
A ⁽²⁾	4 position dual 3 port valve N.C. N.C.
B ⁽²⁾	4 position dual 3 port valve N.O. N.O.
C ⁽²⁾	4 position dual 3 port valve N.C. N.O.

Note 1) For double solenoid specification, the function symbol below is "D".

Note 2) Only rubber seal types are applicable.

Seal

0	Metal seal
1	Rubber seal

Function

Nil	Standard type (1.0 W DC)
D	2 position double (Double solenoid specifications)
K ⁽¹⁾	High pressure type (1.0 MPa, 1.0 W DC) [Applicable to metal seal only]
N	Negative COM
Y ⁽¹⁾	Low wattage type (0.5 W DC)
R ⁽²⁾	External pilot specifications

Note 1) Except double (latching) type.
Note 2) Except dual 3 port valves.
Note 3) When two or more symbols are specified, indicate them alphabetically.

With/Without manifold block

Nil	M	MB
Without manifold block 	With manifold block 	With manifold block, built-in back pressure check valve
• When ordering with manifolds • When only valves are required.	* Lead wire is not included. * Lead wire is not included.	
For adding stations		

Port plug mounting port

Nil	None
A	Port 4(A)
B	Port 2(B)

Cylinder port

C3	One-touch fitting for $\phi 3.2$	Side ported	
C4	One-touch fitting for $\phi 4$		
C6	One-touch fitting for $\phi 6$		
M5	M5 thread	Note) Top ported	
L3	One-touch fitting for $\phi 3.2$		
L4	One-touch fitting for $\phi 4$		
L6	One-touch fitting for $\phi 6$		
L5	M5 thread		

Note) Can be changed to side ported configuration.

Manual override

Nil	B ^{Note)}
Non-locking push type (Tool required)	Locking type (Tool required)

Note) Except double (latching) type.

Coil voltage

5	24 VDC
6	12 VDC

Note) Light/Surge voltage suppressor is built-in.

VQC

SQ

VQ0

VQ4
















VQ5

VQZ

VQD

Series SQ1000


Manifold Option
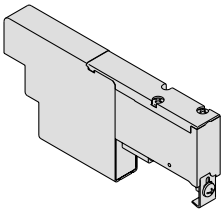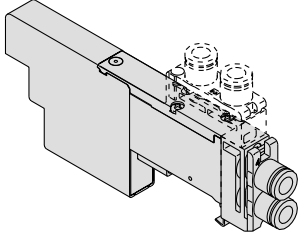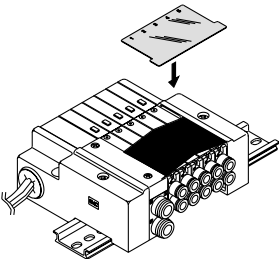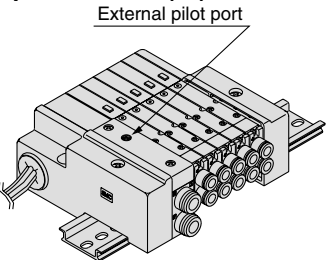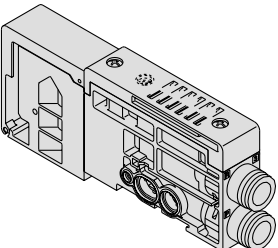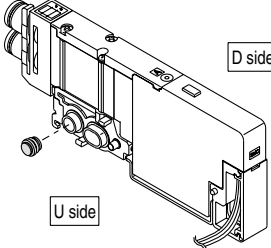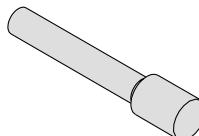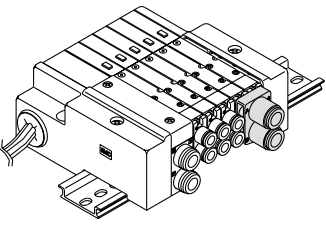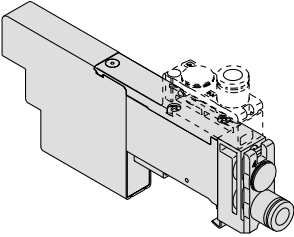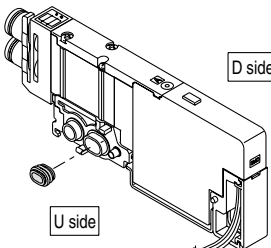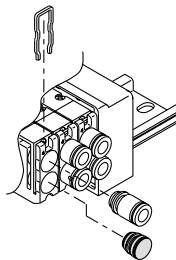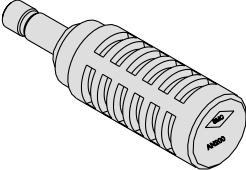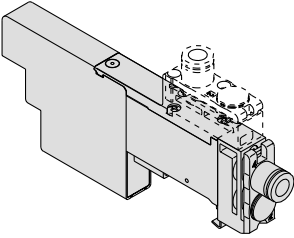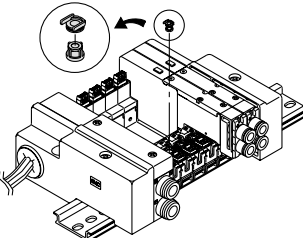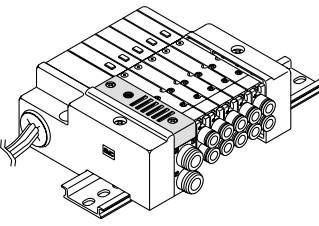
<p>Blanking plate P. 2-3-44 SSQ1000-10A-3</p> 	<p>Individual SUP/EXH spacer P. 2-3-45 SSQ1000-PR1-3-^{C6}_{L6}</p> 	<p>Name plate (-N) P. 2-3-47 SSQ1000-N3-n</p> 	<p>External pilot specifications (-R) P. 2-3-48</p> <p>External pilot port</p> 																																										
<p>SUP/EXH block P. 2-3-44 SSQ1000-PR-3-C8 (-S)</p> 	<p>SUP block plate P. 2-3-46 SSQ1000-B-P</p> <p>D side</p> <p>U side</p> 	<p>Blanking plug P. 2-3-47 KQ2P-23/04/06/08</p> 	<p>Dual flow fitting P. 2-3-48 SSQ1000-52A-^{C8}_{N9}</p> 																																										
<p>Individual SUP spacer P. 2-3-44 SSQ1000-P-3-^{C6}_{L6}</p> 	<p>EXH block plate P. 2-3-46 SSQ1000-B-R</p> <p>D side</p> <p>U side</p> 	<p>Port plug P. 2-3-47 VVQZ100-CP</p> 	<p>Silencer (For EXH port) P. 2-3-48</p> 																																										
<p>Individual EXH spacer P. 2-3-45 SSQ1000-R-3-^{C6}_{L6}</p> 	<p>Back pressure check valve (-B) P. 2-3-46 SSQ1000-BP</p> 	<p>Built-in silencer (-S) P. 2-3-47</p> 	<p>Special wiring specifications (-K) P. 2-3-49</p> <p>D-sub connector</p> <table border="1"> <thead> <tr> <th>Terminal no.</th> <th>Station</th> <th>Wiring</th> </tr> </thead> <tbody> <tr><td>14</td><td>0</td><td>1 station SOLA 1 (-)</td></tr> <tr><td>15</td><td>0</td><td>2 stations SOLA 14 (-)</td></tr> <tr><td>16</td><td>0</td><td>3 stations SOLA 2 (-)</td></tr> <tr><td>17</td><td>0</td><td>4 stations SOLA 15 (-)</td></tr> <tr><td>18</td><td>0</td><td>5 stations SOLA 3 (-)</td></tr> <tr><td>19</td><td>0</td><td>6 stations SOLB 16 (-)</td></tr> <tr><td>20</td><td>0</td><td>7 stations SOLA 4 (-)</td></tr> <tr><td>21</td><td>0</td><td>8 stations SOLA 17 (-)</td></tr> <tr><td>22</td><td>0</td><td>9 stations SOLA 5 (-)</td></tr> <tr><td>23</td><td>0</td><td>10 stations SOLA 18 (-)</td></tr> <tr><td>24</td><td>0</td><td>11 stations SOLA 6 (-)</td></tr> <tr><td>25</td><td>0</td><td>12 stations SOLB 19 (-)</td></tr> <tr><td>26</td><td>0</td><td>13 stations COM. 13 (+)</td></tr> </tbody> </table> <p>Connector terminal no.</p>	Terminal no.	Station	Wiring	14	0	1 station SOLA 1 (-)	15	0	2 stations SOLA 14 (-)	16	0	3 stations SOLA 2 (-)	17	0	4 stations SOLA 15 (-)	18	0	5 stations SOLA 3 (-)	19	0	6 stations SOLB 16 (-)	20	0	7 stations SOLA 4 (-)	21	0	8 stations SOLA 17 (-)	22	0	9 stations SOLA 5 (-)	23	0	10 stations SOLA 18 (-)	24	0	11 stations SOLA 6 (-)	25	0	12 stations SOLB 19 (-)	26	0	13 stations COM. 13 (+)
Terminal no.	Station	Wiring																																											
14	0	1 station SOLA 1 (-)																																											
15	0	2 stations SOLA 14 (-)																																											
16	0	3 stations SOLA 2 (-)																																											
17	0	4 stations SOLA 15 (-)																																											
18	0	5 stations SOLA 3 (-)																																											
19	0	6 stations SOLB 16 (-)																																											
20	0	7 stations SOLA 4 (-)																																											
21	0	8 stations SOLA 17 (-)																																											
22	0	9 stations SOLA 5 (-)																																											
23	0	10 stations SOLA 18 (-)																																											
24	0	11 stations SOLA 6 (-)																																											
25	0	12 stations SOLB 19 (-)																																											
26	0	13 stations COM. 13 (+)																																											

Although the standard products come with double wiring, mixed single and double wiring is available upon request.

How to Order Manifold Assembly (Example)

Example: D-sub connector kit, with cable (3 m)

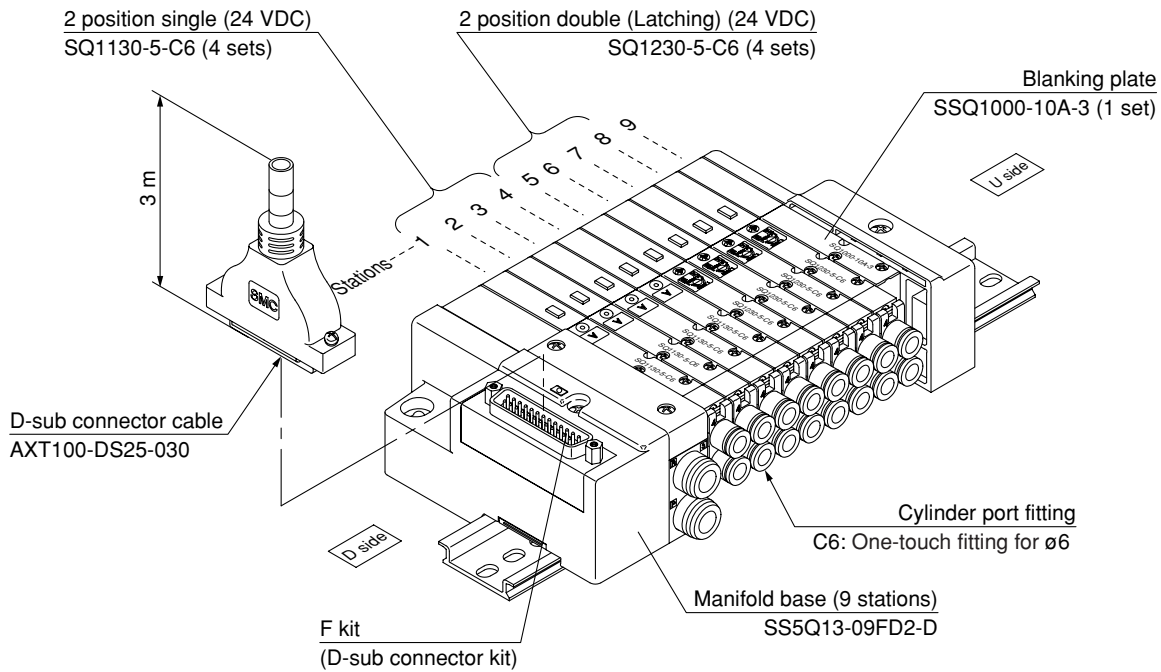

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

SS5Q13-09FD2-D 1 set (F kit 9 station manifold base)

*SQ1130-5-C6 4 sets (2 position single)

*SQ1230-5-C6 4 sets (2 position double [latching])

*SSQ1000-10A-3 1 set (Blanking plate)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Add the valve and option part numbers in order starting from the first station on the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Series SQ1000

Valve Specifications

Model

Series	Number of solenoids	Model		Flow characteristic						Response time (ms) ⁽²⁾		Weight (g)	
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W	Low wattage		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv				
SQ1000	2 position	Single	Metal seal	SQ1130	0.62	0.10	0.14	0.63	0.11	0.14	12 or less	15 or less	80
			Rubber seal	SQ1131	0.79	0.20	0.19	0.80	0.20	0.19	15 or less	20 or less	80
		Double (Latching)	Metal seal	SQ1230	0.62	0.10	0.14	0.63	0.11	0.14	15 or less	—	80
			Rubber seal	SQ1231	0.79	0.20	0.19	0.80	0.20	0.19	20 or less	—	80
	3 position	Double (Double solenoid)	Metal seal	SQ1230D	0.62	0.10	0.14	0.63	0.11	0.14	10 or less	13 or less	95
			Rubber seal	SQ1231D	0.79	0.20	0.19	0.80	0.20	0.19	15 or less	20 or less	95
		Closed center	Metal seal	SQ1330	0.58	0.12	0.14	0.63	0.11	0.14	20 or less	26 or less	100
			Rubber seal	SQ1331	0.64	0.20	0.15	0.58	0.26	0.16	25 or less	33 or less	100
	Exhaust center	Metal seal	SQ1430	0.58	0.12	0.14	0.60	0.14	0.14	20 or less	26 or less	100	
		Rubber seal	SQ1431	0.64	0.20	0.15	0.80	0.20	0.19	25 or less	33 or less	100	
	Pressure center	Metal seal	SQ1530	0.62	0.12	0.14	0.63	0.14	0.14	20 or less	26 or less	100	
		Rubber seal	SQ1531	0.79	0.21	0.19	0.59	0.20	0.14	25 or less	33 or less	100	
4 position	Dual 3 port valve	Rubber seal	SQ1^A_B31^C	0.59	0.28	0.15	0.59	0.28	0.15	25 or less	33 or less	95	


Note 1) Values for the cylinder port size of C6.
 Note 2) Based on JIS B 8375-1981. (Values with a supply pressure of 0.5 MPa and light/surge voltage suppressor. Values fluctuate depending on the pressure and air quality.)



Specifications

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas		
	Maximum operating pressure	0.7 MPa (High pressure type: 1.0 MPa) ⁽³⁾		
	Min. operating pressure	Single	0.1 MPa	0.15 MPa
		Double (Latching)	0.18 MPa	0.18 MPa
		Double (Double solenoid)	0.1 MPa	0.1 MPa
		3 position	0.1 MPa	0.2 MPa
	4 position	—	0.15 MPa	
	Ambient and fluid temp.	-10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
Pilot valve manual override	Push type/Locking type (Tool required)			
Vibration/Impact resistance ⁽²⁾	30/150 m/s ²			
Protection structure	Dust tight			
Solenoid specifications	Coil rated voltage	12 VDC, 24 VDC		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Equivalent to class B		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 0.5 W DC (21 mA) ⁽⁴⁾	
	12 VDC	1 W DC (83 mA), 0.5 W DC (42 mA) ⁽⁴⁾		

Note 1) Use dry air to prevent condensation when operating at low temperatures.
 Note 2) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
 Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
 Note 3) Metal seal type only. [Except double (latching) type.]
 Note 4) Values for the low wattage (0.5 W) specifications.

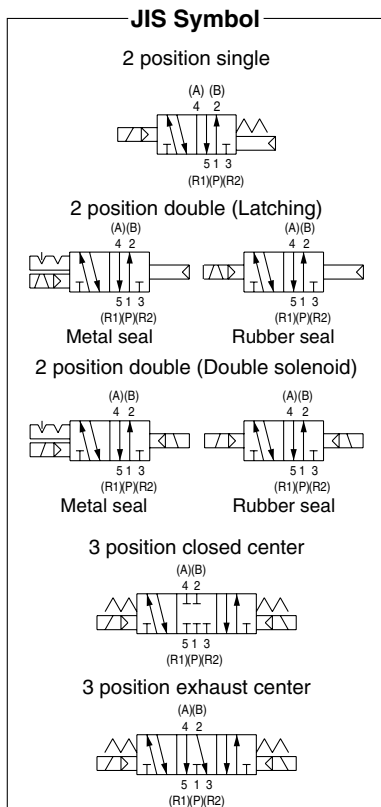

Manifold Specifications

Base model	Porting specifications			Applicable solenoid valve	Type of connection	Applicable station ⁽³⁾	5 station weight (g) ⁽⁴⁾	1 station weight (g) ⁽⁴⁾			
	Port size ⁽¹⁾										
	1(P), 3(R)	4(A), 2(B)									
	Port location	Port size									
SS5Q13-□□□□	C8 (For ø8) Option Built-in silencer, direct exhaust	Side	C3 (For ø3.2) C4 (For ø4) C6 (For ø6) M5 (M5 thread)		SQ1□30 SQ1□31	F kit: D-sub connector		1 to 12 stations	420	20	
			Top ⁽²⁾	L3 (For ø3.2) L4 (For ø4) L6 (For ø6) L5 (M5 thread)		P kit: Flat ribbon cable		26P 1 to 12 stations	420	20	
						20P 1 to 9 stations					
						J kit: Flat ribbon cable PC Wiring System compatible		1 to 8 stations	420	20	
						L kit: Lead wire		1 to 12 stations	460	35	
				S kit: Serial transmission		1 to 8 stations	475	20			







Note 1) One-touch fittings in inch sizes are also available. For details, refer to page 2-3-56.

Note 2) Can be changed to side ported configuration.

Note 3) An optional specification for special wiring is available to increase the maximum number of stations. Refer to page 2-3-54 for details.

Note 4) Except valves. For valve weight, refer to page 2-3-10.

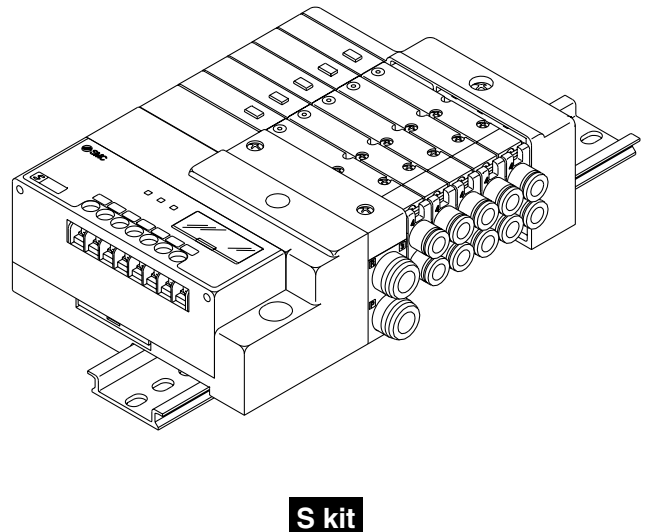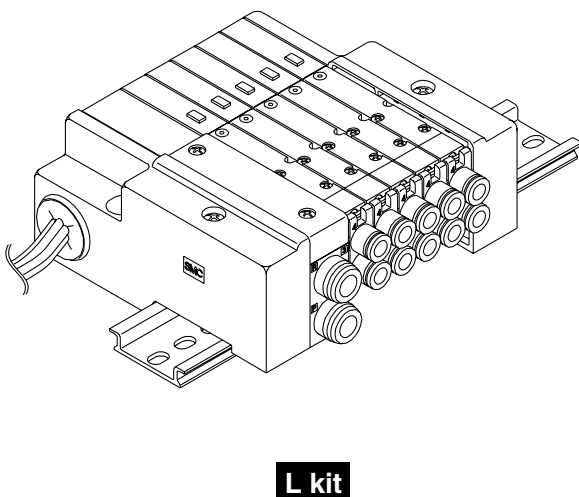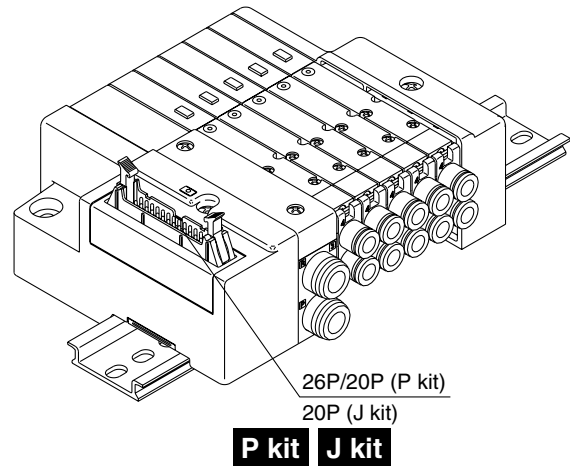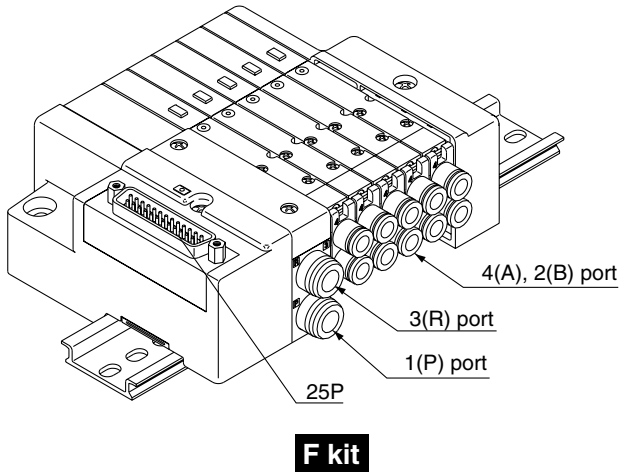


VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

Series SQ1000

F

Kit (D-sub connector kit)

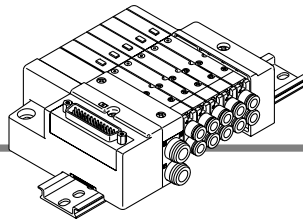

- Simplification and labor savings for wiring work can be achieved by using a D-sub connector for the electrical connection.
- Using connector for flat ribbon cable (25P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.

Manifold Specifications


Series	Porting specifications		Maximum number of stations
	Port location	Port size	
SQ1000	Side, Top	1(P), 3(R)	4(A), 2(B)
		C8	C3, C4, C6, M5

D-sub Connector (25 pins)

Cable assembly

AXT100-DS25-015
030
050

(D-sub connector cable assemblies can be ordered with manifolds.)
(Refer to manifold ordering.)

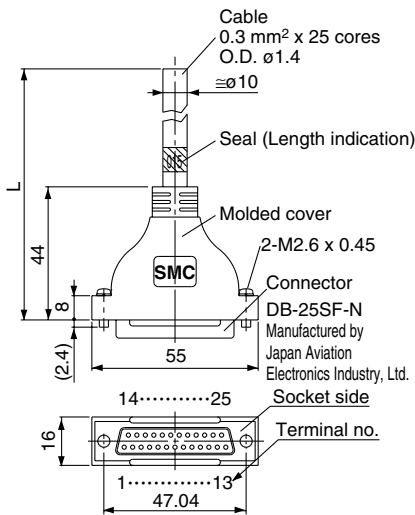

D-sub Connector Cable Assembly Terminal No.

Terminal number	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm ² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

* Cannot be used for transfer wiring.


Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit VAC, 1 min.	1000
Insulation resistance MΩ/km, 20°C	5 or less

Note) The minimum bending radius for D-sub connector cables is 20 mm.


Connector manufacturers' example

- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

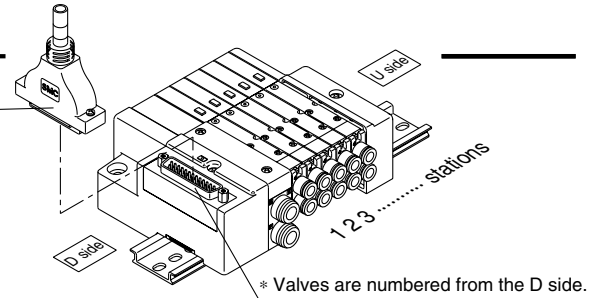

Electrical wiring specifications

D-sub connector



Connector terminal no.

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-3-54.


Lead wire colors for D-sub connector assembly (AXT100-DS25-015/030/050)

	Terminal no.	Polarity	Lead wire color	Dot marking
1 station	SOL.A 1	(-)	(+)	Black None
	SOL.B 14	(-)	(+)	Yellow Black
2 stations	SOL.A 2	(-)	(+)	Brown None
	SOL.B 15	(-)	(+)	Pink Black
3 stations	SOL.A 3	(-)	(+)	Red None
	SOL.B 16	(-)	(+)	Blue White
4 stations	SOL.A 4	(-)	(+)	Orange None
	SOL.B 17	(-)	(+)	Purple None
5 stations	SOL.A 5	(-)	(+)	Yellow None
	SOL.B 18	(-)	(+)	Gray None
6 stations	SOL.A 6	(-)	(+)	Pink None
	SOL.B 19	(-)	(+)	Orange Black
7 stations	SOL.A 7	(-)	(+)	Blue None
	SOL.B 20	(-)	(+)	Red White
8 stations	SOL.A 8	(-)	(+)	Purple White
	SOL.B 21	(-)	(+)	Brown White
9 stations	SOL.A 9	(-)	(+)	Gray Black
	SOL.B 22	(-)	(+)	Pink Red
10 stations	SOL.A 10	(-)	(+)	White Black
	SOL.B 23	(-)	(+)	Gray Red
11 stations	SOL.A 11	(-)	(+)	White Red
	SOL.B 24	(-)	(+)	Black White
12 stations	SOL.A 12	(-)	(+)	Yellow Red
	SOL.B 25	(-)	(+)	White None
	COM. 13	(+)	(-)	Orange Red


Note) Positive common specifications Negative common specifications

Note) When using the negative common specifications, use valves for negative common.

Plug-in Unit Series SQ1000

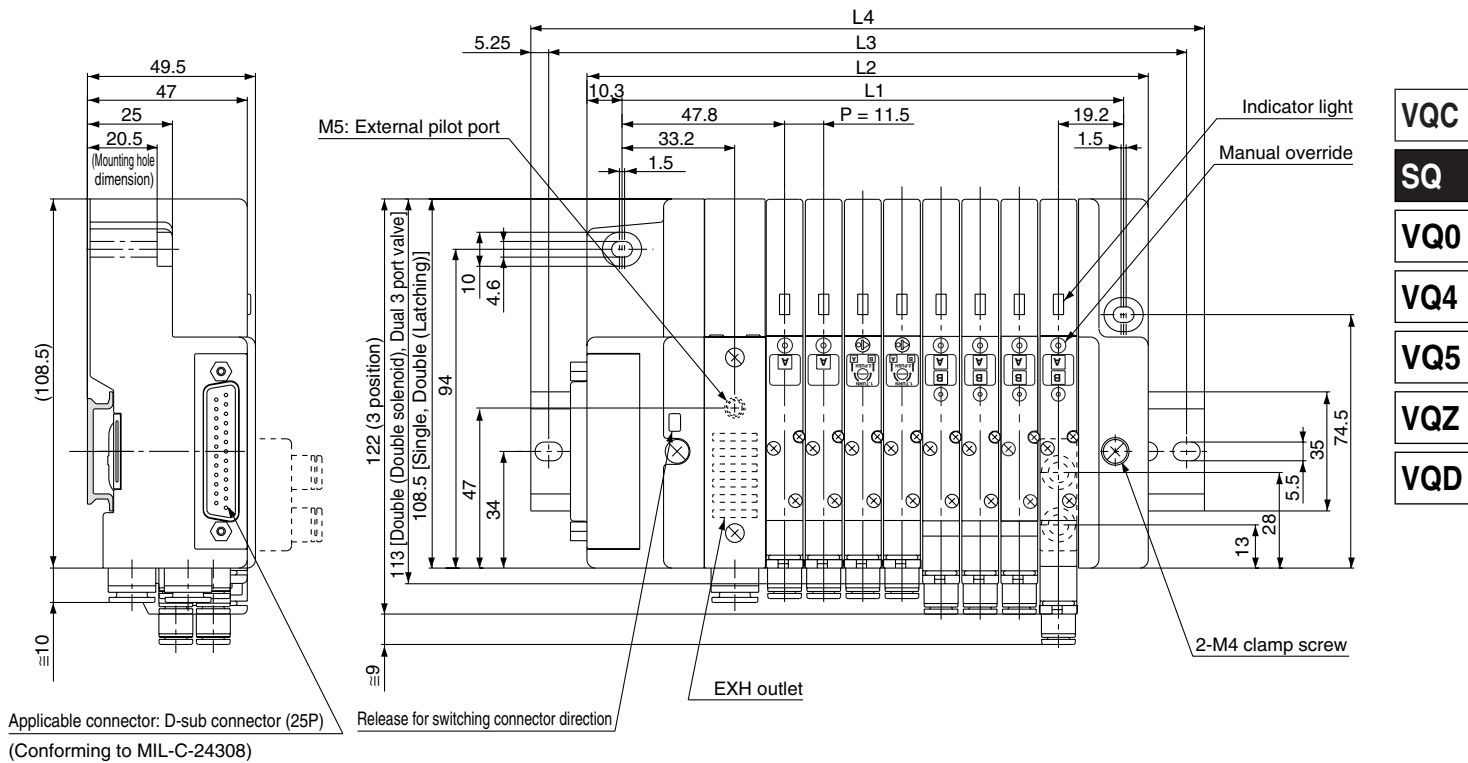

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

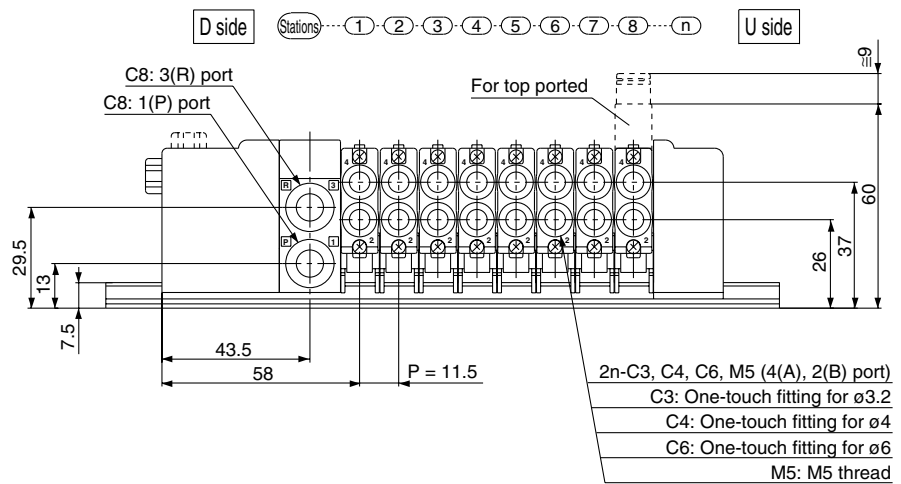


Dimensions

Formula: $L1 = 11.5n + 55.5$, $L2 = 11.5n + 73$ n: Stations (Maximum 24 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		67	78.5	90	101.5	113	124.5	136	147.5	159	170.5	182	193.5	205	216.5	228	239.5	251	262.5	274	285.5	297	308.5	320	331.5
L2		84.5	96	107.5	119	130.5	142	153.5	165	176.5	188	199.5	211	222.5	234	245.5	257	268.5	280	291.5	303	314.5	326	337.5	349
L3		112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	
L4		123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	

Series SQ1000

P Kit (Flat ribbon cable connector)

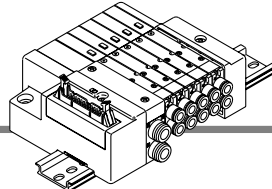

- Simplification and labor savings for wiring work can be achieved by using a flat ribbon cable for the electrical connection.
- Using connector for flat ribbon cable (26P, 20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.


Manifold Specifications

Series	Port location	Porting specifications		Maximum number of stations
		1 (P), 3 (R)	4 (A), 2 (B)	
SQ1000	Side, Top	C8	C3, C4, C6, M5	12 stations (24 as an option)

Flat Ribbon Cable (26 pins, 20 pins)

AXT100-FC $\frac{20}{26} - \frac{1}{2}$

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

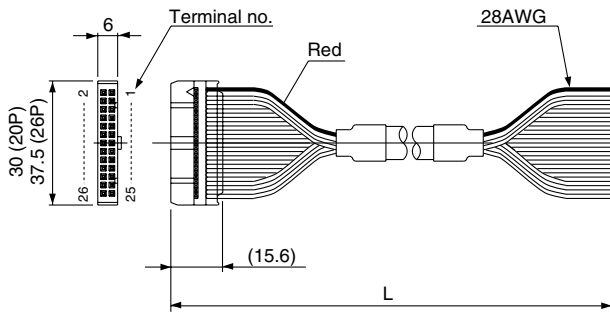


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

- * For other commercial connectors, use a 26 pins or 20 pins with strain relief conforming to MIL-C-83503.
- * Cannot be used for transfer wiring.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

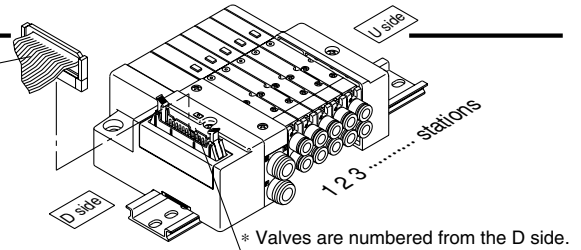

Electrical wiring specifications

Flat ribbon cable connector


- 26 □ 25
- 24 □ 23
- 22 □ 21
- 20 □ 19
- 18 □ 17
- 16 □ 15
- 14 □ 13
- 12 □ 11
- 10 □ 9
- 8 □ 7
- 6 □ 5
- 4 □ 3
- 2 □ 1

Connector terminal no.

Triangle mark indicator position


Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.

Mixed single and double wiring is available as an option. For details, refer to page 2-3-54.

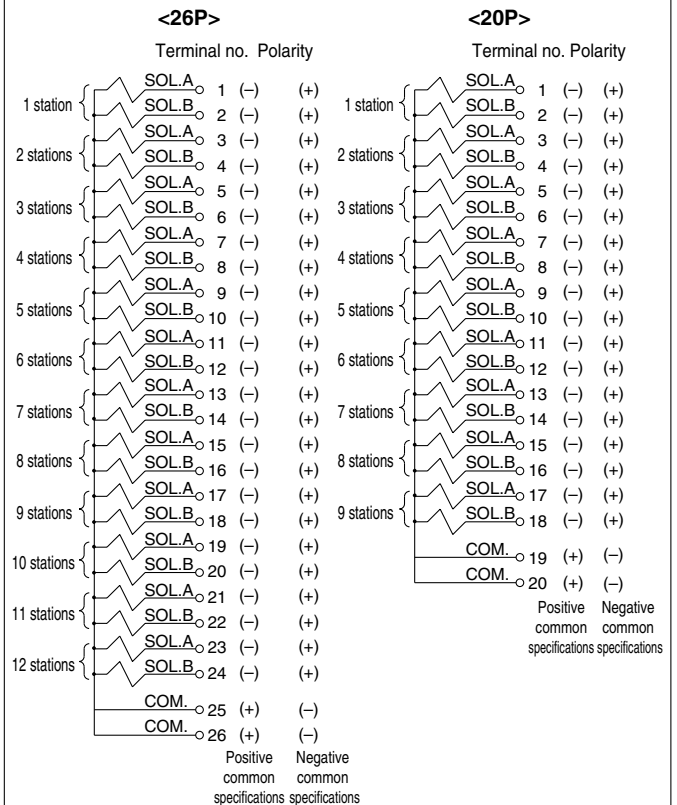


Note) When using the negative common specifications, use valves for negative common.

Plug-in Unit Series SQ1000

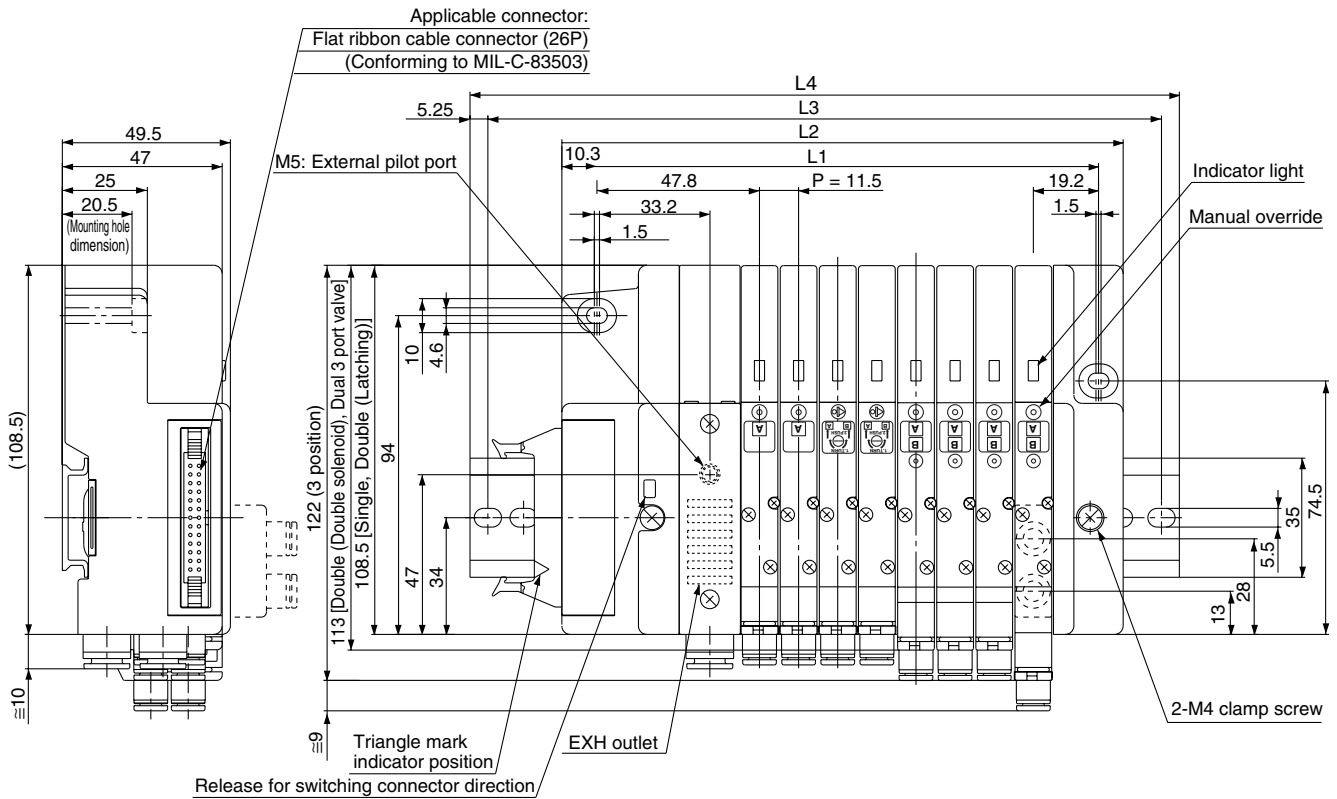

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

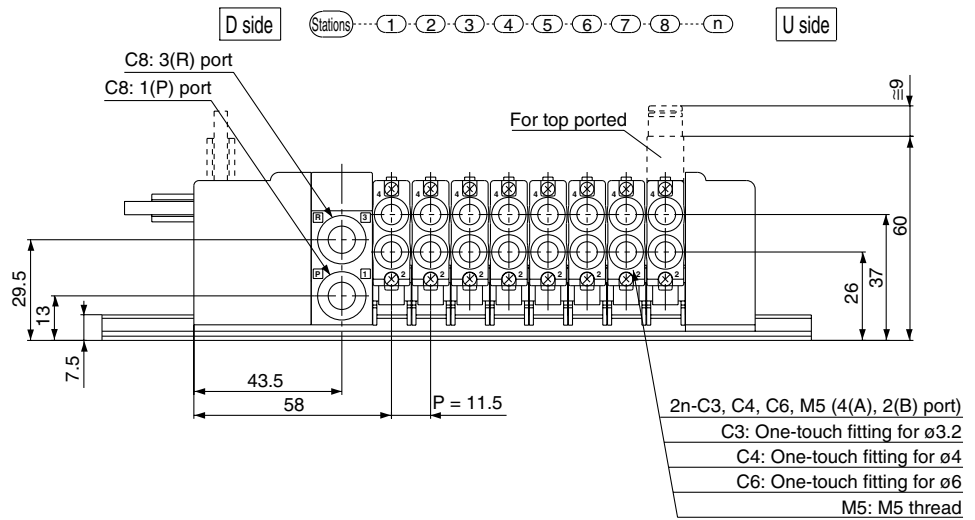


Dimensions

Formula: $L1 = 11.5n + 55.5$, $L2 = 11.5n + 73$ n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	67	78.5	90	101.5	113	124.5	136	147.5	159	170.5	182	193.5	205	216.5	228	239.5	251	262.5	274	285.5	297	308.5	320	331.5
L2	84.5	96	107.5	119	130.5	142	153.5	165	176.5	188	199.5	211	222.5	234	245.5	257	268.5	280	291.5	303	314.5	326	337.5	349
L3	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375
L4	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5

Series SQ1000

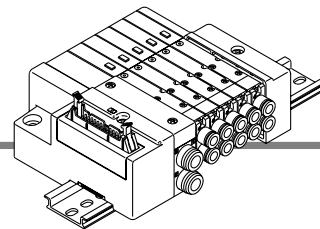


J Kit (PC Wiring System compatible flat ribbon cable kit)

- PC Wiring System compatible.
- Using connector for flat ribbon cable (20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.

Manifold Specifications


Series	Port location	Porting specifications		Maximum number of stations
		1(P), 3(R)	4(A), 2(B)	
SQ1000	Side, Top	C8	C3, C4, C6, M5	8 stations (16 as an option)

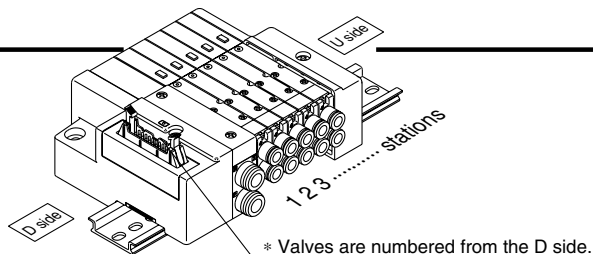

Electrical wiring specifications

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.
Mixed single and double wiring is available as an option.
For details, refer to page 2-3-54.

Flat ribbon cable connector

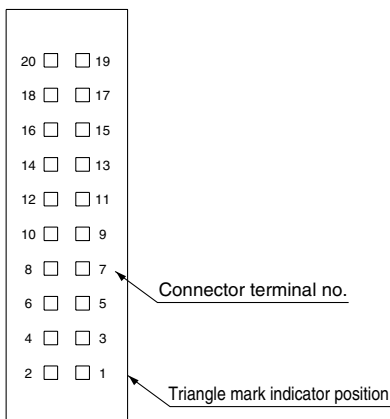


	Terminal no.	Polarity
1 station	SOL.A 20	(-) (+)
	SOL.B 18	(-) (+)
2 stations	SOL.A 16	(-) (+)
	SOL.B 14	(-) (+)
3 stations	SOL.A 12	(-) (+)
	SOL.B 10	(-) (+)
4 stations	SOL.A 8	(-) (+)
	SOL.B 6	(-) (+)
5 stations	SOL.A 19	(-) (+)
	SOL.B 17	(-) (+)
6 stations	SOL.A 15	(-) (+)
	SOL.B 13	(-) (+)
7 stations	SOL.A 11	(-) (+)
	SOL.B 9	(-) (+)
8 stations	SOL.A 7	(-) (+)
	SOL.B 5	(-) (+)
	4	(-) (+)
	3	(-) (+)
	COM. 2	(+) (-)
	COM. 1	(+) (-)

Positive common specifications Negative common specifications

Note) When using the negative common specifications, use valves for negative common.
For details about the PC Wiring System, refer to catalog CAT.ES02-20 separately.

Plug-in Unit Series SQ1000

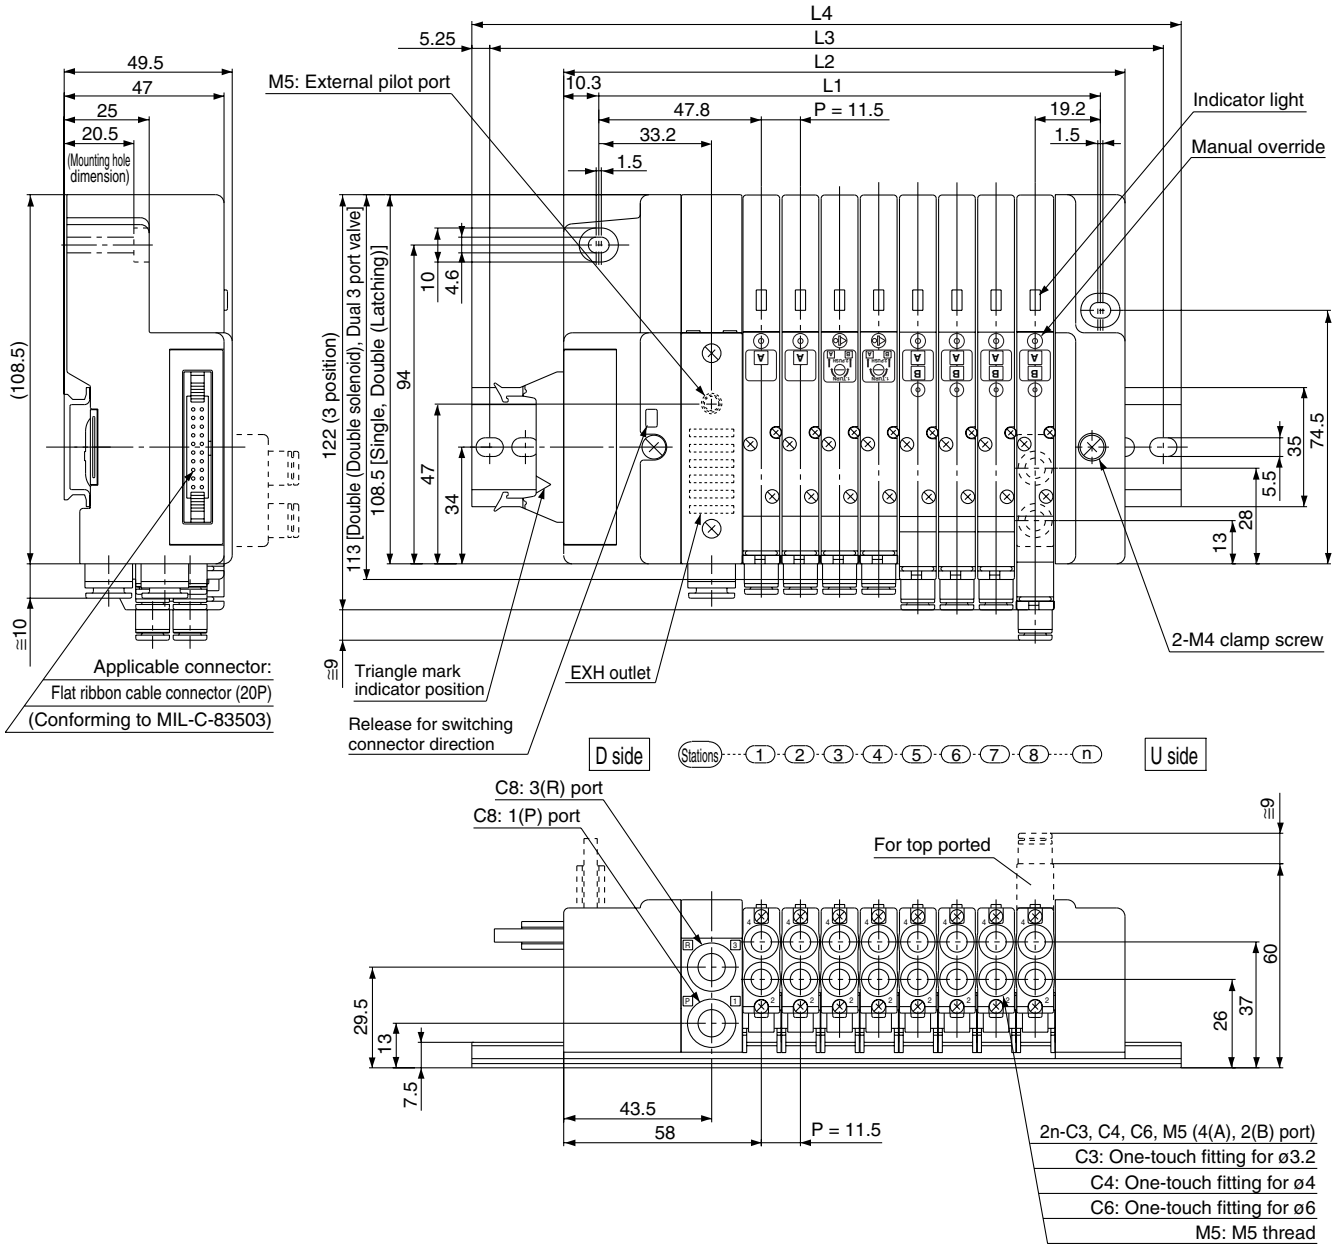

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


Dimensions

Formula: $L1 = 11.5n + 55.5$, $L2 = 11.5n + 73$ n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	67	78.5	90	101.5	113	124.5	136	147.5	159	170.5	182	193.5	205	216.5	228	239.5
L2	84.5	96	107.5	119	130.5	142	153.5	165	176.5	188	199.5	211	222.5	234	245.5	257
L3	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	
L4	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	

Series SQ1000


L Kit (Lead wire cable)

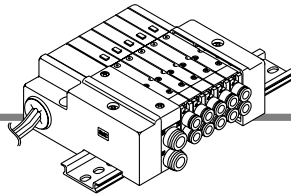

● Direct electrical entry type

Manifold Specifications



Series	Porting specifications		Maximum number of stations
	Port location	Port size	
SQ1000	Side, Top	1(P), 3(R)	4(A), 2(B)
		C8	C3, C4, C6, M5

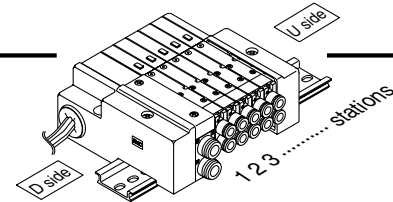

* Valves are numbered from the D side.



● Wiring Specifications: Positive COM Specifications

Three lead wires are included per station regardless of valves used. Among the three lead wires, the red wire is for COM.

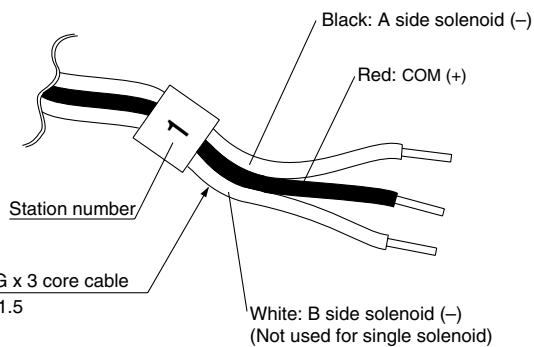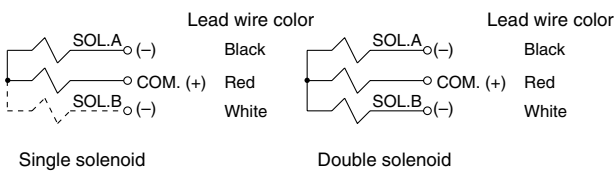


● Wiring Specifications: Negative COM Specifications (Option)

Three lead wires are included per station regardless of valves used. Among the three lead wires, the black wire is for COM.

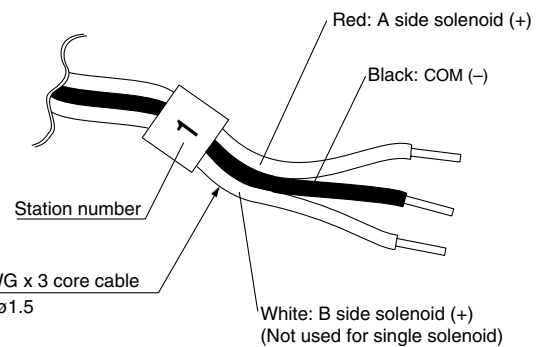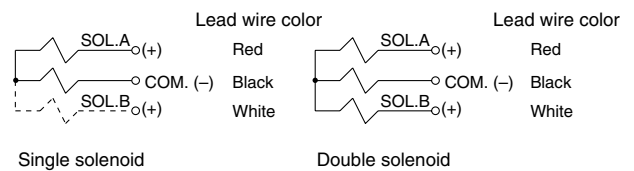


Note) When using the negative common specifications, use valves for negative common.

Plug-in Unit Series SQ1000

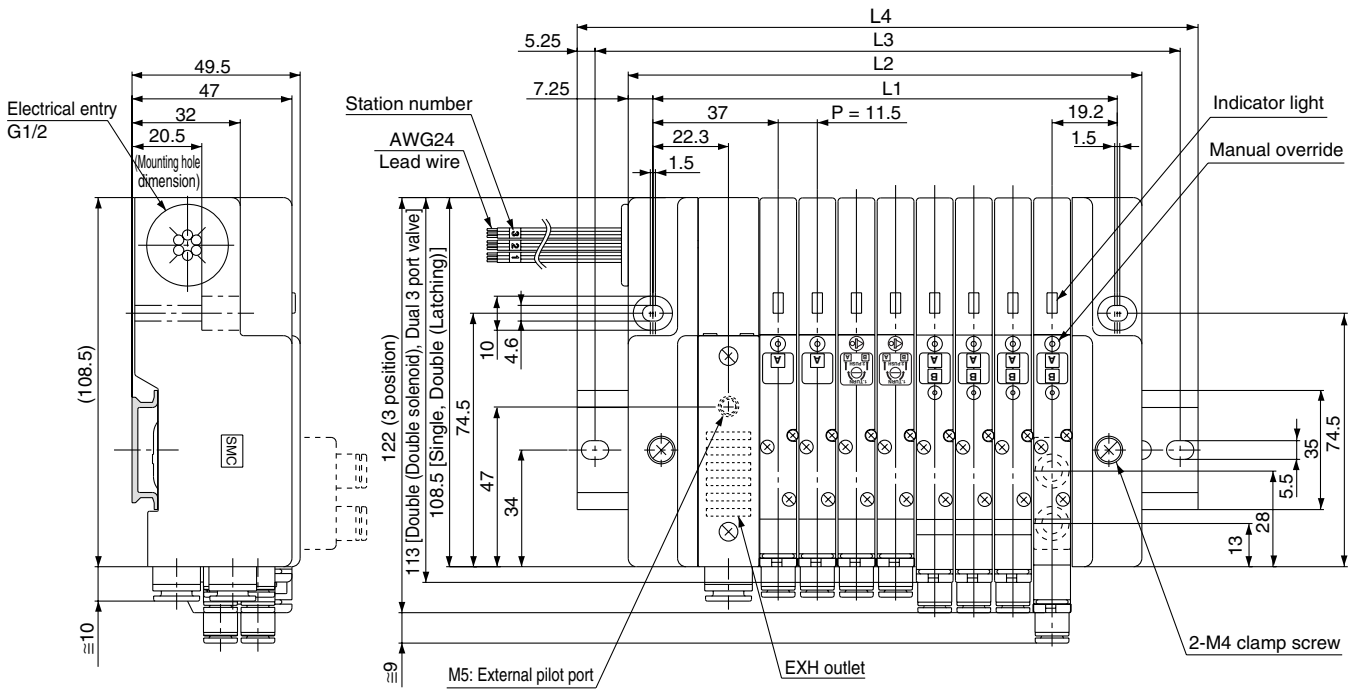

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

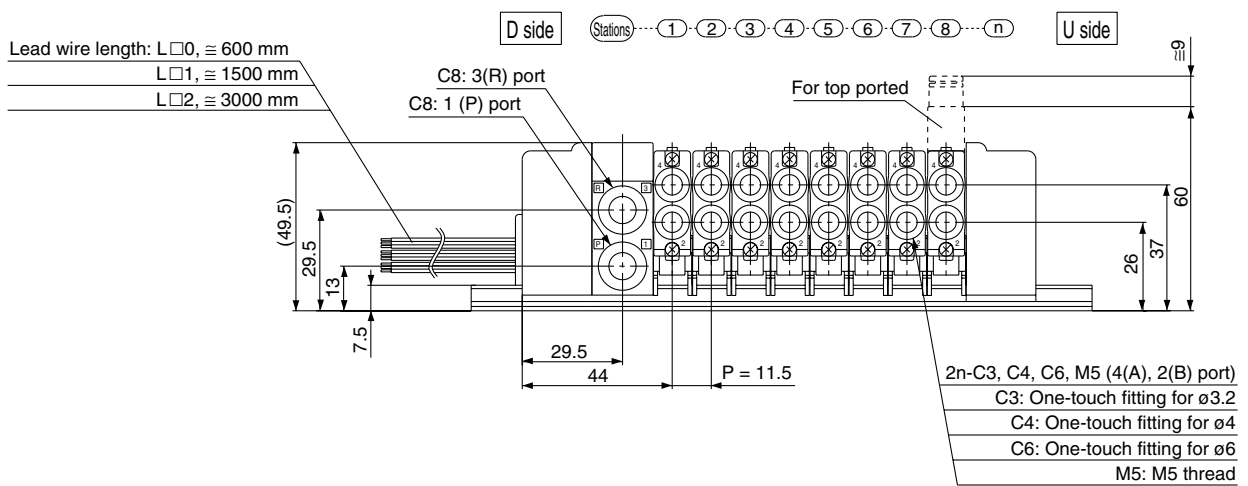


Dimensions

Formula: $L1 = 11.5n + 44.5$, $L2 = 11.5n + 59$ n: Stations (Maximum 12 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	56	67.5	79	90.5	102	113.5	125	136.5	148	159.5	171	182.5
L2	70.5	82	93.5	105	116.5	128	139.5	151	162.5	174	185.5	197
L3	100	112.5	125	125	137.5	150	162.5	175	187.5	200	212.5	225
L4	110.5	123	135.5	135.5	148	160.5	173	185.5	198	210.5	223	235.5

Series SQ1000


S Kit (Serial transmission unit)

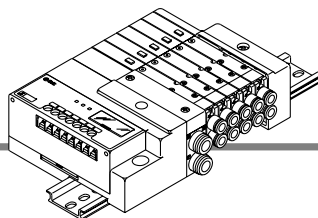

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The maximum number of stations is 8. (16 as an option). Only for type J2 and R2, the maximum stations are 4 (8 as an option).

Manifold Specifications

Series	Porting specifications			Maximum number of stations
	Port location	Port size		
		1(P), 3(R)	4(A), 2(B)	
SQ1000	Side, Top	C8	C3, C4, C6, M5	8 stations

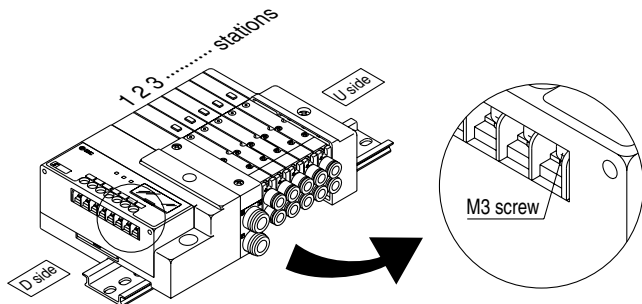

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.

Item	Specifications
External power supply	24 VDC, +10%, -5%
Current consumption (Inside unit)	0.1 A or less

● Corresponding SI unit output numbers and solenoid coils <Wiring example 1>

SI unit output no.	0	1	2	3	4	5	6	7	8	9
	A B	A B	A B	A None	A None	A B				
SI unit	Double		Double		Single		Single		Single	
Stations	1		2		3		4		5	







Double wiring (Standard)

<Wiring example 2>

* Mixed wiring is available as an option. Specify the wiring specification by means of the manifold specification sheet. Refer to page 2-3-54 for details.

SI unit output no.	0	1	2	3	4	5	6	7
	A B	A B	A B	A	A	A B		
SI unit	Double		Double		Single		Double	
Stations	1		2		3		5	

Mixed single and double wiring (Option)

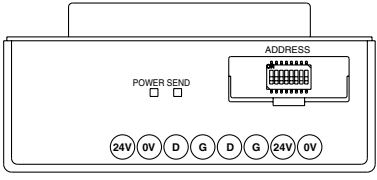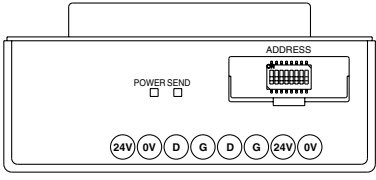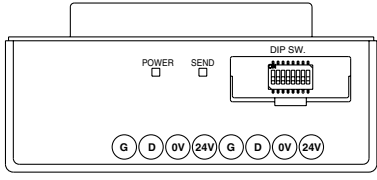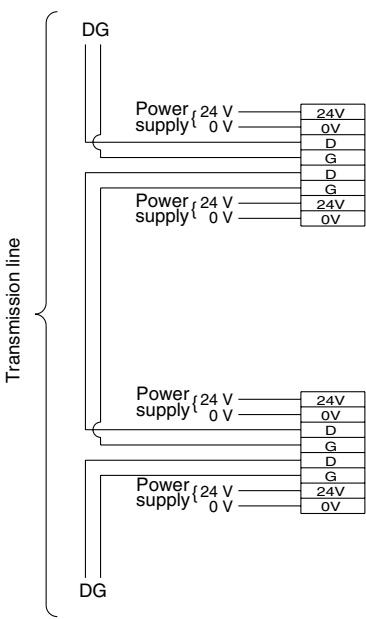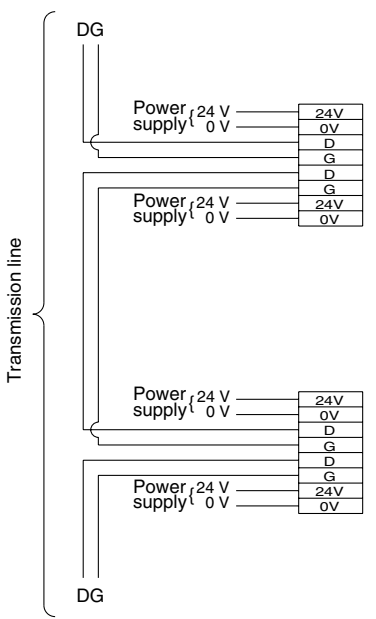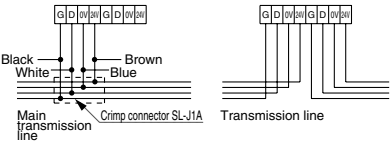
	Type SDF NKE Corporation Uni-wire System	Type SDH NKE Corporation Uni-wire H System	Type SDJ1, SDJ2 SUNX Corporation S-LINK System																	
Name of terminal block, LED																				
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input (Light ON when normal, flickers when voltage is low)</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)	SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input (Light ON when normal, flickers when voltage is low)</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)	SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Blinks slowly</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input	SEND
LED	Description																			
POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON																			
LED	Description																			
POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON																			
LED	Description																			
POWER	Light ON with power input																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Blinks slowly																			
Cable wiring			<p>a) Type T branching multi-drop wiring (S-LINK System)</p> <p>b) Crossover wiring (Sensor link system)</p>  <p>The above is the example of using dedicated S-LINK flat ribbon cable SL-RCM□00.</p>																	
Note	<ul style="list-style-type: none"> • Uni-wire System Send unit: SD-120 • No. of output points, 16 points 	<ul style="list-style-type: none"> • Uni-wire H System Send unit: SD-H2 • No. of output points, 16 points 	<ul style="list-style-type: none"> • S-LINK System S-LINK controller: SL-CU1 • No. of output points, 16 points (Type SDJ1) No. of output points, 8 points (Type SDJ2) 																	

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


Series SQ1000

S


Kit (Serial transmission unit)

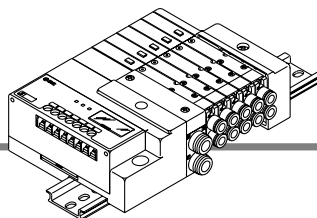

	Type SDQ OMRON Corporation DeviceNet, CompoBus/D	Type SDR1, SDR2 OMRON Corporation CompoBus/S System	Type SDV Mitsubishi Electric Corporation CC-LINK System																										
Name of terminal block, LED	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF</td> </tr> <tr> <td>MOD/NET</td> <td>Green light ON continuously: When the unit is online and in operation Red light blinks: When a reversible abnormal transmission occurs Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online</td> </tr> </tbody> </table>	LED	Description	POWER	Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF	MOD/NET	Green light ON continuously: When the unit is online and in operation Red light blinks: When a reversible abnormal transmission occurs Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with transmission power input, light Off without it</td> </tr> <tr> <td>COMM</td> <td>Light ON with normal transmission, light OFF with abnormal or standby transmission</td> </tr> <tr> <td>ERR.</td> <td>Light ON with abnormal transmission, light Off with normal or standby transmission</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with transmission power input, light Off without it	COMM	Light ON with normal transmission, light OFF with abnormal or standby transmission	ERR.	Light ON with abnormal transmission, light Off with normal or standby transmission	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with transmission power input, light Off without it</td> </tr> <tr> <td>L.RUN</td> <td>Light ON when receiving normal data</td> </tr> <tr> <td>SD</td> <td>Light ON when sending data</td> </tr> <tr> <td>RD</td> <td>Light ON when receiving data</td> </tr> <tr> <td>L.ERR.</td> <td>Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with transmission power input, light Off without it	L.RUN	Light ON when receiving normal data	SD	Light ON when sending data	RD	Light ON when receiving data	L.ERR.	Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting
LED	Description																												
POWER	Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF																												
MOD/NET	Green light ON continuously: When the unit is online and in operation Red light blinks: When a reversible abnormal transmission occurs Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online																												
LED	Description																												
POWER	Light ON with transmission power input, light Off without it																												
COMM	Light ON with normal transmission, light OFF with abnormal or standby transmission																												
ERR.	Light ON with abnormal transmission, light Off with normal or standby transmission																												
LED	Description																												
POWER	Light ON with transmission power input, light Off without it																												
L.RUN	Light ON when receiving normal data																												
SD	Light ON when sending data																												
RD	Light ON when receiving data																												
L.ERR.	Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting																												
Cable wiring																													
Note	<ul style="list-style-type: none"> • DeviceNet • OMRON Corporation CompoBus/D System Master unit: C200HW-DRM21 • No. of output points, 16 points 	<ul style="list-style-type: none"> • CompoBus/S System Master unit: C200HW-SRM21 Master unit: CQM1-SRM21 • No. of output points, 16 points (Type SDR1) No. of output points, 8 points (Type SDR2) 	<ul style="list-style-type: none"> • CC-LINK System Master unit: AJ61BT11 Master unit: A1SJ61BT11 Master unit: AJ61QBT11 Master unit: A1SJ61QBT11 • No. of output points, 16 points 																										

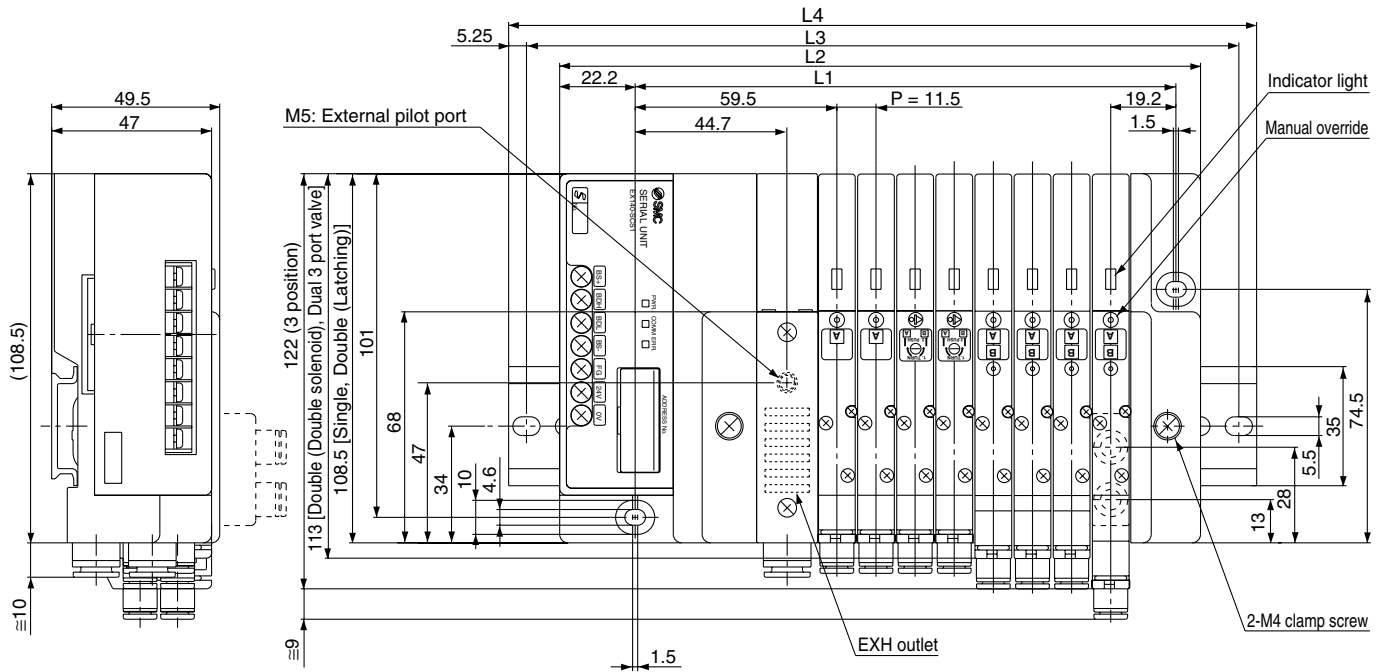

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

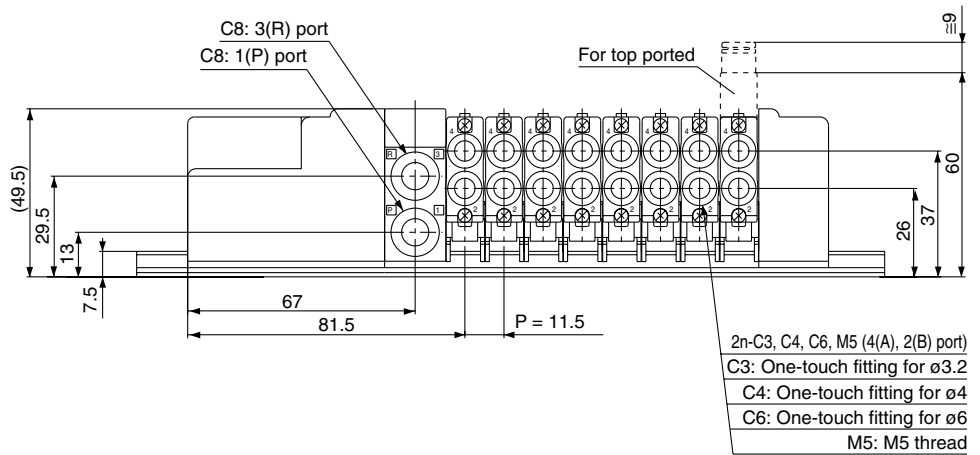

Dimensions

Formula: $L1 = 11.5n + 67$, $L2 = 11.5n + 96.5$ n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	78.5	90	101.5	113	124.5	136	147.5	159	170.5	182	193.5	205	216.5	228	239.5	251
L2	108	119.5	131	142.5	154	165.5	177	188.5	200	211.5	223	234.5	246	257.5	269	280.5
L3	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	300	300
L4	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	310.5



Series SQ1000/2000

Manifold Option Parts for SQ1000


Blanking plate

SSQ1000-10A-3

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

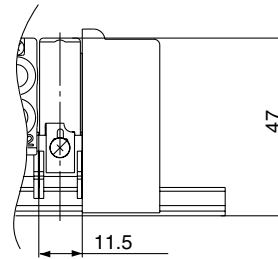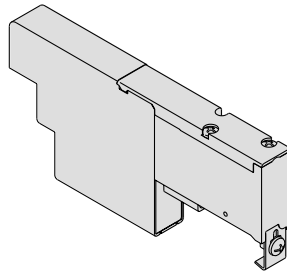

JIS Symbol



SUP/EXH block

SSQ1000-PR-3-C8-□

•Option



Nil	Standard
R	External pilot specifications
S	Built-in silencer

Note) When specifying both options, indicate "RS".
* Specify the spacer mounting position on the manifold specification sheet.

Description/Model	Stations				
	1	2	3	4	5
Valve					
Option	SUP/EXH block SSQ1000-PR-3-C8-□				

For standard type manifolds, the SUP/EXH block is mounted on the D side. It is added to the manifold to increase SUP/EXH capacity.

- * The number of SUP/EXH blocks that can be added is limited to two sets, one between manifold stations and another on the U side due to the length of the internal lead wire.
- * SUP/EXH blocks are not included in the number of manifold stations.

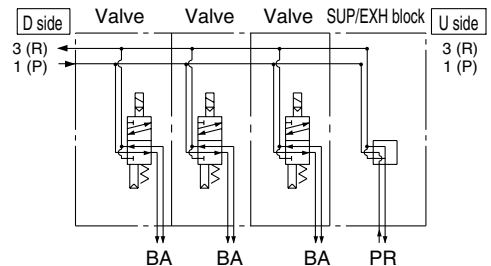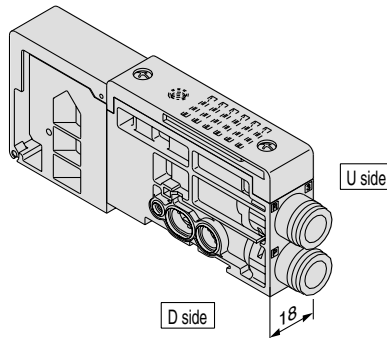

Individual SUP spacer

SSQ1000-P-3-C6

•Port location

C6	Side ported
L6	Top ported

This is used as a supply port for different pressures when using different pressures in the same manifold (for one station). Both sides of the station which is used with supply pressure from the individual SUP spacer are shut off.

(Refer to application example.)

* Specify the spacer mounting position and SUP passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Two pieces of SUP block plate that shut off the supply pressure are included with the individual SUP spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual SUP spacer to the individual EXH spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual SUP spacers later, it is limited to two units, and another on the U side due to the length of the internal lead wire.



* Part number with manifold block:

SSQ1000-P-3-C6-M

Side ported

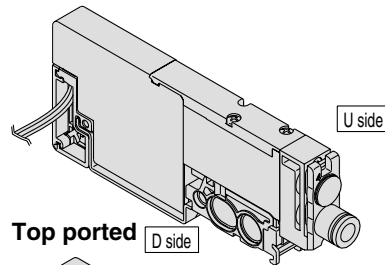


Top ported

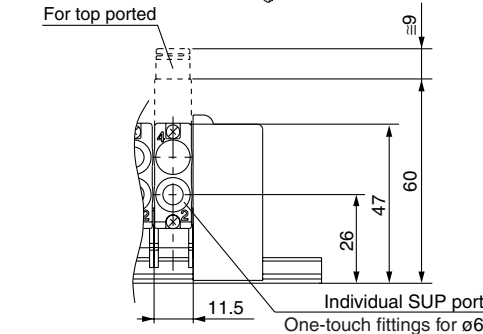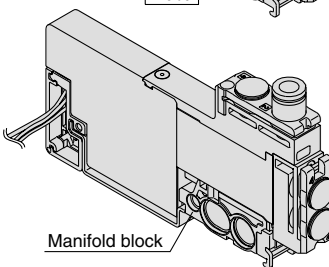

Description/Model	Stations				
	1	2	3	4	5
Valve					
Option	Individual SUP spacer SSQ1000-P-3-C6				
Option	SUP shut off position: Specify 2 positions.				

SUP block plate (Ordering not required) SUP block plate (Ordering not required)

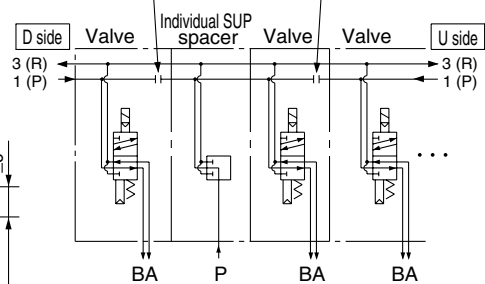

Individual EXH spacer

SSQ1000-R-3-C6

• Port location

<u>C6</u>	Side ported
<u>L6</u>	Top ported

This is used to exhaust an individual valve when the exhaust from a valve interferes with other stations in the circuit (used for one station).

Both sides of the station which is to be individually exhausted are shut off.

(Refer to application example.)

* Specify the spacer mounting position and EXH passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Two pieces of EXH block plate that shut off the exhaust are included with the individual EXH spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual EXH spacer to the individual SUP spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual EXH spacers later, it is limited to two units, one between manifold stations and another on the U side due to the length of the internal lead wire.



* Model no. with manifold block:

SSQ1000-R-3-C6-M
L6


Side ported

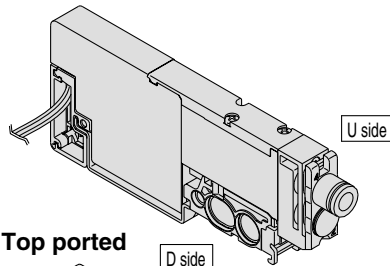

Top ported

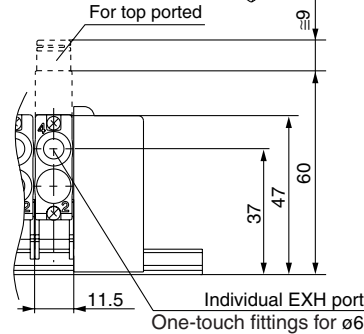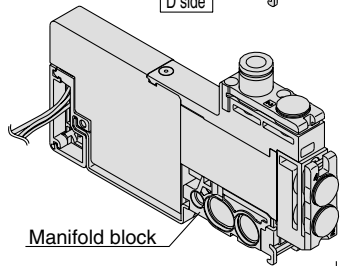

Description/Model		Stations				
		1	2	3	4	5
Valve	Single	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		
	⋮					
Option	Individual EXH spacer SSQ1000-R-3- <u>C6</u>		<input checked="" type="checkbox"/>			
	EXH shut off position: Specify 2 positions.	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		

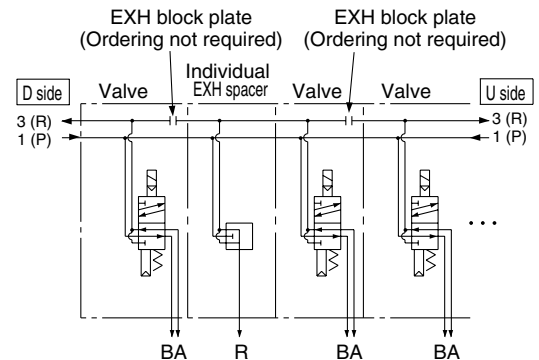

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Individual SUP/EXH spacer

SSQ1000-PR1-3-C6

• Port location

<u>C6</u>	Side ported
<u>L6</u>	Top ported

This has both functions of the individual SUP and EXH spacers above. (Refer to application example.)

* Specify the spacer mounting position and SUP and EXH passage shut off positions on the manifold specification sheet. Two shut off positions each for SUP and EXH are required per unit.

(Two pieces each of block plate that shut off the SUP and EXH passages are included with the individual SUP/EXH spacer.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later.

* The number of spacers is not limited when ordered with the manifold. However, when adding individual SUP/EXH spacers later, it is limited to two units, one between manifold stations and another on the U side due to the length of the internal lead wire.



* Model no. with manifold block:

SSQ1000-PR1-3-C6-M
L6


Side ported

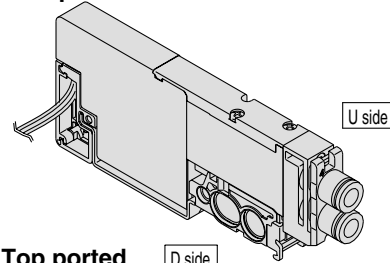

Top ported

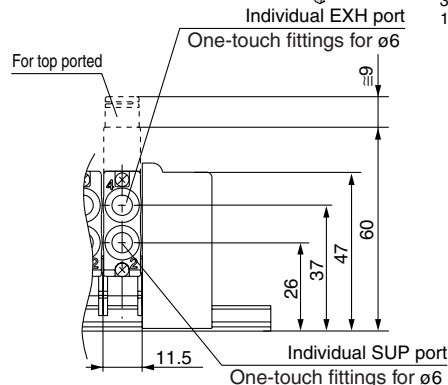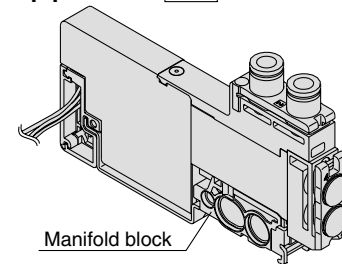

Description/Model		Stations				
		1	2	3	4	5
Valve	Single	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		
	⋮					
Option	Individual SUP/EXH spacer SSQ1000-PR1-3- <u>C6</u>		<input checked="" type="checkbox"/>			
	SUP shut off position: Specify 2 positions.	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		
	EXH shut off position: Specify 2 positions.	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		

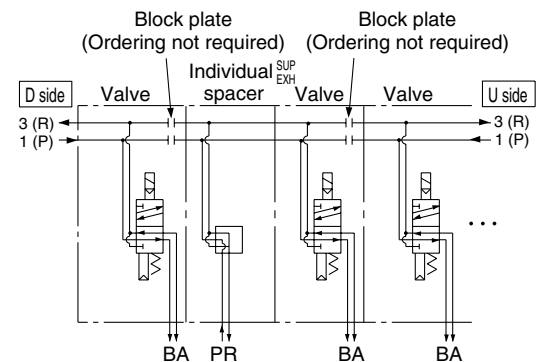

Series SQ1000/2000

Manifold Option Parts for SQ1000

SUP block plate

SSQ1000-B-P


When supplying two different pressures, high and low, to one manifold, this is used between stations with different pressures. Also, it is used with an individual SUP spacer to shut off the air supply.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When a SUP passage is shut off with a SUP block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when SUP block plates are ordered with manifolds.

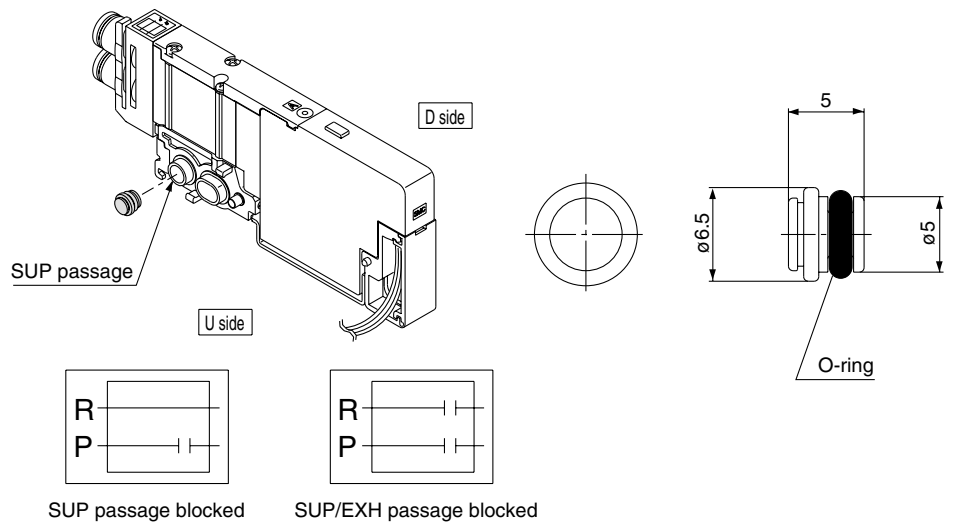

EXH block plate

SSQ1000-B-R


When the exhaust from a valve interferes with other stations in the circuit, this is used between stations to separate exhausts. Also, it is used with an individual EXH spacer to shut off the exhaust of individual valves.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When an EXH passage is shut off with an EXH block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when EXH block plates are ordered with manifolds.

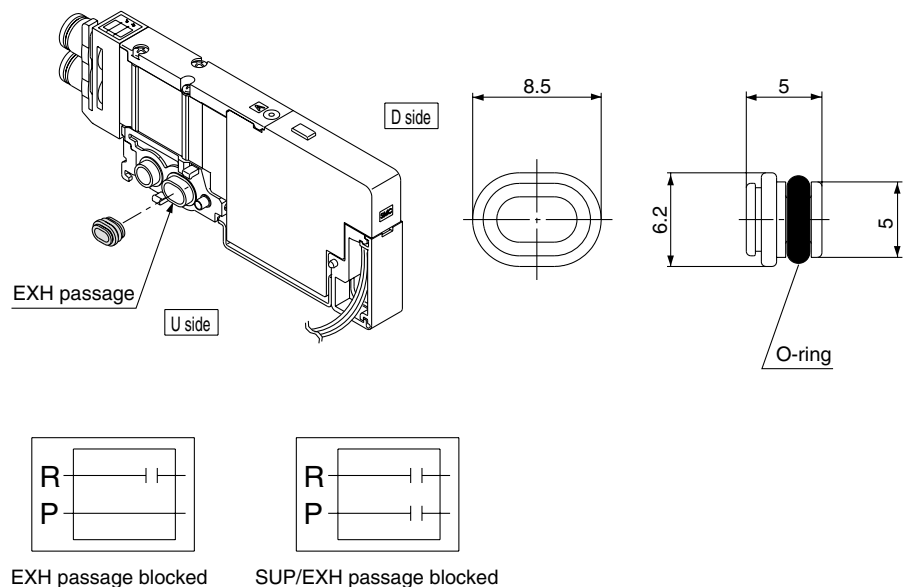


Back pressure check valve [-B]

SSQ1000-BP

This prevents cylinder malfunction caused by the exhaust from other valves. It is inserted into the R (EXH) port of the valve that is affected. It is especially effective when using single acting cylinders or exhaust center type solenoid valves.

* When installing back pressure check valves only on the stations required, enter the part number and specify the mounting stations on a manifold specification sheet.

* When installing back pressure check valves on all of the stations, indicate "-B" at the end of the manifold part number.

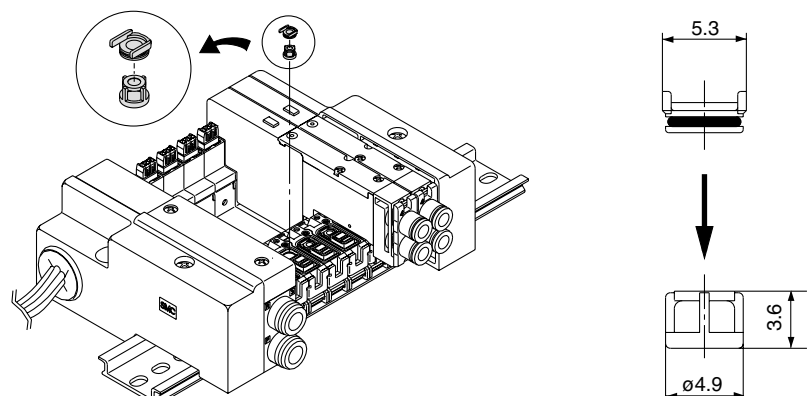

⚠ Caution

1. Although the back pressure check valve is an assembly part with a check valve mechanism, a small amount of air leakage is allowed. Therefore, take care not to restrict the exhaust air from the exhaust port.
2. The effective area of valves is about 20% less when the back pressure check valve is installed.
3. Since 4 port specification valves (5 (R1) and 3 (R2) are common) are used, back pressure cannot be prevented with dual 3 port valves.

Name plate [-N]


SSQ1000-N3- Stations (1 to maximum)

This is a clear resin plate for applying solenoid valve function description labels, etc.

To install, bend the plate slightly as shown and insert into the slots on the end plate side.

Also, the plate is difficult to bend for manifolds with only a few stations, therefore, remove the silencer cover to install it.

* When ordering with manifolds, add "-N" at the end of the manifold number.

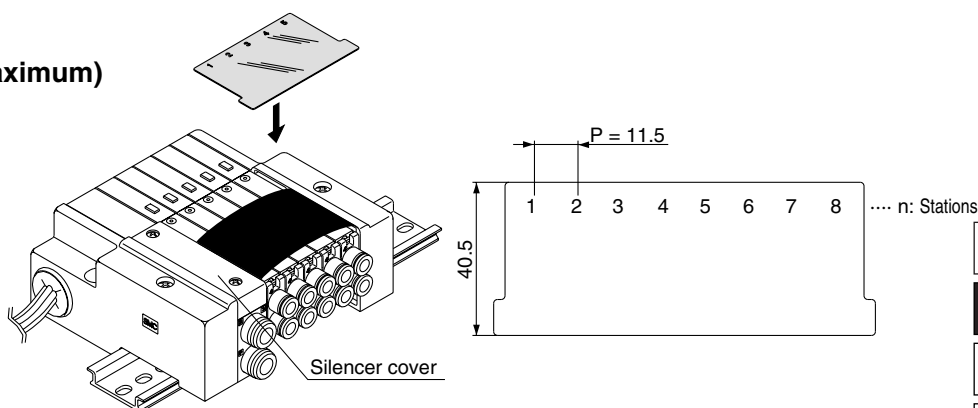

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD


Blanking plug (For One-touch fitting)

23
KQ2P-04
06
08

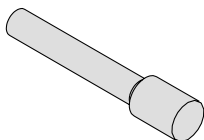

This is inserted into cylinder ports and SUP and EXH ports that are not used.

Purchasing order is available in units of 10 pieces.

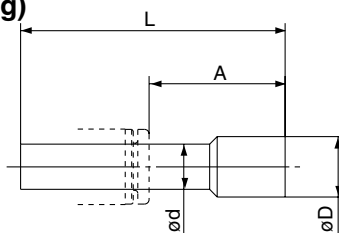

Dimensions

Applicable fittings size ød	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

Port plug

VVQZ100-CP

This is used to close the cylinder ports when changing a 5 port valve to a 3 port valve.

* Add "A" or "B" at the end of the valve part number when ordering with valves.



Example) SQ1131-5-C6-A (N.O. specifications)

• 4 (A) port plug

Example) SQ1131-5-C6-B (N.C. specifications)

• 2 (B) port plug

Example) SQ1131-5-C6-B-M
(B port plug with manifold block)

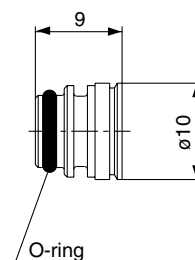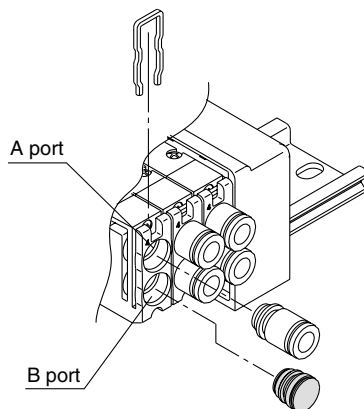

Direct EXH outlet, built-in silencer [-S]

The EXH outlet is placed on the top side of the manifold end plate. The built-in silencer provides highly effective noise reduction.


(Noise reduction of 30 dB)



Note) Note that when excessive drainage occurs in the air supply, the drainage will be released along with the exhaust.

* Add "S" at the end of the manifold part number when ordering with manifolds.

* For precautions on handling and how to replace elements, refer to page 2-3-5.

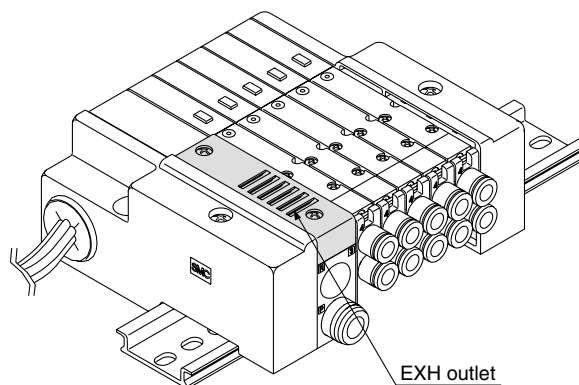

Series SQ1000/2000

Manifold Option Parts for SQ1000

External pilot specifications [-R]

This can be used when the air pressure is 0.1 to 0.2 MPa lower than the minimum operating pressure of the solenoid valves or used for vacuum specifications.

Add "R" to the part numbers of manifolds and valves to indicate the external pilot specification.

An M5 port will be installed on the top side of the manifold's SUP/EXH block.

- How to order valves (Example)
SQ1130 R -5-C6


External pilot specifications

- How to order manifold (Example)

* Indicate "R" for an option.

SS5Q13-08FD1-DR

External pilot specifications

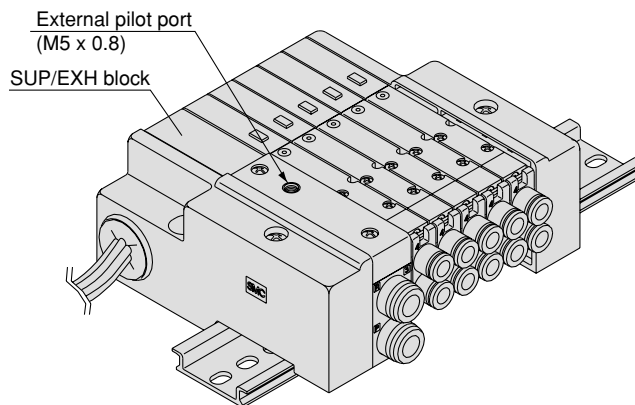

Note 1) Not applicable for 4 position dual 3 port valves.

Note 2) Indicate "RY" for low wattage types.

Note 3) Valves with the external pilot specifications have a pilot EXH with individual exhaust specifications and EXH can be pressurized. However, the pressure supplied from EXH should be 0.4 MPa or lower.

Dual flow fitting

SSQ1000-52A-C8

Port size

C8	ø8
N9	ø5/16"

To drive a large bore cylinder, two valve stations are operated simultaneously to double the air flow.


This fitting is used on the cylinder ports in this situation. Available sizes are ø8 and ø5/16" One-touch fittings.

* When ordering with valves, specify the valve part number without One-touch fitting and list without One-touch fitting and list the dual flow fitting part number.


Example) Valve part number (without One-touch fitting)

SQ1131-5-C0 2 sets

*SSQ1000-52A-C8 1 set


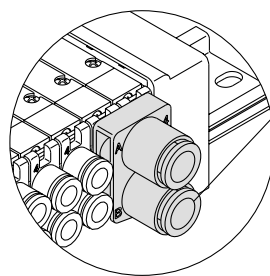


C8: One-touch fittings for ø8
N9: One-touch fittings for ø5/16"

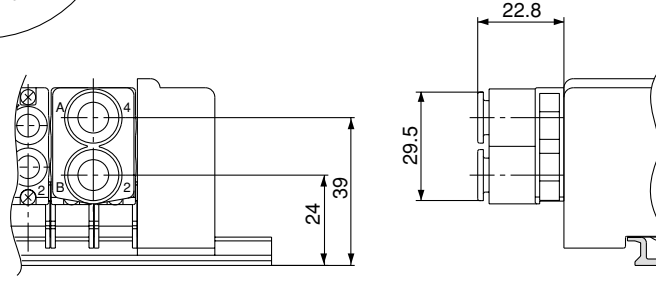

Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).

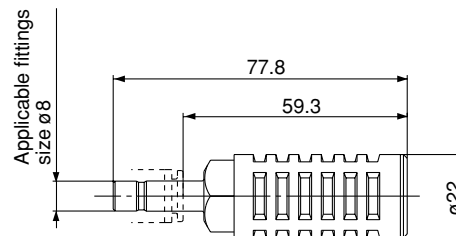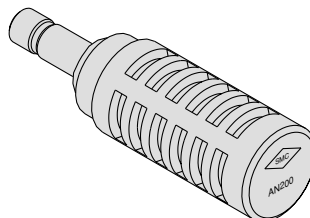

Specifications

Series	Model	Effective area mm ² (Cv factor)	Noise reduction (dB)
SQ1000	AN200-KM8	20 (1.1)	30

Series SQ1000/2000

Manifold Option Parts for SQ1000/SQ2000

Special Wiring Specifications

In the internal wiring of F kit, P kit, J kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order

Indicate option symbol “-K” in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet. Also, specify wiring for spare connectors.


(Up to two spare connectors are included depending on the remaining number of connector pins. When the wiring for the spare connectors is not specified, they will be wired according to “Spare Connector Wiring” on page 2-3-57.)

Example) **SS5Q13 - 09 FD0 - DKS**

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.

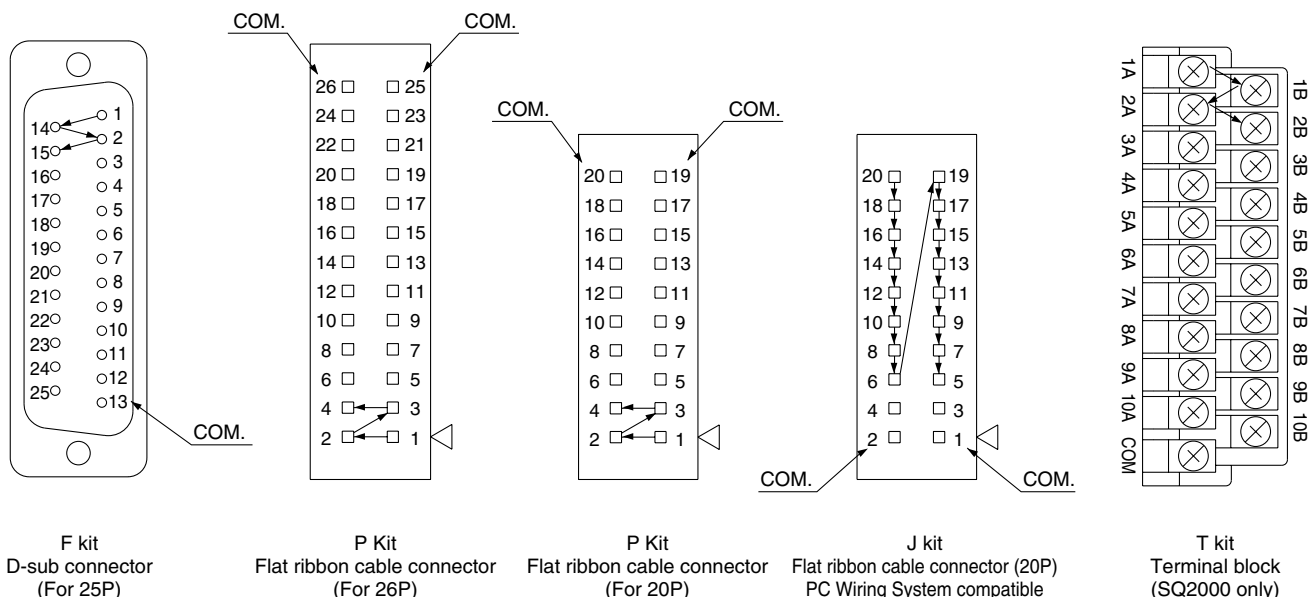

For S kit (serial transmission kit), refer to pages 2-3-20 and 2-3-40.

3. Maximum stations

The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. Determine the number of stations so that the total number of solenoids is no more than the maximum points in the table below.

Kit	F kit (D-sub connector)	P kit (Flat ribbon cable connector)		J kit Flat ribbon cable PC Wiring System compatible	T kit (Terminal block) SQ2000 only*	S kit (Serial)
Type	FD□ 25P	PD□ 26P	PDC 20P	JD0 20P	TD0	SD□
Max. points	24 points	24 points	18 points	16 points	20 points	16 points

Note) Maximum stations SQ1000: 24 stations
SQ2000: 16 stations

Special DIN Rail Length (DIN rail mounting (-D) only)

The standard DIN rail provided is approximately 30 mm longer than the overall length of the manifold with a specified number of stations. The following options are also available.

● DIN rail length longer than the standard type (for stations to be added later, etc.)

In the manifold part number, specify “-D” for the manifold mounting symbol and add the number of required stations after the symbol.

Example) **SS5Q13-08FD0-D09BNK**




● Ordering DIN rail only

DIN rail part number

AXT100-DR-n



Note) For “n”, enter a number from the “No.” line in the table below. For L dimension, refer to the dimensions of each kit.

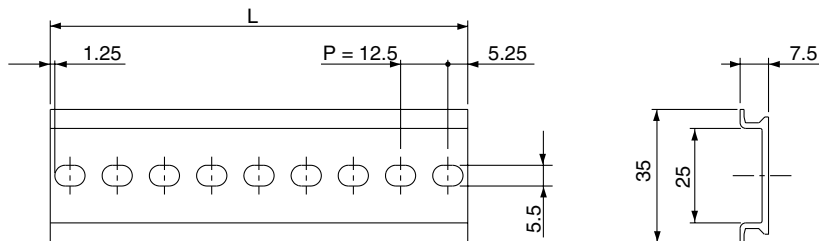

L Dimension

$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5


Direct Mounting Style (-E)

Manifold is mounted by using mounting holes of both sides of the manifold. DIN rail is not sticking out of the edge of end plate.

SQ1000

Mounting hole (For M4)


Mounting hole (For M4)

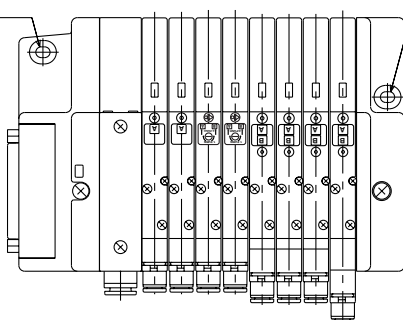

SQ2000

Mounting hole (For M5)

Mounting hole (For M5)

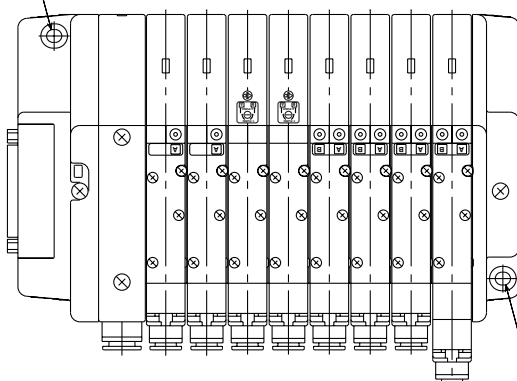

Series SQ1000/2000

Manifold Option for SQ1000/SQ2000

Negative Common Specifications

The following valve part numbers are for negative common specifications. Manifold part numbers are the same as the standard except L kit. Also, negative COM specifications are not available for the S kit.

● How to order negative COM valves (Example)

SQ1130 **N** -5-C6

• Negative common specifications

● How to order negative COM manifold (Example)

SS5Q13 - **08** **LD1** **N** - **DN**

• Stations

• Kit type

• Option

• DIN rail mounting style

• Negative common specifications

Inch-size One-touch Fittings

For One-touch fittings in inch sizes, use the following part numbers. Also, the color of the release button is orange.

● How to order valves (Example)

SQ1130- 5 - **N7**

• Port location

• Cylinder port

Port location		Symbol	N1	N3	N7	N9
Nil	Side ported	Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"
L	Top ported	4(A), 2(B) port	●	●	●	—
		SQ1000	●	●	●	—
		SQ2000	—	●	●	●

● How to order manifold (Example)

Add "00T" at the end of the part number.

SS5Q13- **08** **FD0** - **DN** - **00T**

• 1 (P), 3 (R) port in inch size
 { SQ1000: ø5/16" (N9)
 { SQ2000: ø3/8" (N11)

How to Add Manifold Stations for SQ1000/SQ2000

1. Using Spare Connector to Add Stations

As shown in the table below, wiring specifications for spare connectors are based on to the remaining number of connector pins (remaining number of pins against the maximum number of solenoids for each kit.)
The following steps are for using spare connectors to add stations.

Spare Connector Wiring


Remaining connector pins	4 pins or more	3 pins	2 pins	1 pin	0 pin
Spare connector wiring	2 for double wiring	1 for double wiring (on the low no. station side) 1 for single wiring	1 for double wiring	1 for single wiring	None

What to order

- Valves with manifold block (refer to pages 2-3-7 and 2-3-25) or the manifold blocks (Refer to page 2-3-58)>

Steps for adding stations

- Loosen the clamp screw on the U side end plate and open the manifold.
- Mount the manifold block to be added.
- Open the junction cover and attach the spare connector. Match the station position of the added station and the spare connector station number.
- Press on the end plate to eliminate any space between the manifold blocks and tighten the clamp screw.
(Proper tightening torque: 0.8 to 1.0 N·m)
Note 1) Order a manifold block with lead wire for the L kit because a spare connector is not included with the kit. (Refer to page 2-3-58.)
Note 2) Do not let the lead wires get caught between manifolds, or when closing the junction cover.

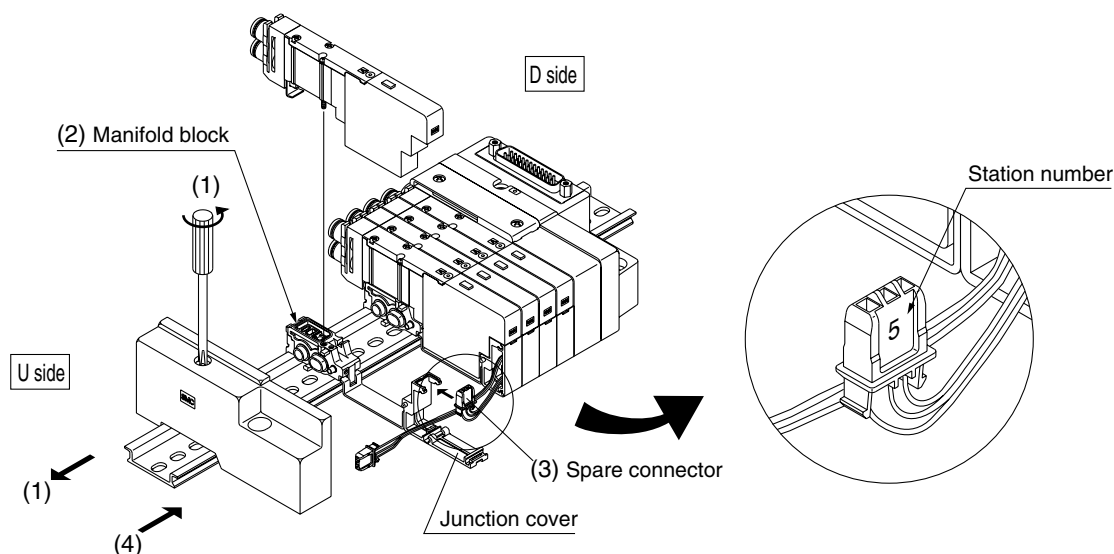

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD



Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

2. Adding Stations Without Required Spare Connectors

Spare connectors for 2 stations are initially included. However, to add 3 or more stations, order manifold blocks with lead wire in the tables below.

How to Order Manifold Blocks with Lead Wire

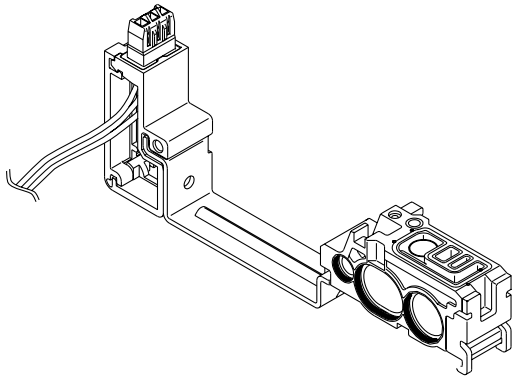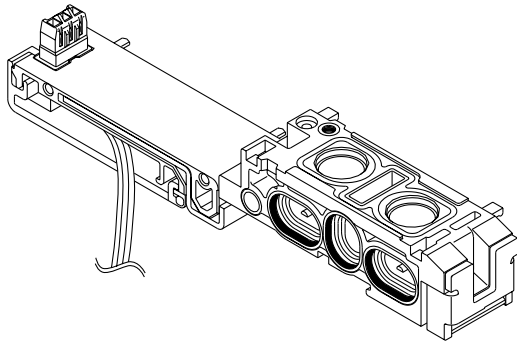
SQ1000	SQ2000																																																																				
																																																																					
<p>SSQ1000—1A—3—FS 03 — [] — []</p> <p>Lead wire type ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">F0</td><td>Without lead wire (for using spare connectors to add stations)</td></tr> <tr><td style="text-align: center;">FS</td><td>F kit (D-sub connector kit) Single wiring</td></tr> <tr><td style="text-align: center;">FW</td><td>F kit (D-sub connector kit) Double wiring</td></tr> <tr><td style="text-align: center;">PS</td><td>P, J kit (Flat ribbon cable kit) Single wiring</td></tr> <tr><td style="text-align: center;">PW</td><td>P, J kit (Flat ribbon cable kit) Double wiring</td></tr> <tr><td style="text-align: center;">L0</td><td>L kit (Lead wire kit) Lead wire length 0.6 m</td></tr> <tr><td style="text-align: center;">L1</td><td>L kit (Lead wire kit) Lead wire length 1.5 m</td></tr> <tr><td style="text-align: center;">L2</td><td>L kit (Lead wire kit) Lead wire length 3.0 m</td></tr> <tr><td style="text-align: center;">SS</td><td>S kit (Serial transmission kit) Single wiring</td></tr> <tr><td style="text-align: center;">SW</td><td>S kit (Serial transmission kit) Double wiring</td></tr> </table> <p>Applicable stations ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">01</td><td>1 station</td></tr> <tr><td style="text-align: center;">⋮</td><td>⋮</td></tr> <tr><td style="text-align: center;">24</td><td>24 station</td></tr> </table> <p>Option ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">Nil</td><td>None</td></tr> <tr><td style="text-align: center;">B</td><td>Back pressure check valve</td></tr> <tr><td style="text-align: center;">R</td><td>External pilot specifications</td></tr> </table> <p>Note 1) No symbol required for "F0". Note 2) S kit is from 01 to 16</p> <p>Note) Enter "-BR" for both options.</p>	F0	Without lead wire (for using spare connectors to add stations)	FS	F kit (D-sub connector kit) Single wiring	FW	F kit (D-sub connector kit) Double wiring	PS	P, J kit (Flat ribbon cable kit) Single wiring	PW	P, J kit (Flat ribbon cable kit) Double wiring	L0	L kit (Lead wire kit) Lead wire length 0.6 m	L1	L kit (Lead wire kit) Lead wire length 1.5 m	L2	L kit (Lead wire kit) Lead wire length 3.0 m	SS	S kit (Serial transmission kit) Single wiring	SW	S kit (Serial transmission kit) Double wiring	01	1 station	⋮	⋮	24	24 station	Nil	None	B	Back pressure check valve	R	External pilot specifications	<p>SSQ2000—1A—3—FS 03 — [] — []</p> <p>Lead wire type ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">F0</td><td>Without lead wire (for using spare connectors to add stations)</td></tr> <tr><td style="text-align: center;">FS</td><td>F kit (D-sub connector kit) Single wiring</td></tr> <tr><td style="text-align: center;">FW</td><td>F kit (D-sub connector kit) Double wiring</td></tr> <tr><td style="text-align: center;">PS</td><td>P, J kit (Flat ribbon cable kit) Single wiring</td></tr> <tr><td style="text-align: center;">PW</td><td>P, J kit (Flat ribbon cable kit) Double wiring</td></tr> <tr><td style="text-align: center;">TS</td><td>T kit (Terminal block kit) Single wiring</td></tr> <tr><td style="text-align: center;">TW</td><td>T kit (Terminal block kit) Double wiring</td></tr> <tr><td style="text-align: center;">L0</td><td>L kit (Lead wire kit) Lead wire length 0.6 m</td></tr> <tr><td style="text-align: center;">L1</td><td>L kit (Lead wire kit) Lead wire length 1.5 m</td></tr> <tr><td style="text-align: center;">L2</td><td>L kit (Lead wire kit) Lead wire length 3.0 m</td></tr> <tr><td style="text-align: center;">SS</td><td>S kit (Serial transmission kit) Single wiring</td></tr> <tr><td style="text-align: center;">SW</td><td>S kit (Serial transmission kit) Double wiring</td></tr> </table> <p>Applicable stations ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">01</td><td>1 station</td></tr> <tr><td style="text-align: center;">⋮</td><td>⋮</td></tr> <tr><td style="text-align: center;">16</td><td>16 stations</td></tr> </table> <p>Note) No symbol required for "F0".</p> <p>Option ●</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">Nil</td><td>None</td></tr> <tr><td style="text-align: center;">B</td><td>Back pressure check valve</td></tr> <tr><td style="text-align: center;">R</td><td>External pilot specifications</td></tr> </table> <p>Note) Enter "-BR" for both options.</p>	F0	Without lead wire (for using spare connectors to add stations)	FS	F kit (D-sub connector kit) Single wiring	FW	F kit (D-sub connector kit) Double wiring	PS	P, J kit (Flat ribbon cable kit) Single wiring	PW	P, J kit (Flat ribbon cable kit) Double wiring	TS	T kit (Terminal block kit) Single wiring	TW	T kit (Terminal block kit) Double wiring	L0	L kit (Lead wire kit) Lead wire length 0.6 m	L1	L kit (Lead wire kit) Lead wire length 1.5 m	L2	L kit (Lead wire kit) Lead wire length 3.0 m	SS	S kit (Serial transmission kit) Single wiring	SW	S kit (Serial transmission kit) Double wiring	01	1 station	⋮	⋮	16	16 stations	Nil	None	B	Back pressure check valve	R	External pilot specifications
F0	Without lead wire (for using spare connectors to add stations)																																																																				
FS	F kit (D-sub connector kit) Single wiring																																																																				
FW	F kit (D-sub connector kit) Double wiring																																																																				
PS	P, J kit (Flat ribbon cable kit) Single wiring																																																																				
PW	P, J kit (Flat ribbon cable kit) Double wiring																																																																				
L0	L kit (Lead wire kit) Lead wire length 0.6 m																																																																				
L1	L kit (Lead wire kit) Lead wire length 1.5 m																																																																				
L2	L kit (Lead wire kit) Lead wire length 3.0 m																																																																				
SS	S kit (Serial transmission kit) Single wiring																																																																				
SW	S kit (Serial transmission kit) Double wiring																																																																				
01	1 station																																																																				
⋮	⋮																																																																				
24	24 station																																																																				
Nil	None																																																																				
B	Back pressure check valve																																																																				
R	External pilot specifications																																																																				
F0	Without lead wire (for using spare connectors to add stations)																																																																				
FS	F kit (D-sub connector kit) Single wiring																																																																				
FW	F kit (D-sub connector kit) Double wiring																																																																				
PS	P, J kit (Flat ribbon cable kit) Single wiring																																																																				
PW	P, J kit (Flat ribbon cable kit) Double wiring																																																																				
TS	T kit (Terminal block kit) Single wiring																																																																				
TW	T kit (Terminal block kit) Double wiring																																																																				
L0	L kit (Lead wire kit) Lead wire length 0.6 m																																																																				
L1	L kit (Lead wire kit) Lead wire length 1.5 m																																																																				
L2	L kit (Lead wire kit) Lead wire length 3.0 m																																																																				
SS	S kit (Serial transmission kit) Single wiring																																																																				
SW	S kit (Serial transmission kit) Double wiring																																																																				
01	1 station																																																																				
⋮	⋮																																																																				
16	16 stations																																																																				
Nil	None																																																																				
B	Back pressure check valve																																																																				
R	External pilot specifications																																																																				

3. Connection Method (Refer to page 2-3-57 regarding the steps for adding stations to a manifold block.)

Connect the round terminal of the red lead wire to the common terminal inside the junction cover.

(1) Connecting common terminals

Connect lead wire assemblies included with manifold blocks as follows.

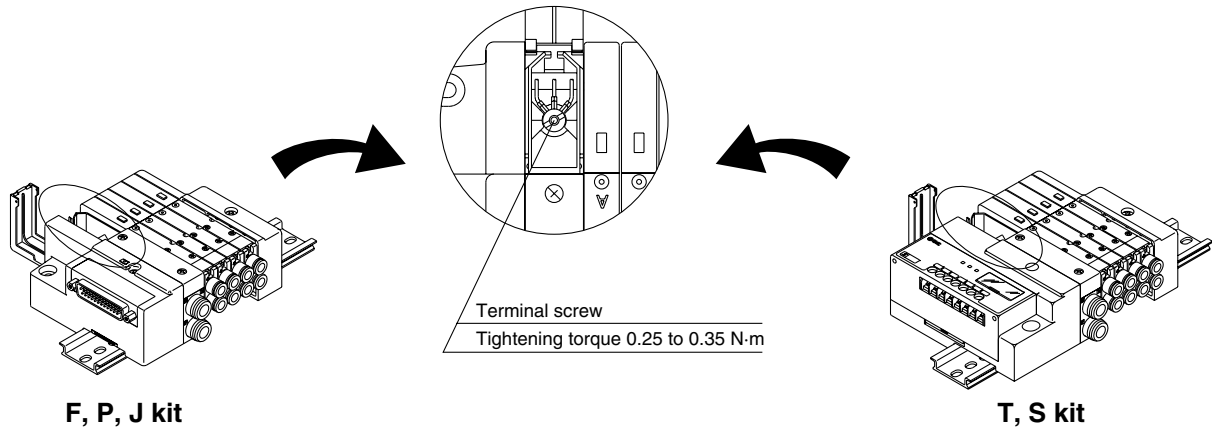

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD

(2) Pulling out connector

Pull out the connector to connect the lead wire.

- For F, P, and J kits, pull out and remove the housing while pressing down hard on the hook with a flat head screwdriver, etc. Remove the manual lever and lead wire cover, and pull out the connector.
- For T kits, remove the screws and pull out the terminal block.
- For S kits, remove the screws and pull out the connector.

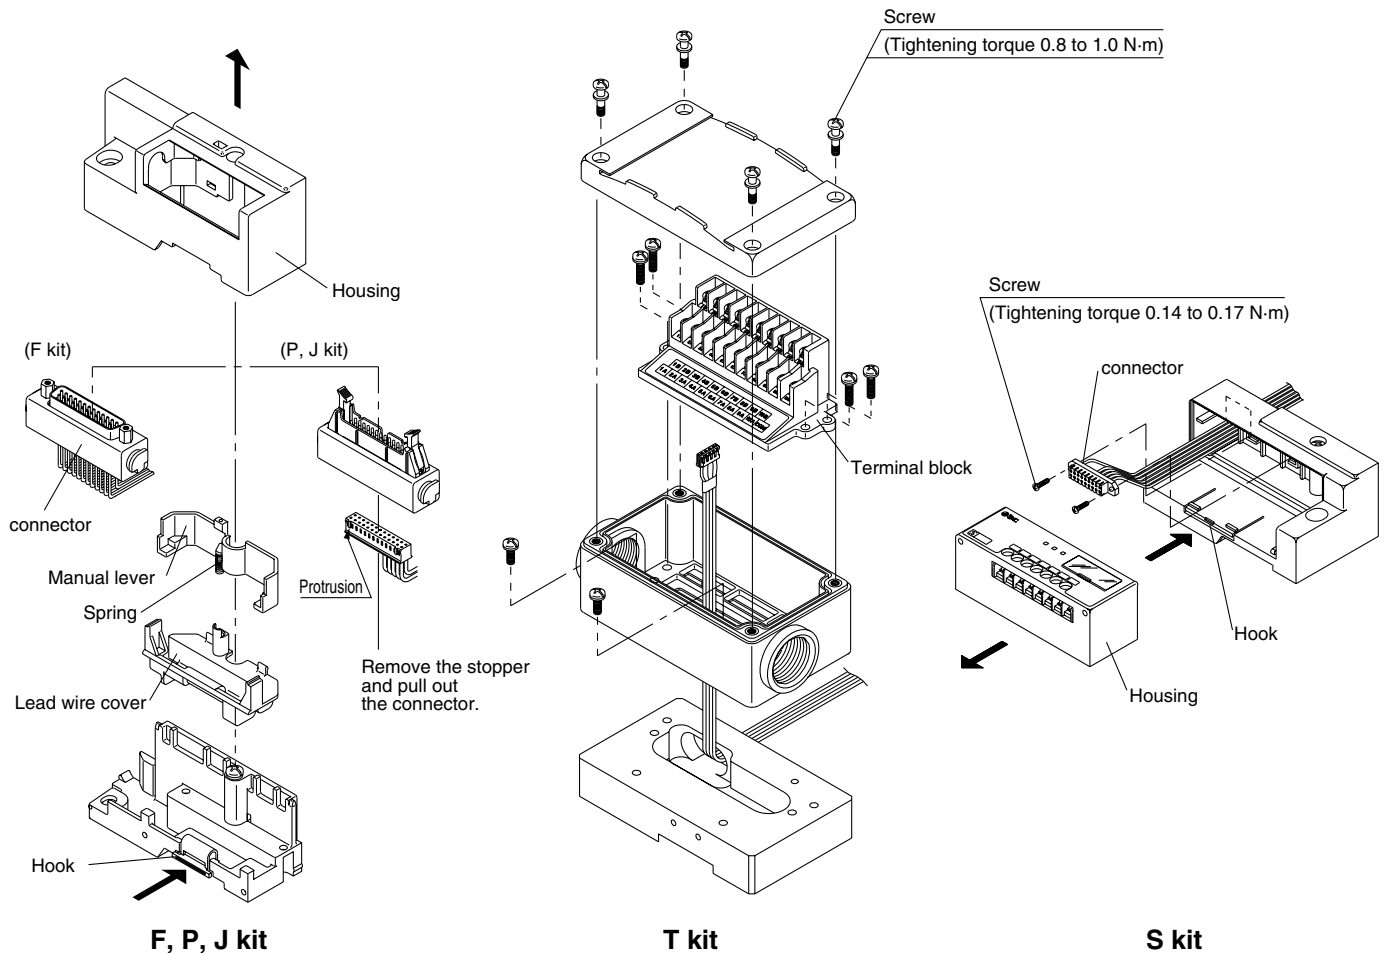

Series SQ1000/2000


How to Add Manifold Stations for SQ1000/SQ2000

(3) Connect the black and white lead wire pins to the positions shown below in accordance with each kit.

- ⚠ Caution**
- After inserting the pin, confirm that the pin hook is locked by lightly pulling the lead wire.
 - Do not pull the lead wire forcefully when connecting. Also, take care that lead wires do not get caught between manifolds or when closing the junction cover.


Wiring (F kit: D-sub connector kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1 of the D-sub connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

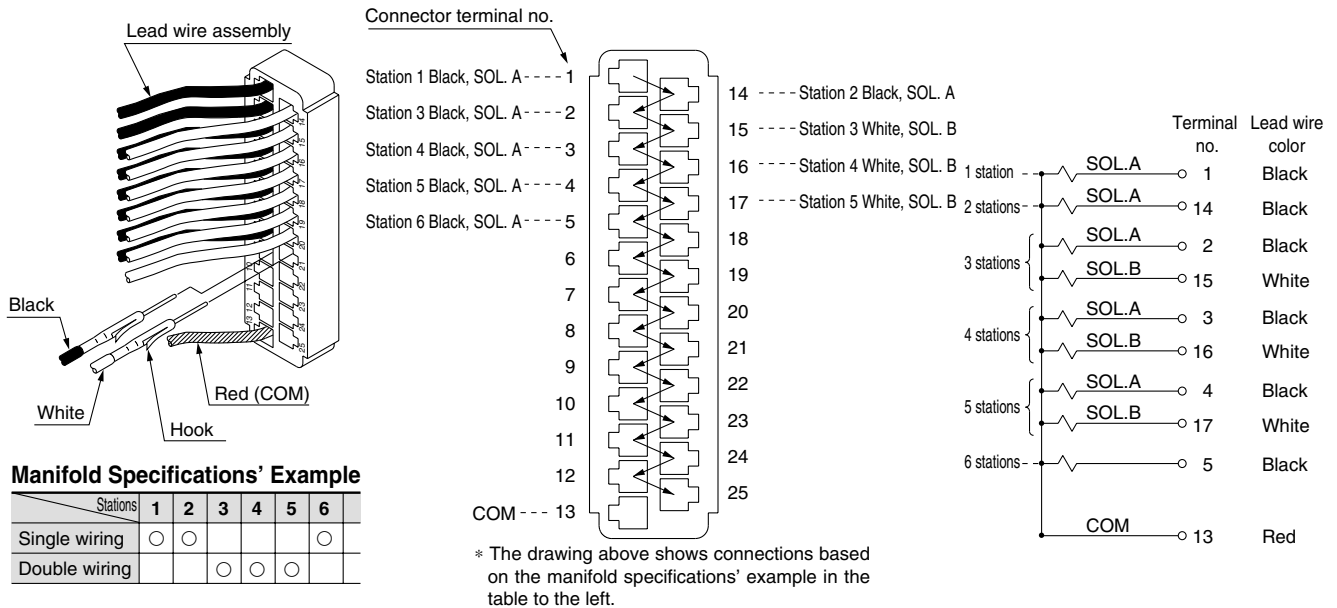


Wiring (P kit: Flat ribbon cable kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1 of the D-sub connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

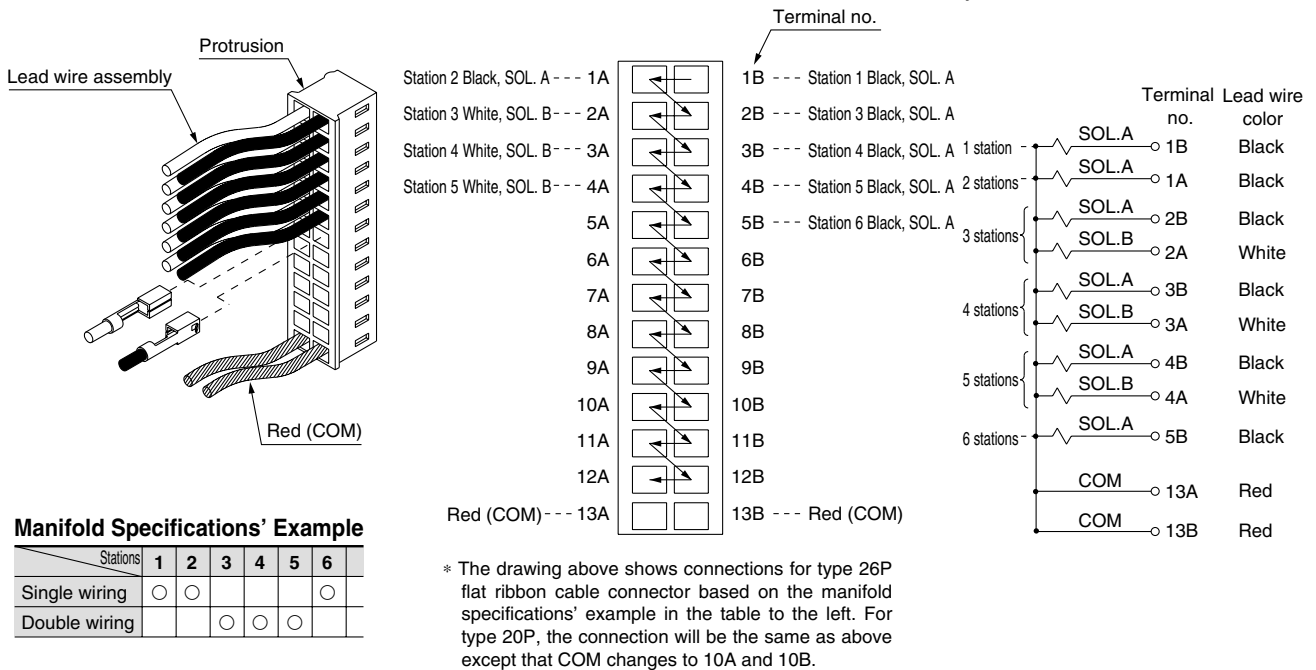

Wiring (J kit: Flat ribbon cable kit, PC Wiring System compatible)


Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 10A of the flat ribbon cable connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

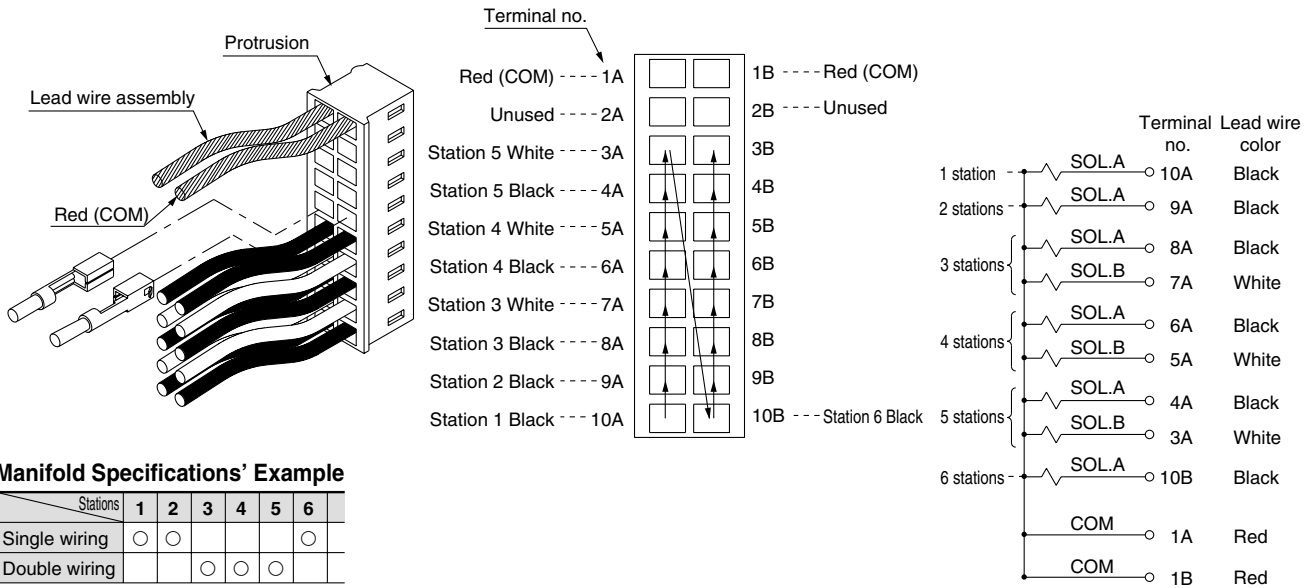

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Wiring (T kit: Terminal block kit)

Procedure) Based on the manifold specifications, connect to the housing according to the wiring example below.

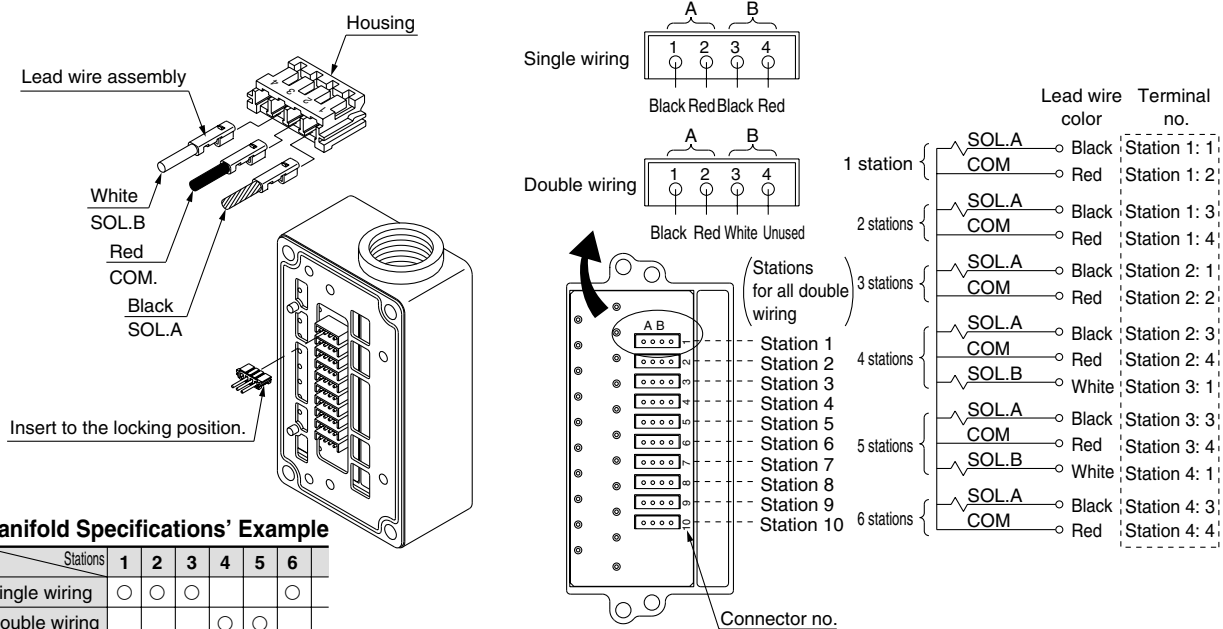


Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

Wiring (S kit: Serial transmission kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1 of the serial connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

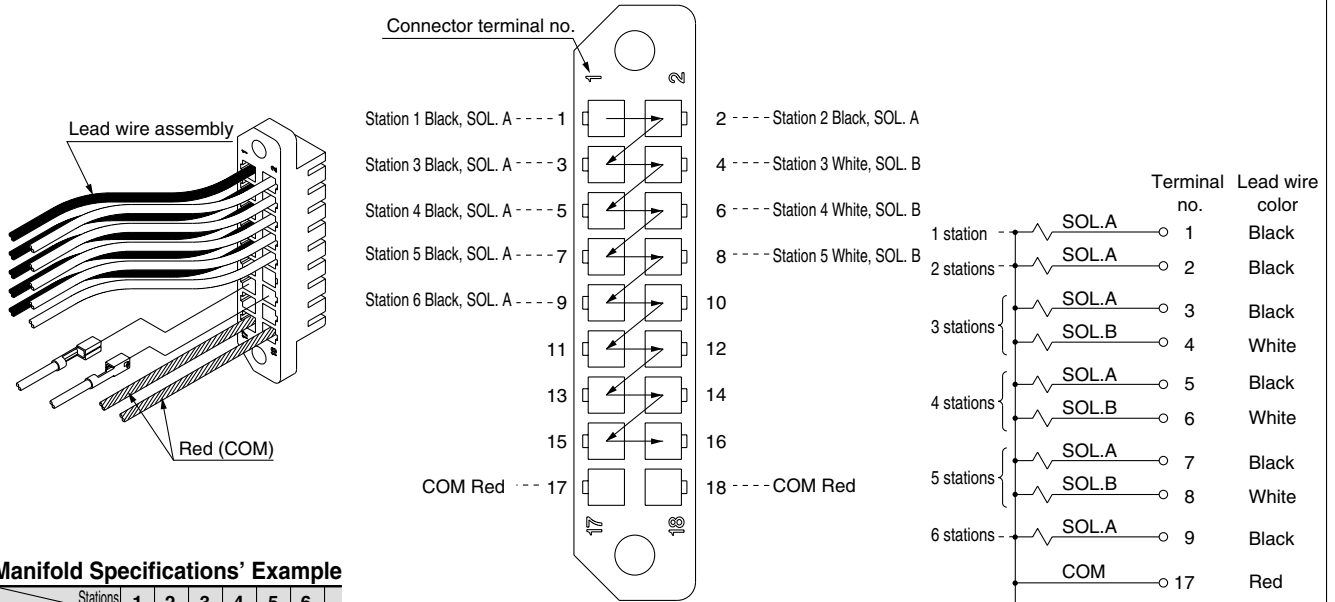

Manifold Specifications' Example

Stations	1	2	3	4	5	6
Single wiring	○	○				○
Double wiring			○	○	○	



* The drawing above shows connections based on the manifold specifications' example in the table to the left.

Series SQ1000/2000



Construction: Series SQ1000 Plug-in Type Main Parts and Pilot Valve Assembly

Metal seal type



Single: SQ1130

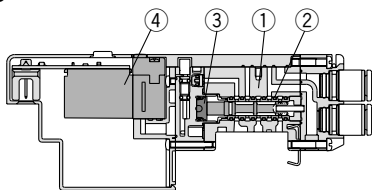



Double (Latching): SQ1230

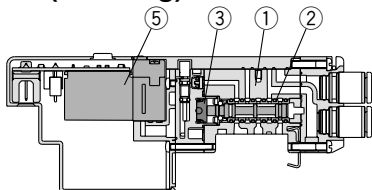

Double (Double solenoid): SQ1230D


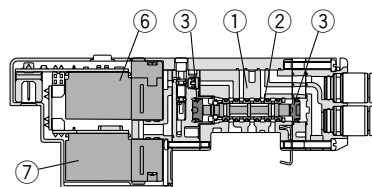


3 position: SQ1 $\frac{3}{5}$ 30

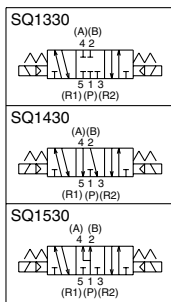
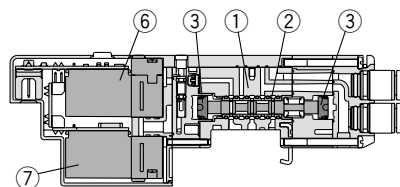


Rubber seal type



Single: SQ1131

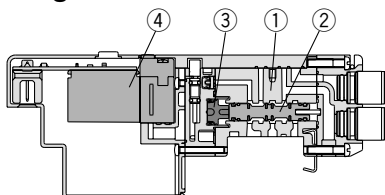



Double (Latching): SQ1231

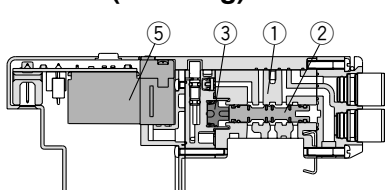



Double (Double solenoid): SQ1231D

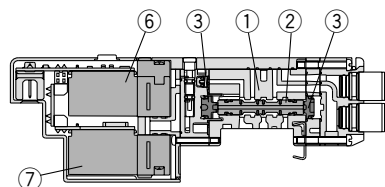

3 position: SQ1 $\frac{3}{5}$ 31

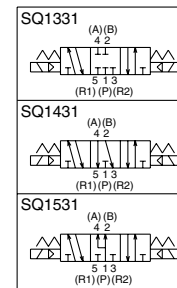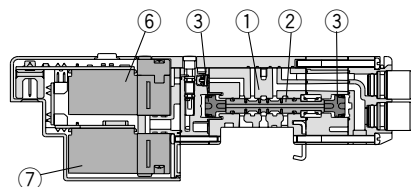

Dual 3 port valve: SQ1 $\frac{A}{B}{C}$ 31

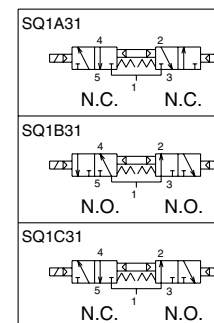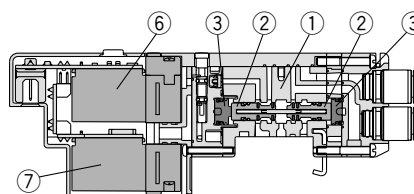

Component Parts

No.	Description	Material
①	Body	Zinc die-casted
②	Spool/Sleeve	Stainless steel (Metal seal)
③	Spool	Aluminum (Rubber seal)
③	Piston	Resin

Pilot Valve Assembly ^{Note)}

No.	Model	SQ1□3□
④	For single	VQ110S ^(K) 5 _{(Y) - 6} (N)J11(B)
⑤	For double (Latching)	VQ110SL- ⁵ J12 Negative COM: VQ110SN- ⁵ J12
⑥	For double (Double solenoid) on A side For 3P, Dual 3 port on A side	VQ110S ^(K) 5 _{(Y) - 6} (N)J13(B)
⑦	For double (Double solenoid) on B side For 3P, Dual 3 port on B side	VQ111S ^(K) 5 _{(Y) - 6} (N)J14



Note) Nil: Standard

B : Locking type manual override


N : Negative COM specifications

Y : Low wattage specifications

Series SQ1000/2000

Exploded View of Manifold: SQ1000 (Plug-in Type Manifold) SS5Q13

(F, P, J, L, S kit)

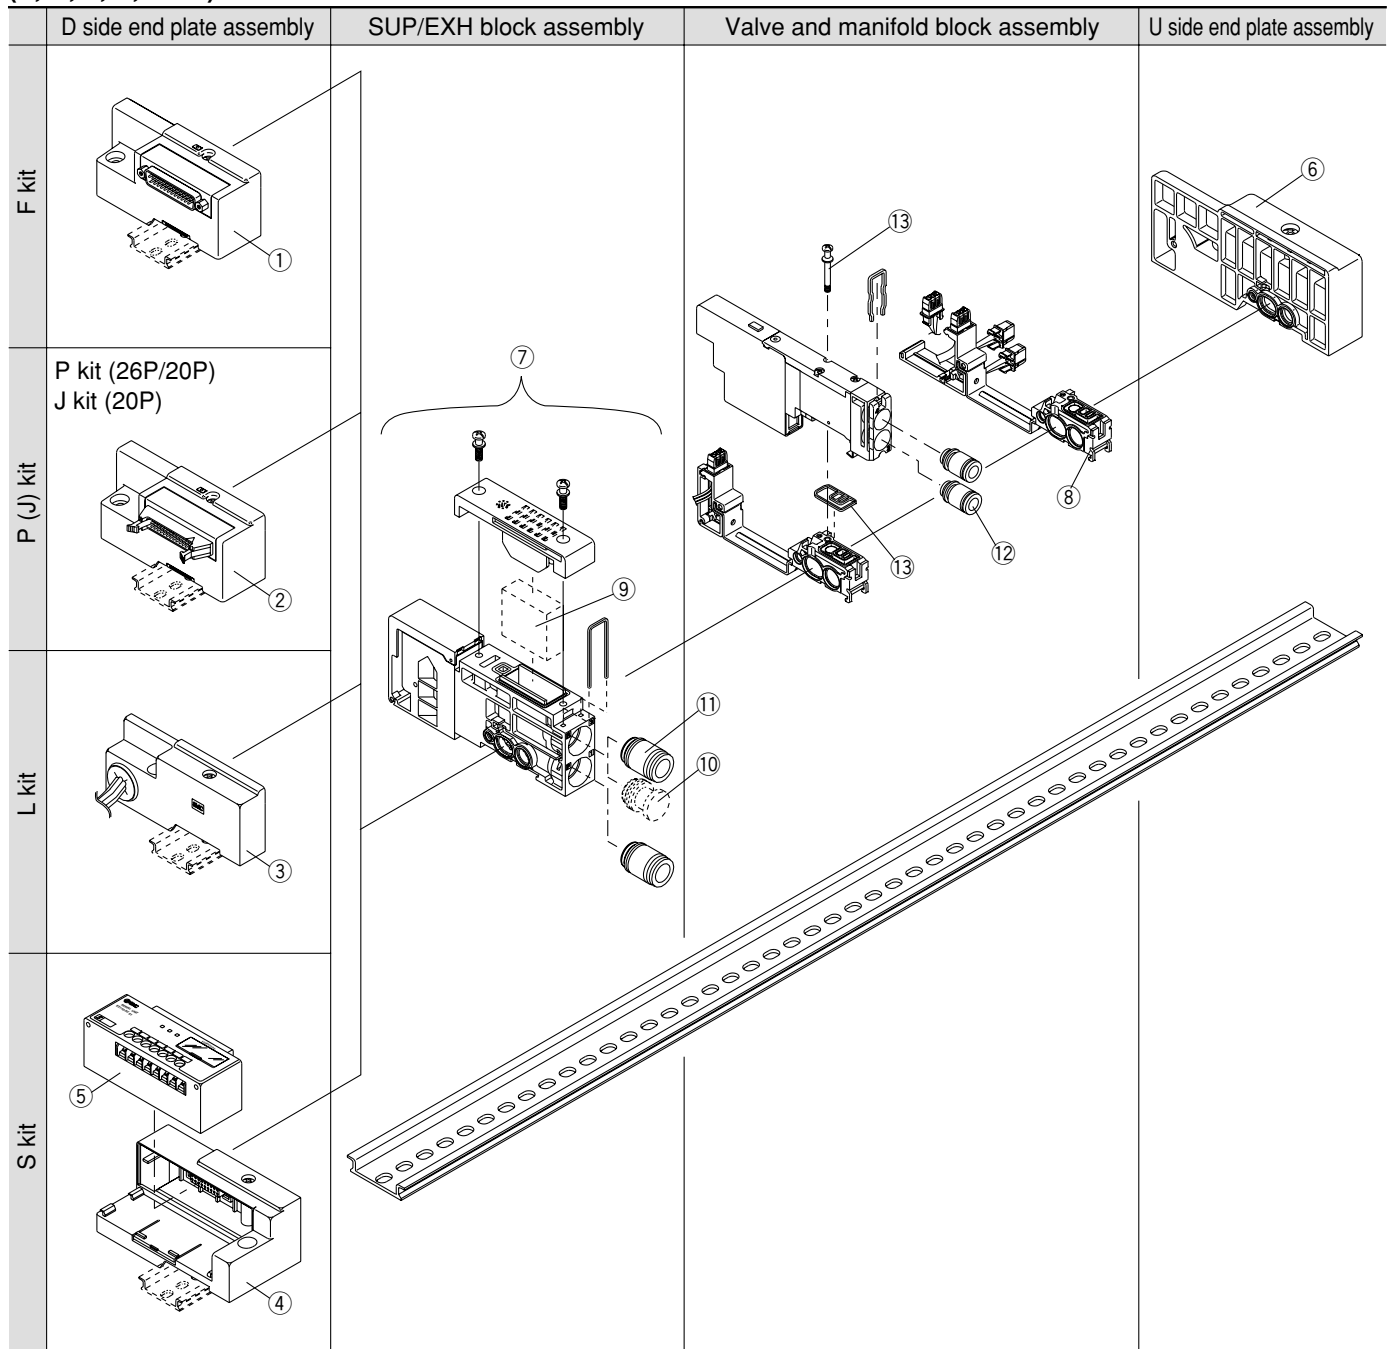

Manifold Spare Parts



Refer to pages 2-3-58 to 62 of "How to Add Manifold Stations" regarding the mounting of each spare parts.

<① ② ③ ④ D side end plate assembly>

SSQ1000 – 3A – 3

Manifold mounting

Nil	DIN rail mount style
E	Direct mount style

Electrical entry

F	F kit	①
P	P kit (26P)	②
PC	P kit (20P)	
J	J kit (20P)	③
Nil	L kit	
S	S kit	④

Wiring specifications

O	Without lead wire
S	Single wiring
W	Double wiring

Stations

01	For 1 station
⋮	⋮
24	For 24 stations

Note) The maximum number of stations will be different depending on the wiring specifications.

<⑤ SI unit>

Manifold	No.	Description
SDF kit	EX140-SUW1	NKE Corp.: Uni-wire System (16 output points)
SDH kit	EX140-SUH1	NKE Corp.: Uni-wire H System (16 output points)
SDJ1 kit	EX140-SSL1	SUNX Corp.: S-LINK System (16 output points)
SDJ2 kit	EX140-SSL2	SUNX Corp.: S-LINK System (8 output points)
SDQ kit	EX140-SDN1	DeviceNet, CompoBus/D (OMRON Corp.) (16 output points)
SDR1 kit	EX140-SCS1	OMRON Corp.: CompoBus/S System (16 output points)
SDR2 kit	EX140-SCS2	OMRON Corp.: CompoBus/S System (8 output points)
SDV kit	EX140-SMJ1	Mitsubishi Electric Corp.: CC-LINK System (16 output points)

<⑥ U side end plate assembly>

(For F, P, J, S kit)

SSQ1000 – 2A – 3

(For L kit)

SSQ1000 – 2A – 3

Manifold mounting

Nil	DIN rail mount style
E	Direct mount style

<⑦ SUP/EXH block assembly>

SSQ1000 – PR – 3 – C8

Port size

C8	One-touch fitting for ø8
N9	One-touch fitting for ø5/16"

Option

Nil	Common exhaust type
R	External pilot
S	Built-in silencer, direct exhaust

Note) Enter "RS" for both options.

<⑧ Manifold block assembly>

SSQ1000 – 1A – 3 – F0 01 Including gaskets ⑬

Lead wire type

F0	Without lead wire
FS	F kit: D-sub connector kit Single wiring
FW	F kit: D-sub connector kit Double wiring
PS	P kit: Flat ribbon cable kit Single wiring
	J kit: PC Wiring System compatible Single wiring
PW	P kit: Flat ribbon cable kit Double wiring
	J kit: PC Wiring System compatible Double wiring
L0	L kit: Lead wire kit Lead wire length 0.6 m
L1	L kit: Lead wire kit Lead wire length 1.5 m
L2	L kit: Lead wire kit Lead wire length 3 m
SS	S kit: Serial transmission kit Single wiring
SW	S kit: Serial transmission kit Double wiring

Option

Nil	None
B	Back pressure check valve
R	External pilot specifications

Note) Enter "BR" for both options.

**Applicable stations
(For F, P, J, S kit)**

01	Station 1
⋮	⋮
24	Station 24

Note 1) No symbol required for "F0".
Note 2) Specify from "01" to "16" for S kit.

<⑨ Element>

SSQ1000 – SE

Note) Part number for a 10 piece set of element.
For replacement procedures, refer to page 2-3-5.

<⑩ Port plug>

VVQZ2000 – CP

<⑪ Fitting assembly>

(For P, R port)

VVQ1000 – 51A – C8

Port size

C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"

Note) Purchasing order is available in units of 10 pieces

<⑫ Fitting assembly>

(For cylinder port)

VVQ1000 – 50A – C3

Port size

C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6
M5	M5 thread
N1	One-touch fitting for ø1/8"
N3	One-touch fitting for ø5/32"
N7	One-touch fitting for ø1/4"

Note) Purchasing order is available in units of 10 pieces

<⑬ Gasket and screw assembly>

SQ1000 – GS

Note) Part number for 10 pieces each of gaskets and screws.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD



Series SQ1000 Plug Lead Unit

How to Order Manifold

SS5Q14 — **08** **FD2** — **D**

Stations

01	1 station
⋮	⋮
24 ^{Note}	24 stations

Note) The maximum number of stations depends on the type of electrical entries.

Option

Nil	None
02 to 24 ⁽¹⁾	DIN rail length specified
B	Back pressure check valve
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate (Side ported only)
R	External pilot specifications
S	Built-in silencer, direct exhaust

Note 1) For specifying DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08

Note 2) Standard wiring specification are for double wiring. Indicate wiring specifications for single wiring or mixed single and double wiring, or when exceeding the standard maximum number of stations. (Except C kit)

Note 3) For specifying two or more options, enter them alphabetically. Example: -BKN

Manifold mounting

D	DIN rail mount style
E ^{Note}	Direct mount style

Note) C kit of SQ2000 only.

Electrical entry

Kit type	Lead wire connector location	Cable specifications	Station	Max. number of stations for special wiring specifications	Max. number of solenoids ⁽²⁾
F kit D-sub Connector kit	FD0 FD1 FD2 FD3 D side	D-sub connector (25P) kit, without cable	1 to 12 stations	24 stations	24
		D-sub connector (25P) kit, with 1.5 m cable			
		D-sub connector (25P) kit, with 3.0 m cable			
		D-sub connector (25P) kit, with 5.0 m cable			
P kit Flat ribbon cable connector kit (26P/20P)	PD0 PD1 PD2 PD3 PDC D side ⁽¹⁾	Flat ribbon cable (26P) kit, without cable	1 to 12 stations	24 stations	24
		Flat ribbon cable (26P) kit, with 1.5 m cable			
		Flat ribbon cable (26P) kit, with 3.0 m cable			
		Flat ribbon cable (26P) kit, with 5.0 m cable			
		Flat ribbon cable (20P) kit, without cable	1 to 9 stations	18 stations	18
J kit Flat ribbon cable (20P) (PC Wiring System compatible)	JD0 D side	Flat ribbon cable (20P) PC Wiring System compatible	1 to 8 stations	16 stations	16
C kit Connector kit	C —	Connector kit	1 to 24 stations	—	—

Note 1) Separately order the 20P type cable assembly for the P kit.

Note 2) The maximum number of stations should not be more than the maximum number of solenoids. (The number of solenoids are counted as: 1 for single solenoids and 2 for type 3P and 4P double solenoids.)

How to Order Valves

SQ1 1 4 0 5 L C6

Type of actuation

1	2 position single
2	2 position double (Latching) Metal seal Rubber seal
	2 position double (Double solenoid) ⁽¹⁾ Metal seal Rubber seal
3	3 position closed center
	3 position exhaust center
5	3 position pressure center
A (2)	4 position dual 3 port valve N.C. N.C.
	4 position dual 3 port valve N.O. N.O.
	4 position dual 3 port valve N.C. N.O.

Note 1) For double solenoid specifications, the function symbol below is "D".
Note 2) Only rubber seal types are applicable.

Seal

0	Metal seal
1	Rubber seal

Function

Nil	Standard type (1.0 W DC)
D	2 position double (Double solenoid specifications)
K ⁽¹⁾	High pressure type (1.0 MPa, 1.0 W DC) [Applicable to metal seal only]
N	Negative COM
Y ⁽¹⁾	Low wattage type (0.5 W DC)
R ⁽²⁾	External pilot specifications

Note 1) Except double (latching) type.
Note 2) Except dual 3 port valves.
Note 3) When two or more symbols are specified, indicate them alphabetically.

Coil voltage

5	24 VDC
6	12 VDC

Note) Light/Surge voltage suppressor is built-in.

With/Without manifold block

Nil	M	MB
Without manifold block 	With manifold block 	With manifold block, built-in back pressure check valve
<ul style="list-style-type: none"> When ordering with manifolds When only valves are required. 		For adding stations

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Port plug mounting port

Nil	None
A	Port 4(A)
B	Port 2(B)


Cylinder port

		Side ported	
C3	One-touch fitting for $\phi 3.2$		
C4	One-touch fitting for $\phi 4$		
C6	One-touch fitting for $\phi 6$		
M5	M5 thread	Top ported	
L3	One-touch fitting for $\phi 3.2$		
L4	One-touch fitting for $\phi 4$		
L6	One-touch fitting for $\phi 6$		
L5	M5 thread		

Note) Can be changed to side ported configuration.

Manual override

Nil	B Note)
Non-locking push type (Tool required)	Locking type (Tool required)

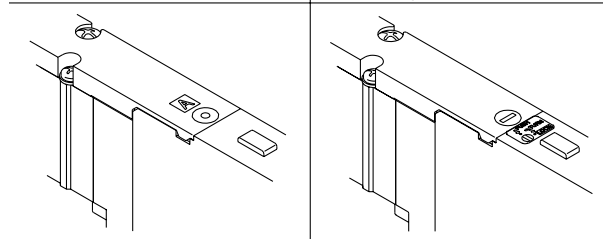

Note) Except double (latching) type.

Electrical entry

















L	LO
Plug connector type With 300 mm lead wire 	Plug connector type without connector

Note) For F, P, J kit manifolds

Note) Indicate "LO" when ordering centralized wiring type manifolds, F, P, and J kits, since the lead wire will be attached to the manifold side.


Series SQ1000

Manifold Option
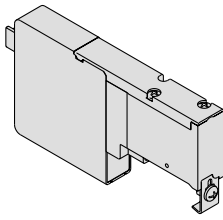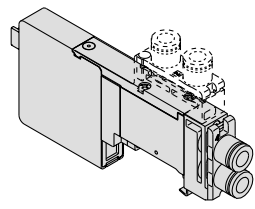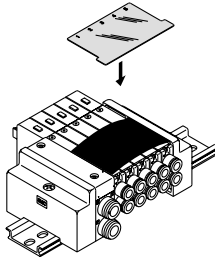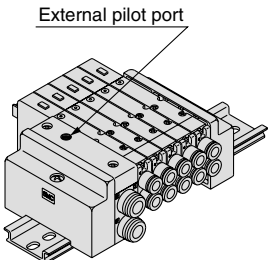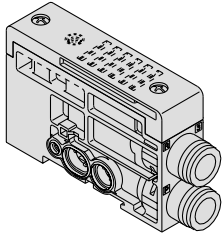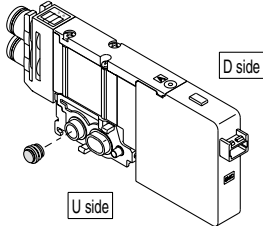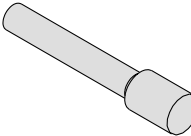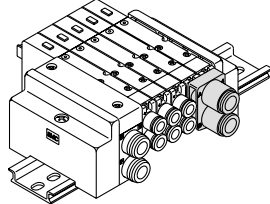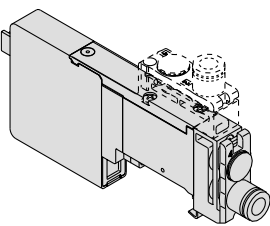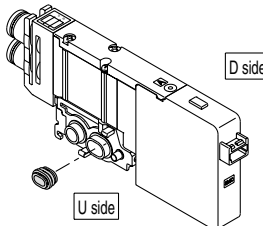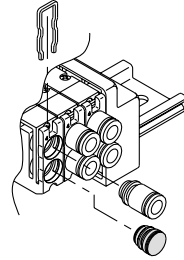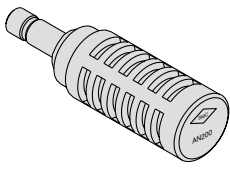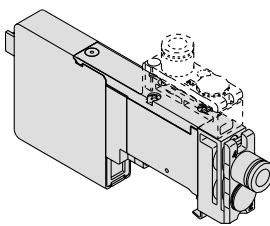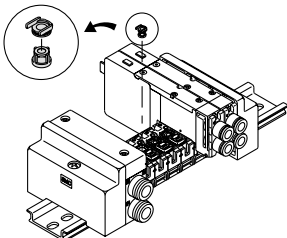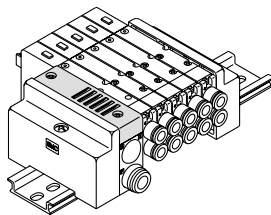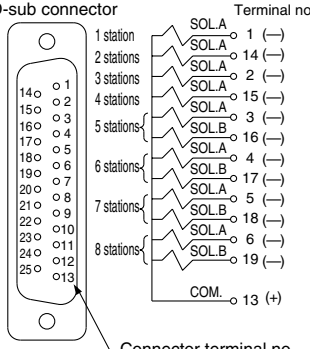
<p>Blanking plate P. 2-3-98 SSQ1000-10A-4</p> 	<p>Individual SUP/EXH spacer P. 2-3-99 SSQ1000-PR1-4-^{C6}_{L6}</p> 	<p>Name plate (-N) P. 2-3-101 SSQ1000-N3-n</p> 	<p>External pilot specifications (-R) P. 2-3-102</p>  <p>External pilot port</p>
<p>SUP/EXH block P. 2-3-98 SSQ1000-PR-4-C8 (-S)</p> 	<p>SUP block plate P. 2-3-100 SSQ1000-B-P</p>  <p>D side</p> <p>U side</p>	<p>Blanking plug P. 2-3-101 KQ2P-23/04/06/08</p> 	<p>Dual flow fitting P. 2-3-102 SSQ1000-52A-^{C8}_{N9}</p> 
<p>Individual SUP spacer P. 2-3-98 SSQ1000-P-4-^{C6}_{L6}</p> 	<p>EXH block plate P. 2-3-100 SSQ1000-B-R</p>  <p>D side</p> <p>U side</p>	<p>Port plug P. 2-3-101 VVQZ100-CP</p> 	<p>Silencer (For EXH port) P. 2-3-102</p> 
<p>Individual EXH spacer P. 2-3-99 SSQ1000-R-4-^{C6}_{L6}</p> 	<p>Back pressure check valve (-B) P. 2-3-100 SSQ1000-BP</p> 	<p>Built-in silencer (-S) P. 2-3-101</p> 	<p>Special wiring specifications (-K) P. 2-3-108</p>  <p>D-sub connector</p> <p>Terminal no.</p> <p>Connector terminal no.</p>

How to Order Manifold Assembly (Example)

Example: D-sub connector kit, with cable (3 m)

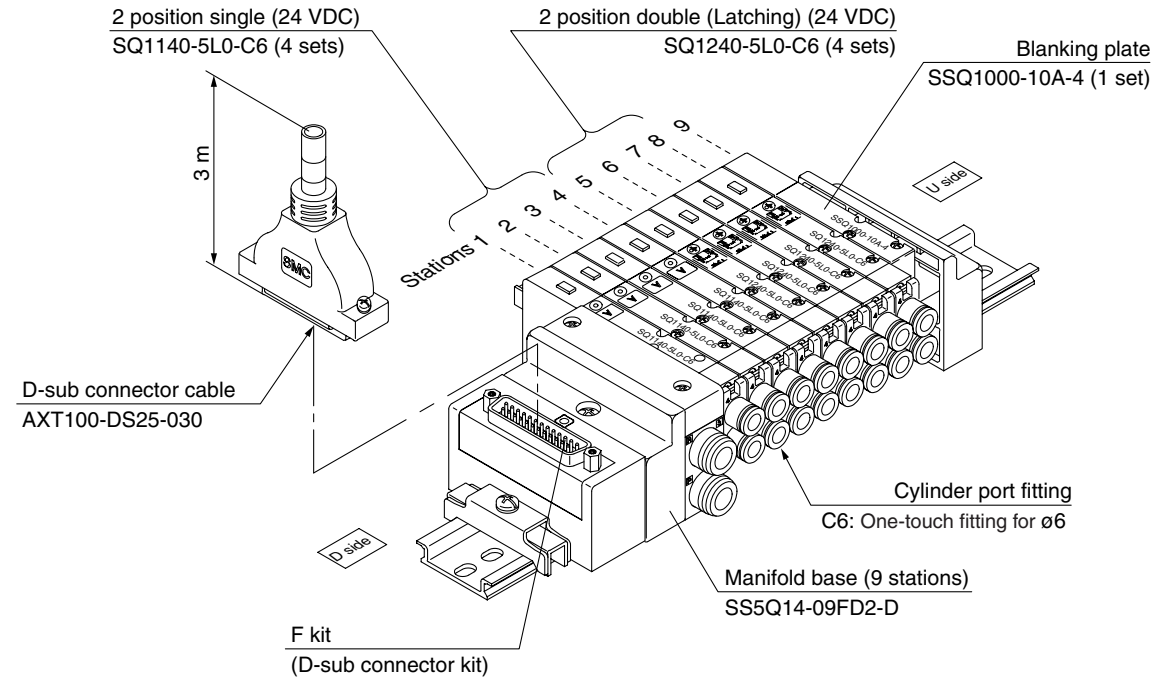

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

- S SS5Q14-09FD2-D 1 set (F kit 9 station manifold base)
- * SQ1140-5L0-C6 4 sets (2 position single)
- * SQ1240-5L0-C6 4 sets (2 position double [latching])
- * SSQ1000-10A-4 1 set (Blanking plate)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Add the valve and option part numbers in order starting from the first station on the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Series SQ1000

Valve Specifications

Model

Series	Number of solenoids	Model		Flow characteristics						Response time (ms) ⁽²⁾		Weight (g)	
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W	Low wattage		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv				
SQ1000	2 position	Single	Metal seal	SQ1140	0.62	0.10	0.14	0.63	0.11	0.14	12 or less	15 or less	80
			Rubber seal	SQ1141	0.79	0.20	0.19	0.80	0.20	0.19	15 or less	20 or less	80
		Double (Latching)	Metal seal	SQ1240	0.62	0.10	0.14	0.63	0.11	0.14	15 or less	—	80
			Rubber seal	SQ1241	0.79	0.20	0.19	0.80	0.20	0.19	20 or less	—	80
		Double (Double solenoid)	Metal seal	SQ1240D	0.62	0.10	0.14	0.63	0.11	0.14	10 or less	13 or less	95
			Rubber seal	SQ1241D	0.79	0.20	0.19	0.80	0.20	0.19	15 or less	20 or less	95
	3 position	Closed center	Metal seal	SQ1340	0.58	0.12	0.14	0.63	0.11	0.14	20 or less	26 or less	100
			Rubber seal	SQ1341	0.64	0.20	0.15	0.58	0.26	0.16	25 or less	33 or less	100
		Exhaust center	Metal seal	SQ1440	0.58	0.12	0.14	0.60	0.14	0.14	20 or less	26 or less	100
			Rubber seal	SQ1441	0.64	0.20	0.15	0.80	0.20	0.19	25 or less	33 or less	100
		Pressure center	Metal seal	SQ1540	0.62	0.12	0.14	0.63	0.14	0.14	20 or less	26 or less	100
			Rubber seal	SQ1541	0.79	0.21	0.19	0.59	0.20	0.14	25 or less	33 or less	100
	4 position	Dual 3 port valve	Rubber seal	SQ1^{A B C}41	0.59	0.28	0.15	0.59	0.28	0.15	25 or less	33 or less	95



Note 1) Values for the cylinder port size of C6.

Note 2) Based on JIS B 8375-1981. (Values with a supply pressure of 0.5 MPa and light/surge voltage suppressor. Values fluctuate depending on the pressure and air quality.)



Specifications

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas		
	Maximum operating pressure	0.7 MPa (High pressure type: 1.0 MPa) ⁽³⁾		
	Min. operating pressure	Single	0.1 MPa	0.15 MPa
		Double (Latching)	0.18 MPa	0.18 MPa
		Double (Double solenoid)	0.1 MPa	0.1 MPa
		3 position	0.1 MPa	0.2 MPa
		4 position	—	0.15 MPa
	Ambient and fluid temperature	-10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
Pilot valve manual override	Push type/Locking type (Tool required)			
Vibration/Impact resistance ⁽²⁾	30/150 m/s ²			
Protection structure	Dust tight			
Solenoid specifications	Coil rated voltage	12 VDC, 24 VDC		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Equivalent to class B		
		Power consumption (Current)	24 VDC	1 W DC (42 mA), 0.5 W DC (21 mA) ⁽⁴⁾
	12 VDC	1 W DC (83 mA), 0.5 W DC (42 mA) ⁽⁴⁾		





Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Note 3) Metal seal type only. [Except double (latching) type.]

Note 4) Values for the low wattage (0.5 W) specification.

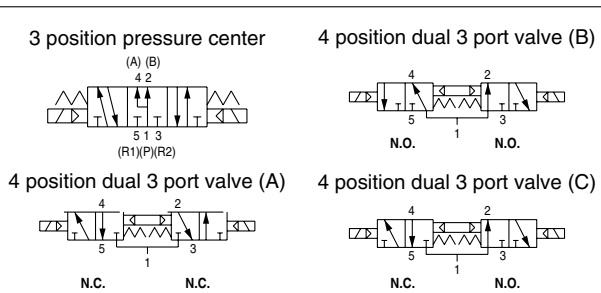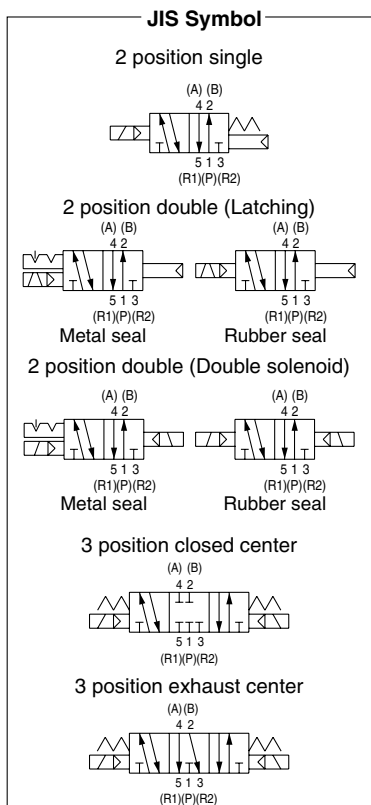

Manifold Specifications

Base model	Porting specifications		Applicable solenoid valve	Type of connection	Applicable stations ⁽³⁾	5 station weight (g) ⁽⁴⁾	1 station weight (g) ⁽⁴⁾	
	Port size ⁽¹⁾							
	1(P), 3(R)	4(A), 2(B)						
SS5Q14-□□□□	C8 (For ø8)	Port location	C3 (For ø3.2) C4 (For ø4) C6 (For ø6) M5 (M5 thread)	SQ1□40 SQ1□41	F kit: D-sub connector	1 to 12 stations	420	20
		Side						
	Option Built-in silencer, direct exhaust	Port location	L3 (For ø3.2) L4 (For ø4) L6 (For ø6) L5 (M5 thread)	J kit: Flat ribbon cable PC Wiring System compatible	1 to 8 stations	420	20	
		Top ⁽²⁾						
			C kit: Connector kit	1 to 12 stations	460	35		

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD




Note 1) One-touch fittings in inch sizes are also available. For details, refer to page 2-3-110.


Note 2) Can be changed to side ported configuration.

Note 3) An optional specification for special wiring is available to increase the maximum number of stations. Refer to page 2-3-108 for details.


Note 4) Except valves. For valve weight, refer to page 2-3-104.

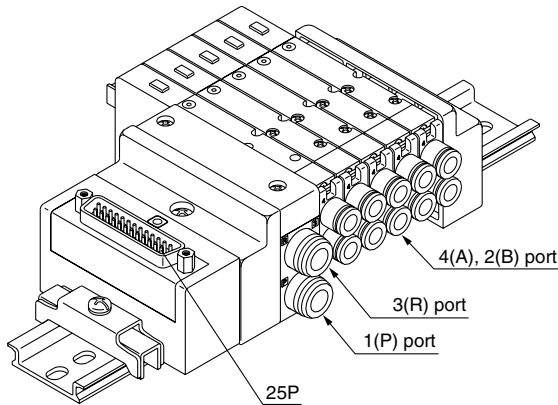

F kit

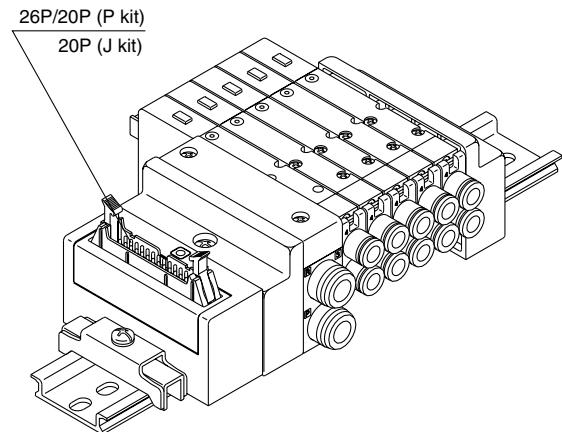


P kit J kit

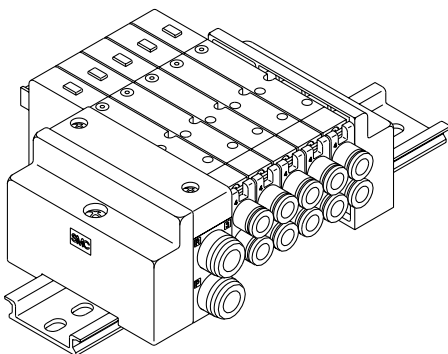

C kit

Series SQ1000

F Kit (D-sub connector kit)

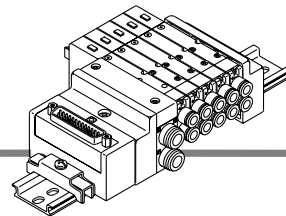


- Simplification and labor savings for wiring work can be achieved by using a D-sub connector for the electrical connection.
- Using connector for flat ribbon cable (25P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.

D-sub connector (25 pins)

Manifold Specifications


Series	Porting specifications		Maximum number of stations
	Port location	Port size	
SQ1000	Side, Top	1(P), 3(R)	12 stations (24 as an option)
		4(A), 2(B)	

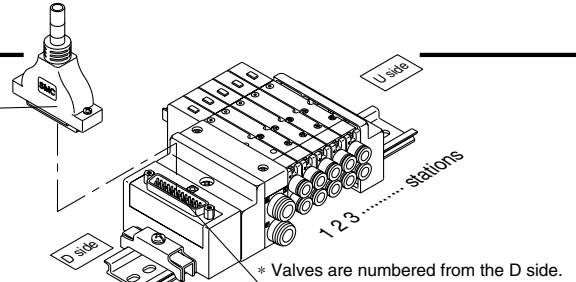

Cable assembly

AXT100-DS25-015
030
050

(D-sub connector cable assemblies can be ordered with manifolds.)
Refer to manifold ordering.

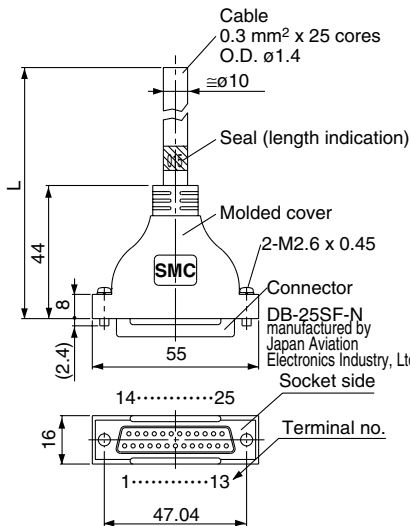

D-sub Connector Cable Assembly Terminal No.

Terminal Number	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm ² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

* Cannot be used for transfer wiring.

Electric characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit VAC, 1 min.	1000
Insulation resistance MΩ/km, 20°C	5 or less


Note) The minimum bending radius for D-sub connector cables is 20 mm.

Connector manufacturers' example

- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

Electrical wiring specifications

D-sub connector



As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as an option.

For details, refer to page 2-3-108.

Lead wire colors for D-sub connector assembly



AXT100-DS25-015
030
050

	Terminal no.	Polarity	Lead wire color	Dot marking	
1 station	SOL.A 1	(-)	(+)	Black	None
	SOL.B 14	(-)	(+)	Yellow	Black
2 stations	SOL.A 2	(-)	(+)	Brown	None
	SOL.B 15	(-)	(+)	Pink	Black
3 stations	SOL.A 3	(-)	(+)	Red	None
	SOL.B 16	(-)	(+)	Blue	White
4 stations	SOL.A 4	(-)	(+)	Orange	None
	SOL.B 17	(-)	(+)	Purple	None
5 stations	SOL.A 5	(-)	(+)	Yellow	None
	SOL.B 18	(-)	(+)	Gray	None
6 stations	SOL.A 6	(-)	(+)	Pink	None
	SOL.B 19	(-)	(+)	Orange	Black
7 stations	SOL.A 7	(-)	(+)	Blue	None
	SOL.B 20	(-)	(+)	Red	White
8 stations	SOL.A 8	(-)	(+)	Purple	White
	SOL.B 21	(-)	(+)	Brown	White
9 stations	SOL.A 9	(-)	(+)	Gray	Black
	SOL.B 22	(-)	(+)	Pink	Red
10 stations	SOL.A 10	(-)	(+)	White	Black
	SOL.B 23	(-)	(+)	Gray	Red
11 stations	SOL.A 11	(-)	(+)	White	Red
	SOL.B 24	(-)	(+)	Black	White
12 stations	SOL.A 12	(-)	(+)	Yellow	Red
	SOL.B 25	(-)	(+)	White	None
	COM. 13	(+)	(-)	Orange	Red

Note) Positive common specifications Negative common specifications

Note) When using the negative common specifications, use valves for negative common.

Plug Lead Unit Series SQ1000

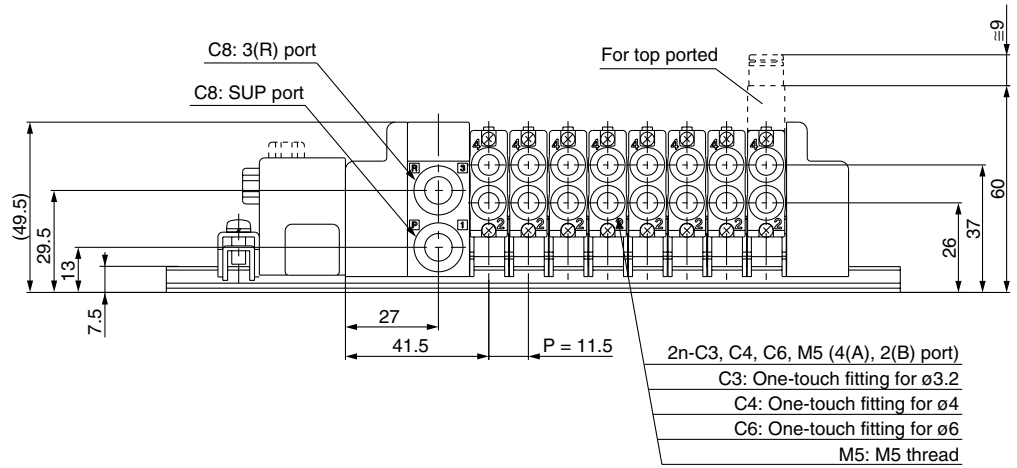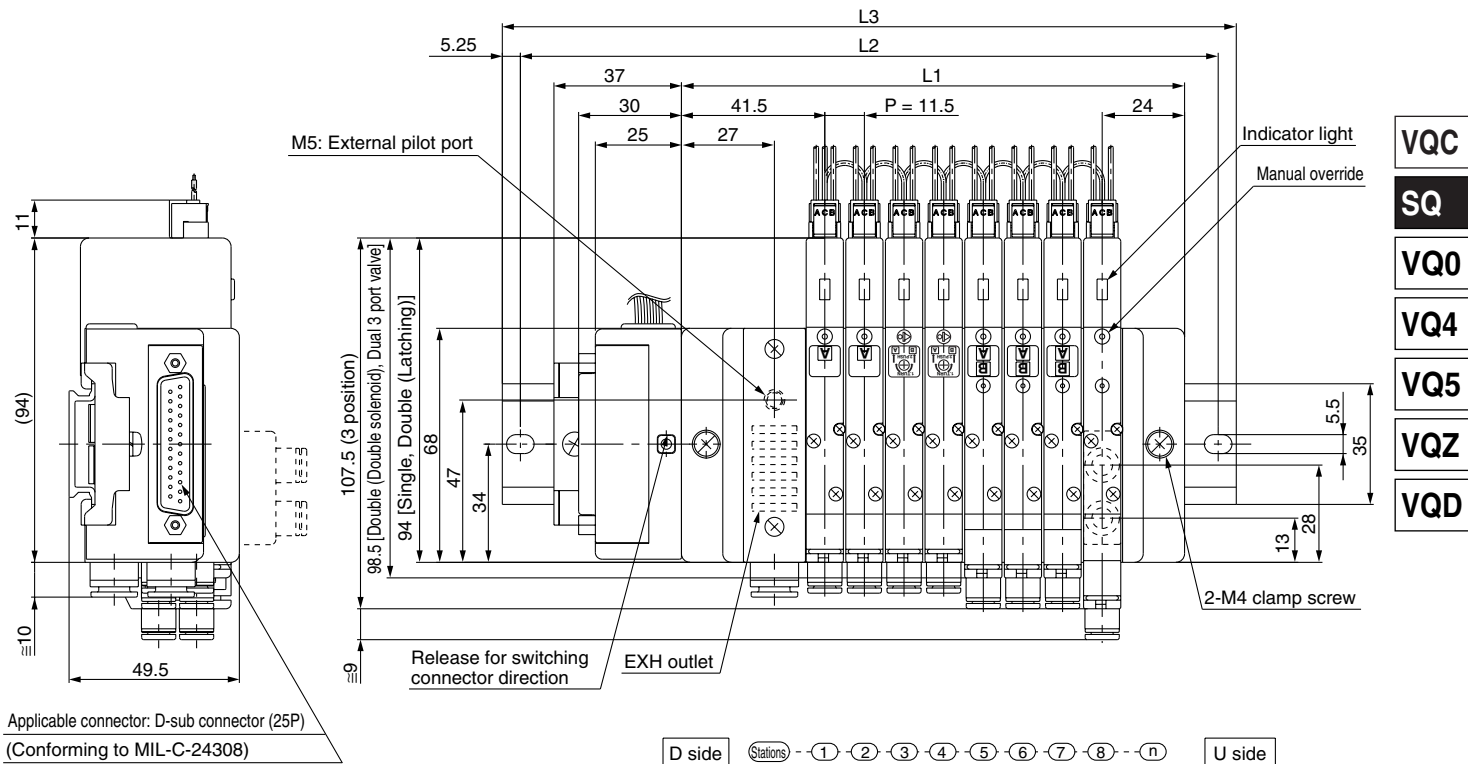


Dimensions

Formula: $L1 = 11.5n + 54$ n: Stations (Maximum 24 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		65.5	77	88.5	100	111.5	123	134.5	146	157.5	169	180.5	192	203.5	215	226.5	238	249.5	261	272.5	284	295.5	307	318.5	330
L2		125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	312.5	325	337.5	350	362.5	375	375	375	387.5
L3		135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	385.5	398

Series SQ1000

P Kit (Flat ribbon cable connector)

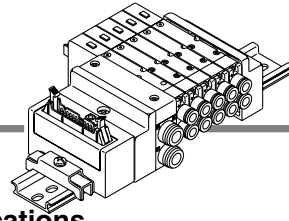

- Simplification and labor savings for wiring work can be achieved by using a MIL type for the electrical connection.
- Using connector for flat ribbon cable (26P, 20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.

Manifold Specifications


Series	Port location	Porting specifications		Maximum number of stations
		1(P), 3(R)	4(A), 2(B)	
SQ1000	Side, Top	C8	C3, C4, C6, M5	12 stations (24 as an option)

Flat ribbon cable (26 pins, 20 pins)

Cable assembly

AXT100-FC $\frac{20}{26}$ - $\frac{1}{3}$

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

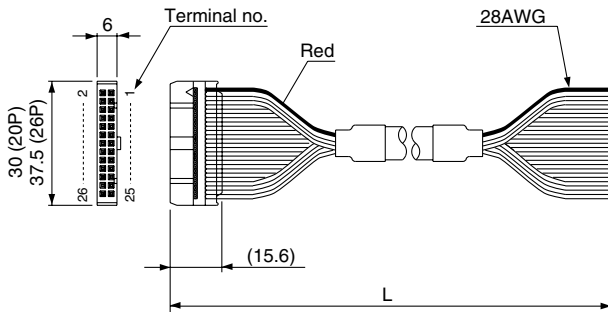


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

* For other commercial connectors, use a 26 pins or 20 pins with strain relief conforming to MIL-C-83503.
* Cannot be used for transfer wiring.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

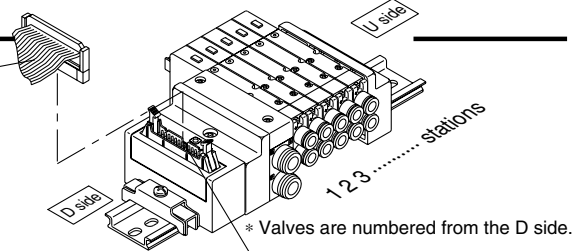

Electrical wiring specifications


Flat ribbon cable connector

26	□	25
24	□	23
22	□	21
20	□	19
18	□	17
16	□	15
14	□	13
12	□	11
10	□	9
8	□	7
6	□	5
4	□	3
2	□	1


Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.
Mixed single and double wiring is available as an option.
For details, refer to page 2-3-108.

Connector terminal no.


Triangle mark indicator position

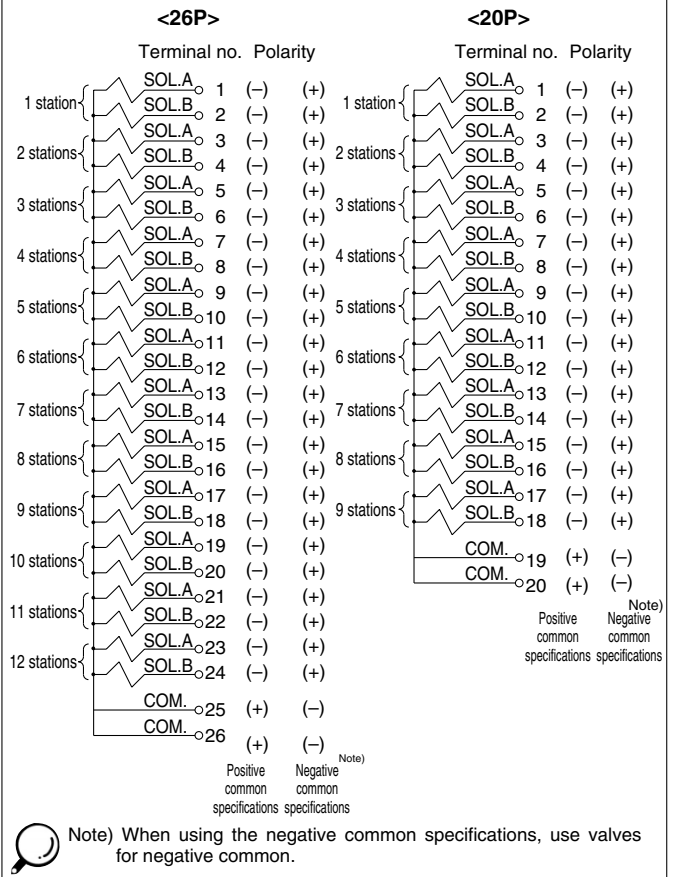

Plug Lead Unit Series SQ1000

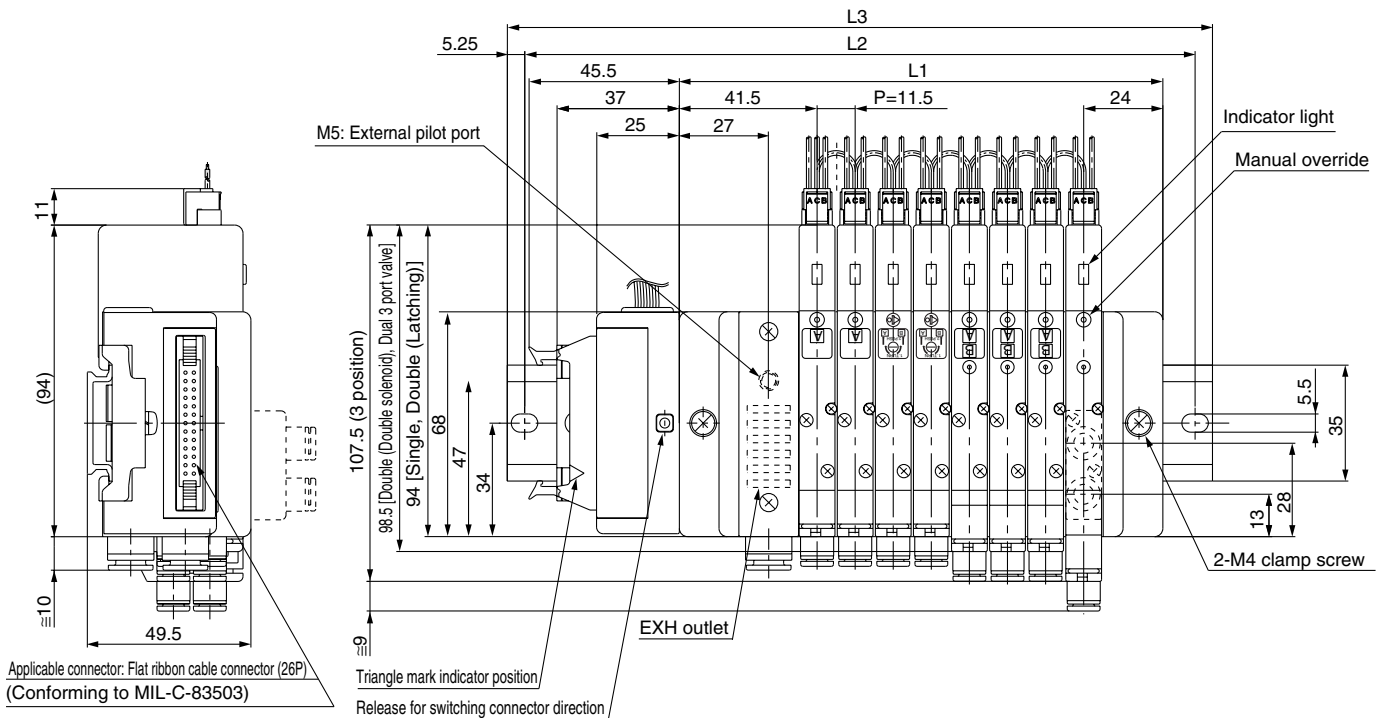

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

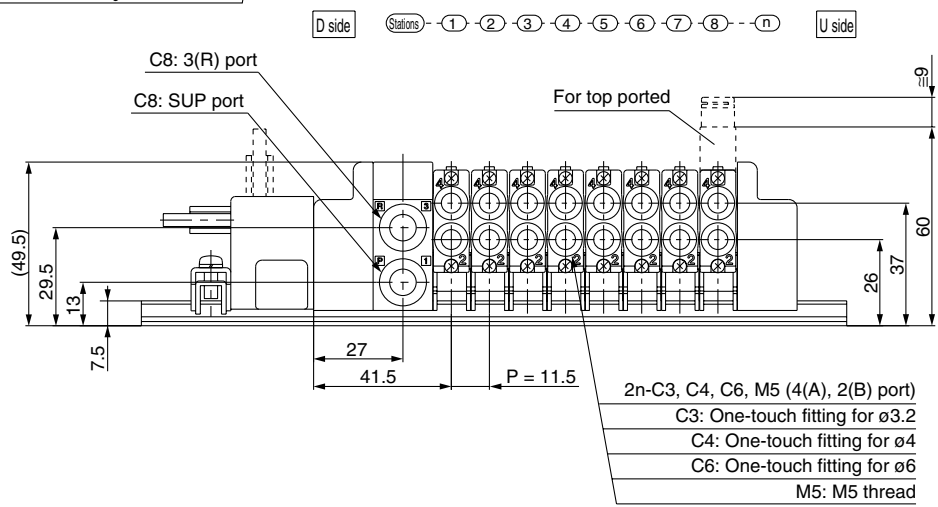

Dimensions


Formula: $L1 = 11.5n + 54$ n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	77	88.5	100	111.5	123	134.5	146	157.5	169	180.5	192	203.5	215	226.5	238	249.5	261	272.5	284	295.5	307	318.5	330
L2	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	312.5	325	337.5	350	362.5	375	375	387.5	387.5
L3	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	385.5	398

Series SQ1000

J


Kit (PC wiring system compatible flat ribbon cable kit)

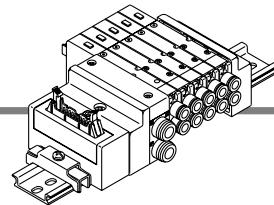

- PC Wiring System compatible.
- Using connector for flat ribbon cable (20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side entry for the connector can be changed freely, allowing later changes according to the mounting space.

Manifold Specifications


Series	Porting specifications		Maximum number of stations
	Port location	Port size	
SQ1000	Side, Top	1(P), 3(R)	8 stations (16 as an option)
		4(A), 2(B)	

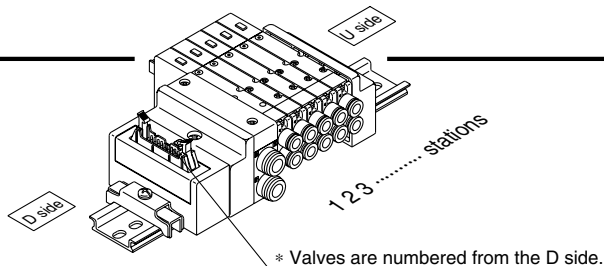

Electrical wiring specifications ●

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.
 Mixed single and double wiring is available as an option.
 For details, refer to page 2-3-108.

Flat ribbon cable connector


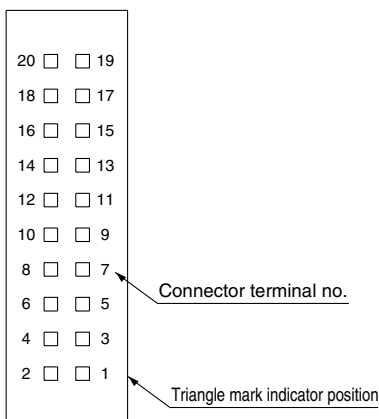


	Terminal no.	Polarity
1 station	SOL.A 20	(-) (+)
	SOL.B 18	(-) (+)
2 stations	SOL.A 16	(-) (+)
	SOL.B 14	(-) (+)
3 stations	SOL.A 12	(-) (+)
	SOL.B 10	(-) (+)
4 stations	SOL.A 8	(-) (+)
	SOL.B 6	(-) (+)
5 stations	SOL.A 19	(-) (+)
	SOL.B 17	(-) (+)
6 stations	SOL.A 15	(-) (+)
	SOL.B 13	(-) (+)
7 stations	SOL.A 11	(-) (+)
	SOL.B 9	(-) (+)
8 stations	SOL.A 7	(-) (+)
	SOL.B 5	(-) (+)
	4	(-) (+)
	3	(-) (+)
	COM. 2	(+) (-)
	COM. 1	(+) (-)

(Note)
 Positive common specifications Negative common specifications

Note) When using the negative common specifications, use valves for negative common.
 For details about the PC Wiring System, refer to catalog CAT.ES02-20 separately.

Plug Lead Unit Series SQ1000

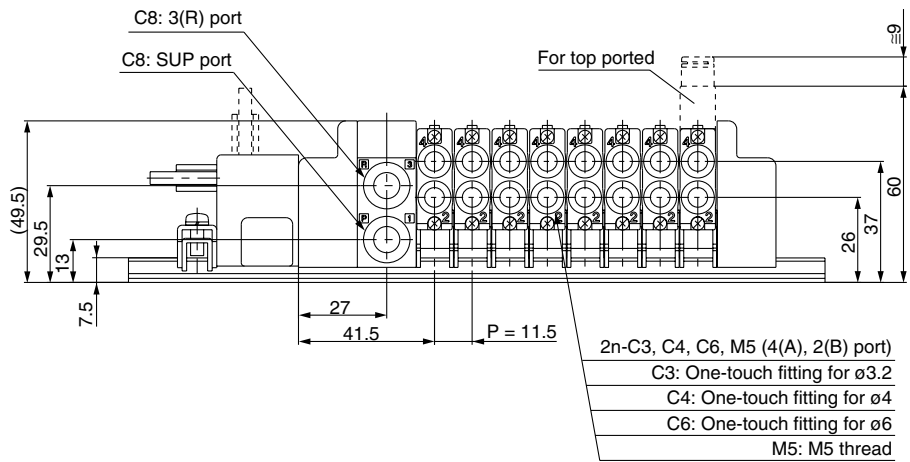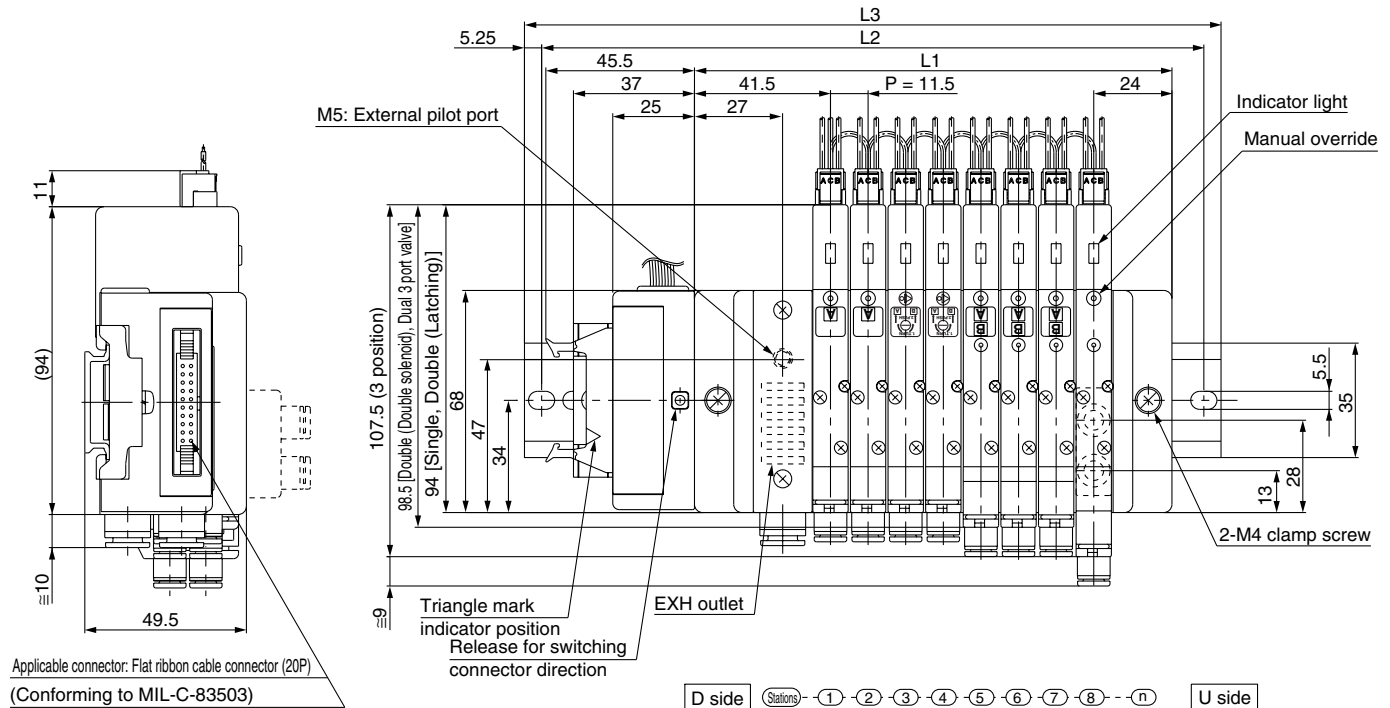


Dimensions

Formula: $L1 = 11.5n + 54$ n: Stations (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		65.5	77	88.5	100	111.5	123	134.5	146	157.5	169	180.5	192	203.5	215	226.5	238
L2		125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	
L3		135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	


Series SQ1000

C Kit (Connector)

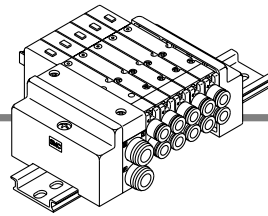

- Standard with lead wires connected to each valve individually.
- ### Manifold Specifications

Series	Port location	Porting specifications		Maximum number of stations
		1(P), 3(R)	4(A), 2(B)	
SQ1000	Side, Top	C8	C3, C4, C6, M5	24 stations

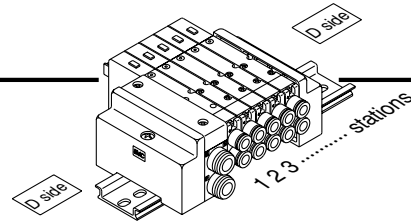



* Valves are numbered from the D side.

● Wiring Specifications: Positive COM Specifications

Since lead wires are connected to the valves as shown below, connect each wire to the power supply.



Single solenoid

Lead wire color

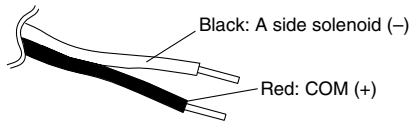

Double solenoid

Lead wire color

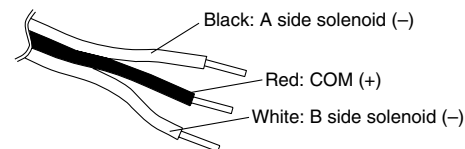

● Plug connector lead wire length

The lead wire length of the valves with lead wire is 300 mm. When ordering a lead wire length of 600 mm or longer, list the part numbers for the valve without connector and the connector assembly.

Example) For lead wire length of 1000 mm: SQ1140-5LO-C6.....3 pcs.
AXT661-14AL-10.....3 pcs.

Connector Assembly Part No.



Lead wire length	Single solenoid	Double solenoid
Socket only (3 pcs.)	AXT661-12AL	
300 mm	AXT661-14AL	AXT661-13AL
600 mm	AXT661-14AL-6	AXT661-13AL-6
1000 mm	AXT661-14AL-10	AXT661-13AL-10
2000 mm	AXT661-14AL-20	AXT661-13AL-20
3000 mm	AXT661-14AL-30	AXT661-13AL-30

● Wiring Specifications: Negative COM Specifications (Option)

Since lead wires are connected to the valves as shown below, connect each wire to the power supply.



Single solenoid

Lead wire color



Double solenoid

Lead wire color

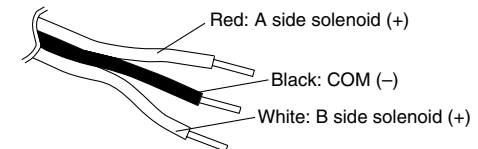

● Plug connector lead wire length

The lead wire length of the valves with lead wire is 300 mm. When ordering a lead wire length of 600 mm or longer, list the part numbers for the valve without connector and the connector assembly.

Example) For lead wire length of 1000 mm: SQ1140-5LO-C6.....3 pcs.
AXT661-14ANL-10.....3 pcs.


Connector Assembly Part no.

Lead wire length	Single solenoid	Double solenoid
Socket only (3 pcs.)	AXT661-12AL	
300 mm	AXT661-14ANL	AXT661-13ANL
600 mm	AXT661-14ANL-6	AXT661-13ANL-6
1000 mm	AXT661-14ANL-10	AXT661-13ANL-10
2000 mm	AXT661-14ANL-20	AXT661-13ANL-20
3000 mm	AXT661-14ANL-30	AXT661-13ANL-30




Note) When using the negative common specifications, use valves for negative common.

Plug Lead Unit Series SQ1000

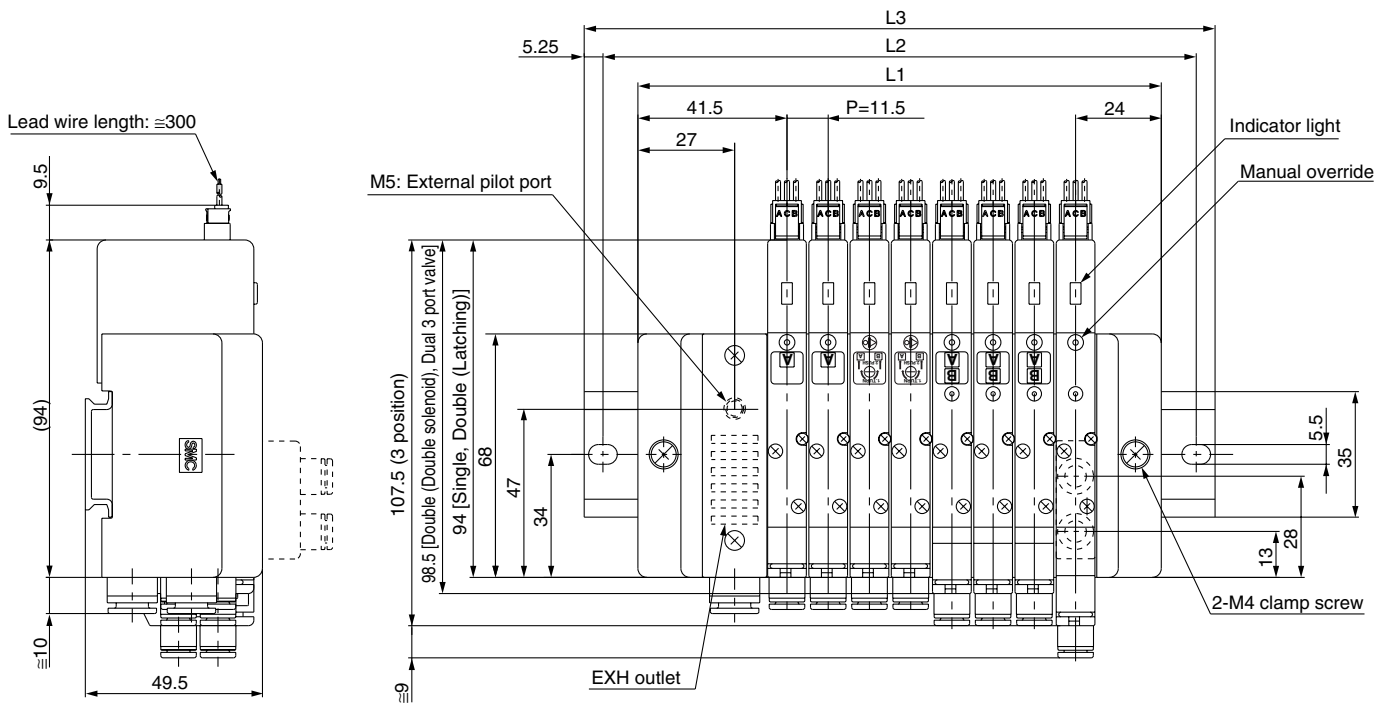

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

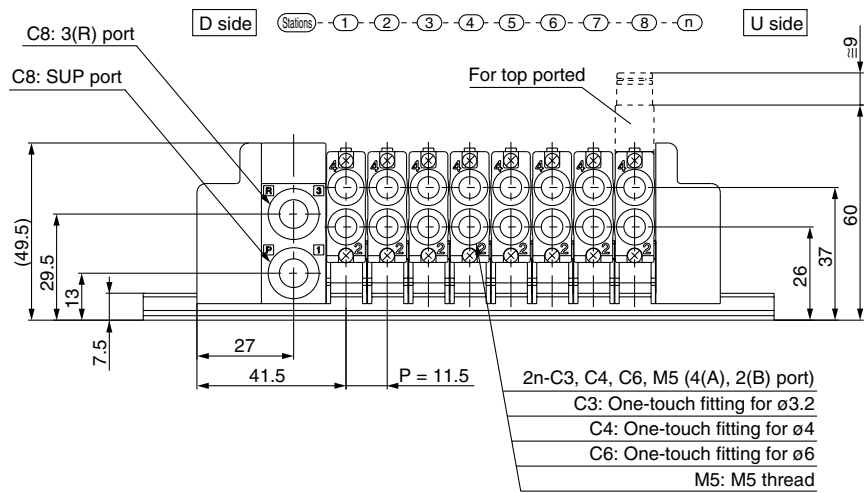

Dimensions

Formula: $L1 = 11.5n + 54$ n: Stations (Maximum 24 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	77	88.5	100	111.5	123	134.5	146	157.5	169	180.5	192	203.5	215	226.5	238	249.5	261	272.5	284	295.5	307	318.5	330
L2	87.5	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	312.5	325	337.5	350	350	350
L3	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	360.5	360.5



Series SQ1000/2000

Manifold Option Parts for SQ1000


Blanking plate

SSQ1000-10A-4

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

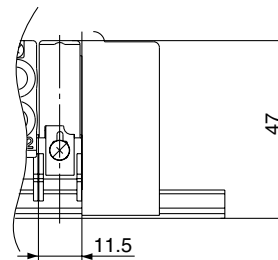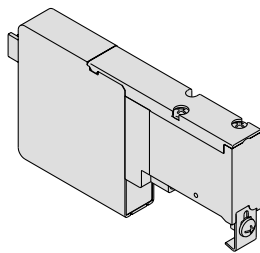

JIS Symbol



SUP/EXH block

SSQ1000-PR-4-C8-□

Option

Nil	Standard
R	External pilot specifications
S	Built-in silencer

Note) When specifying both options, indicate "-RS".


* Specify the spacer mounting position on the manifold specification sheet.

For standard type manifolds, the SUP/EXH block is mounted on the D side.


It is added to the manifold to increase SUP/EXH capacity.

* The number of SUP/EXH blocks that can be added is limited to two sets, one between manifold stations and another on the U side of the manifold, due to the length of the lead wire.

* SUP/EXH blocks are not included in the number of manifold stations.

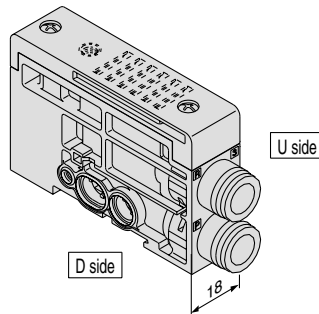

Description/Model	Stations				
	1	2	3	4	5
Valve					
Option				●	

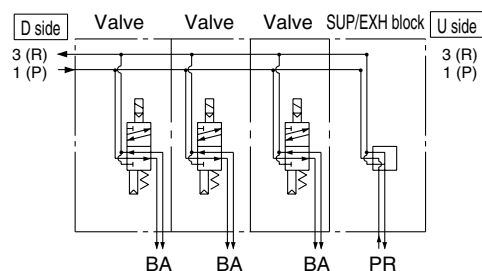

Individual SUP spacer

SSQ1000-P-4- C6

Port location

C6	Side ported
L6	Top ported

This is used as a supply port for different pressures when using different pressures in the same manifold (for one station). Both sides of the station which is used with supply pressure from the individual SUP spacer are shut off. (Refer to application example.)

* Specify the spacer mounting position and SUP passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Two pieces of SUP block plate that shut off the supply pressure are included with the individual SUP spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual SUP spacer to the individual EXH spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual for F, P, and J kits, it is limited to two units, one between manifold stations and another on the U side, due to the length of the lead wire.



* Model no with manifold block:

SSQ1000-P-4- C6-M
L6-M

Side ported

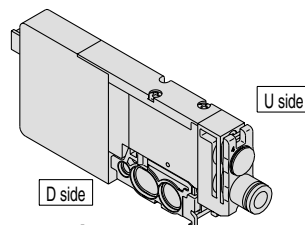


Top ported

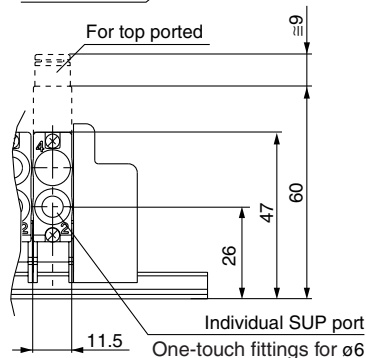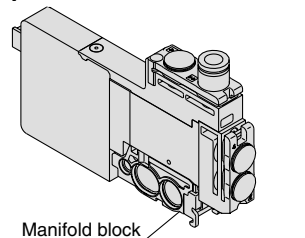

Description/Model	Stations				
	1	2	3	4	5
Valve					
Option		●			

SUP block plate (Ordering not required) SUP block plate (Ordering not required)

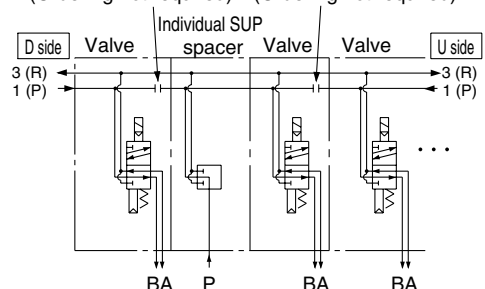

Individual EXH spacer

SSQ1000-R-4-**C6**

•Port location

C6	Side ported
L6	Top ported

This is used to exhaust an individual valve when the exhaust from a valve interferes with other stations in the circuit (used for one station). Both sides of the station which is to be individually exhausted are shut off. (Refer to application example.)

* Specify the spacer mounting position and EXH passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Two pieces of EXH block plate that shut off the exhaust are included with the individual EXH spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual EXH spacer to the individual SUP spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual for F, P, and J kits, it is limited to two units, one between manifold stations and another on the U side, due to the length of the lead wire.



* Model no. with manifold block:

SSQ1000-R-4-**C6-M**
L6


Side ported

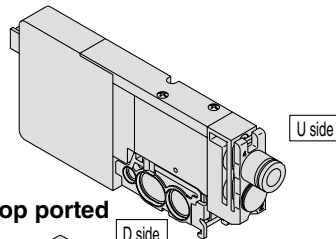

Top ported

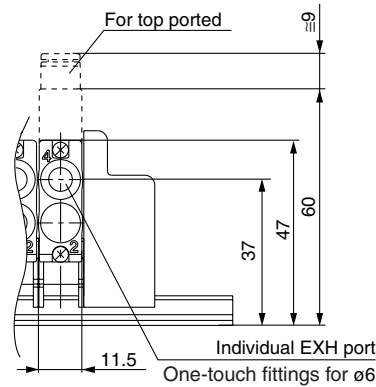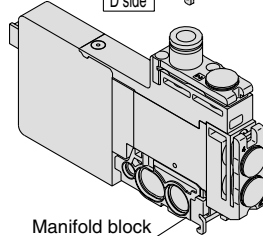

		Stations				
Description/Model		1	2	3	4	5
Valve	Single	●	●	●		
	⋮					
Option	Individual EXH spacer SSQ1000-R-4- C6 L6		●			
	EXH shut off position: Specify 2 positions.	●		●		

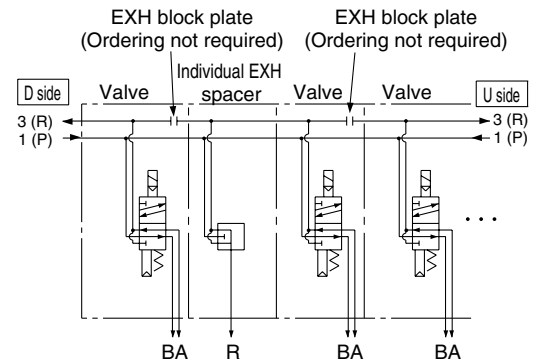

- VQC
- SQ**
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Individual SUP/EXH spacer

SSQ1000-PR1-4-**C6**

•Port location

C6	Side ported
L6	Top ported

This has both functions of the individual SUP and EXH spacers above.

(Refer to application example.)

* Specify the spacer mounting position and SUP and EXH passage shut off positions on the manifold specification sheet. Two shut off positions each for SUP and EXH are required per unit.

(Two pieces each of block plate that shut off the SUP and EXH passages are included with the individual SUP/EXH spacer.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later.

* The number of spacers is not limited when ordered with the manifold. However, when adding individual for F, P, and J kits, it is limited to two units, one between manifold stations and another on the U side, due to the length of the lead wire.



* Model no. with manifold block:

SSQ1000-PR1-4-**C6-M**
L6


Side ported

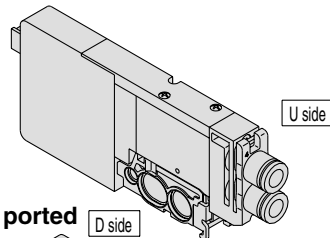

Top ported

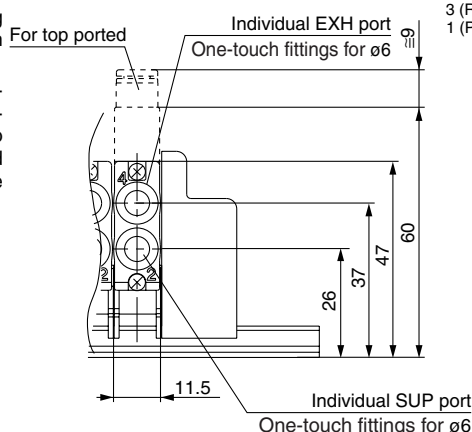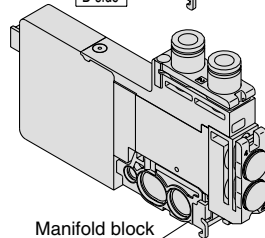

		Stations				
Description/Model		1	2	3	4	5
Valve	Single	●	●	●		
	⋮					
Option	Individual SUP/EXH spacer SSQ1000-PR1-4- C6 L6		●			
	SUP shut off position: Specify 2 positions.	●		●		
	EXH shut off position: Specify 2 positions.	●		●		

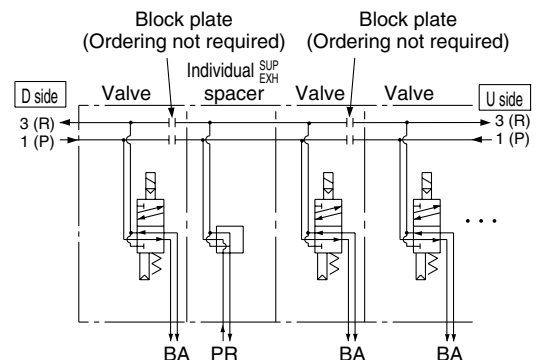

Series SQ1000/2000

Manifold Option Parts for SQ1000

SUP block plate

SSQ1000-B-P


When supplying two different pressures, high and low, to one manifold, this is used between stations with different pressures. Also, it is used with an individual SUP spacer to shut off the air supply.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When a SUP passage is shut off with a SUP block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when SUP block plates are ordered with manifolds.

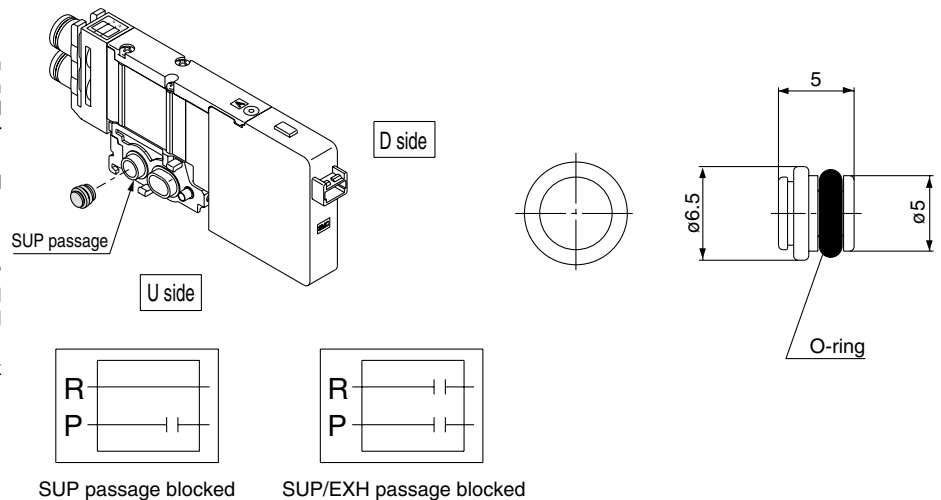

EXH block plate

SSQ1000-B-R


When the exhaust from a valve interferes with other stations in the circuit, this is used between stations to separate exhausts. Also, it is used with an individual EXH spacer to shut off the exhaust of individual valves.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When an EXH passage is shut off with an EXH block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when EXH block plates are ordered with manifolds.

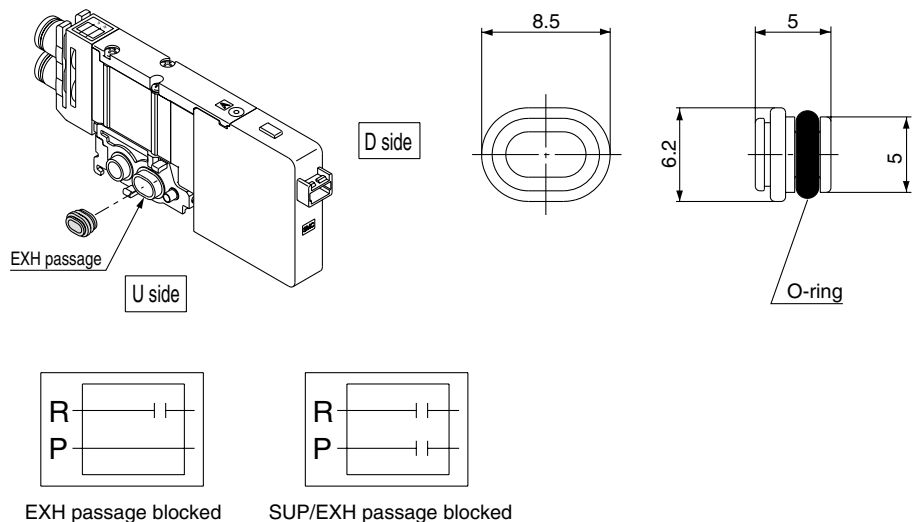


Back pressure check valve [-B]

SSQ1000-BP

This prevents cylinder malfunction caused by the exhaust from other valves. It is inserted into the R (EXH) port of the valve that is affected. It is especially effective when using single acting cylinders or exhaust center type solenoid valves.

* When installing back pressure check valves only on the stations required, enter the part number and specify the station positions on a manifold specification sheet.

* When installing back pressure check valves on all of the stations, indicate "-B" at the end of the manifold part number.

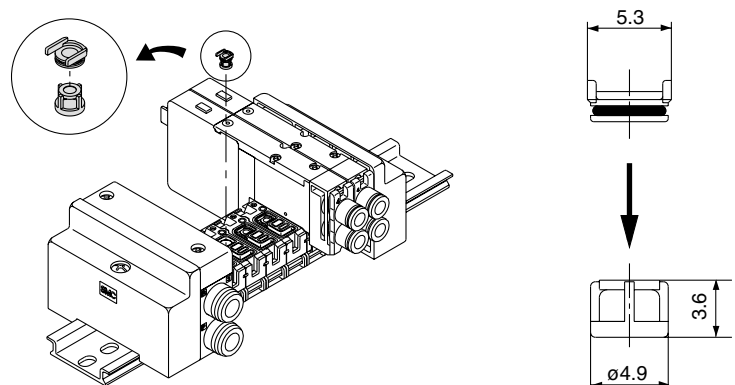

⚠ Caution



1. Although the back pressure check valve is an assembly part with a check valve mechanism, a small amount of air leakage is allowed. Therefore, take care not to restrict the exhaust air from the exhaust port.
2. The effective area of valves is about 20% less when the back pressure check valve is installed.
3. Since 4 port specification valves (5 (R1) and 3 (R2) are common) are used, back pressure cannot be prevented with dual 3 port valves.

Name plate [-N]

SSQ1000-N3-Stations (1 to maximum)

This is a clear resin plate for applying solenoid valve function description labels, etc. To install, bend the plate slightly as shown and insert into the slots on the end plate side. Also, the plate is difficult to bend for manifolds with only a few stations, therefore, remove the silencer cover to install it.

* When ordering with manifolds, add "-N" at the end of the manifold number.

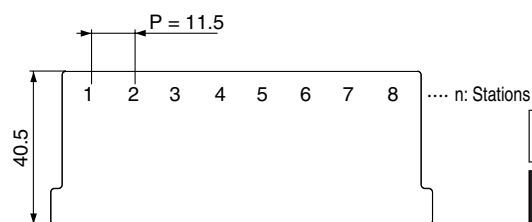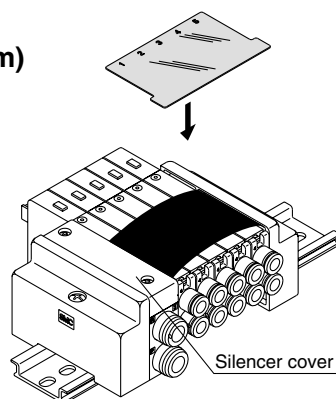

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD


Blanking plug (For One-touch fitting)

23
KQ2P-04
06
08



This is inserted into cylinder ports and SUP and EXH ports that are not used.

Purchasing order is available in units of 10 pieces.

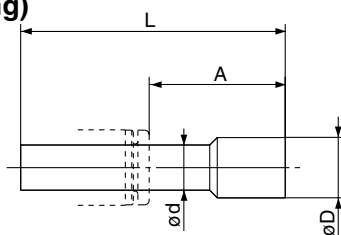

Dimensions

Applicable fittings size (ød)	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

Port plug

VVQZ100-CP

This is used to close the cylinder ports when changing a 5 port valve to a 3 port valve.

* Add "A" or "B" at the end of the valve part number when ordering with valves.

Example) SQ1141-5L-C6-A (N.O. specifications)



• 4 (A) port plug

Example) SQ1141-5L-C6-B (N.C. specifications)

• 2 (B) port plug

Example) SQ1141-5L-C6-B-M

(B port plug with manifold block)

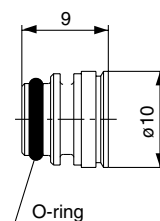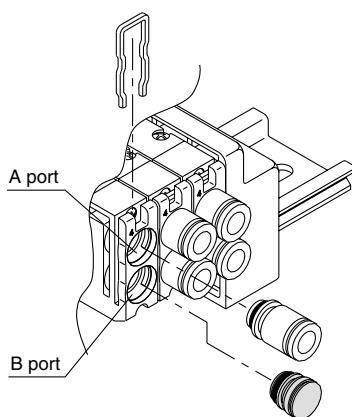

Direct EXH outlet, built-in silencer [-S]


The EXH outlet is placed on the top side of the manifold end plate. The built-in silencer provides highly effective noise reduction. (Noise reduction of 30 dB)



Note) Note that when excessive drainage occurs in the air supply, the drainage will be released along with the exhaust.

* Add "-S" at the end of the manifold part number when ordering with manifolds.

* For precautions on handling and how to replace elements, refer to page 2-3-5.

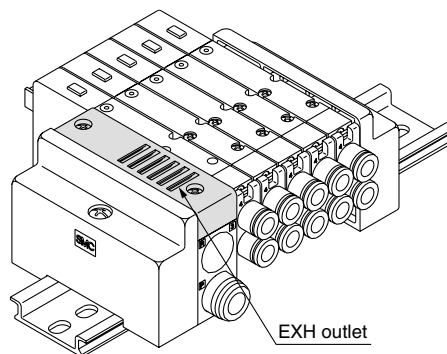

Series SQ1000/2000

Manifold Option Parts for SQ1000

External pilot specifications [-R]

This can be used when the air pressure is 0.1 to 0.2 MPa lower than the minimum operating pressure of the solenoid valves or used for vacuum specifications.

Add "R" to the part numbers of manifolds and valves to indicate the external pilot specification.

An M5 port will be installed on the top side of the manifold's SUP/EXH block.

● How to order valves (Example)

SQ1140 R -5L-C6


External pilot specifications

● How to order manifold (Example)

* Indicate "R" for an option.

SS5Q14-08FD1-DR

External pilot specifications

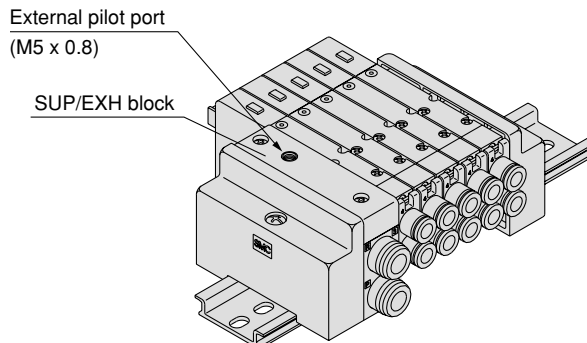

Note 1) Not applicable for dual 3 port valves.

Note 2) Indicate "RY" for low wattage types.

Note 3) Valves with the external pilot specifications have a pilot EXH with individual exhaust specifications and EXH can be pressurized. However, the pressure supplied from EXH should be 0.4 MPa or lower.

Dual flow fitting

SSQ1000-52A-C8

Port size

C8	ø8
N9	ø5/16"



To drive a large bore cylinder, two valve stations are operated simultaneously to double the air flow. This fitting is used on the cylinder ports in this situation. Available sizes are ø8 and ø5/16" One-touch fitting.

* When ordering with valves, specify the valve part number without One-touch fitting and list the dual flow fitting part number.

Example) Valve part number (without One-touch fitting part number)



SQ1141-5L-C0 2 sets

* SSQ1000-52A- N9 1 set

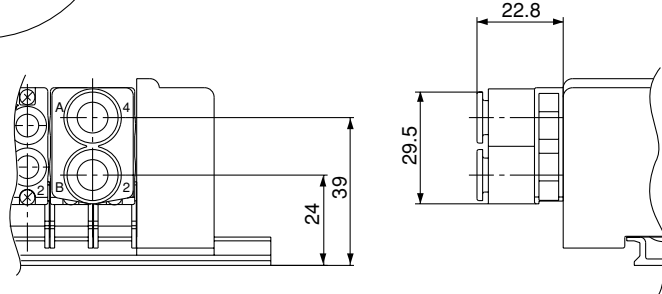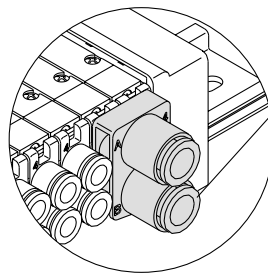

Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).

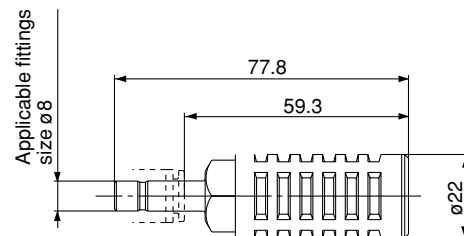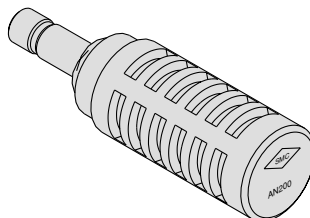

Specifications

Series	Model	Effective area (mm ²) (Cv factor)	Noise reduction (dB)
SQ1000	AN200-KM8	20 (1.1)	30

Series SQ1000/2000

Manifold Option Parts for SQ1000/SQ2000

Special Wiring Specifications

In the internal wiring of F kit, P kit, and J kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to order


Indicate option symbol “-K” in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

Example) **SS5Q14-09FD0-DKS**

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.

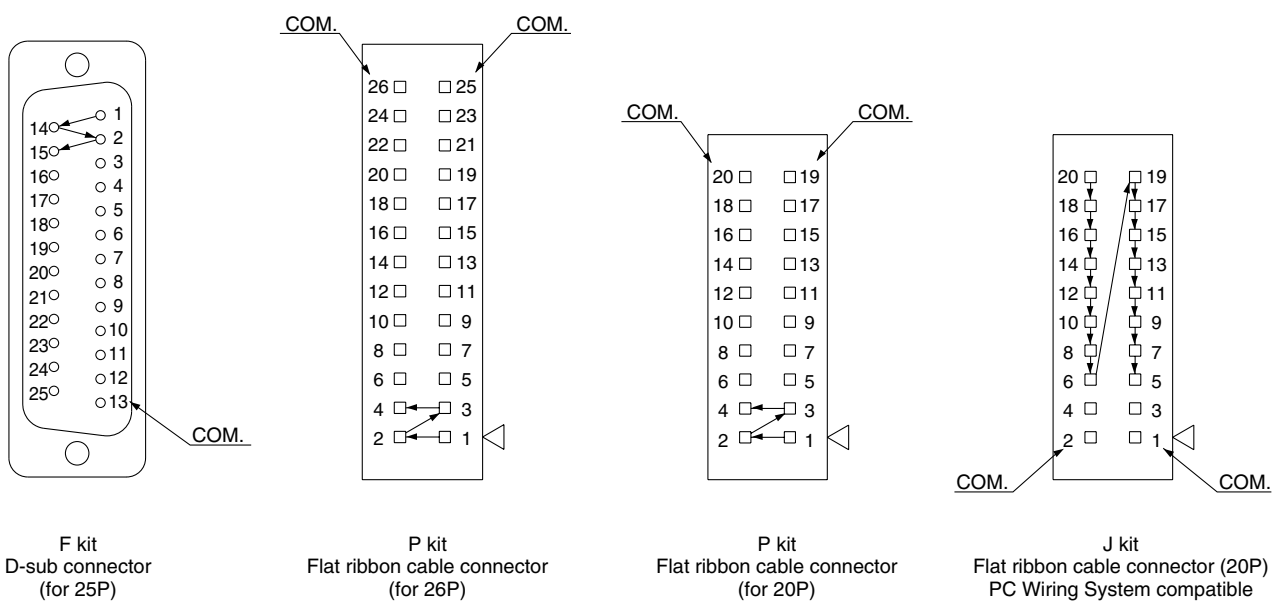

3. Maximum stations

The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. Determine the number of stations so that the total number of solenoids is no more than the maximum points in the table below.

Kit	F kit (D-sub connector)	P kit (Flat ribbon cable connector)		J kit Flat ribbon cable PC Wiring System compatible
Type	FD□ 25P	PD□ 26P	PDC 20P	JD0 20P
Max. points	24 points	24 points	18 points	16 points

Note) Maximum stations SQ1000: 24 stations
SQ2000: 16 stations

Special DIN Rail Length (DIN rail mounting (-D) only)

The standard DIN rail provided is approximately 30 mm longer than the overall length of the manifold with a specified number of stations. The following options are also available.

● DIN rail length longer than the standard type (for stations to be added later, etc.)

In the manifold part number, specify "-D" for the manifold mounting symbol and add the number of required stations after the symbol.


Example) **SS5Q14- 08FD0 - D09BNK**

- 8 station manifold
- Option symbols (alphabetically)
- DIN rail for 9 stations

● Ordering DIN rail only

DIN rail part number

AXT100- DR - [n] Note) For "n", enter a number from the "No." line in the table below. For L dimension, refer to the dimensions of each kit.

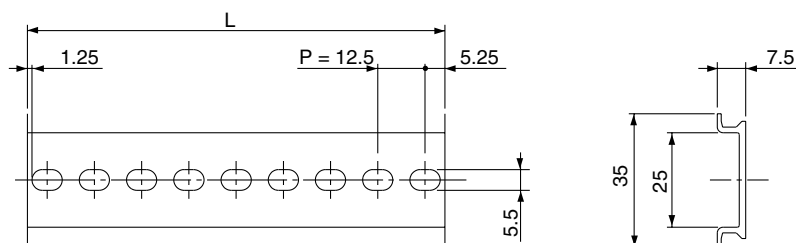


L Dimension

$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Direct Mounting Style (-E) (SQ2000 C kit only)

Manifold is mounted by using mounting holes of both sides of the manifold. DIN rail is not sticking out of the edge of end plate.

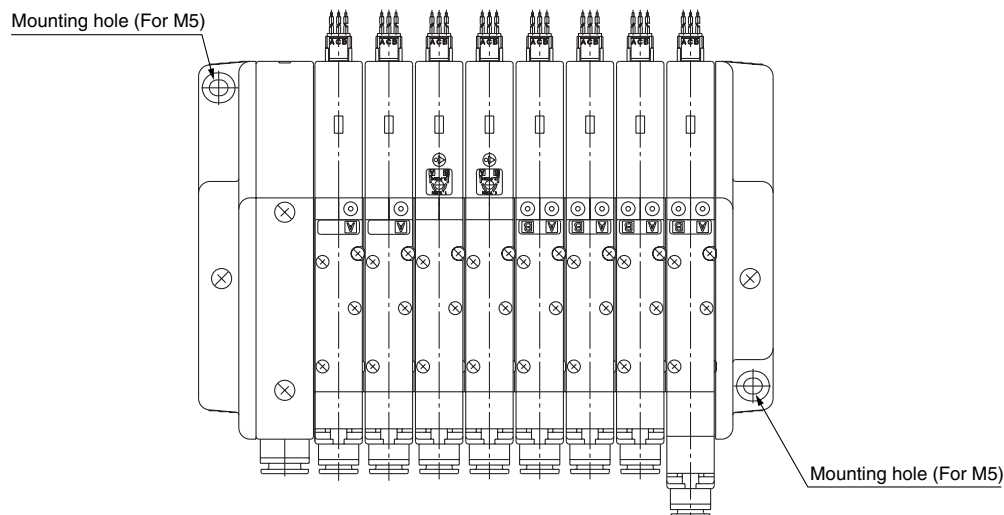

Series SQ1000/2000

Manifold Option for SQ1000/SQ2000

Negative Common Specifications

The following valve part numbers are for negative COM specifications. Manifold part numbers are the same as standard.

● How to order negative COM valves (Example)

SQ1140 N -5L-C6

- Negative common specifications

Inch-size One-touch Fittings

For One-touch fittings in inch sizes, use the following part numbers. Also, the color of the release button is orange.

● How to order valves (Example)

SQ1140-5L-□ N7

Port location

Cylinder port

Nil	Side ported	Symbol	N1	N3	N7	N9
L	Top ported	Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"
4(A), 2(B) port		SQ1000	●	●	●	—
		SQ2000	—	●	●	●

● How to order manifold (Example)

Add "00T" at the end of the part number.

SS5Q14- 08 FD0 DN - 00T

- 1 (P), 3 (R) port in inch size
 - { SQ1000: ø5/16" (N9)
 - { SQ2000: ø3/8" (N11)







How to Add Manifold Stations for SQ1000/SQ2000

1. How to Add Manifold Stations

What to order

- Valves with manifold block (refer to pages 2-3-71 and 2-3-85) or the manifold blocks shown below. For F kit, P kit, and J kit, also order the lead wire assemblies in the next section.

Manifold Block Part No.

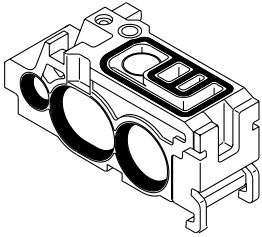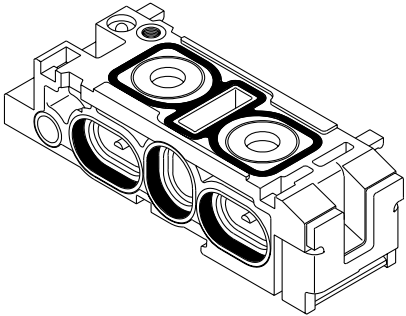SQ1000	SQ2000												
													
<p>SSQ1000-1A-4- </p> <p>Option ● </p> <table border="1" data-bbox="279 1108 574 1198"> <tr> <td>Nil</td> <td>None</td> </tr> <tr> <td>B</td> <td>Back pressure check valve</td> </tr> <tr> <td>R</td> <td>External pilot specifications</td> </tr> </table> <p>Note) Enter "-BR" for both options.</p>	Nil	None	B	Back pressure check valve	R	External pilot specifications	<p>SSQ2000-1A-4- </p> <p>Option ● </p> <table border="1" data-bbox="997 1108 1292 1198"> <tr> <td>Nil</td> <td>None</td> </tr> <tr> <td>B</td> <td>Back pressure check valve</td> </tr> <tr> <td>R</td> <td>External pilot specifications</td> </tr> </table> <p>Note) Enter "-BR" for both options.</p>	Nil	None	B	Back pressure check valve	R	External pilot specifications
Nil	None												
B	Back pressure check valve												
R	External pilot specifications												
Nil	None												
B	Back pressure check valve												
R	External pilot specifications												

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

For F kit, P kit, J kit


What to order: Lead wire assembly

SQ1000

D-sub connector kit (F kit)


● For single wiring

SSQ1000—40A—F—205

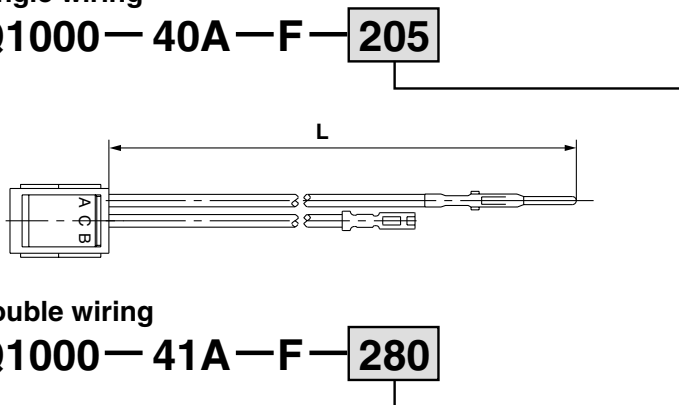

● For double wiring

SSQ1000—41A—F—280

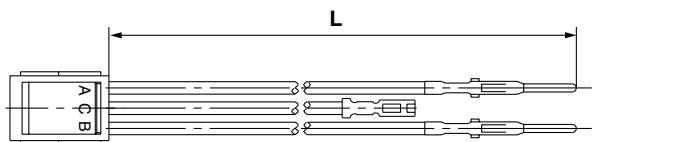


Stations	Symbol (L dimension)	Stations	Symbol (L dimension)
Station 2	165	Station 14	320
Station 3	175	Station 15	335
Station 4	190	Station 16	250
Station 5	205	Station 17	365
Station 6	215	Station 18	375
Station 7	230	Station 19	385
Station 8	245	Station 20	400
Station 9	260	Station 21	405
Station 10	280	Station 22	420
Station 11	290	Station 23	435
Station 12	300	Station 24	450
Station 13	310		

Flat ribbon cable kit (P kit), PC Wiring System compatible (J kit)


● For single wiring

SSQ1000—40A—P—200

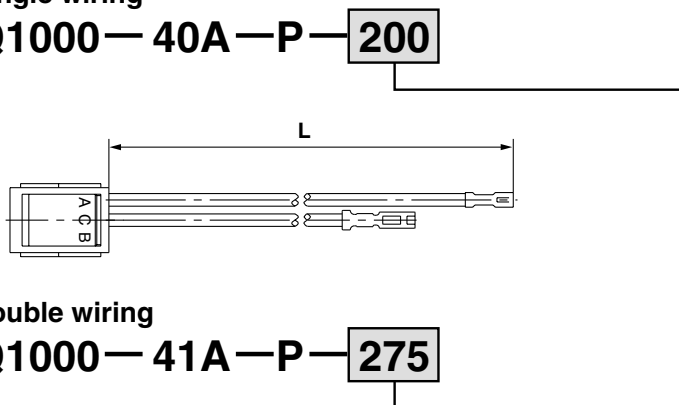

● For double wiring

SSQ1000—41A—P—275

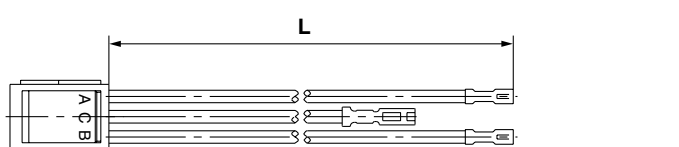


Stations	Symbol (L dimension)	Stations	Symbol (L dimension)
Station 2	160	Station 14	315
Station 3	170	Station 15	330
Station 4	185	Station 16	345
Station 5	200	Station 17	360
Station 6	210	Station 18	370
Station 7	225	Station 19	380
Station 8	240	Station 20	395
Station 9	255	Station 21	400
Station 10	275	Station 22	415
Station 11	285	Station 23	430
Station 12	295	Station 24	445
Station 13	305		

Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

Steps for adding stations


- (1) Loosen the clamp screw on the U side end plate and open the manifold.
- (2) Mount the manifold block or valve with manifold block to be added.
- (3) Press on the end plate to eliminate any space between the manifold blocks and tighten the clamp screw.
(Proper tightening torque: 0.8 to 1.0 N·m)
- (4) In the case of F kit, P kit or J kit, remove the connector housing from the DIN rail and connect the wiring.

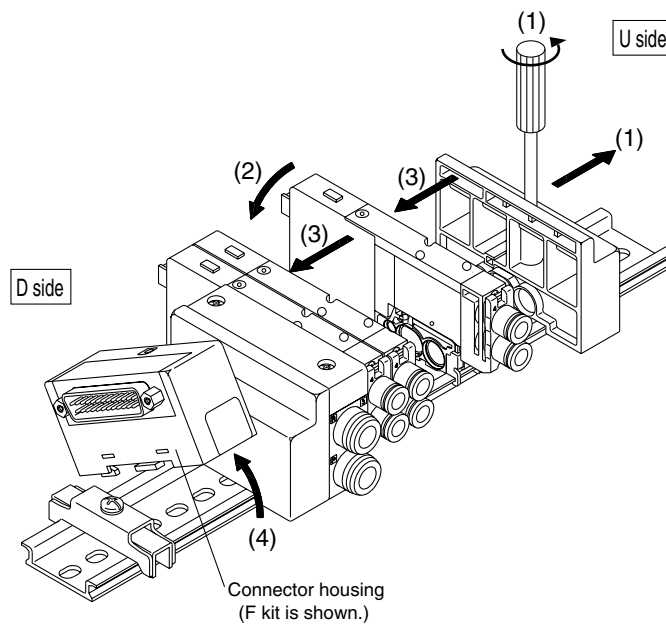

2. Connection Method


(1) Connecting common wire

Insert the red lead wire (common wire) of the connector to be added into the adjacent connector as shown in the drawing below. After inserting,

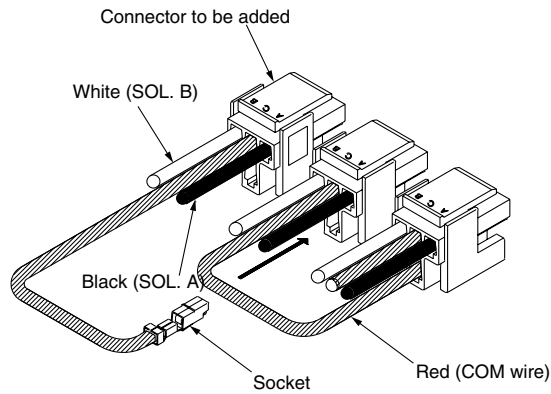

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

(2) Pulling out connector

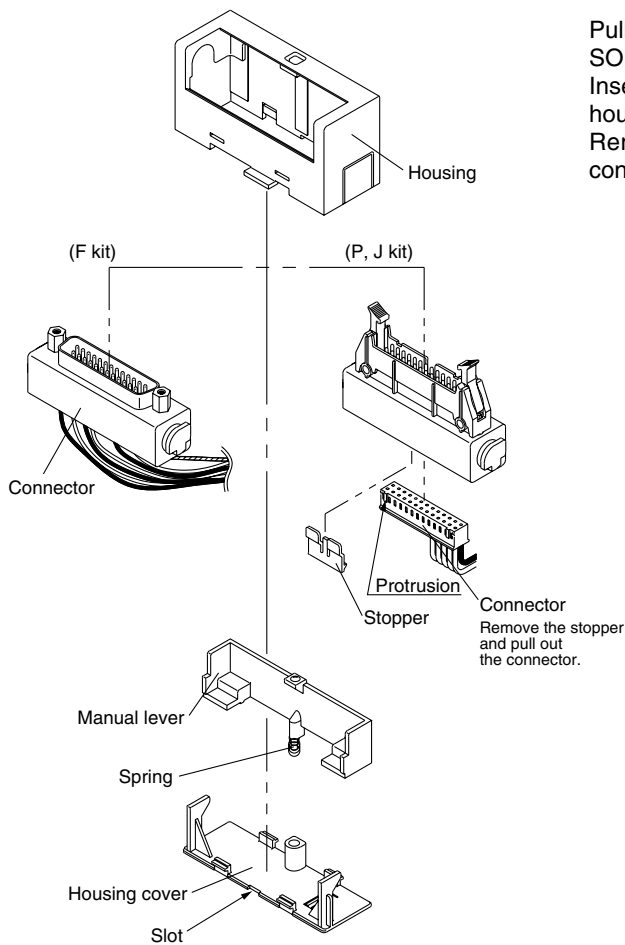

Pull out the connector to connect the lead wires for SOL. A and SOL. B.
 Insert a flat head screwdriver into the slot of the housing cover and remove it.
 Remove the manual lever and pull out the connector.

F, P, J kit

Series SQ1000/2000


How to Add Manifold Stations for SQ1000/SQ2000

(3) Connector connection/Connect the black and white lead wire pins to the positions shown below in accordance with each kit.

- ⚠ Caution**
1. After inserting the pin, confirm that the pin hook is locked by lightly pulling the lead wire.
 2. Do not pull the lead wire forcefully when connecting. Also, take care that lead wires do not get caught between manifolds or when remounting the housing.


Wiring (F kit: D-sub connector kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1 of the D-sub connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

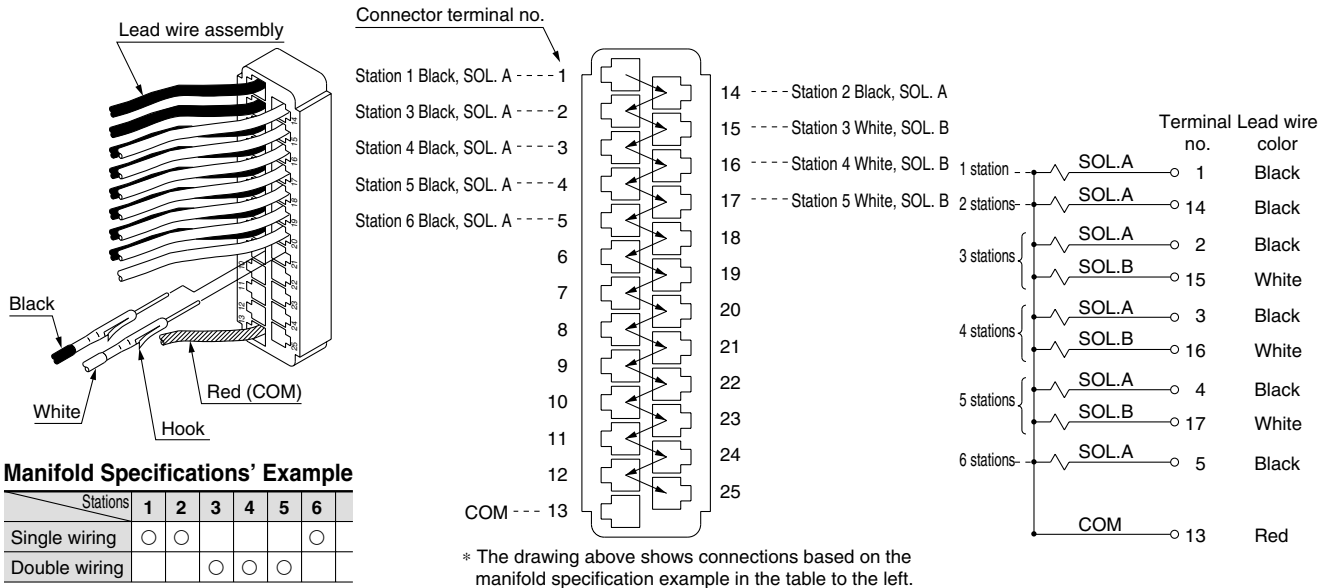




Wiring (P kit: Flat ribbon cable kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1B of the flat ribbon cable connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

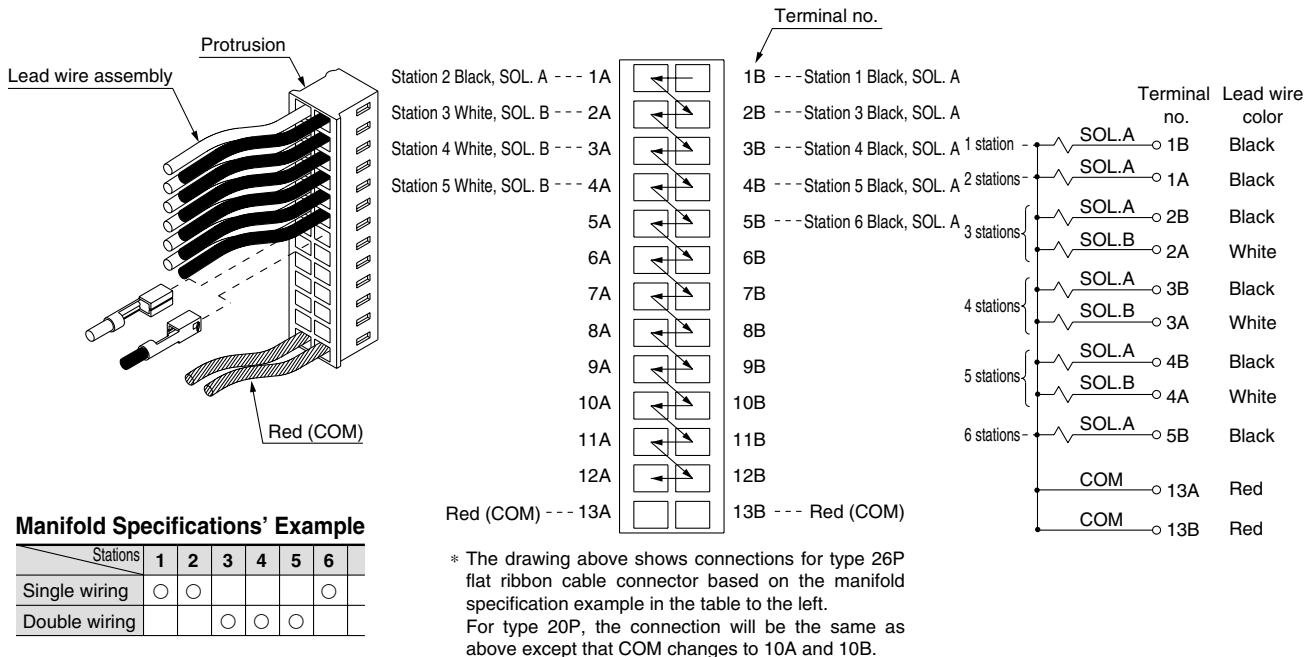

Wiring (J kit: Flat ribbon cable, PC Wiring System compatible)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 10A of the flat ribbon cable connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

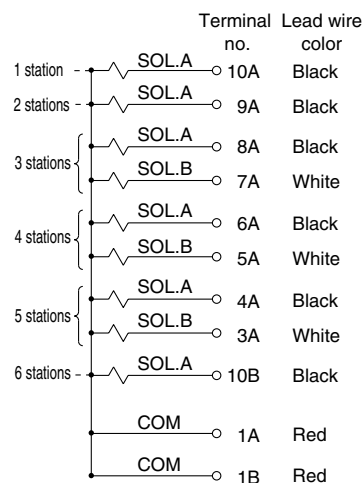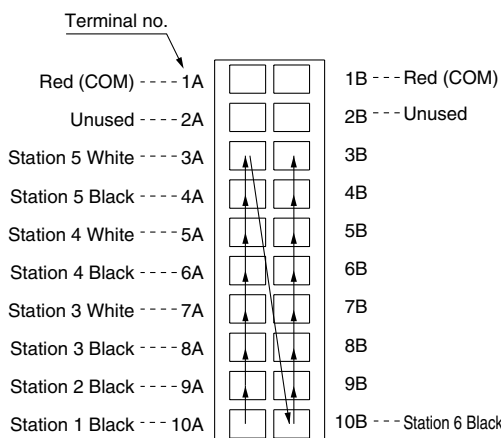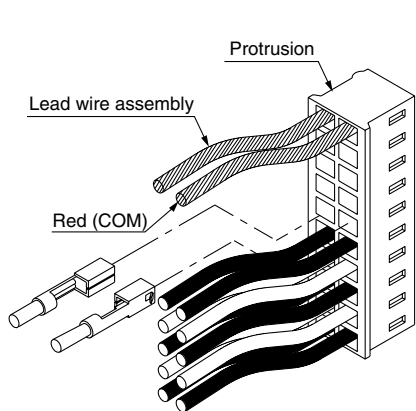

Manifold Specifications' Example

Stations	1	2	3	4	5	6
Single wiring	○	○				○
Double wiring			○	○	○	

VQC

SQ

VQ0

VQ4

VQ5

VQZ



VQD

Series SQ1000/2000



Construction: Series SQ1000 Plug Lead Type Main Parts and Pilot Valve Assembly

Metal seal type



Single: SQ1140

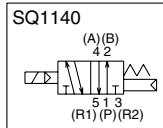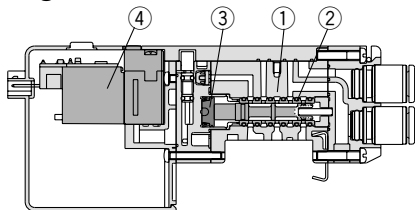



Double (Latching): SQ1240

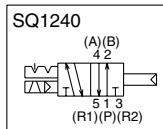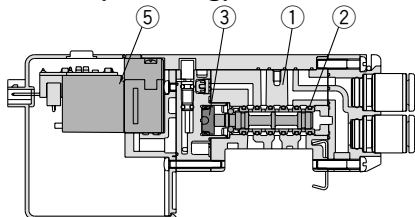

Double (Double solenoid): SQ1240D

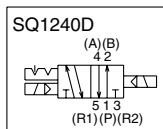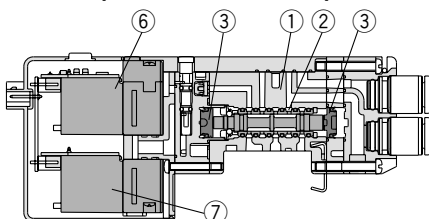

3 position: SQ1 $\frac{3}{5}$ 40

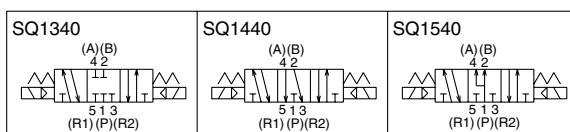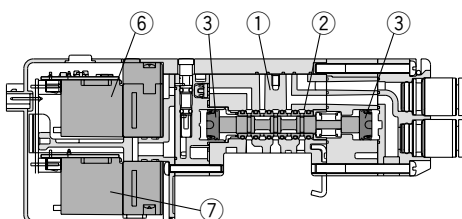

Component Parts

No.	Description	Material
①	Body	Zinc die-casted
②	Spool/Sleeve	Stainless steel (Metal seal)
②	Spool	Aluminum (Rubber seal)
③	Piston	Resin

Pilot Valve Assembly (Note)



No.	Model	SQ1□4□
④	For single	VQ110 ^(K) _(Y) - ⁵ / ₆ (N)J1(B)
⑤	For double (Latching)	VQ110L- ⁵ / ₆ J2 Negative COM: VQ110N- ⁵ / ₆ J2
⑥	For double (Double solenoid) on A side For 3P, Dual 3 port on A side	VQ110 ^(K) _(Y) - ⁵ / ₆ (N)J3(B)
⑦	For double (Double solenoid) on B side For 3P, Dual 3 port on B side	VQ111 ^(K) _(Y) - ⁵ / ₆ (N)J4

Note) Nil: Standard



- B : Locking type manual override
- K : High pressure specifications (metal seal only)
- N : Negative common specifications
- Y : Low wattage specifications

Rubber seal type



Single: SQ1141

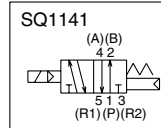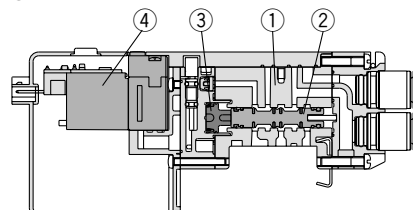



Double (Latching): SQ1241

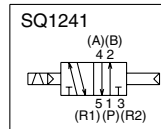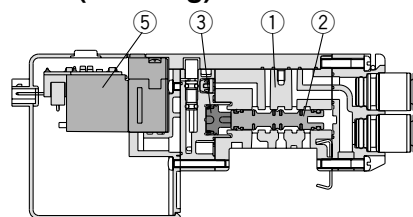



Double (Double solenoid): SQ1241D

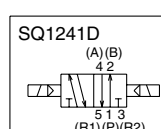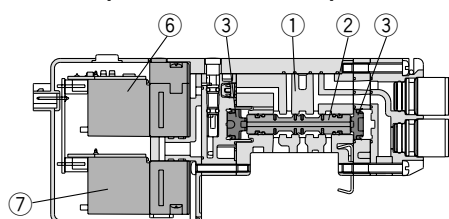

3 position: SQ1 $\frac{3}{5}$ 41

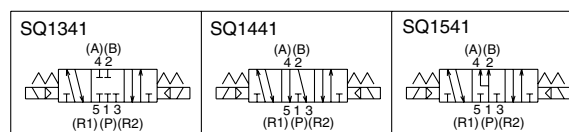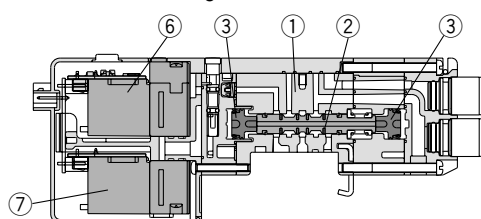


Dual 3 port valve: SQ1 $\frac{A}{B}{C}$ 41

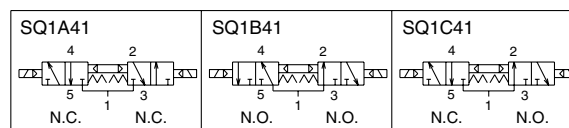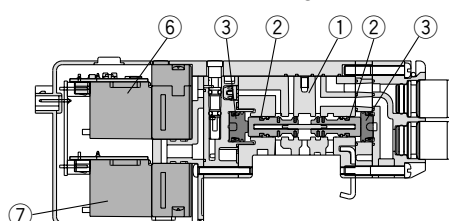

Series SQ1000/2000

Exploded View of Manifold: SQ1000 (Plug lead type manifold) SS5Q14

(F, P, J, C kit)

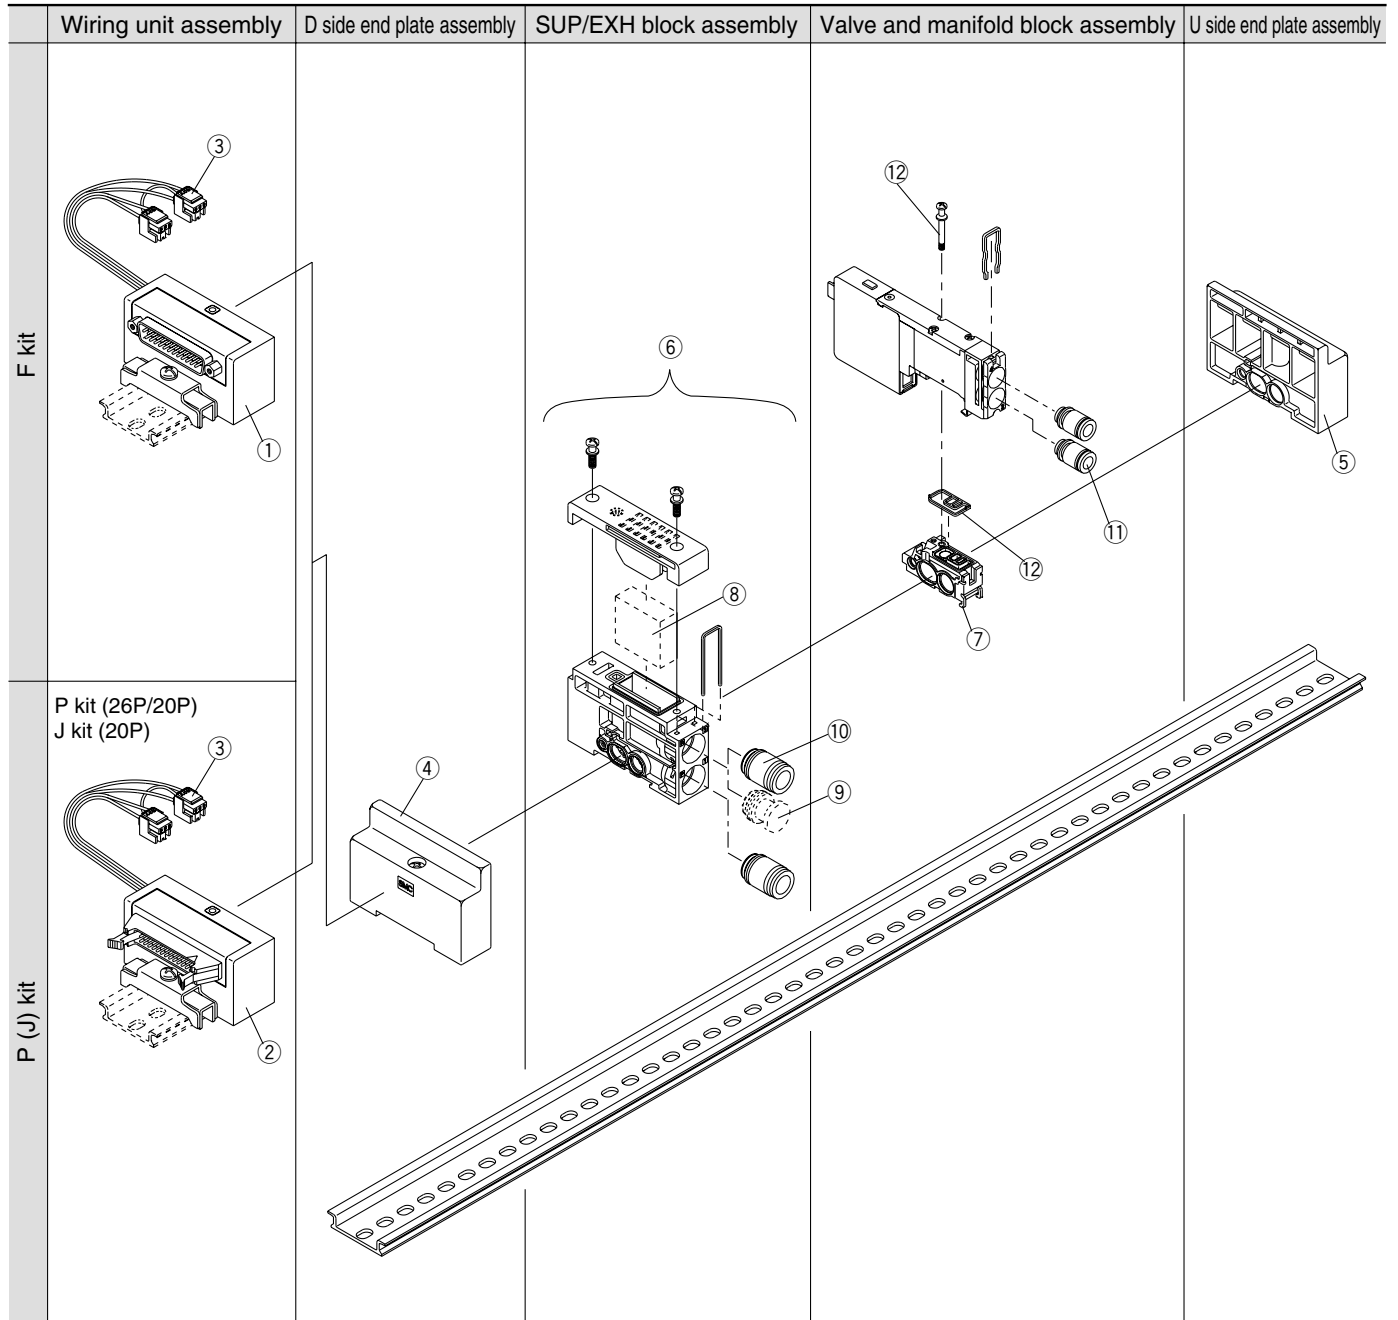

Manifold Spare Parts



Refer to pages 2-3-112 to 2-3-117 of "How to Add Manifold Stations" regarding the mounting of each spare parts.

<① D-sub connector housing assembly>

AXT100 - 40 - FL25 - S 03

Wiring		Stations	
S	Single wiring	01	For 1 station
D	Double wiring	:	:
		24	For 24 stations

<② Flat ribbon cable connector housing assembly>

AXT100 - 40 - PL20 - S 03
PL26
JL20

Wiring		Stations	
S	Single wiring	01	For 1 station
D	Double wiring	:	:
		24	For 24 stations

Note)
 PL26: 01 to 24 (P kit, 26P)
 PL20: 01 to 18 (P kit, 20P)
 JL20: 01 to 16 (J kit, 20P)

<③ Lead wire assembly>

(For F kit)

For station 1 **SSQ1000 - 4 1 B - F - 155**

Wiring	
0	For single (2-wire)
1	For double (3-wire)

For 2 to station 24 **SSQ1000 - 4 1 A - F - 205**

Wiring	
0	For single (2-wire)
1	For double (3-wire)

Lead wire length

Stations	L dimension (mm)	Stations	L dimension (mm)	Stations	L dimension (mm)	Stations	L dimension (mm)
Station 2	165	Station 8	245	Station 14	320	Station 20	400
Station 3	175	Station 9	260	Station 15	335	Station 21	405
Station 4	190	Station 10	280	Station 16	250	Station 22	420
Station 5	205	Station 11	290	Station 17	365	Station 23	435
Station 6	215	Station 12	300	Station 18	375	Station 24	450
Station 7	230	Station 13	310	Station 19	385		

(For P, J kit)

For station 1 **SSQ1000 - 4 1 B - P - 150**

Wiring	
0	For single (2-wire)
1	For double (3-wire)

For 2 to station 24 **SSQ1000 - 4 1 A - P - 200**

Wiring	
0	For single (2-wire)
1	For double (3-wire)

Lead wire length

Stations	L dimension (mm)	Stations	L dimension (mm)	Stations	L dimension (mm)	Stations	L dimension (mm)
Station 2	160	Station 8	240	Station 14	315	Station 20	395
Station 3	170	Station 9	255	Station 15	330	Station 21	400
Station 4	185	Station 10	275	Station 16	345	Station 22	415
Station 5	200	Station 11	285	Station 17	360	Station 23	430
Station 6	210	Station 12	295	Station 18	370	Station 24	445
Station 7	225	Station 13	305	Station 19	380		

(For C kit)

AXT661 - 1 3 AL

Wiring	
3	For double (3-wire)
4	For single (2-wire)

Lead wire length

Symbol	L dimension (mm)
Nil	300
6	600
10	1000
15	1500
20	2000
25	2500
30	3000
50	5000

<④ D side end plate assembly>

SSQ1000 - 3A - 4

<⑤ U side end plate assembly>

SSQ1000 - 2A - 4

<⑥ SUP/EXH block assembly>

SSQ1000 - PR - 4 - C8

Port size

C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"

Option

Nil	Common exhaust type
R	External pilot
S	Built-in silencer, direct exhaust

Note) Enter "RS" for both options.

<⑦ Manifold block assembly>

SSQ1000 - 1A - 4 Including gaskets ⑫

Option

Nil	None
B	Back pressure check valve
R	External pilot specifications

Note) Enter "BR" for both options.

<⑧ Element>

SSQ1000 - SE

Note) Part number for a 10 piece set of elements. Refer to page 2-3-5 for replacement procedures.

<⑨ Port plug>

VVQZ2000 - CP

<⑩ Fitting assembly>

(For P, R port)

VVQ1000 - 51A - C8

Port size

C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"

Note) Purchasing order is available in units of 10 pieces

<⑪ Fitting assembly>

(For cylinder port)

VVQ1000 - 50A - C6

Port size

C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6
M5	M5 thread
N1	One-touch fitting for ø1/8"
N3	One-touch fitting for ø5/32"
N7	One-touch fitting for ø1/4"

Note) Purchasing order is available in units of 10 pieces

<⑫ Gasket and screw assembly>

SQ1000 - GS

Note) Part number for 10 pieces each of gaskets and screws.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD