

Series SQ2000 Plug-in Manifold

How to Order Manifold

SS5Q23 — 08 — FD2 — D — □

Stations

01	1 station
⋮	⋮
16 ^{Note)}	16 stations

Note) The maximum number of stations depends on the type of electrical entries.

Manifold mounting







D	DIN rail mounting style
E	Direct mounting style

Option

Nil	None
02 to 24 ⁽¹⁾	DIN rail length specified
B	Back pressure check valve
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate (Side ported only)
R	External pilot specifications
S	Built-in silencer, direct exhaust

Note 1) Specify DIN rail length with "D□" at the end. (Enter the number of stations inside □.) Example: -D08
 Note 2) Standard wiring specifications are for double wiring. Indicate wiring specifications for single wiring or mixed single and double wiring, or when exceeding the standard maximum number of stations. (Except L kit.)
 Note 3) For specifying two or more options, enter them alphabetically. Example: -BKN
















Electrical entry

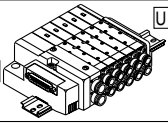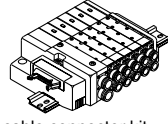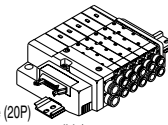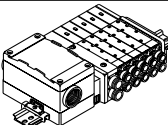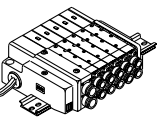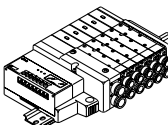Kit type	Lead wire connector location	Cable specifications	Stations	Max. number of stations for special wiring specifications	Max. number of solenoids ⁽²⁾
F kit  D-sub Connector kit	D side	FD0	1 to 12 stations	16 stations	24
		FD1			
		FD2			
		FD3			
P kit  Flat ribbon cable connector kit (26P/20P)	D side ⁽¹⁾	PD0	1 to 12 stations	16 stations	24
		PD1			
		PD2			
		PD3			
		PDC	1 to 9 stations	18	
J kit  Flat ribbon cable (20P) (PC Wiring System compatible)	D side	JD0	1 to 8 stations	16 stations	16
T kit  Terminal block box kit	D side	TD0	1 to 10 stations	16 stations	16
L kit  Lead wire kit	D side	LD0	1 to 12 stations	—	—
	U side	LU0			
	D side	LD1			
	U side	LU1			
	D side	LD2			
	U side	LU2			
S kit  Serial transmission kit	D side	SDF	1 to 8 stations	16 stations	16
		SDH			
		SDJ1			
		SDJ2	1 to 4 stations	8 stations	8
		SDQ	1 to 8 stations	16 stations	16
		SDR1			
		SDR2			
		SDV	1 to 8 stations	16 stations	16

Note 1) Separately order the 20P type cable assembly for the P kit.
 Note 2) The maximum number of stations should not be more than the maximum number of solenoids. (The number of solenoids are counted as: 1 for single solenoids and 2 for type 3P and 4P double solenoids.)


Series SQ2000

Manifold Option
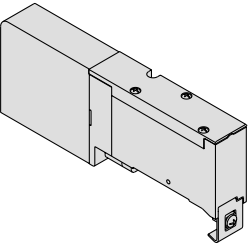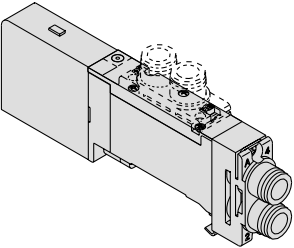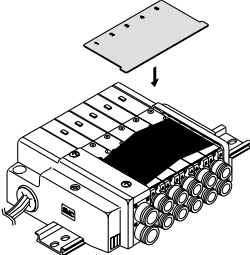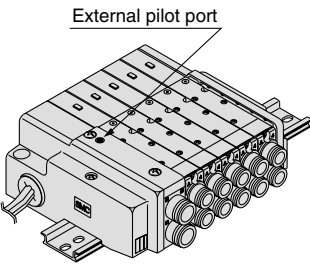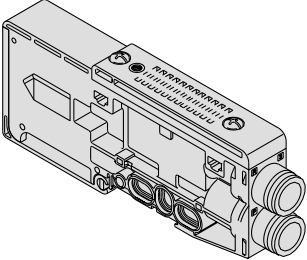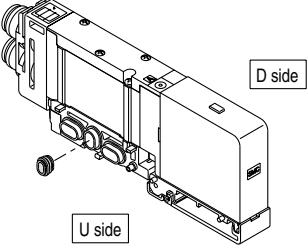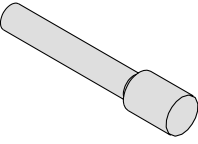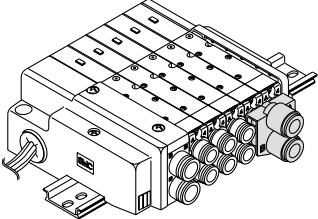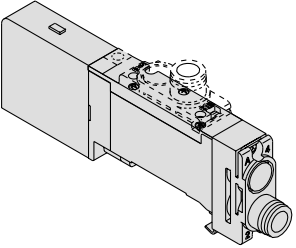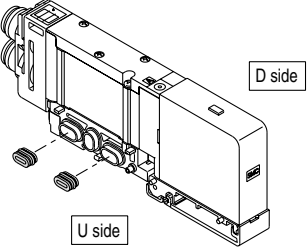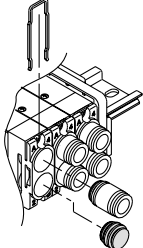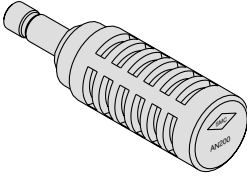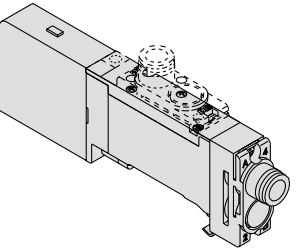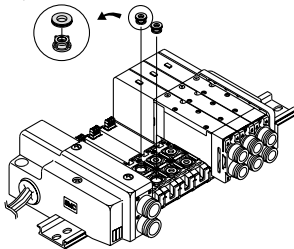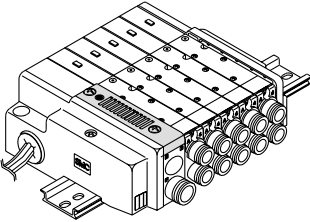
<p>Blanking plate P. 2-3-49 SSQ2000-10A-3</p> 	<p>Individual SUP/EXH spacer P. 2-3-50 SSQ2000-PR1-3-C8 L8</p> 	<p>Name plate (-N) P. 2-3-52 SSQ2000-N3-n</p> 	<p>External pilot specifications (-R) P. 2-3-53</p> <p>External pilot port</p> 																												
<p>SUP/EXH block P. 2-3-49 SSQ2000-PR-3-C10 (-S)</p> 	<p>SUP block plate P. 2-3-51 SSQ1000-B-R</p> <p>D side</p> <p>U side</p> 	<p>Blanking plug P. 2-3-52 KQ2P-04/06/08/10</p> 	<p>Dual flow fitting P. 2-3-53 SSQ2000-52A-C10 N11</p> 																												
<p>Individual SUP spacer P. 2-3-49 SSQ2000-P-3-C8 L8</p> 	<p>EXH block plate P. 2-3-51 SSQ2000-B-R</p> <p>D side</p> <p>U side</p> 	<p>Port plug P. 2-3-52 VVQZ2000-CP</p> 	<p>Silencer (For EXH port) P. 2-3-53</p> 																												
<p>Individual EXH spacer P. 2-3-50 SSQ2000-R-3-C8 L8</p> 	<p>Back pressure check valve (-B) P. 2-3-51 SSQ2000-BP</p> 	<p>Built-in silencer (-S) P. 2-3-52</p> 	<p>Special wiring specifications (-K) P. 2-3-54</p> <p>D-sub connector</p> <table border="1"> <thead> <tr> <th>Connector terminal no.</th> <th>Terminal no.</th> </tr> </thead> <tbody> <tr><td>14 ○ 01</td><td>SOLA ○ 1 (-)</td></tr> <tr><td>15 ○ 02</td><td>SOLA ○ 14 (-)</td></tr> <tr><td>16 ○ 03</td><td>SOLA ○ 2 (-)</td></tr> <tr><td>17 ○ 04</td><td>SOLA ○ 15 (-)</td></tr> <tr><td>18 ○ 05</td><td>SOLA ○ 3 (-)</td></tr> <tr><td>19 ○ 06</td><td>SOLB ○ 16 (-)</td></tr> <tr><td>20 ○ 07</td><td>SOLA ○ 4 (-)</td></tr> <tr><td>21 ○ 08</td><td>SOLA ○ 17 (-)</td></tr> <tr><td>22 ○ 09</td><td>SOLA ○ 5 (-)</td></tr> <tr><td>23 ○ 10</td><td>SOLA ○ 18 (-)</td></tr> <tr><td>24 ○ 11</td><td>SOLA ○ 6 (-)</td></tr> <tr><td>25 ○ 12</td><td>SOLB ○ 19 (-)</td></tr> <tr><td>○ 13</td><td>COM. ○ 13 (+)</td></tr> </tbody> </table> <p>Although the standard products come with double wiring, mixed single and double wiring is available upon request.</p>	Connector terminal no.	Terminal no.	14 ○ 01	SOLA ○ 1 (-)	15 ○ 02	SOLA ○ 14 (-)	16 ○ 03	SOLA ○ 2 (-)	17 ○ 04	SOLA ○ 15 (-)	18 ○ 05	SOLA ○ 3 (-)	19 ○ 06	SOLB ○ 16 (-)	20 ○ 07	SOLA ○ 4 (-)	21 ○ 08	SOLA ○ 17 (-)	22 ○ 09	SOLA ○ 5 (-)	23 ○ 10	SOLA ○ 18 (-)	24 ○ 11	SOLA ○ 6 (-)	25 ○ 12	SOLB ○ 19 (-)	○ 13	COM. ○ 13 (+)
Connector terminal no.	Terminal no.																														
14 ○ 01	SOLA ○ 1 (-)																														
15 ○ 02	SOLA ○ 14 (-)																														
16 ○ 03	SOLA ○ 2 (-)																														
17 ○ 04	SOLA ○ 15 (-)																														
18 ○ 05	SOLA ○ 3 (-)																														
19 ○ 06	SOLB ○ 16 (-)																														
20 ○ 07	SOLA ○ 4 (-)																														
21 ○ 08	SOLA ○ 17 (-)																														
22 ○ 09	SOLA ○ 5 (-)																														
23 ○ 10	SOLA ○ 18 (-)																														
24 ○ 11	SOLA ○ 6 (-)																														
25 ○ 12	SOLB ○ 19 (-)																														
○ 13	COM. ○ 13 (+)																														

How to Order Manifold Assembly (Example)

Example: D-sub connector kit, with cable (3 m)

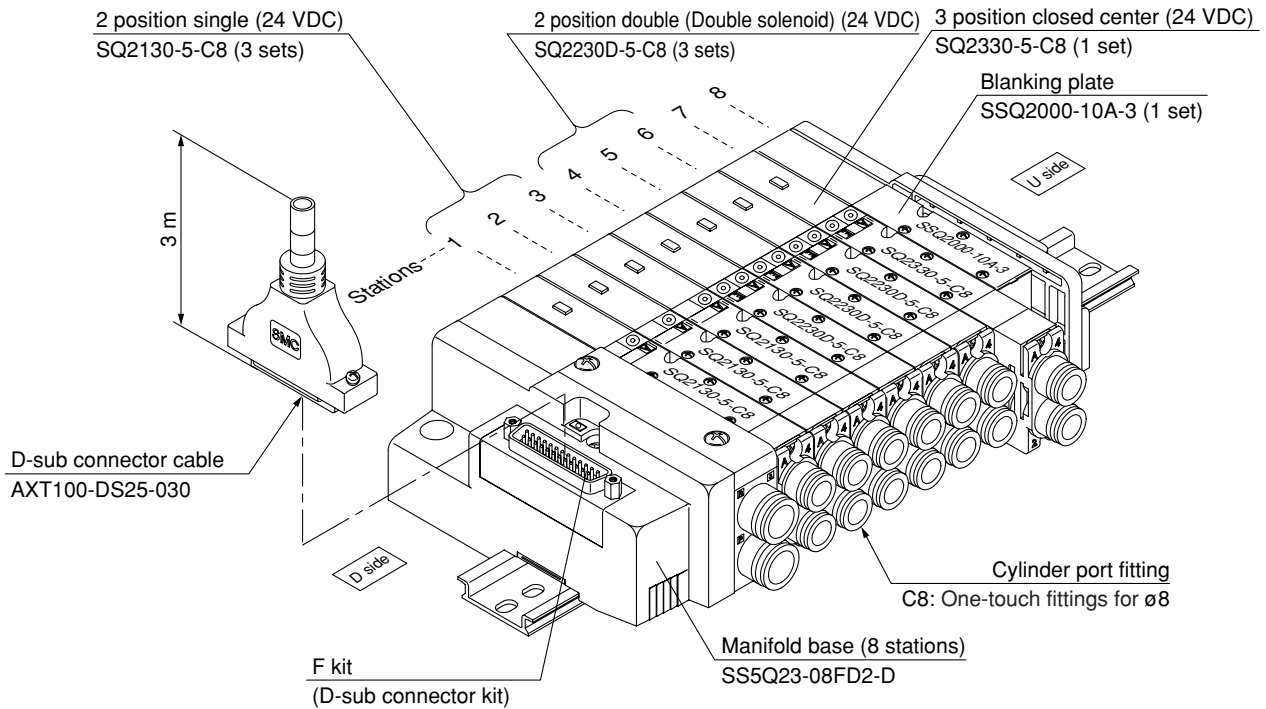

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

SS5Q23-08FD2-D	1 set (F kit 8 station manifold base)
* SQ2130-5-C8	3 sets (2 position single)
* SQ2230D-5-C8	3 sets (2 position double [Double solenoid])
* SQ2330-5-C8	1 set (3 position closed center)
* SSQ2000-10A-3	1 set (Blanking plate)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Add the valve and option part numbers in order starting from the first station on the D side.
When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

Manifold Specifications

Base model	Porting specifications			Applicable solenoid valve	Type of connection	Applicable ⁽³⁾ stations	5 station weight ⁽⁴⁾ (g)	1 station weight ⁽⁴⁾ (g)
	Port size ⁽¹⁾		4(A), 2(B)					
	1(P), 3(R)	Port location						
Series SQ2000 SS5Q23-□□□□	C10 (For ø10)	Side	C4 (For ø4) C6 (For ø6) C8 (For ø8)	SQ2 □ 30 SQ2 □ 31	F kit: D-sub connector	1 to 12 stations	580	35
					P kit: Flat ribbon cable	26P	1 to 12 stations	580
	20P	1 to 9 stations						
	Option Built-in silencer, direct exhaust	(2) Top	L4 (For ø4) L6 (For ø6) L8 (For ø8)		J kit: Flat ribbon cable PC Wiring System compatible	1 to 8 stations	580	35
					T kit: Terminal block	1 to 10 stations	1,165	620
					L kit: Lead wire	1 to 12 stations	620	50
			S kit: Serial transmission	1 to 8 stations	650	35		




Note 1) One-touch fittings in inch sizes are also available. For details, refer to page 2-3-56.


Note 2) Can be changed to side ported configuration.

Note 3) An optional specification for special wiring is available to increase the maximum number of stations. Refer to page 2-3-54 for details.


Note 4) Except valves. For valve weight, refer to page 2-3-28.

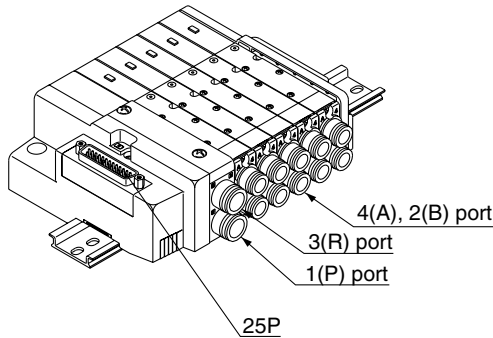


F kit

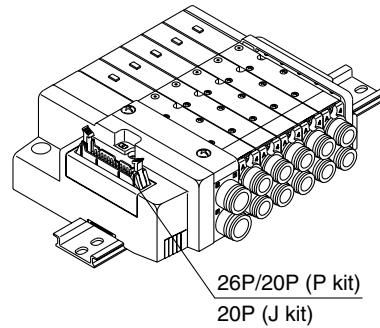


P kit J kit

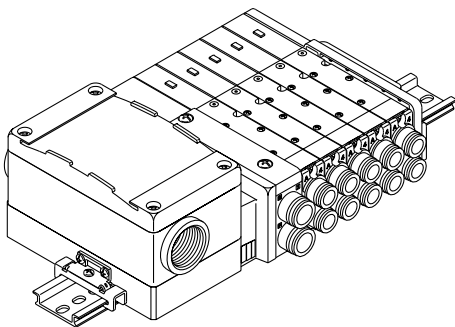

T kit

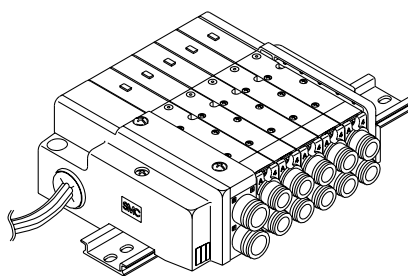

L kit

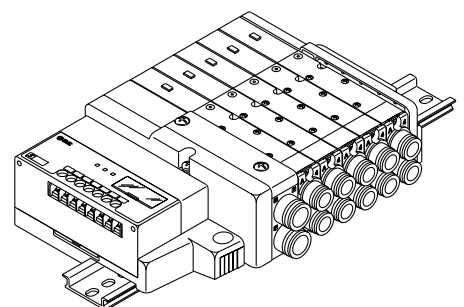

S kit

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD

Series SQ2000

S


Kit (Serial transmission unit)

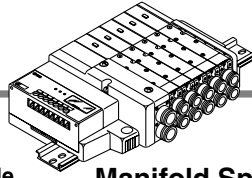

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The maximum number of stations is 8. (16 as an option). Only for type J2 and R2, the maximum stations are 4 (8 as an option).

Manifold Specifications

Series	Port location	Porting specifications		Maximum number of stations
		1(P), 3(R)	4(A), 2(B)	
SQ2000	Side, Top	C10	C4, C6, C8	8 stations

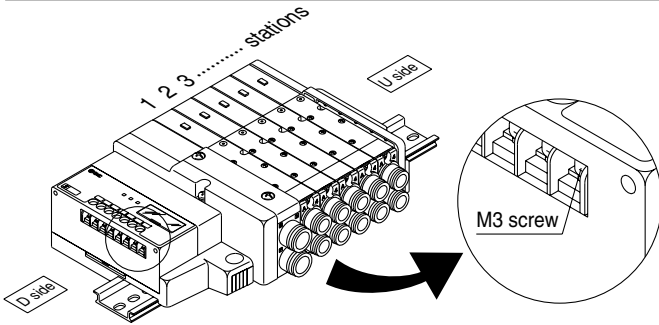

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option.

Item	Specifications
External power supply	24 VDC, +10%, -5%
Current consumption (Inside unit)	0.1 A or less

● Corresponding SI unit output numbers and solenoid coils <Wiring example 1>

SI unit output no.	0	1	2	3	4	5	6	7	8	9
		A B	A B	A None	A None	A B				
SI unit		Double	Double	Single	Single	Single				
Stations		1	2	3	4	5				

Double wiring (Standard)

<Wiring example 2>

* Mixed wiring is available as an option. Specify the wiring specification by means of the manifold specification sheet. Refer to page 2-3-54 for details.

SI unit output no.	0	1	2	3	4	5	6	7
		A B	A B	A	A	A B		
SI unit		Double	Double	Single	Single	Double		
Stations		1	2	3	4	5		

Mixed single and double wiring (Option)


	Type SDF NKE Corporation Uni-wire System	Type SDH NKE Corporation Uni-wire H System	Type SDJ1, SDJ2 SUNX Corporation S-LINK System																	
Name of terminal block, LED																				
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input (Light ON when normal, flickers when voltage is low)</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)	SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input (Light ON when normal, flickers when voltage is low)</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)	SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with power input</td> </tr> <tr> <td>SEND</td> <td>Transmission indicator Normal: Blinks, Abnormal: Blinks slowly</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with power input	SEND
LED	Description																			
POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON																			
LED	Description																			
POWER	Light ON with power input (Light ON when normal, flickers when voltage is low)																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Light OFF or ON																			
LED	Description																			
POWER	Light ON with power input																			
SEND	Transmission indicator Normal: Blinks, Abnormal: Blinks slowly																			
Cable wiring			<p>a) Type T branching multi-drop wiring (S-LINK System)</p> <p>b) Crossover wiring (Sensor link system)</p> <p>The above is the example of using dedicated S-LINK flat ribbon cable SL-RCM□00.</p>																	
Note	<ul style="list-style-type: none"> • Uni-wire System Send unit: SD-120 • No. of output points, 16 points 	<ul style="list-style-type: none"> • Uni-wire H System Send unit: SD-H2 • No. of output points, 16 points 	<ul style="list-style-type: none"> • S-LINK System S-LINK controller: SL-CU1 • No. of output points, 16 points (Type SDJ1) No. of output points, 8 points (Type SDJ2) 																	

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

Series SQ2000


S

Kit (Serial transmission unit)

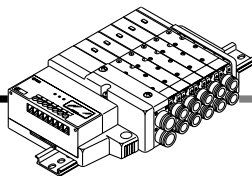


	Type SDQ OMRON Corporation DeviceNet, CompoBus/D	Type SDR1, SDR2 OMRON Corporation CompoBus/S System	Type SDV Mitsubishi Electric Corporation CC-LINK System																												
Name of terminal block, LED	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF</td> </tr> <tr> <td rowspan="3">MOD/NET</td> <td>Green light ON continuously: When the unit is online and in operation</td> </tr> <tr> <td>Red light blinks: When a reversible abnormal transmission occurs</td> </tr> <tr> <td>Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online</td> </tr> </tbody> </table>	LED	Description	POWER	Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF	MOD/NET	Green light ON continuously: When the unit is online and in operation	Red light blinks: When a reversible abnormal transmission occurs	Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with transmission power input, light Off without it</td> </tr> <tr> <td>COMM</td> <td>Light ON with normal transmission, light OFF with abnormal or standby transmission</td> </tr> <tr> <td>ERR.</td> <td>Light ON with abnormal transmission, light Off with normal or standby transmission</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with transmission power input, light Off without it	COMM	Light ON with normal transmission, light OFF with abnormal or standby transmission	ERR.	Light ON with abnormal transmission, light Off with normal or standby transmission	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Light ON with transmission power input, light Off without it</td> </tr> <tr> <td>L RUN</td> <td>Light ON when receiving normal data</td> </tr> <tr> <td>SD</td> <td>Light ON when sending data</td> </tr> <tr> <td>RD</td> <td>Light ON when receiving data</td> </tr> <tr> <td>L ERR.</td> <td>Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting</td> </tr> </tbody> </table>	LED	Description	POWER	Light ON with transmission power input, light Off without it	L RUN	Light ON when receiving normal data	SD	Light ON when sending data	RD	Light ON when receiving data	L ERR.	Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting
	LED	Description																													
POWER	Green light ON with circuit power input Light OFF: When the unit is not online or circuit power is OFF																														
MOD/NET	Green light ON continuously: When the unit is online and in operation																														
	Red light blinks: When a reversible abnormal transmission occurs																														
	Red light ON continuously: When irreversible abnormal transmission occurs or the same line is unable to go online																														
LED	Description																														
POWER	Light ON with transmission power input, light Off without it																														
COMM	Light ON with normal transmission, light OFF with abnormal or standby transmission																														
ERR.	Light ON with abnormal transmission, light Off with normal or standby transmission																														
LED	Description																														
POWER	Light ON with transmission power input, light Off without it																														
L RUN	Light ON when receiving normal data																														
SD	Light ON when sending data																														
RD	Light ON when receiving data																														
L ERR.	Light ON with transmission error/setting error, light blinks with changes in the station no. or transmission speed setting																														
Cable wiring																															
Note	<ul style="list-style-type: none"> • DeviceNet • OMRON Corporation CompoBus/D System Master unit: C200HW-DRM21 • No. of output points, 16 points 	<ul style="list-style-type: none"> • CompoBus/S System Master unit: C200HW-SRM21 Master unit: CQM1-SRM21 • No. of output points, 16 points (Type SDR1) No. of output points, 8 points (Type SDR2) 	<ul style="list-style-type: none"> • CC-LINK System Master unit: AJ61BT11 Master unit: A1SJ61BT11 Master unit: AJ61QBT11 Master unit: A1SJ61QBT11 • No. of output points, 16 points 																												

Plug-in Unit Series SQ2000

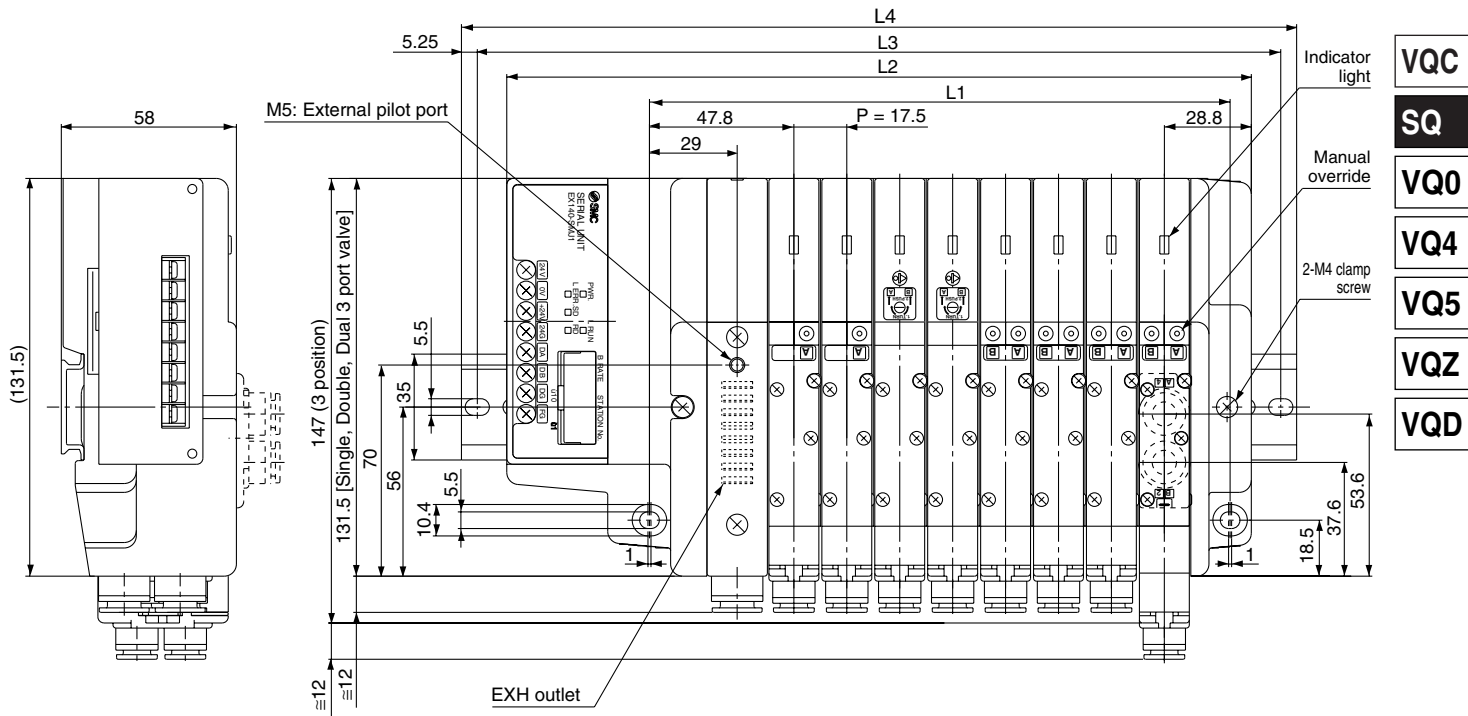

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

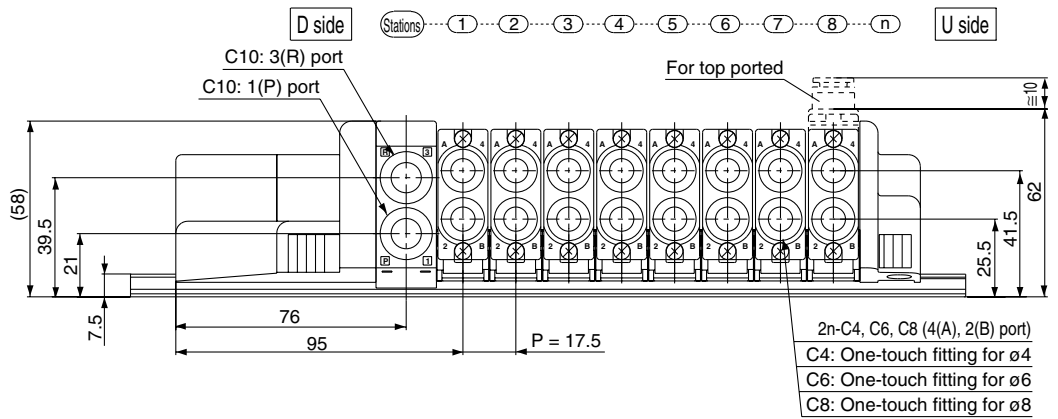

Dimensions

Formula: $L1 = 17.5n + 52$, $L2 = 17.5n + 106$ n: Stations (Maximum 16 stations)



L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	69.5	87	104.5	122	139.5	157	174.5	192	209.5	227	244.5	262	279.5	297	314.5	332
L2	123.5	141	158.5	176	193.5	211	228.5	246	263.5	281	298.5	316	333.5	351	368.5	386
L3	150	162.5	187.5	200	225	237.5	250	275	287.5	312.5	325	337.5	362.5	375	400	412.5
L4	160.5	173	198	210.5	235.5	248	260.5	285.5	298	323	335.5	348	373	385.5	410.5	423

Manifold Option Parts for SQ2000


Blanking plate

SSQ2000-10A-3

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

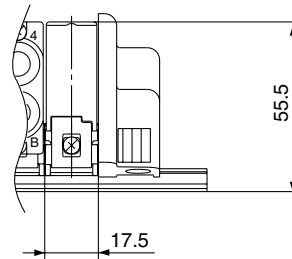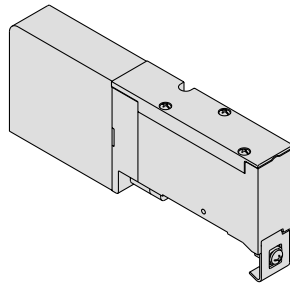

JIS Symbol

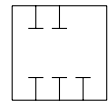

SUP/EXH block

SSQ2000-PR-3-C10-□

Option

Nil	Standard
R	External pilot specifications
S	Built-in silencer


Note) When specifying both options, indicate "RS".

* Specify the spacer mounting position on the manifold specification sheet.


For standard type manifolds, the SUP/EXH block is mounted on the D side. It is added to the manifold to increase SUP/EXH capacity.

* The number of SUP/EXH blocks that can be added is limited to two sets, one between manifold stations and another on the U side of the manifold due to the length of the internal lead wire.

* SUP/EXH blocks are not included in the number of manifold stations.

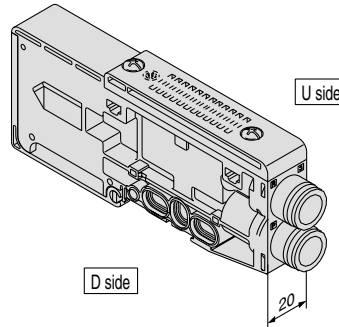

Description/Model		Stations				
		1	2	3	4	5
Valve	Single	●	●	●		
	⋮					
Option	SUP/EXH block				●	
	SSQ2000-PR-3-C10-□					

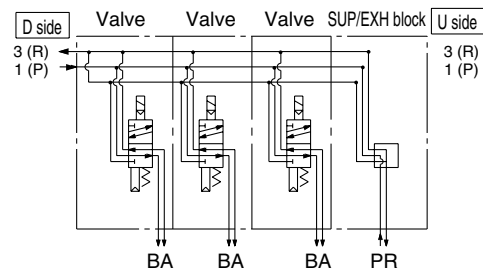

Individual SUP spacer

SSQ2000-P-3-C8

Port location

C8	Side ported
L8	Top ported

This is used as a supply port for different pressures when using different pressures in the same manifold (for one station).

Both sides of the station which is used with supply pressure from the individual SUP spacer are shut off. (Refer to application example.)

* Specify the spacer mounting position and SUP passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Two pieces of SUP block plate that shut off the supply pressure are included with the individual SUP spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual SUP spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual SUP spacer to the individual EXH spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual SUP spacers later, it is limited to two units, and another on the U side due to the length of the internal lead wire.



* Model no. with manifold block:

SSQ2000-P-3-C8-M
L8


Side ported

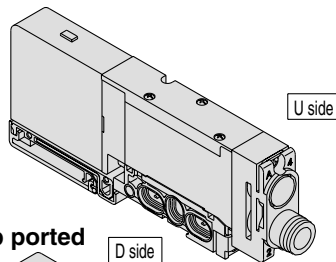

Top ported

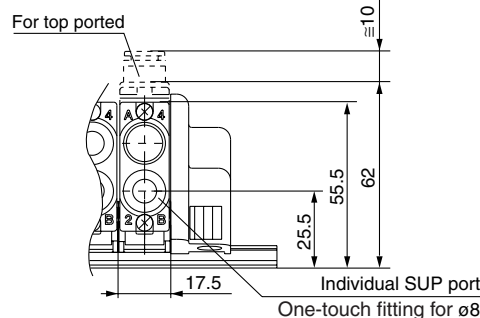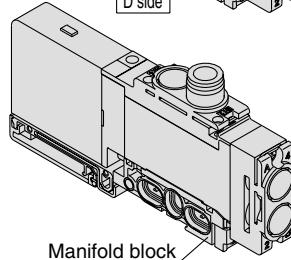

Description/Model		Stations				
		1	2	3	4	5
Valve	Single	●		●		
	⋮					
Option	Individual SUP spacer		●			
	SUP shut off position: Specify 2 positions.	●	●			

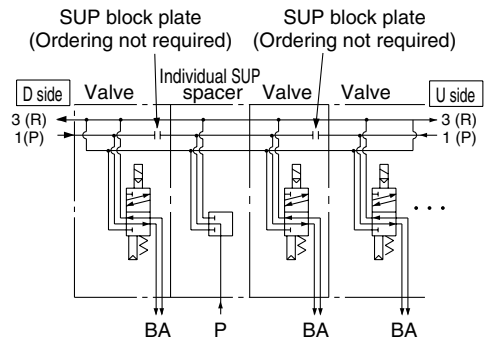

Series SQ1000/2000

Manifold Option Parts for SQ2000

Individual EXH spacer

SSQ2000-R-3-C8

•Port location

C8	Side ported
L8	Top ported

This is used to exhaust an individual valve when the exhaust from a valve interferes with other stations in the circuit (used for one station).

Both sides of the station which is to be individually exhausted are shut off. (Refer to application example.)

* Specify the spacer mounting position and EXH passage shut off positions on the manifold specification sheet. Two shut off positions are required per unit.

(Four pieces of EXH block plate that shut off the exhaust are included with the individual EXH spacer, therefore, it is not necessary to order them separately.)

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later (from the individual EXH spacer to the individual SUP spacer).

* The number of spacers is not limited when ordered with the manifold. However, when adding individual EXH spacers later, it is limited to two units, one between manifold stations and another on the U side due to the length of the internal lead wire.



* Model no. with manifold block:

SSQ2000-R-3-C8-M
L8


Side ported

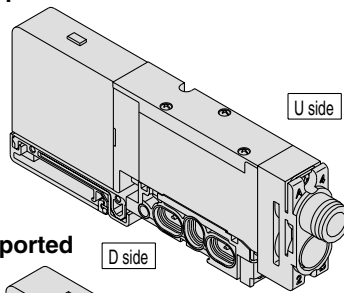

Top ported

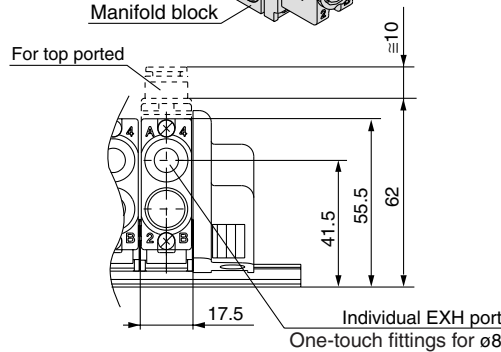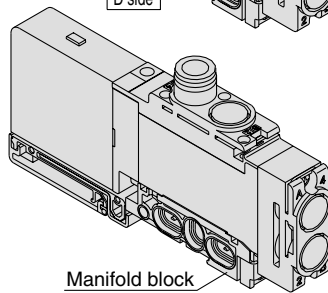

		Stations				
Description/Model		1	2	3	4	5
Valve	Single	●	●	●		
	⋮					
Option	Individual EXH spacer SSQ2000-R-3- <u>C8</u>		●			
	EXH shut off position: Specify 2 positions.	●		●		

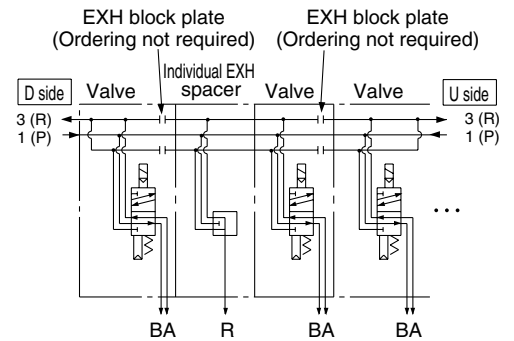

Individual SUP/EXH spacer

SSQ2000-PR1-3-C8

•Port location

C8	Side ported
L8	Top ported

This has both functions of the individual SUP and EXH spacers above. (Refer to application example.)

* Specify the spacer mounting position and SUP and EXH passage shut off positions on the manifold specification sheet. Two shut off positions each for SUP and EXH are required per unit.

[Block plates that shut off the SUP and EXH passages are included with the individual SUP/EXH spacer (2 pcs. of SUP block plate and 4 pcs. of EXH block plate.)]

* Electrical wiring is also connected to the manifold station with the individual EXH spacer.


* By changing the fitting shown in the drawing and the block plates, the spacer's specification can be changed later.

* The number of spacers is not limited when ordered with the manifold. However, when adding individual SUP/EXH spacers later, it is limited to two units, one between manifold stations on the U side due to the length of the internal lead wire.



* Model no. with manifold block:

SSQ2000-PR1-3-C8-M
L8


Side ported

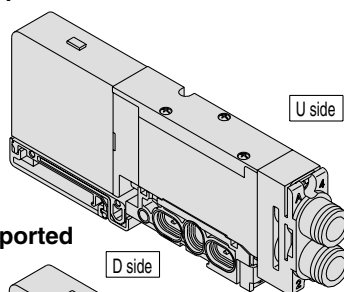

Top ported

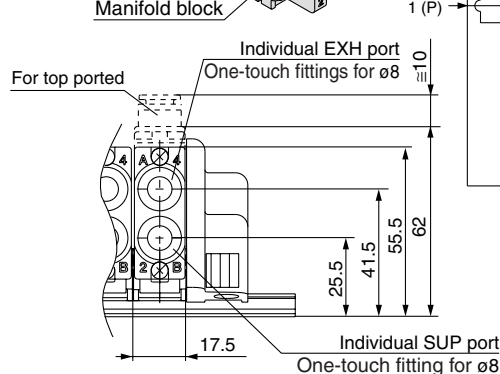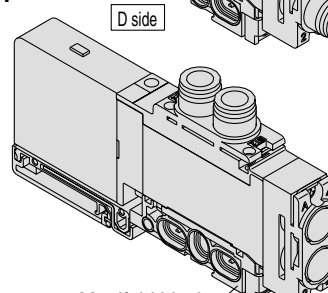

		Stations				
Description/Model		1	2	3	4	5
Valve	Single	●	●	●		
	⋮					
Option	Individual SUP/EXH spacer SSQ2000-PR1-3- <u>C8</u>		●			
	SUP shut off position: Specify 2 positions.	●		●		
	EXH shut off position: Specify 2 positions.	●		●		

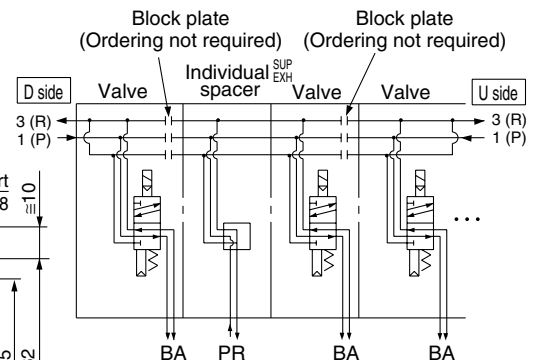

SUP block plate

SSQ1000-B-R


When supplying two different pressures, high and low, to one manifold, this is used between stations with different pressures. Also, it is used with an individual SUP spacer to shut off the air supply.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When a SUP passage is shut off with a SUP block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when SUP block plates are ordered with manifolds.

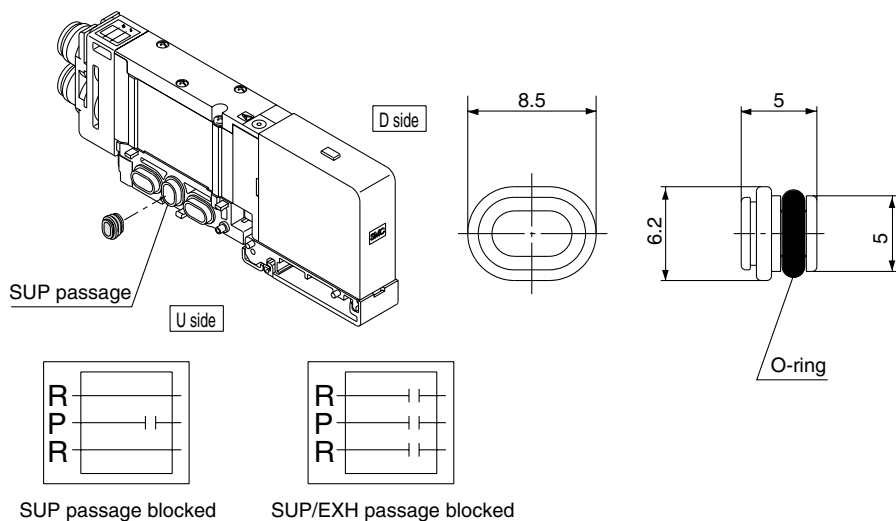

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

EXH block plate

SSQ2000-B-R


When the exhaust from a valve interferes with other stations in the circuit, this is used between stations to separate exhausts. Also, it is used with an individual EXH spacer to shut off the exhaust of individual valves.

* Specify the station position on the manifold specification sheet.

<Shut off label>

When an EXH passage is shut off with an EXH block plate, a label is attached for external confirmation of the shut off position (one label each).

* Shut off labels are applied when EXH block plates are ordered with manifolds.

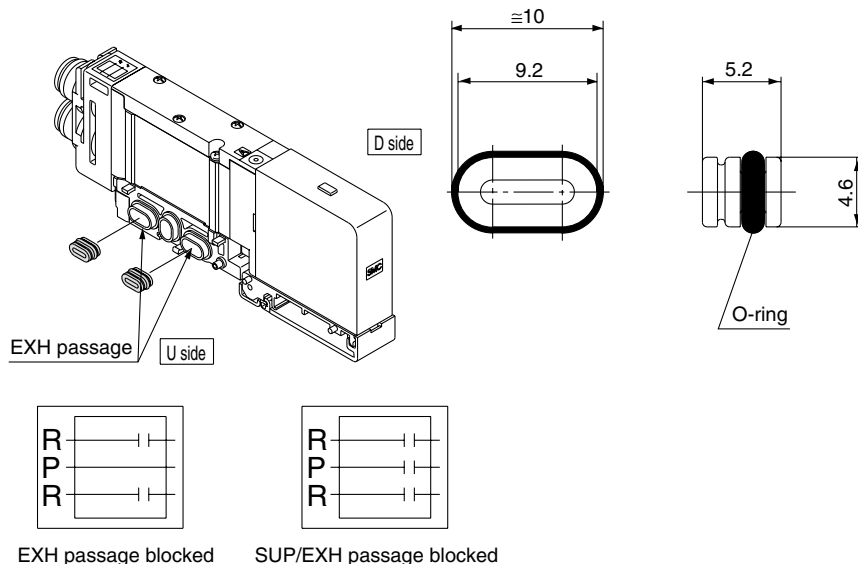


Back pressure check valve [-B]

SSQ2000-BP

This prevents cylinder malfunction caused by the exhaust from other valves. It is inserted into the R (EXH) port of the valve that is affected. It is especially effective when using single acting cylinders or exhaust center type solenoid valves.

* When installing back pressure check valves only on the stations required, enter the part number and specify the mounting stations on a manifold specification sheet.

* When installing back pressure check valves on all of the stations, indicate "B" at the end of the manifold part number.

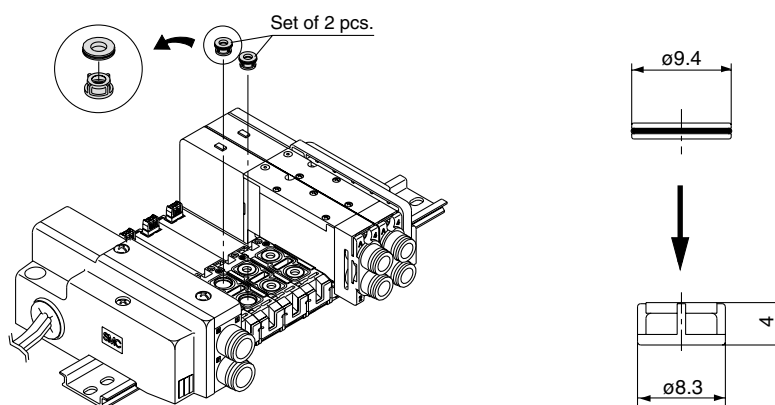

⚠ Caution

1. Although the back pressure check valve is an assembly part with a check valve mechanism, a small amount of air leakage is allowed. Therefore, take care not to restrict the exhaust air from the exhaust port.
2. The effective area of valves is about 20% less when the back pressure check valve is installed.

Series SQ1000/2000

Manifold Option Parts for SQ2000


Name plate [-N]

SSQ2000-N3- Stations (1 to maximum)

This is a clear resin plate for applying solenoid valve function description labels, etc.



To install, bend the plate slightly as shown and insert into the slots on the end plate side. Also, the plate is difficult to bend for manifolds with only a few stations, therefore, remove the silencer cover to install it.

* When ordering with manifolds, add "-N" at the end of the manifold number.

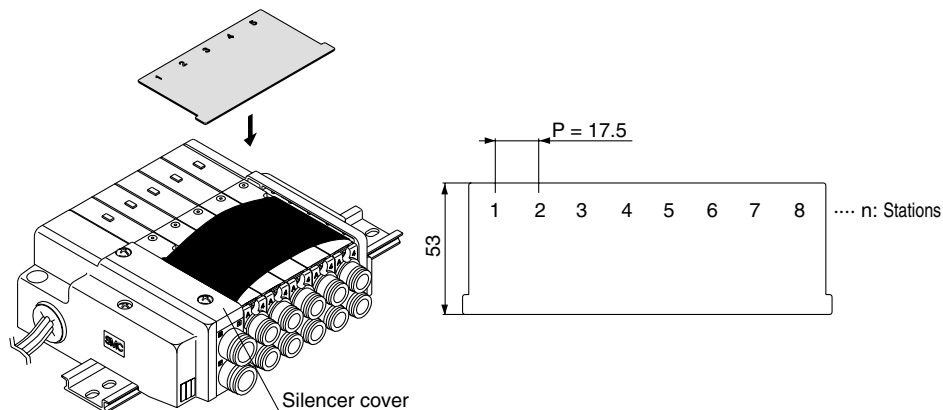

Blanking plug (For One-touch fitting)

04
06
08
10
KQ2P-

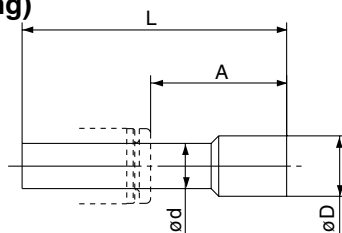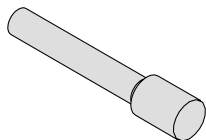

This is inserted into cylinder ports and SUP and EXH ports that are not used.

Purchasing order is available in units of 10 pieces.

Dimensions

Applicable fittings size ød	Model	A	L	D
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12

Port plug

VVQZ2000-CP

This is used to close the cylinder ports when changing a 5 port valve to a 3 port valve.

* Add "A" or "B" at the end of the valve part number when ordering with valves.

Example) SQ2131-5-C8-A (N.O. specifications)



• 4 (A) port plug

Example) SQ2131-5-C8-B (N.C. specifications)

• 2 (B) port plug

Example) SQ2131-5-C8-B-M

(B port plug with manifold block)

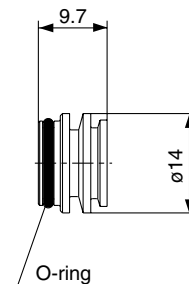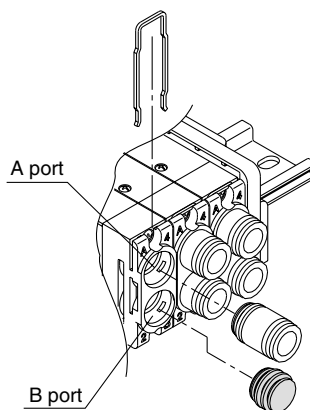

Direct EXH outlet, built-in silencer [-S]


The EXH outlet is placed on the top side of the manifold end plate. The built-in silencer provides highly effective noise reduction. (Noise reduction of 30 dB)



Note) Note that when excessive drainage occurs in the air supply, the drainage will be released along with the exhaust.

* Add "-S" at the end of the manifold part number when ordering with manifolds.

* For precautions on handling and how to replace elements, refer to page 2-3-5.

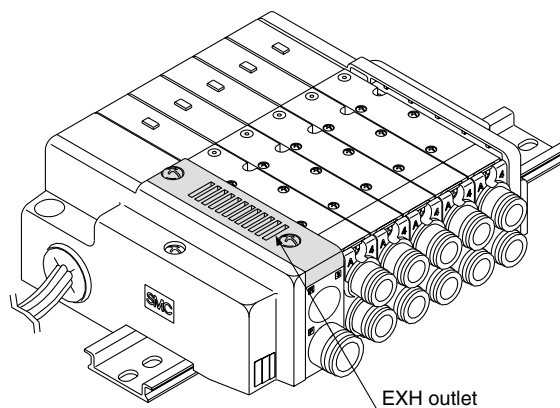

Series SQ1000/2000

Manifold Option Parts for SQ1000/SQ2000

Special Wiring Specifications

In the internal wiring of F kit, P kit, J kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order

Indicate option symbol “-K” in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet. Also, specify wiring for spare connectors.


(Up to two spare connectors are included depending on the remaining number of connector pins. When the wiring for the spare connectors is not specified, they will be wired according to “Spare Connector Wiring” on page 2-3-57.)

Example) **SS5Q13 - 09 FD0 - DKS**

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.

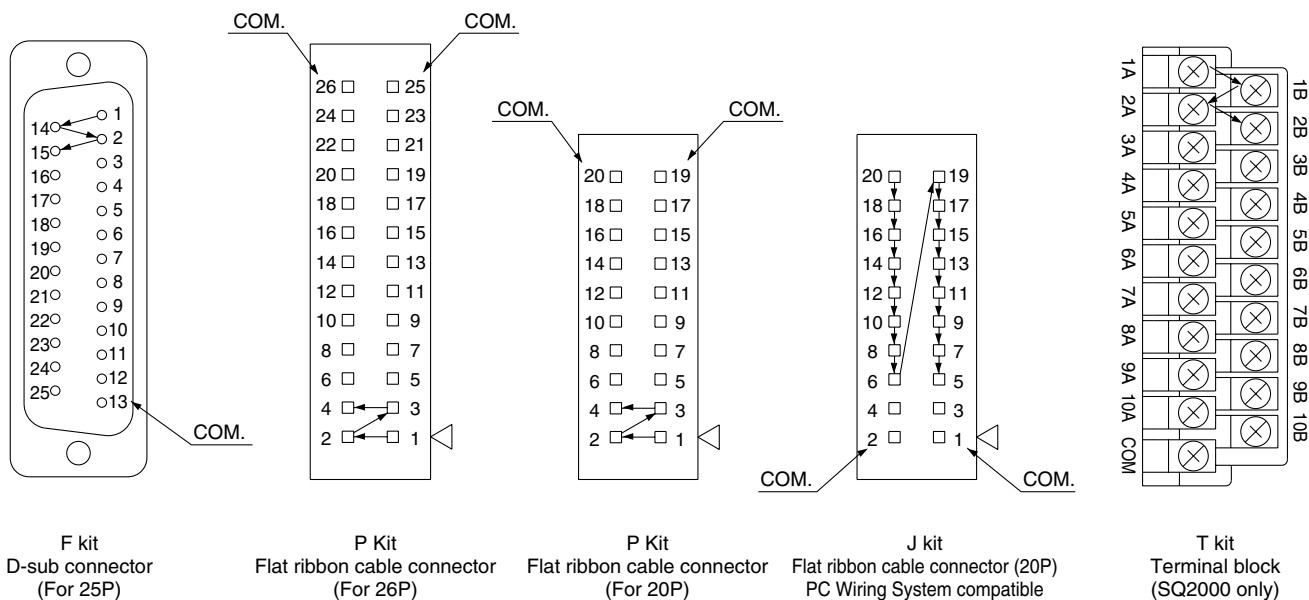

For S kit (serial transmission kit), refer to pages 2-3-20 and 2-3-40.

3. Maximum stations

The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. Determine the number of stations so that the total number of solenoids is no more than the maximum points in the table below.

Kit	F kit (D-sub connector)	P kit (Flat ribbon cable connector)		J kit Flat ribbon cable PC Wiring System compatible	T kit (Terminal block) SQ2000 only*	S kit (Serial)
Type	FD□ 25P	PD□ 26P	PDC 20P	JD0 20P	TD0	SD□
Max. points	24 points	24 points	18 points	16 points	20 points	16 points

Note) Maximum stations SQ1000: 24 stations
SQ2000: 16 stations

Special DIN Rail Length (DIN rail mounting (-D) only)

The standard DIN rail provided is approximately 30 mm longer than the overall length of the manifold with a specified number of stations. The following options are also available.

● DIN rail length longer than the standard type (for stations to be added later, etc.)

In the manifold part number, specify “-D” for the manifold mounting symbol and add the number of required stations after the symbol.

Example) **SS5Q13-08FD0-D09BNK**




● Ordering DIN rail only

DIN rail part number

AXT100-DR-n



Note) For “n”, enter a number from the “No.” line in the table below. For L dimension, refer to the dimensions of each kit.

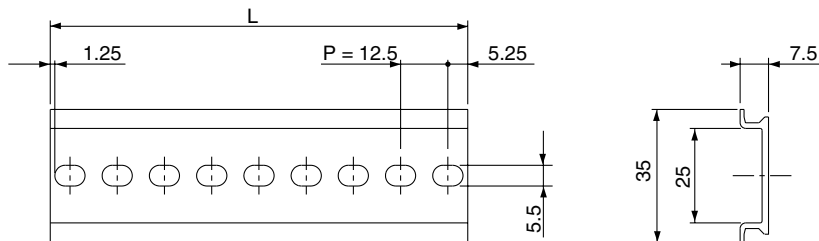

L Dimension

$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5


Direct Mounting Style (-E)

Manifold is mounted by using mounting holes of both sides of the manifold. DIN rail is not sticking out of the edge of end plate.

SQ1000

Mounting hole (For M4)


Mounting hole (For M4)

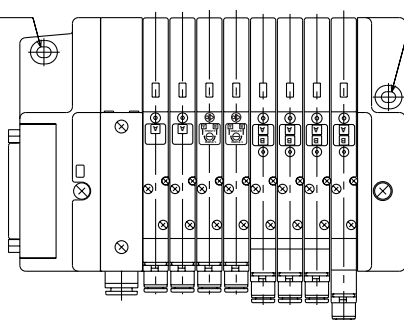

SQ2000

Mounting hole (For M5)

Mounting hole (For M5)

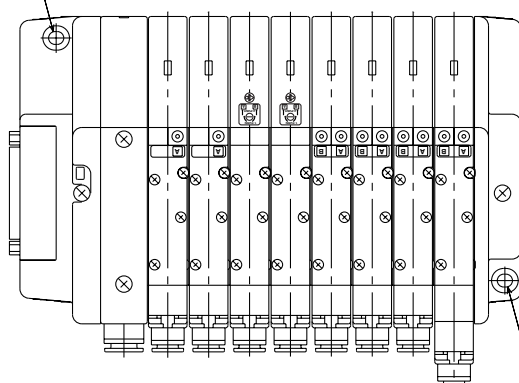

Series SQ1000/2000

Manifold Option for SQ1000/SQ2000

Negative Common Specifications

The following valve part numbers are for negative common specifications. Manifold part numbers are the same as the standard except L kit. Also, negative COM specifications are not available for the S kit.

● How to order negative COM valves (Example)

SQ1130 N -5-C6

• Negative common specifications

● How to order negative COM manifold (Example)

SS5Q13 -08LD1 N -DIN

Stations

Kit type

Option

DIN rail mounting style

• Negative common specifications

Inch-size One-touch Fittings

For One-touch fittings in inch sizes, use the following part numbers. Also, the color of the release button is orange.

● How to order valves (Example)

SQ1130- 5 - N7

Port location

Cylinder port

Port location		Symbol	N1	N3	N7	N9
Nil	Side ported	Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"
L	Top ported	4(A), 2(B) port	●	●	●	—
			—	●	●	●

● How to order manifold (Example)

Add "00T" at the end of the part number.

SS5Q13-08FD0 - DN - 00T

• 1 (P), 3 (R) port in inch size
 { SQ1000: ø5/16" (N9)
 { SQ2000: ø3/8" (N11)

How to Add Manifold Stations for SQ1000/SQ2000

1. Using Spare Connector to Add Stations

As shown in the table below, wiring specifications for spare connectors are based on to the remaining number of connector pins (remaining number of pins against the maximum number of solenoids for each kit.)
The following steps are for using spare connectors to add stations.

Spare Connector Wiring


Remaining connector pins	4 pins or more	3 pins	2 pins	1 pin	0 pin
Spare connector wiring	2 for double wiring	1 for double wiring (on the low no. station side) 1 for single wiring	1 for double wiring	1 for single wiring	None

What to order

- Valves with manifold block (refer to pages 2-3-7 and 2-3-25) or the manifold blocks (Refer to page 2-3-58)>

Steps for adding stations

- (1) Loosen the clamp screw on the U side end plate and open the manifold.
- (2) Mount the manifold block to be added.
- (3) Open the junction cover and attach the spare connector. Match the station position of the added station and the spare connector station number.
- (4) Press on the end plate to eliminate any space between the manifold blocks and tighten the clamp screw.
(Proper tightening torque: 0.8 to 1.0 N·m)
Note 1) Order a manifold block with lead wire for the L kit because a spare connector is not included with the kit. (Refer to page 2-3-58.)
Note 2) Do not let the lead wires get caught between manifolds, or when closing the junction cover.

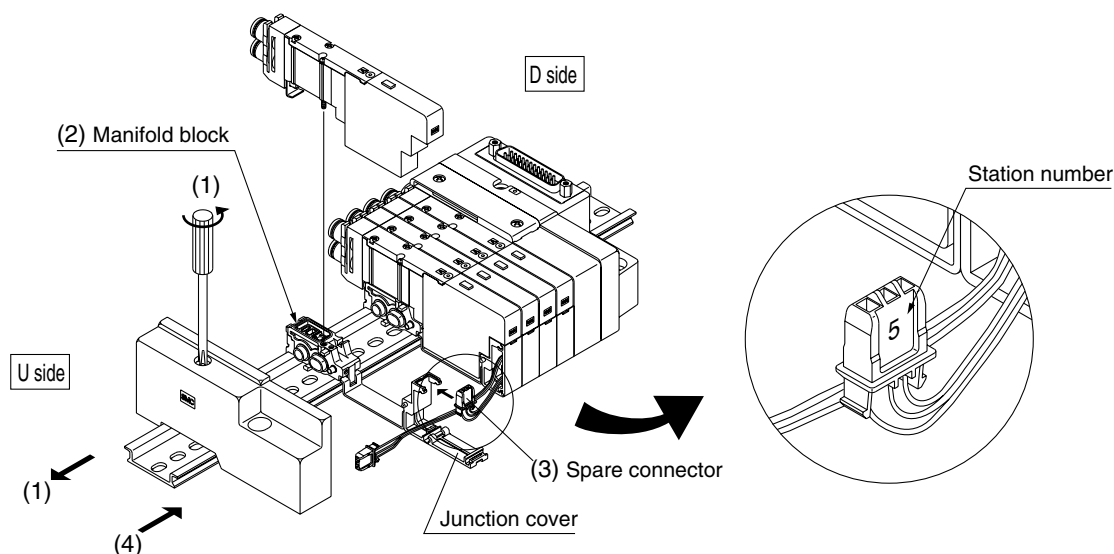

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD



Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

2. Adding Stations Without Required Spare Connectors

Spare connectors for 2 stations are initially included. However, to add 3 or more stations, order manifold blocks with lead wire in the tables below.

How to Order Manifold Blocks with Lead Wire

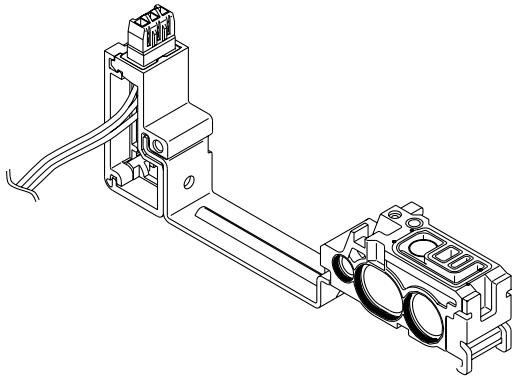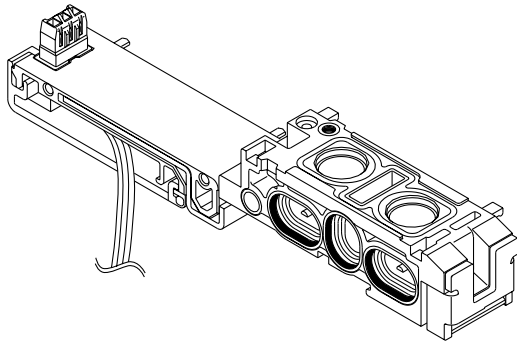
SQ1000	SQ2000																																																																				
																																																																					
<p>SSQ1000-1A-3-FS 03</p> <p>Lead wire type</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">F0</td><td>Without lead wire (for using spare connectors to add stations)</td></tr> <tr><td style="text-align: center;">FS</td><td>F kit (D-sub connector kit) Single wiring</td></tr> <tr><td style="text-align: center;">FW</td><td>F kit (D-sub connector kit) Double wiring</td></tr> <tr><td style="text-align: center;">PS</td><td>P, J kit (Flat ribbon cable kit) Single wiring</td></tr> <tr><td style="text-align: center;">PW</td><td>P, J kit (Flat ribbon cable kit) Double wiring</td></tr> <tr><td style="text-align: center;">L0</td><td>L kit (Lead wire kit) Lead wire length 0.6 m</td></tr> <tr><td style="text-align: center;">L1</td><td>L kit (Lead wire kit) Lead wire length 1.5 m</td></tr> <tr><td style="text-align: center;">L2</td><td>L kit (Lead wire kit) Lead wire length 3.0 m</td></tr> <tr><td style="text-align: center;">SS</td><td>S kit (Serial transmission kit) Single wiring</td></tr> <tr><td style="text-align: center;">SW</td><td>S kit (Serial transmission kit) Double wiring</td></tr> </table> <p>Applicable stations</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">01</td><td>1 station</td></tr> <tr><td style="text-align: center;">⋮</td><td>⋮</td></tr> <tr><td style="text-align: center;">24</td><td>24 station</td></tr> </table> <p>Option</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">Nil</td><td>None</td></tr> <tr><td style="text-align: center;">B</td><td>Back pressure check valve</td></tr> <tr><td style="text-align: center;">R</td><td>External pilot specifications</td></tr> </table> <p>Note 1) No symbol required for "F0". Note 2) S kit is from 01 to 16</p> <p>Note) Enter "-BR" for both options.</p>	F0	Without lead wire (for using spare connectors to add stations)	FS	F kit (D-sub connector kit) Single wiring	FW	F kit (D-sub connector kit) Double wiring	PS	P, J kit (Flat ribbon cable kit) Single wiring	PW	P, J kit (Flat ribbon cable kit) Double wiring	L0	L kit (Lead wire kit) Lead wire length 0.6 m	L1	L kit (Lead wire kit) Lead wire length 1.5 m	L2	L kit (Lead wire kit) Lead wire length 3.0 m	SS	S kit (Serial transmission kit) Single wiring	SW	S kit (Serial transmission kit) Double wiring	01	1 station	⋮	⋮	24	24 station	Nil	None	B	Back pressure check valve	R	External pilot specifications	<p>SSQ2000-1A-3-FS 03</p> <p>Lead wire type</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">F0</td><td>Without lead wire (for using spare connectors to add stations)</td></tr> <tr><td style="text-align: center;">FS</td><td>F kit (D-sub connector kit) Single wiring</td></tr> <tr><td style="text-align: center;">FW</td><td>F kit (D-sub connector kit) Double wiring</td></tr> <tr><td style="text-align: center;">PS</td><td>P, J kit (Flat ribbon cable kit) Single wiring</td></tr> <tr><td style="text-align: center;">PW</td><td>P, J kit (Flat ribbon cable kit) Double wiring</td></tr> <tr><td style="text-align: center;">TS</td><td>T kit (Terminal block kit) Single wiring</td></tr> <tr><td style="text-align: center;">TW</td><td>T kit (Terminal block kit) Double wiring</td></tr> <tr><td style="text-align: center;">L0</td><td>L kit (Lead wire kit) Lead wire length 0.6 m</td></tr> <tr><td style="text-align: center;">L1</td><td>L kit (Lead wire kit) Lead wire length 1.5 m</td></tr> <tr><td style="text-align: center;">L2</td><td>L kit (Lead wire kit) Lead wire length 3.0 m</td></tr> <tr><td style="text-align: center;">SS</td><td>S kit (Serial transmission kit) Single wiring</td></tr> <tr><td style="text-align: center;">SW</td><td>S kit (Serial transmission kit) Double wiring</td></tr> </table> <p>Applicable stations</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">01</td><td>1 station</td></tr> <tr><td style="text-align: center;">⋮</td><td>⋮</td></tr> <tr><td style="text-align: center;">16</td><td>16 stations</td></tr> </table> <p>Note) No symbol required for "F0".</p> <p>Option</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">Nil</td><td>None</td></tr> <tr><td style="text-align: center;">B</td><td>Back pressure check valve</td></tr> <tr><td style="text-align: center;">R</td><td>External pilot specifications</td></tr> </table> <p>Note) Enter "-BR" for both options.</p>	F0	Without lead wire (for using spare connectors to add stations)	FS	F kit (D-sub connector kit) Single wiring	FW	F kit (D-sub connector kit) Double wiring	PS	P, J kit (Flat ribbon cable kit) Single wiring	PW	P, J kit (Flat ribbon cable kit) Double wiring	TS	T kit (Terminal block kit) Single wiring	TW	T kit (Terminal block kit) Double wiring	L0	L kit (Lead wire kit) Lead wire length 0.6 m	L1	L kit (Lead wire kit) Lead wire length 1.5 m	L2	L kit (Lead wire kit) Lead wire length 3.0 m	SS	S kit (Serial transmission kit) Single wiring	SW	S kit (Serial transmission kit) Double wiring	01	1 station	⋮	⋮	16	16 stations	Nil	None	B	Back pressure check valve	R	External pilot specifications
F0	Without lead wire (for using spare connectors to add stations)																																																																				
FS	F kit (D-sub connector kit) Single wiring																																																																				
FW	F kit (D-sub connector kit) Double wiring																																																																				
PS	P, J kit (Flat ribbon cable kit) Single wiring																																																																				
PW	P, J kit (Flat ribbon cable kit) Double wiring																																																																				
L0	L kit (Lead wire kit) Lead wire length 0.6 m																																																																				
L1	L kit (Lead wire kit) Lead wire length 1.5 m																																																																				
L2	L kit (Lead wire kit) Lead wire length 3.0 m																																																																				
SS	S kit (Serial transmission kit) Single wiring																																																																				
SW	S kit (Serial transmission kit) Double wiring																																																																				
01	1 station																																																																				
⋮	⋮																																																																				
24	24 station																																																																				
Nil	None																																																																				
B	Back pressure check valve																																																																				
R	External pilot specifications																																																																				
F0	Without lead wire (for using spare connectors to add stations)																																																																				
FS	F kit (D-sub connector kit) Single wiring																																																																				
FW	F kit (D-sub connector kit) Double wiring																																																																				
PS	P, J kit (Flat ribbon cable kit) Single wiring																																																																				
PW	P, J kit (Flat ribbon cable kit) Double wiring																																																																				
TS	T kit (Terminal block kit) Single wiring																																																																				
TW	T kit (Terminal block kit) Double wiring																																																																				
L0	L kit (Lead wire kit) Lead wire length 0.6 m																																																																				
L1	L kit (Lead wire kit) Lead wire length 1.5 m																																																																				
L2	L kit (Lead wire kit) Lead wire length 3.0 m																																																																				
SS	S kit (Serial transmission kit) Single wiring																																																																				
SW	S kit (Serial transmission kit) Double wiring																																																																				
01	1 station																																																																				
⋮	⋮																																																																				
16	16 stations																																																																				
Nil	None																																																																				
B	Back pressure check valve																																																																				
R	External pilot specifications																																																																				

3. Connection Method (Refer to page 2-3-57 regarding the steps for adding stations to a manifold block.)

Connect the round terminal of the red lead wire to the common terminal inside the junction cover.

(1) Connecting common terminals

Connect lead wire assemblies included with manifold blocks as follows.

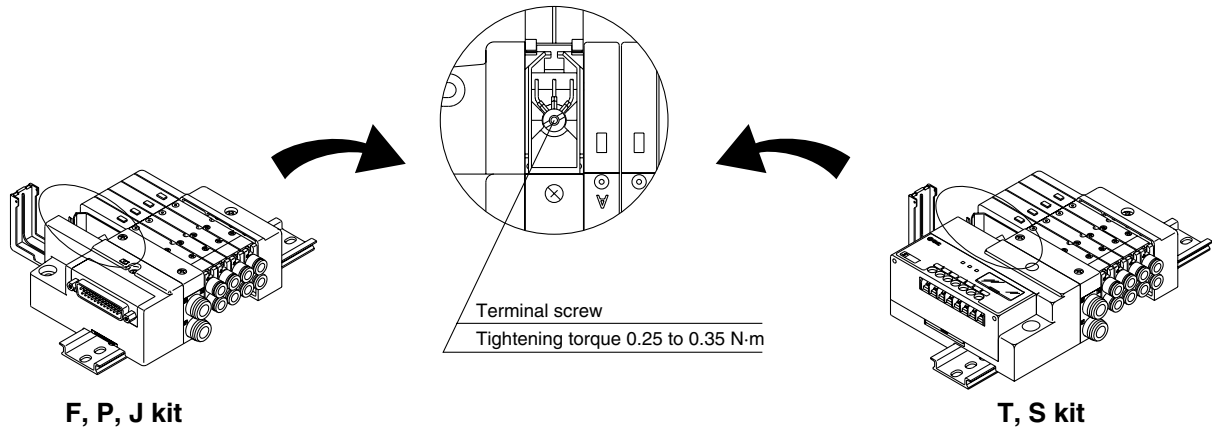


VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

(2) Pulling out connector

Pull out the connector to connect the lead wire.

- For F, P, and J kits, pull out and remove the housing while pressing down hard on the hook with a flat head screwdriver, etc. Remove the manual lever and lead wire cover, and pull out the connector.
- For T kits, remove the screws and pull out the terminal block.
- For S kits, remove the screws and pull out the connector.

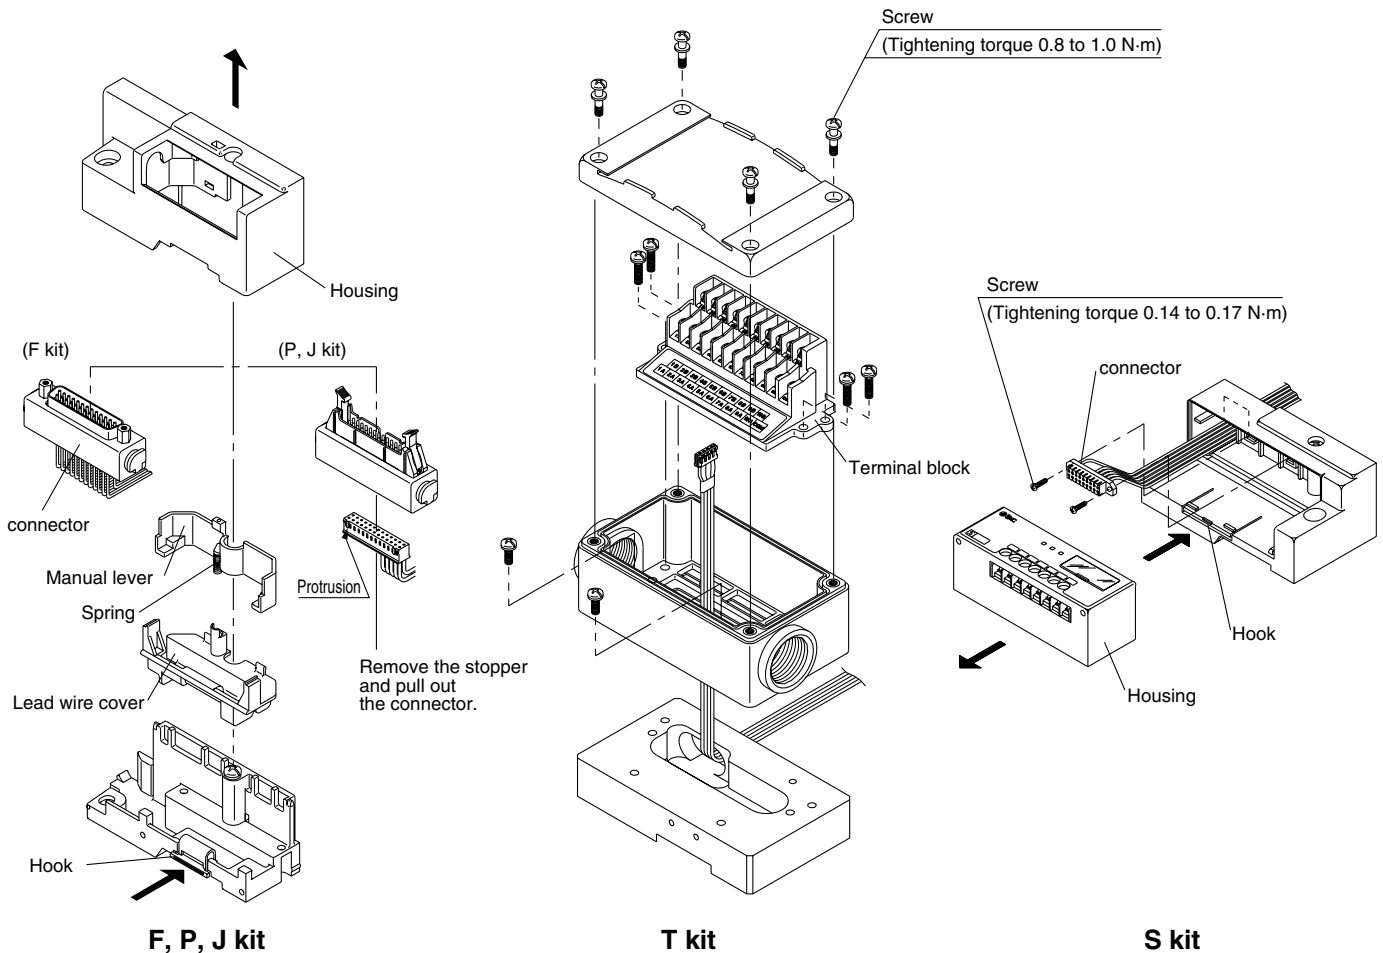


Series SQ1000/2000

How to Add Manifold Stations for SQ1000/SQ2000

Wiring (S kit: Serial transmission kit)

Procedure) Based on the manifold specifications, station 1 of SOL.A (black wire) will be terminal number 1 of the serial connector, and for station 2 and thereafter, connect black wires, then white wires in the order as shown below by the arrows.

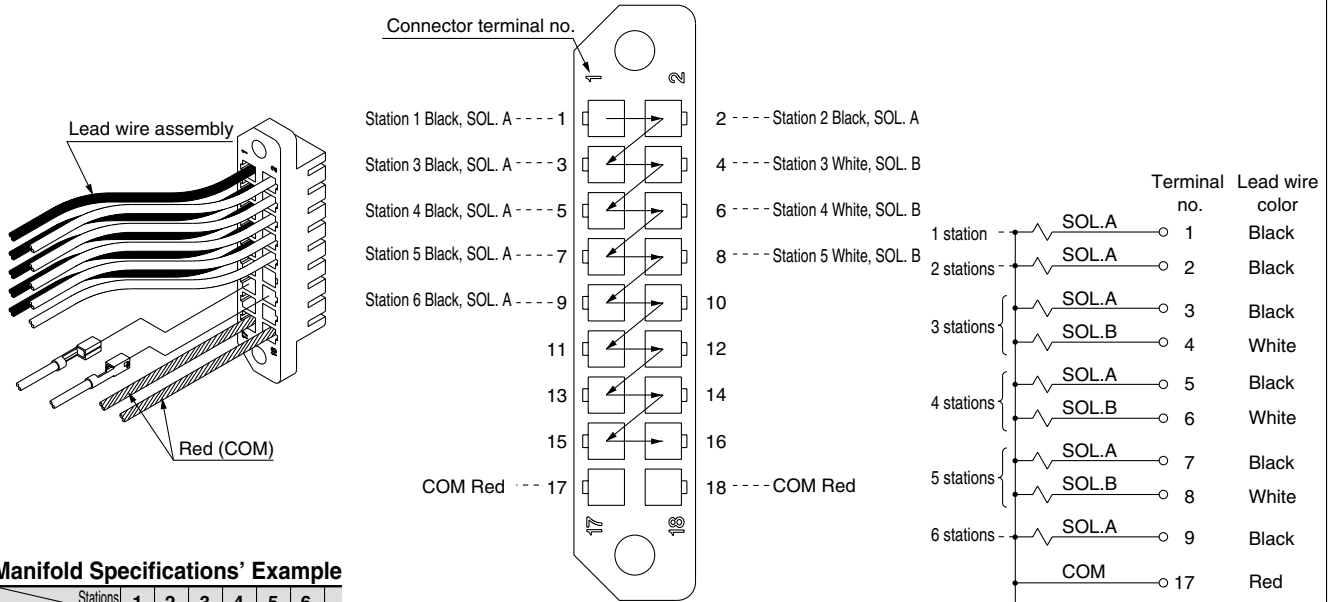

Manifold Specifications' Example


Stations	1	2	3	4	5	6
Single wiring	○	○				○
Double wiring			○	○	○	

* The drawing above shows connections based on the manifold specifications' example in the table to the left.

Series SQ1000/2000

Exploded View of Manifold: SQ2000 (Plug-in Type Manifold) SS5Q23

(F, P, J, T, L, S kit)

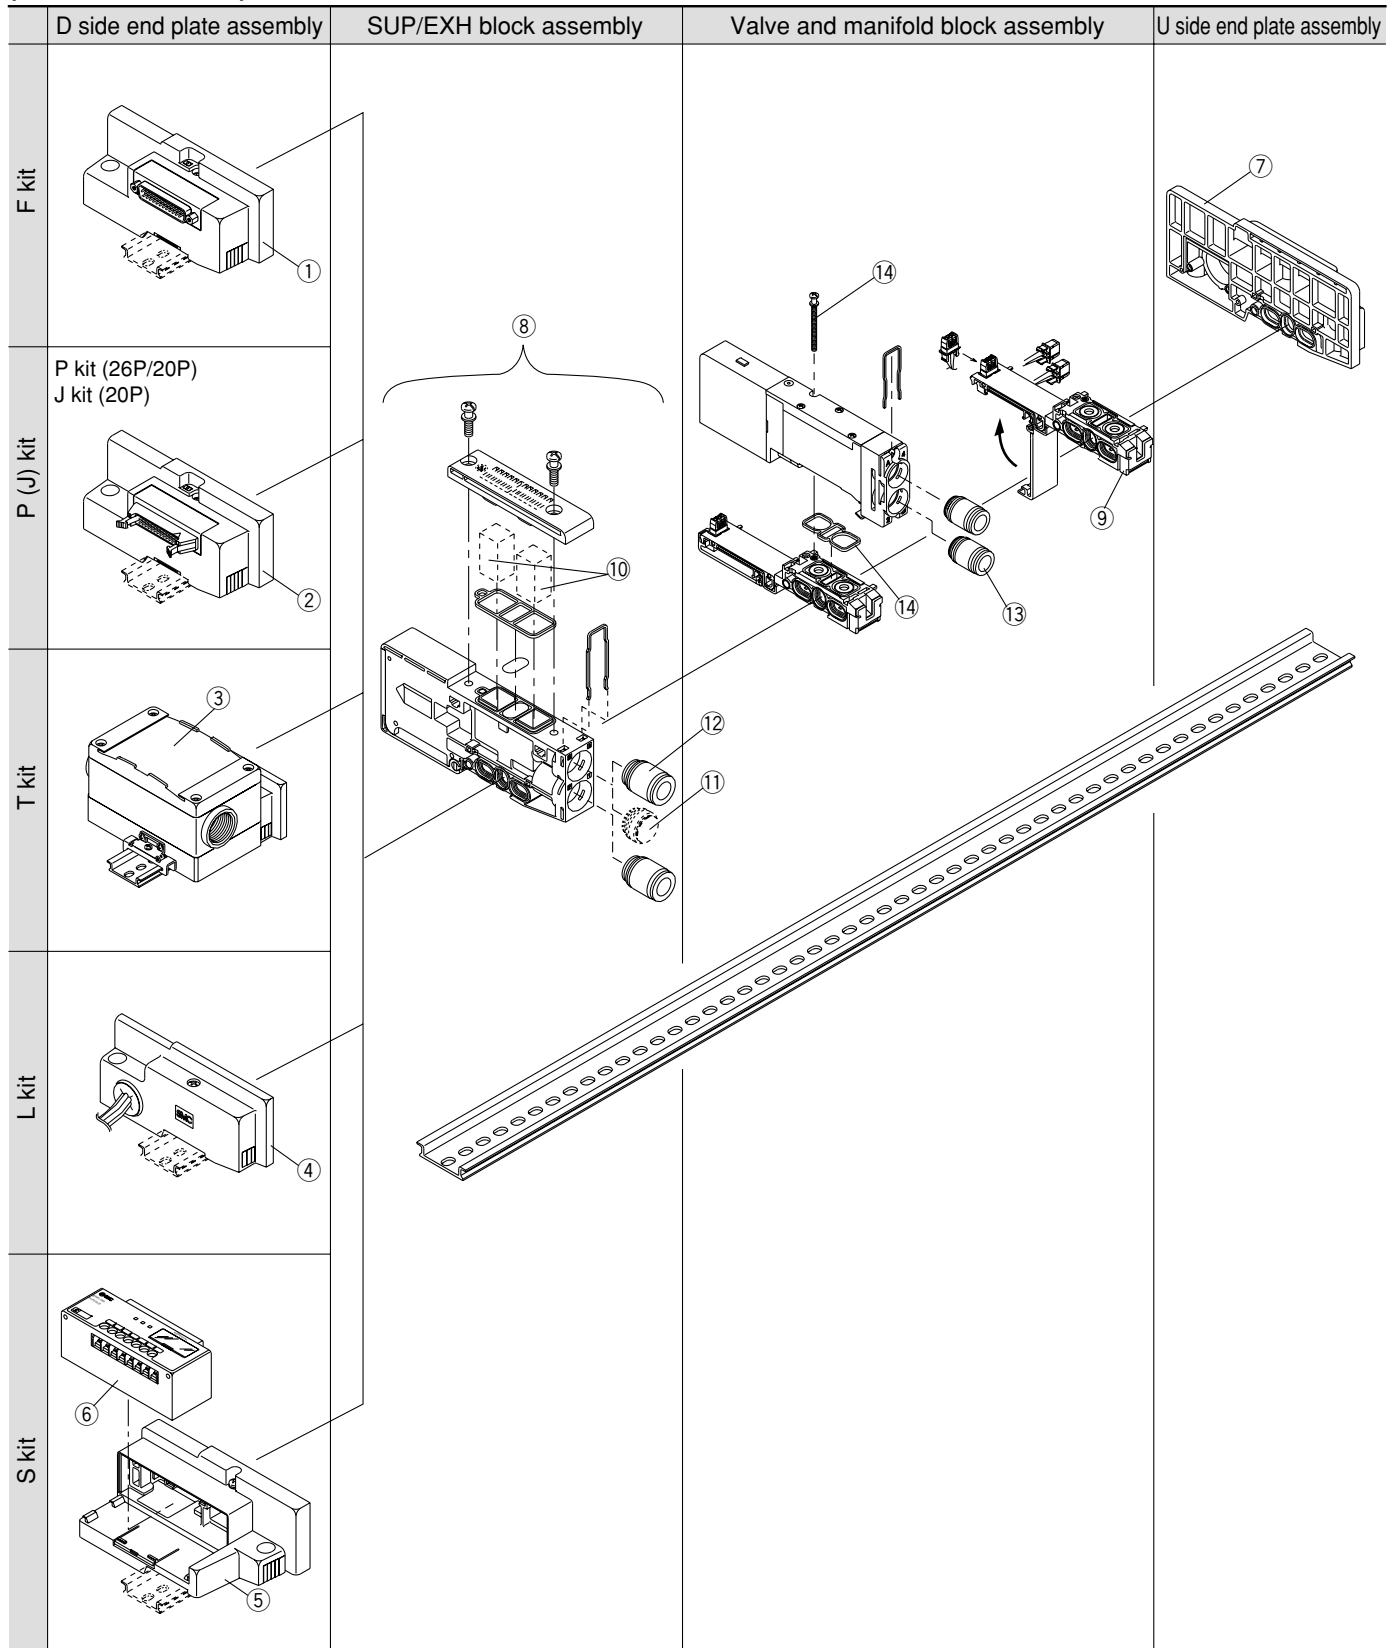

Manifold Spare Parts



Refer to pages 2-3-58 to 62 of "How to Add Manifold Stations" regarding the mounting of each spare parts.

<① ② ③ ④ ⑤ D side end plate assemblies>

SSQ2000 – 3A – 3

Manifold mounting

Nil	DIN rail mount style
E	Direct mount style

Electrical entry

F	F kit	①
P	P kit (26P)	②
PC	P kit (20P)	
J	J kit (20P)	③
Nil	L kit	
S	S kit	④

Wiring specifications

O	Without lead wire
S	Single wiring
W	Double wiring

Stations

01	For 1 station
⋮	⋮
16	For 16 stations

Note) The maximum number of stations will be different depending on the wiring

<⑥ SI unit>

Manifold	No.	Description
SDF kit	EX140-SUW1	NKE Corp.: Uni-wire System (16 output points)
SDH kit	EX140-SUH1	NKE Corp.: Uni-wire H System (16 output points)
SDJ1 kit	EX140-SSL1	SUNX Corp.: S-LINK System (16 output points)
SDJ2 kit	EX140-SSL2	SUNX Corp.: S-LINK System (8 output points)
SDQ kit	EX140-SDN1	DeviceNet, CompoBus/D (OMRON Corp.) (16 output points)
SDR1 kit	EX140-SCS1	OMRON Corp.: CompoBus/System (16 output points)
SDR2 kit	EX140-SCS2	OMRON Corp.: CompoBus/System (8 output points)
SDV kit	EX140-SMJ1	Mitsubishi Electric Corp.: CC-LINK System (16 output points)

<⑦ U side end plate assembly>

(For F, P, J, T, S kit)

SSQ2000 – 2A – 3

(For L kit)

SSQ2000 – 2A – 3

Manifold mounting

Nil	DIN rail mount style
E	Direct mount style

<⑧ SUP/EXH block assembly>

SSQ2000 – PR – 3

Port size

C8	One-touch fitting for ø8
C10	One-touch fitting for ø10
N9	One-touch fitting for ø5/16"
N11	One-touch fitting for ø3/8"

Option

Nil	Common exhaust type
R	External pilot
S	Built-in silencer, direct exhaust

Note) Enter "-RS" for both options.

<⑨ Manifold block assembly>

SSQ2000 – 1A – 3

Lead wire type

F0	Without lead wire
FS	F kit: D-sub connector kit Single wiring
FW	F kit: D-sub connector kit Double wiring
PS	P kit: Flat ribbon cable kit Single wiring
	J kit: PC Wiring System compatible Single wiring
PW	P kit: Flat ribbon cable kit Double wiring
	J kit: PC Wiring System compatible Double wiring
TS	T kit: Terminal block kit Single wiring
TW	T kit: Terminal block kit Double wiring
L0	L kit: Lead wire kit Lead wire length 0.6 m
L1	L kit: Lead wire kit Lead wire length 1.5 m
L2	L kit: Lead wire kit Lead wire length 3 m
SS	S kit: Serial transmission kit Single wiring
SW	S kit: Serial transmission kit Double wiring

Option

Nil	None
B	Back pressure check valve
R	External pilot specifications

Note) Enter "-BR" for both options.

Applicable stations

01	Station 1
⋮	⋮
16	Station 16

Note 1) No symbol required for "F0".

<⑩ Element>

SSQ2000 – SE

Note) Part number for a 10 piece set of element.
For replacement procedure, refer to page 2-3-5.

<⑪ Port plug>

VVQZ3000 – CP

<⑫ Fitting assembly>

(For P, R port)

VVQ2000 – 51A – C8

Port size

C8	One-touch fitting for ø8
C10	One-touch fitting for ø10
N9	One-touch fitting for ø5/16"
N11	One-touch fitting for ø3/8"

Note) Purchasing order is available in units of 10 pieces

<⑬ Fitting assembly>

(For cylinder port)

VVQ1000 – 51A – C4

Port size

C4	One-touch fitting for ø4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N3	One-touch fitting for ø5/32"
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"
01	Rc 1/8 thread

Note) Purchasing order is available in units of 10 pieces

<⑭ Gasket and screw assembly>

SQ2000 – GS

Note) Part number for 10 pieces each of gaskets and screws.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD