
## SY3000/5000/7000 Series

Plug-in Type

The connection cable and various units for PLC connection in PC wiring systems have been discontinued by the manufacturer. Therefore, while they can no longer be provided, the valve manifold (manifold with built-in valves) can still be ordered. For details, refer to the **Web Catalog**.

# Due to the flow increase, the



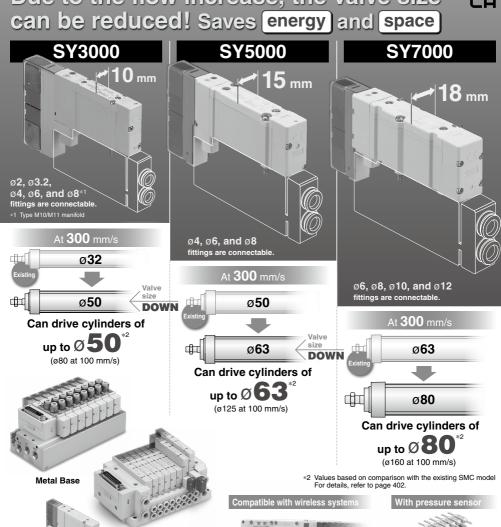





SMC


Connector **Connecting Base** 

Sub-plate


387

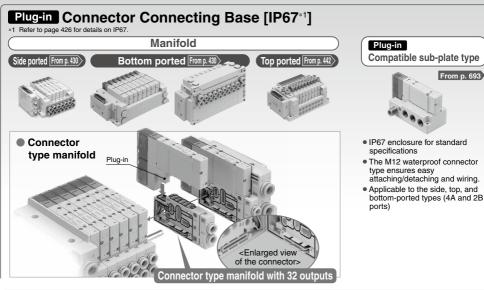

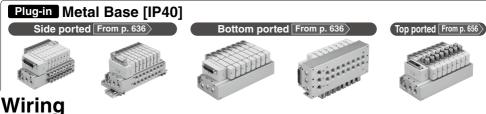

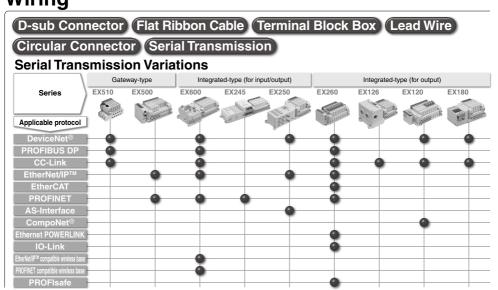

## **Power Saving**

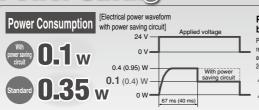

## Power consumption is reduced by the power saving circuit.

Power consumption is decreased to approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform to the left.

- Only products with an indicator light are equipped with the power saving circuit.
- The value in () is for the quick response and high pressure types.


#### Long Service Life

#### Metal seal

(Service life: 200 million cycles)\*1


- \*1 According to SMC life test conditions
- \*2 Please contact SMC if life test data is required.

## Space Saving / Improved Operability

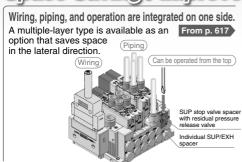

## A 4-position dual 3-port valve is available. (Only for the rubber seal type)

Two 3-port valves built into one body

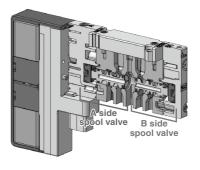


- 3-port valves on the A and B sides can be operated independently.
- When used as a 3-port valve, only half the number of stations is required.
- · Can also be used as a 4-position, 5-port valve
- A 4-position dual 3-port valve with a back pressure check valve is also available.
- · Combination examples


oombination oxampioo										
Series	A side	B side								
SY□A <sub>3</sub> 0	N.C. valve	N.C. valve								
SY□B <sub>3</sub> 0	N.O. valve	N.O. valve								
SY□C <sub>3</sub> 0	N.C. valve	N.O. valve								

## A bottom-ported type is available (A and B ports). Space saving

By using the bottom-ported type, it is possible to reduce the amount of space required for installation.




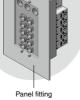


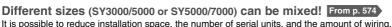


Overall manifold length
Approx. 29%
reduction



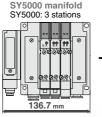

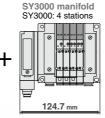

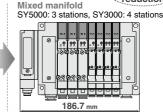

Number of serial units









## Improved Safety

#### Back Pressure Check Valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.\*1

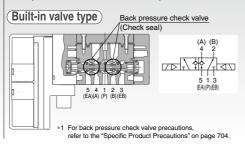


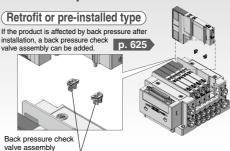

#### With residual pressure release valve (SY5000/7000) p. 413

#### For residual pressure release of the 3-position closed center valve

- ·The pressure of the 4 (A) and 2 (B) ports is exhausted automatically when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualized using the indicator (red) · Since this valve is not a spacer type, the flow rate is

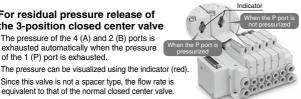





Easy to visually check

LOCK

IP67 compliant

#### Lever Type SUP Stop Valve Spacer (With residual pressure release valve) A lever has been added to manual override button!


Solenoid valves can be replaced individually without shutting off the

main pressure!\*1 2-action operation





The operation of an actuator can be checked by individually shutting off the air for the solenoid valves on the base while the main air is being supplied during a trial operation.

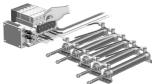


#### Solenoid valves can be replaced individually!

The solenoid valves can be replaced individually without stopping the equipment during maintenance.

#### <Application example>

For air operated valves. such as sanitary valves. and automatic valve



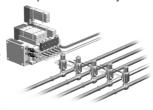


## Improved Safety

#### Slotted Type

#### **SUP Stop Valve Spacer**


(With residual pressure release valve) p. 618

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

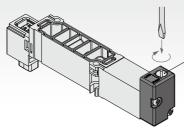

## Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side

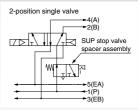


2-position single valve example

#### Slotted Type

#### **Double Check Spacer**


(With residual pressure release valve) p. 619

Long intermediate stops and position holding are possible.

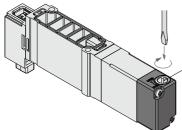


#### Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side

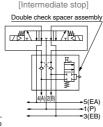

Exhaust center


[Drop prevention]

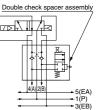



2-position single/double

#### With slide locking manual override

ON/OFF operation and locking can be performed manually.

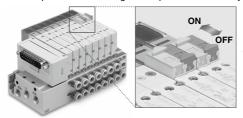

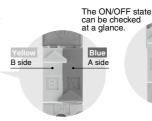

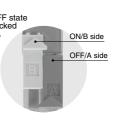

## Improved Safety

#### Made to Order

With safety slide locking manual override SY3000/5000/7000-X13 p. 423

The double action manual override prevents accidental operation!

## SY7000-X13 SY5000-X13 ion!

#### Double-action operation




**<Vertical sliding>**\* The safety slide cover cannot be locked when the slide locking manual override is turned ON.

#### Visual check

Red lines visible from three directions can be checked to confirm whether the safety slide



Safety slide covers can be checked from their raised and lowered positions.

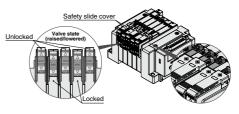


#### Made to Order


2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type) SY3000/5000/7000-X350 p. 423

The main valve returns to the OFF position when it is not pressurized.


The main valve has a built-in spring which allows it to return to origin (the OFF position) when the supply pressure is stopped. This product can be used in SRP/CS (safety-related parts of control systems) constructions in accordance with safety standards (ISO 13849).

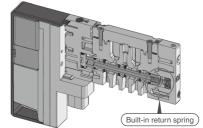


#### To mount the piping on top

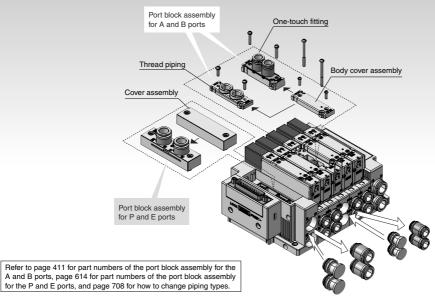

#### To mount the piping on the side

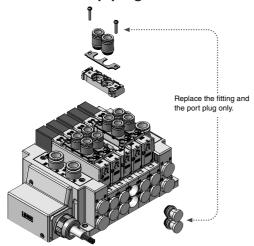

#### Mixed top-ported and sideported mounting is possible.

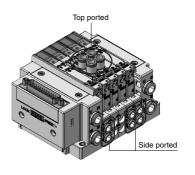

#### For SY3000 Blanking Plate with Output p. 624

■ The blanking plate extracts the individual signal of the manifold valve.









#### **Application Examples**

For the control of separately mounted valves

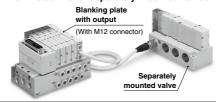

For the control of vacuum ejectors by means of Fieldbus unit signals

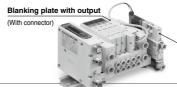

Vacuum unit ZK2 Series

#### Valve with Pressure Sensor p. 421

■ Monitoring the output pressure of the solenoid valve contributes to preventive maintenance.

• The output pressure of the 4(A) and 2(B) ports can be detected.

· Detects errors such as incorrect switching, response delay, back pressure interference, pressure drop, etc.

Identifies faulty parts of actuators, solenoid valves, etc.

#### ■Space saving, Reduced installation labor

• The required amount of space and installation labor can be reduced by directly mounting pressure switches on the solenoid valves.

#### Mountable manifolds

Side ported/Type 50□ Metal base Bottom ported/Type 51□

Connector connecting base




#### Pressure sensor

- · Rated pressure range: 0 to 1 MPa
- Power supply voltage: 12 to 24 VDC ±10%
- Output specifications: Analog output

1 to 5 V (In rated pressure range) Output impedance: Approx. 1 k $\Omega$ 

#### **Application Examples**


For the detection of output pressure Operation can be checked by monitoring the pressure required to open or close air operated valves.

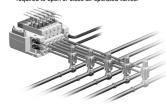

#### For the identification of faulty parts


A faulty part can guickly be identified by monitoring the operation of solenoid valves.

88888

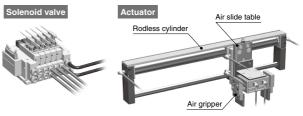



#### Only for External Pilot Vacuum Release Valve with Restrictor SY 5 A R Series p. 415

Vacuum suction and release can be controlled with a single valve!

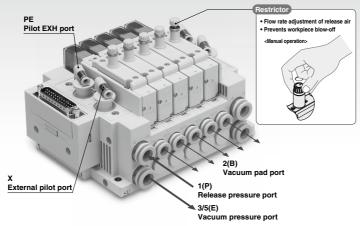

- Can be mounted on the same manifold as standard valves
  - \* When an individual EXH spacer is used

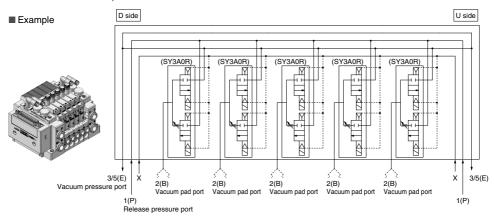

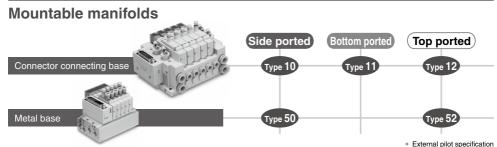

**SMC** 

#### Applicable to EX600-W Series Wireless Systems p. 502 p. 512 p. 574 p. 578 p. 586







#### ■ Noise resistance

- Uses the 2.4 GHz ISM frequency band
- Frequency hopping: Every 5 ms

#### Communication cables not required

- · Reduced wiring work, space, and cost
- Minimized disconnection risk

#### ■ High-speed connection

 From the remote power supply ON to start of communication:

Min. 250 ms

#### ■ Number of I/O points

Max. 1280 inputs/1280 outputs (Max. 128 inputs/128 outputs per module)

#### ■ Communication response

 Wireless communication signal Response time: 5 ms

#### ■ Compatible protocol

EtherNet/IP








#### **Application Examples**

#### For tool changing

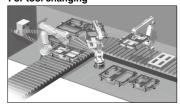

#### For spot welding



#### For rotary tables



#### The EX260 series supports safety communication (PROFIsafe). p. 534

#### ■This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.



PROFIsafe is established as an international standard (IEC 61784-3-3). It is a communication protocol that transmits safety-related data by PROFINET communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

#### ■ Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.

396





## Variations

$\overline{}$																						_						
												١	Wir	inç	3											Α	, В	
				Valve						С	on	nec	ctio	n							Com specifi	mon ication						
				Series			(be)						Se	ria	l tra	ans	smi	ssi	on									
					5	e	ng ty	č		ţ	_		3)								e o	o					C2	
		Variations			ect	cab	(Spri	농	ē	nec	5		inte								шш	E						
				5 ports	D-sub connector	Flat ribbon cable	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector	M12 connector	EX510	EX500 (128 points)	EX600	EX245	EX250	EX260	EX126	EX120	EX180	Positive common	Negative common	M5	1/8	1/4	3/8	Straight piping	
se	1		Type	SY3□0□																								
Ba	Side ported		Type 10□ From p. 430	SY5□0□	•						_	_					•	•	•	•	0	•	_		_	_		
ting	<u>  a</u>	1000	p. 430	SY7□0□	p. 430	p. 430	p. 448	p. 456	p. 466	p. 476			p. 486	p. 502		p. 522		p. 542	p. 550	p. 558							-	
nec	_			01700																								
Con	Manifold Rottom ported	THE STATE OF	Type 11□	SY5□0□																								
tor (	Manifold tom por		From p. 430		n 430	(p. 430	_	0 456	n 466	n 476	-	_	n 486	n 500	n 51/	p. 522	n 530	n 5/2	n 550	n 558	•	•			-	-	_	
Plug-in Connector Connecting Base	_			SY7□0□	μ. τοι	/p. 400	р. тто	p. 400	p. 400	p. 410			p. 400	p. 302	p. 514	. JZZ	p. 550	p. 542	p. 350	p. 330								
Con	Ton norted	100	Туре	SY3□3□																								
A		Summer of the second	Type 12□ From p. 442	SY5□3□							_	_						•								-		
Plug		3393333	p. 442	SY7□3□	p. 442	p. 442	p. 453	p. 462	p. 472	p. 482			p. 498	p. 512	p. 520	p. 528	p. 540	p. 548	р. 556	р. 564				_			_	
	D.			SY3□0□																							•	
	Top ported   Bottom ported   Side ported		Type 50□	SY5□0□	0		_	_	_	_	_		_	_	_	_	_	_	_	_	•	•		•		_		
a	<u>e</u>	W. C.	From p. 636	SY7□0□	p. 636	p. 636	i					p. 664											_				-	
3as	S B																				_						0	
alE	orte		Type 51□	SY3□0□																			•	•				
Met	Ē	ALL STREET	From p. 636	SY5□0□	- 626	<b>a</b> 5 p. 636	_	_	_	_		D. 664	-	_	-	_	-	-	_	_	•	•				-		
Plug-in Metal Base	B		р. 000	SY7□0□	p. 030	μ. σσσ						μ. σσ4												-				
Pla	pg [	THE STATE OF THE S	Type	SY3□3□																				-				
	ğ	(C) (C) (C)	Type 52□ From p. 656	SY5□3□	•		_	_	_	_	_	•	_	_	_	_	_	_	_	_	•					_		
	한		p. 656	SY7□3□	p. 656	p. 656	i					p. 674											_		•		_	
<u>o</u>		Trans.		SY3□3□																				•				
년 19 18	From p. 695		SY5□3□	_	_	_	_	_	_		_	_	_	_	_	_	_	_	_	•		_		•	-			
Plug-in Sub-p	M12 connector		SY7□3□																		_			_	•			
				J-		1																				_		

Standard ○ Option ▲ Made to order (Refer to page 423.)


Ро	rt S	Size	te .								N	/lar	iifo	ld	Op	tio	ns	pp	. 61	6-63	31	pį	p. 6	81-6	91			٧	alv	e C	pti	on	s		Valv Fu	es v	vith on
On	e-t	oud	ch 1	fitti	ing	s					ıcer	ıcer	release valve	release valve		or	sembly	sembly	output	disk	disk	installed type)	ı	ction type)			ounting	ounting	turbine oil)	cification	es	e)	S		ase valve	estrictor	sor
C3 (N1)	C (N		C (N	6 (7)	C (N	8 19)	(N	10 11)	C1	12	JP spa	кн spa	ual pressure	ıal pressure	plate	gulat	ock as	ock as	with o	cking	king	oly (Manifok	fitting	a conne	_	late	m pa	ed mo	signated	ıre spe	essur	essu	g size	e IP67	ire rele	e with	e sen
Straight piping	Straight piping	Elbow piping*1	Individual SUP spacer	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Blanking plate	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	Blanking plate with output	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug	Name plate	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low-pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67	With residual pressure release valve	Vacuum release valve with restrictor	With pressure sensor								
			•	•	_	_													0				0				•									*4	_
		•	•	•	•	•				-	0	0	0	0	0	0	0	0		0	0	0		0	0	0	p. 574			External	O Individual SUP	External	•	*2	*3		•
	_	_	•	•	•	•	•	•	•										_				_				_	p. 578		Pilot	SUP	Pilot					•
_			•	_	•	_	_	_	_	_	0	0	0	0	0	0	0	0	_	0	0	0		0	0	0	<b>p</b> . 574	_	•	External Pilot	O Individual SUP	External	•	*2	*3	*4	•
	_		•		•		•		•										_								_	p. 578		Pilot	SUP	Pilot					
•	•		•				_		_										0								•							*2		*4	
_	<u> </u>	_	•	_	•	-	•	_	•		0	0	0	_	0	0	0	0	_	0	0	0		0	0	_	p. 586	p. 586	•	External Pilot	O Irdividual SUP	External Pilot					
•	•		•		_		_												0									p. 586							*3	*4	_
_	_		•	_	•	-	•	-	•		0	0	0	0	0	0			_ _	_					0				•	External Pilot	O Individual SUP	External Pilot			•		•
•	•		•	_	•	_	_	_	_		0	0	0	0	0	0			0	_				_	0	_	_	_	•	_	O	_	•	_	*3	_	_ •
	_		•		•		•		•										_												SUP						•
_	•				•	_	_	_	_	_	0	0	0	_	0	0	_		<ul><li></li><li></li><li></li><li></li><!--</th--><th>_</th><th></th><th></th><th></th><th>_</th><th>0</th><th>_</th><th>_</th><th>_</th><th></th><th>External Pilot</th><th>O Individual SUP</th><th>External Pilot</th><th></th><th>_</th><th>_</th><th>*4</th><th>_ _ _</th></ul>	_				_	0	_	_	_		External Pilot	O Individual SUP	External Pilot		_	_	*4	_ _ _
	_		_	_			_	_	_		_		0	0	_	0			_	_				_	_	_	_	_	•	External Pilot		External Pilot	_	•	*3	_	



## CONTENTS

Optimum Actuation Size Chart of Air Cylinder ·······	). 4	402
Valve Specifications (Specifications, Response Time, Weight)	ه . د	404
Valve Construction ······	). ۱	408



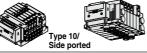



Type 12/ Top ported

#### Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

	D-sub connecto	Plug-in Connector Connecting Base p. 426
N. Suntin	Connecto	D-sub Connector, Flat Ribbon Cable [IP40/67]
Flat ribbon c	Terminal block box	Terminal Block Box (Spring Type) [IP67] ····· p. 448
William .		Terminal Block Box [IP67]
Lead wir		Lead Wire [IP67]
	Circular	Circular Connector [IP67]p. 476
	connector	EX500 Gateway Decentralized System 2 (128 Points) [IP67]pp. 486, 498
	EX500	${\sf EX600\ Integrated\ Type\ (For\ Input/Output)\ Serial\ Transmission\ System\ (Fieldbus\ System)\ [IP67]\cdots \textbf{p.\ 502}}$
	S S S S S S S S S S S S S S S S S S S	EX245 Integrated Type (For Input/Output) Serial Transmission System [IP65]p. 514
The state of the s	EX600	EX250 Integrated Type (For Input/Output) Serial Transmission System [IP67] p. 522
EX24	5 EX250	EX260 Integrated Type (For Output) Serial Transmission System [IP67] p. 530
SCHOOL STREET		EX126 Integrated Type (For Output) Serial Transmission System [IP67] p. 542
EX260	EX126	EX120 Integrated Type (For Output) Serial Transmission System [IP20] p. 550
THE SHIP SHIP SHIP SHIP SHIP SHIP SHIP SHIP		EX180 Integrated Type (For Output) Serial Transmission System [IP20] ······ <b>p. 558</b>
EX120	Will state	Type 10/Side Ported: Common Dimensions
	EX180	(External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override)
		Type 11/Bottom Ported: Common Dimensions
		Type 12/Top Ported: Common Dimensions
	Mixed	Plug-in Mixed Mounting Type Manifold ····· p. 574
	mounting	Manifold Exploded View [Exploded View, Manifold Parts Nos.] p. 590
		How to Increase Connector Type Manifoldsp. 610
		One-touch Fitting, Plug Assembly Part Nosp. 615
		Manifold Optionsp. 616















#### Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported

Plug-in	Metal Base	p.	. 634
		-	

D-sub Connector, Flat Ribbon Cable [IP40]

Type 50/Side Ported
Type 51/Bottom Ported
Type 52/Top Ported
Viring Specificationsp. 661
EX510 Gateway Type Serial Transmission System [IP20]
Type 50/Side Ported
Type 51/Bottom Portedp. 664
Type 52/Top Ported
Manifold Exploded View [Exploded View, Manifold Parts Nos.] p. 679
One-touch Fitting, Plug Assembly Part Nos

Sub-plate Plug-in Sub-plate p. 693



M12 connector

	Plug-in Sub-plate Specifications (M12 Connector)	. 694
	Sub-plate Parts Nos	. 696
Valve Replacement Parts ·······	р.	. 411
With Residual Pressure Release	Valvep.	. 413
Vacuum Release Valve with Res	trictor	. 415
Valve with Pressure Sensor	р.	. 421
Made to Order for Valves	р.	. 423
Specific Product Precautions	р.	. 703

## Optimum Actuation Size Chart of Air Cylinder

Applicable cylinder	Main valve	Series		Арр	licable cyl	inder		
speed	seal type	Series	ø <b>6</b>	ø <b>10</b>	ø <b>16</b>	ø <b>20</b>	ø <b>25</b>	
		SY3000						
	Rubber seal	SY5000						
100 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
	Rubber seal	SY3000						
		SY5000						
300 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
500 mm/s or less		SY7000						
		SY3000						
	Metal seal	SY5000						
	•	SY7000						

#### [Common conditions]

• Pressure: 0.5 MPa

• Piping length: 1 m

Load ratio: 50%


• Stroke: 200 mm

Connector type manifold (for the side and bottom-ported types)

\* Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.



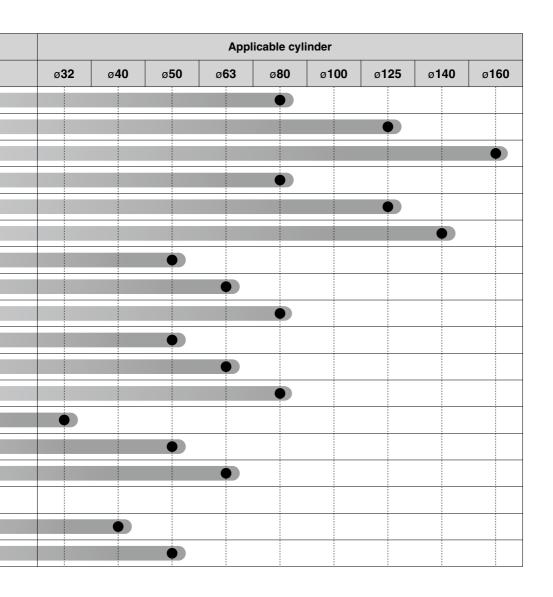

# SY3000/5000/7000 Series Valve Specifications

#### **Valve Specifications**

	V	alve type		Rubber seal	Metal seal				
Internal pilot operating pressure range   A-position   0.2 to 0.7   0.1 to 0.7 (High pressure type: 0.1 to 1)	Fluid			А	ir				
MPa		2-position	single	0.15 to 0.7					
Non-locking push type		2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)				
		3-position		0.2 to 0.7					
External pilot operating pressure range [MPa]	[iiii uj	4-position	dual 3-port valve	0.15 to 0.7	_				
Pilot exhaust type   Power consumption [W]   Power consumption [W]   Power saving circuit   Pilot pyresure type; 0.4 doi: 0.7 (High pressure type; 0.1 to 1)   Pilot to 0.7 (High pressure type; 0.1 to 1)   Pilot 0.7 (High pressure type; 0.2 (With indicator light; 0.4)   Pilot 0.7 (High pressure type; 0.2 (With indicator light; 0.1)   Pilot 0.7 (Pilot 0.1)   Pilot 0.7 (Pilot 0.1 (High pressure type; 0.2 (With indicator light; 0.1)   Pilot 0.2 (Pilot 0.1)		Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)				
Main   Pilot exhaust type   Main   Pilot exhaust type   Main   Pilot exhaust type   Main   Pilot valve ommon exhaust   Main   Pilot valve individual exhaust   Main   Pilot valve individual exhaust   Pilot valve ommon exhaust   Main   Pilot valve individual exhaust   Pilot valve ommon exhaust   Main   Pilot valve individual exhaust   Pi	External pilot		2-position single						
Max. operating frequency [**Indext and fluid temperatures [**C]			2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)				
Ambient and fluid temper=turues [°C]   Aposition dual 3-port valve   Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or more (Min. 0.25) to 0.7   — Operating pressure + 0.1 or to 50 (No freezing)	[MPa]		3-position						
Max. operating frequency   Hz   2-position single/double   4-position dual 3-port valve   5   20°1		90	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_				
Max. operating frequency   Foliable   Fol	Ambient and fluid tempera	tures [°C]		-10 to 50 (f	No freezing)				
Max. operating frequency [Hz]   A-position dual 3-port valve   3-position   3   10°1		CVOOO	2-position single/double	5	20*1				
Max. operating frequency [Hz]   A position   B   A pos				3	20				
Sy7000   4-position dual 3-port valve   3			<u> </u>	-	10*1				
Non-locking push type   Push-turn locking slotted type   Slide locking type   Slide locking type   Slide locking type   Slide locking type   Push-turn locking slotted type   Slide locking type   Slide locking type   Main/Pilot valve common exhaust   Main/Pilot valve individual exhaust   Main/Pilot valve individual exhaust   Push to required   Single: Unrestricted   Double/3-position: Main valve is horizontal   Impact/Vibration resistance*2 [m/s²]   Sloy3   Single: Unrestricted   Double/3-position: Main valve is horizontal   Push to resistance*2   Pish (Based on IEC60529)*3   Pish (Based on I	Hz]				10*1				
Manual override    Non-locking push type   Push-turn locking slotted type   Slide locking type   Slide lock		SY7000		3	_				
Push-turn locking slotted type   Push-turn locking lever type   Slide locking type			3-position	*					
Push-turn locking lever type   Slide locking type   Slide locking type					3.				
Push-turn locking lever type    Remainder   Fush-turn   Side   Internal pilot   Main/Pilot valve common exhaust   Main/Pilot valve individual exhaust	Manual override			Ů 71					
Pilot exhaust type   Internal pilot   Main/Pilot valve common exhaust   Main/Pilot valve individual exhaust	manual override				0 71				
External pilot   External pilot   Pilot valve individual exhaust									
Lubrication   Not required	Pilot exhaust type								
Mounting orientation °2         Unrestricted         Single: Unrestricted Double/3-position: Main valve is horizontal Impact/Vibration resistance °2 [m/s²]           Impact/Vibration resistance °2 [m/s²]         150/30           Enclosure         IP67 (Based on IEC60529)°3           Coil rated voltage [DC]         24, 12 V           Allowable voltage fluctuation [V]         ± 10% of rated voltage °4           Allowable voltage fluctuation [V]         ± 10% of rated voltage °4           High pressure type, Quick response type         0.9 (With indicator light: 0.95)           With power saving circuit         Standard: 0.1°5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4°5 (With indicator light only) [Inrush 0.95, Holding 0.4]           Surge voltage suppressor         Diode (Varistor for non-polar type)	,,	External p	ilot						
Double/3-position: Main valve is horizontal	Lubrication			Not re	quired				
Enclosure	Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.				
Coil rated voltage [DC]   24, 12 V	Impact/Vibration resistance	e*2 [m/s²]		150	)/30				
Allowable voltage fluctuation [V]	Enclosure			IP67 (Based o	n IEC60529)*3				
Power consumption [W] Standard 0.35 (With indicator light: 0.4) High pressure type, Quick response type 0.9 (With indicator light: 0.95) With power saving circuit Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, Holding 0.4] Surge voltage suppressor Diode (Varistor for non-polar type)	Coil rated voltage [DC]			24,	12 V				
Power consumption [W] High pressure type, Quick response type 0.9 (With indicator light: 0.95)  With power saving circuit Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, Holding 0.4]  Surge voltage suppressor Diode (Varistor for non-polar type)	Allowable voltage fluctuat	ion [V]		±10% of rate	ed voltage*4				
Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, Holding 0.4]    Surge voltage suppressor   Diode (Varistor for non-polar type)	Standard		0.35 (With indi	cator light: 0.4)					
Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, Holding 0.4]  Surge voltage suppressor  Diode (Varistor for non-polar type)	Power consumption [W]	High pressur	re type, Quick response type	0.9 (With indicate)	ator light: 0.95)				
		With power	er saving circuit						
Indicator light	Surge voltage suppressor			Diode (Varistor for non-polar type)					
mulcator ngm	Indicator light			LED					

<sup>\*1</sup> Use below 5 Hz for with the power saving circuit.

\*3 In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 703.



<sup>\*2</sup> Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. The test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period) Refer to page 708 for the fixation of DIN rail mounting type manifold.

<sup>\*5</sup> For details, refer to page 705.

## Valve Specifications **SY3000/5000/7000 Series**

#### **Response Time**

					Resp	onse time [n	ns] (at 0.5 MPa)	¢1	
				Ç	Standard		Quick	response ty	ре
Series	Seal type	Model	Type of actuation	Without light/ surge voltage	With light voltage si		Without light/ surge voltage	With light voltage st	
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type
	Rubber seal	SY31□0	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Metal seal	SY31□1	z-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Rubber seal	SY32□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY3000	Metal seal	SY32□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY33/4/5□0	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less
	Rubber seal	SY51□0	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Metal seal	SY51□1	z-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Rubber seal	SY52□0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY5000	Metal seal	SY52□1	z-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY53/4/5□0	3-position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less
	Rubber seal	SY71□0	2-position single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less
	Metal seal	SY71□1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less
	Rubber seal	SY72□0	2-position double	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less
	Rubber seal	SY73/4/5□0	3-position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less

<sup>\*1</sup> Based on dynamic performance test, JIS B 8419-2010 (Coil temperature: 20°C, at rated voltage)
Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.



#### Valve Weight

#### SY3000 series

Valve model	Seal type	Ty	Weight [g]	
		2-position	Single	74
		2-position	Double	83
SY3□00	Rubber seal		Closed center	
31300		3-position	Exhaust center	87
			Pressure center	
		4-position	Dual 3-port valve	83

		r			
Valve model	Seal	Type	e of actuation	Port size	Weight
	type			4, 2 (A, B)	[g]
		2-position	Single		74
			Double		83
SY3 □ 30-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		87
			Pressure center		
	Į	4-position	Dual 3-port valve		83
		2-position	Single		82
		z-position	Double	C2	91
SY3□30-C2			Closed center	ø2 One-touch	
313030-02		3-position	Exhaust center	fitting	95
			Pressure center	illing	
		4-position	Dual 3-port valve		91
		0:	Single		85
		2-position	Double	C3	94
SY3□30-C3	Rubber		Closed center	ø3.2 One-touch fitting	
313U3U-U3	seal	3-position	Exhaust center		98
			Pressure center		
		4-position	Dual 3-port valve	1	94
	1		Single		77
		2-position	Double	C4	86
SY3□30-C4			Closed center	U .	
513U3U-C4		3-position	Exhaust center	ø4 One-touch	90
			Pressure center	fitting	
		4-position	Dual 3-port valve		86
			Single		80
		2-position	Double		89
			Closed center	C6	
SY3□30-C6		3-position	Exhaust center	ø6 One-touch	93
			Pressure center	fitting	33
		4-position	Dual 3-port valve		89
		, position	Daar o port vaive		

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	76
SY3□01 Metal s		2-position	Double	86
	Metal seal		Closed center	
		3-position	Exhaust center	90
		1	Pressure center	1

Valve model	Seal	Typo	of actuation	Port size	Weight
valve model	type	Туре	OI actuation	4, 2 (A, B)	[g]
		2-position	Single		76
		2-position	Double		86
SY3□31-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		90
			Pressure center		
		2-position	Single		84
		2-розіцоп	Double	C2	94
SY3□31-C2			Closed center	ø2 One-touch	
		3-position	Exhaust center	fitting	98
			Pressure center		
		2-position Single			87
	Metal	2-position	Double	C3	97
SY3□31-C3	seal		Closed center	ø3.2 One-touch	
	Seai	3-position	Exhaust center	fitting	101
			Pressure center		
		2-position	Single		79
		2-розіцоп	Double	C4	89
SY3□31-C4			Closed center	ø4 One-touch	
		3-position	Exhaust center	fitting	93
			Pressure center		
		2-position	Single		82
		2-005111011	Double	C6	92
SY3□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	96
			Pressure center		

#### SY5000 series

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	82
SY5□00 Rubber seal		2-position	Double	90
	Rubber seal	3-position	Closed center	
			Exhaust center	100
			Pressure center	
		4-position	Dual 3-port valve	90

Valve model	Seal	Type of actuation		Port size	Weight
valve illouel	type	Type of actuation		4, 2 (A, B)	[g]
		2-position	Single		102
		z-position	Double		110
SY5□30-01			Closed center	1/8	
3130-01		3-position	Exhaust center	1/0	120
			Pressure center		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		z-position	Double	C4	123
SY5□30-C4			Closed center	ø4 One-touch fitting	
313030-04		3-position	Exhaust center		133
			Pressure center		
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		z-position	Double	C6	118
SY5□30-C6			Closed center	ø6 One-touch	
313030-00		3-position	Exhaust center		128
			Pressure center	fitting	
		4-position	Dual 3-port valve		118
		2 position	Single		99
		2-position	Double	C8	107
SY5□30-C8			Closed center	ø8 One-touch	
313-30-00		3-position	Exhaust center		117
		'	Pressure center	fitting	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	91
			Double	101
SY5□01 Metal seal	Metal seal	eal 3-position	Closed center	
			Exhaust center	111
			Pressure center	

Valve model	Seal	Type of actuation		Port size	Weight
valve model	type	Туре	OI actuation	4, 2 (A, B)	[g]
		2-position	Single		111
		2-position	Double		121
SY5 31-01			Closed center	1/8	
		3-position	Exhaust center		131
			Pressure center		
		2-position	Single		124
		2-position	Double	C4	134
SY5□31-C4			Closed center	ø4 One-touch	
		3-position	Exhaust center	fitting	144
	Metal	1 '	Pressure center		
	seal	2-position	Single		120
		2-position	Double	C6	130
SY5□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	140
			Pressure center		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8		3-position	Closed center	ø8 One-touch	
			Exhaust center	fitting	128
			Pressure center	_	



## Valve Specifications **SY3000/5000/7000 Series**

#### Valve Weight

#### SY7000 series

Valve model	Seal type	Тур	e of actuation	Weight [g]
	SY7□00 Rubber seal	2-position	Single	110
		2-position	Double	118
CV7 DO		3-position	Closed center	
317 🗆 00			Exhaust center	133
			Pressure center	
		4-position	Dual 3-port valve	114

	Seal	_		Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	[g]
		0:	Single	1	125
		2-position	Double		133
SY7 30-02			Closed center	1/4	
317 - 30-02		3-position	Exhaust center	1/4	147
			Pressure center		
		4-position	Dual 3-port valve		129
		2-position	Single		163
		z-position	Double	C6	171
SY7□30-C6			Closed center	ø6 One-touch	
317 - 30-00		3-position	Exhaust center	fitting	186
			Pressure center	illing	
		4-position	Dual 3-port valve		167
		2-position	Single		151
		z-position	Double	C8	159
SY7□30-C8	Rubber		Closed center	ø8 One-touch fitting	174
317 - 30-00	seal	3-position	Exhaust center		
			Pressure center		
		4-position	Dual 3-port valve		155
		2-position	Single		136
		z-position	Double	C10	144
SY7 30-C10			Closed center	ø10 One-touch	
317-30-010		3-position	Exhaust center	fitting	159
			Pressure center	illing	
		4-position	Dual 3-port valve		140
		2-position	Single		146
		2 position	Double	C12	154
SY7 30-C12			Closed center	ø12 One-touch	
017-30-012		3-position	Exhaust center	fitting	169
			Pressure center	many	$oxed{oxed}$
		4-position	Dual 3-port valve		150

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	122
		2-position	Double	133
SY7□01	Metal seal		Closed center	
		3-position	Exhaust center	150
		1	Pressure center	


	Seal	_	Weight		
Valve model	type	Type of actuation		Port size 4, 2 (A, B)	[g]
		2-position	Single		136
		2-position	Double	1	148
SY7□31-02			Closed center	1/4	
		3-position	Exhaust center	]	164
			Pressure center	1	
		2-position	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	202
		'	Pressure center	1	
		2-position Single			162
	Metal	2-position	Double	C8 [	174
SY7□31-C8	seal		Closed center	ø8 One-touch	
	Scai	3-position	Exhaust center	fitting	190
			Pressure center		
		2-position	Single		148
		2-position	Double	C10	159
SY7 31-C10			Closed center	ø10 One-touch	
		3-position	Exhaust center	fitting	176
			Pressure center		
		2-position	Single		157
		2-008111011	Double	C12	169
SY7□31-C12			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	185
			Pressure center		


**SMC** 

## Valve Construction


#### **Rubber Seal**


# 2-position single 5 3 1 2 4 5 4 1 2 3 (EA)(A) (P) (B)(EB)

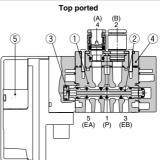

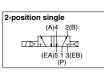


#### 2-position double

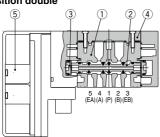

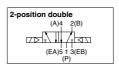

#### 3-position closed center/exhaust center/pressure center

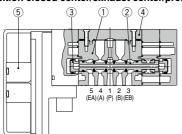





3-position exhaust center			
(A)4 2(B)			
(EA)5 1 3(EB)			


#### Component Parts


COIII	Component Farts					
No.	Description	Material	Note			
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted				
2	Spool valve	Special resin/HNBR ( 3-position valve: \ Aluminum/HNBR )				
3	Piston	Resin				
	Body cover assembly	Resin	For the side/bottom-ported type			
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminum die-casted	For the top-ported type			
5	Pilot valve assembly	_	Refer to page 412.			

#### Valve Construction SY3000/5000/7000 Series


#### **Rubber Seal**


#### 4-position dual 3-port valve

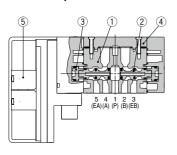

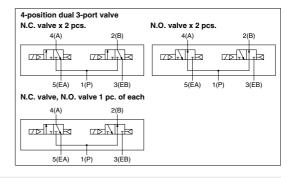


#### 2-position double with back pressure check valve (Built-in valve type)

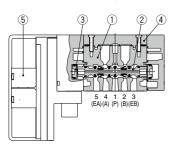


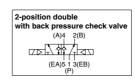

 $\ast\,\,$  The built-in valve type back pressure check valve is not available for the SY7000.

#### 4-position dual 3-port valve with back pressure check valve (Built-in valve type)

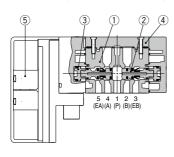

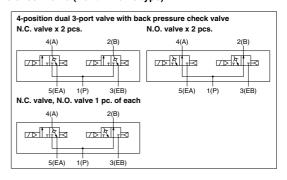



\* The built-in valve type back pressure check valve is not available for the SY7000.

#### **Metal Seal**


# 2-position single 5 3 1 2-position single 5 4 1 2 3 (EA)(A) (P) (B)(EB) 2-position single (A) 2(B) (B) (EA)(S) 1 3(EB) (CA)(S) 1 3(EB) (CA)(S) 1 3(EB)

#### 2-position double

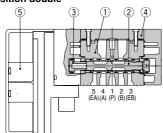


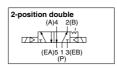

#### 3-position closed center/exhaust center/pressure center

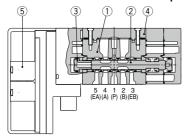



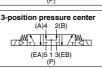


3-position exhaust center	
(A)4 2(B)	
(EA)5 1 3(EB)	

#### **Component Parts**

No.	Description	Material	Note
1 Body		SY3000: Zinc die-casted SY5000/7000: Aluminum die-casted	
2	Spool, Sleeve	Stainless steel/HNBR	
3	Piston	Resin	
	Body cover assembly	Resin	For the side/bottom-ported type
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminum die-casted	For the top-ported type
5	Pilot valve assembly	_	Refer to page 412.

## Valve Replacement Parts

#### **How to Order Port Block Assembly**

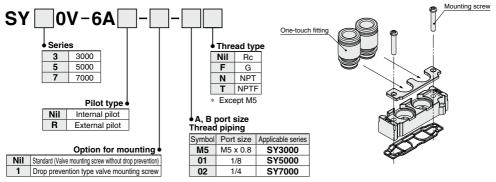

Metric size (One-touch fitting)

	incline cize (Cine todain intiing)					
Symbol	Port size	Applicable series				
Symbol	Fort size	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
C3	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		

Inch size (One-touch fitting)

	· ( · · · · · · · · · · · · · · · · · ·			
Cumbal	Port size	Applicable series		
Symbol		SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Possible to replace only the One-touch fitting


Port size		SY3000	SY5000	SY7000
	ø2	VVQ1000-50A-C2	_	_
	ø3.2	VVQ1000-50A-C3	_	_
	ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_
Metric size	ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8
	ø10	_	_	VVQ2000-51A-C10
	ø12	_	_	KQ2H12-17-X224
	ø1/8"	VVQ1000-50A-N1	_	_
	ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_
Inch size	ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9
	ø3/8"	_	_	VVQ2000-51A-N11

Refer to pages 707 and 708 for how to replace the port block assembly, One-touch fitting, and body cover assembly.



#### **Body Cover Assembly**


\* Used when the top-ported type is changed to the side or bottom-ported type

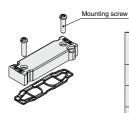


	Part no.		
es	Standard (Valve mounting screw without drop prevention)	Drop prevention type valve mounting screw	
ternal pilot	SY30V-16A	SY30V-16A-1	
xternal pilot	SY30V-16AR	SY30V-16AR-1	
ternal pilot	SY50V-16A	SY50V-16A-1	
xternal pilot	SY50V-16AR	SY50V-16AR-1	
ternal pilot	SY70V-16A	SY70V-16A-1	
xternal pilot	SY70V-16AR	SY70V-16AR-1	
	ternal pilot xternal pilot ternal pilot xternal pilot ternal pilot	Standard (Valve mounting screw without drop prevention) ternal pilot SY30V-16A xternal pilot SY30V-16AR ternal pilot SY50V-16A xternal pilot SY50V-16AR ternal pilot SY50V-16AR	


<sup>\*</sup> The part number is not indicated on the product.

#### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

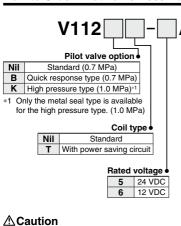

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

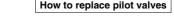

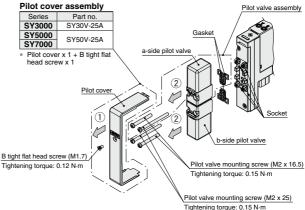

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- · Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- \* Assemble by following the removal procedure in reverse.
- \* Ensure the gasket is mounted, and take care not to bend the socket.
- \* Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.




## SY5000/7000 Series



## With Residual Pressure Release Valve


Mountable manifold MOUNTAINE MAINTEN
SS5Y5/7-50/51 type manifold
SS5Y5/7-(M)10/11 type manifold
Sub-plate single unit (Except top-ported type)

How to Order (With mounting screw)

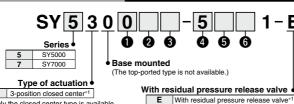

\*1 Only the closed center type is available. \*1 Mounting screw types, hexagon socket head cap screw B and drop prevention type K, H are not available.



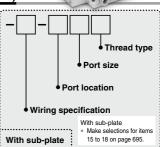

#### Seal type

0	Rubber seal
1	Metal seal

#### Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details

#### Rated voltage

5	24 VDC	
6	12 VDC	


The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How to Order Manifolds" pages.

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details. (Excludes when an SI unit manifold is used)
- \* Only "Z" and "NZ" types are available with a power saving circuit.

#### 6 Manual override

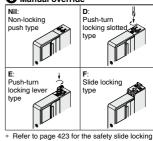

- manual override.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 or 679 for base gasket part

numbers Refer to Table 1 for mounting screw part

#### Table 1. Valve mounting screw

and it taile incurring colors			
SY5000	SY7000		
SY5000-221-2A	SY7000-221-10A		
(2 pcs.)	(3 pcs.)		

#### Valve Specifications

Valve construction		Rubber seal Metal seal		
		3-position closed center valve with residual pressure release valve*1		
Fluid		Air		
Operating pressu	re range [MPa]*2	0.3 to 0.7 0.3 to 0.7 (High pressure: 0.3 to 1		
Wainha [a] SY5000		117	128	
Weight [g]	SY7000	156	177	

- \*1 Rubber seal is used for the residual pressure release valve.
- \*2 Internal pilot type only
- Other specifications are common to the valve specifications on page 404.
- When using in combination with an individual SUP/EXH spacer or an interface regulator, the length of the required mounting screws will differ. Please contact SMC for details.

#### Symbol

#### <When the 1(P) port is exhausted:



#### <When the 1(P) port




A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3-position closed center valve is exhausted.

#### **SY5000/7000** Series

#### **Dimensions** SY5000 (Light/surge voltage suppressor) 84.5 Manual override 39.8 30.7 12.6 Push-turn locking slotted type: Press, then rotate it. 4(A) port side : Blue 2(B) port side : Yellow Manual override part 2 x ø3.2 (For manifold mounting) A side indicator (Red)\*1 Exhausted: Concave EXH port Pressurized: End face 15 EXH port B side indicator (Red)\*1 45.1 47.6 Exhausted: Concave Pressurized: End face (For E type: 60.2) 62.3 (For F type) 30.1 56.6

#### SY7000

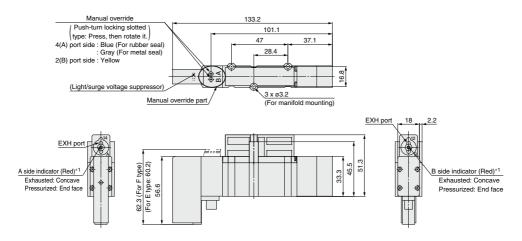

\*1 The indicator shows the pressurization status. Do not push it.


#### **SY3000/5000** Series

Only for External Pilot Vacuum Release Valve with Restrictor

Mountable manifold [External pilot] SSSY3/5-60/52 type manifold SS5Y3/5-(M)10/11/12 type manifold Sub-plate single unit (Except SS5Y3-11 type)

How to Order (With mounting screw)



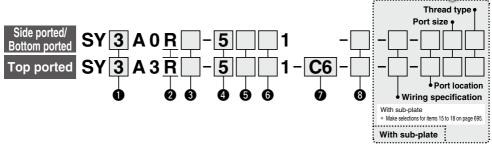

## Series

SY3000 SY5000

<b>Q</b> 1	Pilot type					
R	R External pilot					
	attention to the pilot					

pressure. Refer to the valve specifications on page 416 for further details


#### Rated voltage

24 VDC 12 VDC

#### Coil type

Nil	Standard
т	With power saving circuit
٠.	(Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

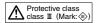


#### 5 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive common	
Z	•	1	Positive common	
NS	_		Negative	
NZ	•		common	

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details. (Excludes when an SI unit manifold is used)
- \* Only "Z" and "NZ" types are available with a power saving circuit.

#### 6 Manual override

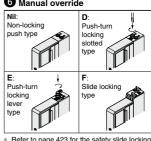

Refer to page 423 for the safety slide locking manual override.

#### **How to Order Manifold Assembly**

## Example (SS5Y3-10F1-UR) 3-position 3-port valve with restrictor (24 VD SY3A0R-5U1 Manifold base (5 stations) SS5Y3-10F1-05DR-C6

SS5Y3-10F1-05DR-C6---1 set (Type 10 5-station manifold base part no.) \*SY3A0R-5U1 (3-position 3-port with restrictor part no.)-...5 sets

- The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- . For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

#### D B port size

One-touch fitting (Metric size)

Olie-i	me-touch hitting (wethic size)					
Symbol	B port	SY3000	SY5000			
C4	ø4 One-touch fitting	•	•			
6	ø6 One-touch fitting	•	•			
C8	ø8 One-touch fitting	_	•			

One-touch fitting (Inch size)

Symbol	B port	SY3000	SY5000
N3	ø5/32" One-touch fitting	•	•
N7	ø1/4" One-touch fitting	•	•
N9	ø5/16" One-touch fitting	_	•

- \* When selecting the port size for each station, specify on a manifold specification sheet separately
- When mounting on the manifold base or sub-plate, the A port is plugged. When a manifold base or sub-plate is ordered separately, mount a plug on the A port.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw

- \* When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 or 679 for base gasket and mounting screw part numbers
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

#### **SY3000/5000** Series



#### **Valve Specifications**


Valve construction		3-position 3-port valve with restrictor	
Seal		Rubber seal	
Fluid		Air	
Type of actuation		Normally closed	
	Release pressure port 1(P)	0 to 0.6	
Operating pressure range [MPa]	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1	
Pilot X port		Release pressure + 0.1 or more (Min. 0.25) to 0.7	
Restrictor operation		Manual	

- \*1 Can be used with positive pressure to suit the application
- \* Other specifications are common to the valve specifications on page 404.
- \* Quick response type is not available.

#### Weight

Valve model	Weight [g]	
SY3A0R	90	
Valve model	Port size	Majaht [a]
valve model	2(B) port	Weight [g]
SY3A3R	C4	91
STOACH	C6	93
Valve model	Weight [g]	
SY5A0R	94	
Valve model	Port size	Majaht [a]
valve model	2(B) port	Weight [g]
	C4	118
SY5A3R	C6	115
	C8	121

#### Symbol

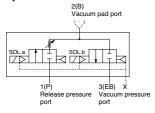

#### **Response Time**

Value medal	Without light/surge voltage suppressor	With light/surge voltage suppressor		
Valve model		S/Z type	R/U type	
SY3A□R	18	26	18	
SY5A□R	27	32	27	
- D 04MD- V 05M	D-			

<sup>\*</sup> P = 0.1 MPa X = 0.5 MPa

#### Manifold Flow Rate Characteristics\*1

#### Flow Rate Characteristics (When restrictor is fully open)

#### 1) Plug-in Metal Base

	Port size		Valve flow rate characteristics			
Manifold type	1, 3	1, 3 2 1→2 (P→B) 2→3 (B→EB)		1→2 (P→B)		5)
	(P, EB)	(B)	C [dm3/(s-bar)]	b	C [dm3/(s·bar)]	b
SS5Y3-50R (Side ported)	1/8	C6	0.7	0.24	1.0	0.16
SS5Y3-52R (Top ported)	1/8	C6	1.0	0.25	1.1	0.25
SS5Y5-50R (Side ported)	1/4	C8	1.0	0.30	2.3	0.10
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	2.4	0.14

#### 2 Plug-in Connector Connecting Base

	Port size		Valve flow rate characteristics			
Manifold type	1, 3	2	1→2 (P→B)		2→3 (B→EB	)
	(P, EB)	(B)	C [dm3/(s-bar)]	b	C [dm3/(s·bar)]	b
SS5Y3-10R (Side ported)	C8	C6	0.7	0.36	1.2	0.22
SS5Y3-12R (Top ported)	C8	C6	1.0	0.26	1.2	0.20
SS5Y5-10R (Side ported)	C10	C8	1.0	0.20	2.9	0.17
SS5Y5-11R (Bottom ported)	C10	C8	1.0	0.30	3.3	0.24
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	2.6	0.24

<sup>\*1</sup> The value is for manifold base with 5 stations.

st Calculation of effective area S and sonic conductance C: S = 5.0 x C

#### Restrictor Flow Rate Characteristics [Fluid passage: 1(P) - 2(B)]

5

#### SY3A0R 500 Flow rate [L/min (ANR)] 400 0.6 MPa 0.45 MPa 300 0.3 MPa 0.15 MPa 200


Number of restrictor rotations

#### SY5A0R 500 Flow rate [L/min (ANR)] 0.6 MPa 300 0.3 MPa 0.15 MPa 200 100


Number of restrictor rotations

#### SY3A3R-C4


100

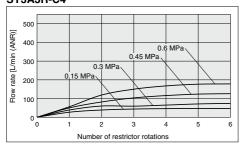


#### SY5A3R-C4

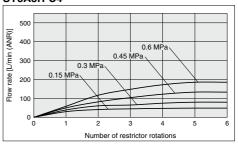


#### SY3A3R-C6

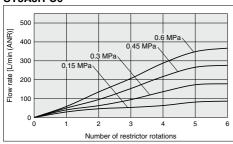

#### SY5A3R-C6

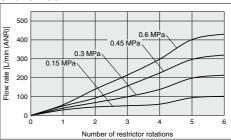


#### SY5A3R-C8

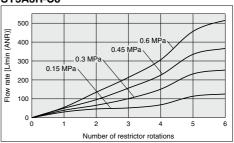


#### SY3000/5000 Series

#### **Circuit Example**

#### <Example 1: When the 2-position double solenoid valve is combined with the individual EXH spacer>

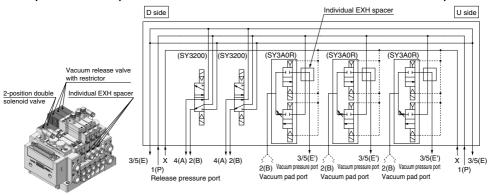


#### <Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk>

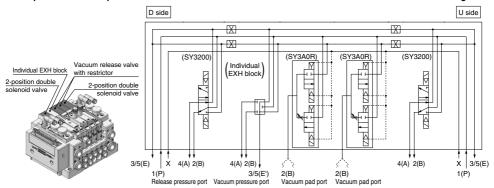


For standard valve to be combined, both the internal pilot and external pilot can be selected. If the pressure drop may occur when the 1(P) port releases the vacuum, use the external pilot type.

#### **Dimensions: SY3000**

#### Side ported SY3A0R

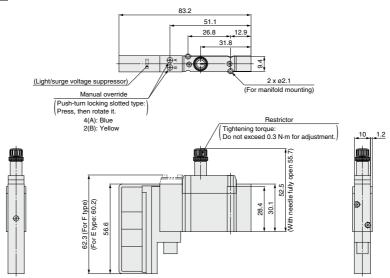


#### Top ported SY3A3R

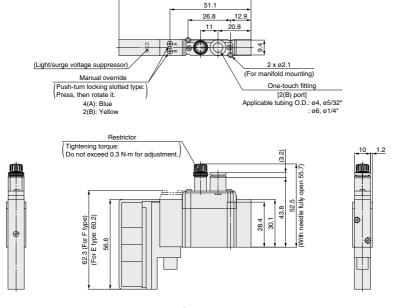


83.2

#### **SY3000/5000** Series

#### **Dimensions: SY5000**

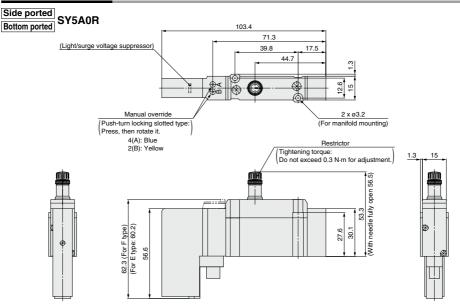


#### Top ported SY5A3R

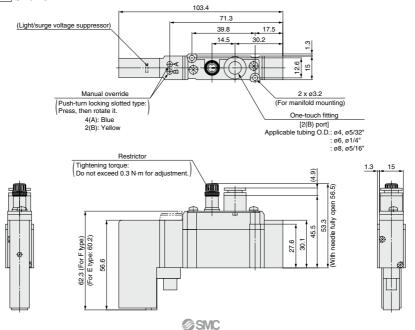

## SY5000/7000 Series Valve with Pressure Sensor

Mountable manifold
Metal base: SS5Y5/7-50/51 type manifold
Connector connecting base: SS5Y5/7-10/11 type manifold

How to Order Valves (With mounting screw)

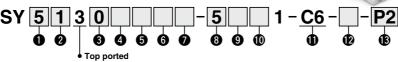

## 1 Series 5 SY5000 7 SY7000

Type of actuation

Opposition	Single
2-position	Double
	Closed center
3-position	Exhaust center
	Pressure center
	N.C./N.C.
	N.O./N.O.
uuai 3-port	N.C./N.O.
	2-position 3-position 4-position dual 3-port

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve (Built-in valve type)

(Built in valve type)		
Nil	None	
Н	Built-in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### Rated voltage

Tiated voltage		
5	24 VDC	
6	12 VDC	


 The applicable rated voltage varies depending on the manifold wiring type.

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_	1 _	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
   (Excludes when an SI unit manifold is used)
- Only "Z" and "NZ" are available with a power saving circuit.
- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

#### Manual override

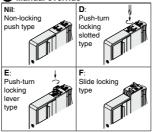

## A, B port size One-touch fitting (Metric)

| Symbol | A, B port | SY5000 | SY7000 | C6 | Ø6 | ● | ●

Type of mounting screw

Type of inounting screw		
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
К	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket sepa
  - manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

#### (B) Pressure sensor

Symbol	Included quantity
P1	1 pc.
P2	2 pcs.

- \* The top-ported type valve and the C6 (ø6) One-touch fitting are used.
- \* The PSE540-R06 pressure sensor is included in the product package.
- When "P1" is selected, one plug (KQ2P-06) is included in the product package.

#### **How to Order Manifold Assembly**

#### Example (SS5Y5-10F1-

SS5Y5-10F1-05D-C8

···1 set (Type 10 5-station manifold base part no.)

\* SY5130-5U1-C6-P1

···2 sets (2-position single part no.

- ···1 set (2-position double part no.) \*SY5230-5U1-C6-P2
- ···1 set (2-position double part no.)

  SY5330-5U1-C6-P2

  ···1 set (3-position closed center part no.)
- → The asterisk denotes the symbol for the assembly.

  Prefix it to the part numbers of the

valve, etc.

2-position double (24 VDC)
SY5230-SU1-C6-P2 (1 set)
2-position single (24 VDC)
SY5130-SU1-C6-P2 (1 set)
2-position single (24 VDC)
SY5130-SU1-C6-P2 (1 set)
2-position single (24 VDC)
SY5130-SU1-C6-P1 (2 sets)
The illustration shows a mounting example. The pressure sensor and plag are included in the product package.

Manifold base (5 stations)
SSSYS-10F1-0SD-C8

For the valve arrangement, the valve closest to the D side is considered the 1st station.

Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, society the details on a manifold specification sheet.

#### **SY5000/7000** Series

#### **Pressure Sensor Specifications**

Mo	del	PSE540
Rated pressure	e range	0 to 1 MPa*1
Power supply	voltage	12 to 24 VDC ±10%, Ripple (p-p) 10% or less (with reverse connection protection)
Current consu	mption	15 mA or less
Output specific	cations	Analog output 1 to 5 V (within rated pressure range), 0.6 to 1 V (within extension analog output range), Output impedance: Approx. 1 kΩ
Linearity		±0.7% F.S. or less
Environment	Enclosure*2	IP40
Temperature characteristics		±2% F.S. (25°C reference)
Sensor cable		Oilproof heavy-duty vinyl cable (ellipse), 3 cores, 2.7 x 3.2, 3 m, Conductor area: 0.15 mm <sup>2</sup> , Insulator O.D.: 0.9 mm


<sup>\*1</sup> Set the pressure within the operating pressure range of the valve.


#### **Symbol**


#### Internal pilot

2-position single 2-position double 3-position closed center 3-position exhaust center 3-position pressure center 

#### 4-Position Dual 3-Port Valve

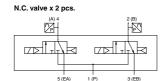


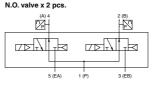

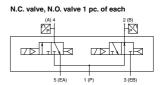


3-position pressure center


#### **External pilot**

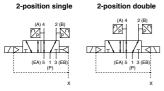




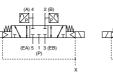



3-position exhaust center

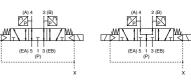

#### 4-Position Dual 3-Port Valve

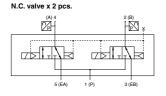

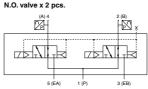

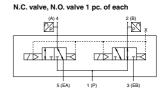



<sup>\*2</sup> Please note that even if the manifold is IP67, the product will remain IP40.

## Valve with Pressure Sensor **SY5000/7000 Series**


#### **Dimensions**


#### SY5000-P2

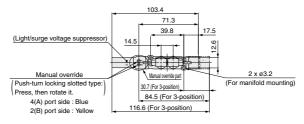


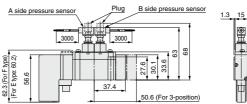

#### SY7000-P2

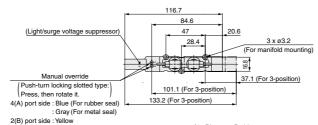

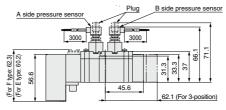

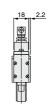

**SMC** 



## **Made to Order**





## 1 Main Valve Fluororubber Specification

-X90

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3\(\text{0}\) 30, SY5\(\text{0}\) 30, SY7\(\text{0}\) 30 (Only rubber seal type)


SY \(\frac{5}{7}\) 3 0 \(\text{0}\) 1 \(-\text{0}\) - \(\text{0}\) 490


Entry is the same as standard products.

Specifications and performance are the same as standard products.

## 2 With Safety Slide Locking Manual Override

A safety lock is added to the slide locking manual override. (Refer to page 391.)

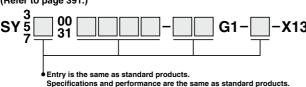

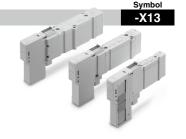


3 2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type)

Symbol -X350

\_\_\_\_

A 2-position single solenoid valve with a spring built into the main valve The main valve returns to origin (the OFF position) via the spring when it is not pressurized.

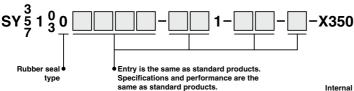




4(A) 2(B)



- \* For the external pilot type, exhaust the external pilot (X) port and the main pressure simultaneously.
  - If the main pressure cannot be exhausted due to the system specifications, please contact SMC separately.
- \* The manual option is only applicable to the non-locking push type.

## Plug-in Connector Connecting Base

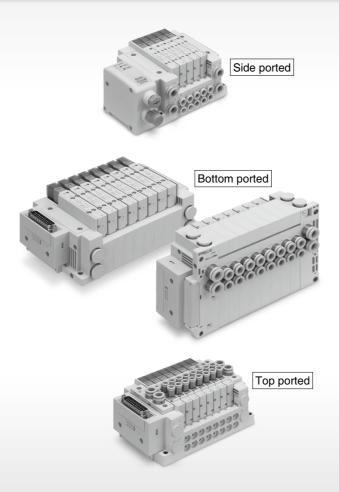

# SY3000/5000/7000 Series Type 10, 11, 12 Plug-in Connector Connecting Base

#### **Manifold Specifications**

				sub ector	Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector		S	erial wirir	ng	
	Model		F type	FW type	P type	PG type	PH type			L type	B M type   S6□ type   SA□ type   S4□ type   S□ type   S				S3□ type (EX120) S8□ type (EX180)	
Manifol	ld type			Plug-in connector connecting base												
SUP/EX	(H port type			Common SUP/EXH (Common for 3/5 port)												
Valve stations			2 to						2 to 16 stations	2 to 24 stations	2 to 16 stations (EX120) 2 to 24 stations (EX180)					
Applica	able connector	r	D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 444.)	Dedicated connector (Refer to page 444.)	wit Conformi (Refe Socket: 26 pins	er to page	elief -C-83503 446.) Socket: 10 pins					-				
Internal	l wiring				F	Positive o	common,	Negative	commo	n			Negative common		tive com ative com	
		SY3000		ø8 One-touch fitting ø5/16" One-touch fitting												
	1(P), 3/5(E) port	SY5000		ø10 One-touch fitting ø3/8⁵ One-touch fitting												
Port		SY7000								ouch fittir touch fitti	•					
size		SY3000					ting, ø3.2 e-touch fi		_			-		-		
	4(A), 2(B) port	SY5000			ø		ne-touch e-touch f	•			0.		•	ng		
		SY7000					ing, ø8 C e-touch fi		-			-		-		
Enclosure (Based on IEC60529)			IP40	IP67*1		IP40			IP6	i7* <sup>1</sup>		IP67*1 I/O Unit: partially IP40	IP65	IP67*1	IP67*1 (EX260 D-sub communication connector: IP40) (EX500 GW Unit: IP65)	IP20

<sup>\*1</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 703.

#### Manifold Flow Rate Characteristics\*1/Manifold Weight

Valve Seal Type: Rubber Seal Side Ported (Type 10)

NA if - 1 -1	Makes	Port	size		Flow rate ch	aracteristics		Majaht M [a]#2	
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P -	→ A/B)	4/2 → 3/5 (A/E	3 → E)	Weight: W [g]*2 (n: stations)	
model	model	(P, E)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	(ii. stations)	
	SY3100 SY3200			1.4	0.30	1.6	0.19		
	SY3300			1.3	0.28	1.2	0.40		
SS5Y3	SY3400	C8	C6	1.2	0.27	1.6	0.29	28.9 n + 293	
33313	SY3500	0.0		1.4	0.31	1.1	0.36	20.911+293	
	SY3A00			1.3	0.26	1.5	0.27		
	SY3B00			1.3	0.26	1.5	0.27		
	SY3C00			1.3	0.26	1.5	0.27		
	SY5100 SY5200		C8	3.3	0.30	3.6	0.17		
	SY5300			3.1	0.32	2.9	0.31		
SS5Y5	SY5400	C10		3.1	0.32	3.7	0.23	74.7 n + 398	
33313	SY5500	Cio		3.4	0.32	2.9	0.31	74.711 + 390	
	SY5A00			2.9	0.32	3.2	0.25		
	SY5B00			2.8	0.31	2.9	0.26		
	SY5C00			2.9	0.32	3.1	0.25		
	SY7100 SY7200			6.2	0.23	5.9	0.20		
	SY7300			4.8	0.25	4.4	0.36		
SS5Y7	SY7400	C12	C12	4.8	0.25	6.6	0.27	106.6 n + 496	
33317	SY7500	012	012	7.1	0.25	4.4	0.36	100.011 + 450	
	SY7A00			5.4	0.25	5.1	0.29		
	SY7B00			5.4	0.24	5.1	0.31		
	SY7C00			5.4	0.25	5.1	0.29		

## Valve Seal Type: Rubber Seal Bottom Ported (Type 11)

Dottom i ort	ca (Type T	',						
Manager Lat	.,.	Port size						
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P -	→ A/B)	4/2 → 3/5 (A/I	3 → E)	Weight: W[g]*2 (n: stations)
model	model	(P, E)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s-bar)]	b	(II. Stations)
SS5Y5	SY5100 SY5200	C10	C8	3.3	0.29	4.2	0.26	76.8 n + 445
SS5Y7	SY7100 SY7200	C12	C12	6.2	0.25	6.6	0.21	117.9 n + 532

## Valve Seal Type: Rubber Seal Top Ported (Type 12)

Top Forted (	Type 12)								
		Port size			347 : 1. 3475 342				
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P -	→ A/B)	4/2 → 3/5 (A/I	B → E)	Weight: W [g]*2 (n: stations)	
model	model	(P, E)	(A, B)	C [dm3/(s-bar)]	b	C [dm3/(s-bar)] b		(II. Stations)	
SS5Y3	SY3130 SY3230	C8	C6	1.2	0.29	1.3	0.19	25.1 n + 314	
SS5Y5	SY5130 SY5230	C10	C8	2.8	0.27	3.8	0.23	66.3 n + 417	
SS5Y7	SY7130 SY7230	C12	C12	5.6	0.31	5.7	0.24	84.1 n + 519	

<sup>\*1</sup> The value is for manifold base with 5 stations and individually operated 2-position type.

<sup>\*</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C



<sup>\*2</sup> Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 406 for the appropriate number of stations.

#### Manifold Flow Rate Characteristics\*\*/Manifold Weight

Valve Seal Type: Metal Seal Side Ported (Type 10)

	<u> </u>	Port	size		Flow rate ch	naracteristics		
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P	- A/B)	4/2 → 3/5 (A/E	3 → E)	Weight: W [g]*2 (n: stations)
model	model	(P, E)	(A, B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm3/(s-bar)]	b	(II. Stations)
	SY3101 SY3201			1.2	1.2 0.19		0.18	
SS5Y3	SY3301	C8	C6	0.8	0.19	0.8	0.35	28.9 n + 293
	SY3401			0.8	0.19	1.1	0.26	
	SY3501			0.9	0.21	0.7 0.32		
	SY5101 SY5201		C8	2.7	0.24	3.1	0.17	
SS5Y5	SY5301	C10		2.3	0.21	2.0	0.24	74.7 n + 398
	SY5401			2.3	0.21	2.7	0.18	
	SY5501			2.5	0.21	2.0	0.24	
	SY7101 SY7201			4.4	0.14	4.4	0.17	
SS5Y7	SY7301	C12	C12	3.4	0.12	3.3	0.24	106.6 n + 496
	SY7401			3.4	0.12	4.9	0.18	
	SY7501			5.0	0.12	3.3	0.24	

Valve Seal Type: Metal Seal Bottom Ported (Type 11)

		Port	size		144 . 1 . 144 . 142				
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P -	→ A/B)	4/2 → 3/5 (A/I	3 → E)	Weight: W [g]*2 (n: stations)	
model	model	(P, E)	(A, B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm <sup>3</sup> /(s-bar)]	b		
SS5Y5	SY5101 SY5201	C10	C8	2.8	0.25	3.5	0.15	76.8 n + 445	
SS5Y7	SY7101 SY7201	C12	C12	4.6	0.16	4.7	0.18	117.9 n + 532	

Valve Seal Type: Metal Seal

Top Ported (	Type 12)								
NA 16-1-1	.,,	Port	size						
Manifold model	Valve model	1, 3/5	4, 2	1 → 4/2 (P1 -	→ A/B)	4/21 → 3/5 (A/I	B1 → E)	Weight: W [g]*2 (n: stations)	
model	model	(P, E)	(A, B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm <sup>3</sup> /(s-bar)]	b	(ii. stations)	
SS5Y3	SY3131 SY3231	C8	C6	1.2	0.16	1.3	0.18	25.1 n + 314	
SS5Y5	SY5131 SY5231	C10	C8	2.6	0.18	3.0	0.16	66.3 n + 417	
SS5Y7	SY7131 SY7231	C12	C12	3.9	0.21	4.1	0.14	84.1 n + 519	

<sup>\*1</sup> The value is for manifold base with 5 stations and individually operated 2-position type.



<sup>\*2</sup> Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 406 for the appropriate number of stations.


 $<sup>\</sup>ast\,$  Calculation of effective area S and sonic conductance C: S = 5.0 x C

#### **Connector Wiring Layout**

Station 3

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

Single solenoid valve is installed to all double wiring. (in the case of all double wiring) (Manifold specification sheet is not necessary.)

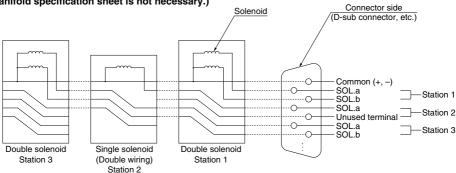

■ Single/double wiring are mixed. (Manifold specification sheet is necessary.) Connector side Solenoid (D-sub connector, etc.) Common (+, -) SOL.a 0 -Station 1 ----SOL.b 0 SOL.a Station 2 SOL.a -Station 3 SOL.b -Double solenoid Single solenoid Double solenoid

Station 1

Station 2

**SMC** 

<sup>\*</sup> These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.



## Plug-in Connector Connecting Base


D-sub Connector | Flat Ribbon Cable

## SY3000/5000/7000 Series

CE UK CRUS ROHS

How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

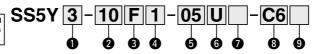


#### Series SY3000 5 SY5000 SY7000

### Side ported Bottom ported\*1


\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

4 Connector entry direction

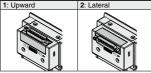


The connector entry direction for connector type "FW" D-sub connector <IP67> cannot be rotated. If it is necessary to change, order the connector block assembly (page 592) separately.

#### 3 Connector type

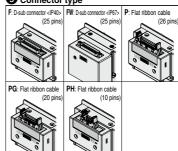

#### **How to Order Manifold Assembly**

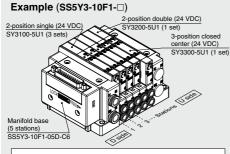

SS5Y3-10F1-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1------ 3 sets (2-position single part no.) \*SY3200-5U1------1 set (2-position double part no.)

\*SY3300-5U1-----1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

- . For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold part number, state the valves to be mounted in order starting. with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet
- When mixing top-ported configurations, select from those listed on page 443. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports

#### Valve stations

F/FV	<b>V</b> : D-s	ub connector (25 pins)	<b>P</b> : F	P: Flat ribbon cable (26 pins)					
Symbol	Stations	Note	Symbol	Stations	Note				
02	2 stations		02	2 stations					
:	:	Double wiring*1	:	:	Double wiring*1				
12	12 stations		12	12 stations					
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2				
:	1	(Up to 24 solenoids	1	:	(Up to 24 solenoids				
24	24 stations	available)	24	24 stations	available)				
PG:	Flat ri	bbon cable (20 pins)	PH:	Flat ril	obon cable (10 pins)				

24	24 Stations	avallable)	24	24 Stations	avallable)							
PG:	PG: Flat ribbon cable (20 pins) PH: Flat ribbon cable (10 pins											
Symbol	Stations	Note	Symbo	Stations	Note							
02	2 stations		02	2 stations								
-	- :	Double wiring*1	- I	-	Double wiring*1							
09	9 stations		04	4 stations								
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2							
-	- :	(Up to 18 solenoids	- i	-	(Up to 8 solenoids							
18	18 stations	available)	08	8 stations	available)							

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control
- signal. If this is not desired, order with a specified layout. \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

6 P, E port entry

	- p - · · · · · · · · · ·
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### SUP/EXH block assembly

Nil	Internal pilot					
s	Internal pilot,					
3	Built-in silencer					
R	External pilot					

 3/5(E) port is plugged for the built-in silencer type. Mounting and Option

Cymbol	Mauntina	Option			DIN Rail Option					
Syllibol	Mounting	Name plate	ne plate Station number		Nil	Dire	ct mounting			
Nil	Direct mounting	_	_		0	Without D	IN rail (with bracket)			
AA		•	•		3	For 3 stations	Specify a longer rail			
BA	linounung	•	_	l			than the total length			
D□	DIN I	_			24	For 24 stations	of specified stations			
A□	DIN rail mounting	•	•							
B□	iniouning	•	_							

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \* Only direct mounting is available for the type 11 bottom-ported type
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

3 A, B port size (Metric/One-touch fitting)

<b>O</b>	A, B port size			(Metri	c/One	-touch	ititting	3)						
Symbol		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported						
Symbol	A, b port		SY3000	SY5000	SY7000	SY5000	SY7000							
C2			ø2	•	_	_	_	_						
СЗ			ø3.2	•	_	_	_	_						
C4	_		ø4	•	•	_	•	_						
C6	Straight		ø6	•	•	•	•	•						
C8	Stra		ø8	_	•	•	•	•	2					
C10	0,		ø10	_	_	•	_	•	O STATE					
C12			ø12	_	_	•	_	•	4					
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•						
L4			ø4	•	•	_	_	_						
L6		2	ø6	•	•	•	_	_						
L8		Upward	ø8	_	•	•	_	-						
L10		12	ø10	_	_	•	_	_						
L12			ø12	_	_	•	_	_	Jel Bar					
<b>B</b> 4	, MC	Elbow*2 Downward	ø4	•	•	_	_	-						
<b>B6</b>	ĕ		ard	aro	ard	ard	ard	ard	ø6	•	•	•	_	_
B8	_	ķ	ø8	_	•	•	_	I						
B10	1	lá	á	ø10	_	_	•	_	-					
B12			ø12	_	_	•	_	_						
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	ı						
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12						

A, B port size (Inch/One-touch fitting)

, -	b port size (inch/one-toden inting)								
C	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	a lease
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9			ø5/16"	_	•	_	_	_	
LN11			ø3/8"	_	_	•	_	_	A DESCRIPTION OF THE PERSON OF
BN3	Elbow*2	5	ø5/32"	•	_	_	_	_	
BN7	ğ.	Downward	ø1/4"	•	•	_	_	_	
BN9	_	W	ø5/16"	_	•	_	_	_	
BN11	1	ŏ	ø3/8"	_	_	•	_	_	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_			
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		




<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

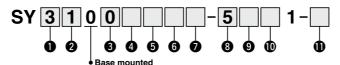

#### A Sarias

• ••	• •••••		
3	SY3000		
5	SY5000		
7	SY7000		

2 Type of actuation

<u> </u>			
1	0	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position	N.C./N.C.	
B*1	dual	N.O./N.O.	
C*1	3-port	N.C./N.O.	
•			

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve ontion

	<u> </u>		
Nil	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		


\*1 Only the metal seal type is available for the high pressure type.

#### **A** ^-:1 .....

Con type				
Nil	Standard			
T	With power saving circuit (Continuous duty type)			
* Be sure to select the power saving circuit				

- type if the valve is to be continuously energized for long periods of time. Be careful of the energizing time when the
- power saving circuit is selected. Refer to page 705 for details.

#### Manual override

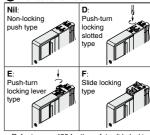

Refer to page 423 for the safety slide locking manual override

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil

	Nil	Internal pilot
ſ	R	External pilot
*	When	selecting the external pilot specification

for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### 5 Back pressure check valve (Built-in valve type)

L	Н	Built-in
*	Only the rubber seal type is available. A	
	manifo	old installed type is available if a back
	pressu	ure check valve with a metal seal is

None

- required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

#### Rated voltage

5	24 VDC
6	12 VDC

#### 9 Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Common specification
	Nil	_	_	
	R	ı		Non-polar
	U	•		
	S	_		Positive
	Z NS	•	•	common
		_		Negative
	NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

 $SS5Y3-10F_{2}^{1}-\underline{Stations} \underset{D}{\overset{U}{D}} - \underset{CG, \ N7}{\overset{C2}{C3}}, \underset{CG, \ N7}{\overset{N1}{N1}}(D)$ 

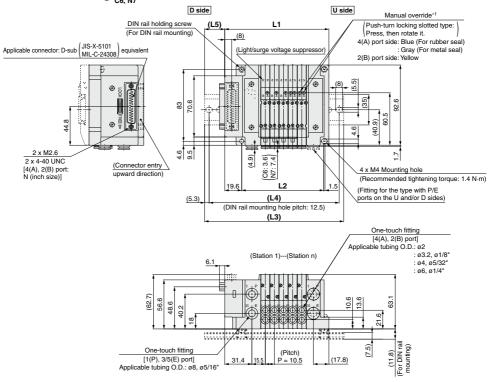

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10F2-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5




Dimensions: SY5000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base D-sub Connector (IP40)

SS5Y5-10F<sub>2</sub>-Stations D-C6, N7 (D)

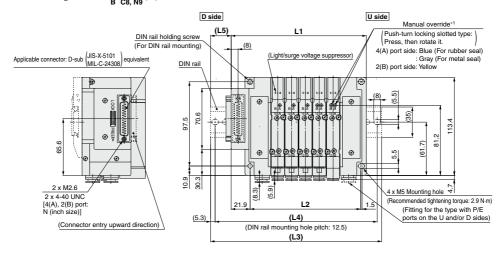

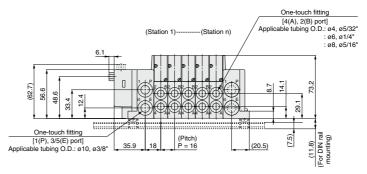

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10F2-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: St	ations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	.1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L	.2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L	.3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L	.4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L	.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22
		20	21	19.5	24	22	20.5	10.5	23	21.5	19.5	10	22.5	20.5	19	23.3	21.5	20	10	22.5	21	19	23.5	Ľ


## Dimensions: SY7000 Series

Plug-in Connector Connecting Base D-sub Connector (IP40)

Type 10/Side Ported

SS5Y7-10F<sub>2</sub>-Stations D-C8, N7 (D)

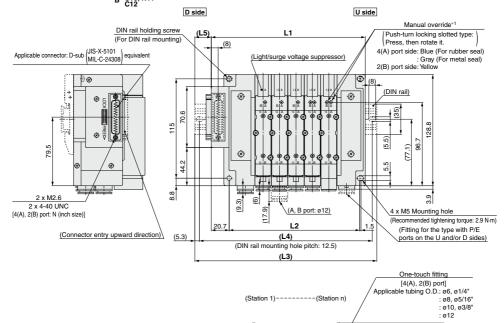

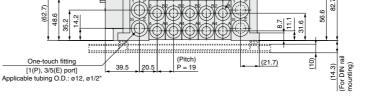


- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10F2-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.


n: Station	s 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20



### Dimensions: SY3000 Series

## Plug-in Type 10/Side Ported Connector Connecting Base D-sub Connector (IP67)

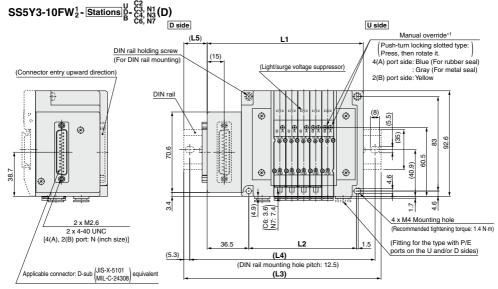

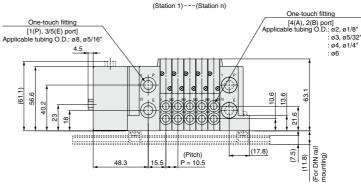

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10FW2-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5


Dimensions: SY5000 Series

## Plug-in Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

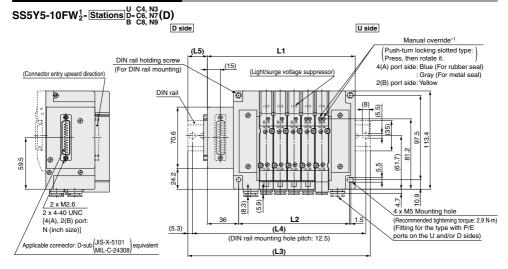

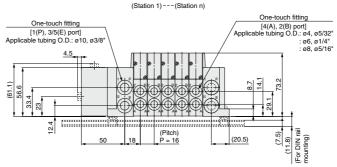


- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10FW2-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5



Dimensions: SY7000 Series

## Plug-in Type 10/Side Ported Connector Connecting Base D-sub Connector (IP67)

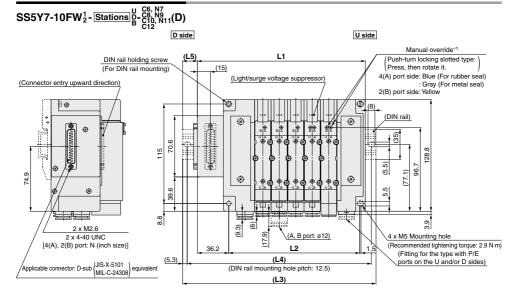

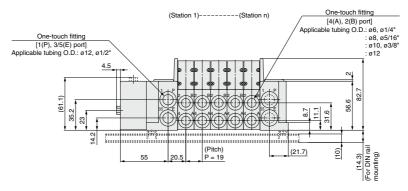

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10FW2-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5



## Dimensions: SY3000 Series


#### Plug-in Connector Connecting Base

Type 10/Side Ported Flat Ribbon Cable

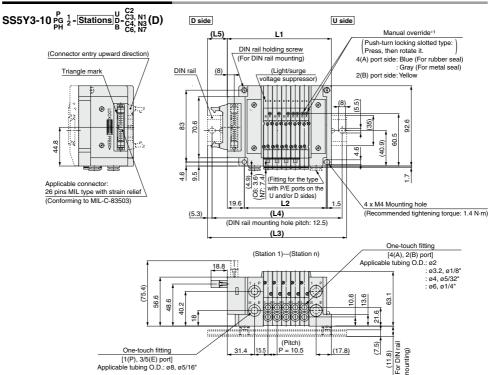

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

  \* These figures show the "SSSY3-10P2-05D-C6."
- Refer to page 571 for dimensions of A or B port top-ported type.
- \* Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

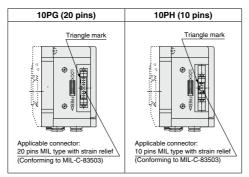


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


## Dimensions: SY5000 Series

## Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

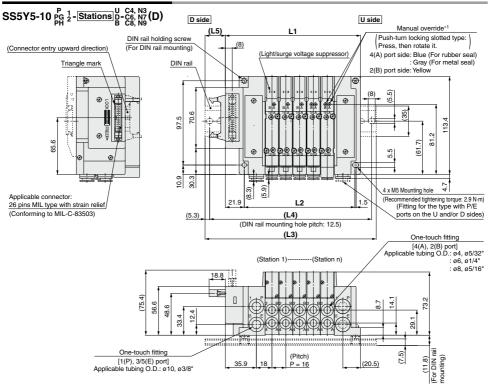

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10P2-05D-C8."
- Refer to page 572 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG and 10PH.
   L1 to L5 dimensions are the same as 10P type.

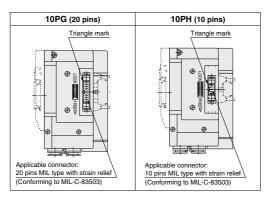



n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

## Dimensions: SY7000 Series

#### Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

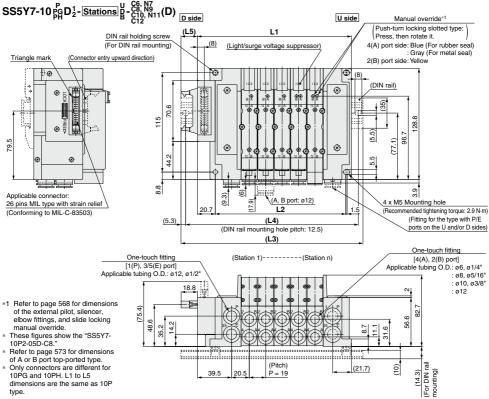

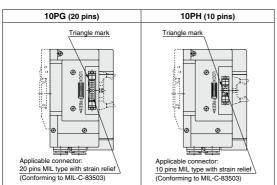

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

Type 12 Top Ported

## Plug-in Connector Connecting Base


D-sub Connector | Flat Ribbon Cable

## **SY3000/5000/7000** Series • **SY3000/5000/7000**




#### **How to Order Manifolds**

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type

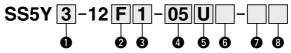

#### Series SY3000 SY5000 SY7000

Connector type

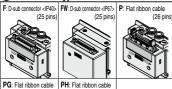


(10 pins)

P, E port entry U side (2 to 10 stations) D side (2 to 10 stations)

Both sides (2 to 24 stations)

\*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

#### How to Order Manifold Assembly

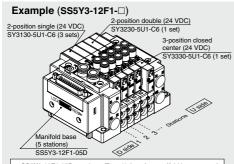

SS5Y3-12F1-05D ······ 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

\*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

. For the valve arrangement, the valve closest to the D side is considered the 1st station Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold

#### 3 Connector entry direction



The connector entry direction for connector type "FW" D-sub connector <IP67> cannot be rotated. If it is necessary to change, order the connector block assembly (page 592) separately.

#### 4 Valve stations

able (26 pins)
able (20 pills)
Note
ouble wiring*1
-
ecified layout*2
to 24 solenoids
available)

#### PG: Elet ribbon cable (20 pins) PH: Elet ribbon cable (10 pins)

гu.	r iai ii	bboll cable (20 pills)	FII.	r iai ii	bboll cable (10 pills)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
- I	;	Double wiring*1		:	Double wiring*1
09	9 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
1	:	(Up to 18 solenoids	1	-	(Up to 8 solenoids
18	18 stations	available)	08	8 stations	available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been
- This also includes the number of the blanking plate assembly.

#### 6 SUP/EXH block assembly

Nil	Internal pilot
s	Internal pilot,
3	Built-in silencer
R	External pilot

\* The P and E ports are only available on the U and D sides for the built-in silencer type, 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

#### Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a length		
- :	:	longer than that of	
D24	For 24 stations the standard rail.		

\* Refer to page 708 for the fixation of DIN rail mounting type manifold.


#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

For N sizes are in inches

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

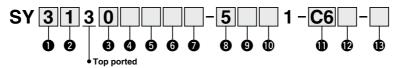

#### A Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	0	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position	N.C./N.C.
B*1	dual	N.O./N.O.
C*1	3-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve

(Built-in valve type)		
Nil	None	
н	Built-in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve ontion

Nil	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Nil	Symbol	With light	Surge voltage suppressor	Common specification
U   •     Positive common   NS   -   Negative	Nil	ı	_	
S — Positive common NS — Negative	R	_		Non-polar
Z common Ns — Negative	U	•		
Z	S	_	1	Positive
	Z	•	_	common
NZ • common	NS	ı		Negative
	NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

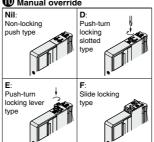

Refer to page 423 for the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

one readining (metric)											
Symbol	A, B port	SY3000	SY5000	SY7000							
C2 C3	ø2	•	_	_							
C3	ø3.2	•	_	_							
C4	ø4	•	•	_							
C6	ø6	•	•	•							
C8	ø8	_	•	•							
C10	ø10	_	_	•							
C12	ø12	_	_	•							

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	T -	_	•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


\* Only Nil is available for M5.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and
- mounting screw part numbers.
  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

#### **Electrical Wiring Specifications**

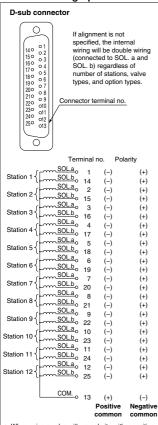

\* When using a valve with no polarity, either positive common or negative common can be used.

#### **Specified Layout**


COM.

#### (25 pins)



A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

#### Cable Assembly

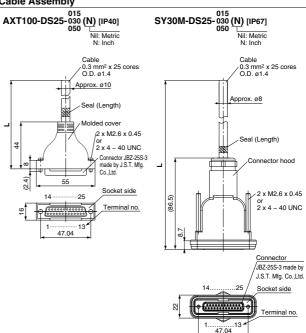

#### D-sub connector cable assembly [IP40]

Cable length (L)	Assembly part no.	Note						
1.5 m	AXT100-DS25-015							
3 m	AXT100-DS25-030	Cable 0.3 mm <sup>2</sup> x 25 cores						
5 m	AXT100-DS25-050	0.5 IIIII × 25 toles						
Whon using a standard commercial								

- connector, use a 25-pin type female connector conforming to MIL-C-24308.
- Cannot be used for movable wiring
- Lengths other than the above are also available. Please contact SMC for details.

#### D-sub connector cable assembly [IP67]

Assembly part no.	Note			
SY30M-DS25-015				
SY30M-DS25-030	Cable 0.3 mm <sup>2</sup> x 25 cores			
SY30M-DS25-050	U.3 ITIIII- X 23 CORES			
	SY30M-DS25-015 SY30M-DS25-030			

- Be sure to use the connector cable assembly in the table, to satisfy enclosure
- \* Cannot be used for movable wiring

#### Ele

ctrical cha	aracteri	stics Connector Manufacturer's Example
Item	Property	
ductor resistance m, 20°C	65 or less	<ul> <li>Japan Aviation Electronics Industry, Limited</li> <li>J.S.T. Mfg. Co., Ltd.</li> </ul>
		<ul> <li>HIROSE ELECTRIC CO., LTD.</li> </ul>

Conductor resistance Ω/km, 20°C	65 or less					
Voltage limit V, 1 minute, AC	1000					
Insulation resistance MΩ/km, 20°C	5 or more					
* The minimum bending						


g radius of the D-sub connector cable is 20 mm.

#### D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	None	None	Black	White	White	Red	Red	White	None




#### **Electrical Wiring Specifications**

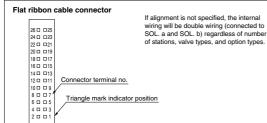

P: Flat ribbon cable (26 pins)											
<double wiring=""></double>											
1200		no. Polarity	,								
c_m_SOL.	<u>a</u> 1	,									
Station 1 SOL.			+)								
SOL.			+)								
Station 2 SOL.			+)								
SOL.			+)								
Station 3 SOL.			+) +)								
SOL.	_0 6 2 7		+)								
Station 4 SOL.			+)								
SOL.	<u>a</u> 9		+)								
Station 5 SOL.	b 10	' '	+)								
SOL.	a 10		+)								
Station 6 SOL.	b 12		+)								
SOL.	a 13		+)								
Station 7 \SOL.	b 14		+)								
SOL.			+)								
Station 8 SOL.			+)								
Station 9 SOL.		(-)	+)								
(t-mm		(-)	+)								
Station 10 SOL.		(-)	+)								
		(-)	+)								
Station 11 SOL.	,·		+)								
SOL.			+)								
Station 12 SOL.			+)								
(thursday	<b>−</b> 0 24	(-)	+)								
CON		(+)	-)								
CON	<u>l.</u>	(+)	<b>–</b> )								
	1	Positive Ne	gative								
	(	common cor	nmon								


PG: Flat ribbon	cable (20 pins)								
<double wiring=""></double>									
	Terminal no. Polarity								
Station   {	1 (-) (+) 2 (-) (+) 3 (-) (+) 4 (-) (+) 5 (-) (+) 6 (-) (+) 7 (-) (+) 9 (-) (+) 10 (-) (+) 11 (-) (+) 12 (-) (+) 14 (-) (+) 15 (-) (+) 16 (-) (+) 17 (-) (+) 18 (-) (+) 19 (-) (+)								
o	20 (+) (-) Positive Negative								
	common common								

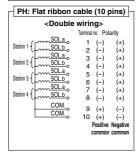

 When using a valve with no polarity, either positive common or negative common can be used.

#### Flat Ribbon Cable Assembly

## AXT100-FC 20-2

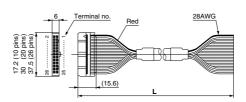

#### Flat ribbon cable connector assembly


Cable	Assembly part no.									
length (L)	26 pins	20 pins	10 pins							
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1							
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2							
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3							

- \* When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \* Cannot be used for movable wiring
- Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturer's Example

- · HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- · Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

#### **Specified Layout**

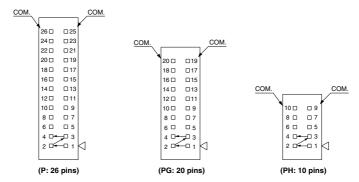

A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, and 8 or less for PH. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.



Type 10 **Type 11 Bottom Ported** 

## Plug-in Connector Connecting Base


Terminal Block Box (Spring Type)

## SY3000/5000/7000 Series

( E UK CAL US ROHS

#### How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

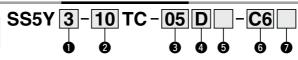

#### Series

3	SY3000
5	SY5000
7	SY7000

10	Side ported
11	Bottom ported *1

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

#### P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silence
R	External pilot

- \* 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### Valve stations

#### TC: Spring type terminal block box

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring *1
16	16 stations	
02	2 stations	Specified layout *2
:	- 1	(Up to 32 solenoids
24	24 stations	available)

\*1 Double wiring: 2-position single, double, 3-position, and 4-nosition valves can be used on all manifold stations.

> Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been speci-
- This also includes the number of the blanking plate assembly.

U IVIC	ountin	g and Option		DIN R	ан Орно	11
Symbol	Mounting	Option		Option Nil DIN rail		inting (with DIN rail)
Nil	Direct	None				iting (without DIN rail)
AA		Name plate (with station number)		3	For 3 stations	Specify a length
BA	mounting	Name plate (without station number)		- 1		longer than that of
D□	DIN rail	Without name plate		24	For 24 stations	the standard rail.
A□		Name plate (with station number)				
ВП		Name plate (without station number)				

Enter the number of stations inside 


. (Refer to "DIN Rail Option" above.) Only direct mounting is available for the type 11 bottom-ported type.

6 A. B port size (Metric/One-touch fitting)

<u> </u>	<u> </u>	<u> </u>	JOI L SIZE (II						
Symbol		A, B port					Type 11/Bo		
ayıııuuı				SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	D16
C4	+		ø4	•	•	_	•	_	
C6	igh		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	2011
C10	Ś		ø10	_	_	•	_	•	O
C12			ø12	_	-	•	_	•	-
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	<b>▶</b> %
L6		Upward	ø6	•	•	•	_		
L8			ø8	_	•	•	_	-	
L10			ø10	_	_	•	_	_	
L12	8		ø12	_	-	•	_		
B4	Elbow	_	ø4	•	•	_	_	-	- 200
B6	<u></u>	ä	ø6	•	•	•	_	_	
B8	ш	[	ø8	_	•	•	_		
B10	il	Downward	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	
LM*1		Elbow	port, mixed sizes (Including ard and downward piping)	•	•	•	_	-	
P. E p	ort si	ze (C	One-touch fittings)	ø8	ø10	ø12	ø10	ø12	

### **How to Order Manifold Assembly**

## Example (SS5Y3-10TC ) 2-position double (24 VDC)

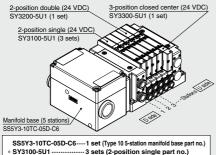

. For the valve arrangement, the valve closest to the D side is considered the 1st station. · Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

\* SY3200-5U1 ...... 1 set (2-position double part no.) SY3300-5U1 .....1 set (3-position closed center part no.) -The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.


#### A. B port size (Inch/One-touch fitting)

Symbol	A, B port				10/Side				
Sylliuui			SY3000	SY5000	SY7000	SY5000	SY7000		
N1	П		ø1/8"	•	_	_	_	_	
N3	Ħ		ø5/32"	•	•	_	•	_	
N7	įg		ø1/4"	•	•	•	•	•	
N9	Straight	Г	ø5/16"	_	•	•	•	•	
N11	S		ø3/8"	_	_	•	_	•	of Base
CM*1		Strai	ght port, mixed sizes	•	•	•	•	•	
LN3		-	ø5/32"	•	_	_	_	_	
LN7		la,	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11	۲ <u>۶</u>	-	ø3/8"	_	_	•	_	_	
BN3	Elbow	rd	ø5/32"	•	_	_	_	_	<b>1982</b>
BN7	ĕ	Jownward	ø1/4"	•	•	_	_	_	
BN9	ш	ž	ø5/16"	_	•	_	_	_	
BN11		മ	ø3/8"	_	_	•	_	_	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E po	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

- \*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly.

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

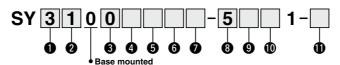

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single		
2		Double		
3		Closed center		
<u>4</u> 5	3-position	Exhaust center		
		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1 C*1	4-position dual 3-port	N.O./N.O.		
	uuai 3-poit	N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### A pilot type

U FIII	or type
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Built-in valve type)

,50	int in valve type,
Nil	None
ш	Duilt in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option


Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

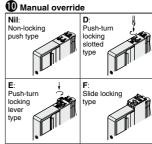

Refer to page 423 for the safety slide locking manual override.

#### Rated voltage

5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Dimensions: SY3000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

SS5Y3-10TC-Stations  $\stackrel{\text{U}}{\stackrel{\text{C}}}{\stackrel{\text{C}}}{\stackrel{\text{C}}{\stackrel{\text{C}}}{\stackrel{\text{C}}}{\stackrel{\text{C}}}\stackrel{\text{C}}{\stackrel{\text{C}}}}{\stackrel{\text{C}}}\stackrel{\text{C}}{\stackrel{\text{C}}}}\stackrel{\text{C}}{\stackrel{\text{C}}}}\stackrel{\text{C}}{\stackrel{\text{C}}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}{\stackrel{\text{C}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C}}}\stackrel{\text{C$ 

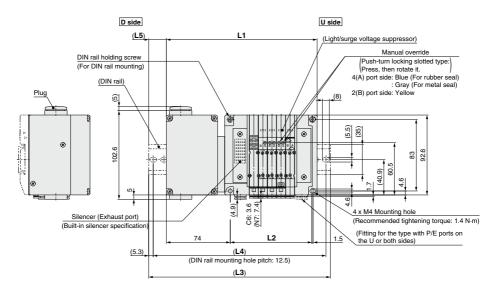

(Station 1) ---- (Station n)

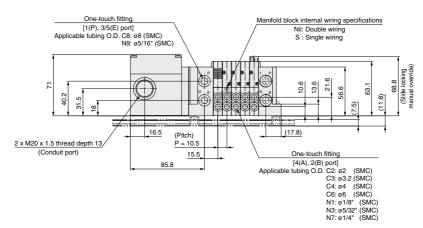


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5	290	300.5	311	321.5	332	342.5	353	363.5	374
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5
L4	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350	350	362.5	375	387.5	400
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5


Dimensions: SY5000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

## SS5Y5-10TC-Stations D - C6, N3 (D)

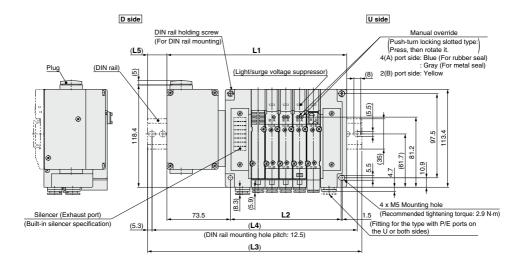

(Station 1) ---- (Station n)

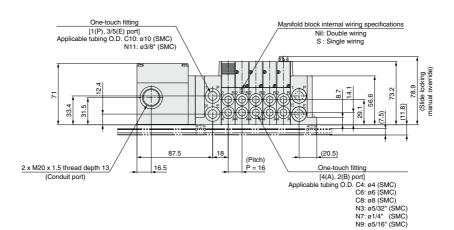



n: Station	ns 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432	448	464	480	496	512
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548
L4	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525	537.5
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

Dimensions: SY7000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base Terminal Block Box

SS5Y7-10TC-Stations  $\stackrel{\text{U}}{\stackrel{\text{C6}}{\stackrel{\text{C7}}}}}\stackrel{\text{C7}}{\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}{\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}}\stackrel{\text{C7}}\stackrel{\text{C7}$ 

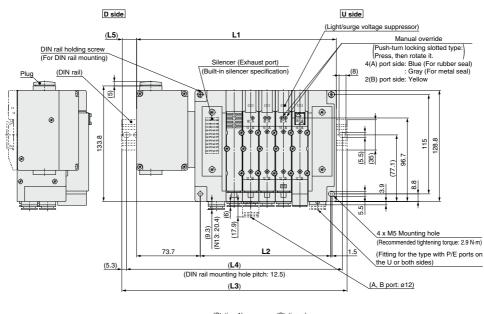

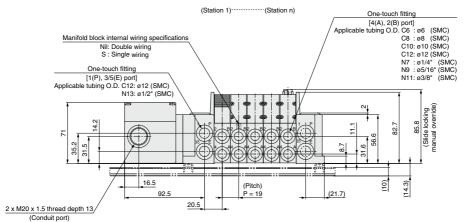

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	174.2	193.2	212.2	231.2	250.2	269.2	288.2	307.2	326.2	345.2	364.2	383.2	402.2	421.2	440.2	459.2	478.2	497.2	516.2	535.2	554.2	573.2	592.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	210.5	223	248	260.5	285.5	298	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623
L4	200	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575	600	612.5
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

## Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

Type 12 Top Ported


## SY3000/5000/7000 Series

CE UK CHS ROHS



#### How to Order Manifolds

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type

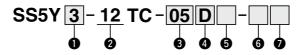

#### A Series

3	SY3000
5	SY5000
7	SY7000

## Top ported

#### Valve stations

TC. Spring type terminal block how

	Spring	type terminal block box
Symbol	Stations	Note
02	2 stations	
:	1	Double wiring *1
16	16 stations	
02	2 stations	Considered layout #2
:	:	Specified layout *2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 soleriolds available)

\*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

#### 4 P, E port entry


U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 5 SUP/EXH block assembly

Nil	Internal pilot			
S	Internal pilot, Built-in silencer			
R	External pilot			

- \* The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### How to Order Manifold Assembly

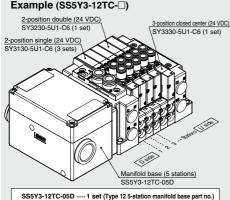

\* SY3130-5U1-C6 ......3 sets (2-position single part no.)

\* SY3230-5U1-C6 ......1 set (2-position double part no.) SY3330-5U1-C6 ......1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

. For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

For N. sizes are in inches.


#### Mounting

Nil	Direct mounting			
D	DIN rail mounting (with DIN rail)			
D0	DIN rail mounting (without DIN rail)			
D3	For 3 stations Specify a length longer			
:	:	than that of the standard		
D24	For 24 stations rail.			

\* Refer to page 708 (SY3000/5000/7000 series: Specific product precautions 6) for instructions on fastening the DIN rail mounting type manifold.



#### How to Order Valves (With mounting screw)

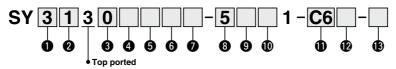

#### A Sarias

	• ••	.00
	3	SY3000
	5	SY5000
	7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2		Double	
3		Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1		N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil		Intern	al pilot	:	
R		Exterr	nal pilo	t	
	 	-			 

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Built-in valve type)

Nil	None		
Н	Built-in		
* Only t	ha rubbar agal tupa ia available. A		

- manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	suppressor	specification
		оприсозон	Specification
Nil	_	_	
R	_		Non-polar
U	•	]	
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

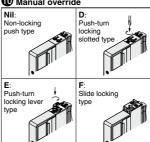

Refer to page 423 for the safety slide locking manual override.

#### A. B port size

#### Thread piping

Symbol	Port size Applicable serie				
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

#### One-touch fitting (Metric)

, ,					
A, B port	SY3000	SY5000	SY7000		
ø2	•	_	_		
ø3.2	•	_	_		
ø4	•	•	_		
ø6	•	•	•		
ø8	_	•	•		
ø10	_	_	•		
ø12	_	_	•		
	Ø2 Ø3.2 Ø4 Ø6 Ø8 Ø10	Ø2	02		

#### One-touch fitting (Inch)

One-touch litting (inch)					
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•		_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

#### Type of mounting screw

• ',	oo ooug oo.o
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.






#### **Terminal Block Connection**

#### Step 1. Remove the terminal block cover

Loosen the 4 mounting screws (M3) to remove the terminal block cover.

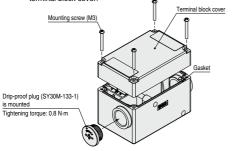

#### Step 3. Mount the terminal block cover

Securely tighten the mounting screws (M3) to the torque shown in the table below only after confirming that the gasket is installed correctly.

Proper tightening torque [N·m]
0.54 to 0.66

the markings provided inside the terminal block.


Be sure to connect the wire with the push button pressed down.

Step 2. The diagram below shows the terminal block wiring.

less of the mounted valves.

All stations are provided with double wiring regard-

Connect each wire to the power supply side, according to

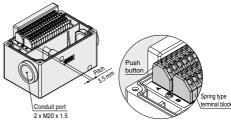

• Applicable wire range: Conductor diameter ø0.5 to ø1.2 mm, Stranded wire AWG24 to 16

#### **Electrical Wiring Specifications (IP67 compatible)**

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.


 When using a valve with no polarity, either positive common or negative common can be used.

Standard Wil	iiig			
	minal r	no. Po	larity	
SOL.a		(-)	(+)	
Station 1 ( SOL.b		(-)	(+)	
SOL.a		(-)	(+)	
Station 2 SOL.b		(-)	(+)	
SOL.a	ЗА	(-)	(+)	
Station 3 SOL.b	3B	(-)	(+)	
SOL.a	4A	(-)	(+)	
Station 4 SOL.b	4B	(-)	(+)	
Station 5	5A	(-)	(+)	
(+mnoozo		(-)	(+)	
Station 6	6A	(-)	(+)	
(+mnooro	6B	(-)	(+)	
Station 7 SOL.a	7A	(-)	(+)	
(+7777		(-)	(+)	
Station 8		(-)	(+)	
(+44440		(-)	(+)	
Station 9	9A	(-)	(+)	
(+mv0	9B	(-)	(+)	
Station 10 SOL.a	10/1	(-)	(+)	
		(-)	(+)	
Station 11		(-)	(+)	
(+mnoozo	110	(-)	(+)	
Station 12 SOL.a	, .	(-)	(+)	
SOL.a		(-)	(+)	
Station 13		(-)	(+)	
	13B	(-)	(+)	
Station 14	14A	(-)	(+)	
(+mm====0	14B	(-)	(+)	
	15A	(-)	(+)	
(+mn0	15B	(-)	(+)	
Station 16 SOL.a	16A	(-)	(+)	
oranon in (humanana	16B	(-)	(+)	
	сом.	(1)	( )	
	COM.	(.)	(-) (-)	
	JOIVI.	٠,	. ,	
			Negative common	
		COMMON	COMMON	

Standard wiring

#### Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

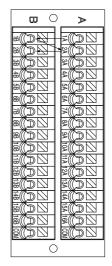





## Plug-in Connector Connecting Base


Terminal Block Box

## SY3000/5000/7000 Series

( E UK CRUS ROHS

How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type

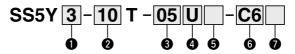

#### Series

11

	3	SY3000
	5	SY5000
	7	SY7000

<b>②</b> Ty	ре
10	Side ported

Bottom ported\*1

The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

#### 3 Valve stations

Symbol	Stations	Note		
02	2 stations			
:	- :	Double wiring*1		
10	10 stations			
02	2 stations	0 15 11 100		
:	- :	Specified layout*2		
20	20 stations	(Up to 20 solenoids available)		

- Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

#### 4 P, E port entry

	U	U side (2 to 10 stations)
	D	D side (2 to 10 stations)
B Both sides (2 to		Both sides (2 to 20 stations)


#### 5 SUP/EXH block assembly

Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- \* 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 6.

### **How to Order Manifold Assembly**

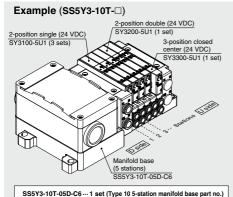

- \*SY3100-5U1----- 3 sets (2-position single part no.)
- \*SY3200-5U1----- 1 set (2-position double part no.)
- SY3300-5U1-----1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- . For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 463. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on

#### Mounting and Option

Symbol	Mounting	Option	
Symbol		Name plate	Station number
Nil	Direct mounting	_	_
AA		•	•
BA		•	_
D□	DIN rail mounting	_	_
A□		•	•
B□		•	_

- \* Enter the number of stations inside 

  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \* Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

Nil	Standard length	
0	Without DIN rail (with bracket)	
3	For 3 stations	Cassify a language will then the
:	:	Specify a longer rail than the total length of specified stations.
20	For 20 stations	lotar length of specified station

$\mathbf{v}$	Α,	Вþ	ort size	(Metri	c/One	-touch	ititting	g)							
Symbol		_	B port		10/Side										
Syllibul		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000							
C2		ø2		•	_	_	_	_							
C3			ø3.2	•	_	_	_	_							
C4	_		ø4	•	•	_	•	_							
C6	Straight		ø6	•	•	•	•	•							
C8	Stra		ø8	_	•	•	•	•	2						
C10	0,		ø10	_	_	•	_	•	O STEEL						
C12		ø12		_	_	•	_	•	-						
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•							
L4								ø4	•	•	_	_	_		
L6		2	ø6	•	•	•	_	_							
L8		Upward	ø8	_	•	•	_	_							
L10		Ď	ă	ă	ă	ח	5	5	ø10	_	_	•	_	_	
L12							ø12	_	_	•	_	_	S Jelsen		
<b>B</b> 4	Elbow*2	_	ø4	•	•	_	_	_							
<b>B6</b>	篇	Downward	nward	ø6	•	•	•	_	_						
B8	-			ا إ	ø8	_	•	•	_	_					
B10		á	ø10	_	_	•	_	_							
B12			ø12	_	_	•	_	_							
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_							
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12								


A, B	р	ort	size (Inc	:h/One	-toucl	n fittin	g)		
Combal		^	Donast	Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	ight		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	٠,		ø3/8"	_	_	•	_	•	o long
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_			
LN7		aro	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11		-	ø3/8"	_		•			A PROPERTY OF THE PARTY OF THE
BN3	∃lbow*2	5	ø5/32"	•	_	_	_	_	
BN7	즱	wa	ø1/4"	•	•	_	_	_	
BN9	_	Downward	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_		
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

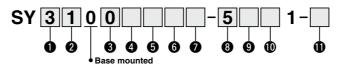

Standard (0.7 MPa)

Quick response type (0.7 MPa)

High pressure type (1.0 MPa)

Standard

## Series

3	SY3000
5	SY5000
7	SY7000

## 2 Type of actuation

1	2-position	Single						
2	z-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
<b>A</b> *1	4	N.C./N.C.						
B*1	4-position dual 3-port	N.O./N.O.						
C*1	uuai 3-poit	N.C./N.O.						

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Nil

В


**K**\*1

	Т	With	powe	r savir	ng circuit (	Continuo	us duty type)
*	Be su	re to	sele	ct the	power	saving	circuit

\*1 Only the metal seal type is available for the

- type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## Manual override

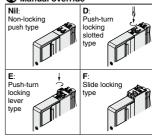

Refer to page 423 for the safety slide locking manual override.

## 3 Seal type

0	Rubber seal
1	Metal seal

## A pilot type

U FIII	ot type
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## Rated voltage

6 Pilot valve option

high pressure type.

Coil type

5	24 VDC
6	12 VDC

## Light/surge voltage suppressor and common specification

Syml	bol	With light	Surge voltage suppressor	Common specification		
Ni	l	I	_			
R		_		Non-polar		
U		•				
S		_		Positive		
Z		•	_	common		
NS	}	-		Negative common		
NZ	<u> </u>	•				

- \* For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Type of mounting screw

	• ,,	<b>j</b>
ı	Nil	Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y3-10T-<u>Stations</u> D C3, N1 (D) C6, N3 (D)

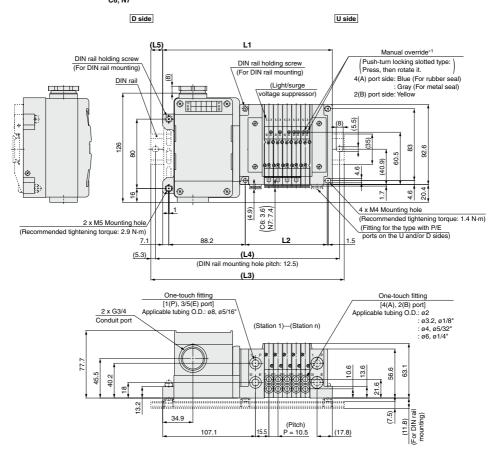

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10T-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16





Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations B - C6, N7 (D)

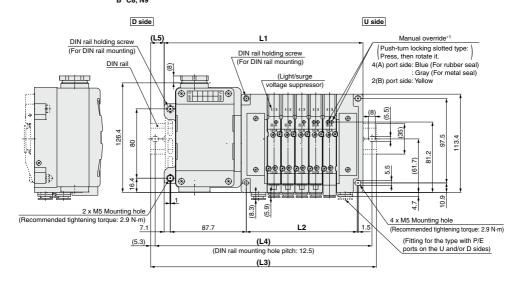

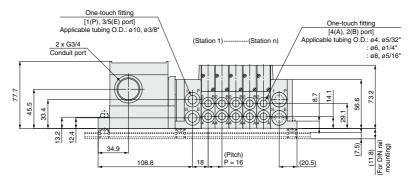

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10T-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5




Dimensions: SY7000 Series

Plug-in Connecting Base

Type 10/Side Ported
Terminal Block Box

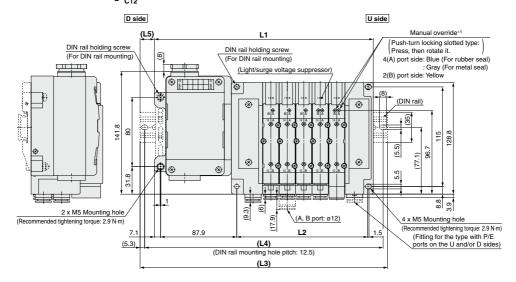

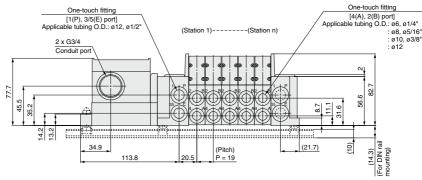

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10T-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18



# Plug-in Connector Connecting Base

Terminal Block Box

Type 12 Top Ported


# SY3000/5000/7000 Series

CE UK CRUS ROHS



## How to Order Manifolds

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.

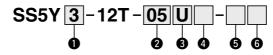

## Series

3	SY3000
5	SY5000
7	SY7000

A P F port entry

	• . , .	- po
	U*1	U side (2 to 10 stations)
	<b>D</b> *1	D side (2 to 10 stations)
	В	Both sides (2 to 20 stations)
	В	Both sides (2 to 20 stations)

\*1 4 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

## 2 Valve stations

Symbol	Stations	Note		
02	2 stations			
- i	1	Double wiring*1		
10	10 stations			
02	2 stations	0		
- i	1	Specified layout*2		
20	20 stations	(Up to 20 solenoids available)		

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

## 4 SUP/EXH block assembly

Nil	Internal pilot			
S	Internal pilot, Built-in silencer			
R	External pilot			


- \* The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

## P. E port size (One-touch fittings)

(One todon intingo)							
Symbol	SY3000	SY5000	SY7000				
Nil	ø8	ø10	ø12				
N	ø5/16"	ø3/8"	ø1/2"				

\* For N sizes are in inches

## How to Order Manifold Assembly

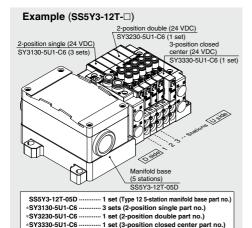

. For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.


## **A** Mounting

Wounting						
Nil		Direct mounting				
D	DIN rail mounting					
יט	(With DIN rail)					
D0	DIN rail mounting					
DU	(Without DIN rail)					
D3	For 3 stations	Specify a length longer				
- :	: than that of the standard					
D20	For 20 stations rail.					

\* Refer to page 708 for the fixation of DIN rail mounting type manifold.

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

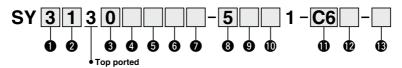

## Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	0	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
<b>A</b> *1	4 manition	N.C./N.C.			
B*1	4-position dual 3-port	N.O./N.O.			
C*1	duai 5-port	N.C./N.O.			

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

## A Pilot type

<u> </u>	ot type
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve (Built-in valve type)

(Dant in fairs typs)		
	Nil	None
	- 11	Duillé in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

## 6 Pilot valve option

<u> </u>	O i not valve option			
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)			

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
. D	and the second s

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## Rated voltage

5	24 VDC
6	12 VDC


## 9 Light/surge voltage suppressor and common specification

	Symbol	With light	suppressor	specification
	Nil	_	_	
	R	1		Non-polar
	U	•		
Ī	S	_	•	Positive
	Z	•	_	common
	NS	_		Negative
	NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details.

  \* Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

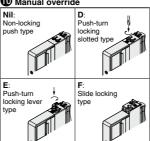

Refer to page 423 for the safety slide locking manual override.

## A, B port size

#### Thread piping

Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000	
C2 C3	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4	ø4	•	•	_	
C4 C6 C8	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

#### One-touch fitting (Inch)

One-t	ouch numy	(111611)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•		_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## Type of mounting screw


		<b>J</b>
	Nil	Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Drop prevention type)
Ì	Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

#### **Terminal Block Connection**


#### Step 1. Remove the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

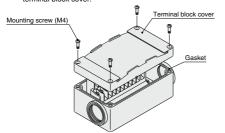

# Step 2. The diagram below shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

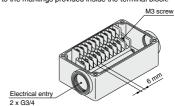

#### Step 3. Mount the terminal block cover


Securely tighten the screws to the torque shown in the table below only after confirming that the gasket is installed correctly.

Proper tightening torque [N·m]

0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

## **Electrical Wiring Specifications (IP67 compatible)**

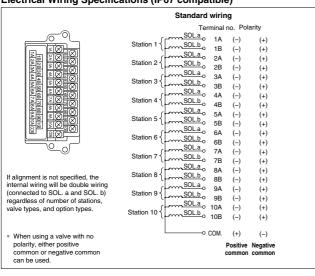

## Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

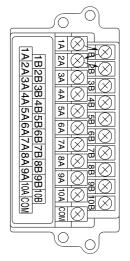





# Plug-in Connector Connecting Base

Lead Wire

# SY3000/5000/7000 Series

CE UK CRUS ROHS

Double wiring\*1


Specified layout\*2

(Up to 8 solenoids

available)

## How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type

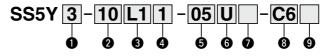

#### Series SY3000 SY5000 SY7000

#### Number of cores (Lead wire) 34 cores 17 cores 1.3 9 cores

2 Type Side ported Bottom ported\*1

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold (from page 574).

Lead wire length		
1	0.6 m	
2	1.5 m	
3	3 m	


## Valve stations

(L1	⊐)		(L3	(ا∟
Symbol	Stations   Note   Symbol Stations   2 stations   Double wiring*1   : : : : : : : : : : : : : :   04   4 stations	Stations		
02	2 stations		02	2 stations
:	- :	Double wiring*1	:	- :
16 16 stations			04	4 stations
02 2 stations		Specified layout*2	02	2 stations
:	- :	(Up to 32 solenoids	:	- :
24 24 stations		available)	08	8 stations

(L2	□)	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
1	:	(Up to 16 solenoids
16	16 stations	available)
. =		

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

## **How to Order Manifold Assembly**

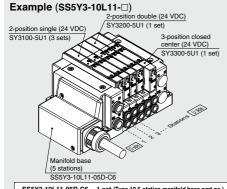

SS5Y3-10L11-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1 ...... 3 sets (2-position single part no.) \*SY3200-5U1 ...... 1 set (2-position double part no.)

\*SY3300-5U1------ 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

. For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too

complicated, specify the details on a manifold specification sheet.

When mixing top-ported configurations, select from those listed on page 473. In such cases, use caution as there is also output on the A and B ports on the base side Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

## A P F port entry

P, E port entry					
U	U side (2 to 10 stations)				
D	D side (2 to 10 stations)				
В	Both sides (2 to 24 stations)				

## SUP/EXH block assembly

SUP/EARI BIOCK assembly					
Nil	Internal pilot				
S	Internal pilot, Built-in silencer				
R	External pilot				

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

<u> </u>	Α, Ι	Βp	ort size	(Metri	c/One	-touch	fitting	3)														
Symbol	A P port		Type 10/Side ported																			
Syllibul		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000														
C2			ø2	•	_	_	_	_														
СЗ			ø3.2	•	_	_	_	_														
C4	١		ø4	•	•	_	•	_														
C6	ight		ø6	•	•	•	•	•														
C8	Straight		ø8	_	•	•	•	•	2													
C10	0,		ø10	_	_	•	_	•	O THE STATE OF													
C12			ø12	_	_	•	_	•	40													
CM*1		Straight port, mixed sizes		•	•	•	•	•														
L4			ø4	•	•	_	_	_														
L6		힏	ø6	•	•	•	_	_														
L8		Upward	wa	wa	wa	wa	wa	wa	wa	wa	wa	wa	wa	wa	wa	ø8	_	•	•	_	_	
L10			ø10	_	_	•	_	_														
L12	١		ø12	_	_	•	_	_	Seigna .													
В4	W.		ø4	•	•	_	_	_														
B6	Elbow*2	ard	ard	Downward	ard	ard	ard	ard	ø6	•	•	•	_	_								
B8		Š	ø8	_	•	•	_	_														
B10		Ó	ø10	_	_	•	_	_														
B12		_	ø12	_	_	•	_	_														
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_																

,_	Ρ,	٠	0120 (1110	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	, touo.		9/		
C L . I	A D		Type 10/Side ported		Type 11/Bo	ttom ported			
Symbol	A, B port			SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	١	Г	ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	0,	Г	ø3/8"	_	_	•	_	•	a language
CM*1		Straight port, mixed sizes		•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9	\$ -	ఠ	ø5/16"	_	•	_	_	_	
LN11		-	ø3/8"	_		•	—	_	
BN3		5	ø5/32"	•	_	_	_	_	
BN7	Elbow*	nward	ø1/4"	•	•	_	_	_	
DNIO	۳.	ıξi	= (4.01)		_				

•

A, B port size (Inch/One-touch fitting)

ø5/16" ø3/8" ø1/2" ø3/8" ø1/2" (One-touch fittings)

\*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

BN9

BN11

LM<sup>®</sup>

ø5/16'

ø3/8' Elbow port, mixed size

(Including upward and downward piping) P, E port size

\*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

## Mounting and Option

ø8 ø10 ø12 ø10 ø12

P, E port size

(One-touch fittings)


O INIO	wounting and Option							
0	Manuation	Option		1	DIN Rai	l Option		
Symbol	Mounting	Name plate	Station number	11	Nil		Standard length	
Nil	Direct mounting	_	_	11	0	Withou	it DIN rail (with bracket)	
AA		•	•	11	3	For 3 stations	Specify a longer rail than	
BA		•	_	1	1	:	total length of specified	
D□	DIN rail mounting	_	_	11	24	For 24 stations	stations.	
A□		•	•	1				
R□		•	_	1				

- Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type.
   Refer to page 708 for the fixation of DIN rail mounting type manifold.



## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

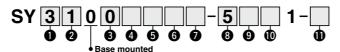

#### Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single
2	z-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## 3 Seal type

0	Rubber seal
1	Metal seal

## Pilot type

Nil	Internal pilot
R	External pilot
140	

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in
* Only t	ha rubbar agal tupa ia available. A

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

	or raire option
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

## Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
_	

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage

5	24 VDC
6	12 VDC


## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	-	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details.

  \* Only "Z" and "NZ" types are available with a power saving circuit.

## Manual override

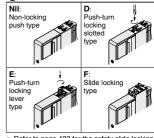

 Refer to page 423 for the safety slide locking manual override.

## Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- mounting screw part numbers.


  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported
Lead Wire

 $SS5Y3-10L_{\stackrel{1}{3}}^{\stackrel{1}{2}}\square\text{-}\underbrace{Stations}^{\stackrel{U}{3}}\mathop{\stackrel{C2}{\underset{C6,\ N7}{\text{N3}}}}^{\stackrel{C2}{,}}_{N3}(\textbf{D})$ 

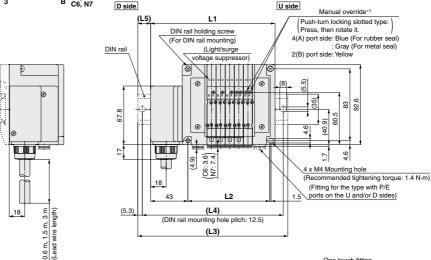

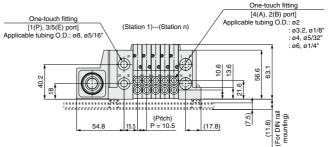

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10L1□-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15




Dimensions: **SY5000** Series

Plug-in Connector Connecting Base Type 10/Side Ported
Lead Wire

SS5Y5-10L<sub>2</sub> - Stations D-C6, N7 (D)

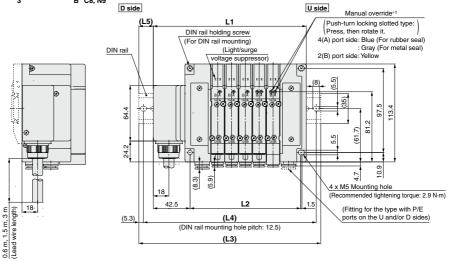

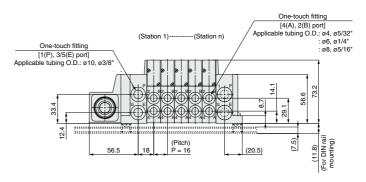

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10L1□-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15

Dimensions: SY7000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported Lead Wire

SS5Y7-10L<sub>2</sub><sup>1</sup> - <u>Stations</u> D - C8, N7 D - C8, N9 D - C8, N9 D - C10, N11 (D)

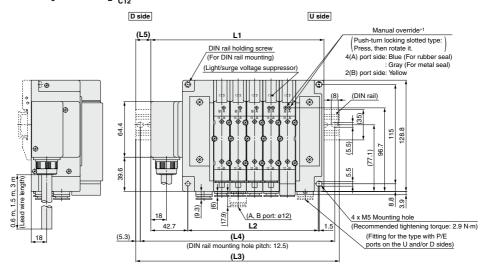

(Station 1)-----(Station n)

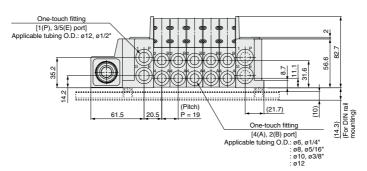

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10L1□-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



# Plug-in Connector Connecting Base

Lead Wire


Type 12

# SY3000/5000/7000 Series

CE UK CRUS ROHS



## How to Order Manifolds

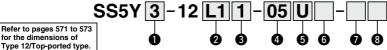

## Series

3	SY3000
5	SY5000
7	SY7000

## 2 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

3 Lea	ad wire length
1	0.6 m
2	1.5 m

## P, E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

## How to Order Manifold Assembly

## Example (SS5Y3-12L11 ) 2-position double (24 VDC) SY3230-5U1-C6 (1 set) 2-position single (24 VDC) 3-position closed SY3130-5U1-C6 (3 sets center (24 VDC) SY3330-5U1-C6 (1 set) Manifold hase (5 stations) SS5Y3-12L11-05D

SS5Y3-12L11-05D ... 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.) \*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

. For the valve arrangement, the valve closest to the D side is considered the 1st station . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## Valve stations

(L1	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:		Double wiring*1	-	:	Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	:	(Up to 32 solenoids	:	:	(Up to 8 solenoids
24	24 stations	available)	08	8 stations	available)

	E I GIGINATIO	,				
(L2	(L2□)					
Symbol	Stations	Note				
02	2 stations					
- I	:	Double wiring*1				
08	8 stations					
02	2 stations	Specified layout*2				
- I	- :	(Up to 16 solenoids				
16	16 stations	available)				

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

#### 6 SUP/EXH block assembly Nil Internal pilot Internal pilot, Built-in silencer External pilot

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

## P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

\* For N sizes are in inches


#### Mounting

Wounting			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations   Specify a length longer		
:	: than that of the standard		
D24	For 24 stations	rail.	

\* Refer to page 708 for the fixation of DIN rail mounting type manifold.

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

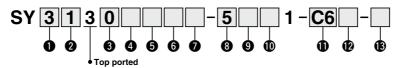

#### Series

3	SY3000
5	SY5000
7	SY7000

## Type of actuation

1	O manition	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

Nil	Internal pilot
R	External pilot
* Mhon	colocting the external pilot enceification

for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Built-in valve type)

(Duilt-iii vaive type)		
Nil	None	
н	Built-in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

Nil	Standard (0.7 MPa)	
B Quick response type (0.7 N		
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
. Da a	re to coloct the newser continue circuit

- type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## Rated voltage


5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_	1	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details. Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

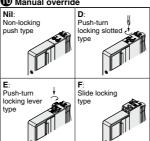

Refer to page 423 for the safety slide locking manual override

## A. B port size

#### Thread piping

Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2 C3	ø2	•	_	_
	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-t	ouch many			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

## 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## Type of mounting screw

Type of illounting screw			
Nil Round head combination screw			
В	Hexagon socket head cap screw		
K	Round head combination screw (Drop prevention type)		
н	Havagan cocket head can screw (Drop prevention type)		

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and
- mounting screw part numbers.


  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.





## **Electrical Wiring Specifications**

## Lead wire

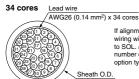

If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

Sheath O.D. Approx. ø8.8

			Lead	Printed n	
	Lead wire no.	Polarity	wire	(Both sid	_
	SOL.a 1 (	•	COIOI	Type	Color
Station 1	l sorr ' '	-) (+)	Orange	_	Red
Ć.	0010 (	-) (+)			Black
Station 2	001 5 0 (	-) (+)	Light	_	Red
	0010 '	-) (+)	gray		Black
Station 3	l solk (	-) (+)	White	_	Red
Cidatori C	SOL 2 '	-) (+)			Black
Station 4	601 6	-) (+)	Yellow	_	Red
Oldion 4	SOL.b 8 (	-) (+)	1011011		Black
Station 5	SOL.a 9 (	-) (+)	Pink	_	Red
Station 5	SOL.b 10 (	-) (+)			Black
Station 6	SOL.a 11 (	-) (+)	Orange		Red
Station 6	SOL.b 12 (	-) (+)	Clarige		Black
Station 7	SOL.a 13 (	-) (+)	Light		Red
Station / 7	SOL.b 14 (	-) (+)	gray		Black
a a f	SOL.a o 15 (	-) (+)	White		Red
Station 8 {	SOL.b 16 (	-) (+)	vvnite		Black
Station 9	SOL.a 0 17 (	-) (+)			Red
Station 9 {	SOL.b 0 18 (	-) (+)	Yellow		Black
r		-) (+)			Red
Station 10 {	SOL.b 20 (	-) (+)	Pink		Black
r.	SOL.a 21 (	-) (+)			Red
Station 11 {	SOL.b 22 (	-) (+)	Orange		Black
r	SOL.a 23 (	-) (+)	Light		Red
Station 12 {	SOL.b 24 (	-) (+)	gray		Black
r.	SOL.a	-) (+)			Red
Station 13 {	SOL.b	-) (+)	White		Black
r.	SOL.a	-) (+)			Red
Station 14	SOL.b 28 (	-) (+)	Yellow		Black
	SOL.a	-) (+)			Red
Station 15		-) (+)	Pink		Black
i c	SOL.a 31 (	-) (+)			Red
Station 16		-) (+)	Orange		Black
	COM.	+) (-)	Links		Red
	COM	+) (-)	Light gray		Black
1	-0 34 (	·, (-)	g.u,	1	DIGUN

#### Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

\* Cannot be used for movable wiring The minimum bending radius of the cable is 55 mm.


\* For negative common specification, a valve for negative common or a valve without polarity should be used.

## **Specified Layout**

Positive Negative common common

A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.



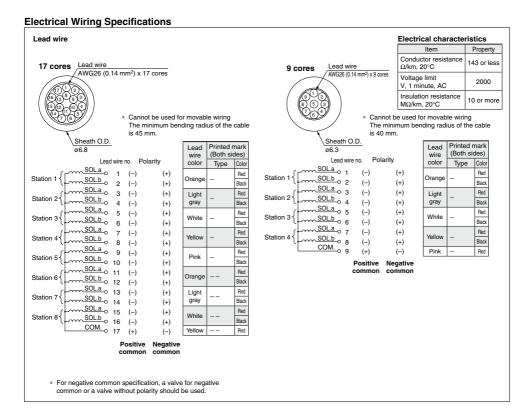

Type 10 **Type 11 Bottom Ported** 

# Plug-in Connector Connecting Base


**Circular Connector** 

# SY3000/5000/7000 Series

CE UK CRUS ROHS

How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type

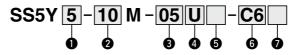

## Series

• • • • • • • • • • • • • • • • • • • •	
3	SY3000
5	SY5000
7	SY7000

## **A** Type

<b>●</b> 1)po		
10	Side ported	
11	Bottom ported*1	

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page

## 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
12	12 stations	
02	2 stations	0
:	:	Specified layout*2
24	24 stations	(Up to 24 solenoids available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

## P. E port entry

• · , = p · · · · · · · · ·	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

## 5 SUP/EXH block assembly


Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 6.



## **How to Order Manifold Assembly**

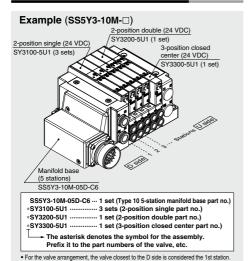

becomes too complicated, specify the details on a manifold specification sheet. When mixing top-ported configurations, select from those listed on page 483 In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement

## Mounting and Option

0		Option		
Symbol	Mounting	Name plate	Station number	
Nil	Direct	_	_	
AA	mounting	•	•	
BA		•	_	
D□	DIN well	_	_	
A□	DIN rail mounting	•	•	
B□	mounting	•	_	

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### DIN Ball Ontion

	DIN Rail Option					
	Nil	Standard length				
	0	Without DIN rail (with bracket)				
	3	For 3 stations	Consifer a language wail than the			
	:	:	Specify a longer rail than the total length of specified stations.			
	24	For 24 stations	total lerigiti of specified stations.			





<b>U</b>	Α,	Вρ	ort size	(Metri	c/One	-touch	fitting	g)	
Symbol	nbol A, B port		R nort		10/Side				
′			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_	
C6	igh		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	2 4 10
C10	"		ø10	_	_	•	_	•	O STEEL
C12			ø12	_	_	•	_	•	
CM*1	1	Straig	ht port, mixed sizes	•	•	•	•	•	
L4		rd	ø4	•	•	_	_	_	
L6			ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	S Selfer
<b>B</b> 4	Elbow*2	_	ø4	•	•	_	_	_	
<b>B6</b>	篇	aro	ø6	•	•	•	_	_	
B8	-	Downward	ø8	_	•	•	_	_	
B10			ø10	_	_	•	_	_	
B12	!		ø12	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B	р	ort	size (Inc	_			_		1	
Symbol		Α,	B port				Type 11/Bo			
				SY3000	SY5000	SY/000	SY5000	SY/000	DOM:	
N1			ø1/8"	•	_	_	_	_		
N3	_		ø5/32"	•	•	_	•	_		
N7	ight		ø1/4"	•	•	•	•	•		
N9	Strai		ø5/16"	_	•	•	•	•		
N11	٠,		ø3/8"	_	_	•	_	•	e 1885	
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_			
LN7		/ard	ø1/4"	•	•	_	_	_		
LN9	_	Upward	ø5/16"	_	•	_	_	_		
LN11			Ľ	ø3/8"	_	_	•	_	_	G G G G G G G G G G G G G G G G G G G
BN3	∃lbow*2	5	ø5/32"	•	_	_	_	_		
BN7	즱	wa	ø1/4"	•	•	_	_	_		
BN9		_	Downward	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_		
LM*1	(Inc		w port, mixed sizes uding upward and ownward piping)	•	•	•	_	_		
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		




<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

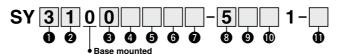

## Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0	Single
2	2-position	Double
3		Closed center
4 5	3-position	Exhaust center
		Pressure center
<b>A</b> *1	4 manitian	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

## Pilot type

l	Nil	Internal pilot
ſ	R	External pilot
360	When	selecting the external pilot specification

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

•			
Nil	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
* Re su	re to select the nower saving circuit

- type if the valve is to be continuously energized for long periods of time.

  \* Be careful of the energizing time when the
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## 8 Rated voltage

5	24 VDC
6	12 VDC


### Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Common specification
	Nil	1	_	
	R U	_		Non-polar
		•		
	S	_	1	Positive
	Z	•	_	common
	NS NZ	_		Negative
		•		common

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details.

  \* Only "Z" and "NZ" types are available with a power saving circuit.

## Manual override

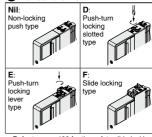

 Refer to page 423 for the safety slide locking manual override.

## Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- valve is removed for maintenance, etc.

  When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 61 i for base gasket and mounting screw part numbers.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Dimensions: SY3000 Series

Plug-in Connecting Base

Type 10/Side Ported
Circular Connector

SS5Y3-10M-<u>Stations</u> D C2 N1 (D)

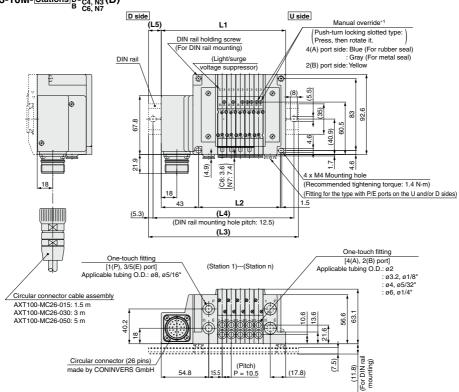

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10M-05D-C6."
- Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15
								•		•	•	•	•	•	•	•		•	•				

Dimensions: SY5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

Circular Connector

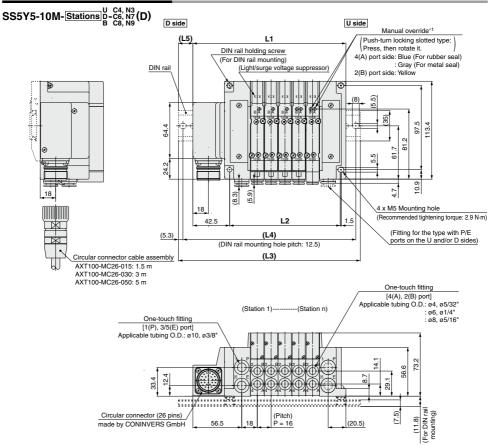

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10M-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15
									•	•		•	•	•	•					•	•	•	

Dimensions: SY7000 Series

Plug-in Connecting Base

Type 10/Side Ported
Circular Connector

SS5Y7-10M-<u>Stations</u> D - C6, N7 C10, N91 (D)

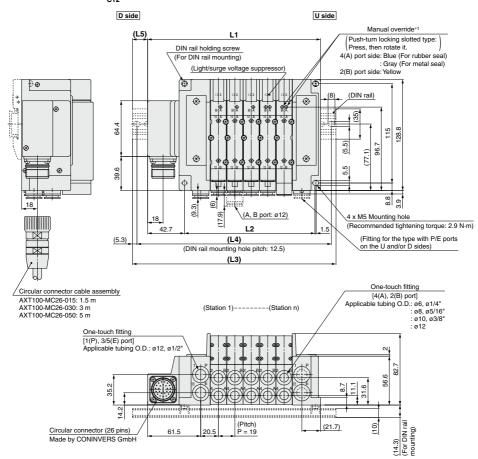

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10M-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



# Plug-in Connector Connecting Base

Circular Connector


Type 12 Top Ported

# SY3000/5000/7000 Series

CE UK CRUS ROHS



## How to Order Manifolds

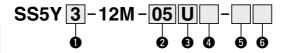

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.

-	1100
3	SY3000
5	SY5000
7	SY7000

## Valve stations

_	• 4. • •	otationo
Symbol	Stations	Note
02	2 stations	
:	;	Double wiring*1
12	12 stations	
02	2 stations	0
÷	;	Specified layout*2
24	24 stations	(Up to 24 solenoids available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

## A P E port entry

• ,	- port oriting
U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


\*1 4 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

## SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \* The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

## **How to Order Manifold Assembly**

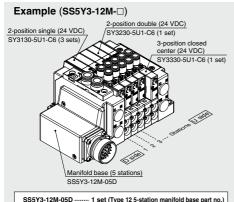

\*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

\*SY3330-5U1-C6 ....... 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

. For the valve arrangement, the valve closest to the D side is considered the 1st station.

. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## P. E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

\* For N, sizes are in inches


## 6 Mounting

•	unung									
Nil	Direct mounting									
D		IN rail mounting (With DIN rail)								
D0		IN rail mounting Vithout DIN rail)								
D3	For 3 stations	Specify a length longer								
		than that of the standard								
D24	For 24 stations	For 24 stations rail.								

\* Refer to page 708 for the fixation of DIN rail mounting type manifold.

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

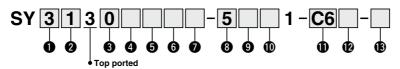

## A Sarias

• • •	100
3	SY3000
5	SY5000
7	SY7000

## Type of actuation

1	O manitian	Single	
2	2-position	Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

\*1 Only the rubber seal is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

## A Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

## Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
_	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## Rated voltage


5	24 VDC
6	12 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_	•	Positive	
Z	•		common	
NS	1		Negative	
NZ	•		common	

- \* For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details.
  Only "Z" and "NZ" types are available with a power saving circuit.

## Manual override

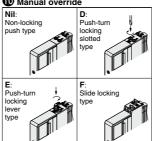

Refer to page 423 for the safety slide locking manual override

**SMC** 

## (ID) A. B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10 C12	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

one readin maning (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## Type of mounting screw

	• ,,	<b>3</b>
	Nil	Round head combination screw
B Hexagon socket hear		Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




483 A



## **Electrical Wiring Specifications**



If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.

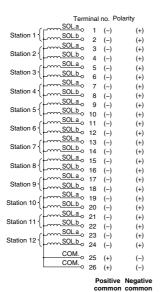


 When using a valve with no polarity, either positive common or negative common can be used.

## **Specified Layout**

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

## Cable Assembly

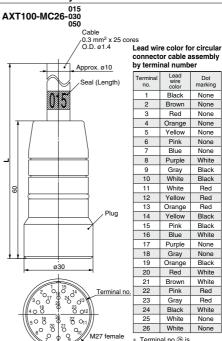

## Electrical characteristics

lar con	nector cable assembly	Conductor resistance Ω/km, 20°C	65 or less
ble	Assembly part no.	Voltage limit V. 1 minute, AC	1000
gth (L)	26 pins	V, I Illillule, AC	
.5 m	AXT100-MC26-015	Insulation	5 or
3 m	AXT100-MC26-030	resistance MΩ/km, 20°C	more
5 m	AXT100-MC26-050	W152/KITI, 20 C	

thread

\* Cannot be used for movable wiring

Circu Cal

 Lengths other than the above is also available. Please contact SMC for details. The minimum bending radius of the circular connector cable is 20

connected to 25 inside the

connector.

Type 10 Type 11

Bottom Ported

## Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)


# SY3000/5000/7000 Series

CE UK CRUS ROHS



## How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

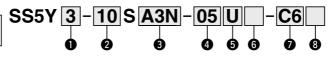

## Series

3	SY3000
5	SY5000
7	SY7000

\* For mixed mounting, refer to page 574 and later.

2 Туре		ре
	10	Side ported
	11	Bottom ported*1

- \*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering. refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).
- \* When mixing top-ported configurations, select from those listed on page 499. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

## SI unit (Number of outputs, Output polarity, Max. number of valve stations)

Without SI unit						
	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2					


- \*1 16 outputs can be set by switching the built-in setting switch.
- \*2 Ensure a match with the common specification of the valve
- \*3 ( ): Maximum number of stations for mixed single and double wiring
- \*4 When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

## 4 Valve stations

		Stations	Note
	02	2 stations	
ſ	:		Double wiring*1
ſ	16	16 stations	
	02	2 stations	Considered Involve?
:	:		Specified layout*2 (Up to 32 solenoids available)
	24	24 stations	(Op to 52 sole loids available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \* This also includes the number of the blanking plate assembly.

## How to Order Manifold Assembly

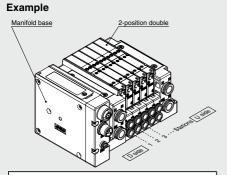

SS5Y3-10SA3N-05D-C6---1 set (Manifold base part number) \* SY3200-5U1... ......5 sets (2-position double part number)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered
- Under the manifold base part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## P. E port entry

	_ p =
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

## 6 SUP/EXH block assembly

Internal pilot
Internal pilot, Built-in silencer*1*2
External pilot

- \*1 3/5(E) port is plugged for the built-in silencer type.
- \*2 When built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 597. Please download the Operation Manual via the SMC website, https://www.smcworld.com



A, B port size (Metric/One-touch fitting)

	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
		A, b port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	St.		ø8	_	•	•	•	•	
C10	) ,		ø10	_	_	•	_	•	SHEETS I
C12			ø12	_	_	•	_	•	4
CM*1		Mi	xed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6	L8	ø6	•	•	•	_	_		
L8		wa	ø8	_	•	•	_	_	
L10		ø10	_	_	•	_	_		
L12	l		ø12	_	_	•	_	_	Jeise I
B4	Elbow*2		ø4	•	•	_	_	_	
<b>B6</b>	i i i	ard	ø6	•	•	•	_	_	
B8	"	Downward	ø8	_	•	•	_	_	
B10		0	ø10	_	_	•	_	_	
B12			ø12	_	-	•	-	-	
LM*1		Mi	xed sizes	•	•	•	_	_	
		L	E port*3	ø8	ø10	ø12	ø10	ø12	

A, B port size (Inch/One-touch fitting)

	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported			
		Α,	в роп	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•				_		
N3			ø5/32"	•	•	_	•	_		
N7	ig		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	I —	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	o Basses	
CM*1		Mi	ixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	l –					
LN7		Upward	ø1/4"	•	•	_	_	_		
LN9		[축	ø5/16"	_	•	_	_	_		
LN11	١	-	ø3/8"			•		_	G G G G G G G G G G G G G G G G G G G	
BN3	Elbo	5	ø5/32"	•	_	_	_	_		
BN7		Elbc	Wa	ø1/4"	•	•	_	_	_	
BN9			_	Downward	ø5/16"	_	•	_	_	_
BN11		△	ø3/8"	_	_	•	_	_		
LM*1		Mi	ixed sizes	•	•	•	_	_		
		Р, Е	E port*3	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

- \*1 Indicate the sizes on the manifold specification sheet.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).
- \*3 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

## **8** Mounting and Option

	Mauntina	Option		
	Mounting	Name plate	Station number	
Nil	Discort	_	_	
AA	Direct mounting	•	•	
BA	mounting	•		
<b>D</b> □*1		_	_	
<b>A</b> □*1	DIN rail mounting	•	•	
<b>B</b> □*1		•	_	

- \*1 Refer to "DIN Rail Option" below.
- \* Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**

Dirt rian Option						
Nil	With DIN bracket, DIN rail with standard length					
0	With DIN bracket, without DIN rail					
<b>3</b> *1	With DIN bracket, DIN rail for 3 stations					
	:					
24*1	With DIN bracket, DIN rail for 24 stations					


- \*1 Specify a longer rail than the length of valve stations.
- If the DIN rail must be mounted without an SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length.
- Refer to page 616 for the DIN rail part number.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.





## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

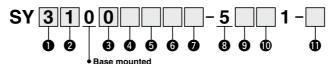

## 1 Series

3	SY3000
5	SY5000
7	SY7000

## 2 Type of actuation

1	O manitian	Single				
2	2-position	Double				
3	3-position	Closed center				
4		Exhaust center				
5		Pressure center				
<b>A</b> *1	4 position dual	N.C./N.C.				
B*1	4-position dual 3-port valve	N.O./N.O.				
C*1	3-port vaive	N.C./N.O.				

\*1 Select the rubber seal type for the 4-position dual 3-port valve.

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)


\*1 Select the metal seal type for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)*1*2

- \*1 Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \*2 Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 705.

## Manual override

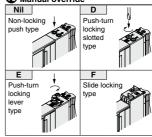

 Refer to page 423 for the safety slide locking manual override.

## 3 Seal type

0	Rubber seal
1	Metal seal

## 4 Pilot type

•	or type	
Nil	Internal	pilot
R	External	pilot

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve

1	Nil	None
ı	H*1	Built-in

- \*1 Select the rubber seal type when the back pressure check valve is built-in. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* Select "Nil" for the 3-position type or the SY7000.

## 8 Rated voltage

5	24 VDC

# 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•	1	Non-polar		
NS	_	•	Negative		
NZ	•		common		

Select "NZ" for models with a power saving circuit.

Type of mounting screw

• ',	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)*1
н	Hexagon socket head cap screw (Drop prevention type)*1

- \*1 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- mounting screw part numbers.


  \* Select "Nii" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

SS5Y3-10SA3N-Stations D-C3, N1 (D)

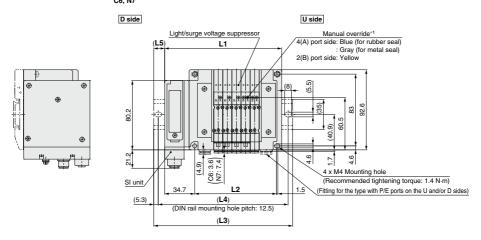

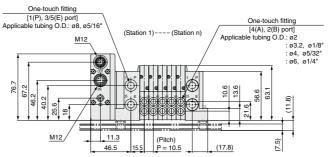

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10SA3N-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.

L: Dimensions n: Statio												: Stations			
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5


L n	17	18	19	20	21	22	23	24
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	220.5	231	241.5	252	262.5	273	283.5	294
L3	285.5	298	310.5	323	335.5	348	348	360.5
L4	275	287.5	300	312.5	325	337.5	337.5	350
L5	12	13	14	15	16	17	12	13


Dimensions: SY5000 Series


Plug-in Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

SS5Y5-10SA3N-Stations D-C6, N7 (D)

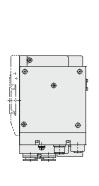

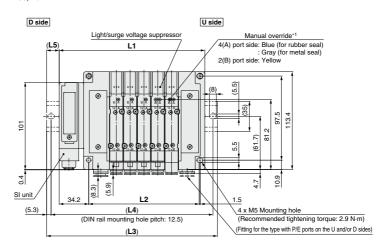

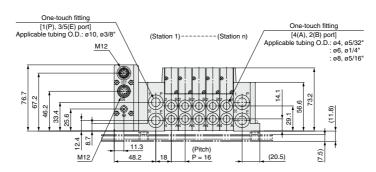

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10SA3N-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.

L: I	Jime	nsions	5												1	n: Stations	
_	√ n	2	3	1	5	6	7	B	<b>a</b>	10	11	12	13	1/1	15	16	

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14

L	17	18	19	20	21	22	23	24
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	320	336	352	368	384	400	416	432
L3	385.5	410.5	423	435.5	448	473	485.5	498
L4	375	400	412.5	425	437.5	462.5	475	487.5
L5	12.5	17	15	13.5	11.5	16	14.5	12.5

Dimensions: SY7000 Series


Plug-in
Connector Connecting Base


Type 10/Side Ported EX500 (128 Points)

SS5Y7-10SA3N-<u>Stations</u> D C6, N7 C8, N9 C10, N11 (D)

Ø

₽⊗

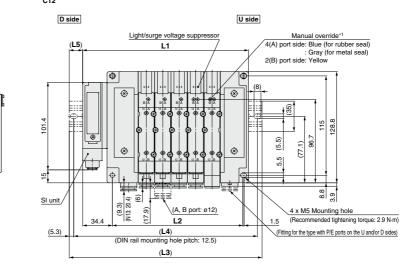

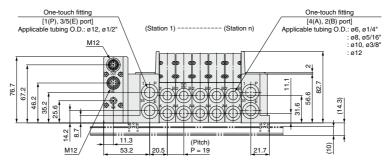

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10SA3N-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

L: Dim	: <b>Dimensions</b> n: Stations														
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

L	17	18	19	20	21	22	23	24
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	379	398	417	436	455	474	493	512
L3	448	473	485.5	510.5	523	548	560.5	585.5
L4	437.5	462.5	475	500	512.5	537.5	550	575
L5	14	17	14	17	13.5	16.5	13.5	16.5

# Plug-in Connector Connecting Base

EX500 Gateway Decentralized System 2 (128 Points)


# Type 12 Top Ported

# SY3000/5000/7000 Series

CE UK CRUS ROHS



## How to Order Manifolds

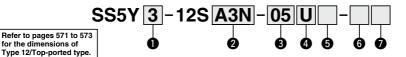

## Series

<b>3</b> SY3
<b>5</b> SY5
<b>7</b> SY7

\* For mixed mounting, refer to page 574 and

## SI unit (Number of outputs, Output polarity, Max. number of valve stations)

0 Without SI unit				
	32 outputs*1*4, 2 to 16 stations (24 stations*3), Negative common*2			

- \*1 16 outputs can be set by switching the built-in setting switch.
- \*2 Ensure a match with the common specification of the valve
- \*3 ( ): Maximum number of stations for mixed single and double wiring
- \*4 When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

## Valve stations

	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 52 solellolds available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

## P. E port entry

U*1	U side (2 to 10 stations)
D*1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


\*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P. E port entry.

## SUP/FXH block assembly

Nil	Internal pilot
S*1	Internal pilot, Built-in silencer*2
R	External pilot

- \*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- \*2 When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

## How to Order Manifold Assembly

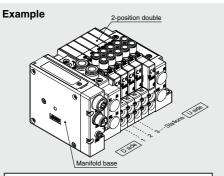

SS5Y3-12SA3N-05D ......1 set (Manifold base part number) \* SY3230-5U1-C6 .....5 sets (2-position double part number)

- The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold base part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## A P F nort size (One-touch fittings)

• ,	o i , E port size (One-touch intings)								
	SY3000	SY5000	SY7000						
Nil	ø8	ø10	ø12						
<b>N</b> *1	ø5/16"	ø3/8"	ø1/2"	ML					
		· · ·							

1 For N, sizes are in inches

## Mounting 1

Nil	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3*1	With DIN bracket, DIN rail for 3 stations
:	
D24*1	With DIN bracket, DIN rail for 24 stations


- \*1 Specify a longer rail than the length of valve stations.
- If the DIN rail must be mounted without an SI unit, select "D0." Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 616 for the DIN rail part number.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.
- \* A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 597. Please download the Operation Manual via the SMC website, https://www.smcworld.com

# Eligen Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

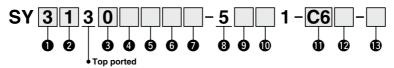

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

O manitian	Single		
z-position	Double		
	Closed center		
3-position	Exhaust center		
	Pressure center		
4-position dual 3-port valve	N.C./N.C.		
	N.O./N.O.		
	N.C./N.O.		
	4-position dual		

\*1 Select the rubber seal type for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal	
1	Metal seal	

#### A Pilot type

Nil

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Built-in valve type)

H*1		Built-in
	*1 Sele	ct the rubber seal type when the back
	press	sure check valve is built-in. A manifold
	insta	lled type is available if a back pressure

None

- check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- Select "Nil" for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Select the metal seal type for the high pressure type.

#### Coil type

• • •	ii typo
Nil	Standard
Т	With power saving circuit (Continuous duty type)*1*2

- \*1 Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \*2 Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification	
R	_		Non nolos	
U	•	•	Non-polar	
NS	-		Negative	
NZ	•		common	

\* Select "NZ" for models with a power saving circuit.

#### Manual override

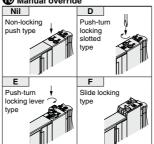

Refer to page 423 for the safety slide locking manual override

#### A, B port size

#### Thread piping

	Port size	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	_	•	_
02	1/4	_	_	•

#### One-touch fitting (Metric)

	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C2 C3 C4 C6	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12		_	•

#### One-touch fitting (Inch)

	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	I -	•	•	
N11	ø3/8"	_	_	•	

#### A, B port thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Select "Nil" for M5.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
К	Round head combination screw (Drop prevention type*1)
н	Hexagon socket head cap screw (Drop prevention type*1)

- \*1 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly or interface regulator.










RoHS

# SY3000/5000/7000 Series

#### **How to Order Manifolds**

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

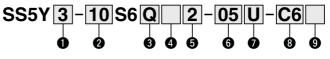

#### Series

3	SY3000
5	SY5000
7	SY7000

#### **2** Туре

10	Side ported
11	Bottom ported*1

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

#### 3 SI unit

O or unit						
0	Without SI unit					
Q	DeviceNet®					
N PROFIBUS DP						
V CC-Link						
EA	EtherNet/IP™					
EB	EtherNet/IP™ (IO-Link unit)					
DA	EtherCAT (IO-Link unit)					
F	PROFINET					
FA	PROFINET (IO-Link unit)					
WE	EtherNet/IP™ compatible wireless base*1					
WF	PROFINET compatible wireless base*1					
WS Wireless remote*1						
*1 The wireless system is suitable for use only						

- in a country where it is in accordance with the Radio Act and regulations of that country. \* I/O unit cannot be mounted without SI unit.
- Volve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalog.

#### 6 I/O unit stations

Nil	None
1	1 station
:	:
9	9 stations

- \* When not selecting an SI unit, the symbol will be "nil."
- SI unit is not included in I/O unit stations.
   When I/O unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 6 Valve stations

Symbol	Stations	Note							
02	2 stations								
:	:	Double wiring*1							
16	16 stations								
02	2 stations	0							
:	:	Specified layout*2 (Up to 32 solenoids available)							
24	24 stations	(Op to 32 soleriolds available)							

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout. \*2 Specified layout indicate the wiring.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

#### Mounting and Option

Symbol	Mounting	Option				
	wounting	Name plate	Station number			
Nil	Di	_	_			
AA	Direct mounting	•	•			
BA	mounting	•	_			
D□	DIN!!	_	_			
A□	DIN rail mounting	•	•			
B□	mounting	•				

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

	DIN Hall Option										
	Nil		Standard length								
ſ	0	Wi	Without DIN rail (with bracket)								
	3	For 3 statio	ns	ns Consider a long on the land							
	:			Specify a longer rail than the total length of specified stations							
[	24	For 24 statio	ons	lotal lerigi	11 01 8	ppe	Cillec	ı Sıa	lions.		
						-					

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)

4 SI unit output polarity, end plate type

Si unit output polarity, end plate type								
	M12 power supply	7/8 inch power supply	M12 power supply connector IN/OUT, A-coded					
SI unit output polarity	connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)				
Without SI unit	Nil							
SI unit positive common	2	3	6	8				
SI unit negative common	4	5	7	9				

- \* Ensure a match with the common specification of the valve to be used.
- $\ast\,$  When not selecting an SI unit, the symbol will be "nil."

P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	Ĺ

- \* 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 8.


For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 600. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website, https://www.smcworld.com

# Pug-in Connector Connecting Base SY3000/5000/7000 Series

8	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)								
Symbol	A, B port			10/Side		Type 11/Bo										
Sylliuul			SY3000	SY5000	SY7000	SY5000	SY7000									
C2			ø2	•	_	_	_	_	_							
СЗ			ø3.2	•	_	_	_	_								
C4	_		ø4	•	•	_	•	_								
C6	ight		ø6	•	•	•	•	•								
C8	Straight	П	ø8	_	•	•	•	•	2010							
C10	0,		ø10	_	_	•	_	•	000							
C12			ø12	_	_	•	_	•	-							
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•								
L4			ø4	•	•	_	_	_	<b>₽</b>							
L6		힏	ø6	•	•	•	_	_								
L8		Upward	ø8	_	•	•	_	_								
L10			ø10	_	_	•	_	I								
L12	O.		ø12	_	_	•	_	_	S Seller							
B4	W.	Elbow~ Downward	Elbow*	Elbow*	Elbow*	Elbow~	Elbow*	Elbow*2	Elbow*2	ø4	•	•	_	_	_	
B6	ă									a Ep	ø6	•	•	•	_	
B8	_		ø8	_	•	•	_	_								
B10		á	ø10	_	_	•	_	_								
B12			ø12	_	_	•	_	-								
LM*1	(Inci		v port, mixed sizes uding upward and wnward piping)	•	•	•	_	-								
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12									

Symbol	A, B port			10/Side		Type 11/Bo						
Syllibul			SY3000	SY5000	SY7000	SY5000	SY7000					
N1		ø1/8"		•	_	_	_	_				
N3			ø5/32"	•	•	_	•	_				
N7	igh		ø1/4"	•	•	•	•	•				
N9	Straight		ø5/16"	_	•	•	•	•				
N11	0,	<u>'</u>	ø3/8"	_	_	•	_	•	al Section			
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•				
LN3			ø5/32"	•	_	_	_	_				
LN7		Upward	ø1/4"	•	•	_	_	_				
LN9		ď	ø5/16"	_	•	_	_	_				
LN11	Elbow*2	7w,5	7w,5	)W*2	_	ø3/8"	_	_	•	_	_	
BN3					Б	ø5/32"	•	_	_	_	_	
BN7		Downward	ø1/4"	•	•	_	_	_				
BN9			_	l WC	ø5/16"	_	•	_	_	_		
BN11			ŏ	ø3/8"	_	_	•	_	_			
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_				
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"					

#### **How to Order Manifold Assembly**

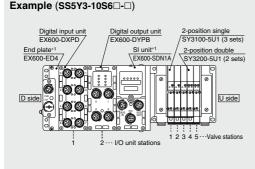

SS5Y3-10S6Q72-05B-C6 1 set (Type 10 5-station manifold bar sY3100-5U1	) .) on 1)
Prefix it to the part numbers of the valve, etc.	
<ul> <li>For the valve arrangement, the valve closest to the D side is cons</li> <li>1st station.</li> </ul>	idered the

- order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- \*1 Do not enter the SI unit part number and the end plate part number together.
- \* When mixing top-ported configurations, select from those listed on page 513. In such cases, use caution as there is also output on the A and B ports on
- the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.






<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

#### How to Order Valves (With mounting screw)

efer to page 404 for valve specifications

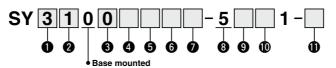

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4	N.C./N.C.	
<b>B</b> ∗1	4-position dual 3-port	N.O./N.O.	
C*1	duai 3-port	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

U FIII	ot type
Nil	Internal pilot
R	External pilot

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

(Dulit-III valve type)				
Nil	None			
н	Built-in			

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

o i not varve option				
Nil	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)			

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
* Be su	re to select the power saving circuit

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC

#### Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Common specification
	R	_		Non-polar
l	U	•		14011-polai
	S	_	•	Positive
ſ	Z	•	_	common
ľ	NS	_		Negative
	NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- \* Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

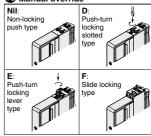

 Refer to page 423 for the safety slide locking manual override.

#### Type of mounting screw


1	lik	Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Drop prevention type)
	Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release

# Plugin Connector Connecting Base SY3000/5000/7000 Series



Type 10/Side Ported EX600 (M12 Connector)

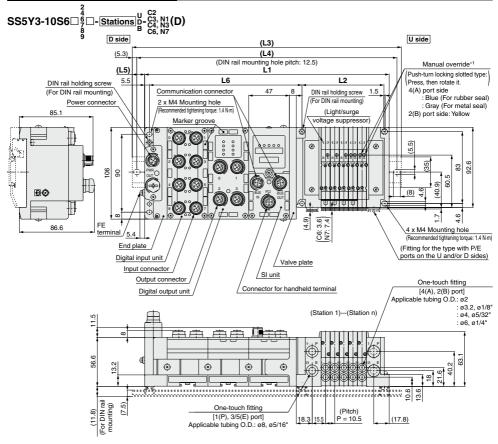

- L1 = 10.5 x n1 + 135.5 + 47 x n2 L2 = 10.5 x n1 + 42
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 82$
- n1: Valve stations
- n2: I/O unit stations
- I 2: DIN Pail Overall Length

EO. DIN III	• .			,																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5

\* These figures show the "SS5Y3-10S6Q22-05D-C6."

\* Refer to page 571 for dimensions of A or B port top-ported type.

\*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

Dimensions: SY3000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base EX600 (7/8 Inch Connector)

One-touch fitting

[4(A), 2(B) port] Applicable tubing O.D.: ø2

: ø3.2, ø1/8" : ø4, ø5/32"


: ø6, ø1/4"

83

40.2 18

10.6 13.6

(17.8)

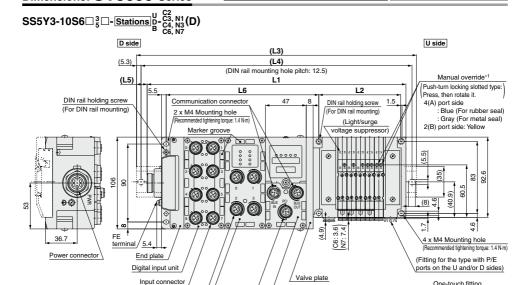

SI unit

Connector for handheld terminal

⊗

- For DIN rail mounting) (11.8) L1 = 10.5 x n1 + 152 + 47 x n2 L2 = 10.5 x n1 + 42 L4 = L3 - 10.5L5 = (L3 - L1)/2
- $L6 = 47 \times n2 + 82$ n1: Valve stations
- n2: I/O unit stations

9.99

\*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

(Station 1)---(Station n)

(Pitch)

P = 10.5

\* These figures show the "SS5Y3-10S6Q32-05D-C6."

(X)

Digital output unit

**(**\*)

Œ

\* Refer to page 571 for dimensions of A or B port top-ported type.

One-touch fitting

[1(P), 3/5(E) port]

Applicable tubing O.D.: ø8, ø5/16'

(3)


L3: DIN	Dail	Overall	Lanath

Valve stations (n1) unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

# Plugin Connector Connecting Base SY3000/5000/7000 Series



Type 10/Side Ported EX600 (M12 Connector)

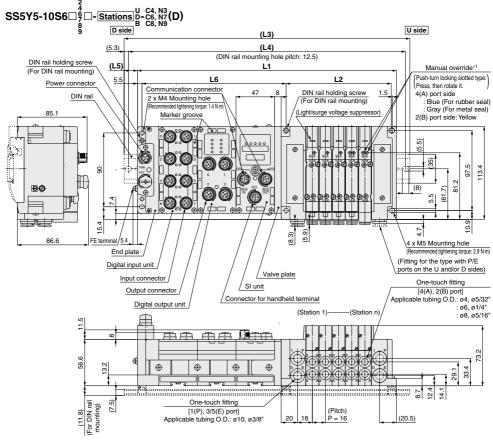


- L1 = 16 x n1 + 141.5 + 47 x n2 L2 = 16 x n1 + 48 L4 = L3 - 10.5
- L5 = (L3 L1)/2
- L6 = 47 x n2 + 81.5
- n1: Valve stations
- n2: I/O unit stations
- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10S6Q22-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


12.	DIN	Dail	Overall	Longth

Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

Dimensions: SY5000 Series

Plug-in Type 10/Side Ported
Connector Connecting Base EX600 (7/8 Inch Connector)

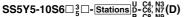

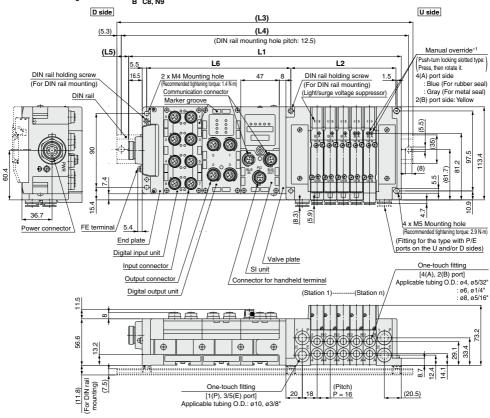

- L1 = 16 x n1 + 158 + 47 x n2 L2 = 16 x n1 + 48
- L4 = L3 10.5
- L5 = (L3 L1)/2L6 = 47 x n2 + 81.5
- n1: Valve stations
- n2: I/O unit stations

#### L3: DIN Rail Overall Length

LO. DIN TH	• .			,																			
Valve stations unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_

\* These figures show the "SS5Y5-10S6Q32-05D-C8.


\* Refer to page 572 for dimensions of A or B port top-ported type.

\*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

# Plugin Connector Connecting Base SY3000/5000/7000 Series



Type 10/Side Ported EX600 (M12 Connector)

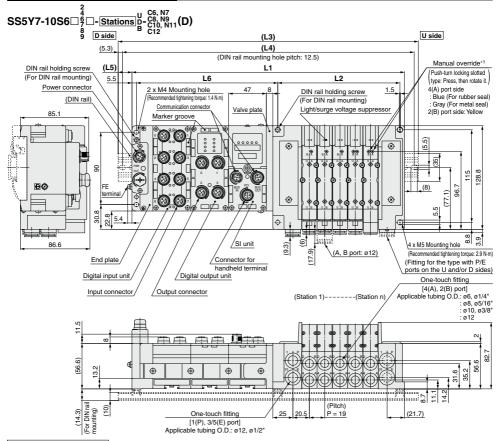

L1 = 19 x n1 + 149.7 + 47 x n2

L2 = 19 x n1 + 56

L3 = DIN rail dimension

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 81.7

n1: Valve stations

n2: I/O unit stations


- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10S6Q22-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

LS: DIN R	all Ov	eran	rend	jui																			
Valve stations unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	_	_	_	_

# Dimensions: SY7000 Series

# Plug-in Type 10/Side Ported Connector Connecting Base EX600 (7/8 Inch Connector)

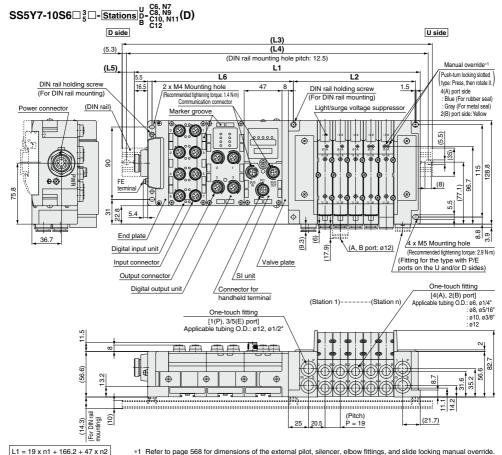

- L2 = 19 x n1 + 56
- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 81.7$
- n1: Valve stations

510

- n2: I/O unit stations
- \* These figures show the "SS5Y7-10S6Q32-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall L	anath

LO: DIN N	all Ov	eran	rend	jui																			
Valve stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	_	_	_	_






Type 12

# SY3000/5000/7000 Series

#### **How to Order Manifolds**

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.

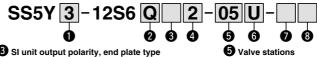

None

the attached operation manual for mounting.

#### Series SY3000 5 SY5000

🛭 SI unit

SY7000

SI unit output polarity, end plate type

M12 power supply	7/8 inch		pply connector A-coded
connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)
	N	il	
2	3	6	8
4	5	7	9
	power supply connector B-coded (EX600-ED2)	power supply connector B-coded (EX600-ED2)  7/8 inch power supply connector (EX600-ED3)	power supply connector B-coded (EX600-ED2)   7.8 inch power supply connector B-coded (EX600-ED3)

- When not selecting an SI unit, the symbol will be "nil. \* Ensure a match with the common specification of the valve to be used.
- 4 I/O unit stations

EX600

	NII	None	
	1	1 station	
	:	:	
	9	9 stations	
	* When r	not selecting an SI unit, the symbol will be "nil.	,,,
		is not included in I/O unit stations.	
		I/O unit is selected, it is shipped	
1	separa	ately, and assembled by users. Refer to	

Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note

Double wiring\*1


Specified layout\*2 (Up to 32 solenoids available)

- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

0	Without SI unit	
Q	DeviceNet® (Version A)	
N	PROFIBUS DP (Version A)	
V	CC-Link	
EA	EtherNet/IP™ (2 ports)	
F	PROFINET	
FA	PROFINET (IO-Link unit)	
WE	EtherNet/IP™ compatible wireless base*1	
WF	PROFINET compatible wireless base*1	
WS	Wireless remote*1	

- \*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.
- I/O unit cannot be mounted without SI unit.
- Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalog.

#### How to Order Manifold Assembly

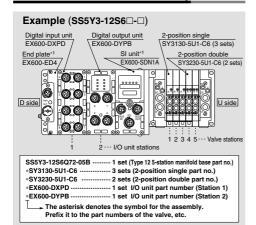

- For the valve arrangement, the valve closest to the D side is considered the 1st station . Under the manifold part number, state the valves to be mounted, then the I/O units in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- \*1 Do not enter the SI unit part number and the end plate part number together.

6 P. E port entry, SUP/EXH block assembly

02 2 stations

16 16 stations 02 2 stations

24 24 stations

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### P. E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	
* For N. sizes are in inches.				

<b>10</b> Mounting					
Nil	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations Specify a length longer				
:	: than that of the standard				
D24	For 24 stations rail.				


- \* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 600. (IP40 specifications may be required according to the I/O unit to be selected.)
Please download the Operation Manual via the SMC website, https://www.

# Pug-in Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

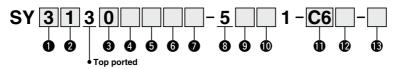

#### Series

• • •	100
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	0	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### 6 Back pressure check valve

Dack pressure check valve		
Nil	None	
н	Built-in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

<u> </u>		
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

- Nil Standard
  T With power saving circuit (Continuous duty type)

  \* Be sure to select the power saving circuit
  type if the valve is to be continuously
- energized for long periods of time.

  \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		14011 polai
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

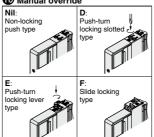

 Refer to page 423 for the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

One-touch litting (wethic)							
Symbol	A, B port	SY3000	SY5000	SY7000			
C2	ø2	•	_	_			
C3	ø3.2	•	_	_			
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	_	•			

#### One-touch fitting (Inch)

one todon namy (mon)							
A, B port	SY3000	SY5000	SY7000				
ø1/8"	•	_	_				
ø5/32"	•	•	_				
ø1/4"	•	•	•				
ø5/16"	_	•	•				
ø3/8"	_		•				
	ø1/8" ø5/32" ø1/4" ø5/16"	Ø1/8" ● Ø5/32" ● Ø1/4" ● Ø5/16" —	Ø1/8"     ●       Ø5/32"     ●       Ø1/4"     ●       Ø5/16"     —				

#### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

\* Only Nil is available for M5.

#### Type of mounting screw

W 1 7	Type of indulting screw					
Nil Round head combination screw						
B Hexagon socket head cap screw						
K	Round head combination screw (Drop prevention type)					
Н	Hexagon socket head cap screw (Drop prevention type)					

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and
- mounting screw part numbers.

  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.





ype 10 Side Ported Type 11

# Plug-in Connector Connecting Base

EX245

# SY3000/5000/7000 Series 9



#### **How to Order Manifold**

#### SS5Y Side Ported/Bottom Ported Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions Only direct mounting is selectable for the manifold.

of Type 11/Bottom-ported type.

Series SY3000 SY5000 SY7000 2 Type Side ported Bottom ported \* 1 . The SY5000 manifold hase is used for the

bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

#### Number of I/O modules

Nil	Without I/O module (Without SI Unit)
1	1 station
	:
8	8 stations

#### 6 Valve stations (In the case of the 32-output SI Unit)

Symbol	Stations	Note		
02	2 stations			
		Double wiring*1		
16	16 stations			
02	2 stations	Specified layout*2		
		(Available up to 32		
24	24 stations	solenoids)		

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*3: This also includes the number of blanking plate assembly.

#### P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### SUP/EXH block assembly

O COLITERIA DIOCK GOOCHIDIY						
Nil Internal pilot						
S	Internal pilot, Built-in silencer					
R External pilot						

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 602 and 603. Please download the Operation Manual via SMC website, https://www.smcworld.com

3 SI Unit specifications

Symbol (output polarity)	Protocol	Communication	Power supply			
Negative common (PNP)	FIOLOCOI	connector	connector			
0		Without SI Unit				
AAN		Push/Pull	Push/Pull			
AAN		(SCRJ): 2 pcs.	(24 V): 2 pcs.			
ABN	PROFINET	Push/Pull	Push/Pull			
ADIN		(RJ45): 2 pcs.	(24 V): 2 pcs.			
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.			
The color of the feet to the Oliveit is acceptive acceptance (DND)						

\*: The valve output polarity for the SI unit is negative common (PNP).

#### With or without I/O modules

Without I/O Nil With I/O module

#### A. B port size (Metric)

Symbol			A D mont	10 (Si	de ported)	series	11 (Bottom p	orted) series		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
C3			ø3.2	•	_	_	_	_		
C4	±		ø4	•	•	_	•	_	200	
C6	Straight		ø6	•	•	•	•	•	The same	
C8	tra		ø8		•	•	•	•		
C10	0)		ø10	_	_	•	_	•		
C12			ø12	_	_	•	_	•		
CM*2		Str	aight port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_	K. 63	
L6		ard	ø6	•	•	•	_	_		
L8		Upwa	ø8	_	•	•		CAR		
L10		*1	ĭ	ø10	_	_	•	_	_	- 00
L12				ø12	_	_	•	_	_	
B4	*	ъ	ø4	•	•	_	_	_		
B6	Elbow	Downward	ø6	•	•	•	_	_		
B8	Ш	Ş	ø8	_	•	•	_	_		
B10			õ	ø10	_	_	•	_	_	- Tille
B12			ø12	_	_	•	_	_		
LM			oow port, mixed sizes luding upward and downward piping)	•	•	•	_	_		
P, E por	t si	ze (	One-touch fittings)	ø8	ø10	ø12	ø10	ø12		

#### A, B port size (Inch)


	_	_								
Symbol	_	A, B port			de ported)			orted) series		
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•		_	_	_		
N3	l 🚤		ø5/32"	•	•	_	•	_		
N7	aight		ø1/4"	•	•	•	•	•	200	
N9	Stra		ø5/16"	_	•	•	•	•		
N11	၂တ		ø3/8"	_	_	•	_	•		
CM*2	1	Str	aight port, mixed sizes	•	•	•	•	•		
LN3		-	ø5/32"	•	_	_	_	_		
LN7	]	ard	ø1/4"	•	•	_	_	_		
LN9	1	Upw	ø5/16"	_	•	_	_	_		
LN11	١.	اا	-	ø3/8"	_	_	•	_	_	
BN3	*	힏	ø5/32"	•	_	_	_	_		
BN7	Elbow	òq	ownward	ø1/4"	•	•	_	_	_	
BN9		Ž	ø5/16"	_	•	_	_	_		
BN11	]	ă	ø3/8"	_	_	•	_	_	TUP .	
LM		Elbow port, mixed sizes		•	•	•	_	_		
D F	(Including upward and downward piping)		ø5/16"	0/01	4 /01	0/01	4 (01)			
IP, E po	TI SI	ze (	P, E port size (One-touch fittings)		ø3/8"	ø1/2"	ø3/8"	ø1/2"	l	

- \*1: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 617 to 620).
- \*2: When using mixed sizes for the A and B ports, please indicate so on the separate manifold specification sheet.



# Connector Connecting Base SY3000/5000/7000 Series


#### **How to Order Manifold Assembly**

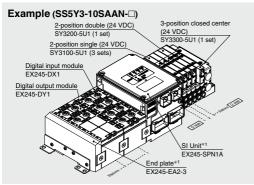

SS5Y3-10SAANY2-05D-C6 ···1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1------3 sets (2-position single part no.) ···1 set (2-position double part no.) \*SY3200-5U1-\*SY3300-5U1... ···1 set (3-position closed center part no.) \*EX245-DX1 ..... ...1set I/O module part no. EX245-DY1 ..... ...1set I/O module part no. The asterisk denotes the symbol for assembly.

- Prefix it to the part numbers of the valve etc.
- . The valve arrangement is numbered as the 1st station from the D side. • The I/O module station arrangement is numbered starting from the SI unit side
- Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together. \*: When mixing top ported configurations, select from page 521. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### How to Order Valves (With mounting screw) Refer to page 404 for valve specifications.

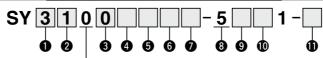

#### Base mounted

#### A Saries

• ••	
3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single						
2	z-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
<b>A</b> *1	4	N.C./N.C.						
B*1	4-position dual 3-port	N.O./N.O.						
C*1	duai 3-port	N.C./N.O.						

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal	
1	Metal seal	

#### 4 Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve

(D)	ant-in vaive type)
Nil	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 625 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
*: Be su	re to select the power saving circuit
type w	hen the valve is continuously

- energized for long periods of time. \*: Be careful of the energizing time when the
- power saving circuit is selected. Refer to page 705 for details.

#### Rated voltage


5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
R			Non-polar				
NS NZ	_		Negative common				

- \*: "R" and "U" are applicable for every SI Unit. \*: Only "NZ" types are available for with the
- power saving circuit.

#### Manual override

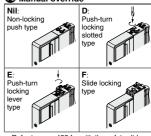

\*: Refer to page 423 for with the safety slide locking manual override.

#### Type of mounting screw

• . ,,	oc or mounting corem										
Nil Round head combination screw											
В	Hexagon socket head cap screw										
K	Round head combination screw (Falling-out-prevention type)										
Н	Hexagon socket head cap screw (Falling-out-prevention type)										

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 611 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.






Plug-in Connector Connecting Base Type 10/Side Ported
EX245

Dimensions: SY3000 Series

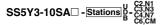

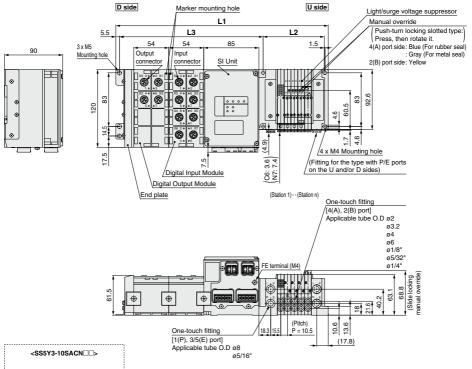

- \*: These figures show the "SS5Y3-10SAANY2-05D-C6".
- \*: Refer to page 566 for dimensions of external pilot, silencer and elbow fittings.
- \*: Refer to page 571 for dimensions of A or B port top-ported type.

L3 = 54 x n2 + 113.6


FE terminal (M4)


\* n1 is the valve stations. **Dimensions** Formula/L1 = 10.5 x n1 + 167.1 L2 = 10.5 x n1 + 42 \* The L1 dimension is the dimension without an I/O module, Add 54 mm to this dimension for each I/O module. n2 is the number of I/O module stations Stations n1 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 188.1 198.6 209.1 219.6 230.1 240.6 251.1 261.6 272.1 282.6 293.1 303.6 314.1 324.6 335.1 345.6 356.1 366.6 377.1 387.6 398.1 408.6 419.1 L1 L2 63 73.5 84 94.5 105 115.5 126 136.5 147 157.5 168 178.5 189 199.5 210 220.5 231 241.5 252 262.5 273

# Plugin Connector Connecting Base SY3000/5000/7000 Series


Type 10/Side Ported EX245

# Dimensions: SY5000 Series

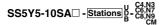

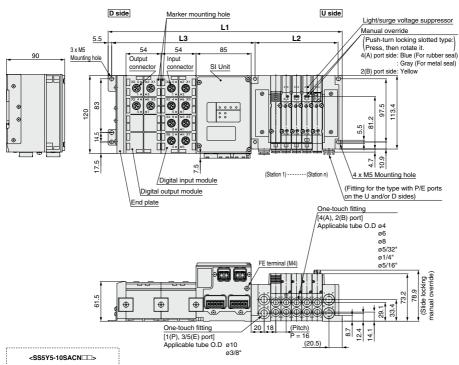

- \* These figures show the "SS5Y5-10SAANY2-05D-C8".
- \* Refer to page 567 for dimensions of external pilot, silencer and elbow fittings.
- \* Refer to page 572 for dimensions of A or B port top-ported type.

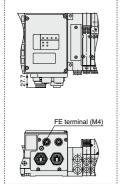



L3 = 54 x n2 + 113.1


	* n1 is the valve stations.																						
Dimension	Dimensions Formula L1 = 16 x n1 + 173.1 L2 = 16 x n1 + 48 * The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module. n2 is the number of I/O module stations.																						
Stations n1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	205.1	221.1	237.1	253.1	269.1	285.1	301.1	317.1	333.1	349.1	365.1	381.1	397.1	413.1	429.1	445.1	461.1	477.1	493.1	509.1	525.1	541.1	557.1
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432

Type 10/Side Ported EX245

## Dimensions: SY7000 Series

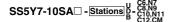

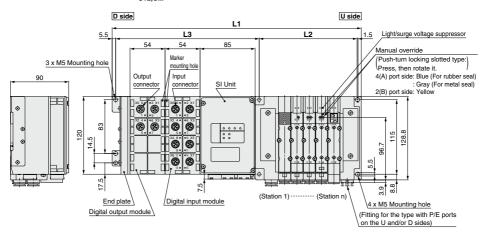

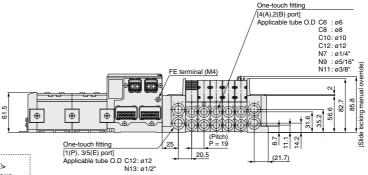

SS5Y7-10SACN

FE terminal (M4)

- \* These figures show the "SS5Y7-10SAANY2-05D-C10".
- \* Refer to page 568 for dimensions of external pilot, silencer and elbow fittings.
- \* Refer to page 573 for dimensions of A or B port top-ported type.

L3 = 54 x n2 + 113.3

\* n1 is the valve stations **Dimensions** Formula/L1 = 19 x n1 + 181.3 L2 = 19 x n1 + 56 \* The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module n2 is the number of I/O module stations. Stations n1 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 L1 219.3 238.3 257.3 276.3 295.3 314.3 333.3 352.3 371.3 390.3 409.3 428.3 447.3 466.3 485.3 504.3 523.3 542.3 561.3 580.3 599.3 618.3 637.3 L2 113 132 151 170 189 208 227 246 265 284 303 322 341 360 379 398 417 455 474 436



# Plug-in Connector Connecting Base


EX245

# SY3000/5000/7000 Series

CE UK CRUS ROHS



#### **How to Order Manifold**

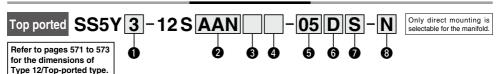

#### Series

Type 12

3	SY3000
5	SY5000
7	SY7000

#### With or without I/O modules

	е
Y With I/O module	

#### Number of I/O modules

Nil	Without I/O module (Without SI Unit)	
1	1 station	
:	:	
8	8 stations	

#### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System refer to the Web Catalog and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 602 and 603. Please download the Operation Manual via SMC website, https://www.smcworld.com

#### 2 SI Unit specifications

Symbol (output polarity) Negative common (PNP)		Communication connector	Power supply connector
0		Without SI Unit	
AAN		Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.
ABN	PROFINET	Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.

\*: The valve output polarity for the SI unit is negative common (PNP).

#### Valve stations

#### (In the case of the 32-output SI Unit)

Stations	Note
2 stations	
	Double wiring*1
16 stations	
2 stations	Specified layout*2
	(Available up to 32
24 stations	solenoids)
	2 stations : 16 stations 2 stations :

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet (Note that 2-position double, 3-position and 4-position valves cannot be used where single
- wiring has been specified.) \*: This also includes the number of blanking plate assembly.

#### SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	


- \*: 3/5(E) port is plugged for the built-in silencer type. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

	(One-touch littings)			
Symbol	SY3000	SY5000	SY7000	J
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	



#### **How to Order Manifold Assembly**

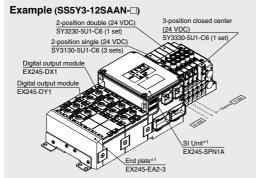

- SS5Y3-12SAANY2-05DS-N ·····1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6-----3 sets (2-position single part no.) \*SY3220-5U1-C6 ··1 set (2-position double part no.) -1 set (3-position closed center part no.) \*SY3330-5U1-C6--\*FX245-DX1..... ..1set I/O module part no.
- ...1set I/O module part no. EX245-DY1.....


-The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- . The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side Under the manifold part number, state the valves to be mounted, then the I/O
- module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together. \*: When mixing top ported configurations, select from page 521. In this case, use caution as there
- is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

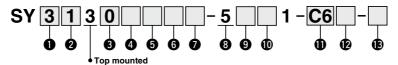

#### A Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2	z-position	Double	
3		Closed center	
4	4 3-position 5	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port valve	N.C./N.C.	
B*1		N.O./N.O.	
C*1 3-port	3-port valve	N.C./N.O.	

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot	
R	External pilot	

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### 6 Back pressure check valve

Nil	None
H*1	Built-in

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 625. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Select the metal seal type for high pressure type.

#### Coil type

• con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)*1*2	

- \*1: Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- \*2: Be careful of the energizing time when the power saving circuit is selected. For details, refer to page 705.

#### Rated voltage


5	24 VDC

#### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
	•		
NS	_	_	Negative
NZ	•		common

\*: Select "NZ" for with the power saving circuit.

#### Manual override

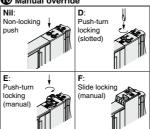

\*: Refer to page 423 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	-	•	•
C10	ø10		_	•
C12	ø12	I -	_	•

#### One-touch fitting (Inch)

0	todon nitting (ii	,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"		•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\*: Only Nil is available for M5.

#### R Type of mounting screw

Type of illounting screw		
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)*1	
н	Hexagon socket head cap screw (Falling-out-prevention type)*1	

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 611 for part numbers of the base gasket and mounting screw.
- \*: Select "Nil" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

Type 10
Side Ported
Type 11
Bottom Ported

# **Plug-in** Connector Connecting Base

EX250

# SY3000/5000/7000 Series

CH CH CHS

**How to Order Manifolds** 

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

# SS5Y3-10SQ -05U-C6 0 2 3 4 5 6 7 3 9

#### 1 Series

• ••	
3	SY3000
5	SY5000
7	SY7000

# 2 Type

10	Side ported
11	Bottom ported*1
*1 The	SY5000 manifold hase is used for the

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

#### 4 Input block stations

Nil	None
1	1 station
:	:
8	8 stations

\* When not selecting an SI unit, the symbol will be "nil." The maximum number of stations is limited for the AS-Interface applicable SI unit.

#### 3 SI unit

0	Without SI unit				
Q	DeviceNet® (Negative common)				
TA	AS-Interface (Negative common)	2 power supply	8 in/8 out		
TB		systems	4 in/4 out		
TC		1 power supply	8 in/8 out		
TD		system	4 in/4 out		
ZE	EtherNet/IP™ (Negative common)				

- Ensure a match with the common specification of the valve to be used.
- \* Input block cannot be mounted without SI
- The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

#### Input block type

	PNP sensor	NPN sensor
	input	input
Without input block	N	ii
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F


\* When not selecting an SI unit, the symbol will be "nil."

#### 6 Valve stations

Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
16	16 stations	
02	2 stations	0
:	- :	Specified layout*2 (Up to 32 solenoids available)
24	24 stations	(Op to 32 solerloids available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
  - 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids
   This also includes the number of the blanking
- This also includes the number of the blankin plate assembly.
- \* For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

# How to Order Manifold Assembly

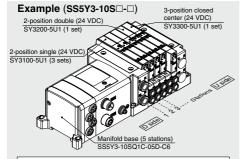

SS5Y3-10SQ1C-05D-C6 ···	1	set (Type 10 5-station manifold base part no.)
*SY3100-5U1	3	sets (2-position single part no.)
*SY3200-5U1	1	set (2-position double part no.)
*SY3300-5U1	1	set (3-position closed center part no.)

- The asterisk denotes the symbol for the assembly.

  Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
   Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 529. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- \* 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 604. Please download the Operation Manual via the SMC website. https://www.smc.world.com

# Connector Connecting Base SY3000/5000/7000 Series

#### 8 A, B port size (Metric/One-touch fitting) Type 10/Side ported Type 11/Bottom ported A, B port SY3000 SY5000 SY7000 SY5000 SY7000 C2 ø2 СЗ ø3.2 C4 ø4 • C6 ø6 • • C8 ø8 • C10 ø10 • C12 a12 CM\*1 Straight port, mixed sizes • L4 α4 • L6 ø6 L8 ø8 • L10 ø10 L12 ø12 В4 ø4 B6 ø6 • В8 ø8 • B10 ø10 B12 ø12 Elbow port, mixed size LM\* downward piping) P, E port size ø8 ø10 ø12 ø10 ø12

A, B port size (Inch/One-touch fitting)

Symbol	A D nort		Type 10/Side ported		Type 11/Bottom ported					
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3	_		ø5/32"	•	•	_	•	_		
N7	ighi		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"		•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	o lease	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•						
LN7		Upward	ø1/4"	•	•	_	_	_		
LN9		γd	ø5/16"	_	•	_	_	_		
LN11		_	ø3/8"			•		_		
BN3	Elbow*2	ē	ø5/32"	•	_	_	_	_		
BN7	g	Downward	ø1/4"	•	•	_	_	_		
BN9		_	w	ø5/16"	_	•	_	_	_	
BN11		ŏ	ø3/8"	_	_	•	_	_		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"				

<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting

#### Mounting and Option

(One-touch fittings)

•								
	Mounting	Option Name plate Station number			DIN Rail Option			
Symbol		Name plate	Station number	ĺ	Nil	Standa	ard length	
Nil	l .		_	ĺ	0		rail (with bracket)	
AA	Direct mounting	•	•	1	3	For 3 stations	Specify a longer	
BA		•	_	ĺ	:	- 1	rail than the total length of specifier	
D□	DIN rail mounting	_	_	ĺ	24	For 24 stations	stations.	
A□		•	•	1				
B□		•	_					

- \* Enter the number of stations inside 


  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type.
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.
- \* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)



<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

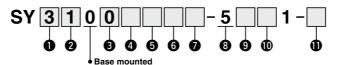

#### A Series

• ••	.00
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Pilot type				
Nil	Internal pilot			
R	External pilot			

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve

(Built-in valve type)				
	Nil	None		
	н	Built-in		

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

NII	Standard
Т	With power saving circuit (Continuous duty type)
* Be sui	re to select the power saving circuit

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
NS	_	•	Negative
NZ	•		common

 Only "NZ" type is available with a power saving circuit.

#### Manual override

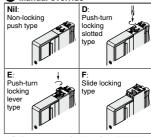

 Refer to page 423 for the safety slide locking manual override.

#### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw nath umpers.
- mounting screw part numbers.
  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




# Plugin Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX250

C2 -C3, N1 C4, N3 C6, N7 SS5Y3-10S - Stations D

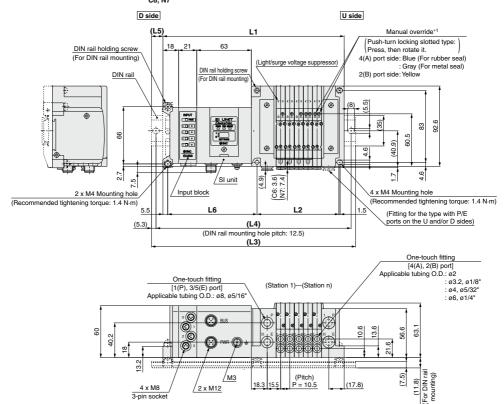

L1 = 10.5 x n1 + 135.5 + 21 x n2

4 x M8

3-pin socket

2 x M12

\* These figures show the "SS5Y3-10SQ1A-05D-C6.

\* Refer to page 571 for dimensions of A or B port top-ported type.

L2 = 10.5 x n1 + 42

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 82$ 

	n1: Valve stations n2: Input block stations																						
L3: DIN Ra	_3: DIN Rail Overall Length																						
Valve stations (n1) lnput block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

P = 10.5

\*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.


(17.8)

Dimensions: SY5000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported

 $\textbf{SS5Y5-10S} \square \square \textbf{-} \underbrace{\textbf{Stations}}_{\substack{D \\ D \\ C8, \ N9}}^{\substack{U \ C4, \ N3 \\ D-C6, \ N7}} \textbf{(D)}$ 

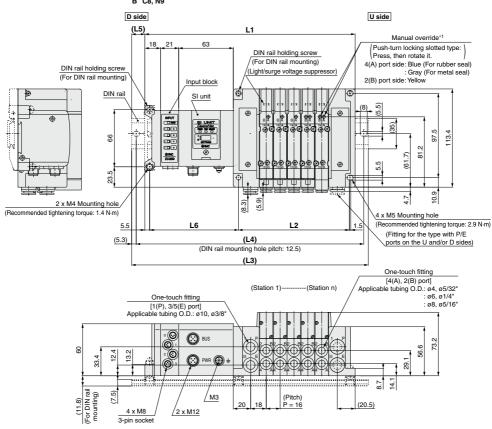

L1 = 16 x n1 + 141.5 + 21 x n2  $L2 = 16 \times n1 + 48$ 

L4 = L3 - 10.5L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.5$ n1: Valve stations

- n2: Input block stations

#### L3: DIN Bail Overall Length

LJ. DIN NO	all Ov	eran	rení	Jui																			
Valve stations																							
Input (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
block																							
stations (n2)																							
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723

\* These figures show the "SS5Y5-10SQ1A-05D-C8."

\* Refer to page 572 for dimensions of A or B port top-ported type.


\*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

# Plugin Connector Connecting Base SY3000/5000/7000 Series



Plug-in Connector Connecting Base Type 10/Side Ported EX250



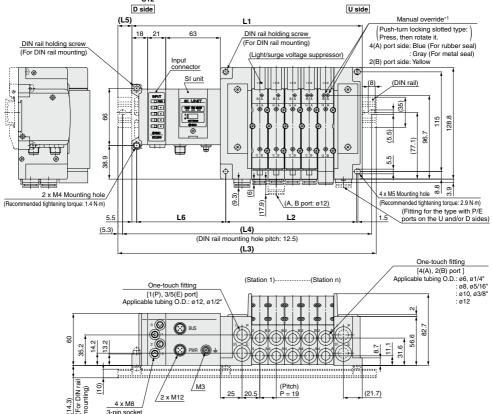

L1 = 19 x n1 + 149.7 + 21 x n2 L2 = 19 x n1 + 56

3-pin socket

- L4 = L3 10.5
- L5 = (L3 L1)/2 $L6 = 21 \times n2 + 81.7$
- n1: Valve stations
- n2: Input block stations
- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10SQ1A-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

L3: DIN Ra	L3: DIN Rail Overall Length																						
Valve stations																							
(n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O Unit stations (n2)																							
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798


Type 12 Top Ported

# Plug-in Connector Connecting Base

**SY3000/5000/7000** Series



#### **How to Order Manifolds**

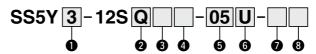

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type

# Series

3	SY3000
5	SY5000
7	SY7000

3 Input block stations None 1 station

8	8 stations
	not selecting an SI unit, the symbol will be
"nil." Tl	he maximum number of stations is limited
for the	AS-Interface applicable SI unit.

Input block type

	PNP sensor input	NPN sensor input
Without input block	N	iil
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

\* When not selecting an SI unit, the symbol will be "nil."

#### 2 SI unit

U	Without St unit										
Q	DeviceNet® (Negative common)										
TA		2 power	8 in/8 out								
TB	AS-Interface (Negative	supply systems	4 in/4 out								
TC	common)	1 power supply	8 in/8 out								
TD	oonmiler,	system	4 in/4 out								
ZE	EtherNet/IP™ (Negative common)										


- Ensure a match with the common specification of the valve to be used.
- Input block cannot be mounted without SI unit The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is

#### Valve stations

<u> </u>				
Symbol	Stations	Note		
02	2 stations			
:	- :	Double wiring*1		
16	16 stations			
02	2 stations	0		
:	-	Specified layout*2 (Up to 32 solenoids available)		
24	24 stations	(Op to 32 soleriolds available)		
*1 Double wiring: 2-position single double				

- 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired. order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.
  - · 8 in/8 out specification: Max. 8 solenoids 4 in/4 out specification: Max. 4 solenoids
- This also includes the number of the blanking
- plate assembly.
  For the product without the SI unit (S0), note the
- maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## How to Order Manifold Assembly

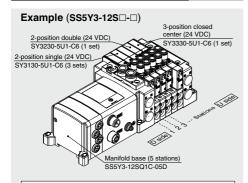

SS5Y3-12SQ1C-05D ··· 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6...... 3 sets (2-position single part no.)

\*SY3230-5U1-C6...... 1 set (2-position double part no.) \*SY3330-5U1-C6------ 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

complicated, specify the details on a manifold specification sheet.

. For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too

#### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- The P and E ports are only available on the U and D sides for the built-in silencer type, 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

the standard rail

For N, sizes are in inches.

#### Mounting Nil Direct mounting D DIN rail mounting (With DIN rail) DIN rail mounting (Without DIN rail) DO Specify a length longer than that of

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)


Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 604. Please download the Operation Manual via the SMC website, https://www.smcworld.

# Connector Connecting Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

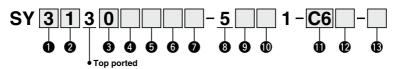

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single	
2		Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
<b>B</b> ∗1		N.O./N.O.	
C*1	uuai 3-poit	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Dilet tur

FIII	ot type
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Ruilt-in valve type)

(5)	ant-in valve type)
Nil	None
Н	Built-in

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

#### 6 Pilot valve option

• · · · · · · · · · · · · · · · · · · ·		
Nil Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.


#### Rated voltage

5	24 VDC

#### Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Specification
	R	_		Non-polar
	U	•	•	14011 polai
	S	_		Positive
	Z	•		common
	NS	1		Negative
	NZ	•		common

- "R" and "U" are applicable for every SI unit.
- Only "Z" and "NZ" types are available with a power saving circuit.

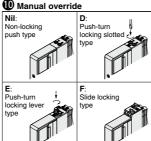

Refer to page 423 for the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

#### One-touch fitting (Metric)

0.10	One-todon nitting (Metric)				
Symbol	A, B port	SY3000	SY5000	SY7000	
C2 C3	ø2	•	_		
C3	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6 C8	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	

#### One-touch fitting (Inch)

one todon numg (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	T -	_	•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

\* Only Nil is available for M5

#### Type of mounting screw

	• ',	oc or mounting corew
Nil Round head combination scre		
B Hexagon socket head cap so		Hexagon socket head cap screw
K Round head combination screw (Drop pre		Round head combination screw (Drop prevention type)
	Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

# Type 10 Side Ported Type 11 Bottom Ported

# **Plug-in** Connector Connecting Base

EX260

# SY3000/5000/7000 Series

Refer to page 534 for details on manifolds that support safety communication (PROFIsafe).

( E UK CHS ROHS

**How to Order Manifolds** 

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.



#### 1 Series

U Selles	
3	SY3000
5	SY5000
7	SY7000

## 2 Туре

G IN	Je .
10	Side ported
11	Bottom ported*1

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plugin Mixed Type Manifold" (from page 574).

#### 3 SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Our Positive common (NPN)	tput polarity) Negative common (PNP)	Protocol	Number of outputs	Communication connector
0	*1	Without	SI unit	
QA	QAN	DeviceNet®	32	M12
QB	QBN	Devicemen	16	IVIIZ
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	IVI I Z
NC	NCN	DP	32	D-sub
ND	NDN		16	D-Sub
VA	VAN	CC-Link	32	M12
VB	VBN	CC-LINK	16	IVI I Z
DA	DAN	EtherCAT	32	M12
DB	DBN	EllielCAT	16	IVIIZ
FA	FAN	PROFINET	32	M12
FB	FBN	PHOFINE	16	IVI I Z
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Enletivelite	16	IVIIZ
—*3	GAN	Ethernet	32	M12
—*3	GBN	POWERLINK	16	IVIIZ
*3	KAN	IO-Link	32*5	M12

- \*1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.
- \*2 DIN rail cannot be mounted without SI unit. \*3 Positive common (NPN) type is not
- applicable.
  \*4 IP40 for the D-sub applicable communication connector specification
- \*5 Only the 32 outputs type is available.

#### 4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note	
02	2 stations		
:	-	Double wiring*1	
16	16 stations		
02	2 stations	Considered lawrents?	
:	-	Specified layout*2 (Up to 32 solenoids available)	
24	24 stations		

#### In the case of the 16-output SI unit

Stations	Note	
2 stations		
:	Double wiring*1	
8 stations		
2 stations	0	
:	Specified layout*2 (Up to 16 solenoids available)	
16 stations	(Op to 10 soleriolds available	
	2 stations ÷ 8 stations	

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet
  - sheet.
    (Note that 2-position double, 3-position, and 4-position valves cannot be used where
- single wiring has been specified.)

  \* This also includes the number of the blanking plate assembly.
- For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### P, E port entry

U side (2 to 10 station		U side (2 to 10 stations)
	D	D side (2 to 10 stations)
B Both sides (2 to 24 stations)		Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- \* 3/5(E) port is plugged for the built-in silencer type
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 7.

#### **8** Mounting and Option

Symbol	Mounting	Op	
Syllibol	iviouriting	Name plate	Station number
Nil	Diment	_	_
AA	Direct mounting	•	•
BA	mounting	•	_
D□	DIM!!	_	_
A□	DIN rail mounting	•	•
В□	mounting	•	_

- \* Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
  - Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

	Nil	Standard length					
	0	With	out DIN rail (with bracket)				
	3	For 3 stations	Cassify a language sail than the				
ı	- :	:	Specify a longer rail than the total length of specified stations.				
	24	For 24 stations	total length of specified stations.				

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to Prountled, refer to page 605. Please download the Operation Manual via the SMC website, https://www.smcworld.com



# Pug-in Connector Connecting Base SY3000/5000/7000 Series

0	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)		
Symbol	A, B port					Type 11/Bo				
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000			
C2			ø2	•	_	_	_	_		
C3			ø3.2	•	_	_	_	_		
C4	_		ø4	•	•	_	•	_		
C6	igh		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	2010	
C10	0,		ø10	_	_	•	_	•	08	
C12			ø12	_	_	•	_	•	•	
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		Upward	ø6	•	•	•	_	-		
L8			ø8	_	•	•	_	_		
L10			ø10	_	I	•	_	I		
L12	OI.		ø12	_	-	•	_	-	S Selfer	
<b>B</b> 4	∃lbow*2	Downward	ø4	•	•	_	_	_		
B6	ă		ø6	•	•	•	_	I		
B8	_		È	ø8	_	•	•	_	_	
B10			ø10	_	-	•	_	_		
B12			ø12	_	_	•	_	_		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	-		
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12			

Symbol		A, B port			10/Side		Type 11/Bo				
Symbol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000			
N1	-		ø1/8"	•	_	_	_	_			
N3			ø5/32"	•	•		•				
N7	igh		ø1/4"	•	•	•	•	•			
N9	Straight		ø5/16"	_	•	•	•	•			
N11	0,		ø3/8"	_	_	•	_	•	o lease		
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•			
LN3				ø5/32"	•	_	_	_	_		
LN7		/ard	ø1/4"	•	•	_	_	_			
LN9	Elbow*2			Upward	ø5/16"	_	•	_	_	_	
LN11		-	ø3/8"	_	_	•	_	_			
BN3		ē	ø5/32"	•	_	_	_	_			
BN7		wnward	ø1/4"	•	•	_	_	_			
BN9		\$	ø5/16"		•	_	_	_			

A, B port size (Inch/One-touch fitting)

BN11

LM\*

ø3/8"


ø5/16" ø3/8" ø1/2" ø3/8" ø1/2"

Elbow port, mixed size

(Including upward and downward piping) P, E port size

(One-touch fittings)

#### **How to Order Manifold Assembly**

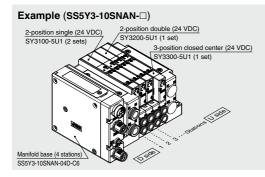

- SS5Y3-10SNAN-04D-C6---1 set (Type 10 4-station manifold base part no.) \*SY3100-5U1-----2 sets (2-position single part no.) \*SY3200-5U1-----1 set (2-position double part no.) \*SY3300-5U1---......1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- \* When mixing top-ported configurations, select from those listed on page 541. Specify on the manifold specification sheet if plugs are required for the A and B ports on the manifold.






<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

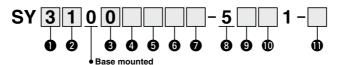

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

Seal type

4 Pilot type

1	2-position	Single	
2		Double	
3		Closed center	
4	3-position	Exhaust center	
5	]	Pressure center	
<b>A</b> *1	4	N.C./N.C.	
<b>B</b> ∗1	4-position dual 3-port	N.O./N.O.	
C*1	uuai 3-poit	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Rubber seal

Metal seal

Internal pilot

External pilot

When selecting the external pilot specification

for the 4-position dual 3-port valve, pay atten-

tion to the pilot pressure. Refer to the valve

specifications on page 404 for further details.

6 Pilot valve option					
a)					
)					

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
. D	

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details

## Rated voltage


5	24 VDC	

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is Nil (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

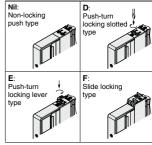

Refer to page 423 for the safety slide locking manual override.

#### Type of mounting screw

• • • • • • • • • • • • • • • • • • • •	
Nil	Round head combination screw
В	Hexagon socket head cap screw
К	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

# Back pressure check valve

(Duiit-iii vaive type)				
	Nil	None		
	н	Built-in		

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.



# **Plug-in** Connector Connecting Base

**EX260** Safety Communication Protocol (PROFIsafe)

# SY3000/5000/7000 Series

#### Using the safety communication protocol

Refer to the EX260 **Web Catalog** for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.


# CE CH CALUS



Refer to page 530 for details on manifolds that support Fieldbus and Industrial Ethernet.

#### How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

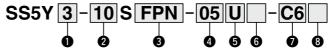

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Туре

534

<b>●</b> • • • • • • • • • • • • • • • • • • •							
10	Side ported						
11	Bottom ported*1						

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Type Manifold" (from page 574).

#### 3 SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Ou	tput polarity)		Number	
Positive common (NPN)	Negative common (PNP)	Protocol	of outputs	connector
O*1		Without		
—*3	FPN	PROFIsafe	32*4	M12

- \*1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.
- \*2 DIN rail cannot be mounted without SI unit.
- \*3 Positive common (NPN) type is not applicable.
- \*4 Only the 32 outputs type is available.

#### 4 Valve stations

Symbo	Stations	Note				
02	2 stations					
:	-	Double wiring*1				
16	16 stations					
02	2 stations	0				
:	-	Specified layout*2 (Up to 32 solenoids available)				
24	24 stations	(Op to 32 solellolds available)				

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
  - (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.

#### P, E port entry

	U	U side (2 to 10 stations)
	D	D side (2 to 10 stations)
	В	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

Nil	Internal pilot						
S	Internal pilot, Built-in silencer						
R	External pilot						

- 3/5(E) port is plugged for the built-in silencer type.
  - When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

#### Refer to the page on the right for 7.

#### **8** Mounting and Option

Symbol	Mounting	Option			
Symbol	wounting	Name plate	Station number		
Nil	Diment	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□	DIN!!	_	_		
A□	DIN rail mounting	•	•		
B□	mounting	•	_		

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### DIN Rail Option

Nil	Standard length							Standard length					
0	Without DIN rail (with bracket)												
3	For 3 stations	Specify a longer rail than the											
:	:	total langth of appointed stations											
24	For 24 stations	total length of specified stations.											

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 605. Please download the Operation Manual via the SMC website, https://www.smcworld.com

# Connector Connecting Base SY3000/5000/7000 Series

V.	Α, Ι	Βþ	ort size	(Metri	c/One	-touch	fitting	g)		
Symbol		A, B port		Type SY3000		ported SY7000				
C2		Г	ø2	•	_	_	_	_		
СЗ				ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	_	•	_		
C6	Straight		ø6	•	•	•	•	•		
C8	Stra		ø8	_	•	•	•	•	200	
C10	,		ø10	_	_	•	_	•	<b>100</b>	
C12			ø12	_	_	•	_	•	•	
CM*1	S	Straig	oht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		ā	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10		כ	ø10	_	_	•	_	_		
L12	2	<sub>N</sub> L	ø12	_	_	•	_	_	G O Jake	
B4	Elbow*2	_	ø4	•	•	_	_	_		
В6	ПP	Downward	ø6	•	•	•	_	_		
B8		Ś	ø8	_	•	•	_	_		
B10		8	ø10	_	_	•	_	_		
B12			ø12	_	_	•	_	_	سلگ	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size			ø8	ø10	ø12	ø10	ø12		

							<u> </u>			
Symbol	ol A, B po		R nort		10/Side		Type 11/Bo			
Syllibul		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3	١		ø5/32"	•	•	_	•	_		
N7	ight		ø1/4"	•	•	•	•	•		
N9	Strai	Г	ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	O DESCRIPTION OF THE PERSON OF	
CM*1	1	Straight port, mixed sizes		•	•	•	•	•		
LN3				ø5/32"	•	_	_	_	_	
LN7		arg	ø1/4"	•	•	_	_	_		
LN9			Upward	ø5/16"	_	•	_	_	_	
LN11		-	ø3/8"	_	_	•	_	_	S SEE	
BN3	×	9	ø5/32"	•	_	_	_	_		
BN7	∃lbow*2	wa	ø1/4"	•	•	_	_	_		
BN9	ш	Š	ø5/16"	_	•	_	_	_		
BN11		ľŏ	ø3/8"	_	_	•	_	_		
		Downward		_	_	•	_	_	Ħ	

ø1/2" ø3/8" ø1/2"

A, B port size (Inch/One-touch fitting)

Elbow port, mixed sizes

(Including upward and downward piping) P, E port size

(One-touch fittings)

ø5/16" ø3/8"

LM\*1



<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).


#### [Validated product examples]

Please contact SMC for further details as supported variations are continually being added.

 2-position double of rubber seal and manual override with locking function (D, E, F type) are excluded, because they don't comply with safety standard.

How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

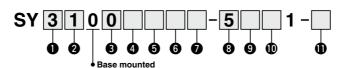

#### Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single		
2	z-position	Double*2		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
A*1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	duai 3-port	N.C./N.O.		

- \*1 Only the rubber seal type is available for the 4-position dual 3-port valve.
- \*2 Except the rubber seal

Seal type

0	Rubber seal
1	Metal seal

Pilot type

• I not type	
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

	une m ranto typo,
Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

T not valve option	
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

_	• com type	
Г	Nil	Standard
Г	Т	With power saving circuit (Continuous duty type)
*	* Be sure to select the power saving circuit	

- type if the valve is to be continuously energized for long periods of time.

  Be careful of the energizing time when the
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage

5	24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_	•	Non-polar
U	•		
NS	_		Negative
NZ	•		common

 Only "NZ" type is available with a power saving circuit.

#### Manual override



Type of mounting screw


Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series


Plug-in
Connector Connecting Base

Type 10/Side Ported EX260

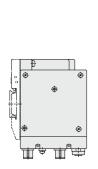

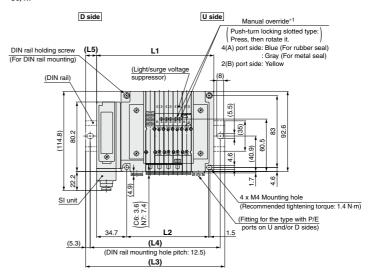

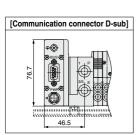

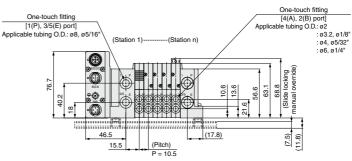

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10SQA-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12


n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13


Dimensions: SY5000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX260

SS5Y5-10S - Stations D - C6, N3 (D)

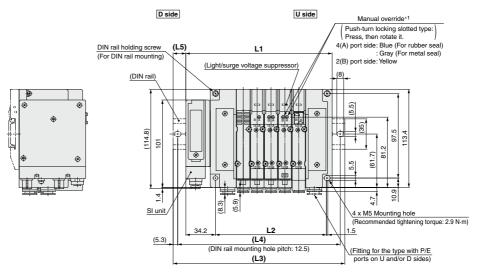

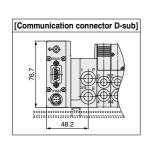

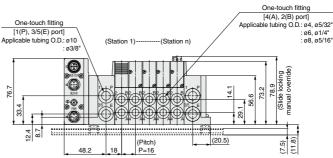

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10SQA-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5


n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5

Dimensions: SY7000 Series

Plug-in Connector Connecting Base Type 10/Side Ported

SS5Y7-10S - Stations D - C6, N7 C8, N9 C10, N11 (D)

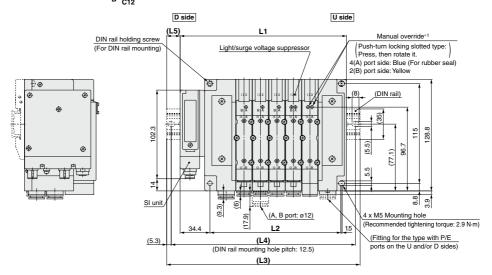

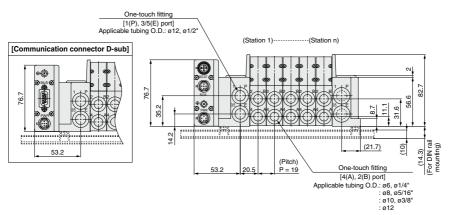

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10SQA-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

Type 12
Top Ported

# **Plug-in Connector Connecting Base**

EX260

# **SY3000/5000/7000** Series



RoHS

### **How to Order Manifolds**

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.



1 Sei	ries
3	SY3000
5	SY5000
7	SY7000

2 SI unit specifications (Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Ou	tput polarity)		Number	
(NPN)	Negative common (PNP)	Protocol	of outputs	Communication connector
0	*1	Without	SI unit	
QA	QAN	DeviceNet®	32	M12
QB	QBN	Devicemen	16	IVITZ
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	IVIIZ
NC	NCN	DP	32	D-sub
ND	NDN		16	D-Sub
VA	VAN	CC-Link	32	M12
VB	VBN	CC-LINK	16	IVIIZ
DA	DAN	EtherCAT	32	
DB	DBN	EtherCAT	16	M12
FA	FAN	DDOCINET	32	
FB	FBN	PROFINET	16	M12
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Eulenvet/IP***	16	IVI 12
*3	GAN	Ethernet	32	
_*3	GBN	POWERLINK	16	M12
*3	KAN	IO-Link	32*5	M12

- \*1 Without SI unit, the output polarity is decided by the SI unit used.

  Ensure a match with the common specification
- of the valves to be used.

  \*2 DIN rail cannot be mounted without SI unit.
- \*3 Positive common (NPN) type is not applicable. \*4 IP40 for the D-sub applicable communication
- connector specification
- \*5 Only the 32 outputs type is available.

3 Valve stations

In the case of the 32-output SI unit

	ouse or ti	ic or output of unit
Symbol	Stations	Note
02	2 stations	
- i	:	Double wiring*1
16	16 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 32 solenoids available)
24	24 etatione	(Op to 32 soleriolds available)

ln	the	case	of	the	16-output	SI	unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	-
02	2 stations	Considered Invested
- :	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 16 soleriolds available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
  - (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry

<u> </u>	- port chay
U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

•1 S For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

### 5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- The P and E ports are only available on the U and D sides for the bulti-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

### 6 P, E port size (One-touch fittings)

ymbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	


\* For N, sizes are in inches

### Mounting

Wilding		
Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations Specify a length longer	
	: than that of the standard	
D24	For 24 stations	rail.

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

### **How to Order Manifold Assembly**

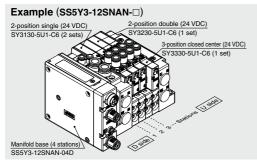

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the Web


Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 605.

Please download the Operation Manual via the SMC website, https://www.smcworld.com

- - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

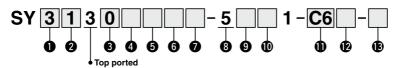

### Series

3	SY3000
5	SY5000
7	SY7000

### Type of actuation

1	O manitian	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1	duai 5-port	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

U i not type		
Nil	Internal pilot	
R	External pilot	

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

### Back pressure check valve (Built-in valve type)

	Nil	None	
	Н	Built-in	
* Only the rubber seal type is available. A			

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### Pilot valve option

Filot valve option		
Nil Standard (0.7 MPa)		
B Quick response type (0.7 MPa)		
K*1	High pressure type (1.0 MPa)	

\*1 Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard	
Т	With power saving circuit (Continuous duty type)	
Be sure to select the power saving circuit		

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

### Rated voltage


5	24 VDC

# Light/surge voltage suppressor and common specification

		opoomous	
Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	_	common
NS	ĺ		Negative
NZ	•		common

- Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is NiI (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

### Manual override

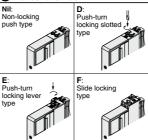

Refer to page 423 for the safety slide locking manual override.

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
С3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10		_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

### 13 Type of mounting screw

Type of illounting screw							
Nil	Round head combination screw						
В	Hexagon socket head cap screw						
K	Round head combination screw (Drop prevention type)						
Н	Hexagon socket head cap screw (Drop prevention type)						

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- mounting screw part numbers.

  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



# Plug-in Connector Connecting Base

EX126


# SY3000/5000/7000 Series

( E UK RoHS



### How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

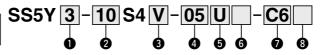

### Series SY3000 SY5000 SY7000

<b>②</b> Ty	ре
10	Side ported
11	Bottom ported*1

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).


### 3 SI unit Without SI unit CC-Link (Positive common NPN)

Only a terminal block plate is mounted for the valve without SI unit

v	vaive	Stations					
Symbol	Stations	Note					
02	2 stations						
-	:	Double wiring*1					
08	8 stations						
02	2 stations	0					
-	:	Specified layout*2					
16	16 stations	(Up to 16 solenoids available)					

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

# **How to Order Manifold Assembly**

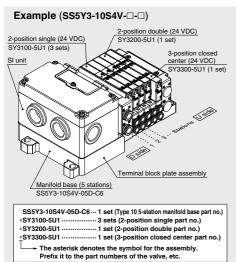

- . For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 549. In such cases, use caution as there is also output on the A and B ports on the base side.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

### 6 SUP/FXH block assembly

O OOI /EXTI DIOCK describing						
Nil Internal pilot						
S	Internal pilot, Built-in silencer					
R	External pilot					

- 3/5(E) port is plugged for the built-in silencer
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalon and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 606. Please download the Operation Manual via the SMC website, https://www. smcworld.com



<u>v</u>	A, B port size	(wetri	c/One	-toucn	TITTING	3)
Symbol	A. B port		10/Side			
Syllibul	A, B port	SY3000	SY5000	SY7000	SY5000	S

Cumbal	Symbol .		B port			ропеа			
Sylliuui		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4			ø4	•	•	_	•	_	
C6	igh		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	2010
C10	0,		ø10	_	_	•	_	•	00
C12			ø12	_	_	•	_	•	-
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12			ø12	_	_	•	_	_	Jelles I
B4	∃lbow*2		ø4	•	•	_	_	_	
B6	ĕ	/ard	ø6	•	•	•	_	_	
B8	_	Downward	ø8	_	•	•	ı	-	
B10		á	ø10	_	-	•	_	_	
B12			ø12	_	_	•	_	_	
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12	

A, B port size (Inch/One-touch fitting)

Symbol	Δ		B port		10/Side		Type 11/B0			
Sylliuui		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_		
N3			ø5/32"	•	•	_	•	_		
N7	igh		ø1/4"	•	•	•	•	•		
N9	Straight		ø5/16"	_	•	•	•	•		
N11	0,		ø3/8"	_	_	•	_	•	al Section	
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•		
LN3			ø5/32"	•	_	_	_	_		
LN7		Upward	ø1/4"	•	•	_	_	_		
LN9		ď	ø5/16"	_	•	_	_	_		
LN11		_	ø3/8"	_	_	•	_	_	y Harry	
BN3	W*2	Б	ø5/32"	•	_	_	_	_		
BN7	Elbow*2	Elbo	Downward	ø1/4"	•	•	_	_	_	
BN9			_	W	ø5/16"	_	•	_	_	_
BN11		ŏ	ø3/8"	_	_	•	_	_		
LM*1		(Incl	w port, mixed sizes uding upward and ownward piping)	•	•	•	_	_		
P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"				

<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

**SMC** 

### 8 Mounting and Option

Cumbal	Mounting	Opt			
Symbol	iviounting	Name plate	Station number		
Nil	Discort	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D□		_	_		
A□	DIN rail mounting	•	•		
B□	mounting	•	_		

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type
   11 bottom-ported type.
- 11 bottom-ported type.
   Refer to page 708 for the fixation of DIN rail mounting type manifold.


### DIN Rail Option

Nil	Standard length									
0	Without DIN rail (with bracket)									
3	For 3 stations	Specify a longer rail								
:		than the total length								
16	For 16 stations	of specified stations.								

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

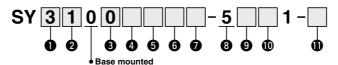

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single					
2	2-position	Double Closed center Exhaust center					
3		Closed center					
4	3-position	Exhaust center					
5							
<b>A</b> *1	4	N.C./N.C.					
B*1	4-position dual 3-port	N.O./N.O.					
C*1	duai 5-port	N.C./N.O.					

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

ſ	0	Rubber seal
	1	Metal seal

### Pilot type

Nil

Nil	Internal pilot
R	External pilot
- 14/han	aninating the systemal pilet enseification

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

### 5 Back pressure check valve (Built-in valve type)

ı	H Built-in							
×	<ul> <li>Only the rubber seal type is available. A</li> </ul>							
	manifold installed type is available if a back							
	pressu	ure check valve with a metal seal is						

None

- required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### A Pilot valve option

	<b>♥</b> F III	ot vaive option
	Standard (0.7 MPa)	
	В	Quick response type (0.7 MPa)
	<b>K</b> *1	High pressure type (1.0 MPa)


Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
. Po ou	ro to coloot the newer coving circuit

- type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

### Manual override

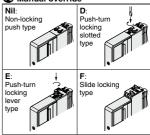

Refer to page 423 for the safety slide locking manual override.

### 8 Rated voltage

5	24 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•	•			
S	-		Positive		
Z	•		common		

\* Only "Z" type is available with a power saving circuit.

### Type of mounting screw

Nil Round head combination screw						
B Hexagon socket head cap screw						
K Round head combination screw (Drop prevention t						
Н	Hexagon socket head cap screw (Drop prevention type)					


- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve


Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX126

SS5Y3-10S4V - Stations D C2, N1 (D) C6, N7 (D)

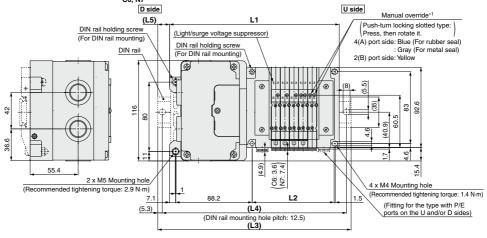

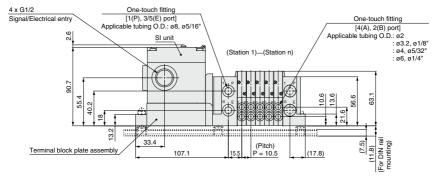

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10S4V-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12




Dimensions: SY5000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX126

SS5Y5-10S4V - Stations D - C6, N7 (D)

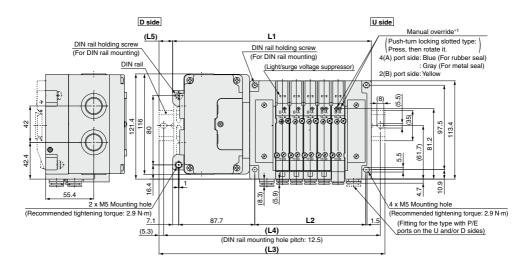

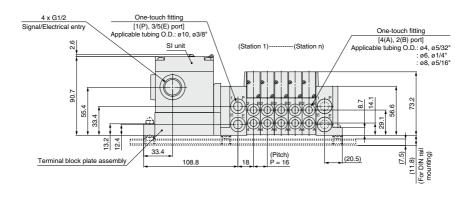

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10S4V-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15




Dimensions: SY7000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX126

SS5Y7-10S4 - Stations D - C8, N9 C12, N11 (D)

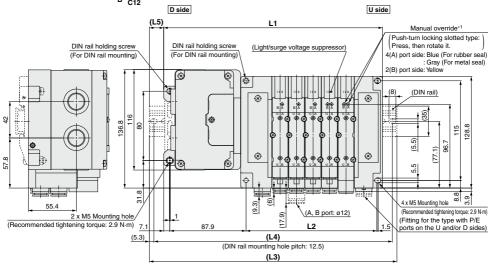

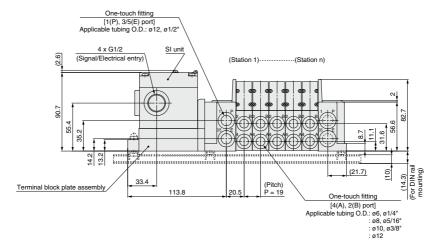

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10S4V-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



# Plug-in Connector Connecting Base

Type 12 Top Ported


# SY3000/5000/7000 Series

( E UK RoHS



### How to Order Manifolds

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.

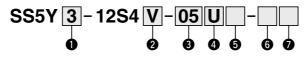

### A Series

	•	
	3	SY3000
	5	SY5000
	7	SY7000

### 2 Stunit

Or unit				
	0	Without SI unit		
	٧	CC-Link (Positive common NPN)		

\* Only a terminal block plate is mounted for the valve without SI unit

### Valve stations

Stations	Note
2 stations	
- :	Double wiring*1
8 stations	
2 stations	0
- :	Specified layout*2
16 stations	(Up to 16 solenoids available)
	2 stations : 8 stations 2 stations :

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

### A P F nort entry

• i , z port ontry					
U*1	U side (2 to 10 stations)				
<b>D</b> *1	D side (2 to 10 stations)				
В	Both sides (2 to 16 stations)				


\*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

### 5 SUP/EXH block assembly

Nil	Internal pilot			
S	Internal pilot, Built-in silencer			
R	External pilot			

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

### **How to Order Manifold Assembly**

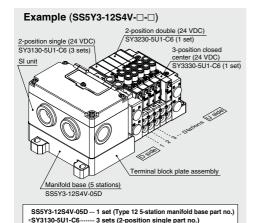

 For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

\*SY3230-5U1-C6------ 1 set (2-position double part no.) \*SY3330-5U1-C6...... 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

6 P F port size (One-touch fitting

	<u> </u>	E port size	(One-touch littings)				
	Symbol	SY3000	SY5000	SY7000			
	Nil	ø8	ø10	ø12			
	N	ø5/16"	ø3/8"	ø1/2"			

For N. sizes are in inches



• mounting					
Nil	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations	Specify a length			
:	:	longer than that of			
D16	For 16 stations	the standard rail.			


\* Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 606. Please download the Operation Manual via the SMC website, https://www.smcworld.com



### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

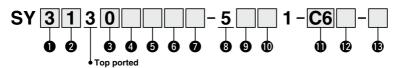

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	duai 5-port	N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

### A Pilot type

Nil

Nil	Internal pilot
R	External pilot
* When	selecting the external pilot specification

for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

### 5 Back pressure check valve (Built-in valve type)

н	Built-in
* Only t	he rubber seal type is available. A
manifo	old installed type is available if a back
pressu	ure check valve with a metal seal is

None

- required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type
	re to select the power saving circuit

energized for long periods of time. Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

### Rated voltage

	iou roitugo
5	24 VDC

### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	ı	•	Non-polar
U	•		Non-polar
S	_		Positive
Z	•		common

\* Only "Z" type is available with a power saving circuit.

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4 C6	ø4	•	•	
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)


Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_		•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

### Manual override

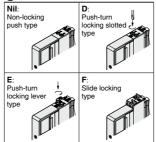

Refer to page 423 for the safety slide locking manual override.

### 13 Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and
- mounting screw part numbers.
  "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



# Type 10 **Type 11 Bottom Ported**

# Plug-in Connector Connecting Base

EX120


# SY3000/5000/7000 Series

( E UK RoHS



### How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

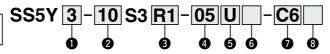

### Series

3	SY3000
5	SY5000
7	SY7000

# **A** Type

<b>G</b> 19	pe			
10		Side ported		
11		Bottom ported*	1	

\*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (from page 574).

### SI unit

0	Without SI unit						
Q	DeviceNet® (Positive common NPN)						
R1	OMRON CompoBus/S	16 outputs					
R2	(Positive common NPN)	8 outputs					
V	CC-Link (Positive common NPN)						
ZB*1	CompoNet®	Positive common NPN					
ZBN*1	Componer	Negative common PNP					

- \*1 The communication connector (for the opposite side) is not provided. Please order it separately.
- Ensure a match with the common specification of the valve to be used.


### 4 Valve stations

Symbol	Stations	Note				
02	2 stations					
- :	- :	Double wiring*1				
08	8 stations	Ç .				
02	2 stations	0 15 11 112				
:	:	Specified layout*2				
16	16 stations	(Up to 16 solenoids available)				

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.
- \* Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated

# Example (SS5Y3-10S3V-

**How to Order Manifold Assembly** 

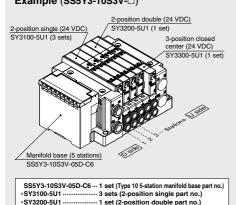

 For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold part number, state the valves to be mounted in order starting. with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

\*SY3300-5U1 ...... 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

When mixing top-ported configurations, select from those listed on page 557. In such cases, use caution as there is also output on the A and B ports on the base side

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

### 6 SUP/EXH block assembly

	·
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\* 3/5(E) port is plugged for the built-in silencer

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 607. Please download the Operation Manual via the SMC website, https://www.smcworld.com



## A, B port size (Metric/One-touch fitting)

Symbol	A, B port					Type 11/Bo			
Syllibol		71, D port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	
C4	_		ø4	•	•	I	•	I	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	
C10	,		ø10	_	I	•	_	•	SEE SEE
C12			ø12	_	_	•	_	•	•
CM*1		Straig	ght port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•		_		
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_		•	_		
L12	2		ø12	_	_	•	_	_	O Jallan
B4	Elbow*2	_	ø4	•	•	_	_	_	
B6	ä	/ard	ø6	•	•	•	_		
B8		Downward	ø8	_	•	•	_	_	
B10			á	ø10	_	_	•	_	_
B12			ø12	_		•	_		
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	-	
			P, E port size (One-touch fittings)			ø12	ø10	ø12	

### A, B port size (Inch/One-touch fitting)

Symbol	A, B port		туре	10/5106	ported	Type 11/bu	illom porteu		
Oyilloui		А,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1		ø1/8"		•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	ight		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"	_	•	•	•	•	
N11	U)		ø3/8"	_	_	•	_	•	A LONG
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		ard	ø1/4"	•	•	_	_	_	
LN9		Upward	ø5/16"	_	•	_	_	_	
LN11		_	ø3/8"	_	_	•	_	_	
BN3	Elbow*2	p.	ø5/32"	•	_	_	_	_	
BN7	a	Downward	ø1/4"	•	•	_	_	_	
BN9	ш	W	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

Type 10/Side ported Type 11/Rottom ported

- \*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM."

  The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619).

### 8 Mounting and Option

Cumbal	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Discort	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	5.0.	_	_	
A□	DIN rail mounting	•	•	
B□	mounting	•		

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

### **DIN Rail Option**

Nil	Standard length					
0	Without DIN rail (with bracket)					
3	For 3 stations	Specify a longer rail				
- :		than the total length				
16	For 16 stations	of specified stations.				


If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)





### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

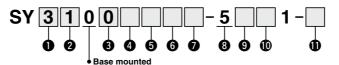

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### Type of actuation

1	2-position	Single
2	z-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

	71
0	Rubber seal
1	Metal seal

### Pilot type

C PIIC	от туре	)
Nil	Internal pilot	Internal pilot
R	External pilot	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.


### 8 Rated voltage

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		14011 polat
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

### Manual override

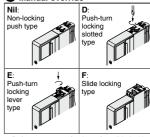

 Refer to page 423 for the safety slide locking manual override.

### Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- wave is removed to maintenance, etc.

  When ordering a valve individually, the
  base gasket is not included.

  Since the base gasket is attached to the
  manifold, please order the base gasket
  separately if it is needed for maintenance.
  Refer to page 611 for base gasket and
  mounting screw part numbers.
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve




Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX120

 $SS5Y3-10S3 \square - \underbrace{Stations}_{D} \overset{U}{\underset{C4, N3}{C4, N3}} \overset{C2}{\underset{C4, N3}{N1}} (D)$ 

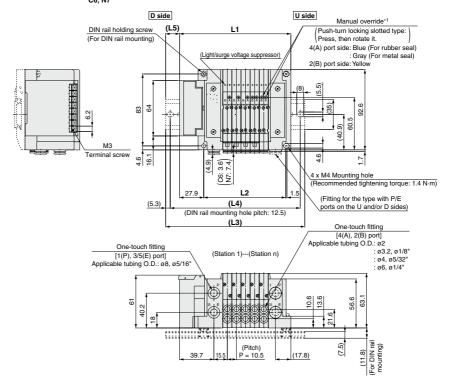

- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10S3V-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5





Dimensions: SY5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

SS5Y5-10S3 - Stations D - C6, N7 (D)

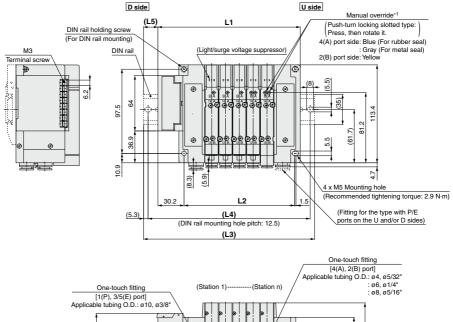

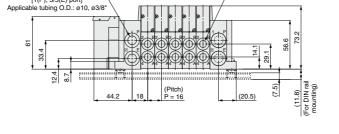

- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

  \* These figures show the "SSSY5-10S3V-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16





Dimensions: SY7000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX120

SS5Y7-10S3 - Stations B C C6, N7 C8 N9 C16, N111 (D)

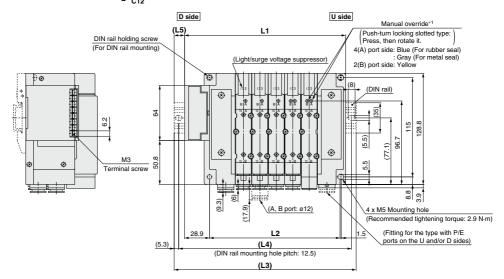

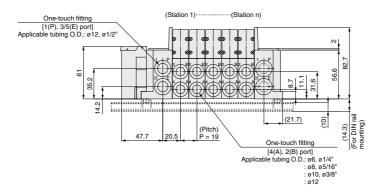

- \*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y7-10S3V-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14



# Plug-in Connector Connecting Base

EX120

Type 12 Top Ported

# SY3000/5000/7000 Series

( E UK RoHS


4 P, E port entry

E port entry.



### How to Order Manifolds

Refer to pages 571 to 573 for the dimensions of Type 12/Top-ported type.

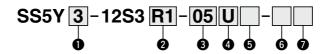

# Series

	•	
	3	SY3000
	5	SY5000
	7	SY7000

### SI unit

0	Without SI unit									
Q	DeviceNet® (Positive common NPN)									
R1	OMRON CompoBus/S	16 outputs								
R2	(Positive common NPN)	8 outputs								
V	CC-Link (Positiv	e common NPN)								
ZB*1	CompoNet®	Positive common NPN								
ZBN*1	Componer	Negative common PNP								

- \*1 The communication connector (for the opposite side) is not provided. Please order it separately.
- \* Ensure a match with the common specification of the valve to be used.

### Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
:	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 solerloids available)

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly. \* Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.


	NII	Internal pilot
S Internal pilot, Built-in silencer		Internal pilot, Built-in silencer
	R	External pilot
* The P and E ports are only available on the		

5 SUP/EXH block assembly

U side (2 to 10 stations) D side (2 to 10 stations) Both sides (2 to 16 stations) \*1 5 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P,

U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

### How to Order Manifold Assembly

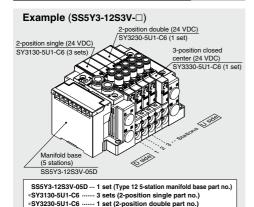

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc. . For the valve arrangement, the valve closest to the D side is considered the 1st station.

SY3330-5U1-C6 ······ 1 set (3-position closed center part no.)

. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

### 6 P, E port size (One-touch fittings)

			J-,
Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"

\* For N sizes are in inches

### **Mounting**


	Wounting		
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounti	ng (Without DIN rail)	
D3	For 3 stations	Specify a length	
:	:	longer than that of	
D16	For 16 stations	the standard rail.	

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 616 for the DIN rail part number.)
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 607. Please download the Operation Manual via the SMC website, https://www.smcworld.com



### How to Order Valves (With mounting screw)

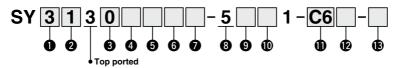

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

### A Pilot type

• · · · · · · · · · · · · · · · · · · ·	
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve

(Dulit-III valve type)	
Nil	None
Н	Built-in

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.


### Rated voltage

U na	leu voitage
5	24 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	-		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- Select "R," "U," "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

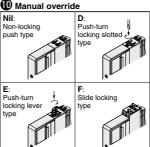

Refer to page 423 for the safety slide locking manual override

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2 C3	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_		•

### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

### Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

# Type 10 **Type** 11 **Bottom Ported**

# Plug-in Connector Connecting Base

**EX180** 


# SY3000/5000/7000 Series

CE UK CAN'US ROHS



### How to Order Manifolds

Refer to pages 569 (SY5000) and 570 (SY7000) for the dimensions of Type 11/Bottom-ported type.

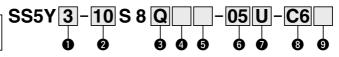

### Series

3	SY3000
5	SY5000
7	SY7000

## **A** Type

<u>U . y</u>	pe
10	Side ported
11	Bottom ported*1

\*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Mixed Mounting Type Manifold" (Refer to page 574).

### SI unit

0	Without SI unit
Q	DeviceNet®
V	CC-Link

\* Only the connector block assembly is mounted for models without an SI unit.

### 4 SI unit output polarity. Number of outputs

	32 outputs	16 outputs
Without SI unit	N	il
Positive common (NPN)	2	3
Negative common (PNP)	4	5
* When "V" (CC-Link)	is selected	for the SI

- unit, only symbol "2" or "4" (32 outputs) can be selected.
- \* Ensure a match with the common specification of the valves to be used.

### **5** Communication connector

Nil	T-branch type
Α	Straight type
The	assemulation assessed and name

- The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- \* When not selecting an SI unit, the symbol will he "nil '

### 6 Valve stations

In the case of the 32-output SI unit


Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
16	16 stations		
02	2 stations	0 75 11 140	
:	:	Specified layout*2 (Up to 32 solenoids available)	
24	24 stations		

#### In the case of the 16-output SI unit

Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring*1	
08	8 stations		
02	2 stations	0	
:	- :	Specified layout*2	
16	16 stations	(Up to 16 solenoids available	

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* This also includes the number of the blanking plate assembly.
- \* For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

### How to Order Manifold Assembly

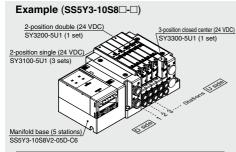

SS5Y3-10S8V2-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.)
*SY3100-5U1 3 sets (2-position single part no.)
*SY3200-5U1 1 set (2-position double part no.)

- \*SY3300-5U1 ------ 1 set (3-position closed center part no.) The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.
- . For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- When mixing top-ported configurations, select from those listed on page 565. In such cases, use caution as there is also output on the A and B ports on the base side Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J
- (- (-)			

- 3/5(E) port is plugged for the built-in silencer type.
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 608. Please download the Operation Manual via the SMC website: https://www.smcworld.com

#### 8 A, B port size (Metric/One-touch fitting) Type 10/Side ported Type 11/Bottom ported A, B port SY3000 SY5000 SY7000 SY5000 SY7000 C2 ø2 СЗ ø3.2 C4 ø4 • C6 ø6 • • C8 ø8 • C10 ø10 • C12 ø12 • CM\*1 Straight port, mixed sizes • • L4 α4 • L6 ø6 • L8 ø8 • L10 ø10 L12 ø12 В4 ø4 B6 ø6 • В8 ø8 • • B10 ø10 **B12** ø12 • Elbow port, mixed size LM\* • • downward piping) P, E port size ø10 ø12 ø10 ø12 (One-touch fittings)

A, B port size (Inch/One-touch fitting)			
		Type 10/Side ported	Tune 11/Rottom ported

Symbol	A, B port		Doom	i ype	10/Side	ропеа	Type 11/B0	ntom portea					
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000						
N1			ø1/8"	•	_	_	_	_					
N3			ø5/32"	•	•	_	•	_					
N7	ight		ø1/4"	•	•	•	•	•					
N9	Straight		ø5/16"	_	•	•	•	•					
N11	0,		ø3/8"	_	_	•	_	•	algebra				
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	-				
LN3			ø5/32"	•	_	_	_	_					
LN7	l la		arc	ø1/4"	•	•	_	_	_				
LN9			Upward	ø5/16"	_	•	_	_	_				
LN11	٥.	_	ø3/8"			•		_	O DESCRIPTION OF THE PERSON OF				
BN3	*×	ē	ø5/32"	•	_	_	_	_					
BN7	Elbow*2	Elbo	Elbo	Elbo	Elbo	wa	ø1/4"	•	•	_	_	_	
BN9						۳	Downward	ø5/16"	_	•	_	_	_
BN11		ŏ	ø3/8"	_	_	•	_	_					
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_					
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"						

<sup>\*1</sup> Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

### Mounting and Option


	Mounting	Option Name plate Station number		DIN Rail Option			
Symbol		Name plate	Station number		Nil	Standa	ard length
Nil	Direct mounting		_		0		rail (with bracket)
AA		•	•		3	For 3 stations	Specify a longer
BA		•	_		:		rail than the total length of specified
D□	5 m	_		l	24	For 24 stations	stations.
A□	DIN rail mounting	•	•				
В□	mounting	•	_				

- Enter the number of stations inside 
   □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \* Only direct mounting is available for Type 11 (Bottom ported).
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

<sup>\*2</sup> To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 620).

### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

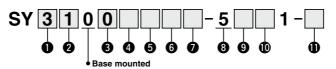

### 1 Series

<b>9 5</b> 51.65		
3	SY3000	
5	SY5000	
7	SY7000	

### 2 Type of actuation

1	2-position	Single		
2		Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	uuai 3-port	N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

### A Pilot type

Pilot type				
Nil	Internal pilot			
R	External pilot			

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve

(Built-in valve type)		
Nil	None	
ш	Duilt in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High-pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high-pressure type.

### Coil type

NII	Standard
Т	With power-saving circuit (Continuous duty type
* Re sı	ire to select the nower-saving circuit

- Be sure to select the power-saving circuit type when the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power-saving circuit is selected. Refer to page 705 for details.

### Rated voltage


5	24 VDC

### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	ı		Non-polar
U	•		Non-polai
S	_	•	Positive
Z	•	_	common
NS	-		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- \* Only "Z" and "NZ" are available with a power-saving circuit.

### Manual override

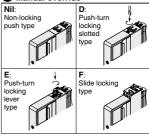

 Refer to page 423 for the safety slide locking manual override.

### Type of mounting screw

• '/	· · · · · · · · · · · · · · · · ·
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw hart numbers.
- mounting screw part numbers.
  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


Dimensions: SY3000 Series

Plug-in
Connector Connecting Base

Type 10/Side Ported EX180

SS5Y3-10S8 -- Stations D -C2, N1 (D) B C4, N3 (D)

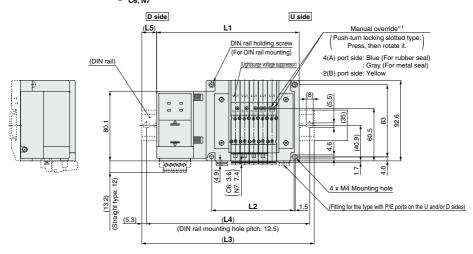

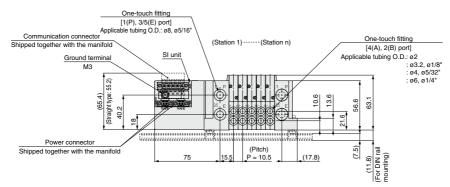


- \*1 Refer to page 566 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y3-10S8V2-05D-C6."
- \* Refer to page 571 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	132.3	142.8	153.3	163.8	174.3	184.8	195.3	205.8	216.3	226.8	237.3	247.8
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
L4	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L5	14	15	16	17	12	13	14	15	16	17	11.5	12.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3	
L2	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	
L3	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	
L4	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5	

Dimensions: SY5000 Series

Plug-in Connector Connecting Base Type 10/Side Ported

 $SS5Y5-10S8 \square \square - \underbrace{Stations}_{D} \stackrel{U}{\underset{C6, N7}{C4, N3}} \stackrel{C4, N3}{\underset{C8, N9}{N7}} \textbf{(D)}$ 

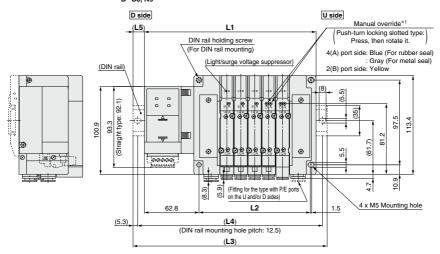

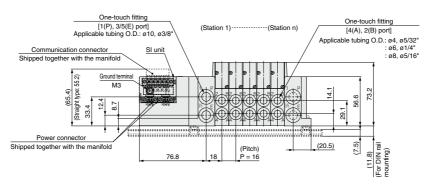


- \*1 Refer to page 567 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- \* These figures show the "SS5Y5-10S8V2-05D-C8."
- \* Refer to page 572 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	149.3	165.3	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3
L2	80	96	112	128	144	160	176	192	208	224	240	256
L3	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5
L4	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5
n: Ctations	1/1	15	16	17	10	10	20	21	22	22	24	
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 341.3	<b>15</b> 357.3	<b>16</b> 373.3	<b>17</b> 389.3	<b>18</b> 405.3	<b>19</b> 421.3	<b>20</b> 437.3	<b>21</b> 453.3	<b>22</b> 469.3	<b>23</b> 485.3	<b>24</b> 501.3	
		_	_		_		_			_		
L1	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3	485.3	501.3	
L1 L2	341.3 272	357.3 288	373.3 304	389.3 320	405.3 336	421.3 352	437.3 368	453.3 384	469.3 400	485.3 416	501.3 432	
L1 L2 L3	341.3 272 373	357.3 288 385.5	373.3 304 398	389.3 320 423	405.3 336 435.5	421.3 352 448	437.3 368 460.5	453.3 384 485.5	469.3 400 498	485.3 416 510.5	501.3 432 535.5	

Dimensions: SY7000 Series

Plug-in Connector Connecting Base Type 10/Side Ported EX180

SS5Y7-10S8 -- Stations D C6, N7 C8, N9 C10, N11 (D)

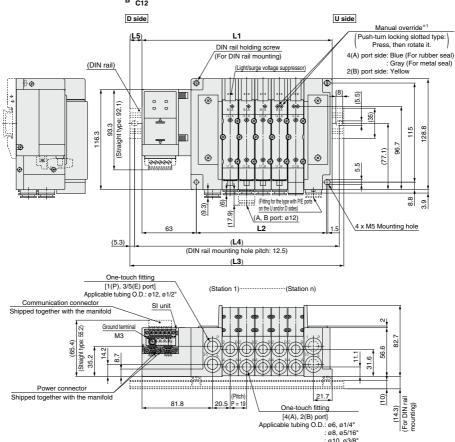

\*1 Refer to page 568 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

· ø12

- \* These figures show the "SS5Y7-10S8V2-05D-C10."
- \* Refer to page 573 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	163.5	182.5	201.5	220.5	239.5	258.5	277.5	296.5	315.5	334.5	353.5	372.5
L2	94	113	132	151	170	189	208	227	246	265	284	303
L3	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398
L4	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations	<b>14</b> 391.5	<b>15</b> 410.5	<b>16</b> 429.5	<b>17</b> 448.5	<b>18</b> 467.5	<b>19</b> 486.5	<b>20</b> 505.5	<b>21</b> 524.5	<b>22</b> 543.5	<b>23</b> 562.5	<b>24</b> 581.5	
		_	_		_	_	_			_		
L1	391.5	410.5	429.5	448.5	467.5	486.5	505.5	524.5	543.5	562.5	581.5	
L1 L2	391.5 322	410.5 341	429.5 360	448.5 379	467.5 398	486.5 417	505.5 436	524.5 455	543.5 474	562.5 493	581.5 512	



# **Plug-in** Connector Connecting Base

EX180

Type 12 Top Ported

# SY3000/5000/7000 Series

CE UK CA BUS ROHS

### **How to Order Manifolds**



### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 3 SI unit output polarity, Number of outputs

	32 outputs	16 outputs		
Without SI unit	Nil			
Positive common (NPN)	2	3		
Negative common (PNP)	4	5		

- \* When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

### 2 SI unit

0	Without SI unit
Q	DeviceNet®
V	CC-Link

Only the connector block assembly is mounted for models without an SI unit.

### 4 Communication connector

INII	i -branch type
Α	Straight type
* The co	mmunication connector and power connector

- The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- \* When not selecting an SI unit, the symbol will be "nil."

6 P. E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
  \* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### Valve stations

In the case of the 32-output SI uni


in the case of the 32-output Si unit				
Symbol	Stations	Note		
02	2 stations			
:	1	Double wiring*1		
16	16 stations	_		
02	2 stations	0		
:	1	Specified layout*2		
24	24 stations	(Up to 32 solenoids available)		

### In the case of the 16-output SI unit

ii tile case of tile ro-output 3i ullit					
Symbol	Stations	Note			
02	2 stations				
:	1	Double wiring*1			
08	8 stations				
02	2 stations	0			
:	1	Specified layout*2 (Up to 16 solenoids available)			
16	16 stations	(Op to 16 soleriolds available)			

- \*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

## How to Order Manifold Assembly

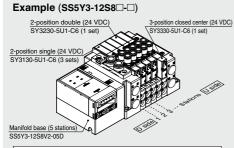

- SS5Y3-12S8V2-05D ... 1 set (Type 10 5-station manifold base part no.)

  \*SY3130-5U1-C6........ 3 sets (2-position single part no.)

  \*SY3230-5U1-C6....... 1 set (2-position double part no.)
- For the valve arrangement, the valve closest to the D side is considered the 1st station.
   Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

### P E port size (One-touch fittings)

• : , = poit oi=o (oiio touoii iitiiiigo)					
Symbol	SY3000	SY5000	SY7000		
Nil	ø8	ø10	ø12		
N	ø5/16"	ø3/8"	ø1/2"	M	

\* For N, sizes are in inches.

### 8 Mounting


	J mounting			
Nil	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations Specify a longer			
:	rail than the standard length.			
D24				

 Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 608. Please download the Operation Manual via the SMC website: https://www.smcworld.com

### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

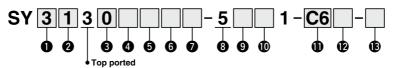

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3	3-position	Closed center		
4		Exhaust center		
5		Pressure center		
<b>A</b> *1	4	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1	uuai 3-poit	N.C./N.O.		

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

0	Rubber seal
1	Metal seal

### Pilot type

U PIII	ot type
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

(Built-in valve type)		
Nil	None	
ш	Duilt in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \* The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High-pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high-pressure type.

### 🕡 Coil type

ı	Nil	Standard		
T With power-saving circuit (Continuou		With power-saving circuit (Continuous duty typ		
	⊫ Be sui	re to select the power-saving circuit		

type when the valve is to be continuously energized for long periods of time.

\* Be careful of the energizing time when the

\* Be careful of the energizing time when the power-saving circuit is selected. Refer to page 705 for details.

### 8 Rated voltage


24 VDC

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" are available with a power-saving circuit.

### Manual override

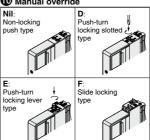

 Refer to page 423 for the safety slide locking manual override.

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

One-touch litting (wethe)			
A, B port	SY3000	SY5000	SY7000
ø2	•	_	_
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	_	_	•
ø12	_	_	•
	A, B port ø2 ø3.2 ø4 ø6 ø8 ø10	A, B port SY3000	A, B port SY3000 SY5000 02

#### One-touch fitting (Inch)

one readin maning (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

### 12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Only Nil is available for M5.

### (R) Type of mounting screw

• ',	oc or mounting corew	
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- \* When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.


# SY3000/5000/7000 Series **Common Dimensions**


SY3000 Series


Plug-in **Connector Connecting Base**  Type 10/Side Ported


External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y3-10□-Stations U(S, R)-L□

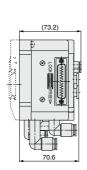

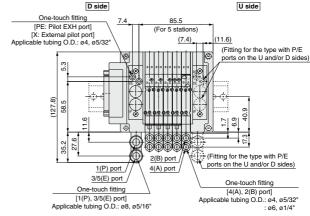

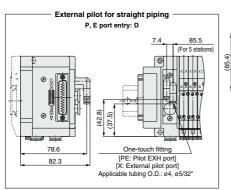

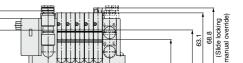


(17.8)


32.4 43.4 L6 ::

P= 10.5 \* These figures show the "SS5Y3-10F2-05DR-L6."

15.5


(Station 1)---(Station n)

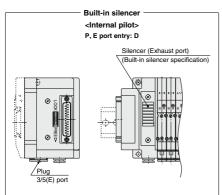

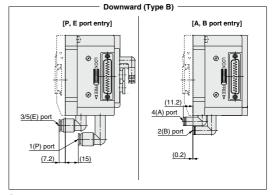

9.99

# Common Dimensions SY3000/5000/7000 Series

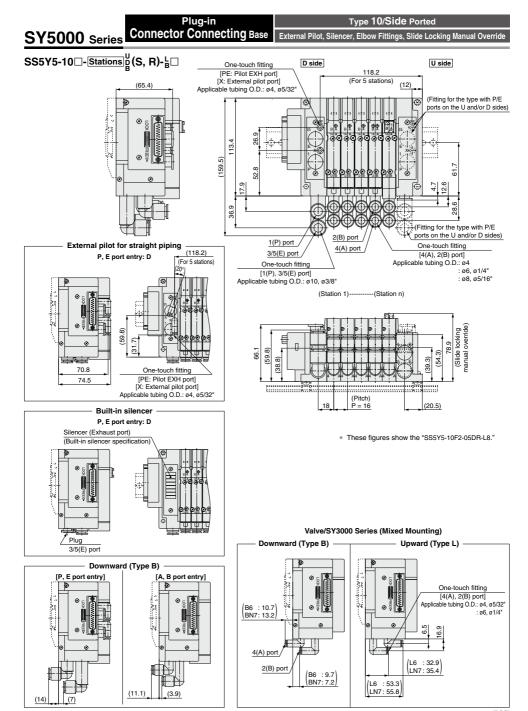


SY7000 Series

Plug-in

Type 10/Side Ported


Connector Connecting Base External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y7-10□-Stations U(S, R)-L□

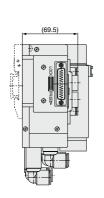


One-touch fitting D side U side [PE: Pilot EXH port] 138.1 [X: External pilot port] (For 5 stations) (10.9) Applicable tubing O.D.: ø6, ø1/4" (Fitting for the type with P/E ports on the U and/or D sides) ⊗ 4 45 49.4 28.8 (175.6) 8 س 1 37. 16.6 (Fitting for the type with P/E 1(P) port ports on the U and/or D sides) 3/5(E) port One-touch fitting [4(A), 2(B) port] One-touch fitting 4(A) port Applicable tubing O.D.: ø12 [1(P), 3/5(E) port] 2(B) port Applicable tubing O.D.: ø12, ø1/2 One-touch fitting [4(A), 2(B) port] Applicable tubing O.D.: ø6, ø1/4"


External pilot for straight piping P, E port entry: D (138.1) (For 5 stations) (74.2) (23.5) One-touch fitting 77.7 [PE: Pilot EXH port] [X: External pilot port] Applicable tubing O.D.: ø6, ø1/4"

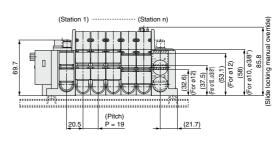

\* These figures show the "SS5Y7-10F2-05DR-LM."

: ø8, ø5/16" : ø10, ø3/8"

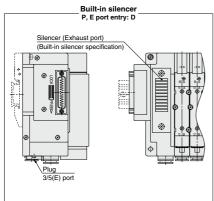

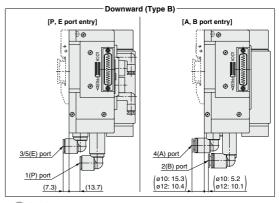



# Common Dimensions SY3000/5000/7000 Series


# SY5000 Series


### Plug-in Connector Connecting Base


Type 11/Bottom Ported
All Wirings

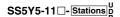


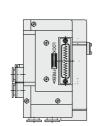


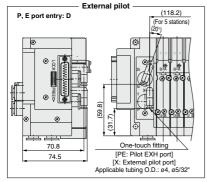


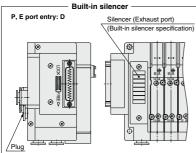

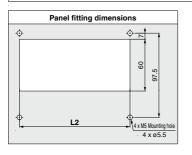

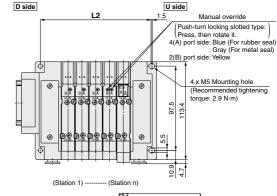

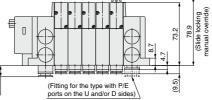

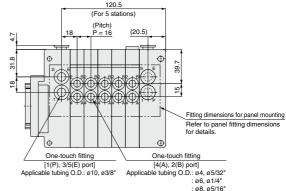

- \* These figures show the "SS5Y5-11F2-05D-C8."
- Refer to the pages below for L2 dimensions and other dimensions that are not specified in each wiring specification.


: p. 554

D-sub connector <IP40> : p. 434
D-sub connector <IP67> : p. 437
Flat ribbon cable : p. 440
Terminal block box (Spring type) : p. 451

Terminal block box : p. 460
Lead wire : p. 470
Circular connector : p. 480
EX500 (128 points) : p. 490

EX600 : pp. 507, 508 EX250 : p. 526 EX260 : p. 538 EX126 : p. 546

EX120

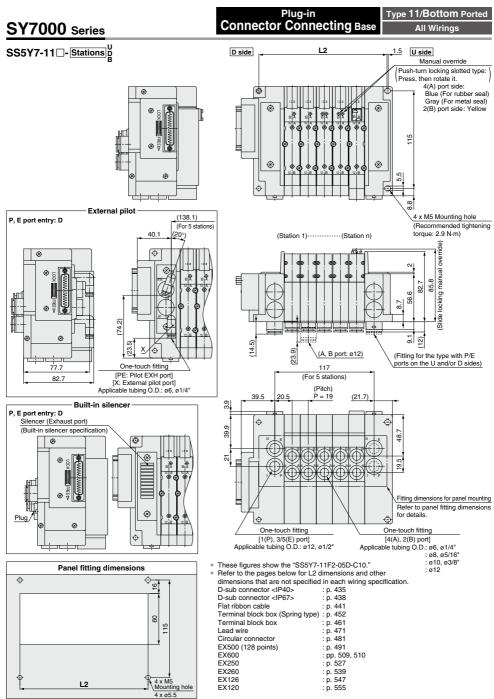


# Common Dimensions **SY3000/5000/7000 Series**


### SY3000 Series

# Plug-in Connecting Base

Type 12/Top Ported
All Wirings

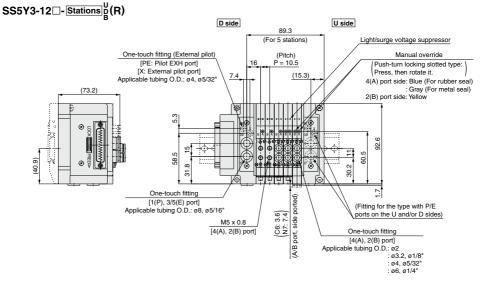

(Station 1)---(Station n)

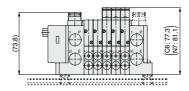


- \* These figures show the "SS5Y3-12F2-05D."
- \* For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 566 for dimensions of the silencer.
- \* Refer to the pages below for dimensions that are not specified in each wiring specification.


D-sub connector <ip40></ip40>	: p. 433
D-sub connector <ip67></ip67>	: p. 436
Flat ribbon cable	: p. 439
Terminal block box (Spring type)	: p. 450
Terminal block box	: p. 459
Lead wire	: p. 469
Circular connector	: p. 479
EX500 (128 points)	: p. 489
EX600	: pp. 505, 506
EX250	: p. 525
EX260	: p. 537
EX126	: p. 545
EX120	: p. 553

# SY5000 Series

Plug-in Connector Connecting Base Type 12/Top Ported
All Wirings

SS5Y5-12 $\square$ -Stations  $\stackrel{\text{U}}{p}$ (R)

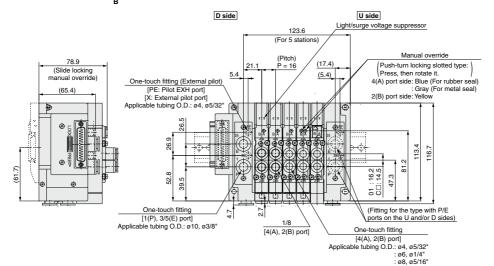

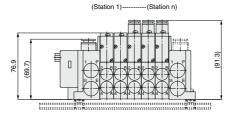

- \* These figures show the "SS5Y5-12F2-05D."
- \* For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 567 for dimensions of the silencer.
- Refer to the pages below for dimensions that are not specified in each wiring specification.

: p. 554

D-sub connector <IP40> : p. 434 D-sub connector <IP67> : p. 437 Flat ribbon cable : p. 440 Terminal block box (Spring type) : p. 451 Terminal block box : p. 460 : p. 470 Lead wire Circular connector : p. 480 EX500 (128 points) : p. 490 EX600 : pp. 507, 508 : p. 526 EX250 EX260 : p. 538 EX126 : p. 546


EX120

# Common Dimensions SY3000/5000/7000 Series

# SY7000 Series

Plug-in Connector Connecting Base Type 12/Top Ported
All Wirings

# SS5Y7-12 $\square$ -Stations $\stackrel{\text{U}}{p}$ (R)

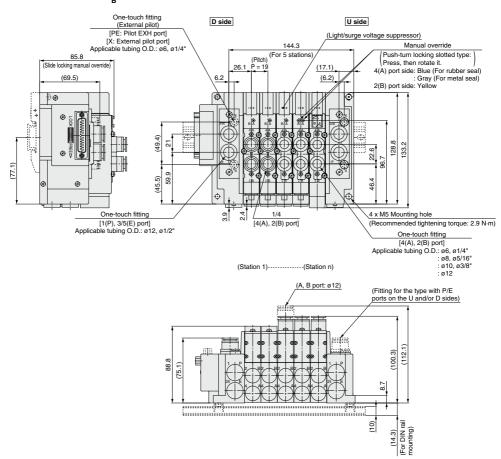

- \* These figures show the "SS5Y7-12F2-05D."
- \* For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 568 for dimensions of the silencer.
- \* Refer to the pages below for dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : p. 435 D-sub connector <IP67> : p. 438 Flat ribbon cable : p. 441 Terminal block box (Spring type) : p. 452 : p. 461 Terminal block box Lead wire : p. 471 Circular connector : p. 481 EX500 (128 points) : p. 491 : pp. 509, 510 EX600

EX600 : pp. 500
EX250 : p. 527
EX260 : p. 539
EX126 : p. 547
EX120 : p. 555



Type 10 Side Ported

Type 11
Bottom Ported

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX245 (IP65) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 EX180

# **SY3000/5000** Series

The SY3000 can be mounted onto the SY5000 size manifold.

#### **How to Order Manifolds**

C Pauls

Refer to the connector typ

Refer to page 583 for the dimensions of Type 11/ Bottom-ported type.

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code However, the manifold block width should be 12.5 mm.

1 Type

• ,,	<b>,</b>
10	Side ported
11	Bottom ported

2 Connector type

O connector type			
Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
P		26 pins	430
PG	Flat ribbon cable	20 pins	
PH		10 pins	
TC	Terminal block box	(Spring type)	448
Т	Terminal blo	ock box	456
1		34 cores	
L2	Lead wire	17 cores	466
L3		9 cores	
M	Circular connector		476
S□		EX500 Gateway Decentralized System 2 (128 points)	486
S6□	0	EX600	502
SA□	Serial transmission	EX245	514
S□	transmission	EX250	522
S□		EX260	530
S4□*1		EX126	542
S3□*1		EX120	550
S8□		EX180	558

- \*1 EX126, EX120 are not yet UL-compliant.
- \* Refer to the pages shown in the table above for details.

#### 8

# With Lead wire

Lead v	vire length
1	0.6 m
2	1.5 m
3	3 m

 With D-sub connector (IP40/67) and Flat ribbon cable

Connector entry direction	
1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### 4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

 Refer to on page 502 for the EX600, page 522 for the EX250, and page 558 for the EX180

#### 6 SUP/EXH block assembly

• • • • • • • • • • • • • • • • • • • •		
Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	
- (- (-)		

- 3/5(E) port is plugged for the built-in silencer type.
- Refer to on page 502 for the EX600, page 522 for the EX250, and page 558 for the EX180

7 Fitting type: One-touch fitting

Symbol		A, B port	
С		Stra	ight
L	Metric size	Elbow	Upward*2
В			Downward*2
N		Stra	ight
LN	Inch size	Elbow	Upward*2
BN			Downward*2
CM*1	Mixed sizes	Stra	ight
LM*1		Elbow (Including upward	and downward piping)*2

- Select CM or LM if mixed port sizes are to be used for each series.

  (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.
  - The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619). Elbow fittings are not available for Type 11 (Bottom ported).
- \* Elbow fittings: ø2, ø3.2, and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8", and ø5/32" are not available for the SY5000 series.

# Pug-in Connector Connecting Base SY3000/5000 Series

# 8 SY5000: A, B port size

#### (Metric/One-touch fitting) (Inch/One-touch fitting)

Symbol	Port size	Symbol	Port size
4	ø4	3	ø5/32"
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
Nil	For all stations of SY3000	Nil	For all stations of SY3000

(Inch/One-touch fitting)

Port size ø1/8" ø5/32" ø1/4" ø5/16"\*1

\* No symbol needs to be specified when fitting type "CM" or "LM" is selected.

#### 9 SY3000: A, B port size

#### (Metric/One-touch fitting)

Symbol	Port size	Symbol	Ι
2	ø2	1	Г
3	ø3.2	3	Γ
4	ø4	7	Ξ
6	ø6	9	Г
8	ø8*1		


- \*1 The valve pitch is the same as that of the SY5000.
- \* No symbol needs to be specified when fitting type "CM" or "LM" is selected.

#### Mounting

•	<u>.</u>			
Nil	Direct mounting			
D		DIN rail mounting (With DIN rail)		
D0		DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a length longer than that of the standard rail		
- :	:	[The SY5000 valve is now at a mountable length		
D24	For 24 stations	(manifold block length of 16 mm).]		
	D D0 D3	D		

- \* Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 581 to determine the L3 using "Calculation formula" for the DIN rail length.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### **How to Order Manifold Assembly**

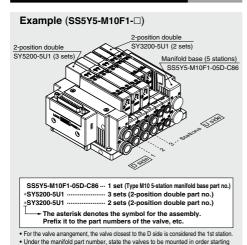

- When mixing top-ported configurations, select from those listed on page 587.
   In such cases, use caution as there is also output on the A and B ports on the base side.
  - Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.






# **SY3000/5000** Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

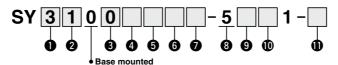

#### Series

• • •	• • • • • • • • • • • • • • • • • • • •	
3	SY3000	
5	SY5000	

#### Type of actuation

O manitian	Single	
2-position	Double	
3 4 3-position	Closed center	
	Exhaust center	
	Pressure center	
4-position	N.C./N.C.	
	N.O./N.O.	
duai 5-port	N.C./N.O.	
	<u> </u>	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve option

Nil Standard (0.7 MPa)		
В	B Quick response type (0.7 MPa)	
K*1 High pressure type (1.0 MPa)		


\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
Be cure to select the nower saving circuit	

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### Manual override

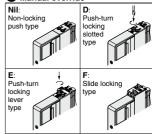

 Refer to page 423 for the safety slide locking manual override.

#### Seal type

0	Rubber seal
1	Metal seal

4 Pile	ot type		
Nil		Internal pilot	
R		External pilot	

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

NII	None	
Н	Built-in	_
. 0-1-1	be an indicate and a selection of the selection of	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

 Only 24 VDC is available for the serial transmission type.

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	1	_		
R	_		Non-polar	
U	•	•		
S	_		Positive	
Z	•	_	common	
NS	_	]	Negative	
NZ	•		common	

- \* "Nil" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion.
   Refer to page 706 for details. (Excludes when

Refer to page 706 for details. (Excludes when an SI unit manifold is used)

Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details. EX500: p. 488 EX600: p. 504 EX245: p. 514 EX250: p. 524

EX260: p. 532 EX126: p. 544 EX120: p. 552 EX180: p. 558

Type of mounting screw

Nil Round head combination screen		Round head combination screw	
	B Hexagon socket head cap screw		
	K	Round head combination screw (Drop prevention type	
	Н	Hexagon socket head cap screw (Drop prevention type)	

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
  "B" and "I" cannot be selected for the
- \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve



Type 10

Type 11 **Bottom Ported** 

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) EX245 (IP65) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 EX180

# SY5000/7000 Series

The SY5000 can be mounted onto the SY7000 size manifold.

Refer to page 584 for the dimensions of Type 11/ Bottom-ported type.

#### How to Order Manifolds

Mixed Mounting Type

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

1 Type

• . ,	<b>,</b>
10	Side ported
11	Bottom ported

2 Connector type

G connector type			
Symbol	Type		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	430
PG	Flat ribbon cable	20 pins	
PH		10 pins	
TC	Terminal block box	(Spring type)	448
Т	Terminal blo	ock box	456
L1		34 cores	
L2	Lead wire	17 cores	466
L3		9 cores	
M	Circular cor	nector	476
S□		EX500 Gateway Decentralized System 2 (128 points)	486
S6□	0	EX600	502
SA□	Serial transmission	EX245	514
S□	transmission	EX250	522
S□		EX260	530
S4□*1		EX126	542
S3□*1		EX120	550
S8□		EX180	558

- \*1 EX126, EX120 are not yet UL-compliant.
- \* Refer to the pages shown in the table above for details.

# With Lead wire

Lead wire length	
1	0.6 m
2	1.5 m
3	3 m

• With D-sub connector (IP40/67) and Flat ribbon cable

Connector entry direction		
1	Upward	
2	Lateral	

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type

### Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### A P. E port entry

	_ p
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\* Refer to 7 on page 502 for the EX600, page 522 for the EX250, and page 558 for the FX180

#### 6 SUP/EXH block assembly

• ••• /=/:: =:••:: accommon,		
Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	
- (- (-)		

- 3/5(E) port is plugged for the built-in silencer
- Refer to on page 502 for the EX600, page 522 for the EX250, and page 558 for the

Fitting type: One-touch fitting

Symbol	A, B port		
С		Stra	iight
L	Metric size	Elbow	Upward*2
В			Downward*2
N		Straight	
LN	Inch size	Elbow	Upward*2
BN			Downward*2
CM*1	Mixed sizes	Stra	ight
LM*1	iviixed sizes	Elbow (Including upward	and downward piping)*2

- \*1 Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.
  - The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 617 to 619). Elbow fittings are not available for Type 11 (Bottom ported).
- \* Elbow fittings: Ø1/4" and Ø5/16" are not available.

# 8 SY7000: A, B port size

#### (Metric/One-touch fitting)

Symbol	Port size	Symbol
6	ø6	7
8	ø8	9
10	ø10	11
12	ø12	Nil
Nil	For all stations of SY5000	

No symbol needs to be specified when fitting type "CM" or "LM" is selected

#### SY5000: A. B port size

#### (Metric/One-touch fitting)

(Inch/One-touch	fitting)

(Inch/One-touch fitting)

Port size

ø1/4"

ø5/16" ø3/8' For all stations of SY5000

Symbol	Port size	Symbol	Port size
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
10	ø10	11	ø3/8"
12	ø12		

- The valve pitch is 19 mm, the same as that of the SY7000.
- No symbol needs to be specified when fitting type "CM" or "LM" is

#### Mounting and Option


Cumbal	Mauntina	Option Name plate Station number	
Symbol	Mounting	Name plate	Station number
Nil		_	
AA	Direct mounting	•	•
BA	inounting	•	_
D□	DIN	_	
A□	DIN rail mounting	•	•
B□	mounting	•	_

**DIN Rail Option** 

Nil	Standard length		
0	Without DIN rail (with bracket)		
3	For 3 stations	Specify a longer rail	
:	:	than the total length	
24	For 24 stations	of specified stations.	

- \* Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type.
- \* Refer to page 581 to determine the L3 using "Calculation formula" for
- the DIN rail length. (For the SY3000 and SY5000 mixed mounting type) The manifold block width is 19 mm for both the SY5000 and SY7000
- sizes \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

#### **How to Order Manifold Assembly**

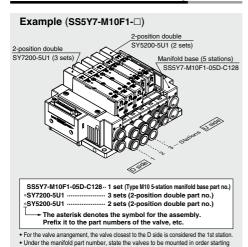

When mixing top-ported configurations, select from those listed on page 587. In such cases, use caution as there is also output on the A and B ports on the base side.

with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side






# **SY5000/7000** Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

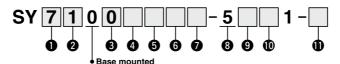

#### Series

• • •	• • • • • • • • • • • • • • • • • • • •	
5	SY5000	
7	SY7000	

#### Type of actuation

1	O position	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1	duai 5-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

NII	Standard
Т	With power saving circuit (Continuous duty type
* Be su	re to select the power saving circuit

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### Manual override

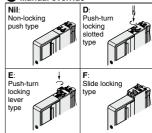

 Refer to page 423 for the safety slide locking manual override.

#### Seal type

	0	Rubber seal
	1	Metal seal

#### 4 Pilot type

R	External pilot
Nil	Internal pilot

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# 5 Back pressure check valve (Built-in valve type)

NII	None	
Н	Built-in	_
. 0-1-1	be an indicate and a selection of the selection of	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

 Only 24 VDC is available for the serial transmission type.

# 9 Light/surge voltage suppressor and common specification

	Symbol	With light	Surge voltage suppressor	Common specification			
	Nil	1	_				
	R	_		Non-polar			
	U	•					
	S	_		Positive			
	Z	•	_	common			
	NS	_		Negative			
	NZ	•		common			

- \* "Nil" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details. (Excludes when an SI unit manifold is used)

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- mounting screw part numbers.

  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.


# Pug-in Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY3000/5000 Series

Plug-in Connector Connecting Base

Type 10/Side Ported

Mixed Mounting Type

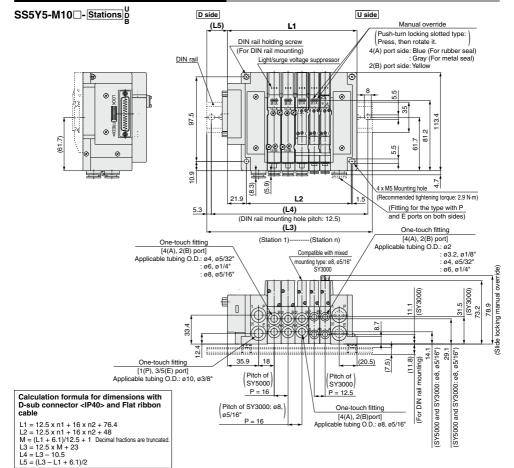

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø8, Ø5/16")

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

- n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø8, Ø5/16")
- n3: Number of I/O units or input block stations

  Refer to pages 507 and 508 for dimensions of the
  EX600 serial transmission with I/O unit and page
  526 for the EX250 serial transmission with input
  block when L6, b, and c are used for the
  calculation formula.

 Refer to pages 566 and 567 for dimensions of the external pilot, built-in silencer, and elbow fittings.

Coefficient	a	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 points)	88.7	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_




Dimensions: SY5000/7000 Series

Plug-in Connector Connecting Base Mixed Mounting Type

Type 10/Side Ported

SS5Y7-M10 - Stations

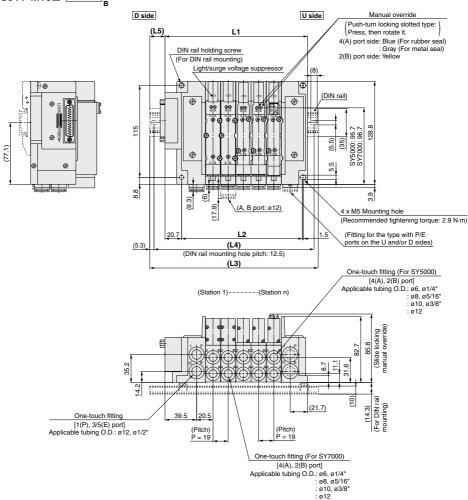

\* Refer to page 568 for dimensions of the external pilot and built-in silencer.

Refer to the pages below for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40> : p. 435 : p. 438 D-sub connector <IP67> Flat ribbon cable : p. 441 Terminal block box (Spring type) : pp. 451, 452 Terminal block box : p. 461 Lead wire : p. 471 Circular connector : p. 481 EX500 (128 points) : p. 491 EX600 : pp. 509, 510 EX250 : p. 527 EX260 : p. 539 EX126 : p. 547 FX120 : p. 555

# Pug-in Connector Connecting Base SY3000/5000/7000 Series


Dimensions: SY3000/5000 Series


Plug-in Connector Connecting Base


Type 11/Bottom Ported

Mixed Mounting Type

SS5Y5-M11 - Stations D

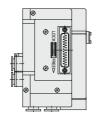

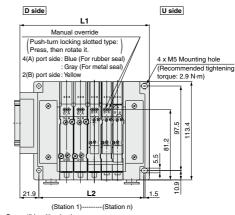

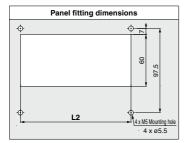

Compatible with mixed mounting type: e8, e5/16\*

SY3000

(Fitting for the type with P and E ports on both sides)

(Pitch of SY3000: e8, e5/16\*)

P=16

#### Calculation formula for dimensions L1 = 12.5 x n1 + 16 x n2 + a + b x n3 L2 = 12.5 x n1 + 16 x n2 + 48 L6 = b x n3 + c

- n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16")
- n3: Number of I/O units or input block stations
- \* Refer to pages 507 and 508 for dimensions of the EX600 serial transmission with I/O unit and page 526 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.

			4.	35.9 18					4	<b>-</b> →	(20	.5)				
ıq dim	ensions for pa	anel mounting	18 31.8	<b>♦</b>				***		\$   	39.7	SY5000 and   SY3000:	49.6	(SY3000)		
er to detail	One	dimensions  -touch fitt ), 3/5(E) p	ing								15	SY5000 and SY3000:	1 86, 85/10 /	(SY3000)		
Αp	oplicable tu			8"						/		(	One-to	uch f	itting	
				ch fitting (B) port]							App	licable	(4(A), tubing			
		Applica		O.D.: ø4, ø5/3	12"										: ø3.2,	
				: ø6, ø1/4		1		Or	no-to	uch fi	Hina				: ø4, ø	
				: ø8, ø5/1	6"	_				2(B) p	<u> </u>		_		: ø6, ø	1/4
ient	а	b	С			Αp	plica					8, ø5/1	6"			

(Pitch of SY5000)

P=16

D-sub connector <IP40> or Flat ribbon cable 76.4 D-sub connector <IP67> 90.5 Terminal block box (Spring type) 128 Terminal block box or Serial transmission: EX126 149.3 Lead wire or Circular connector 97 EX500 Gateway Decentralized System 2 (128 points) 88.7 47 Serial transmission: EX600 (M12 connector) 141.5 81.5 Serial transmission: EX600 (7/8 inch connector) 158 47 81.5 Serial transmission: EX250 141.5 21 81.5 Serial transmission: EX260 88.7 Serial transmission: EX120 84.7

Refe

 Refer to page 569 for dimensions of the external pilot and built-in silencer.

(Pitch of SY3000)

P=12.5

# Dimensions: SY5000/7000 Series


Plug-in Connector Connecting Base


Type 11/Bottom Ported


Mixed Mounting Type

SS5Y7-M11 - Stations



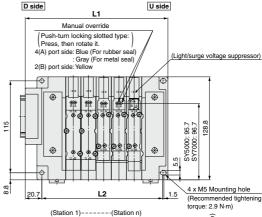

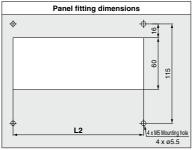


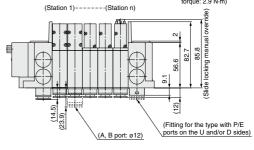

Applicable tubing O.D.: ø6, ø1/4"

: ø8, ø5/16"

: ø10, ø3/8"

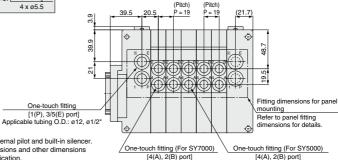

Applicable tubing O.D.: ø6, ø1/4"

: ø8, ø5/16"

: ø10, ø3/8"

\* Refer to page 570 for dimensions of the external pilot and built-in silencer.
\* Refer to the pages below for L1, L2 dimensions and other dimensions

that are not specified in each wiring specification.
Dimensions of Type 11/Bottom ported: p. 570
D-sub connector <|P40> p. 435
D-sub connector <|P67> p. 438
Flat ribbon cable p. 441
Terminal block box (Spring type) ; pp. 451, 452

Terminal block box : p. 461 Lead wire : p. 471 Circular connector : p. 481 EX500 (128 points) : p. 491 EX600 : pp. 509, 510

EX250 :p. 527 EX250 :p. 527 EX260 :p. 539 EX126 :p. 547 EX120 :p. 555

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable Terminal Block Box/Spring Type (IP67)

Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67)

EX600 (IP67) (EX245 (IP65) (EX250 (IP67) (EX260 (IP67) (EX126 (IP67) (EX120 (EX180

# /5000/7000 Series ← 문K

For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold.

For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

#### **How to Order Manifolds**

Refer to pages 572 and 573 for the dimensions of Type 12/Top-ported type.

Type 12

Top Ported

SS5Y 5 - M 12 F Mixed Mounting Type

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for Ø8 or Ø5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series.

#### A Saries

<b>U</b> 36	1103
5	SY5000
7	SY7000

#### With Lead wire Lead wire length

Leau wife length							
	1	0.6 m					
	2	1.5 m					

• With D-sub connector (IP40/67) and Flat ribbon cable

#### Connector entry direction

	<b>,</b>
1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### Valve stations

Symbol	Stations	Note
02		Some connectors have a limitation
::	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### P, E port size (One-touch fittings)

Symbol	SY5000	SY7000	Note
Nil	ø10	ø12	Metric size
N	ø3/8"	ø1/2"	Inch size

#### Connector type

Symbol	Type		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
P		26 pins	442
PG	Flat ribbon cable	20 pins	
PH	]	10 pins	
TC	Terminal block box	(Spring type)	453
Т	Terminal blo	ck box	462
L1		34 cores	
L2	Lead wire	17 cores	472
L3		9 cores	
M	Circular connector		482
S□	Serial transmission	EX500 Gateway Decentralized System 2 (128 points)	498
S6□		EX600	512
SA□		EX245	514
S□		EX250	528
S□		EX260	540
<b>S4</b> □*1		EX126	548
S3□*1	]	EX120	556
S8□		EX180	558

- \*1 EX126, EX120 are not yet UL-compliant.
- \* Refer to the pages shown in the table above for details.

9 P, I	y r, ⊑ portentry		
U*1	U side (2 to 10 stations)		
<b>D</b> *1	D side (2 to 10 stations)		
В	Both sides (2 to 24 stations)		

- \*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P. E. port entry.
- Refer to page 512 for the EX600 and 6 on page 528 for the EX250.

#### 6 SUP/EXH block assembly

	Nil	Internal pilot
	S	Internal pilot, Built-in silencer
R		External pilot


- \* The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- \* Refer to page 512 for the EX600 and 6 on page 528 for the EX250.

#### **Mounting**

Wounting			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN ra	il mounting (Without DIN rail)	
D3	stations	Specify a length longer than that of the standard rail.	
- :	:	[For the SS5Y5-M12, the SY50 valve is now at a mountable	
D24	For 24 stations	length (manifold block length of 16 mm).]	

- Refer to page 588 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

## How to Order Manifold Assembly

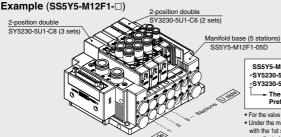

SS5Y5-M12F1-05D ··· 1 set (Type M12 5-station manifold base part no.) \*SY5230-5U1-C8 ...... 3 sets (2-position double part no.)


\*SY3230-5U1-C6 ······· 2 sets (2-position double part no.)

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting. with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

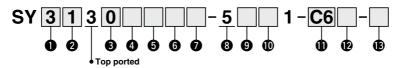

#### Series

3	SY3000
5	SY5000
7	SY7000

Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
B*1		N.O./N.O.
C*1		N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- \* Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 625 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000

#### 6 Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

# Coil type

	• con type			
Nil	Standard			
T With power saving circuit (Continuous d				

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage

5	24 VDC
6	12 VDC

Only 24 VDC is available for the serial transmission type.

#### 9 Light/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	-		Non-polar	
U	•	•		
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- "Nil" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion.
  - Refer to page 706 for details. (Excludes when an SI unit manifold is used)
- Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details. EX600: p. 513 EX500: p. 499 EX245: p. 514 EX250: p. 529 EX260: p. 541 EX126: p. 549

EX180: p. 558

#### Manual override

EX120: p. 557

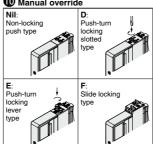

Refer to page 423 for the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_		•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5

### Type of mounting screw

	Nil	Round head combination screw
	В	Hexagon socket head cap screw
K Round head combination screw (Drop p		Round head combination screw (Drop prevention type)
	Н	Hexagon socket head cap screw (Drop prevention type)

- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 611 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.









# Dimensions: SY5000 Series

#### Plug-in Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported

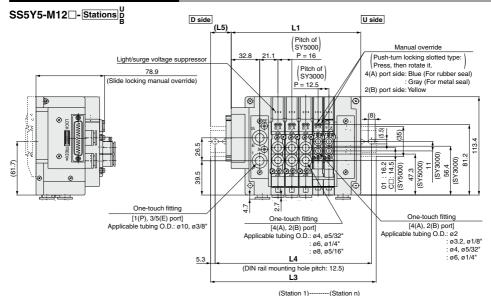

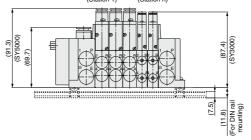

\* Refer to page 567 for dimensions of the external pilot and elbow fittings.

#### Calculation formula for dimensions with D-sub connector <IP40> and Flat ribbon cable

 $11 = 12.5 \times n1 + 16 \times n2 + 76.4$ L2 = 12.5 x n1 + 16 x n2 + 48

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

L3 = 12.5 x M + 23

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

#### Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector. EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

L2 = 12.5 x n1 + 16 x n2 x 48

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$ 

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

n3: Number of I/O units or input block stations

\* Refer to pages 507 and 508 for dimensions of the EX600 serial transmission with I/O unit and page 526 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.

Coefficient	a	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	_	_
Terminal block box or Serial transmission: EX126	149.3	_	
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 points)	88.7	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_




# Plugin Connector Connecting Base SY3000/5000/7000 Series

Dimensions: SY7000 Series

Plug-in Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported

SS5Y7-M12 - Stations

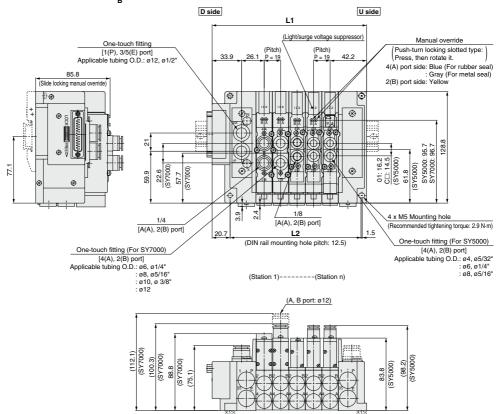


2 5 2 5

- \* Refer to page 568 for dimensions of the external pilot and elbow fittings.
- Refer to the pages below for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

Dimensions of Type 12/Top ported: p. 573 D-sub connector <IP40> : p. 435 D-sub connector <IP67> : p. 438 Flat ribbon cable : p. 441 : p. 452 Terminal block box (Spring type) : p. 461 Terminal block box : p. 471 Lead wire Circular connector : p. 481 EX500 (128 points) : p. 491 EX600 : pp. 509, 510 EX250 : p. 527 FX260 : p. 539 EX126 : p. 547 EX120 : p. 555




# SY3000/5000/7000 Series Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

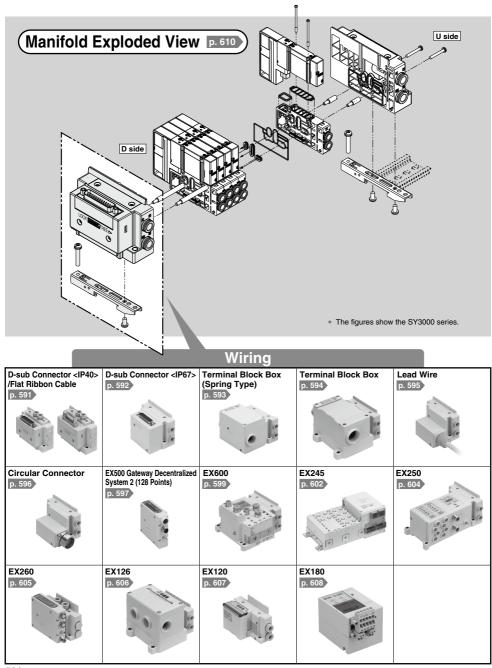


# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series



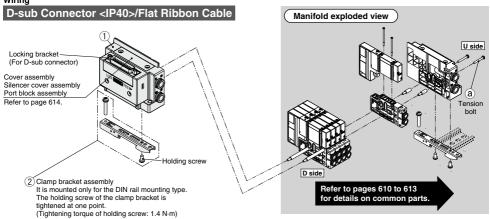

#### Manifold Parts Nos.

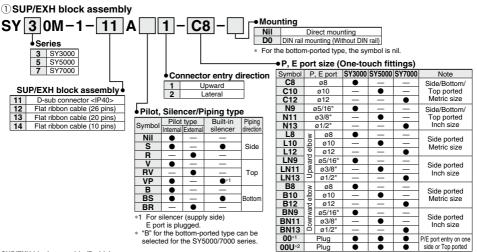

#### SUP/EXH block assembly (D side)

accessories and the number of accessories				
Accessories	SY3000	SY5000 SY7000		
a Tension bolt	None*1	3 pcs.		


<sup>\*1.</sup> Since the nuts are embedded in the SUP/EXH block

#### 2 Clamp bracket assembly


-	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly

<sup>&</sup>quot;00U" is available only for the D-sub connector type and it has an inch size locking bracket.

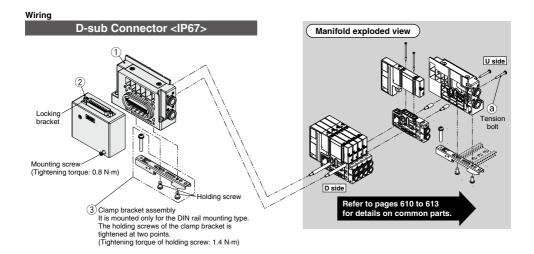

#### Manifold Parts Nos.

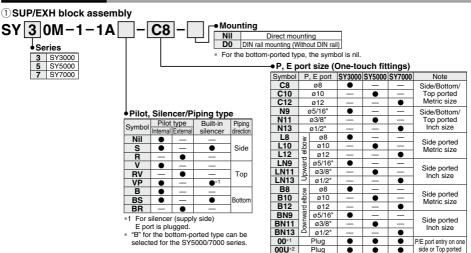

#### SUP/EXH block assembly (D side)

accessories and the number of accessories

accessories and the number of accessories			
Accessories	SY3000	SY5000 SY7000	
a Tension bolt	None*1	3 pcs.	

<sup>\*1</sup> Since the nuts are embedded in the SUP/EXH block

#### 2 D-sub connector block assembly < IP67>

- D Gub Goilliog	or brook ac	oob.y < o
Part no.	Connector direction	Locking bracket
SY30M-14-9A1	Тор	Metric size
SY30M-14-9A2	Side	Welfic Size
SY30M-14-9A1U	Тор	Inch size
SY30M-14-9A2U	Side	IIICII SIZE

#### ③ Clamp bracket assembly

© claimp arabitot accoming		
Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	


selected for the pilot and the piping.

\*2 "00U" has an inch size locking bracket.

\*1 It can be selected only if no symbol or "S" or "V" or "B" is


<sup>\*</sup> Part number is for one assembly.

# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

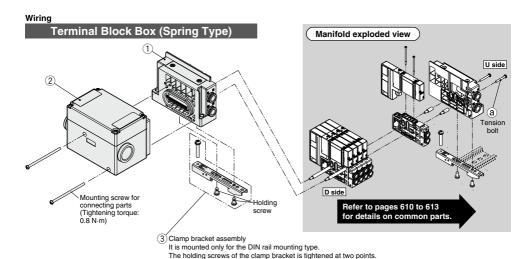

(Tightening torque of holding screw: 1.4 N·m)

#### **Manifold Parts Nos.**

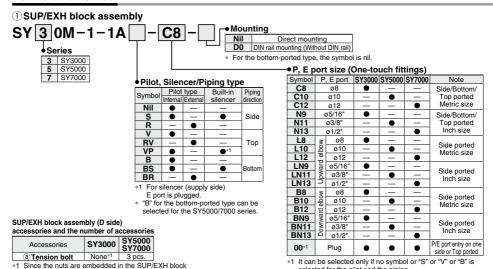

#### 2 Terminal block assembly


#### SY30M-130-1A

#### ③ Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly

selected for the pilot and the piping.

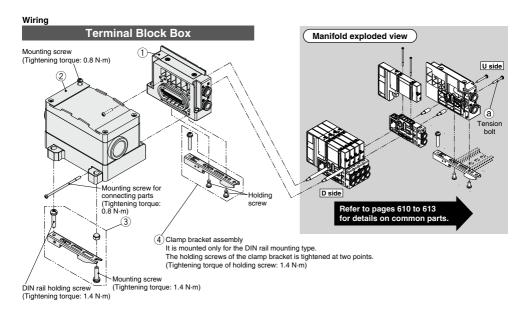

#### **Manifold Parts Nos.**

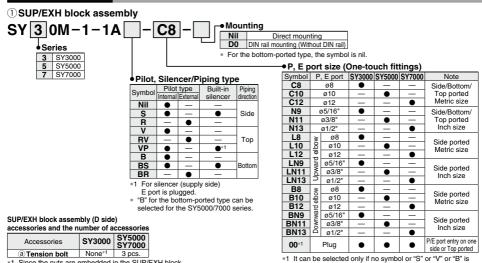

Since the nuts are embedded in the SUP/EXH block

#### 2 Terminal block box housing assembly

#### VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

#### SY30M-15-4A

\* Part number is for one assembly


#### (4) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


selected for the pilot and the piping.

<sup>\*</sup> Part number is for one assembly.

# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

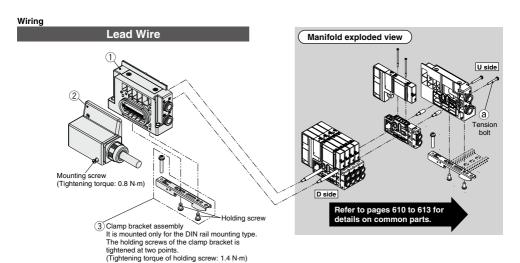

#### **Manifold Parts Nos.**

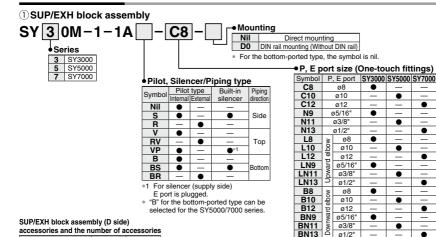


<sup>00\*1</sup> Plua side or Top ported \*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

# \*1 Since the nuts are embedded in the SUP/EXH block 2 Lead wire connector block assembly

SY3000

None\*1 3 pcs.

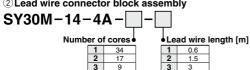

SY5000 SY7000

#### (3) Clamp bracket assembly

Accessories

a Tension bolt

-	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.

Note

Side/Bottom/

Top ported

Metric size

Side/Bottom/

Top ported

Inch size

Side ported

Metric size

Side ported

Inch size


Side ported

Metric size


Side ported

•

•

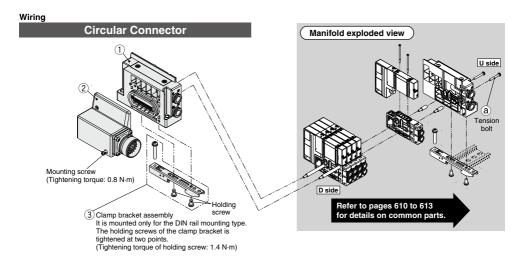

#### Manifold Parts Nos.

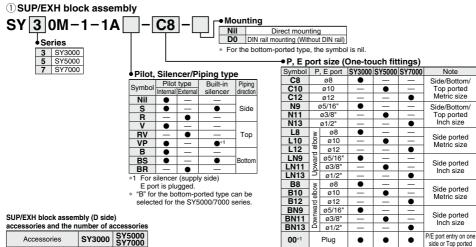

<sup>(</sup>a) Tension bolt None\*1 3 pcs.

\*1 Since the nuts are embedded in the SUP/EXH block

② Circular connector block assembly

## SY30M-14-5A

\* 26 pins

#### (3) Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.


\*1 It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

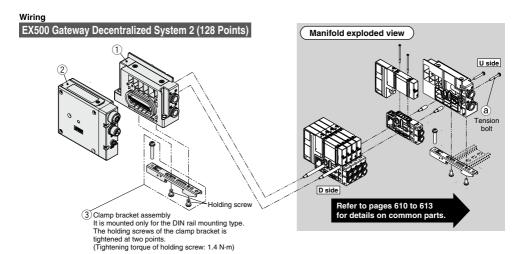

#### Manifold Parts Nos.

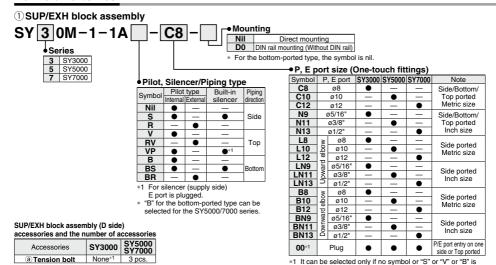

<sup>\*1</sup> Since the nuts are embedded in the SUP/EXH block

②EX500 SI unit

#### EX500-S103


(3) Clamp bracket assembly

,				
Series	Part no.			
SY3000	SY30M-15-1A			
SY5000/7000	SY50M-15-1A			


<sup>\*</sup> Part number is for one assembly.

selected for the pilot and the piping.

# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

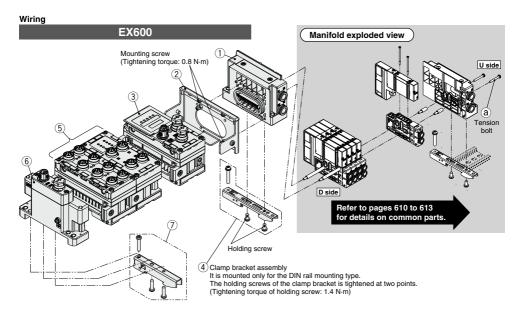

#### **Manifold Parts Nos.**

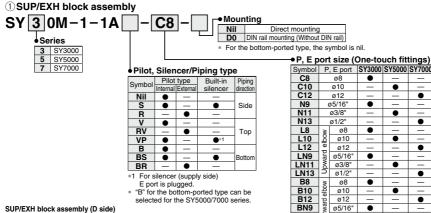

SY3000 \*1 Since the nuts are embedded in the SUP/EXH block

None\*1 3 pcs.

SY5000 SY7000

accessories and the number of accessories

Accessories

a Tension bolt

-1; E port oize (one todor intingo)						
Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
C8	ø8		•	_	_	Side/Bottom/
C10		ø10	_	•	_	Top ported
C12		ø12	_	_	•	Metric size
N9	(	5/16"	•	_	_	Side/Bottom/
N11		ø3/8"	_	•	_	Top ported
N13		ø1/2"	_	_	•	Inch size
L8	3	ø8	•	_	_	0:1
L10	elbow	ø10	_	•	_	Side ported Metric size
L12		ø12	_	_	•	
LN9	ar	ø5/16"	•	_	_	
LN11	Upward	ø3/8"	_	•	_	Side ported Inch size
LN13	$\supset$	ø1/2"	_	_	•	Inch size
B8	×	ø8	•	_	_	Side ported Metric size
B10	elbow	ø10	_	•	_	
B12	힏	ø12	_	_	•	
BN9	ownward	ø5/16"	•	_	_	0:1
BN11	ĕ	ø3/8"	_	•	_	Side ported Inch size
BN13	ă	ø1/2"	_	_	•	IIICII SIZE
<b>00</b> *1	Plug		•	•	•	P/E port entry on one side or Top ported

<sup>\*1</sup> It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### **Manifold Parts Nos.**

#### 2 Valve plate

### **EX600-ZMV2**

\* With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

#### ③EX600 SI unit


### EX600-S

Communication protocol

COIIII	nunication protocoi	
Symbol	Protocol	Output polarity
PR1A	PROFIBUS DP	PNP (Negative common)
PR2A	PHOFIBUS DP	NPN (Positive common)
DN1A	DeviceNet®	PNP (Negative common)
DN2A	Devicemen	NPN (Positive common)
MJ1	CC-Link	PNP (Negative common)
MJ2	CC-LINK	NPN (Positive common)
EN3	EtherNet/IP™	PNP (Negative common)
EN4	Ellelivetir	NPN (Positive common)
EN7	EtherNet/IP™	PNP (Negative common)
EN8	(IO-Link unit)	NPN (Positive common)
EC3	EtherCAT	PNP (Negative common)
EC4	(IO-Link unit)	NPN (Positive common)
PN1	PROFINET	PNP (Negative common)
PN2	FROMINET	NPN (Positive common)
PN3	PROFINET	PNP (Negative common)
PN4	IO-Link unit	NPN (Positive common)
1 117	10 Link driit	141 14 (1 Oslave Common)



#### ③ EX600 SI unit (Wireless compatible)

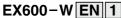

#### Output type

- Output type		
Symbol	Description	
1	PNP (Negative common)	
2	NPN (Positive common)	

#### Protocol

Symbol	SI unit type	Description
ĒΝ	Wireless base module	EtherNet/IP™*1
	Wireless base module	PROFINET*1
sv	Wireless remote module	—*1

<sup>\*1</sup> The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

#### 4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.


# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

#### Manifold Parts Nos.

#### 5 EX600 digital input unit

# EX600-DX PB

Input type

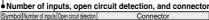

Symbol	Number of inputs	Open circuit detection	Connector
В	8	No	M12 connector (5 pins) 4 pcs.
С	8	No	M8 connector (3 pins) 8 pcs.
C1	8	Yes	M8 connector (3 pins) 8 pcs.
D	16	No	M12 connector (5 pins) 8 pcs.
E	16	No	D-sub connector (25 pins)
F	16	No	Spring type terminal block (32 pins)



#### 5 EX600 digital output unit

# EX600-DY P B Output type

	• Number of outputs and connector		
Symbol	Number of outputs	Connector	
В	8	M12 connector (5 pins) 4 pcs.	
E	16	D-sub connector (25 pins)	
F	16	Spring type terminal block (32 pins)	



#### 5 EX600 digital input/output unit

NPN

# EX600-DM|P|

Input/Output type Symbol Description PNP

Number of inputs/outputs and connector

· Ituli	IDCI OI II	iputa/out	puts and connector
Symbol	Number of inputs	Number of outputs	Connector
E	8	8	D-sub connector (25 pins)
F	8	8	Spring type terminal block (32 pins)



# NPN 5 EX600 analog input/output unit

# EX600-AX

Analog input/output • Symbol Desc AX Analog input
AY Analog output Number of input channels and connector

cription	Syı	mbol	Number of input channels	Connector
og input		Α	2 channels	M12 connector (5 pins) 2 pcs.



#### 5 EX600 analog input/output unit

## EX600-AMB

Analog input/output

#### Number of input/output channels and connector

Symbol	Number of input channels	Number of output channels	Connector
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.

EX600-ED2-□

#### 5 EX600 IO-Link unit

# EX600-L

Port S	pecification •
Symbol	Description
Α	Port class A
В	Port class B

<ul> <li>Number of ports and connector</li> </ul>		
Symbol	Number of ports	Connector
В	4 ports	M12 connector (5 pins) 4 pcs.
		V-1/

## 

The compatible SI unit models are as shown below. PROFINET compatible: EX600-SPN3/EX600-SPN4 EtherNet/IP™ compatible: EX600-SEN7/EX600-SEN8 EtherCAT compatible: EX600-SEC3/EX600-SEC4




#### 6 EX600 end plate

# EX600-ED Power connector

Symbol	Connector
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT,
4	A-coded, Pin arrangement 1
	M12 nower supply connector IN/OLIT

A-coded, Pin arrangement 2 The pin layout for the "4" and "5" pin connectors is different.

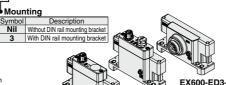

**SMC** 


7 Clamp bracket for EX600

#### EX600-ZMA3 **Enclosed parts**


Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.



Wiring

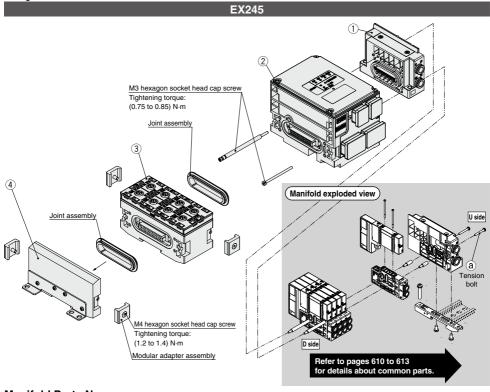

#### Manifold Parts No.

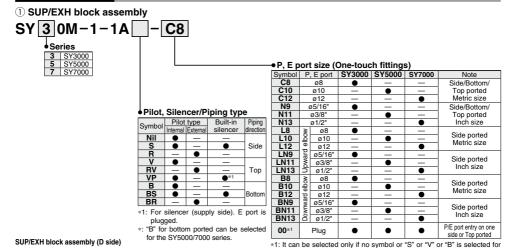

SUP/EXH block assembly (D side)

accessories and the number of accessories		
Accessories	SY3000	SY5000/7000
a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

602



the pilot and the piping.

# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

#### Manifold Parts No.

2 EX245 SI Unit

## EX245 - S PN 1A

SI unit **PROFINET** 

Connector type

Symbol	Communication connector	Power supply connector
1A	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.
2A	Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.
3 <b>A</b>	M12 connector (4-pin, Socket, D-coded): 2 pcs.	7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.

3 EX245 Digital Input Module



Digital input module specification

DX1 Digital input (16 inputs)



**③ EX245 Digital Output Module** 



Digital output module specification

DY1 Digital output (8 outputs)



③ EX245 IO-Link module

#### EX245-LA1

Port specification

Symbol	Description
Α	Port class A
В	Port class B




#### 

The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).


(4) EX245 End Plate

EX245-EA2-3



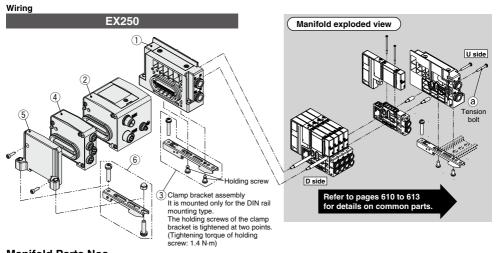

# Manifold Parts Nos. 1) SUP/EXH block assembly

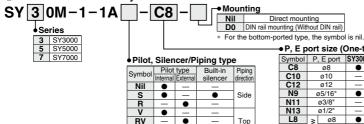

В BS

BR \*1 For silencer (supply side).

E port is plugged.

"B" for the bottom-ported type can be SUP/EXH block assembly (D side) selected for the SY5000/7000 series.

accessories and the number of accessories		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1 Since the nuts are embedded in the SUP/EXH block

#### ② EX250 SI unit

# EX250-S DN1

#### **♦** Communication protocol

DN1	DeviceNet® (Negative common)
AS3	AS-Interface (8 in/8 out, 2 isolated common type) (Negative common)
AS5	AS-Interface (4 in/4 out, 2 isolated common type) (Negative common)
AS7	AS-Interface (8 in/8 out, 1 common type) (Negative common)
AS9	AS-Interface (4 in/4 out, 1 common type) (Negative common)
EN1	EtherNet/IP™ (Negative common)

#### ③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*</sup> Part number is for one assembly.

#### P, E port size (One-touch fittings)

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note	
C8		ø8	•	_	_	Side/Bottom/	
C10		ø10	_	•	_	Top ported	
C12	ø12		_	_	•	Metric size	
N9	٥	5/16"	•	I	-	Side/Bottom/	
N11		ø3/8"	_	•	_	Top ported	
N13		ø1/2"	_		•	Inch size	
L8	*	ø8	•	I	-	Cida namad	
L10	elbow	ø10	_	•	_	Side ported Metric size	
L12		ø12	_		•	Wethe Size	
LN9	Upward	ø5/16"	•	_	_	0:-1	
LN11	ě	ø3/8"	_	•	_	Side ported Inch size	
LN13	n	ø1/2"	_		•	IIICII SIZE	
B8	×	ø8	•	_	_	0:44-4	
B10	elbow	ø10	_	•	_	Side ported Metric size	
B12		ø12	_		•	Wethe Size	
BN9	Downward	ø5/16"	•	-	_	Cido portod	
BN11	JW.	ø3/8"	_	•	_	Side ported Inch size	
BN13	ă	ø1/2"	_	_	•		
00*1	Plug		•	•	•	P/E port entry on one side or Top ported	

\*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 4 Input block

EX250-IE 1 Block type 1 M12 connector, 2 inputs 2 M12 connector, 4 inputs 3 M8 connector, 4 inputs

5 EX250 end plate assembly

#### EX250-EA1

- \* With mounting screws (2 pcs. of M3 x 10)
- 6 Clamp bracket assembly for EX250 SI unit


#### SY30M-15-3A

Part number is for one assembly.




Bottom

# Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

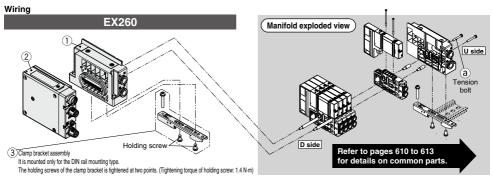

#### Manifold Parts Nos.

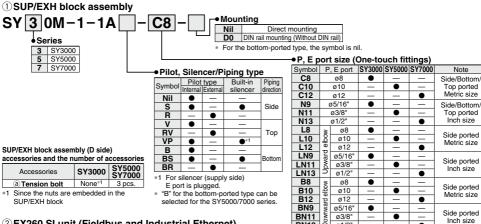

#### 2 EX260 SI unit (Fieldbus and Industrial Ethernet)

# EX260-S PR1

Communication protocol

- 00	Communication protocol											
Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	
DN1		32	Source/PNP (Negative common)	) QAN	EC1	32	Source/PNP (Negative common)		DAN			
DN2	DeviceNet®	32	Sink/NPN (Positive common)	M12	QA	EC2	EtherCAT	32	Sink/NPN (Positive common)	M12	DA	
DN3	Devicemen	16	Source/PNP (Negative common)	IVITZ	QBN	EC3	EllierCAI	16	Source/PNP (Negative common)	IVIIZ	DBN	
DN4		16	Sink/NPN (Positive common)	1	QB	EC4		16	Sink/NPN (Positive common)		DB	
PR1		32	Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN	
PR2		32	Sink/NPN (Positive common)	M12	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	M12	FA	
PR3		16	Source/PNP (Negative common)	n) NBN PN3	NBN	PN3	PHOFINE	16	Source/PNP (Negative common)	IVI12	FBN	
PR4	PROFIBUS DP	10	Sink/NPN (Positive common)		PN4			Sink/NPN (Positive common)		FB		
PR5	FNOFIBUS DF	32	Source/PNP (Negative common)		NCN	EN1	I2 Cthorblot/IDIM	20	32	Source/PNP (Negative common)		EAN
PR6		32	Sink/NPN (Positive common)	D-sub*1	NC	EN2			Sink/NPN (Positive common)	M12	EA	
PR7		16	Source/PNP (Negative common)	D-Sub ·	NDN	EN3		16	Source/PNP (Negative common)	IVIIZ	EBN	
PR8		Sink/NPN (Positive common)	7 [	ND	EN4	10	Sink/NPN (Positive common)		EB			
MJ1		32	Source/PNP (Negative common)		VAN	PL1	Ethernet	32	Source/PNP (Negative common)	M12	GAN	
MJ2	CC-Link	32	Sink/NPN (Positive common)	M12	VA	PL3	POWERLINK	16	Source/FINF (Negative continion)	IVIIZ	GBN	
MJ3	OO-LIIK	16	Source/PNP (Negative common)	14112	VBN	IL1	IO-Link	32	Source/PNP (Negative common)	M12	KAN	
MJ4		10	Sink/NPN (Positive common)		VB							

<sup>\*1</sup> Enclosure is IP40 when the communication connector is D-sub.

#### EX260 SI Unit (Safety Communication)

EX260-F	DC1
EAZOU-F	<b>P31</b>

♦ Communication protocol					
Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
PS1	<b>PROFIsafe</b>	32	Source/PNP (Negative common)	M12	FPN

#### ③ Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	*
SY5000/7000	SY50M-15-1A	

BN13

00\*1

ø1/2

Plua

• •


\*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Part number is for one assembly.




P/E port entry on one

side or Top ported

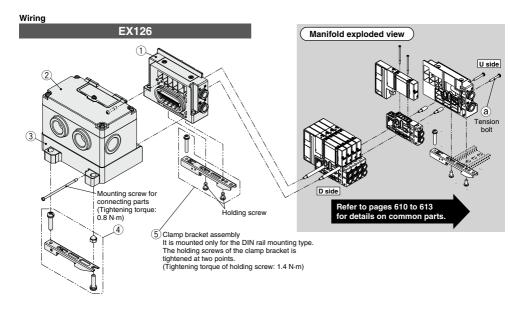

#### **Manifold Parts Nos.**

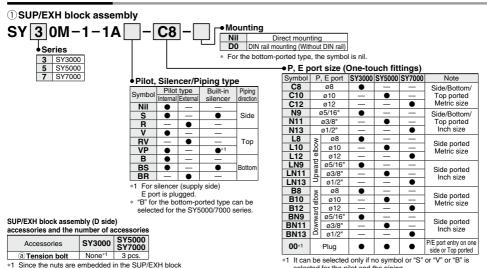

#### ②EX126 SI unit

#### EX126D-SMJ1

\* CC-Link (Positive common)

3 Terminal block plate assembly

VVQC1000-74A-2

### (4) Clamp bracket assembly for EX126 SI unit SY30M-15-4A

selected for the pilot and the piping.

Part number is for one assembly.

#### (5) Clamp bracket assembly

<b>,</b>		
Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	


<sup>\*</sup> Part number is for one assembly.




# Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

\*1 It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

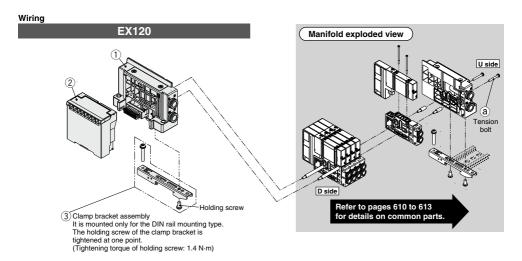

#### Manifold Parts Nos.

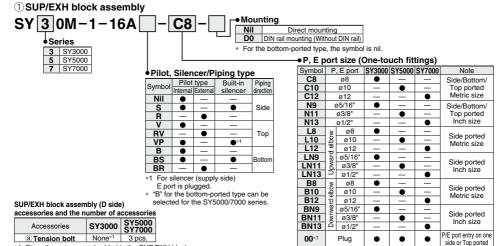

<sup>\*1</sup> Since the nuts are embedded in the SUP/EXH block

#### ②EX120 SI unit

# EX120-S DN1


#### Communication protocol

	aca.iic.i. p. c.ccc.
DN1	DeviceNet® (Positive common)
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet® NPN (Positive common)
CM3	CompoNet® PNP (Negative common)

#### (3) Clamp bracket assembly

<u> </u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*</sup> Part number is for one assembly.

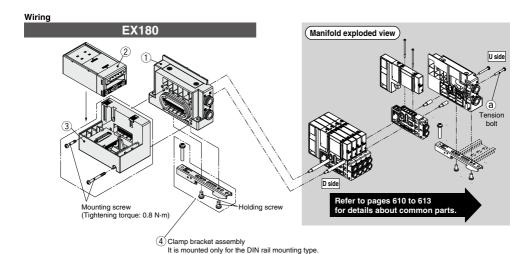


The holding screws of the clamping bracket is tightened at two points.

(Tightening torque of holding screw: 1.4 N·m)

#### Manifold Parts No.

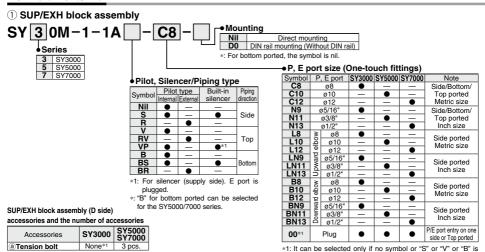

2 EX180 Series SI Unit

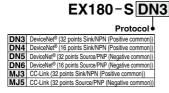

\*1 Since the nuts are embedded in the SUP/EXH block.

#### Made to Order

(Click here for details.)

Protocol AnvWireASLINK

Communication connector type

Nil T-branch type Straight type

### (3) Connector block assembly SY30M-14-17A

selected for the pilot and the piping.

#### (4) Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\*: Part number is for one assembly.



<sup>\*:</sup> Communication and power supply connectors are included

## Manifold Exploded View (Common Parts)

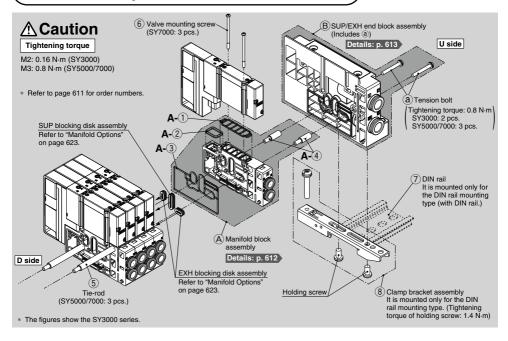

## Type 10, 11, 12: How to Increase Connector Type Manifolds

1 Loosen the U-side tension bolt ⓐ, and remove the ⓑ SUP/EXH end block assembly.

Screw in 4 tie-rods for additional stations to the 5 tie-rod of the manifold.


Screw them in until there is no gap between the tie-rods.

3 Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).

Tightening torque for tension bolt @ (M3): 0.8 N·m

#### 

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

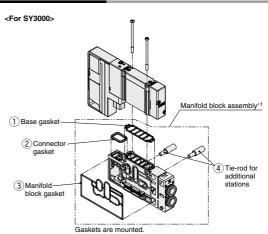

\*1 Manifold block assembly

No.	Description	Quantity	Note
123	Gasket	3	For base, connector, and manifold block
4	Tie-rod for additional stations	SY3000: 2 pcs. SY5000: 3 pcs. SY7000: 3 pcs.	

Refer to page 611 for ordering single unit.



## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

## For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.	Description		SY3000	SY5000	SY7000	Note		
<b>A</b> -①	bly	Base g	asket nnector connect	ing base)	SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)
<b>A-</b> ②	ssembly	Conne	ctor gasket			SX3000-146-2		Supplied individually
<b>A</b> -3	388	Manifo	ld block gasket		SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually
	block	a a c	SY3000/5000/70	00	<b>SY30M-49-2-A</b> (10.5 mm pitch)	SV2000-55-2A-A (16 mm pitch)	<b>SY70M-49-2-A</b> *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
<b>A-</b> 4			For mixed mounting of SY3000/5000: SY3000 A, B port size Ø8, Ø5/16"		SV2000-55-2A-A (16 mm pitch)		_	3 pcs. supplied
	Mar		For mixed mounting of SY3000/5000: SY3000 except A, B port size Ø8, Ø5/16"*4		<b>SY50M-49-2</b> (12.5 mm pitch)		_	3 pcs. supplied
			SY3000/5000/7000		VVQC1000-TR- (10.5 mm pitch)	SV2000-55-1-□-A (16 mm pitch)	SY70M-49-1-□-A (19 mm pitch)	☐: Manifold stations (2 to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
(5)	Tie	-rod			<b>SY50M-49-1-</b> □- <b>A</b> *3*4 (12.5 mm pitch)		_	
		Mixed mounting type manifold		SS5Y5-M**	<b>SV2000-55-1-</b> □- <b>A</b> * <sup>5</sup> (16 mm pitch)		_	☐: Manifold stations (2 to 24 stations) 3 pcs. supplied
				SS5Y7-M**	_		<b>19-1-⊡-A</b> n pitch)	
( <del>6</del> )	Val	ive	Round head combination screw Hexagon socket head cap screw		SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000:
		ounting rew			SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	for 10 valves (20 pcs. included) SY7000: for 10 valves (30 pcs. included)
7	DIN	N rail			VZ1000-11-1-□ V		VZ1000-11-4-□	Refer to page 616.
8	Clar	mp bracket	assembly (for connec	tor connecting base)	SY30M-15-1A	SY50N	I-15-1A	Supplied individually
(a)	Tension bolt (for connector connecting base)*6			nnecting base)*6	AC00530	0530 SX3000-145-21		Supplied individually

<sup>\*1</sup> The manifold of the SY3000 (SS5Y3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SSSY5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

<sup>\*2</sup> Includes the case when mounting with the SY5000

<sup>\*3</sup> When mounting only the SY3000 (12.5 mm pitch except A, B port size ø8, ø5/16")


<sup>\*4</sup> The port sizes except A, B port size Ø8, Ø5/16" are the following: Ø2, Ø3.2, Ø4, Ø6, Ø1/8", Ø5/32", Ø1/4".

<sup>\*5</sup> When mounting only the SY3000 (16 mm pitch A, B port size ø8, ø5/16")

<sup>\*6</sup> For the SY3000 SUP/EXH end block (there are no tension bolts for the SY3000 SUP/EXH block) or the SY5000 and SY7000 SUP/EXH (end) block


### Manifold Parts Nos.



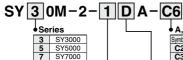

## Piping direction 1 Side/Top ported 2 Bottom ported

"2" (bottom ported) can be selected for the

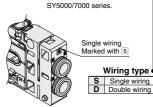

A, B port size (One-touch fittings) | Symbol | A, B port | SY3000 | SY5000 | SY7000 | Note | | Symbol | A, B port | SY3000 | SY5000 | SY7000 | Note

C2	ø2	•	_	_	
ဌ	ø3.2	•	_		Side/
C4	ø4	•	•	_	Bottom
C6	ø6	•	•	•	ported
C8	ø8	*1	•	•	Metric
C10	ø10	_	_	•	size
C12	ø12	_	_	•	
N1	ø1/8"	•	_	_	Side/
N3	ø5/32"	•	•	_	Bottom
N7	ø1/4"	•	•	•	ported
N9	ø5/16"	*1	•		Inch
N11	ø3/8"		_	•	size

<sup>\*1</sup> Refer to mixed mounting type for ø8, ø5/16".

e	Symbol	1	A, D POIL	313000	313000	317000	Note
	L4	П	ø4	•	•	_	
e/	L6	П	ø6	•	•	•	Side
om	L8	elbow	ø8	_*1	•	•	ported Metric
ed	L10	읢	ø10	_	_	•	size
ic	L12	힏	ø12	_		•	0.20
9	LN3	wa	ø5/32"	•	_	_	Side
- 1	LN7	峊	ø1/4"	•	•	_	ported
e/	LN9	П	ø5/16"	*1	•	_	Inch
m	LN11		ø3/8"	_	_	•	size
ed	B4	П	ø4	•	•	_	
h	B6	wod	ø6	•	•	•	Side
Э	B8		ø8	_*1	•	•	ported Metric
	B10	ē	ø10	_	_	•	size
	B12	ard	ø12	_	_	•	
	BN3	ownwa	ø5/32"	•	_	_	Side
		ð	ø1/4"	•	•	_	ported
	BN9		ø5/16"	_*1	•		Inch
	BN11	Ш	ø3/8"	_	_	•	size
	00		Plua	•	•		Top ported

(A) Manifold (All parts inside ——— are included.)

(1) Base gasket

4 Tie-rod for

additional stations

block assembly

(3) Manifold block gasket

(2) Connector

gasket

A Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

## SY50M-2-3 DA-C6

### Piping direction 3 Side/Top ported Bottom ported

Wiring type Single wiring Double wiring

A, B port size (One-touch fittings)

Symi	bol	A, B port	Note	Symbol	F	A, B port	Note
C	2	ø2	0:4-/0-#	L4	//00	ø4	Side ported
C	3	ø3.2	Side/Bottom L6		del	ø6	Metric size
C	4	ø4			war		Side ported
C	ô	ø6	WIGHTO SIZE	LN7	ವಿ	ø1/4"	Inch size
N.	1	ø1/8"	Side/Bottom	B4	W00	ø4	Side ported
N;	3	ø5/32"	ported		B6 ₽	ø6	Metric size
N.	7	ø1/4"	Inch size	BN3	irwa	ø5/32"	Side ported
				BN7	Do	ø1/4"	Inch size
				00		Plug	Top ported

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000 for Ø8, Ø5/16" (A manifold block assembly for mounting the SY3000 valves on the SY5000 manifolds at A, B port size: Ø8, Ø5/16")

## SY50M-2-5 D A-C8



Wiring type						
S	Single wiring					
D	Double wiring					

A, B port size (One-touch fittings)

Symbol	A,	B port	Note		
C8		ø8	Side/Bottom ported Metric size		
N9	ø5/16"		Side/Bottom ported Inch size		
L8	Upward	ø8	Side ported Metric size		
LN9	elbow	ø5/16"	Side ported Inch size		
B8	Downward Ø8		Side ported Metric size		
BN9	elbow	ø5/16"	Side ported Inch size		

Manifold block assembly accessories and the number of accessories

Gaskets are mounted

Accessories	SY3000	SY5000 SY7000*1	
Base gasket	1 pc.		
② Connector gasket	1 pc.		
3 Manifold block gasket	1 pc.		
(4) Tie-rod assembly for additional stations	2 pcs.	3 pcs.	

\*1 Including mixed mounting type

(A) Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

## SY70M-2-3 D A-C10

Piping direction Side/Top ported Bottom ported


> Wiring type S Single wiring D Double wiring

A, B port size (One-touch fittings)

Symbol	A, B port	Note	Symbol A	A, B port	Note	Symbol	A, B port	Note
C6	ø6	0: 1 ID .:	L6   <	ø6		B6	ø6	
C8	ø8	Side/Bottom ported	Lb a	ø8	Side ported	B6 B8	ø8	Side ported
C10	ø10	Metric size	L10 0	ø10	Metric size	B10 ₽	ø10	Metric size
C12	ø12	WICKING SIZE	L12 ह	ø12				
N7	ø1/4"	Side/Bottom	LN11 5	ø3/8"	Side ported	BN11	ø3/8"	Side ported
N9	ø5/16"	ported	LIVIII	93/0	Inch size		2 20/0	Inch size
N11	ø3/8"	Inch size				00	Plug	Top ported

## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

## **Manifold Parts Nos.**

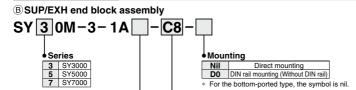

Pilot, Silencer/Piping type

- 11-1, - 11-11-15 1, p. 13							
Cumbal	Pilot	type	Built-in	Piping			
Syllibol	Internal	type External	silencer	direction			
Nil	•	_	_				
S	•	_	•	Side			
R	_	•	_				
٧	•	_	_				
RV	_	•	_	Top			
VP	•	_	●*1				
В	•	_	_				
BS	•	_	•	Bottom			
BR	_	•	_				
4.5 (1.11)							


\*1 For silencer (supply side) E port is plugged.

"B" for the bottom-ported type can be selected for the SY5000/7000 series.

P, E port size (One-touch fittings)

1, 2 port olze (one todor intingo)								
Symbol	P, E port		SY3000	SY5000	SY7000	Note		
C8		ø8	•	_	_	Cide/Dettern/Ten neuted		
C10		ø10	_	•	_	Side/Bottom/Top ported Metric size		
C12		ø12	_	_	•	Weth C Size		
N9	9	ø5/16"	•	_	_	Oids/Datters/Taxassated		
N11		ø3/8"	_	•	_	Side/Bottom/Top ported Inch size		
N13		ø1/2"	_	_	•	IIICII SIZE		
L8	3	ø8	•	_	_	Oids assisted		
L10	elbow	ø10	_	•	_	Side ported Metric size		
L12		ø12		_	•	Weth Size		
LN9	pward	ø5/16"	•	_	_	Olds assisted		
LN11	lĕ	ø3/8"	_	•	_	Side ported Inch size		
LN13	$\supset$	ø1/2"	_	_	•	IIICII SIZE		
B8	≥	ø8	•	_	_	Oids assisted		
B10	elbow	ø10	_	•	_	Side ported Metric size		
B12		ø12	_	_	•	Wetric Size		
BN9	ownward	ø5/16"	•	_	_	Olds assisted		
BN11	Ĭ	ø3/8"	_	•	_	Side ported Inch size		
BN13	ă	ø1/2"	_	_	•	IIICII SIZE		
00*1		Plug	•	•	•	P/E port entry on one side or Top ported		

\*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

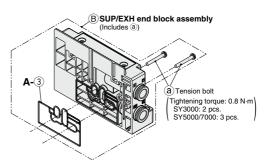


SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000/7000
Tension bolt	2 pcs.	3 pcs.
A-③ Manifold block gasket	1	pc.

Gasket is mounted.

#### Manifold Parts Nos.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

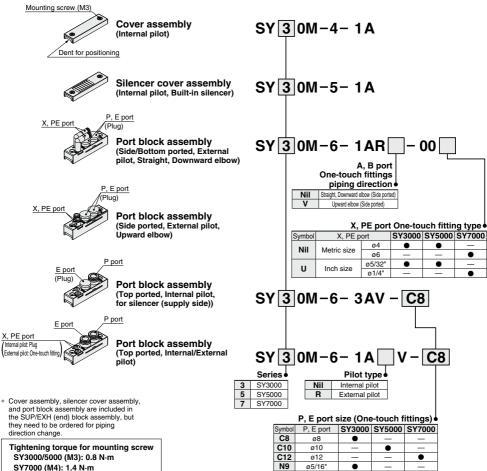

## **⚠** Caution

 Be sure to shut off the power and air supplies before disassembly.

Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.

When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate. N11

N13

ø3/8' ø1/2'

# SY3000/5000/7000 Series One-touch Fitting, Plug Assembly Part Nos.

Refer to "How to Replace One-touch Fittings" on page 709 for the replacement method.

## ■ One-touch fittings

		Port size	e	SY3000	SY5000	SY7000		
		ø2		VVQ1000-50A-C2	_	_		
		ø3.2	] [	VVQ1000-50A-C3	_	_		
		ø4	]	VVQ1000-50A-C4	VVQ1000-51A-C4	_		
		ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6		
		ø8	1	_	VVQ1000-51A-C8	VVQ2000-51A-C8		
		ø10	]	_	_	VVQ2000-51A-C10		
		ø12	]	_	_	KQ2H12-17-X224		
	Metric size	ø4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_		
	. <u>2</u>	ø6	]	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6		
	let.	ø8 ø10	Elbow type	_	SZ3000-74-1A-L8	SZ3000-83-1A-L8		
			1	_	_	SZ3000-83-1A-L10		
		ø12	]	_	_	KQ2L12-17N-X224		
		ø4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	_		
E.		ø6	] [	SZ3000-73-2A-L6	SZ3000-74-2A-L6	SZ3000-83-2A-L6		
B port⁴1		ø8	Long elbow type	_	SZ3000-74-2A-L8	SZ3000-83-2A-L8		
B		ø10		_	_	SZ3000-83-2A-L10		
Ą.		ø12	1	_	_	KQ2W12-17N-X224		
		ø1/8"		VVQ1000-50A-N1	_	_		
		ø5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	_		
		ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7		
		ø5/16"	1	_	VVQ1000-51A-N9	VVQ2000-51A-N9		
	nch size	ø3/8"	1	_	_	VVQ2000-51A-N11		
		ø5/32"		KJL03-95-X224	_	_		
		ø1/4"	i	KJL07-95-X224	KQ2L07-14-X224	_		
	힏	ø5/16"	Elbow type	_	KQ2L09-14-X224	_		
	_	ø3/8"	1	_	_	KQ2L11-14-X224		
		ø5/32"		KJL03-95-X225	_	_		
		ø1/4"	1	KJL07-95-X225	KQ2L07-14-X225	_		
		ø5/16"	Long elbow type	_	KQ2L09-14-X225	_		
		ø3/8"	1	_	_	KQ2L11-14-X225		
		ø8		VVQ1000-51A-C8	_	_		
		ø10	Straight type	_	VVQ2000-51A-C10	_		
		ø12	1	_	_	VVQ4000-50B-C12		
	size	ø8		SZ3000-74-1A-L8	_	_		
	. <u>ö</u>	ø10	Elbow type	_	SZ3000-83-1A-L10	_		
	Metric size	ø12	1	_		KQ2L12-19N-X224		
	2	ø8		SZ3000-74-2A-L8	_	_		
t		ø10	Long elbow type	_	SZ3000-83-2A-L10	_		
E port		ø12	]	_	_	KQ2W12-19N-X224		
ш		ø5/16"		VVQ1000-51A-N9	_	_		
₫.		ø3/8"	Straight type	_	VVQ2000-51A-N11	_		
		ø1/2"	1	_	_	VVQ4000-50B-N13		
	ize	ø5/16"		KQ2L09-14-X224	_	_		
	nch size	ø3/8"	Elbow type	_	KQ2L11-14-X224	_		
	2	ø1/2"	]	_	_	KQ2L13-19N-X224		
		ø5/16"		KQ2L09-14-X225	_	_		
		ø3/8"	Long elbow type	_	KQ2L11-14-X225	_		
		ø1/2"	1	_	_	KQ2W13-19N-X224		
		•						

<sup>\*1</sup> A and B ports ( $\emptyset$ 8 and  $\emptyset$ 5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

## ■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

<sup>\*</sup> Purchasing order is available in units of 10 pieces.



<sup>\*</sup> Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order

<sup>&</sup>quot;elbow type" or "long elbow type" appropriately.


<sup>\*</sup> Select the same port size for both the A and B ports.

# SY3000/5000/7000 Series Manifold Options

## ■ DIN rail dimensions/weight for the SY3000/5000 Plug-in connector connecting base

## VZ1000-11-1-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

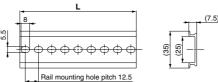


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	005.5	040	000 5	070										700
	0,0	303.3	390	010.5	023	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]		105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	685.5 123.4	698 125.6	710.5 127.9	723 130.1	735.5 132.4	748 134.6	760.5 136.9	773 139.1	785.5 141.4	143.6
Weight [g]															_				
	103.1 57	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6				

## ■ DIN rail dimensions/weight for the SY7000 Plug-in connector connecting base

### VZ1000-11-4-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

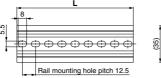

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	F70																		
- 0	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]		585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5 160.8	648 163.9	660.5 167.1	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5 192.4	773 195.6	785.5 198.7	798 201.9
													-		_		_		
Weight [g]	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2		_		

(10)



#### **⚠** Caution

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

## **Manifold Options**


\* Refer to pages 628 to 630 for dimensions.

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

- When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

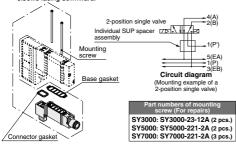


### ■ Individual EXH spacer assembly


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

- When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

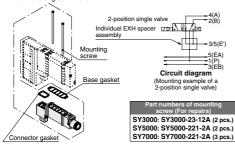

#### How to Order Individual SUP/EXH Spacer Assembly

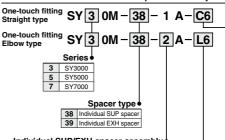

## Individual SUP/EXH spacer assembly

2	Short elbow type
3	Long elbow type

 Select the long elbow type for a 3-position valve when using Type 11 and Type 12 downward. However, Type 11 of the SY3000 series for the mixed mounting of connector connecting bases cannot be used downward.

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8		•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•
			-	

#### Port size (Metric/One-touch fittings)

	Port size (Metric/One-touch fittings)									
Symbol	P, E port	SY3000	SY5000	SY7000						
C2	ø2	•	_	_						
C3	ø3.2	•	_	_						
C4	ø4	•	•	_						
C6	ø6	•	•	•						
C8	ø8	_	•	•						
C10	ø10	_	_	•						
C12	ø12	_	_	•						

	Port size			
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

\* When using in combination with the SY<sup>5</sup>/<sub>7</sub>30<sup>0</sup>/□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

	Port	size	Flow rate characteristics						
Model	1, 3/5	4, 2	1 → 4/2 (P -	A/B)	4/2 → 3/5 (A/B → E)				
	(P, E)	(A, B)	C [dm3/(s-bar)]	b	C [dm3/(s-bar)]	b			
SY30M-38-1A-C6	C8	C6	1.2	0.32	1.4	0.24			
SY30M-39-1A-C6	L8		1.2	0.27	1.1	0.27			
SY50M-38-1A-C8	C10	C8	2.7	0.36	3.3	0.22			
SY50M-39-1A-C8	C10	C8	2.2	0.37	2.2	0.36			
SY70M-38-1A-C12	C12	C12	4.8	0.26	4.7	0.25			
SY70M-39-1A-C12	012	C12	4.9	0.28	4.7	0.23			

- Calculation of effective area S and sonic conductance C: S = 5.0 x C
- The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type.
- \* For connector connecting base (type 10) manifolds



### **↑** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## **Manifold Options**


\* Refer to pages 628 to 630 for dimensions.


## ■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly

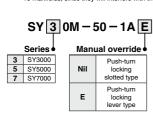

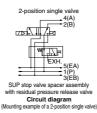


\* For lever type:

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise. (PUSH → LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.


To unlock the manual override, turn the lever counterclockwise. (LOCK → PUSH)

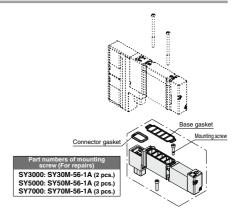

#### [How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure release valve.


- \* Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- \* When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- \* This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- \* If the product is equipped with a 3-position closed center, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

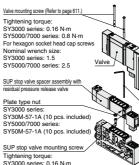

SY3000 series: 0.16 N·m SY5000/7000 series: 0.8 N·m

	Port	size	Flow rate characteristics						
Model	1, 3/5	4, 2	1 → 4/2 (P -	A/B)	4/2 → 3/5 (A/B → E)				
	(P, E)	(A, B)	C [dm3/(s-bar)]	b	C [dm3/(s-bar)]	b			
SY30M-50-1A(E)	C8	C6	0.6	0.18	1.4	0.29			
SY50M-50-1A(E)	C10	C8	1.6	0.20	3.1	0.23			
SY70M-50-1A(E)	C12	C12	3.1	0.18	4.3	0.32			

- Calculation of effective area S and sonic conductance C: S = 5.0 x C
- The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type.
- \* For connector connecting base (type 10) manifolds

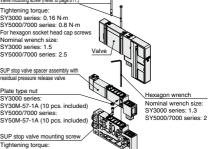

#### 

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## **Manifold Options**

\* Refer to pages 628 to 630 for dimensions.

## ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

Mounting screw

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used. It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

Α
Α
Α

	Intermediate stop	Drop prevention
Applicable valve	SY <sub>5</sub> <sup>3</sup> 40 <sub>1</sub> 0	SY 5 1 0 0 1


#### <Example>

Double check spacer assembly with residual pressure release valve 3-position exhaust center valve




(Intermediate stop: When 3-position exhaust center valve is mounted)

Double check spacer assembly with residual pressure release valve 2-position single valve

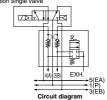

(Drop prevention: When 2-position single valve is mounted)

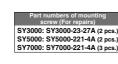

### 

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- . Combining with 3-position closed center or pressure center valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 696.

# Base gasket Connector gaske

#### Specifications

Max. operating	1.0 MPa	
Min. operating	0.1 MPa	
Ambient and fluid te	−10 to 50°C	
	SY3000	0.3 dm3/(s-bar)
Flow rate characteristics: C	SY5000	0.7 dm3/(s-bar)
Characteristics. C	SY7000	1.1 dm3/(s-bar)
Max. operating frequency		3 Hz


#### ■Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]

Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting screws from sliding.



(2 pcs.) SY50M-26-1A(-B)

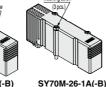



5 SY5000 SY7000 (B) (EA) (P) (EB) Circuit diagram

3

SY3000

## How to Order Blanking Plate Assembly

SY 3 0M-26-1A-Option for mounting

Nil With mounting screw (Round head combination screw) B With mounting screw (Hexagon socket head cap screw)

Part numbers of mounting screw [Hexagon bolt] (For repairs) SY3000: SY3000-23-24A [SY3000-222-1A] SY5000: SY5000-221-1A [SY5000-222-1A] SY7000: SY7000-221-2A [SY7000-222-1A]



Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)



<sup>\*</sup> Refer to pages 628 to 630 for dimensions.

### 

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

## **Manifold Options**


\* Refer to pages 628 to 631 for dimensions.

#### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

#### How to Order

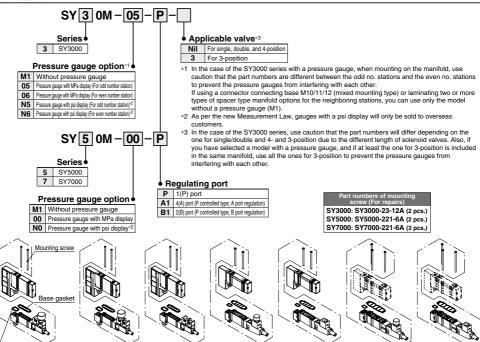


SY30M-05/N5
(With pressure gauge) (With pressure gauge) (With pressure gauge) (Without pressure gauge)

#### **Specifications**

Interface regu	lator model	SY30M-□-□-□	SY50M-□-□	SY70M-□-□		
	Applicable valve model*1		SY3□3□(R) SY5□3□(R)			
Regulating port		1(P), 4(A), 2(B)				
Set pressure range		0.1 to 0.7 MPa				
Maximum ope	Maximum operating pressure		1.0 MPa			
Fluid	Fluid		Air			
Ambient and fluid temperatures		-10 to 50°C (No freezing)				
Weight [g]*2 With pressure gauge		33 (35)*3	75	93		
weight [g]	Without pressure gauge	27 (29)*3	69	87		

- \*1 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- \*2 Gasket and mounting screws are included in the weight.
- \*3 (): Denotes the values of SY30M-□-□-3
- \* Always apply pressure from 1(P) port in the base for interface regulator.
- When using in combination with the SY 500 1□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

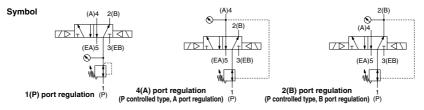

## **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## Manifold Options: Spacer Combinations and Screw List ①

		① SY3000 (M2)		② SY5000 (M3)		③ SY7000 (M3)		
Com	bination			Hexagon socket head cap screw		Hexagon socket head cap screw	Round head combination screw	
	Round head combination screw> 1: SY3000-23-24A / 2: SY5000-221-1A 3: SY7000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
G G	Hexagon social head cap screen  1: SY3900-222-1A  2: SY5000-222-1A  3: SY7000-221-1A  1: SY30M-56-2A  2: SY50M-56-2A  3: SY70M-56-2A			I-56-2A ocs.)		I-56-2A cs.)	<b>SY70M</b> (3 p	l <b>-56-2A</b> cs.)
	Round head combination screws  D: SY3000-23-33A  2: SY5000-221-5A  3: SY7000-221-5A	Double check spacer assembly with residual pressure release valve  Individual SUP (EXH) spacer assembly	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	-	SY7000- 221-5A (3 pcs.)	-
	Round head combination screws  1: SY3000-23-32A 2: SY5000-221-3A 3: SY7000-221-3A	Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	-	SY7000- 221-3A (3 pcs.)	-
	Round head combination screw> 1: SY3000-23-24A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1 A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1 A</b> [for 10 valves (30 pcs.)]
	2: SY5000-221-1A Heappn sode the dat ap strew D: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A D: SY30M-56-4A 2: SY50M-56-4A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer assembly		<b>I-56-4A</b> ccs.)		I <b>-56-4A</b> cs.)	<b>SY70M</b> (3 p	- <b>-56-4A</b> cs.)

Mounting onto a manifold follows the order explained above.
 The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.



## **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## Manifold Options: Spacer Combinations and Screw List 2

		① SY30	000 (M2)	② SY50	000 (M3)	③ <b>SY7</b> 0	00 (M3)
Combination			Hexagon socket head cap screw	_	Hexagon socket head cap screw	_	_ , _
②: SY5000-221-1A ③: SY7000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
deleagon sociel head cap someon  SY3000-222-1A  S: SY5000-222-1A  S: SY7000-222-1A  C: SY30M-56-3A  C: SY50M-56-3A	pressure release valve Double check spacer		<b>1-56-3A</b> ocs.)		I-56-3A		- <b>56-3A</b> cs.)
<sup>18</sup> ■ 13: SY70M-56-3A	assembly with residual pressure release valve						
①: SY3000-23-24A ②: SY5000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
3: SY7000-221-1A deleagon social head cap screio 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-5A ②: SY50M-56-5A ③: SY70M-56-5A	Double check spacer assembly with residual pressure release valve		<b>1-56-5A</b> ocs.)		<b>I-56-5A</b> ocs.)	<b>SY70M</b> (3 p	<b>-56-5A</b> cs.)
	Individual EXH (SUP) spacer assembly						
(-Round head combination screw) ①: SY3000-23-32A	A Valve						
②: SY5000-221-7A ③: SY7000-221-7A	Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
C-  •	Individual SUP (EXH) spacer assembly						

<sup>\*</sup> Mounting onto a manifold follows the order explained above.

\* The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

\* When laminating an interface regulator with other options, only the combinations in the table above are possible.

#### **∕** Caution

Tightening torque for mounting screv M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## **Manifold Options**

\* Refer to pages 628 to 631 for dimensions.

Series •

3

7

#### ■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example)

- \* Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- \* Electrical wiring is connected to a number of stations in the individual SLIP block manifold
- \* When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \* A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.


## ■ Individual EXH block assembly On the circuit of the plug-in connector


connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations


Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).


- \* Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- \* Electrical wiring is connected to a number of stations in the individual EXH block manifold
- \* When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \* A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

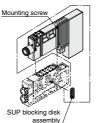

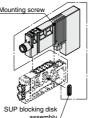

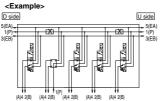

## How to Order Individual SUP/EXH Block Assembly

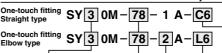

SY3000 SY5000 Block type SY7000 78 Individual SUP block 79 Individual EXH block

### Individual SUP/EXH block assembly Short elbow type (Type 12)

3 Long elbow type (Type 11) Long elbow type is for the SY5000/7000 only.

Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)


Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•


## Port size (Metric/One-touch fittings)

	Fort size (wetric/one-touch fittings)						
Symbol	P, E port	SY3000	SY5000	SY7000			
C2	ø2	•	_	_			
C3	ø3.2	•	_	_			
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	_	•			

## Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø 1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

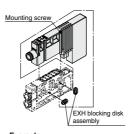

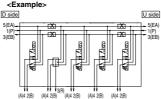



## **Manifold Options**

#### ■Blanking Plate with Output [With two mounting screws]

The blanking plate extracts the individual signal of the manifold valve.

#### Specifications

Number of outputs	2 outputs
Lood valtage	12 VDC, 24 VDC
Load voltage	(Dependent on the rated voltage of the built-in manifold)
Load current	42 mA/point (Max.)
Enclosure	Dust proof (M12 connector; IP67)

- For serial transmission-capable manifolds, only the 24 VDC is applicable.
- When non-polar type valves are mounted on the same manifold (excludes SI unit manifolds), be careful of surge voltage intrusion. Refer to page 706 for details.


#### 

Tightening torque for mounting screw
M2: 0.16 N·m


#### **Output Polarity**

Manifold common specifications	Α	В	COM.
Positive common	_	_	+
Negative common	+	+	_


\* Specifications are the same as the manifold common specifications.

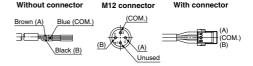

#### How to Order Blanking Plate with Output

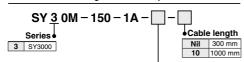

Connector type

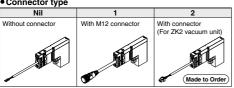

Refer to the specifications for output polarity.

## ■SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12)

#### [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold

#### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

## ■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

B 2

If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted will be labeled and shipped out.


disk label

SUP/EXH blocking





Series	Part no.
SY3000	
SY5000	SJ3000-155-1A
SY7000	

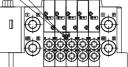

## **Manifold Options**


#### ■ Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

#### <Pre><Pre>cautions>

- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- 2. When the back pressure check valve assembly is mounted, please contact SMC for valve flow rate characteristics.

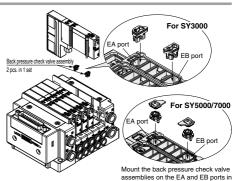

the order shown in the figure above.							
	Series	Part no.					
SY3000		SY30M-24-1A					
	SY5000	SY50M-24-1A					
	SY7000	SY70M-24-1A					

#### Ordering Example

SS5Y3-10F1-05B-C6----1 set (Type 10 5-station manifold base part no.) \*SY3201-5U1------5 sets (2-position double part no.)

\*SY30M-24-1A-----5 sets (Back pressure check valve assembly part no.)


The asterisk denotes the symbol for the assembly.

## ■ Dual flow fitting (for connector connecting base, Type 10, side ported)


This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations

\* When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

#### How to Order Dual Flow Fitting

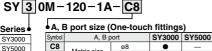


	Series●	<b>▼</b> ∧, ∟	port size (	One-touci	i iittiiigs	· <u>/</u>
3	SY3000	Symbol	A, B p	oort	SY3000	SY5
5	SY5000	C8	Metric size	ø8	•	-
	0.0000	C10	wetric size	ø10	_	•
		N9	Inch size	ø5/16"	•	-
		N11	inch size	ø3/8"	_	

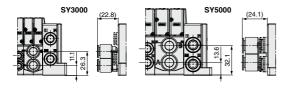

Ordering Example SS5Y3-10F1-08B-CM \*SY3100-5U1 \*SY30M-120-1A-C8

The asterisk denotes the symbol for the assembly.

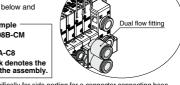

- Specifically for side porting for a connector connecting base Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases
- When adding or changing clips, push them into the very end of the manifold for each station. Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.
- Not available for the SY7000 series Refer to the table below to see which spacers are applicable.

Each type of spacer	Series		
Each type of spacer	SY3000	SY5000	
Individual SUP (EXH) spacer assembly	×	0	
SUP stop valve spacer assembly with residual pressure release valve	×	0	
Double check spacer assembly with residual pressure release valve	×	0	
Interface regulator	×	×	


O: Can be built in X: Cannot be built in

#### ■ Silencer

## (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.


\* Shipped together with the product

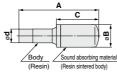

	Series	Model	Effective area	Α	В	С
	For SY3000 (ø8)	AN15-C08	20 mm <sup>2</sup>	45	13	20
	For SY5000 (ø10)	AN20-C10	30 mm <sup>2</sup>	57.5	16.5	30.5
ıİ	For SY7000 (ø12)	AN30-C12	41 mm <sup>2</sup>	71.5	20	43.5

#### ■ Pluq

These are inserted in unused cylinder ports and P. E ports.

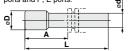

\* Shipped together with the product

Dillicitatoria				
Applicable fitting size ød (Metric size)	Model	Α	L	øD
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

ød (Inch size)	Model	Α	L	ø <b>D</b>
1/8"	KQ2P-01		31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09		39	10
3/8"	KQ2P-11		43	11.5
1/2"	KQ2P-13	24	46	15



## **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve

#### ■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

\* When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.


SS5Y3-10	
SS5Y5-10	٢
SS5Y7-(M)10	
•	


				Moun	ting and	Option •		
	Mounting option							
Symbol	Prin	ting		DIN rail		Direct		
	Yes	No	With	Without	Specified length	mounting		
AA	•	_	_	_	_	•		
Α	•	_	•	_	_	_		
A0	•	_		•	_	_		
A3	•	_	_	_	For 3 stations	_		
:	:	:	:	:	:	_		
A24	•	_		_	For 24 stations	_		
BA	_	•	_	_	_	•		
В	_	•	•	_	_	_		
B0	_	•	_	•	_	_		
B3	_	•	_	_	For 3 stations	_		
:	:	:	:	:	:	_		
B24	_	•	_	_	For 24 stations	_		


┌ Ordering I	Example
SS5Y3-10	F1-05UR-C6AA1 set
*SY3200R-	-5U15 sets
The as	sterisk denotes the symbol for the assembly.

- \* Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

<SY5000/7000>

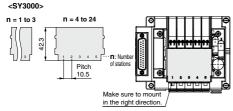

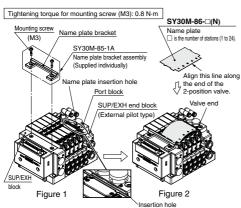

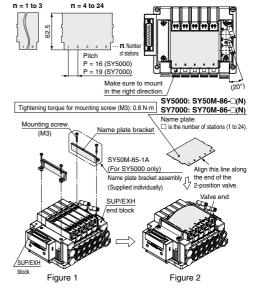

## **Manifold Options**

\* A transparent plastic plate to put a label with the name of the function of the solenoid valve

#### ■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

#### Name plate part number

Mo	odel	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	☐:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

Name plate bracket assembly part number and number of items ordered

Model		SS5Y3-10	SS5Y5-10/11
Name plate assemb	ly part number	SY30M-85-1A	SY50M-85-1A
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	
block assembly	Internal pilot double sided piping	2 pcs.	0
Pilot type and	External pilot U/D piping	1 pc.*1	2 pcs.
P, E port entry	External pilot double sided piping	Not required*1	

<sup>\*1</sup> If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

## **∧** Caution

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.



<sup>\*</sup> Name plate bracket assembly is not required for the SY7000.

## **Dimensions: Manifold Options/SY3000 Series**


## ■ Blanking plate assembly







<Type 10, 12>

## ■ Individual SUP/EXH spacer assembly (Top ported)

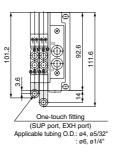

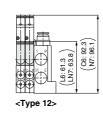


### ■ Double check spacer assembly with residual pressure release valve

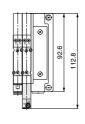



■ Individual SUP/EXH block assembly (Top ported)

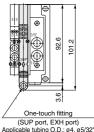



Applicable tubing O.D.: ø4, ø5/32 : ø6, ø1/4"




<Type 12>


## ■ Individual SUP/EXH spacer assembly (Side ported)

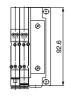

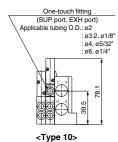


## SUP stop valve spacer assembly with residual pressure release valve

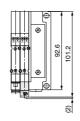


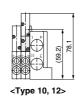

\* The dimensions within ( ) apply to the SY30M-50-1AE.

## ■ Interface regulator

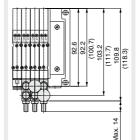


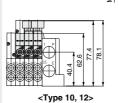

The dimensions within ( ) apply to the SY30M-□-□-3.


## ■ Individual SUP/EXH block assembly (Side ported)




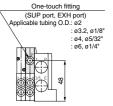



<Type 10>

## **Dimensions: Manifold Options/SY5000 Series**

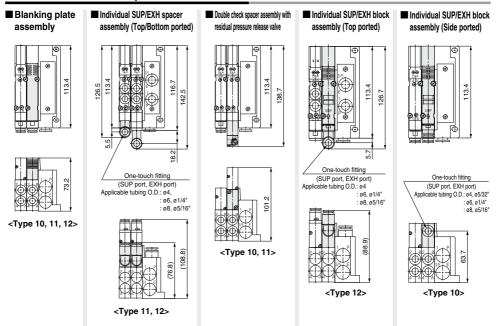


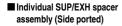

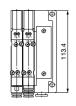

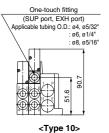


## ■ SUP stop valve spacer assembly with residual pressure release valve

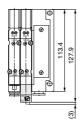




 The dimensions within () apply to the SY50M-50-1AE.


## ■Interface regulator

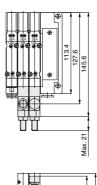


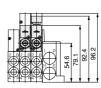

<Type 10, 11, 12>

## ■ Individual SUP/EXH block assembly (Side ported)

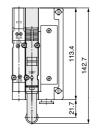


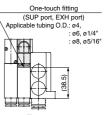

<Type 11>

## **Dimensions: Manifold Options/SY7000 Series**


## ■ Blanking plate assembly

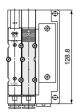



<Type 10, 11, 12>


## Individual SUP/EXH spacer assembly (Top/Bottom ported)

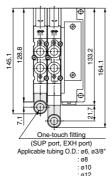





<Type 11, 12>

### ■ Double check spacer assembly with residual pressure release valve

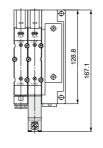

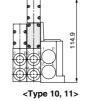

## ■ Individual SUP/EXH block assembly (Top ported)

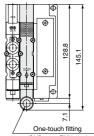



(SUP port, EXH port)
Applicable tubing O.D.: ø6, ø3/8"
: ø8
: ø10
: ø12




<Type 12>

## ■ Individual SUP/EXH spacer assembly (Side ported)

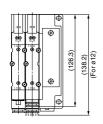

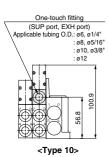

## SUP stop valve spacer assembly with residual pressure release valve

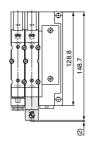





<Type 10, 11, 12>

\* The dimensions within ( ) apply to the SY70M-50-1AE.

## ■ Individual SUP/EXH block assembly (Side ported)

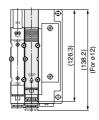


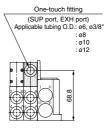


<Type 10>


## **Dimensions: Manifold Options/SY7000 Series**


## ■ Interface regulator

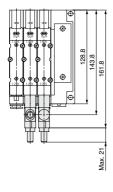

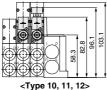

## ■ Individual SUP/EXH block assembly (Bottom ported)

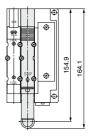

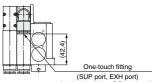


<Type 11> Applicable tubing O.D.: Ø8, Ø3/8"

or 910

or 12

## Plug-in Metal Base

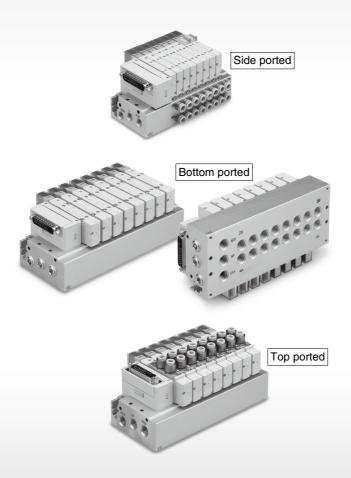

## SY3000/5000/7000 Series Type 50, 51, 52

## Plug-in Metal Base



## **Manifold Specifications**

			D-sub connector		Flat ribbon cable		Serial wiring		
	Model		F type	F type PG type PH type		PH type	S5 type (EX510)		
Manifold typ	e			Plug-in metal base					
SUP/EXH po	rt type				Common SUP/EXH				
Valve station	All double wiring		2 to 12	stations	2 to 9 stations	2 to 4 stations	2 to 8 stations		
vaive Station	All single wiring		21012	Stations	2 to 12 stations	2 to 8 stations	2 to 12 stations		
Applicable connector			D-sub connector Conforming to MIL-C-24308		t ribbon cable conne with strain relief nforming to MIL-C-83		_		
			JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type			
Internal wiri	ng		Positive common, Negative common						
		SY3000	1/8						
	1(P), 3/5(E) port	SY5000	1/4						
		SY7000			3/8				
Port size		SY3000	M5 x 0.8, 1/8  Ø2 One-touch fitting, ø3.2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting  ø1/8" One-touch fitting, ø5/32" One-touch fitting, ø1/4" One-touch fitting						
POIT SIZE	4(A), 2(B) port	SY5000	1/8, 1/4 ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting						
		SY7000		1/4 ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4" One-touch fitting, ø5/16" One-touch fitting, ø3/8" One-touch fitting					
Enclosure (E	Based on IEC60529)	•		IP	40		IP20		

## Manifold Flow Rate Characteristics 1/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Val	ve flow rate	Weight: W [g]*2			
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	1.1	0.15	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	1.2	0.14	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	1.2	0.20	44n	+ 247
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	2.6	0.14	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	2.8	0.20	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	3.1	0.13	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	4.0	0.20	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	4.8	0.20	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	4.9	0.24	164n	+ 510

Valve Seal Type: Metal Seal

aive ocal Type: Metal ocal									
	Port	size	Val	ve flow rate	Weight: W [g]*2 (n: stations)				
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)				4/2→5/3 (A/B→E)		
	(P, EA, EB)	(A, B)	C [dm <sup>3</sup> /(s-bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	Fixed: C□	Replaceable: KC	
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	1.0	0.12	39n + 247	43.5n + 247	
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	1.1	0.10	41.5n + 251	48.5n + 251	
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	1.1	0.14	44n + 247		
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	2.3	0.13	93n + 379	110n + 379	
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	2.5	0.16	93n + 413	113n + 413	
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	2.6	0.12	103n	+ 379	
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	3.5	0.18	144n + 510	158n + 510	
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	4.0	0.16	150n + 549	172n + 549	
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	3.8	0.18	164n	+ 510	

<sup>\*1</sup> The value is for manifold base with 5 stations and individually operated 2-position type.

**SMC** 

<sup>\*2</sup> Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 406 for the appropriate number of stations.

<sup>\*</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C






D-sub Connector Flat Ribbon Cable

## SY3000/5000/7000 Series

CE UK CRUS ROHS

How to Order Manifolds

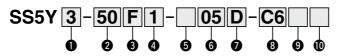


#### Series SY3000 5 SY5000 SY7000

#### Side ported 51 Bottom ported 50R Side ported, External pilot


\* External pilot is not available for the bottom-ported type.

## Connector type

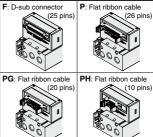

## 4 Connector entry direction 1: Upward 2: Lateral

## How to Order Manifold Assembly

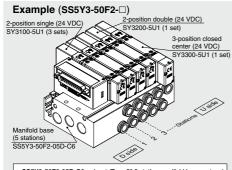

- SS5Y3-50F2-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.) \*SY3100-5U1----- 3 sets (2-position single part no.)
- \*SY3200-5U1------ 1 set (2-position double part no.) SY3300-5U1-----1 set (3-position closed center part no.)
  - The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

complicated, specify the details on a manifold specification sheet.

- . For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too
- When mixing top-ported configurations, select from those listed on page 657. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

## 6 Wiring type

Nil	All double wiring*1		7
S	All single wiring*2		
. 4 . 6 11 . 4		al a cola La	

- All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- \*2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used. \* If a mix of single and double wiring is required, it is supplied as a special order.

## 6 Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
- :	:	double	1	:	double
12	12 stations	wiring	12	12 stations	wiring
02	2 stations	All	02	2 stations	All
- :	:	single		:	single
12	12 stations	wiring	12	12 stations	wiring
PG:		n cable (20 pins)	PH:		
PG:	Flat ribbo	n cable (20 pins)	PH:	Flat ribbo	n cable (10 pin
PG: Symbol	Flat ribbo	n cable (20 pins) Note	PH:	Flat ribbo Stations	n cable (10 pin:
PG: Symbol	Flat ribbo	n cable (20 pins)  Note  All	PH:	Flat ribbo Stations	n cable (10 pin Note
PG: Symbol 02	Flat ribbo Stations 2 stations :	n cable (20 pins)  Note  All  double	PH: Symbol 02	Flat ribbo Stations 2 stations :	n cable (10 pins Note All double
PG: Symbol 02 :	Flat ribbo Stations 2 stations : 9 stations	n cable (20 pins)  Note  All  double  wiring	PH: Symbol 02 :	Flat ribbo Stations 2 stations : 4 stations	n cable (10 pin: Note All double wiring

\* This also includes the number of the blanking plate assembly.

## Pug-in Metal Base SY3000/5000/7000 Series

P E port entry

T, E port citary							
U	U side*1						
D	D side*1*2						
В	Both sides						

- \*1 Plugs are mounted on the opposite side of the selected ports.
- \*2 Only D side is available for the type 51 bottom-ported type.

Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

Mounting

Nil	Direct mounting					
D	DIN rail n	DIN rail mounting (With DIN rail)				
D0		ounting (Without DIN rail)				
D3	For 3 stations	Specify a length longer				
		than that of the standard				
D12	For 12 stations	rail.				

- \* Only direct mounting is available for the type
- 51 bottom-ported type.

  \* Refer to page 708 for the fixation of DIN rail mounting type manifold.

## 8 A, B port size

Thread piping

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

One-touch fitting (Metric)

Sy	ymbol	A, B port	SY3000	SY5000	SY7000		
	C2	ø2	•	_	_		
	C3	ø3.2	•	_	_		
Fixed	C4	ø4	•	•	_		<i>6</i> 0
iĚ	C6	ø6	•	•	_		
	C8	ø8	_	•	•	<b>(C</b>	
	C10	ø10	_	_	•	,	
	KC2	ø2	•	_	_	Type 50	Type 51
	КС3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
le e	KC4	ø4	•	•	_	า	
Replaceable	KC6	ø6	•	•	•		
plac	KC8	ø8	_	•	•		
l <sub>e</sub>	KC10	ø10	_	_	•		حطر ا
	KC12	ø12	_	_	•	/~ <b>\Q</b>	<b>*</b>
	M*1	Mixed sizes	•	•	•	40	
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		


One-touch fitting (Inch)

Or	ie-tou	ich fitting (inch)					
Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	N1	N1 Ø1/8" ● — —					
_	N3	ø5/32"	•	•	_		
×ec	N7 Ø1/4" • •		_	1 <b>~~~~</b>			
"	N9	ø5/16"	_	•	•		
	N11	ø3/8"	_	_	•		´
	KN1	ø1/8"	•	_	_	Type 50	Type 51
le e	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Replaceable	KN7	ø1/4"	•	•	•		
ba	KN9	ø5/16"	_	•	•	<b>700</b>	
8	KN11	ø3/8"	_	_	•		ا جھے ا
	<b>M</b> *1	Mixed sizes	•	•	•		
P,	E por	size (Thread piping)	1/8	1/4	3/8		

<sup>\*1</sup> When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

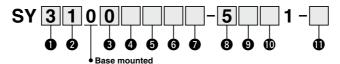

#### 1 Series

ı	3	SY3000
	5	SY5000
	7	SY7000

### 2 Type of actuation

1	2-position	Single				
2	2-003111011	Double				
3	3-position	Closed center				
4		Exhaust center				
5		Pressure center				
<b>A</b> *1	4-position dual 3-port	N.C./N.C.				
<b>B</b> ∗1		N.O./N.O.				
C*1	duai 3-port	N.C./N.O.				

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

## Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

Nil	Internal pilot
R	External pilot
* When	selecting the external pilot specification

When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

## Back pressure check valve (Built-in valve type)

	71 /
Nil	None
н	Built-in

- \* Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

O I not valve option									
Nil	Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)								
<b>K</b> *1	High pressure type (1.0 MPa)								

\*1 Only the metal seal type is available for the high pressure type.

### Coil type

	NII	Standard
	Т	With power saving circuit (Continuous duty type
*	Be su	re to select the power saving circuit

- type if the valve is to be continuously energized for long periods of time.

  \* Be careful of the energizing time when the
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## 8 Rated voltage


5	24 VDC
6	12 VDC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil	_	_			
R	_		Non-polar		
C	•				
S	_	1	Positive		
Z	•	_	common		
NS	_		Negative		
NZ	•		common		

- For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

## Manual override

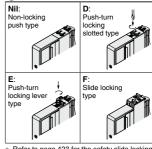

 Refer to page 423 for the safety slide locking manual override.

## Type of mounting screw

• ',	oc or mounting out on
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 679 for base gasket and mounting screw and numbers.
- mounting screw part numbers.


  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

## Plus-in Metal Base **SY3000/5000/7000** Series

Dimensions: SY3000 Series



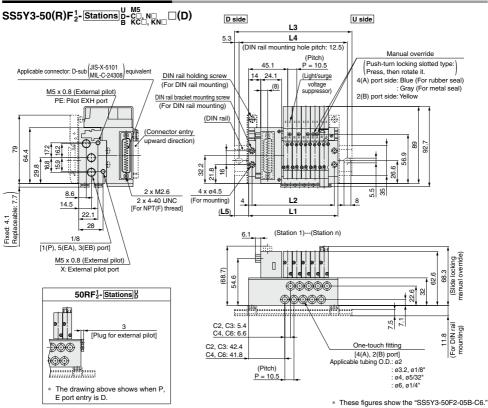


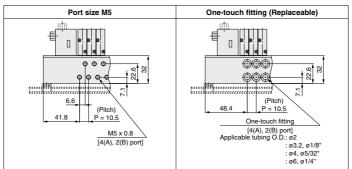

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Plug-in Type 50/Side Ported
Metal Base D-sub Connector

## Dimensions: SY3000 Series

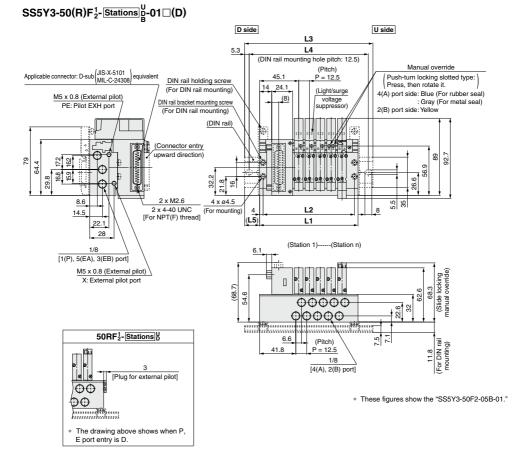



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

## Plug-in Metal Base **SY3000/5000/7000** Series

Dimensions: SY5000 Series



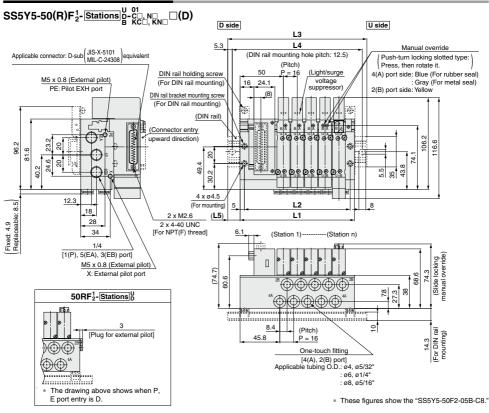

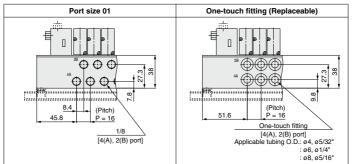


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Plug-in Type 50/Side Ported

Metal Base D-sub Connector

## Dimensions: SY5000 Series

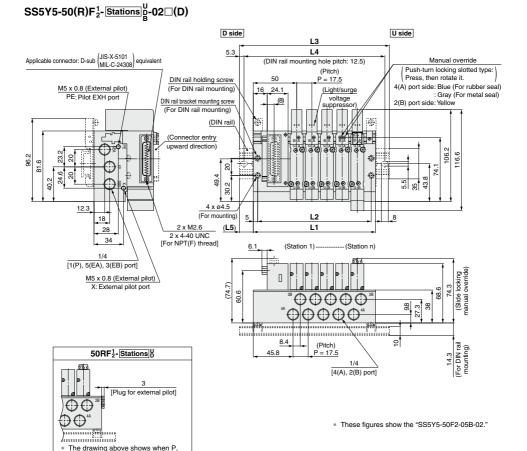


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

E port entry is D.

## Pure in Metal Base SY3000/5000/7000 Series

Dimensions: SY7000 Series


Plug-in Type 50/Side Ported
Metal Base D-sub Connector

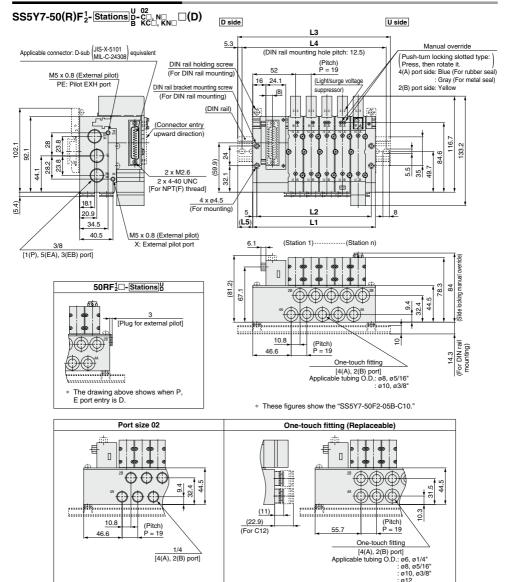


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Plug-in Metal Base Type 50/Side Ported
Flat Ribbon Cable




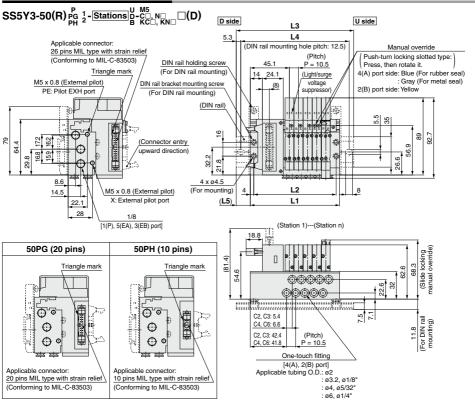

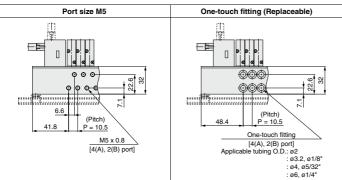

- \* These figures show the "SS5Y3-50P2-05B-C6."
- Only connectors are different for 50PG and 50PH.
   L1 to L5 dimensions are the same



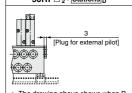

 The drawing above shows when P, E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


# Plug-in Metal Base **SY3000/5000/7000** Series


Plug-in Type 50


Metal Base Flat R

Type 50/Side Ported
Flat Ribbon Cable


Dimensions: SY3000 Series

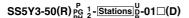

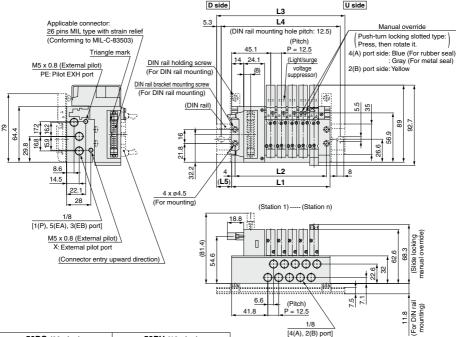

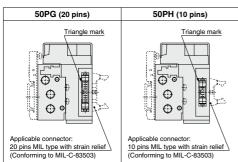

- \* These figures show the "SS5Y3-50P2-05B-01."
- Only connectors are different for 50PG and 50PH.
   L1 to L5 dimensions are the same as 50P type.

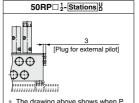


 The drawing above shows when P, E port entry is D.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5






## Dimensions: SY5000 Series

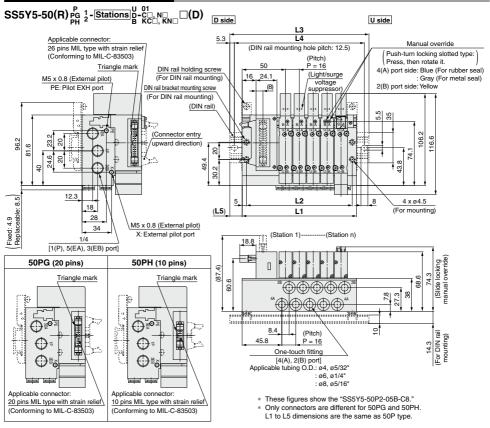

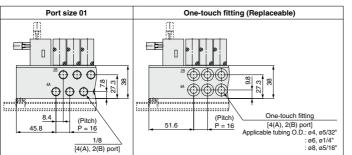

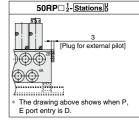


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

# Pursum Metal Base SY3000/5000/7000 Series

# Dimensions: SY5000 Series

Plug-in Type 50/Side Ported
Metal Base Flat Ribbon Cable

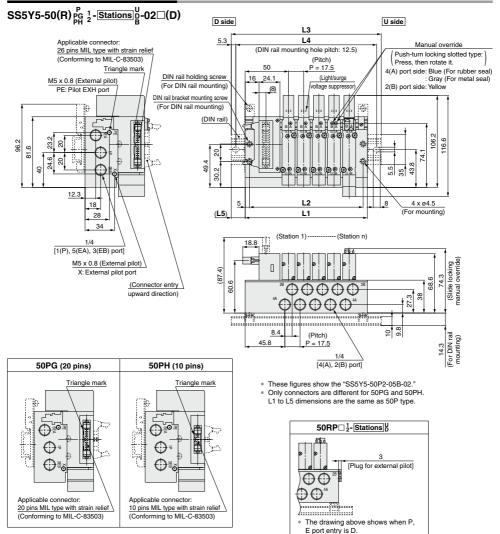



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5


Plug-in Type 50/Side Ported

Metal Base Flat Ribbon Cable

## Dimensions: SY7000 Series

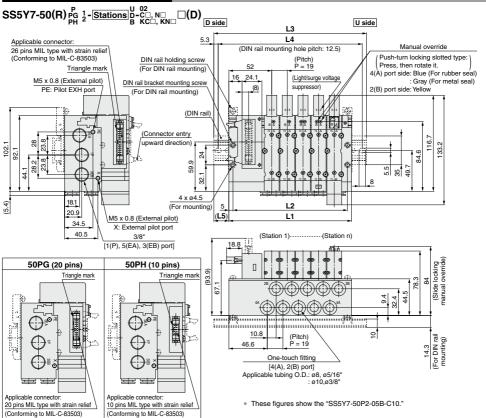

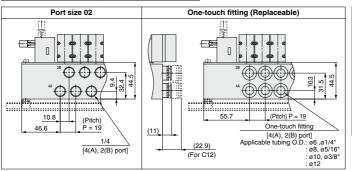

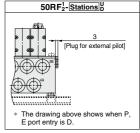

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


# Pursin Metal Base SY3000/5000/7000 Series


## Dimensions: SY3000 Series

Plug-in Metal Base

Type 51/Bottom Ported

D-sub Connector

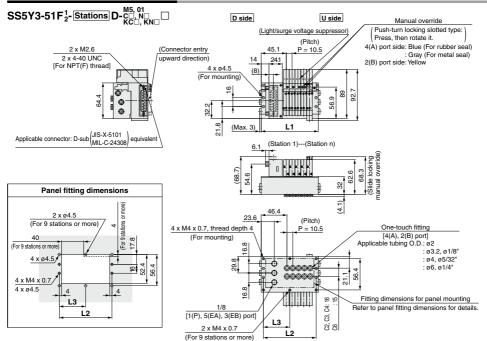

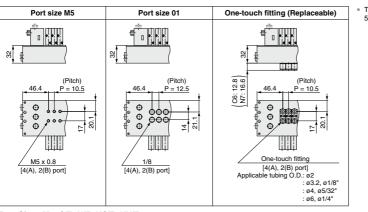

 These figures show the "SS5Y3-51F2-05D-C6."

#### Port Sizes M5. C□. N□. KC□. KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
1.0								60 E	72.0	70	012

#### Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5







Fitting dimensions for panel mounting

Refer to panel fitting dimensions for details.

14.8

. 00

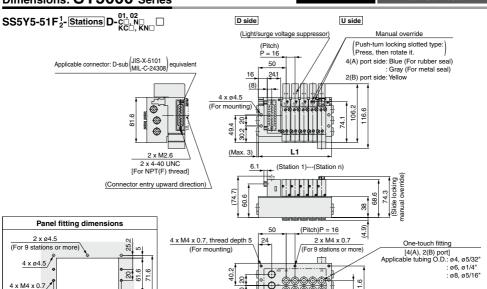

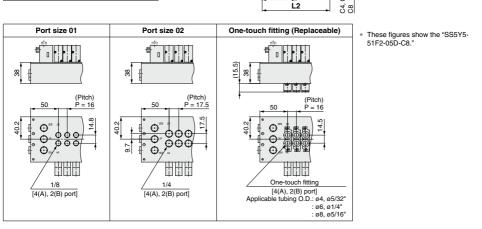

[1(P), 5(EA), 3(EB) port]

13

#### Port Sizes 01, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

#### Port Size 02

4 x ø4.5

5

L3

L2


5

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

# Pursum Metal Base SY3000/5000/7000 Series

## Dimensions: SY7000 Series


Plug-in Type 51/Bottom Ported
Metal Base D-sub Connector

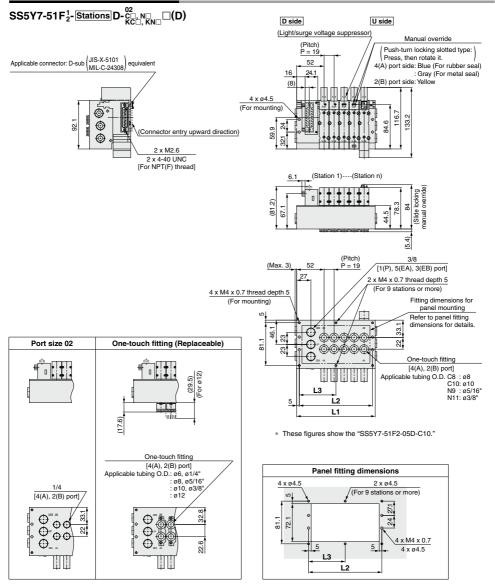

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136



# Dimensions: SY3000 Series

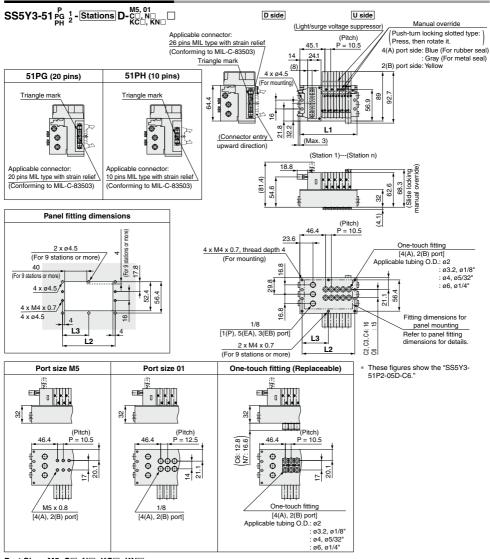

Port Sizes I	W5, C⊔, N⊔	, KC⊔, KN⊔

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_		_	_		_	68.5	73.8	79	84.3


#### Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	I	_	_	_	_	_	_	77.8	84	90.3	96.5

# Pursin Metal Base SY3000/5000/7000 Series

# Dimensions: SY5000 Series

Plug-in Metal Base Type 51/Bottom Ported
Flat Ribbon Cable

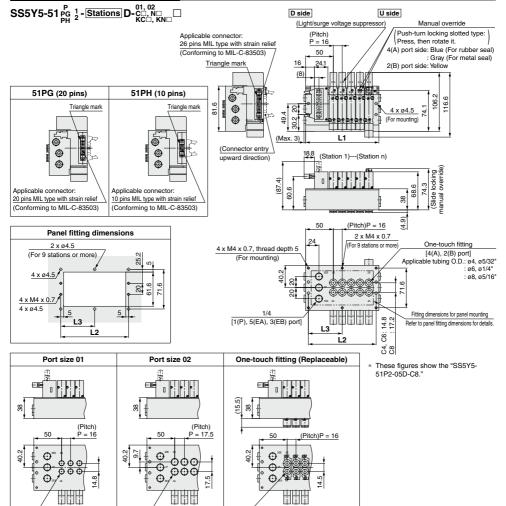

## Port Sizes 01, C□, N□, KC□, KN□

1/8

[4(A), 2(B) port]

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

1/4

[4(A), 2(B) port]

One-touch fitting

[4(A), 2(B) port]

Applicable tubing O.D.: ø4, ø5/32'

: ø6, ø1/4"

#### Port Size 02


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8


## Dimensions: SY7000 Series





Type 51/Bottom Ported
Flat Ribbon Cable




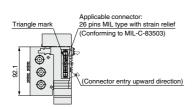


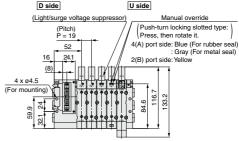


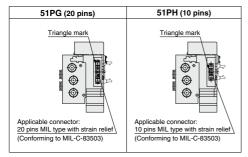

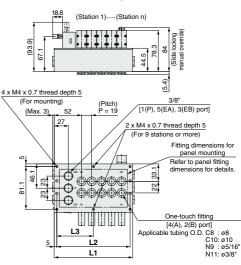

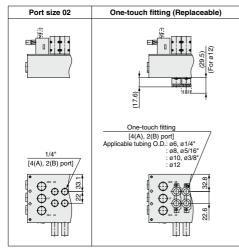

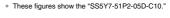

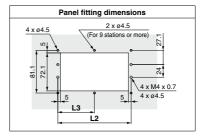

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

# Plug-in Metal Base


D-sub Connector | Flat Ribbon Cable

Type 52 Top Ported

# SY3000/5000/7000 Series

CE UK CRUS ROHS


How to Order Manifolds

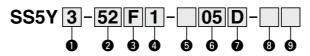

#### Series SY3000 SY5000 SY7000

#### 2 Type 52 Top ported 52R Top ported, External pilot

4 Connector entry direction

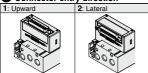


Wiring type	0	Wirina	tvpe
-------------	---	--------	------

Nil	All double wiring*1
S	All single wiring*2

- \*1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations
- \*2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used.

  If a mix of single and double wiring is required, it is supplied as a


## **How to Order Manifold Assembly**

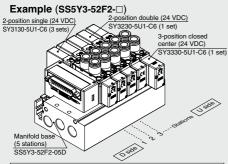

SS5Y3-52F2-05D 1 set (Type 52 5-station manifold base part no.)
*SY3130-5U1-C6 3 sets (2-position single part no.)
*SY3230-5U1-C6 1 set (2-position double part no.)
*SY3330-5U1-C6 1 set (3-position closed center part no.)
→ The asterisk denotes the symbol for the assembly.
Draffy it to the next numbers of the value ate

. For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

## 3 Connector type

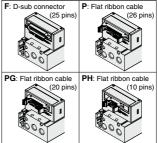

## 6 Valve stations

F: D-sub connector (25 pins) P: Flat ribbon cable (26 pins)							
Symbol	Stations	Note	Symbol	Stations	Note		
02	2 stations	All	02	2 stations	All		
1	:	double	:	:	double		
12	12 stations	wiring	12	12 stations	wiring		
02	2 stations	All	02	2 stations	All		
1	:	single		:	single		
12	12 stations	wiring	12	12 stations	wiring		
		n cable (20 pins)			n cable (10 pins		

PG:	Flat ribbo	n cable (20 pins)	PH:	PH: Flat ribbon cable (10 pins)				
Symbol	Stations	Note	Symbol	Stations	Note			
02	2 stations	All	02	2 stations	All			
1	:	double		:	double			
09	9 stations	wiring	04	4 stations	wiring			
02	2 stations	All	02	2 stations	All			
:	:	single	:	:	single			
12	12 stations	wiring	08	8 stations	wiring			

\* This also includes the number of the blanking plate assembly.

#### 📭 P. E port entry

F, L port entry					
U	U side*1				
D	D side*1				
В	Both sides				

\*1 Plugs are mounted on the opposite side of the selected ports.

#### 8 Thread type

Nil	Rc			
00F	G			
00N	NPT			
00T	NPTF			

#### Mounting


Nil	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a length longer				
:	:	than that of the standard				
D12	For 12 stations	rail.				

\* Refer to page 708 for the fixation of DIN rail mounting type manifold.

# Pursin Metal Base SY3000/5000/7000 Series

### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

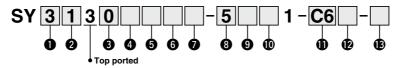

#### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	0	Single	
2	2-position	Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
<b>A</b> *1	4-position dual	N.C./N.C.	
B*1		N.O./N.O.	
C*1	3-port	N.C./N.O.	

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

## 4 Pilot type

Pilot type	
Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve (Built-in valve type)

(Dunt-in valve type)	
Nil	None
н	Built-in

- Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

#### 6 Pilot valve option

Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*1	High pressure type (1.0 MPa)	

\*1 Only the metal seal type is available for the high pressure type.

## Coil type

Nil	Standard
Т	With power saving circuit
	(Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## 8 Rated voltage

5	24 VDC
6	12 VDC


# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	-	_		
R	_		Non-polar	
U	•			
S	1	•	Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 706 for details.

  \* Only "Z" and "NZ" types are available with a power saving circuit.

## Manual override

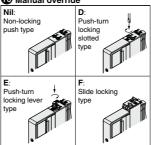

 Refer to page 423 for the safety slide locking manual override.

## A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C2 C3 C4 C6 C8	ø8	_	•	•
C10	ø10		_	•
C12	ø12	_	_	•

#### One-touch fitting (Inch)

One-touch hitting (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## 13 Type of mounting screw

• ',	oc or mounting corew
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 679 for base gasket and manufacturing screen and unphers.
- mounting screw part numbers.


  \* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in **Metal** Base Type 52/Top Ported

D-sub Connector, Flat Ribbon Cable

Dimensions: SY3000 Series

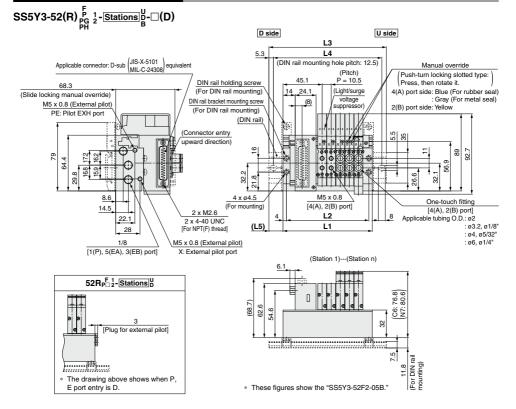

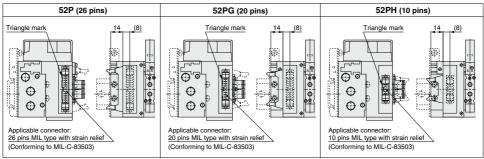


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


# Pursin Metal Base SY3000/5000/7000 Series


## Dimensions: SY5000 Series


Plug-in Metal Base


Type 52/Top Ported D-sub Connector, Flat Ribbon Cable

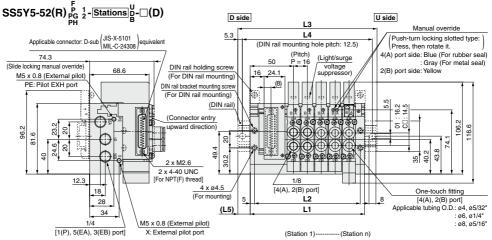

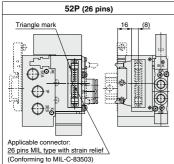

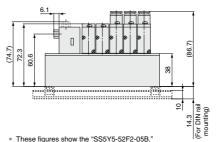

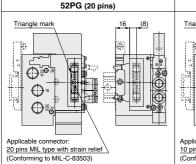

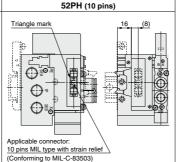

52R <sub>P</sub> 1/2 - Stations D
[Plug for external pilot]
* The drawing above shows when P,
E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Plug-in Metal Base


Type 52/Top Ported

D-sub Connector, Flat Ribbon Cable

[Plug for external pilot]

E port entry is D.

The drawing above shows when P,

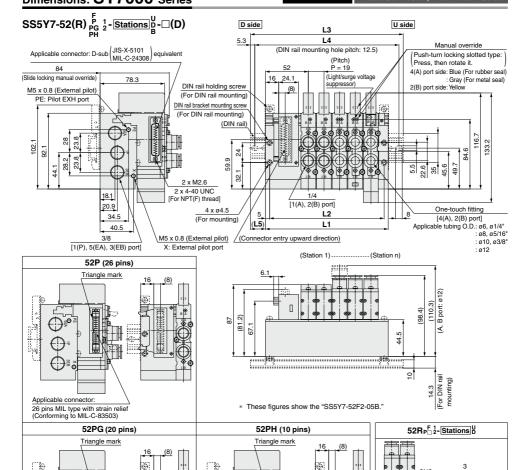

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


Applicable connector: 10 pins MIL type with strain relief

(Conforming to MIL-C-83503)


Applicable connector: 20 pins MIL type with strain relief

(Conforming to MIL-C-83503)

# Puccin Metal Base SY3000/5000/7000 Series

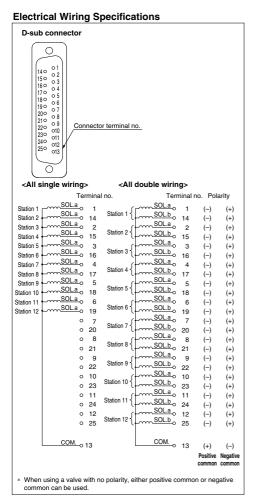

## Cable Assembly

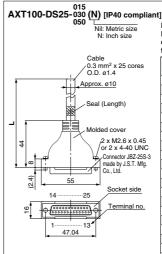

#### Lead wire color for D-sub connector cable assembly by terminal number Lond

Terminal no.	wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White

25 White None

#### D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable
3 m		0.3 mm <sup>2</sup> x 25 cores
5 m	AXT100-DS25-050	0.3 IIIII X 23 00165


- \* When using a standard commercial connector, use a 25-pin type female
- connector conforming to MIL-C-24308. Cannot be used for movable wiring
- \* Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturer's Example **Electrical characteristics**

- Property Item Conductor resistance O/km. 20°C Voltage limit 1000 V. 1 minute. AC 5 or more MO/km, 20°C
  - The minimum bending radius of the D-sub connector cable is 20 mm
- · Fujitsu Limited · Japan Aviation Electronics Industry, Limited
- . J.S.T. Mfg. Co., Ltd. · HIROSE ELECTRIC CO., LTD.



## **Electrical Wiring Specifications**

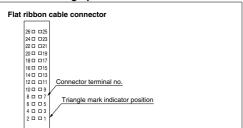


D. Flat sibban aabla (00 sina)

	P: Fla	t ribbon c	able (26 pi	ns)		
<all single<="" th=""><th>wiring&gt;</th><th><all< th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all<></th></all>	wiring>	<all< th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all<>	double wir	ing>		
	Termina	no.	Tern	ninal	no. Pola	arity
Station 1	SOL.a 1		SOLa	1	(-)	(+)
	SOL.a 2	Station 1 {	SOL.b	2	( <del>-</del> )	(+)
	SOL.a 3	0	SOL.a	3	(-)	(+)
	SOL.a 4	Station 2 {	SOL.b	4	(-)	(+)
	SOL.a 5	Station 3 {	SOL.a	5	(-)	(+)
Station 6	SOLa 6	Station 3 1	SOL.b	6	(-)	(+)
Ottation 7	SOLa 7	Station 4 {	SOL.a SOL.b	7	(-)	(+)
Ottation 0		Otation 4	SOL.a	8	(-)	(+)
Station 9	SOLa 9	Station 5 {	0011	9	(-)	(+)
Station 10	SOL.a 0 10 SOL.a 0 11	Oldilon o	`l ⊆∩	10	(-)	(+)
Station 11	SOL.a o 12	Station 6	SOLb	11	(-)	(+)
Station 12	0 13		SOLa	12	(-)	(+)
	013	Station 7	SOL.b	1.0	(-)	(+)
	015		- SOL.a	15	(-) (-)	(+) (+)
	∘16	Station 8 {	Loron SOL.b	16	(-)	(+)
	017		- Lanna SULid	47	(-)	(+)
	∘ 18	Station 9 {	SUL.D	10	( <del>-</del> )	(+)
	0 19	0	-L-msula	10	(-)	(+)
	∘20	Station 10 {	1 ~~~~ 5UL.0 ~	20	(-)	(+)
	∘21	Station 11 {	SOL.a	21	(-)	(+)
	∘ 22	Station 117	SOLb	22	(-)	(+)
	∘23	Station 12 {	SOL a	23	(-)	(+)
	024	OLLLIOIT IZ	SOLb	24	(-)	(+)
I —	COM. 25		COM.	25	(+)	(-)
	COM. 26		COM.	26	(+)	( <del>-</del> )
					Positive	Negative

	PG: Fla	t ribbon o	cable (20 p	ins)		
<all single<="" th=""><th>wiring&gt;</th><th><all (<="" th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all></th></all>	wiring>	<all (<="" th=""><th>double wir</th><th>ing&gt;</th><th></th><th></th></all>	double wir	ing>		
	Terminal	no.	Tern	ninal no	. Pola	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 6 Station 7 Station 7 Station 9 Station 9 Station 10 Station 11 Station 12	SOLa 0 1 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	Station 1 { Station 2 { Station 3 { Station 4 { Station 5 { Station 6 { Station 7 { Station 8 { Station 9 {	SOLA SOLD SOLA SOLA SOLA SOLA SOLA SOLA SOLB SOLB SOLB SOLB SOLB SOLB SOLB SOLB	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18		(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
					sitive mmon	Negative common

When using a valve with no polarity, either positive common or negative common can be used.

#### Cable Assembly

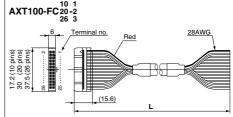

#### Flat ribbon cable connector assembly

Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- \* When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- Cannot be used for movable wiring
- \* Lengths other than the above are also available. Please contact SMC for details.

#### Connector Manufacturer's Example

- HIROSE ELECTRIC CO., LTD. Japan Aviation Electronics Industry, Limited
- 3M Japan Limited • J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited Oki Electric Cable Co., Ltd.

#### PH: Flat ribbon cable (10 pins) <All single wiring> <All double wiring> Terminal no. Terminal no. Polarity SOLa 0 1 SOLa 0 2 SOLa 0 3 SOLa ∘ 1 Station 1 SOL.b o Station 1 Station 2 2 SOL.a Station 3 3 (+) SOL.a Station 2 SOL.b Station 4 4 (+)SOLa 5 SOL.a Station 5 5 (-) (+) SOLa 6 Station 3 SOL.b Station 6 6 (+) SOL.a SOL.a Station 7 (+) SOLa 8 Station 4 SOL.b Station 8 (+) COM. 9 COM. o 9 (+) (-) COM. ○ 10 <u>COM.</u> ∘ 10

(+)

(<del>-</del>)

Positive Negative common common

common common

# Plug-in Metal Base Ex510

# SY3000/5000/7000 Series


Plugs are mounted on the opposite

\*2 Only D side is available for the type

side of the selected ports

51 bottom-ported type.

#### **How to Order Manifolds**

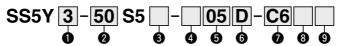

#### Series SY3000 5 SY5000

ועי כב	Je			
50	Side ported			
51	Bottom ported			
50R Side ported, External p				

## SY7000 3 SI unit output polarity Positive common

 External pilot is not available for the bottom-ported type.

# 6 Valve stations

6 P, E port entry

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
:			:	:	wiring
08	8 stations	wiring	12	12 stations	wiring

This also includes the number of the blanking plate assembly.

## Wiring type

• trining type			
Nil	All double wiring*1		
S	All single wiring*2		

Negative common

- \*1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- \*2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used.
- \* If a mix of single and double wiring is required, it is supplied as a special order.

#### A, B port size Thread piping

В


	p.p9			
Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

U side\*1

D side\*1\*2

Both sides

## **How to Order Manifold Assembly**

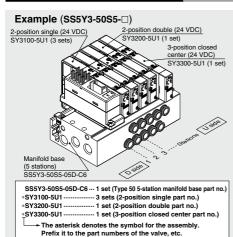

becomes too complicated, specify the details on a manifold specification sheet. \* When mixing top-ported configurations, select from those listed on page 674. In such cases, use caution as there is also output on the A and B ports on the base side Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

• For the valve arrangement, the valve closest to the D side is considered the 1st station. . Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement

#### One-touch fitting (Metric)

Sy	mbol	A, B port		SY5000	SY7000		
	C2	ø2	•	_	_		
	C3	ø3.2	•	_	_		
Fixed	C4	ø4	•	•	_		69
iĚ	C6	ø6	•	•	_		
	C8	ø8	_	•	•		
	C10	ø10	_	_	•		
	KC2	ø2	•	_	_	Type 50	Type 51
	KC3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
흥	KC4	ø4	•	•	_	[]	
Replaceable	KC6	ø6	•	•	•		
place	KC8	ø8	_	•	•		
æ	KC10	ø10	_	_	•		
	KC12	ø12	_	_	•		
	<b>M</b> *1	Mixed sizes	•	•	•	10	
P, E port size (Thread piping)		1/8	1/4	3/8			

#### One-touch fitting (Inch)

Sy	ymbol	A, B port		SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		04
"	N9	ø5/16"	_	•	•		10 L
	N11	ø3/8"	_	_	•		,
	KN1	ø1/8"	•	_	_	Type 50	Type 51
l e	KN3	ø5/32"	•	•	_	1 (Side ported)	(Bottom ported)
Replaceable	KN7	ø1/4"	•	•	•		
place	KN9	ø5/16"	_	•	•		
8	KN11	ø3/8"	_	_	•		جناب ا
	M*1	Mixed sizes	•	•	•		
P,	E port s	ize (Thread piping)	1/8	1/4	3/8		

\*1 When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.

# Metal Base **SY3000/5000/7000** Series

1 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTE

Mounting


Nil		Direct mounting	
D	DIN rail mounting (With DIN rail) DIN rail mounting (Without DIN rail)		
D0			
D3	For 3 stations	Specify a length longer	
:	:	than that of the standard	
D12	For 12 stations	rail.	

- Only direct mounting is available for the type 51 bottom-ported type.
- Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the Web Catalog and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smcworld.com

## How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

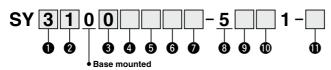

## Series

<b>O</b> 001100		
3	SY3000	
5	SY5000	
7	SY7000	

2 Type of actuation

Onacition	Single
z-position	Double
	Closed center
3-position	Exhaust center
	Pressure center
4-position dual 3-port	N.C./N.C.
	N.O./N.O.
	N.C./N.O.
	4-position

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

Nil	Internal pilot		
R		External pilot	

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

#### 5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

Only the rubber seal type is available.
The back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

## Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### 8 Rated voltage


5	24 VDC
---	--------

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	ı		Non-polar		
U	•		Non-polai		
S	_	•	Positive common		
Z	•	_	Positive common		
NS	-		Negative common		
NZ	•				

Only "Z" and "NZ" types are available with a power saving circuit. Select "R," "L," "S," or "Z" for the valve when the Sl unit output polarity is Nil (positive common). Select "R," "U," "NS," or "NZ" for the valve when the Sl unit output polarity is N (negative common).

## Manual override

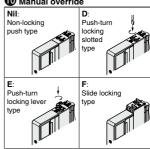

 Refer to page 423 for the safety slide locking manual override.

#### Type of mounting screw


- ,,	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- \* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 679 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.

↑ Protective class class II (Mark:♠)

Plug-in **Metal** Base Type 50/Side Ported

Dimensions: SY3000 Series

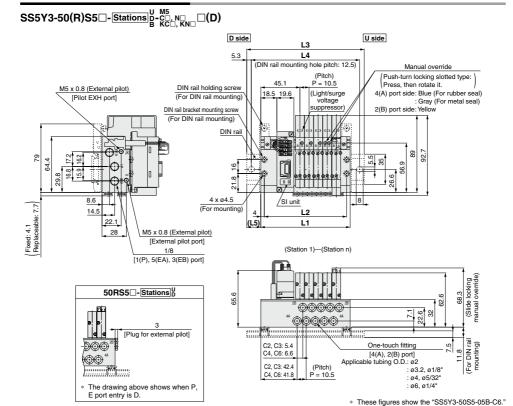

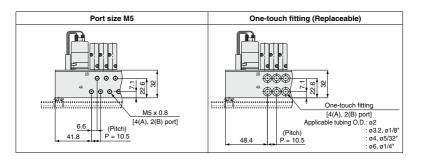


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Pure in Metal Base SY3000/5000/7000 Series

Plug-in Type 50/Side Ported
Metal Base EX510

# Dimensions: SY3000 Series

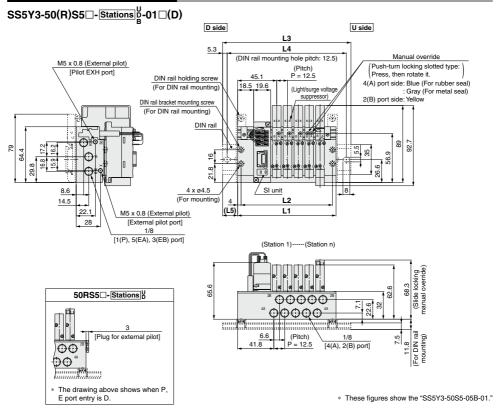


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5




Plug-in **Metal** Base Type 50/Side Ported EX510

Dimensions: SY5000 Series

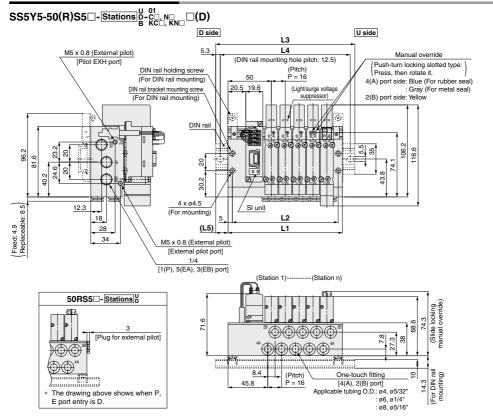

\* These figures show the "SS5Y5-50S5-05B-C8."

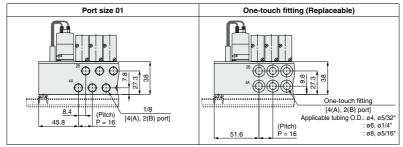


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

# Pure in Metal Base SY3000/5000/7000 Series

Plug-in Type 50/Side Ported
Metal Base EX510

Dimensions: SY5000 Series

SS5Y5-50(R)S5□-Stations D-02□(D)

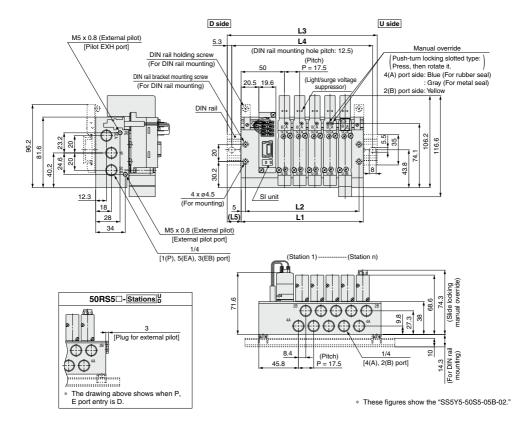



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5



Plug-in **Metal** Base Type 50/Side Ported EX510


Dimensions: SY7000 Series

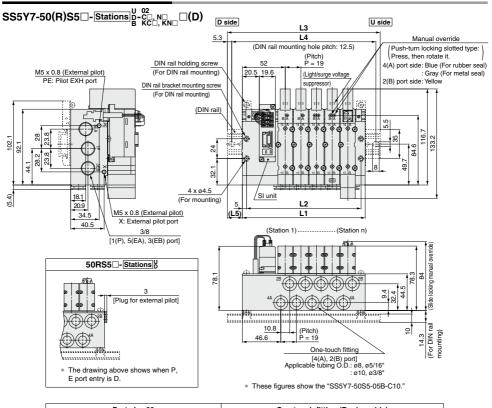

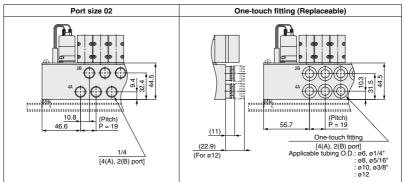

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5


# Pure in Metal Base SY3000/5000/7000 Series

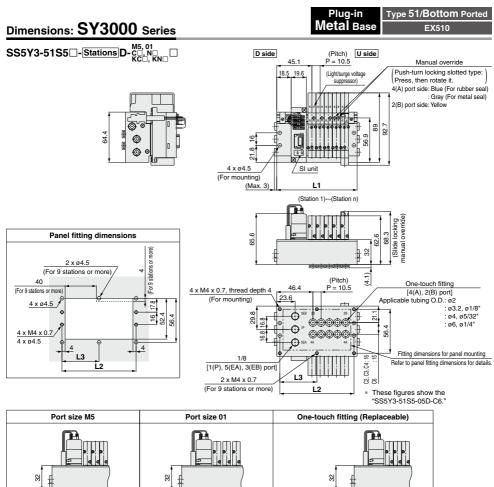

8	8	8
46.4 (Pitch) P = 10.5	(Pitch) P = 12.5	One-touch fitting  [4(A), 2(B) port]  Applicable tubing O.D.: 28 : 94, 95/32* : 96, 91/4*

Port S	Port Sizes M5, C□, N□, KC□, KN□													
n: Stations 2 3 4 5 6 7 8 9 1										11	12			
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5			
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5			
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3			

Port S	Port Size 01													
n: Stations	2	3	4	5	6	7	8	9	10	11	12			
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201			
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193			
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5			

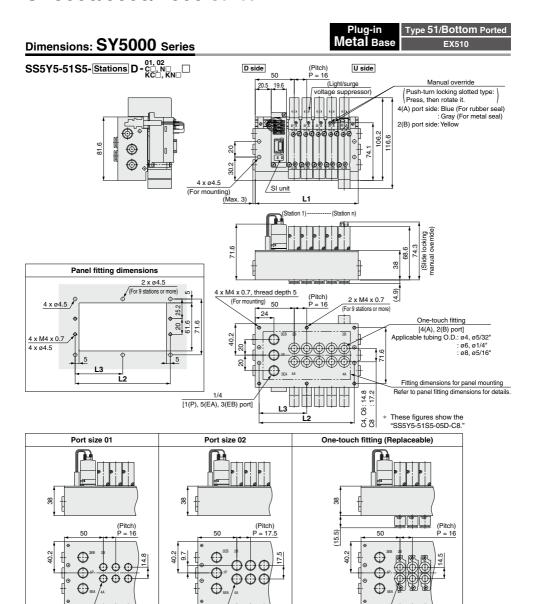

Port Sizes 01, C□, N□, KC□, KN□											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

[4(A), 2(B) port]

	Port 3	ize u	_									
	n: Stations	2	3	4	5	6	7	8	9	10	11	12
	L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
ĺ	L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
	L3	-	_	_	-	_	-	_	100.5	109.3	118	126.8

One-touch fitting

[4(A), 2(B) port] Applicable tubing O.D.: ø4, ø5/32

: ø6, ø1/4" : ø8, ø5/16"

[4(A), 2(B) port]


Dart Cina 00


# Pure in Metal Base SY3000/5000/7000 Series


Plug-in **Metal** Base


Type 51/Bottom Ported
EX510


Dimensions: SY7000 Series

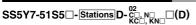

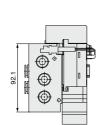

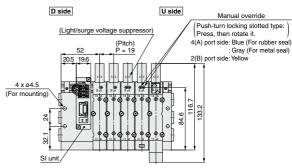


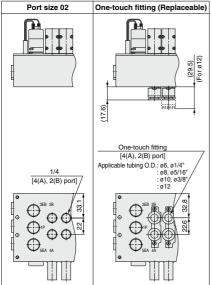


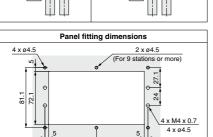

L3

L2

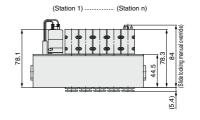

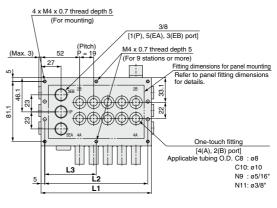

\* These figures show the "SS5Y7-51S5-05D-C10."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136




# Plug-in Metal Base Ex510

# SY3000/5000/7000 Series

( ( CH CH UK US

#### **How to Order Manifolds**

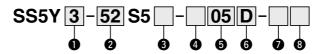

## Series

O OCITICO			
3	SY3000		
5	SY5000		
7	SY7000		

## 2 Type

• ',	<b>O</b> 13pc				
52	Top ported				
52R	Top ported, External pilot				

## 4 Wiring type

Γ	Nil	All double wiring*1
	S	All single wiring*2

- \*1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- \*2 All single wiring: Available only for the manifold which has 2-position single for all stations Note that 2-position double, 3-, or 4-position valves cannot be used.
- \* If a mix of single and double wiring is required, it is supplied as a special order.

#### Valve stations

Symbol	Stations	Note	
02	2 stations	All double	
	:	wiring	
08	8 stations	wiring	
02	2 stations	All single	
		wiring	
12	12 stations	willing	

 This also includes the number of the blanking plate assembly.

### SI unit output polarity


Nil	Positive common
N	Negative common

## 6 P, E port entry

U	U side*1
D	D side*1
В	Both sides

\*1 Plugs are mounted on the opposite side of the selected ports.

## How to Order Manifold Assembly

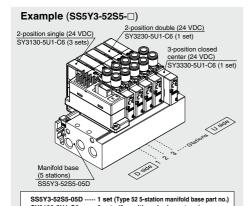

\*SY3130-5U1-C6 ...... 3 sets (2-position single part no.)
\*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

\*SY3330-5U1-C6 ...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

## 8 Mounting

Nil	Direct mounting						
D		DIN rail mounting (With DIN rail)					
D0		DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a length longer					
	:	than that of the standard					
D12	For 12 stations	rail.					


 Refer to page 708 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smcworld.com

# Purson Metal Base SY3000/5000/7000 Series

#### How to Order Valves (With mounting screw)

Refer to page 404 for valve specifications.

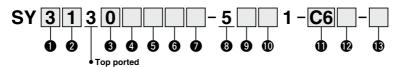

### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
<b>A</b> *1	4-position dual	N.C./N.C.
B*1		N.O./N.O.
C*1	3-port	N.C./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

## Pilot type

Pilot type		
Nil	Internal pilot	Internal pilot
R	External pilot	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

# Back pressure check valve

(Built-in valve type)	
Nil	None
	Duilt in

- Only the rubber seal type is available.
- The back pressure check valve is not available for the 3-position type or the SY7000.

## 6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

## 8 Rated voltage


24 VDC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_	_	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

Only "Z" and "NZ" types are available with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is Nil (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).

## Manual override

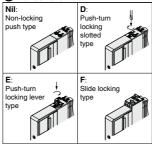

 Refer to page 423 for the safety slide locking manual override

### A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	
C3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	I -	_	•
C12	ø12	I -	_	•

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"		•	•
N11	ø3/8"		_	•

#### 12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

\* Only Nil is available for M5.

## 13 Type of mounting screw


• ',	oc or mounting out on	
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 679 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

Plug-in Type 52/Top Ported
Metal Base EX510

## Dimensions: SY3000 Series

## SS5Y3-52(R)S5□-Stations D-□(D)

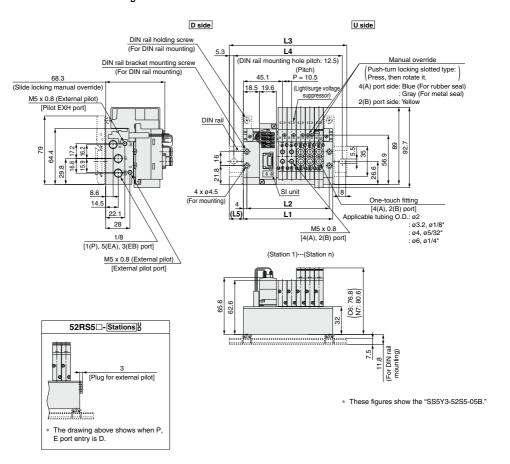


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

# Plus in Metal Base SY3000/5000/7000 Series

Plug-in Type 52/Top Ported
Metal Base EX510

# Dimensions: SY5000 Series

## SS5Y5-52(R)S5□-Stations D-□(D)

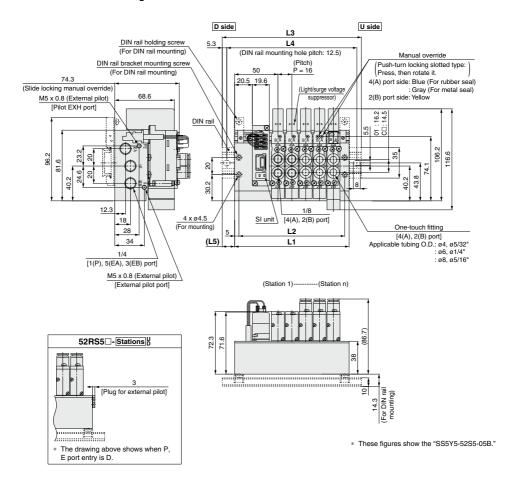

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5





Plug-in Type 52/Top Ported


Metal Base EX510

## Dimensions: SY7000 Series

# SS5Y7-52(R)S5 $\square$ -Stations $\stackrel{\text{U}}{\text{p}}$ - $\square$ (D)

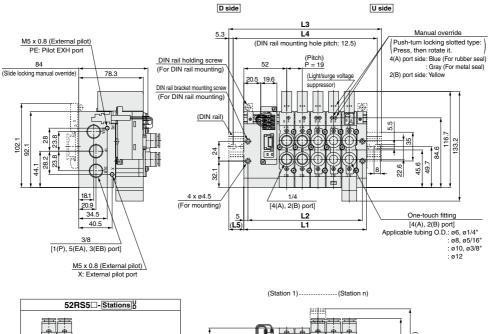

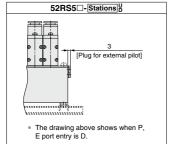


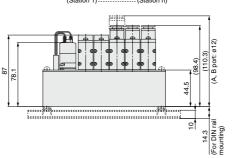

\* These figures show the "SS5Y7-52S5-05B."

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

# SY3000/5000/7000 Series Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

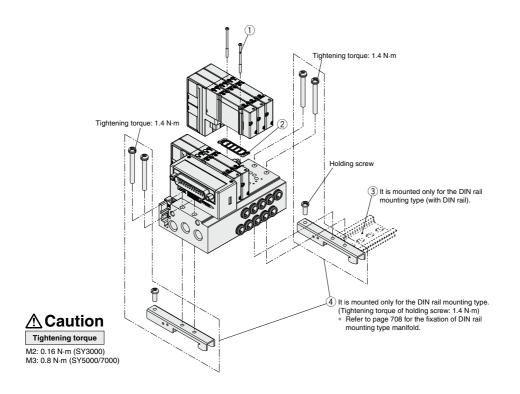

## **Manifold Parts Nos.**

No.	Dog	scription		Part no.	Note		
INO.	Des	scription	SY3000	SY5000	SY7000	Note	
(1)	Valve mounting	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are	
	screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	for 10 valves (20 pcs.). (30 pcs. for the SY7000)	
2	Base gasket (for plug-in metal base and sub-plate)		ΥΥΛΙΜ-11-1Δ   SV50M-11-1Δ   SV		SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).	
3	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 681.	
4	Clamp bracket a	•	SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).	

# SY3000/5000/7000 Series One-touch Fitting, Plug Assembly Part Nos.

Refer to "How to Replace One-touch Fittings" on page 709 for the replacement method.

#### ■ One-touch fittings

	Port size			SY3000	SY5000	SY7000	
		ø2		VVQ1000-50A-C2	_	_	
		ø3.2		VVQ1000-50A-C3		_	
	size	ø4		VVQ1000-50A-C4	VVQ1000-51A-C4	_	
	size Metric :	ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6	
t		ø8		_	VVQ1000-51A-C8	VVQ2000-51A-C8	
port		ø10		_	_	VVQ2000-51A-C10	
œ.		ø12		_	_	KQ2H12-17-X224	
ď		ø1/8"		VVQ1000-50A-N1		_	
		ø5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	_	
		ø1/4" St	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7	
	lnch	ø5/16"		_	VVQ1000-51A-N9	VVQ2000-51A-N9	
		ø3/8"		_	_	VVQ2000-51A-N11	

<sup>\*</sup> Purchasing order is available in units of 10 pieces.

## ■ Plug assembly

	SY3000	SY5000	SY7000
A. B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A

**SMC** 


<sup>\*</sup> Purchasing order is available in units of 10 pieces.

# SY3000/5000/7000 Series Manifold Options

#### ■ For the SY3000 Plug-in metal base

#### VZ1000-11-1-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

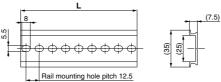


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 103.1	585.5 105.4	598 107.6	610.5 109.9	623 112.1	635.5 114.4	648 116.6	660.5 118.9	-	685.5 123.4	698 125.6	710.5 127.9	723 130.1	735.5 132.4	748 134.6	760.5 136.9	773 139.1	785.5 141.4	798 143.6
									673				_						
Weight [g]	103.1 57	105.4	107.6	109.9	112.1	114.4	116.6	118.9	673 121.1	123.4	125.6	127.9	130.1	132.4	134.6				

#### ■ For the SY5000/7000 Plug-in metal base

#### VZ1000-11-4-□

\* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

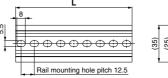

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
No.	38 573	39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
	573		-			_		_	-			710.5		-	-		-	785.5	
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 145 57	585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5 160.8	648 163.9	660.5 167.1	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5	773	785.5	798



#### **Manifold Options**

#### ■ Blanking plate assembly (With mounting screw)

Used when valve additions are expected or for maintenance

A structure is in place on the blanking plate to prevent the mounting screws from sliding.







SY70M-26-2A (-B)

SY30M-26-2A (-B)


Refer to pages 683 to 688 for individual SUP/EXH and other options.

Part numbers of mounting screw [Hexagon bolt] (For repairs)

\$Y3000: \$Y3000-23-24A [\$Y3000-222-1A] \$Y5000: \$Y5000-221-1A [\$Y5000-222-1A] \$Y7000: \$Y7000-221-2A [\$Y7000-222-1A]


#### How to Order Blanking Plate Assembly

Refer to pages 689 to 691 for dimensions.

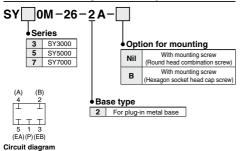

#### ■ Plug

These are inserted in unused cylinder ports and P, E ports.

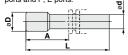

\* Shipped together with the product

#### Dimensions

Applicable fitting size ød (Metric size)	Model	A	L	øΒ
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ø <b>d</b> (Inch size)	Model	Α	L	øD
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5

# Manifold Options SY3000/5000/7000 Series

#### **∆** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


\* Refer to pages 689 to 691 for dimensions.

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

\* When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

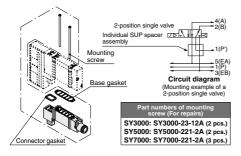


#### ■ Individual EXH spacer assembly


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

\* When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

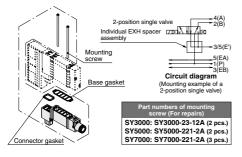

#### How to Order Individual SUP/EXH Spacer Assembly

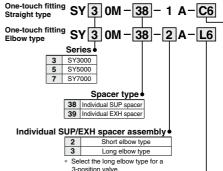

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	_
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10			•
L12	ø12	_	_	•

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•

#### Port size (Metric/One-touch fittings)

Fort size (Metric/One-touch fittings)								
Symbol	P, E port	SY3000	SY5000	SY7000				
C2	ø2	•	_	_				
СЗ	ø3.2	•	_	_				
C4	ø4	•	•	_				
C6	ø6	•	•	•				
C8	ø8	_	•	•				
C10	ø10	_	_	•				
C12	ø12	_	_	•				

#### Port size (Inch/One-touch fittings)

		(		
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

\* When using in combination with the SY<sup>5</sup>⁄<sub>2</sub>30<sup>0</sup>⁄<sub>1</sub>□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.



#### **∕** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)


#### \* Refer to pages 689 to 691 for dimensions.


#### **Manifold Options**

#### ■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

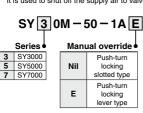

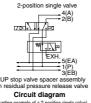

SUP stop valve spacer assembly (Mounting example of a 2-position single valve)

\* For lever type

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise. (PUSH → LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.


To unlock the manual override, turn the lever counterclockwise. (LOCK → PUSH)


#### [How to mount SUP stop valve spacer assembly with residual pressure release valve]

Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.

- \* Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- \* This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- \* If the product is equipped with a 3-position closed center, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

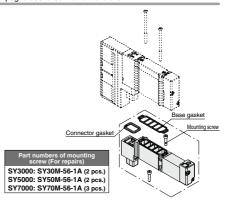

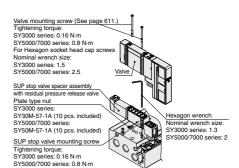

# Manifold Options **SY3000/5000/7000 Series**

#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**

\* Refer to pages 689 to 691 for dimensions.


#### ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

Series	Part no.
SY3000	SY30M-60-1A
SY5000	SY50M-60-1A
SY7000	SY70M-60-1A


	Intermediate stop	Drop prevention
Applicable valve	SY5401	SY5 100

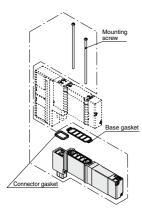

Part numbers of mounting screw (For repairs)
SY3000: SY3000-23-27A (2 pcs.)
SY5000: SY5000-221-4A (2 pcs.)
SY7000: SY7000-221-4A (3 pcs.)


#### <Example>

Double check spacer assembly with residual pressure release valve

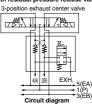

(Intermediate stop: When 3-position exhaust center valve is mounted)

# Double check spacer assembly with residual pressure release val-

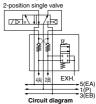

(Drop prevention: When 2-position single valve is mounted)

#### **⚠** Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- Combining with 3-position closed center or pressure center valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 696.

#### Specifications

Specifications					
Max. operating p	1.0 MPa				
Min. operating p	0.1 MPa				
Ambient and fluid ter	−10 to 50°C				
Flow rate	SY3000	0.3 dm3/(s-bar)			
characteristics: C	SY5000	0.7 dm3/(s-bar)			
characteristics: C	SY7000	1.1 dm3/(s-bar)			
Max. operating fr	equency	3 Hz			



#### Caution

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

#### Manifold Options


\* Refer to pages 689 to 691 for dimensions.

#### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure)

#### How to Order

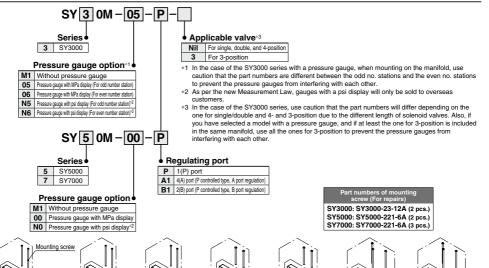

 Connector gasket


 SY30M-05/N5-□
 SY30M-06/N6-□
 SY30M-M1-□
 SY50M-00/N0-□
 SY50M-M1-□
 SY70M-00/N0-□
 SY70M-00/N0-□
 SY70M-M1-□

 (With pressure gauge)
 #### **Specifications**

ase gasket

Interface regul	Interface regulator model		SY50M-□-□	SY70M-□-□			
Applicable val	Applicable valve model*1		SY5□ <sub>3</sub> □(R)	SY7□3□(R)			
Regulating por	rt		1(P), 4(A), 2(B)				
Set pressure ra	ange	0.1 to 0.7 MPa					
Maximum oper	ating pressure	1.0 MPa					
Fluid		Air					
Ambient and flu	id temperatures	-	10 to 50°C (No freezing	g)			
Weight [g]*2	With pressure gauge	33 (35)*3	75	93			
weight [g]*2	Without pressure gauge	27 (29)*3	69	87			

- \*1 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- \*2 Gasket and mounting screws are included in the weight.
- \*3 (): Denotes the values of SY30M-\(\subseteq\)-\(\subseteq\)-3
- Always apply pressure from 1(P) port in the base for interface regulator.
- When using in combination with the SY ₹30 î□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

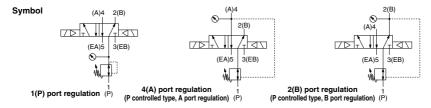

# Manifold Options SY3000/5000/7000 Series

#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### Manifold Options: Spacer Combinations and Screw List ①

0.11.11		① SY30	000 (M2)	② SY50	000 (M3)	③ SY70	00 (M3)
Combination		Round head combination screw		Round head combination screw		Round head combination screw	
(-Round head combination screw) (1): SY3000-23-24A A (2): SY5000-221-1A (3): SY7000-221-1A	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
Hexagon socket head cap sorein  1: SY3000-222-1A 2: SY5000-221-1A 3: SY7000-221-1A 1: SY30M-56-2A C: SY50M-56-2A	pressure release valve	SY30M-56-2A (2 pcs.)		SY50M-56-2A (2 pcs.)		SY70M-56-2A (3 pcs.)	
3: SY70M-56-2A	Individual SUP (EXH) spacer assembly		Γ				
	Valve						
2: SY5000-221-5A 3: SY7000-221-5A	Double check spacer assembly with residual pressure release valve	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	-
C-  -	Individual SUP (EXH) spacer assembly						
-Round head combination screwo  1: SY3000-23-32A	Valve						
2: SY5000-221-3A 3: SY7000-221-3A	Individual SUP (EXH) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	_	SY7000- 221-3A (3 pcs.)	_
C -	Individual EXH (SUP) spacer assembly						
(-Round head combination screw)  1: SY3000-23-24A	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A 4haapn socket head op screw- 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
0: SY30M-56-4A 0: SY30M-56-4A 0: SY50M-56-4A	Individual SUP (EXH) spacer assembly		<b>1-56-4A</b> ocs.)		I-56-4A ocs.)	<b>SY70M</b> (3 p	
—— (©. 3170M-36-4A	Individual EXH (SUP) spacer assembly						

Mounting onto a manifold follows the order explained above.
 The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.



#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

#### Manifold Options: Spacer Combinations and Screw List 2

		① eva	000 (M2)	② CVE	100 (M2)	② ev70	00 (M2)
Combination		Round head combination screw		2 SY5000 (M3)  Round head combination screw Hexagon scoket head cap screw		3 SY7000 (M3)  Round head combination screw Hexagon scoket head cap screw	
(Round head combinetion screw) (1): SY3000-23-24A (2): SY5000-221-1A (3): SY7000-221-1A	A Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
d-leagon societ head on sorreiv ①: SY3000-222-1A ②: SY5000-222-1A ③: SY7000-222-1A ①: SY30M-56-3A ②: SY50M-56-3A ③: SY70M-56-3A	B SUP stop valve spacer assembly with residual pressure release valve  Double check spacer assembly with residual pressure	SY30N (2 p	1-56-3A ocs.)		<b>1-56-3A</b> ocs.)		I-56-3A Ics.)
(-Round head combination screw- ①: SY3000-23-24A	release valve  A Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
3: SY7000-221-1A deleagon societ head on sorreiv  1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A (1): SY30M-56-5A (2): SY50M-56-5A (3): SY70M-56-5A	SUP stop valve spacer assembly with residual pressure release valve  Double check spacer assembly with residual pressure release valve	SY30N	<b>1-56-5A</b> Docs.)		<b>I-56-5A</b> ocs.)		I-56-5A ocs.)
	Individual EXH (SUP) spacer assembly						
Round head combination screw  : SY3000-23-32A	A Valve						
2: SY5000-221-7A 3: SY7000-221-7A	B Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
0	Individual SUP (EXH) spacer assembly						

Mounting onto a manifold follows the order explained above.
 The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.
 When laminating an interface regulator with other options, only the combinations in the table above are possible.

# Manifold Options **SY3000/5000/7000 Series**

#### **Dimensions: Manifold Options/SY3000 Series**


#### ■ Blanking plate assembly





<Type 50, 51, 52>


#### ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

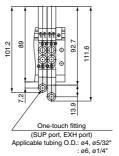




<Type 51, 52>

# ■ Double check spacer pressure release valve

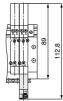




#### ■ Individual SUP/EXH spacer assembly (Side ported)

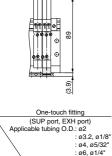

39 <Type 50>

Ľ

#### ■SUP stop valve spacer assembly with residual pressure release valve

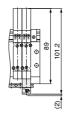



<Type 50, 51, 52>

The dimensions within () apply to the SY30M-50-1AE.




assembly with residual





#### ■Interface regulator

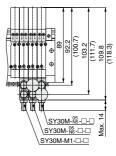




<Type 50, 51, 52>

\* The dimensions within ( ) apply to the SY30M-□-□-3.



#### **Dimensions: Manifold Options/SY5000 Series**


#### ■ Blanking plate assembly

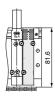




<Type 50, 51, 52>

# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

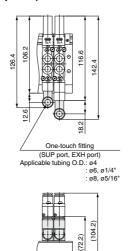

<Type 51, 52>


# ■ Double check spacer assembly with residual pressure release valve

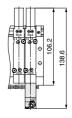




<Type 50, 51>


#### ■Individual SUP/EXH spacer assembly (Side ported)

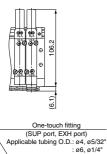

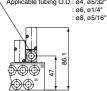

<Type 50>

#### ■SUP stop valve spacer assembly with residual pressure release valve

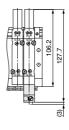




<Type 50, 51, 52>

 The dimensions within () apply to the SY50M-50-1AE.

#### ■Interface regulator

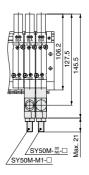




<Type 50, 51, 52>

# Manifold Options SY3000/5000/7000 Series

#### **Dimensions: Manifold Options/SY7000 Series**


#### ■ Blanking plate assembly

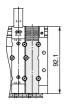




<Type 50, 51, 52>

#### ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

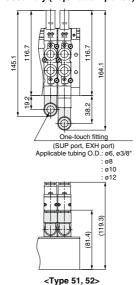


■ Double check spacer assembly with residual pressure release valve

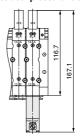





<Type 50, 51>

#### ■Individual SUP/EXH spacer assembly (Side ported)

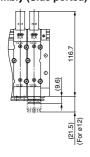

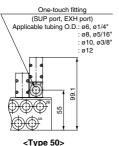

# ■ SUP stop valve spacer assembly with residual pressure release valve

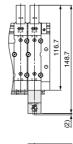





<Type 50, 51, 52>

\* The dimensions within ( ) apply to the SY70M-50-1AE.

#### ■Interface regulator

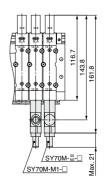

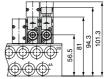

<Type 50, 51, 52>



# Plug-in Sub-plate Type [IP67 Compliant]



# Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported)

#### Plug-in Sub-plate Specifications

Manifold type	Plug-in sub-plate					
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side p	orted		
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom	ported		
riping direction	Ton newted	1(P), 5(EA)/3(EB) port	Side p	orted		
	Top ported	4(A)/2(B) port	Top p	orted		
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indiv	vidual]			
Applicable connector		M12 waterproof connector				
Internal wiring		Positive common, Negative common				
			SY3000	1/8		
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4		
Port size			SY7000	3/8		
			SY3000	1/8		
	Bottom ported	om ported 1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4		
			SY7000	3/8		
	Top ported		SY3000	1/8		
		1(P), 5(EA)/3(EB) port	SY5000	1/4		
			SY7000	3/8		
		4(A)/2(B) port	Compliant with the valve			
Enclosure (Based on IEC60529)		IP67				
		Side ported	9	19		
	SY3000	Bottom ported	109			
		Top ported	10	)4		
Weight: W [g]*2		Side ported	14	15		
	SY5000	Bottom ported	17	2		
		Top ported	15	i9		
		Side ported	20	)5		
	SY7000	Bottom ported	23	32		
		Top ported	22	27		

<sup>\*1</sup> Refer to page 404 for valve specifications.

Metal Seal

#### Plug-in Sub-plate Flow Rate Characteristics

Rubber Seal							
Series	Sub-plate	Fitting p	ort size	1 →	1 → 4/2		→ 5/3
Series	piping location	(P, E)	(A, B)	С	b	С	b
	Side ported	1/8	1/8	1.8	0.27	1.7	0.26
SY3000	Bottom ported	1/8	1/8	1.7	0.23	1.4	0.27
	Top ported	1/8	C6	1.3	0.34	1.5	0.27
	Side ported	1/4	1/4	4.2	0.21	4.0	0.26
SY5000	Bottom ported	1/4	1/4	4.0	0.19	4.0	0.23
	Top ported	1/4	C8	2.9	0.29	4.1	0.33
	Side ported	3/8	3/8	6.5	0.24	6.3	0.23
SY7000	Bottom ported	3/8	3/8	6.4	0.22	6.3	0.22
	Top ported	3/8	C12	5.4	0.30	6.0	0.27

<sup>\*</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

Series	Sub-plate	Fitting p	ort size	1 →	4/2	4/2 -	→ 5/3
Selles	piping location	(P, E)	(A, B)	С	b	С	b
	Side ported	1/8	1/8	1.4	0.14	1.3	0.26
SY3000	Bottom ported	1/8	1/8	1.3	0.13	1.3	0.22
	Top ported	1/8	C6	1.2	0.22	1.4	0.29
	Side ported	1/4	1/4	3.2	0.13	3.5	0.16
SY5000	Bottom ported	1/4	1/4	3.0	0.12	3.2	0.17
	Top ported	1/4	C8	2.6	0.23	3.2	0.19
	Side ported	3/8	3/8	4.6	0.10	4.9	0.16
SY7000	Bottom ported	3/8	3/8	4.6	0.10	4.9	0.17

C12

Top ported

0.18

0.16


<sup>\*2</sup> The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 406, and to include the cable weight, add the connector cable weight on page 696.

<sup>\*</sup> The value is for individually operated 2-position type.

# Single Unit/Sub-plate Type [IP67 Compliant] SY3000/5000/7000 Series

#### How to Order

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

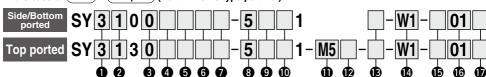

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	Onneitien	Single
2	2-position	Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
<b>A</b> *1		N.C./N.C.
		N.O./N.O.
C*1	duai 3-port	N.C./N.O.
		Pressure center N.C./N.C. N.O./N.O.

\*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

0	Rubber seal
1	Metal seal

#### A Pilot type

Nil	Internal pilot
R	External pilot

\* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure. Refer to the valve specifications on page 404 for further details.

Вас	k pressure check valve (Bullt-in valve type)
Nil	None
н	Ruilt-in

- Only the rubber seal type is available.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

#### Bilot valve ention

o i not vaive option					
Nil	Standard (0.7 MPa)				
В	Quick response type (0.7 MPa)				
K*1	High pressure type (1.0 MPa)				

\*1 Only the metal seal type is available for the high pressure type.

#### Coil type

	, po
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- \* Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- \* Be careful of the energizing time when the power saving circuit is selected. Refer to page 705 for details.

#### Rated voltage


5 24 VDC	
6 12 VDC	

#### 9 Light/surge voltage suppressor and common specification

Nil	non ation
	olar
U	
S — Positi	ive
Z omm	non
NS — Negat	tive
NZ ocmm	non

- For the non-polar type, be careful of surge voltage intrusion. Refer to page 706 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

#### Manual override

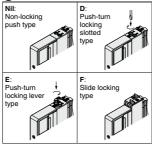

Refer to page 423 for the safety slide locking manual override.

#### A, B port size (\* Top-ported valve only) Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### Metric size (One-touch fitting)

A, B port ø2	SY3000	SY5000	SY7000
α2	_		
NO.	•	_	
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	T -	_	•
ø12	_	_	•
	ø4 ø6 ø8 ø10	ø4	ø4

#### Inch size (One-touch fitting)

IIICII	Size (Offe-tout	,,,,,,,,,,,,,,,	"	
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

#### A, B port thread type (Thread piping)

Nil	Rc
F	G
N	NPT
Т	NPTF

Only Nil is available for M5.

#### 13 Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- Refer to page 696 when the base gaskets and mounting screws are required for maintenance.
- When using an optional spacer assembly, "B" and "H" cannot be selected.

#### Wiring specifications (Sub-plate)

wo	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

When ordering a product with M12 connector cable, the connector cable is included.

#### Port location (Sub-plate)

i of t location (oub-plate)	
Nil	Side ported
В	Bottom ported
<b>V</b> *1	Top ported (1P, 5EA, 3EB port: Side ported

\*1 Only available for the valve piping type "3" top ported

#### Port size (Sub-plate)

Symb	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

#### Thread type (Sub-plate)

Tilleau type (Sub-plate)		
	Nil	Rc
	F	G
	N	NPT
	т	NPTF


- \* When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer, etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 696.
- When selecting a product with residual pressure release valve or vacuum release valve with restrictor, after selecting a model from page 413 or 415, make selections for items 15 to 18 above.



#### **How to Order**

#### In the case of (Sub-plate) (Sub-plate single unit part no.)

\* Without valve

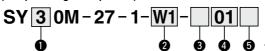



Series

3	SY3000
5	SY5000
7	SY7000

Port location (Sub-plate)
Nil Side ported

Nil	Side ported
В	Bottom ported
٧	Top ported [1(P), 5(EA), 3(EB) port: Side ported]

6 Sub-plate thread type

Sub-plate triread type			
Nil	Rc		
F	G		
N	NPT		
Т	NDTE		

Wiring specifications

wo	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

- \* Refer to the table below for connector cable part numbers.
- When ordering a product with M12 connector cable, the connector cable is included.

# 4 Port size

Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)

SY30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.)

\*SY3200-5U1-X90········ 1 set (2-position double part no./Main valve fluororubber specification)

#### Ordering example when mounting a manifold option (spacer, etc.)

\$Y30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.)


\*\$Y3400-5U1 ··········· 1 set (3-position exhaust center part no.)

\*SY30M-60-1A ··············· 1 set (Part no. for double check spacer with residual pressure release valve)

## **⚠** Caution

Due to the properties of the double check spacer, assembly carried out by the customer is not recommended. If a double check spacer is to be used, be sure to order the type that is built in to the sub-plate as shown in the ordering example above.

#### Sub-plate Parts Nos.

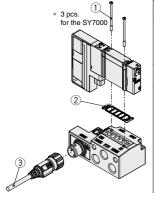

				Part no.		
No.	Des	cription	SY3000	SY5000	SY7000	Note
	Valve	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are for 10 valves
1	mounting screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	(20 pcs.). (30 pcs. for the SY7000)
2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
	M12 waterproof connector cable			ZS-37-L		Cable length: 300 mm Cable weight: Approx. 18 g
				ZS-37-M		Cable length: 500 mm Cable weight: Approx. 23 g
3				ZS-37-N		Cable length: 1000 mm Cable weight: Approx. 36 g
				ZS-37-P		Cable length: 2000 mm Cable weight: Approx. 62 g
				ZS-37-C		Cable length: 5000 mm Cable weight: Approx. 140 g




M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# gie unit/Sub-piate Type [IP67 Compliant] SY3000/5000/7000 Series

# Dimensions: SY3000 Series

#### Plug-in Single Unit/Sub-plate **Side Ported Top** Ported

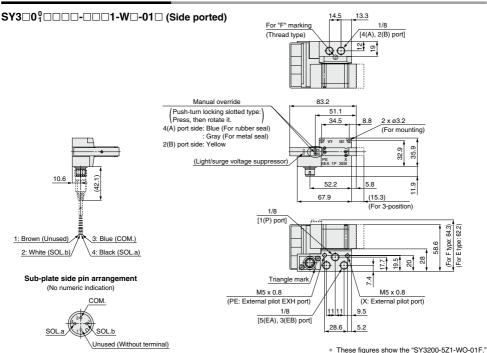

SY3 3 1 0 0 0 1 - 0 0 1 - 0 0 1 (Top ported) (Max. (Light/surge voltage suppressor) M5 x 0.8 (For threaded type) One-touch fitting [4(A), 2(B) port] [4(A), 2(B) port] Applicable tubing O.D.: ø2 : ø3.2, ø1/8" : ø4, ø5/32" : ø6, ø1/4" (72.8) (M5 threaded) 58.6


<sup>\*</sup> These figures show the "SY3230-5Z1-C6-WO-V01F."


<sup>\* 1(</sup>P), 5(EA), 3(EB), X, and PE ports are side ported.

Dimensions: SY3000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported

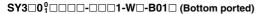


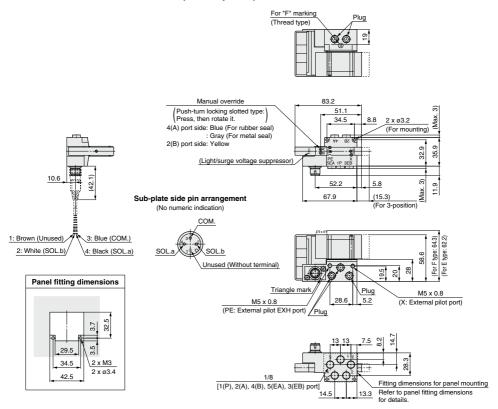


<sup>\*</sup> These figures show the "SY3200-5Z1-WO-B01F."

Dimensions: SY5000 Series

#### Plug-in Single Unit/Sub-plate **Side Ported Top Ported**

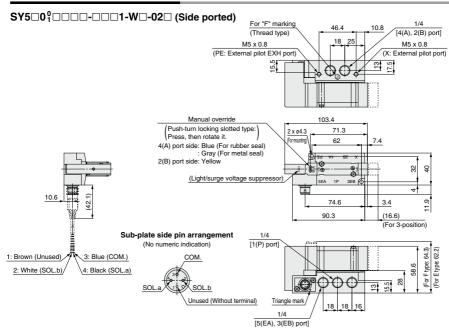

\* These figures show the "SY5200-5Z1-WO-02F."

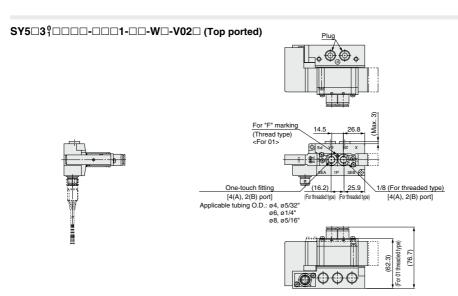


<sup>\*</sup> These figures show the "SY5230-5Z1-C8-WO-V02F."

<sup>\* 1(</sup>P), 5(EA), 3(EB), X, and PE ports are side ported.

Dimensions: SY5000 Series

Plug-in Single Unit/Sub-plate


**Bottom** Ported

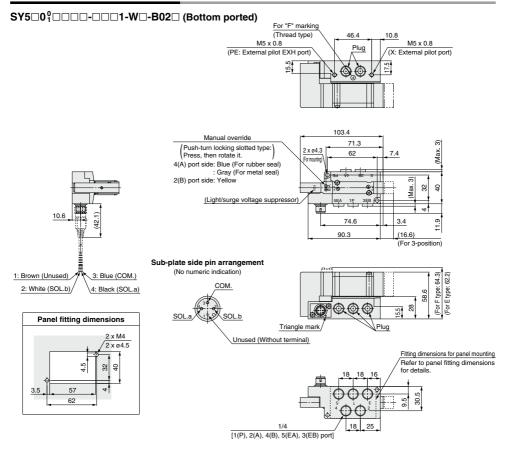


<sup>\*</sup> These figures show the "SY5200-5Z1-WO-B02F."

# Dimensions: SY7000 Series

#### Plug-in Single Unit/Sub-plate **Side Ported Top Ported**

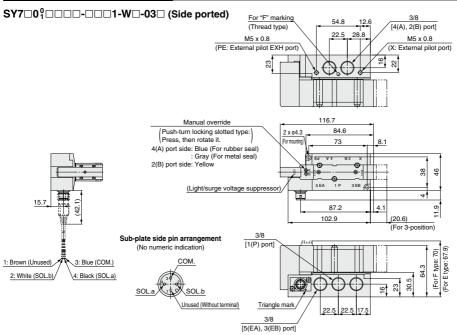

<sup>\*</sup> These figures show the "SY7200-5Z1-WO-03F."

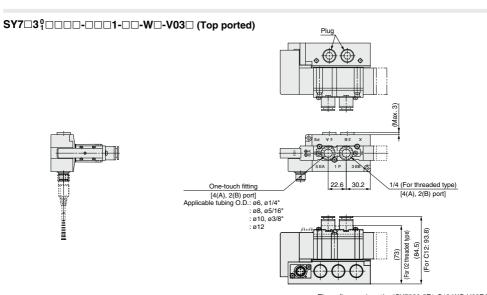


<sup>\*</sup> These figures show the "SY7230-5Z1-C10-WO-V03F."

<sup>\* 1(</sup>P), 5(EA), 3(EB), X, and PE ports are side ported.

Dimensions: SY7000 Series

Plug-in Single Unit/Sub-plate

**Bottom** Ported

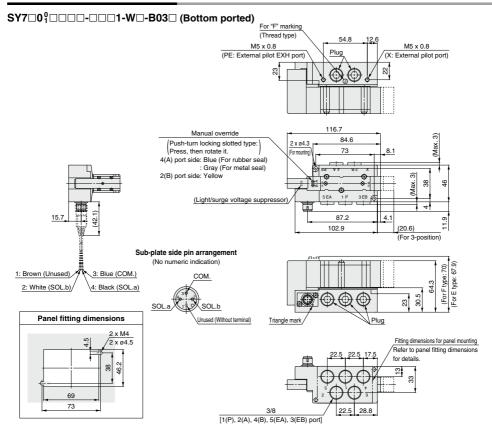

<sup>\*</sup> These figures show the "SY7200-5Z1-WO-B03F."



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Environment**

# **⚠** Warning

- 1. Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water water vapor, or where there is direct contact with any of these.
- 2. Products compliant with IP67 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- 4. The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

#### Valve Mounting

## 

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown to the right.

SY3000 M2 0.16 N·m SY5000/7000 M3 0.8 N·m	Series	Thread size	Tightening torque
SY5000/7000 M3 0.8 N·m	SY3000	M2	0.16 N·m
	SY5000/7000	M3	0.8 N·m

#### Manual Override

# **⚠** Warning

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

#### ■ Non-locking push type


Push down on the manual override button until it stops



#### ■ Push-turn locking slotted type [D type]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking push type.

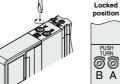





#### Manual Override

# 

#### ■ Push-turn locking lever type [E type]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking push type.

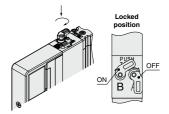

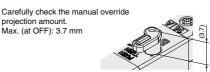


# **∕** Caution

Do not apply excessive torque when turning the manual override. [0.1 N·m]

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

#### ■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

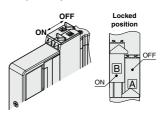



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Back Pressure Check Valve**

# **⚠** Caution

•There are two types of back pressure check valves; the type which is built into a valve (rubber seal type only) and the type which is built in on the manifold side with a connector connection. Both types have a check valve built in to prevent back pressure.

Please note that for this reason, even if a valve with an external pilot specification is used, it cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.

- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- •Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

#### **Exhaust Throttle**

## 

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

#### Used as a 3-Port Valve

#### 

#### ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plu	g position	B port	A port
Type of actuation		N.C.	N.O.
Number of solenoids	Single	(A)4 2(B) (EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB)
Number of	Double	(A)4 2(B)  (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)

#### **Valve and Manifold Combination**

The SY series plug-in valve has the common configuration of the valve mounting surface between base-mounted type  $(SY^3_{\mathbb{P}}\square \square)$  and top-ported type  $(SY^3_{\mathbb{P}}\square \square)$ , therefore, it can be mounted to all manifolds of the side-ported type (Type 50 and Type 10), the bottom-ported type (Type 51 and Type 11), and the top-ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top-ported valve to a side-ported or bottom-ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base-mounted valve is mounted to a top-ported manifold, there will be no output from the A and B port.



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### Light/Surge Voltage Suppressor


# **⚠** Caution

#### ■ Polar type


#### Positive common

#### Single solenoid

Light/surge voltage suppressor (□Z) Polarity protection diode

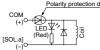


Surge voltage suppressor (□S)

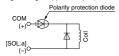

#### Positive common

#### Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□Z) [SOL.b] COM (SOL.a

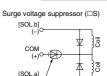

#### ISOL a Polarity protection diode

Polarity protection diode

#### With surge voltage suppressor (□R) Single solenoid



■ Non-polar type

#### Double solenoid

Negative common

COM

Single solenoid

LED [SOL.a] (Red)

**Negative common** 

[SOL.b] LED

COM

(SOL.a

CON

Double solenoid.

3-position, 4-position

Light/surge voltage suppressor (□NZ)

Surge voltage suppressor (□NS)

Polarity protection dio

Polarity protection diode

Light/surge voltage suppressor (□NZ)

Surge voltage suppressor (□NS)

Polarity protection diode

Polarity protection diode

30

S



#### With light/surge voltage suppressor (□U)

#### Single solenoid






#### ■ With power saving circuit


Power consumption is decreased to approx. 1/3 compared with the standard product by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

\* Be careful of the energizing time, as quick response and high pressure types will become operational when the energizing time is over 40 ms.

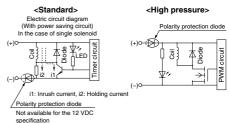

The circuit shown above reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

#### <Electrical power waveform with power saving circuit>

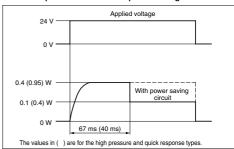

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- · Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

#### Residual voltage of the surge voltage suppressor

If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 405.

#### Residual Voltage

Surge voltage	DC		
suppressor	24 V	12 V	
S, Z	Appro	x. 1 V	
R, U	Approx. 47 V	Approx. 32 V	



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Continuous Duty**

## **⚠** Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater. In such cases, if it is possible to select a valve with a power-saving circuit, be sure to do so.

#### **UL Approved Product**

## **∧** Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a call mark on the body.

#### Countermeasure for Surge Voltage Intrusion

#### ■ Surge voltage intrusion

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and a valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

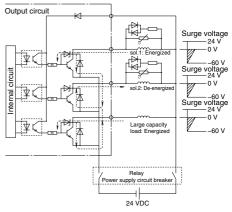


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

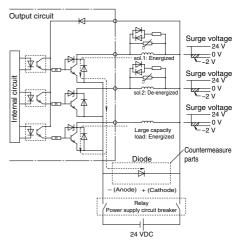


Figure 2. Surge intrusion countermeasure example (NPN outlet example) (24 VDC)






Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Light Indication**

When equipped with indicator light and surge voltage suppressor, the light window turns red when solenoid a is energized, and it turns green when solenoid b is energized.

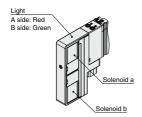


Type 5□ (Metal Base) ,Type 1□ (Connector Connecting Base) Changing Connector Entry Direction


#### **⚠** Caution

Connector direction for electrical entry of D-sub connector <|P40> and flat ribbon cable can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire, etc., to break. Thus, refrain from using in these ways.

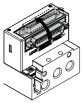

Type 5□ (Metal base)

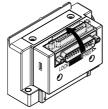

Type 1□ (Connector connecting base)


**SMC** 

#### **Manifold Indication Symbol**

## **∧** Caution

The letter "S" is indicated on manifold blocks for the SY series Type 1□ (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-, or 4-position valves cannot be used for manifolds blocks with single wiring specification [S].)

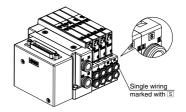



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Substrate Assemblies inside Manifolds

#### 

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

#### Fixation of DIN Rail Mounting Type Manifolds

#### **.** Caution

- 1. When the manifold is fixed with bolts on a mounting surface, etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations, and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.


Port Block Assembly and How to Change Piping Types between Top and Side

## **↑** Caution


For the top-ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top-ported type port block assembly with the side-ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque.

Refer to pages 411 and 412 for part numbers of port block assembly and body cover assembly for A, B port and page 614 for part numbers of port block assembly and body cover assembly for P, E port.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

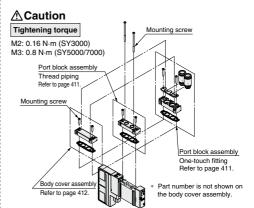

#### ■ How to change while mounted on a manifold

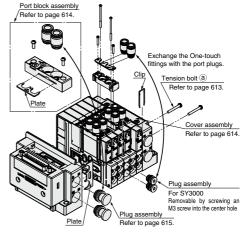



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com


#### How to Replace One-touch Fittings

## ∕**.**∖ Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 615 for part numbers of One-touch fittings for valve or manifold.

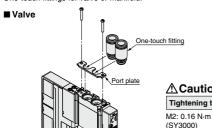


Tightening torque

> (SY3000) M3: 0.8 N·m (SY5000/7000)

■ Plug-in metal base

•Side ported (Type 50)



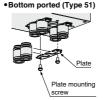

#### Clip part nos. (10 pcs. included)

	Series	Part no.
	SY3000	SY30M-19-2A
	SY5000	SY50M-19-2A
	SY7000	SY70M-19-2A

#### ■ Plug-in connector connecting base Side ported (Type 10)

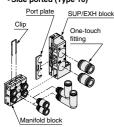


Plate assembly part nos. (10 pcs. included)

Series	Part no.
SY3000	SY30M-10-3A
SY5000	SY50M-10-6A
SY7000	SY70M-10-7A

Including mounting screw

#### Clip part nos. (10 pcs. included)

Series	A, B port size	Part no.
SY3000	_	SY30M-19-1A
SY5000	_	SY50M-19-6A
SY7000	_	SV3000-70-1A
SY3000/5000	02, 03, 04	
Mixed mounting type	ø6, ø1/8"	SY50M-19-1A
(For mounting	ø5/32", ø1/4"	
the SY3000)*1	ø8, ø5/16'	SY50M-19-6A


- \*1 The part number for mounting the SY5000 is SY50M-19-6A.
- The part number for the SY5000/7000 mixed mounting type is SV3000-70-1A.
- If the port plate for the SUP/EXH block is required, please contact SMC.

#### How to Replace One-touch Fittings

#### **∕** Caution

#### Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

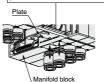

#### Plate part nos. (10 pcs. included)

Series	A, B port size	Part no.
SY5000	_	SY50M-10-4A
SY7000	_	SY70M-10-4A
SY3000/5000	02, 03, 04	
Mixed mounting type	ø6, ø1/8"	SY50M-10-5A
(For mounting	ø5/32", ø1/4"	
the SY3000)*1	ø8, ø5/16"	SY50M-10-4A

- The part number for mounting the SY5000 is SY50M-10-4A
- The part number for the SY5000/7000 mixed mounting type is SY70M-10-4A.

#### Other Tube Brands

#### **⚠** Caution

- 1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.
  - 1) Nylon tube within ±0.1 mm 2) Soft nylon tube within ±0.1 mm 3) Polyurethane tube within +0.15 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

-0.2 mm

#### **One-touch Fittings**

## ■ Tube attachment/detachment for One-touch fittings

#### 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, or 3. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

#### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tuhe





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **One-touch Fittings**

# **<b>⚠** Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

#### Applicable Fittings: KQ2H, KQ2S Series

Series	Model	Dining port	Piping port Port size	Port Fittings		Applicable tubing O.D.						
Series	iviodei	Piping port		ize Fittings	ø2	ø <b>3.2</b>	ø4	ø6	ø8	ø10	ø12	
	OVO-00 ME	44.00		KQ2H								
	SY3□30-□□-M5	4A, 2B	M5	KQ2S								
		4D 5EA 0ED	1/8	KQ2H								
		1P, 5EA, 3EB	IP, SEA, SEB 1/0	KQ2S								
CVCCCC		V DE M	ME	KQ2H								
SY3000	SS5Y3-50/51/52 (R)	X, PE	M5	KQ2S								
	Manifold base		1/0	KQ2H								
		44.00	1/8	KQ2S								
		4A, 2B		KQ2H								
			M5	M5	KQ2S							

Series	Model	Dining port	Piping port Port Fittings		Applicable tubing O.D.								
Series	iviodei	Piping port	size	rillings	ø <b>2</b>	ø <b>3.2</b>	ø4	ø <b>6</b>	ø <b>8</b>	ø <b>10</b>	ø <b>12</b>		
	SY5□30-□□-01	44 OB	4A. 2B   1/8  -	KQ2H									
	515030-00-01	4A, 2D 1/6		KQ2S									
		4D 5EA 0ED	1P. 5EA. 3EB   1/4  —	KQ2H									
		1P, 5EA, 3EB		KQ2S									
CVECCO		X, PE M5	E   ME	KQ2H									
SY5000	SS5Y5-50/51/52 (R)		KQ2S										
	Manifold base ` ´		4/4	KQ2H									
		44.00	1/4	KQ2S									
		4A, 2B	1/0	KQ2H									
			1/8	1/8	1/8	KQ2S							

Series	Model	Dining port	Piping port Port Fittings		Applicable tubing O.D.						
Selles	iviodei	Piping port	size	Fittings	ø <b>2</b>	ø <b>3.2</b>	ø4	ø6	ø <b>8</b>	ø <b>10</b>	ø12
	072-00 00	44.00	4A, 2B 1/4 1								
	SY7□30-□□-02	4A, 2B									
		4D 5EA 0ED	1P, 5EA, 3EB 3/8	KQ2H							
SY7000		IP, SEA, SEB		KQ2S							
517000	SS5Y7-50/51/52 (R)	V DE	X. PE   M5	KQ2H							
	Manifold base	А, РЕ		KQ2S				$\vdash$			
		4A, 2B	1/4	KQ2H							
		4A, 2D	1/4	KQ2S							

#### ■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.

EtherNet/IP® is a registered trademark of ODVA, Inc.

CompoNet® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



# Modular Connection Type 5-Port Solenoid Valve

# SY3000/5000-X990

Plug-in Type








# Can be connected to F.R.L. units


# Flow rate characteristics


C [dm³/(s·bar)] SY3000: 1.6\*1 SY5000: 3.6\*1

\*1 4/2 ⇒ 3/5 (A/B ⇒ E)

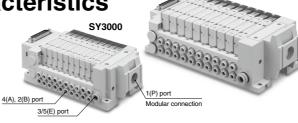

# Allows for space saving and reduced piping labor.

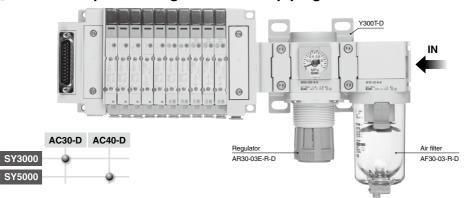

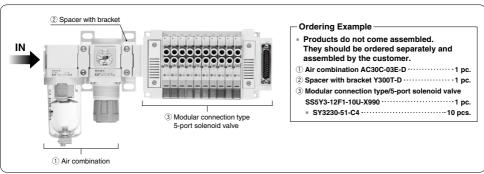

# Modular Connection Type SY3000/5000-X990 Manifold Specifications/Weight

#### **Manifold Specifications**

		D-s	sub	Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box	Loud	Circular connector		Serial	wiring		
	Model		Type F	Type FW	Type P	Type PG	Type PH	Type TC	Type T	Type L	Type M	Type S6□ (EX600)	Type S4□	Type SA3 (EX500) Type SD (EX250) (EX260)	Type S3□ (EX120)
Valve stati	Valve stations			2 to 10	stations		2 to 8 stations				2 to	10 station	ıs		
Dout size	Port size 1(P) port SY3000 SY5000								Modular	size: 30					
POR SIZE				Modular size: 40											
Mounted v	alve			Mounted valve Only the rubber seal type is available.				ubber sea	al type is	e.					

#### **Manifold Weight**

#### Valve Seal Type: Rubber Seal

Side Ported (Type 10)

Manifold model	Valve model	Weight: W [g]*1 (n: stations)		
	SY3100/SY3200			
	SY3300			
	SY3400			
SS5Y3	SY3500	28.9n + 433		
	SY3A00			
	SY3B00			
	SY3C00			
	SY5100/SY5200			
	SY5300			
	SY5400			
SS5Y5	SY5500	74.7n + 698		
	SY5A00			
	SY5B00			
	SY5C00			

#### Valve Seal Type: Rubber Seal

Top Ported (Type 12)

Manifold model	Valve model	Weight: W [g]*1 (n: stations)
SS5Y3	SY3130/SY3230	25.1n + 465
SS5Y5	SY5130/SY5230	66.3n + 717

<sup>\*1</sup> Weight: W is the value of the internal pilot and D-sub connector manifold with One-touch fitting straight piping type.


 The other specifications are the same as those of the standard model.
 For details, refer to the Web Catalog



To obtain the weight with valves attached, add the valve weights given in the **Web Catalog** for the appropriate number of stations.

# How to Order Manifolds



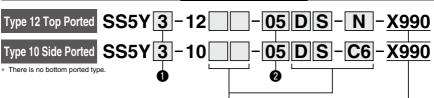

# More information

can be viewed here

#### Enter the standard product number.

- \* The A and B ports are only compatible with straight unions.
- \* DIN rail mounting is not supported.

connection type SY3000 is modular size 30. SY5000 is modular size 40.

P-port modular

<b>0</b> s	eries	Modular size
3	SY3000	30
5	SY5000	40



Symbol Stations

02 2 stations

10 10 stations 02 2 stations

10 10 stations



Note

Double wiring\*1

Specified layout\*2 (Up to 20 solenoids available)



Symbol	Stations	Note
02	2 stations	
:	- :	Double wiring*1
10	10 stations	
02	2 stations	Specified layout*2
:	- :	(Up to 20 solenoids
10	10 stations	available)



PG: Flat ribbon cable (20 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
09	9 stations	
02	2 stations	Specified layout*2
:	:	(Up to 18 solenoids
10	10 stations	available)



PH: Flat ribbon cable (10 pins)

Symbol	Stations	Note
02	2 stations	
		Double wiring*1
04	4 stations	
02	2 stations	Specified layout*2
:	- :	(Up to 8 solenoids
08	8 stations	available)





ns Note
ns
Double wiring*1
ins
ns Specified layout*2
(Up to 20 solenoids
ns available)



M: Circular connector

0	04-4:	NI-4-	
Symbol	Stations	Note	
02	2 stations		
:	- :	Double wiring*1	
8	8 stations	]	
02	2 stations		
:		(Up to 16 solenoids	
10	10 stations	available)	



#### L1: Lead wire (34 cores)

Symbol	Stations	Note				
02	2 stations					
:	- :	Double wiring*1				
10	10 stations					
02	2 stations	Specified layout*2				
:	- :	(Up to 20 solenoids				
10	10 stations	available)				

L2: Lead wire (17 cores)

Symbol	Stations	Note				
02	2 stations	Double wiring*1				
:	- :					
08	8 stations					
02	2 stations	Specified layout*2				
:	- :	(Up to 16 solenoids				
10	10 stations	available)				

L3: Lead wire (9 cores)

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring*1			
04	4 stations				
02	2 stations	Specified layout*2			
:	:	(Up to 8 solenoids			
08	8 stations	available)			

- \*1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* The blanking plate assembly is included in this number.




#### How to Order Manifolds



#### EX500 128 Points: S

#### EX600: S6□□□

#### 2 Valve stations

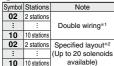

- \$1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* The blanking plate assembly is included in this number.
- \* When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet. (Excludes the EX600)

#### EX250: S□□□

#### 2 Valve stations



- \*1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
- Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

  \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
- (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
  - · 8 in/8 out specification: Max. 8 solenoids
  - 4 in/4 out specification: Max. 4 solenoids
- \* The blanking plate assembly is included in this number.
- \* For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### EX260: S□

#### 2 Valve stations

#### In the case of the 32-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	- :	Double wiring*1				
10	10 stations					
02	2 stations	Specified layout*2				
:	- :	(Up to 20 solenoids				
10	10 stations	available)				

#### In the case of the 16-output SI unit

III tile	in the case of the 10-output of unit						
Symbol	Stations	Note					
02	2 stations						
:	- 1	Double wiring*1					
08	8 stations	_					
02	2 stations	Specified layout*2					
:		(Up to 16 solenoids					
10	10 stations	available)					

- \*1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.

  Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.
- (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* The blanking plate assembly is included in this number.
- \* For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### EX126: S4□

#### EX120: S3□

#### Valve stations

Symbol	Stations	Note				
02	2 stations					
- ::		Double wiring*1				
08	8 stations					
02	2 stations	Specified layout*2				
:	:	(Up to 16 solenoids				
10	10 stations	available)				

- \*1 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations.
- Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- \* The blanking plate assembly is included in this number.
- \* Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated. (For the EX120)



#### How to Order Equipped Valves (With mounting screw)

# **Base Mounted**

\* There are no metal seal types.

Base mounted SY 3 1 0 0 0 Base mounted Seal type: Rubber seal Enter the standard



More information can be viewed here.


<b>O</b> s	eries
3	SY3000
5	SY5000

<b>2</b> T	2 Type of actuation					
1	2-position	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
Α		N.C./N.C.				
В	4-position dual 3-port	N.O./N.O.				
С		N.C./N.O.				

-	6 Pilot valve option					
	Nil Standard (0.7 MPa)					
	В	Quick response type (0.7 MPa)				

product number.

#### **Top Ported**

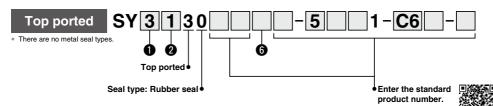

can be viewed here.

0 9	Series	
3	SY3000	
5	SY5000	

2 Type of actuation						
1	Onesition	Single				
2	2-position	Double				
3		Closed center				
4	3-position	Exhaust center				
5		Pressure center				
Α		N.C./N.C.				
В	4-position dual 3-port	N.O./N.O.				
С		N.C./N.O.				


6 Pilot valve option Standard (0.7 MPa) Quick response type (0.7 MPa)




# SY3000/5000-X990

# Dimensions: SY3000 Series



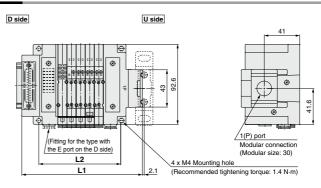

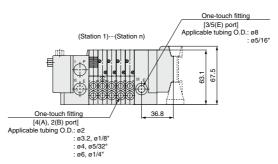

- \* These figures show the "SS5Y3-10F2-05U-C6-X990."
- \* The other dimensions, as well as those of the top ported type, are the same as those of the standard model. For details, refer to the Web Catalog.

D-sub, Flat Ribbon (Type F)				Refer to the ta	able below for th	e L1 and L2 din	nensions of the	D-sub and flat r	ibbon (Type F).
L: Dimensions									
n: Stations	2	3	4	5	6	7	8	9	10
L1	107.6	118.1	128.6	139.1	149.6	160.1	170.6	181.1	191.6
1.2	63	73.5	84	94.5	105	115.5	126	136.5	147

IP67 D-sub (Type FW)  Refer to the table below for the L1 and L2 dimensions of the IP67 D-sub (Type											
L: Dimensi	ons										
n: Stations	2	3	4	5	6	7	8	9	10		
L1	124.5	135	145.5	156	166.5	177	187.5	198	208.5		
12	63	73.5	84	94.5	105	115.5	126	136.5	147		

# Modular Connection Type SY3000/5000-X990

Dimensions: SY3000 Series

63

73.5

Terminal	Block Bo	x (Type T)		e table below for	r the L1 and L2	dimensions of t	ne terminal bloc	k box (Type T).		
L: Dimensions										
n: Stations	2	3	4	5	6	7	8	9	10	
L1	183.3	193.8	204.3	214.8	225.3	235.8	246.3	256.8	267.3	
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	

Terminal E	Block Box/S	Spring Type	(Type TC)	Refer to the tal	ole below for the L	.1 and L2 dimensi	ons of the termina	al block box/spring	type (Type TC).
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	162	172.5	183	193.5	204	214.5	225	235.5	246

105

115.5

126

136.5

147

94.5

84

Lead Wir	e (L), Circ	ular Conn	ector (M)	Refer to the ta	ble below for the	e L1 and L2 dim	ensions of the le	ad wire and circ	ular connector.
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	131	141.5	152	162.5	173	183.5	194	204.5	215
L2	63	73.5	84	94.5	105	115.5	126	136.5	147

EASOU (Type SA3)  Heler to the table below for the L1 and L2 differsions or the EASOU (Type SA3)												
L: Dimensi	ons											
n: Stations	2	3	4	5	6	7	8	9	10			
L1	122.7	133.2	143.7	154.2	164.7	175.2	185.7	196.2	206.7			
L2	63	73.5	84	94.5	105	115.5	126	136.5	147			

EVE	10 /	MIO	Con		•
	w	IVI I Z	COI	mec	I (OI

Calculate the L1 dimension of the EX600 (M12 connector) using the formula shown below.

L1 = 10.5 x n1 + 154.5 + 47 x n2 n1: Valve stations

n2: I/O unit stations

L2

#### EX600 (7/8 Inch Connector)

Calculate the L1 dimension of the EX600 (7/8 inch connector) using the formula shown below.

L1 = 10.5 x n1 + 171 + 47 x n2 n1: Valve stations n2: I/O unit stations

**SMC** 

# SY3000/5000-X990

Dimensions: **SY3000** Series

#### EX250

Calculate the L1 dimension of the EX250 using the formula shown below.


L1 = 10.5 x n1 + 154.5 + 21 x n2 n1: Valve stations n2: I/O unit stations


EX260	EX260 Refer to the table below for the L1 and L2 dimensions of the EX26													
L: Dimensions														
n: Stations	2	3	4	5	6	7	8	9	10					
L1	122.7	133.2	143.7	154.2	164.7	175.2	185.7	196.2	206.7					


EX126					Refer	to the table belo	w for the L1 and	d L2 dimensions	s of the EX126.
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	183.3	193.8	204.3	214.8	225.3	235.8	246.8	256.8	267.3
12	63	73.5	84	94.5	105	115.5	126	136.5	1/17

EX120		Refer to the table below for the L1 and L2 dimensions of the EX120												
L: Dimensio	ns													
n: Stations	2	3	4	5	6	7	8	9	10					
L1	115.9	126.4	136.9	147.4	157.9	168.4	178.9	189.4	199.9					
12	63	73.5	8/1	94.5	105	115.5	126	136.5	1/17					

# Dimensions: SY5000 Series

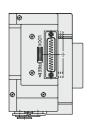

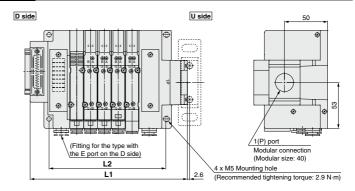

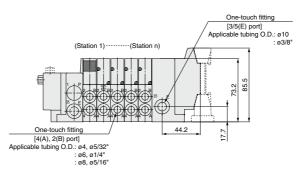

- \* These figures show the "SS5Y5-10F2-05U-C8-X990."
- \* The other dimensions are the same as those of the
- standard model. For details, refer to the Web Catalog.

D-sub, Flat Ribbon (Type F) Refer to the table below for the L1 and L2 dimensions of the D-sub and flat ribbon (Type F)									
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	133.9	149.9	165.9	181.9	197.9	213.9	229.9	245.9	261.9
L2	87	103	119	135	151	167	183	199	215

IP67 D-su	ıb (Type F	W)		Refer	to the table belo	w for the L1 and	d L2 dimensions	s of the IP67 D-s	sub (Type FW).
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	148	164	180	196	212	228	244	260	276
12	07	102	110	105	151	167	100	100	215

**SMC** 

# SY3000/5000-X990

Dimensions: SY5000 Series

Terminal Block Box (Type T) Refer to the table below for the L1 and L2 dimensions of the terminal block box (											
L: Dimensions											
n: Stations	2	3	4	5	6	7	8	9	10		
L1	206.8	222.8	238.8	254.8	270.8	286.8	302.8	318.8	334.8		
L2	87	103	119	135	151	167	183	199	215		

Terminal E	Block Box/S	Spring Type	(Type TC)	Refer to the tal	ole below for the L	1 and L2 dimensi	ons of the termina	al block box/spring	type (Type TC).
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	185.5	201.5	217.5	233.5	249.5	265.5	281.5	297.5	313.5
12	07	102	110	105	151	167	100	100	215

Lead Wir	( //	ular Conn	ector (M)	Refer to the ta	able below for the	e L1 and L2 dim	ensions of the le	ad wire and circ	ular connector.
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5
L2	87	103	119	135	151	167	183	199	215

EX500 (T	ype SA3)	Refer to the table below for the L1 and L2 dimensions of the EX500 (Type SA3).								
L: Dimensi	ons									
n: Stations	2	3	4	4 5 6 7 8 9 10						
L1	146.2	162.2	178.2	194.2	210.2	226.2	242.2	258.2	274.2	
L2	87	103	119	135	151	167	183	199	215	

				nr		

Calculate the L1 and L2 dimensions for the EX600 (M12 connector) using the formula shown below.

L1 = 16 x n1 + 167 + 47 x n2 L2 = 16 x n1 + 55

n1: Valve stations n2: I/O unit stations

# Modular Connection Type SY3000/5000-X990

# Dimensions: SY5000 Series

#### EX600 (7/8 Inch Connector)

Calculate the L1 and L2 dimensions for the EX600 (7/8 inch connector) using the formula shown below

L1 = 16 x n1 + 183.5 + 47 x n2

L2 = 16 x n1 + 55 n1: Valve stations

n2: I/O unit stations

#### EX250

FX126

Calculate the L1 and L2 dimensions for the EX250 using the formula shown below.

L1 = 16 x n1 + 167 + 21 x n2

 $L2 = 16 \times n1 + 55$ 

n1: Valve stations

n2: I/O unit stations

EX260					Hefer	to the table belo	w for the L1 and	d L2 dimensions	of the EX260.
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	146.2	162.2	178.2	194.2	210.2	226.2	242.2	258.2	274.2
1.0	0.7	100	110	105	151	167	100	100	015

L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	206.8	222.8	238.8	254.8	270.8	286.8	302.8	318.8	334.8
1.0	0.7	400	440	405	454	407	400	400	045


EX120		Refer to the table below for the L1 and L2 dimensions of the EX							
L: Dimensi	ons								
n: Stations	2	3	4	5	6	7	8	9	10
L1	142.2	158.2	174.2	190.2	206.2	222.2	238.2	254.2	270.2
12	87	103	119	135	151	167	183	199	215



# Modular Connection Type SY3000/5000-X990

#### Manifold Parts Nos.

## SUP/EXH end block assembly

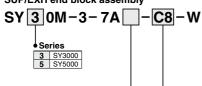

Pilot, Silencer/Piping type


Symbol	Pilot	type	Built-in	Piping direction
	Internal	External	silencer	direction
Nil	•	_	_	
S*1	•	_	•	Side
R	_	•	_	
V	•	_	_	Top
RV	_	•	_	тор

\*1 When "S" is selected for the pilot, silencer/piping type, only "00" (Plug) can be selected for the E port size.

E port size (One-touch fittings)

					( trie trainings,
Symbol		E port	SY3000	SY5000	Note
C8		ø8	•	_	Side/Top ported
C10		ø10	_	•	Metric size
N9	ø5/16"		•	_	Side/Top ported
N11		ø3/8"	_	•	Inch size
L8	W	ø8	•	_	Side ported
L10	음	ø10	_	•	Metric size
LN9	Jpward	ø5/16"	•	_	Side ported
LN11		ø3/8"	_	•	Inch size
B8	elbow	ø8	•	_	Side ported
B10	명	ø10	_	•	Metric size
BN9	Downward	ø5/16"	•	_	Side ported
BN11	Š	ø3/8"	_	•	Inch size
00*1		Plug	•	•	E port entry on one side or Top ported

\*1 It can be selected only if no symbol or "S" is selected for the pilot and the piping.

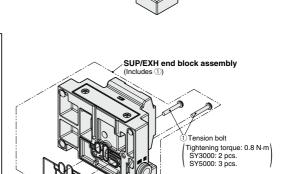

SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000	Note
①Tension bolt	AC00530 (2 pcs.)	SX3000-145-21 (3 pcs.)	Supplied individually
2 Manifold block gasket	SY30M-9-2	SY50M-9-2	Supplied individually

2 Manifold block gasket


Gasket is mounted



# SY3000/5000-X990

# Accessories Sold Separately (Spacer with Bracket)

#### Spacer with Bracket

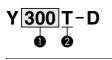

For the spacer with bracket holding screw tightening torque, refer to the AC-D series catalog.

#### Spacer with bracket (Y□T-D)



$\setminus$					
		Symbol	Description	Body size [App	licable AC size]
		oyoo		<b>300</b> [SY3000 + AC30]	<b>400</b> [SY5000 + AC40]
0	Bracket	т	Spacer with bracket	•	•

#### **Standard Specifications**


Fluid	Air
Ambient and fluid temperatures	-5 to 60°C (No freezing)
Proof pressure	1.5 MPa
Max. operating pressure	1.0 MPa

#### Replacement Parts

Description	Material	Part number		
		Y300T-D	Y400T-D	
Seal	HNBR	Y320P-050S	Y420P-050S	

#### **Dimensions**

Spacer with bracket

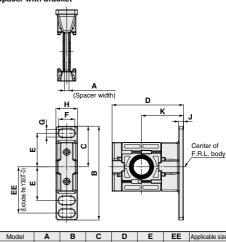

Model	Α	В	С	D	Е	EE	Applicable size
Y300T-D	4.2	85	42.5	67.5	35		AC30-D
Y400T-D	5.2	115	50	85.5	40	55	AC40-D
Model	F	G	Н	J	K	Applicable size	
Y300T-D	14	7	20	6	41	AC30	-D

# 

Be sure to read this before handling the products. Refer to page 7 for safety instructions, pages 8 to 14 for 3/4/5-port solenoid valve precautions, pages 703 to 710 for SY3000/5000 specific product precautions, and the **Web Catalog** for F.R.L. units precautions.

#### Mounting

# **.** Marning

- When connecting other products such as F.R.L. units, use a spacer with a bracket (Y300T/Y400T-D series) to connect the manifold connection part so that no moment is applied.
- Be sure to secure the spacer with a bracket used for connection.
- Avoid excessive torsional moment and bending moment other than those caused by the manifold's own weight, as failure to do so may result in damage.
- Support external piping separately.
- Piping materials without flexibility, such as steel tube piping, are prone to being affected by excess moment loads and vibrations from the piping side. Use flexible tubing in between to avoid such effects.

# Model Index (Alphanumeric Order)

SS5Y□-10	SY Type 10/Side Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 430
SS5Y□-10L	SY Type 10/Side Ported Plug-in Connector Connecting Base: Lead Wire	p. 466
SS5Y□-10M	SY Type 10/Side Ported Plug-in Connector Connecting Base: Circular Connector	p. 476
SS5Y□-10S	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Points)	p. 486
SS5Y□-10S	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points)	p. 492
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX245	p. 514
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX250	p. 522
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX260	p. 530
SS5Y□-10S□	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX260 Safety Communication Protocol (PROFIsafe)	p. 534
SS5Y□-10S3	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX120	p. 550
SS5Y□-10S4	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX126	p. 542
SS5Y□-10S6	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX600	p. 502
SS5Y -10S8	SY Type 10/Side Ported Plug-in Connector Connecting Base: EX180	p. 558
SS5Y -10T	SY Type 10/Side Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 456
SS5Y -10TC	SY Type 10/Side Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)	p. 448
SS5Y□-11	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 430
SS5Y -11L	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Lead Wire	p. 466
SS5Y□-11M	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Circular Connector	p. 476
SS5Y -11S	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Points)	•
SS5Y□-11S SS5Y□-11S□	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points)	p. 492 p. 514
SS5Y -115 -	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX245  SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX250	p. 514 p. 522
SS5Y -115	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX260	p. 530
SS5Y -11S	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX260 Safety Communication Protocol (PROFIsafe)	
SS5Y -11S3	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX120	p. 550
SS5Y□-11S4	SY Type 11/Bottom Ported Plug-in Connecting Base: EX126	p. 542
SS5Y□-11S6	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX600	p. 502
SS5Y□-11S8	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: EX180	p. 558
SS5Y□-11T	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 456
SS5Y□-11TC	SY Type 11/Bottom Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)	p. 448
SS5Y□-12	SY Type 12/Top Ported Plug-in Connector Connecting Base: D-sub Connector, Flat Ribbon Cable	p. 442
SS5Y□-12L	SY Type 12/Top Ported Plug-in Connector Connecting Base: Lead Wire	p. 472
SS5Y□-12M	SY Type 12/Top Ported Plug-in Connector Connecting Base: Circular Connector	p. 482
SS5Y□-12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System 2 (128 Points)	p. 498
SS5Y□-12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX500 Gateway Decentralized System (64 Points)	•
SS5Y□-12S□	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX245	p. 520
SS5Y -12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX250	p. 528
SS5Y -12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX260	p. 540
SS5Y -12S	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX260 Safety Communication Protocol (PROFIsafe)	•
SS5Y□-12S3	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX120	p. 556
SS5Y□-12S4	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX126	p. 548
SS5Y□-12S6 SS5Y□-12S8	SY Type 12/Top Ported Plug-in Connector Connecting Base: EX600 SY Type 12/Top Ported Plug-in Connector Connecting Base: EX180	p. 512 p. 564
SS5Y□-1256	SY Type 12/Top Ported Plug-in Connector Connecting Base: ExToo  SY Type 12/Top Ported Plug-in Connector Connecting Base: Terminal Block Box	p. 462
SS5Y -12TC	SY Type 12/Top Ported Plug-in Connector Connecting Base: Terminal Block Box (Spring Type)	p. 453
SS5Y□-50	5. Type 12 top 1 office 1 flag in Collineator Collineating Dates (Colling Type)	
	SY Type 50/Side Ported, Plug-in Metal Base: D-sub Connector, Flat Bibbon Cable	
SS5Y□-50S5	SY Type 50/Side Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable  SY Type 50/Side Ported Plug-in Metal Base: EX510	p. 636 p. 664
SS5Y□-50S5 SS5Y□-51		p. 664
	SY Type 50/Side Ported Plug-in Metal Base: EX510	p. 664 p. 636
SS5Y□-51	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable	p. 664
SS5Y□-51 SS5Y□-51S5	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510	p. 664 p. 636 p. 664
SS5Y□-51 SS5Y□-51S5 SS5Y□-52	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510 SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable	p. 664 p. 636 p. 664 p. 656
SS5Y□-51 SS5Y□-51S5 SS5Y□-52 SS5Y□-52S5	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510 SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 52/Top Ported Plug-in Metal Base: EX510	p. 664 p. 636 p. 664 p. 656 p. 674
SS5Y□-51 SS5Y□-51S5 SS5Y□-52 SS5Y□-52S5 SS5Y5-M10	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510 SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 52/Top Ported Plug-in Metal Base: EX510 SY3000/5000 Type 10/Side Ported Plug-in Mixed Mounting Type Manifold	p. 664 p. 636 p. 664 p. 656 p. 674 p. 574
SS5Y□-51 SS5Y□-51S5 SS5Y□-52 SS5Y□-52S5 SS5Y5-M10 SS5Y5-M11	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510 SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 52/Top Ported Plug-in Metal Base: EX510 SY3000/5000 Type 10/Side Ported Plug-in Mixed Mounting Type Manifold SY3000/5000 Type 11/Bottom Ported Plug-in Mixed Mounting Type Manifold	p. 664 p. 636 p. 664 p. 656 p. 674 p. 574 p. 574
SS5Y□-51 SS5Y□-51S5 SS5Y□-52 SS5Y□-52S5 SS5Y5-M10 SS5Y5-M11 SS5Y5-M12	SY Type 50/Side Ported Plug-in Metal Base: EX510 SY Type 51/Bottom Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 51/Bottom Ported Plug-in Metal Base: EX510 SY Type 52/Top Ported Plug-in Metal Base: D-sub Connector, Flat Ribbon Cable SY Type 52/Top Ported Plug-in Metal Base: EX510 SY3000/5000 Type 10/Side Ported Plug-in Mixed Mounting Type Manifold SY3000/5000 Type 11/Bottom Ported Plug-in Mixed Mounting Type Manifold SY Type 12/Top Ported Plug-in Mixed Mounting Type Manifold	p. 664 p. 636 p. 664 p. 656 p. 674 p. 574 p. 574 p. 586



# Model Index (Alphanumeric Order)

SY3000	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]	p. 694
SY3A□R	SY3000 Vacuum Release Valve with Restrictor (Only for External Pilot)	p. 415
SY3000-X990	SY3000 Modular Connection Type	p. 711
SY5□3□-□1-C6	SY5000 Valve with Pressure Sensor	p. 421
SY5000	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]	p. 694
SY530-□1-E	SY5000 With Residual Pressure Release Valve	p. 413
SY5A□R	SY5000 Vacuum Release Valve with Restrictor (Only for External Pilot)	p. 415
SY5000-X990	SY5000 Modular Connection Type	p. 711
SY7□3□-□1-C6	SY7000 Valve with Pressure Sensor	p. 421
SY7000	Plug-in Single Unit/Sub-plate Type [IP67 Compliant]	p. 694
SY730-□1-E	SY7000 With Residual Pressure Release Valve	p. 413