
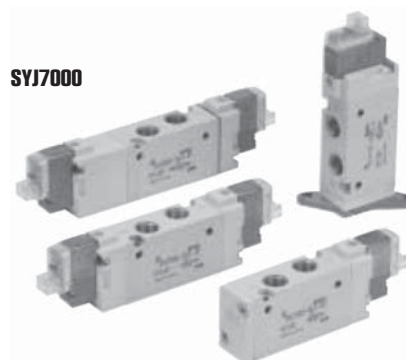
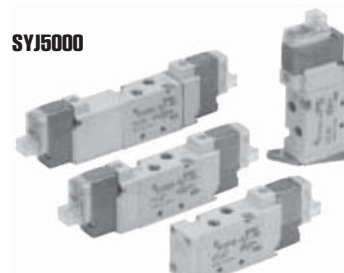


- Компактная конструкция
- Низкая потребляемая мощность – 0.1 Вт (энергосберегающее исполнение)

### Технические характеристики

Серия	SYJ3000	SYJ5000	SYJ7000	
Среда	Очищенный сжатый воздух с содержанием масла или без него			
Тип управления	Электропневматическое			
Рабочий диапазон давлений (МПа)	5/2 с одностор. управлением	0.15 ~ 0.7		
	5/2 с двустор. управлением	0.1 ~ 0.7		
	5/3	0.2 ~ 0.7	0.15 ~ 0.7	0.15 ~ 0.7
Рабочий диапазон температур (°C)	-10 ~ 50			
Время срабатывания * (мс)	5/2 с одно/двустор. управлением	< 15	< 25	< 30
	5/3	< 30	< 40	< 60
Макс. частота срабатывания (Гц)	5/2 с одно/двустор. управлением	10	5	
	5/3	3	3	
Вспомогательное ручное управление	Не блокируется			
Монтажное положение	Произвольное			
Электрический разъем	2-х клеммный L-разъем	2-х клеммный L-разъем; 2-х клеммный DIN-разъем		
Напряжение	24 V DC 220 V AC			
Допуск по напряжению	+10% от номинального значения			
Потребляемая мощность (Вт)	DC	0.1 ~ 0.4	0.1 ~ 0.45	
	AC	2.6		
Степень защиты	IP40			
Класс изоляции	B			
Искрогашение	Стандартное исполнение (для DIN-разъема – по запросу)			
Индикатор рабочего состояния	Стандартное исполнение (для DIN-разъема – по запросу)			

\* При температуре 20° C, 0.5 МПа при номинальном напряжении

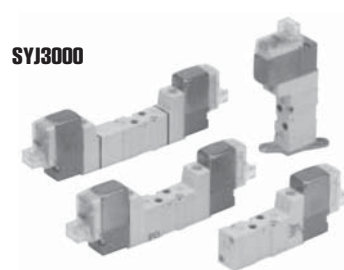

### Номер для заказа

#### Номер для заказа SYJ3000

Самостоятельный монтаж или монтаж на плате пневмораспределителей

Принцип действия	Номер для заказа*	Условное обозначение	Присоед. размер** А, В	Расход (норм. л/мин)	Вес (г)
5/2	Одностороннее управление SYJ3123-5L0U-M3-Q		M3	117	37
	Двустороннее управление SYJ3223-5L0U-M3-Q				55
5/3	Закрытый центр SYJ3323-5L0U-M3-Q			117	58
	Открытый центр SYJ3423-5L0U-M3-Q			98	
	Центр под давлением SYJ3523-5L0U-M3-Q			157	

# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000

## Номер для заказа

### Номер для заказа SYJ5000

Самостоятельный монтаж или монтаж на плите пневмораспределителей

Номер для заказа			Принцип действия	Условное обозначение	Присоед. размер ** А, В	Расход (норм. л/мин)	Вес (г) Разъем с кабелем/ DIN-разъем
24 V DC	220 V AC						
Штекер с кабелем	DIN-разъем	DIN-разъем					
SYJ5123-5L0U-M5-Q	SYJ5123-5YO-M5-Q	SYJ5123-4YO-M5-Q	5/2	Одно- стороннее управление	M5	127	47/68
SYJ5123-5L0U-C4-Q	SYJ5123-5YO-C4-Q	SYJ5123-4YO-C4-Q			C4	176	54/75
SYJ5123-5L0U-M5-Q	SYJ5123-5YO-C6-Q	SYJ5123-4YO-C6-Q			C6	186	54/75
SYJ5223-5L0U-M5-Q	SYJ5223-5YO-M5-Q	SYJ5223-4YO-M5-Q		Дву- стороннее управление	M5	127	66/108
SYJ5223-5L0U-M5-Q	SYJ5223-5YO-C4-Q	SYJ5223-4YO-C4-Q			C4	176	73/115
SYJ5223-5L0U-M5-Q	SYJ5223-5YO-C6-Q	SYJ5223-4YO-C6-Q			C6	186	73/115
SYJ5323-5L0U-M5-Q	SYJ5323-5YO-M5-Q	SYJ5323-4YO-M5-Q	5/3	Закрытый центр	M5	127	77/119
SYJ5323-5L0U-M5-Q	SYJ5323-5YO-C4-Q	SYJ5323-4YO-C4-Q			C4	186	84/126
SYJ5323-5L0U-M5-Q	SYJ5323-5YO-C6-Q	SYJ5323-4YO-C6-Q			C6	186	84/126
SYJ5423-5L0U-M5-Q	SYJ5423-5YO-M5-Q	SYJ5423-4YO-M5-Q		Открытый центр	M5	117	77/119
SYJ5423-5L0U-M5-Q	SYJ5423-5YO-C4-Q	SYJ5423-4YO-C4-Q			C4	147	84/126
SYJ5423-5L0U-M5-Q	SYJ5423-5YO-C6-Q	SYJ5423-4YO-C6-Q			C6	186	84/126
SYJ5523-5L0U-M5-Q	SYJ5523-5YO-M5-Q	SYJ5523-4YO-M5-Q		Центр под давлением	M5	137	77/119
SYJ5523-5L0U-M5-Q	SYJ5523-5YO-C4-Q	SYJ5523-4YO-C4-Q			C4	147	84/126
SYJ5523-5L0U-M5-Q	SYJ5523-5YO-C6-Q	SYJ5523-4YO-C6-Q			C6	225	84/126

\*\* Быстроразъемное соединение, например С6 – ø6

### Номер для заказа SYJ7000

Самостоятельный монтаж или монтаж на плите пневмораспределителей

Номер для заказа			Принцип действия	Условное обозначение	Присоед. размер ** А, В	Расход (норм. л/мин)	Вес (г) Разъем с кабелем/ DIN-разъем
24 V DC	220 V AC						
Штекер с кабелем	DIN-разъем	DIN-разъем					
SYJ7123-5L0U-01-Q	SYJ7123-5YO-01-Q	SYJ7123-4YO-01-Q	5/2	Одно- стороннее управление	1/8	569	86/107
SYJ7123-5L0U-C6-Q	SYJ7123-5YO-C6-Q	SYJ7123-4YO-C6-Q			C6	392	97/98
SYJ7123-5L0U-C8-Q	SYJ7123-5YO-C8-Q	SYJ7123-4YO-C8-Q			C8	510	97/98
SYJ7223-5L0U-01-Q	SYJ7223-5YO-01-Q	SYJ7223-4YO-01-Q		Дву- стороннее управление	1/8	569	100/142
SYJ7223-5L0U-C6-Q	SYJ7223-5YO-C6-Q	SYJ7223-4YO-C6-Q			C6	392	111/153
SYJ7223-5L0U-C8-Q	SYJ7223-5YO-C8-Q	SYJ7223-4YO-C8-Q			C8	510	111/153
SYJ7323-5L0U-01-Q	SYJ7323-5YO-01-Q	SYJ7323-4YO-01-Q	5/3	Закрытый центр	1/8	441	110/152
SYJ7323-5L0U-C6-Q	SYJ7323-5YO-C6-Q	SYJ7323-4YO-C6-Q			C6	343	121/163
SYJ7323-5L0U-C8-Q	SYJ7323-5YO-C8-Q	SYJ7323-4YO-C8-Q			C8	412	121/163
SYJ7423-5L0U-01-Q	SYJ7423-5YO-01-Q	SYJ7423-4YO-01-Q		Открытый центр	1/8	333	110/152
SYJ7423-5L0U-C6-Q	SYJ7423-5YO-C6-Q	SYJ7423-4YO-C6-Q			C6	265	121/163
SYJ7423-5L0U-C8-Q	SYJ7423-5YO-C8-Q	SYJ7423-4YO-C8-Q			C8	323	121/163
SYJ7523-5L0U-01-Q	SYJ7523-5YO-01-Q	SYJ7523-4YO-01-Q		Центр под давлением	1/8	765	110/152
SYJ7523-5L0U-C6-Q	SYJ7523-5YO-C6-Q	SYJ7523-4YO-C6-Q			C6	441	121/163
SYJ7523-5L0U-C8-Q	SYJ7523-5YO-C8-Q	SYJ7523-4YO-C8-Q			C8	579	121/163

\*\* Быстроразъемное соединение, например С6 – ø6

Ответные части разъемов заказываются отдельно

### Номера для заказа принадлежностей для монтажа


Типоразмер	3000	5000	7000
Прокладка	SYJ3000-14-7	DXT192-10-14	DXT199-21-10
Винт для крепления пневмораспределителя	SY100-33-3	M2.5x25	M3x31
Заглушка	SYJ3000-21-12A	SYJ5000-21-5A	SYJ7000-21-1A
Винт для крепления заглушки	SY100-33-2	M2.5x7	M3x8
Индивидуальный выпуск воздуха с уплотнениями и винтами	—	SYJ5000-17-3A	SYJ7000-17-1FA

Примечания: Для установки одного пневмораспределителя или одной заглушки необходимо заказывать два винта

## Ответные части разъемов (заказываются отдельно)

### Ответные части разъемов


Обозначение	Длина кабеля	Номер для заказа	
		24 V DC	220 V AC
Кабель без оболочки и предохранительного колпачка	1000	SY100-30-4A-10	SY100-30-3A-10
	2000	SY100-30-4A-20	SY100-30-3A-20
	3000	SY100-30-4A-30	SY100-30-3A-20
Кабель с оболочкой и предохранительным колпачком	1000	SY100-68-A-10	—
	2000	SY100-68-A-20	—
	3000	SY100-68-A-30	—

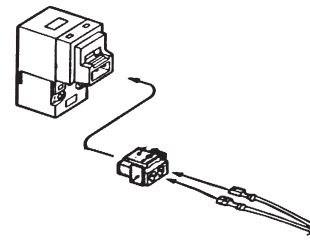

### DIN-разъем


Описание	Номер для заказа	
	24 V DC	220 V AC
Без индикатора рабочего состояния, без искрогашения	K41	
С индикатором рабочего состояния, с искрогашением	K43	K44

Схему подключения см. на стр. 17

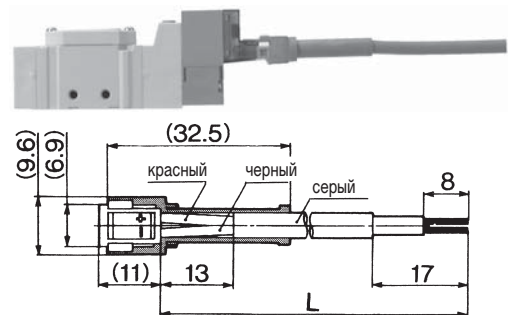


### Запасной элемент включения

Тип	Напряжение	Номер для заказа	
		Разъем с кабелем	DIN-разъем
SYJ3000	24 V DC	V111-5LOU-Q	—
SYJ5000			V115-5Y0-Q
SYJ7000			V115-5Y0-Q
SYJ5000	220 V AC	—	V115-4Y0-Q
SYJ7000			V115-4Y0-Q

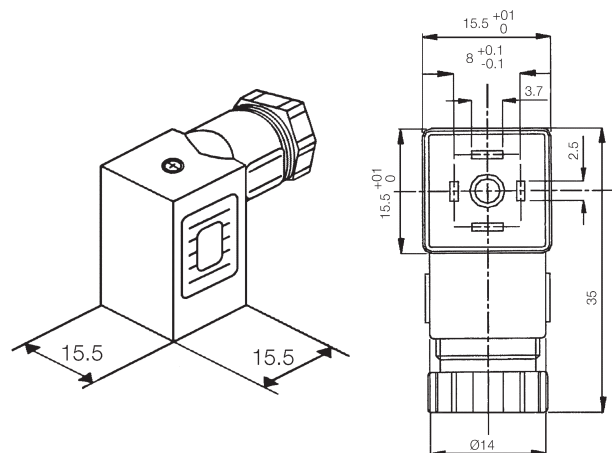

## Конструкция

### 5/2 с односторонним управлением

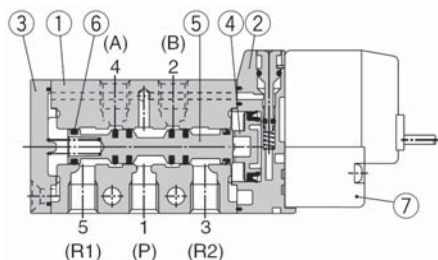


### Спецификация


Поз.	Обозначение	Материал
1	Корпус пневмоцилиндра	Алюминий
2	Промежуточная деталь	Полиацеталь
3	Концевая пластина	Алюминий
4	Поршень управления	Полиацеталь
5	Золотник	Нерж. сталь
6	Пружина*	—
7	Катушка	—

\* Только для серий SYJ5000, SYJ7000

### 5/2 с двусторонним управлением

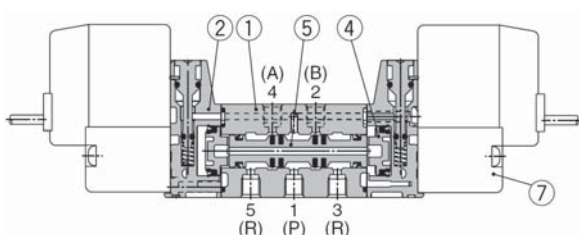


### 5/3 в среднем положении открыт/закрыт

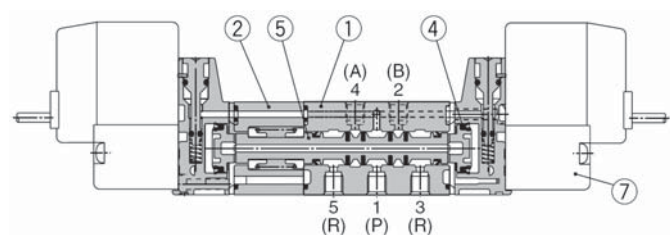


# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000

## Размеры SYJ3000


SYJ3120

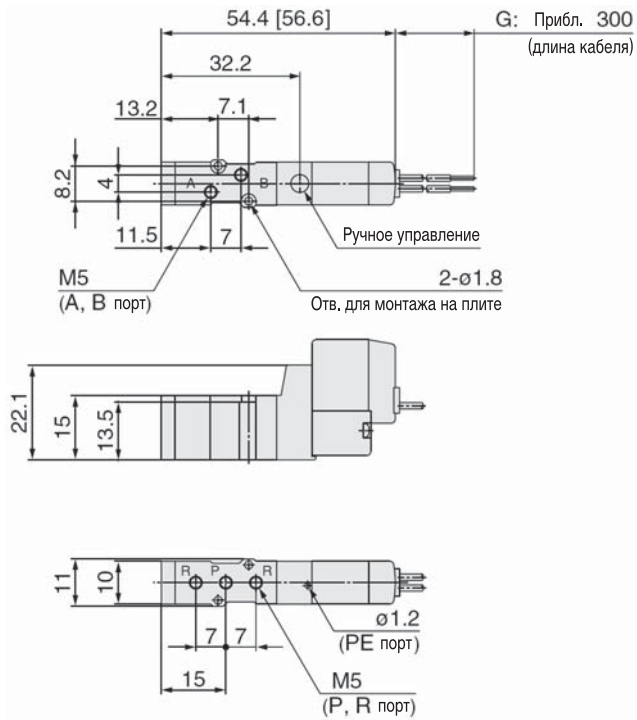


Штекер с кабелем

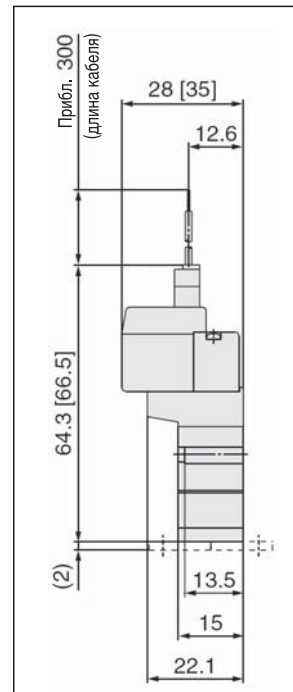

SYJ3220

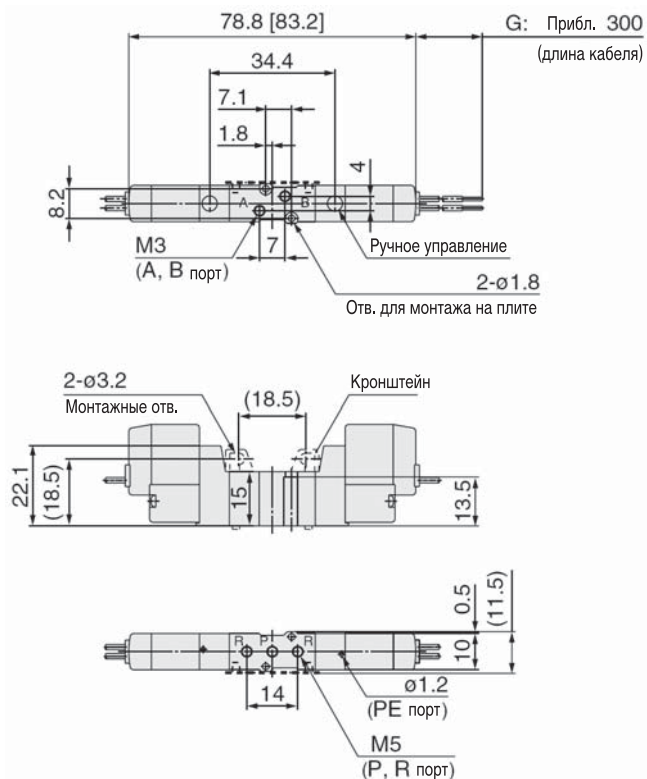


Штекер с кабелем

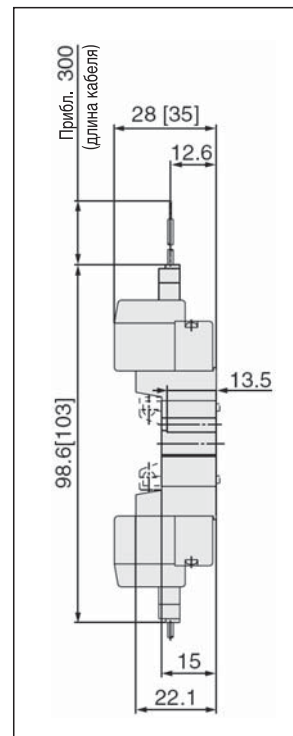


## Размеры SYJ3000

SYJ3320/3420/3520

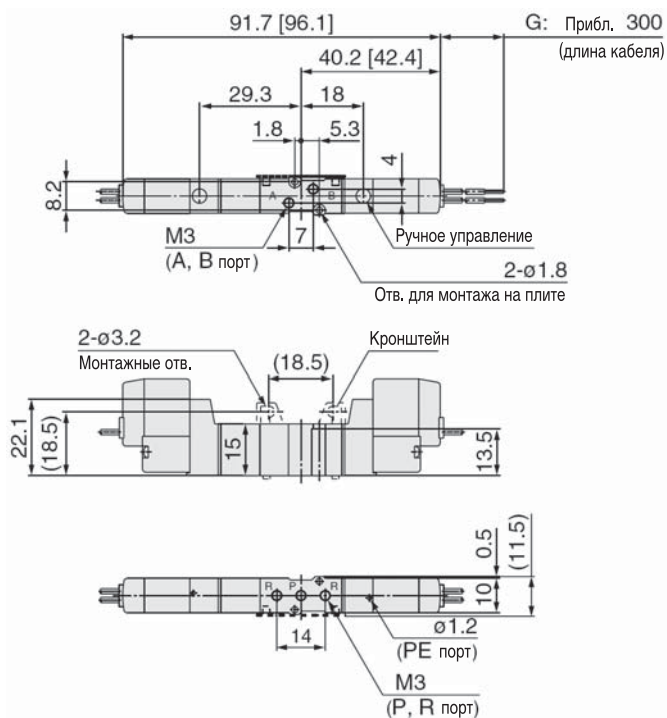


Штекер с кабелем

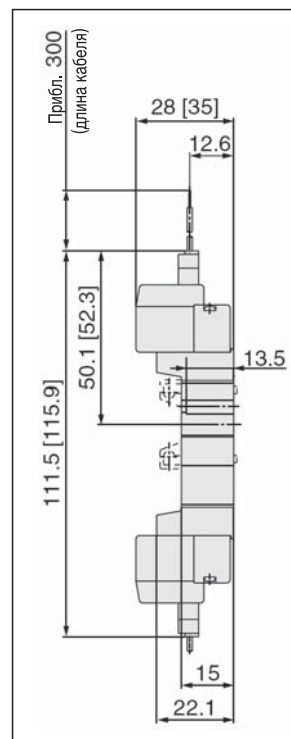


## Номер для заказа многосекционной платы пневмораспределителей SYJ3000

Кол-во секций	Номер для заказа
2	SS5YJ3-20-02-00F
3	SS5YJ3-20-03-00F
4	SS5YJ3-20-04-00F
5	SS5YJ3-20-05-00F
6	SS5YJ3-20-06-00F
7	SS5YJ3-20-07-00F
8	SS5YJ3-20-08-00F
9	SS5YJ3-20-09-00F
10	SS5YJ3-20-10-00F
11	SS5YJ3-20-11-00F
12	SS5YJ3-20-12-00F
13	SS5YJ3-20-13-00F
14	SS5YJ3-20-14-00F
15	SS5YJ3-20-15-00F
16	SS5YJ3-20-16-00F
17	SS5YJ3-20-17-00F
18	SS5YJ3-20-18-00F
19	SS5YJ3-20-19-00F
20	SS5YJ3-20-20-00F

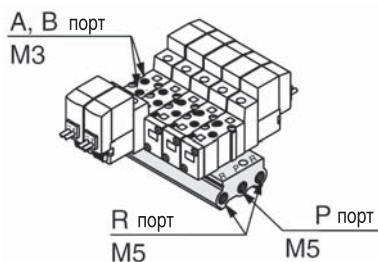

# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000


## Размеры многосекционной плиты пневмораспределителей SYJ3000

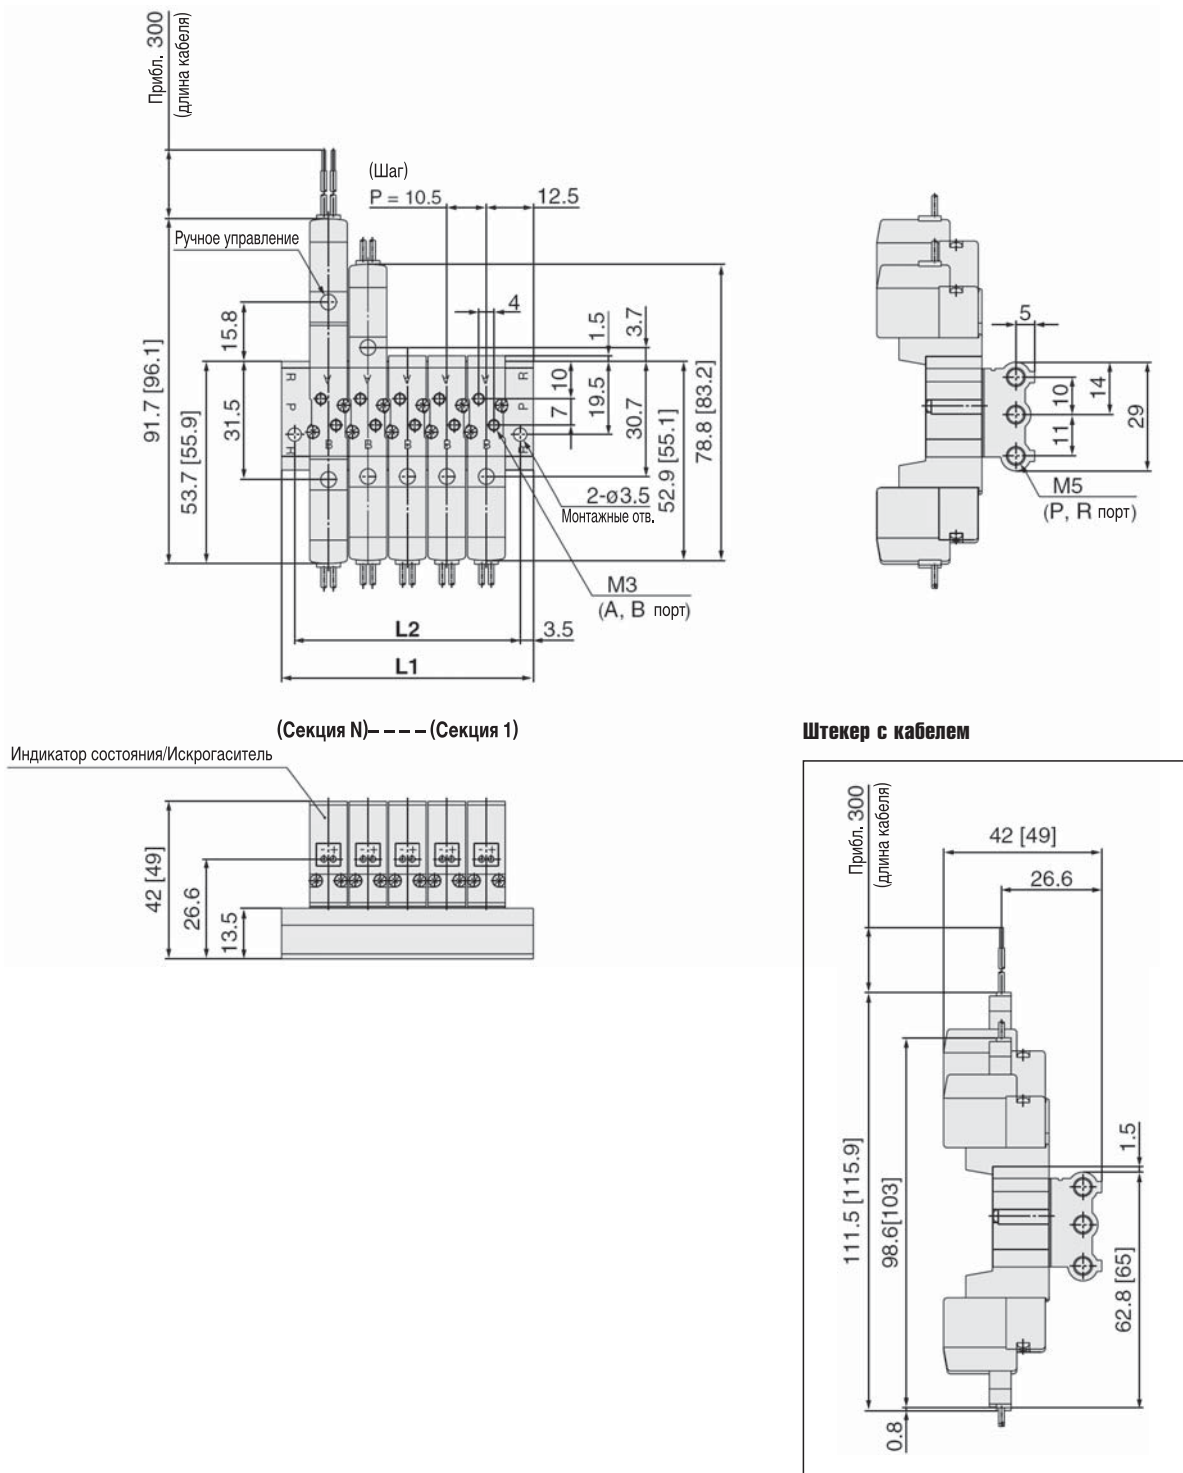


Кол-во секций	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193	203.5	214	224.5
L2	28.5	39	49.5	60	70.5	81	91.5	102	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5

## Размеры SYJ5000


### SYJ5120

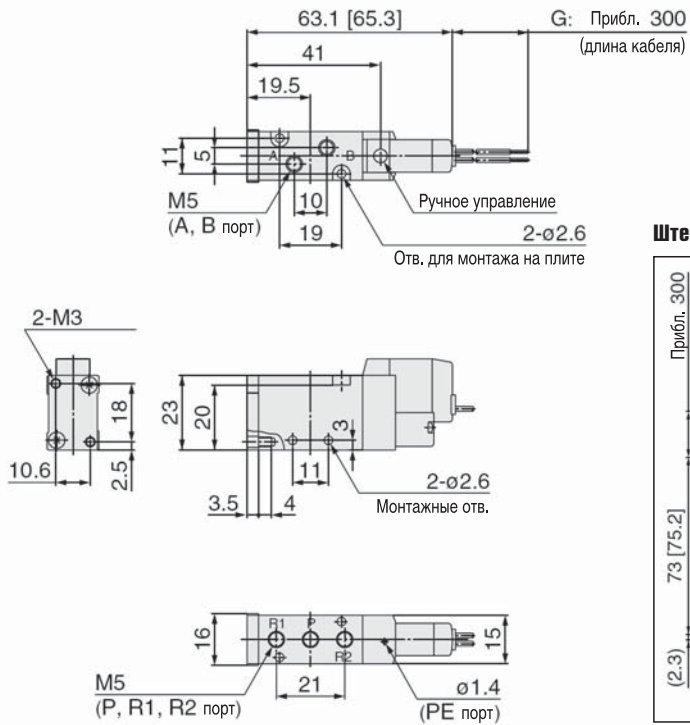

#### Штекер с кабелем

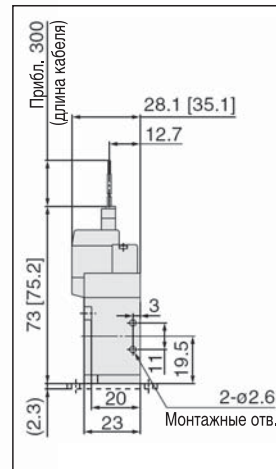


#### DIN-разъем

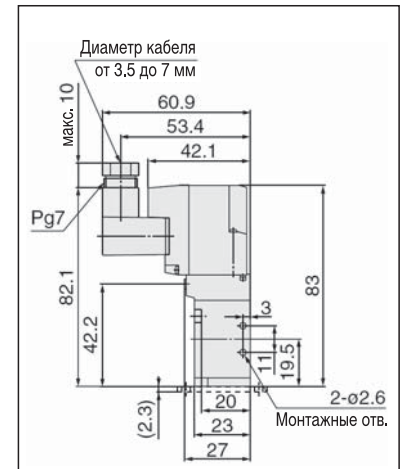


Компания SMC оставляет за собой право на внесение технических и размерных изменений


### SYJ5220

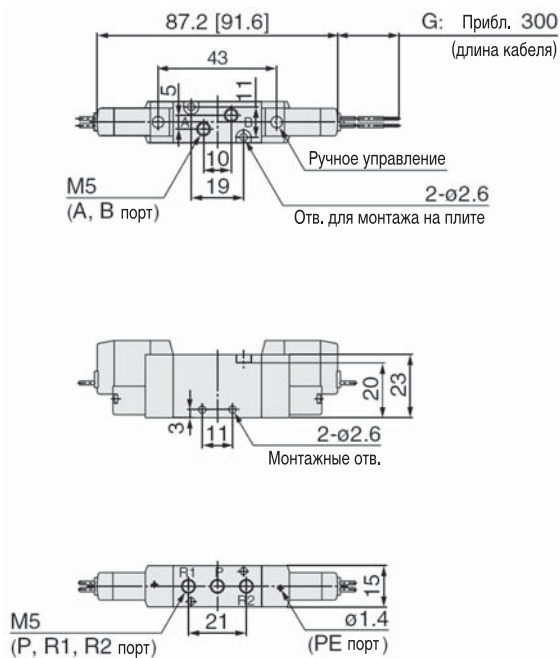

#### Штекер с кабелем

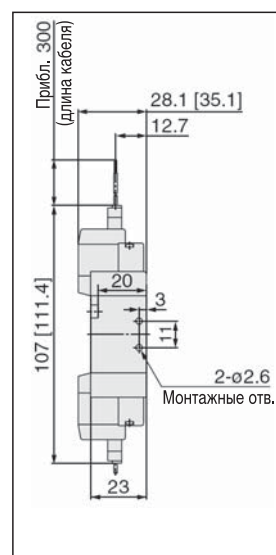


#### DIN-разъем

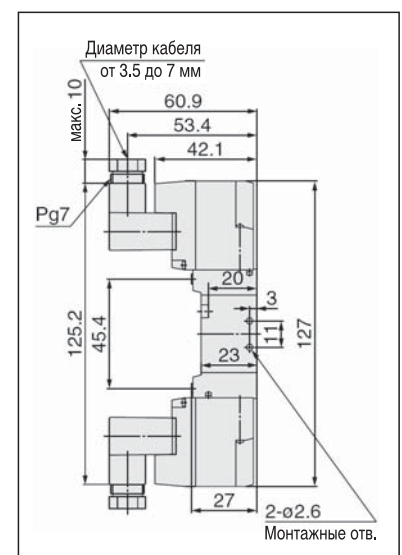

# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000

## Размеры SYJ5000


SYJ5320/5420/5520

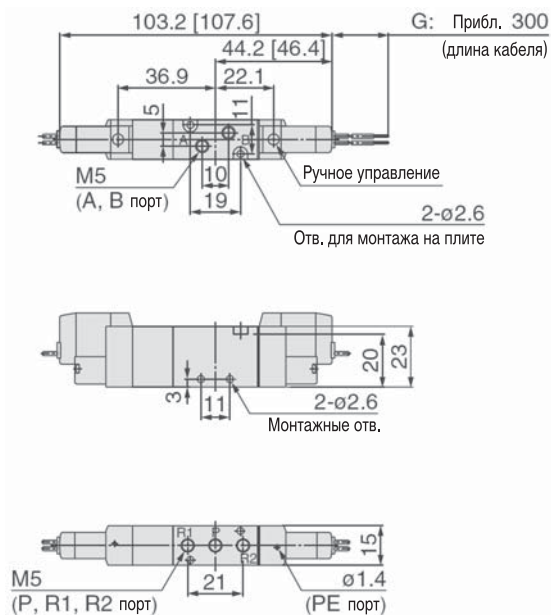

Штекер с кабелем




DIN-разъем

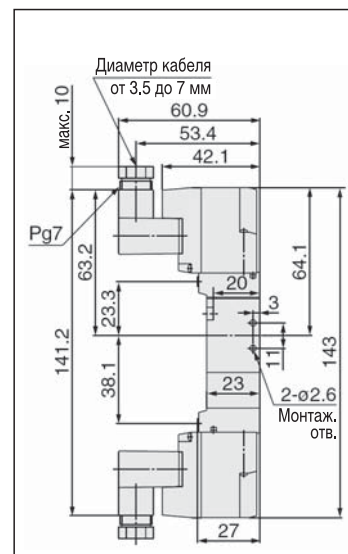


## Номер для заказа многосекционной плиты пневмораспределителей SYJ5000

Кол-во секций	Номер для заказа
2	SS5YJ5-20-02-00F
3	SS5YJ5-20-03-00F
4	SS5YJ5-20-04-00F
5	SS5YJ5-20-05-00F
6	SS5YJ5-20-06-00F
7	SS5YJ5-20-07-00F
8	SS5YJ5-20-08-00F
9	SS5YJ5-20-09-00F
10	SS5YJ5-20-10-00F
11	SS5YJ5-20-11-00F
12	SS5YJ5-20-12-00F
13	SS5YJ5-20-13-00F
14	SS5YJ5-20-14-00F
15	SS5YJ5-20-15-00F
16	SS5YJ5-20-16-00F
17	SS5YJ5-20-17-00F
18	SS5YJ5-20-18-00F
19	SS5YJ5-20-19-00F
20	SS5YJ5-20-20-00F

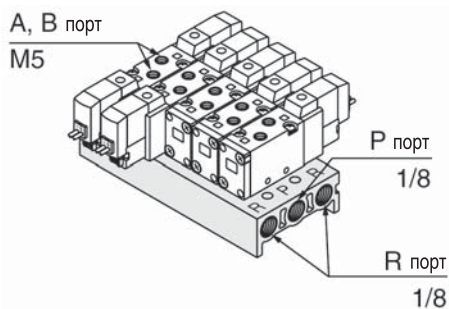





## Размеры многосекционной плиты пневмораспределителей SYJ5000

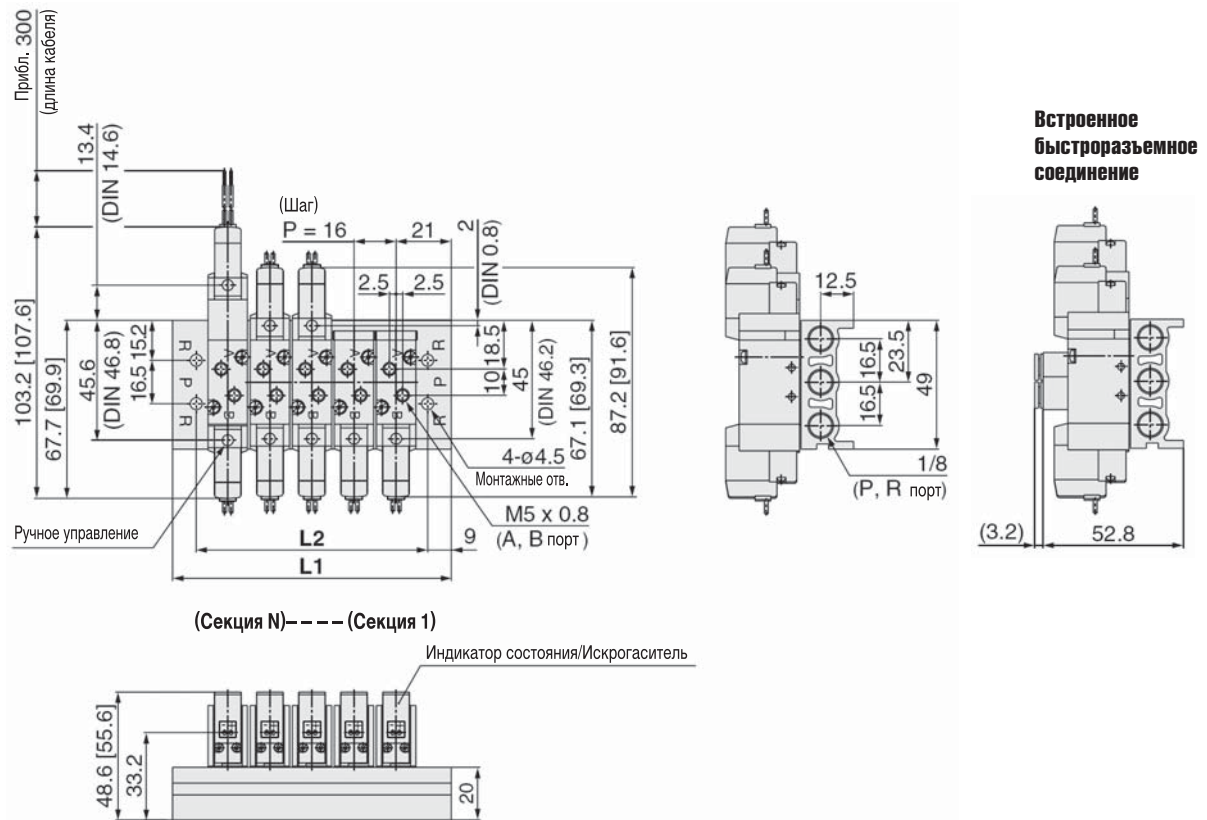

Штекер с кабелем

DIN-разъем

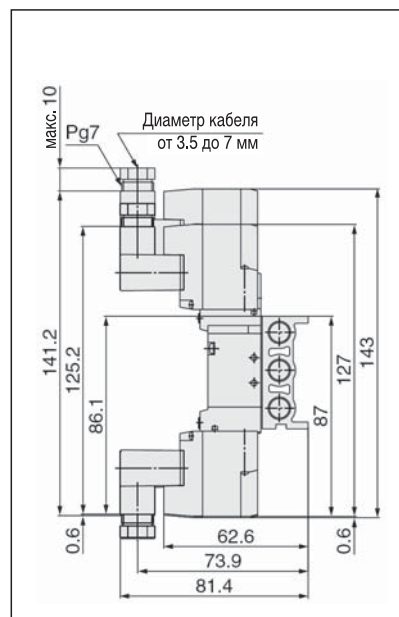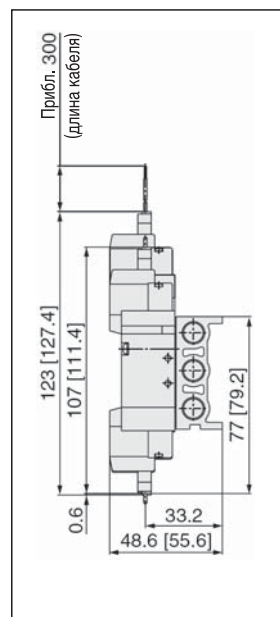


Компания SMC оставляет за собой право на внесение технических и размерных изменений

Кол-во секций	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	58	74	90	106	122	138	154	170	186	202	218	234	250	266	282	298	314	330	346
L2	40	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296	312	328


# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000

## Размеры SYJ7000


SYJ7120

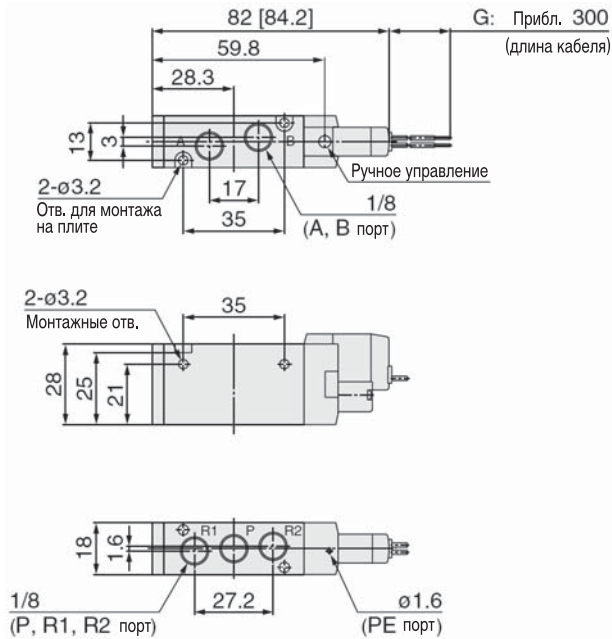


Штекер с кабелем

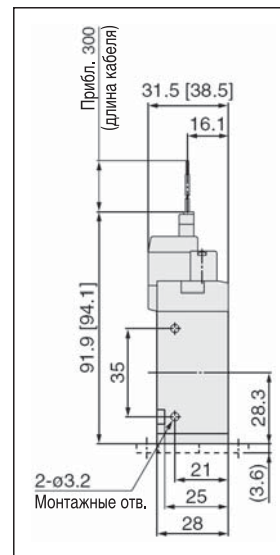


DIN-разъем

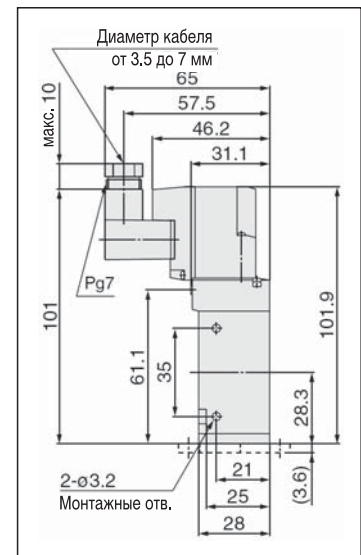


SYJ7220

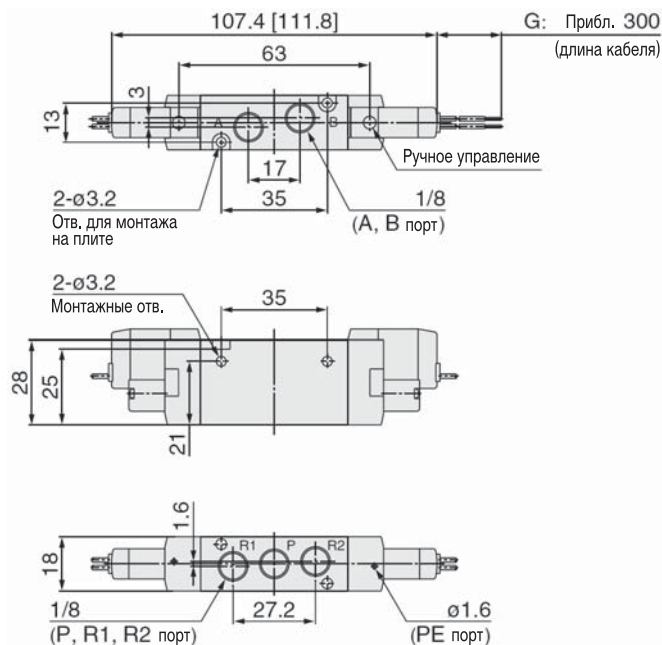

Штекер с кабелем

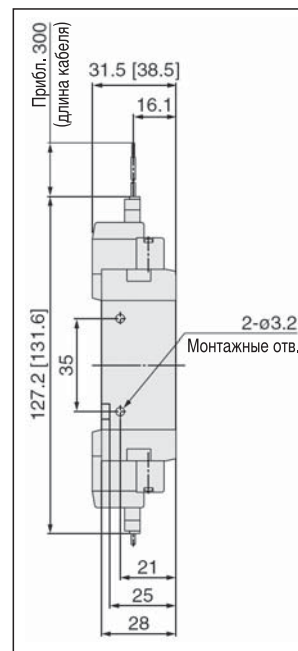


DIN-разъем

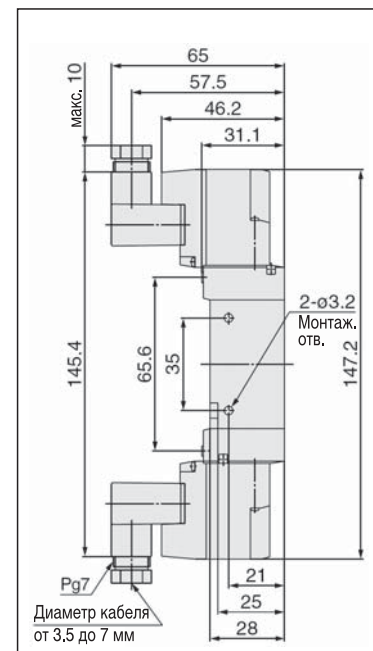




# 5/2, 5/3 пневмораспределитель с электропневматическим управлением SYJ3000/5000/7000


## Размеры многосекционной плиты пневмораспределителей SYJ7000

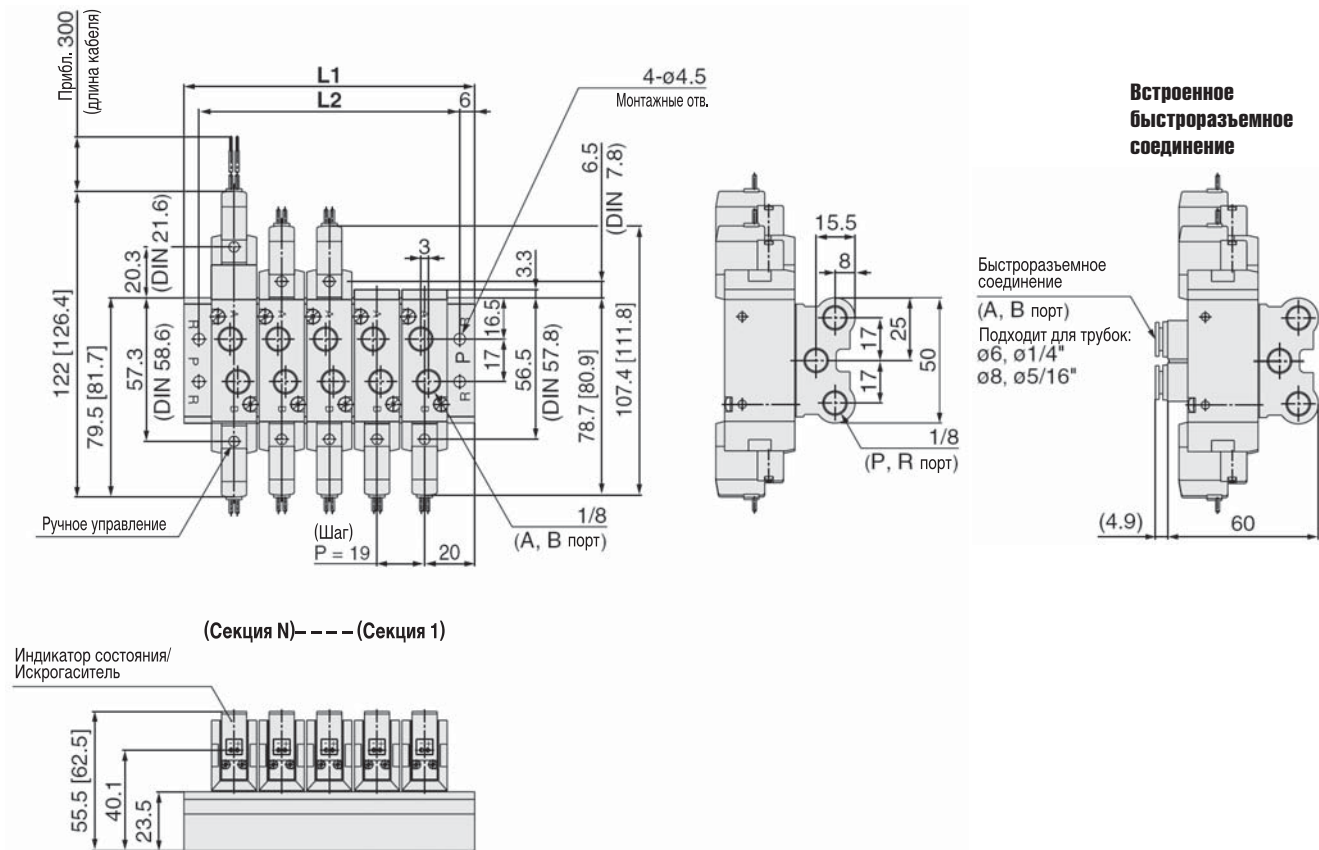

**Штекер с кабелем**

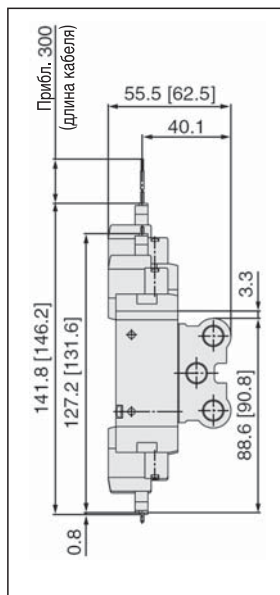

**DIN-разъем**

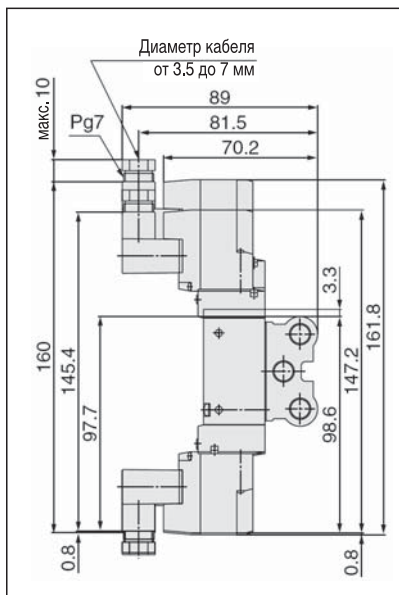

Кол-во секций	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	59	78	97	116	135	154	173	192	211	230	249	268	287	306
L2	47	66	85	104	123	142	161	180	199	218	237	256	275	294

# 4/5 Port Solenoid Valve

Power Consumption  
**0.1 W**  
 With Power Saving Circuit



Series **SYJ3000/5000/7000**



Cover (stainless steel)

## Improved pilot valve












Pilot valve cover is stronger using stainless steel.  
 Mounting thread is also reinforced from size M1.7 to M2.


## Flow Characteristics

Series	Flow characteristics		
	C [(dm <sup>3</sup> /s·bar)]	b	Cv
SYJ3000	0.46	0.36	0.12
SYJ5000	0.83	0.32	0.21
SYJ7000	2.9	0.35	0.74

# Rubber Seal 4/5 Port Solenoid Valve Series SYJ3000/5000/7000

## Variations

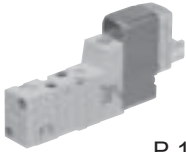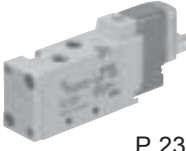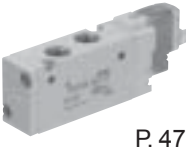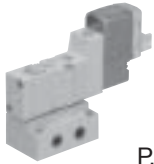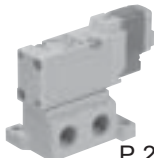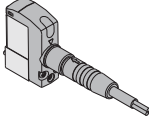	Series	Sonic conductance: C [dm <sup>3</sup> /(s·bar)]	Type of actuation	Voltage	Electrical entry	Option	Manual override		
						With light/surge voltage suppressor			
Body ported	<b>SYJ3000</b>  P. 1	0.9 mm <sup>2</sup> { 4/2 → 5/3 } { (A/B → EA/EB) }		<b>For DC</b> ■ 24 VDC 12 VDC 6 VDC 5 VDC 3 VDC	Grommet 	<b>For DC</b> ■ With surge voltage suppressor			
	<b>SYJ5000</b>  P. 23	0.47 { 4/2 → 5/3 } { (A/B → EA/EB) }						L plug connector 	■ With light/ surge voltage suppressor
	<b>SYJ7000</b>  P. 47	2.4 { 4/2 → 5/3 } { (A/B → EA/EB) }						M plug connector 	
Base mounted	<b>SYJ3000</b>  P. 1	0.46 { 4/2 → 5/3 } { (A/B → EA/EB) }	3 Position ● Closed center ● Exhaust center ● Pressure center	<b>For AC</b> ■ 100 VAC <sup>50/60</sup> Hz 110 VAC <sup>50/60</sup> Hz 200 VAC <sup>50/60</sup> Hz 220 VAC <sup>50/60</sup> Hz	DIN terminal  (SYJ5000, 7000 only)	<b>For AC</b> (Note) ■ With light/surge voltage suppressor	■ Non-locking push type  ■ Push-turn locking slotted type  ■ Push-turn locking lever type		
	<b>SYJ5000</b>  P. 23	0.83 { 4/2 → 5/3 } { (A/B → EA/EB) }						M8 connector 	
	<b>SYJ7000</b>  P. 47	2.9 { 4/2 → 5/3 } { (A/B → EA/EB) }							


 Note) All AC voltage models have built-in surge voltage suppressor.

# Series SYJ3000/5000/7000





## Manifold Variations

Valve series	A, B port location	A, B port size									Manifold option			Flat ribbon cable manifold	
		M3	M5	1/8	With one-touch fitting						Individual SUP spacer assembly	Individual EXH spacer assembly	Interface regulator		
					Applicable tubing O.D.										
						ø4	ø6	ø8	N3	N7	N9				
Body ported	SYJ3000	●	—	—	—	—	—	—	—	—	—	—	—	—	●
	SYJ5000	—	●	—	●	●	—	—	●	●	—	●	—	—	●
	SYJ7000	—	—	●	—	●	—	●	—	●	—	—	—	—	●
Base mounted	SYJ3000	Side	●	●	—	●	—	—	●	—	—	—	—	—	—
		Bottom	—	—	—	—	—	—	—	—	—	—	—	—	●
	SYJ5000	Side	—	●	—	●	●	—	—	●	●	—	—	—	—
		Bottom	—	●	—	—	—	—	●	—	—	—	—	(P port regulation)	—
	SYJ7000	Side	—	—	●	—	●	—	—	—	●	—	—	—	—
		Bottom	—	—	●	—	—	—	—	—	—	—	—	(P port regulation)	—


### Body ported

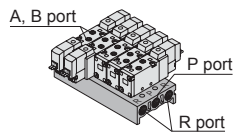


### Base mounted

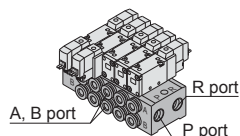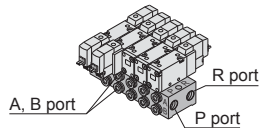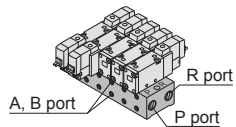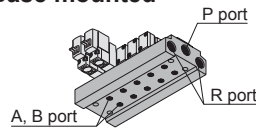


### Individual SUP spacer assembly




### Individual EXH spacer assembly




### Interface regulator

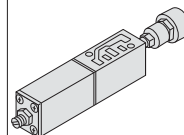


### Type 21P

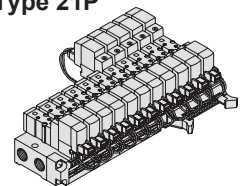

### Type 32P

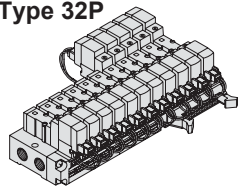


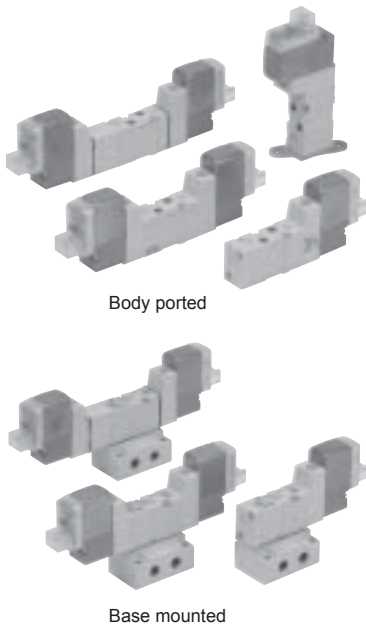
### Mixed mounting of 3 port valves and 4, 5 port valves

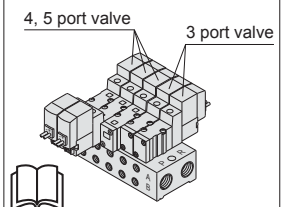

For detailed specifications about SYJ3000, refer to page 14. For SYJ5000, refer to page 38, and for SYJ7000, refer to page 61.


# Rubber Seal 4/5 Port Solenoid Valve Series SYJ3000

 For details about certified products conforming to international standards, visit us at [www.smcworld.com](http://www.smcworld.com).




## Specifications

<b>Fluid</b>		Air
<b>Operating pressure range MPa</b>	<b>2 position single</b>	0.15 to 0.7
	<b>2 position double</b>	0.1 to 0.7
	<b>3 position</b>	0.2 to 0.7
<b>Ambient and fluid temperature (C)</b>	-10 to 50 (No freezing. Refer to back page 3.)	
<b>Response time (ms) (at 0.5 MPa)</b> <sup>Note 1)</sup>	<b>2 position single, double</b>	15 or less
	<b>3 position</b>	30 or less
<b>Max. operating frequency (Hz)</b>	<b>2 position single, double</b>	10
	<b>3 position</b>	3
<b>Manual override (Manual operation)</b>	Non-locking push type, Push-turn locking slotted type, Push-turn locking lever type	
<b>Pilot exhaust method</b>	Individual exhaust for the pilot valve, Common exhaust for the pilot and main valve	
<b>Lubrication</b>	Not required	
<b>Mounting orientation</b>	Unrestricted	
<b>Shock/Vibration resistance (m/s<sup>2</sup>)</b> <sup>Note 2)</sup>	150/30	
<b>Enclosure</b>	Dust proof (* M8 connector conforms to IP65.)	


 \* Based on IEC60529  
 Note 1) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20C, at rated voltage, without surge voltage suppressor)  
 Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Value in the initial state)  
 Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve when pilot signal is ON and OFF. (Value in the initial state)

## JIS Symbol 5 port

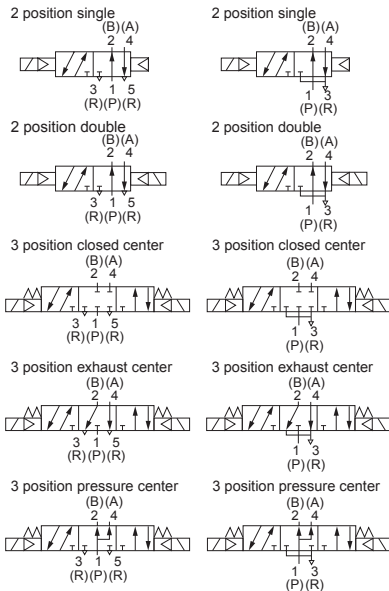


## Solenoid Specifications

<b>Electrical entry</b>	Gromet (G), (H), L plug connector (L), M plug connector (M), M8 connector (W)	
<b>Coil rated voltage (V)</b>	<b>DC</b>	24, 12, 6, 5, 3
	<b>AC 50/60 Hz</b>	100, 110, 200, 220
<b>Allowable voltage fluctuation</b>	10% of rated voltage *	
<b>Power consumption (W)</b>	<b>DC</b>	<b>Standard</b> 0.35 (With light: 0.4) <b>With power saving circuit</b> 0.1 (With light only)
	<b>AC</b>	<b>100 V</b>
<b>110 V [115 V]</b>		0.86 (With light: 0.89) [0.94 (With light: 0.97)]
<b>200 V</b>		1.18 (With light: 1.22)
<b>220 V [230 V]</b>		1.30 (With light: 1.34) [1.42 (With light: 1.46)]
<b>Surge voltage suppressor</b>	Diode (Non-polarity type: Valistor)	
<b>Indicator light</b>	LED	

 \* In common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.  
 \* For 115 VDC and 230 VDC, the allowable voltage is -15% to +5% of rated voltage.  
 \* S, Z and T type (with power saving circuit) should be used within the following allowable voltage fluctuation range due to a voltage drop caused by the internal circuit. S and Z type: 24 VDC: -7% to +10%, 12 VDC: -4% to +10%  
 T type: 24 VDC: -8% to +10%, 12 VDC: -6% to +10%

## Bracket Mounting

- ① Insert the lower hook of the mounting bracket into the groove on the bottom of the valve as shown.
- ② Press the valve and mounting bracket together until the upper hook of the bracket snaps into place in the groove on top of the valve.

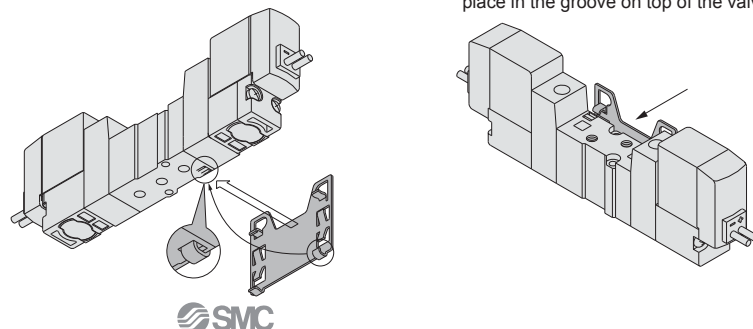

**Made to Order**  
 (For details, refer to page 79.)



## Flow Characteristics/Weight

Valve model	Type of actuation	Port size		Weight (g) <sup>Note 3, 4)</sup>			Effective area (mm <sup>2</sup> )	Flow characteristics <sup>Note 2)</sup>													
		1, 5, 3 (P, EA, EB)	4, 2 (A, B)	Grommet	L/M plug connector	M8 connector		1→4/2 (P→A/B)			4/2→5/3 (A/B→EA/EB)										
		C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b		Cv													
5 port Base mounted (with sub-plate)	2 position	Single	M5 x 0.8	M5 x 0.8	62 (36)	63 (37)	67 (41)	—	0.46	0.36	0.12	0.46	0.35	0.12							
		Double			79 (53)	81 (55)	89 (63)														
	3 position	Closed center			82 (56)	84 (58)	92 (66)								—	0.47	0.33	0.12	0.47	0.31	0.12
		Exhaust center													—	0.36	0.39	0.10	0.59 [0.40]	0.43 [0.33]	0.16 [0.11]
		Pressure center													—	0.58 [0.32]	0.42 [0.33]	0.16 [0.080]	0.46	0.32	0.11
5 port Body ported	2 position	Single	M3 x 0.5	M3 x 0.5	36	37	41	0.9	—	—	—	—	—	—							
		Double			53	55	63														
	3 position	Closed center			56	58	66								—	—	—	—	—	—	
		Exhaust center													—	—	—	—	—	—	
		Pressure center													—	—	—	—	—	—	
4 Port Base mounted (For manifold base only)	2 position	Single	1/8	M5 x 0.8	36	37	41	—	—	—	—	—	—	—							
		Double			53	55	63														
	3 position	Closed center			56	58	66								—	—	—	—	—	—	
		Exhaust center													—	—	—	—	—	—	
		Pressure center													—	—	—	—	—	—	



Note 1) Dedicated for manifold base. For details, refer to page 11.

Note 2) [ ] denotes the normal position. Exhaust center: 4/2 → 5/3, Pressure center: 1 → 4/2


Note 3) ( ): Without sub-plate.

Note 4) For DC voltages. For AC voltages add 3 g to the weight of the single solenoid and 6 g to the weight of the double solenoid and 3 position types.


## Cylinder Speed Chart

Use as a guide for selection.  
Please confirm the actual conditions with SMC Sizing Program.

### Body Ported

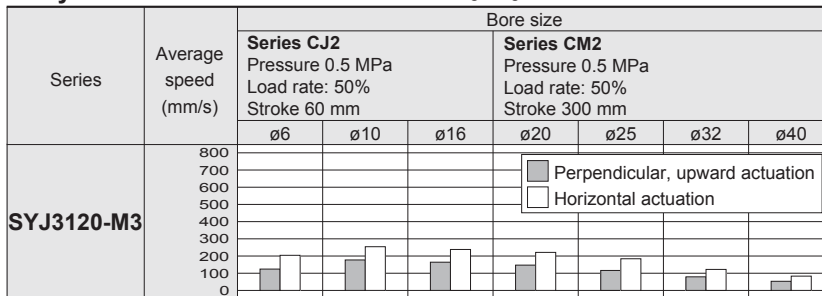

### Base Mounted

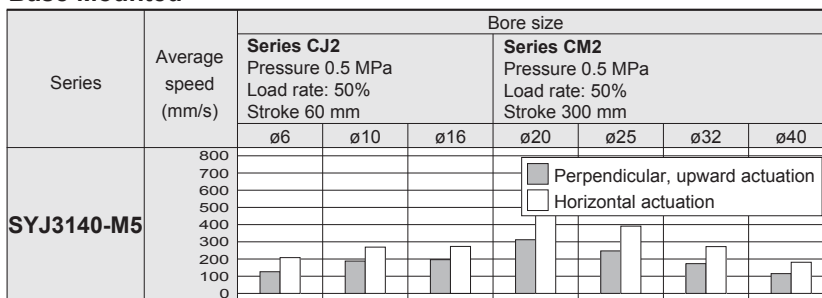

\* Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.

\* Average speed of cylinder is obtained by dividing the full stroke time by the stroke.

\* Load factor: ((Load weight x 9.8) / Theoretical force) x 100%

## Conditions

Body ported		Series CJ2	Series CM2
SYJ3120-M3	Tubing bore x Length	ø4 x 1 m	
	Speed controller	AS1301F-04	
	Silencer	AN120-M5	

Base mounted		Series CJ2	Series CM2
SYJ3140-M5	Tubing bore x Length	ø6 x 1 m	
	Speed controller	AS2001F-06	AS2301F-06
	Silencer	AN120-M5	

# Series SYJ3000

## How to Order

### Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

- \* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.
- \* For type "R" and "U", DC voltage is only available.
- \* Power saving circuit is only available in the "Z" type.


### Rated voltage

DC		AC (50/60 Hz)	
5	24 VDC	1	100 VAC
6	12 VDC	2	200 VAC
V	6 VDC	3	110 VAC [115 VAC]
S	5 VDC	4	220 VAC [230 VAC]
R	3 VDC		

\* For type W□, DC voltage is only available.


### Bracket

Nil: Without bracket  
F: With bracket

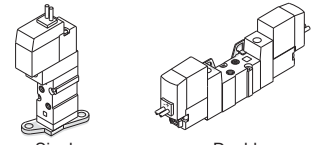


Single  
Double  
\* Brackets cannot be retrofitted.

- Note) • The double solenoid mounting bracket is supplied unattached.  
• To order the double solenoid bracket for use with a single solenoid valve, order the single solenoid valve without a bracket and order the bracket (VJ3000-13-1) separately.  
(Example) SYJ3120-5M-M3  
VJ3000-13-1

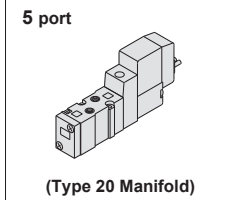

<b>Body ported</b>	SYJ3	1	2	0	□	5	M	□	□	□	□	M3	□
<b>Base mounted (4 port)</b>	SYJ3	2	3	0	□	5	M	□	□	□	□	<b>(Manifold use only)</b>	
<b>Base mounted (5 port)</b>	SYJ3	2	4	0	□	5	M	□	□	□	□	□	□

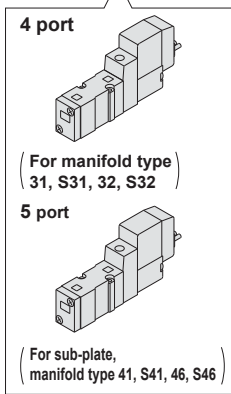

### Coil specifications

Nil	Standard
T	With power saving circuit (24, 12 VDC only)

- \* Power saving circuit is not available in the case of W□ type.

### Body option

**0:** Pilot valve individual exhaust for the pilot valve

R port P, E port

**3:** Common exhaust type for main and pilot valve

R port P, E port

### Manual override

Nil: Non-locking push type

D: Push-turn locking slotted type

E: Push-turn locking lever type

### Port size

Nil: Without sub-plate

(With gasket and screws)

M5: With M5 port sub-plate

### Electrical entry

24, 12, 6, 5, 3 VDC 100, 110, 200, 220 VAC				24, 12, 6, 5, 3 VDC	
Grommet	L plug connector	M plug connector		M8 connector	
<b>G:</b> Lead wire length 300 mm	<b>L:</b> With lead wire (Length 300 mm)	<b>M:</b> With lead wire (Length 300 mm)	<b>MN:</b> Without lead wire	<b>WO:</b> Without connector cable	
<b>H:</b> Lead wire length 600 mm	<b>LN:</b> Without lead wire	<b>LO:</b> Without connector	<b>MO:</b> Without connector	<b>W□:</b> With connector cable (Note 1)	


- \* LN, MN type: with 2 sockets.
- \* For connector cable of M8 connector, refer to back page 10.
- Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.

- Note) When placing an order for body ported solenoid valve as a single unit, mounting bolt for manifold and gasket are not attached. Order them separately, if necessary. (For details, refer to page 15.)




## Construction


### 2 position single

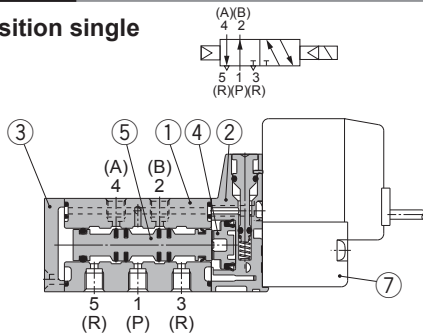

### 2 position double

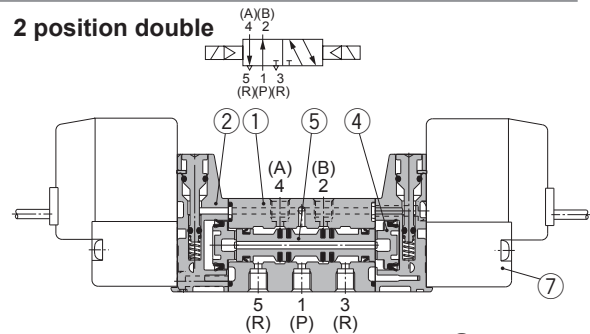

### 3 position closed center/exhaust center/pressure center

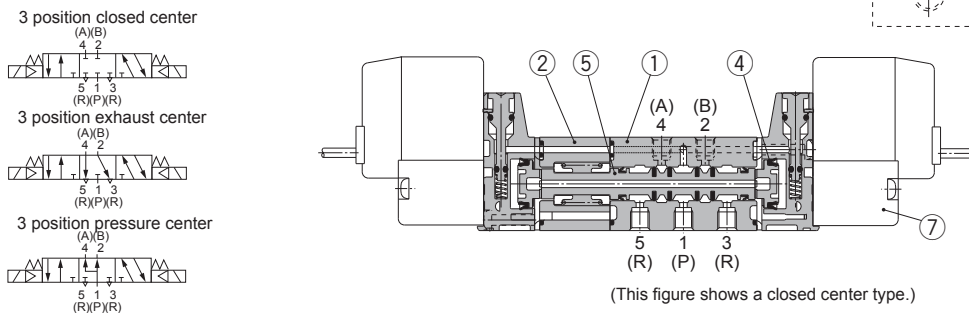

## Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	White
2	Piston plate	Resin	White
3	End cover	Resin	White
4	Piston	Resin	
5	Spool valve assembly	Aluminum, H-NBR	

## Replacement Parts

No.	Description	No.	Note
6	Sub-plate	SYJ3000-22-1	Zinc die-casted
7	Pilot valve	V111 (T) - □□□	

## How to Order Pilot Valve Assembly

V111 □ — 5 G □

### Coil specifications

Nil	Standard
T	With power saving circuit (24, 12 VDC only)

\* Power saving circuit is not available in the case of W□ type.

### Rated voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
1	100 VAC 50/60 Hz
2	200 VAC 50/60 Hz
3	110 VAC 50/60 Hz [115 VAC 50/60 Hz]
4	220 VAC 50/60 Hz [230 VAC 50/60 Hz]

\* For type W□, DC voltage is only available.

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.  
 \* For type "R" and "U", DC voltage is only available.  
 \* Power saving circuit is only available in the "Z" type.

### Electrical entry

G	Grommet, 300 mm lead wire
H	Grommet, 600 mm lead wire
L	With lead wire
LN	Without lead wire
LO	Without connector
M	With lead wire
MN	Without lead wire
MO	Without connector
WO	Without connector cable
W□	With connector cable (Note 1)

\* For connector cable of M8 connector, refer to back page 10.  
 Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.

## How to Order Connector Assembly for L/M Plug Connector

For DC : SY100-30-4A- □  
 For 100 VAC : SY100-30-1A- □  
 For 200 VAC : SY100-30-2A- □  
 For other voltages of AC : SY100-30-3A- □  
 Without lead wire : SY100-30-A

(with connector and 2 of sockets only)

### Lead wire length

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

## How to Order M8 Connector Cable

V100-49-1- □

### Cable length

1	300 mm
2	500 mm
3	1000 mm
4	2000 mm
7	5000 mm



# Series SYJ3000

## 2 Position Single



Grommet (G), (H): SYJ3120-□<sup>G</sup>□□-M3




With bracket:  
SYJ3120-□<sup>G</sup>□□-M3-F

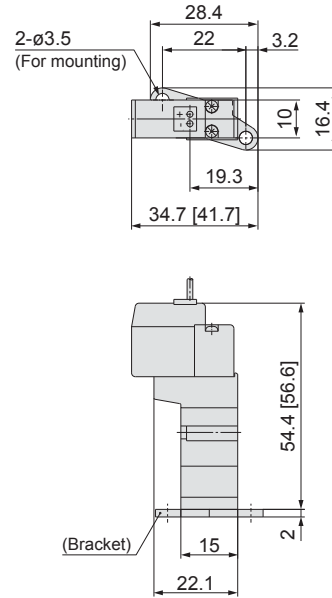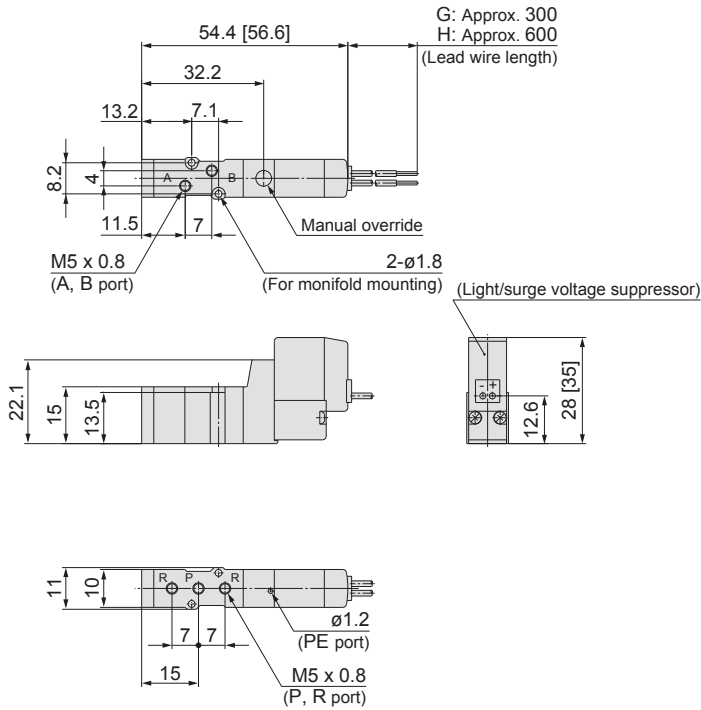

L plug connector (L):  
SYJ3120-□L□□-M3 (-F)

M plug connector (M):  
SYJ3120-□M□□-M3 (-F)

M8 connector (WO):  
SYJ3120-□WO□□-M3 (-F)

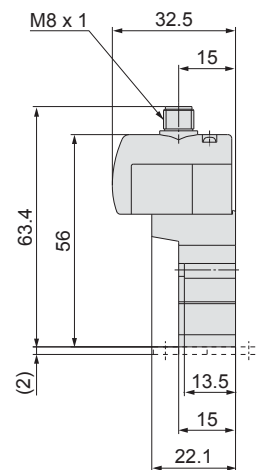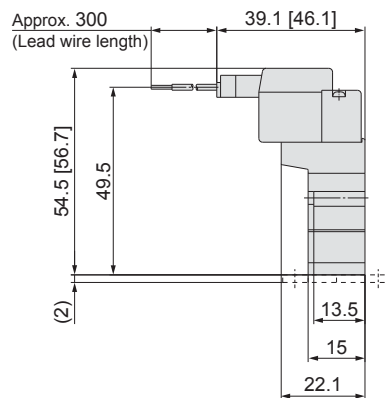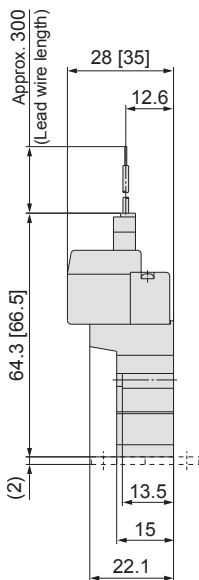


Refer to back page 11 for dimensions with connector cable.

## 2 Position Double






Grommet (G), (H): SYJ3220-□<sup>G</sup>□□-M3 (-F)

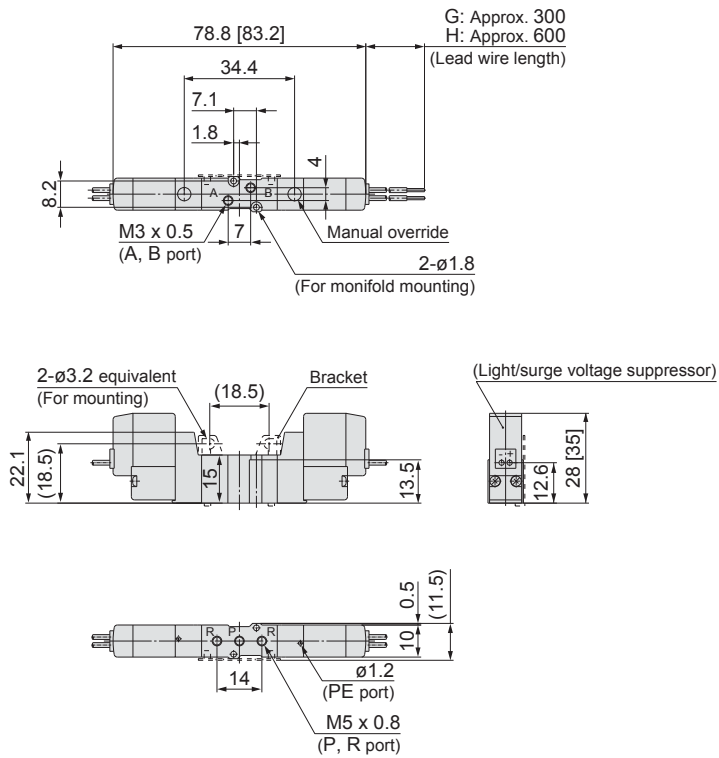

L plug connector (L):  
SYJ3220-□L□□-M3 (-F)

M plug connector (M):  
SYJ3220-□M□□-M3 (-F)

M8 connector (WO):  
SYJ3220-□WO□□-M3 (-F)

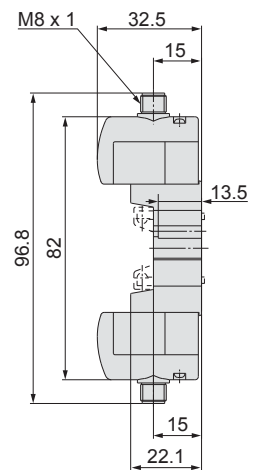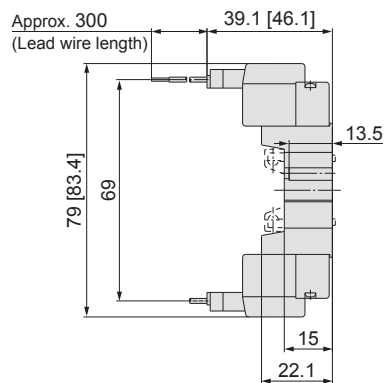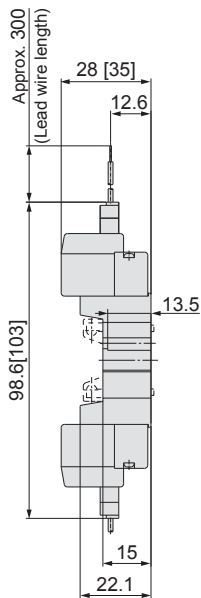


Refer to back page 11 for dimensions with connector cable.

# Series SYJ3000


## 3 Position Closed Center/Exhaust Center/Pressure Center




Grommet (G), (H): SYJ3 $\frac{3}{4}$ 20-□<sup>G</sup>□□-M3 (-F)

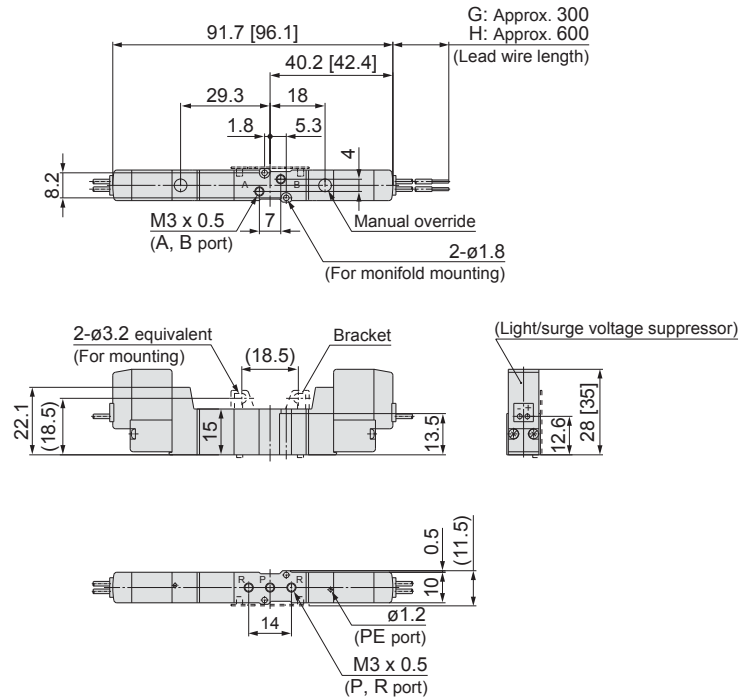


**L plug connector (L):**  
SYJ3 $\frac{3}{4}$ 20-□L□□-M3 (-F)

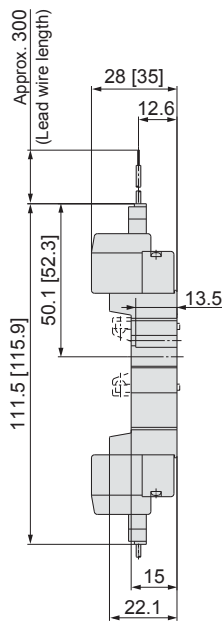

**M plug connector (M):**  
SYJ3 $\frac{3}{4}$ 20-□M□□-M3 (-F)

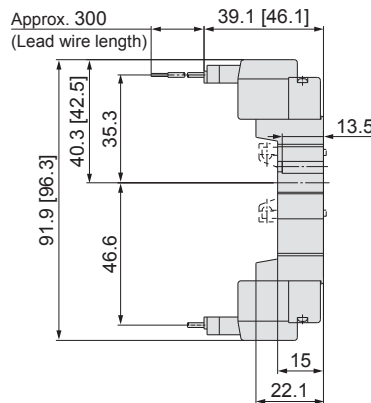

**M8 connector (WO):**  
SYJ3 $\frac{3}{4}$ 20-□WO□□-M3 (-F)

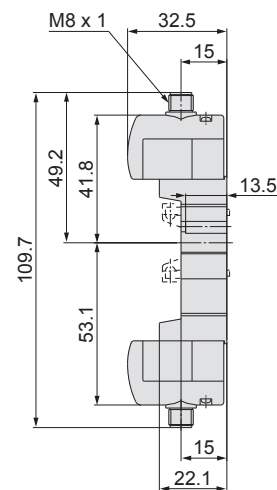


Refer to back page 11 for dimensions with connector cable.

## 2 Position Single






Grommet (G), (H): SYJ3140-□<sup>G</sup>□□-M5

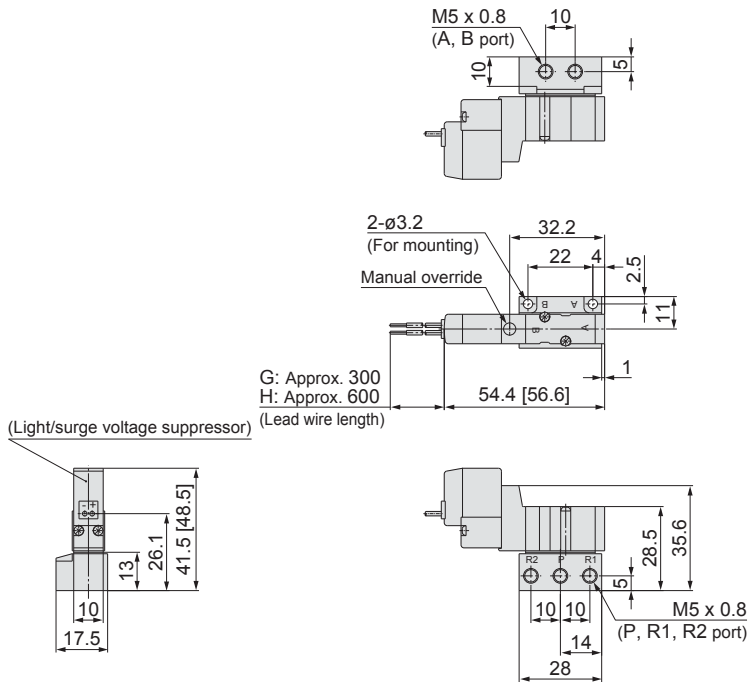

**L plug connector (L):**  
SYJ3140-□L□□-M5

**M plug connector (M):**  
SYJ3140-□M□□-M5

**M8 connector (WO):**  
SYJ3140-□WO□□-M5

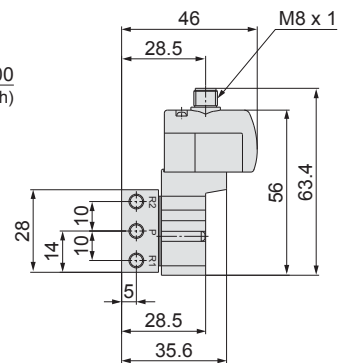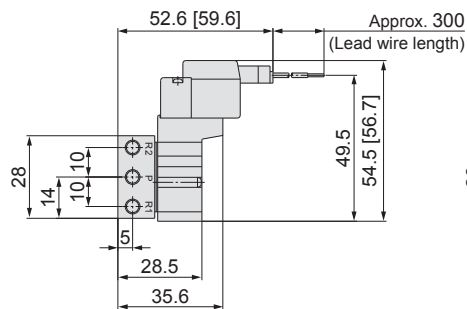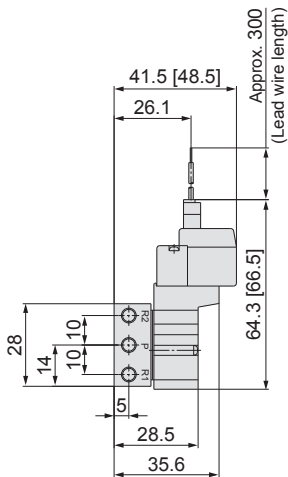


Refer to back page 11 for dimensions with connector cable.

# Series SYJ3000

## 2 Position Double






Grommet (G), (H): SYJ3240-□<sup>G</sup>□□-M5

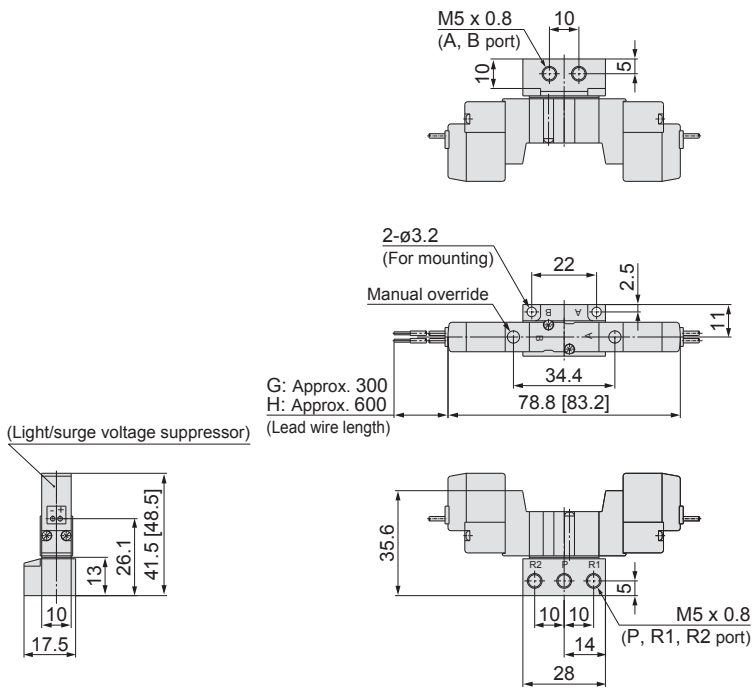

**L plug connector (L):**  
SYJ3240-□L□□-M5

**M plug connector (M):**  
SYJ3240-□M□□-M5

**M8 connector (WO):**  
SYJ3240-□WO□□-M5

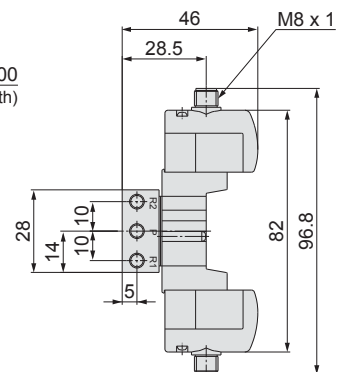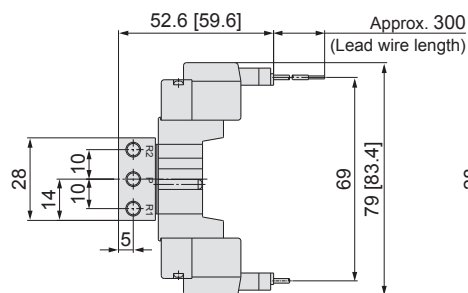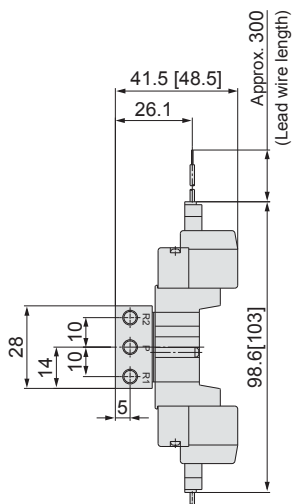


Refer to back page 11 for dimensions with connector cable.




## 3 Position Closed Center/Exhaust Center/Pressure Center




Grommet (G), (H): SYJ3<sup>3</sup>/<sub>4</sub>40-□<sup>G</sup>□□-M5

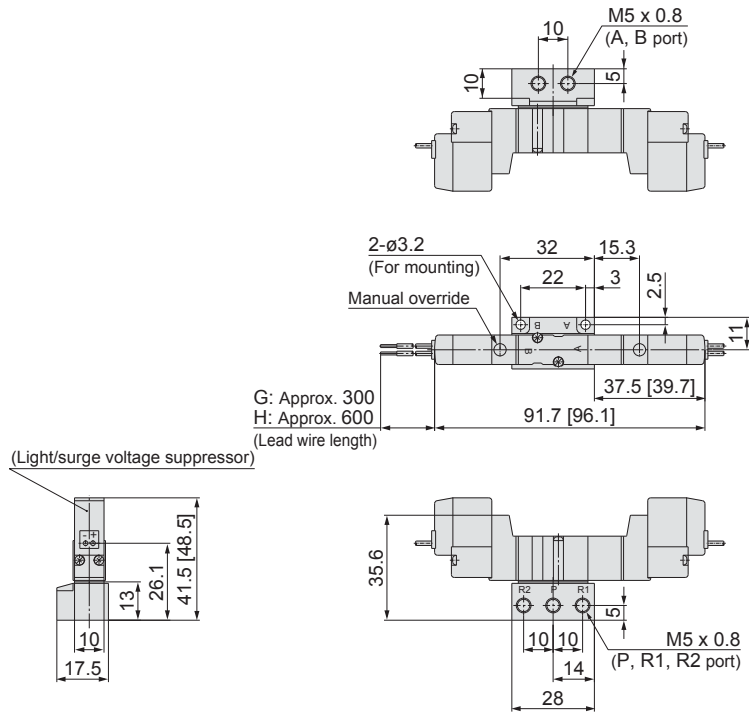


L plug connector (L):  
SYJ3<sup>3</sup>/<sub>4</sub>40-□L□□-M5

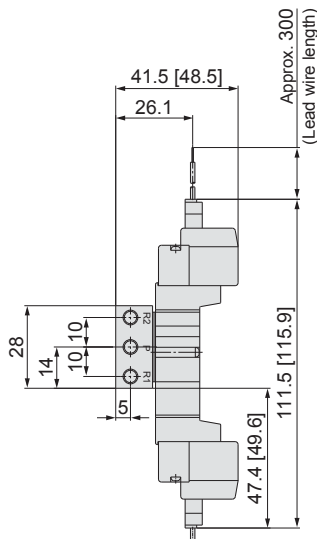

M plug connector (M):  
SYJ3<sup>3</sup>/<sub>4</sub>40-□M□□-M5

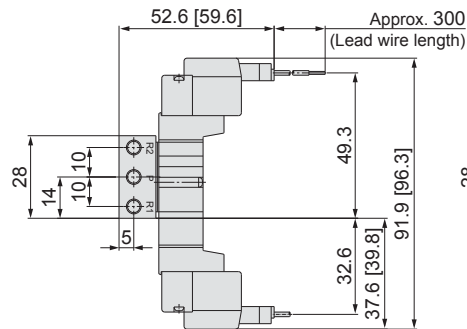

M8 connector (WO):  
SYJ3<sup>3</sup>/<sub>4</sub>40(R)-□WO□□-M5□

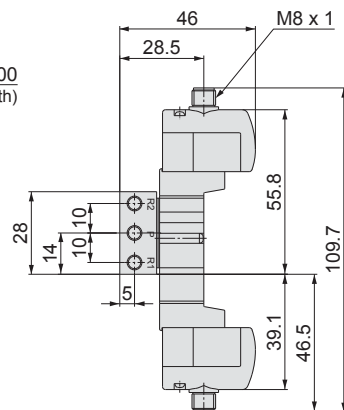


Refer to back page 11 for dimensions with connector cable.

# Series SYJ3000

# Manifold Specifications

## Manifold Standard

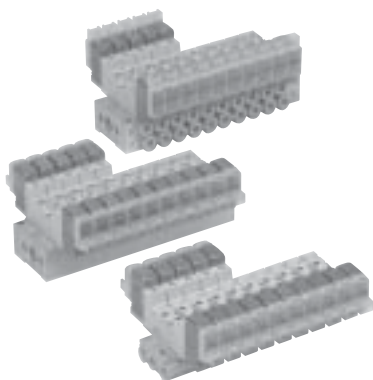

## Manifold Specifications

Model		Type 20	Type 31, S31	Type 32, S32	Type 41, S41	Type 46, S46
Manifold type		Single base/B mount				
P (SUP), R (EXH)		Common SUP/Common EXH				Common SUP Individual EXH
Valve stations		2 to 20 stations				
A, B port Porting specifications	Location	Valve	Base			
	Direction	Top	Side			
Port size	P, R port	M5 x 0.8		1/8		P: 1/8 R: M5 x 0.8
	A, B port	M3 x 0.5		M5 x 0.8, C4 (One-touch fitting for ø4)		

## Flow Characteristics

Manifold			Port size		Flow characteristics						Effective area (mm <sup>2</sup> )
					1→4/2 (P→A/B)			4/2→5/3 (A/B→R)			
			1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv	
Body ported for internal pilot	Type SSSYJ3-20	SYJ3□2□	M5 x 0.8	M3 x 0.5	—	—	—	—	—	—	0.9
	Type SSSYJ3-31 S31	SYJ3□3□	M5 x 0.8	M3 x 0.5	—	—	—	—	—	—	0.9
Base mounted for internal pilot	Type SSSYJ3-32-M5	SYJ3□3□	1/8	M5 x 0.8	0.25	0.19	0.060	0.32	0.25	0.077	—
	Type SSSYJ3-32-C4			C4	0.25	0.18	0.059	0.30	0.27	0.075	—
	Type SSSYJ3-32-M5			M5 x 0.8	0.25	0.26	0.060	0.29	0.15	0.062	—
	Type SSSYJ3-32-C4			C4	0.24	0.21	0.057	0.27	0.18	0.062	—
	Type SSSYJ3-41-M5	SYJ3□4□	1/8	M5 x 0.8	0.32	0.25	0.081	0.33	0.19	0.079	—
	Type SSSYJ3-41-C4			C4	0.32	0.28	0.079	0.35	0.24	0.084	—
	Type SSSYJ3-41-M5			M5 x 0.8	0.33	0.29	0.082	0.34	0.17	0.081	—
	Type SSSYJ3-41-C4			C4	0.32	0.27	0.079	0.34	0.24	0.084	—
	Type SSSYJ3-46-M5	SYJ3□4□	1/8	M5 x 0.8	0.20	0.25	0.048	0.10	0.12	0.024	—
	Type SSSYJ3-46-C4			C4	0.21	0.27	0.050	0.21	0.13	0.047	—
	Type SSSYJ3-46-M5			M5 x 0.8	0.20	0.25	0.048	0.19	0.16	0.024	—
	Type SSSYJ3-46-C4			C4	0.22	0.34	0.057	0.10	0.090	0.024	—



Note) Value at manifold base mounted, 2 position single operating

## How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.

Example:

- SS5YJ3-20-03 ..... 1 set (Manifold base)
- SS5YJ3-S41-03-C4 ... 1 set (Manifold base)
- \* SYJ3120-5G-M3 ... 2 sets (Valve)
- \* SYJ3140-5LZ ..... 2 sets (Valve)
- \* SYJ3000-21-1A ... 1 set (Blanking plate assembly)
- \* SYJ3000-21-2A ..... 1 set (Blanking plate assembly)


↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

## Flat Ribbon Cable Manifold

- Multiple valve wiring is simplified through the use of the flat cable connector.
- Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.

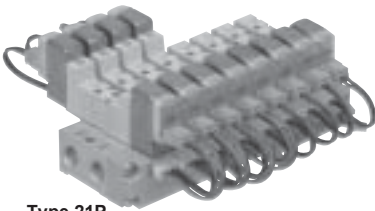

Type 21P

## Flat Ribbon Cable Manifold Specifications

Model		Type 21P	Type 32P
Manifold type		Single base/B mount	
P (SUP), R (EXH)		Common SUP, Common EXH	
Valve stations		4 to 12 stations	
A, B port Porting specifications	Location	Valve	Base
	Direction	Top	Side
Port size	P, R port	1/8	
	A, B port	M3 x 0.5	M5 x 0.8, C4 (One-touch fitting for Ø4)
Applicable flat ribbon cable connector		Socket: 26 pins MIL type with strain relief (MIL-C-83503)	
Internal wiring		In common between +COM and -COM (Z type: +COM only)	
Rated voltage		24, 12 VDC/100, 110 VAC	



Note) The withstand voltage specification for the wiring unit section conforms to JIS C 0704, Grade 1 or its equivalent.

## Flow Characteristics

Manifold			Port size		Flow characteristics						Effective area (mm <sup>2</sup> )
					1→4/2 (P→A/B)			4/2→5/3 (A/B→R)			
Body ported for internal pilot	Type	SYJ□□□	1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv	
			Type SS5YJ3-21P	SYJ□□23	1/8	M3 x 0.5	—	—	—	—	
Base mounted for internal pilot	Type	SYJ□□33	1/8	M5 x 0.8	0.25	0.19	0.060	0.32	0.25	0.077	—
				C4	0.25	0.18	0.059	0.3	0.27	0.075	—



Note) Value at manifold base mounted, 2 position single operating


## How to Order Manifold

- SS5YJ3-32P-07-C4 ..... 1 pc. (Manifold base)
- SYJ3000-21-4A ..... 1 pc. (Blanking plate assembly)
- \* SYJ3133-5LOU ..... 3 pcs. (Valve)
- \* SY3000-37-28A ..... 3 pcs. (Connector assembly)
- \* SYJ3233-5LOU ..... 3 pcs. (Valve)
- \* SY3000-37-29A ..... 3 pcs. (Connector assembly)

↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

## How to Order Valve

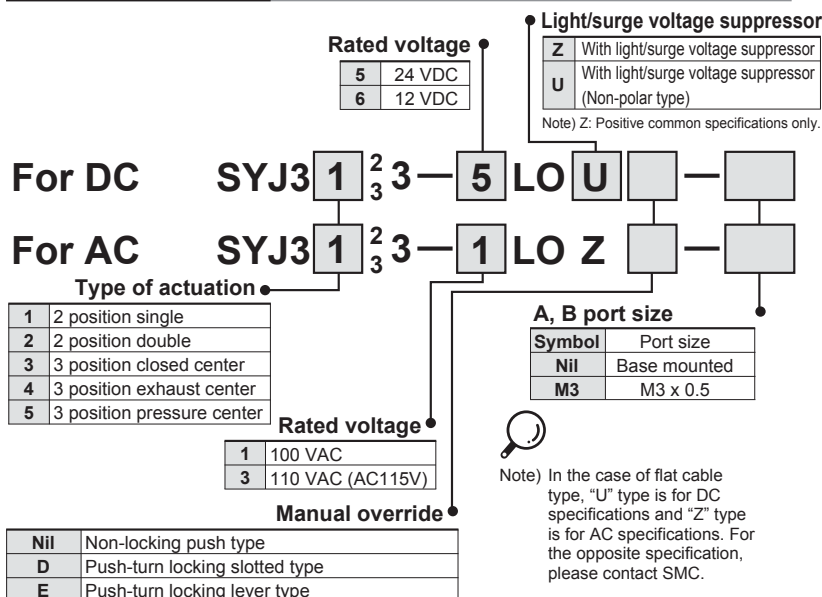

## How to Order Connector Assembly

### For 12, 24 VDC

Single solenoid	SY3000-37-28A
Double solenoid, 3 position type	SY3000-37-29A

### For 100 VAC

Single solenoid	SY3000-37-46A
Double solenoid, 3 position type	SY3000-37-47A

### For 110 VAC (115 VAC)

Single solenoid	SY3000-37-54A
Double solenoid, 3 position type	SY3000-37-55A


# Series SYJ3000

## Common SUP/Common EXH



Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 20 (5 Port/Body ported)

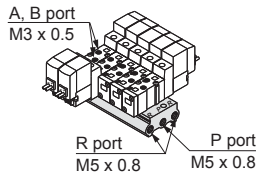

How to Order

**SS5YJ3-20-05**

Number of stations

02	2 stations
:	:
20	20 stations

Applicable solenoid valve


SYJ□20-□□□□-M3  
SYJ□23-□□□□-M3

Applicable blanking plate assembly

SYJ3000-21-1A

### Type 31 (4 Port/Base mounted)

Type 31 Type S31 (Single solenoid coil is on same side as the A,B port.)

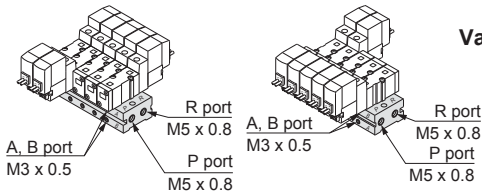

How to Order

**SS5YJ3-31-05-M3**

Valve mounting direction

Nil	Single solenoid coil is on opposite side as the A,B port.
S	Single solenoid coil is on same side as the A,B port.

Stations

02	2 stations
:	:
20	20 stations

Applicable solenoid valve


SYJ□30-□□□□  
SYJ□33-□□□□

Applicable blanking plate assembly

SYJ3000-21-2A

### Type 32 (4 Port/Base mounted)

Type 32 Type S32 (Single solenoid coil is on same side as the A,B port.)

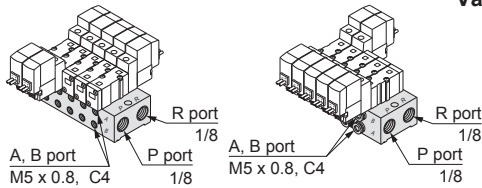

How to Order

**SS5YJ3-32-05-M5**

Valve mounting direction

Nil	Single solenoid coil is on opposite side as the A,B port.
S	Single solenoid coil is on same side as the A,B port.

Stations

02	2 stations
:	:
20	20 stations

P, R port thread type


Nil	Rc
F	G
N	NPT
T	NPTF

A, B port size

M5	M5 x 0.8
C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"

### Type 41 (5 Port/Base mounted)

Type 41 Type S41 (Single solenoid coil is on same side as the A,B port.)

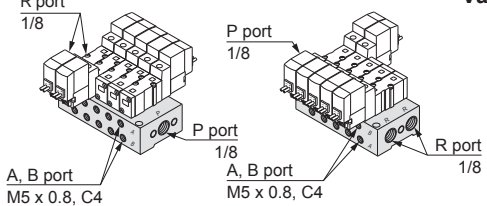

How to Order

**SS5YJ3-41-05-C4**

Valve mounting direction

Nil	Single solenoid coil is on opposite side as the A,B port.
S	Single solenoid coil is on same side as the A,B port.

Stations

02	2 stations
:	:
20	20 stations

Applicable solenoid valve

SYJ□40-□□□□  
SYJ□43-□□□□

Applicable blanking plate assembly

SYJ3000-21-2A

P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

A, B port size

M5	M5 x 0.8
C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"


## Common SUP/Individual EXH



Note) For more than 10 stations, supply air to both sides of P port.

### Type 46 (5 Port/Base mounted)

Type 46 Type S46 (Single solenoid coil is on same side as the A,B port.)

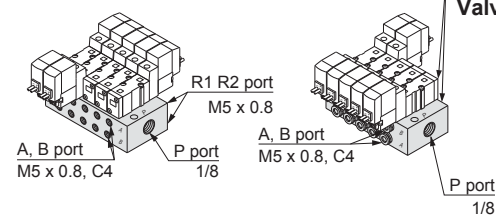

How to Order

**SS5YJ3-46-05-M5**

Valve mounting direction

Nil	Single solenoid coil is on opposite side as the A,B port.
S	Single solenoid coil is on same side as the A,B port.

Stations

02	2 stations
:	:
20	20 stations

Applicable solenoid valve

SYJ□40-□□□□  
SYJ□43-□□□□

Applicable blanking plate assembly

SYJ3000-21-2A

P port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

A, B port size

M5	M5 x 0.8
C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"


## Flat Ribbon Cable Manifold

### Common SUP/Common EXH



Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

#### Type 21P

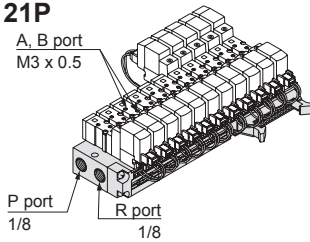

#### How to Order

**SS5YJ3-21P-07** [ ]

Stations	
04	4 stations
:	:
12	12 stations


P, R port thread type	
Nil	Rc
00F	G
00N	NPT
00T	NPTF

Applicable solenoid valve  
Refer to page 12.

Applicable connector assembly  
Refer to page 12.

Applicable blanking plate assembly  
SYJ3000-21-3A  
(With dust cap)

#### Type 32P

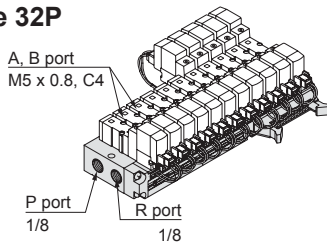

#### How to Order

**SS5YJ3-32P-07-C4** [ ]

Stations	
04	4 stations
:	:
12	12 stations

A, B port size	
M5	M5 x 0.8
C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"

P, R port thread type	
Nil	Rc
F	G
N	NPT
T	NPTF

Applicable solenoid valve  
Refer to page 12.

Applicable connector assembly  
Refer to page 12.

Applicable blanking plate assembly  
SYJ3000-21-3A  
(With dust cap)

## Mixed Installation of the SYJ300 and the SYJ3000 Valves on the Same Manifold

Series SYJ300 valves can be mounted on the manifolds for Series SYJ3000.

#### ① SS5YJ3-20, SS5YJ3-21P

The 3 port valve can be used by simply sealing off the unused "R" port with rubber plug SYJ3000-33-1.

Applicable solenoid valves:

Series SYJ312, SYJ312M, SYJ322, SYJ322M

#### ② SS5YJ3-31, -S31, SS5YJ3-32, -S32, SS5YJ3-46, -S46, SS5YJ3-32P

The 3 port valve can be used without modification. The A port of the valve will flow out of the B port of the manifold.

Applicable solenoid valves:


Series SYJ314, SYJ314M, SYJ324, SYJ324M

#### ③ SS5YJ3-41, -S41

The 3 port valve can be used on the 4 port manifold by simply sealing off the unused "R" port with rubber plug SYJ3000-33-1. The A port of the valve will flow out of the B port of the manifold.

Applicable solenoid valves:

Series SYJ314, SYJ314M, SYJ324, SYJ324M

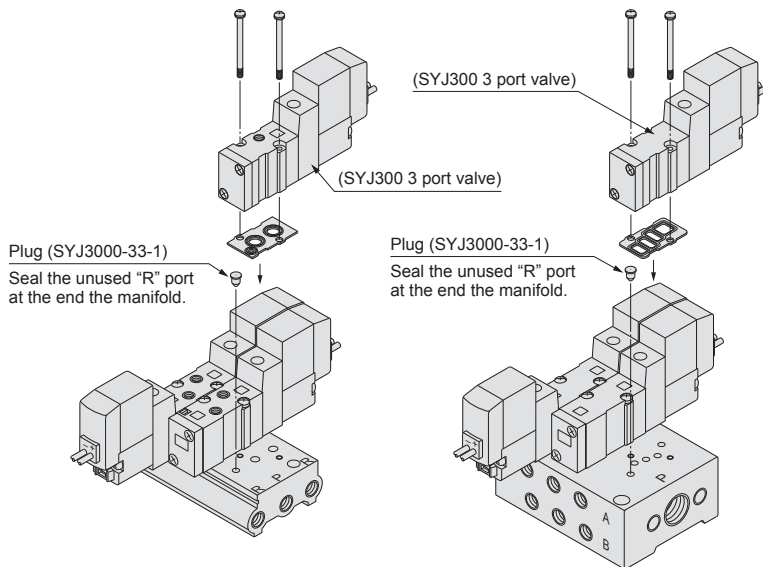

Type SS5YJ3-20

Type SS5YJ3-41

A port of the 3 port valve flows out of the manifold B port.

### ⚠ Caution

#### Mounting screw tightening torques


M1.7: 0.12 N·m

Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.

# Series SYJ3000


## Combinations of Solenoid Valve, Manifold Gasket and Manifold Base

**5 port body ported**  
(Type SYJ3□2 $\frac{1}{2}$ )

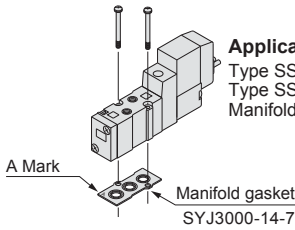


**Applicable manifold base**  
Type SS5YJ3-20  
Type SS5YJ3-21P  
Manifold base

**4 port base mounted**  
(Type SYJ3□3 $\frac{1}{2}$ )

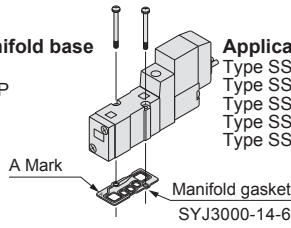

**Applicable manifold base**  
Type SS5YJ3-31  
Type SS5YJ3-S31  
Type SS5YJ3-32  
Type SS5YJ3-S32  
Type SS5YJ3-32P  
Manifold base

**5 port base mounted**  
(Type SYJ3□4 $\frac{1}{2}$ )

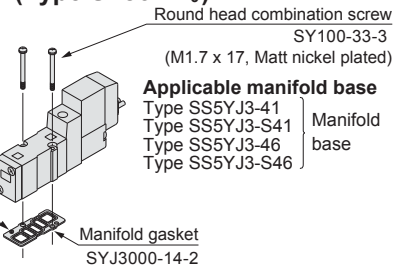


**Applicable manifold base**  
Type SS5YJ3-41  
Type SS5YJ3-S41  
Type SS5YJ3-46  
Type SS5YJ3-S46  
Manifold base

Note) Make sure to align the manifold gasket with the groove of the valve body.


## Combination of Blanking Plate Assembly and Manifold Base

**Blanking plate assembly**  
SYJ3000-21-1A

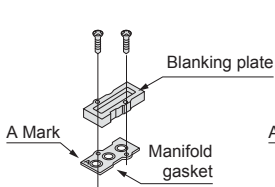

**Applicable manifold base**  
Type SS5YJ3-20  
Manifold base

**Blanking plate assembly**  
SYJ3000-21-2A

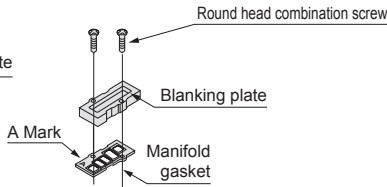

**Applicable manifold base**  
Sub-plate  
Type SS5YJ3-41  
Type SS5YJ3-S41  
Type SS5YJ3-46  
Type SS5YJ3-S46  
Type SS5YJ3-31  
Type SS5YJ3-S31  
Type SS5YJ3-32  
Type SS5YJ3-S32  
Manifold base


Note) Manifold gasket "SYJ3000-14-2" can be used with the following manifold bases.

Manifold base of 


Type	SS5YJ3-31
Type	-S31
Type	-32
Type	-S32

## Difference between SYJ3□3 $\frac{1}{2}$ and SYJ3□4 $\frac{1}{2}$


**SYJ3□30, 3□33**  
(4 port)

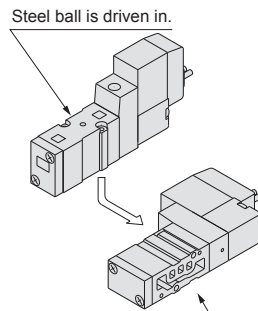

**SYJ3□40, 3□43**  
(5 port)

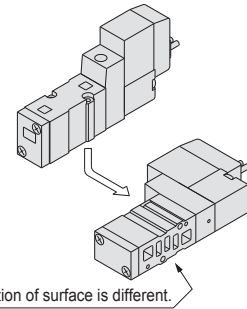


**Blanking plate assembly**  
SYJ3000-21-4A

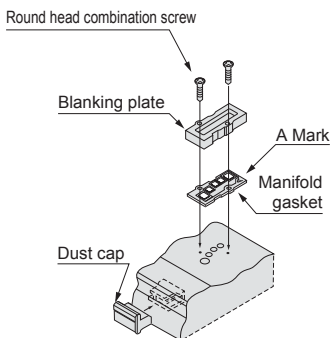

**Applicable manifold base**  
Type SS5YJ3-32P  
Manifold base

**Blanking plate assembly**  
SYJ3000-21-3A

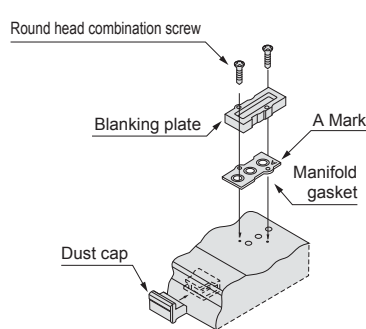

**Applicable manifold base**  
Type SS5YJ3-21P  
Manifold base

### ⚠ Caution

**Mounting screw tightening torques**


**M1.7: 0.12 N·m**

**Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.**


## Type 20 Manifold: Top Ported/SS5YJ3-20- Stations




### Grommet (G)

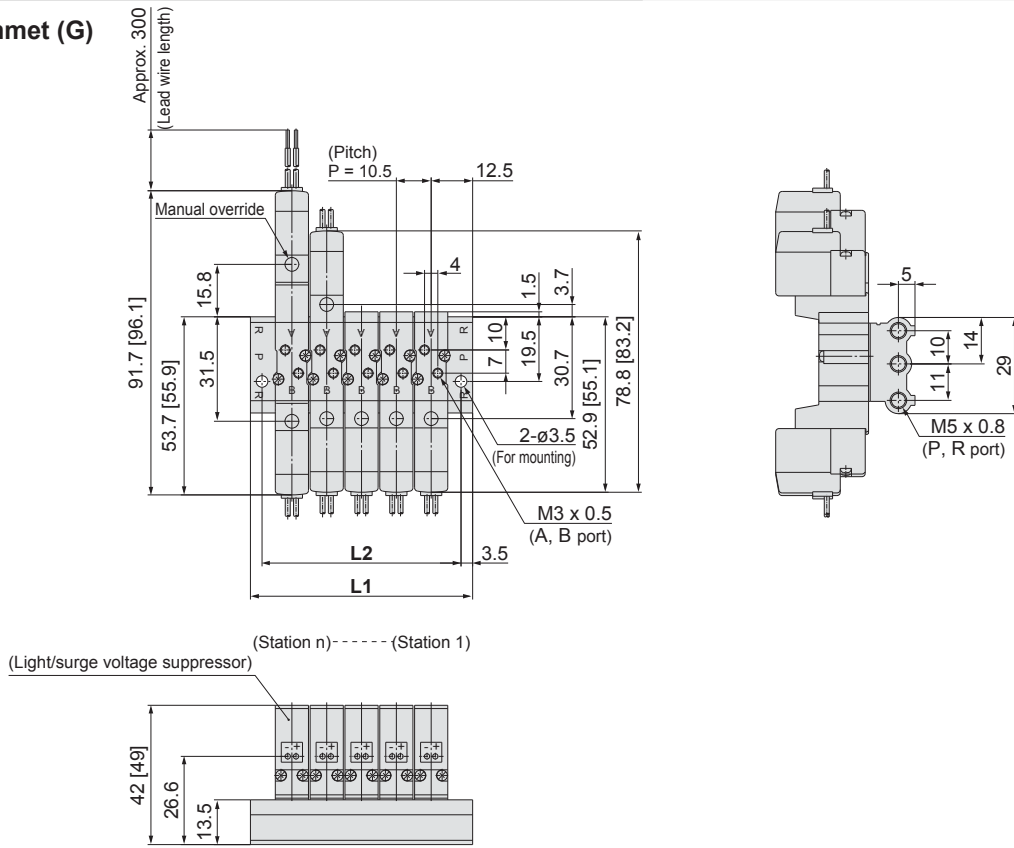


### L plug connector (L)

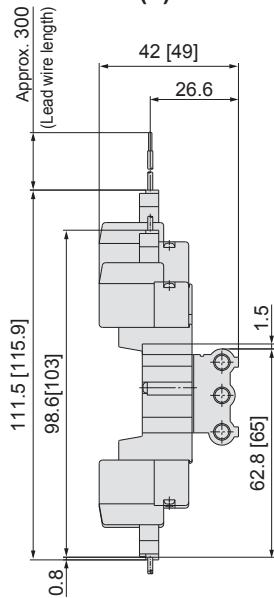

### M plug connector (M)

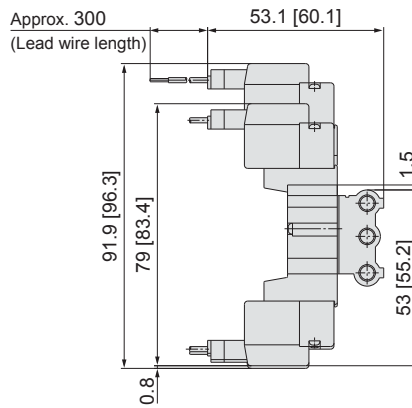

### M8 connector (WO)

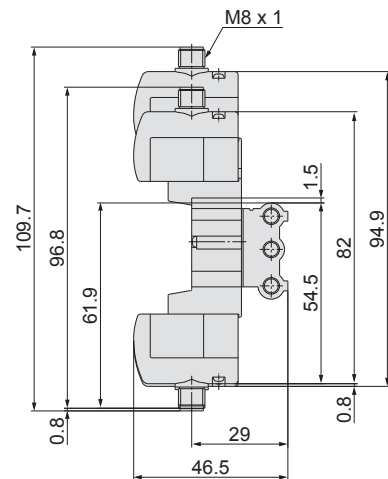

Refer to back page 11 for dimensions with connector cable.


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193	203.5	214	224.5
L2	28.5	39	49.5	60	70.5	81	91.5	102	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5

# Series SYJ3000

## Type 31 Manifold: Side Ported/SS5YJ3-31- Stations -M3






### Grommet (G)

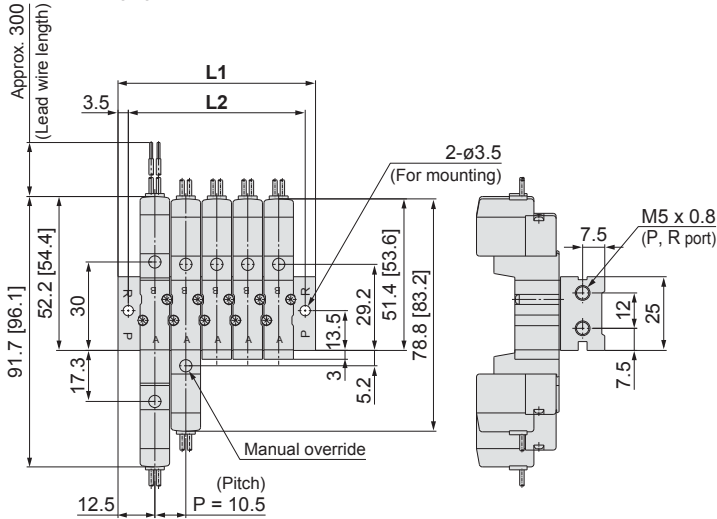


### Type S31 Manifold: Side Ported SS5YJ3-S31- Stations -M3


(Single solenoid coil is on same side as the A,B port.)

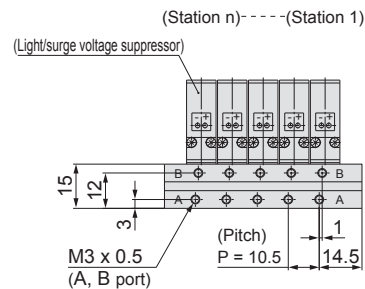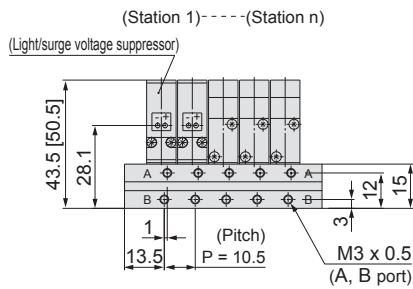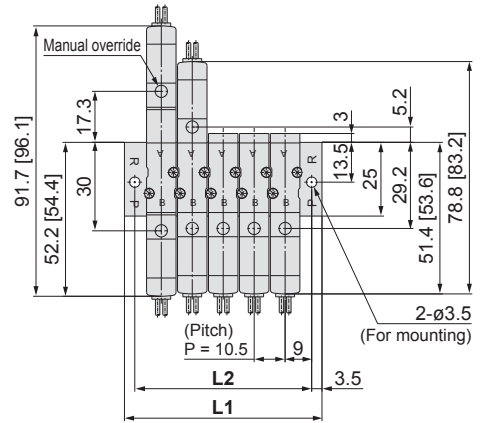


### L plug connector (L)

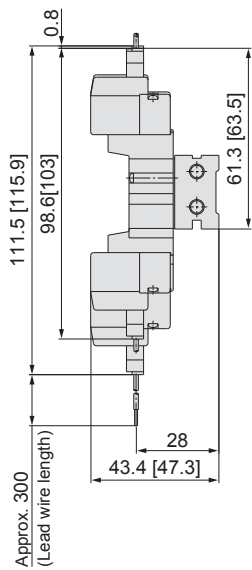

### M plug connector (M)

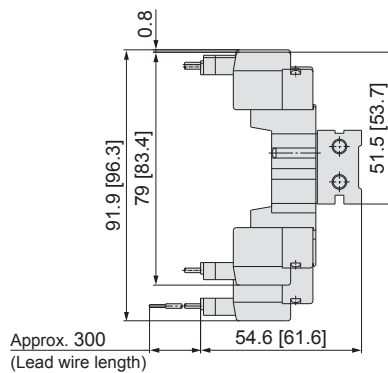

### M8 connector (WO)

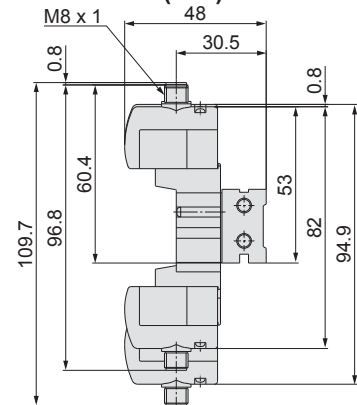

Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193	203.5	214	224.5
L2	28.5	39	49.5	60	70.5	81	91.5	102	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5




# Series SYJ3000


## Type S2 Manifold: Side Ported/SS5YJ3-32- Stations -M5, C4 N3




### Grommet (G) For M5

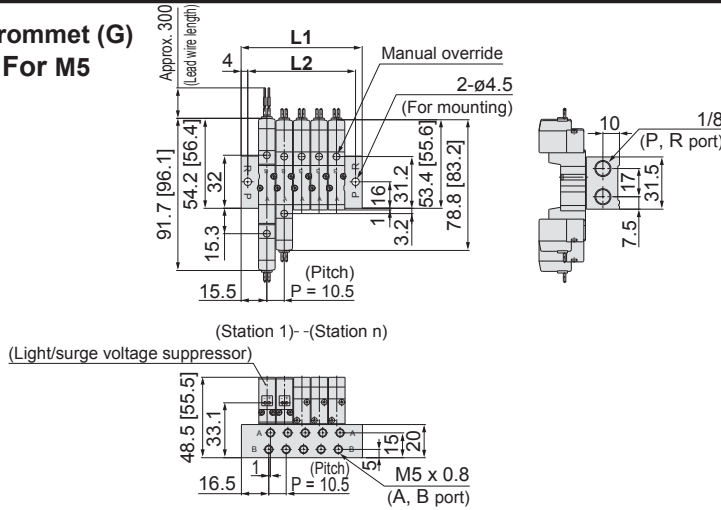


### For C4 N3 (Built-in one-touch fitting)

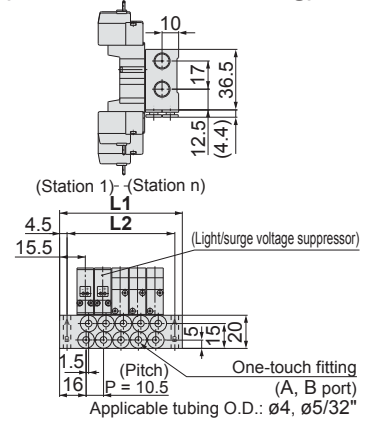


### L plug connector (L)

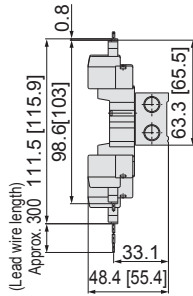

### M plug connector (M)

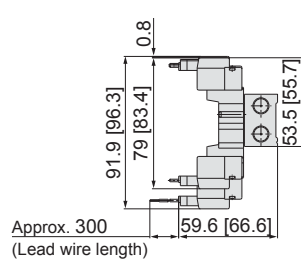


### M8 connector (W0)

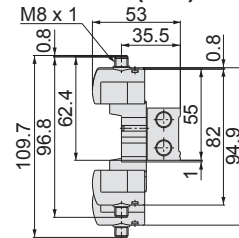


Refer to back page 11 for dimensions with connector cable.

## Type S32 Manifold: Side Ported (Single solenoid coil is on same side as the A,B port) /SS5YJ3-S32- Stations -M5, C4 N3

### For M5

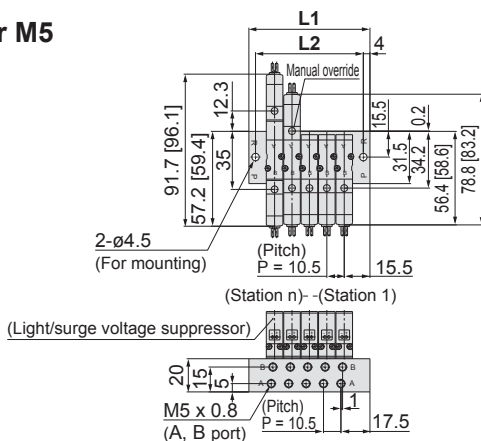

### For C4 N3 (Built-in one-touch fitting)

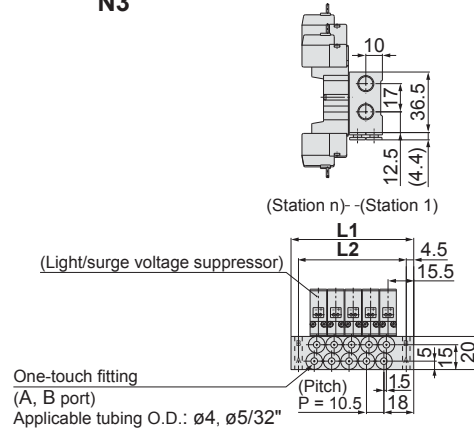

### SS5YJ3-32, S32- Stations -M5

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	41.5	52	62.5	73	83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5
L2	33.5	44	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212	222.5

### SS5YJ3-32, S32- Stations -C4


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	42.5	53	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5
L2	33.5	44	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212	222.5

# Series SYJ3000


## Type 41 Manifold: Side Ported/SS5YJ3-41- Stations -M5, C4 N3




### Grommet (G) For M5

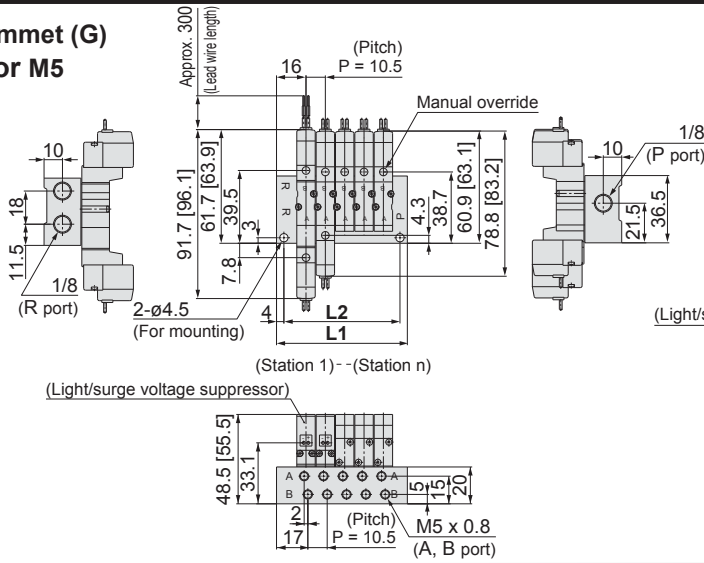


### For C4 N3 (Built-in one-touch fitting)

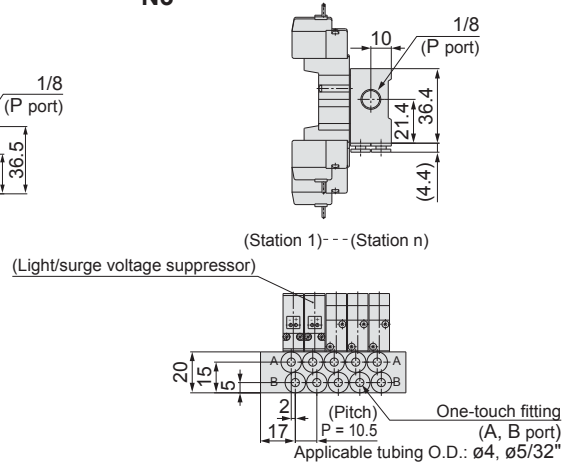


### L plug connector (L)

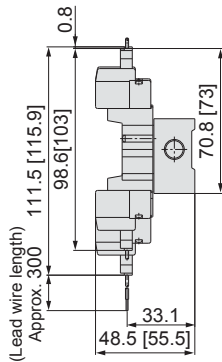

### M plug connector (M)

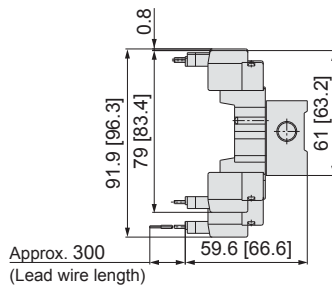


### M8 connector (WO)

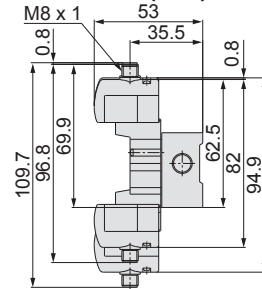


Refer to back page 11 for dimensions with connector cable.

## Type S41 Manifold: Side Ported (Single solenoid coil is on same side as the A,B port) /SS5YJ3-S41- Stations -M5, C4 N3

### For M5

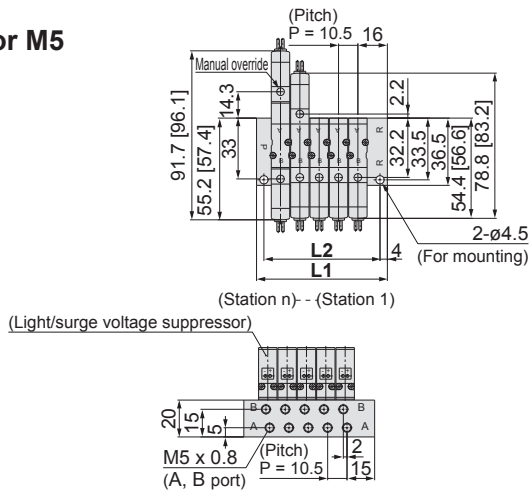

### For C4 N3 (Built-in one-touch fitting)

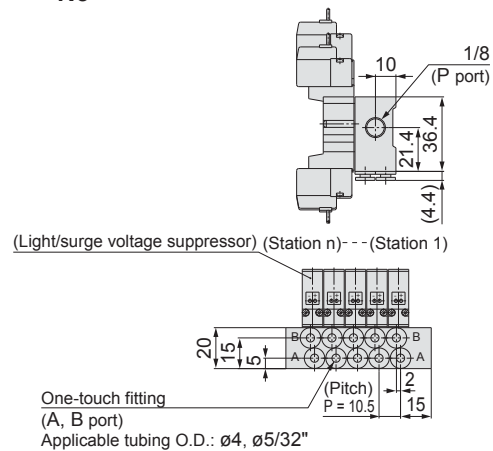


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	39.5	50	60.5	71	81.5	92.1	102.5	113	123.5	134	144.5	155	165.5	176	186.5	197	207.5	218	228.5
L2	31.5	42	52.5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5


## Type 46 Manifold: Side Ported/SS5YJ3-46- Stations -M5, C4 N3




### Grommet (G) For M5

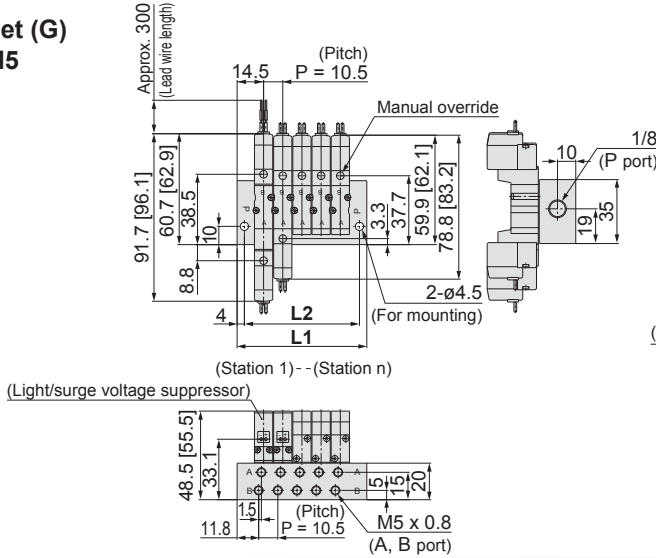


### For C4 N3 (Built-in one-touch fitting)

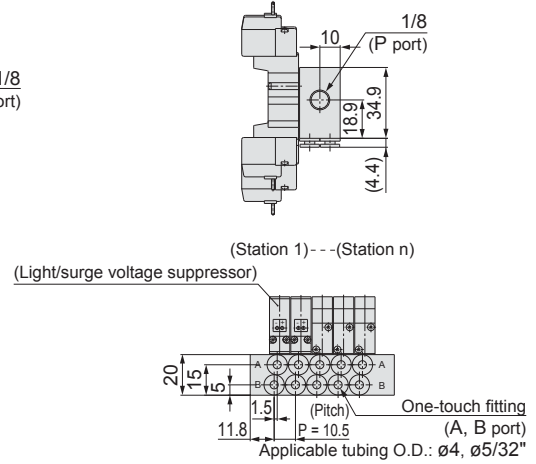


### L plug connector (L)

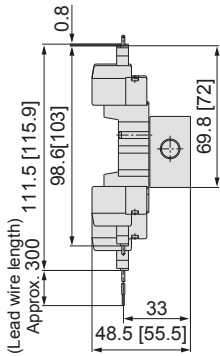

### M plug connector (M)

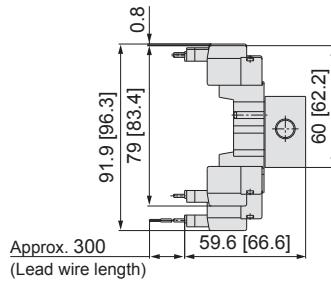


### M8 connector (WO)

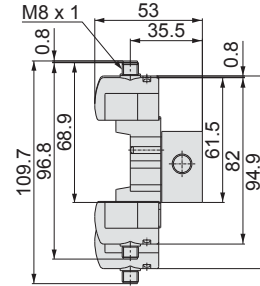


Refer to back page 11 for dimensions with connector cable.

## Type S46 Manifold: Side Ported (Single solenoid coil is on same side as the A, B port.) /SS5YJ3-S46- Stations -M5, C4 N3

### For M5

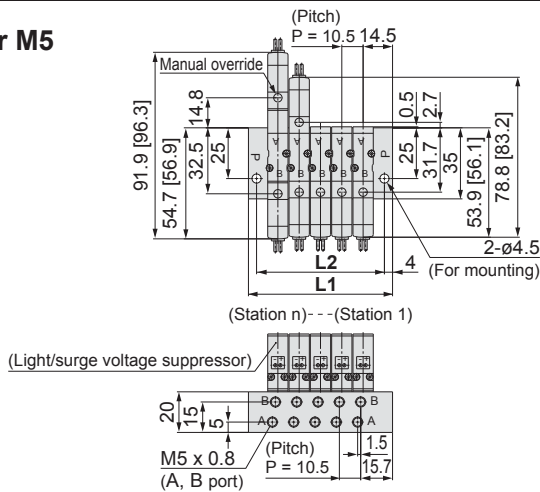

### For C4 N3 (Built-in one-touch fitting)

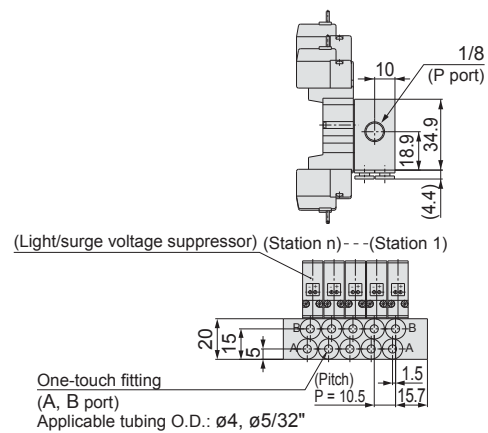


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	39.5	50	60.5	71	81.5	92.1	102.5	113	123.5	134	144.5	155	165.5	176	186.5	197	207.5	218	228.5
L2	31.5	42	52.5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5

# Series SYJ3000

## Flat Ribbon Cable Manifold




### SS5YJ3-21P- Stations -00

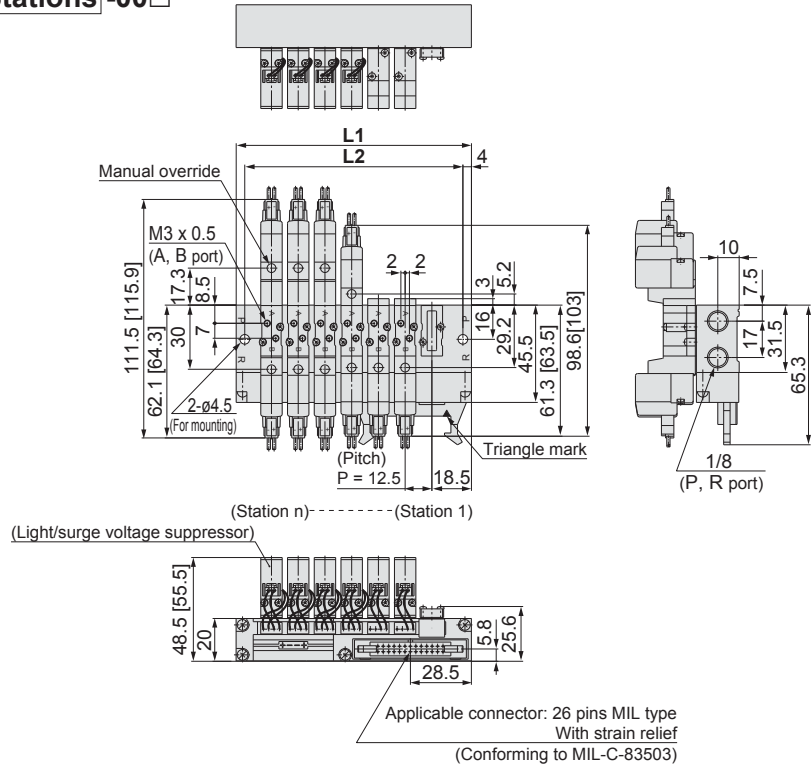

### SS5YJ3-32P- Stations -M5, C4 N3

### For C4 N3 (Built-in one-touch fitting)

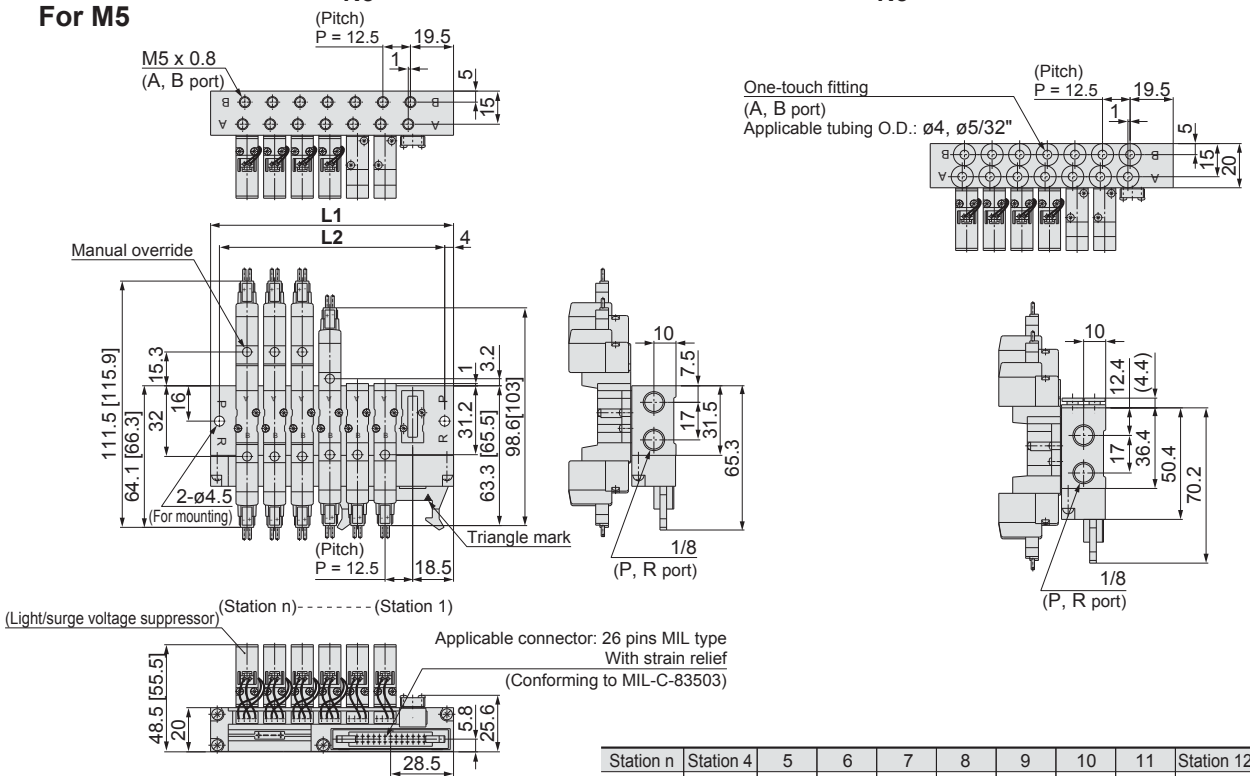

Station n	Station 4	5	6	7	8	9	10	11	Station 12
L1	72.5	85	97.5	110	122.5	135	147.5	160	172.5
L2	64.5	77	89.5	102	114.5	127	139.5	152	164.5





## Flow Characteristics/Weight


Valve model	Type of actuation	Port size		Flow characteristics <sup>Note 1)</sup>						Weight (g) <sup>Note 2, 3)</sup>					
		1, 5, 3 (P, EA, EB)	4, 2 (A, B)	1→4/2 (P→A/B)			4/2→5/3 (A/B→EA/EB)			Grommet	L/M plug connector	DIN terminal	M8 connector		
				C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv						
Body ported	2 position	Single Double	M5 x 0.8	M5 x 0.8	0.47	0.41	0.13	0.47	0.41	0.13	46	47	68	51	
					64	66	108	74							
	3 position	Closed center Exhaust center	M5 x 0.8	M5 x 0.8	0.49	0.44	0.13	0.44	0.40	0.12	75	77	119	85	
					0.46	0.37	0.12	0.47 [0.39]	0.43 [0.35]	0.13 [0.10]					
		Pressure center	0.49 [0.39]	0.51 [0.38]	0.14 [0.10]	0.45	0.42	0.12							
		0.57 [0.41]	0.4 [0.37]	0.15 [0.10]	0.41	0.37	0.10								
	2 position	Single Double	M5 x 0.8	C4 (One-touch fitting for ø4)	0.69	0.39	0.18	0.44	0.39	0.12	53	54	75	58	
					71	73	115	81							
		3 position	Closed center Exhaust center	M5 x 0.8	C4 (One-touch fitting for ø4)	0.69	0.40	0.19	0.43	0.40	0.12	82	84	126	72
						0.56	0.40	0.15	0.41 [0.41]	0.37 [0.37]	0.10 [0.11]				
	Pressure center	0.57 [0.41]	0.4 [0.37]	0.15 [0.10]	0.41	0.37	0.10								
	SYJ5□20-□-C6	2 position	Single Double	M5 x 0.8	C6 (One-touch fitting for ø6)	0.70	0.36	0.19	0.47	0.40	0.12	53	54	75	58
71						73	115	81							
3 position		Closed center Exhaust center	M5 x 0.8	C6 (One-touch fitting for ø6)	0.72	0.37	0.19	0.44	0.34	0.12	82	84	126	92	
					0.67	0.54	0.19	0.41 [0.41]	0.38 [0.38]	0.11 [0.11]					
Pressure center		0.82 [0.44]	0.41 [0.39]	0.23 [0.12]	0.41	0.36	0.11								
Base mounted		2 position	Single Double	1/8	1/8	0.79	0.21	0.19	0.83	0.32	0.21	80 (49)	81 (47)	102 (68)	51
	98 (64)					100 (66)	142 (108)	74							
	3 position	Closed center Exhaust center	1/8	1/8	0.80	0.28	0.18	0.86	0.34	0.20	109 (75)	111 (77)	153 (119)	85	
					0.71	0.26	0.18	1.1 [0.60]	0.24 [0.44]	0.26 [0.18]					
	Pressure center	0.99 [0.47]	0.29 [0.38]	0.24 [0.12]	0.72	0.38	0.18								

- Note 1) [ ]: denotes the normal position. Exhaust center: 4/2 → 5/3, Pressure center: 1 → 4/2  
 Note 2) ( ): Without sub-plate.  
 Note 3) For DC voltages. For AC voltages add 3 g to the weight of the single solenoid and 6 g to the weight of the double solenoid and 3 position types.


## Cylinder Speed Chart

Use as a guide for selection.  
 Please confirm the actual conditions with SMC  
 Sizing Program.

### Body Ported

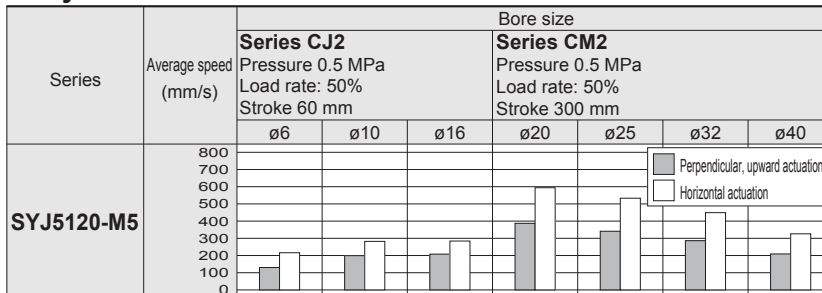

### Base Mounted

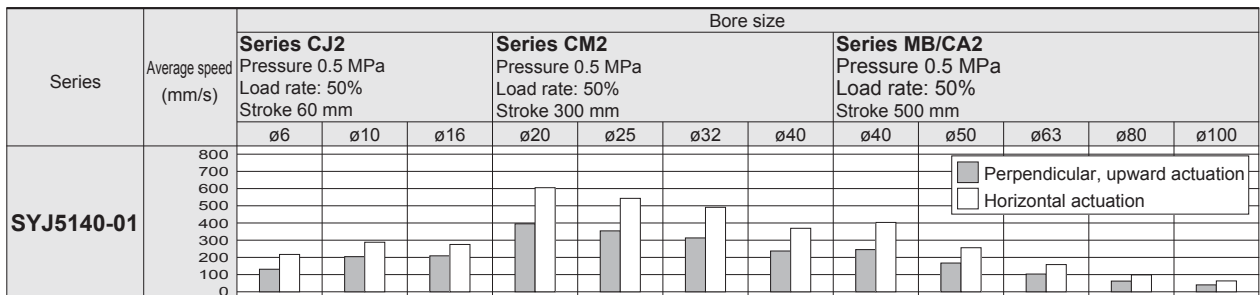

- \* Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.  
 \* Average speed of cylinder is obtained by dividing the full stroke time by the stroke.  
 \* Load factor: ( Load weight x 9.8 ) / Theoretical force x 100%

## Conditions

	Body ported	Series CJ2	Series CM2	Series MB/CA2
	SYJ5120-M5	Tubing bore x Length Speed controller Silencer	ø4 x 1 m AS1301F-04 AN120-M5	ø6 x 1 m AS3301F-06 AN110-01

	Base mounted	Series CJ2	Series CM2	Series MB/CA2
	SYJ5140-01	Tubing bore x Length Speed controller Silencer	ø4 x 1 m AS2301F-04 AN101-01	ø6 x 1 m AS3001F-06 AN101-01

# Series SYJ5000

## How to Order

### Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

### Light/surge voltage suppressor Electrical entry for G, H, L, M, W

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

- \* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.
- \* For type "R" and "U", DC voltage is only available.
- \* Power saving circuit is only available in the "Z" type.

### Electrical entry for D

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor (Non-polar type)
Z	With light/surge voltage suppressor (Non-polar type)

- \* DOZ is not available.
- \* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

### Rated voltage

DC		AC (50/60 Hz)	
5	24 VDC	1	100 VAC
6	12 VDC	2	200 VAC
V	6 VDC	3	110 VAC [115 VAC]
S	5 VDC	4	220 VAC [230 VAC]
R	3 VDC		

- \* DC specifications of type D and DO is only available with 12 and 24 VDC.


- \* For type W□, DC voltage is only available.

### A, B port size


M5	M5 x 0.8
C4	One-touch fitting for Ø4
C6	One-touch fitting for Ø6
N3	One-touch fitting for Ø5/32"
N7	One-touch fitting for Ø1/4"

### Bracket

Nil: Without bracket  
F: With bracket



Note) The mounting bracket is supplied unattached.

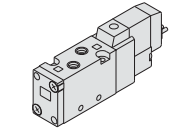


(For manifold type 20)

### Body ported

SYJ5 1 2 0 □ 5 L □ □ M5 □

### Base mounted


SYJ5 2 4 0 □ 5 L □ □ □ □

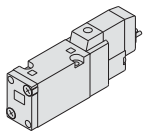

(For sub-plate, manifold type) 40, 41, 42, 43


### Body option

0: Pilot valve individual exhaust for the pilot valve



R port P, E port

3: Common exhaust type for main and pilot valve



R port P, E port


### Coil specifications

Nil	Standard
T	With power saving circuit <24 V, 12 VDC only>


- \* Power saving circuit is not available in the case of D, DO or W□ type.

### Manual override


Nil: Non-locking push type



D: Push-turn locking slotted type



E: Push-turn locking lever type




### Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


### Port size

Nil: Without sub-plate



(With gasket and screws)

01: 1/8 With sub-plate

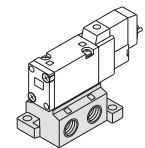

### Electrical entry

24, 12, 6, 5, 3 VDC 100, 110, 200, 220 VAC				24, 12 VDC 100, 110, 200, 220 VAC		24, 12, 6, 5, 3 VDC	
Grommet	L plug connector	M plug connector		DIN terminal	M8 connector		
G: Lead wire length 300 mm 	L: With lead wire (Length 300 mm) 	M: With lead wire 	MN: Without lead wire 	D: With connector 	WO: Without connector cable 		
H: Lead wire length 600 mm 	LN: Without lead wire 	LO: Without connector 	MO: Without connector 	DO: Without connector 	W□: With connector cable Note 1) 		


- \* LN, MN type: with 2 sockets.
- \* DIN terminal type "Y" which conforms to EN-175301-803C (former DIN43650C) is also available. For details, refer to page 80.
- \* For connector cable of M8 connector, refer to back page 10.

Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.




## Construction

### 2 position single

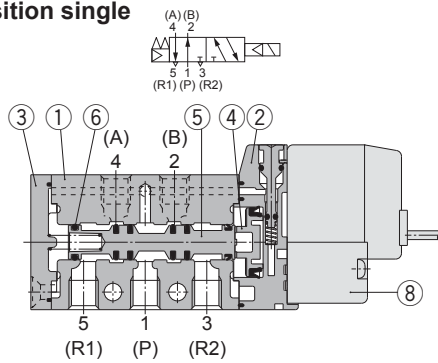


### 2 position double

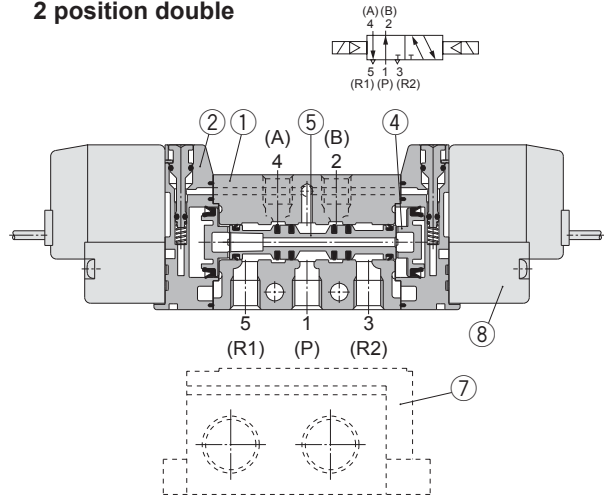


### 3 position closed center/exhaust center/pressure center



3 position closed center



3 position exhaust center



3 position pressure center

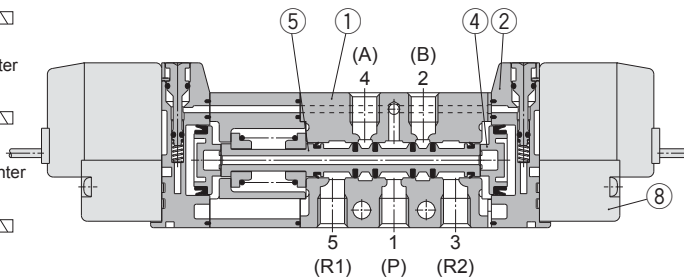

(This figure shows a closed center type.)

## Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Piston plate	Resin	White
3	End cover	Resin	White
4	Piston	Resin	—
5	Spool valve assembly	Aluminum, H-NBR	—
6	Spool spring	Stainless steel	—

## Replacement Parts

No.	Description	No.	Note
7	Sub-plate	SYJ5000-22-1	Aluminum die-casted
8	Pilot valve	V111(T)-□□□	
—	Bracket assembly	SYJ5000-13-3A	

# Series SYJ5000

## How to Order Pilot Valve Assembly

V111  —  5  G

### Coil specifications

Nil	Standard
T	With power saving circuit (24, 12 VDC only)

\* Power saving circuit is not available in the case of W□ type.

### Rated voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
1	100 VAC 50/60 Hz
2	200 VAC 50/60 Hz
3	110 VAC 50/60 Hz [115 VAC 50/60 Hz]
4	220 VAC 50/60 Hz [230 VAC 50/60 Hz]

\* For type W□, DC voltage is only available.

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.  
\* For type "R" and "U", DC voltage is only available.  
\* Power saving circuit is only available in the "Z" type.

### Electrical entry

G	Grommet, 300 mm lead wire
H	Grommet, 600 mm lead wire
L	L plug connector
LN	With lead wire
LO	Without lead wire
M	M plug connector
MN	With lead wire
MO	Without lead wire
WO	M8 connector
W□	Without connector cable
	With connector cable <small>Note 1)</small>

\* For connector cable of M8 connector, refer to back page 10.  
Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.

## How to Order Connector Assembly for L/M Plug Connector

For DC : SY100-30-4A-   
 For 100 VAC : SY100-30-1A-   
 For 200 VAC : SY100-30-2A-   
 For other voltages of AC : SY100-30-3A-

Without lead wire : SY100-30-A  
 (with connector and 2 of sockets only)

### Lead wire length

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

## How to Order M8 Connector Cable

V100-49-1-

### Cable length

1	300 mm
2	500 mm
3	1000 mm
4	2000 mm
7	5000 mm

V115  —  5  D

### Rated voltage

5	24 VDC
6	12 VDC
1	100 VAC 50/60 Hz
2	200 VAC 50/60 Hz
3	110 VAC 50/60 Hz [115 VAC 50/60 Hz]
4	220 VAC 50/60 Hz [230 VAC 50/60 Hz]

\* DC specifications of type D and DO is only available with 12 and 24 VDC.  
\* Power saving circuit is not available in the case of D or DO type.

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor (Non-polar type)
Z	With light/surge voltage suppressor (Non-polar type)

\* DOZ is not available.  
\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

### Electrical entry


D	DIN terminal	With connector
DO	terminal	Without connector

Note) Do not replace V111 (G, H, L, M, W) to V115 (DIN terminal) and vice versa when replacing pilot valve assembly only.


## 2 Position Single




Grommet (G), (H): SYJ5120-□<sup>G</sup>□□-M5

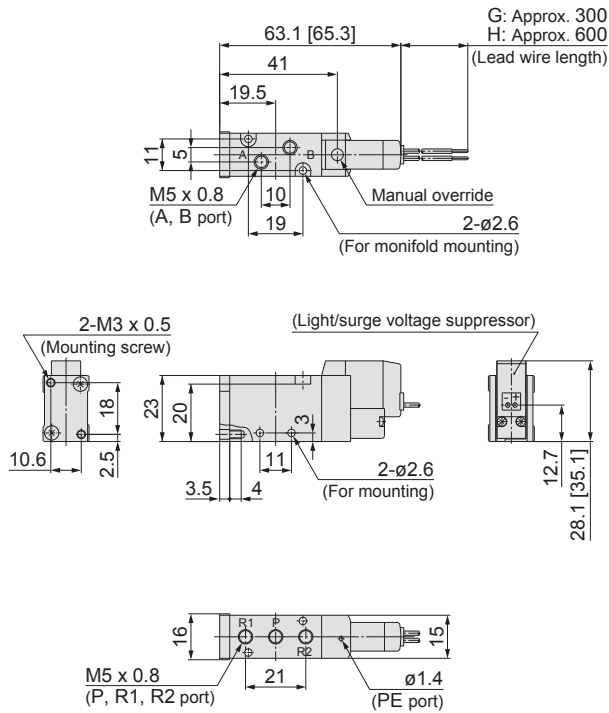

With bracket  
SYJ5120-□<sup>G</sup>□□-M5-F

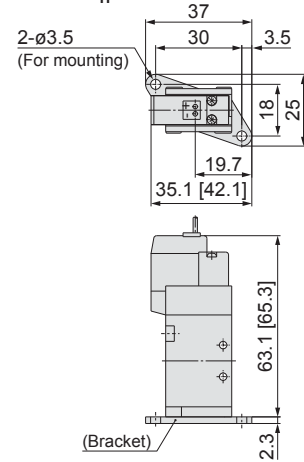

Built-in one-touch fitting:  
SYJ5120-□<sup>G</sup>□□-C4, N3, C6, N7(-F)

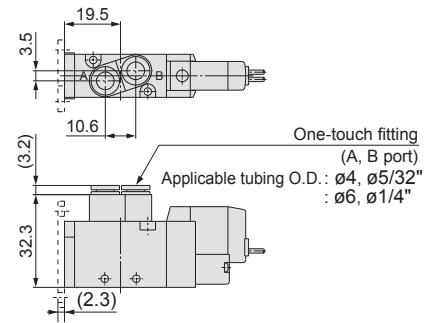


L plug connector (L):  
SYJ5120-□L□□-M5(-F)

M plug connector (M):  
SYJ5120-□M□□-M5(-F)

DIN terminal (D):  
SYJ5120-□D□□-M5(-F)

M8 connector (WO):  
SYJ5120-□WO□□-M5(-F)

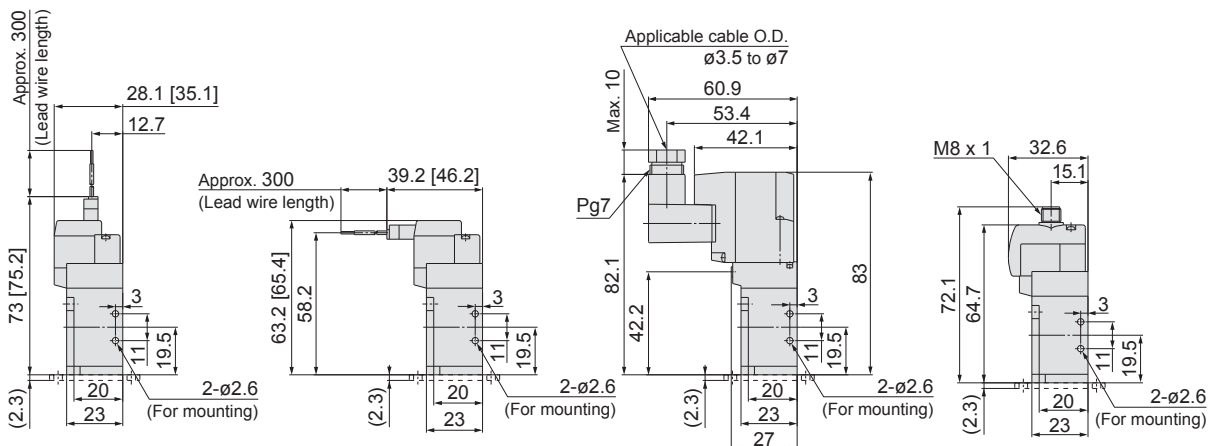

Refer to back page 11 for dimensions with connector cable.




# Series SYJ5000

## 2 Position Double



Grommet (G), (H): SYJ5220-□<sup>G</sup>□□-M5

Built-in one-touch fitting:  
SYJ5220-□<sup>G</sup>□□-C4, N3  
C6, N7


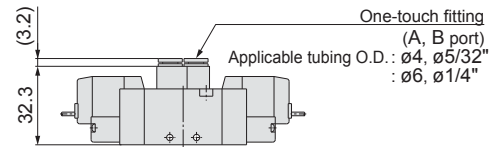

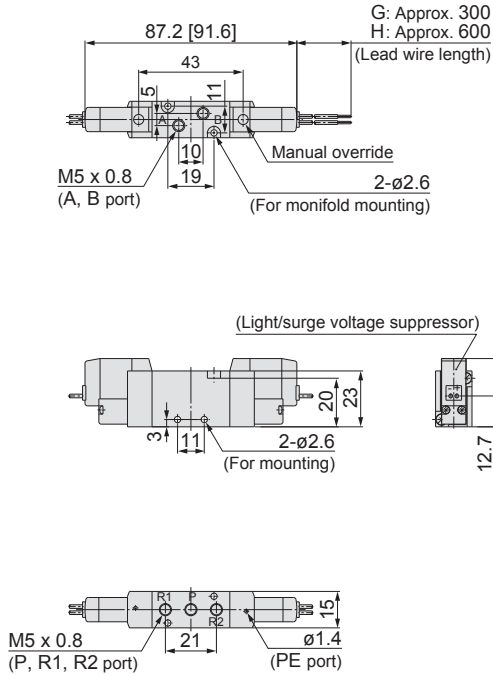


L plug connector (L):  
SYJ5220-□L□□-M5

M plug connector (M):  
SYJ5220-□M□□-M5

DIN terminal (D):  
SYJ5220-□D□□-M5

M8 connector (WO):  
SYJ5220-□WO□□-M5

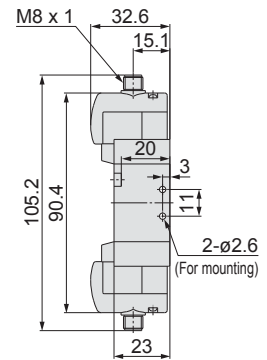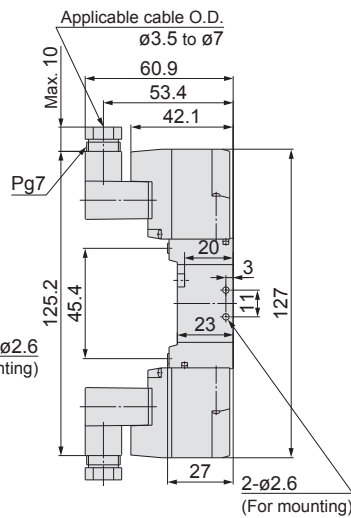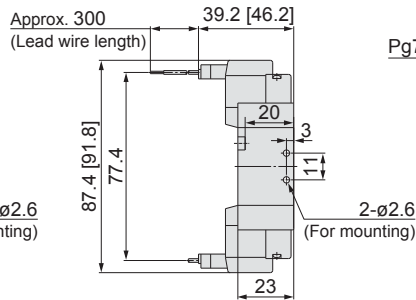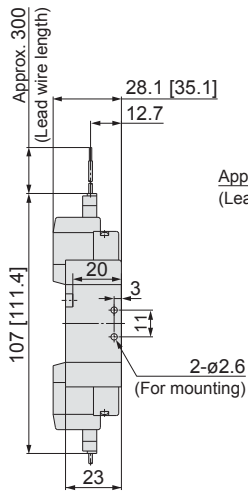






Refer to back page 11 for dimensions with connector cable.

## 3 Position Closed Center/Exhaust Center/Pressure Center



Grommet (G), (H): SYJ5<sup>3</sup>/<sub>4</sub>20-□<sup>G</sup>□□-M5

Built-in one-touch fitting:  
SYJ5<sup>3</sup>/<sub>4</sub>20-□<sup>G</sup>□□-<sup>C4, N3</sup>/<sub>C6, N7</sub>

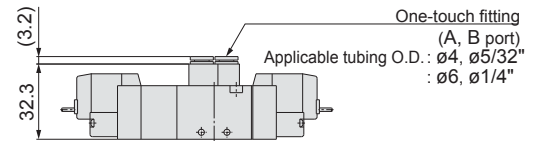
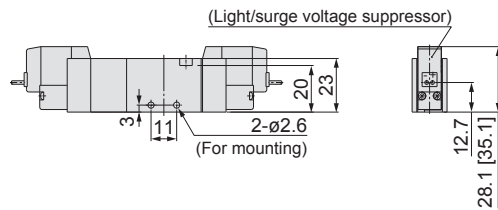

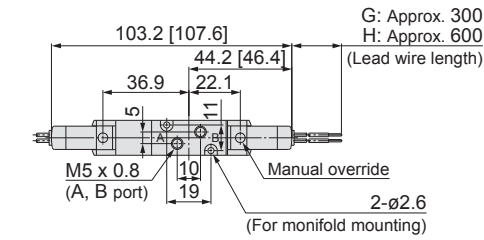


L plug connector (L):  
SYJ5<sup>3</sup>/<sub>4</sub>20-□L□□-M5

M plug connector (M):  
SYJ5<sup>3</sup>/<sub>4</sub>20-□M□□-M5

DIN terminal (D):  
SYJ5<sup>3</sup>/<sub>4</sub>20-□D□□-M5

M8 connector (WO):  
SYJ5<sup>3</sup>/<sub>4</sub>20-□WO□□-M5

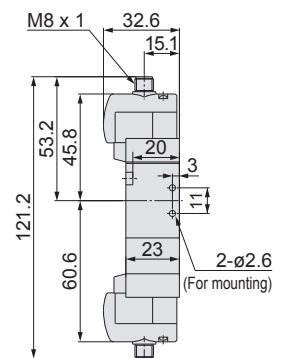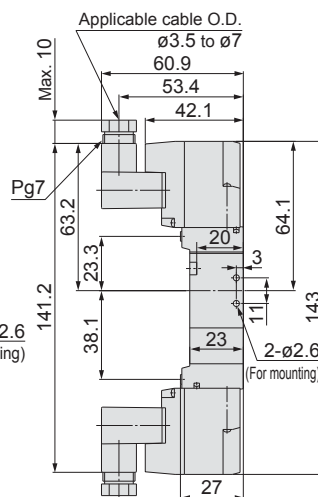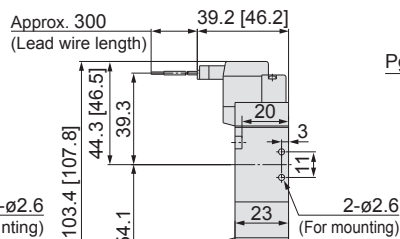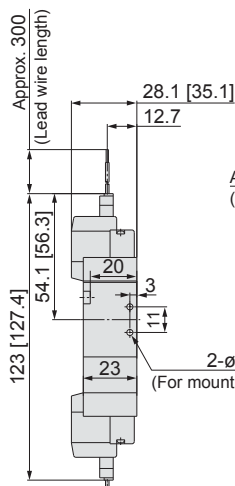

Refer to back page 11 for dimensions with connector cable.




# Series SYJ5000

## 2 Position Single




Grommet (G), (H): SYJ5140-□<sup>G</sup>□□-01□


Built-in speed controller:  
SYJ5150-□<sup>G</sup>□□-01□

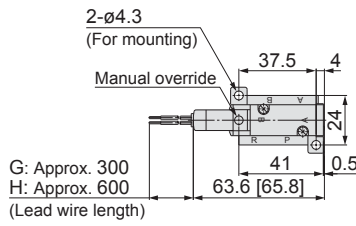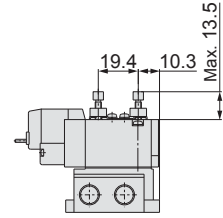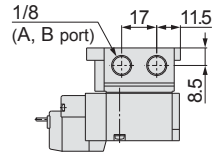

With interface regulator

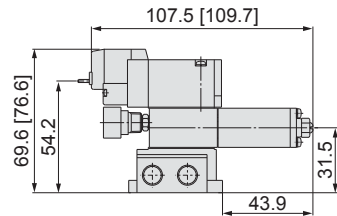

(Light/surge voltage suppressor)




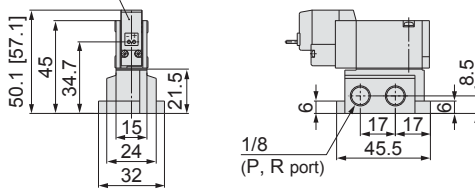


L plug connector (L):  
SYJ5140-□L□□-01□

M plug connector (M):  
SYJ5140-□M□□-01□

DIN terminal (D):  
SYJ5140-□D□□-01□

M8 connector (WO):  
SYJ5140-□WO□□-01□

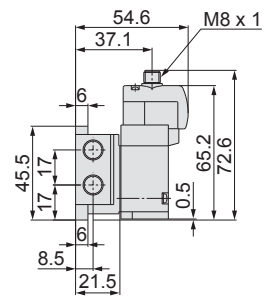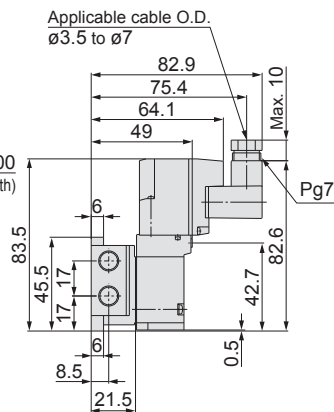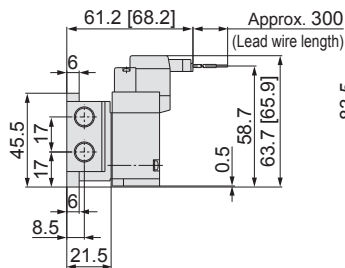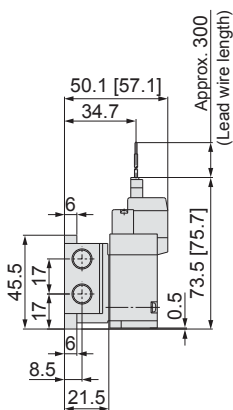



Refer to back page 11 for dimensions with connector cable.

## 2 Position Double





Grommet (G), (H): SYJ5240-□<sup>G</sup>□□-01□

Built-in speed controller:  
SYJ5250-□<sup>G</sup>□□-01□

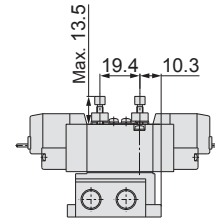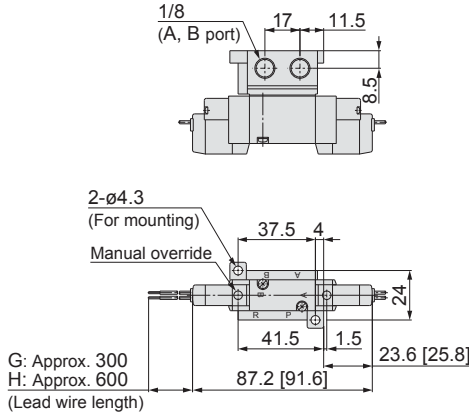

With interface regulator



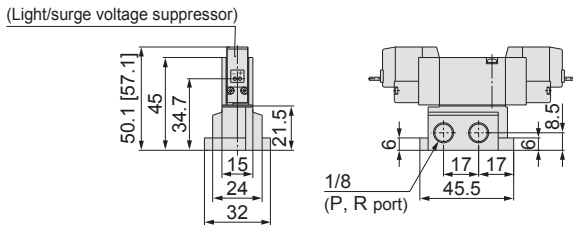
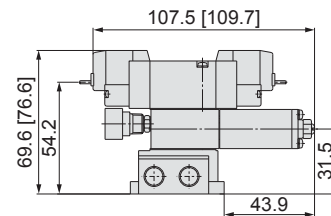


L plug connector (L):  
SYJ5240-□L□□-01□

M plug connector (M):  
SYJ5240-□M□□-01□

DIN terminal (D):  
SYJ5240-□D□□-01□

M8 connector (WO):  
SYJ5240-□WO□□-01□

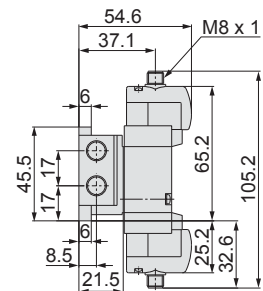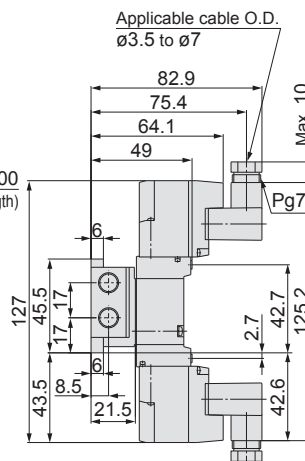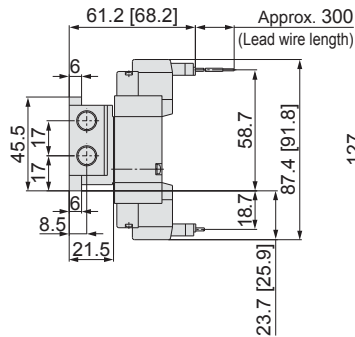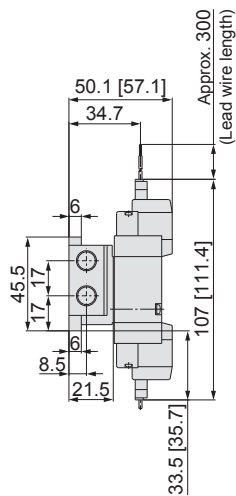

Refer to back page 11 for dimensions with connector cable.




# Series SYJ5000

## 3 Position Closed Center/Exhaust Center/Pressure Center




Grommet (G), (H): SYJ5<sup>3</sup>/<sub>4</sub>40-□<sup>G</sup>□□-01□



Built-in speed controller:  
SYJ5<sup>3</sup>/<sub>4</sub>50-□<sup>G</sup>□□-01□

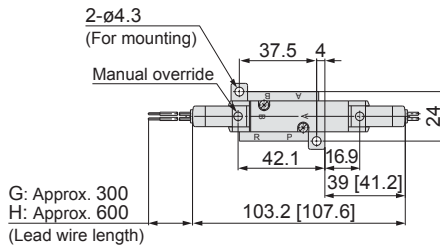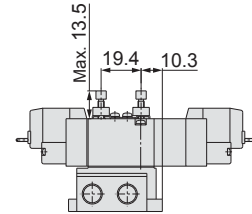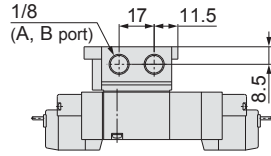

With interface regulator

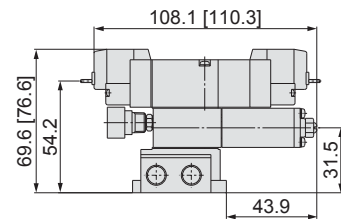

(Light/surge voltage suppressor)



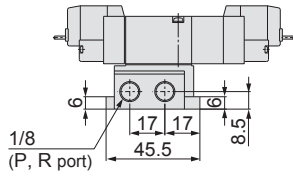
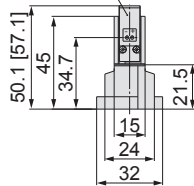


L plug connector (L):  
SYJ5<sup>3</sup>/<sub>4</sub>40-□L□□-01□

M plug connector (M):  
SYJ5<sup>3</sup>/<sub>4</sub>40-□M□□-01□

DIN terminal (D):  
SYJ5<sup>3</sup>/<sub>4</sub>40-□D□□-01□

M8 connector (WO):  
SYJ5<sup>3</sup>/<sub>4</sub>40-□WO□□-01□

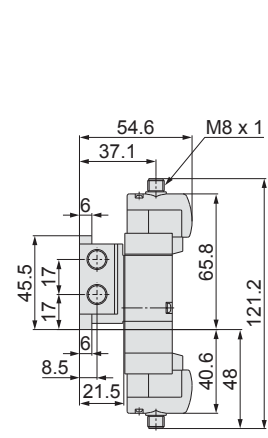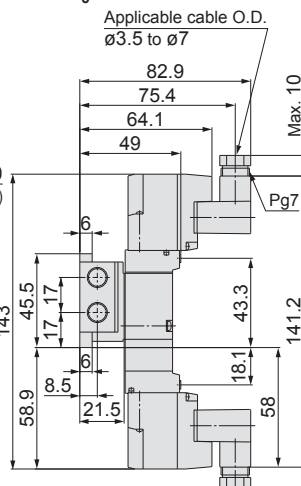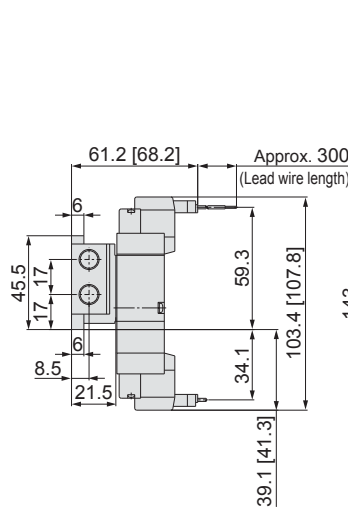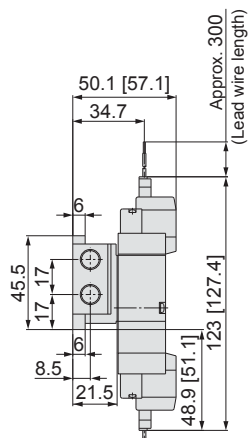

Refer to back page 11 for dimensions with connector cable.



# Series SYJ5000

# Manifold Specifications

## Manifold Standard



### Manifold Specifications

Model		Type 20	Type 40	Type 41	Type 42	Type 43
Manifold type		Single base/B mount				
P (SUP), R (EXH)		Common SUP, Common EXH				
Valve stations		2 to 20 stations				
A, B port Porting specifications	Location	Valve	Base	Base		
	Direction	Top	Bottom	Side		
Port size	P, R port	1/8			1/4	1/8
	A, B port	M5 x 0.8, C4 (One-touch fitting for ø4) C6 (One-touch fitting for ø6)	M5 x 0.8		1/8, C6 (One-touch fitting for ø6)	C4 (One-touch fitting for ø4)

### Flow Characteristics

Manifold			Port size		Flow characteristics					
					1→4/2 (P→A/B)			4/2→5/3 (A/B→R)		
			1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv
Body ported for internal pilot	Type SS5YJ5-20	SYJ5□2□	1/8	M5 x 0.8	0.46	0.39	0.12	0.75	0.32	0.19
			1/8	C4	0.62	0.33	0.16	0.83	0.27	0.20
			1/8	C6	0.79	0.36	0.21	0.91	0.36	0.24
Base mounted for internal pilot	Type SS5YJ5-40	SYJ5□4□	1/8	M5 x 0.8	0.55	0.35	0.15	0.64	0.26	0.16
	Type SS5YJ5-41		1/8	M5 x 0.8	0.59	0.35	0.16	0.68	0.23	0.17
	Type SS5YJ5-42-01		1/4	1/8	0.74	0.22	0.18	0.82	0.31	0.21
	Type SS5YJ5-42-C6		1/4	C6	0.71	0.24	0.17	0.8	0.29	0.20
	Type SS5YJ5-43		1/8	C4	0.55	0.29	0.14	0.74	0.32	0.19



Note) Value at manifold base mounted, 2 position single operating

### How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.

Example: **SS5YJ5-20-03** ..... 1 pc. (Manifold base)  
 \* **SYJ5120-5G-M5** ..... 2 pcs. (Valve)  
 \* **SYJ5000-21-4A** ..... 1 pc. (Blanking plate assembly)

**SS5YJ5-43-03-C4** ..... 1 pc. (Manifold base)  
 \* **SYJ5140-5LZ** ..... 1 pc. (Valve)  
 \* **SYJ5240-5LZ** ..... 1 pc. (Valve)  
 \* **SYJ5000-21-4A** ..... 1 pc. (Blanking plate assembly)

↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.


# Series SYJ5000

## Flat Ribbon Cable Manifold

• Multiple valve wiring is simplified through the use of the flat cable connector.

• Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.

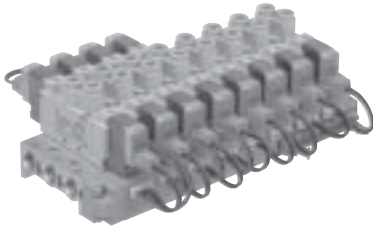

## Flat Ribbon Cable Manifold Specifications

Model		Type 20	Type 41P	Type 43P
Manifold type		Single base/B mount		
P (SUP), R (EXH)		Common SUP, Common EXH		
Valve stations		3 to 12 stations		
A, B port	Location	Valve	Base	
Porting specifications		Direction	Side	
		P, R port	1/8	
Port size	A, B port	M5 x 0.8, C4 (One-touch fitting for ø4) C6 (One-touch fitting for ø6)	M5 x 0.8	C4 (One-touch fitting for ø4)
	Applicable flat ribbon cable connector			
Internal wiring		Socket: 26 pins MIL type with strain relief (MIL-C-83503)		
Rated voltage		In common between +COM and -COM (Z type: +COM only).		
		24, 12 VDC/100, 110 VAC		

Note) The withstand voltage specification for the wiring unit section conforms to JIS C 0704, Grade 1 or its equivalent.

## Flow Characteristics

Manifold			Port size		Flow characteristics					
					1→4/2 (P→A/B)			4/2→5/3 (A/B→R)		
Body ported for internal pilot	Type	SYJ5□23	1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv
				SS5YJ5-20P	SYJ5□23	1/8	M5 x 0.8	0.46	0.39	0.12
1/8	C4	0.62				0.33	0.16	0.83	0.27	0.20
1/8	C6	0.79				0.36	0.21	0.91	0.36	0.24
Base mounted for internal pilot	SS5YJ5-41P	SYJ5□43	1/8	M5 x 0.8	0.59	0.35	0.16	0.68	0.23	0.17
			1/8	C4	0.55	0.29	0.14	0.74	0.32	0.19

Note) Value at manifold base mounted, 2 position single operating

## How to Order Manifold (Example)


Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.

Example: **SS5YJ5-41P-07-C4** ..... 1 pc. (Manifold base)  
 \* **SYJ5143-5LOU** ..... 3 pcs. (Valve)  
 \* **SYJ5243-5LOU** ..... 3 pcs. (Valve)  
 \* **SYJ5000-21-3A** ..... 1 pc. (Blanking plate assembly)  
 \* **SY3000-37-28A** ..... 3 pcs. (Connector assembly)  
 \* **SY3000-37-29A** ..... 3 pcs. (Connector assembly)

↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

## How to Order Valve

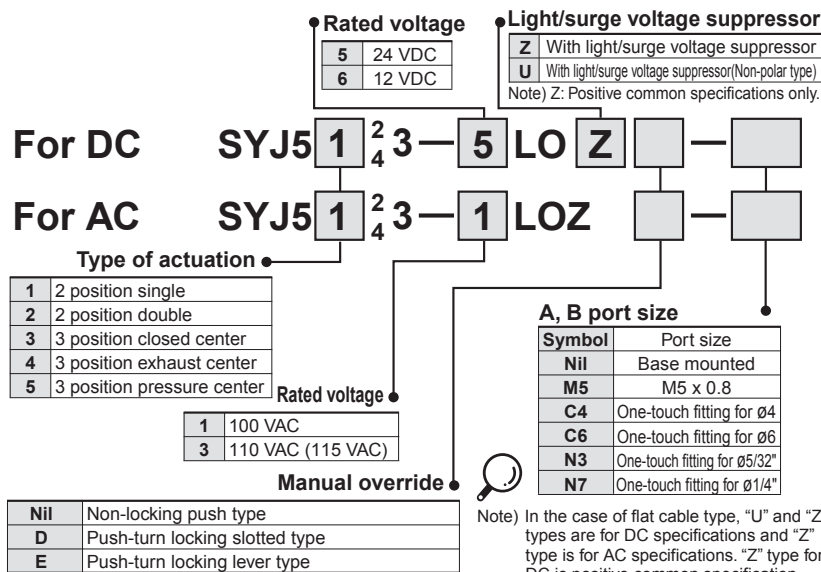

Note) In the case of flat cable type, "U" and "Z" types are for DC specifications and "Z" type is for AC specifications. "Z" type for DC is positive common specification only. For the other combination, please contact SMC.

## How to Order Connector Assembly

### For 12, 24 VDC

Single solenoid	SY3000-37-28A
Double solenoid, 3 position type	SY3000-37-29A
Single solenoid, individual SUP, EXH spacer	SY3000-37-3A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-4A
Interface regulator for single solenoid	SY3000-37-3A
Double solenoid, 3 position interface regulator	SY3000-37-6A
3 port adaptor plate	SY3000-37-3A

### For 100 VAC

Single solenoid	SY3000-37-46A
Double solenoid, 3 position type	SY3000-37-47A
Single solenoid, individual SUP, EXH spacer	SY3000-37-32A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-33A
Interface regulator for single solenoid	SY3000-37-15A
Double solenoid, 3 position interface regulator	SY3000-37-34A
3 port adaptor plate	SY3000-37-32A

### For 100 VAC (115 VAC)


Single solenoid	SY3000-37-54A
Double solenoid, 3 position type	SY3000-37-55A
Single solenoid, individual SUP, EXH spacer	SY3000-37-35A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-36A
Interface regulator for single solenoid	SY3000-37-19A
Double solenoid, 3 position interface regulator	SY3000-37-37A
3 port adaptor plate	SY3000-37-35A

## Common SUP/Common EXH



Note) For more than 8 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 20 (5 Port/Body ported)

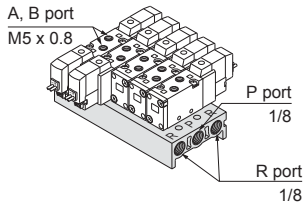

#### How to Order

**SS5YJ5-20-05** [ ]

Number of stations

02	2 stations
:	:
20	20 stations

P, R port thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

#### Applicable solenoid valve

SYJ5□20-□□□□-<sup>M5</sup>  
C4  
C6  
SYJ5□23-□□□□-<sup>M5</sup>  
C4  
C6


#### Applicable blanking plate assembly

SYJ5000-21-4A

#### Applicable individual EXH spacer assembly

SYJ5000-17-1A

### Type 40 (5 Port/Base mounted)

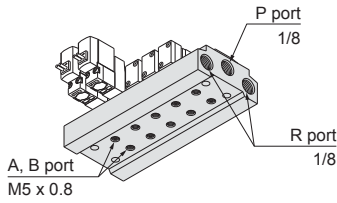

#### How to Order

**SS5YJ5-40-05-M5** [ ]

Stations

02	2 stations
:	:
20	20 stations

A, B port size

M5	M5 x 0.8
----	----------

P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

#### Applicable solenoid valve

SYJ5□40-□□□□  
SYJ5□43-□□□□  
SYJ5□50-□□□□  
SYJ5□53-□□□□

#### Applicable blanking plate assembly

SYJ5000-21-4A


#### Applicable individual EXH spacer assembly

SYJ5000-17-1A

#### Applicable individual SUP spacer assembly

ARBYJ5000-00-P

### Type 41 (5 Port/Base mounted)

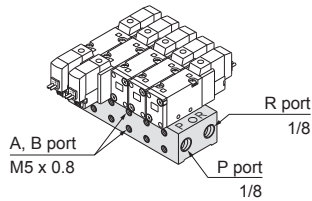

#### How to Order

**SS5YJ5-41-05-M5** [ ]

Stations

02	2 stations
:	:
20	20 stations


A, B port size

M5	M5 x 0.8
----	----------

P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

### Type 42 (5 Port/Base mounted)

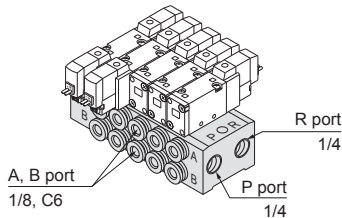

#### How to Order

**SS5YJ5-42-05-C6** [ ]

Stations

02	2 stations
:	:
20	20 stations

A, B port size

01	1/8
C6	One-touch fitting for ø6
N7	One-touch fitting for ø1/4"

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

#### Applicable solenoid valve

SYJ5□40-□□□□  
SYJ5□43-□□□□  
SYJ5□50-□□□□  
SYJ5□53-□□□□

#### Applicable blanking plate assembly

SYJ5000-21-4A


#### Applicable individual EXH spacer assembly

SYJ5000-17-1A

#### Applicable individual SUP spacer assembly

SYJ5000-16-2A

### Type 43 (5 Port/Base mounted)

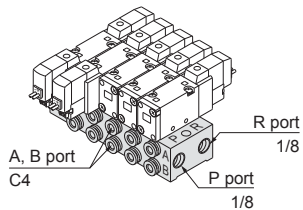

#### How to Order

**SS5YJ5-43-05-C4** [ ]

Stations

02	2 stations
:	:
20	20 stations

A, B port size

C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"

P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

#### Applicable individual SUP spacer assembly

ARBYJ5000-00-P


# Series SYJ5000

## Flat Ribbon Cable Manifold

### Common SUP/Common EXH

Note) For more than 8 stations, supply air to both sides of P port and exhaust air from both sides of R port.

#### Type 20 (5 Port/Body ported)

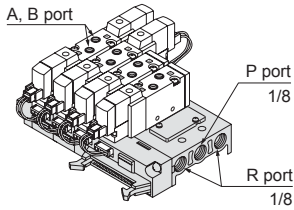

#### How to Order

SS5YJ5-20P-05

Number of stations

03	3 stations
:	:
12	12 stations

P, R port thread type


Nil	Rc
00F	G
00N	NPT
00T	NPTF

Applicable solenoid valve  
Refer to page 35.

Applicable blanking plate assembly  
SYJ5000-21-3A

Applicable connector assembly  
Refer to page 35.

#### Type 41P (5 Port/Base mounted)

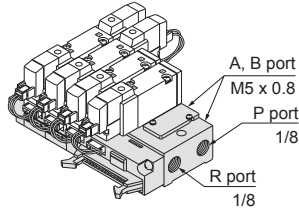

#### How to Order

SS5YJ5-41P-05-M5

Number of stations

03	3 stations
:	:
12	12 stations


P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Applicable solenoid valve  
Refer to page 35.

Applicable blanking plate assembly  
SYJ5000-21-3A

#### Type 43P (5 Port/Base mounted)

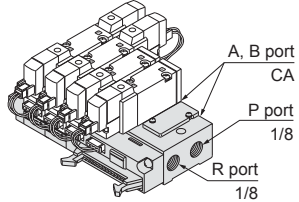

#### How to Order

SS5YJ5-43P-05-C4

Number of stations

03	3 stations
:	:
12	12 stations

A, B port size



C4	One-touch fitting for ø4
N3	One-touch fitting for ø5/32"

P, R port thread type

Nil	Rc
F	G
N	NPT
T	NPTF


Applicable connector assembly  
Refer to page 35.

## Combinations of Solenoid Valve, Manifold Gasket and Manifold Base

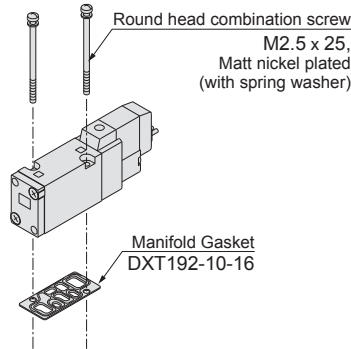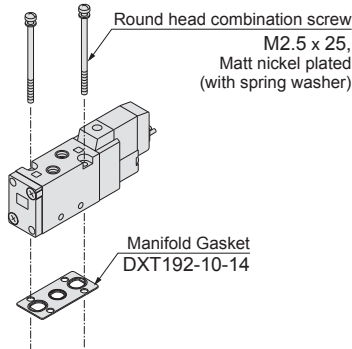


## Blanking Plate Assembly

### SYJ5000-21-4A

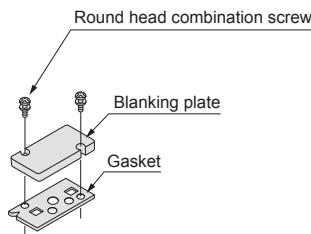

Applicable manifold base  
Type SS5YJ5-20  
Type SS5YJ5-40  
Type SS5YJ5-41  
Type SS5YJ5-42  
Type SS5YJ5-43

### SYJ5000-21-3A

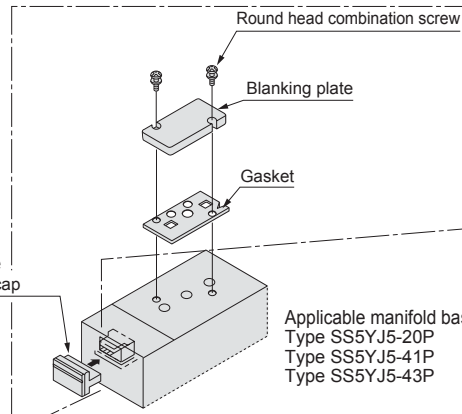

Applicable manifold base  
Type SS5YJ5-20P  
Type SS5YJ5-41P  
Type SS5YJ5-43P

### Caution

Mounting screw tightening torques

M2.5: 0.45 N·m

Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.


# Series SYJ5000

## Mix Installation of the SYJ500 and the SYJ5000 Valves on the Same Manifold

- Use of an adapter plate makes it possible to mount Series SYJ500 on the manifold bases of series SYJ5000.
- When mounting the SYJ500 valve on the SYJ5000 manifold, the SYJ500 solenoid must be positioned on the same side of the manifold as a single solenoid SYJ500. (Refer to the figure below.)
- For base mounted style, the A port of the 3 port valve flows out the B port of manifold base.


## Adapter Plate Assembly

### SYJ500-3-2A

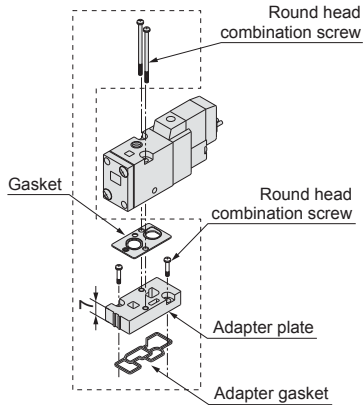

**Applicable manifold base**  
Type SS5YJ5-20

### SYJ500-3-1A

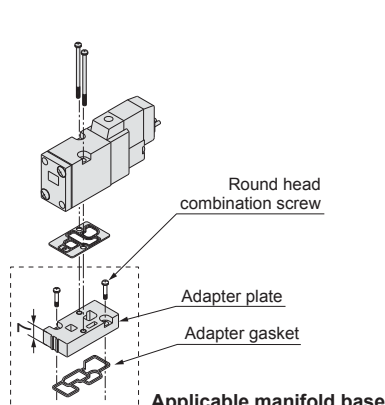


**Applicable manifold base**  
Type SS5YJ5-40  
Type SS5YJ5-41  
Type SS5YJ5-42  
Type SS5YJ5-43

## Interface Regulator (P port regulation)

Spacer type regulating valve on manifold block can regulate the pressure to the valve individually.

### ARBYJ5000-00-P

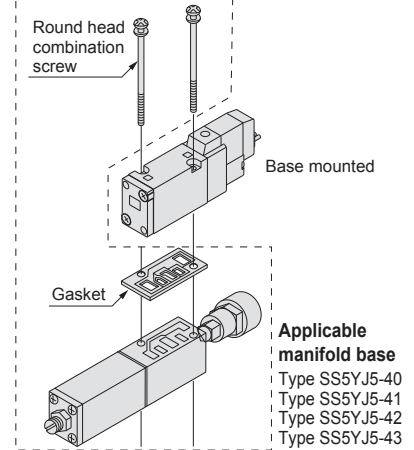


**Applicable manifold base**  
Type SS5YJ5-40  
Type SS5YJ5-41  
Type SS5YJ5-42  
Type SS5YJ5-43

Refer to back page 12 prior to handling.

## Individual EXH Spacer Assembly


### SYJ5000-17-1A

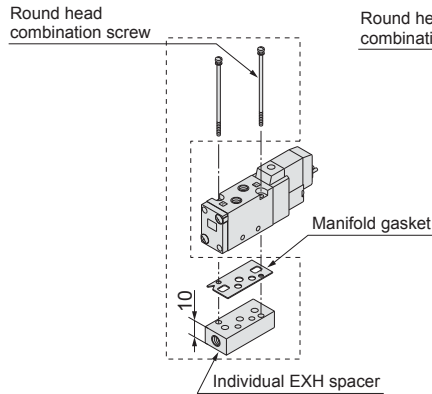

**Applicable manifold base**  
Type SS5YJ5-20  
Type SS5YJ5-40  
Type SS5YJ5-41  
Type SS5YJ5-42  
Type SS5YJ5-43

## Individual SUP Spacer Assembly

### SYJ5000--16--2 A

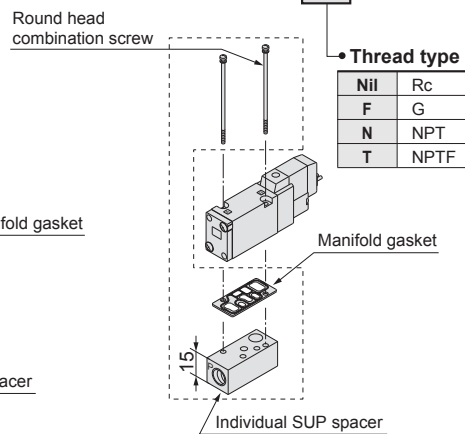

**Applicable manifold base**  
Type SS5YJ5-41  
Type SS5YJ5-42  
Type SS5YJ5-43

## Caution

**Mounting screw tightening torques**

**M2.5: 0.45 N·m**



Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.

# Series SYJ5000



Type 20: Top Ported/SS5YJ5-20- Stations -00 □




## Grommet (G)

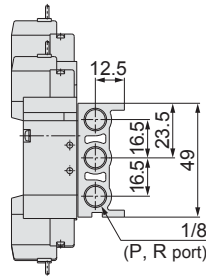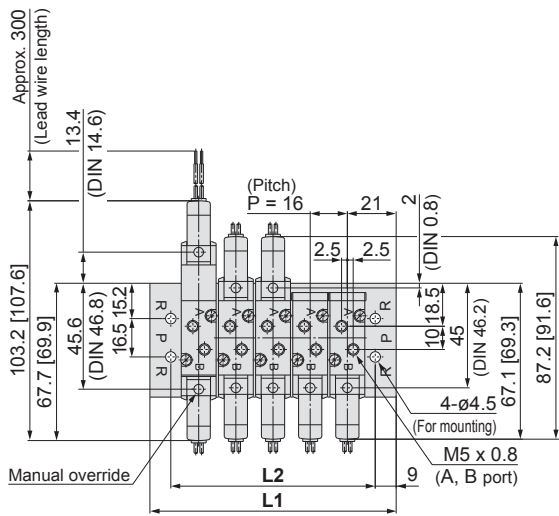


## Built-in one-touch fitting

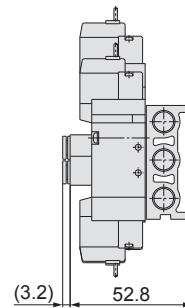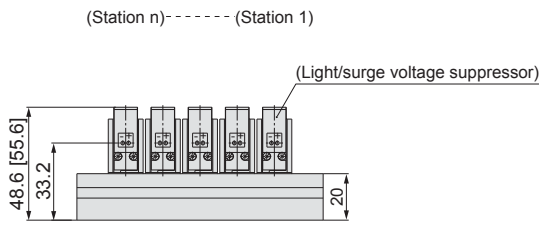


## L plug connector (L)

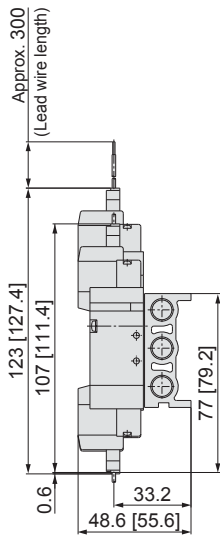


## M plug connector (M)

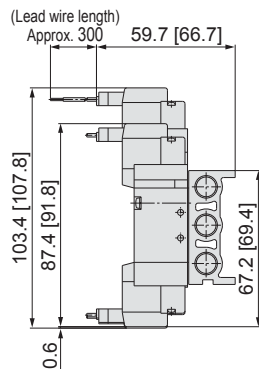

## DIN terminal (D)

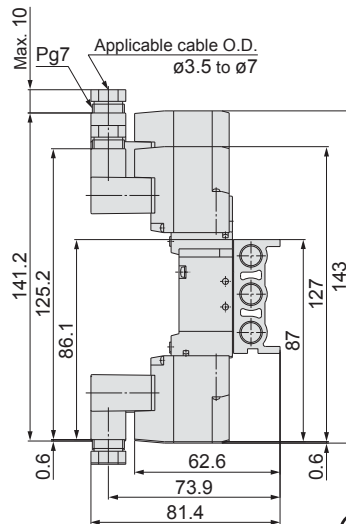

## M8 connector (WO)

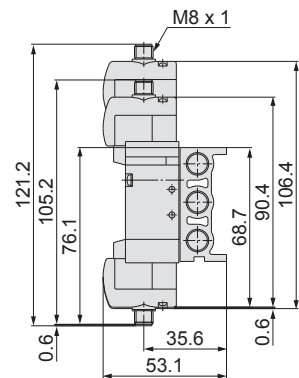


Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	58	74	90	106	122	138	154	170	186	202	218	234	250	266	282	298	314	330	346
L2	40	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296	312	328


## Type 40: Bottom Ported/SS5YJ5-40- Stations -M5




### Grommet (G)

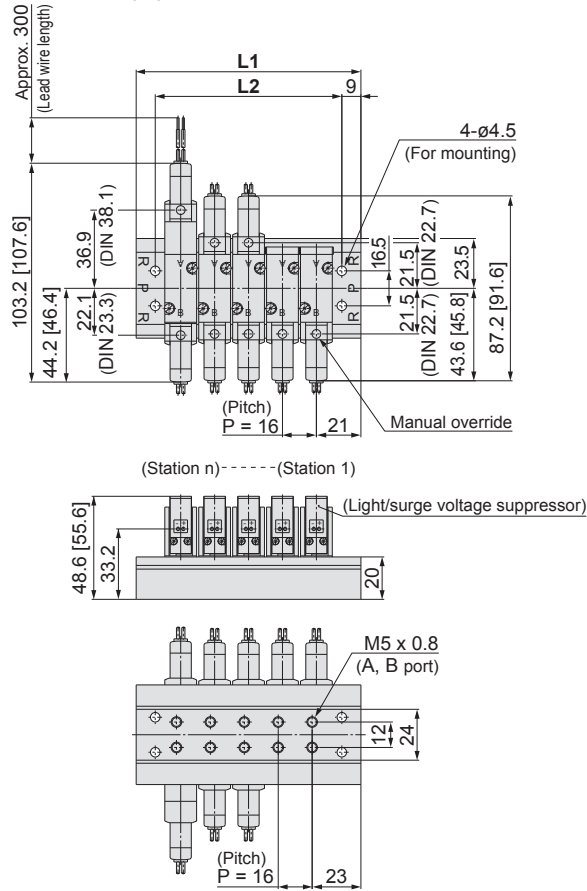


### Built-in speed controller

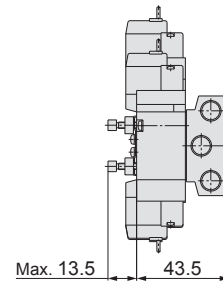


### L plug connector (L)

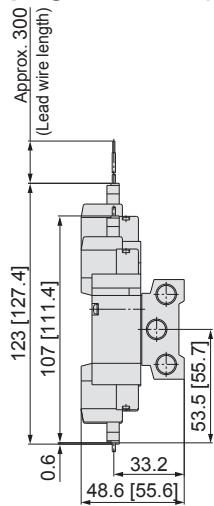


### M plug connector (M)

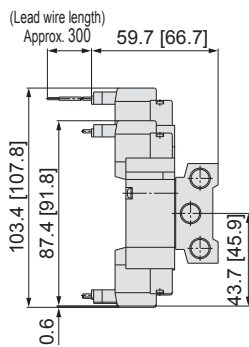

### DIN terminal (D)

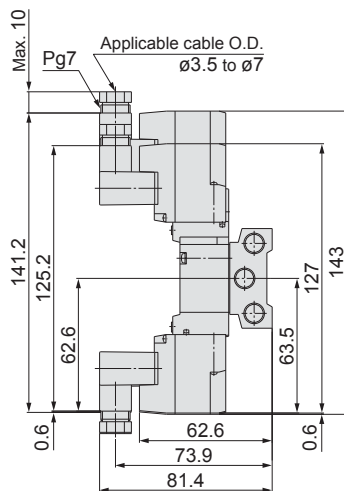

### M8 connector (WO)

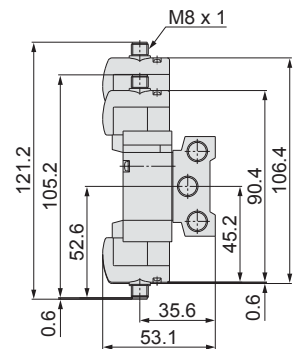

Refer to back page 11 for dimensions with connector cable.


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	58	74	90	106	122	138	154	170	186	202	218	234	250	266	282	298	314	330	346
L2	40	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296	312	328

# Series SYJ5000

Type 41: Side Ported/SS5YJ5-41- Stations -M5□




## Grommet (G)

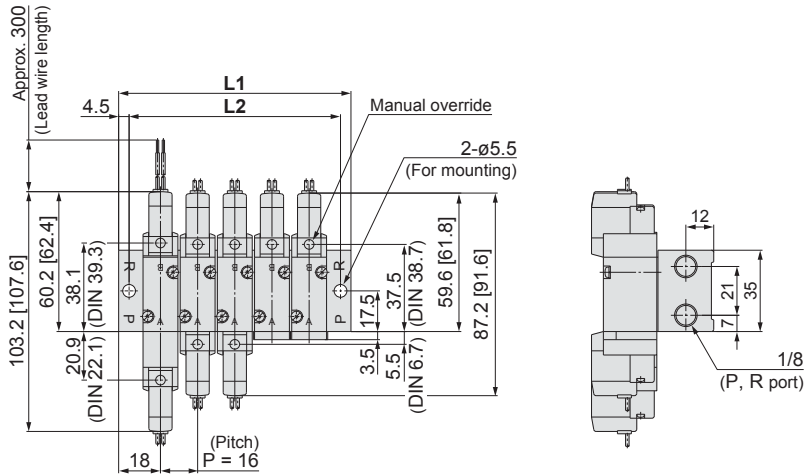


(Station 1)----- (Station n)


(Light/surge voltage suppressor)

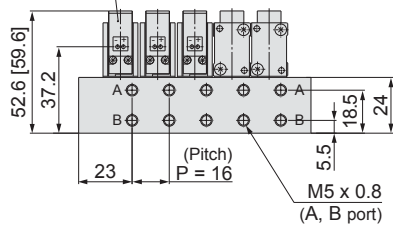


## Built-in speed controller

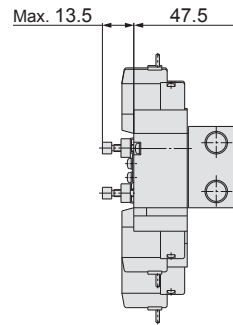


## L plug connector (L)

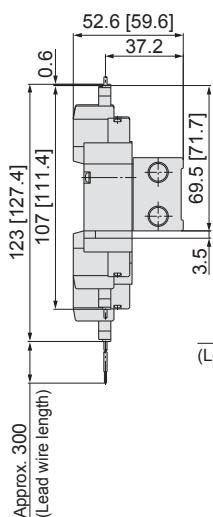


## M plug connector (M)

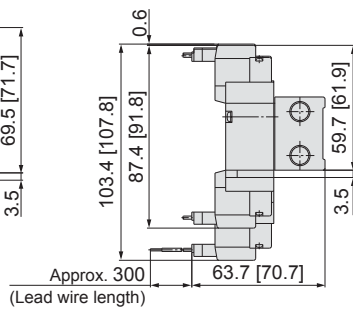

## DIN terminal (D)

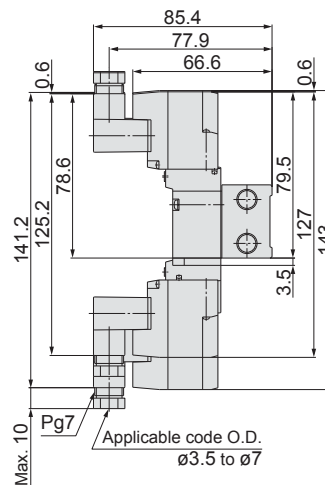

## M8 connector (WO)

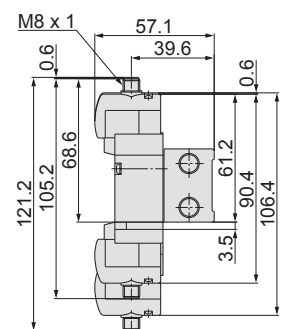

Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340
L2	43	59	75	91	107	123	139	155	171	187	203	219	235	251	267	283	299	315	331






## Type 42: Side Ported/SS5YJ5-42- Stations -01, C6 N7



### Grommet (G) For 01

### For C6 N7 (Built-in one-touch fitting)

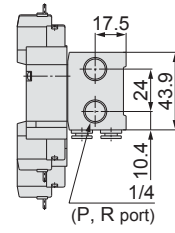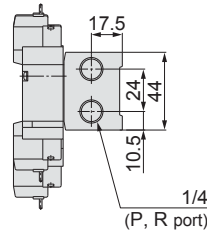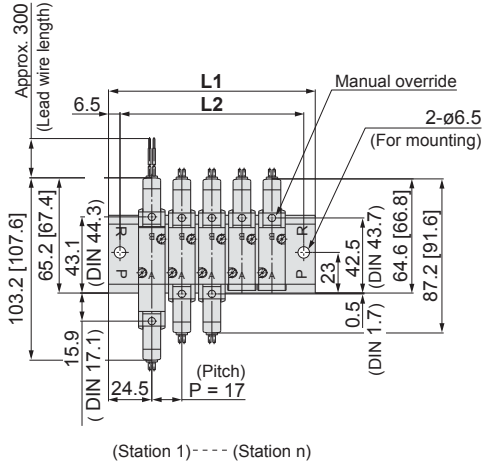




(Station 1) ---- (Station n)

(Station 1) ---- (Station n)

(Light/surge voltage suppressor)

### Built-in speed controller

(Light/surge voltage suppressor)

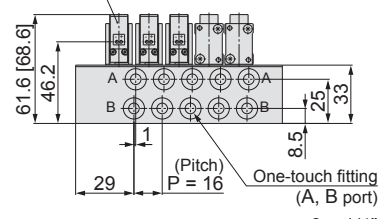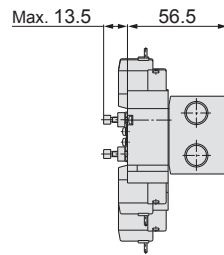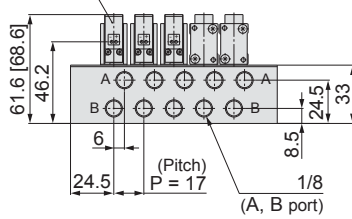

Applicable tubing O.D.: ø6, ø1/4"







\* Other dimensions are the same as the grommet type.

### L plug connector (L)

### M plug connector (M)

### DIN terminal (D)

### M8 connector (WO)

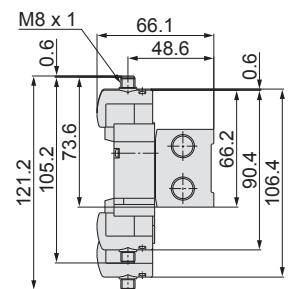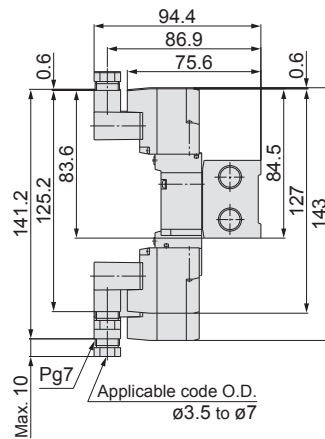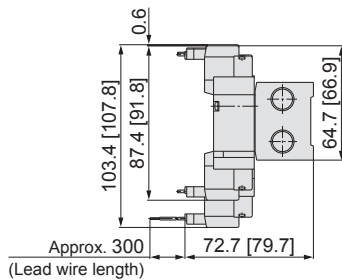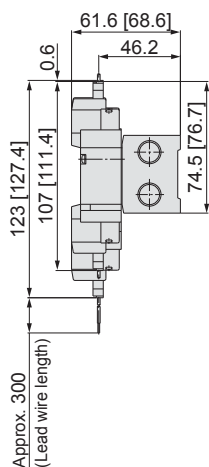

Refer to back page 11 for dimensions with connector cable.


A, B port size	Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
For 1/8	L1	66	83	100	117	134	151	168	185	202	219	236	253	270	287	304	321	338	355	372
	L2	53	70	87	104	121	138	155	172	189	206	223	240	257	274	291	308	325	342	359
For C6/N7	L1	65	81	97	113	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353
	L2	52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340

# Series SYJ5000


Type 43: Side Ported/SS5YJ3-43- Stations - C4 N3 □




## Grommet (G)

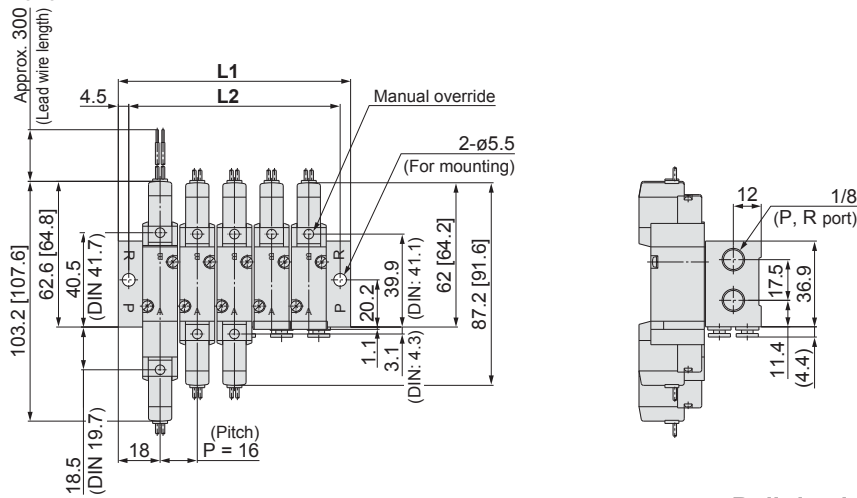


## Built-in slottle valve

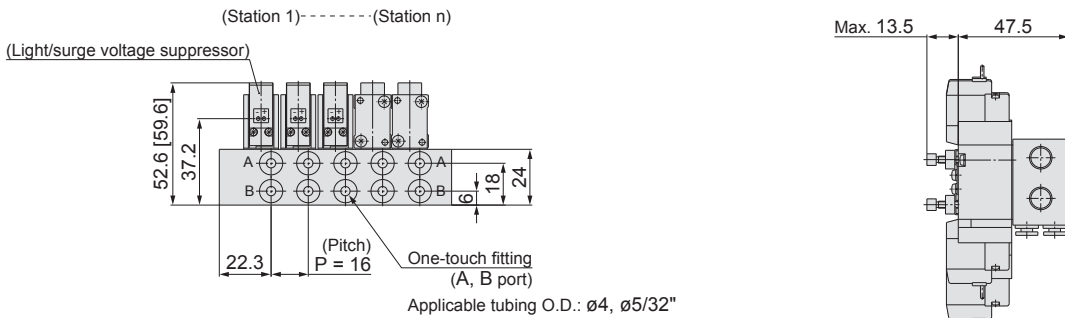


## L plug connector (L)

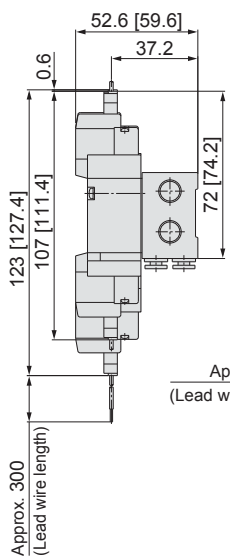


## M plug connector (M)

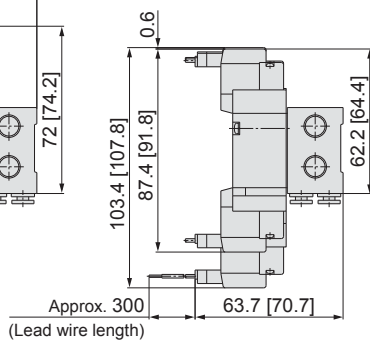

## DIN terminal (D)

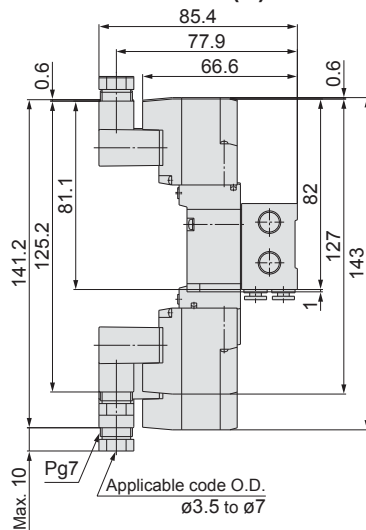

## M8 connector (WO)

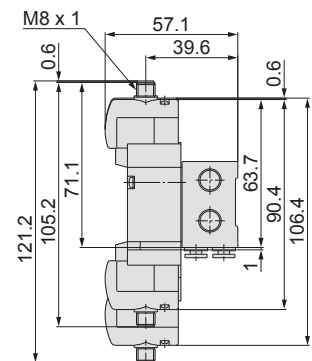


Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340
L2	43	59	75	91	107	123	139	155	171	187	203	219	235	251	267	283	299	315	331



## Flat Ribbon Cable Manifold



### SS5YJ5-20P- Stations -00


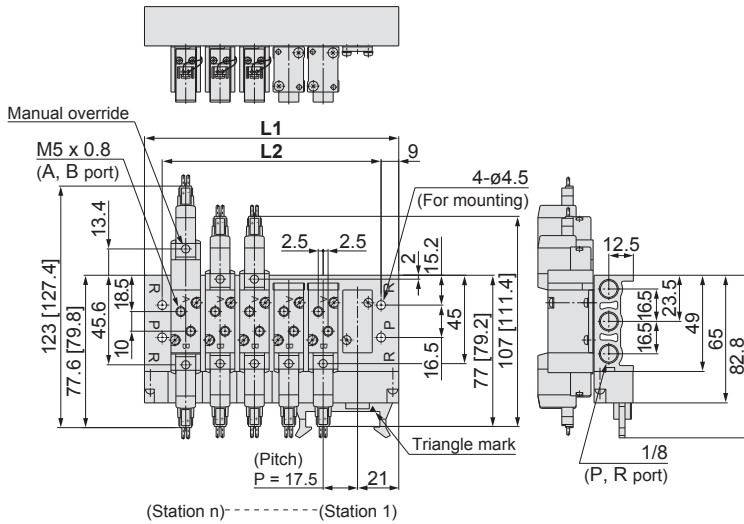


For C4 N3  
C6 N7 (Built-in one-touch fitting)

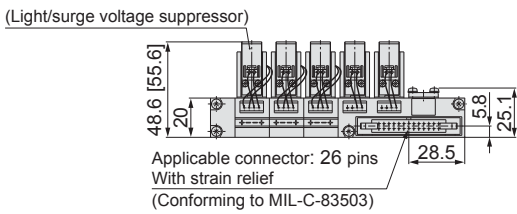
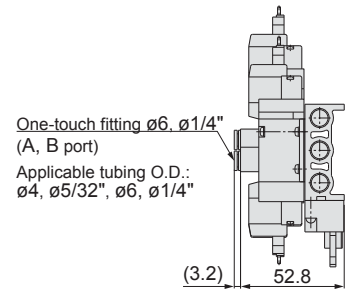


Station n	Station 3	4	5	6	7	8	9	10	11	Station 12
L1	77	94.5	112	129.5	147	164.5	182	199.5	217	234.5
L2	59	76.5	94	111.5	129	146.5	164	181.5	199	216.5

### SS5YJ5-41P- Stations -M5

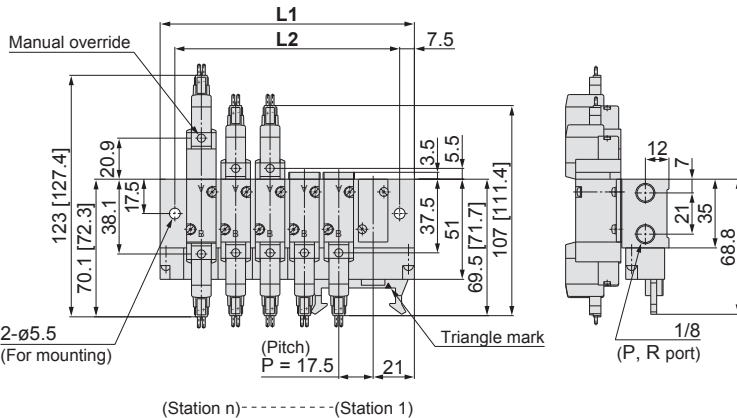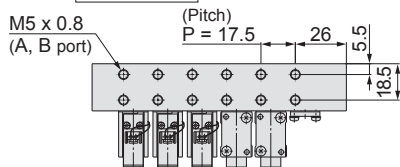

Built-in slottle valve

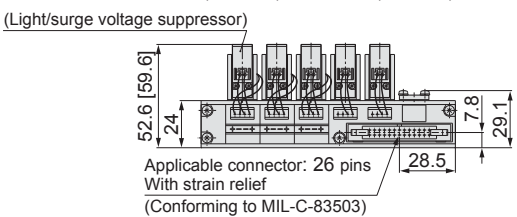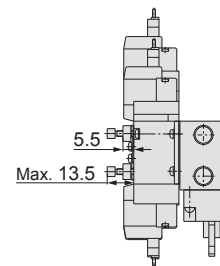




Station n	Station 3	4	5	6	7	8	9	10	11	Station 12
L1	77	94.5	112	129.5	147	164.5	182	199.5	217	234.5
L2	62	79.5	97	114.5	132	149.5	167	184.5	202	219.5

# Series SYJ5000



## Flat Ribbon Cable Manifold



### SS5YJ5-43P- Stations C4 N3 □

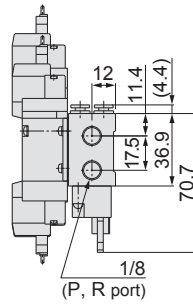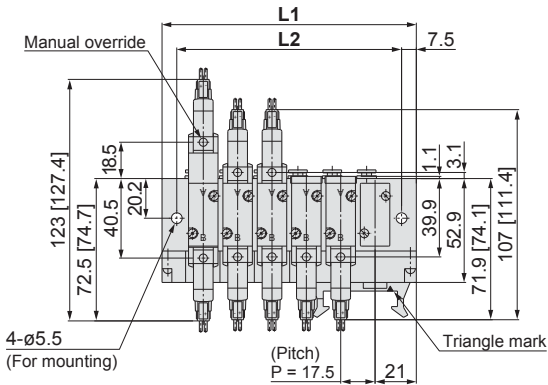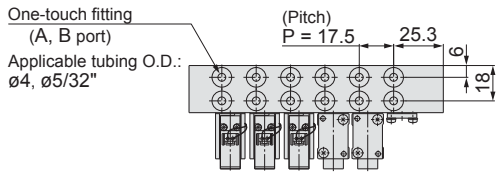


### Built-in speed controller

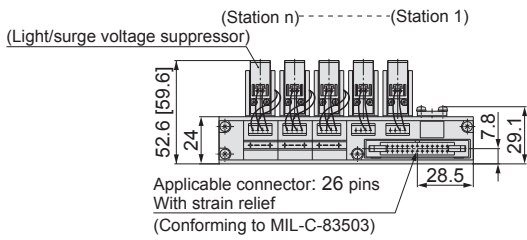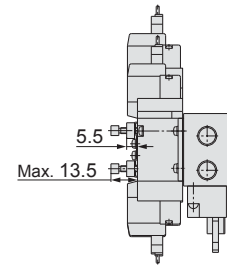


Station n	Station 3	4	5	6	7	8	9	10	11	Station 12
L1	77	94.5	112	129.5	147	164.5	182	199.5	217	234.5
L2	62	79.5	97	114.5	132	149.5	167	184.5	202	219.5



# Rubber Seal 5 Port Solenoid Valve Series SYJ7000

 For details about certified products conforming to international standards, visit us at [www.smcworld.com](http://www.smcworld.com).

## Specifications

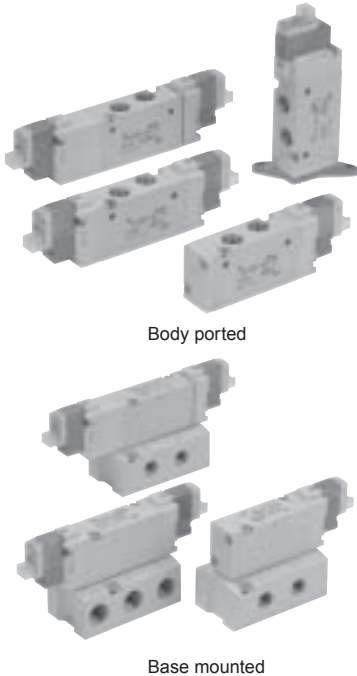

Fluid		Air
Operating pressure range MPa	2 position single	0.15 to 0.7
	2 position double	0.1 to 0.7
	3 position	0.15 to 0.7
Ambient and fluid temperature (C)		-10 to 50 (No freezing. Refer to back page 3.)
Response time (ms) <sup>Note 1)</sup> (at 0.5 MPa)	2 position single, double	30 or less
	3 position	60 or less
Max. operating frequency (Hz)	2 position single, double	5
	3 position	3
Manual override (Manual operation)		Non-locking push type, Push-turn locking slotted type, Push-turn locking lever type
Pilot exhaust method		Individual exhaust for the pilot valve, Common exhaust for the pilot and main valve
Lubrication		Not required
Mounting orientation		Unrestricted
Shock/Vibration resistance (m/s <sup>2</sup> ) <sup>Note 2)</sup>		150/30
Enclosure		Dust proof (* DIN terminal, M8 connector conforms to IP65.)



\* Based on IEC60529

Note 1) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20C, at rated voltage, without surge suppressor)

Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Value in the initial state)


Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve and armature when pilot signal is ON and OFF. (Value in the initial state)

## Solenoid Specifications


### JIS Symbol

#### Body ported


2 position single




2 position double




3 position closed center



3 position exhaust center




3 position pressure center




#### Base mounted


2 position single solenoid




2 position double solenoid




3 position closed center



3 position exhaust center



3 position pressure center



Electrical entry		Grommet (G), (H) L plug connector (L) M plug connector (M) DIN terminal (D) M8 connector (W)	
		G, H, L, M, W	D
Coil rated voltage (V)	DC	24, 12, 6, 5, 3	
	AC 50/60 Hz	100, 110, 200, 220	
Allowable voltage fluctuation		10% of rated voltage *	
Power consumption (W)	DC	Standard	0.35 (With light: 0.4 (DIN terminal with light: 0.45))
		With power saving circuit	0.1 (With light only)
Apparent power VA*	AC	100 V	0.78 (With light: 0.81) 0.78 (With light: 0.87)
		110 V	0.86 (With light: 0.89) 0.86 (With light: 0.97)
		[115 V]	[0.94 (With light: 0.97)] [0.94 (With light: 1.07)]
		200 V	1.18 (With light: 1.22) 1.15 (With light: 1.30)
		220 V [230 V]	1.30 (With light: 1.34) 1.27 (With light: 1.46) [1.42 (With light: 1.46)] [1.39 (With light: 1.60)]
Surge voltage suppressor		Diode (DIN terminal, Varistor when non-polar types)	
Indicator light		LED (Neon light when AC with DIN terminal)	



\* In common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

\* For 115 VAC and 230 VAC, the allowable voltage is -15% to +5% of rated voltage.

\* S, Z and T type (with power saving circuit) should be used within the following allowable voltage fluctuation range due to a voltage drop caused by the internal circuit.

S and Z type: 24 VDC: -7% to +10%, 12 VDC: -4% to +10%

T type: 24 VDC: -8% to +10%, 12 VDC: -6% to +10%



**Made to Order**

(For details, refer to pages 79 through to 80.)

## Flow Characteristics/Weight

Valve model	Type of actuation		Port size		Flow characteristics <small>Note 1)</small>						Weight (g) <small>Note 2, 3)</small>				
			1,5,3 (P,EA,EB)	4,2 (A,B)	1→4/2 (P→A/B)			4/2→5/3 (A/B→EA/EB)			Grommet	L/M plug connector	DIN terminal	M8 connector	
					C (dm <sup>3</sup> /(s·bar))	b	Cv	C (dm <sup>3</sup> /(s·bar))	b	Cv					
Body ported	SYJ7□20-□-01	2 position	Single	1/8	1/8	2.2	0.36	0.58	2.4	0.34	0.63	85	86	107	90
			Double												
		3 position	Closed center			1.8	0.37	0.45	2.0	0.35	0.49	108	110	152	118
			Exhaust center			1.2	0.50	0.34	3.0 [1.3]	0.35[0.52]	0.73 [0.39]				
	Pressure center	3.0 [0.83]	0.37 [0.50]	0.78 [0.25]	1.8	0.37	0.45	96	97	98	101				
	Double	1.6	0.33	0.4	2.2	0.32	0.53								
	SYJ7□20-□-C6	2 position	Single	1/8	C6 (One-touch fitting for ø8)	1.4	0.27	0.35	1.9	0.33	0.49	119	121	163	129
			Double												
		3 position	Closed center			1.8 [0.78]	0.36 [0.40]	0.45 [0.22]	1.6	0.30	0.39	96	97	98	101
			Exhaust center			2.0	0.39	0.52	2.3	0.34	0.61				
	Pressure center	1.7	0.35	0.42	2.0	0.29	0.49	109	111	153	119				
	Double	1.2	0.38	0.33	2.6 [1.3]	0.35[0.49]	0.67 [0.38]								
SYJ7□20-□-C8	2 position	Single	1/8	C8 (One-touch fitting for ø8)	1.9 [0.86]	0.57 [0.46]	0.59 [0.25]	1.7	0.39	0.42	119	121	163	129	
		Double													2.0
	3 position	Closed center			2.3	0.45	0.57	2.8	0.37	0.71	165 (85)	166 (86)	187 (107)	170 (90)	
		Exhaust center			1.9	0.36	0.48	2.1	0.46	0.57					
Pressure center	1.2	0.48	0.35	3.4 [1.3]	0.36[0.57]	0.86 [0.41]	188 (108)	190 (110)	232 (152)	198 (118)					
Double	3.3 [0.85]	0.43 [0.54]	0.78 [0.25]	2.1	0.45	0.56									
Base mounted	SYJ7□40-□-01	2 position	Single	1/8	1/8	2.3	0.41	0.61	2.9	0.35	0.74	165 (85)	166 (86)	187 (107)	170 (90)
			Double												
		3 position	Closed center			1.3	0.45	0.35	3.7 [1.4]	0.27[0.56]	0.87 [0.43]	188 (108)	190 (110)	232 (152)	198 (118)
			Exhaust center			3.6 [0.83]	0.23 [0.55]	0.84 [0.25]	2.1	0.47	0.58				
	Pressure center	2.3	0.41	0.61	2.9	0.35	0.74	165 (85)	166 (86)	187 (107)	170 (90)				
	Double	1.9	0.46	0.50	2.2	0.44	0.60								
	SYJ7□40-□-02	2 position	Single	1/4	1/4	2.3	0.41	0.61	2.9	0.35	0.74	165 (85)	166 (86)	187 (107)	170 (90)
			Double												
		3 position	Closed center			1.3	0.45	0.35	3.7 [1.4]	0.27[0.56]	0.87 [0.43]	188 (108)	190 (110)	232 (152)	198 (118)
			Exhaust center			3.6 [0.83]	0.23 [0.55]	0.84 [0.25]	2.1	0.47	0.58				
	Pressure center	2.3	0.41	0.61	2.9	0.35	0.74	165 (85)	166 (86)	187 (107)	170 (90)				
	Double	1.9	0.46	0.50	2.2	0.44	0.60								



Note 1) [ ]: denotes the normal position. Exhaust center: 4/2 → 5/3, Pressure center: 1 → 4/2

Note 2) ( ): Without sub-plate.


Note 3) For DC voltages. For AC voltages add 3 g to the weight of the single solenoid and 6 g to the weight of the double solenoid and 3 position types.

## Cylinder Speed Chart


Use as a guide for selection.

Please confirm the actual conditions with SMC Sizing Program.

### Body Ported

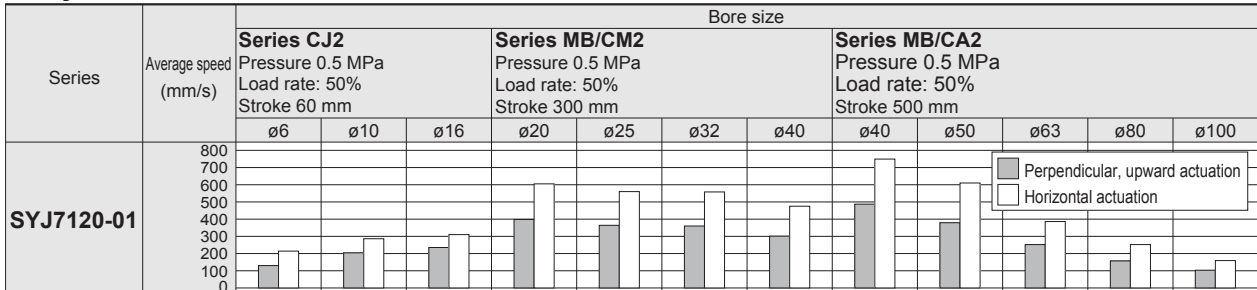

### Base Mounted

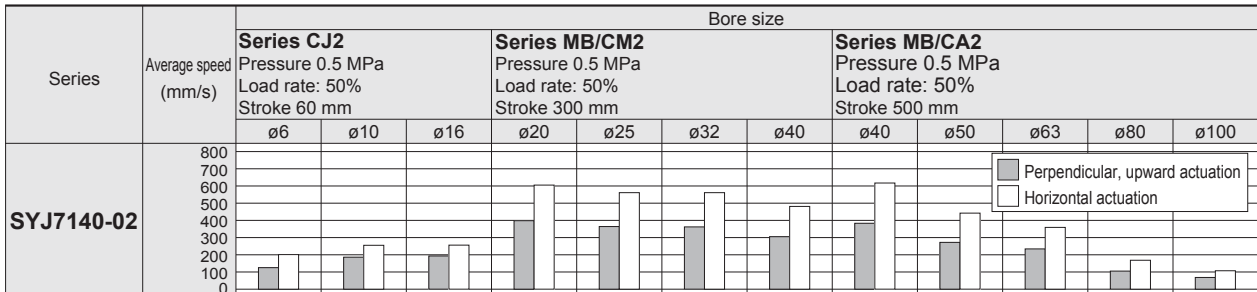

\* Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.

\* Average speed of cylinder is obtained by dividing the full stroke time by the stroke.

\* Load factor: ((Load weight x 9.8) / Theoretical force) x 100%

## Conditions

	Body ported	Series CJ2	Series CM2	Series MB/CA2
SYJ7120-01	Tubing bore x Length	ø6 x 1 m		ø12 x 1 m
	Speed controller	AS2301F-06	AS3301F-06	AS4001F-12
	Silencer	AN110-01	AN200-02	


	Base mounted	Series CJ2	Series CM2	Series MB/CA2
SYJ7140-02	Tubing bore x Length	ø6 x 1 m		
	Speed controller	AS1301F-06	AS3001F-06	
	Silencer	AN110-01	AN200-02	AN3301F-06

# Series SYJ7000

## How to Order

### Type of actuation

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

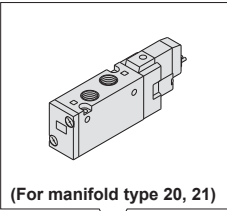

### Light/surge voltage suppressor

#### Electrical entry for G, H, L, M, W

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.  
 \* For type "R" and "U", DC voltage is only available.  
 \* Power saving circuit is only available in the "Z" type.

#### Electrical entry for D

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor (Non-polar type)
Z	With light/surge voltage suppressor (Non-polar type)


\* DOZ is not available.  
 \* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

#### Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

#### Bracket

Nil: Without bracket  
 F: With bracket

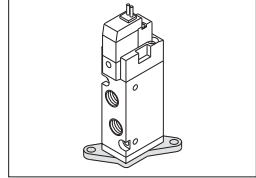

Note) Do not remove the factory installed bracket from models with the bracket option. Removal of the bracket will cause the valve to leak. Brackets cannot be retrofitted.

### Rated voltage

DC	AC (50/60 Hz)	
5	1	100 VAC
6	2	200 VAC
V	3	110 VAC [115 VAC]
S	4	220 VAC [230 VAC]
R		3 VDC


\* DC specifications of type D and DO is only available with 12 and 24 VDC.  
 \* For type W□, DC voltage is only available.

### A, B port size

01	1/8
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"


**Body ported** SYJ7 **1** **2** **0** **5** **M** **01**

**Base mounted** SYJ7 **2** **4** **0** **5** **M**

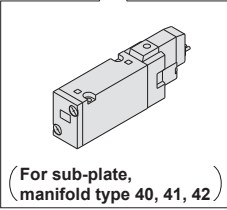


### Body option

0: Pilot valve individual exhaust for the pilot valve



3: Common exhaust type for main and pilot valve




### Coil specifications

Nil	Standard
T	With power saving circuit <24 V, 12 VDC only>


\* Power saving circuit is not available in the case of D, DO or W□ type.

### Manual override


Nil: Non-locking push type



D: Push-turn locking slotted type



E: Push-turn locking lever type




### Thread type

Nil	Rc
F	G
N	NPT
T	NPTF


### Port size

Nil: Without sub-plate

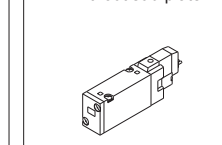


(With gasket and screws)

Note)  
 01: 1/8 With sub-plate

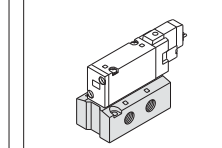

02: 1/4 With sub-plate

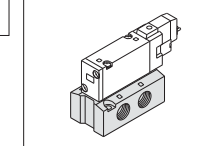

Note) R1, R2 port: 1/4

### Electrical entry

24, 12, 6, 5, 3 VDC 100, 110, 200, 220 VAC				24, 12 VDC 100, 110, 200, 220 VAC	24, 12, 6, 5, 3 VDC
Grommet	L plug connector	M plug connector		DIN terminal	M8 connector
<b>G:</b> Lead wire length 300 mm	<b>L:</b> With lead wire (Length 300 mm)	<b>M:</b> With lead wire (Length 300 mm)	<b>MN:</b> Without lead wire	<b>D:</b> With connector	<b>WO:</b> Without connector cable
<b>H:</b> Lead wire length 600 mm	<b>LN:</b> Without lead wire	<b>LO:</b> Without connector	<b>MO:</b> Without connector	<b>DO:</b> Without connector	<b>W□:</b> With connector cable (Note 1)


Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.

\* LN, MN type: with 2 sockets.  
 \* DIN terminal type "Y" which conforms to EN-175301-803C (former DIN43650C) is also available. For details, refer to page 80.  
 \* For connector cable of M8 connector, refer to back page 10.




## Construction

### 2 position single

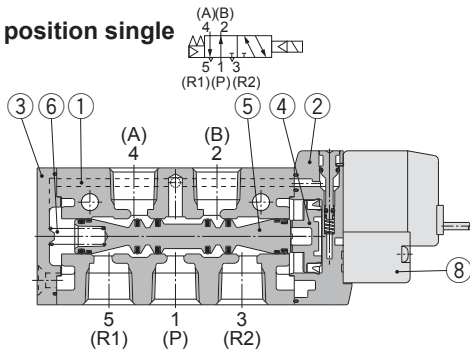


### 2 position double

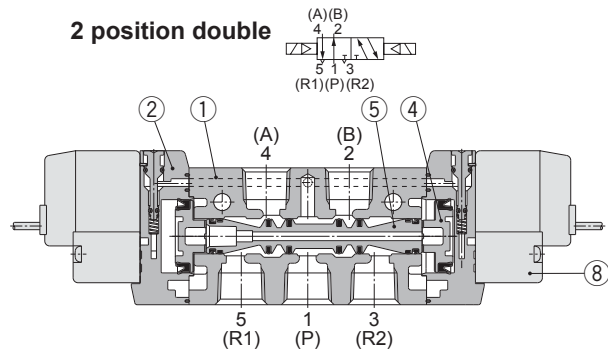


### 3 position closed center/exhaust center/pressure center



#### 3 position closed center



#### 3 position exhaust center



#### 3 position pressure center

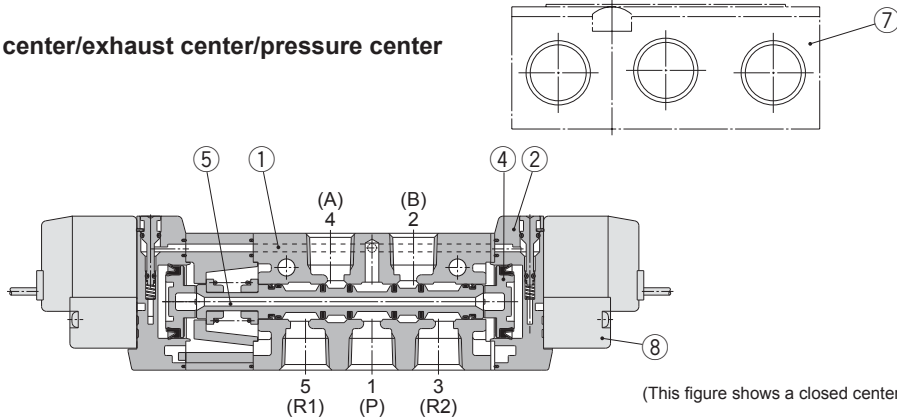

## Component Parts

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Piston plate	Resin	White
3	End cover	Aluminum die-casted	White
4	Piston	Resin	—
5	Spool valve assembly	Aluminum, H-NBR	—
6	Spool spring	Stainless steel	—

## Replacement Parts

No.	Description	No.	Note
7	Sub-plate	SYJ7000-22-1	1/8 Aluminum die-casted
		SYJ7000-22-2	1/4 Aluminum die-casted
8	Pilot valve	V111(T)-□□□	—

## How to Order Pilot Valve Assembly

V111 — 5 G

### Coil specifications

Nil	Standard
T	With power saving circuit (24, 12 VDC only)

\* Power saving circuit is not available in the case of W□ type.

### Rated voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
1	100 VAC 50/60 Hz
2	200 VAC 50/60 Hz
3	110 VAC 50/60 Hz [115 VAC 50/60 Hz]
4	220 VAC 50/60 Hz [230 VAC 50/60 Hz]

\* For type W□, DC voltage is only available.

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor
R	With surge voltage suppressor (Non-polar type)
U	With light/surge voltage suppressor (Non-polar type)

\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.  
\* For type R and U, DC voltage is only available.  
\* Power saving circuit is only available in the "Z" type.

### Electrical entry

G	Grommet, 300 mm lead wire
H	Grommet, 600 mm lead wire
L	L plug connector
LN	Without lead wire
LO	Without connector
M	M plug connector
MN	Without lead wire
MO	Without connector
WO	M8 connector
W□	Without connector cable [With connector cable Note 1)]

\* For connector cable of M8 connector, refer to back page 10.

V115 — 5 D

### Rated voltage

5	24 VDC
6	12 VDC
1	100 VAC 50/60 Hz
2	200 VAC 50/60 Hz
3	110 VAC 50/60 Hz [115 VAC 50/60 Hz]
4	220 VAC 50/60 Hz [230 VAC 50/60 Hz]

### Light/surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor (Non-polar type)
Z	With light/surge voltage suppressor (Non-polar type)

\* DOZ is not available.  
\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

### Electrical entry





D	DIN terminal	With connector
DO	terminal	Without connector

Note) Do not replace V111 (G, H, L, M, W) to V115 (DIN terminal) and vice versa when replacing pilot valve assembly only.

Note 1) Enter the cable length symbols in □. Please be sure to fill in the blank referring to back page 10.

# Series SYJ7000

## How to Order Connector Assembly for L/M Plug Connector

- For DC : SY100-30-4A- 
- For 100 VAC : SY100-30-1A- 
- For 200 VAC : SY100-30-2A- 
- For other voltages of AC : SY100-30-3A- 
- Without lead wire: SY100-30-A  
(with connector and 2 of sockets only)

Lead wire length ●

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

## How to Order M8 Connector Cable

V100-49-1- 


● Cable length

1	300 mm
2	500 mm
3	1000 mm
4	2000 mm
7	5000 mm


## 2 Position Single




Grommet (G), (H): SYJ7120-□<sup>G</sup>□□-01□

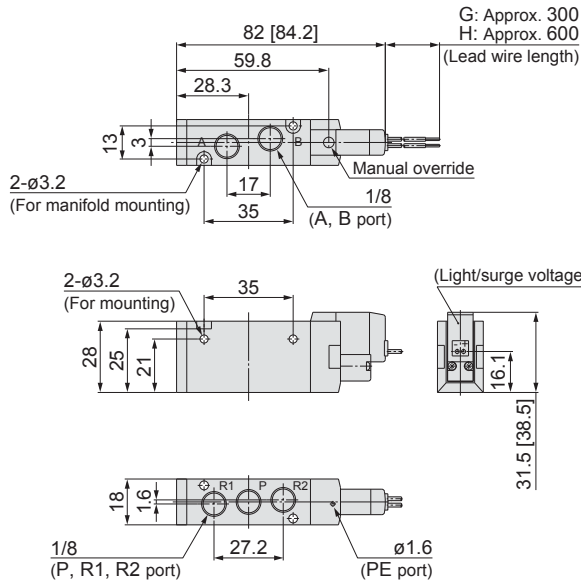


With bracket:  
SYJ7120-□<sup>G</sup>□□-01□-F

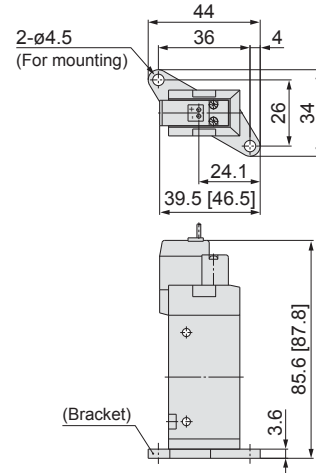


Built-in one-touch fitting:  
SYJ7120-□<sup>G</sup>□□-<sup>C6, N7</sup><sub>C8, N9</sub>□ (-F)

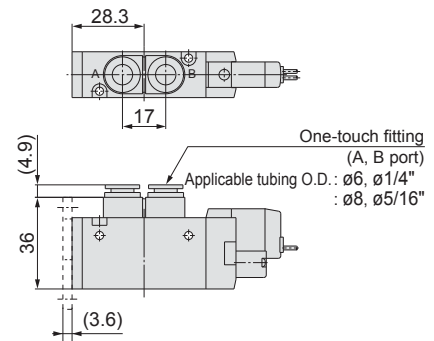


L plug connector (L):  
SYJ7120-□L□□-01□ (-F)

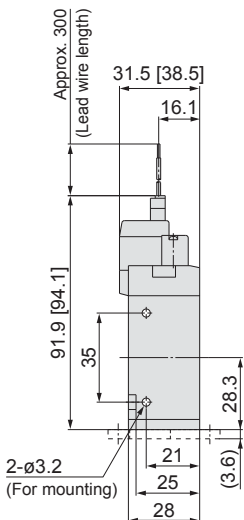


M plug connector (M):  
SYJ7120-□M□□-01□ (-F)

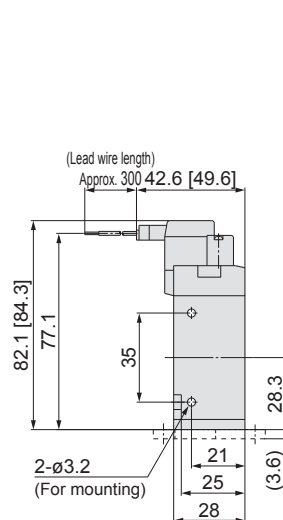

DIN terminal (D):  
SYJ7120-□D□□-01□ (-F)

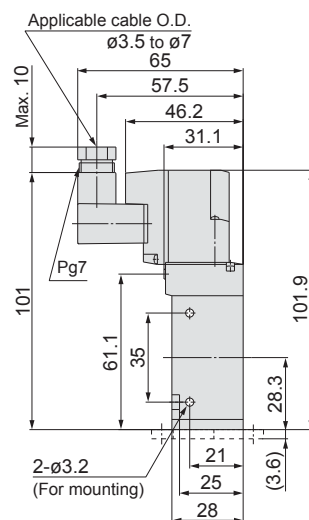

M8 connector (WO):  
SYJ7120-□WO□□-01□ (-F)

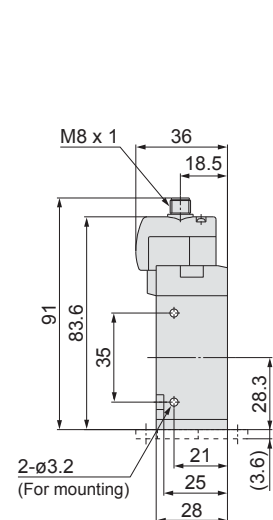

Refer to back page 11 for dimensions with connector cable.



# Series SYJ7000

## 2 Position Double



Grommet (G), (H): SYJ7220-□<sup>G</sup>□□-01□

Built-in one-touch fitting:  
SYJ7220-□<sup>G</sup>□□-<sup>C6, N7</sup>□□<sup>C8, N9</sup>□


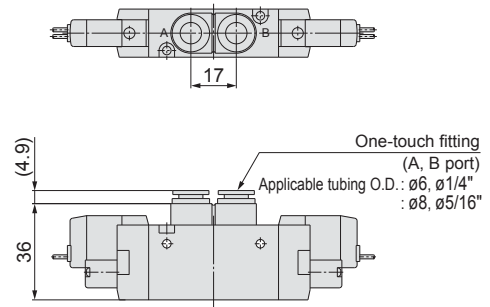
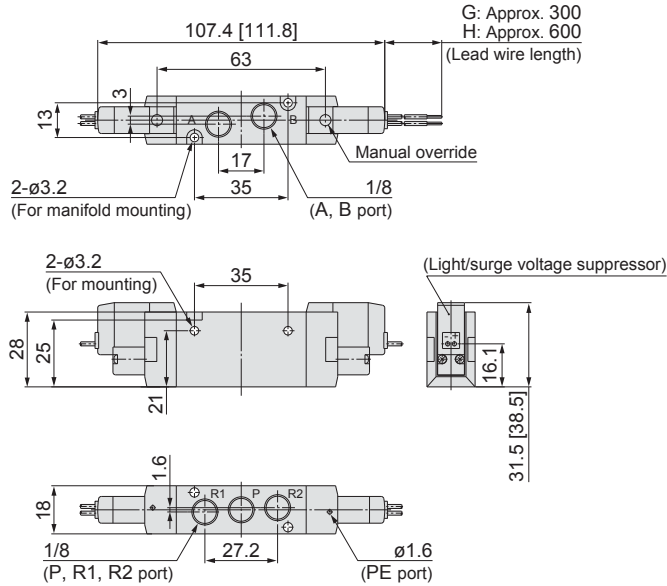


L plug connector (L):  
SYJ7220-□L□□-01□

M plug connector (M):  
SYJ7220-□M□□-01□

DIN terminal (D):  
SYJ7220-□D□□-01□

M8 connector (WO):  
SYJ7220-□WO□□-01□

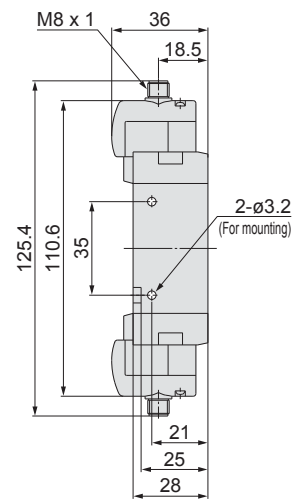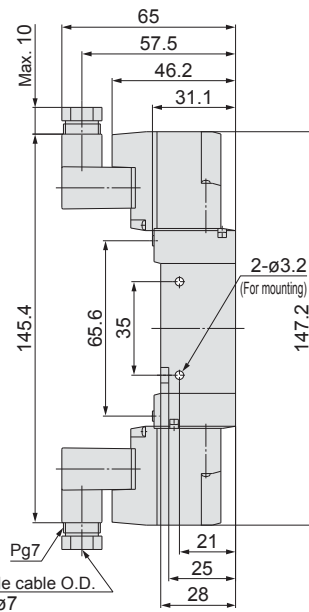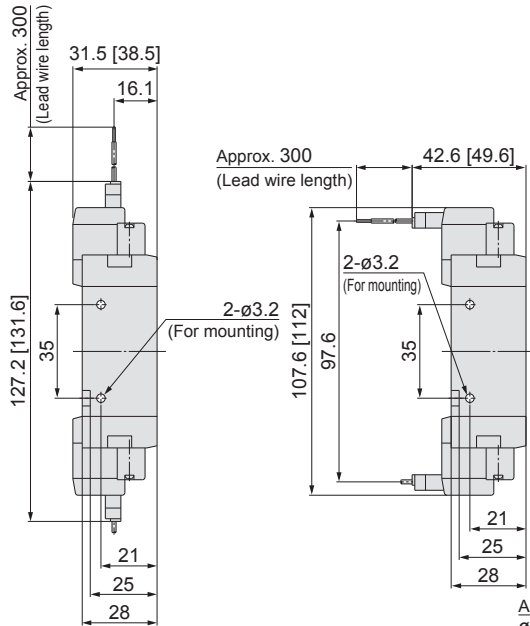


Refer to back page 11 for dimensions with connector cable.

## 3 Position Closed Center/Exhaust Center/Pressure Center



Grommet (G), (H): SYJ7<sup>3</sup>/<sub>4</sub>20-□<sub>G</sub>□□-01□

Built-in one-touch fitting:  
SYJ7<sup>3</sup>/<sub>4</sub>20-□<sub>H</sub>□□-<sup>C6, N7</sup>/<sub>C8, N9</sub>□

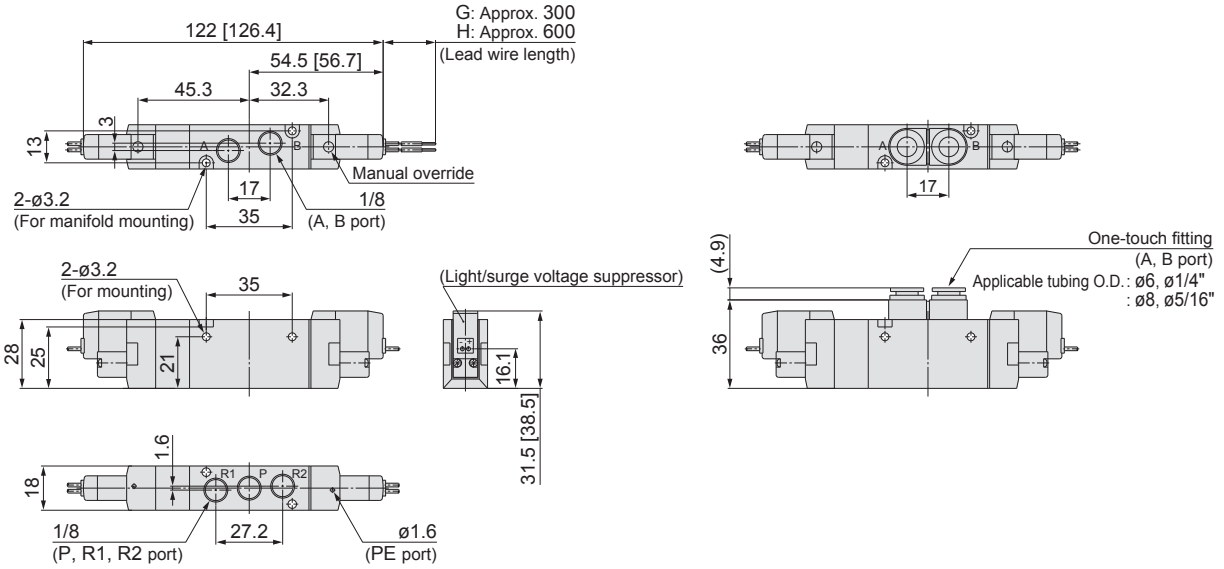


L plug connector (L):  
SYJ7<sup>3</sup>/<sub>4</sub>20-□L□□-01□

M plug connector (M):  
SYJ7<sup>3</sup>/<sub>4</sub>20-□M□□-01□

DIN terminal (D):  
SYJ7<sup>3</sup>/<sub>4</sub>20-□D□□-01□

M8 connector (WO):  
SYJ7<sup>3</sup>/<sub>4</sub>20-□WO□□-01□

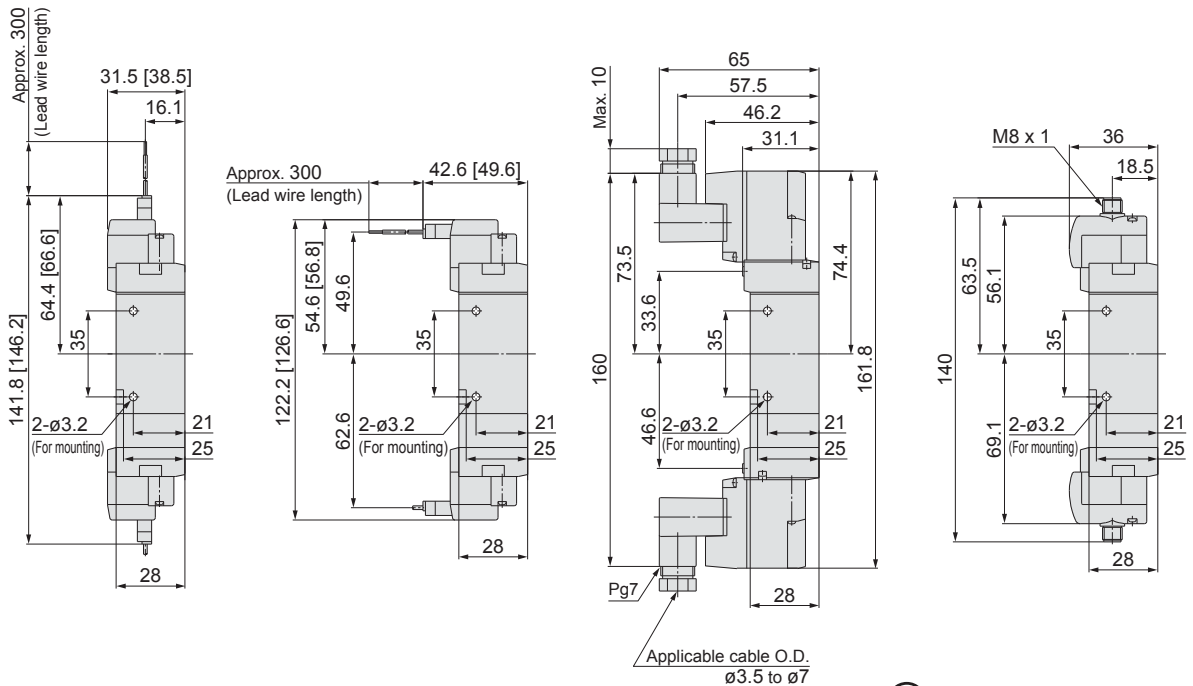


Refer to back page 11 for dimensions with connector cable.

# Series SYJ7000


## 2 Position Single



Grommet (G), (H): SYJ7140-□<sup>G</sup>□□□-<sup>01</sup>□□<sub>02</sub>□

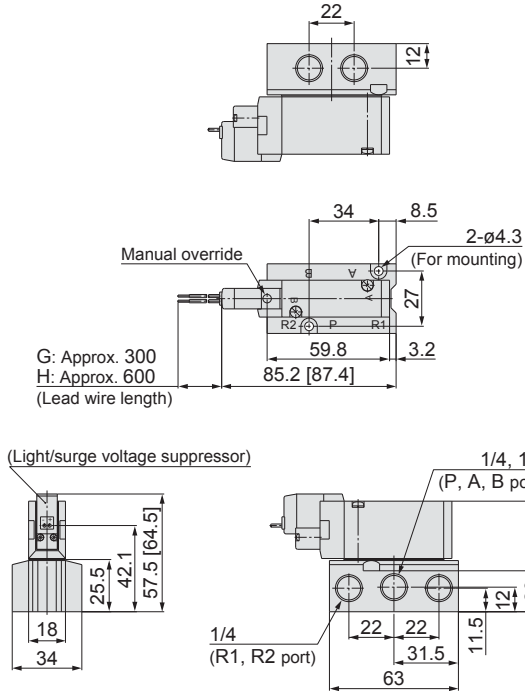

### With interface regulator




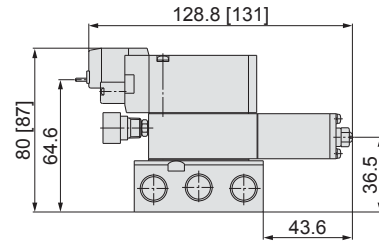


L plug connector (L):  
SYJ7140-□L□□□-<sup>01</sup>□□<sub>02</sub>□

M plug connector (M):  
SYJ7140-□M□□□-<sup>01</sup>□□<sub>02</sub>□

DIN terminal (D):  
SYJ7140-□D□□□-<sup>01</sup>□□<sub>02</sub>□

M8 connector (WO):  
SYJ7140-□WO□□□-<sup>01</sup>□□<sub>02</sub>□

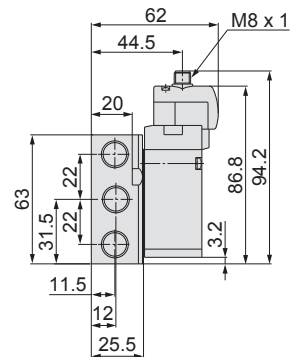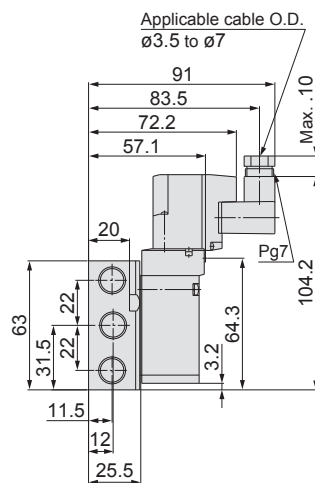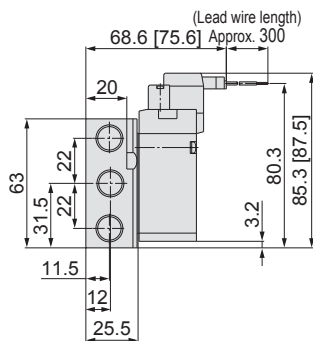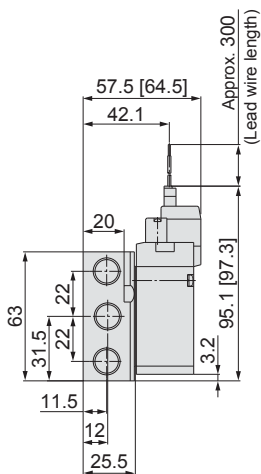


Refer to back page 11 for dimensions with connector cable.


## 2 Position Double



Grommet (G), (H): SYJ7240-□G□□-01□

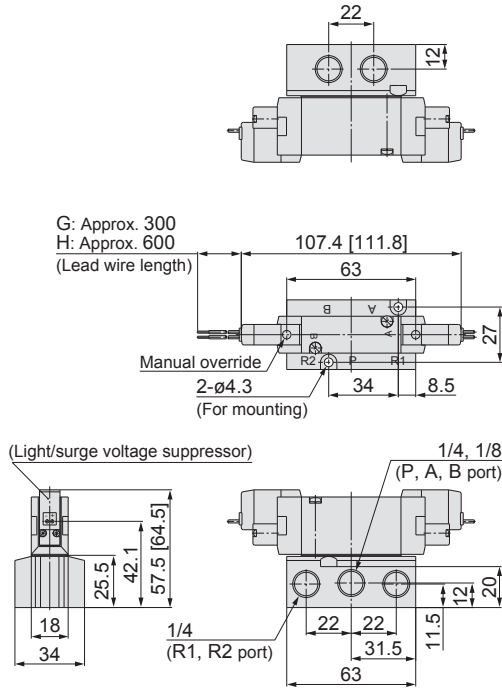

With interface regulator




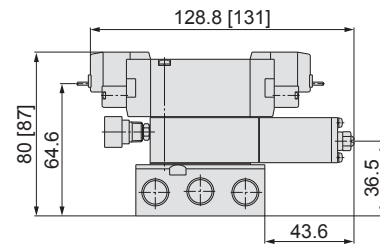


L plug connector (L):  
SYJ7240-□L□□-01□

M plug connector (M):  
SYJ7240-□M□□-01□

DIN terminal (D):  
SYJ7240-□D□□-01□

M8 connector (WO):  
SYJ7240-□WO□□-01□

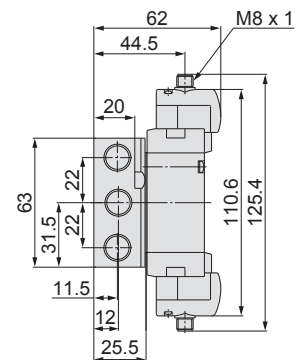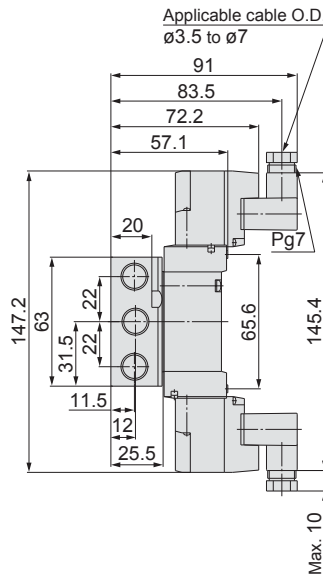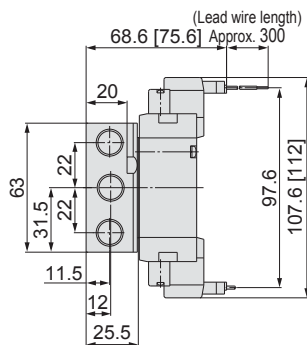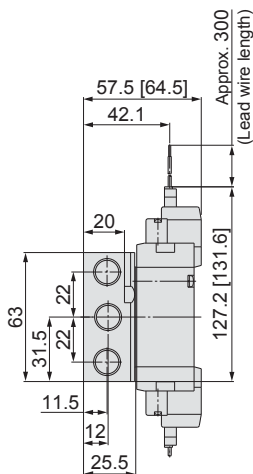


Refer to back page 11 for dimensions with connector cable.

# Series SYJ7000

## 3 Position Closed Center/Exhaust Center/Pressure Center



Grommet (G), (H): SYJ7<sup>3</sup>/<sub>4</sub>40-□□□□-01□

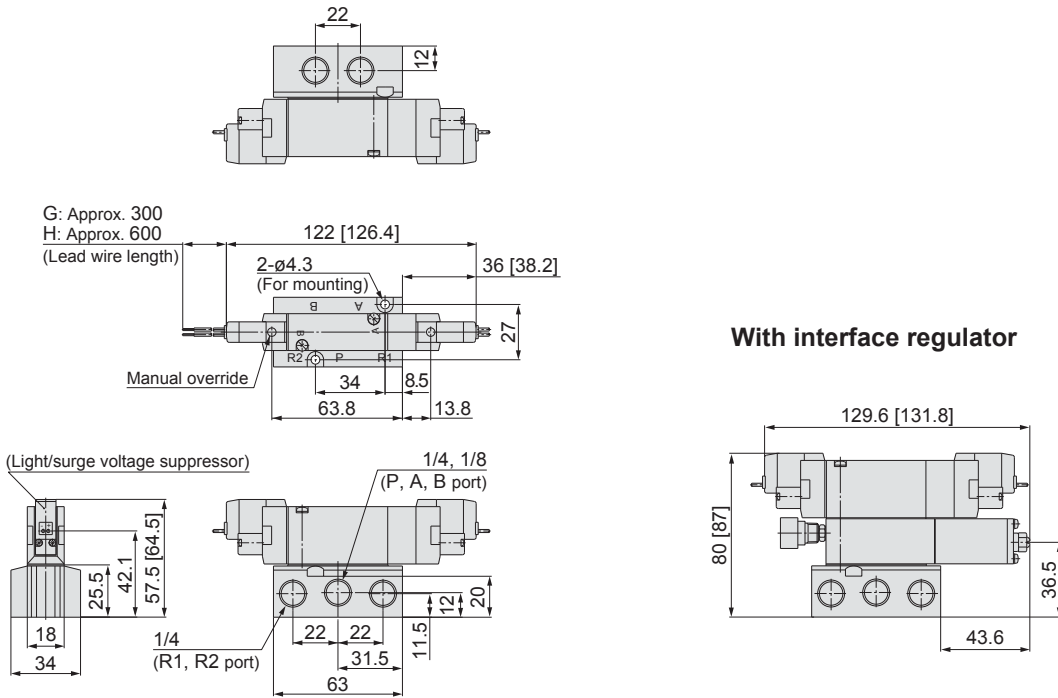


L plug connector (L):  
SYJ7<sup>3</sup>/<sub>4</sub>40-□□□□-01□

M plug connector (M):  
SYJ7<sup>3</sup>/<sub>4</sub>40-□□□□-01□

DIN terminal (D):  
SYJ7<sup>3</sup>/<sub>4</sub>40-□□□□-01□

M8 connector (WO):  
SYJ7<sup>3</sup>/<sub>4</sub>40-□□□□-01□

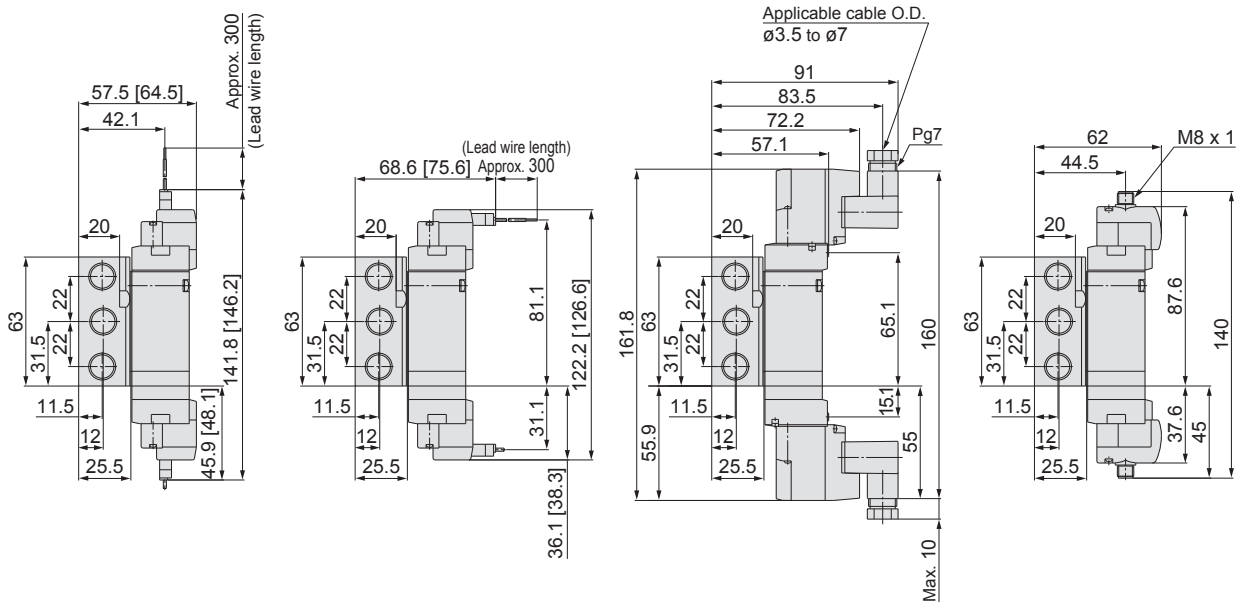


Refer to back page 11 for dimensions with connector cable.



## Series SYJ7000

# Manifold Specifications

### Manifold Standard

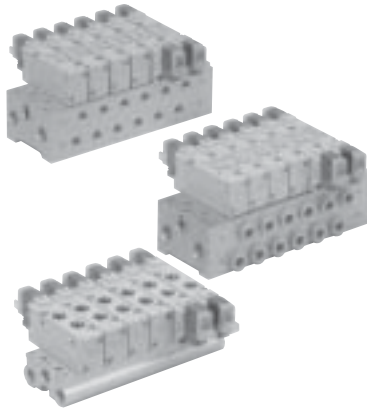

### Manifold Specifications

Model		Type 20	Type 21	Type 40	Type 20	Type 42
Manifold type		Single base/B mount				
P (SUP), R (EXH)		Common SUP, Common EXH				
Valve stations		2 to 15 stations		2 to 20 stations		
A, B port Porting specifications	Location	Valve		Base	Base	
	Direction	Top		Bottom	Side	
Port size	P, R port	1/8		1/4		
	A, B port	1/8 C6 (One-touch fitting for ø6) C8 (One-touch fitting for ø8)		1/8		C6 (One-touch fitting for ø6) C8 (One-touch fitting for ø8)

### Flow Characteristics

Manifold			Port size		Flow characteristics					
					1→4/2 (P→A/B)			4/2→5/3 (A/B→R)		
			1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv
Body ported for internal pilot	Type SS5YJ7-20	SYJ7□2□	1/8	1/8	2.2	0.35	0.57	2.3	0.26	0.55
			1/8	C6	1.4	0.32	0.37	2.0	0.25	0.49
			1/8	C8	1.7	0.38	0.45	2.1	0.25	0.51
			1/4	1/8	2.1	0.36	0.55	2.3	0.26	0.54
			1/4	C6	1.4	0.32	0.36	2.1	0.24	0.50
Base mounted for internal pilot	Type SS5YJ7-40 Type SS5YJ7-41 Type SS5YJ7-42-C6 Type SS5YJ7-42-C8	SYJ7□4□	1/4	1/8	2.1	0.28	0.51	2.5	0.23	0.59
			1/4	1/8	2.0	0.30	0.50	2.2	0.30	0.55
			1/4	C6	1.5	0.32	0.38	2.2	0.23	0.52
			1/4	C8	1.9	0.24	0.46	2.2	0.26	0.53



Note) Value at manifold base mounted, 2 position single operating

### How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.

Example: ● **SS5YJ7-20-03** ..... 1 pc. (Manifold base)  
 \* **SYJ7120-5G-01** ..... 2 pcs. (Valve)  
 \* **SYJ7000-21-1A** ..... 1 pc. (Blanking plate assembly)

● **SS5YJ7-41-03-01** ..... 1 pc. (Manifold base)  
 \* **SYJ7140-5LZ** ..... 1 pc. (Valve)  
 \* **SYJ7240-5LZ** ..... 1 pc. (Valve)  
 \* **SYJ7000-21-1A** ..... 1 pc. (Blanking plate assembly)

↳ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


\* Use manifold specification sheet.

# Series SYJ7000

## Flat Ribbon Cable Manifold

- Multiple valve wiring is simplified through the use of the flat cable connector.
- Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.

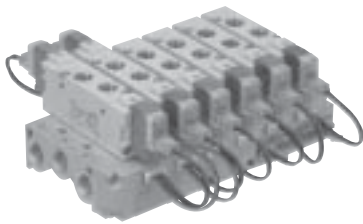

## Flat Ribbon Cable Manifold Specifications

Model		Type 21P
Manifold type		Single base/B mount
P (SUP), R (EXH)		Common SUP, Common EXH
Valve stations		3 to 12 stations
A, B port location		Valve
Port size	P, R port	1/4
	A, B port	1/8, C6, C8
Applicable flat ribbon cable connector		Socket: 26 pins MIL type with strain relief (MIL-C-83503)
Internal wiring		In common between +COM and -COM (Z type: +COM only).
Rated voltage		24, 12 VDC

Note 1) The value is for manifold base and individually operated 2 position type.  
 Note 2) The withstand voltage specification for the wiring unit section is JIS C 0704, Grade 1 or its equivalent.

## Flow Characteristics

Manifold	Port size		Flow characteristics						
	1(P), 5/3(R) Port	2(B), 4(A) Port	1→4/2 (P→A/B)			4/2→5/3 (A/B→R)			
			C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv	
Body ported for internal pilot	Type SSSYJ7-21P-01	1/4	1/8	2.1	0.36	0.55	2.3	0.26	0.54
	Type SSSYJ7-21P-C6	1/4	C6	1.4	0.32	0.36	2.1	0.24	0.50
	Type SSSYJ7-21P-C8	1/4	C8	1.8	0.37	0.50	2.1	0.20	0.50

Note) Value at manifold base mounted, 2 position single operating

## How to Order Manifold (Example)


Instruct by specifying the valves, blanking plate assembly and connector assembly to be mounted on the manifold along with the manifold base model no.

Example: **SS5YJ7-21P-07** ..... 1 pc. (Manifold base)  
 \* **SYJ7123-5LOU-C8** ..... 3 pcs. (Valve)  
 \* **SYJ7223-5LOU-C8** ..... 3 pcs. (Valve)  
 \* **SYJ7000-21-3A** ..... 1 pc. (Blanking plate assembly)  
 \* **SY3000-37-3A** ..... 3 pcs. (Connector assembly)  
 \* **SY3000-37-4A** ..... 3 pcs. (Connector assembly)

↳The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

## How to Order Valve

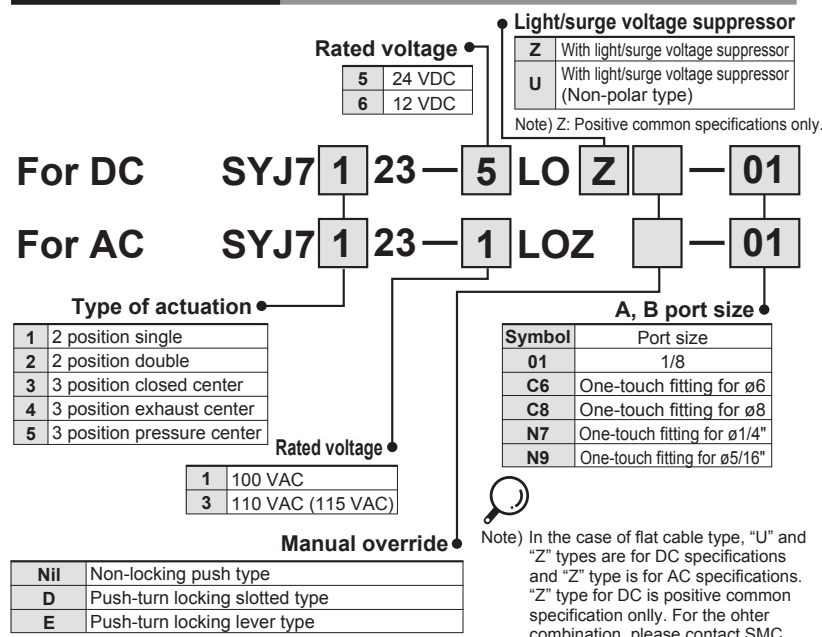

## How to Order Connector Assembly

### For 12, 24 VDC

Single solenoid	SY3000-37-3A
Double solenoid, 3 position type	SY3000-37-4A
Single solenoid, individual SUP, EXH spacer	SY3000-37-3A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-6A
Interface regulator for single solenoid	SY3000-37-3A
Double solenoid, 3 position interface regulator	SY3000-37-6A
3 port adaptor plate	SY3000-37-3A

### For 100 VAC


Single solenoid	SY3000-37-32A
Double solenoid, 3 position type	SY3000-37-33A
Single solenoid, individual SUP, EXH spacer	SY3000-37-15A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-34A
Interface regulator for single solenoid	SY3000-37-15A
Double solenoid, 3 position interface regulator	SY3000-37-34A
3 port adaptor plate	SY3000-37-32A

### For 100 VAC (115 VAC)

Single solenoid	SY3000-37-35A
Double solenoid, 3 position type	SY3000-37-36A
Single solenoid, individual SUP, EXH spacer	SY3000-37-19A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-37A
Interface regulator for single solenoid	SY3000-37-19A
Double solenoid, 3 position interface regulator	SY3000-37-37A
3 port adaptor plate	SY3000-37-35A

## Manifold Standard /Common SUP/Common EXH

### Type 20 (5 Port/Body ported)

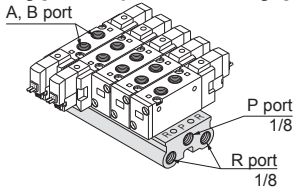

How to Order

**SS5YJ7-20-05**

Stations	
02	2 stations
:	:
15	15 stations


P, R port thread type	
Nil	Rc
00F	G
00N	NPT
00T	NPTF

Applicable solenoid valve

SYJ7□20-□□□□-C6  
C8  
SYJ7□23-□□□□-C6  
C8

Note) For more than 6 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 21 (5 Port/Body ported)

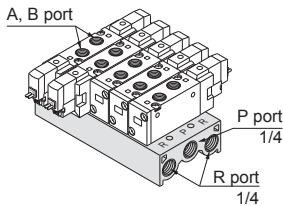

How to Order

**SS5YJ7-21-05**

Stations	
02	2 stations
:	:
20	20 stations


P, R port thread type	
Nil	Rc
00F	G
00N	NPT
00T	NPTF

Applicable blanking plate assembly  
SYJ7000-21-1A

Applicable individual EXH spacer assembly  
SYJ7000-17-1A

Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 40 (5 Port/Base mounted)

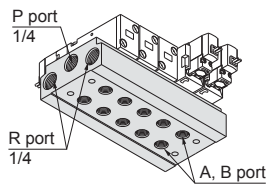

How to Order

**SS5YJ7-40-05-01**

Stations	
02	2 stations
:	:
20	20 stations

A, B port size	
01	1/8


Thread type	
Nil	Rc
F	G
N	NPT
T	NPTF

Applicable solenoid valve

SYJ7□40-□□□□  
SYJ7□43-□□□□

Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 41 (5 Port/Base mounted)

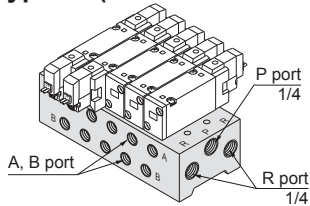

How to Order

**SS5YJ7-41-05-01**

Stations	
02	2 stations
:	:
20	20 stations

A, B port size	
01	1/8


Thread type	
Nil	Rc
F	G
N	NPT
T	NPTF

Applicable blanking plate assembly  
SYJ7000-21-1A

Applicable individual EXH spacer assembly  
SYJ7000-17-2A

Note) For more than 8 stations, supply air to both sides of P port and exhaust air from both sides of R port.

### Type 42 (5 Port/Base mounted)

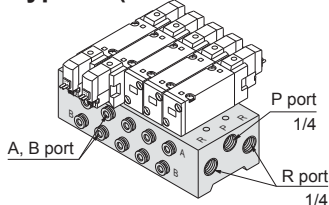

How to Order

**SS5YJ7-42-05-C6**

Stations	
02	2 stations
:	:
20	20 stations

A, B port size	
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8
N7	One-touch fitting for ø1/4"
N9	One-touch fitting for ø5/16"

Thread type	
Nil	Rc
F	G
N	NPT
T	NPTF


Applicable individual SUP spacer assembly  
SYJ7000-16-2A

Applicable interface regulator  
ARBYJ7000-00-P

Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

## Flat Ribbon Cable Manifold /Common SUP/Common EXH

### Type 21P (5 Port/Body ported)

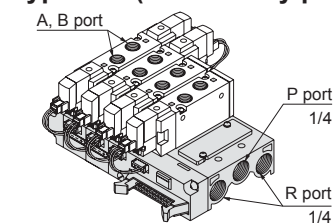

How to Order

**SS5YJ7-21P-05**

Stations	
03	3 stations
:	:
12	12 stations

P, R port thread type	
Nil	Rc
00F	G
00N	NPT
00T	NPTF

Applicable solenoid valve  
Refer to page 59.


Applicable blanking plate assembly  
SYJ7000-21-3A

Applicable connector assembly  
Refer to page 59.

Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

# Series SYJ7000

## Combinations of Solenoid Valve, Manifold Gasket and Manifold Base

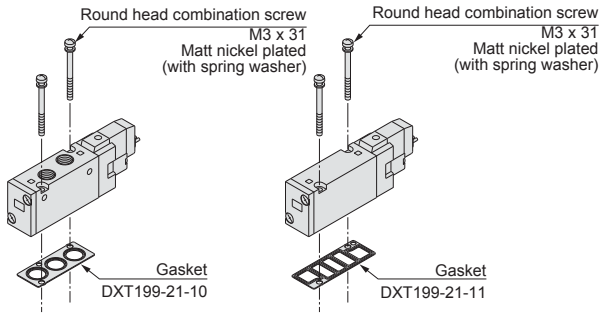

**Applicable manifold base**  
Type SS5YJ7-20  
Type SS5YJ7-21


**Applicable manifold base Sub-plate**  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42

## Individual EXH Spacer Assembly

### SYJ7000-17-1 □ A

• Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

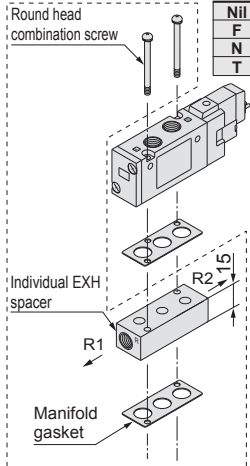


**Applicable manifold base**  
Type SS5YJ7-20  
Type SS5YJ7-21

### SYJ7000-17-2 □ A

• Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

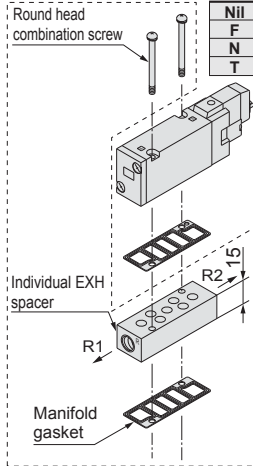


**Applicable manifold base**  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42

## Individual SUP Spacer Assembly

### SYJ7000-16-2 □ A

• Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

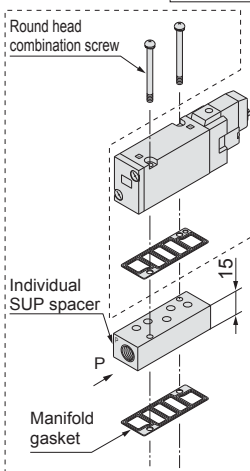


**Applicable manifold base**  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42

## Interface Regulator (P port regulation)

Spacer type regulating valve on manifold block can regulate the pressure to the valve individually.

### ARBYJ7000-00-P

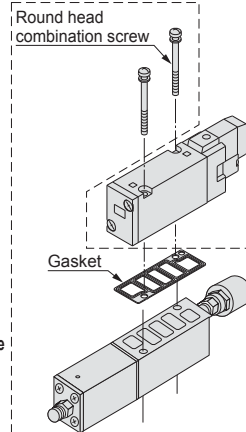

**Applicable manifold base**  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42




Refer to back page 12 prior to handling.

## Mix Installation of the SYJ700 and the SYJ7000 Valves on the Same Manifold

- Use of an adapter plate makes it possible to mount Series SYJ700 on the manifold bases of series SYJ7000.
- When mounting the SYJ700 valve on the SYJ7000 manifold, the SYJ700 solenoid must be positioned on the same side of the manifold as a single solenoid SYJ700. (Refer to the figure below.)
- For base mounted style, the A port of the 3 port valve flows out the B port of manifold base.

### Adapter plate assembly SYJ700-3-1A


SYJ700 Series  
Body ported

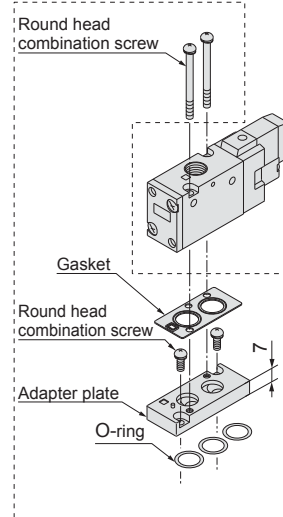

**Applicable manifold base**  
Type SS5YJ7-20  
Type SS5YJ7-21

### Adapter plate assembly SYJ700-3-2A


SYJ700 Series  
Base mounted

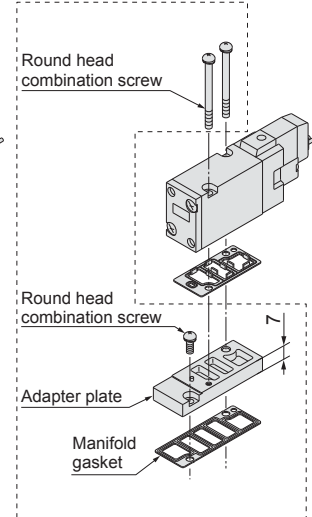

**Applicable manifold base**  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42


## Blanking Plate Assembly

### SYJ7000-21-1A

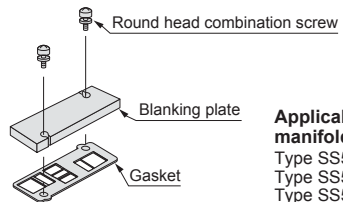

**Applicable manifold base**  
Type SS5YJ7-20  
Type SS5YJ7-21  
Type SS5YJ7-40  
Type SS5YJ7-41  
Type SS5YJ7-42

### SYJ7000-21-3A

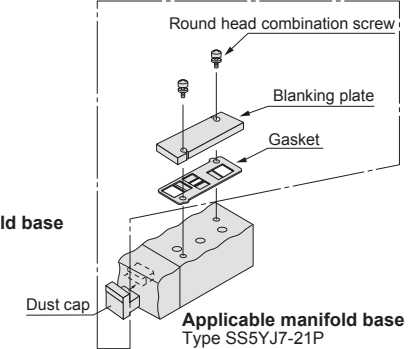

**Applicable manifold base**  
Type SS5YJ7-21P

### ⚠ Caution

Mounting screw tightening torques


M3: 0.8 N·m

Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.



## Type 20: Top Proted/SS5YJ7-20- Stations -00□




### Grommet (G)

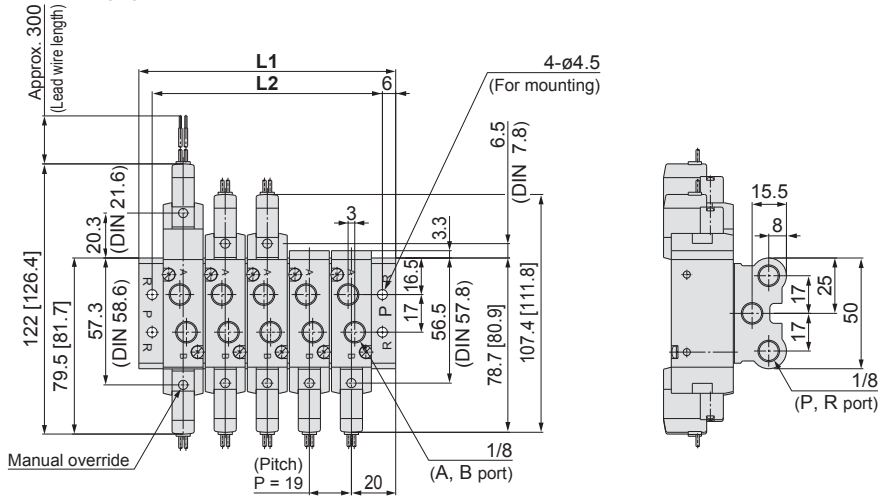


### Built-in one-touch fitting

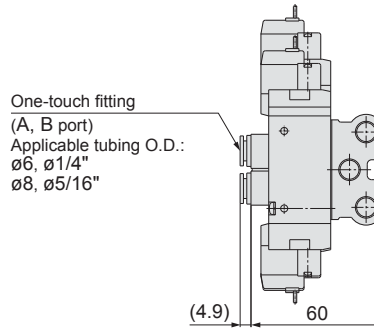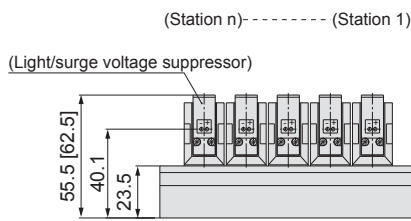


### L plug connector (L)

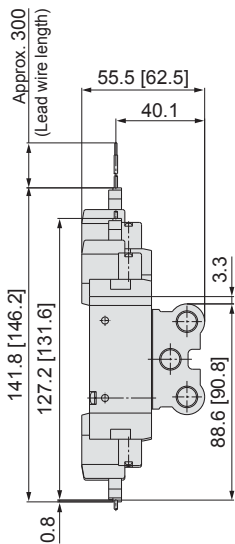


### M plug connector (M)

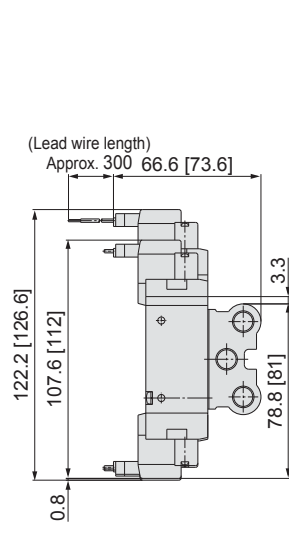

### DIN terminal (D)

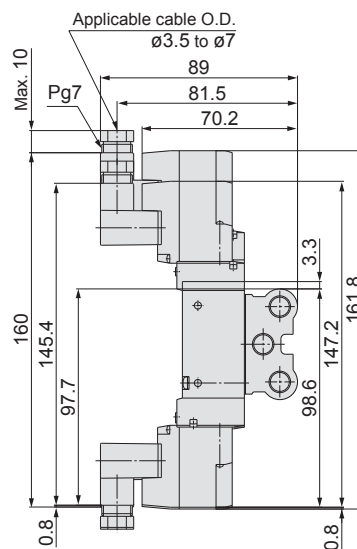

### M8 connector (WO)

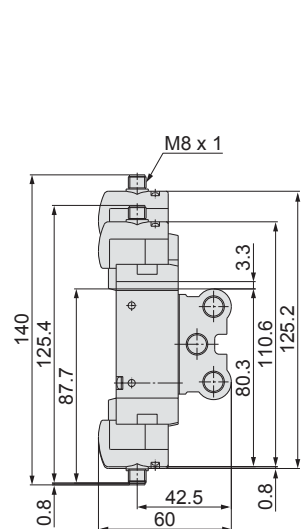

Refer to back page 11 for dimensions with connector cable.



Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	Station 15
L1	59	78	97	116	135	154	173	192	211	230	249	268	287	306
L2	47	66	85	104	123	142	161	180	199	218	237	256	275	294

# Series SYJ7000



## Type 21: Top Ported/SS5YJ7-21- Stations (-00□)




### Grommet (G)

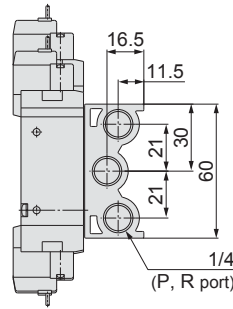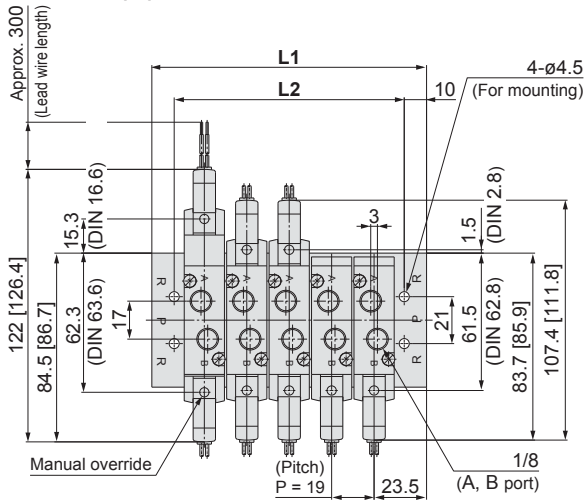


### Built-in one-touch fitting

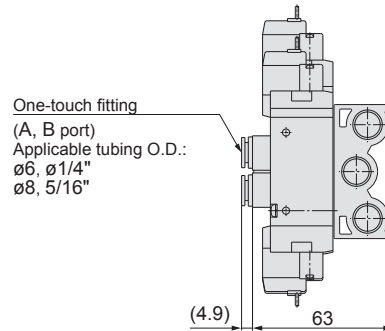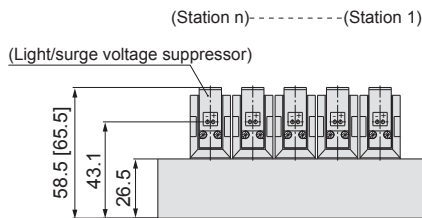


### L plug connector (L)

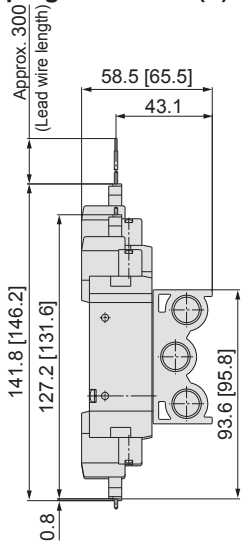


### M plug connector (M)

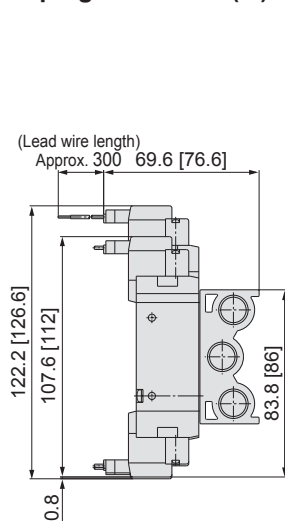

### DIN terminal (D)

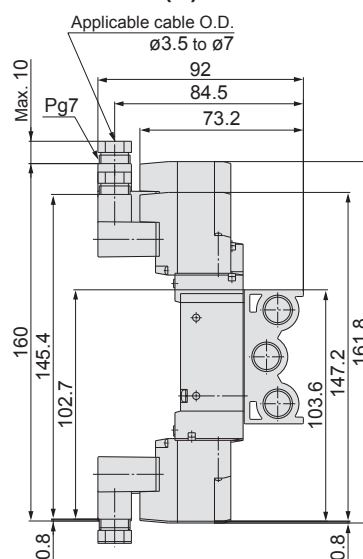

### M8 connector (WO)

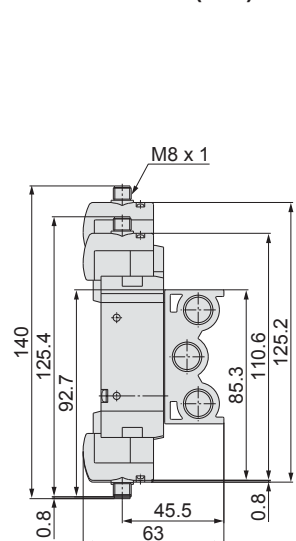


Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	66	85	104	123	142	161	180	199	218	237	256	275	294	313	332	351	370	389	408
L2	46	65	84	103	122	141	160	179	198	217	236	255	274	293	312	331	350	369	388


## Type 40: Bottom Ported/SS5YJ7-40- Stations -01 □




### Grommet (G)

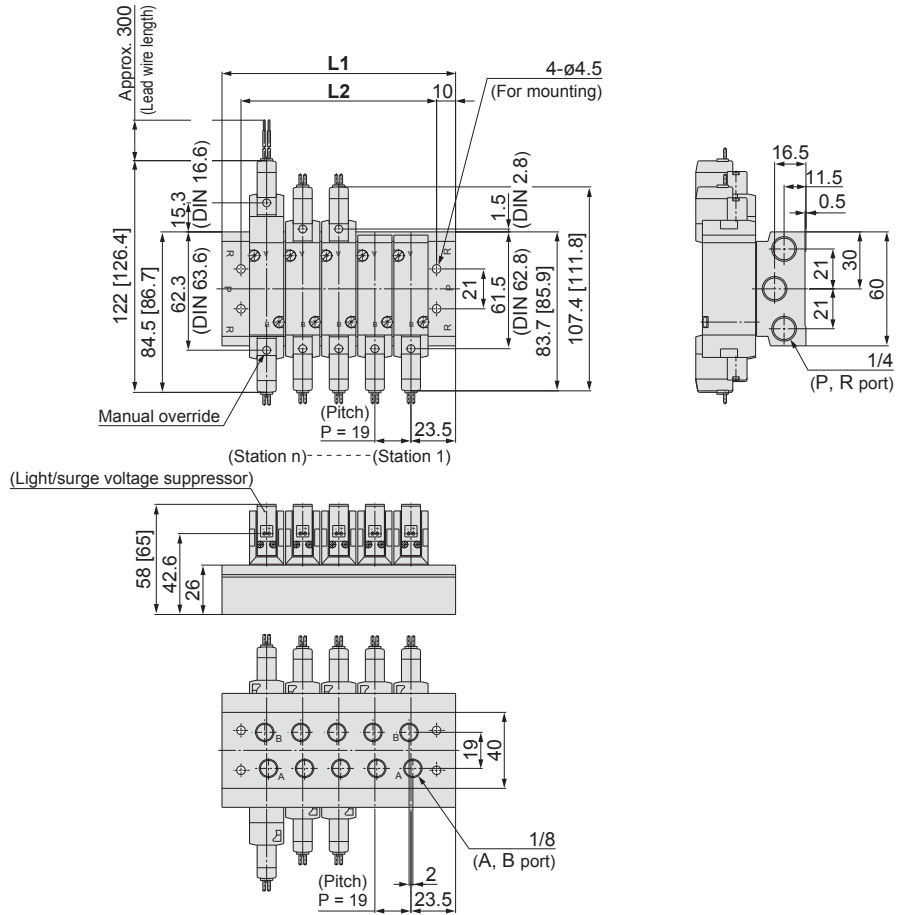


### L plug connector (L)

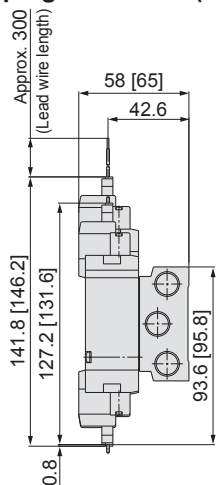


### M plug connector (M)

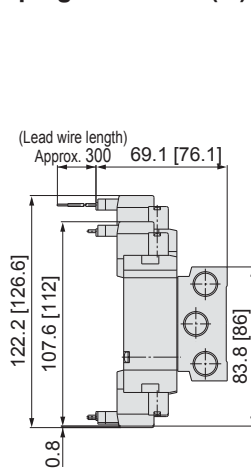

### DIN terminal (D)

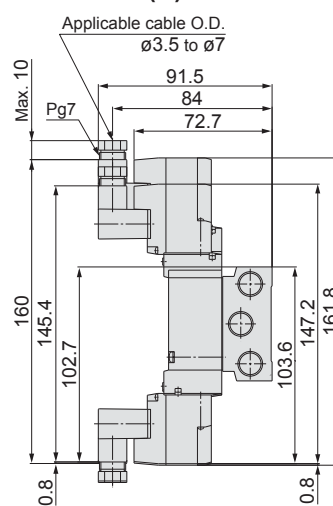

### M8 connector (WO)

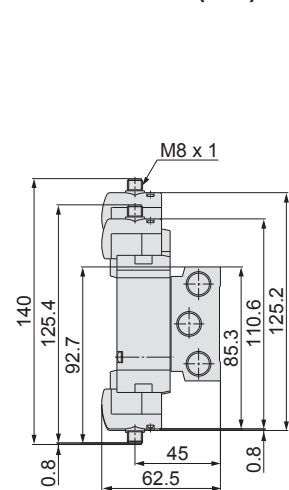

Refer to back page 11 for dimensions with connector cable.



Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	66	85	104	123	142	161	180	199	218	237	256	275	294	313	332	351	370	389	408
L2	46	65	84	103	122	141	160	179	198	217	236	255	274	293	312	331	350	369	388

# Series SYJ7000


Type 41: Side Ported/SS5YJ7-41- Stations -01 □




## Grommet (G)

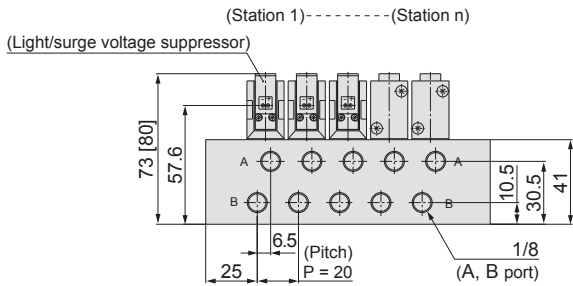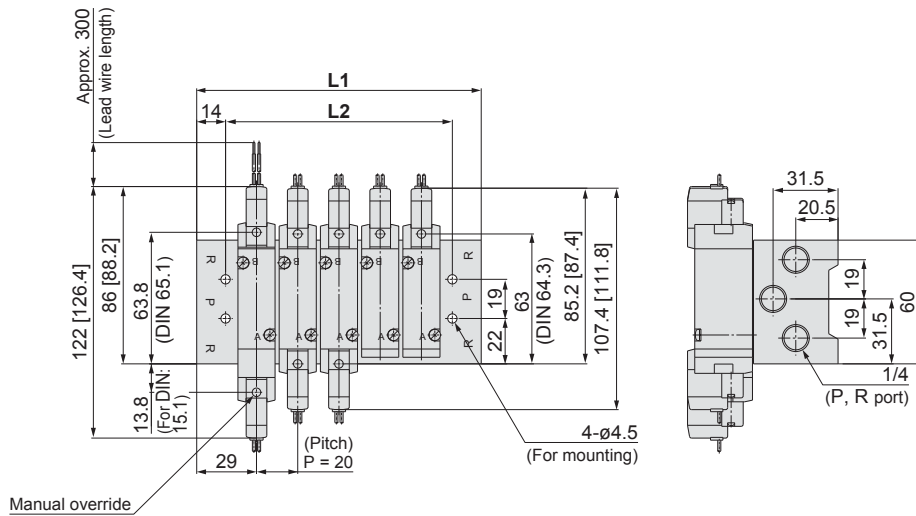


## L plug connector (L)

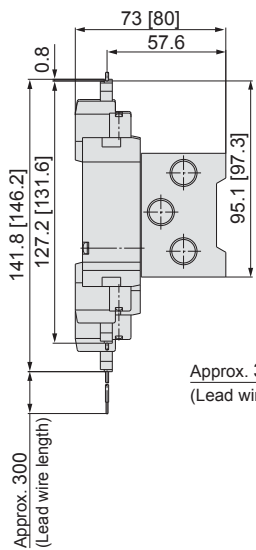


## M plug connector (M)

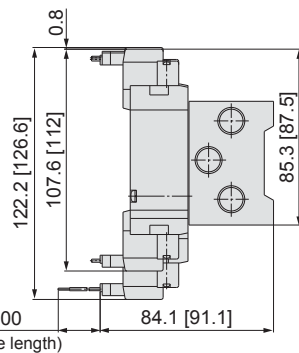

## DIN terminal (D)

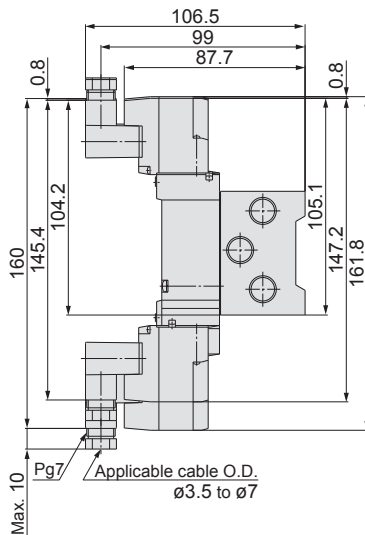

## M8 connector (WO)


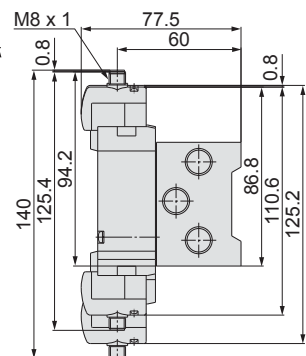


Refer to back page 11 for dimensions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	78	98	118	138	158	178	198	218	238	258	278	298	318	338	358	378	398	418	438
L2	50	70	90	110	130	150	170	190	210	230	250	270	290	310	330	350	370	390	410



### Grommet (G)



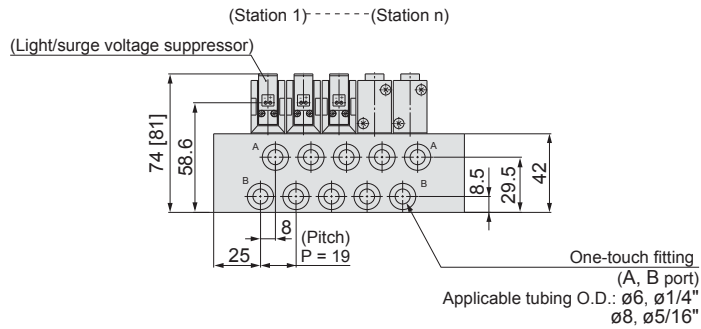
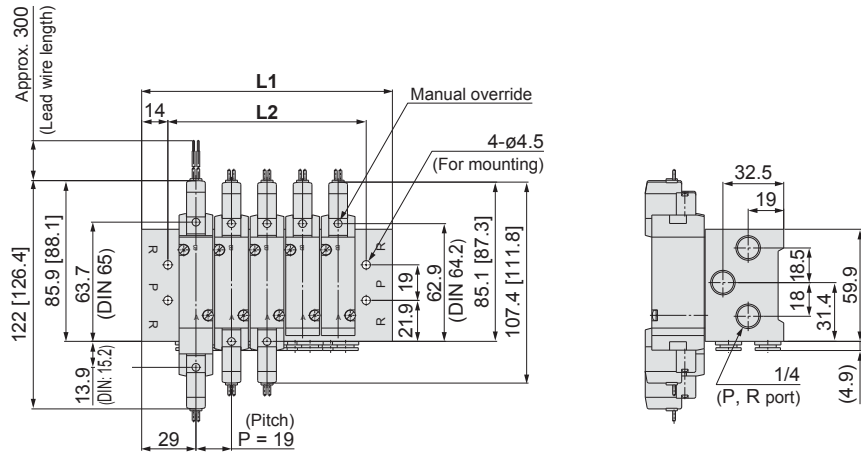



### L plug connector (L)

### M plug connector (M)

### DIN terminal (D)

### M8 connector (WO)

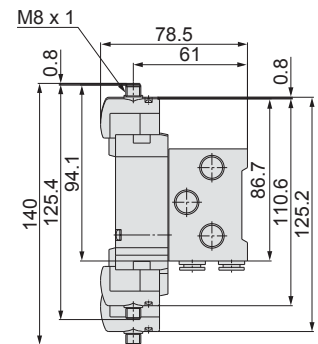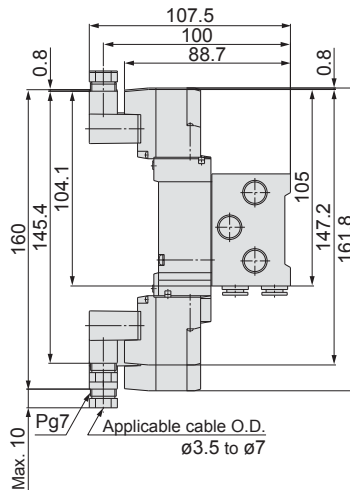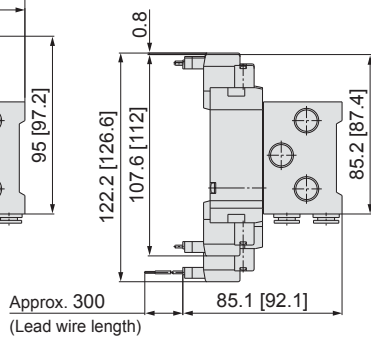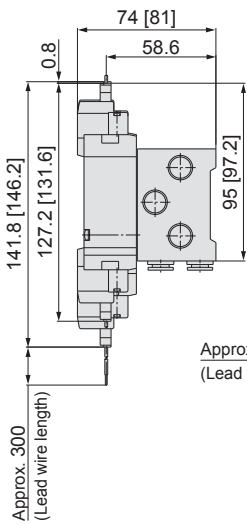

 Refer to back page 11 for dimensions with connector cable.


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	77	96	115	134	153	172	191	210	229	248	267	286	305	324	343	362	381	400	419
L2	49	68	87	106	125	144	163	182	201	220	239	258	277	296	315	334	353	372	391

# Series SYJ7000


## Flat Ribbon Cable Manifold



### SS5YJ7-21P- Stations (-00□)

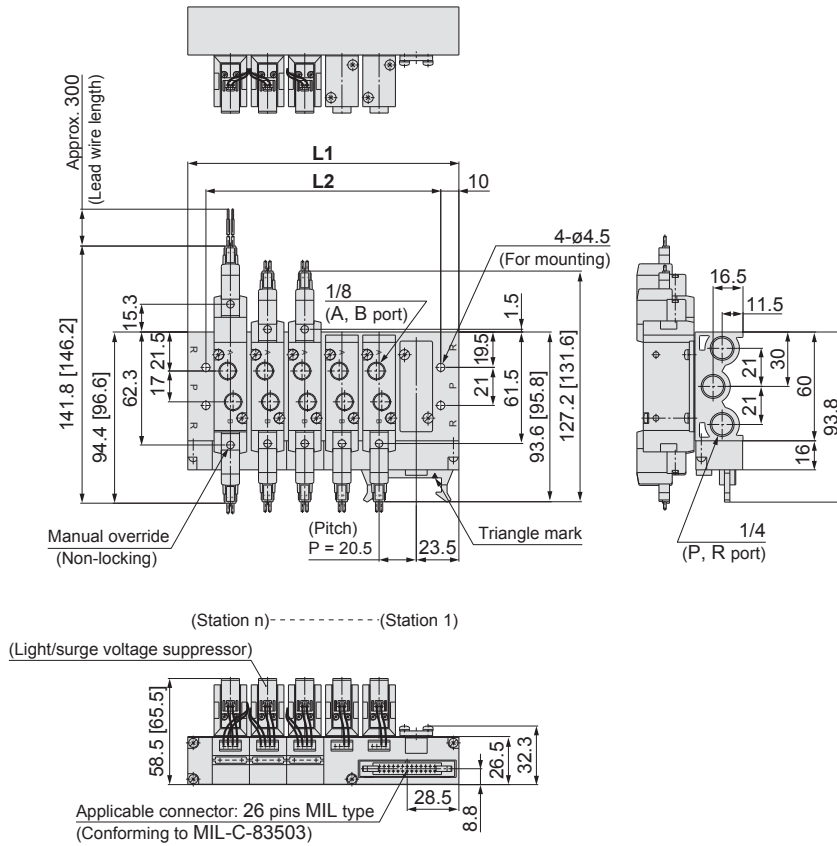

### For built-in one-touch fitting

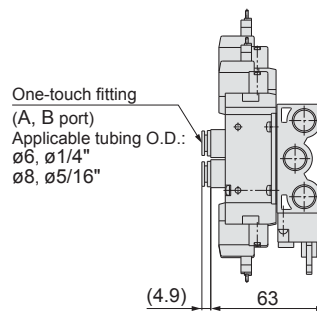

Station n	Station 3	4	5	6	7	8	9	10	11	Station 12
L1	88	108.5	129	149.5	170	190.5	211	231.5	252	272.5
L2	68	88.5	109	129.5	150	170.5	191	211.5	232	252.5


# Series SYJ5000/7000 Made to Order



(For detailed specifications, delivery and pricing, please contact SMC.)

## Body Ported External Pilot

Applicable solenoid valve series SYJ5□20R, SYJ7□20R

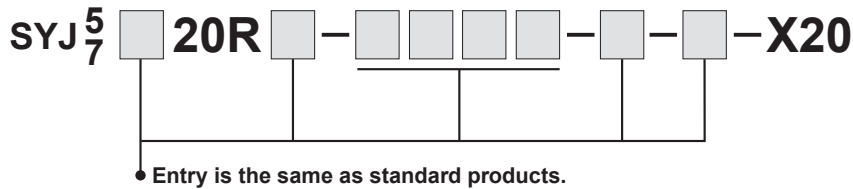

### Operating Pressure Range MPa

Operating pressure range	-100 kPa to 0.7
Pilot pressure range	0.15 to 0.7

### External Pilot Port

Series	Port size
SYJ5000, SYJ7000	M5 x 0.8


### Dimensions

SYJ5000: 8 mm } longer in total length.  
SYJ7000: 8 mm }


### JIS Symbol

#### Body ported


2 position single

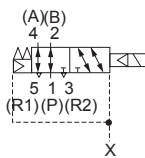


2 position double

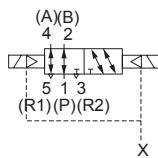


3 position closed center

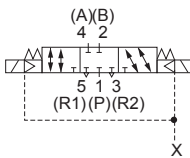

3 position exhaust center

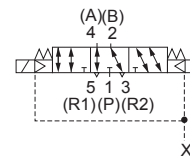

3 position pressure center

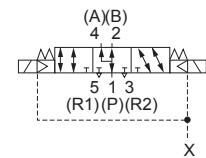

# Series SYJ5000/7000

## Made to Order

### DIN Connector Conforming to EN-175301-803C (former DIN 43650C)

DIN connector type that conforms to the 8 mm pitch standards between DIN terminals.



#### How to Order Valve

**Type of actuation**

1	2 position single solenoid
2	2 position double solenoid
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

**Light/surge voltage suppressor**

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor

\* YOZ is not available.  
\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

**Rated voltage**

DC	AC (50/60 Hz)
5	1
6	2
	3
	4

**A, B port size**

M5	M5 x 0.8
01	1/8 (SYJ7000 only)
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6
N3	One-touch fitting for ø5/32"
N7	One-touch fitting for ø1/4"

**Bracket**

Nil	Without bracket
F	With bracket

Note) Do not remove the factory installed bracket from models with the bracket option. Removal of the bracket will cause the valve to leak.

**Body ported**

SYJ 5 1 2 0 5 Y [ ] [ ] M5 [ ] [ ]

**Base mounted**

SYJ 5 2 4 0 5 Y [ ] [ ] [ ] [ ]

**Body option**

0: Pilot valve individual exhaust for the pilot valve

R port P, E port

3: Common exhaust type for main and pilot valve

R port P, E port

**Electrical entry**

Y: With connector  
YO: Without connector

**Thread type**

Nil	Rc
F	G
N	NPT
T	NPTF

**Port size**

Nil	Without sub-plate
01	1/8 SYJ5000 SYJ7000
02	1/4 SYJ7000

**Series**

5	SYJ5000
7	SYJ7000

**Manual override**

Nil	Non-locking push type
D	Push-turn locking slotted type
E	Push-turn locking lever type

#### How to Order Pilot Valve Assembly

V115-5 Y [ ]

**Rated voltage**

DC	AC (50/60 Hz)
5	1
6	2
	3
	4

**Light/surge voltage suppressor**

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor

\* YOZ is not available.  
\* For AC voltage valves there is no "S" option. It is already built-in to the rectifier circuit.

**Electrical entry**

Y	DIN With connector
YO	terminal Without connector

#### DIN Connector Part No.

Without light	SY100-82-1	
<b>With light</b>		
Rated voltage	Voltage symbol	No.
24 VDC	24 VN	SY100-82-3-05
12 VDC	12 VN	SY100-82-3-06
100 VAC	100 VN	SY100-82-3-01
200 VAC	200 VN	SY100-82-3-02
110 VAC (115 VAC)	110 VN	SY100-82-3-03
220 VAC (230 VAC)	220 VN	SY100-82-3-04

#### Caution


- Use caution in wiring because it won't meet the IP65 (enclosure) standard if you use the other cord than prescribed heavy-duty cord of size (ø3.5 to ø7.5). Also be sure to tighten the ground nut and holding screw with the prescribed torque range. Tighten the ground nut and set screw within the specified range of torque. For how to use DIN terminal (wiring procedures, procedures for changing electrical entries, precautions, applicable cable, circuit diagram), refer to back page 8.
- D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
- DIN connector except D type has the "N" indication in the end of voltage symbol. In case of DIN connector without light, "N" is not indicated. Please refer to the name plate to distinguish.
- Dimensions are completely the same as D type connector.
- When exchanging the pilot valve assembly only, "V115-□D" is interchangeable with "V115-□Y". Do not replace V114 (G, H, L, M, W) to V115-□D/□Y (DIN terminal), and vice versa.





Series SYJ

# Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by labels of "Caution", "Warning" or "Danger". To ensure safety, be sure to observe ISO 4414 <sup>Note 1)</sup>, JIS B 8370 <sup>Note 2)</sup> and other safety practices.

 **Caution :** Operator error could result in injury or equipment damage.

 **Warning :** Operator error could result in serious injury or loss of life.

 **Danger :** In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power--General rules relating to systems.

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

## Warning

### **1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.**

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalog information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

### **2. Only trained personnel should operate pneumatically operated machinery and equipment.**

Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

### **3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.**

1. Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driver objects have been confirmed.
2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc.

### **4. Contact SMC if the product is to be used in any of the following conditions:**

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.



# 4/5 Port Solenoid Valves/Common Precautions 1

Be sure to read before handling.

## Design

### ⚠ Warning

#### 1. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

#### 2. Intermediate stopping

When a 3 position closed center valve is used to stop a cylinder at an intermediate position, accurate stopping of the piston in a predetermined position is not possible due to the compressibility of air. Furthermore, since valves and cylinders are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended length of time. Contact SMC if it is necessary to hold a stopped position for an extended time.

#### 3. Effect of back pressure when using a manifold

Use caution when valves are used on a manifold, as actuator malfunction due to back-pressure may occur. In case of 3 position closed exhaust center valve or single acting cylinder, take appropriate measures to prevent the malfunction using with individual EXH interface assembly or individual exhaust manifold.

#### 4. Holding of pressure (including vacuum)

Since valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a pressure vessel.

#### 5. Cannot be used as an emergency shut off valve, etc.

The valves presented in this catalog are not designed for safety applications such as an emergency shut off valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

#### 6. Maintenance space

The installation should allow sufficient space for maintenance activities (removal of valve, etc.).

#### 7. Release of residual pressure

Provide a residual pressure release function for maintenance purpose. Especially in case of 3 position closed center valve, ensure the release of residual pressure between valve and cylinder.

#### 8. Vacuum applications

When a valve is used for vacuum switching, etc., take measures against the suction of external dust or other contaminants from vacuum pads and exhaust ports, etc. Moreover, an external pilot type valve should be used in this case. Contact SMC in case of an internal pilot type or air operated valve, etc.

#### 9. About using the double solenoid type

When using the double solenoid type for the first time, actuators may travel in an unexpected direction depending on the switching position of a valve. Implement countermeasures not to occur any danger by the actuator's operation.

#### 10. Ventilation

When a valve is used inside a sealed control panel, etc., provide ventilation to prevent a pressure increase caused by exhausted air inside the control panel or temperature rise caused by the heat generated by the valve.

## Selection

### ⚠ Warning

#### 1. Confirm the specification

The products presented in this catalog are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to specifications.)

Contact SMC when using a fluid other than compressed air (including vacuum).

#### 2. Extended periods of continuous energization

Continuous energization of the valve for extended periods of time may have an adverse effect on the solenoid valve performance and the peripheral equipment due to temperature rises caused by the heat generation of the coil. Consult with SMC if valves will be continuously energized for extended periods of time or the energized period per day will be longer than the de-energized period. It is also possible to shorten the energization period by using valves of the N.O. (normally open) type.

When solenoid valves are mounted in a control panel, employ measures to radiate excess heat, so that temperatures remain within the valve specification range. Use special caution when three or more stations sequentially aligned on the manifold are continuously energized since this will cause a drastic temperature rise. (As for AC specifications, since the applicable products are ready to provide separately, contact SMC.)

### ⚠ Caution

#### 1. Momentary energization


If a double solenoid valve will be operated with momentary energization, it should be energized for at least 0.1 second. However, depending on the secondary load conditions, it should be energized until the cylinder reaches the stroke end position, as there is a possibility of malfunction otherwise.

#### 2. Leakage voltage

When using a resistor in parallel with the switching element or using a C-R element (surge voltage suppressor) for protection of the switching element, note that leakage voltage will increase due to leakage current flowing through the resistor or C-R element. Limit the amount of residual leakage voltage to the following value:

With DC coil : 3% or less of rated voltage

With AC coil : 8% or less of rated voltage





# 4/5 Port Solenoid Valves/Common Precautions 2

Be sure to read before handling.

## Selection

### ⚠ Caution

#### 3. Solenoid valve drive for AC with solid state output (SSR, TRIAC output, etc.)

- 1) Current leakage  
When using a snubber circuit (C-R element) for surge protection of the output element, a very small electric current will still continue to flow in spite of the OFF state. This results in the valve not returning. In the cases when exceeding the tolerance as shown above, take measures to install a bleeder resistor.
- 2) Minimum load allowable amount (Min. load current)  
When the consumption current of a valve is less than the output element's minimum load allowable volume or the margin is small, the output element may not be switched normally. Please confirm SMC.

#### 4. Surge voltage suppressor

If a surge protection circuit contains non-ordinary diodes such as Varistor, a residual voltage that is in proportion to the protective elements and the rated voltage will remain. Therefore, give consideration to surge voltage protection of the controller. In the case of diodes, the residual voltage is approximately 1 V.

#### 5. Use in low temperature environments

Unless otherwise indicated in the specifications for each valve, operation is possible to -10C, but appropriate measures should be taken to avoid solidification or freezing of drainage and moisture, etc.

#### 6. Operation for air blowing

When using a solenoid valve for air blow, use an external pilot type.  
Take note that when internal pilots and external pilots are used on the same manifold, the pressure drop caused by the air blowing can have an effect on the internal pilot type valves. Moreover, when compressed air within the pressure range of the established specifications is supplied to the external pilot port, and a double solenoid valve is used for air blowing, the solenoids should normally be energized when air is being blown.

#### 7. Mounting orientation

Rubber seal: Refer to the specifications of each series.

## Mounting

### ⚠ Warning

#### 1. If air leakage increases or equipment does not operate properly, stop operation.

Check mounting conditions when air and power supplies are connected. Initial function and leakage tests should be performed after installation.

#### 2. Instruction manual

Mount and operate the product after reading the manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

#### 3. Painting and coating

Warnings or specifications printed or pasted on the product should not be erased, removed or covered up. Consult with SMC if paint is to be applied to resinous parts, as this may have an adverse effect due to the paint solvent.

## Port Direction


### ⚠ Caution

#### 1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

#### 2. Wrapping of sealant tape

When connecting pipes and fittings, etc., be sure that chips from the pipe thread and sealing materials do not get inside the valve. Furthermore, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

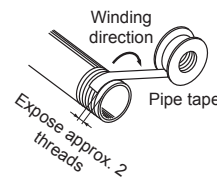

#### 3. Closed center valves

When using closed center type valves, carefully check to ascertain that there is no air leakage from the piping between the valves and cylinders.

#### 4. Screwing in fittings

When connecting fittings to valves, tighten as indicated below.

- 1) For M3 and M5 type
  - (1) When using SMC fittings, follow the guidelines below.  
After tightening by hand, tighten an additional M3: 1/4, M5: 1/6 turn with a tightening tool. However, if miniature fittings are used, tighten an additional 1/4 turn with a tightening tool after tightening by hand. For fittings with gaskets in 2 locations, e.g., universal elbow or universal tee, tighten an additional 1/2 turn.
  - Note) If fittings are over-tightened, air leakage may result due to breaking of fitting threads or deformation of the gaskets. However, if fittings are not tightened sufficiently, loosening of the threads and air leakage and may occur.
  - (2) When fittings other than SMC fittings are used, follow the instructions of the respective fitting manufacturer.
- 2) For Rc (PT)  
When installing fitting, etc., follow the given torque levels below.

#### Tightening Torque for Piping

Connection threads	Applicable tightening torque N·m
1/8	7 to 9
1/4	12 to 14
3/8	22 to 24
1/2	28 to 30
3/4	28 to 30
1	36 to 38
1 1/4	40 to 42
1 1/2	48 to 50
2	48 to 50

#### 5. Connection of piping to products

When connecting piping to a product, refer to its instruction manual to avoid mistakes regarding the supply port, etc.



# 4/5 Port Solenoid Valves/Common Precautions 3

Be sure to read before handling.

## Wiring

### ⚠ Caution

#### 1. Polarity

When connecting power to a DC specification solenoid valve equipped with (indicator light) surge voltage suppressor, confirm whether or not there is polarity.

If there is polarity, take note of the following points.

Without built-in diode to protect polarity (including any power saving circuit):

If a mistake is made regarding polarity, the diode in the valve, the control device switching element or power supply equipment, etc., may burn out.

With diode to protect polarity:

If a mistake is made regarding polarity, it will not be possible to switch the valve.

#### 2. Applied voltage

When electric power is connected to a solenoid valve, be careful to apply the proper voltage. Improper voltage may cause malfunction or coil damage.

#### 3. Confirm the connections.

After completing the wiring, confirm that the connections are correct.

## Lubrication

### ⚠ Caution

#### 1. Lubrication

[Rubber seal]

1) The valve has been lubricated for life at the factory, and does not require any further lubrication.

2) In the event that it is lubricated, use class 1 turbine oil (without additives), ISO VG32.

However, once lubrication is applied it must be continued, as loss of the original lubricant may lead to malfunction.

Contact SMC regarding class 2 turbine oil (with additives), ISO VG32.

## Air Supply

### ⚠ Warning

#### 1. Use clean air.

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

## Air Supply

### ⚠ Caution

#### 1. Install air filters.

Install air filters close to valves at their upstream side. A filtration degree of 5 μm or less should be selected.

#### 2. Install an air dryer, after cooler or Drain Catch (water separator), etc.

Air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an air dryer, after-cooler or Drain Catch (water separator), etc.

#### 3. If excessive carbon dust is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon dust is generated by the compressor, it may adhere to the inside of valves and cause malfunction.

Refer to "SMC Best Pneumatics" catalog Vol. 14 for compressed air quality.

## Operating Environment

### ⚠ Warning

1. Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water or steam or where there is direct contact with any of these.

2. Products with IP65 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water.

Take measures to prevent water and dust from coming from the exhaust port.

3. Products compliant to IP65 satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.

4. Do not use in an explosive atmosphere.

5. Do not use in locations subject to vibration or impact. Confirm the specifications in the main section of the catalog.

6. A protective cover, etc., should be used to shield valves from direct sunlight.

7. Shield valves from radiated heat generated by nearby heat sources.

8. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.

9. When solenoid valves are mounted in a control panel or are energized for extended periods of time, employ measures to radiate excess heat, so that temperatures remain within the valve specification range.





# 4/5 Port Solenoid Valves/Common Precautions 4

Be sure to read before handling.

## Maintenance

### Warning

#### 1 Perform maintenance procedures as shown in the instruction manual.

If handled improperly, malfunction or damage of machinery or equipment may occur.

#### 2. Equipment removal and supply/exhaust of compressed air

When equipment is removed, first confirm that measures are in place to prevent dropping of work pieces and run-away of equipment, etc. Then cut the supply pressure and power, and exhaust all compressed air from the system using its residual pressure release function.

In the case of 3 position closed center style, exhaust the residual pressure between valve and cylinder.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc., and then confirm that the equipment is operating normally.

#### 3 Low frequency operation

Valves should be switched at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

#### 4. Manual override operation

When the manual override is operated, connected equipment will be actuated. Confirm safety before operating.

### Caution

#### 1 Drain flushing

Remove drainage from air filters regularly.



# Series SYJ3000/5000/7000 Specific Product Precautions 1

Be sure to read before handling.  
Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.


## Manual Override Operation

### Warning

When the manual override is operated, connected equipment will be actuated. Confirm safety before operating.


#### Non-locking push type [Standard]

Press in the direction of the arrow



#### Push-turn locking slotted type [Type D]

While pressing, turn in the direction of the arrow.  
If it is not turned, it can be operated the same way as the non-locking type.

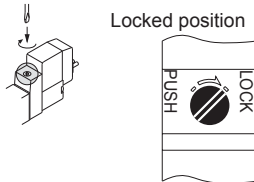


### Caution

When operating the locking type D with a screw driver, turn it gently using a watchmakers screw driver.  
[Torque: Less than 0.1 N·m]

#### Push-turn locking lever type [Type E]

While pressing, turn in the direction of the arrow.  
If it is not turned, it can be operated the same way as the non-locking type.

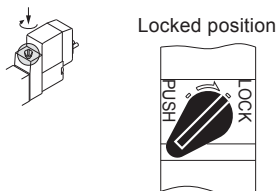

### Caution

When locking the manual override on the push-turn locking types (D, E), be sure to push it down before turning.  
Turning without first pushing it down can cause damage to the manual override and trouble such as air leakage, etc.

## Solenoid Valve for 200 V, 220 VAC Specifications

### Warning

Solenoid valves with grommet and L/M type plug connector AC specifications have a built-in rectifier circuit in the pilot section to operate the DC coil.

With 200 V, 220 VAC specification pilot valves, this built-in rectifier generates heat when energized. The surface may become hot depending on the energized condition; therefore, do not touch the solenoid valves.

## Common Exhaust Type for Main and Pilot Valve

### Caution

Pilot air is exhausted through the main valve body rather than directly to atmosphere.

- Suitable for applications where exhausting the pilot valve to atmosphere would be detrimental to the surrounding working environment.
- For use in extremely dirty environments where there is the possibility that dust could enter the pilot exhaust and damage the valve.

Ensure that the piping of exhaust air is not too restrictive.

## Series SYJ3000/5000/7000 Mixed Installation of 3 Port and 5 Port Valves on Same Manifold.

### Caution

Series SYJ3000/5000/7000 and Series SYJ300/500/700 can be mounted on the same manifold. How to mount on the same manifold is shown on the following pages.

SYJ3000, SYJ300	.....	P. 14
SYJ5000, SYJ500	.....	P. 38
SYJ7000, SYJ700	.....	P. 61

If 4 or 5 port valve is used as a 3 port valve  
Series SYJ3000, 5000, 7000 may be used as a N.C. or N.O. 3 port valve by plugging one of the A, B ports. Be sure not to plug the exhaust ports (R). Can be used when a double solenoid, 3 port valve is required.

Plug position		B port	A port
Type of actuation		N.C.	N.O.
Number of solenoids	Single		
	Double		

(JIS symbols above: Series SYJ5000)



# Series SYJ3000/5000/7000 Specific Product Precautions 2

Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions

## How to Use Plug Connector

### ⚠ Caution

#### 1 Attaching and detaching connectors


- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out

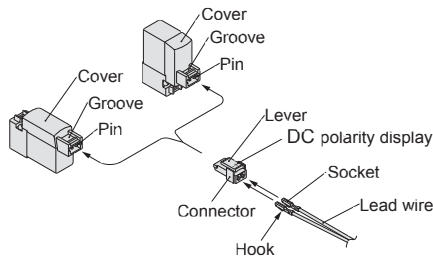

#### 2. Crimping of lead wires and sockets

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area.

Use an exclusive crimping tool for crimping  
(Contact SMC for special crimping tools.)

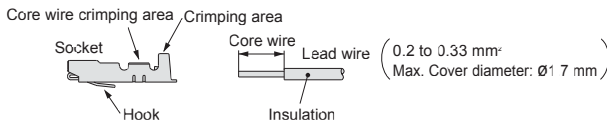


#### 3. Attaching and detaching sockets with lead wires

##### • Attaching

Insert the sockets into the square holes of the connector (+, indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

##### • Detaching

To detach a socket from a connector pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward



## Plug Connector Lead Wire Length

### ⚠ Caution

Standard length is 300 mm, but the following lengths are also available

#### How to Order Connector Assembly

For DC: **SY100 30 4A**

For 00 VAC: **SY100 30 1A**

For 200 VAC: **SY100 30 2A**

For other voltages of AC: **SY100 30 3A**

Without lead wire: **SY100 30 A** **Lead wire length**

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

#### How to Order

Include the connector assembly part number together with the part number for the plug connector's solenoid valve without connector

Ex.) In case of 2000 mm of lead wire

For DC **SYJ3120-5LO-M3** For AC **SYJ3120-1LO-M3**  
**SY100-30-4A-20** **SY100-30-1A-20**



# Series SYJ3000/5000/7000 Specific Product Precautions 3

Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

## Surge Voltage Suppressor


### Caution

<For DC>


Grommet, L/M Plug Connector

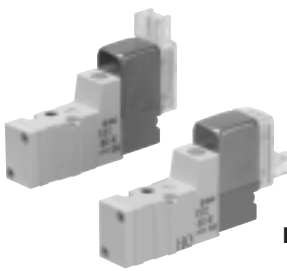


#### Standard type (with polarity) Surge voltage suppressor (□S)




#### With light/surge voltage suppressor (□Z)

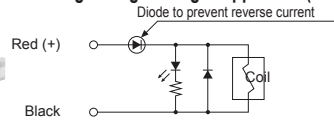

#### Non-polar type With surge voltage suppressor (□R)




#### With light/surge voltage suppressor (□U)



- Connect the standard type in accordance with the +, - polarity indication. (The non-polar type can be used with the connections made either way.)
- Since voltage specifications other than standard 24 V and 12 VDC do not have diodes for polarity protection, be careful not to make errors in the polarity.
- Please use caution regarding the allowable voltage fluctuation because there is about a 1 volt drop for a valve with polarity protection. (For details, refer to the solenoid specifications for the individual valve.)
- When wiring is done at the factory, positive (+) is red and negative (-) is black.

#### With power saving circuit

Power consumption is decreased by 1/4 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 62 ms at 24 VDC.)

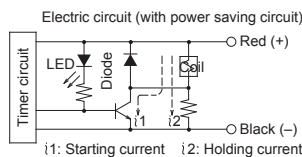


#### Operating Principle


With the above circuit, the current consumption when holding is reduced to save energy. Please refer to the electric wave data to the right.

- Please be careful not to reverse the polarity, since a diode to prevent the reversed current is not provided for the power saving circuit.
- Please use caution regarding the allowable voltage fluctuation because there is about a 0.5 volt drop due to the transistor. (For details, refer to the solenoid specifications for the individual valve.)


(In the case of SYJ<sup>3</sup>□□T, the electric wave form of energy saving type)

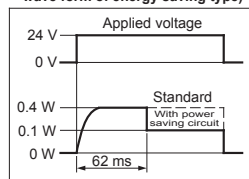


#### DIN Terminal

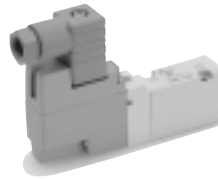

#### With surge voltage suppressor (DS)




#### With light/surge voltage suppressor (DZ)

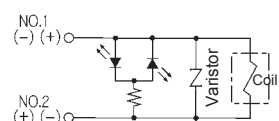


DIN terminal has no polarity.

#### M8 Connector

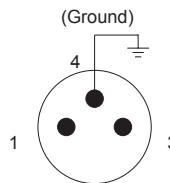


#### Solenoid valve side pin wiring diagram


#### Standard type (with polarity) With light/surge voltage suppressor (□S)

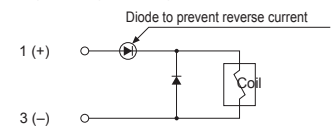


#### With light/surge voltage suppressor (□Z)

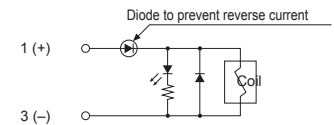

#### Non-polar type With surge voltage suppressor (□R)



#### With light/surge voltage suppressor (□U)



#### Solenoid valve side pin wiring diagram

- In the case of standard type, connect + to 1 and - to 3 according to the polarity.
- For DC voltages other than 12 V and 24 V, incorrect wiring will cause damage to the surge suppressor circuit.
- Please use caution regarding the allowable voltage fluctuation because there is about a 1 volt drop for a valve with polarity protection. (For details, refer to the solenoid specifications for the individual valve.)



# Series SYJ3000/5000/7000 Specific Product Precautions 4

Be sure to read before handling.

Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.


## Surge Voltage Suppressor

<For AC>

(There is no "S" type because the generation of surge voltage is prevented by a rectifier.)


### Grommet, L/M Plug Connector

With light (□Z)



### DIN Terminal

With light (DZ)

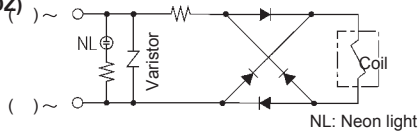

Note) Surge voltage suppressor of varistor has residual voltage corresponding to the protective element and rated voltage; therefore, protect the controller side from the surge. The residual voltage of the diode is approximately 1 V.

## How to Use DIN Terminal

### Caution

#### Connection

- Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- After removing the holding screw, insert a flat head screwdriver, etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- Loosen the terminal screws (slotted screws) on the terminal block, insert the cores of the lead wires into the terminals according to the connection method, and fasten them securely with the terminal screws.

### Caution

When making connections, take note that using other than the supported size ( $\phi 3.5$  to  $\phi 7$ ) heavy duty cord will not satisfy IP65 (enclosure) standards. Also, be sure to tighten the ground nut and holding screw within their specified torque ranges.

### Caution

#### Changing the entry direction

After separating the terminal block and housing, the cord entry can be changed by attaching the housing in the desired direction (4 directions at 90 intervals).

\* When equipped with a light, be careful not to damage the light with the cord's lead wires.

#### Precautions

Plug in and pull out the connector vertically without tilting to one side.


#### Compatible cable

Cord O.D.:  $\phi 3.5$  to  $\phi 7$

(Reference) 0.5 mm<sup>2</sup>, 2-core or 3-core, equivalent to JIS C 3306

Back page 9

## How to Use DIN Terminal

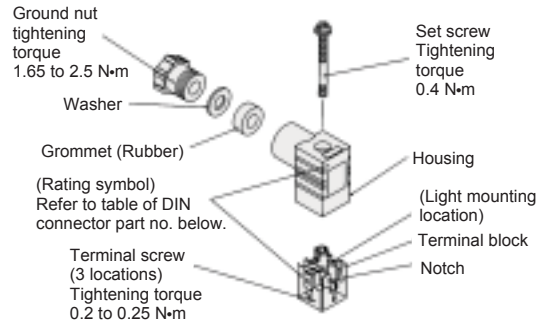

## DIN Connector Part No.


### Caution

Without light	SY100-61-1
---------------	------------

#### With light

Rated voltage	Voltage symbol	Model no.
24 VDC	24 V	SY100-61-3-05
12 VDC	12 V	SY100-61-3-06
100 VAC	100 V	SY100-61-2-01
200 VAC	200 V	SY100-61-2-02
110 VAC	110 V	SY100-61-2-03
220 VAC	220 V	SY100-61-2-04

#### Circuit Diagram with Light

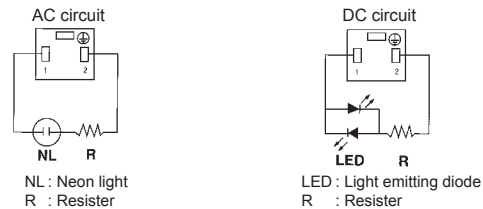

Note) Refer to page 80 for DIN connector (Y) conforming to EN-175301-803C (former DIN 43650C).



# Series SYJ3000/5000/7000 Specific Product Precautions 5

Be sure to read before handling.

Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

## Connector Assembly with Cover

### ⚠ Caution

#### Connector assembly with dust proof protective cover.

- Effective to prevention of short circuit failure due to the entry of foreign matter into the connector.
- Chloroprene rubber for electrical use, which provides outstanding weather resistance and electrical insulation, is used for the cover material. However, do not allow contact with cutting oil, etc.
- Simple and unencumbered appearance by adopting round-shaped cord.


#### How to Order

**SY100-68-A-**

• Lead wire length

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm

#### Connector Assembly with Cover: Dimensions

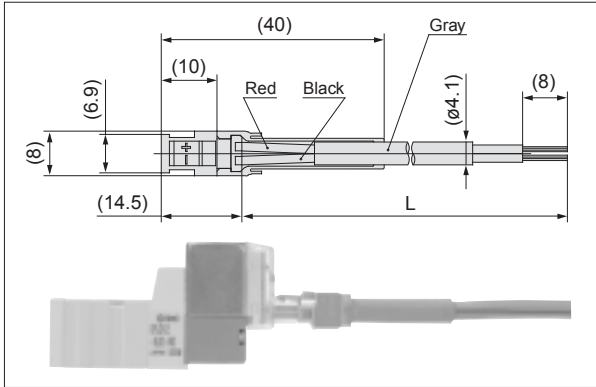

#### How to Order

Enter the part number for a plug connector solenoid valve without connector together with the part number for a connector assembly with cover.

Ex. 1) Lead wire length of 2000 mm

SYJ3120-5LOZ-M3

SY100-68-A-20

Ex. 2) Lead wire length of 300 mm (standard)

SYJ3120-5LPZ-M3

Symbol for connector assembly with cover

\* In this case, the part number for the connector assembly with cover is not required.

## M8 Connector


### ⚠ Caution

1. M8 connector types have an IP65 (enclosure) rating, offering protection from dust and water. However please note: these products are not intended for use in water. Select a SMC connector cable (V100-49-1-□) or a FA sensor type connector, with M8 threaded 3 pin specifications conforming to Nippon Electric Control Equipment Association Standard, NECA4202 (IEC60947-5-2). Make sure the connector O.D. is 10.5 mm or less when used with the Series SYJ3000 manifold. If more than 10.5 mm, it cannot be mounted due to the size.
2. Do not use a tool to mount the connector, as this may cause damage. Only tighten by hand. (0.4 to 0.6 Nm)
3. The excessive stress on the cable connector will not be able to satisfy the IP65 rating. Please use caution and do not apply a stress of 30 N or greater.

### ⚠ Caution

Failure to meet IP65 performance may result if using alternative connectors than those shown above, or when insufficiently tightened.

- Connector cable mounting

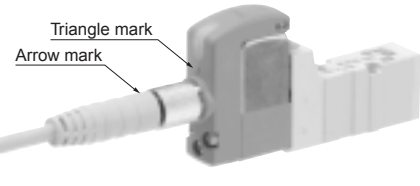

Note) Connector cable should be mounted in the correct direction. Make sure that the arrow symbol on the connector is facing the triangle symbol on the valve when using SMC connector cable (V100-49-1-□). Be careful not to squeeze it in the wrong direction, as problems such as pin damage may occur.

#### ■ Connector cable

- M8 connector cable for M8 can be ordered as follows:

#### How to Order

1. To order solenoid valve and connector cable at the same time. (Connector cable will be included in the shipment of the solenoid valve.)

SYJ<sup>3</sup><sub>5</sub><sub>7</sub> □ □ □ - □ □ □ □ - □ □

• Electrical entry

**W1:** Cable length 300 mm

**W2:** Cable length 500 mm

**W3:** Cable length 1000 mm

**W4:** Cable length 2000 mm

**W7:** Cable length 5000 mm

Ex. 1) Cable length: 300 mm

SYJ3120-5W1ZE-M3

Symbol for electrical entry




# Series SYJ3000/5000/7000 Specific Product Precautions 6

Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions

## M8 Connector

2. To order connector cable only

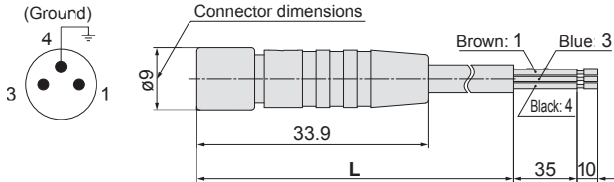


Cable length (L)	No.
300 mm	V100-49-1-1
500 mm	V100-49-1-2
1000 mm	V100-49-1-3
2000 mm	V100-49-1-4
5000 mm	V100-49-1-7

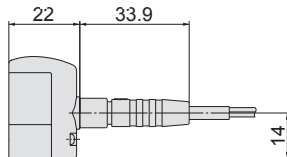


## Flat Ribbon Cable Manifold

### Caution

Type 21P

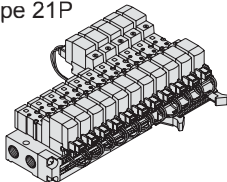


Type 32P

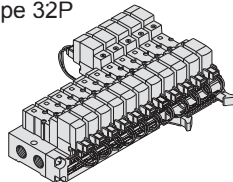

- In the manifold valves, the wiring to the individual valves is provided on a printed circuit board, and the connection to the external wires is consolidated through the use of a flat cable.
- A single MIL flat cable connects the entire manifold to your power source. This greatly reduces installation time.


## Flat Ribbon Cable Manifold

### Manifold Internal Wiring

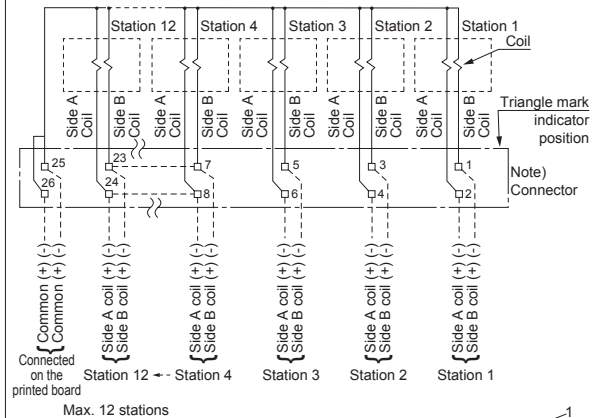

Note)

Terminal no. is not indicated on the connector. The terminal no. indicated in the connection schematic of connector, as shown in the reference, means a correlation of 1, 2, 3...26 from the triangle mark side on the flat ribbon cable of connector.



- For more than 10 stations, both poles of the common should be wired.
- For single solenoid, connect to the solenoid B side.
- The maximum number of stations that can be accommodated is 12. For more stations, contact SMC.
- Only non-polar valves are available for the DC flat cable manifold, therefore negative COM or positive COM wiring of the manifold is possible. The valve does not switch with negative COM if a Z type is used. Be sure to use a positive COM.

## Bracket

### Caution

For bracket attached styles of SYJ3000 (Single) and SYJ7000, do not use it without bracket.

## Replacement of Pilot Valve

### Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Model	Thread size	Tightening torque
SYJ3000	M1.7	0.12 N·m
SYJ5000	M2.5	0.45 N·m
SYJ7000	M3	0.8 N·m



# Series SYJ3000/5000/7000 Specific Product Precautions 7

Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions

## Replacement of Pilot Valve


### Caution

Pilot valves in this series are improved to provide excellent energy saving results. However following this improvement, these new valves are no longer compatible with the conventional pilot valve used at the interface. Consult with SMC when you need to exchange these pilot valves, in the case of manual override (marked in orange) of the adapter plate.

#### New type

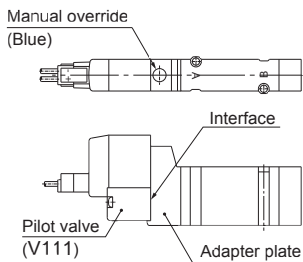


#### Conventional type

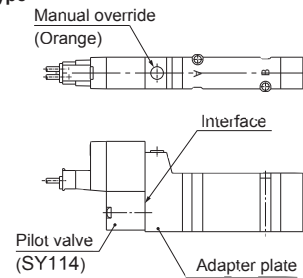

## Interface Regulator

### Caution

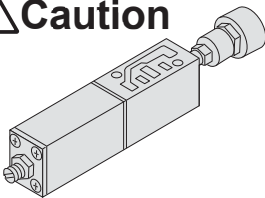

Spacer type regulating valve on manifold block can regulate the pressure to the valve individually.

### Specifications

Interface regulator	ARBYJ5000	ARBYJ7000
Applicable solenoid valve model	SYJ5000	SYJ7000
Regulating port	P	P
Proof pressure	1.5 MPa	
Maximum operating pressure	1.0 MPa	
Set pressure range	0.05 to 0.7 MPa <sup>Note 1)</sup>	
Ambient and fluid temperature	-5 to 60C (No freezing) <sup>Note 2)</sup>	
Thread size for connection of pressure gauge	M5 x 0.8	
Weight (kg)	0.06	0.09
Effective area at exhaust side (mm <sup>2</sup> ) S at P <sub>1</sub> = 0.7 MPa, P <sub>2</sub> = 0.5 MPa <sup>Note 3)</sup>	P→A	1.9
	P→B	2.1
Effective area at supply side (mm <sup>2</sup> ) S at P <sub>1</sub> = 0.7 MPa, P <sub>2</sub> = 0.5 MPa <sup>Note 3)</sup>	A→EA	4.5
	B→EB	4.5


## Interface Regulator

- Note 1) Set the pressure within the operating pressure range of the solenoid valve.
- Note 2) The maximum operating temperature for the solenoid valve is 50C.
- Note 3) The effective area listed is for a single solenoid 2 position valve mounted on a sub-plate.
- Note 4) Apply pressure from P port in the base for interface regulator.


### Flow Characteristics

(P → A) Condition Inlet pressure 0.7 MPa

● ARBYJ5000-00-P

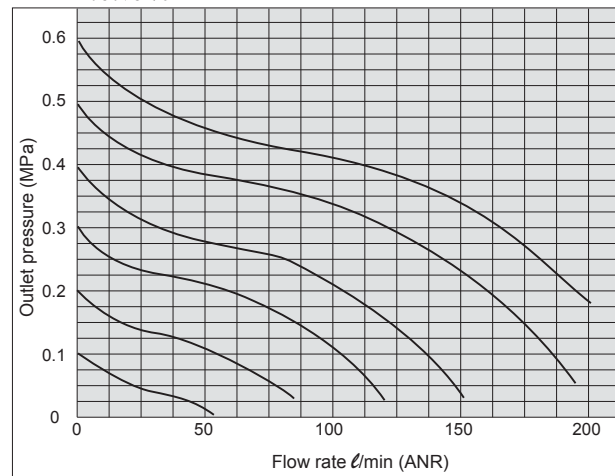


● ARBYJ7000-00-P

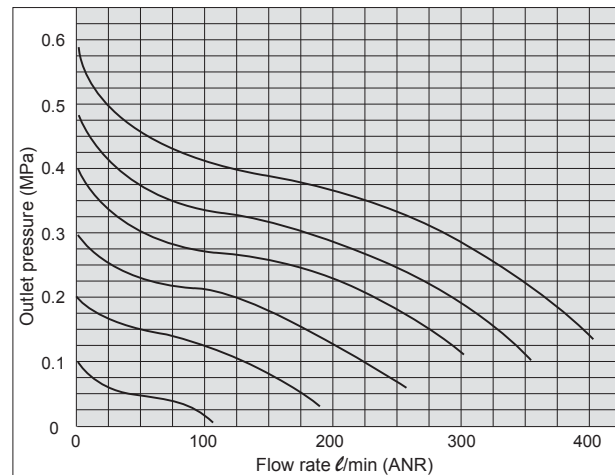





## SMC'S GLOBAL MANUFACTURING, DISTRIBUTION AND SERVICE NETWORK

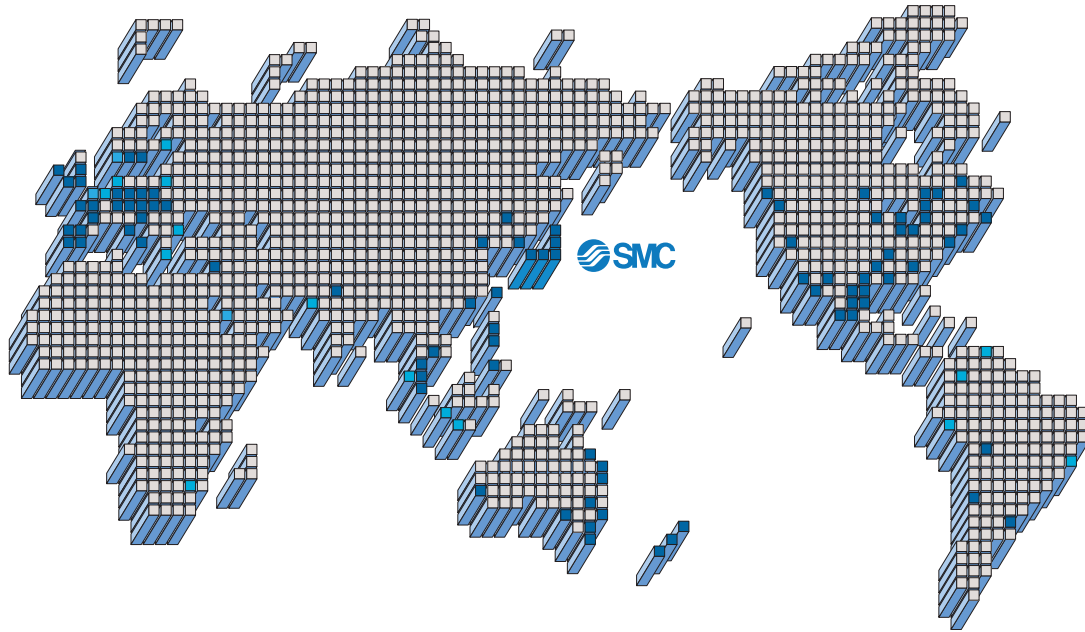

### EUROPE

#### AUSTRIA

SMC Pneumatik GmbH

#### BELGIUM

SMC Pneumatics N.V./S.A.

#### BULGARIA

SMC Industrial Automation Bulgaria EOOD

#### CROATIA

SMC Industrijska automatika d.o.o.

#### CZECH REPUBLIC

SMC Industrial Automation CZ s.r.o.

#### DENMARK

SMC Pneumatik A/S

#### ESTONIA

SMC Pneumatics Estonia OÜ

#### FINLAND

SMC Pneumatics Finland OY

#### FRANCE

SMC Pneumatique SA

#### GERMANY

SMC Pneumatik GmbH

#### HUNGARY

SMC Hungary Ipari Automatizálási Kft.

#### IRELAND

SMC Pneumatics (Ireland) Ltd.

#### ITALY

SMC Italia S.p.A.

#### LATVIA

SMC Pnuematics Latvia SIA

#### NETHERLANDS

SMC Pneumatics BV.

#### NORWAY

SMC Pneumatics Norway A/S

#### POLAND

SMC Industrial Automation Polska Sp.z.o.o.

#### ROMANIA

SMC Romania s.r.l.

#### RUSSIA

SMC Pneumatik LLC.

#### SLOVAKIA

SMC Priemyselná automatizácia, s.r.o.

#### SLOVENIA

SMC INDUSTRIJSKA AVTOMATIKA d.o.o.

#### SPAIN/PORTUGAL

SMC España, S.A.

#### SWEDEN

SMC Pneumatics Sweden AB

#### SWITZERLAND

SMC Pneumatik AG.

#### UK

SMC Pneumatics (U.K.) Ltd.

### ASIA

#### CHINA

SMC (China) Co., Ltd.

#### HONG KONG

SMC Pneumatics (Hong Kong) Ltd.

#### INDIA

SMC Pneumatics (India) Pvt. Ltd.

#### INDONESIA

PT. SMC Pneumatics Indonesia

#### MALAYSIA

SMC Pneumatics (S.E.A.) Sdn. Bhd.

#### PHILIPPINES

SHOKETSU-SMC Corporation

#### SINGAPORE

SMC Pneumatics (S.E.A.) Pte. Ltd.

#### SOUTH KOREA

SMC Pneumatics Korea Co., Ltd.

#### TAIWAN

SMC Pneumatics (Taiwan) Co., Ltd.

#### THAILAND

SMC Thailand Ltd.

### NORTH AMERICA

#### CANADA

SMC Pneumatics (Canada) Ltd.

#### MEXICO

SMC Corporation (Mexico) S.A. de C.V.

#### USA

SMC Corporation of America

### SOUTH AMERICA

#### ARGENTINA

SMC Argentina S.A.

#### BOLIVIA

SMC Pneumatics Bolivia S.R.L.

#### BRAZIL

SMC Pneumaticos Do Brazil Ltda.

#### CHILE

SMC Pneumatics (Chile) S.A.

#### VENEZUELA

SMC Neumatica Venezuela S.A.

### OCEANIA

#### AUSTRALIA

SMC Pneumatics (Australia) Pty. Ltd.

#### NEW ZEALAND

SMC Pneumatics (N.Z.) Ltd.

## SMC Corporation

1-16-4 Shimbashi, Minato-ku, Tokyo 105-8659 JAPAN

Tel: 03-3502-2740 Fax: 03-3508-2480

URL <http://www.smcworld.com>

© 2005 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.

D-DN

1st printing IO printing JP 120DN Printed in Japan.

This catalog is printed on recycled paper with concern for the global environment.