
Blow Gun VMG Series

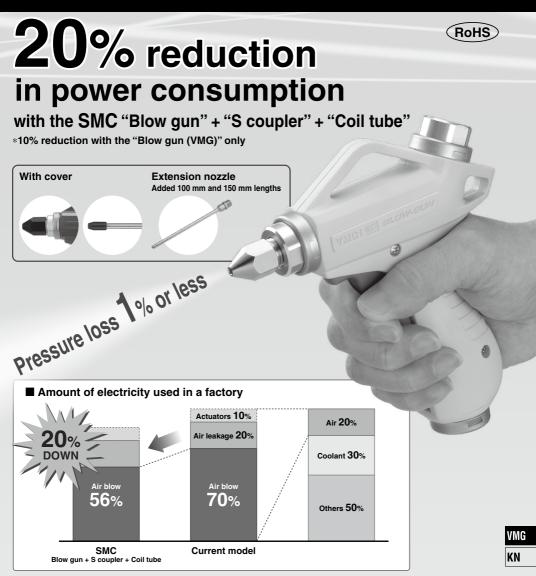



The electricity used by compressors for air accounts for **approximately 20%** of that consumed by the entire factory. Also, **70%** of the air consumed in the process is used for air blowing. SMC blow guns have minimal pressure loss compared with current models, so they can achieve equivalent performance at lower pressures and with less volume of air consumption. As a result, it is possible to achieve a **20%** reduction in power consumption.

Energy Saving Pneumatic System Proposal

Energy Saving Effects

When the yearly total working hours spent on air blowing amounts to 8,300 hours, use of current models results in power consumption costs totaling 194,220 yen. When using the SMC system (Blow gun + S coupler + Coil tube), however, the yearly cost is reduced to 155,625 yen, for a total yearly saving of **38,595** yen, or **20% of the total**.

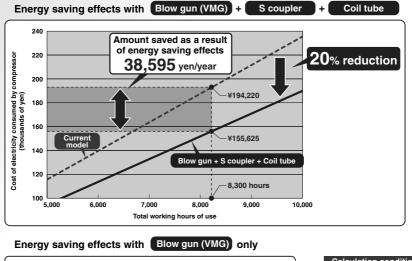


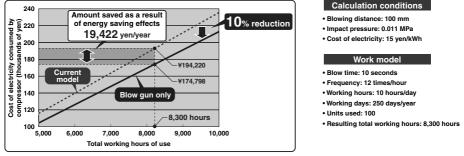

Straighter flowing fluid

"improves pressure loss!"


Valve Construction and Pressure Loss

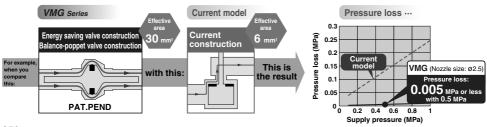


SMC

Example of Improvement

Review the air-blow job and change to the SMC blow gun, S coupler and coil tube to create a larger effective area.

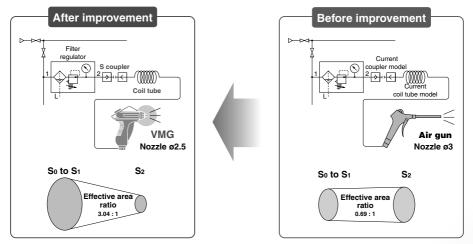

		After improvement	Before improvement	
	Coupler	S coupler	Current model	
Equipment	Piping	TCU1065-1-20-X6	Current coil tube model (I.D. Ø5, equivalent length 5 m)	
	Air gun	VMG (Nozzle size ø2.5)	Current model (Nozzle size ø3)	
	Coupler, Piping (S ₀)	13.45 mm ²	5.1 mm ²	
Effective area	Air gun (S1)	30 mm ²	6 mm ²	
alea	Nozzle (S ₂)	4.4 mm ²	6.3 mm ²	
Effective area ratio (S ₀ to S ₁ : S ₂)		3.04 : 1	0.69 : 1	
Impact press	ure	0.011 MPa (at a distance of 100 mm)	0.011 MPa (at a distance of 100 mm)	
Regulator pre	essure	0.4 MPa	0.5 MPa	
Pressure insi	de nozzle	0.385 MPa	0.276 MPa	
Compressor	pressure	0.5 MPa	0.6 MPa	
Air consumption		257 dm³/min (ANR)	287 dm³/min (ANR)	
Power consumption by compressor		1.25 kW	1.56 kW	

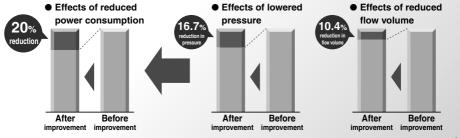


SMC

VMG KN

Blow Gun, Coil Tube and S Coupler Selection

Recommended system in accordance with the distance

Energy saving effects are enhanced through the appropriate blow gun model selection in accordance with the distance from the target object.

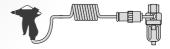


Distance	Recommended system					
Distance	Blow gun	Nozzle size	Fitting	Coil tube*	S coupler	
Up to 20 mm	VMG1□□-02-01	ø1	KQ2H06-02AS	TCU0604□-1-20-X6	KK4P-06H	
Up to 40 mm	VMG1□□-02-02	ø1.5	KQ2H06-02AS	TCU0604□-1-20-X6	KK4P-06H	
Up to 60 mm	VMG1□□-02-03	ø 2	KQ2H08-02AS	TCU0805□-1-20-X6	KK4P-08H	
Over 60 mm	VMG1□□-02-04	ø 2.5	KQ2H10-02AS	TCU1065□-1-20-X6	KK4P-10H	


* : B (Black), W (White), R (Red), BU (Blue), Y (Yellow), G (Green), C (Clear), YR (Orange)

Energy Saving Flow


Air guns with an effective area around 6 mm² are most commonly used. But the SMC blow gun achieves a 30 mm² effective area.

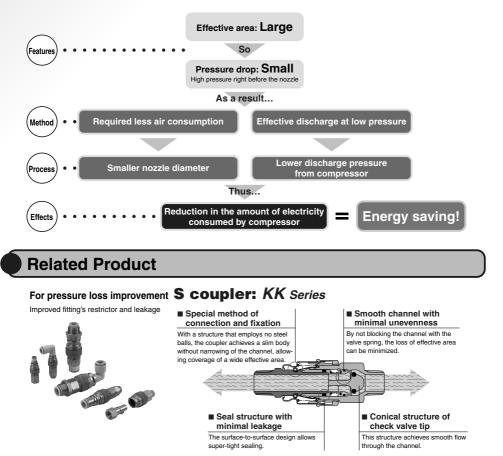

₿SMC

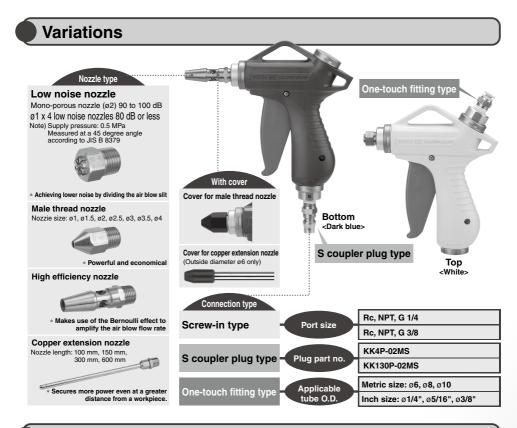

Operability, Safety, Environment

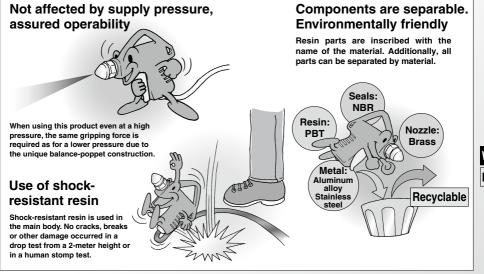

@SMC

VMG Kn

Blow Gun VMG Series



-

How to Order

VMG11W-02-32-C

	Piping entry	,
1	Bottom]
2	Тор]
	Body	

W BU

Body color	
White	
Dark blue	

Connection size

Symbol	Piping connection method	Size and model no.		
02	- Threaded		Rc1/4	
03			Rc3/8	
N02		Thread size	NPT1/4	
N03		i nread size	NPT3/8	
F02			G1/4	
F03			G3/8	
11	S coupler	Model no. of	KK4P-02MS	
12	plug	coupler used	KK130P-02MS	
H06	Matria aina	Model no. of	KQ2H06-02AS	
H08	Metric size One-touch fitting		KQ2H08-02AS	
H10	One-touch litting	fitting used	KQ2H10-02AS	
H07	Inch size	Model no. of fitting used	KQ2H07-35AS	
H09	One-touch fitting		KQ2H09-35AS	
H11	One-touch hitting	iittiing useu	KQ2H11-35AS	

Note 1) S coupler and fitting are included in the same package.

Note 2) Port size is Rc1/4 if using the S coupler plug. Note 3) The blow gun port size is Rc1/4 if using the metric size One-touch fitting.

Note 4) The blow gun port size is NPT1/4 if using the inch size One-touch fitting.

Specifications

Fluid	Air		
Operating pressure range	0 to 1.0 MPa		
Proof pressure	1.5 MPa		
Ambient and fluid temperature	–5 to 60°C (No freezing)		
Flow rate characteristics (With nozzle removed)	C (dm³/s·bar): 6.0, b: 0.25 (Effective area: 30 mm²)		
Port size	Rc, NPT, G 1/4, 3/8		
Piping entry	Bottom Top		
Nozzle port size	Rc1/4		
Weight (Main unit only)	165 g		
Operational force (when the valve is fully open)	7 N		

With nozzle cover (Only for male thread nozzle, ø6 extension nozzle)

Nil	None
С	With nozzle cover/HNBR

CF With nozzle cover/Fluororubber

Nozzle

Symbol	Туре	Nozzle size	Nozzle part no.		
Nil	Without nozzle				
01		ø1	KN-R02-100		
02		ø1.5	KN-R02-150		
03		ø2	KN-R02-200		
04	Male thread nozzle	ø2.5	KN-R02-250		
05		ø3	VMG1-R02-300		
06		ø3.5	VMG1-R02-350		
07		ø4	VMG1-R02-400		
11		ø1	KNH-R02-100		
12	High efficiency nozzle	ø1.5	KNH-R02-150		
13		ø2	KNH-R02-200		
21		ø0.75 x 4	KNS-R02-075-4		
22	Low noise nozzle	ø0.9 x 8	KNS-R02-090-8		
23	with male thread	ø1 x 4	KNS-R02-100-4		
24		ø1.1 x 8	KNS-R02-110-8		


Extension nozzle

Symbol	Туре	Nozzle length	Nozzle size	Nozzle part no.
31		300 mm	ø1.5	VMG1-06-150-300
32		300 11111	ø2	VMG1-06-200-300
33	ø6 copper	600 mm	ø1.5	VMG1-06-150-600
34	extension		ø2	VMG1-06-200-600
35	nozzle Note)	100 mm	ø1.5	VMG1-06-150-100
36		100 11111	ø2	VMG1-06-200-100
37		150 mm	ø1.5	VMG1-06-150-150
38		150 11111	ø2	VMG1-06-200-150
41	ø8 copper extension	100 mm	ø2.5	VMG1-08-250-100
42			ø3	VMG1-08-300-100
43			ø3.5	VMG1-08-350-100
44			ø2.5	VMG1-08-250-150
45		150 mm	ø3	VMG1-08-300-150
46			ø3.5	VMG1-08-350-150
47	nozzle Note)		ø2.5	VMG1-08-250-300
48		300 mm	ø3	VMG1-08-300-300
49			ø3.5	VMG1-08-350-300
50			ø2.5	VMG1-08-250-600
51		600 mm	ø3	VMG1-08-300-600
52			ø3.5	VMG1-08-350-600

Note) Part number for set of extension nozzle and fitting. Extension nozzle and fitting are included in the same package.

Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

Construction

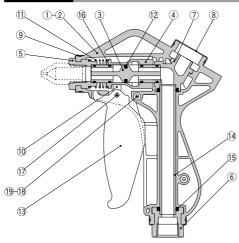


Component Parts					
Description	Material	Note			
Body L	PBT				
Body R	PBT				
Main valve	PBT				
Valve guide	POM				
Nozzle holder	Aluminium alloy	Anodized			
Port	Aluminium alloy	Anodized			
Elbow	PBT	Only for the VMG12			
Cover	Stainless steel				
Ring	Stainless steel				
Arm	PBT				
Spring	Stainless steel				
Main valve seal	HNBR				
Lever	PBT				
Piping (bottom)	POM	Only for the VMG11 Combined with the elbow ⑦.			
O-ring	NBR				
O-ring	NBR				
Parallel pin	Stainless steel				
Cross recessed round head screw	Stainless steel				
Hexagon nut	Stainless steel				
	Description Body L Body R Main valve Valve guide Nozzle holder Port Elbow Cover Ring Arm Spring Main valve seal Lever Piping (bottom) O-ring O-ring Parallel pin Cross recessed round head screw	Description Material Body L PBT Body R PBT Main valve PBT Valve guide POM Nozzle holder Aluminium alloy Port Aluminium alloy Elbow PBT Cover Stainless steel Ring Stainless steel Arm PBT Spring Stainless steel Main valve seal HNBR Lever PBT Piping (bottom) POM O-ring NBR Parallel pin Stainless steel			

Note) Grease is used on rubber and sliding sections.


Flow Rate Characteristics

Male thread nozzle 1500 VMG1-R02-400:ø4 1400 VMG1-R02-350:ø3.5 1300 1200 VMG1-R02-300:ø3 Flow rate [L/min (ANR)] 1100 KN-R02-250:02.5 1000 KN-R02-200:02 900 KN-R02-150:ø1.5 800 KN-R02-100:ø1 700 600 500 400 300 200 100 0 0 1 02 0.3 04 05 0.6 0.7 0.8 09 Supply pressure [MPa]

Low noise nozzle with male thread

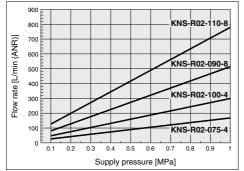


High efficiency nozzle

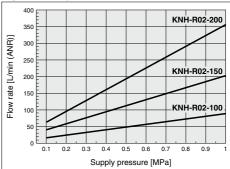

Copper extension nozzle

SMC

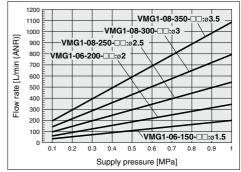


Note) Values when the main valve is fully open

VMG Kn

VMG Series

Dimensions

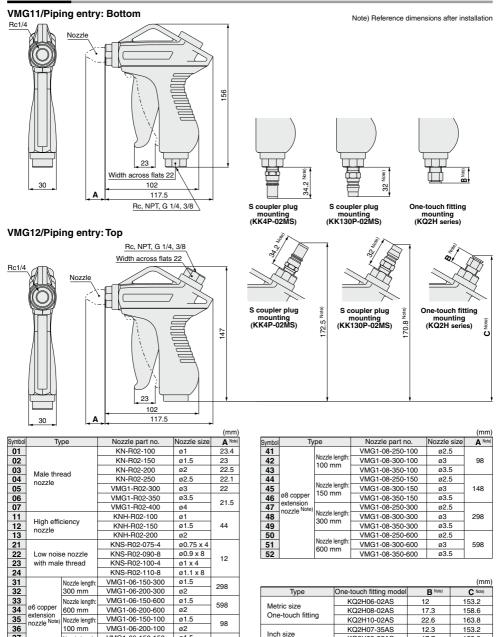

Nozzle length: 150 mm Note) Reference dimensions after installation

VMG1-06-150-150

VMG1-06-200-150

ø1.5

ø2

A 856

37

38

SMC

148

Note) Reference dimensions after installation

One-touch fitting

KQ2H09-35AS

KQ2H11-35AS

17.7

20.7

158.9

162

Dimensions: Nozzles/KN Series

Male thread nozzle: KN



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	A *	Connectio						
KN-R02-100	ø1			31.4	25.4							
KN-R02-150	ø1.5]		31	25	. //						
KN-R02-200	ø2	R1/4	R1/4	R1/4	R1/4	R1/4		30.5	24.5			
KN-R02-250	ø2.5						R1/4	14	30.1	24.1		
VMG1-R02-300	ø3]		30	24	H1						
VMG1-R02-350	ø3.5				1					29.5	23.5	·
VMG1-R02-400	ø4			29.5	23.5							

* Reference dimensions after R thread installation

High efficiency nozzle: KNH



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	A *	
KNH-R02-100	ø1					
KNH-R02-150	ø1.5	R1/4	14	52	46	
KNH-R02-200	ø2					
* Peteronee dimensions after P thread installation						

Reference dimensions after R thread installation

Low noise nozzle with male thread: KNS



Part no.	Nozzle size D	Connection thread	Width across flats H1	L1	A *	
KNS-R02-075-4	ø0.75 x 4	R1/4	14	20	14	
KNS-R02-090-8	ø0.9 x 8					
KNS-R02-100-4	ø1x4					
KNS-R02-110-8	ø1.1 x 8					


* Reference dimensions after R thread installation

Copper extension nozzle set

110							
	Part no.	Nozzle size D	Outside diameter	L1	L2 Note1)	L Note1)	Width across flats H1
	VMG1-06-150-100	ø1.5		100	100	106	
	VMG1-06-200-100	ø2		100	100	106	
	VMG1-06-150-150	ø1.5		450	150	450]
	VMG1-06-200-150	ø2	ø6	150	150	156	12
	VMG1-06-150-300	ø1.5	00	300	300	306	12
	VMG1-06-200-300	ø2		300	300	306	
	VMG1-06-150-600	ø1.5		600	600	606	
	VMG1-06-200-600	ø2					
	VMG1-08-250-100	ø2.5	-	100	100	106	
	VMG1-08-300-100	ø3					
	VMG1-08-350-100	ø3.5					
	VMG1-08-250-150	ø2.5					
	VMG1-08-300-150	ø3		150	150	156	
	VMG1-08-350-150	ø3.5	ø8				14
	VMG1-08-250-300	ø2.5	00				14
	VMG1-08-300-300	ø3		300	300	306	
	VMG1-08-350-300	ø3.5					
	VMG1-08-250-600	ø2.5					
	VMG1-08-300-600	ø3		600	600	606	
	VMG1-08-350-600	ø3.5					
	Note 1) Defense a disconsistent often installation						

Note 1) Reference dimensions after installation

Note 2) Copper extension nozzle and self-align fitting are included in the same package, (but unassembled). Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

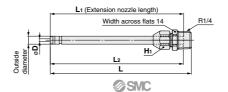



(mm)





(mm)

VMG Kn

VMG Series

Dimensios: Nozzle Cover

Cover for male thread nozzle



Nozzla aquar part pa	Material	Applicable blow gun model		
Nozzle cover part no.	wateria	Model	Nozzle type	
P5670129-01	HNBR	VMG100-01 to 04	Male thread nozzle	
P5670129-01F	Fluororubber	VING10110.04	ø1 to ø2.5	
P5670129-02	HNBR	VMG100-05 to 07	Male thread nozzle	
P5670129-02F	Fluororubber	VMG1LL-L-05 t0 07	ø3 to ø4	

(mm)



Cover for copper extension nozzle




Nozzle cover part no.	Material	Applicable blow gun model		
Nozzie cover part no.	waterial	Model	Nozzle type	
P5670129-11	HNBR	VMG100-0-31 to 38	ø6 copper	
P5670129-11F	Fluororubber	VMG1LL-L-31 t0 38	extension nozzle	



(mm)

VMG1□-□□-31 to 38

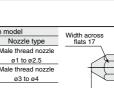

Specific Product Precautions 1

Be sure to read this before handling the products.

Selection

VMG Series

₼Warning

1. Check the specifications.

The products in this catalog are designed to be used in compressed air systems only. If the products are used in an environment where pressure or temperature is out of the specified range, damage and/or malfunction may result. Do not use under such conditions.


≜Caution

1. Do not apply the blow gun to flammable, explosive or toxic substances such as gas, fuel gas or refrigerant. Such substances may exude from inside the blow gun.

Mounting

▲Warning

- Install a stop valve on the supply pressure side of the blow gun to enable emergency shut off in case of unexpected leakage or damage.
- 2. When installing a nozzle on the blow gun, wrap pipe tape around the threads of the nozzle.
- 3. When installing the nozzle, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with force within the torque range below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

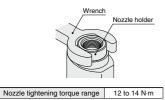

Insufficient tightening may cause loosening of the nozzle.

Piping

1. Check the model, type and size before installation.

Also, confirm that there is no scratches, gouges or cracks on the product.

2. Before piping

Before piping, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

Piping

≜Caution

3. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the blow gun. Also, when the sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



4. When tightening the threads, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with torque specified in the table below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

Be careful that tightening with torque beyond the ranges in the table below may cause damage to the body.



M	ale thread	Tightening torque N·m
	R1/4	12 to 14
	R3/8	22 to 24

- Allow extra length when connecting a tube to accommodate changes in tube length due to pressure.
- Confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 7. Do not abrade, entangle or scratch the tube. This may cause the tube to be crushed, burst or come loose.

Lubrication

AWarning

1. Do not lubricate the product.

It may contaminate or damage the target object.

VMG KN

Air Supply

≜Marning

1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction. **Specific Product Precautions 2**

Be sure to read this before handling the products.

Air Supply

VMG Series

ACaution

1. Install air filters.

Install air filters at the upstream side of blow gun. Choose the filtration degree of 5 μm or finer.

2. Install an after-cooler, air dryer or water droplet separator, etc.

Air excessive drainage may cause a malfunction of blow gun and contaminate or damage the target object. To prevent this, install an after-cooler, air dryer or water droplet separator, etc.

Operating Environment

AWarning

- 1. Do not use in an atmosphere of corrosive gases, chemicals, sea water, water or water vapor or in an environment where such substances may adhere.
- 2. Provide shading in an environment where the product is exposed to the sunlight.
- 3. Do not use in an environment where a heat source is at a close distance.
- 4. Do not use in an environment where static electricity is a problem. It may cause malfunction or failure of the system. Please contact SMC for use in such an environment.
- Do not use in an environment where spatters are generated. There is danger of fires caused by spattering. Please contact SMC for use in such an environment.
- 6. Do not use in an environment where the product is exposed to cutting oil, lubricating oil or coolant oil. Please contact SMC for use in an environment where the product is exposed to such liquid as cutting oil, lubricating oil or coolant oil.

Maintenance

Caution

- 1. In periodical inspections, check the following items and replace the parts if necessary.
 - a) Scratches, gouges, abrasion, corrosion
 - b) Air leakage
 - c) Twisting, crushing and turning of connected tubes
 - d) Hardening, deterioration and softening of connected tubes
 - e) Loosening of nozzles
- 2. When removing the product, first stop the pressure supply, exhaust compressed air in the piping and check the condition of atmospheric release.
- 3. Do not disassemble or remodel the body of the product.

∕∂SMC

Handling

Warning

- 1. To prevent lurching of the nozzle due to air pressure, confirm that the nozzle is not loosened or rattling by pulling it by hand before operation.
- 2. Make sure to wear safety goggles to protect yourself from splashed substances.
- Do not direct the tip of the nozzle at the face or other parts of a human body. It may cause danger to personnel.
- 4. Do not use the product to clean or remove toxic substances or chemicals.
- 5. Do not drop, step on or hit the product. It may cause damage to the product.
- Do not use the product to disturb public order or public hygiene.
- 7. This product is not a toy.
- 8. After blowing, make sure to hang the product on a hook, etc.

If leaving the product in a dusty place, particles will enter the product and may result in a malfunction.




- 9. When the blow gun is used or stored, confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 10. When attaching a nozzle cover, align the hex parts of the nozzle and nozzle cover before covering. When attaching an extension nozzle cover, confirm that the nozzle tip is completely inserted into the extension nozzle cover.
- 11. Do not use a nozzle cover or extension nozzle cover if it is cracked or does not fit securely, and replace with a new cover.

INFORMATION

Blow Gun (RoHS) with Flow Rate Adjustment Function


The flow rate can be easily adjusted according to the amount of force applied to the lever.

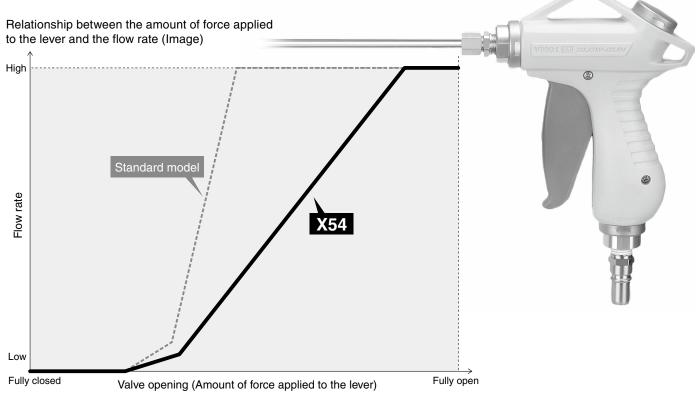

Application Examples

For the blowing of lightweight workpieces

By limiting the amount of blow air, the blowing away of workpieces can be prevented.

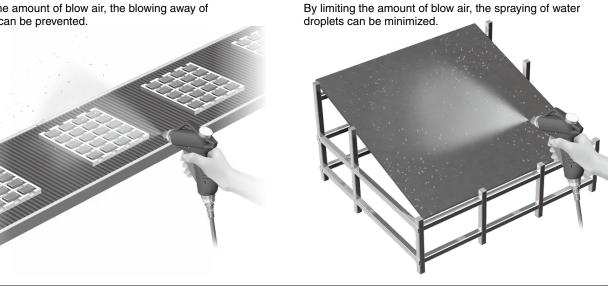

For the blowing off of water droplets


VMG11□-□-*X54*



VMG11□-□--*X54*

RoHS

How to Order

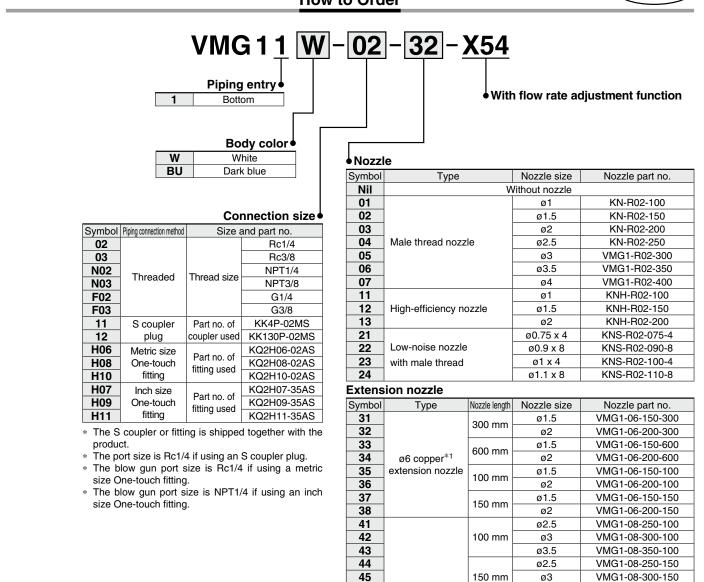

46

47

48

49

50

51

52

*1

ø8 copper*1

extension nozzle

assembly procedures.

ø3.5

ø2.5

øЗ

ø3.5

ø2.5

øЗ

ø3.5

300 mm

600 mm

This is the part number for the extension nozzle and fitting set.

The extension nozzle and fitting are shipped together with the product. Refer to "How to attach extension nozzle" in the operation manual for

VMG1-08-350-150

VMG1-08-250-300

VMG1-08-300-300

VMG1-08-350-300

VMG1-08-250-600

VMG1-08-300-600

VMG1-08-350-600

Specifications

Fluid	Air
Operating pressure range	0 to 1.0 MPa
Proof pressure	1.5 MPa
Ambient and fluid temperatures	–5 to 60°C (No freezing)
Flow rate characteristics (With nozzle removed)	C (dm³/s⋅bar): 3.3 ^{∗1} (Effective area: 16.5 mm²)
Port size	Rc, NPT, G 1/4, 3/8
Piping entry	Bottom
Nozzle port size	Rc1/4
Weight (Main unit only)	165 g
Operational force (when the valve is fully open)	9 N* ²


*1 Though the value is smaller than that of the standard model, the flow rate characteristics when a nozzle is mounted are the same as those of the standard model.

*2 The operational force is higher than that of the standard model for ease of flow adjustment with the lever.

1

Dimensions



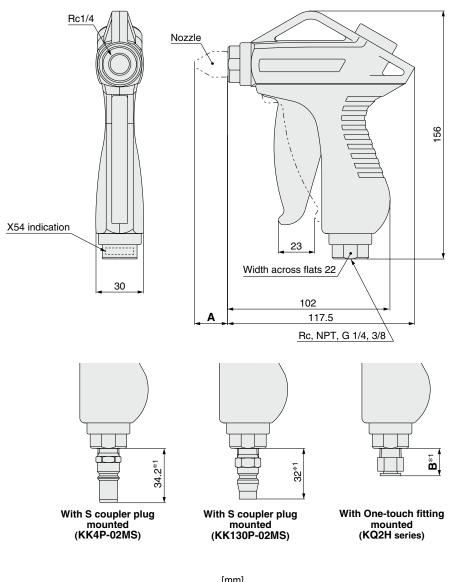


					[mm]
Symbol	Ту	pe	Nozzle part no.	Nozzle size	A *1
01			KN-R02-100	ø1	23.4
02	1		KN-R02-150	ø1.5	23
03			KN-R02-200	ø2	22.5
04	Male thre	ead nozzle	KN-R02-250	ø2.5	22.1
05			VMG1-R02-300	ø3	22
06			VMG1-R02-350	ø3.5	01.5
07			VMG1-R02-400	ø4	21.5
11	High-effi	alanav	KNH-R02-100	ø1	
12	nozzle	ciency	KNH-R02-150	ø1.5	44
13	HUZZIE		KNH-R02-200	ø2	
21			KNS-R02-075-4	ø0.75 x 4	
22	Low-nois	e nozzle	KNS-R02-090-8	ø0.9 x 8	12
23	with male	with male thread	KNS-R02-100-4	ø1 x 4	12
24			KNS-R02-110-8	ø1.1 x 8	
31		Nozzle length:	VMG1-06-150-300	ø1.5	298
32		300 mm	VMG1-06-200-300	ø2	290
33	ø6 copper extension nozzle*1	Nozzle length:	VMG1-06-150-600	ø1.5	598
34		600 mm	VMG1-06-200-600	ø2	550
35		Nozzle length:	VMG1-06-150-100	ø1.5	98
36		100 mm	VMG1-06-200-100	ø2	30
37		Nozzle length:	VMG1-06-150-150	ø1.5	148
38		150 mm	VMG1-06-200-150	ø2	140

					[mm]
Symbol	Ту	'pe	Nozzle part no.	Nozzle size	A *1
41		Nozzle	VMG1-08-250-100	ø2.5	
42		length:	VMG1-08-300-100	ø3	98
43		100 mm	VMG1-08-350-100	ø3.5	
44		Nozzle	VMG1-08-250-150	ø2.5	
45	1	length:	VMG1-08-300-150	ø3	148
46	ø8 copper	150 mm	VMG1-08-350-150	ø3.5	
47	extension nozzle ^{*1}	Nozzle	VMG1-08-250-300	ø2.5	
48		length:	VMG1-08-300-300	ø3	298
49		300 mm	VMG1-08-350-300	ø3.5	
50		Nozzle	VMG1-08-250-600	ø2.5	
51		length:	VMG1-08-300-600	ø3	598
52		600 mm	VMG1-08-350-600	ø3.5	

		[mm]
Туре	One-touch fitting part no.	B *1
Metric size	KQ2H06-02AS	12
One-touch fitting	KQ2H08-02AS	17.3
	KQ2H10-02AS	22.6
Inch size	KQ2H07-35AS	12.3
One-touch fitting	KQ2H09-35AS	17.7
One-touch hitting	KQ2H11-35AS	20.7

*1 Reference dimensions after installation

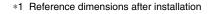

Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.