

Vacuum Pad





Series ZP

With buffer

Non-rotating
 ø2 to ø8: Stroke 6, 10, 15, 25 mm
 ø10 to ø32: Stroke 10, 20, 30, 40, 50 mm
 ø40, ø50: Stroke 10, 20, 30, 50 mm

Type	Without buffer			With buffer		
	Vacuum entry port	Mounting	VAC	Vacuum entry port	Mounting	VAC
13-11-2 to 13-11-27 Series ZPT Vertical vacuum entry	Male thread	(Common)		Female thread	Buffer body	
	Female thread	(Common)		Barb fitting	Buffer body	
13-11-28 to 13-11-43 Series ZPR Lateral vacuum entry with One-touch fitting	One-touch fitting	Male thread		One-touch fitting	Buffer body	
	One-touch fitting	Female thread				
13-11-44 to 13-11-57 Series ZPY Lateral vacuum entry with Barb fitting	Barb fitting	Male thread		Barb fitting	Buffer body	
	Barb fitting	Female thread				

ZX
 ZR
 ZM
 ZH
 ZU
 ZL
 ZY
 ZQ
 ZF
 ZP
 ZCU
 AMJ
 Misc.

Pad form (Compatible with all models)	Flat (U)		Flat with ribs (C)		Deep (D)			Bellows (B)			Thin flat (UT) Thin with ribs (CT)				
															
Pad diameter	2 x 4	3.5 x 7	4 x 10	ø2	ø4	ø6	ø8	ø10	ø13	ø16	ø20	ø25	ø32	ø40	ø50
Flat	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Flat with ribs	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
Deep	—	—	—	—	—	—	—	●	—	●	—	●	—	●	—
Bellows	—	—	—	—	—	●	●	●	●	●	●	●	●	●	●
Thin flat	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—
Thin flat with ribs	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—

Pad diameter (ø2 to ø125)	ø2 to ø125 (Option: ø150 to ø250)

Pad material	NBR (Black), Silicon rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with green mark), Conductive NBR (Black with one white mark), Conductive silicon rubber (Black with two white marks)
--------------	--

Pad selection	Refer to technical data on pages 13-1-10 to 13-1-19 for the calculation of lift force and response time.
---------------	--

Made to Order	1. Elliptic pad 2. Large size pad
---------------	-----------------------------------

Pad Material and Characteristics

○: Little or no influence ○: Can be used depending on conditions X: Not suitable

Characteristics	Durometer HS (±5°)	Operating temperature range (°C)	Oil resistance gasoline	Oil resistance benzol	Base resistance	Acid resistance	Weatherability	Ozone resistance	Abrasion resistance	Waterproof	Solvent resistance (Benzene, toluene)
NBR	50°	0 to 120	○	X	○	○	X	X	○	○	X
Silicon rubber	40°	-30 to 200	X	X	○	X	○	○	X	○	X
Urethane rubber	60°	0 to 60	○	X	X	X	○	○	○	X	X
Fluoro rubber	60°	0 to 250	○	○	X	○	○	○	○	○	○
Conductive NBR	50°	0 to 100	○	X	○	X	○	X	○	○	X
Conductive silicon rubber	50°	-10 to 200	X	X	○	X	○	○	X	○	X

* The above table covers only general characteristics of subject rubber materials. Pad materials used by SMC pass the JIS standards; however the actual performance depends on operating conditions.



Vacuum Pad: Vertical Vacuum Entry Without Buffer *Series ZPT*



Specifications

Vacuum entry	Direction		Vertical	
	Connection		Male thread	Female thread
	Thread diameter	ø2 to ø8 2004, 3507, 4010 Thin section series (ø10 to ø16)	M5 x 0.8, M6 x 1	M4 x 0.7, M5 x 0.8
		ø10 to ø16	M5 x 0.8, M6 x 1	M5 x 0.8, M6 x 1, Rc 1/8
		ø20 to ø32	M6 x 1, M8 x 1	M5 x 0.8, M6 x 1, M8 x 1.25, Rc 1/8
		ø40, ø50	M6 x 1, M8 x 1	M6 x 1, M8 x 1.25, Rc 1/8
Mounting		Use connection for vacuum entry		

Pad Type

Pad form	Flat	Flat with ribs	Deep	Bellows	Thin flat/Thin flat with ribs
Pad diameter (mm)	2, 4, 6, 8, 2 x 4, 3.5 x 7, 4 x 10, 10, 13, 16, 20, 25, 32, 40, 50	10, 13, 16, 20, 25, 32, 40, 50	10, 16, 25, 40	6, 8, 10, 13, 16, 20, 25, 32, 40, 50	10, 13, 16
Material (Color)	NBR (Black), Silicon rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with green mark) Conductive NBR (Black with one white mark), Conductive silicon rubber (Black with two white marks)				
Durometer	NBR (50°), Silicon rubber (40°), Urethane rubber/Fluoro rubber (60°) Conductive NBR (50°), Conductive silicon rubber (50°)				

Weight/Male Thread (Female thread)

(g)

Model	Flat					Flat with ribs				Deep				Bellows				
	M4	M5	M6	M8	Rc 1/8	M5	M6	M8	Rc 1/8	M5	M6	M8	Rc 1/8	M4	M5	M6	M8	Rc 1/8
ZPT02 to ZPT08	— (3.5)	2.5 (3)	3.5 (—)	—	—	—	—	—	—	—	—	—	—	— (3.5) (except ø2, ø4)	2.5 (3)	3.5 (—) (except ø2, ø4)	—	—
ZPT10	—	10 (6.5)	12 (6)	—	— (13)	10 (6.5)	12 (6)	—	— (12)	10 (7)	12 (6)	— (13)	—	—	10 (6.5)	12 (6)	—	— (13)
ZPT13	—	—	—	—	—	—	—	—	—	11 (7)	15 (7)	15 (13)	—	—	—	—	—	—
ZPT16	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
ZPT20	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
ZPT25	—	— (8.5)	15 (8)	26 (17)	— (16)	— (8.5)	15 (8)	26 (17)	— (16)	— (10)	15 (10)	15 (18)	— (17)	—	— (8.5)	15 (8)	16 (17)	— (16)
ZPT32	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
ZPT40	—	—	28 (26)	30 (25)	— (23)	—	28 (26)	30 (25)	— (16)	—	30 (28)	32 (26)	— (20)	—	—	28 (26)	30 (25)	— (23)
ZPT50	—	—	30 (29)	32 (27)	— (25)	—	32 (30)	34 (29)	— (27)	—	—	—	—	—	—	30 (29)	32 (27)	— (25)

* (): Figures for female thread connections



P. 13-11-65 to 13-11-68

Model

Model	Pad dia. (ømm)	Applicable pad form						Connection/Thread dia.	
		Flat (U)	Flat with ribs (C)	Deep (D)	Bellows (B)	Thin flat (UT)	Thin flat with ribs (CT)	Male thread	Female thread
ZPT2004U□-□	2 x 4	●	—	—	—	—	—	M5 x 0.8 M6 x 1	M4 x 0.7 M5 x 0.8
ZPT3507U□-□	3.5 x 7	●	—	—	—	—	—		
ZPT4010U□-□	4 x 10	●	—	—	—	—	—		
ZPT02U□-□	2	●	—	—	—	—	—		
ZPT04U□-□	4	●	—	—	—	—	—		
ZPT06□□-□	6	●	—	—	●	—	—		
ZPT08□□-□	8	●	—	—	●	—	—		
ZPT10□□-□	10	—	—	—	—	●	●		
ZPT13□□-□	13	—	—	—	—	●	●		
ZPT16□□-□	16	—	—	—	—	●	●		

Model	Pad dia. (mm)	Applicable pad form				Connection/Thread dia.	
		Flat (U)	Flat with ribs (C)	Deep (D)	Bellows (B)	Male thread	Female thread
ZPT10□□-□	10	●	●	●	●	M5 x 0.8 M6 x 1	M5 x 0.8 M6 x 1 Rc 1/8
ZPT13□□-□	13	●	●	—	●		M6 x 1 M8 x 1
ZPT16□□-□	16	●	●	●	●		
ZPT20□□-□	20	●	●	—	●		
ZPT25□□-□	25	●	●	●	●	M6 x 1 M8 x 1	
ZPT32□□-□	32	●	●	—	●		M6 x 1 M8 x 1
ZPT40□□-□	40	●	●	●	●		
ZPT50□□-□	50	●	●	—	●		

How to Order

Series ZPT
Without buffer

Pad dia. (mm)
Pad type
Material
Vacuum entry port

ZPT 02 U N A5

Pad diameter (mm)

2004	2 x 4
3507	3.5 x 7
4010	4 x 10
02	ø2
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Vacuum entry/Mounting thread diameter

Connection	Symbol	Thread diameter	ø2 to ø8 2 x 4, 3.5 x 7, 4 x 10 ø10 to ø16 (Thin section series)	ø10 to ø16	ø20 to ø32	ø40, ø50
Male thread	A5	M5 x 0.8	●	●	—	—
	A6	M6 x 1	●	●	●	●
	A8	M8 x 1	—	—	●	●
Female thread	B4	M4 x 0.7	●	—	—	—
	B5	M5 x 0.8	●	●	●	—
	B6	M6 x 1	—	●	●	●
	B8	M8 x 1.25	—	—	●	●
	B01	Rc 1/8	—	●	●	●

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN *	Conductive NBR (ø2 to ø16)
GS *	Conductive silicon rubber (ø2 to ø16)

* ø20 and larger are manufactured upon a receipt of order.

Pad type

(Refer to "Table (1)" for applications.)

U	Flat
C	Flat with ribs
D	Deep
B	Bellows
UT	Thin flat
CT	Thin flat with ribs

Table (1) Pad Diameter/Pad Type

Diameter (mm)	2 x 4	3.5 x 7	4 x 10	2	4	6	8	10	13	16	20	25	32	40	50
Type															
Flat	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Flat with ribs	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
Deep	—	—	—	—	—	—	—	●	—	●	—	●	—	●	—
Bellows	—	—	—	—	—	●	●	●	●	●	●	●	●	●	●
Thin flat	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—
Thin flat with ribs	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—

⚠ Precautions

Be sure to read before handling. Refer to pages 13-15-3 to 13-15-4 for Safety Instructions and Common Precautions on the products mentioned in this catalog, and refer to page 13-1-5 for Precautions on every series.

Caution on Design

⚠ Warning

1. In cases where workpieces are heavy or dangerous, etc., take measures to address a possible loss of adsorption force (installation of drop prevention guides, etc.).

In the case of transportation by vacuum adsorption using vacuum pads, adsorption force is lost when there is a drop in vacuum pressure. Furthermore, since vacuum pressure can also deteriorate due to wear and cracking of pads, and vacuum leakage from piping, etc., be certain to perform maintenance on vacuum equipment.

Selection

⚠ Caution

1. The pad materials differ depending upon the operating environment.

An appropriate pad material should be selected. Furthermore, since vacuum pads are manufactured for use with industrial products, they should not have direct contact with pharmaceuticals or food products, etc.

2. Depending upon the weight and shape of the workpieces, the diameter, quantity and shape of pads will vary.

Use the pad lifting force table for reference. Also, the pads selected will differ based upon conditions other than the above, such as the condition of the workpiece surface (presence or absence of oil or water), the workpiece material and its gas permeability. Confirmation is necessary by actually performing vacuum adsorption testing on the subject workpieces.

3. Use a buffer for adsorption on fragile workpieces.

The cushioning by the buffer is necessary when there is variation in the height of workpieces. When further positioning of pads and workpieces is desired, a detent buffer can be used.

4. The life of a buffer will be reduced if the lateral force is applied to the buffer shaft. Note that sometimes a load is applied to the buffer by a piping tube (pulling or pressing, etc. in a lateral direction).

5. Do not apply an impact or large forces to a pad when adsorbing a workpiece.

This will cause deformation, cracking and wear of the pad to be accelerated. The stiffening ribs, etc. should touch lightly, while staying within the pad skirt's deformation range. Positioning should be performed accurately. Especially in the case of small diameter pads.

6. When transporting in an upward direction, factors such as acceleration, wind pressure and impact force must be considered in addition to a workpiece weight.

Use caution particularly when lifting items such as glass plates and circuit boards, because a large force will be applied by the wind pressure. When a workpiece which is oriented vertically is transported horizontally, large forces are applied by acceleration when movement is started and stopped. Further, in cases where the pad and a workpiece can slip easily, accelerations and decelerations of horizontal movement should be kept low.

7. When transporting flat workpieces that have large surface areas using multiple pads, care must be taken when arranging the pads to balance the workpiece.

Maintenance


⚠ Caution

1. Perform pad maintenance regularly.

Since pads are essentially rubber, deterioration is unavoidable. The rate of deterioration depends upon factors such as conditions of use, environment and temperature. Regular maintenance should be performed. If any damage, splitting, cracking or abrasion has occurred in a pad which appears to be harmful, replace it immediately. Also, take care not to damage the outside of the pad.

Series ZPT

Connection	Male thread	Pad Form	Flat/Flat with ribs/Deep/Thin flat/ Thin flat with ribs/Elliptic
Vacuum Entry Port	Vertical	Mounting	Use connection for vacuum

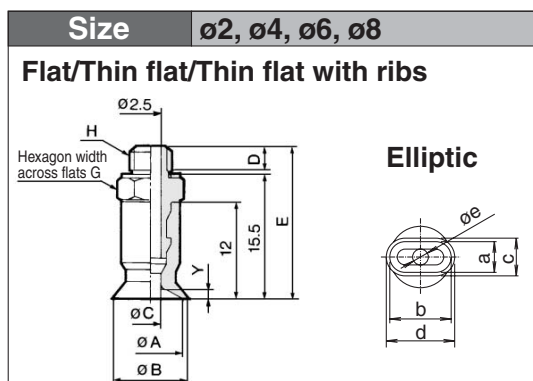


Flat/Thin Flat/Thin Flat with Ribs

Model	øA	øB	øC	H: M5 x 0.8			H: M6 x 1			Y	
				D	E	G	D	E	G		
ZPT02U	2	2.6	1.2	3	19	7	4	20	8	0.8	
ZPT04U	4	4.8	1.6								
ZPT06U	6	7									
ZPT08U	8	9									
ZPT10UT	10	11									1
ZPT13UT	13	14									1.5
ZPT16UT	16	17									
ZPT10CT	10	11									0.8
ZPT13CT	13	14									1
ZPT16CT	16	17									

Elliptic

Model	a	b	c	d	ϕe	Y
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8

* Dimensions of D, E, G are the same.

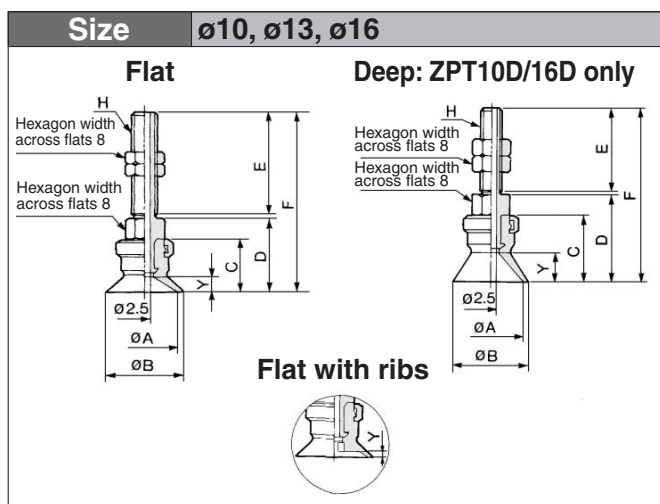


Flat/Flat with Ribs

Model	ϕA	ϕB	C	D	H: M5 x 0.8		H: M6 x 1		Y	
					E	F	E	F	Flat	Flat with ribs
ZPT10 ^U _C	10	12	12	17	20	38	25	43	3	1.7
ZPT13 ^U _C	13	15								1.8
ZPT16 ^U _C	16	18	12.5	17.5						1.2

Deep

Model	ϕA	ϕB	C	D	H: M5 x 0.8		H: M6 x 1		Y
					E	F	E	F	
ZPT10D	10	12	15	20	20	41	25	46	6
ZPT16D	16	18	16	21	20	42	25	47	7

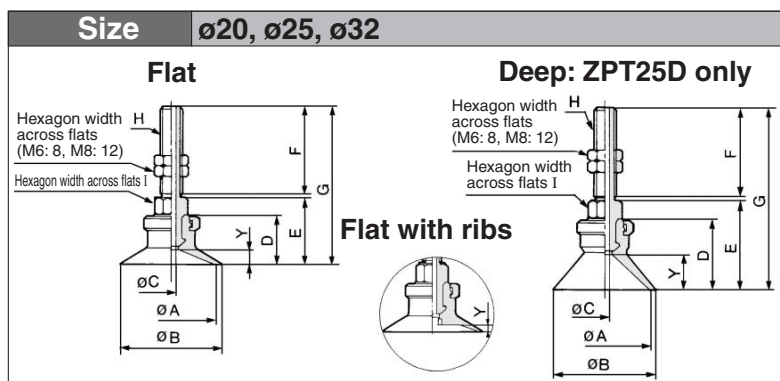


Flat/Flat with Ribs

Model	ϕA	ϕB	D	H: M6 x 1					H: M8 x 1					Y	
				ϕC	E	F	G	I	ϕC	E	F	G	I	Flat	Flat with ribs
ZPT20 ^U _C	20	23	14	3	19	25	45	8	3.5	24	15	40	12	4	1.7
ZPT25 ^U _C	25	28												4.5	1.8
ZPT32 ^U _C	32	35												4.5	2.3

Deep

Model	ϕA	ϕB	D	H: M6 x 1					H: M8 x 1					Y
				ϕC	E	F	G	I	ϕC	E	F	G	I	
ZPT25D	25	28	20	3	25	25	51	8	3.5	30	15	46	12	10

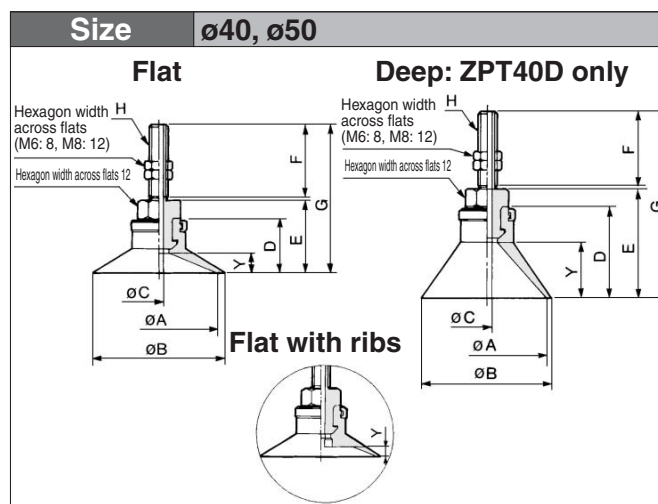

Flat/Flat with Ribs


Model	ϕA	ϕB	D	E	H: M6 x 1			H: M8 x 1			Y	
					ϕC	F	G	ϕC	F	G	Flat	Flat with ribs
ZPT40 ^U _C	40	43	18.5	24.5	3	25	50.5	4.5	15	40.5	6.5	3.3
ZPT50 ^U _C	50	53	19.5	25.5							7.5	3.8

Deep


Model	ϕA	ϕB	D	E	H: M6 x 1			H: M8 x 1			Y
					ϕC	F	G	ϕC	F	G	
ZPT40D	40	43	29	35.5	3	25	61	4.5	15	51	17

Vacuum Pad:
Vertical Vacuum Entry without Buffer Series ZPT


Connection	Male thread	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Use connection for vacuum entry

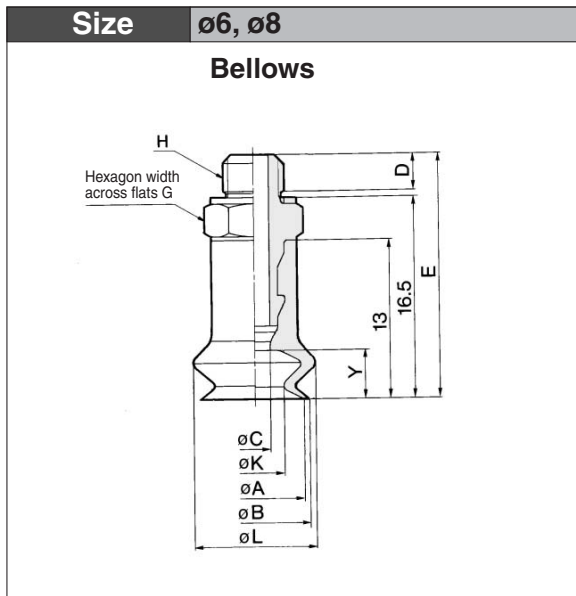


Model	øA	øB	øC	H: M5 x 0.8			H: M6 x 1			øK	øL	Y
				D	E	G	D	E	G			
ZPT06B	6	7	2.5	3	20	7	4	21	8	3.3	9.1	4
ZPT08B	8	9								4.7	10.1	

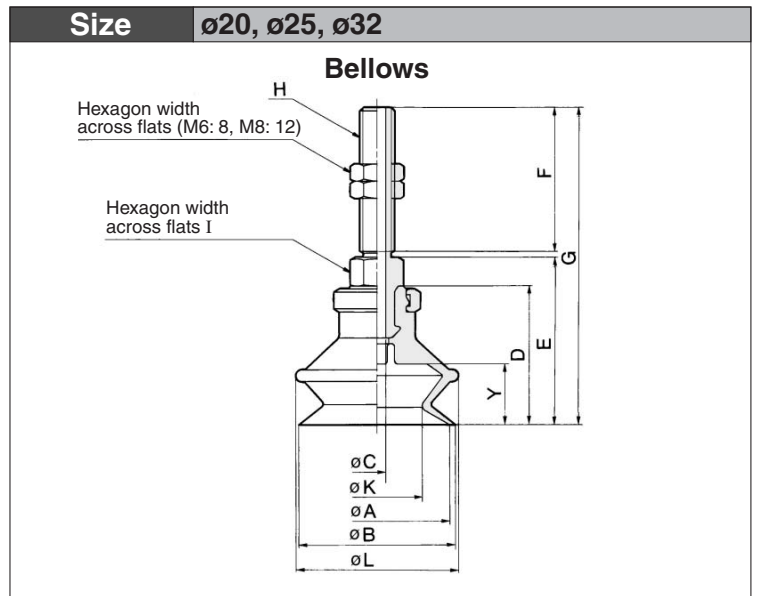

Model	øA	øB	D	H: M6 x 1					H: M8 x 1					øK	øL	Y
				øC	E	F	G	I	øC	E	F	G	I			
ZPT20B	20	22	23.5		28.5		54.5			33.5		49.5		12.4	25	10.5
ZPT25B	25	27	24	3	29	25	55	8	3.5	34	15	50	12	15.6	28	10.5
ZPT32B	32	34	29		34		60			39		55		18.9	37	14

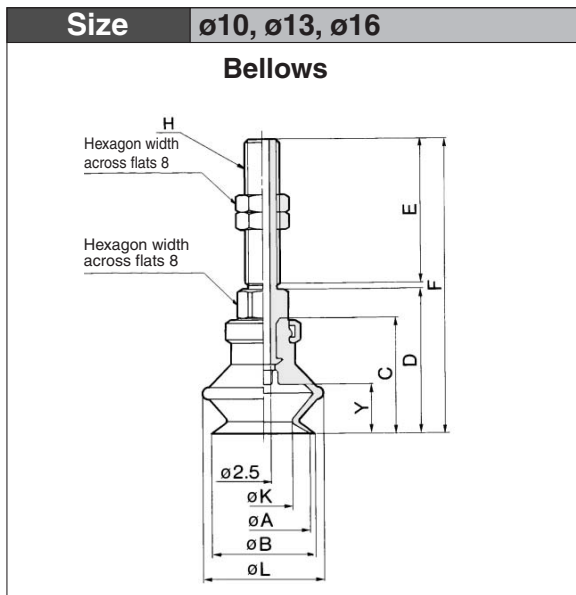

Model	øA	øB	øC	D	H: M5 x 0.8		H: M6 x 1		øK	øL	Y
					E	F	E	F			
ZPT10B	10	12	16	21		42		47	5.5	13.8	5.5
ZPT13B	13	15	18.5	23.5	20	44.5	25	49.5	8.7	19	7.5
ZPT16B	16	18	20	25		46		51	9.9	21	8.5

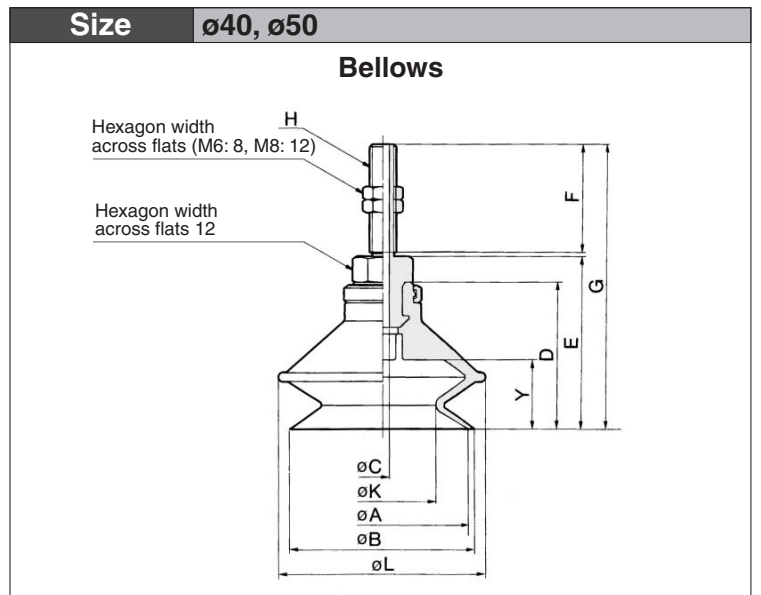

Model	øA	øB	D	E	H: M6 x 1			H: M8 x 1			øK	øL	Y
					øC	F	G	øC	F	G			
ZPT40B	40	43	34	40	3	25	66	4.5	15	56	24.4	48	16
ZPT50B	50	53	38	44			70			60	32.4	57	19

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

Connection	Female thread	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Use connection for vacuum entry

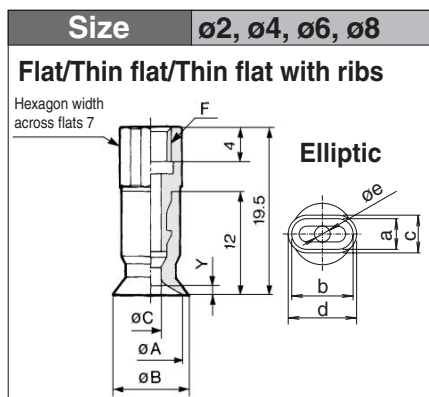


Flat

Model	ϕA	ϕB	C	F	Y
ZPT02U	2	2.6	1.2	M4 x 0.7	0.8
ZPT04U	4	4.8	1.6		
ZPT06U	6	7			
ZPT08U	8	9			
ZPT10UT	10	11	2.5	M5 x 0.8	1
ZPT13UT	13	14			
ZPT16UT	16	17			
ZPT10CT	10	11			
ZPT13CT	13	14			
ZPT16CT	16	17			

Elliptic

Model	a	b	c	d	ϕe	Y
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8

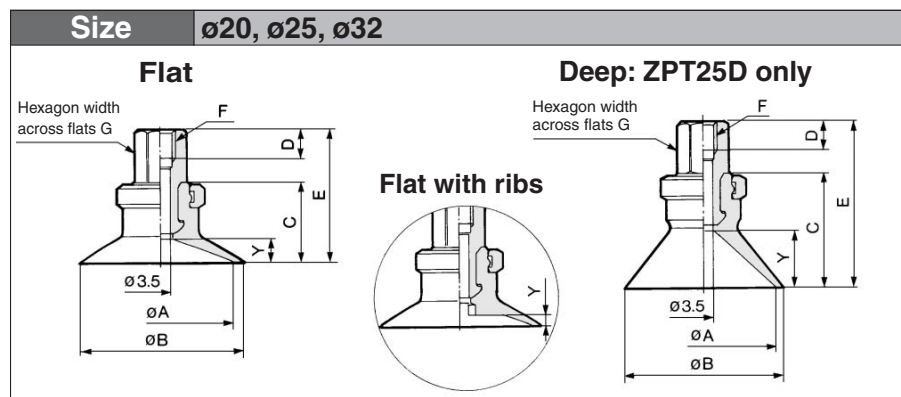

Flat/Flat with Ribs

Model	ϕA	ϕB	C	F: M5 x 0.8			F: M6 x 1			F: M8 x 1.25			F: Rc 1/8			Y	
				D	E	G	D	E	G	D	E	G	D	E	G	Flat	Flat with ribs
ZPT20 $\frac{U}{C}$	20	23	14	5	23	8	6	23	8	8	12	6.2	29	12	4	1.7	1.8
ZPT25 $\frac{U}{C}$	25	28															
ZPT32 $\frac{U}{C}$	32	35	14.5		23.5			23.5			29.5		29.5		4.5	2.3	


Deep

Model	ϕA	ϕB	C	F: M5 x 0.8			F: M6 x 1			F: M8 x 1.25			F: Rc 1/8			Y
				D	E	G	D	E	G	D	E	G	D	E	G	
ZPT25D	25	28	20	5	29	8	6	29	8	8	35	12	6.2	35	12	10



Weight

Weight table for female thread: Refer to page 13-11-2.

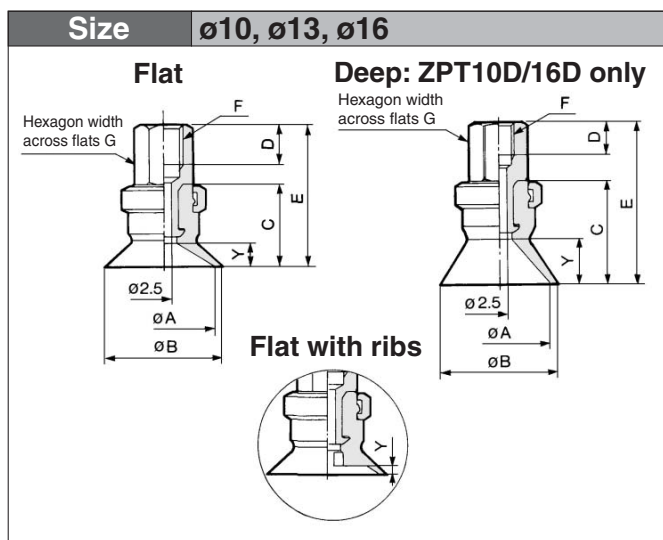


Flat/Flat with Ribs

Model	ϕA	ϕB	C	F: M5 x 0.8			F: M6 x 1			F: Rc 1/8			Y	
				D	E	G	D	E	G	D	E	G	Flat	Flat with ribs
ZPT10 $\frac{U}{C}$	10	12	12	5	21	8	6	21	8	6.2	27	12	3	1.7
ZPT13 $\frac{U}{C}$	13	15												
ZPT16 $\frac{U}{C}$	16	18	12.5		21.5			21.5			27.5		3.5	1.2

Deep

Model	ϕA	ϕB	C	F: M5 x 0.8			F: M6 x 1			F: Rc 1/8			Y
				D	E	G	D	E	G	D	E	G	
ZPT10D	10	12	15	5	24	8	6	24	8	6.2	30	12	6
ZPT16D	16	18	16		25			25		6.2	31		7

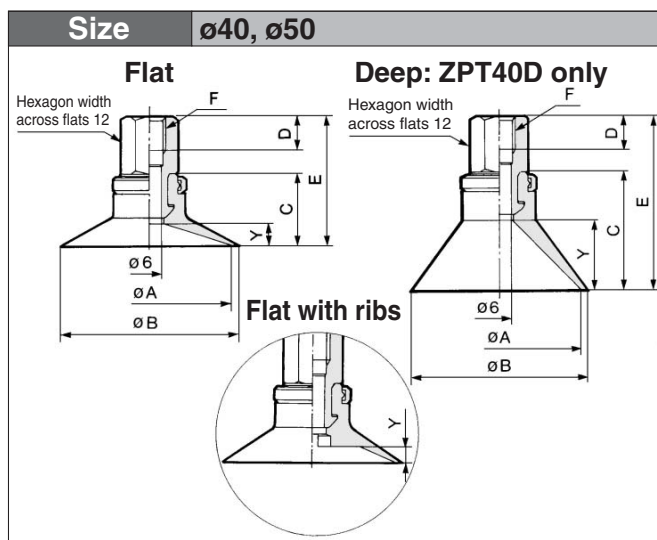

Flat/Flat with Ribs

Model	ϕA	ϕB	C	F: M6 x 1			F: M8 x 1.25			F: Rc 1/8			E	Y	
				D	D	D	D	D	D	D	D	D		Flat	Flat with ribs
ZPT40 $\frac{U}{C}$	40	43	18.5	6	8	6.2	32	6.5	3.3	33	7.5	3.8			
ZPT50 $\frac{U}{C}$	50	53	19.5												

Deep

Model	ϕA	ϕB	C	F: M6 x 1			F: M8 x 1.25			F: Rc 1/8			E	Y
				D	D	D	D	D	D	D	D	D		
ZPT40D	40	43	29	6	8	6.2	42.5	17						

Vacuum Pad:
Vertical Vacuum Entry without Buffer Series ZPT

Connection	Female thread	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Use connection for vacuum entry

Size

$\phi 6, \phi 8$

Bellows

Model

ϕA

ϕB

ϕC

F

ϕK

ϕL

Y

ZPT06B

6

7

2.5

M4 x 0.7

3.3

9.1

4

ZPT08B

8

9

M5 x 0.8

4.7

10.1

Size

ø20, ø25, ø32

Bellows

Technical drawing of a bellows assembly. The drawing shows a cross-section of the bellows and its connection to a hexagonal nut. The hexagonal nut is labeled "Hexagon width across flats 6". The bellows is labeled "F". The dimensions are labeled as follows: D (flange diameter), E (flange thickness), C (bellows height), Y (bellows thickness), ø3.5 (inner diameter), øK (bellows diameter), øA (flange diameter), øB (bellows diameter), and øL (total diameter).

Model	øA	øB	øC	F: M5 x 0.8			F: M6 x 1			F: M8 x 1.25			F: Rc 1/8			øK	øL	Y
				D	E	G	D	E	G	D	E	G	D	E	G			
ZPT20B	20	22	23.5		32.5		6	32.5		8	38.5		6.2	38.5		12.4	25	10.5
ZPT25B	25	27	24	5	33	8	6	33	8	8	39	12	6.2	39	12	15.6	28	10.5
ZPT32B	32	34	29		38			38			44			44		18.9	37	14

Size

ø10, ø13, ø16

Bellows

Technical drawing of a bellows assembly. The drawing shows a cross-section of the bellows and its connection to a hexagonal flange. Key dimensions and labels include:

- Hexagon width across flats G**: Dimension across the flats of the hexagonal flange.
- F**: Dimension of the flange thickness.
- D**: Dimension of the flange outer diameter.
- E**: Dimension of the bellows height.
- C**: Dimension of the bellows inner diameter.
- Y**: Dimension of the bellows thickness.
- ø2.5**: Dimension of the bellows inner diameter.
- øK**: Dimension of the bellows outer diameter.
- øA**: Dimension of the flange inner diameter.
- øB**: Dimension of the bellows outer diameter.
- L**: Dimension of the bellows length.

Model	øA	øB	øC	F: M5 x 0.8			F: M6 x 1			F: Rc 1/8			øK	øL	Y
				D	E	G	D	E	G	D	E	G			
ZPT10B	10	12	16		25			25			31		5.5	13.8	5.5
ZPT13B	13	15	18.5	5	27.5	8	6	27.5	8	6.2	33.5	12	8.7	19	7.5
ZPT16B	16	18	20		29			29			35		9.9	21	8.5

Size

ø40, ø50

Bellows

Model

øA

øB

øC

F: M6 x 1

F: M8 x 1.25

F: Rc 1/8

E

øK

øL

Y

ZPT40B

40

43

34

6

8

6.2

47.5

24.4

48

16

ZPT50B

50

53

38

51.5

32.4

57

19

ZX
ZR
ZM
ZH
ZU
ZL
ZY
ZQ
ZF
ZP
ZCU
AMJ
Misc.



Vacuum Pad: Vertical Vacuum Entry With Buffer *Series ZPT*

Specifications

Vacuum entry direction			Vertical		
Vacuum entry	Connection		Female thread	Barb fitting	One-touch fitting
	Applicable tube dia.	ø2 to ø8 2 x 4, 3.5 x 7, 4 x 10 Thin section series (ø10 to ø16)	M3 x 0.5 M5 x 0.8	ø4 Nylon tube ø4 Urethane tube	ø4 tube ø6 tube
		ø10 to ø32	M5 x 0.8	ø6 Nylon tube ø6 Urethane tube	ø4 tube ø6 tube
		ø40, ø50	M5 x 0.8 Rc 1/8	ø6 Nylon tube ø6 Urethane tube	ø6 tube ø8 tube
Connection	Thread dia.	ø2 to ø8	M8 x 1 Male thread		
		ø10 to ø32	M10 x 1 Male thread		
		ø40, ø50	M14 x 1 Male thread		
Buffer type			Rotating (J)/Non-rotating (K)		
Buffer stroke			For ø2 to ø8 — 6, 10, 15, 25 mm		
			For ø10 to ø32 — 10, 20, 30, 40, 50 mm		
			For ø40, ø50 — 10, 20, 30, 50 mm		

Spring Reactive Force (N)

Pad dia. (mm)	0 stroke	Stroke end
ø2 to ø8 *	0.8 N	1.2 N
ø10 to ø32	1.0 N	3.0 N
ø40, ø50	2.0 N	5.0 N

* Refer to ø2 to ø8 for Thin flat, Thin flat with ribs and Ellipse type.

Pad Type

Pad form	Flat	Flat with ribs	Deep	Bellows
Pad diameter (mm)	2, 4, 6, 8, 10, 13, 16, 20, 25, 32, 40, 50	10, 13, 16, 20, 25, 32, 40, 50	10, 16, 25, 40	6, 8, 10, 13, 16, 20, 25, 32, 40, 50
Material (Color)	NBR (Black), Silicon rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with green mark) Conductive NBR (Black with one white mark), Conductive silicon rubber (Black with two white marks)			
Durometer	NBR (50°), Silicon rubber (40°), Urethane rubber/Fluoro rubber (60°) Conductive NBR (50°), Conductive silicon rubber (50°)			

Weight

Stroke (mm)	Pad form	Flat/Flat with ribs								Deep						Bellows						
	Vacuum entry port	Female thread			One-touch fitting			Barb fitting	Female thread			One-touch fitting			Barb fitting	Female thread			One-touch fitting			Barb fitting
	Model	B3	B5	B01	04	06	08	N□U□	B5	B01	04	06	08	N□U□	B3	B5	B01	04	06	08	N□U□	
6	ZPT2004 3507 4010	02 to 08 thin section series 10 to 16	22	24	—	26	27	—	22	—	—	—	—	—	22	24	—	26	27	—	22	
10	ZPT	10 to 16	—	26	—	29	30	—	25	27	—	29	30	—	25	—	27	—	30	31	—	26
10	ZPT	20 25	—	29	—	31	33	—	27	30	—	32	33	—	28	—	31	—	34	35	—	30
	ZPT	32	—	57	—	33	34	—	30	—	—	—	—	—	—	36	—	38	39	—	34	
10	ZPT	40	—	129	132	—	133	141	129	131	134	—	134	143	129	—	141	144	—	145	153	140
	ZPT	50	—	135	138	—	139	147	133	—	—	—	—	—	—	148	151	—	152	160	147	

Weight by Stroke

Model	Stroke (mm)	10	15	20	25	30	40	50
ZPT2004 3507 4010								
ZPT02 to 08 thin section series 10 to 16	+6	+7	—	+8	—	—	—	—
ZPT10 to 25	—	—	+11	—	+13	+23	+24	—
ZPT40 to 50	—	—	+38	—	+40	—	+67	—

P. 13-11-65 to 13-11-68



Vacuum Pad: Vertical Vacuum Entry with Buffer Series ZPT

How to Order

Series ZPT With buffer

ZPT 16 U GS K 20 06 A10

Pad diameter (mm)

2004	2 x 4
3507	3.5 x 7
4010	4 x 10
02	ø2
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Pad type
("Table (1)" for applications.)

U	Flat
C	Flat with ribs
D	Deep
B	Bellows
UT	Thin flat
CT	Thin flat with ribs

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN *	Conductive NBR (ø2 to ø16)
GS *	Conductive silicon rubber (ø2 to ø16)

* ø20 or large are manufactured upon receipt of order.

Mounting thread diameter/ Male thread
(Refer to "Table (3)" for applications.)

Vacuum entry port
(Refer to "Table (3)" for applications.)

Buffer stroke
(Refer to "Table (2)" for applications.)

Buffer type

J	Rotating
K	Non-rotating

Table (1) Pad Diameter/Pad Type

Type \ Diameter (mm)	2 x 4	3.5 x 7	4 x 10	2	4	6	8	10	13	16	20	25	32	40	50
Flat	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Flat with ribs	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
Deep	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
Bellows	—	—	—	—	—	●	●	●	●	●	●	●	●	●	●
Thin flat	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—
Thin flat with ribs	—	—	—	—	—	—	—	●	●	●	—	—	—	—	—

Table (2) Pad Diameter/Stroke


Stroke(mm) \ Diameter (mm)	2 x 4	3.5 x 7	4 x 10	2	4	6	8	Thin flat/Thin flat with ribs			10	13	16	20	25	32	40	50
								10	13	16								
6	●	●	●	●	●	●	●	●	●	●	—	—	—	—	—	—	—	—
10	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
15	●	●	●	●	●	●	●	●	●	●	—	—	—	—	—	—	—	—
20	—	—	—	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
25	●	●	●	●	●	●	●	●	●	●	—	—	—	—	—	—	—	—
30	—	—	—	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●
40	—	—	—	—	—	—	—	—	—	—	●	●	●	●	●	●	—	—
50	—	—	—	—	—	—	—	—	—	—	●	●	●	●	●	●	●	●

Table (3) Vacuum Entry/Mounting Thread Diameter

		Symbol	Thread dia./Port size	ø2 to ø8 2 x 4, 3.5 x 7, 4 x 10 Thin section series ø10 to ø16	ø10 to ø32	ø40, ø50
Vacuum entry	Female thread	B3	M3 x 0.5	●	—	—
		B5	M5 x 0.8	●	●	●
		B01	Rc 1/8	—	—	●
	Barb fitting	N4	ø4 Nylon tube	●	—	—
		N6	ø6 Nylon tube	—	●	●
		U4	ø4 Urethane tube	●	—	—
		U6	ø6 Urethane tube	—	●	●
	One-touch fitting	O4	ø4 tube	●	●	—
		O6	ø6 tube	●	●	●
		O8	ø8 tube	—	—	●
Mounting	Male thread	A8	M8 x 1	●	—	—
		A10	M10 x 1	—	●	—
		A14	M14 x 1	—	—	●

Series ZPT

Connection	Female thread (Buffer)	Pad Form	Flat/Thin flat/Thin flat with ribs/Elliptic
Vacuum Entry Port	Vertical	Mounting	Buffer body

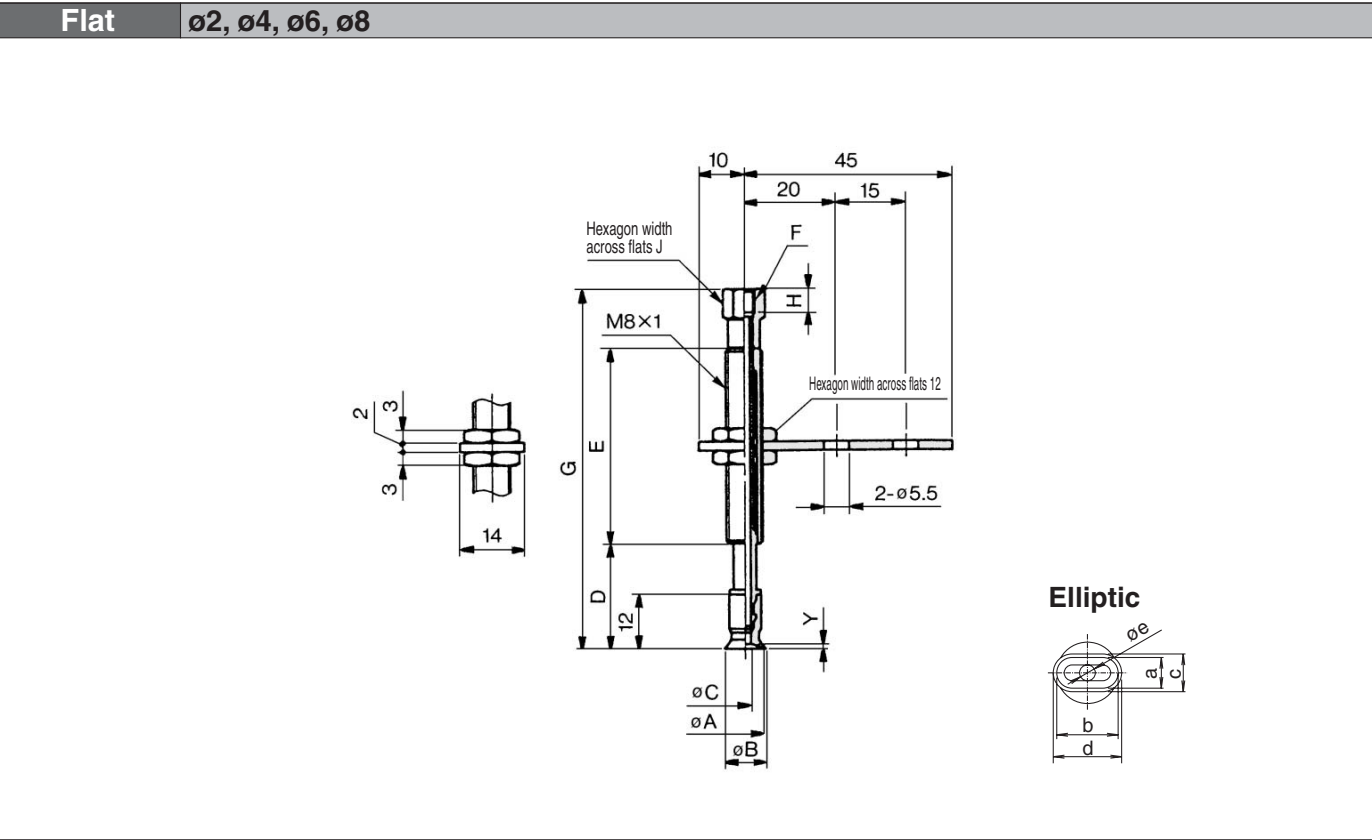

Flat				
Model	A	B	C	Y
ZPT02U□□□□□-B□-A8	2	2.6	1.2	0.8
ZPT04U□□□□□-B□-A8	4	4.8	1.6	
ZPT06U□□□□□-B□-A8	6	7	2.5	
ZPT08U□□□□□-B□-A8	8	9		1

Elliptic						
Model	a	b	c	d	øe	Y
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8


Thin Flat/Thin Flat with Ribs				
Model	A	B	C	Y
ZPT10UT	10	11	2.5	1
ZPT13UT	13	14		1.5
ZPT16UT	16	17		
ZPT10CT	10	11		0.8
ZPT13CT	13	14		1
	16	17		

Dimensions by Stroke	Model	D	E	F: M3 x 0.5			F: M5 x 0.8		
				G	H	J	G	H	J
	ZPT□□□□□□ 6-B□-A8	18	15	44	3	6	46	5	8
	ZPT□□□□□□10-B□-A8	23		77			79		
	ZPT□□□□□□15-B□-A8	28	43	82			84		
	ZPT□□□□□□25-B□-A8	38		92			94		

Vacuum Pad:
Vertical Vacuum Entry with Buffer Series ZPT

Connection	Female thread (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø10, ø13, ø16	Deep	ø10, ø16
---------------------	---------------	------	----------

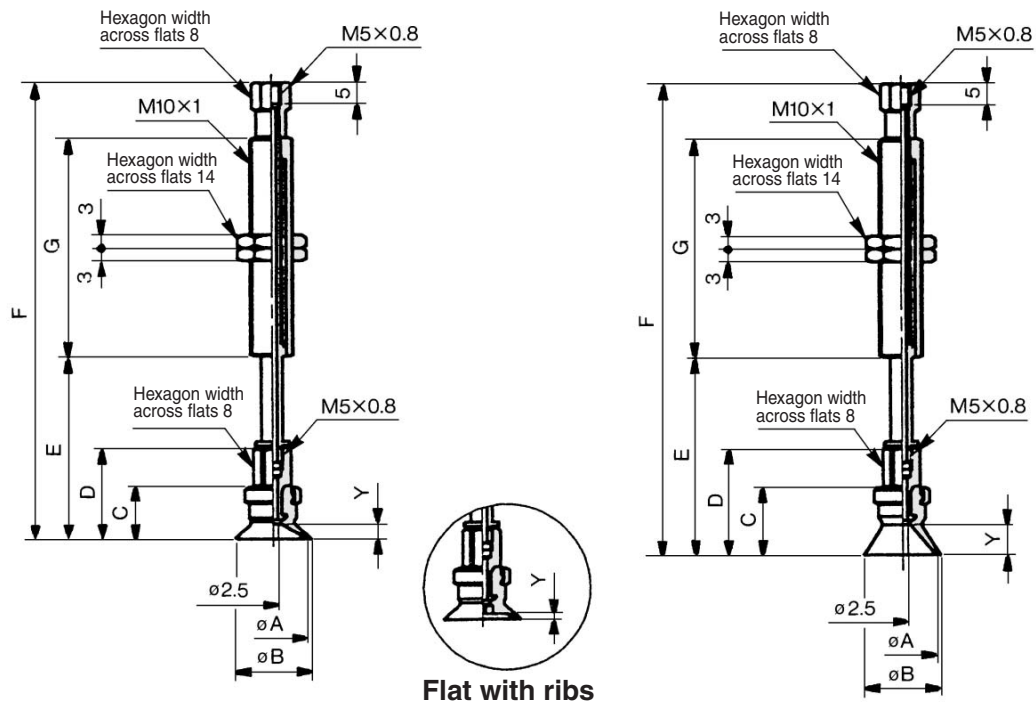

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT10 ^U □□□□□-B5-A10	10	12	12	21	3	1.7
ZPT13 ^U □□□□□-B5-A10	13	15				1.8
ZPT16 ^U □□□□□-B5-A10	16	18	12.5	21.5	3.5	1.2

Dimensions by Stroke

Model	ø10, ø13		ø16		G
	E	F	E	F	
ZPT□□ ^U □□□□10-B5-A10	32.5	68.5	33	69	23
ZPT□□ ^U □□□□20-B5-A10	42.5	106.5	43	107	51
ZPT□□ ^U □□□□30-B5-A10	52.5	116.5	53	117	
ZPT□□ ^U □□□□40-B5-A10	62.5	152.5	63	153	77
ZPT□□ ^U □□□□50-B5-A10	72.5	162.5	73	163	

Deep

Model	A	B	C	D	Y
ZPT10D□□□□□-B5-A10	10	12	15	24	6
ZPT16D□□□□□-B5-A10	16	18	16	25	7

Dimensions by Stroke

Model	ø10		ø16		G
	E	F	E	F	
ZPT□□D□□□□10-B5-A10	35.5	71.5	36.5	72.5	23
ZPT□□D□□□□20-B5-A10	45.5	109.5	46.5	110.5	51
ZPT□□D□□□□30-B5-A10	55.5	119.5	56.5	120.5	
ZPT□□D□□□□40-B5-A10	65.5	155.5	66.5	156.5	77
ZPT□□D□□□□50-B5-A10	75.5	165.5	76.5	166.5	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU


AMJ

Misc.

Series ZPT

Connection	Female thread (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø20, ø25, ø32	Deep	ø25
---------------------	---------------	------	-----

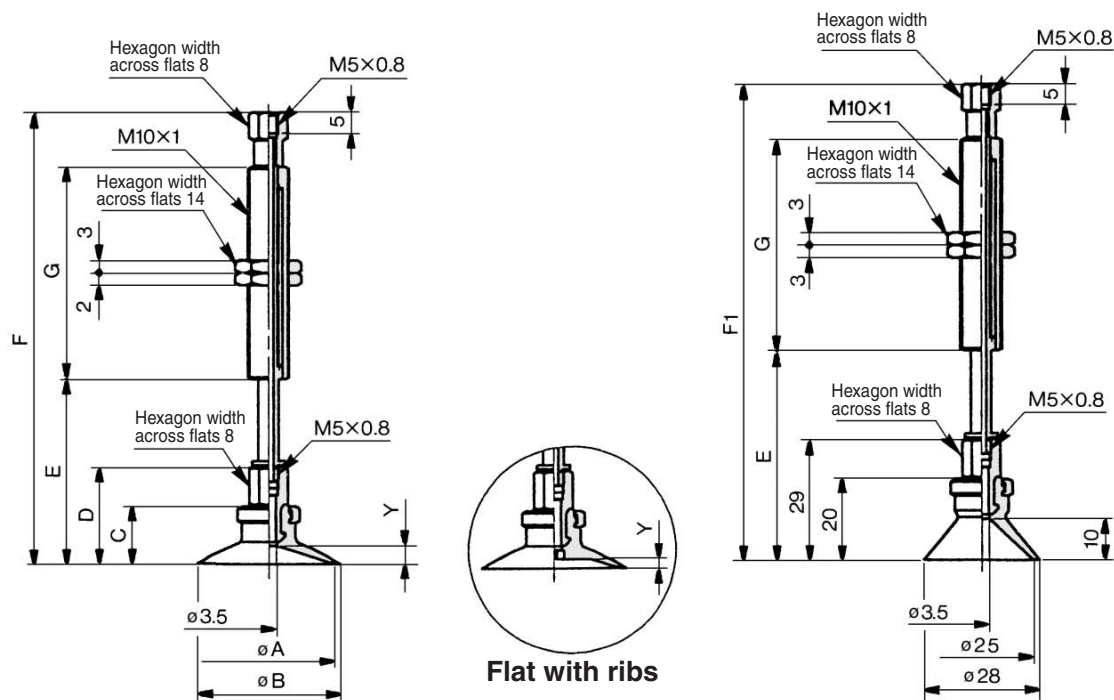

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT20 ^U _C □□□□-B5-A10	20	23	14	23	4	1.7
ZPT25 ^U _C □□□□-B5-A10	25	28				1.8
ZPT32 ^U _C □□□□-B5-A10	32	35	14.5	23.5	4.5	2.3

Deep


Model	E	F	G
ZPT25D□□□10-B5-A10	40.5	76.5	23
ZPT25D□□□20-B5-A10	50.5	114.5	51
ZPT25D□□□30-B5-A10	60.5	124.5	
ZPT25D□□□40-B5-A10	70.5	160.5	77
ZPT25D□□□50-B5-A10	80.5	170.5	

Dimensions by Stroke

Model	ø20, ø25		ø32		G
	E	F	E	F	
ZPT□□ ^U _C □□□10-B5-A10	34.5	70.5	35	71	23
ZPT□□ ^U _C □□□20-B5-A10	44.5	108.5	45	109	51
ZPT□□ ^U _C □□□30-B5-A10	54.5	118.5	55	119	
ZPT□□ ^U _C □□□40-B5-A10	64.5	154.5	65	155	77
ZPT□□ ^U _C □□□50-B5-A10	74.5	164.5	75	165	

Vacuum Pad:
Vertical Vacuum Entry with Buffer Series ZPT

Connection	Female thread (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

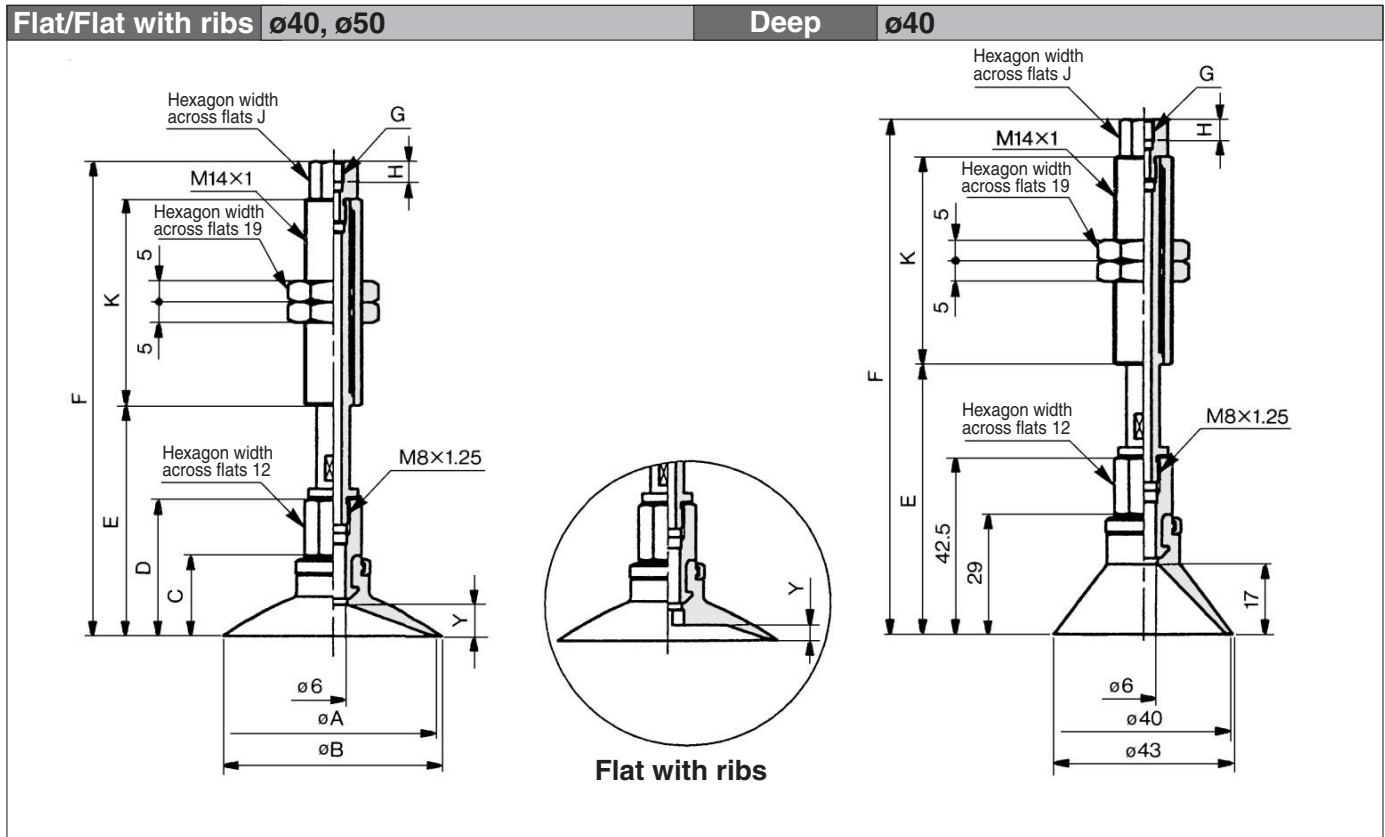

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT40 ^U _C □□□□□-B□□-A14	40	43	18.5	32	6.5	3.3
ZPT50 ^U _C □□□□□-B□□-A14	50	53	19.5	33	7.5	3.8

Dimensions by Stroke

Model	E		G: M5 x 0.8				G: Rc 1/8				K
	ø40	ø50	F		H	J	F		H	J	
			ø40	ø50			ø40	ø50			
ZPT□□ ^U _C □□□□10-B□□-A14	44.5	45.5	108.5	110.5	5	10	111	112	6.2	13	50
ZPT□□ ^U _C □□□□20-B□□-A14	54.5	55.5	113.5	114.5			116.5	117.5			
ZPT□□ ^U _C □□□□30-B□□-A14	64.5	65.5	123.5	124.5			126.5	127.5			
ZPT□□ ^U _C □□□□50-B□□-A14	84.5	85.5	168.5	169.5			171.5	172.5			


Deep

Model	E	G: M5 x 0.8			G: Rc 1/8			K
		F	H	J	F	H	J	
ZPT40D□□□10-B□□-A14	55	120	5	10	121.5	6.2	13	50
ZPT40D□□□20-B□□-A14	65	124			127			
ZPT40D□□□30-B□□-A14	75	134			137			
ZPT40D□□□50-B□□-A14	95	179			182			

ZX
ZR
ZM
ZH
ZU
ZL
ZY
ZQ
ZF
ZP
ZCU
AMJ
Misc.

Series ZPT

Connection	Female thread (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

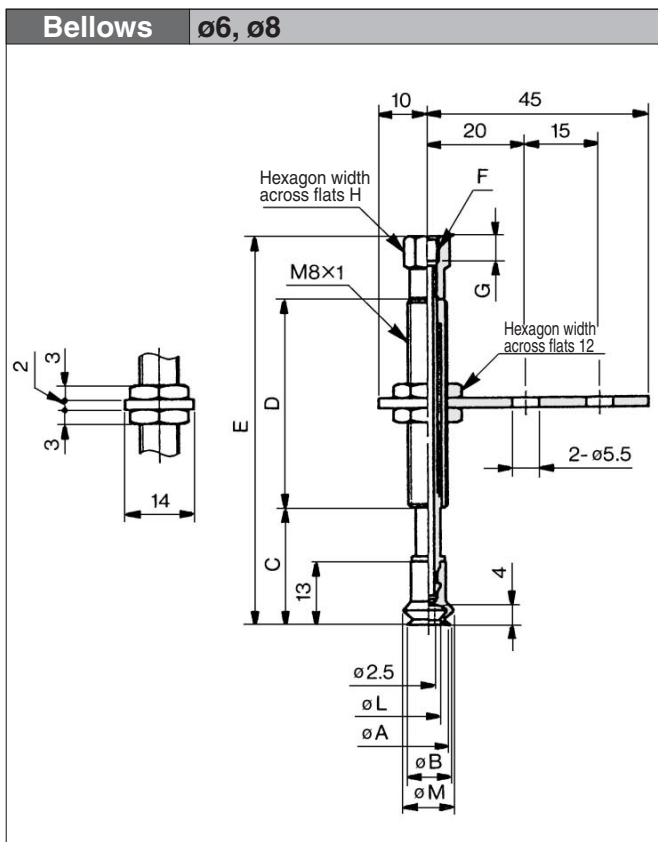


Bellows

Model	A	B	L	M
ZPT06B□□□□-B□-A8	6	7	3.3	9.1
ZPT08B□□□□-B□-A8	8	9	4.7	10.1

Dimensions by Stroke

Model	C	D	F: M3 x 0.5			F: M5 x 0.8		
			E	G	H	E	G	H
ZPT□□B□□□ 6-B□-A8	19	15	45	3	6	47	5	8
ZPT□□B□□□10-B□-A8	24	43	78			80		
ZPT□□B□□□15-B□-A8	29		83			85		
ZPT□□B□□□25-B□-A8	39		93			95		

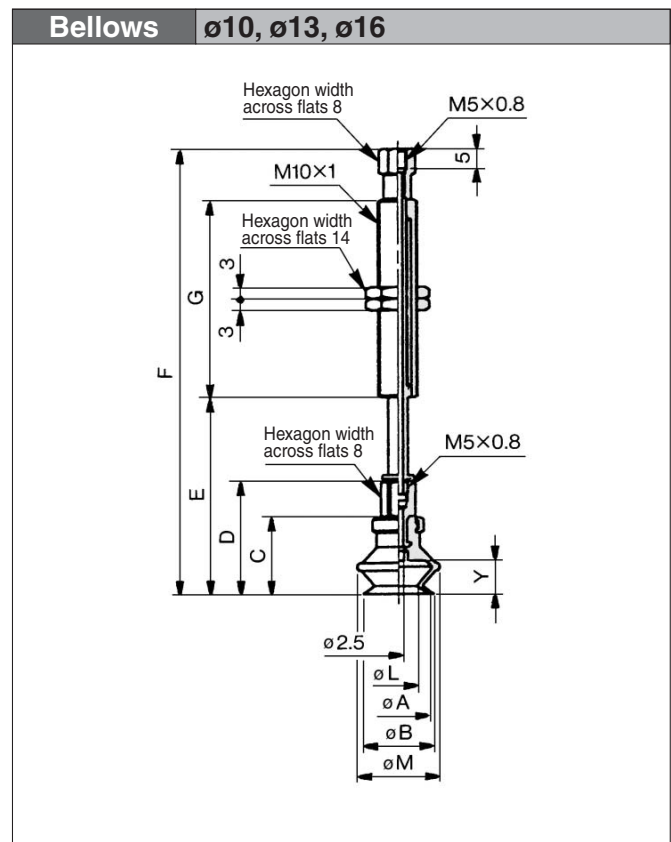

Bellows


Model	A	B	C	D	L	M	Y
ZPT10B□□□□□-B5-A10	10	12	16	25	5.5	13.8	5.5
ZPT13B□□□□□-B5-A10	13	15	18.5	27.5	8.7	19	7.5
ZPT16B□□□□□-B5-A10	16	18	20	29	9.9	21	8.5

Dimensions by Stroke

Model	ø10		ø13		ø16		G
	E	F	E	F	E	F	
ZPT□□B□□□10-B5-A10	36.5	72.5	39	75	40.5	76.5	23
ZPT□□B□□□20-B5-A10	46.5	110.5	49	113	50.5	114.5	51
ZPT□□B□□□30-B5-A10	56.5	120.5	59	123	60.5	124.5	
ZPT□□B□□□40-B5-A10	66.5	156.5	69	159	70.5	160.5	77
ZPT□□B□□□50-B5-A10	76.5	166.5	79	169	80.5	170.5	

Vacuum Pad: Vertical Vacuum Entry with Buffer **Series ZPT**

Connection	Female thread (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

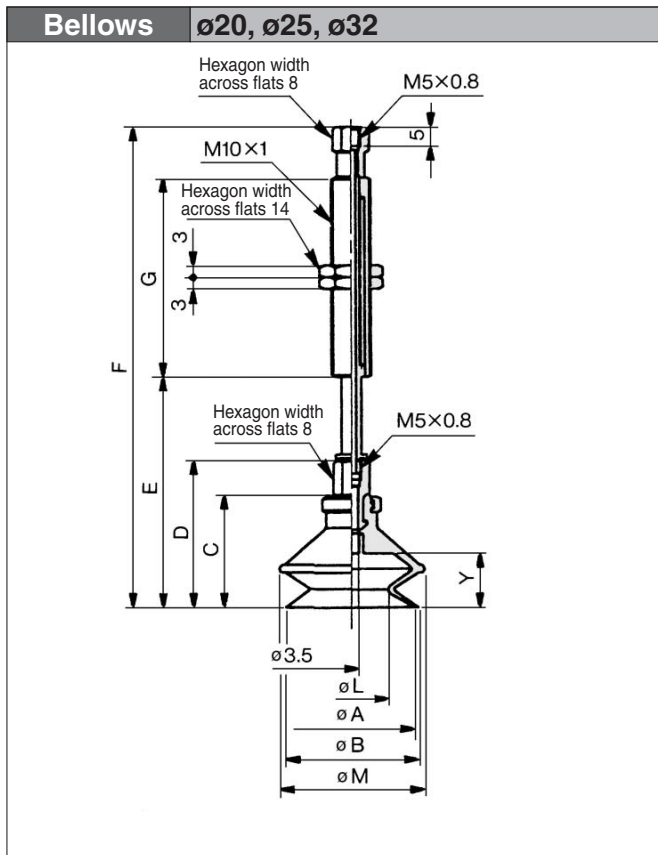


Bellows

Model	A	B	C	D	L	M	Y
ZPT20B□□□□-B5-A10	20	22	23.5	32.5	12.4	25	10.5
ZPT25B□□□□-B5-A10	25	27	24	33	15.6	28	
ZPT32B□□□□-B5-A10	32	34	29	38	18.9	37	

Dimensions by Stroke

Model	$\phi 20$		$\phi 25$		$\phi 32$		G
	E	F	E	F	E	F	
ZPT□□B□□□10-B5-A10	44	80	44.5	80.5	49.5	85.5	23
ZPT□□B□□□20-B5-A10	54	118	54.5	118.5	59.5	123.5	51
ZPT□□B□□□30-B5-A10	64	128	64.5	128.5	69.5	133.5	
ZPT□□B□□□40-B5-A10	74	164	74.5	164.5	79.5	169.5	
ZPT□□B□□□50-B5-A10	84	174	84.5	174.5	89.5	179.5	77

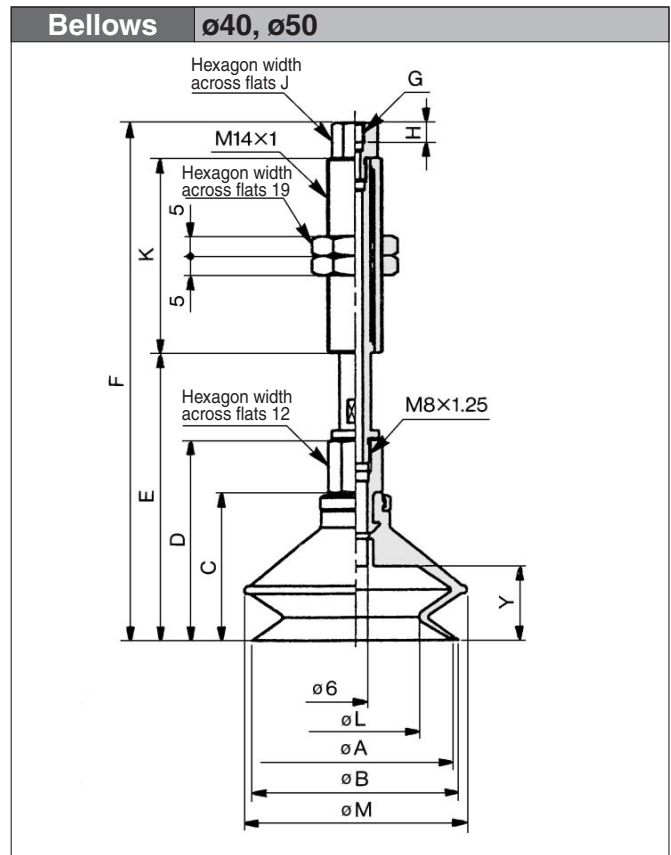

Bellows

Model	A	B	C	D	L	M	Y
ZPT40B□□□□-B□□-A14	40	43	34	47.5	24.4	48	16
ZPT50B□□□□-B□□-A14	50	53	38	51.5	32.4	57	19

Dimensions by Stroke

Model	E		G: M5 x 0.8				G: Rc 1/8				K
	ø40	ø50	F		H	J	F		H	J	
			ø40	ø50			ø40	ø50			
ZPT□□B□□□10-B□□-A14	60	64	125	129	5	10	126.5	130.5	6.2	13	50
ZPT□□B□□□20-B□□-A14	70	74	129	133			132	136			
ZPT□□B□□□30-B□□-A14	80	84	139	143			142	146			
ZPT□□B□□□50-B□□-A14	100	104	184	188			187	191			

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

Connection	One-touch fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep/Thin flat
Vacuum Entry Port	Vertical	Mounting	Thin flat with ribs/Elliptic
			Buffer body

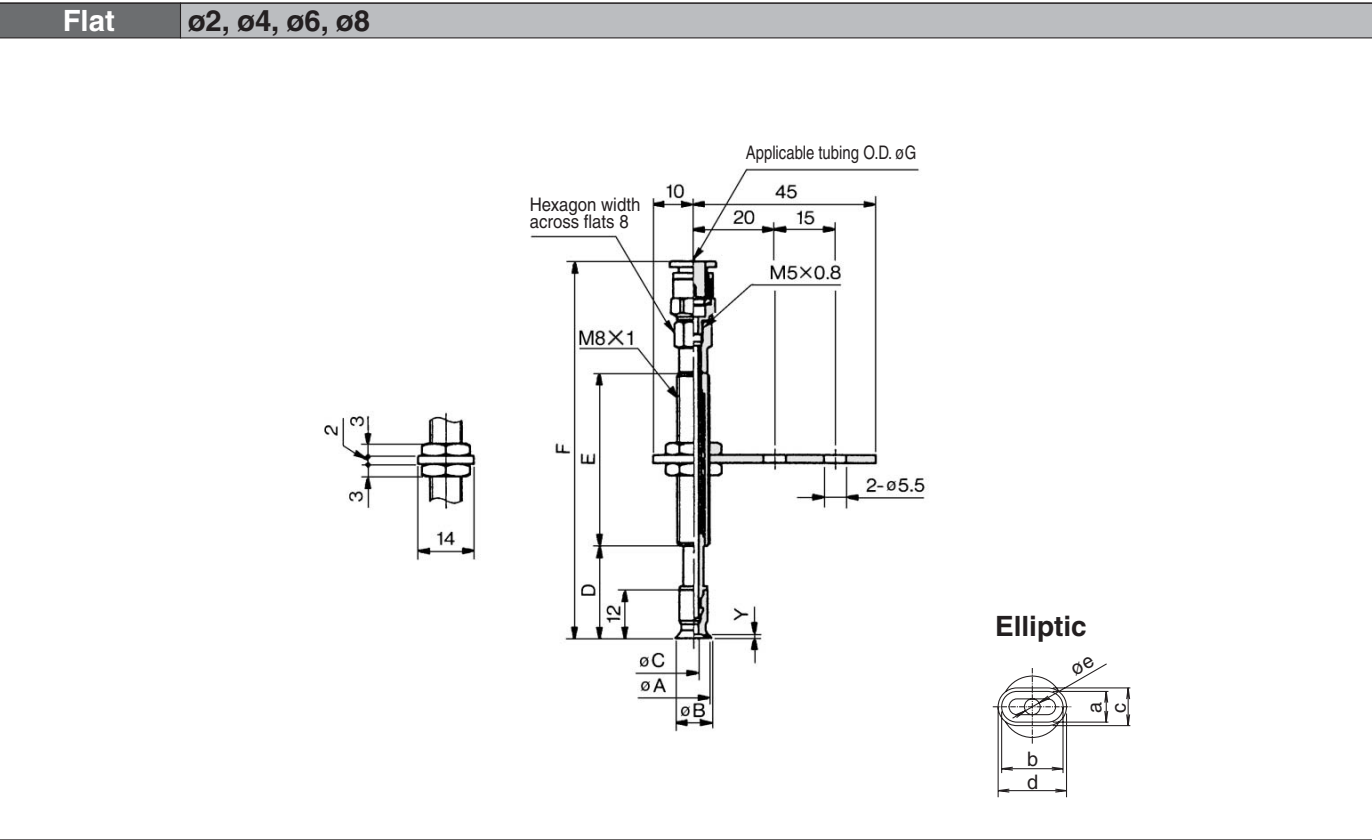

Flat

Model	A	B	C	Y
ZPT02U□□□□□-0□-A8	2	2.6	1.2	0.8
ZPT04U□□□□□-0□-A8	4	4.8	1.6	
ZPT06U□□□□□-0□-A8	6	7	2.5	
ZPT08U□□□□□-0□-A8	8	9		1

Dimensions by Stroke

Model	D	E	F	
			G: ø4	G: ø6
ZPT□□□□□ 6-0□-A8	18	15	60	61
ZPT□□□□□ 10-0□-A8	23	43	93	94
ZPT□□□□□ 15-0□-A8	28		98	99
ZPT□□□□□ 25-0□-A8	38		108	109

Elliptic

Model	a	b	c	d	øe	Y
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8



Thin Flat/Thin Flat with Ribs

Model	A	B	C	Y
ZPT10UT	10	11	2.5	1
ZPT13UT	13	14		1.5
ZPT16UT	16	17		
ZPT10CT	10	11		0.8
ZPT13CT	13	14	2.5	1
ZPT16CT	16	17		

Vacuum Pad: Vertical Vacuum Entry with Buffer **Series ZPT**

Connection	One-touch fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø10, ø13, ø16	Deep	ø10, ø16
---------------------	---------------	------	----------

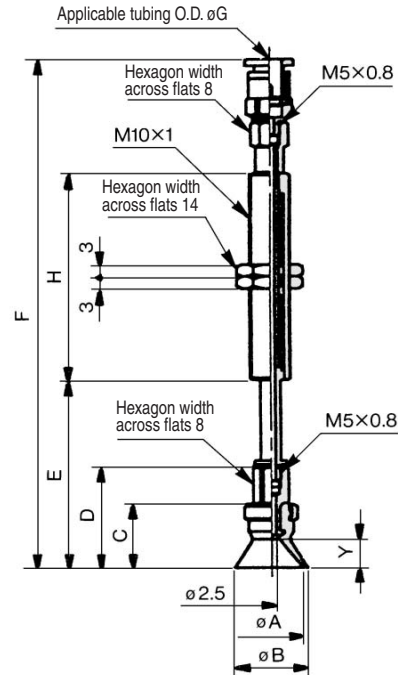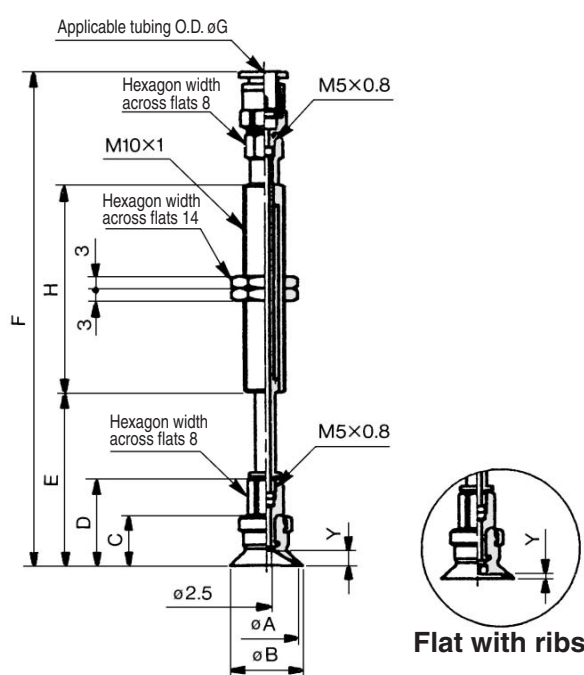

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT10 ^U □□□□□-0□-A10	10	12	12	21	3	1.7
ZPT13 ^U □□□□□-0□-A10	13	15	12	21	3	1.8
ZPT16 ^U □□□□□-0□-A10	16	18	12.5	21.5	3.5	1.2

Dimensions by Stroke

Model	ø10, ø13			ø16			H
	E	F		E	F		
		G: ø4	G: ø6		G: ø4	G: ø6	
ZPT□□ ^U □□□□10-0□-A10	32.5	82.5	83.5	33	83	84	23
ZPT□□ ^U □□□□20-0□-A10	42.5	120.5	121.5	43	121	122	51
ZPT□□ ^U □□□□30-0□-A10	52.5	130.5	131.5	53	131	132	
ZPT□□ ^U □□□□40-0□-A10	62.5	166.5	167.5	63	167	168	77
ZPT□□ ^U □□□□50-0□-A10	72.5	176.5	177.5	73	177	178	

Deep

Model	A	B	C	D	Y
ZPT10D□□□□□-0□-A10	10	12	15	24	6
ZPT16D□□□□□-0□-A10	16	18	16	25	7

Dimensions by Stroke

Model	ø10			ø16			H
	E	F		E	F		
		G: ø4	G: ø6		G: ø4	G: ø6	
ZPT□□D□□□10-0□-A10	35.5	85.5	86.5	36.5	86.5	87.5	23
ZPT□□D□□□20-0□-A10	45.5	123.5	124.5	46.5	124.5	125.5	51
ZPT□□D□□□30-0□-A10	55.5	133.5	134.5	56.5	134.5	135.5	
ZPT□□D□□□40-0□-A10	65.5	169.5	170.5	66.5	170.5	171.5	77
ZPT□□D□□□50-0□-A10	75.5	179.5	180.5	76.5	180.5	181.5	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU


AMJ

Misc.

Series ZPT

Connection	One-touch fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø20, ø25, ø32	Deep	ø25
---------------------	---------------	------	-----

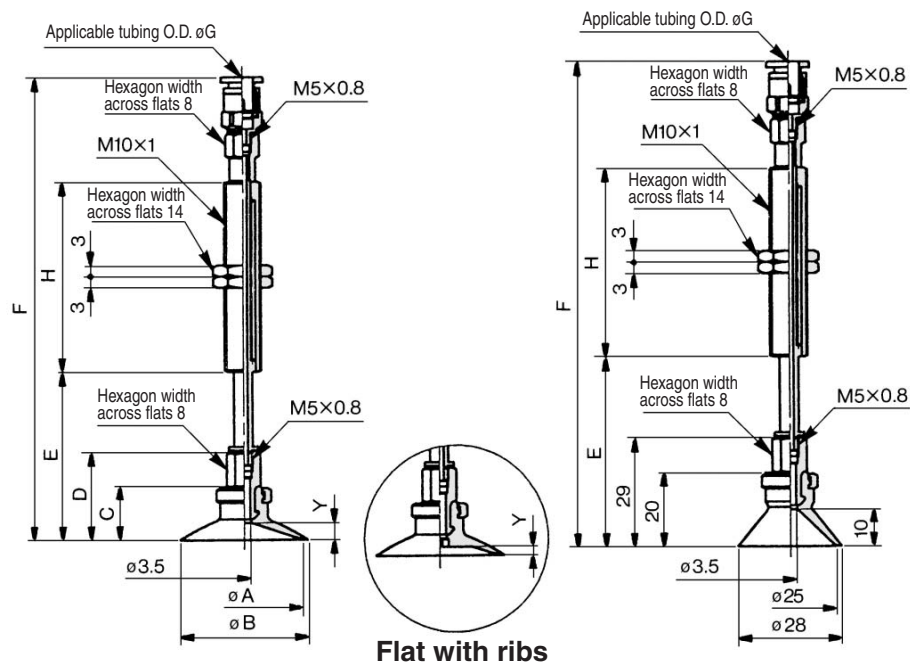

Flat Type/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT20 ^U □□□□□-0□-A10	20	23	14	23	4	1.7
ZPT25 ^U □□□□□-0□-A10	25	28				1.8
ZPT32 ^U □□□□□-0□-A10	32	35	14.5	23.5	4.5	2.3

Dimensions by Stroke

Model	ø20, ø25			ø32			H
	E	F		E	F		
		G: ø4	G: ø6		G: ø4	G: ø6	
ZPT□□ ^U □□□□10-0□-A10	34.5	84.5	85.5	35	85	86	23
ZPT□□ ^U □□□□20-0□-A10	44.5	122.5	123.5	45	123	124	51
ZPT□□ ^U □□□□30-0□-A10	54.5	132.5	133.5	55	133	134	
ZPT□□ ^U □□□□40-0□-A10	64.5	168.5	169.5	65	169	170	77
ZPT□□ ^U □□□□50-0□-A10	74.5	178.5	179.5	75	179	180	


Deep

Model	E	F		H
		G: ø4	G: ø6	
ZPT25D□□□10-0□-A10	40.5	90.5	91.5	23
ZPT25D□□□20-0□-A10	50.5	128.5	129.5	51
ZPT25D□□□30-0□-A10	60.5	138.5	139.5	
ZPT25D□□□40-0□-A10	70.5	174.5	175.5	77
ZPT25D□□□50-0□-A10	80.5	184.5	185.5	

Vacuum Pad: Vertical Vacuum Entry with Buffer **Series ZPT**

Connection	One-touch fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø40, ø50	Deep	ø40
----------------------------	-----------------	-------------	------------

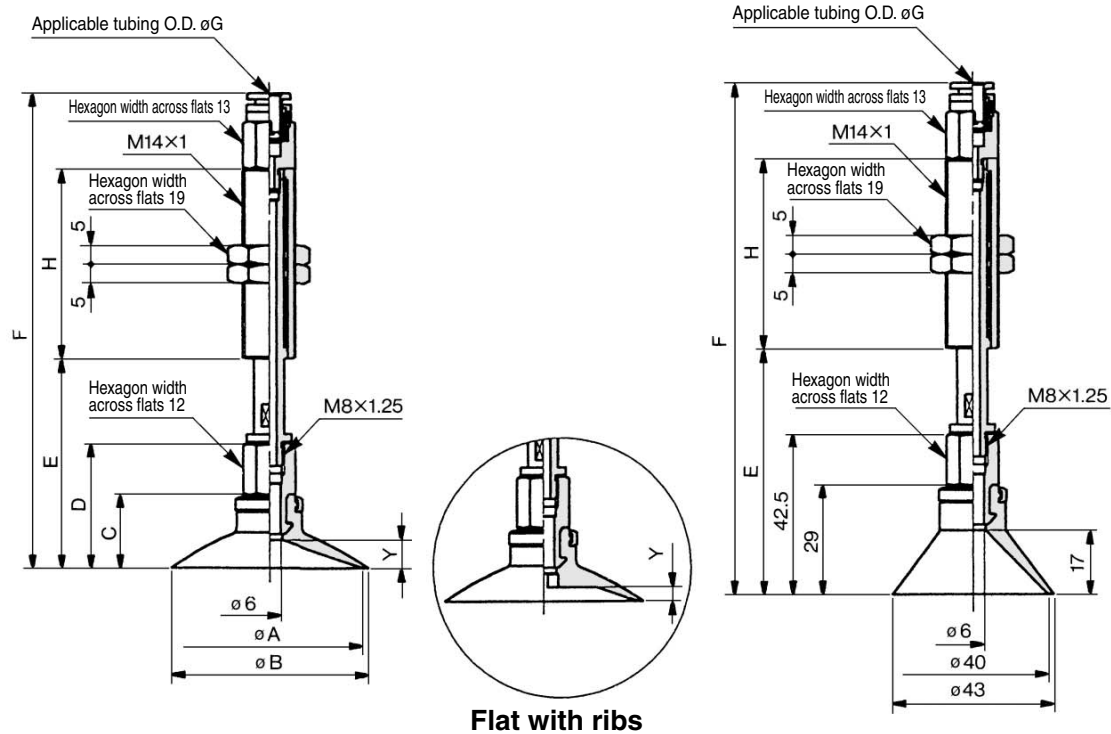

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT40 ^U _C □□□□□-0□-A14	40	43	18.5	32	6.5	3.3
ZPT50 ^U _C □□□□□-0□-A14	50	53	19.5	33	7.5	3.8

Dimensions by Stroke

Model	ø40			ø50			H
	E	F		E	F		
		G: ø6	G: ø8		G: ø6	G: ø8	
ZPT□□ ^U _C □□□□10-0□-A14	44.5	129.5	135	45.5	130.5	136	50
ZPT□□ ^U _C □□□□20-0□-A14	54.5	124.4	129.4	55.5	125.4	130.4	
ZPT□□ ^U _C □□□□30-0□-A14	64.5	134.4	139.4	65.5	135.4	140.4	
ZPT□□ ^U _C □□□□50-0□-A14	84.5	179.4	184.4	85.5	180.4	185.4	75

Deep

Model	E	F		H
		G: ø6	G: ø8	
ZPT40D□□□10-0□-A14	55	140	145.5	50
ZPT40D□□□20-0□-A14	65	134.9	139.9	
ZPT40D□□□30-0□-A14	75	144.9	149.9	
ZPT40D□□□50-0□-A14	95	189.9	194.9	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

Connection	One-touch fitting (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

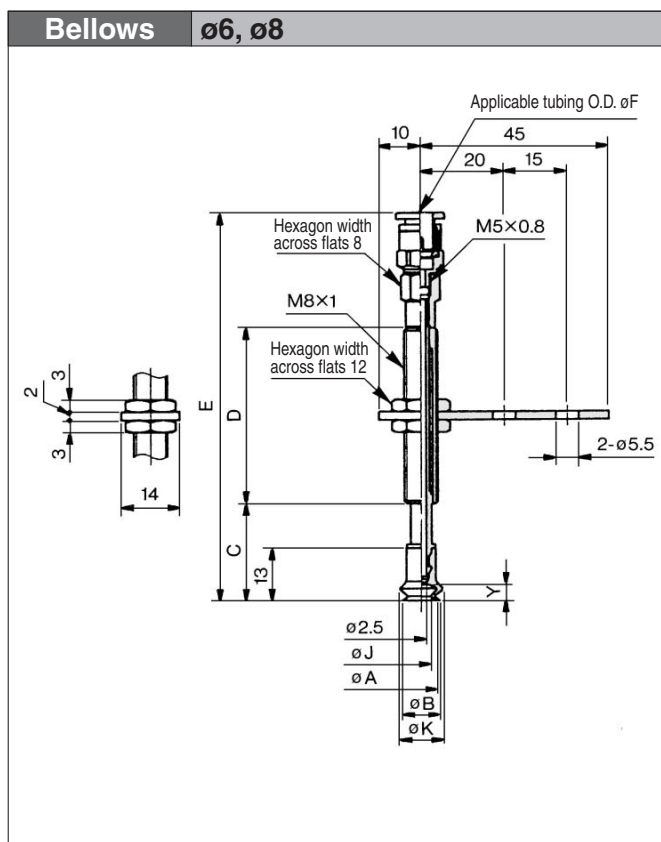


Bellows

Model	A	B	J	K
ZPT06B□□□□-0□-A8	6	7	3.3	9.1
ZPT08B□□□□-0□-A8	8	9	4.7	10.1

Dimensions by Stroke

Model	C	D	E	
			F: ø4	F: ø6
ZPT□□B□□□ 6-0□-A8	19	15	61	62
ZPT□□B□□□10-0□-A8	24	43	94	95
ZPT□□B□□□15-0□-A8	29		99	100
ZPT□□B□□□25-0□-A8	39		109	110

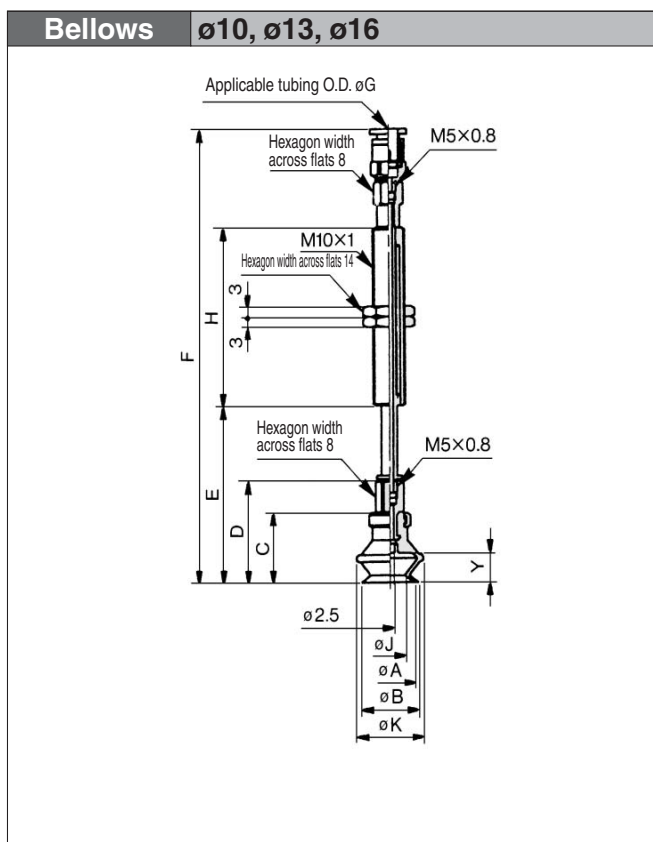

Bellows


Model	A	B	C	D	J	K	Y
ZPT10B□□□□-0□-A10	10	12	16	25	5.5	13.8	5.5
ZPT13B□□□□-0□-A10	13	15	18.5	27.5	8.7	19	7.5
ZPT16B□□□□-0□-A10	16	18	20	29	9.9	21	8.5

Dimensions by Stroke

Model	ø10			ø13			ø16			H
	E	F		E	F		E	F		
		G: ø4	G: ø6		G: ø4	G: ø6		G: ø4	G: ø6	
ZPT□□B□□□10-0□-A10	36.5	86.5	87.5	39	89	90	40.5	90.5	91.5	23
ZPT□□B□□□20-0□-A10	46.5	124.5	125.5	49	127	128	50.5	128.5	129.5	51
ZPT□□B□□□30-0□-A10	56.5	134.5	135.5	59	137	138	60.5	138.5	139.5	
ZPT□□B□□□40-0□-A10	66.5	170.5	171.5	69	173	174	70.5	174.5	185.5	77
ZPT□□B□□□50-0□-A10	76.5	180.5	181.5	79	183	184	80.5	184.5	185.5	

Vacuum Pad: Vertical Vacuum Entry with Buffer **Series ZPT**

Connection	One-touch fitting (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

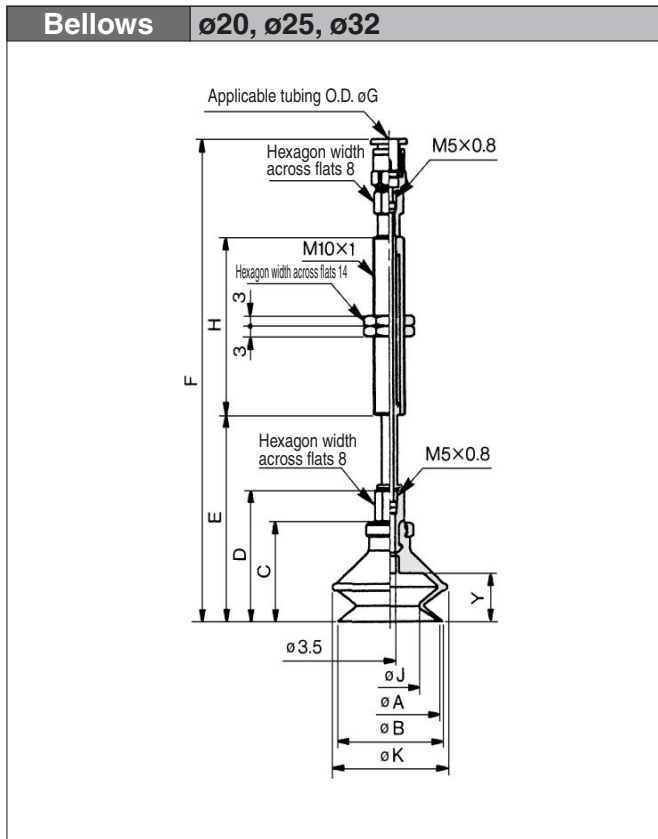


Bellows

Model	A	B	C	D	J	K	Y
ZPT20B□□□□-0□-A10	20	22	23.5	32.5	12.4	25	10.5
ZPT25B□□□□-0□-A10	25	27	24	33	15.6	28	
ZPT32B□□□□0□-A10	32	34	29	38	18.9	37	14

Dimensions by Stroke

Model	ø20			ø25			ø32			H
	E	F		E	F		E	F		
		G: ø4	G: ø6		G: ø4	G: ø6		G: ø4	G: ø6	
ZPT□□B□□□10-0□-A10	44	94	95	44.5	94.5	95.5	49.5	99.5	100.5	23
ZPT□□B□□□20-0□-A10	54	132	133	54.5	132.5	133.5	59.5	137.5	138.5	51
ZPT□□B□□□30-0□-A10	64	142	143	64.5	142.5	143.5	69.5	147.5	148.5	
ZPT□□B□□□40-0□-A10	74	178	179	74.5	178.5	179.5	79.5	183.5	184.5	77
ZPT□□B□□□50-0□-A10	84	188	189	84.5	188.5	189.5	89.5	193.5	194.5	

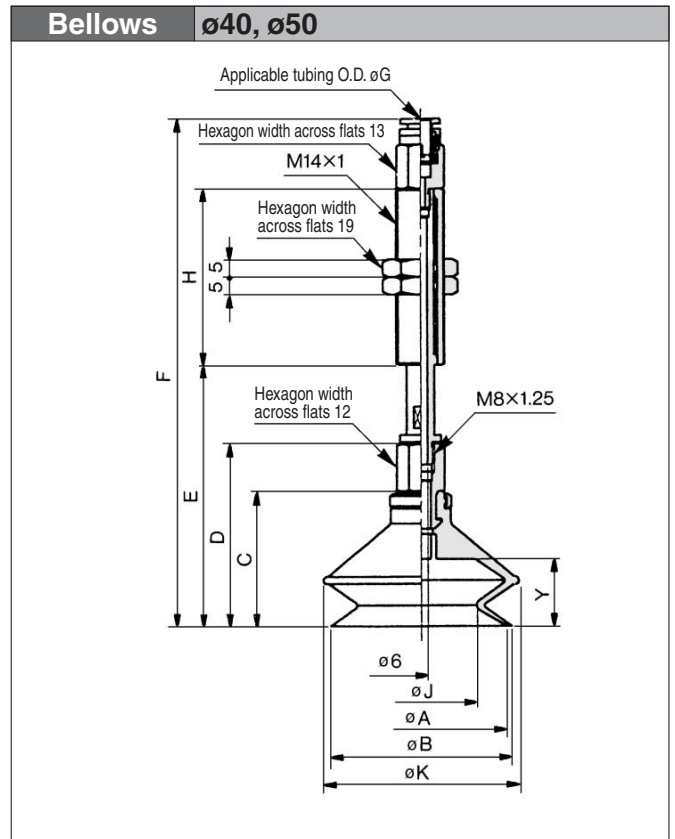

Bellows

Model	A	B	C	D	J	K	Y
ZPT40B□□□□-0□-A14	40	43	34	47.5	24.4	48	16
ZPT50B□□□□-0□-A14	50	53	38	51.5	32.4	57	19

Dimensions by Stroke

Model	ø40			ø50			H
	E	F		E	F		
		G: ø6	G: ø8		G: ø6	G: ø8	
ZPT□□B□□□10-0□-A14	60	145	150.5	64	149	154.5	50
ZPT□□B□□□20-0□-A14	70	139.9	144.9	74	143.9	148.9	
ZPT□□B□□□30-0□-A14	80	149.9	154.9	84	153.9	158.9	
ZPT□□B□□□50-0□-A14	100	194.9	199.9	104	198.9	203.9	75

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

Connection	Barb fitting (Buffer)	Pad Form	Flat/Thin flat/Thin flat with ribs/Elliptic
Vacuum Entry Port	Vertical	Mounting	Buffer body

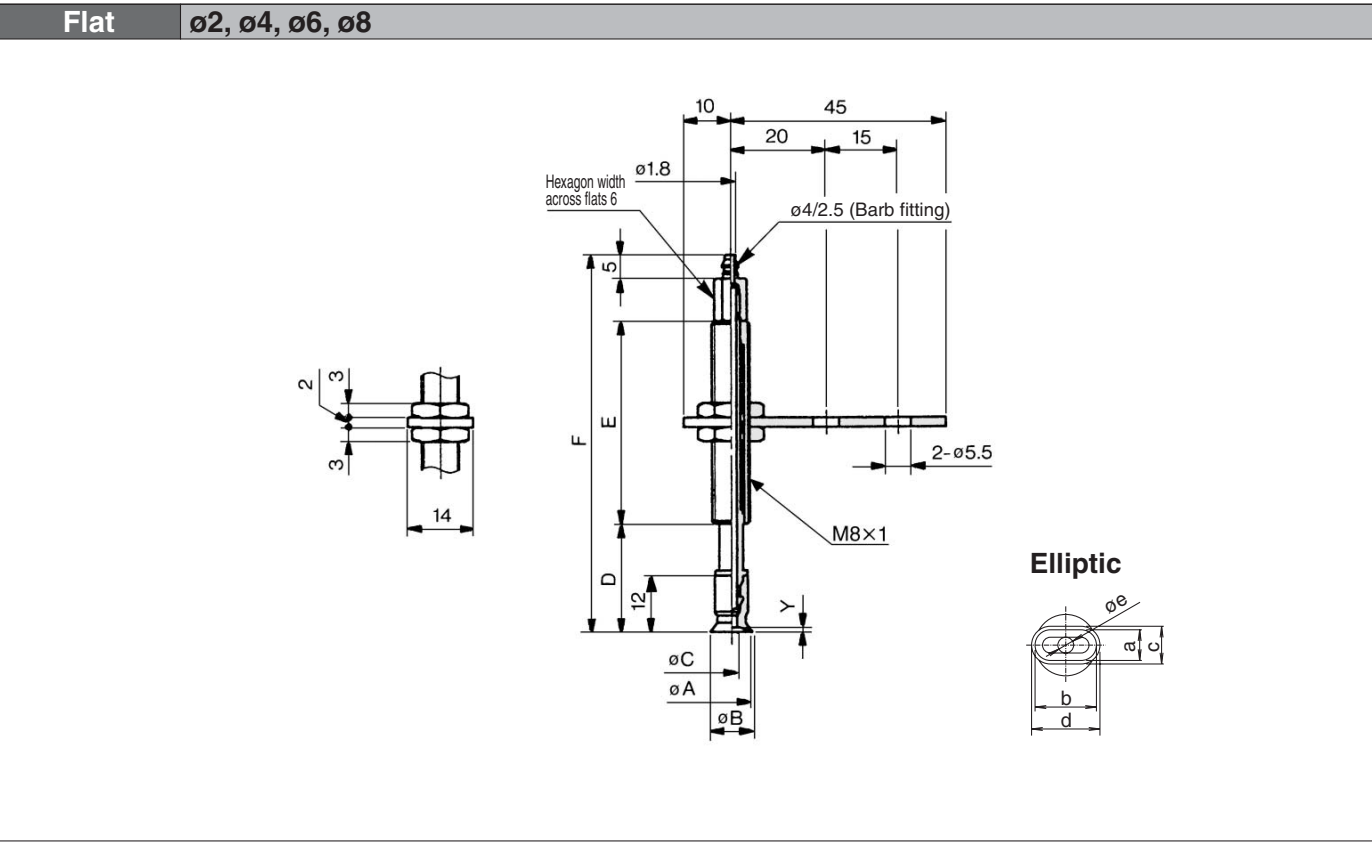

Flat

Model	A	B	C	Y
ZPT02U□□□□□-□4-A8	2	2.6	1.2	0.8
ZPT04U□□□□□-□4-A8	4	4.8	1.6	
ZPT06U□□□□□-□4-A8	6	7	2.5	
ZPT08U□□□□□-□4-A8	8	9		1

Dimensions by Stroke

Model	D	E	F
ZPT□□□□□ 6-□4-A8	18	15	47
ZPT□□□□□10-□4-A8	23	43	80
ZPT□□□□□15-□4-A8	28		85
ZPT□□□□□25-□4-A8	38		95

Elliptic

Model	a	b	c	d	øe	Y
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8


Thin Flat/Thin Flat with Ribs

Model	A	B	C	Y
ZPT10UT□□	10	11	2.5	1
ZPT13UT□□	13	14		1.5
ZPT16UT□□	16	17		
ZPT10CT□□	10	11		0.8
ZPT13CT□□	13	14		1
ZPT16CT□□	16	17		

Vacuum Pad: Vertical Vacuum Entry with Buffer **Series ZPT**

Connection	Barb fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø10, ø13, ø16	Deep	ø10, ø16
---------------------	---------------	------	----------

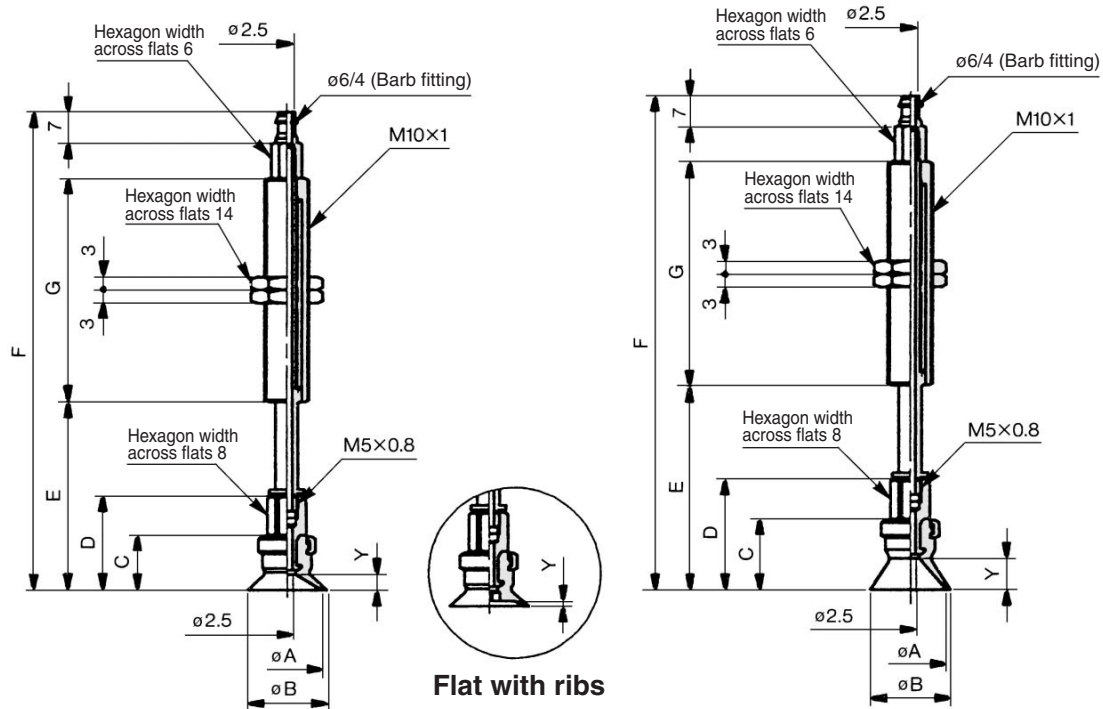

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT10 ^U _C □□□□□□-□6-A10	10	12	12	21	3	1.7
ZPT13 ^U _C □□□□□□-□6-A10	13	15				1.8
ZPT16 ^U _C □□□□□□-□6-A10	16	18	12.5	21.5	3.5	1.2

Dimensions by Stroke

Model	ø10, ø13		ø16		G
	E	F	E	F	
ZPT□□ ^U _C □□□□10-□6-A10	32.5	70.5	33	71	23
ZPT□□ ^U _C □□□□20-□6-A10	42.5	108.5	43	109	51
ZPT□□ ^U _C □□□□30-□6-A10	52.5	118.5	53	119	
ZPT□□ ^U _C □□□□40-□6-A10	62.5	154.5	63	155	77
ZPT□□ ^U _C □□□□50-□6-A10	72.5	164.5	73	165	

Deep

Model	A	B	C	D	Y
ZPT10D□□□□□□-□6-A10	10	12	15	24	6
ZPT16D□□□□□□-□6-A10	16	18	16	25	7

Dimensions by Stroke

Model	ø10		ø16		G
	E	F	E	F	
ZPT□□D□□□□10-□6-A10	35.5	73.5	36.5	74.5	23
ZPT□□D□□□□20-□6-A10	45.5	111.5	46.5	112.5	51
ZPT□□D□□□□30-□6-A10	55.5	121.5	56.5	122.5	
ZPT□□D□□□□40-□6-A10	65.5	157.7	66.5	158.5	77
ZPT□□D□□□□50-□6-A10	75.5	167.5	76.5	168.5	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU


AMJ

Misc.

Series ZPT

Connection	Barb fitting (Buffer)	Pad Form	Flat/Flat with Ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø20, ø25, ø32	Deep	ø25
---------------------	---------------	------	-----

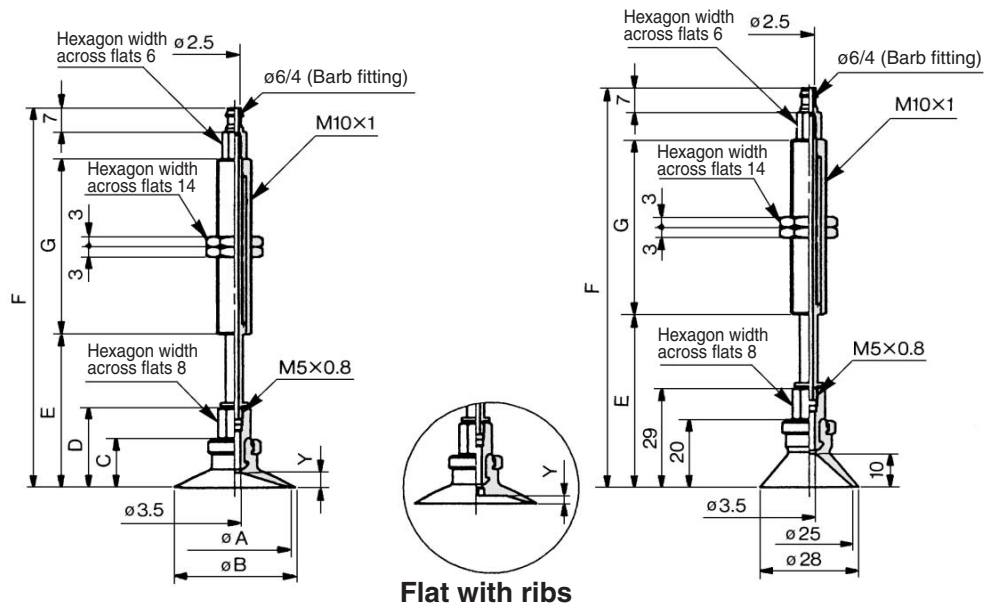

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT20 _C □□□□□□-□6-A10	20	23	14	23	4	1.7
ZPT25 _C □□□□□□-□6-A10	25	28				1.8
ZPT32 _C □□□□□□-□6-A10	32	35	14.5	23.5	4.5	2.3

Dimensions by Stroke

Model	ø20, ø25		ø32		G
	E	F	E	F	
ZPT□□ _C □□□□□□10-□6-A10	34.5	72.5	35	73	23
ZPT□□ _C □□□□□□20-□6-A10	44.5	110.5	45	111	51
ZPT□□ _C □□□□□□30-□6-A10	54.5	120.5	55	121	
ZPT□□ _C □□□□□□40-□6-A10	64.5	156.5	65	157	77
ZPT□□ _C □□□□□□50-□6-A10	74.5	166.5	75	167	


Deep

Model	E	F	G
ZPT25D□□□□10-□6-A10	40.5	78.5	23
ZPT25D□□□□20-□6-A10	50.5	116.5	51
ZPT25D□□□□30-□6-A10	60.5	126.5	
ZPT25D□□□□40-□6-A10	70.5	162.5	77
ZPT25D□□□□50-□6-A10	80.5	172.5	

Vacuum Pad:
Vertical Vacuum Entry with Buffer Series ZPT

Connection	Barb fitting (Buffer)	Pad Form	Flat/Flat with ribs/Deep
Vacuum Entry Port	Vertical	Mounting	Buffer body

Flat/Flat with ribs	ø40, ø50	Deep	ø40
---------------------	----------	------	-----

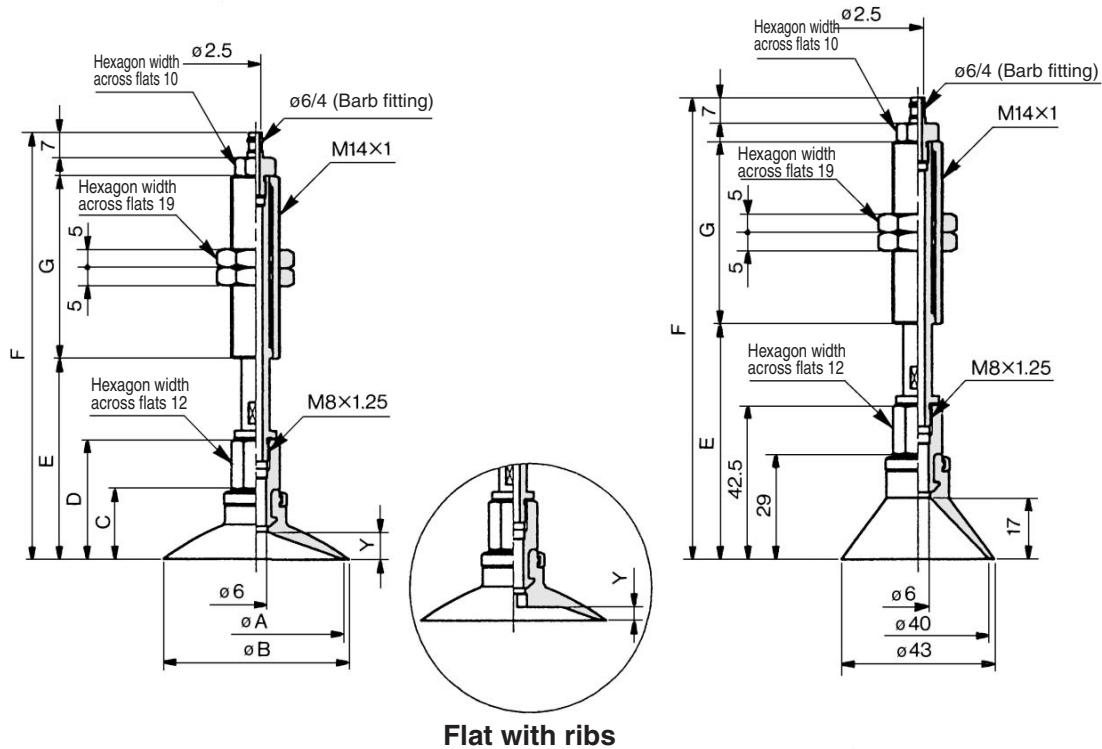

Flat/Flat with Ribs

Model	A	B	C	D	Y	
					Flat	Flat with ribs
ZPT40C□□□□□6-A14	40	43	18.5	32	6.5	3.3
ZPT50C□□□□□6-A14	50	53	19.5	33	7.5	3.8

Dimensions by Stroke

Model	ø40		ø50		G
	E	F	E	F	
ZPT□□C□□□□10-□6-A14	44.5	113.5	45.5	114.5	50
ZPT□□C□□□□20-□6-A14	54.5	116.5	55.5	117.5	
ZPT□□C□□□□30-□6-A14	64.5	126.5	65.5	127.5	
ZPT□□C□□□□50-□6-A14	84.5	171.5	85.5	172.5	

Deep

Model	E	F	G
ZPT40D□□□10-□6-A14	55	124	50
ZPT40D□□□20-□6-A14	65	127	
ZPT40D□□□30-□6-A14	75	137	
ZPT40D□□□50-□6-A14	95	182	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

Connection	Barb fitting (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

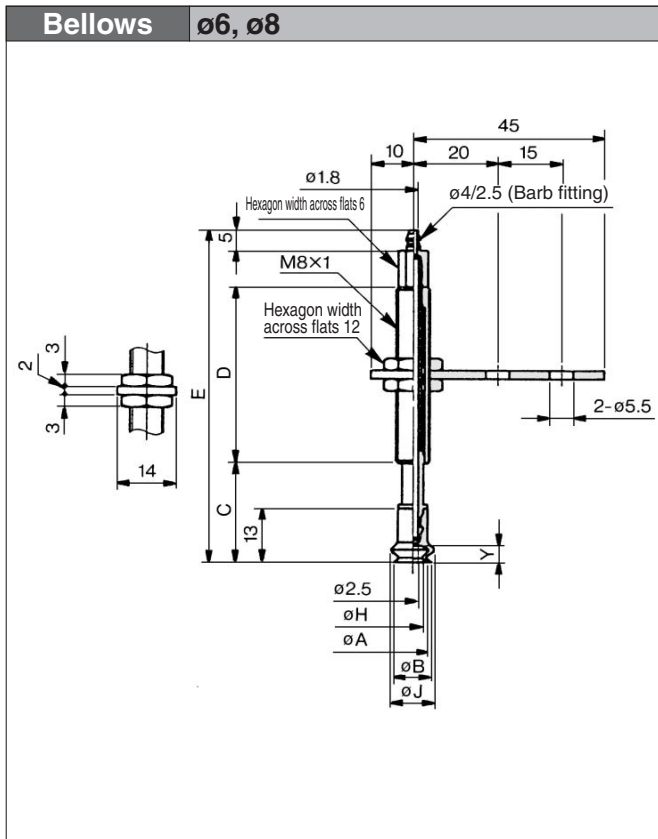


Bellows

Model	A	B	H	J
ZPT06B□□□□□-□4-A8	6	7	3.3	9.1
ZPT08B□□□□□-□4-A8	8	9	4.7	10.1

Dimensions by Stroke

Model	C	D	E
ZPT□□B□□□□ 6-□4-A8	19	15	48
ZPT□□B□□□□10-□4-A8	24		81
ZPT□□B□□□□15-□4-A8	29	43	86
ZPT□□B□□□□25-□4-A8	39		96

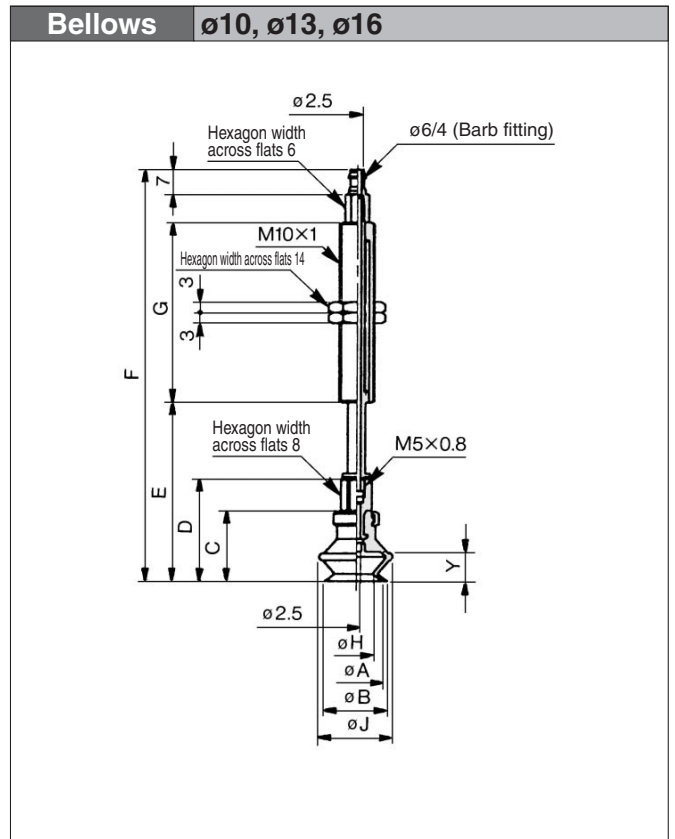

Bellows


Model	A	B	C	D	H	J	Y
ZPT10B□□□□□-□6-A10	10	12	16	25	5.5	13.8	5.5
ZPT13B□□□□□-□6-A10	13	15	18.5	27.5	8.7	19	7.5
ZPT16B□□□□□-□6-A10	16	18	20	29	9.9	21	8.5

Dimensions by Stroke

Model	$\phi 10$		$\phi 13$		$\phi 16$		G
	E	F	E	F	E	F	
ZPT□□B□□□□10-□6-A10	36.5	74.5	39	77	40.5	78.5	23
ZPT□□B□□□□20-□6-A10	46.5	112.5	49	115	50.5	116.5	51
ZPT□□B□□□□30-□6-A10	56.5	122.5	59	125	60.5	126.5	
ZPT□□B□□□□40-□6-A10	66.5	158.5	69	161	70.5	162.5	77
ZPT□□B□□□□50-□6-A10	76.5	168.5	79	171	80.5	172.5	

**Vacuum Pad:
Vertical Vacuum Entry with Buffer Series ZPT**

Connection	Barb fitting (Buffer)	Pad Form	Bellows
Vacuum Entry Port	Vertical	Mounting	Buffer body

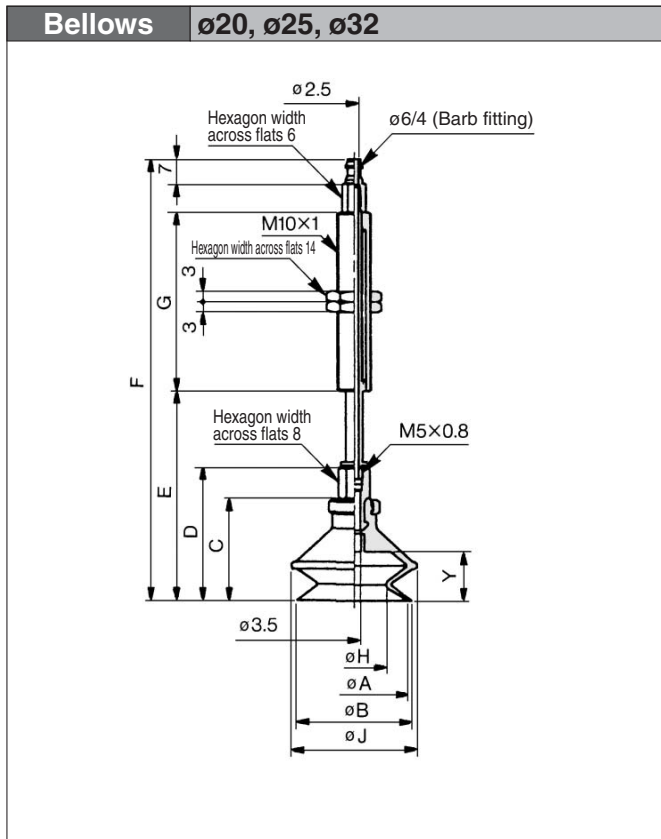


Bellows

Model	A	B	C	D	H	J	Y
ZPT20B □□□□□-□6-A10	20	22	23.5	32.5	12.4	25	10.5
ZPT25B □□□□□-□6-A10	25	27	24	33	15.6	28	
ZPT32B □□□□□-□6-A10	32	34	29	38	18.9	37	14

Dimensions by Stroke

Model	ø20		ø25		ø32		G
	E	F	E	F	E	F	
ZPT□□B□□□10-□6-A10	44	82	44.5	82.5	49.5	87.5	23
ZPT□□B□□□20-□6-A10	54	120	54.5	120.5	59.5	125.5	51
ZPT□□B□□□30-□6-A10	64	130	64.5	130.5	69.5	135.5	
ZPT□□B□□□40-□6-A10	74	166	74.5	166.5	79.5	171.5	77
ZPT□□B□□□50-□6-A10	84	176	84.5	176.5	89.5	181.5	

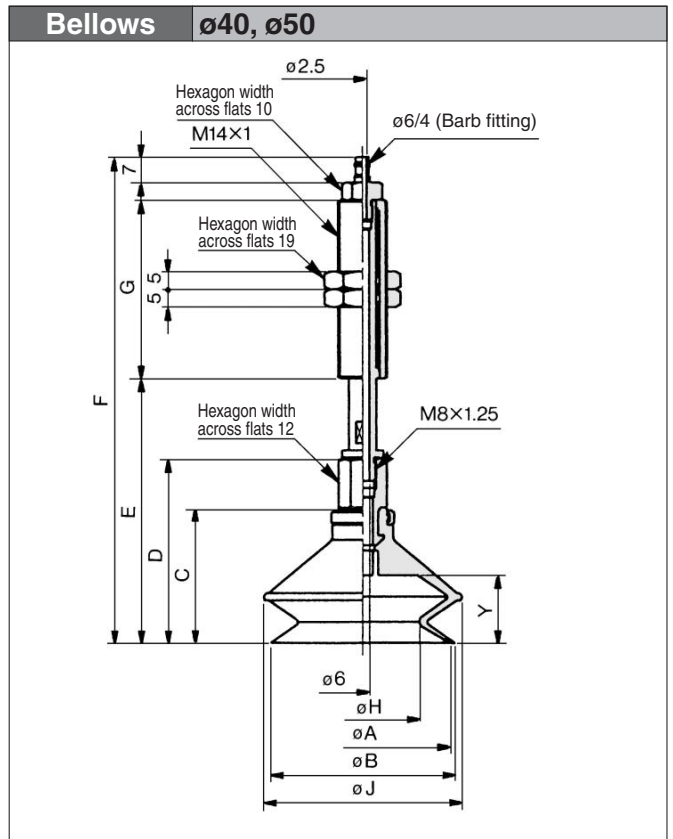

Bellows

Model	A	B	C	D	H	J	Y
ZPT40B □□□□□-□6-A14	40	43	34	47.5	24.4	48	16
ZPT50B □□□□□-□6-A14	50	53	38	51.5	32.4	57	19

Dimensions by Stroke


Model	ø40		ø50		G
	E	F	E	F	
ZPT□□B□□□10-□6-A14	60	129	64	133	50
ZPT□□B□□□20-□6-A14	70	132	74	136	
ZPT□□B□□□30-□6-A14	80	142	84	146	
ZPT□□B□□□50-□6-A14	100	187	104	191	75

- | |
|-----------|
| ZX |
| ZR |
| ZM |
| ZH |
| ZU |
| ZL |
| ZY |
| ZQ |
| ZF |
| ZP |
| ZCU |
| AMJ |
| Misc. |

Vacuum Pad: Large/Heavy Duty Type





Series ZPT/ZPX

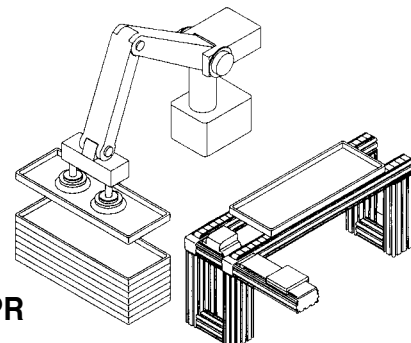Ideal for heavy weight material or objects
with a large surface area. Example: CRT, Car body



Pad diameter: $\phi 40$, $\phi 50$, $\phi 63$, $\phi 80$, $\phi 100$, $\phi 125$

Pad material: NBR, Silicon rubber, Urethane rubber, Fluoro rubber, EPR

Type	Without buffer		With buffer		Page
	Mounting	Vacuum entry port	Mounting	Vacuum entry port	
 Series ZPT Vertical vacuum entry	Male thread	Female thread		Female thread	13-11-72 to 13-11-76
	Female thread	Common			
 Series ZPX Lateral vacuum entry	Female thread	Female thread		Female thread	13-11-77 to 13-11-80

Series ZPT ZPX	Pad dia.	$\phi 40$	$\phi 50$	$\phi 63$	$\phi 80$	$\phi 100$	$\phi 125$
	Buffer stroke	ϕ	ϕ	ϕ	ϕ	ϕ	ϕ
	25	ϕ	ϕ	ϕ	ϕ	ϕ	ϕ
	50	ϕ	ϕ	ϕ	ϕ	ϕ	ϕ
	75	ϕ	ϕ	ϕ	ϕ	ϕ	ϕ
	100	—	—	—	—	ϕ	ϕ

Pad Material and Characteristics

◎: Little or no influence ○: Can be used depending on conditions X: Not suitable

Characteristics	Durometer HS ($\pm 5^{\circ}\text{C}$)	Operating temperature range ($^{\circ}\text{C}$)	Oil resistance gasoline	Oil resistance benzol	Base resistance	Acid resistance	Weatherability	Ozone resistance	Abrasion resistance	Waterproof	Solvent resistance (Benzene, toluene)
NBR	50°	0 to 120	◎	X	○	○	X	X	◎	○	X
Silicon rubber	50°	- 30 to 200	X	X	○	X	◎	◎	X	○	X
Urethane rubber	60°	0 to 60	◎	X	X	X	○	◎	◎	X	X
Fluoro rubber	60°	0 to 250	◎	◎	X	◎	◎	◎	○	◎	◎
EPR	50°	- 20 to 150	X	X	◎	○	◎	◎	○	◎	X

The above table covers only general characteristics of subject rubber materials.

Pad materials used by SMC pass the nominal JIS material standards; however, actual performance depends on operating conditions.

Series ZPT/ZPX

Model Selection

A vacuum pad diameter (ϕD) can be determined by calculation if the lifting force needed to perform the work function is known. The weight of the workpiece and any potential dynamic forces involved during movement (lifting, stopping, rotating, etc.) need to be considered. The area of one pad can be divided to an equivalent area of multiple pads (n) as necessary, based on these forces and the shape of the load.


Calculation Method: Pad Diameter

A vacuum pad diameter with applied safety factor based on lifting orientation of workpiece (vertical or horizontal) can be derived from calculations or by using the Selection Graph shown below.

Calculation

$$\phi D = \sqrt{\frac{4}{3.14} \times \frac{1}{P} \times \frac{W}{n} \times t \times 1000}$$


ϕD : Pad diameter (mm)
 n : Number of pads used
 W : Lifting force (N)
 P : Stable vacuum pressure (kPa)
 t : Safety factor: Horizontal pad contact: 4 (dynamic)
 Vertical pad contact: 8 (dynamic)

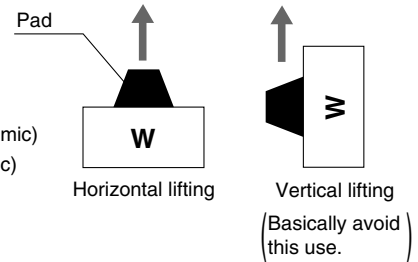


Selection Graph

The pad diameter required for horizontal (selection graphs (1) and (2)) or vertical contact can be found by setting the weight of the work the number of pads to contact the workpiece and the stable adsorption vacuum pressure.

Selection Graph (1) Selection Graph of Pad Diameter by Lift Force Horizontal (Reference value)

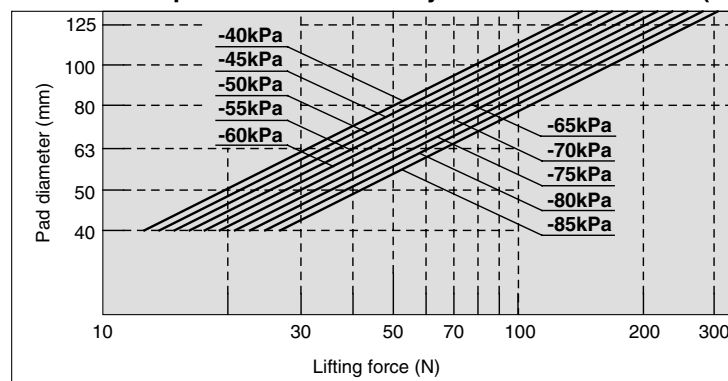

Selection Graph (2) Selection Graph of Pad Diameter by Lift Force Vertical (Reference value)

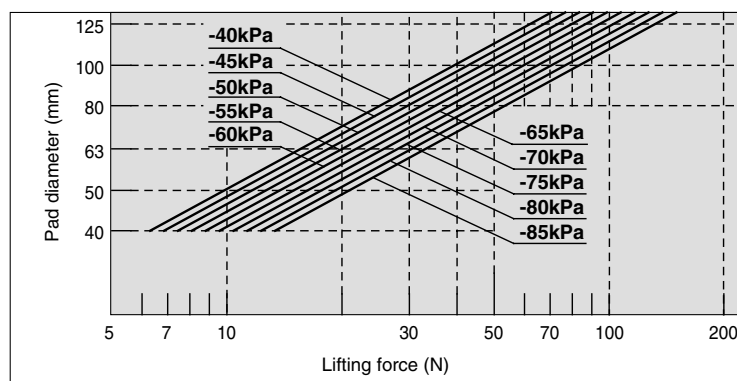

How to read

Example: Work load 20 kg (Lifting force: 196 N)
 Conditions: Desired number of pads 5 pcs.
 Working vacuum pressure -60 kPa
 Horizontal lifting

<Selection procedure>

From left condition Lifting force per pad: $196 \text{ N} \div 5 \text{ pcs.} = 39.2 \text{ N}$
 From Selection Graph (1) as horizontal lifting Lifting force 39.2 N
 Extend to the y-axis from the corresponding point of vacuum pressure -60 kPa; result is to select a pad diameter bigger than 63 mm.

Series ZPT/ZPX

Application Data

Theoretical Lifting Force

Theoretical lifting force for pad can be derived from calculations or taken directly from theoretical lifting force table.

Calculation

$$W = P \times S \times 0.1 \times \frac{1}{t}$$

W : Lifting force (N)
P : Stable vacuum pressure (kPa)
S : Pad area (cm²)
t : Factor of safety:

Horizontal pad contact : 4 (dynamic)
 Vertical pad contact : 8 (dynamic)

Theoretical Lifting Force


The theoretical lifting force (not including the safety factor) is found from the pad diameter and vacuum pressure. The required lifting force is then found by dividing the theoretical lifting force by the safety factor.

$$\text{Lifting force} = \text{Theoretical lifting force} \div t$$

Theoretical Lifting Force (Theoretical lifting force = $P \times S \times 0.1$)		(N)					
Pad diameter (mm)		ø40	ø50	ø63	ø80	ø100	ø125
Adsorption area (cm ²)		12.6	19.6	31.2	50.3	78.5	122.7
Vacuum pressure (kPa)	-85	107	167	264.9	427	667.3	1042.6
	-80	101	157	249.3	401.9	628	981.3
	-75	94.5	147	233.7	376.8	588.8	920
	-70	88.2	137	218.1	351.7	549.5	858.6
	-65	81.9	127	202.5	326.6	510.3	797.3
	-60	75.6	118	187	301.4	471	736
	-55	69.3	108	171.4	276.3	431.8	674.6
	-50	63.0	98.0	155.8	251.2	392.5	613.3
	-45	56.7	88.2	140.2	226.1	353.3	552
	-40	50.4	78.4	124.6	201	314	490.7

⚠ Precautions

1. The quantity and placement of pads should be considered when transferred work has a large surface area.

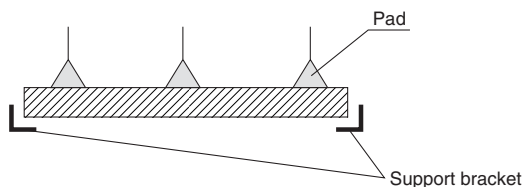


Install support brackets to prevent a workpiece from dropping according to your requirements.

2. Vacuum response time and vacuum breaking time are influenced by internal volume of large bellows size pad, which has more volume than the large flat ribbed type pad.

When response time is important, consider the following measures:

- Use a larger capacity ejector.
- Set a vacuum breaking valve.

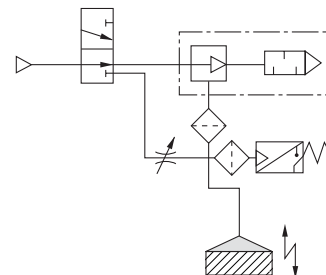

Vacuum Pad: Large/Heavy Duty Type Vertical Vacuum Entry Without Buffer

Series ZPT



Specifications

Mounting	Vacuum entry direction		Vertical	
	Connection		Male thread	Female thread
	Thread dia.	ø40, ø50	M14 x 1	M8 x 1.25, M10 x 1.5
		ø63, ø80	M16 x 1.5	M8 x 1.25, M10 x 1.5, M12 x 1.75, M16 x 1.5
		ø100, ø125	M16 x 1.5	M12 x 1.75, M16 x 1.5
Vacuum entry port		Rc 1/8	Use the mounting port	

Pad Type

Pad diameter (mm)	ø40, ø50, ø63, ø80, ø100, ø125
Material (color)	NBR (Black), Silicon rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with mark F), EPR (Black with mark E)
Durometer	NBR/Silicone rubber/EPR (50°), Urethane/Fluoro rubber (60°)

Weight

(g)

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	0	5	-1
ø50	-1	0	8	0
ø63	-2	0	16	0
ø80	-3	1	27	-1
ø100	-5	1	53	-1
ø125	-8	3	84	0

Weight (NBR)

Model	Weight (g)	Model	Weight (g)
ZPT40HN-A14	71	ZPT80HN-A16	178
ZPT40HN-B8	38	ZPT80HN-B8	144
ZPT40HN-B10	37	ZPT80HN-B10	143
ZPT50HN-A14	83	ZPT80HN-B12	141
ZPT50HN-B8	50	ZPT80HN-B16	139
ZPT50HN-B10	49	ZPT100HN-A16	350
ZPT63HN-A16	149	ZPT100HN-B12	301
ZPT63HN-B8	115	ZPT100HN-B16	299
ZPT63HN-B10	114	ZPT125HN-A16	414
ZPT63HN-B12	112	ZPT125HN-B12	365
ZPT63HN-B16	110	ZPT125HN-B16	363

Add or deduct the weight shown in the table on the left for other materials.

How to Order

ZPT 40 H N A14

Pad diameter (mm)

40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Vacuum entry/Mounting thread diameter

(Vacuum entry port)		ø40, ø50	ø63, ø80	ø100, ø125
A14	M14 x 1	●	—	—
A16	M16 x 1.5	—	●	●
B8	M8 x 1.25	●	●	—
B10	M10 x 1.5	●	●	—
B12	M12 x 1.75	—	●	●
B16	M16 x 1.5	—	●	●

Pad type


H	Heavy duty
---	------------

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
E	EPR


Series ZPT

ZPT₅₀⁴⁰ H□-A14 (Male thread)

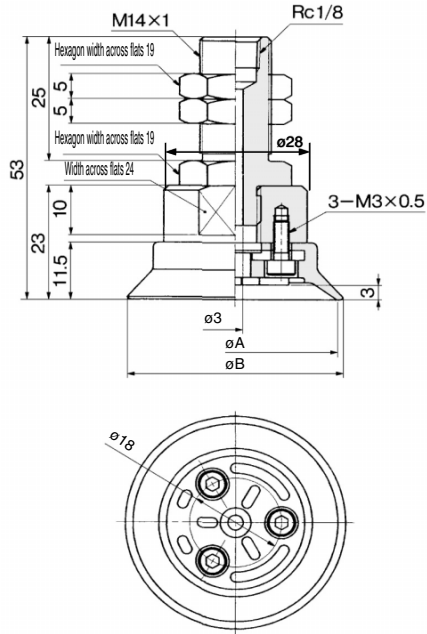


Model	øA	øB
ZPT40H□-A14	40	42
ZPT50H□-A14	50	52

ZPT⁴⁰₅₀ H□-B□ (Female thread)

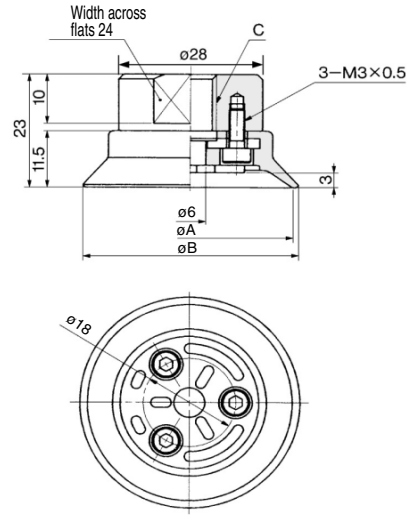


Model	øA	øB	C
ZPT40H□-B8	40	42	M8 x 1.25
ZPT40H□-B10	40	42	M10 x 1.5
ZPT50H□-B8	50	52	M8 x 1.25
ZPT50H□-B10	50	52	M10 x 1.5

ZPT ⁶³₈₀ 6380H□-A16 (Male thread)

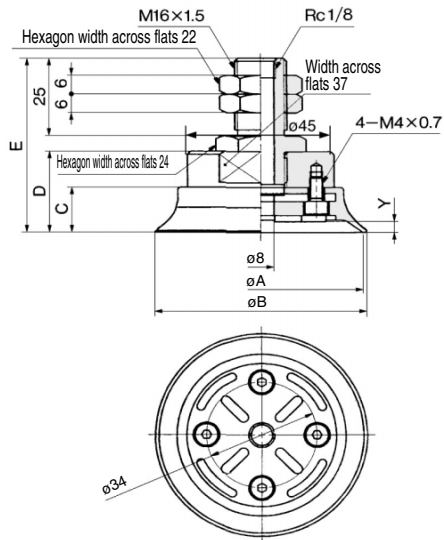

Model	øA	øB	C	D	E	Y
ZPT63H□-A16	63	65	14.5	26	56	3.5
ZPT80H□-A16	80	82	16.5	28	58	4.5

ZPT⁶³₈₀ H□-B□ (Female thread)

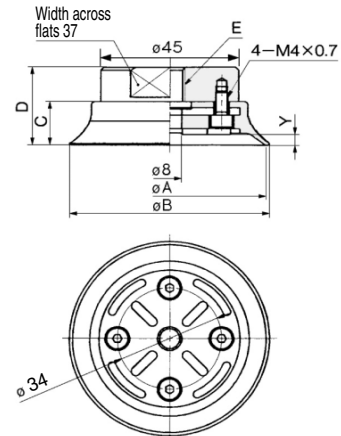


Model	øA	øB	C	D	E	Y
ZPT63H□-B8	63	65	14.5	26	M8 x 1.25	3.5
ZPT63H□-B10	63	65	14.5	26	M10 x 1.5	3.5
ZPT63H□-B12	63	65	14.5	26	M12 x 1.75	3.5
ZPT63H□-B16	63	65	14.5	26	M16 x 1.5	3.5
ZPT80H□-B8	80	82	16.5	28	M8 x 1.25	4.5
ZPT80H□-B10	80	82	16.5	28	M10 x 1.5	4.5
ZPT80H□-B12	80	82	16.5	28	M12 x 1.75	4.5
ZPT80H□-B16	80	82	16.5	28	M16 x 1.5	4.5

Misc.

Series **ZPT**


ZPT¹⁰⁰₁₂₅ H□-A16 (Male thread)

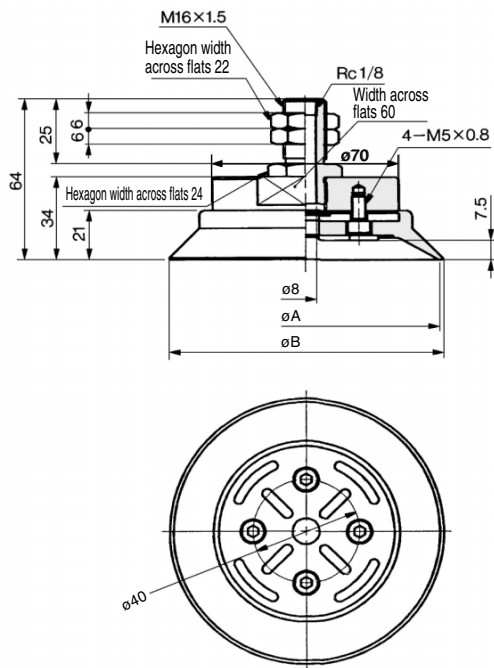

(mm)

Model	øA	øB
ZPT100H□-A16	100	103
ZPT125H□-A16	125	128

ZPT¹⁰⁰₁₂₅ H□-B□ (Female thread)

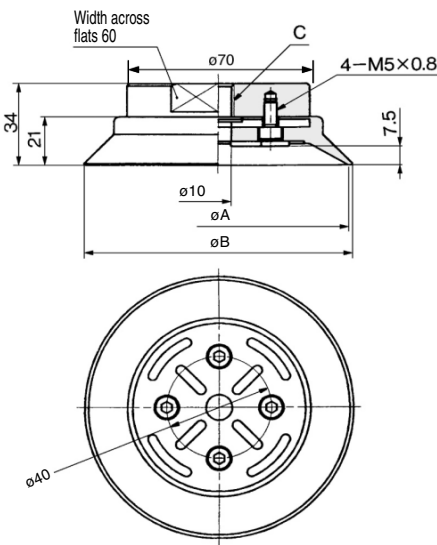

(mm)

Model	øA	øB	C
ZPT100H□-B12	100	103	M12 x 1.75
ZPT100H□-B16	100	103	M16 x 1.5
ZPT125H□-B12	125	128	M12 x 1.75
ZPT125H□-B16	125	128	M16 x 1.5

Vacuum Pad: Large/Heavy Duty Type Vertical Vacuum Entry With Buffer

Series ZPT



Specifications

Mounting	Vacuum entry direction		Vertical
	Connection		Male thread
	Thread dia.	ø40, ø50	M18 x 1.5
		ø63, ø80	M18 x 1.5
		ø100, ø125	M22 x 1.5
Vacuum entry port			Rc 1/8

Buffer type		Rotating (J)
Buffer stroke	ø40 to ø80	25 mm, 50 mm, 75 mm
	ø100, ø125	25 mm, 50 mm, 75 mm, 100 mm

Pad Type

Pad diameter (mm)	ø40, ø50, ø63, ø80, ø100, ø125
Material (Color)	NBR (Black), Silicon rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with mark F), EPR (Black with mark E)
Durometer	NBR/Silicone rubber/EPR (50°), Urethane/Fluoro rubber (60°)

Weight

(g)

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	0	5	-1
ø50	-1	0	8	0
ø63	-2	0	16	0
ø80	-3	1	27	-1
ø100	-5	1	53	-1
ø125	-8	3	84	0

Weight (NBR)

Model	Weight (g)	Model	Weight (g)
ZPT40HNJ25-B01-A18	125	ZPT80HNJ50-B01-A18	251
ZPT40HNJ50-B01-A18	145	ZPT80HNJ75-B01-A18	272
ZPT40HNJ75-B01-A18	166	ZPT100HNJ25-B01-A22	489
ZPT50HNJ25-B01-A18	137	ZPT100HNJ50-B01-A22	529
ZPT50HNJ50-B01-A18	157	ZPT100HNJ75-B01-A22	574
ZPT50HNJ75-B01-A18	195	ZPT100HNJ100-B01-A22	613
ZPT63HNJ25-B01-A18	202	ZPT125HNJ25-B01-A22	553
ZPT63HNJ50-B01-A18	222	ZPT125HNJ50-B01-A22	593
ZPT63HNJ75-B01-A18	243	ZPT125HNJ75-B01-A22	638
ZPT80HNJ25-B01-A18	214	ZPT125HNJ100-B01-A22	677

Add or deduct the weight shown in the table on the left for order materials.

How to Order

ZPT 40 H N J 25 — B01 — A18

Pad diameter (mm)

40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Mounting thread

A18	M18 x 1.5 (ø40 to ø80)
A22	M22 x 1.5 (ø100, ø125)

Vacuum entry

B01	Rc 1/8
-----	--------

Pad type

H	Heavy duty
---	------------

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
E	EPR

Buffer stroke (Rotating)

Stroke	ø40	ø50	ø63	ø80	ø100	ø125
25	●	●	●	●	●	●
50	●	●	●	●	●	●
75	●	●	●	●	●	●
100	—	—	—	—	●	●

Spring Force

Pad diameter	ø40 to ø80	ø100, ø125
First mounting load	6.9 N	10 N
Second mounting load	11.8 N	15 N

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.


Series ZPT

ZPT⁴⁰₅₀ H□J□-B01-A18 (With buffer)

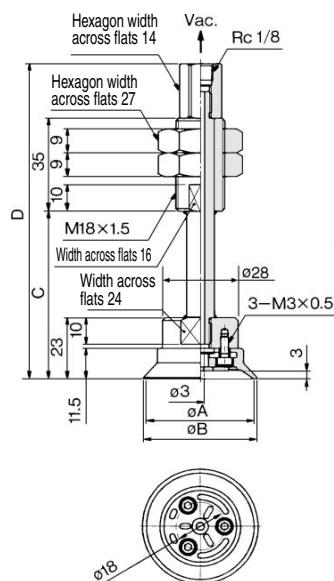


Model	øA	øB	C	D
ZPT40H□J25-B01-A18	40	42	63	118.5
ZPT40H□J50-B01-A18	40	42	98	153.5
ZPT40H□J75-B01-A18	40	42	134	189.5
ZPT50H□J25-B01-A18	50	52	63	118.5
ZPT50H□J50-B01-A18	50	52	98	153.5
ZPT50H□J75-B01-A18	50	52	134	189.5

ZPT⁶³₈₀ H□J□-B01-A18 (With buffer)

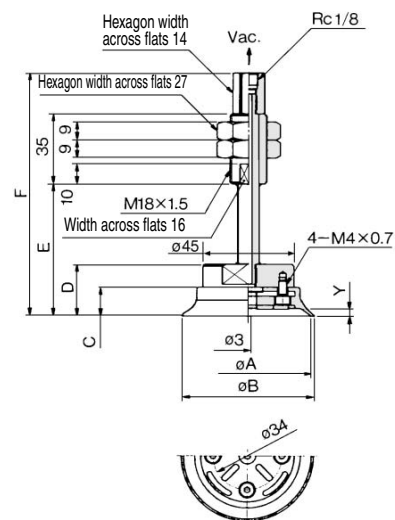

Model	øA	øB	C	D	E	F	Y
ZPT63H□J25-B01-A18	63	65	14.5	26	66	121.5	3.5
ZPT63H□J50-B01-A18	63	65	14.5	26	101	156.5	3.5
ZPT63H□J75-B01-A18	63	65	14.5	26	137	192.5	3.5
ZPT80H□J25-B01-A18	80	83	16.5	28	68	123.5	4.5
ZPT80H□J50-B01-A18	80	83	16.5	28	103	158.5	4.5
ZPT80H□J75-B01-A18	80	83	16.5	28	139	194.5	4.5

ZPT¹⁰⁰₁₂₅ H□J□-B01-A22 (With buffer)

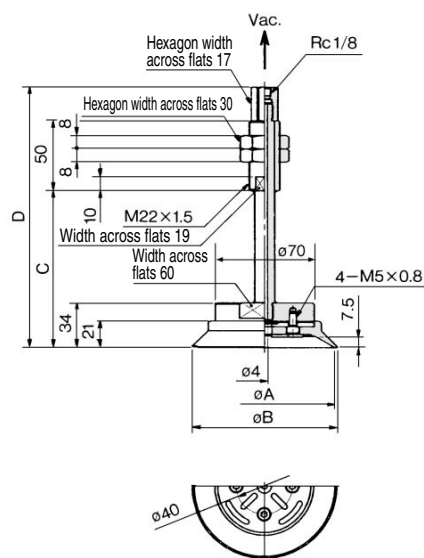


Model	øA	øB	C	D
ZPT100H□J25-B01-A22	100	103	78	152
ZPT100H□J50-B01-A22	100	103	114	188
ZPT100H□J75-B01-A22	100	103	154	228
ZPT100H□J100-B01-A22	100	103	189	263
ZPT125H□J25-B01-A22	125	128	78	152
ZPT125H□J50-B01-A22	125	128	114	188
ZPT125H□J75-B01-A22	125	128	154	228
ZPT125H□J100-B01-A22	125	128	189	263

Construction

Series ZPT

Series ZPX

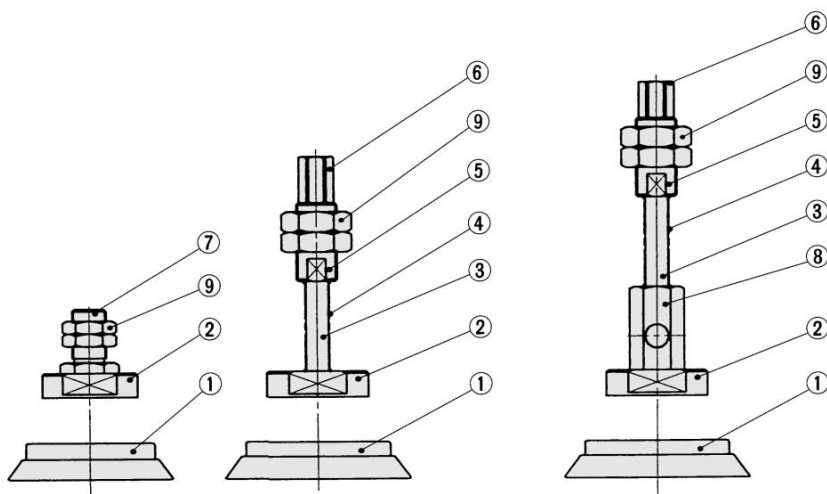

Component Parts

No.	Description	Material	Surface treatment
①	Pad	NBR, Silicone rubber, Urethane rubber, Fluoro rubber, EPR	—
②	Adapter plate	Aluminum	—
③	Piston rod	Carbon steel	Hard chrome plated
④	Spring	Stainless steel	—
⑤	Buffer body	Aluminum	—
⑥	Buffer adaptor	Brass	Electroless nickel plated
⑦	Adaptor A	Brass	Electroless nickel plated
⑧	X type adaptor	Brass	Electroless nickel plated
⑨	Mounting nut	Rolled steel	Black zinc chromated

Replacement Parts/Pad Unit

How to Order Pad Unit

ZP	40	H	N	
Pad dia. (mm)			Material	
40	ø40		N	NBR
50	ø50		S	Silicon rubber
63	ø63		U	Urethane rubber
80	ø80		F	Fluoro rubber
100	ø100		E	EPR
125	ø125			
		Pad type		
		H		Heavy duty

Pad Unit Weight

(NBR)


Model	Weight (g)
ZP40HN	15
ZP50HN	27
ZP63HN	57
ZP80HN	86
ZP100HN	160
ZP125HN	224

Add NBR weight to the table on the right for other materials.

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	0	5	-1
ø50	-1	0	8	0
ø63	-2	0	16	0
ø80	-3	1	27	-1
ø100	-5	1	53	-1
ø125	-8	3	84	0


Dimensions

ZP₅₀⁴⁰H□

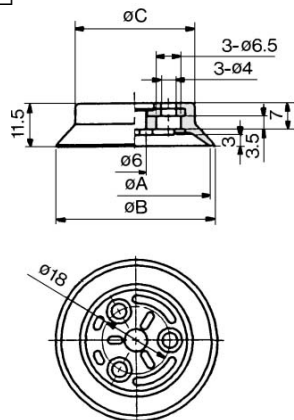


Model	øA	øB	øC
ZP40H□	40	42	32
ZP50H□	50	52	42

ZP₈₀⁶³H□

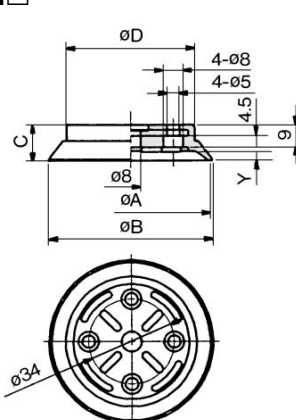

Model	øA	øB	C	D	Y
ZP63H□	63	65	14.5	50	3.5
ZP80H□	80	82	16.5	61	4.5


ZP₁₂₅¹⁰⁰H□

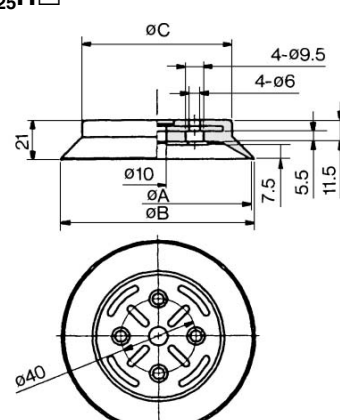

Model	øA	øB	øC
ZP100H□	100	103	80
ZP125H□	125	128	104

Series ZPT/ZPX

How to Assemble/Disassemble

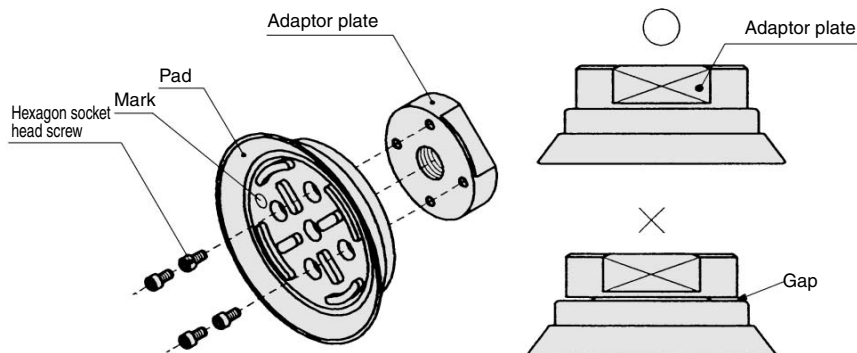

Remove bolts with a hex. key wrench from the pad underside. Tighten new pad with the bolts ensuring there is no gap between the adaptor plate and the pad.

How to Distinguish Different Pad Materials

Checking the mark on the pad's interior surface as shown in the figure on the left.

Material	Color	Mark
NBR	Black	—
Silicon rubber	White	—
Urethane rubber	Brown	—
Fluoro rubber	Black	Ⓕ
EPR	Black	Ⓔ

Replacement Parts/Mounting Nut


How to Order

ZPNA—M16

Mounting thread

M16	M16 x 1.5
M18	M18 x 1.5
M22	M22 x 1.5


Mounting nut part number for "M14 x 1" is "SN-015A".

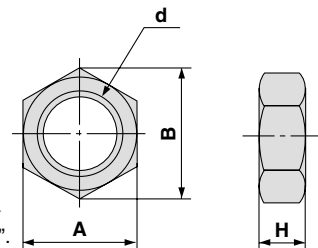


Model	A	B	d	H
SN-015A	19	21.9	M14 x 1	5
ZPNA-M16	22	25.4	M16 x 1.5	6
ZPNA-M18	27	31.2	M18 x 1.5	9
ZPNA-M22	30	34.6	M22 x 1.5	8

Bolts

Dimensions

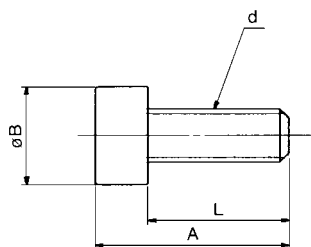

A	øB	d	L
11	5.5	M3 x 0.5	8
12	7	M4 x 0.7	8
15	8.5	M5 x 0.8	10

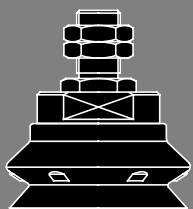


Vacuum Pad: Large Size Bellows Type

Series *ZPT/ZPX*


Pad Diameter: ø40, ø50, ø63, ø80, ø100, ø125

Ideal for loads with a curved surface, heavyweight loads and loads with large surface area.

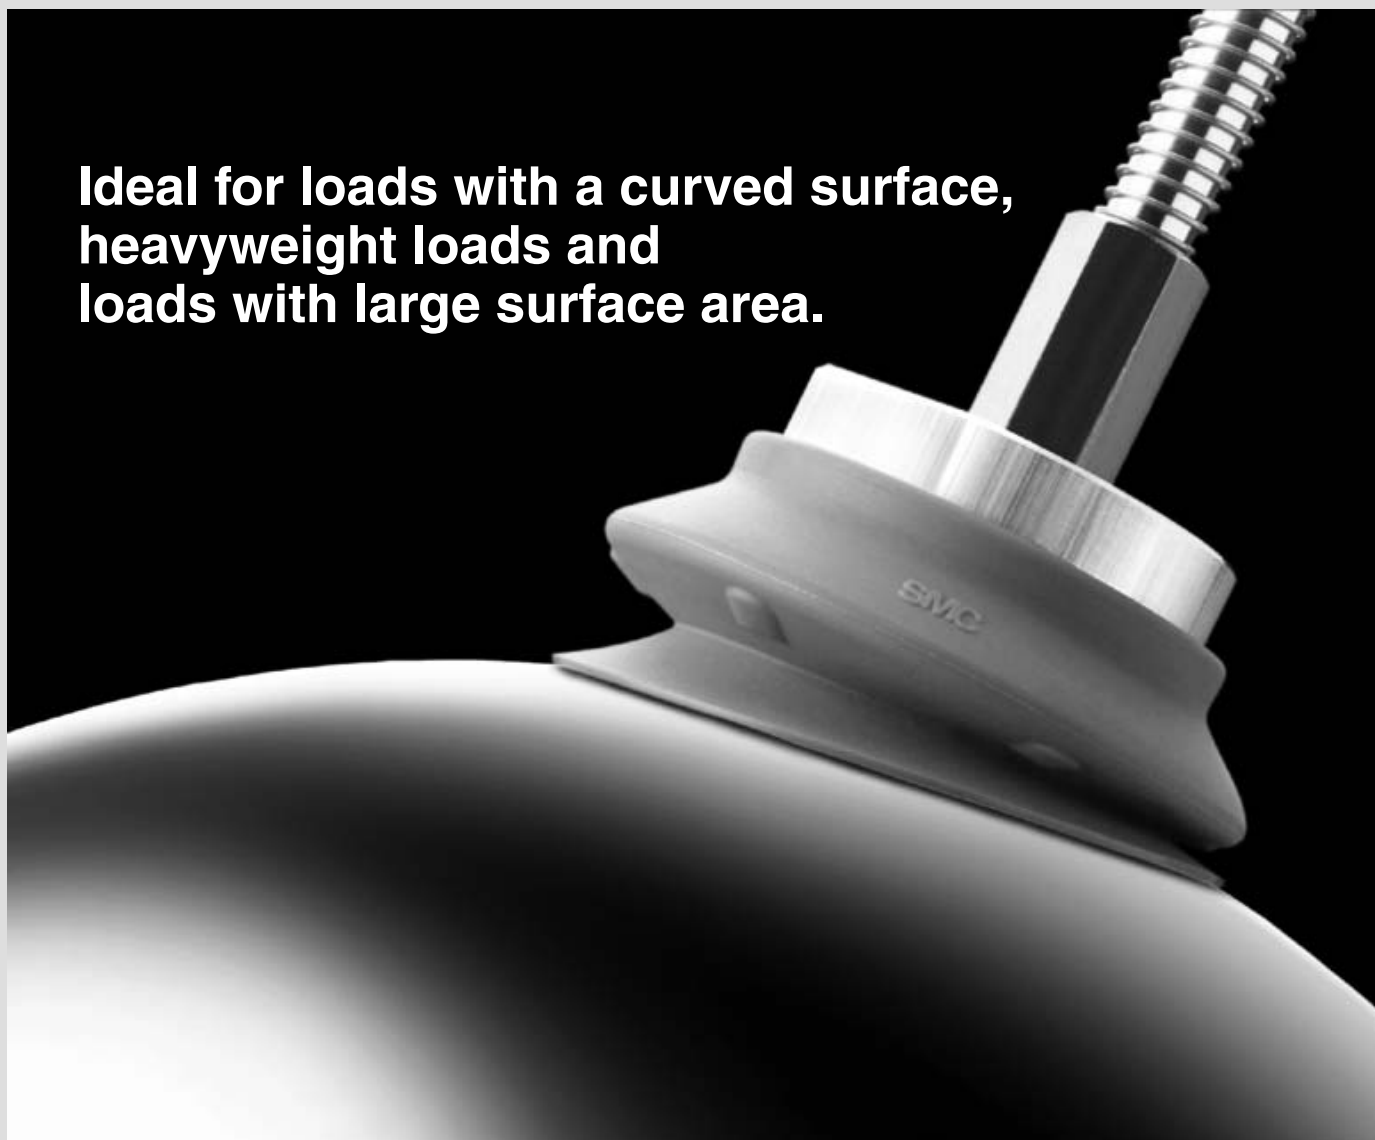


ZX
ZR
ZM
ZH
ZU
ZL
ZY
ZQ
ZF
ZP
ZCU
AMJ
Misc.


For transfer of CRT

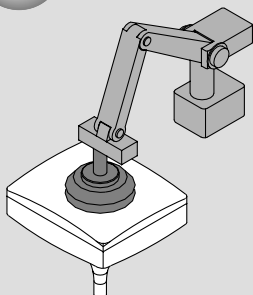

For transfer of cardboard box

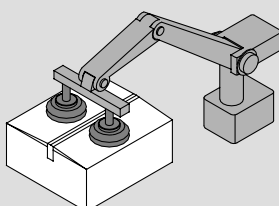

For automotive production line

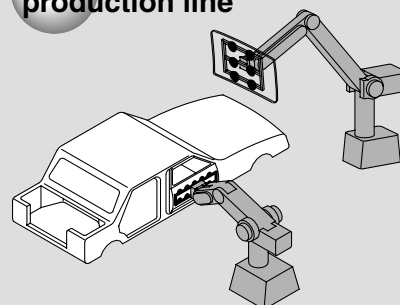

Vacuum Pad: Large Size Bellows Type


Series ZPT/ZPX

Pad diameter: $\phi 40$, $\phi 50$, $\phi 63$, $\phi 80$, $\phi 100$, $\phi 125$

Pad material: NBR, Silicone rubber, Urethane rubber, Fluoro rubber, EPR

Series ZPT

Series ZPX

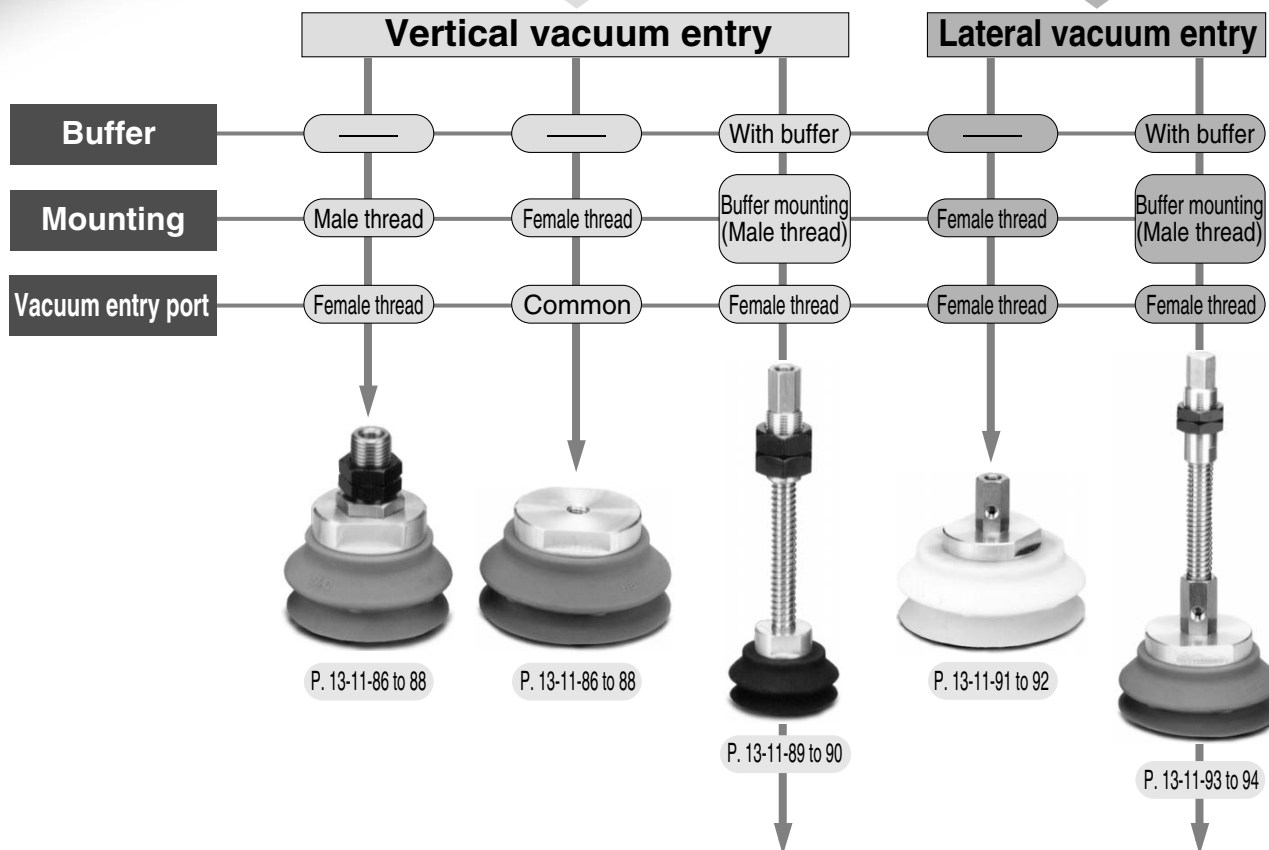

Buffer stroke

Pad dia. Buffer stroke (mm)	$\phi 40$	$\phi 50$	$\phi 63$	$\phi 80$	$\phi 100$	$\phi 125$
25	●	●	●	●	●	●
50	●	●	●	●	●	●
75	●	●	●	●	●	●
100	—	—	—	—	●	●


Pad Material and Characteristics

◎: Little or no influence ○: Can be used depending on conditions. X: Not suitable

Characteristics Material	Durometer HS ($\pm 5^\circ$)	Operating temperature range ($^\circ\text{C}$)	Oil resistance gasoline	Oil resistance benzol	Base resistance	Acid resistance	Weatherability	Ozone resistance	Abrasion resistance	Waterproof	Solvent resistance (Benzene, toluene)
NBR	50°	0 to 120	◎	X	○	○	X	X	◎	○	X
Silicon rubber	50°	-30 to 250	X	X	○	X		◎	X	○	X
Urethane rubber	60°	0 to 60	◎	X	X	X	○	◎	◎	X	X
Fluoro rubber	60°	0 to 250	◎	◎	X	◎	◎	◎	○	◎	◎
EPR	50°	-20 to 150	X	X	◎	○	◎	◎	○	◎	X


The above table covers only general characteristics of subject rubber materials.

Pad materials used by SMC pass the nominal JIS material standards; however, actual performance depends on operating conditions.

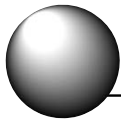


Interchangeable with flat pad with ribs for heavy loads.


When changing to a different shape pad due to load change, the pad can be easily interchanged.

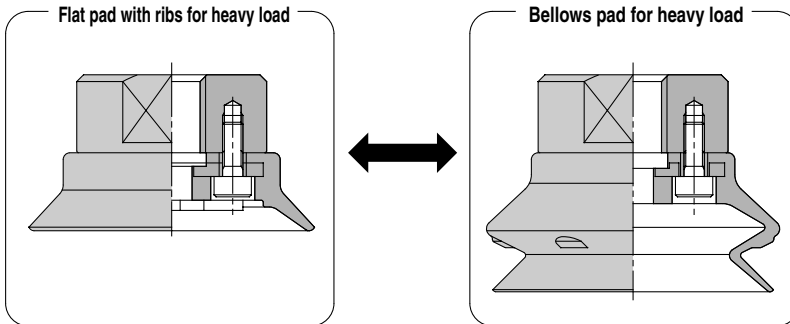

Possible combination——Same pad diameter, $\phi 40$ and $\phi 50$, $\phi 63$ and $\phi 80$, $\phi 100$ and $\phi 125$

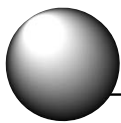

Possible adsorption to cylindrical loads with easy fit to the load shape.

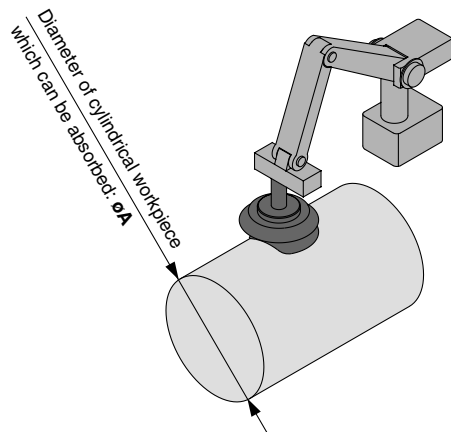


* Pushing force for adsorption is almost equivalent to return force of buffer spring.

Table (1) Diameter of Cylindrical Workpiece Which can be Absorbed. (Reference value)

Model	Dia. of cylindrical workpiece which can be absorbed: ϕA ⁽¹⁾
ZP 40HB □	$\phi 80$ or more
50HB □	$\phi 100$ or more
63HB □	$\phi 120$ or more
80HB □	$\phi 160$ or more
100HB □	$\phi 180$ or more
125HB □	$\phi 230$ or more


Note 1) Please consult with SMC when requiring a diameter smaller than shown in table.

Note 2) Regard values mentioned above as reference only, since actual valves may depend on operating conditions.

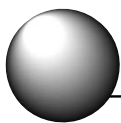


Pad shape permits adsorption to sloped surfaces.

- When a workpiece could be deformed during adsorption or transportation. (Example of a cardboard box)

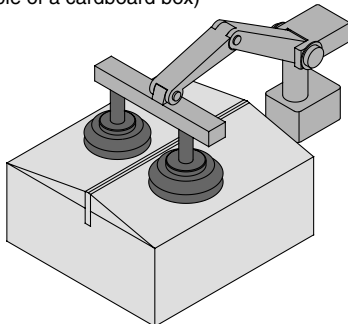

- When the adsorption surface of a workpiece is slanted. (Maximum angle: 5° *)

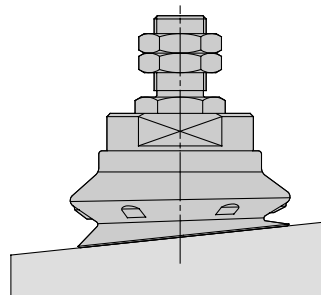

* Regard values mentioned above as reference only, since actual valves may depend on operating conditions.

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Vacuum Pad: Large Size Bellows Type

Vertical Vacuum Entry

Without Buffer

Series ZPT



Specifications

Mounting	Vacuum entry direction		Vertical	
	Connection		Male thread	Female thread
	Thread dia.	ø40, ø50	M14 x 1	M 8 x 1.25, M10 x 1.5
		ø63, ø80	M16 x 1.5	M 8 x 1.25, M10 x 1.5, M12 x 1.75, M16 x 1.5
		ø100, ø125	M16 x 1.5	M12 x 1.75, M16 x 1.5
Vacuum entry port		Rc 1/8	Use the mounting port	

Pad Type

Pad diameter (mm)	ø40, ø50, ø63, ø80, ø100, ø125
Material (Color)	NBR (Black), Silicone rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with mark F), EPR (Black with mark E)
Durometer	NBR/Silicone rubber/EPR (50°), Urethane/Fluoro rubber (60°)

Weight

(g)

NBR

Model	Weight	Model	Weight
ZPT40HBN-A14	73	ZPT 80HBN-A16	195
-B8	40	-B8	161
-B10	39	-B10	160
ZPT50HBN-A14	89	-B12	158
-B8	56	-B16	156
-B10	55	ZPT100HBN-A16	396
ZPT63HBN-A16	155	-B12	347
-B8	121	-B16	345
-B10	120	ZPT125HBN-A16	580
-B12	118	-B12	531
-B16	116	-B16	529

Add NBR weight to below table for other materials.

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	+1	+10	0
ø50	-2	+1	+19	0
ø63	-3	+2	+37	0
ø80	-6	+2	+61	0
ø100	-12	+4	+121	-1
ø125	-22	+7	+228	-3

How to Order

ZPX 40 HB N A14

Pad diameter (mm)

40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type

HB	Large bellows pad
----	-------------------

Vacuum entry/Mounting thread diameter


		ø40, ø50	ø63, ø80	ø100, ø125
A14	M14 x 1	●	—	—
A16	M16 x 1.5	—	●	●
B8	M 8 x 1.25	●	●	—
B10	M10 x 1.5	●	●	—
B12	M12 x 1.75	—	●	●
B16	M16 x 1.5	—	●	●

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
E	EPR

Vacuum Pad: Large Size Bellows Type Vertical Vacuum Entry without Buffer **Series ZPT**

ZPT⁶³₈₀ HB□-A14 (Male thread)

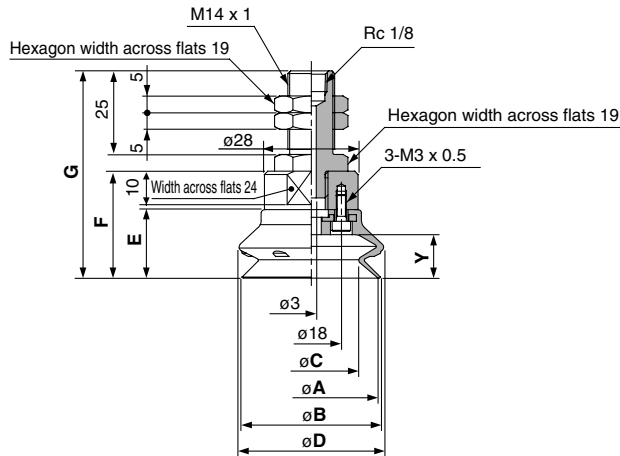


Dimensions

(mm)

Model	A	B	C	D	E	F	G	Y
ZPT40HB□-A14	40	41.4	28.4	43.2	20.5	32	62	13
ZPT50HB□-A14	50	51.9	35.7	54	24	35.5	65.5	16.5

ZPT⁶³₈₀ HB□-B□ (Female thread)

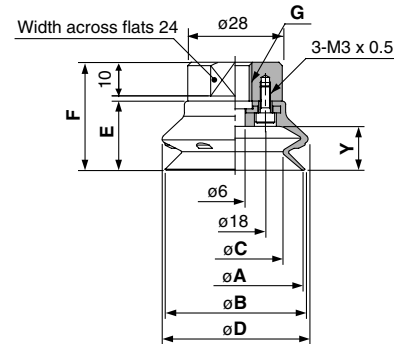


Dimensions

(mm)

Model	A	B	C	D	E	F	G	Y
ZPT40HB□-B8	40	41.4	28.4	43.2	20.5	32	M8 x 1.25	13
-B10							M10 x 1.5	
ZPT50HB□-B8							M8 x 1.25	
-B10	50	51.9	35.7	54	24	35.5	M10 x 1.5	16.5

ZPT⁶³₈₀ HB□-A16 (Male thread)

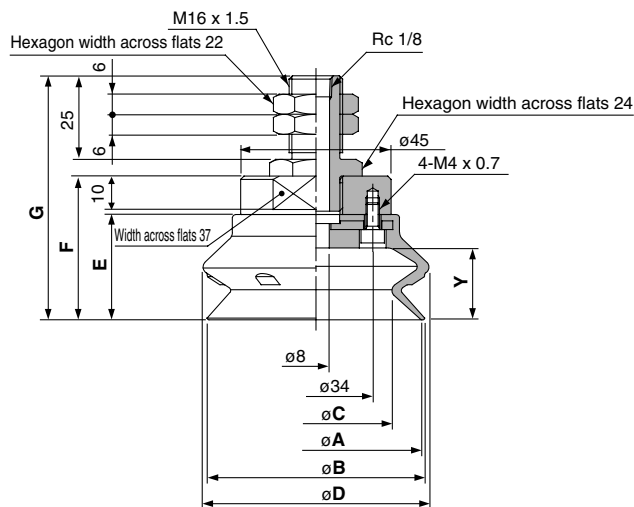


Dimensions

(mm)

Model	A	B	C	D	E	F	G	Y
ZPT63HB□-A16	63	65.1	45.5	67.6	31.5	43	73	21.5
ZPT80HB□-A16	80	83	58.4	85.1	37	48.5	78.5	27.5

ZPT⁶³₈₀ HB□-B□ (Female thread)

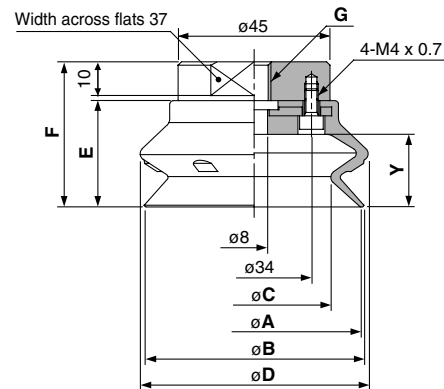

Dimensions

(mm)

Model	A	B	C	D	E	F	G	Y
ZPT63HB□-B8	63	65.1	45.5	67.6	31.5	43	M8 x 1.25	21.5
-B10							M10 x 1.5	
-B12							M12 x 1.75	
-B16							M16 x 1.5	
ZPT80HB□-B8	80	83	58.4	85.1	37	48.5	M8 x 1.25	27.5
-B10							M10 x 1.5	
-B12							M12 x 1.75	
-B16							M16 x 1.5	

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.


Series ZPT

ZPT¹⁰⁰₁₂₅ HB□-A16 (Male thread)

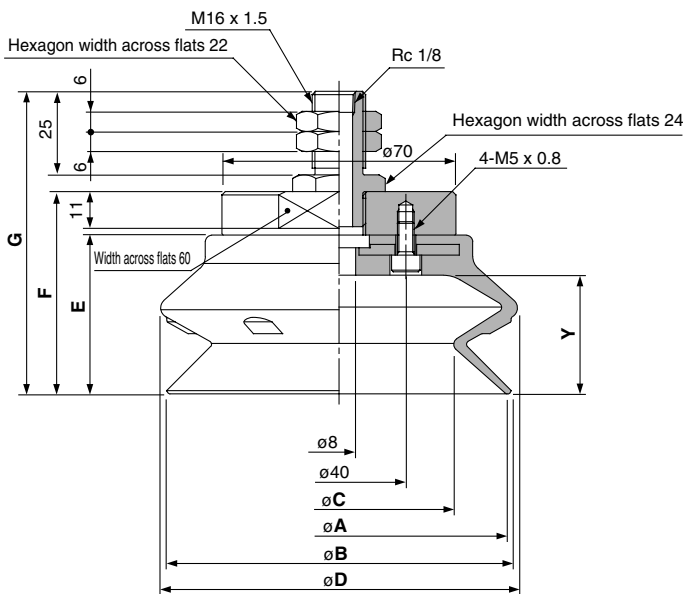

Dimensions (mm)								
Model	A	B	C	D	E	F	G	Y
ZPT100HB□-A16	100	103	68.5	107	47.5	60.5	90.5	35.5
ZPT125HB□-A16	125	128.5	88.5	135	56	69	99	44

ZPT¹⁰⁰₁₂₅ HB□-B□ (Female thread)

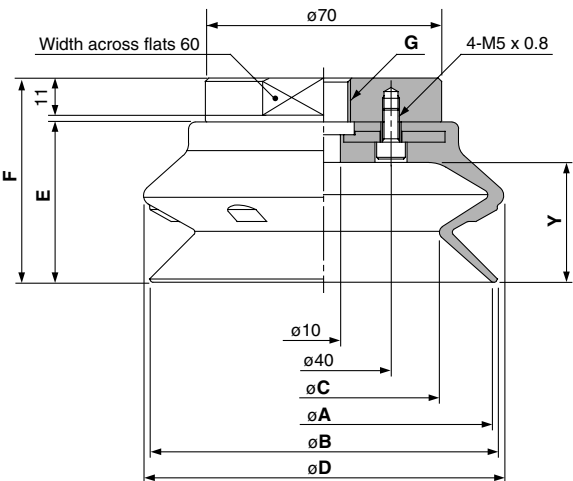

Dimensions (mm)								
Model	A	B	C	D	E	F	G	Y
ZPT100HB□-B12	100	103.1	68.6	106.7	47.5	60.5	M12 x 1.75	35.5
-B16							M16 x 1.5	
ZPT125HB□-B12	125	128.5	88.6	135	56	69	M12 x 1.75	44
-B16							M16 x 1.5	

Vacuum Pad: Large Size Bellows Type Vertical Vacuum Entry With Buffer

Series ZPT



Specifications

Mounting	Vacuum entry direction		Vertical
	Connection		Male thread
	Thread dia.	ø40, ø50	M18 x 1.5
		ø63, ø80	M18 x 1.5
		ø100, ø125	M22 x 1.5
Vacuum entry port			Rc 1/8

Buffer type		Rotating (J)
Buffer stroke	ø40 to ø80	25, 50, 75 mm
	ø100, ø125	25, 50, 75, 100 mm

Pad Type

Pad diameter (mm)	ø40, ø50, ø63, ø80, ø100, ø125
Material (Color)	NBR (Black), Silicone rubber (White), Urethane rubber (Brown), Fluoro rubber (Black with mark®), EPR (Black with mark®)
Durometer	NBR/Silicone rubber/EPR (50°), Urethane/Fluoro rubber (60°)

Weight

(g)

NBR

Model	Weight	Model	Weight
ZPT40HBNJ25-B01-A18	127	ZPT 80HBNJ50-B01-A18	268
50-B01-A18	147	75-B01-A18	289
75-B01-A18	168	ZPT100HBNJ25-B01-A22	535
ZPT50HBNJ25-B01-A18	143	50-B01-A22	575
50-B01-A18	163	75-B01-A22	620
75-B01-A18	201	100-B01-A22	659
ZPT63HBNJ25-B01-A18	208	ZPT125HBNJ25-B01-A22	719
50-B01-A18	228	50-B01-A22	759
75-B01-A18	249	75-B01-A22	804
ZPT80HBNJ25-B01-A18	231	100-B01-A22	843

Add NBR weight to below table for other materials.

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	+1	+10	0
ø50	-2	+1	+19	0
ø63	-3	+2	+37	0
ø80	-6	+2	+61	0
ø100	-12	+4	+121	
ø125	-22	+7	+228	

How to Order

ZPT 40 HB N J 25 - B01 - A18

Pad diameter (mm)

40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Mounting thread

A18	M18 x 1.5 (ø40 to ø80)
A22	M22 x 1.5 (ø100, ø125)

Vacuum entry

B01	Rc 1/8
-----	--------

Pad type

HB	Large bellows pad
----	-------------------

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
E	EPR

Applicable buffer stroke (Rotating)


Stroke	ø40	ø50	ø63	ø80	ø100	ø125
25	●	●	●	●	●	●
50	●	●	●	●	●	●
75	●	●	●	●	●	●
100	—	—	—	—	●	●

Spring Force

ø40 to ø80	First mounting load	6.9 N
	Second mounting load	11.8 N
ø100, ø150	First mounting load	10 N
	Second mounting load	15 N

Series ZPT

ZPT⁴⁰₅₀HB□J□-B01-A18 (Male thread)

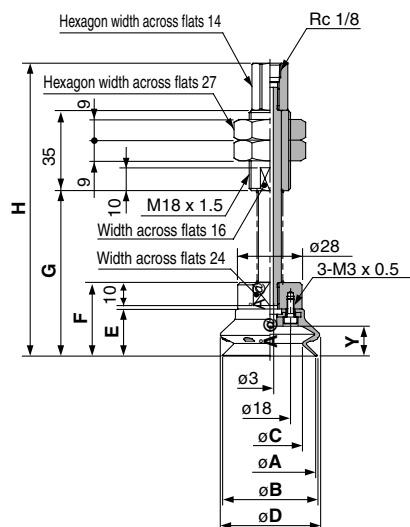


Dimensions

(mm)

Model	A	B	C	D	E	F	G	H	Y
ZPT40HB□J25-B01-A18							72	127.5	
50-B01-A18	40	41.4	28.4	43.2	20.5	32	107	162.5	13
75-B01-A18							143	198.5	
ZPT50HB□J25-B01-A18							75.5	131	
50-B01-A18	50	51.9	35.7	54	24	35.5	110.5	166	16.5
75-B01-A18							146.5	202	

ZPT⁶³₈₀HB□J□-B01-A18 (Male thread)

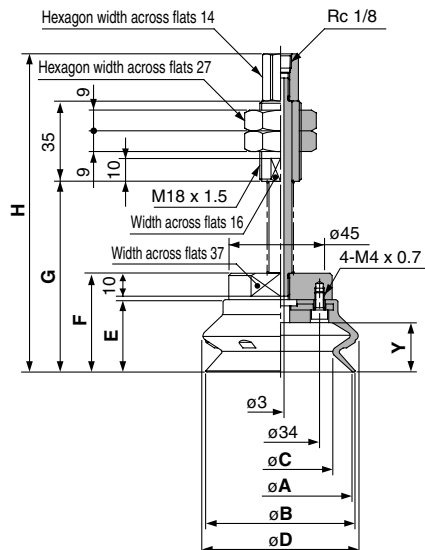


Dimensions

(mm)

Model	A	B	C	D	E	F	G	H	Y
ZPT63HB□J25-B01-A18							83	138.5	
50-B01-A18	63	65.1	45.5	67.6	31.5	43	118	173.5	21.5
75-B01-A18							154	209	
ZPT80HB□J25-B01-A18							88.5	144	
50-B01-A18	80	83	58.5	85.1	37	48.5	123.5	179	27.5
75-B01-A18							159.5	215	

ZPT¹⁰⁰₁₂₅HB□J□-B01-A22 (Male thread)

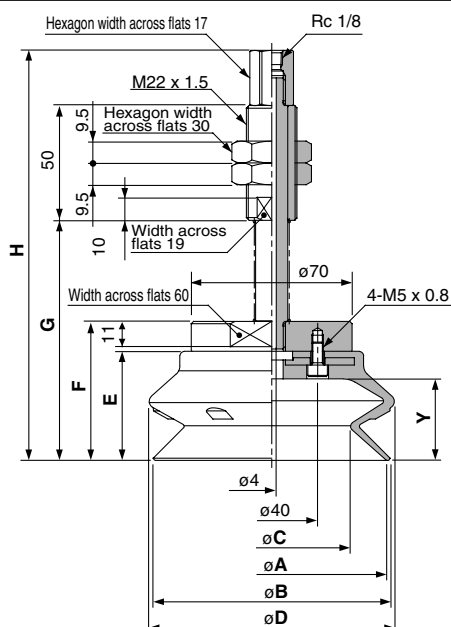

Dimensions

(mm)


Model	A	B	C	D	E	F	G	H	Y
ZPT100HB□J25-B01-A22							104.5	178.5	
50-B01-A22	100	103.1	68.6	106.7	47.5	60.5	140.5	214.5	35.5
75-B01-A22							180.5	254.5	
100-B01-A22							215.5	289.5	
ZPT125HB□J25-B01-A22							113	187	
50-B01-A22	125	128.5	88.6	135	56	69	149	223	44
75-B01-A22							189	263	
100-B01-A22							224	298	

Vacuum Pad: Large Size Bellows Type Vertical Vacuum Entry with Buffer **Series ZPT/ZPX**

Construction

Series ZPT

Series ZPX

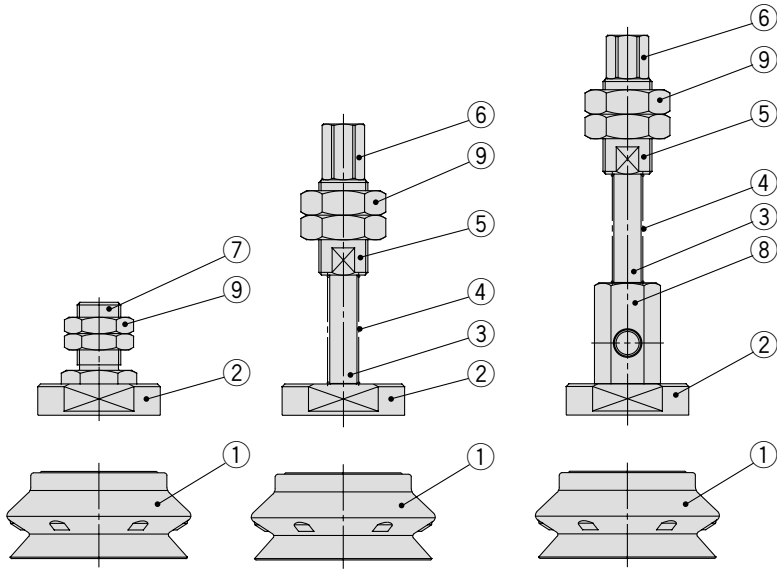

Component Parts

No.	Description	Material	Surface treatment
①	Pad	NBR, Silicone rubber, Urethane rubber, Fluoro rubber, EPR	—
②	Adapter plate	Aluminum	—
③	Piston rod	Carbon steel	Hard chrome plated
④	Spring	Stainless steel	—
⑤	Buffer body	Aluminum	—
⑥	Buffer adaptor	Brass	Electroless nickel plated
⑦	Adaptor A	Brass	Electroless nickel plated
⑧	X type adaptor	Brass	Electroless nickel plated
⑨	Mounting nut	Rolled steel	Black zinc chromated

Replacement Parts/Pad Unit

How to Order

ZP	40	HB	N
Pad diameter (mm)		Material	
40	ø40	N	NBR
50	ø50	S	Silicon rubber
63	ø63	U	Urethane rubber
80	ø80	F	Fluoro rubber
100	ø100	E	EPR
125	ø125		
		Pad type	
		HB	Large bellows pad

Weight

NBR


Model	Weight
ZP 40HBN	17
ZP 50HBN	33
ZP 63HBN	63
ZP 80HBN	103
ZP100HBN	206
ZP125HBN	390

Add NBR weight to below table for other materials.

Pad dia.	Silicon rubber	Urethane rubber	Fluoro rubber	EPR
ø40	-1	+1	+10	0
ø50	-2	+1	+19	0
ø63	-3	+2	+37	0
ø80	-6	+2	+61	0
ø100	-12	+4	+121	-1
ø125	-22	+7	+228	-3


Dimensions

ZP₅₀⁴⁰HB□

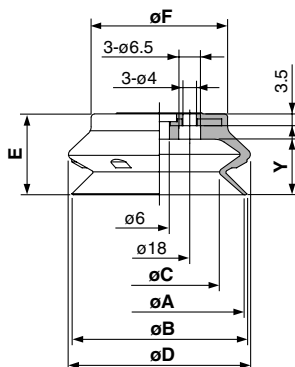


Model	A	B	C	D	E	F	Y
ZP40HB□	40	41.4	28.4	43.2	20.5	30	13
ZP50HB□	50	51.9	35.7	54	24	40.5	16.5

ZP₈₀⁶³HB□

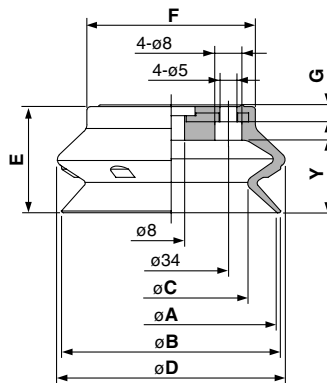

Model	A	B	C	D	E	F	G	Y
ZP63HB□	63	65.1	45.5	67.6	31.5	50	4.5	21.5
ZP80HB□	80	83	58.4	85.1	37	64	5	27.5

ZP₁₂₅¹⁰⁰HB□

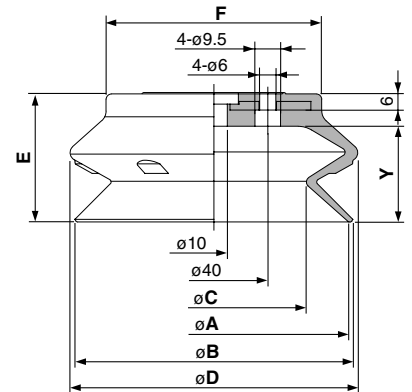


Model	A	B	C	D	E	F	Y
ZP100HB□	100	103.1	68.6	106.7	47.5	80	35.5
ZP125HB□	125	128.5	88.6	135	56	105	44

Series ZPT/ZPX

How to Assemble/Disassemble

Remove bolts with a hex. key wrench from the pad underside. Tighten new pad with the bolts ensuring there is no gap between the adapter plate and the pad.

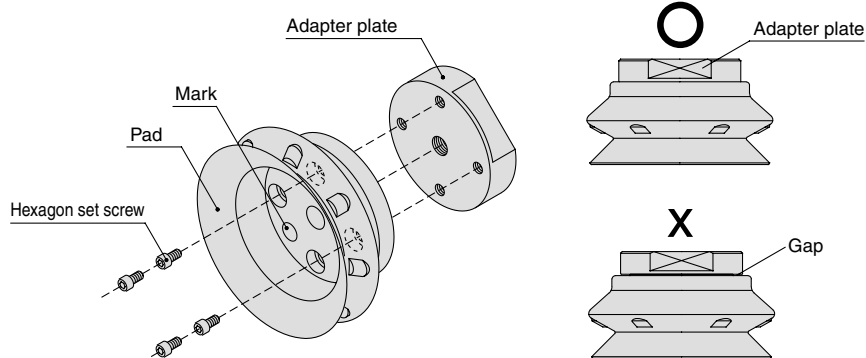

How to Distinguish Different Pad Materials

Check for the indicator mark on the pad's interior surface as shown in the figure at left.

Material	Color	Mark
NBR	Black	—
Silicon rubber	White	—
Urethane rubber	Brown	—
Fluoro rubber	Black	Ⓕ
EPR	Black	Ⓔ

Replacement Parts/Mounting Nut

How to Order


ZPNA—M16

• Mounting thread

M16	M16 x 1.5
M18	M18 x 1.5
M22	M22 x 1.5

Mounting nut part number for "M14x1" is "SN-015A".


Dimensions

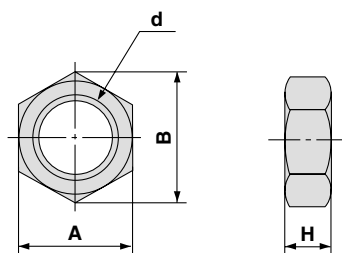

Model	A	B	d	H
SN-015A	19	21.9	M14 x 1	5
ZPNA-M16	22	25.4	M16 x 1.5	6
ZPNA-M18	27	31.2	M18 x 1.5	9
ZPNA-M22	30	34.6	M22 x 1.5	8

Bolts (Hexagonal Socket Head Cap Screw)

Dimensions

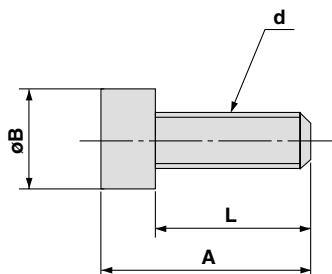


A	B	d	L
11	5.5	M3 x 0.5	8
12	7	M4 x 0.7	8
15	8.5	M5 x 0.8	10

Vacuum Pad: Ball Joint Type

Series *ZPT/ZPR*

Pad Diameter: $\phi 10$, $\phi 13$, $\phi 16$, $\phi 20$, $\phi 25$, $\phi 32$, $\phi 40$, $\phi 50$

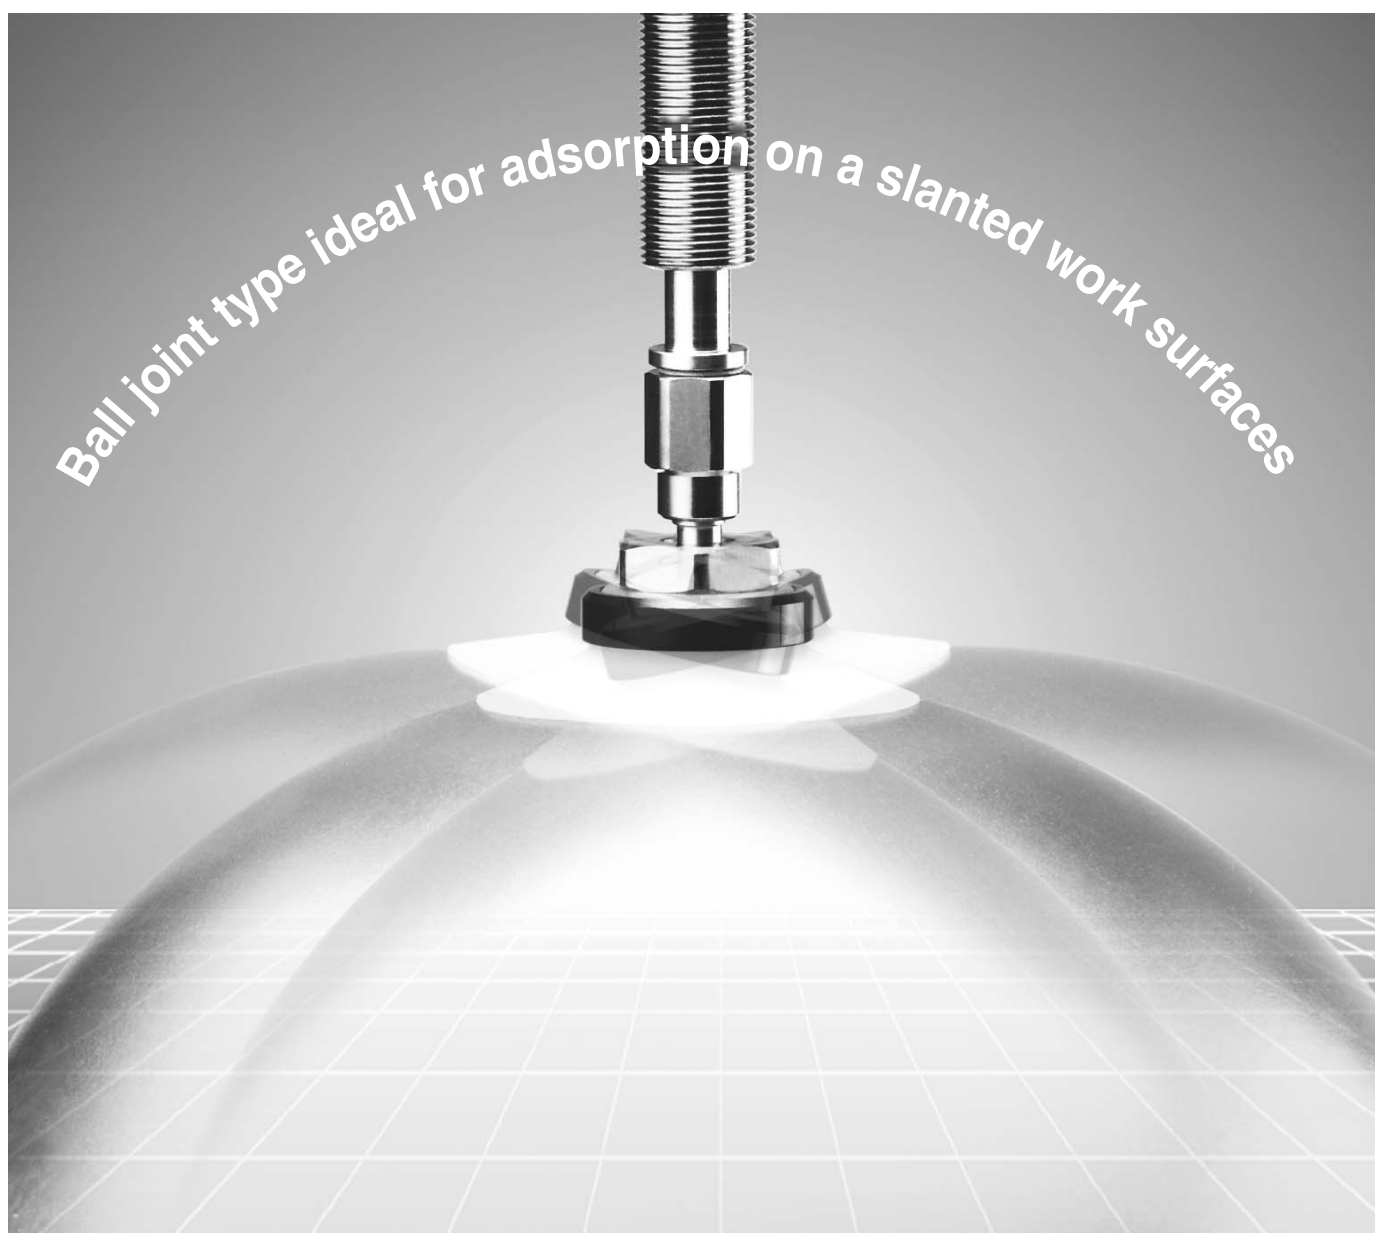

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Series ZPT: Vertical Vacuum Entry Type
Series ZPR: Lateral Vacuum Entry Type One-touch Fitting

Vacuum Pad: Ball Joint Type


Series ZPT/ZPR

Pad diameter: ø10, ø13, ø16, ø20, ø25, ø32, ø40, ø50


Pad material: NBR, Silicon rubber, Urethane rubber,

Fluoro rubber, Conductive NBR, Conductive silicon rubber


Series Variations

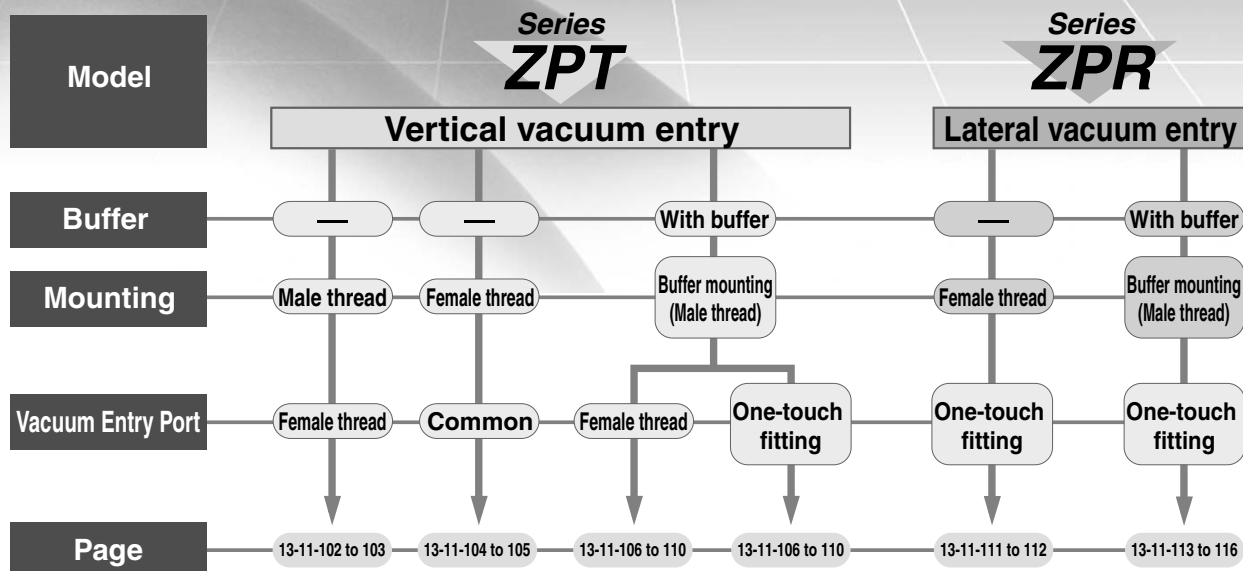

Adsorption is possible even on a slanted surface.

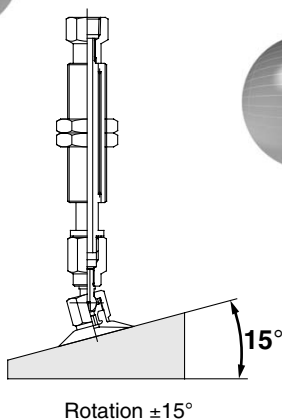

Interchangeable with standard type.

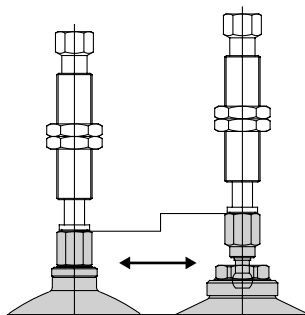

Exchangeable at the adapter

Buffer stroke

Pad dia. Buffer stroke	ø10	ø13	ø16	ø20	ø25	ø32	ø40	ø50
10 mm	●	●	●	●	●	●	●	●
20 mm	●	●	●	●	●	●	●	●
30 mm	●	●	●	●	●	●	●	●
40 mm	●	●	●	—	—	—	—	—
50 mm	●	●	●	●	●	●	●	●

Pad Material and Characteristics

◎: Little or no influence ○: Can be used depending on conditions. X: Not suitable

Characteristics Material	Durometer HS (±5°)	Operating temperature range (°C)	Oil resistance gasoline	Oil resistance benzol	Base resistance	Acid resistance	Weatherability	Ozone resistance	Abrasion resistance	Waterproof	Solvent resistance (Benzene, toluene)
NBR	50°	0 to 120	◎	X	○	○	○	X	◎	○	X
Silicon rubber	40°	-30 to 200	X	X	○	X	◎	◎	X	○	X
Urethane rubber	60°	0 to 60	◎	X	X	X	○	◎	◎	X	X
Fluoro rubber	60°	0 to 250	◎	◎	X	◎	◎	◎	○	◎	◎
Conductive NBR	50°	0 to 100	○	X	○	X	○	X	○	○	X
Conductive silicon rubber	50°	-10 to 200	X	X	○	X	◎	◎	X	○	X

The above table covers only general characteristics of subject rubber materials.

Pad material used by SMC pass the nominal JIS material standards; however, actual performance depends on operating conditions.

⚠ Precautions

Be sure to read before handling. Refer to pages 13-15-3 to 13-15-4 for Safety Instructions and Common Precautions on the products mentioned in this catalog, and refer to page 13-1-5 for Precautions on every series.

Caution on Design

⚠ Warning

1. In case where the workpieces are heavy or dangerous objects, etc., take measures to address a possible loss of adsorption force (installation of drop prevention guide, etc.).

In the case of transportation by vacuum adsorption using vacuum pads, adsorption force is lost when there is a drop in vacuum pressure.

Furthermore, since vacuum pressure can also deteriorate due to wear and cracking of pads, and vacuum leakage from piping, etc., be certain to perform maintenance on vacuum equipment.

Selection

⚠ Caution

1. The pad materials which can be used differ depending upon the operating environment.

An appropriate pad material should be selected.

Furthermore, since vacuum pads are manufactured for use with industrial products, they should not come into direct contact with medicines or food products, etc.

2. Depending upon the weight and shape of the workpieces, the diameter, quantity and shape of pads suitable for use will vary.

Use the pad lifting force table for reference.

Also, the pads to be selected will differ based upon conditions other than the above, such as the condition of the workpiece surface (presence or absence of oil or water), the workpiece material and its gas permeability. Confirmation is necessary by actually performing vacuum adsorption on the subject workpieces.

3. Use a buffer for adsorption on fragile workpieces.

The cushioning performed by the buffer is also necessary when there is variation in the height of workpieces. When it is desired to perform further positioning of pads and workpieces, a detent buffer can be used.

4. The life of the buffer will be reduced if lateral force is applied to the buffer shaft.

Note that sometimes a load is applied to the buffer by a piping tube (pulling or pressing, etc. in a lateral direction).

5. Do not apply an impact or large force to a pad when adsorbing a workpiece.

This will cause deformation, cracking and wear of the pad to be accelerated. The stiffening ribs, etc. should touch lightly, while staying within the pad skirt's deformation range. Positioning should be performed accurately. Especially in the case of small diameter pads.


6. When transporting in an upward direction, factors such as acceleration, wind pressure and impact force must be considered in addition to the workpiece weight.

Use caution particularly when lifting items such as glass plates and circuit boards, because a large force will be applied by wind pressure. When a workpiece which is oriented vertically is transported horizontally, large forces are applied by acceleration when movement is started and stopped. Further, in cases where the pad and workpiece can slip easily, accelerations and decelerations of horizontal movement should be kept low.

7. When transporting flat shaped workpieces that have large surface areas using multiple pads, care must be taken in arranging the pads, giving consideration to balance of the workpieces.

8. Use caution since the workpiece could rotate during transfer.

Use of more than one pad for each workpiece is recommended.

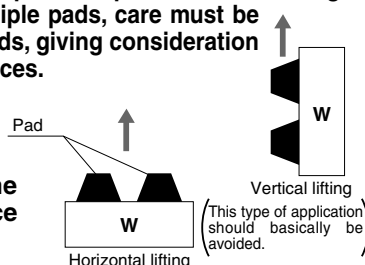


Maintenance

⚠ Caution

1. Perform pad maintenance regularly.

Since pads are essentially rubber, deterioration is unavoidable. The rate of deterioration depends upon factors such as conditions of use, environment and temperature. Regular maintenance should be performed. If any damage, splitting, cracking or abrasion has occurred in a pad which appears to be harmful, replace it immediately.

Also, take care not to damage the outside of the pad.

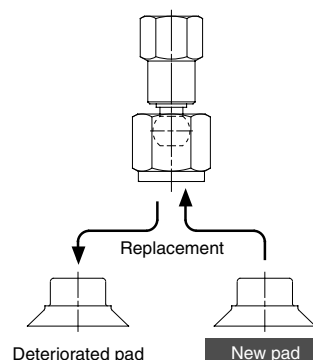


How to Assemble/Disassemble

⚠ Caution

Pad diameter: $\phi 10$ to $\phi 32$

1. Insert a hexagon wrench from the bottom of the pad, loosen the screw and remove the old pad from the adapter.

2. Place a new pad on the adapter, and after confirming that the O-ring is in place, retighten the screw with the hexagon wrench.

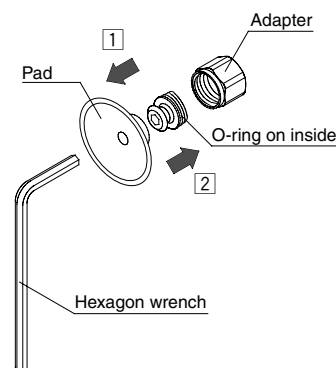


Pad diameter: $\phi 40$, $\phi 50$

1. Pull the lock ring upward, and after lifting it to the adapter, remove the old pad by pulling it downward.

2. When holding the lock ring in the raised position, place a new pad onto the adapter.

3. Confirm that the pad is securely in place, and then return the lock ring to its original position.

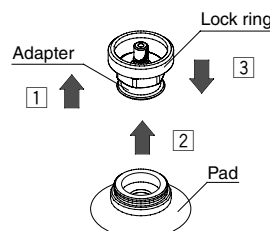

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ


Misc.

Series ZPT/ZPR

Component Parts


Series ZPT

Pad Diameter: $\phi 10$ to $\phi 32$

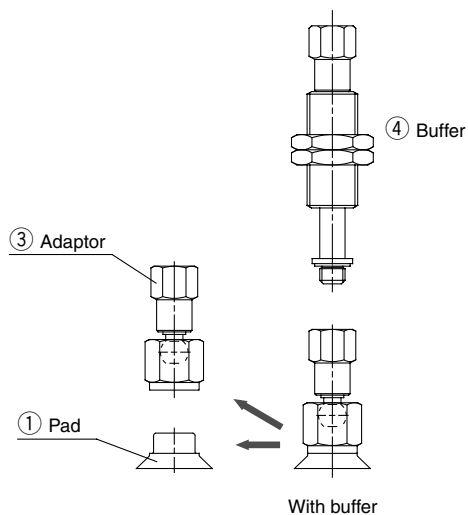


Series ZPR


Pad Diameter: $\phi 10$ to $\phi 32$

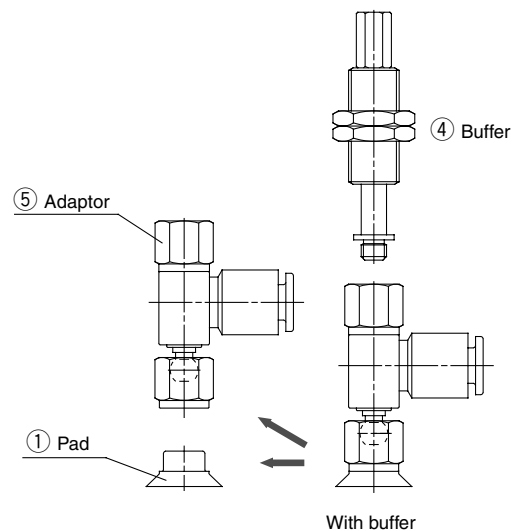

Pad Diameter: $\phi 40$, $\phi 50$

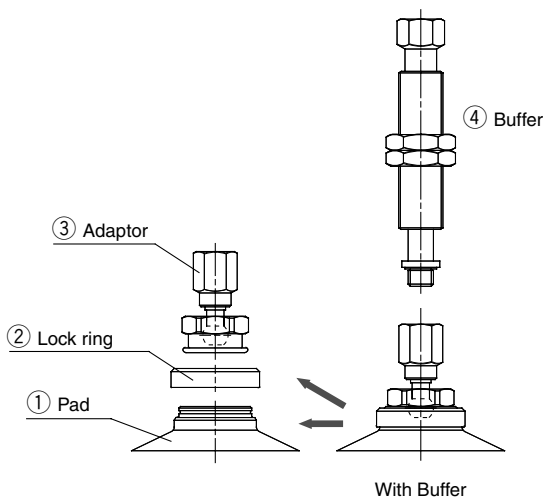

Pad Diameter: $\phi 40$, $\phi 50$

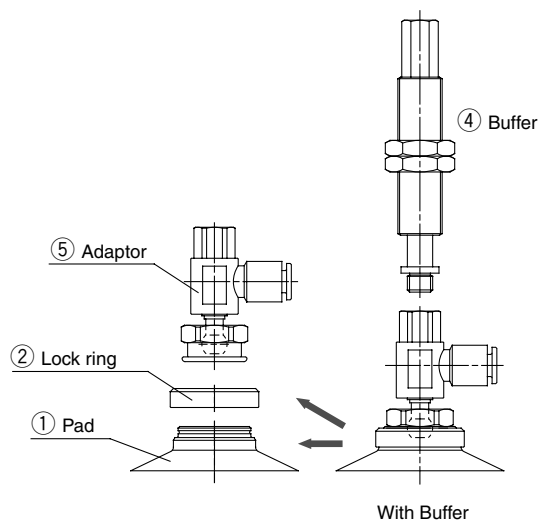

Component Parts

No.	Description	Material	Note
①	Pad	NBR, Silicon rubber, Urethane rubber, Fluoro rubber, Conductive NBR, Conductive silicon rubber	
②	Lock ring	Aluminum	
③	Adapter	Brass, Stainless steel	Electroless nickel plated
④	Buffer	Brass	Electroless nickel plated
⑤	Adapter	Brass, Stainless steel, PBT	Electroless nickel plated

Series ZPT/ZPR Replacement Parts

Pad, Individual Unit

How to Order

ZP 10 F GN

Pad diameter
(mm)

10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN*	Conductive NBR
GS*	Conductive silicon rubber

* ø20 and larger are manufactured upon a receipt of order.


Pad type

F	Ball joint type
---	-----------------


Note) Pads are exclusively ball joint type and are not interchangeable with other pads.

Dimensions

Ball joint type: ø10 to 32

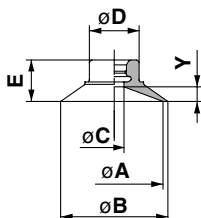

Ball joint type: ø40, ø50

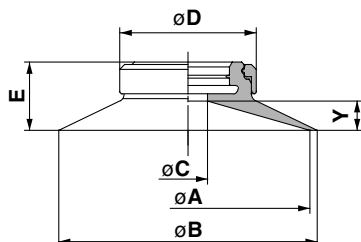

(mm)

Model	A	B	C	D	E	Y
ZP10F□□	10	12	3	8.2	6.5	1.5
ZP13F□□	13	15			7	2
ZP16F□□	16	18			7	2
ZP20F□□	20	22	4	10.2	8.5	3
ZP25F□□	25	28			8.5	
ZP32F□□	32	35			9	
ZP40F□□	40	43	10	28	13	5
ZP50F□□	50	53	8		14	6

Lock Ring, Individual Unit


How to Order

ZPL F

For ball joint type
(ø40, ø50)

Mounting Nut

Dimensions

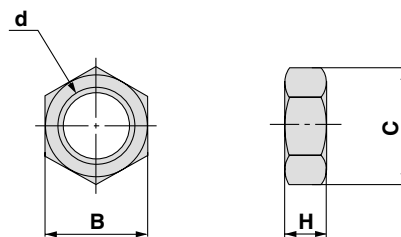

(mm)

Model	d	H	B	C
SNJ-015A	M10 x 1	3	14	16.2
SN-015A	M14 x 1	5	19	21.9
SNJ-010A	M8 x 1	3	12	13.9

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Vacuum Pad: Ball Joint Type

Vertical Vacuum Entry

Without Buffer/Male Thread

Series ZPT



How to Order

ZPT **25** **F** **GN** — **B5** — **A8**

Pad diameter
(mm)

10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Pad type

F	Ball joint type
----------	-----------------

• Mounting thread diameter/
Male thread

Symbol	Thread	Pad dia. (mm)
A8	M8 x 1	ø10 to ø16
A10	M10 x 1	ø20 to ø32
A14	M14 x 1	ø40, ø50

• Vacuum entry port

B5	M5 x 0.8
-----------	----------

• Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN *	Conductive NBR
GS *	Conductive silicon rubber

* ø20 and larger are manufactured upon a receipt of order.

Note) Pads are exclusively ball joint type and are not interchangeable with other pads.

Specifications

Vacuum entry direction		Vertical	
Connection		Mounting	Vacuum entry port
		Male thread	Female thread
Pad diameter (mm)	ø10 to ø16	M8 x 1	M5 x 0.8
	ø20 to ø32	M10 x 1	
	ø40, ø50	M14 x 1	
Ball joint rotation		±15°	

Weight

(g)

Pad dia. (mm)	Mounting (Male thread)	Vacuum entry (Female thread)
		M5 x 0.8
ø10 to ø16	M8 x 1	20
ø20 to ø32	M10 x 1	24
ø40, ø50	M14 x 1	55


Pad Type

Pad form	Ball joint type					
Pad diameter (mm)	ø10, ø13, ø16, ø20, ø25, ø32, ø40, ø50					
Material	NBR	Silicon rubber	Urethane rubber	Fluoro rubber	Conductive NBR	Conductive silicon rubber
Color	Black	White	Brown	Black with green mark	Black with 1 white mark	Black with 2 white mark
Durometer	50°	40°	60°	60°	50°	50°


Vacuum Pad: Ball Joint Type

Vertical Vacuum Entry without Buffer/Male Thread **Series ZPT**

ZPT¹⁰₁₃¹⁶F□□-B5-A8 (Without buffer/Male thread)

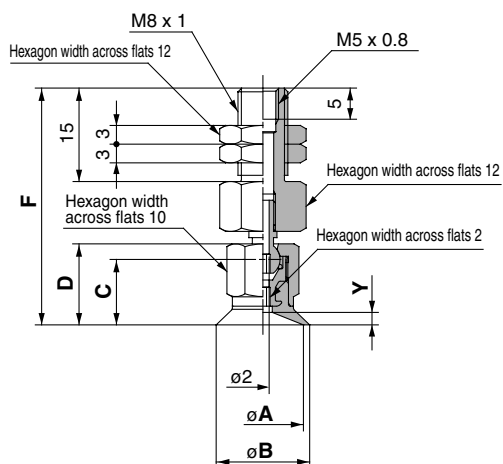

ZPT²⁰₂₅³²F□□-B5-A10 (Without buffer/Male thread)

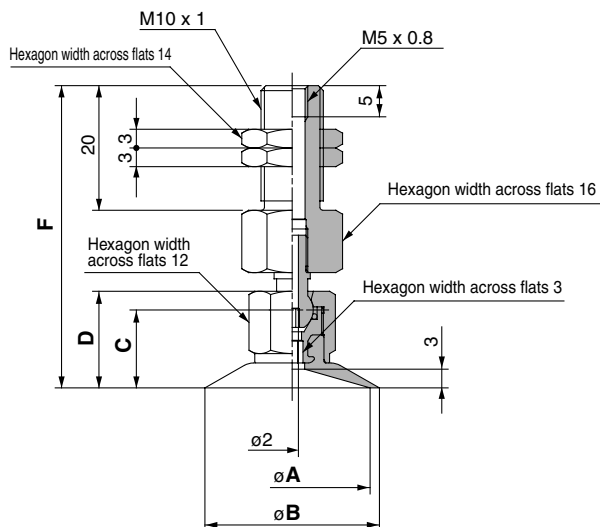

Dimensions

(mm)


Model	A	B	C	D	F	Y
ZPT10F□□-B5-A8	10	12	10	12.5	37.5	1.5
ZPT13F□□-B5-A8	13	15	10.5	13	38	1.5
ZPT16F□□-B5-A8	16	18	10.5	13	38	2

Dimensions

(mm)

Model	A	B	C	D	F
ZPT20F□□-B5-A10	20	22	12.5	15.5	48.5
ZPT25F□□-B5-A10	25	28	12.5	15.5	48.5
ZPT32F□□-B5-A10	32	35	13	16	49

ZPT⁴⁰₅₀F□□-B5-A14 (Without buffer/Male thread)

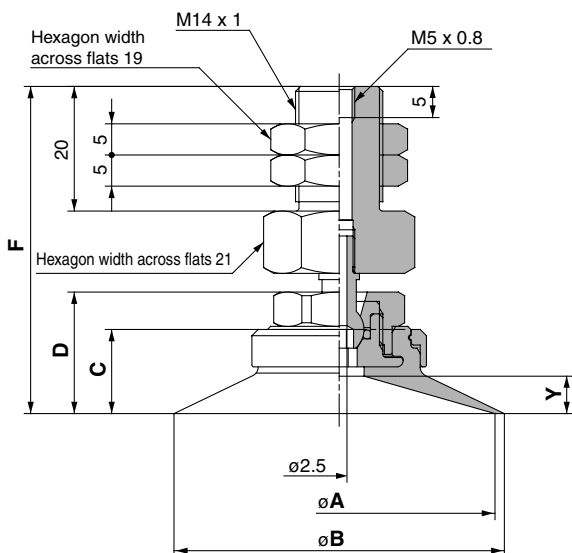

Dimensions

(mm)

Model	A	B	C	D	F	Y
ZPT40F□□-B5-A14	40	43	12.5	18.5	51.5	5
ZPT50F□□-B5-A14	50	53	13.5	19.5	52.5	6

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Vacuum Pad: Ball Joint Type

Vertical Vacuum Entry

Without Buffer/Female Thread

Series *ZPT*



How to Order

ZPT 20 F GS B01

Pad diameter (mm)

10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Pad type

F	Ball joint type
----------	-----------------

Vacuum entry/
Mounting thread diameter

Connection	Symbol	Thread dia.	Pad dia. (mm)		
			ø10 to ø16	ø20 to ø32	ø40, ø50
Female thread	B5	M5 x 0.8	●	●	—
	B8	M8 x 1.25	—	●	●
	B01	Rc 1/8	—	●	●

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN*	Conductive NBR
GS*	Conductive silicon rubber

* ø20 and larger are manufactured upon a receipt of order.

Note) Pads are exclusively ball joint type and are not interchangeable with other pads.

Specifications

Vacuum entry direction		Vertical
Connection		Connection/Vacuum entry
		Female thread
Pad dia. (mm)	ø10 to ø16	M5 x 0.8
		M5 x 0.8
	ø20 to ø32	M8 x 1.25
		Rc 1/8
	ø40, ø50	M8 x 1.25
		Rc 1/8
Ball joint rotation		±15°

Weight

(g)

Pad dia. (mm)	Vacuum entry (Female thread)		
	M5 x 0.8	M8 x 1.25	Rc 1/8
ø10 to ø16	10	—	—
ø20 to ø32	14	17	19
ø40, ø50	—	47	46

Pad Type


Pad form	Ball joint type					
Pad diameter (mm)	ø10, ø13, ø16, ø20, ø25, ø32, ø40, ø50					
Material	NBR	Silicon rubber	Urethane rubber	Fluoro rubber	Conductive NBR	Conductive silicon rubber
Color	Black	White	Brown	Black with green mark	Black with 1 white mark	Black with 2 white mark
Durometer	50°	40°	60°	60°	50°	50°

Vacuum Pad: Ball Joint Type


Vertical Vacuum Entry without Buffer/Female Thread

Series ZPT

ZPT¹⁰₁₃¹⁶F□□-B5 (Without buffer/Female thread)

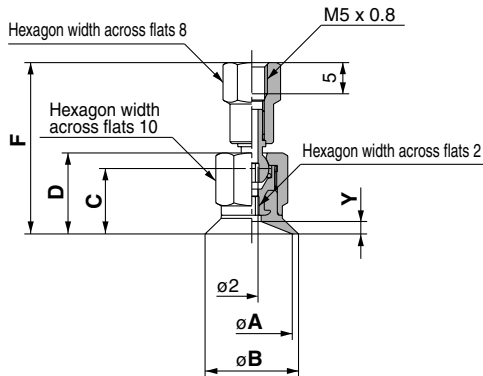

ZPT²⁰₂₅³²F□□-B⁵₈⁰¹ (Without buffer/Female thread)

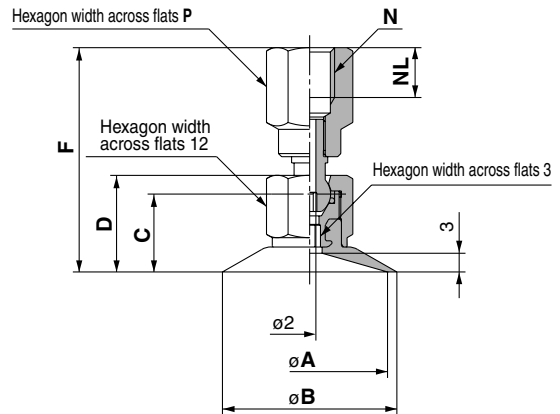


Dimensions

(mm)

Model	A	B	C	D	F	Y
ZPT10F□□-B5	10	12	10	12.5	27	1.5
ZPT13F□□-B5	13	15	10.5	13	27.5	
ZPT16F□□-B5	16	18				2

ZPT⁴⁰₅₀F□□-B⁸₀₁ (Without buffer/Female thread)

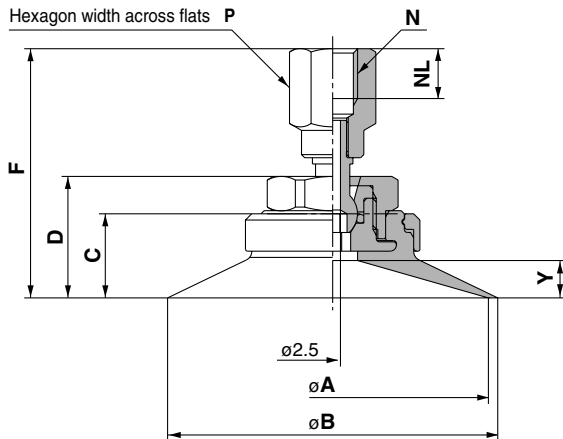

Dimensions

(mm)

Model	A	B	C	D	F	N	NL	P	Y
ZPT40F□□-B8	40	43	12.5	18.5	39	M8 x 1.25	8	12	5
ZPT40F□□-B01						Rc 1/8	6.2	14	
ZPT50F□□-B8	50	53	13.5	19.5	40	M8 x 1.25	8	12	6
ZPT50F□□-B01						Rc 1/8	6.2	14	

Dimensions

(mm)

Model	A	B	C	D	F	N	NL	P
ZPT20F□□-B5	20	22	12.5	15.5	32	M5 x 0.8	5	9
ZPT20F□□-B8					36	M8 x 1.25	8	12
ZPT20F□□-B01						Rc 1/8	6.2	14
ZPT25F□□-B5	25	28			32	M5 x 0.8	5	9
ZPT25F□□-B8					36	M8 x 1.25	8	12
ZPT25F□□-B01						Rc 1/8	6.2	14
ZPT32F□□-B5	32	35	13	16	32.5	M5 x 0.8	5	9
ZPT32F□□-B8					36.5	M8 x 1.25	8	12
ZPT32F□□-B01						Rc 1/8	6.2	14

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Vacuum Pad: Ball Joint Type

Vertical Vacuum Entry

With Buffer

Series ZPT

How to Order

ZPT 10 F GN J 20 04 A10

Pad diameter
(mm)

10	ø10
13	ø13
16	ø16
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50

Pad type

F	Ball joint type
---	-----------------

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN *	Conductive NBR
GS *	Conductive silicon rubber

* ø20 and larger are manufactured upon a receipt of order.

Buffer type

J	Rotating
K	Non-rotating

• Mounting thread diameter/Male thread
(Refer to "Table (1)" for applications.)

• Vacuum entry port
(Refer to "Table (1)" for applications.)

Table (1) Vacuum Entry/Mounting Thread Diameter

Pad dia. (mm)			Mounting thread diameter (Male thread)	
			ø10 to ø16	ø20 to ø50
Connection	Thread dia./Port size	Symbol	M10 x 1	M14 x 1
			A10	A14
Vacuum entry	Female thread	M5 x 0.8	B5	—
		Rc 1/8	B01	—
	One-touch fitting	ø4 tube	04	—
		ø6 tube	06	—
	ø8 tube	08	—	—

• Buffer stroke

Symbol	Stroke	Pad dia. (mm)	
		ø10 to ø16	ø20 to ø50
10	10 mm	●	●
20	20 mm	●	●
30	30 mm	●	●
40	40 mm	●	—
50	50 mm	●	●

Buffer Spring Reactive Force

Pad dia. (mm)	0 stroke	Stroke end
ø10 to ø16	1.0 N	3.0 N
ø20 to ø50	2.0 N	5.0 N

Note) Pads are exclusively ball joint type and are not interchangeable with other pads.

Pad Type

Pad form	Ball joint type					
Pad dia. (mm)	ø10, ø13, ø16, ø20, ø25, ø32, ø40, ø50					
Material	NBR	Silicon rubber	Urethane rubber	Fluoro rubber	Conductive NBR	Conductive silicon rubber
Color	Black	White	Brown	Black with green mark	Black with 1 white mark	Black with 2 white mark
Durometer	50°	40°	60°	60°	50°	50°

Vacuum Pad: Ball Joint Type Vertical Vacuum Entry with Buffer **Series ZPT**



Specifications

Vacuum entry direction		Vertical		
Connection		Mounting	Vacuum entry port	
		Buffer male thread	Female thread	One-touch fitting
Pad dia. (mm)	ø10 to ø16	M10 x 1	M5 x 0.8	ø4 tube
				ø6 tube
	ø20 to ø50	M14 x 1	Rc 1/8	ø6 tube
				ø8 tube
Ball joint rotation		±15°		

Buffer Type

Pad dia. (mm)	ø10 to ø16		ø20 to ø50	
Mounting	M10 x 1		M14 x 1	
Stroke (mm)	10, 20, 30, 40, 50		10, 20, 30, 50	
Spring reactive force	0 stroke	1.0 N	0 stroke	2.0 N
	Stroke end	3.0 N	Stroke end	5.0 N
Non-rotating specification	With no non-rotating (J), With non-rotating (K)			

Weight

Pad dia. (mm)	Vacuum entry port				
	Female thread		One-touch fitting		
	M5 x 0.8	Rc 1/8	ø4 tube	ø6 tube	ø8 tube
ø10 to ø16	30	—	32	33	—
ø20 to ø32	—	128	—	133	139
ø40, ø50	—	158	—	159	167

Weight by Stroke

Pad dia. (mm)	Stroke (mm)			
	20	30	40	50
ø10 to ø16	+10.5	+12.5	+22.5	+24
ø20 to ø50	+37.5	+40	—	+66.5

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

Series ZPT

ZPT¹⁰₁₃¹⁶F□□J¹⁰K10-B5-A10 (With buffer/Female thread)

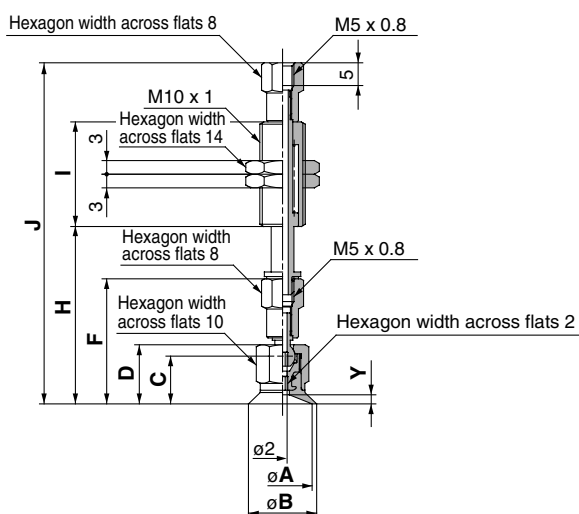

Dimensions: 10 mm Stroke

(mm)


Model	A	B	C	D	F	H	I	J	Y
ZPT10F□□J10-B5-A10	10	12	10	12.5	27	38.5		74.5	1.5
ZPT13F□□J10-B5-A10	13	15	10.5	13	27.5	39	23	75	2
ZPT16F□□J10-B5-A10	16	18							

Additional Dimensions by Stroke


(mm)

Stroke	H	I	J
20	+10		+38
30	+20	+28	+48
40	+30		+84
50	+40	+54	+94

ZPT²⁰₂₅³²F□□J¹⁰K10-B01-A14 (With buffer/Female thread)

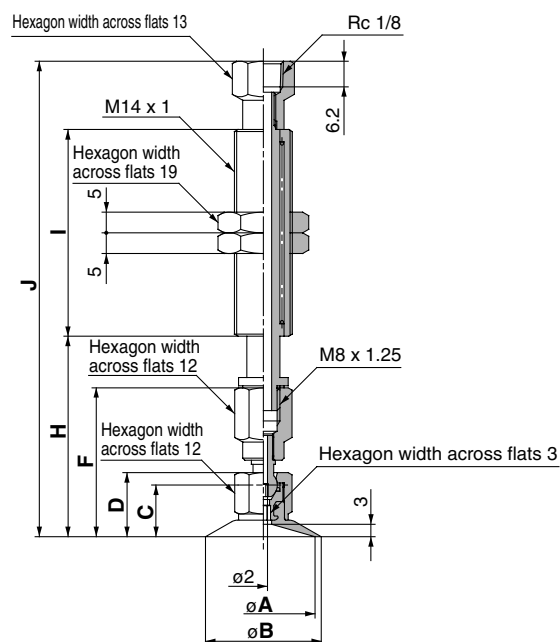

With a stroke of 10 mm

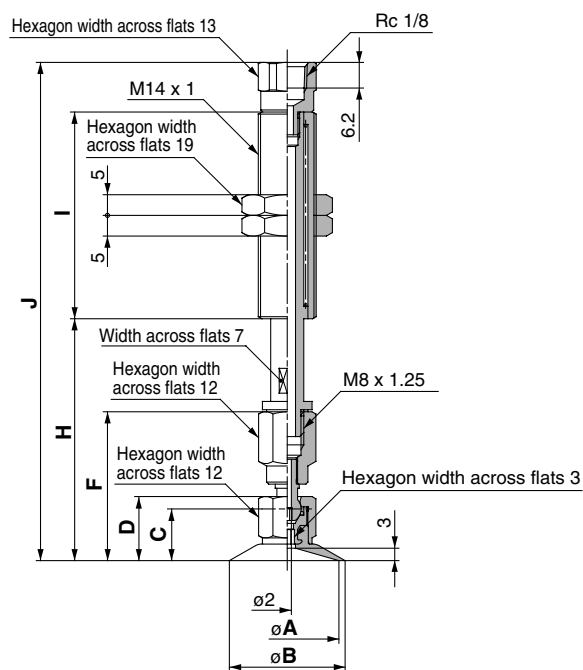

Stroke 20 to 50 mm

Dimensions: 10 mm Stroke

(mm)

Model	A	B	C	D	F	H	I	J
ZPT20F□□J10-B01-A14	20	22	12.5	15.5	36	48.5		115
ZPT25F□□J10-B01-A14	25	28					50	
ZPT32F□□J10-B01-A14	32	35	13	16	36.5	49		115.5

Additional Dimensions by Stroke


(mm)

Stroke	H	I	J
20	+10		+5.5
30	+20	±0	+15.5
50	+40	+25	+60.5


***Vacuum Pad: Ball Joint Type
Vertical Vacuum Entry with Buffer***

ZPT⁴⁰₅₀F□□_K10-B01-A14 (With buffer/Female thread)


ZPT¹⁰₁₆¹³F□□^JK10-0□-A10 (With buffer/One-touch fitting)

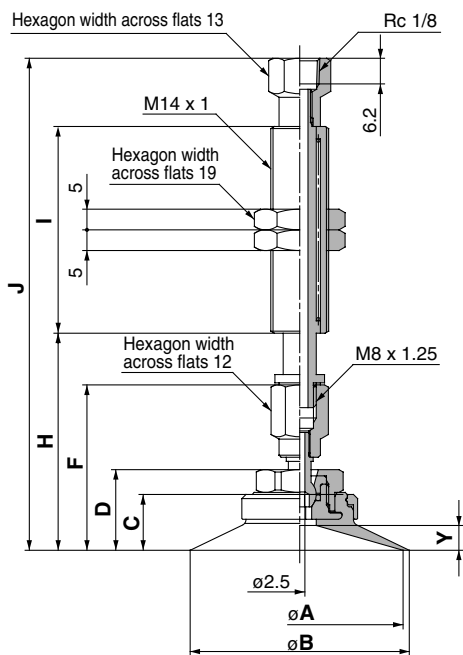

With a stroke of 10 mm

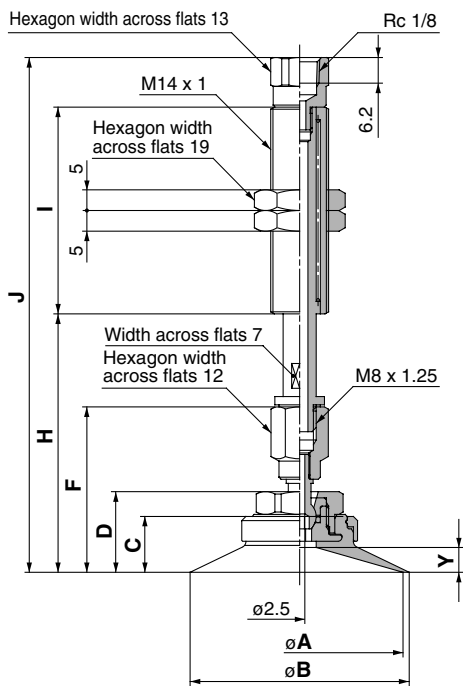

Stroke 20 to 50 mm

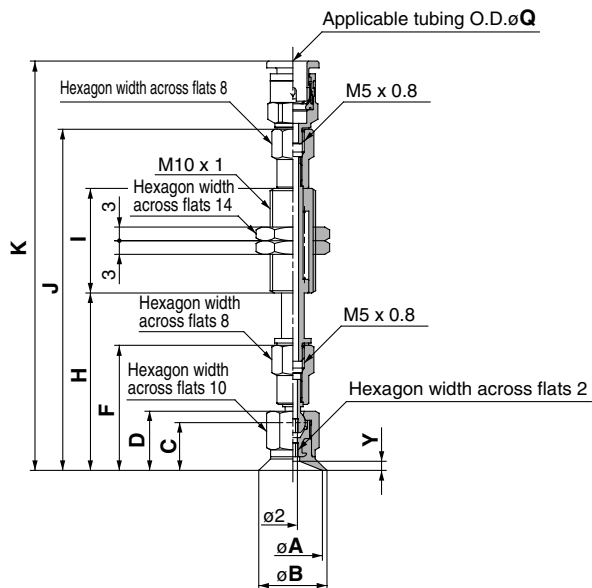

Dimensions: 10 mm Stroke

(mm)

Model	A	B	C	D	F	H	I	J	Q:4 K	Q:6 K	Y
ZPT10F□□□10-0□-A10	10	12	10	12.5	27	38.5	23	74.5	88.5	89.5	1.5
ZPT13F□□□10-0□-A10	13	15	10.5	13	27.5	39		75	89	90	2
ZPT16F□□□10-0□-A10	16	18									

Additional Dimensions by Stroke

(mm)

Stroke	H	I	J	K
20	+10	+28	+38	
30	+20		+48	
40	+30	+54	+84	
50	+40		+94	

Dimensions: 10 mm Stroke

(mm)

Model	A	B	C	D	F	H	I	J	Y
ZPT40F□□□10-B01-A14	40	43	12.5	18.5	39	51.5	50	118	5
ZPT50F□□□10-B01-A14	50	53	13.5	19.5	40	52.5		119	6

Additional Dimensions by Stroke (m)

(mm)

Stroke	H	I	J
20	+10	±0	+5.5
30	+20		+15.5
50	+40	+25	+60.5

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.


Series ZPT

ZPT²⁰₃₂F□□J10-0□-A14 (With buffer/One-touch fitting)

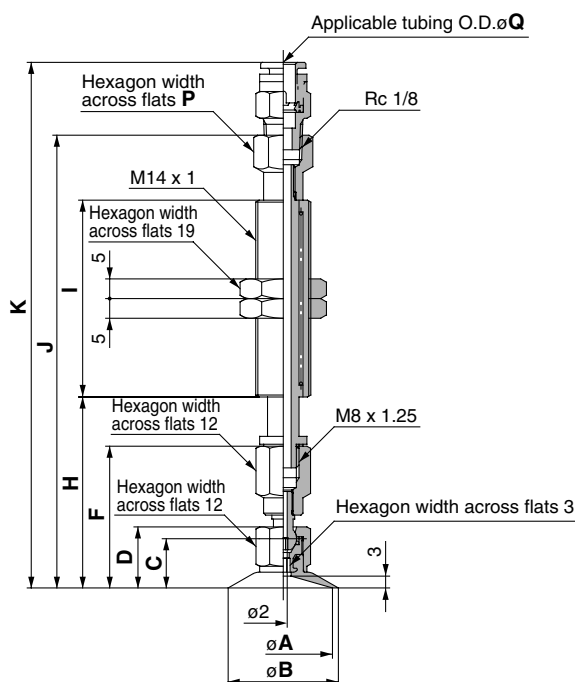


With a stroke of 10 mm


ZPT⁴⁰₅₀F□□J10-0□-A14 (With buffer/One-touch fitting)

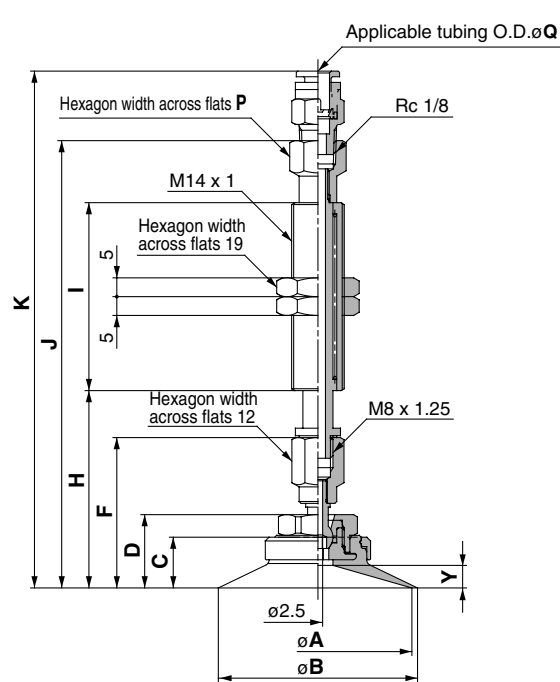

With a stroke of 10 mm

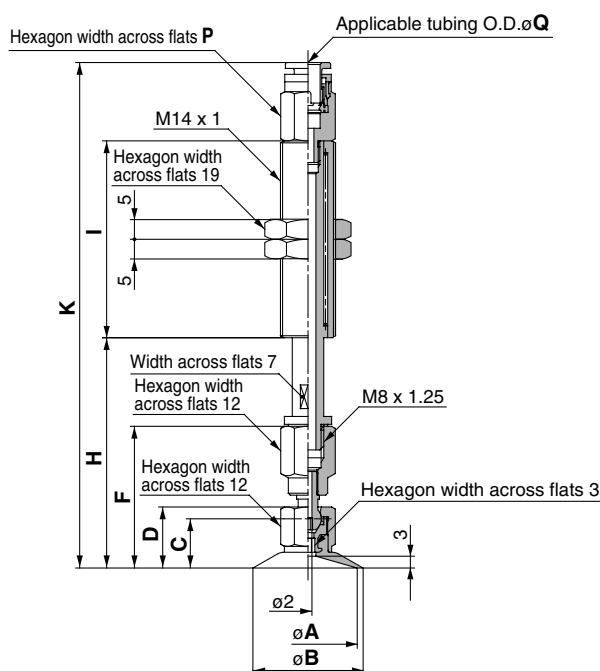

Stroke 20 to 50 mm

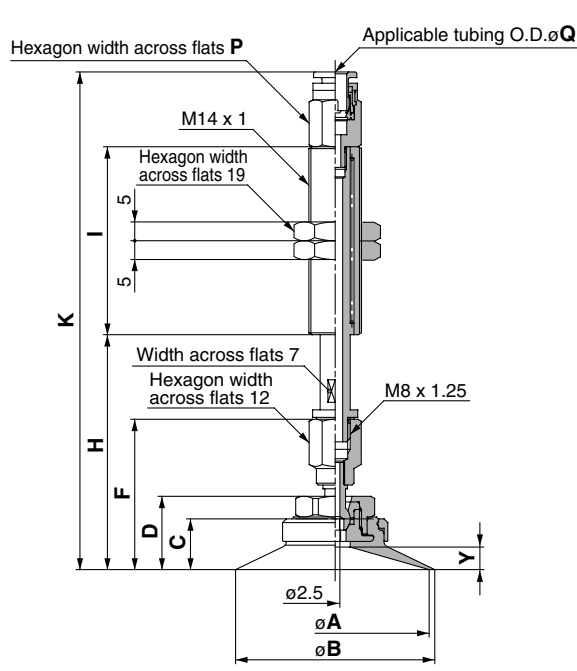

Stroke 20 to 50 mm

Dimensions: 10 mm Stroke

(mm)

Model	A	B	C	D	F	H	I	J	Q: 6		Q: 8	
									K	P	K	P
ZPT20F□□J10-0□-A14	20	22	12.5	15.5	36	48.5	50	115	133.5	13	137	13
ZPT25F□□J10-0□-A14	25	28										
ZPT32F□□J10-0□-A14	32	35	13	16	36.5	49		115.5	134		135.5	

Additional Dimensions by Stroke

(mm)

Stroke	H	I	Q: 6		Q: 8	
			K	P	K	P
20	+10		-5.1		-3.6	
30	+20	±0	+4.9	-1	+6.4	+1
50	+40	+25	+49.9		+51.4	

Dimensions: 10 mm Stroke

(mm)

Model	A	B	C	D	F	H	I	J	Q: 6		Q: 8		Y
									K	P	K	P	
ZPT40F□□J10-0□-A14	40	43	12.5	18.5	39	51.5	50	118	136.5	13	140	13	5
ZPT50F□□J10-0□-A14	50	53	13.5	19.5	40	52.5		119	137.5		141		6

Additional Dimensions by Stroke

(mm)

Stroke	H	I	Q: 6		Q: 8	
			K	P	K	P
20	+10		-5.1		-3.6	
30	+20	±0	+4.9	-1	+6.4	+1
50	+40	+25	+9.9		+51.4	

Vacuum Pad

New

More shapes and sizes of pads. Applicable for various types of work pieces


Compact/Short/Nozzle $\varnothing 0.8$ to $\varnothing 15$ P. 1 to 9

Compact, Space-saving



Mark-free $\varnothing 4$ to $\varnothing 125$ P. 25 to 29

For use where adsorption marks must not be left on work pieces.

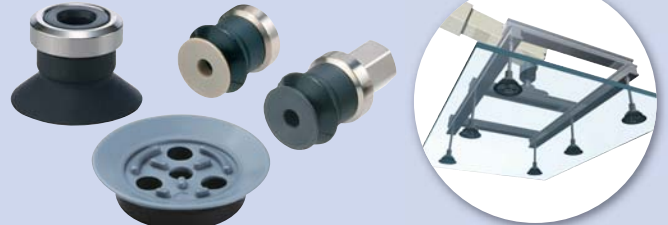


Thin Flat/Flat $\varnothing 5$ to $\varnothing 30$ P. 10 to 12

For sheets or vinyl



Sponge $\varnothing 4$ to $\varnothing 15$ P. 30 to 32

For work pieces with bumps

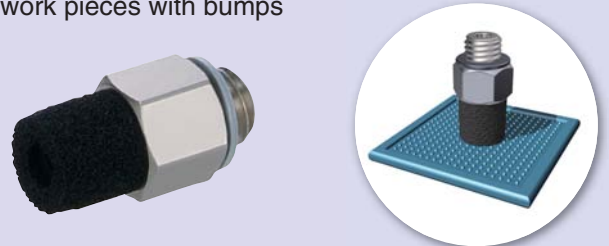

Bellows $\varnothing 2$ to $\varnothing 46$ P. 13 to 16

For spherical work pieces or work pieces with inclined surface




Heavy-duty $\varnothing 32$ to $\varnothing 340$ P. 33 to 58

For heavy or large work pieces




Oval 3.5×7 to 8×30 P. 17 to 23

For rectangular work pieces

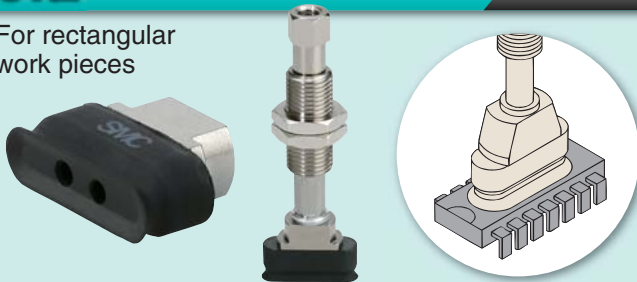


Special Configuration P. 59, 60

For stage setting of disks (CD, DVD) or glass substrates

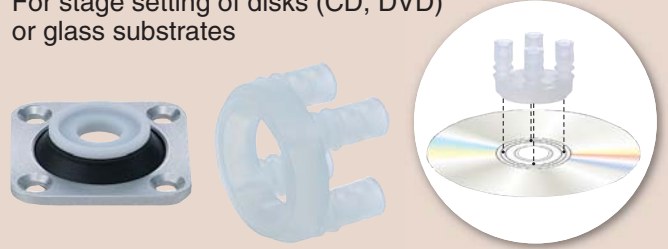

Ball Spline Buffer $\varnothing 2$ to $\varnothing 8$ P. 24

Ball spline guide is used to the buffer.

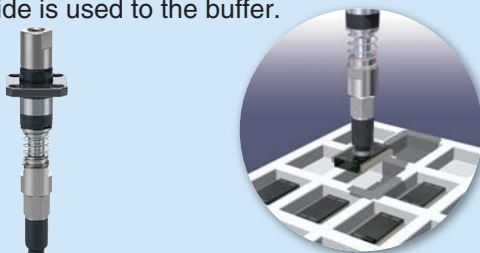

Vacuum Saving Valve P. 61 to 64

Can restrict the reduction of vacuum pressure even when there is no work piece.






























Series ZP2

Vacuum Pad Series ZP2/ZP

Pad Diameter List

●: Series ZP2 ○: Series ZP

Pad type	Symbol	Page of ZP2																
			0.8	1.1	2	3	3.5	4	5	6	7	8	9	10	11	13	14	
Flat	 U	P. 1	—	—	○	●	—	○ ^{Note)}	—	○	—	○	—	○	—	○	—	
	 MU	P. 2	—	—	●	—	●	●	●	●	—	●	—	●	—	—	—	
	 EU	P. 5	—	—	●	—	—	●	—	●	—	●	—	—	—	—	—	
	 AU	P. 8	—	—	●	●	—	●	—	●	—	●	—	—	—	—	—	
Flat with rib	 C	P. 1	—	—	—	—	—	—	—	●	●	●	—	○	—	○	—	
Thin flat (pad)	 UT	P. 1 P. 10	—	—	—	—	—	—	●	●	—	—	—	○	●	○	●	
Thin flat with rib	 CT	—	—	—	—	—	—	—	—	—	—	—	—	○	—	○	—	
Bellows (pad)	 B	P. 1	—	—	—	—	—	—	—	○ ^{Note)}	—	○ ^{Note)}	—	○	—	○	—	
	 J	P. 13	—	—	—	—	—	—	—	●	—	—	●	●	—	—	●	
	 MB	P. 14	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	
	 ZJ	P. 16	—	—	●	—	—	●	●	●	—	—	—	—	—	—	—	
Deep	 D	—	—	—	—	—	—	—	—	—	—	—	—	○	—	—	—	
Nozzle pad	 AN	P. 9	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	
Flat pad	 MT	P. 11	—	—	—	—	—	—	—	—	—	—	—	●	—	—	—	
Oval pad	 W	P. 17	—	—	—	—	3.5 x 7	4 x 10 4 x 20 4 x 30	5 x 10 5 x 20 5 x 30	6 x 10 6 x 20 6 x 30	—	8 x 20 8 x 30	—	—	—	—	—	
	 U	—	—	—	2 x 4	—	3.5 x 7	4 x 10	—	—	—	—	—	—	—	—	—	
Heavy-duty pad	 H	P. 33	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	 HT	P. 33	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	 HB	P. 35	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	 HW	P. 36	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
Mark-free pad	 U	P. 27	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	
	 H	P. 28	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
Sponge pad	 S	P. 30	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	
Resin attachment	 K	P. 29	—	—	—	—	—	—	—	●	—	●	—	●	—	●	—	
Pad with ball spline buffer	 U	P. 24	—	—	●	—	—	●	—	●	—	●	—	—	—	—	—	
Heavy-duty ball joint pad	 H	P. 37	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	 HB	P. 43	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	

* Cyclone pad (Non-contact pad) **Made to Order**P. 25

Note) The ZP2 series is blast type.

Products other than above

Vacuum pad for transferring disks



.....P. 59

Vacuum pad for fixing panel



.....P. 60

Vacuum saving valve



.....P. 61

Pad Diameter List

Best Pneumatics





*○: Refer to SMC website or pages 1117 to 1235 in Best Pneumatics No. 4 for details of the ZP series.

SMC vacuum pad

Search












<http://www.smcworld.com>




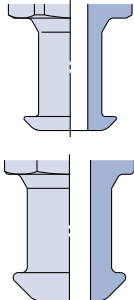




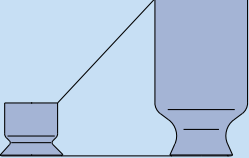

Pad diameter																			Symbol	Page of ZP2	Catalog of ZP	
	15	16	18	20	25	30	32	40	46	50	63	80	100	125	150	250	300	340				
	—	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	—	U	P. 1	
	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	MU	P. 2	—
	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	EU	P. 5	—
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AU	P. 8	—
	—	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	—	C	P. 1	
	—	○	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	UT	P. 1 P. 10	
	—	○	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	CT	—	
	—	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	—	B	P. 1	
	●	●	—	—	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	J	P. 13	—
	●	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	MB	P. 14	
	—	—	—	—	—	—	—	●	●	—	—	—	—	—	—	—	—	—	—	ZJ	P. 16	—
	—	○	—	—	○	—	—	○	—	—	—	—	—	—	—	—	—	—	—	D	—	
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AN	P. 9	—
	●	—	—	●	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	MT	P. 11	
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	W	P. 17	
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U	—	
	—	—	—	—	—	—	●	○	—	○	○	○	○	○	—	—	●	●	H	P. 33		
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	●	●	—	—	HT	P. 33		
	—	—	—	—	—	—	●	○	—	○	○	○	○	○	●	—	—	—	—	HB	P. 35	—
	—	—	—	—	—	30 x 50 ●	—	—	—	—	—	—	—	—	—	—	—	—	—	HW	P. 36	
	—	●	—	—	●	—	●	●	—	●	—	—	—	—	—	—	—	—	—	U	P. 27	
	—	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	—	H	P. 28	
	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	S	P. 30	
	—	●	—	●	●	—	●	—	—	—	—	—	—	—	—	—	—	—	—	K	P. 29	
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U	P. 24	
	—	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	—	H	P. 37	
	—	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	—	HB	P. 43	

Series ZP2


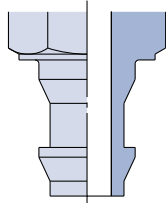

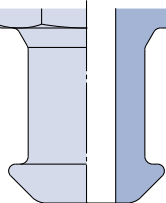

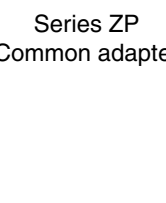




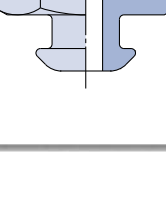

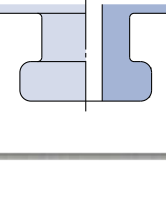

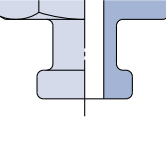
Series Variations









Variations	Pad			Adapter type	Page
	Symbol	Type	Diameter		
Compact Pad ■ Flat For adsorption of general work pieces For adsorption of work pieces with flat and not deformed surface ■ Flat with rib For a workpiece which is likely to deform or for releasing a workpiece certainly ■ Thin flat For a workpiece which is likely to deform ■ Bellows For adsorption of work pieces with inclined surface	 Single unit	U	Flat	ø3, ø4	P. 1
	 Single unit	C	Flat with rib	ø6, ø7, ø8	P. 1
	 Single unit	UT	Thin flat	ø5, ø6	P. 1
	 Single unit	B	Bellows	ø6, ø8	P. 1
Short-type Pad ■ Space-saving in the height direction 	 Single unit With adapter	MU	Flat	ø2, ø3.5, ø4 ø5, ø6, ø8 ø10, ø15	P. 2
	 Single unit With adapter	EU		ø2, ø4, ø6 ø8, ø15	P. 5
	 Single unit	AU		ø2, ø3, ø4 ø6, ø8	P. 8
Nozzle Pad ■ For adsorption of small components such as IC chips 	 Single unit With adapter	AN	Nozzle	ø0.8, ø1.1	P. 9
Thin Flat Pad ■ For adsorption of soft work pieces such as thin sheets or vinyl. Wrinkling or deformation during adsorption is reduced.	 Single unit	UT	Thin flat (Skirt)	ø5, ø6, ø11 ø14, ø18 ø20	P. 10

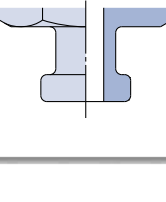Variations	Pad			Adapter type	Page
	Symbol	Type	Diameter		
Flat Pad ■ For adsorption of flexible sheets or film. Deformation of the flat surface during adsorption is reduced.	 Single unit With adapter	MT	Thin flat (With groove)	ø10, ø15 ø20, ø25 ø30	 P. 11
Bellows Pad ■ For use where there is no space for the buffer (spring type). For adsorption of work pieces with inclined surface	 Single unit	J	Bellows (Multistage type)	ø6, ø9, ø10 ø14, ø15 ø16, ø25 ø30	 Series ZP Common adapter P. 13
	 Single unit With adapter	MB	Bellows	ø4, ø6, ø8 ø10, ø15 ø20	 P. 14
	 Single unit	ZJ		ø2, ø4, ø5 ø6, ø40, ø46	 P. 16

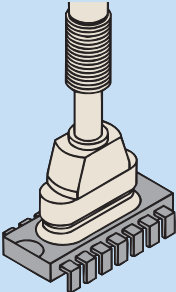Series ZP2













Series Variations








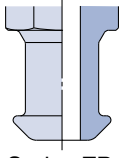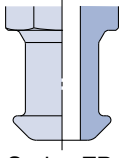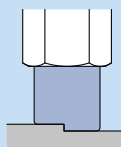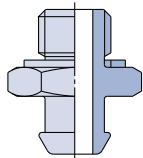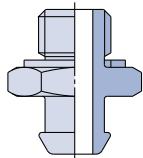

Variations	Pad			Adapter type	Page	
	Symbol	Type	Diameter			
Blast-type Pad ■ Blast treatment to create finely uneven surface for adsorption. Work pieces can be removed easily.	 Single unit	U	Flat	ø4		P. 1
	 Single unit	C	Flat with rib	ø6, ø8		P. 1
	 Single unit	B	Bellows	ø6, ø8		P. 1
	 Single unit	J	Bellows (Multistage type)	ø10, ø15 ø25, ø30	Series ZP Common adapter	P. 13
	 Single unit With adapter	MU	Flat	ø2, ø3.5, ø4 ø5, ø6, ø8 ø10, ø15		P. 2
	 Single unit With adapter	EU	Flat	ø2, ø4, ø6		P. 5
	 Single unit With adapter	MT	Thin flat (With groove)	ø10, ø15 ø20, ø25 ø30		P. 11
	 Single unit With adapter	MB	Bellows	ø4, ø6, ø8 ø10, ø15 ø20		P. 14

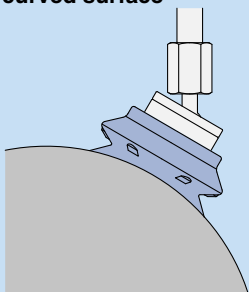Variations	Pad			Adapter type	Page
	Symbol	Type	Diameter		
Oval Pad ■ For work pieces with limitations on the adsorption surface 					P. 17
					P. 18
		W	Oval		P. 19
					P. 21
					P. 23
Pad with Ball Spline Buffer ■ Ball spline guide is used to the buffer. 		U	Flat		P. 24



Series ZP2

Series Variations



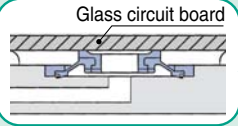



Variations	Pad			Adapter type	Page
	Symbol	Type	Diameter		
Mark-free Pad ■ For use where adsorption marks must not be left on work pieces.  Standard pad Clear trace of the pad  Mark-free pad No trace on the object ● Mark-free NBR pad ● Stuck fluororesin pad Related Pad <i>Made to Order</i> Cyclone Pad (Non-contact pad) P. 25		U	Flat	ø4, ø6, ø8 ø10, ø16 ø25, ø32 ø40, ø50	 Series ZP Common adapter P. 27
		H	Heavy-duty (Flat with rib)	ø40, ø50 ø63, ø80 ø100, ø125	— P. 28
Resin Attachment ■ Mark-free. Prevents sticking of the rubber and the workpiece.  Attachment		—	Bellows	ø6, ø8 ø10, ø13 ø16, ø20 ø25, ø32	 Series ZP Common adapter P. 29
Sponge Pad ■ For adsorption of work pieces with bumps 		S	Sponge	ø4, ø6 ø8, ø10 ø15	 P. 30
			With adapter		P. 31
Heavy-duty Pad ■ For heavy or large work pieces		H	Heavy-duty (Flat with rib)	ø32, ø300 ø340	P. 33
		HT	Heavy-duty (Thin flat with rib)	ø150, ø250	P. 33
		HB	Heavy-duty (Bellows)	ø32, ø150	P. 35
		HW	Heavy-duty (Oval)	30 x 50	P. 36

Variations	Pad			Page
	Symbol	Type	Diameter	
<h3>Heavy-duty Ball Joint Pad</h3> <p>■ For adsorption of work pieces with inclined or curved surface</p> 		H	Heavy-duty (Flat with rib)	P. 37
				P. 38
				P. 39
				
				P. 43
				P. 44
		HB	Heavy-duty (Bellows)	P. 45
				
				P. 47
			ø40 ø50 ø63 ø80 ø100 ø125	
			ø40 ø50 ø63 ø80 ø100 ø125	

Series ZP

Variations	Pad			Adapter type	Page
	Symbol	Type	Diameter		
Heavy-duty Pad <ul style="list-style-type: none"> ■ Heavy-duty type (Flat with rib) Ideal for heavy or large work pieces such as CRT and automobile bodies ■ Heavy-duty type (Bellows) • Ideal for work pieces with curved surface • Ideal for heavy or large work pieces 		H	Heavy-duty (Flat with rib)	Series ZP Common adapter	P. 49
		HB	Heavy-duty (Bellows)		P. 49
			$\phi 40, \phi 50$ $\phi 63, \phi 80$ $\phi 100, \phi 125$		

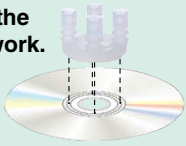Applications (Pad/Adapter)

Variations		Note	Page
Vacuum Pad for Transferring Disks <ul style="list-style-type: none"> ■ For adsorbing circular components like CD and DVD ■ Bellows mechanism is realized in the pad to dampen the impact to the work. 		20 x 25 (ID x OD: PCD 22.5)	P. 59
Vacuum Pad for Fixing Panel <ul style="list-style-type: none"> ■ For adsorbing and fixing the stage of panels or glass circuit board, etc. ■ Bellows mechanism allows complete contact with curved work surface. 		—	P. 60
Vacuum Saving Valve <ul style="list-style-type: none"> ■ Can restrict the reduction of vacuum pressure even when there is no workpiece. ■ No need for switching operation when changing work pieces ■ Multiple vacuum pads can be operated by one ejector. 		Connection thread size for pad side • M5 x 0.8 • M6 x 1 • M8 x 1.25 • R1/8 • Rc1/8 • G1/8 • NPT1/8	P. 61

Series ZP2/ZP Adapter/Buffer
Applicable Pad List P. 65

Series ZP2 Mounting Adapter Part No. P. 69

Series ZP Mounting Adapter Part No. P. 72

Series ZP2 Adapter Assembly Part No. P. 74

Series ZP Adapter Assembly Part No. P. 75

Series ZP2 Buffer Assembly Part No. P. 77

Series ZP Buffer Assembly Part No. P. 80

Vacuum Equipment Model Selection

CONTENTS

1	Features of Vacuum Adsorption	Front matter 11
2	Vacuum Pad Selection	Front matter 11
	<ul style="list-style-type: none">● Vacuum Pad Selection Procedures● Points for Selecting Vacuum Pads<ul style="list-style-type: none">A. Theoretical Lifting ForceB. Shear Force and Moment Applied to Vacuum Pad● Lifting Force and Vacuum Pad Diameter<ul style="list-style-type: none">1. Theoretical Lifting Force● Vacuum Pad Type● Vacuum Pad Material● Rubber Material and Properties● Color and Identification● Buffer Attachment● Pad Selection by Work Type● Vacuum Pad Durability	
3	Selection of Vacuum Ejector and Vacuum Switching Valve	Front matter 17
	<ul style="list-style-type: none">● Calculating Vacuum Ejector and Switching Valve Size with the Formula	
4	Leakage Volume during Work Adsorption	Front matter 17
	<ul style="list-style-type: none">● Leakage volume from Conductance of Work● Leakage volume from Adsorption Test	
5	Adsorption Response Time	Front matter 18
	<ul style="list-style-type: none">● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated● Calculating Adsorption Response Time with the Formula● Adsorption Response Time from the Selection Graph	
6	Precautions on Vacuum Equipment Selection and SMC's Proposal	Front matter 20
	<ul style="list-style-type: none">● Safety Measures● Precautions on Vacuum Equipment Selection● Vacuum Ejector or Pump and Number of Vacuum Pads● Vacuum Ejector Selection and Handling Precautions● Supply Pressure of Vacuum Ejector● Timing for Vacuum Generation and Suction Verification<ul style="list-style-type: none">A. Timing for Vacuum GenerationB. Suction VerificationC. Set Pressure for Vacuum Pressure Switch● Dust Handling of Vacuum Equipment	
7	Vacuum Equipment Selection Example	Front matter 24
	<ul style="list-style-type: none">● Transfer of Semiconductor Chips	
8	Data	Front matter 25
	<ul style="list-style-type: none">● Selection Graph● Glossary of Terms● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting)● Non-conformance Examples● Time of Replacement of Vacuum Pad	

Model Selection

1 Features of Vacuum Adsorption

Vacuum adsorption system as a method to hold a workpiece has the following features.

- Easy construction
- Compatible with any place where adsorption is possible.
- No need for accurate positioning
- Compatible with soft and easily-deformed work pieces

However, special care is required in the following conditions.

- Workpiece may drop under certain conditions since it is transferred being adsorbed.
- Liquid or foreign matter around the workpiece may be sucked into the equipment.
- Large adsorption area is necessary to get large gripping force.
- Vacuum pad (rubber) may deteriorate.

Fully understand the features above and select the equipment that suits your operating conditions.

2 Vacuum Pad Selection

● Vacuum Pad Selection Procedures

- 1) Fully taking into account the balance of a workpiece, identify the adsorption positioning, number of pads and applicable pad diameter (or pad area).
- 2) Find the theoretical lifting force from the identified adsorption area (pad area x number of pads) and vacuum pressure, and then find the lifting force considering actual lifting and safety factor of transfer condition.
- 3) Determine a pad diameter (or pad area) that is sufficient to ensure the lifting force is greater than the workpiece mass.
- 4) Determine the pad type and materials, and the necessity of buffer based on the operating environment, and the workpiece shape and materials.

The above shows selection procedures for general vacuum pads; thus, they will not be applicable for all pads. Customers are required to conduct a test on their own and to select applicable adsorption conditions and pads based on the test results.

● Points for Selecting Vacuum Pads

A. Theoretical Lifting Force

- The theoretical lifting force is determined by vacuum pressure and contact area of the vacuum pad.
- Since the theoretical lifting force is the value measured at the static state, the safety factor responding to the actual operating conditions must be estimated in the actual operation.
- It is not necessarily true that higher vacuum pressure is better. Extremely high vacuum pressure may cause problems.
 - When the vacuum pressure is unnecessarily high, pads are likely to be worn out quickly and cracked, which makes the pad service life shorter.
Doubling the vacuum pressure makes the theoretical lifting force double, while doubling the pad diameter makes the theoretical lifting force quadruple.
 - When the vacuum pressure (set pressure) is high, it makes not only response time longer, but also the necessary energy to generate a vacuum larger.

Example) Theoretical lifting force = Pressure x Area 2 times →

Pad diameter \ Area (cm ²)		Vacuum pressure [40-kPa]	Vacuum pressure [80-kPa]
ø20	3.14	Theoretical lifting force 12.56 N	Theoretical lifting force 25.11 N
ø40	12.56	Theoretical lifting force 50.23 N	Theoretical lifting force 100.45 N

↓ 4 times

B. Shear Force and Moment Applied to Vacuum Pad


- Vacuum pads are not resistant to shear force (parallel force with adsorption surface) and moment.
- Minimize the moment applied to the vacuum pad with the position of the workpiece center of gravity in mind.
- The acceleration rate of the movement must be as small as possible, and make sure to take into consideration the wind pressure and impact. If measures to slow down the acceleration rate are introduced, safety to prevent the workpiece from dropping will improve.
- Avoid lifting the workpiece by adsorbing the vertical side with a vacuum pad (vertical lifting) if possible. When it is unavoidable, a sufficient safety factor must be secured.

Lifting Force, Moment, Horizontal Force

To lift a workpiece vertically, make sure to take into consideration the acceleration rate, wind pressure, impact, etc., in addition to the mass of the workpiece. (Refer to Fig. 1)


Because the pads are susceptible to moments, mount the pad so as not to allow the workpiece to create a moment. (Refer to Fig. 2)

When a workpiece that is suspended horizontally is moved laterally, the workpiece could shift depending on the extent of the acceleration rate or the size of the friction coefficient between the pad and the workpiece. Therefore, the acceleration rate of the lateral movement must be minimized. (Refer to Fig. 3)

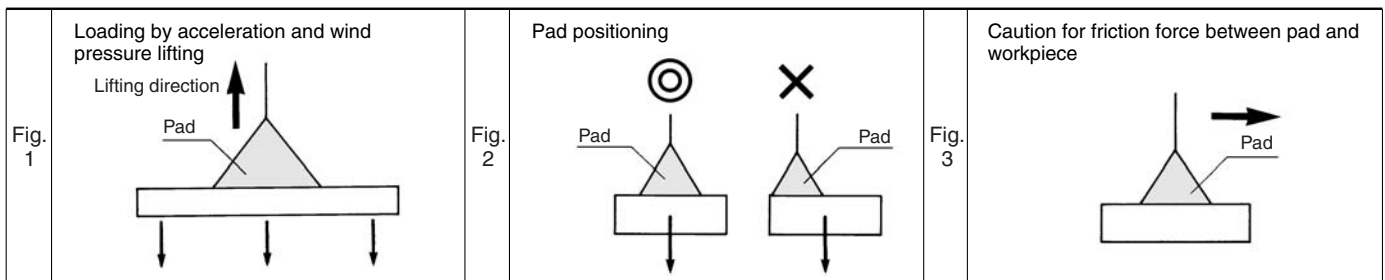


Balance of Pad and Work

Make sure that the pad's suction surface is not larger than the surface of the workpiece to prevent vacuum leakage and unstable picking.

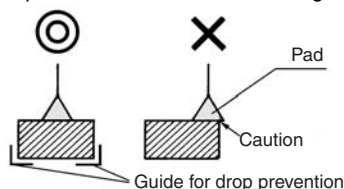


If multiple pads are used for transferring a flat object with a large surface area, properly allocate the pads to maintain balance. Also make sure that the pads are aligned properly to prevent them from becoming disengaged along the edges.

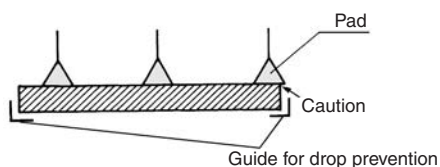

Provide an auxiliary device (example: a guide for preventing the workpieces from dropping) as necessary.

Mounting Position

As a rule, the unit must be installed horizontally. Although a diagonal or a vertical installation should be avoided whenever possible, if the unit must be installed in such a manner, be certain to guarantee guide and absolute safety.

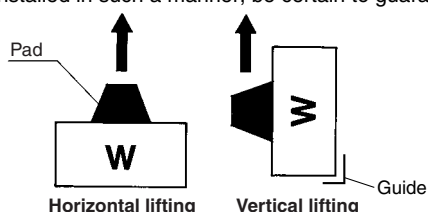

Model Selection

● Lifting Force and Vacuum Pad Diameter

1. Theoretical Lifting Force


- Set the vacuum pressure below the pressure that has been stabilized after adsorption.
- However, when a workpiece is permeable or has a rough surface, note that the vacuum pressure drops since the workpiece takes air in. In such a case, carry out an adsorption test for confirmation.
- The vacuum pressure when using an ejector is approximately -60 kPa as a guide.

The theoretical lifting force of a pad can be found by calculation or from the theoretical lifting force table.


Calculation

$$W = P \times S \times 0.1 \times \frac{1}{t}$$

W : Lifting force (N)
P : Vacuum pressure (kPa)
S : Pad area (cm²)
t : Safety factor Horizontal lifting: 4 or more
Vertical lifting: 8 or more

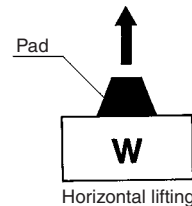

Horizontal lifting

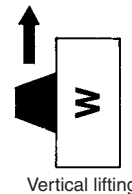

Vertical lifting

(This type of application should basically be avoided.)

Theoretical Lifting Force

The theoretical lifting force (not including the safety factor) is found from the pad diameter and vacuum pressure.
The required lifting force is then found by dividing the theoretical lifting force by the safety factor t.

Lifting force = Theoretical lifting force ÷ t

(1) Theoretical Lifting Force (Theoretical lifting force = P × S × 0.1)

Pad Diameter (ø2 to ø50)

(N)

Pad diameter (mm)	ø2	ø4	ø6	ø8	ø10	ø13	ø16	ø20	ø25	ø32	ø40	ø50
Pad area S (cm ²)	0.03	0.13	0.28	0.50	0.79	1.33	2.01	3.14	4.91	8.04	12.6	19.6
Vacuum pressure (kPa)	-85	0.27	1.07	2.40	4.27	6.67	11.3	17.1	26.7	41.7	68.3	107
	-80	0.25	1.00	2.26	4.02	6.28	10.6	16.1	25.1	39.3	64.3	101
	-75	0.24	0.94	2.12	3.77	5.89	10.0	15.1	23.6	36.8	60.3	95
	-70	0.22	0.88	1.98	3.52	5.50	9.3	14.1	22.0	34.3	56.3	88
	-65	0.20	0.82	1.84	3.27	5.10	8.6	13.1	20.4	31.9	52.2	82
	-60	0.19	0.75	1.70	3.01	4.71	8.0	12.1	18.8	29.4	48.2	76
	-55	0.17	0.69	1.55	2.76	4.32	7.3	11.1	17.3	27.0	44.2	69
	-50	0.16	0.63	1.41	2.51	3.93	6.7	10.0	15.7	24.5	40.2	63
	-45	0.14	0.57	1.27	2.26	3.53	6.0	9.0	14.1	22.1	36.2	57
	-40	0.13	0.50	1.13	2.01	3.14	5.3	8.0	12.6	19.6	32.2	50

Pad Diameter (ø63 to ø340)

(N)

Pad diameter (mm)	ø63	ø80	ø100	ø125	ø150	ø250	ø300	ø340
Pad area S (cm ²)	31.2	50.2	78.5	122.7	176.6	490.6	706.5	907.5
Vacuum pressure (kPa)	-85	265	427	667	1043	1501	4170	6005
	-80	250	402	628	982	1413	3925	5652
	-75	234	377	589	920	1325	3680	5299
	-70	218	351	550	859	1236	3434	4946
	-65	203	326	510	798	1148	3189	4592
	-60	187	301	471	736	1060	2944	4239
	-55	172	276	432	675	971	2698	3886
	-50	156	251	393	614	883	2453	3533
	-45	140	226	353	552	795	2208	3179
	-40	125	201	314	491	706	1962	2826

Oval Pad (2 x 4 to 8 x 30)






(N)





Pad size (mm)	2 x 4	3.5 x 7	4 x 10	5 x 10	6 x 10	4 x 20	5 x 20	6 x 20	8 x 20	4 x 30	5 x 30	6 x 30	8 x 30
Pad area S (cm ²)	0.07	0.21	0.36	0.44	0.52	0.76	0.94	1.12	1.46	1.16	1.44	1.72	2.26
Vacuum pressure (kPa)	-85	0.60	1.79	3.06	3.74	4.42	6.46	7.99	9.52	12.41	9.86	12.24	14.62
	-80	0.56	1.68	2.88	3.52	4.16	6.08	7.52	8.96	11.68	9.28	11.52	13.76
	-75	0.53	1.58	2.70	3.30	3.90	5.70	7.05	8.40	10.95	8.70	10.80	12.90
	-70	0.49	1.47	2.52	3.08	3.64	5.32	6.58	7.84	10.22	8.12	10.08	12.04
	-65	0.46	1.37	2.34	2.86	3.38	4.94	6.11	7.28	9.49	7.54	9.36	11.18
	-60	0.42	1.26	2.16	2.64	3.12	4.56	5.64	6.72	8.76	6.96	8.64	10.32
	-55	0.39	1.16	1.98	2.42	2.86	4.18	5.17	6.16	8.03	6.38	7.92	9.46
	-50	0.35	1.05	1.80	2.20	2.60	3.80	4.70	5.60	7.30	5.80	7.20	8.60
	-45	0.32	0.95	1.62	1.98	2.34	3.42	4.23	5.04	6.57	5.22	6.48	7.74
	-40	0.28	0.84	1.44	1.76	2.08	3.04	3.76	4.48	5.84	4.64	5.76	6.88

● Vacuum Pad Type

- Vacuum pads are available in flat, deep, bellows, thin flat, with rib, and oval types, etc. Select the optimal shape in accordance with the workpiece and operating environment. Please contact SMC for shapes not included in this catalog.

Pad Type

Pad shape		Application
Flat		To be used when adsorption surface of work is flat and not deformed.
Flat with rib		To be used when work is likely to deform or in the case of releasing work certainly.
Deep		To be used when work is curved shape.
Bellows		To be used when there is not enough space to install buffer or adsorption surface of work is slanted.
Oval		To be used when work has limited adsorption surface or long in length and work is required to locate precisely.

Pad shape		Application
Ball joint		To be used when adsorption surface of work is not horizontal.
Long stroke buffer		To be used when work height is not even or cushioning toward work is required.
Large		To be used when work is heavy weight.
Conductive		As one of the countermeasures against the static electricity, rubber material with reduced resistance is used. For antistatic measures

● Vacuum Pad Material

- It is necessary to determine vacuum pad materials carefully taking into account the workpiece shape, adaptability in the operating environment, effect after being adsorbed, electrical conductivity, etc.
- Based on the work transfer example for each material, select after confirming the characteristics (adaptability) of rubber.

Vacuum Pad/Example of Work Transfer

Material

Material	Application
NBR	Transfer of general work, Corrugated board, Veneer plate, Iron plate and others
Silicone rubber	Semiconductor, Removing from die-casting, Thin work, Food processor
Urethane rubber	Corrugated board, Iron plate, Veneer plate
FKM	Chemical work
Conductive NBR	General work of semiconductor (Static electricity resistance)
Conductive silicone rubber	Semiconductor (Static electricity)

Model Selection

● Rubber Material and Properties

General name		NBR (Nitrile rubber)	Silicone rubber	Urethane rubber	FKM (Fluoro rubber)	CR (Chloroprene rubber)	EPR (Ethylene-propylene rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber	Conductive silicone sponge	Conductive CR sponge (Chloroprene sponge)
Main features		Good oil resistance, abrasion resistance, and aging resistance	Excellent heat resistance, and cold resistance	Excellent mechanical strength	Best heat resistance, and chemical resistance	Well balanced weather resistance, ozone resistance, and chemical resistance	Good aging resistance, ozone resistance, and electrical properties	Good oil resistance, abrasion resistance, and aging resistance. Conductive	Very excellent heat resistance, and cold resistance. Conductive	Excellent heat insulation, and impact resilience	Excellent impact resilience, and sound insulation. Flame retardance
Pure gum property (specific gravity)		1.00-1.20	0.95-0.98	1.00-1.30	1.80-1.82	1.15-1.25	0.86-0.87	1.00-1.20	0.95-0.98	0.4 g/cm ³	0.161 g/cm ³
Physical properties of blended gum	Impact resilience	○	◎	◎	△	◎	○	○	◎	×/△	×/△
	Abrasion resistance	◎	×/△	◎	◎	◎	○	◎	×/△	×	×
	Tear resistance	○	×/△	◎	○	○	△	○	×/△	×	×
	Flex crack resistance	○	×/○	◎	○	○	○	○	×/○	×	×
	Maximum operation temperature °C	120	200	60	250	150	150	100	200	180	120
	Minimum operation temperature °C	0	-30	0	0	-40	-20	0	-10	-30	-20
	Volume resistivity (Ωcm)	—	—	—	—	—	—	10 ⁴ or less	10 ⁴ or less	4.8 x 10 ⁴	3.8 x 10 ⁴
	Heat aging	○	◎	△	◎	○	○	○	◎	△	△
	Weather resistance	○	◎	◎	◎	◎	○	○	◎	△	△
	Ozone resistance	△	◎	◎	◎	○	◎	△	◎	△	△
Chemical resistance	Gas permeability resistance	○	×/△	×/△	×/△	○	×/△	○	×/△	×	×
	Oil resistance										
	Gasoline/Gas oil	◎	×/△	◎	◎	○	×	◎	×/△	×	×
	Benzene/Toluene	×/△	×	×/△	◎	×/△	×	×/△	×	×	×
	Alcohol	◎	◎	△	△/◎	◎	◎	◎	◎	△	△
	Ether	×/△	×/△	×	×/△	×/△	○	×/△	×/△	×	×
Alkaline resistance	Ketone (MEK)	×	○	×	×	△/○	◎	×	○	×	×
	Ethyl acetate	×/△	△	×/△	×	×/△	◎	×/△	△	×	×
	Water	◎	○	△	◎	◎	◎	◎	○	○	○
	Organic acid	×/△	○	×	△/○	×/△	×	×/△	○	×	×
	Organic acid of high concentration	△/○	△	×	◎	○	○	△/○	△	×	×
	Organic acid of low concentration	○	○	△	◎	◎	◎	○	○	×	×
Acid resistance	Strong alkali	○	◎	×	○	◎	◎	○	◎	△	△
	Weak alkali	○	◎	×	○	◎	◎	○	◎	△	△

◎ = Excellent --- Not affected at all, or almost no effect

○ = Good --- Affected a little, but adequate resistance depending on conditions

△ = Better not to use if possible

× = Unsuitable for usage. Severely affected.

* Properties, chemical resistance, and other values are not guaranteed. These values depend on the operating environment, so they cannot be guaranteed by SMC. Thorough research and confirmation are necessary before usage.

● Color and Identification


General name		NBR (Nitrile rubber)	Silicone rubber	Urethane rubber	FKM (Fluoro rubber)	CR (Chloroprene rubber)	EPR (Ethylene-propylene rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber	Conductive silicone sponge	Conductive CR sponge (Chloroprene sponge)
Color of rubber		Black	White	Brown	Black	Black	Black	Black	Black	Black	Black
Identification (Dot or stamp)		—	—	—	· Green 1 dot · (F)	· Red 1 dot · (C)	· (E)	· Silver 1 dot	· Silver 2 dots	—	—

● Buffer Attachment

- Use a buffer when there is a variation in the height of work pieces and fragile work pieces are adsorbed (cushioning is necessary). If it is necessary to further position the pad and the workpiece, use a non-rotating buffer.

Unsteady Distance between Pad and Work

If the pad and the workpiece cannot be positioned properly, such as when picking a workpiece having an uneven height, use a built-in spring type pad with a buffer. This type of pad acts as a cushion between the pad and the workpiece. If it is necessary to further position the pad and the workpiece, use a non-rotating buffer.

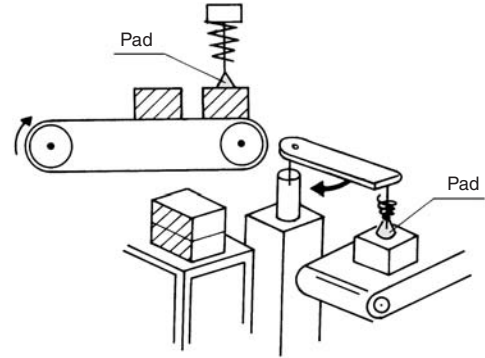


● Pad Selection by Work Type

- Carefully select a pad for the following work pieces.


1. Porous Work

To pick a permeable workpiece such as paper, select a pad with a small diameter that is sufficient to lift the workpiece. Because a large amount of air leakage could reduce the pad's suction force, it may be necessary to increase the capacity of an ejector or vacuum pump or enlarge the conductance area of the piping passage.

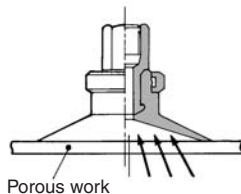


2. Flat Plate Work

When a workpiece with a large surface area such as sheet glass or PCB is suspended, the workpiece could move in a wavelike motion if a large force is applied by wind pressure or by an impact. Therefore, it is necessary to ensure the proper allocation and size of pads.

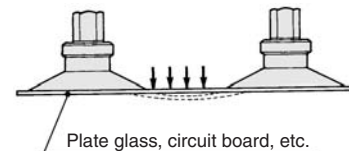


3. Soft Work

If a soft workpiece such as vinyl, paper, or thin sheet is picked up, the vacuum pressure could cause the workpiece to deform or wrinkle. In such a case, it will be necessary to use a small pad or a ribbed pad and reduce the vacuum pressure.

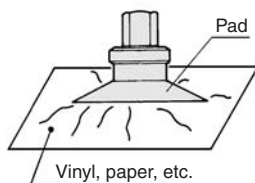

4. Impact to Pad

When pushing a pad to a workpiece, make sure not to apply an impact or a large force which would lead to premature deformation, cracking, or wearing of the pad. The pad should be pushed against the workpiece to the extent that its skirt portion deforms or that its ribbed portion comes into slight contact with the workpiece. Especially, when using a smaller diameter pad, make sure to locate it correctly.

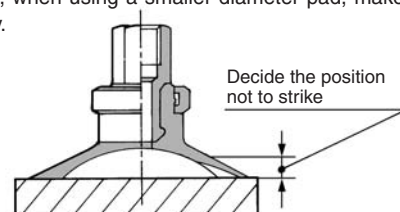

● Vacuum Pad Durability

- Need to be careful of the vacuum pad (rubber) deterioration.
- The vacuum pad's adsorption surface will be worn out when it is used for a certain period of time, and the outer diameter gradually becomes smaller. The lifting force becomes weaker as the pad diameter becomes smaller, but absorption is still possible.
- Since the vacuum pad replacement period greatly varies depending on the operating environment, it is extremely difficult to estimate the replacement period. Specify the period taking into account the actual operating conditions.

Model Selection

3 Selection of Vacuum Ejector and Vacuum Switching Valve

● Calculating Vacuum Ejector and Switching Valve Size with the Formula

Average suction flow rate for achieving adsorption response time

$$Q = \frac{V \times 60}{T_1} + Q_L$$

$$T_2 = 3 \times T_1$$

Q : Average suction flow rate L/min (ANR)
V : Piping capacity (L)
T₁ : Arrival time to stable **P_v** 63% after adsorption (sec)
T₂ : Arrival time to stable **P_v** 95% after adsorption (sec)
Q_L : Leakage volume during work adsorption L/min (ANR) ^{Note 1)}

Max. suction flow rate

$$Q_{\max} = (2 \text{ to } 3) \times Q \text{ L/min (ANR)}$$

<Selection Procedure>

• Ejector

Select the ejector with the greater maximum suction flow rate from the **Q_{max}** indicated above.

• Direct operation valve

$$\text{Conductance } C = \frac{Q_{\max}}{5 \times 11.1} [\text{dm}^3/(\text{s} \cdot \text{bar})]$$

* Select a valve (solenoid valve) having a conductance that is greater than that of the conductance **C** formula given above from the related equipment (page 1278 in Best Pneumatics No. 4).



Note 1) **Q_L**: 0 when no leakage occurs during adsorbing a workpiece.

If there is leakage during adsorbing a workpiece, find the leakage volume based on "4. Leakage Volume during Work Adsorption."

Note 2) Tube piping capacity can be found in "8. Data: Piping Capacity by Tube I.D. (Selection Graph (2))."

4 Leakage Volume during Work Adsorption

Air could be drawn in depending on the type of workpiece. As a result, the vacuum pressure in the pad becomes reduced and the amount of vacuum that is necessary for adsorption cannot be attained. When this type of workpiece must be handled, it is necessary to select the proper size of the ejector and the vacuum switching valve by taking into consideration the amount of air that could leak through the workpiece.

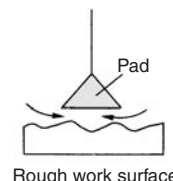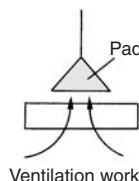

● Leakage Volume from Conductance of Work

$$\text{Leakage volume } Q_L = 11.1 \times 5 \times C_L$$


Q_L: Leakage volume L/min (ANR)

C_L: Conductance between work and pad, and work opening area [dm³/(s·bar)]

● Leakage Volume from Adsorption Test

As described in the illustration below, pick up the workpiece with the ejector, using an ejector, pad and a vacuum gauge.

At this time, read vacuum pressure **P_i**, obtain the suction flow rate from the flow-rate characteristics graph for the ejector that is being used, and render this amount as the leakage of the workpiece.

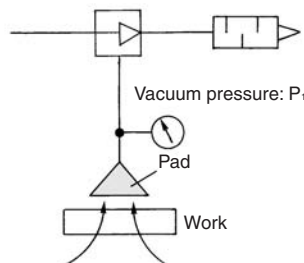

Exercise: Using a supply pressure of 0.45 MPa, when the ejector (ZH07□S) picks up a workpiece that leaks air, the vacuum gauge indicated a pressure of -53 kPa. Calculate the leakage volume from the workpiece.

<Selection Procedure>


When obtaining the suction flow rate at a vacuum pressure of -53 kPa from the ZH07DS flow-rate characteristics graph, the suction flow rate is 5 L/min (ANR). (A→B→C)

$$\text{Leakage volume} \approx \text{Suction flow rate } 5 \text{ L/min (ANR)}$$

Front matter 17


ZH07BS, ZH07DS

Exhaust Characteristics

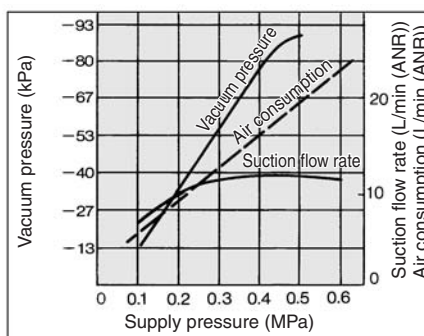

Flow-rate Characteristics

Supply pressure {0.45 MPa}

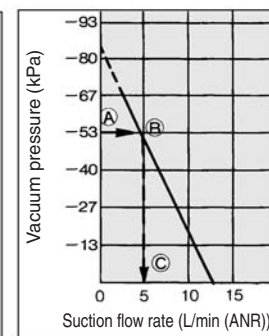


5 Adsorption Response Time

When a vacuum pad is used for the adsorption transfer of a workpiece, the approximate adsorption response time can be obtained (the length of time it takes for the pad's internal vacuum pressure to reach the pressure that is required for adsorption after the supply valve {vacuum switching valve} has been operated). An approximate adsorption response time can be obtained through formulas and selection graphs.


● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

The relationship between vacuum pressure and response time after the supply valve (switching valve) is operated as shown below.

Vacuum System Circuit

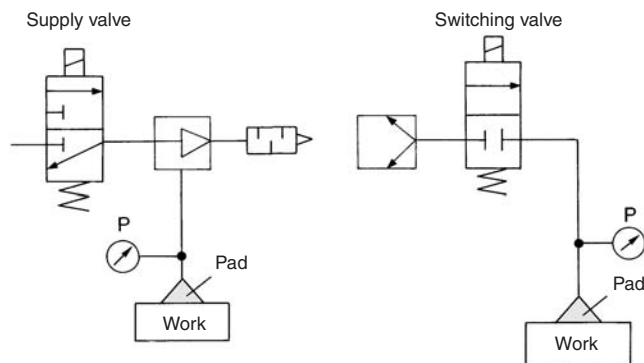

Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

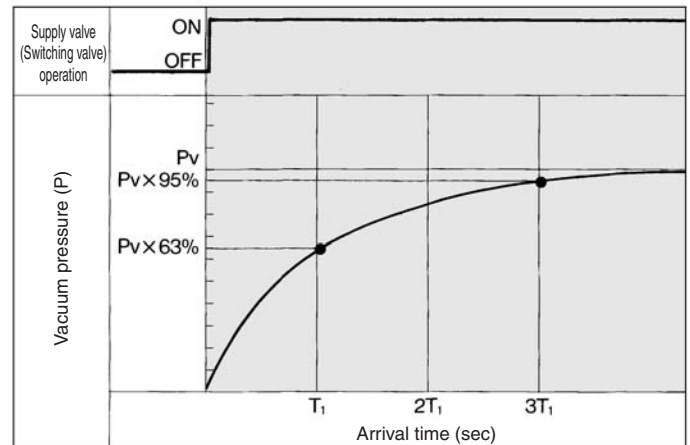

Pv: Final vacuum pressure

T₁: Arrival time to 63% of final vacuum pressure **Pv**

T₂: Arrival time to 95% of final vacuum pressure **Pv**

● Calculating Adsorption Response Time with the Formula

Adsorption response times **T₁** and **T₂** can be obtained through the formulas given below.

$$\text{Adsorption response time } T_1 = \frac{V \times 60}{Q}$$

$$\text{Adsorption response time } T_2 = 3 \times T_1$$

Piping capacity

$$V = \frac{3.14}{4} D^2 \times L \times \frac{1}{1000} \text{ (L)}$$

T₁: Arrival time to 63% of final vacuum pressure **Pv** (sec)

T₂: Arrival time to 95% of final vacuum pressure **Pv** (sec)

Q₁: Average suction flow rate L/min (ANR)

Calculation of average suction flow rate

• Ejector

$$Q_1 = (1/2 \text{ to } 1/3) \times \text{Ejector max. suction flow rate L/min (ANR)}$$

• Vacuum pump

$$Q_1 = (1/2 \text{ to } 1/3) \times 11.1 \times \text{Conductance of vacuum pump [dm}^3\text{/(s}\cdot\text{bar)]}$$

D: Piping diameter (mm)

L: Length from ejector and switch valve to pad (m)

V: Piping capacity from ejector and switching valve to pad (L)

Q₂: Max. flow from ejector and switching valve to pad by piping system

$$Q_2 = S \times 11.1 \text{ L/min (ANR)}$$

Q: Smaller one between the **Q₁** and **Q₂** L/min (ANR)

C: Conductance of piping [dm³/(s·bar)]

For the conductance, the equivalent conductance can be found in “8. Data: Conductance by Tube I.D. (Selection Graph (3)).”

Model Selection

● Adsorption Response Time from the Selection Graph


1. Tube Piping Capacity

Piping capacity from the ejector and switching valve at vacuum pump to the pad can be found in “8. Data: Piping Capacity by Tube I.D. (Selection Graph (2)).”

2. Obtain the adsorption response times.

By operating the supply valve (switching valve) that controls the ejector (vacuum pump), the adsorption response times T_1 and T_2 that elapsed before the prescribed vacuum pressure is reached can be obtained from the Selection Graph (1).

Selection Graph (1) Adsorption Response Time

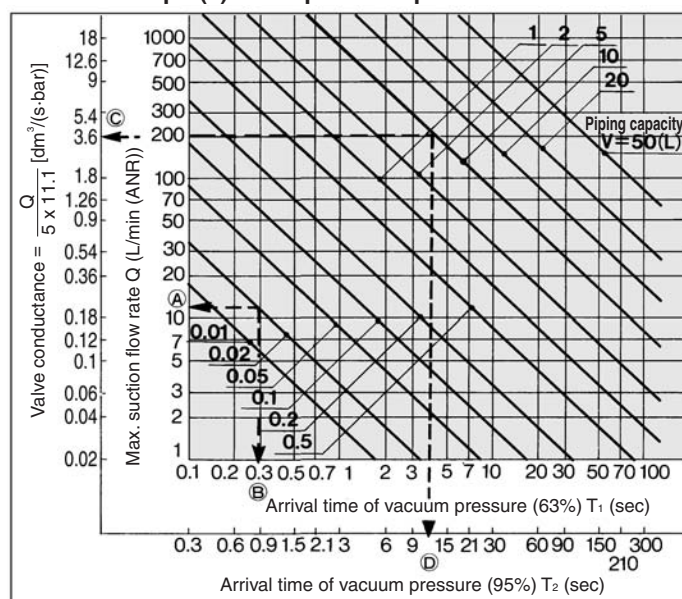

* Conversely, the size of the ejector or the size of the switching valve of the vacuum pump system can be obtained from the adsorption response time.

How to read the graph

Example 1: For obtaining the adsorption response time until the pressure in the piping system with a piping capacity of 0.02 L is discharged to 63% (T_1) of the final vacuum pressure through the use of the vacuum ejector ZH07□S with a maximum suction flow rate of 12 L/min (ANR).

<Selection Procedure>

From the point at which the vacuum ejector's maximum vacuum suction flow rate of 12 L/min (ANR) and the piping capacity of 0.02 L intersect, the adsorption response time T_1 that elapses until 63% of the maximum vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (A)→(B)) $T_1 \approx 0.3$ seconds.

Example 2: For obtaining the discharge response time until the internal pressure in the 5 L tank is discharged to 95% (T_2) of the final vacuum pressure through the use of a valve with a conductance of 3.6 [dm³/(s·bar)].

<Selection Procedure>

From the point at which the valve's conductance of 3.6 [dm³/(s·bar)] and the piping capacity of 5 L intersect, the discharge response time (T_2) that elapses until 95% of the final vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (C)→(D)) $T_2 \approx 12$ seconds.


6 Precautions on Vacuum Equipment Selection and SMC's Proposal

● Safety Measures

- Make sure to provide a safe design for a vacuum pressure drop due to a disruption of power supply, or a lack of supply air. Drop prevention measures must be taken in particular when dropping a workpiece presents some degree of danger.

● Precautions on Vacuum Equipment Selection



As a countermeasure for power outages, select a supply valve that is normally open or one that is equipped with a self-holding function.

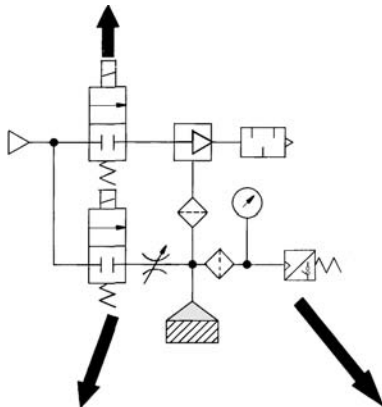

Select a vacuum switching valve that has a conductance that does not reduce the composite conductance consisting of the areas from the pad to the ejector.

For the release valve, select a 2/3 port valve with a low vacuum specification. Also, use a needle valve to regulate the release flow rate.

- During the adsorption and transfer of a workpiece, verification of the vacuum switch is recommended.
- In addition, visually verify the vacuum gauge when handling a heavy or a hazardous item.
- The ZSP1 type is optimal for the adsorption and transfer of small parts using a suction nozzle with a small diameter.
- Install a filter (Series ZFA, ZFB, ZFC) before the pressure switch if the ambient air is of low quality.

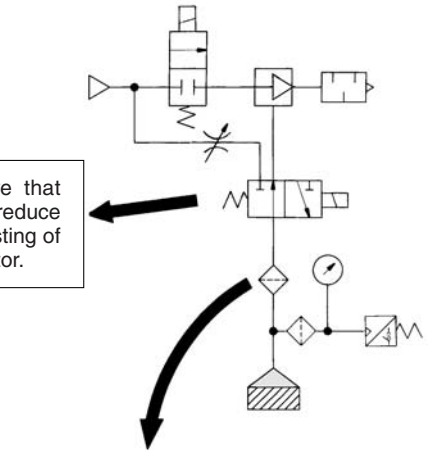

Use a suction filter (Series ZFA, ZFB, ZFC) to protect the switching valve and to prevent the ejector from becoming clogged. Also, a suction filter must be used in a dusty environment. If only the unit's filter is used, it will become clogged quickly.

● Vacuum Ejector or Pump and Number of Vacuum Pads

Ejector and number of pads		Vacuum pump and number of pads	
Ideally, one pad should be used for each ejector.	When more than one pad is attached to a single ejector, if one of the work pieces becomes detached, the vacuum pressure will drop, causing other work pieces to become detached. Therefore, the countermeasures listed below must be taken. <ul style="list-style-type: none"> • Adjust the needle valve to minimize the pressure fluctuation between adsorption and non-adsorption operations. • Provide a vacuum switching valve to each individual pad to minimize the influences on other pads if an adsorption error occurs. 	Ideally, one pad should be used for each line.	When more than one pad is attached to a single vacuum line, take the countermeasures listed below. <ul style="list-style-type: none"> • Adjust the needle valve to minimize the pressure fluctuation between adsorption and non-adsorption operation. • Include a tank and a vacuum pressure reduction valve (vacuum pressure regulator valve) to stabilize the source pressure. • Provide a vacuum switching valve to each individual pad to minimize the influences on other pads if an adsorption error occurs.


Model Selection

● Vacuum Ejector Selection and Handling Precautions


Ejector Selection

There are 2 types of ejector flow-rate characteristics: the high vacuum type (S type) and the high flow type (L type). During the selection, pay particular attention to the vacuum pressure when adsorbing work pieces that leak.

High Vacuum Type Flow-rate Characteristics/ ZH13□S

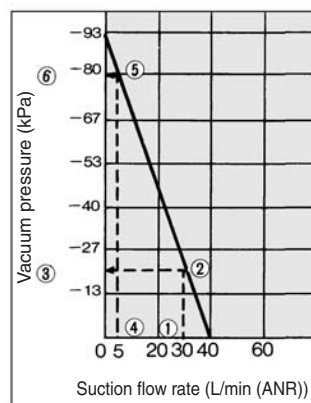

High Flow Type Flow-rate Characteristics/ ZH13□L

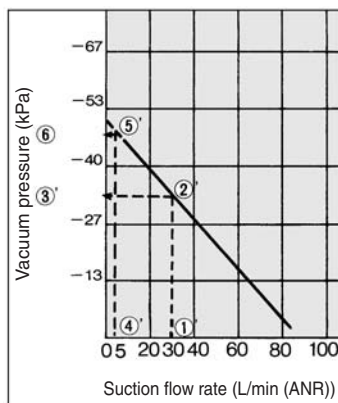


The vacuum pressure varies in accordance with the leakage volumes indicated in the above diagrams.

If the leakage volume is 30 L/min (ANR), the vacuum pressure of the S type is -20 kPa ① → ② → ③, and for the L type it is -33 kPa ①' → ②' → ③'. If the leakage volume is 5 L/min (ANR), the vacuum pressure of the S type is -80 kPa ④ → ⑤ → ⑥, and for the L type it is -47 kPa ④' → ⑤' → ⑥'. Thus, if the leakage volume is 30 L/min (ANR) the L type can attain a higher vacuum pressure, and if the leakage volume is 5 L/min (ANR), the S type can attain a higher vacuum pressure.

Thus, during the selection process, make sure to take the flow-rate characteristics of the high vacuum type (S type) and the high flow type (L type) into consideration in order to select the type that is optimal for your application.


Ejector Nozzle Diameter Selection

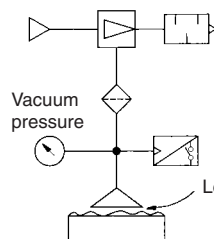

If a considerable amount of leakage occurs between the workpiece and the pad, resulting in incomplete adsorption, or to shorten the adsorption and transfer time, select an ejector nozzle with a larger diameter from the ZH, ZM, ZR, or ZL series.


Manifold Use

Individual exhaust

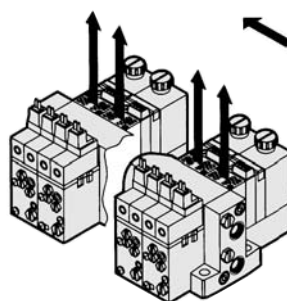

If there are a large number of ejectors that are linked on a manifold and operate simultaneously, use the built-in silencer type or the port exhaust type.

Centralized exhaust

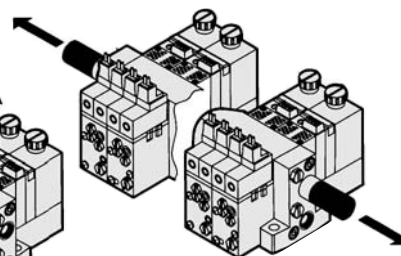

If there are a large number of ejectors that are linked on a manifold, which exhaust collectively, install a silencer at both ends. If the exhaust must be discharged outdoors through piping, make sure that the diameter of the piping is large enough that its back pressure will not affect the operation of the ejectors.

- If the vacuum ejector makes an intermittent noise (abnormal noise) from exhaust at a certain supply pressure, the vacuum pressure will not be stable. It will not be any problem if the vacuum ejector is used under this condition. However, if the noise is disturbing or might affect the operation of the vacuum pressure switch, lower or raise supply pressure a little at a time, and use in an air pressure range that does not produce the intermittent noise.

● Supply Pressure of Vacuum Ejector

- Use the vacuum ejector at the standard supply pressure.

The maximum vacuum pressure and suction flow rate can be obtained when the vacuum ejector is used at the standard supply pressure, and as a result, adsorption response time also improves. From the viewpoint of energy-saving, it is the most effective to use the ejector at the standard supply pressure. Since using it at the excessive supply pressure causes a decline in the ejector performance, do not use it at a supply pressure exceeding the standard supply.

● Timing for Vacuum Generation and Suction Verification

A. Timing for Vacuum Generation

The time for opening/closing the valve will be counted if a vacuum is generated after the adsorption pad descends to adsorb a workpiece. Also, there is a timing delay risk for the generating vacuum since the operational pattern for the verification switch, which is used for detecting the descending vacuum pad, is not even.

To solve this issue, we recommend that vacuum be generated in advance, before the vacuum pad begins to descend to the workpiece. Adopt this method after confirming that there will be no misalignment resulting from the workpiece's light mass.

B. Suction Verification

When lifting the vacuum pad after absorbing a workpiece, confirm that there is a suction verification signal from the vacuum pressure switch, before the vacuum pad is lifted. If the vacuum pad is lifted, based on the timing of a timer, etc., there is a risk that the workpiece may be left behind.

In general adsorption transfer, the time for adsorbing a workpiece is slightly different since the position of the vacuum pad and the workpiece are different after every operation. Therefore, program a sequence in which the suction completion is verified by a vacuum pressure switch, etc. before moving to the next operation.

C. Set Pressure for Vacuum Pressure Switch

Set the optimum value after calculating the required vacuum pressure for lifting a workpiece.

If a higher pressure than required is set, there is a possibility of being unable to confirm the suction even though the workpiece is adsorbed. This will result in a suction error.

When setting vacuum pressure switch set values, you should set using a lower pressure, with which a workpiece can be adsorbed, only after considering the acceleration or vibration when a workpiece is transferred. The set value of the vacuum pressure switch shortens the time to lift a workpiece. Since the switch detects whether the workpiece is lifted or not, the pressure must be set high enough to detect it.

Vacuum Pressure Switch (Series ZS), Vacuum Pressure Gauge (Series GZ)

When adsorbing and transferring a workpiece, verify at the vacuum pressure switch as much as possible (In addition, visually verify the vacuum gauge, especially when handling a heavy or a hazardous item.).

Approx. ø1 adsorption nozzle

The difference in pressure between ON and OFF becomes small depending on the capacity of the ejector and vacuum pump. In such a case, it will be necessary to use ZSP1 that can detect a small hysteresis or a flow switch.

Note) • A vacuum generator with a large suction capacity will not be detected properly, so an ejector with an appropriate capacity must be selected.

- Since the hysteresis is small, vacuum pressure must be stabilized.



Suction verification switch
ZSP1




Flow sensor
PFMV



Vacuum pressure gauge
GZ46

Refer to the Best Pneumatics No. 6 for details.

Timing Chart Example

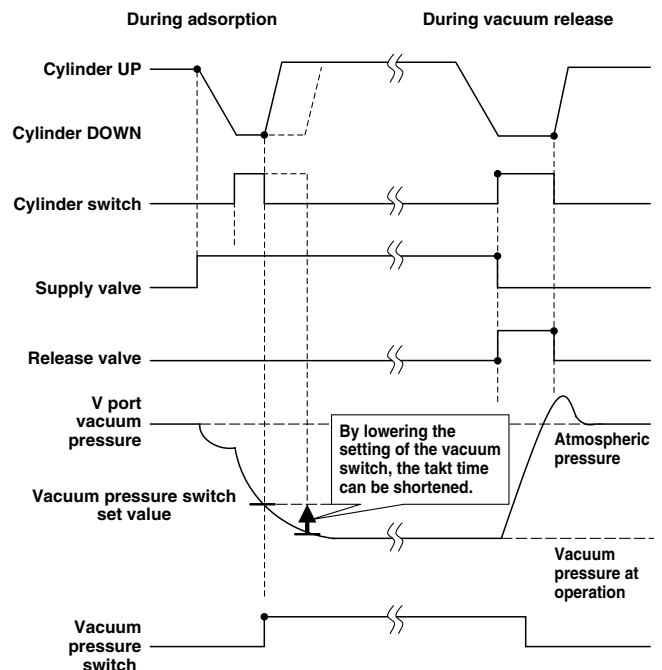

Model Selection

● Dust Handling of Vacuum Equipment

- When the vacuum equipment is used, not only the workpiece, but also dust in the surrounding environment is taken in the equipment. Preventing the intrusion of dust is required more than for any other pneumatic equipment. Some of SMC's vacuum equipment comes with a filter, but when there is a large amount of dust, an additional filter must be installed.
- When vaporized materials such as oil or adhesive are sucked into the equipment, they accumulate inside, which may cause problems.
- It is important to prevent dust from entering the vacuum equipment as much as possible.
 - (1) Make sure to keep the working environment and surrounding area of the workpiece clean so that dust will not be sucked in the equipment.
 - (2) Check the amount and types of dust before using the equipment and install a filter, etc., in the piping when necessary. In particular, equipment used to capture dust, such as a vacuum cleaner, require a special filter.
 - (3) Conduct a test and make sure that operating conditions are cleared before using the equipment.
 - (4) Perform filter maintenance depending on the amount of dirt.
 - (5) Filter clogging generates a pressure difference between the adsorption and ejector parts. This requires attention, since clogging can prevent proper adsorption from being achieved.

Air Suction Filter (Series ZFA, ZFB, ZFC)

- To protect the switching valve and the ejector from becoming clogged, a suction filter in the vacuum circuit is recommended.
- When using an ejector in a dusty environment, the unit's filter will become clogged quickly, so it is recommended that the ZFA, ZFB or ZFC series be used concurrently.

Vacuum Line Equipment Selection

Determine the volume of the suction filter and the conductance of the switching valve in accordance with the maximum suction flow rate of the ejector and the vacuum pump. Make sure that the conductance is greater than the value that has been obtained through the formula given below. (If the devices are connected in series in the vacuum line, their conductances must be combined.)

$$C = \frac{Q_{\max}}{5 \times 11.1} \quad C: \text{Conductance [dm}^3\text{/(s}\cdot\text{bar)]}$$

Q_{\max} : Max. suction flow rate L/min (ANR)

7 Vacuum Equipment Selection Example

● Transfer of Semiconductor Chips

Selection conditions:

- (1) Workpiece: Semiconductor chips
Dimensions: 8 mm x 8 mm x 1 mm, Mass: 1 g
- (2) Vacuum piping length: 1 m
- (3) Adsorption response time: 300 msec or less

1. Vacuum Pad Selection

- (1) Based on the workpiece size, the pad diameter is 4 mm (1 pc.).
- (2) Using the formula on the front matter 13, confirm the lifting force.

$$W = P \times S \times 0.1 \times 1/t$$

$$0.0098 = P \times 0.13 \times 0.1 \times 1/4$$

$$P = 3.0 \text{ kPa}$$

$$W = 1 \text{ g} = 0.0098 \text{ N}$$

$$S = \pi/4 \times (0.4)^2 = 0.13 \text{ cm}^2$$

$$t = 4 \text{ (Horizontal lifting)}$$

According to the calculation, -3.0 kPa or more of vacuum pressure can adsorb the workpiece.

- (3) Based on the work shape and type, select:

Pad type: Flat

Pad material: Silicone

- (4) According to the results above, select a vacuum pad part number ZPT04US-□□.
(Specify the vacuum entry port (□□) from the pad mounting status.)

2. Vacuum Ejector Selection

- (1) Find the vacuum piping capacity.

Assuming that the tube I.D. is 2 mm, the piping capacity is as follows:

$$V = \pi/4 \times D^2 \times L \times 1/1000 = \pi/4 \times 2^2 \times 1 \times 1/1000 \\ = 0.0031 \text{ L}$$

- (2) Assuming that leakage (Q_L) during adsorption is 0, find the average suction flow rate to meet the adsorption response time using the formula on the front matter 17.

$$Q = (V \times 60) / T_1 + Q_L = (0.0031 \times 60) / 0.3 + 0 = 0.62 \text{ L}$$

From the formula on the front matter 17, the maximum suction flow rate Q_{\max} is

$$Q_{\max} = (2 \text{ to } 3) \times Q = (2 \text{ to } 3) \times 0.62 \\ = 1.24 \text{ to } 1.86 \text{ L/min (ANR)}$$

According to the maximum suction flow rate of the vacuum ejector, a nozzle with a 0.5 diameter can be used.

If the vacuum ejector ZX series is used, representative model ZX105□ can be selected.

(Based on the operating conditions, specify the complete part number for the vacuum ejector used.)

3. Adsorption Response Time Confirmation

Confirm the adsorption response time based on the characteristics of the vacuum ejector selected.

- (1) The maximum suction flow rate of the vacuum ejector ZX105□ is 5 L/min. From the formula on the front matter 18, the average suction flow rate Q_1 is as follows:

$$Q_1 = (1/2 \text{ to } 1/3) \times \text{Ejector's max. suction flow rate} \\ = (1/2 \text{ to } 1/3) \times 5 = 2.5 \text{ to } 1.7 \text{ L/min}$$

- (2) Next, find the maximum flow rate Q_2 of the piping. The conductance C is 0.22 from the Selection Graph (3).
From the formula on the front matter 18, the maximum flow rate is as follows:

$$Q_2 = 5 \times C \times 11.1 = 5 \times 0.22 \times 11.1 = 12.2 \text{ L/min}$$

- (3) Since Q_2 is smaller than Q_1 , $Q = Q_1$.

Thus, from the formula on the front matter 18, the adsorption response time is as follows:

$$T = (V \times 60) / Q = (0.0031 \times 60) / 1.7 = 0.109 \text{ second} \\ = 109 \text{ msec}$$


It is possible to confirm that the calculation result satisfies the required specification of 300 msec.

Model Selection

8 Data

● Selection Graph

Selection Graph (2) Piping Capacity by Tube I.D.

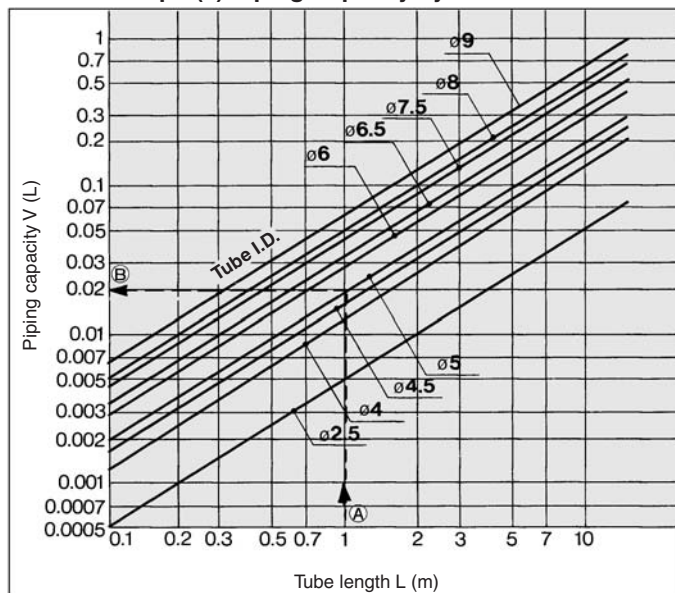

How to read the graph


Example: For obtaining the capacity of tube I.D. ø5 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. ø5, the piping capacity approximately equivalent to 0.02 L can be obtained on the vertical axis.

Piping capacity $\approx 0.02 L$

Selection Graph (3) Conductance by Tube I.D.

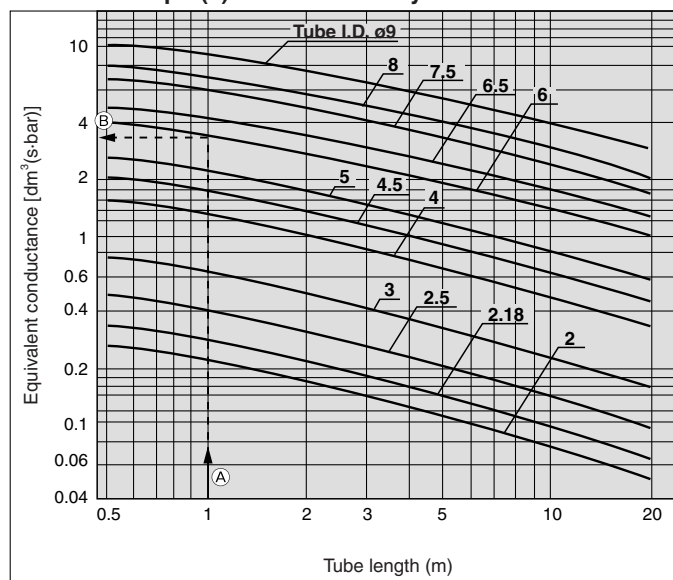

How to read the graph

Example: Tube size ø8/ø6 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. ø6, the equivalent conductance approximately 3.6 [dm³/(s·bar)] can be obtained on the vertical axis.

Equivalent conductance ≈ 3.6 [dm³/(s·bar)]

● Glossary of Terms

Terms	Description
(Max.) suction flow rate	Volume of air taken in by the ejector. The maximum value is the volume of air taken in without having anything connected to the vacuum port.
Maximum vacuum pressure	The maximum value of the vacuum pressure generated by the ejector
Air consumption	The compressed volume of air consumed by the ejector
Standard supply pressure	The optimal supply pressure for operating the ejector
Exhaust characteristics	The relationship between the vacuum pressure and the suction flow rate when the supply pressure to the ejector has been changed.
Flow-rate characteristics	The relationship between the vacuum pressure and the suction flow rate with the standard supply pressure supplied to the ejector.
Vacuum pressure switch	Pressure switch for verifying the adsorption of a workpiece
Suction verification switch	Switch, based on an air pressure bridge, for verifying the adsorption of a workpiece. It is used when the adsorption pad and the nozzle are extremely small.
(Air) supply valve	Valve for supplying compressed air to the ejector
(Vacuum) release valve	Valve for supplying positive pressure or air for breaking the vacuum state of the adsorption pad
Flow adjustment valve	Valve for adjusting the volume of air for breaking the vacuum
Release pressure	Pressure for breaking the vacuum
Pilot pressure	Pressure for operating the ejector valve
External release	The action of breaking the vacuum using externally supplied air instead of using the ejector unit
Vacuum port	Port for generating vacuum
Exhaust port	Port for exhausting air consumed by the ejector, and air taken in from the vacuum port.
Supply port	Port for supplying air to the ejector
Back pressure	Pressure inside the exhaust port
Leakage	The entry of air into the vacuum passage, such as from an area between a workpiece and a pad, or between a fitting and a tube. The vacuum pressure decreases when leakage occurs.
Response time	The time from the application of the rated voltage to the supply valve or release valve, until V port pressure reaches the specified pressure.
Average suction flow rate	The suction flow rate by the ejector or pump for calculating the response speed. It is $\frac{1}{2}$ to $\frac{1}{3}$ of the maximum suction flow rate.
Conductive pad	A low electrical resistance pad for electrostatic prevention measure
Vacuum pressure	Any pressure below the atmospheric pressure. When the atmospheric pressure is used as a reference, the pressure is presented by -kPa (G), and when the absolute pressure is used as a reference, the pressure is represented by kPa (abs). When referencing a piece of vacuum equipment such as an ejector, the pressure is generally represented by -kPa.
Ejector	A unit for generating vacuum by discharging the compressed air from a nozzle at a high speed, based on the phenomenon in which the pressure is reduced when the air around the nozzle is sucked.
Air suction filter	Vacuum filter provided in the vacuum passage for preventing the dust intrusion into the ejector, vacuum pump, or peripheral equipment

Model Selection

● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting)

Condition & Description of improvement	Contributing factor	Countermeasure
Initial adsorption problem (During trial operation)	Adsorption area is small. (Lifting force is lower than the workpiece mass.)	Reconfirm the relationship between workpiece mass and lifting force. • Use a vacuum pad with a large adsorption area. • Increase the quantity of vacuum pads.
	Vacuum pressure is low. (Leakage from adsorption surface) (Air permeable workpiece)	Eliminate (reduce) leakage from adsorption surface. • Reconsider shape of vacuum pad. Confirm the relationship between suction flow rate and arrival pressure of vacuum ejector. • Use a vacuum ejector with a high suction flow rate. • Increase adsorption area.
	Vacuum pressure is low. (Leakage from vacuum piping)	Repair leakage point.
	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Inadequate supply pressure of vacuum ejector	Measure supply pressure in vacuum generation state. • Use standard supply pressure. • Reconsider compressed air circuit (line).
	Clogging of nozzle or diffuser (Infiltration of foreign objects during piping)	Remove foreign objects.
	Supply valve (switching valve) is not being activated.	Measure supply voltage at the solenoid valve with a tester. • Review electric circuits, wiring and connectors. • Use in the rated voltage range.
	Workpiece deforms during adsorption.	Since a workpiece is thin, it deforms and leakage occurs. • Use a pad for adsorption of thin objects.
Late vacuum achieving time (Shortening of response time)	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Using the product as close to the highest vacuum power in the specifications.	Set vacuum pressure to minimum necessary value by optimizing the pad diameter, etc. As the vacuum power of an ejector (venturi) rises, the vacuum flow actually lowers. When an ejector is used at its highest possible vacuum value, the vacuum flow will lower. Due to this, the amount of time needed to achieve adsorption is lengthened. One should consider an increase in the diameter of the ejector nozzle or an increase the size of the vacuum pad utilized in order to lower the required vacuum pressure, maximum the vacuum flow, and speed up the adsorption process.
	Setting of vacuum pressure switch is too high.	Set to suitable setting pressure.

Condition & Description of improvement	Contributing factor	Countermeasure
Fluctuation in vacuum pressure	Fluctuation in supply pressure	Reconsider compressed air circuit (line). (Addition of a tank, etc.)
	Vacuum pressure may fluctuate under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where vacuum pressure does not fluctuate.
Occurrence of abnormal noise (intermittent noise) from exhaust of vacuum ejector	Intermittent noise may occur under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where the intermittent noise does not occur.
Air leakage from vacuum port of manifold type vacuum ejector	Exhaust air from the ejector enters the vacuum port of another ejector that is stopped.	Use a vacuum ejector with a check valve. (Please contact SMC for the part no. of an ejector with a check valve.)
Adsorption problem over time (Adsorption was normal during trial operation.)	Clogging of suction filter	Replace filters. Improve installation environment.
	Clogging of sound absorbing material	Replace sound absorbing materials. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Clogging of nozzle or diffuser	Remove foreign objects. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Vacuum pad (rubber) deterioration, cracking, etc.	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
Workpiece is not released.	Inadequate release flow rate	Open release flow adjustment needle.
	Viscosity increase due to vacuum pad (rubber) wear	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
	Vacuum pressure is too high.	Set vacuum pressure to minimum necessary value.
	Effects due to static electricity	Use a conductive pad.

Model Selection

●Non-conformance Examples

■ No problem occurred during the test, but adsorption becomes unstable after starting operation.

[Possible causes]

- Setting of the vacuum switch is not appropriate. Supply pressure is unstable. Vacuum pressure does not reach the set pressure.□
- There is leakage between the workpiece and the vacuum pad. □

[Remedy]

- 1) Set the pressure for the vacuum equipment (supply pressure, if using an ejector) to the necessary vacuum pressure during the adsorption of the work pieces. And set the set pressure for the vacuum switch to the necessary vacuum pressure for adsorption.□
- 2) It is presumed that there was leakage during the test, but it was not serious enough to prevent adsorption. Revise the vacuum ejector and the shape, diameter, and material of the vacuum pad.□
Revise the vacuum pad.□
□

■ Adsorption becomes unstable after replacing the pad.

[Possible causes]

- Initial setting conditions (vacuum pressure, vacuum switch setting, height of the pad) have changed. Settings have changed because the pad was worn out or had permanent setting due to the operating environment. □
- When the pad was replaced, leakage was generated from the screw connection part, or the engagement between the pad and the adapter. □

[Remedy]

- 1) Revise the operating conditions including vacuum pressure, the set pressure of the vacuum switch, and the height of the pad.□
- 2) Revise the engagement. □
□

■ Identical pads are used to adsorb identical work pieces, but some of the pads cannot adsorb the work pieces.

[Possible causes]

- There is leakage between the workpiece and the vacuum pad.□
- The supply circuit for the cylinder, the solenoid valve and the ejector is in the same pneumatic circuit system. The supply pressure decreases when they are used simultaneously. (Vacuum pressure does not increase)□
- There is leakage from the screw connection part or the engagement between the pad and the adapter. □

[Remedy]

- 1) Revise the pad diameter, shape, material, vacuum ejector (suction flow rate), etc.□
- 2) Revise the pneumatic circuit.□
- 3) Revise the engagement.□
* In principle, vacuum pads are molded using a die. Therefore, there is minimal variance in dimensions between products. □
□

■ The workpiece cannot be separated from the pad. The workpiece sticks to the rubber part of the bellows.

[Possible causes]

- The adhesiveness of the rubber material is high. Adhesiveness increases due to the operating environment (wearing of the pad, etc.).□
- Vacuum pressure is higher than necessary, so excessive force (adhesiveness of the rubber + vacuum pressure) is applied to the pad (rubber part).□

[Remedy]

- 1) Revise the shape, material, and quantity of vacuum pads. □
- 2) Reduce the vacuum pressure. If inadequate lifting force causes a problem in transferring the work pieces due to the reduction of vacuum pressure, increase the number of pads, or select pads with larger diameter.

■ When mounted with the nut, sometimes the buffer operation is not smooth, or the buffer does not slide.

[Possible causes]

- The tightening torque of the nut for mounting the buffer is too high.
- Particles stuck to the sliding surface, or it is scratched.
- Lateral load applied to the piston rod, causing eccentric wearing.

[Remedy]

Tighten the nut to the recommended tightening torque.

The nut may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.

General Purpose

Product specifications			Nut tightening torque
Pad diameter	Product part no.	Mounting thread size	
ø2 to ø16 2004 to 4010	ZP* (02 to 08) U, B* ZP* (10 to 16) UT, CT* ZP* (2004 to 4010) U*	M8 x 1	1.5 to 2.0 N·m
ø10 to ø32	ZP* (10 to 32) U, C, B, D* ZP* (10 to 16) F*	M10 x 1	2.5 to 3.5 N·m
ø20 to ø50	ZP* (40, 50) U, C, B, D* ZP* (20 to 50) F*	M14 x 1	6.5 to 7.5 N·m

Heavy-duty Pad

Product specifications				Nut tightening torque
Pad diameter	Product part no.	Mounting thread size	Buffer body material	
ø40, ø50	ZP* (40/50) H* ZP* (40/50) HB*	M18 x 1.5	Aluminum alloy	9.5 to 10.5 N·m
			Brass	28 to 32 N·m
			Steel	48 to 52 N·m
ø63, ø80	ZP* (63/80) H* ZP* (63/80) HB*	M18 x 1.5	Aluminum alloy	9.5 to 10.5 N·m
			Brass	28 to 32 N·m
			Steel	48 to 52 N·m
ø100, ø125	ZP* (100/125) H* ZP* (100/125) HB*	M22 x 1.5	Aluminum alloy	9.5 to 10.5 N·m
			Brass	45 to 50 N·m
			Steel	75 to 80 N·m

Heavy-duty Ball Joint Pad

Product specifications				Nut tightening torque
Pad diameter	Product part no.	Mounting thread size	Buffer body material	
ø40, ø50	ZP2-*F (40/50) H*	M18 x 1.5	Brass	28 to 32 N·m
	ZP2-*F (40/50) HB*		Steel	48 to 52 N·m
ø63, ø80	ZP2-*F (63/80) H*	M22 x 1.5	Brass	45 to 50 N·m
	ZP2-*F (63/80) HB*		Steel	75 to 80 N·m
ø100, ø125	ZP2-*F (100/125) H*	M22 x 1.5	Brass	45 to 50 N·m
	ZP2-*F (100/125) HB*		Steel	75 to 80 N·m

● Time of Replacement of Vacuum Pad

The vacuum pad is disposable. Replace it on a regular basis.

Continued use of the vacuum pad will cause wear and tear on the adsorption surface, and the exterior dimensions will gradually get smaller and smaller. As the pad diameter gets smaller, lifting force will decrease, though adsorption is possible.

It is extremely difficult to provide advice on the frequency of vacuum pad exchange. This is because there are numerous factors at work, including surface roughness, operating environment (temperature, humidity, ozone, solvents, etc.), and operating conditions (vacuum pressure, workpiece weight, pressing force of the vacuum pad on the workpiece, presence or absence of a buffer, etc.).

Thus, the customer should decide when the vacuum pad should be exchanged, based on its condition at time of initial use.

The bolt may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.

Recommended Tightening Torque for Replacement of Heavy-duty Pad

Product specifications			Bolt tightening torque
Pad diameter	Product part no.	Bolt	
ø40, ø50	ZP (40/50) H* ZP (40/50) HB*	M3 x 8	0.7 to 0.9 N·m
ø63, ø80	ZP (63/80) H* ZP (63/80) HB*	M4 x 8	0.9 to 1.1 N·m
ø100, ø125	ZP (100/125) H* ZP (100/125) HB*	M5 x 10	2.3 to 2.7 N·m

Assemble parts with recommended tightening torque.



Compact Pad

Pad diameter $\varnothing 3, \varnothing 4, \varnothing 5, \varnothing 6, \varnothing 7, \varnothing 8$

Symbol/Type

U: Flat
C: Flat with rib
UT: Thin flat
B: Bellows

- 7 types of $\varnothing 3$ to $\varnothing 8$ are added.
- Applicable for the ZP series adapter

How to Order

Pad unit **ZP2 - 03 U N**



Pad diameter		
Symbol	Pad diameter	Blast type
03	$\varnothing 3$	—
B04	$\varnothing 4$	●
05	$\varnothing 5$	—
06	$\varnothing 6$	—
B06	$\varnothing 6$	●
07	$\varnothing 7$	—
B08	$\varnothing 8$	●

* Blast type: Work pieces can be removed easily.


Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type—Pad diameter

Pad type	Pad diameter (Symbol)						
	03	B04	05	06	B06	07	B08
U (Flat)	●	●	—	—	—	—	—
C (Flat with rib)	—	—	—	—	●	●	●
UT (Thin flat)	—	—	●	●	—	—	—
B (Bellows)	—	—	—	—	●	—	●

Dimensions: Pad Unit

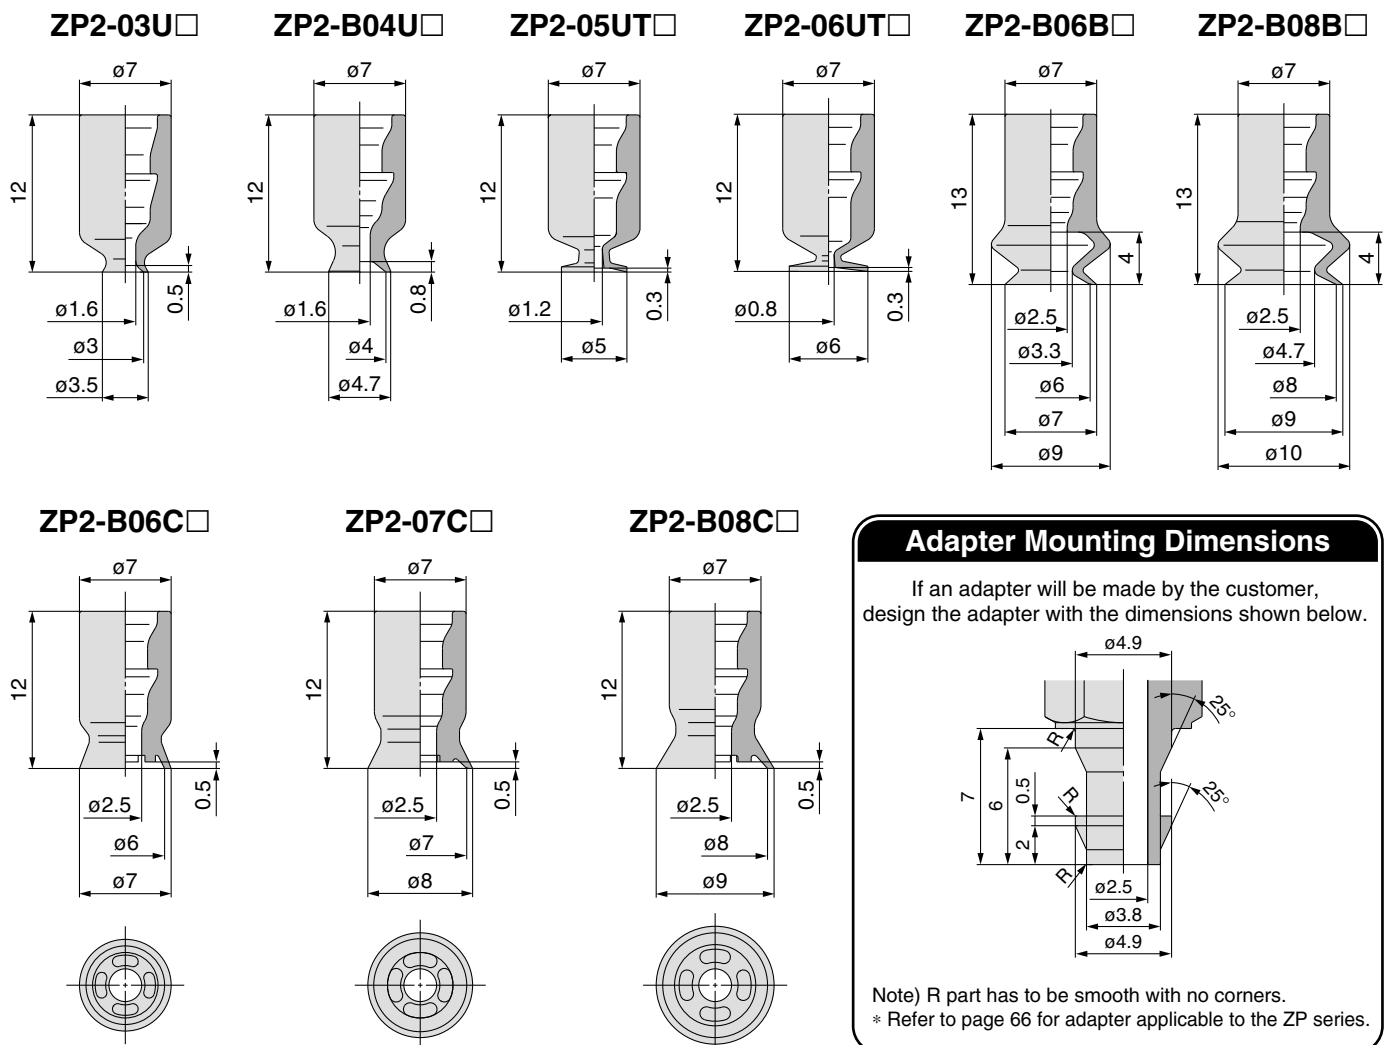

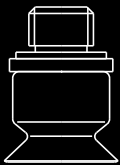


Short-type Pad

Symbol/Type

Pad diameter $\varnothing 2, \varnothing 3.5, \varnothing 4, \varnothing 5, \varnothing 6, \varnothing 8, \varnothing 10, \varnothing 15$

MU: Flat

■ Space-saving in the height direction

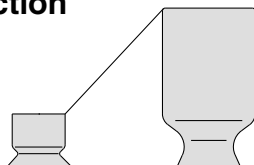

How to Order



Pad unit **ZP2 – B02 MU N**

Symbol	Pad diameter	Blast type
B02	$\varnothing 2$	●
B035	$\varnothing 3.5$	●
B04	$\varnothing 4$	●
B05	$\varnothing 5$	●
B06	$\varnothing 6$	●
B08	$\varnothing 8$	●
B10	$\varnothing 10$	●
B15	$\varnothing 15$	●

* Blast type: Work pieces can be removed easily.

Pad type


Symbol	Type
MU	Flat

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Dimensions: Pad Unit


ZP2-B02MU□

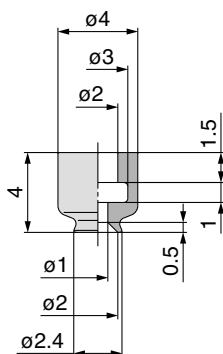


ZP2-B035MU□

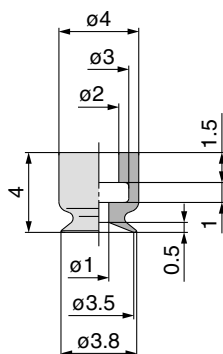


ZP2-B04MU□

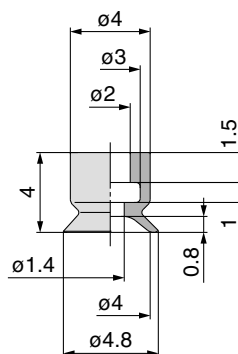


ZP2-B05MU□

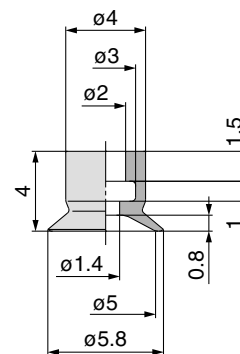


ZP2-B06MU□

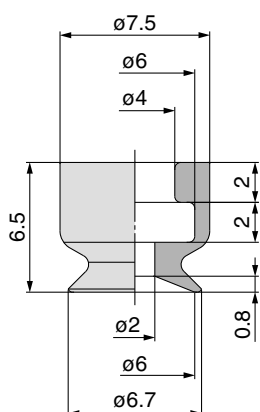


ZP2-B08MU□

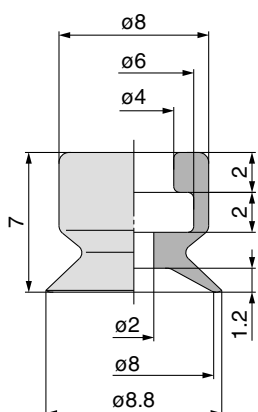

ZP2-B10MU□

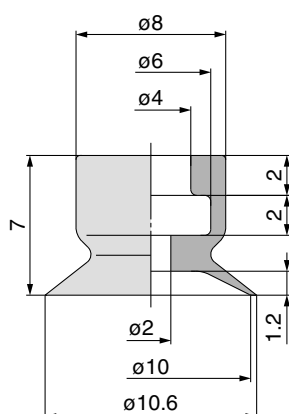


ZP2-B15MU□

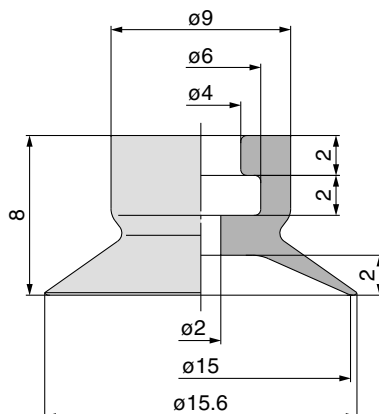


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.

Applicable pad
B02MU/B035MU/B04MU/B05MU

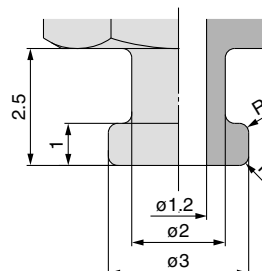

Applicable pad
B06MU/B08MU/B10MU/B15MU

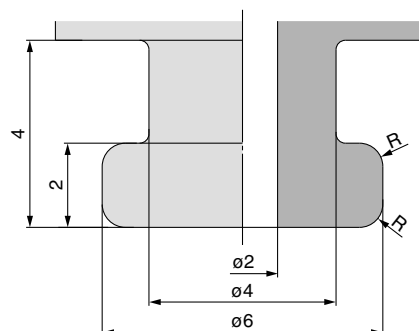

Note) R part has to be smooth with no corners.

* Refer to page 69 for adapter applicable to the ZP2 series.

How to Order



With adapter ZP2-T B02 MU **N**-A3

Vacuum inlet direction ●

Symbol	Direction
T	Vertical

Pad diameter ●

Symbol	Pad diameter	Blast type
B02	ø2	●
B035	ø3.5	●
B04	ø4	●
B05	ø5	●
B06	ø6	●
B08	ø8	●
B10	ø10	●
B15	ø15	●

* Blast type: Work pieces can be removed easily.

Pad type

Symbol	Type
MU	Flat

- **Mounting**

Thread size \ Pad diameter (Symbol)	B02	B035	B04	B05	B06	B08	B10	B15
A3 (M3 x 0.5 Male thread)	●	●	●	●	—	—	—	—
H5 (M5 x 0.8 Male thread)	—	—	—	—	●	●	●	●
B5 (M5 x 0.8 Female thread)	—	—	—	—	●	●	●	●

- **Pad material**

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-TB02MU□-A3	ZP2-B02MU□	ZP2A-M01P
ZP2-TB035MU□-A3	ZP2-B035MU□	
ZP2-TB04MU□-A3	ZP2-B04MU□	
ZP2-TB05MU□-A3	ZP2-B05MU□	
ZP2-TB06MU□-H5	ZP2-B06MU□	ZP2A-M02P
ZP2-TB08MU□-H5	ZP2-B08MU□	
ZP2-TB10MU□-H5	ZP2-B10MU□	
ZP2-TB15MU□-H5	ZP2-B15MU□	
ZP2-TB06MU□-B5	ZP2-B06MU□	ZP2A-M04
ZP2-TB08MU□-B5	ZP2-B08MU□	
ZP2-TB10MU□-B5	ZP2-B10MU□	
ZP2-TB15MU□-B5	ZP2-B15MU□	


Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-TB02MU□-A3

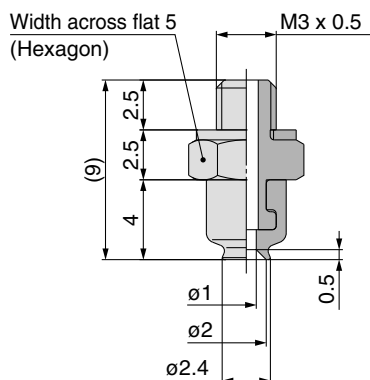


ZP2-TB035MU□-A3

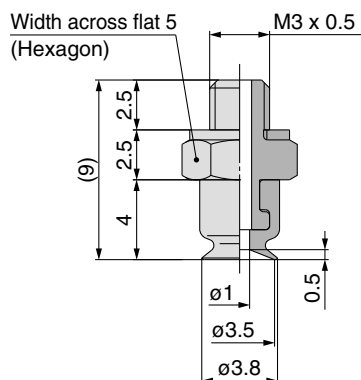


ZP2-TB04MU□-A3

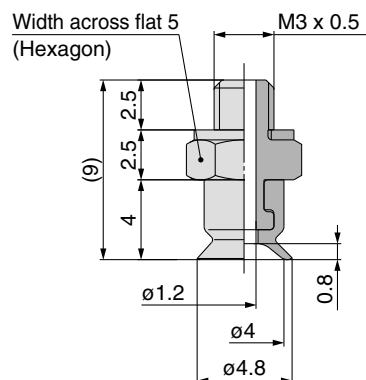


ZP2-TB05MU□-A3

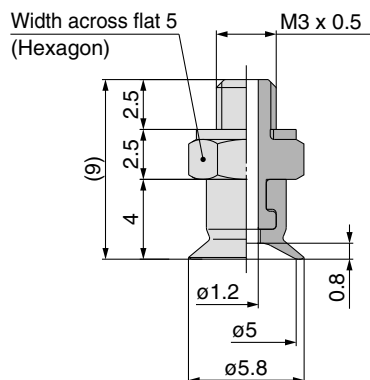







ZP2-TB06MU□-H5

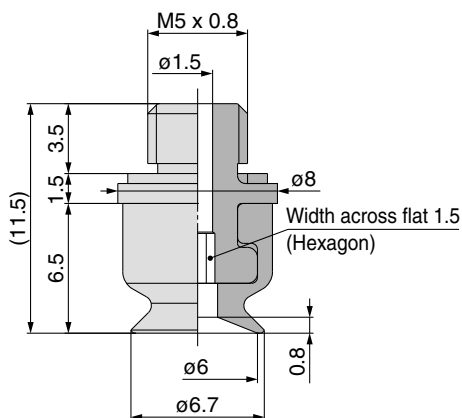


ZP2-TB08MU□-H5

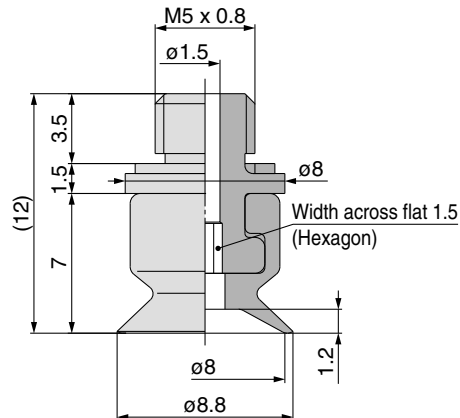

Dimensions: With Adapter

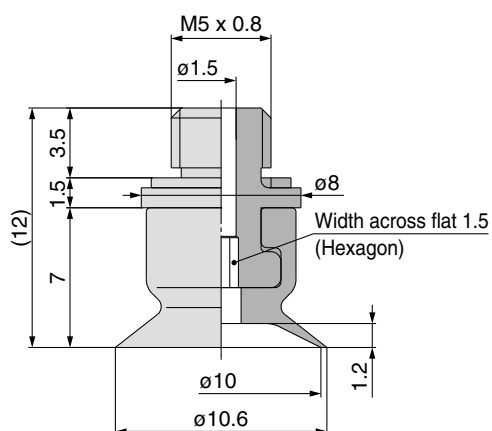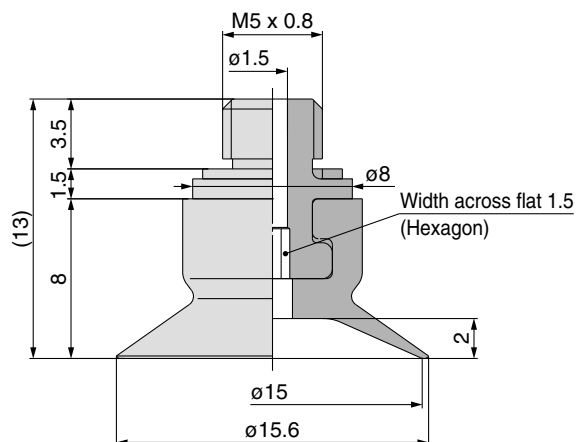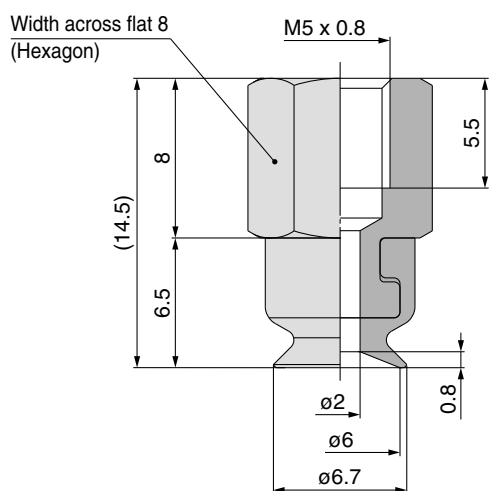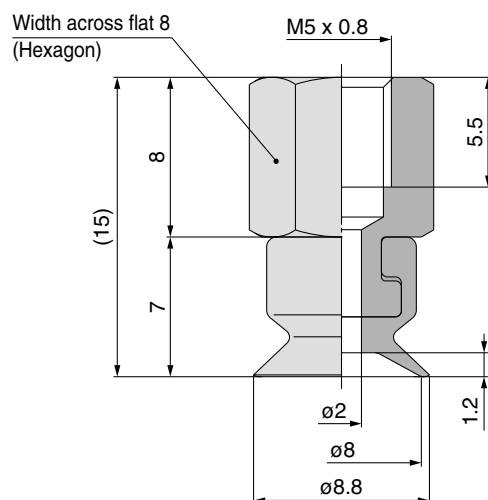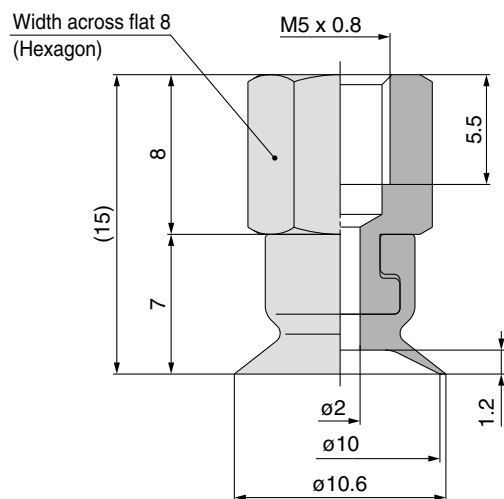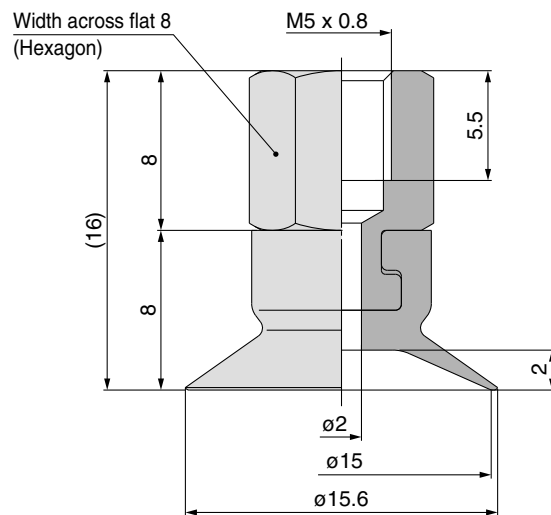ZP2-TB10MU□-H5

ZP2-TB15MU□-H5

ZP2-TB06MU□-B5

ZP2-TB08MU□-B5

ZP2-TB10MU□-B5

ZP2-TB15MU□-B5




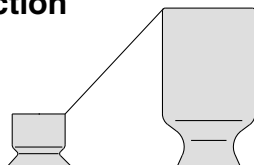
Short-type Pad

Symbol/Type

EU: Flat

Pad diameter $\varnothing 2, \varnothing 4, \varnothing 6, \varnothing 8, \varnothing 15$

■ Space-saving in the height direction



How to Order

Pad unit **ZP2 – B02 EU N**



Pad diameter

Symbol	Pad diameter	Blast type
B02	$\varnothing 2$	●
B04	$\varnothing 4$	●
B06	$\varnothing 6$	●
08	$\varnothing 8$	—
15	$\varnothing 15$	—

* Blast type: Work pieces can be removed easily.

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type


Symbol	Type
EU	Flat

Dimensions: Pad Unit


ZP2-B02EU□

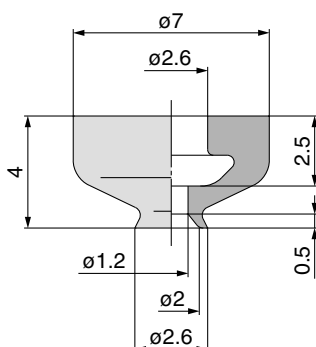


ZP2-B04EU□

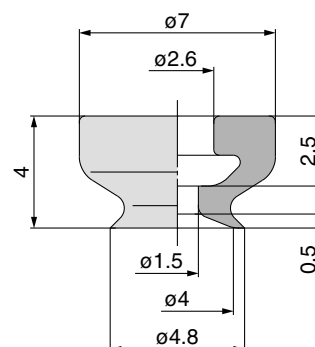


ZP2-B06EU□

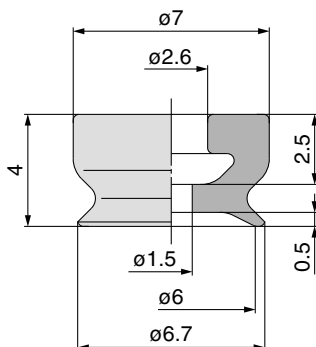

ZP2-08EU□

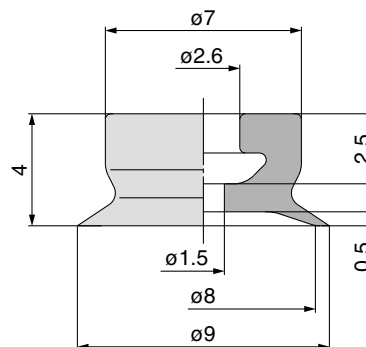


ZP2-15EU□

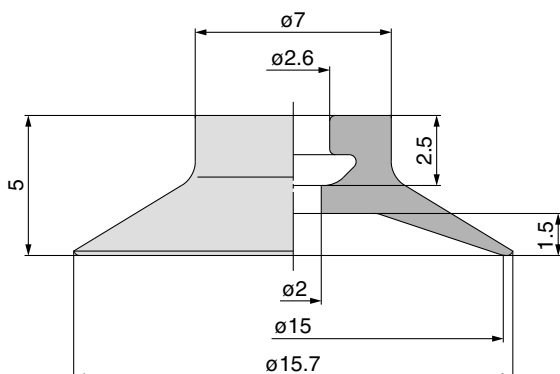

Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.

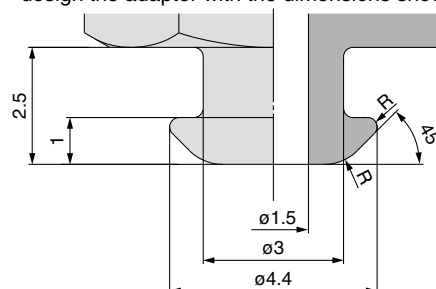

Note) R part has to be smooth with no corners.
* Refer to page 70 for adapter applicable to the ZP2 series.

How to Order

With adapter **ZP2 - T B02 EU N - A5**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad diameter

Symbol	Pad diameter	Blast type
B02	ø2	●
B04	ø4	●
B06	ø6	●
08	ø8	—
15	ø15	—

* Blast type: Work pieces can be removed easily.

Pad type

Symbol	Type
EU	Flat

Mounting

Symbol	Thread size	Adapter type
A5	M5 x 0.8	Hexagon O.D.
H5	M5 x 0.8	Hexagon socket head

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-TB02EU□-A5	ZP2-B02EU□	ZP2A-Z01P
ZP2-TB04EU□-A5	ZP2-B04EU□	
ZP2-TB06EU□-A5	ZP2-B06EU□	
ZP2-T08EU□-A5	ZP2-08EU□	
ZP2-T15EU□-A5	ZP2-15EU□	
ZP2-TB02EU□-H5	ZP2-B02EU□	ZP2A-Z02P
ZP2-TB04EU□-H5	ZP2-B04EU□	
ZP2-TB06EU□-H5	ZP2-B06EU□	
ZP2-T08EU□-H5	ZP2-08EU□	
ZP2-T15EU□-H5	ZP2-15EU□	


Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-TB02EU□-A5

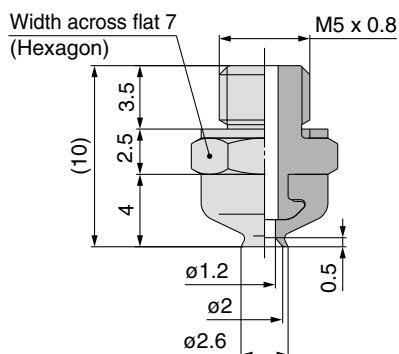


ZP2-TB04EU□-A5

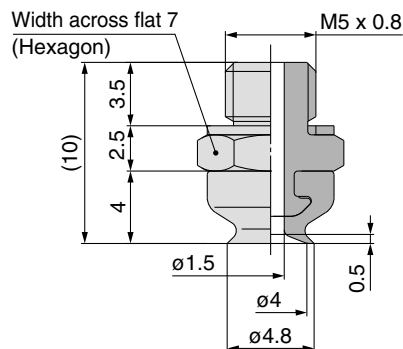


ZP2-TB06EU□-A5

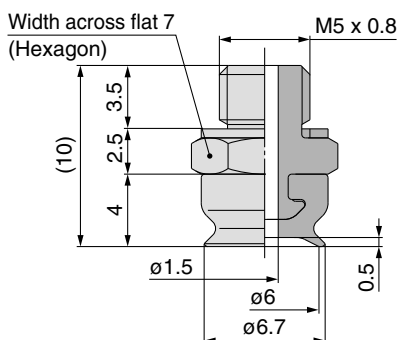

ZP2-T08EU□-A5

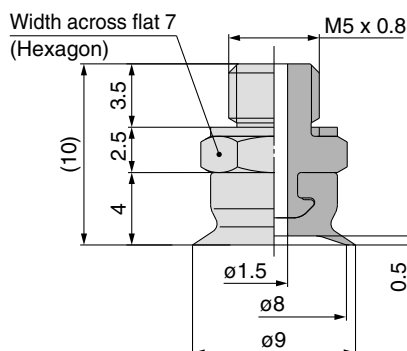


ZP2-T15EU□-A5

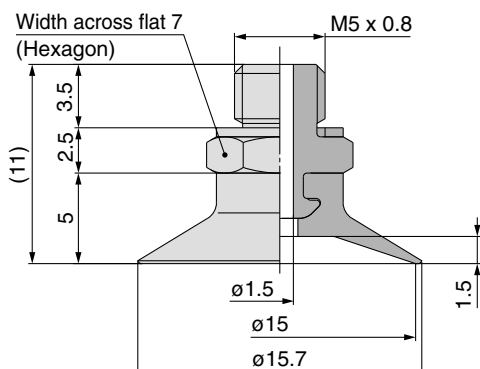


Series ZP2

Dimensions: With Adapter


ZP2-TB02EU□-H5

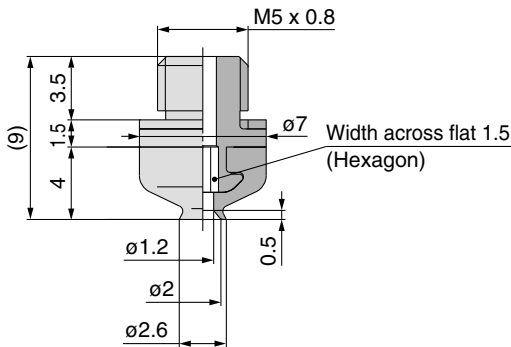


ZP2-TB04EU□-H5

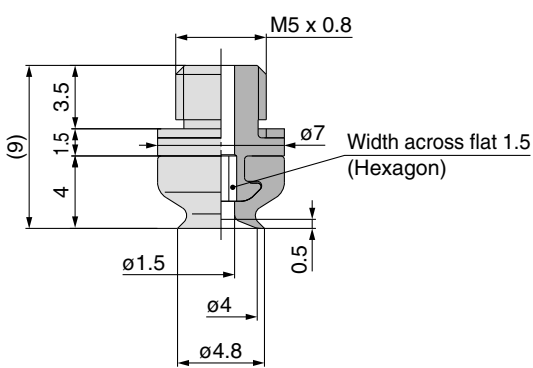


ZP2-TB06EU□-H5

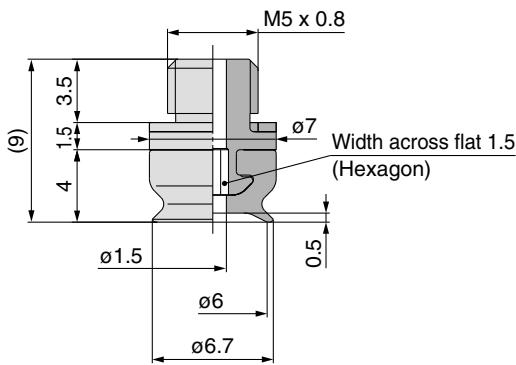


ZP2-T08EU□-H5

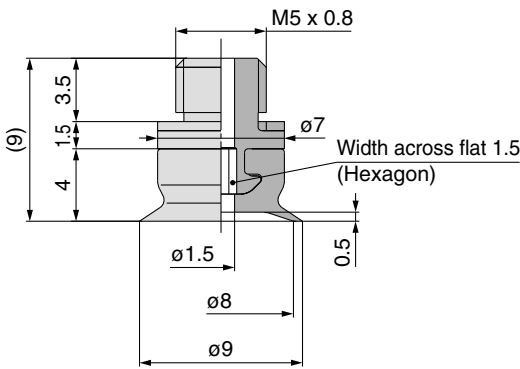

ZP2-T15EU□-H5

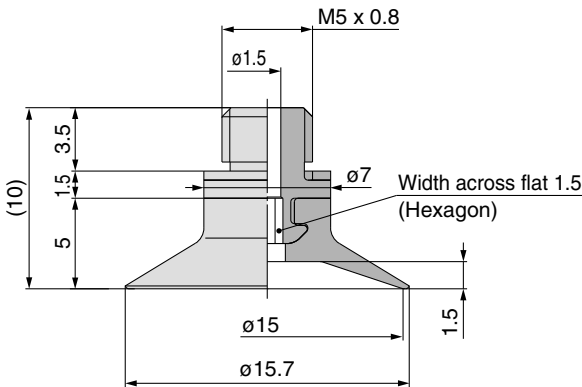

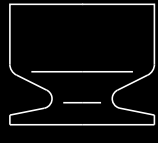


Short-type Pad

Symbol/Type

AU: Flat

Pad diameter $\varnothing 2, \varnothing 3, \varnothing 4, \varnothing 6, \varnothing 8$

■ Space-saving in the height direction

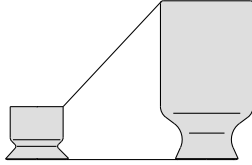

How to Order



Pad unit **ZP2-02 AU N**

Pad diameter

Symbol	Pad diameter	Blast type
02	$\varnothing 2$	—
03	$\varnothing 3$	—
04	$\varnothing 4$	—
06	$\varnothing 6$	—
B08	$\varnothing 8$	●

* Blast type: Work pieces can be removed easily.

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type


Symbol	Type
AU	Flat

Dimensions: Pad Unit


ZP2-02AU□

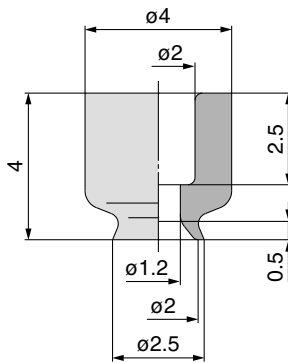


ZP2-03AU□

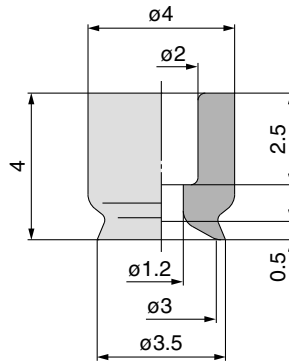


ZP2-04AU□

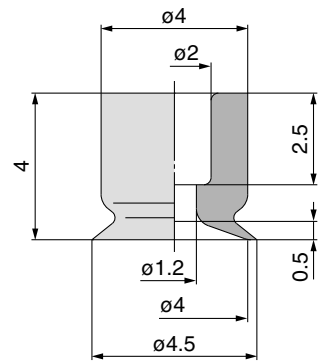


ZP2-06AU□

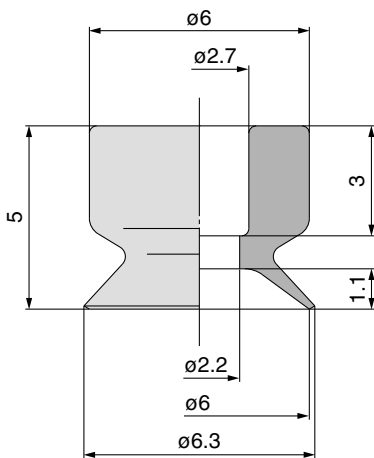

ZP2-B08AU□

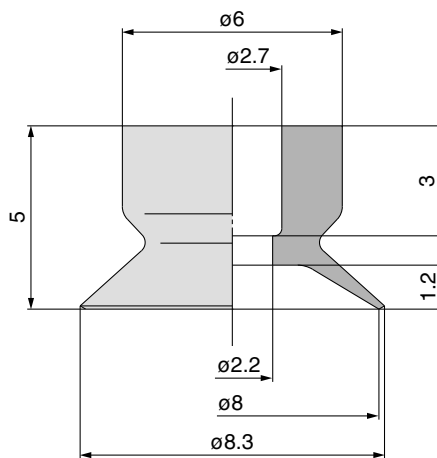




Nozzle Pad

Pad diameter $\varnothing 0.8, \varnothing 1.1$

Symbol/Type

AN: Nozzle

■ For adsorption of small components (such as IC chips)



How to Order

Pad unit **ZP2-08AN** **N**

Pad diameter

Symbol	Pad diameter
08	$\varnothing 0.8$
11	$\varnothing 1.1$

Pad type

Symbol	Type
AN	Nozzle


Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber




Dimensions: Pad Unit

ZP2-08AN \square

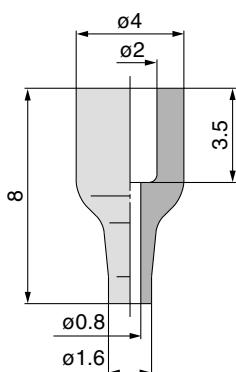


ZP2-11AN \square

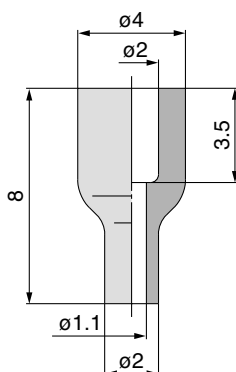

Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.

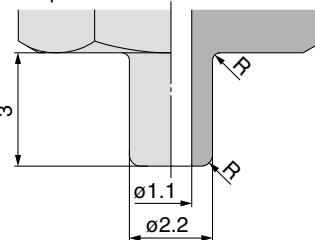

Note) R part has to be smooth with no corners.

* Refer to page 70 for adapter applicable to the ZP2 series.

How to Order

With adapter **ZP2-T08AN** **N** - **A5**

Vacuum entry direction

Symbol	Direction
T	Vertical

Pad diameter

Symbol	Pad diameter
08	$\varnothing 0.8$
11	$\varnothing 1.1$

Pad type

Symbol	Type
AN	Nozzle

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Mounting

Symbol	Thread size
A5	M5 x 0.8


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-T08AN \square - A5	ZP2-08AN \square	ZP2A-Z21P
ZP2-T11AN \square - A5	ZP2-11AN \square	


Note) \square in the table indicates the pad material.


Dimensions: With Adapter

ZP2-T08AN \square - **A5**

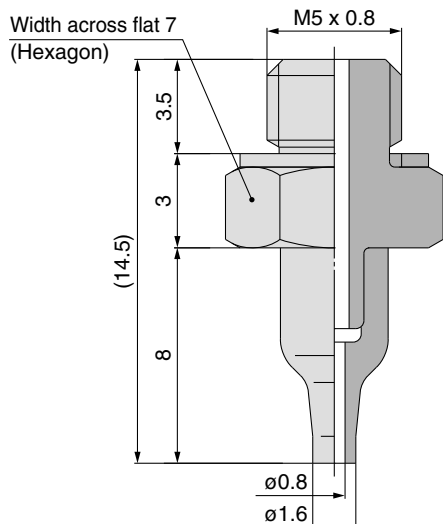

ZP2-T11AN \square - **A5**

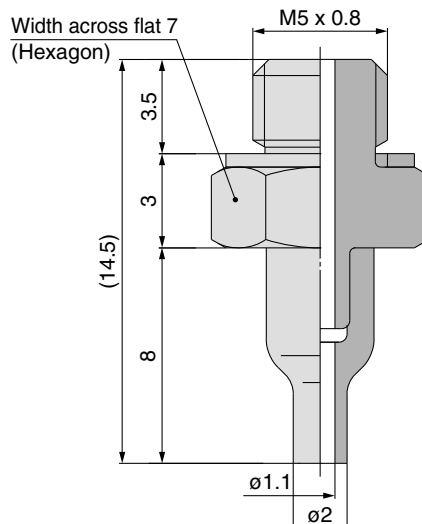

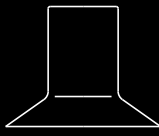

Thin Flat Pad

Pad diameter ø5, ø6, ø11, ø14, ø18, ø20

Symbol/Type

UT: Thin flat (Skirt)

- For adsorption of soft work pieces such as thin sheets or vinyl. Wrinkling or deformation during adsorption is reduced.
- Applicable for the ZP series adapter

How to Order

Pad unit

ZP2 – 11 UT

N

Pad diameter


Symbol	Pad diameter
05	ø5
06	ø6
11	ø11
14	ø14
18	ø18
20	ø20

Pad type


Symbol	Type
UT	Thin flat (Skirt)

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber




Dimensions: Pad Unit

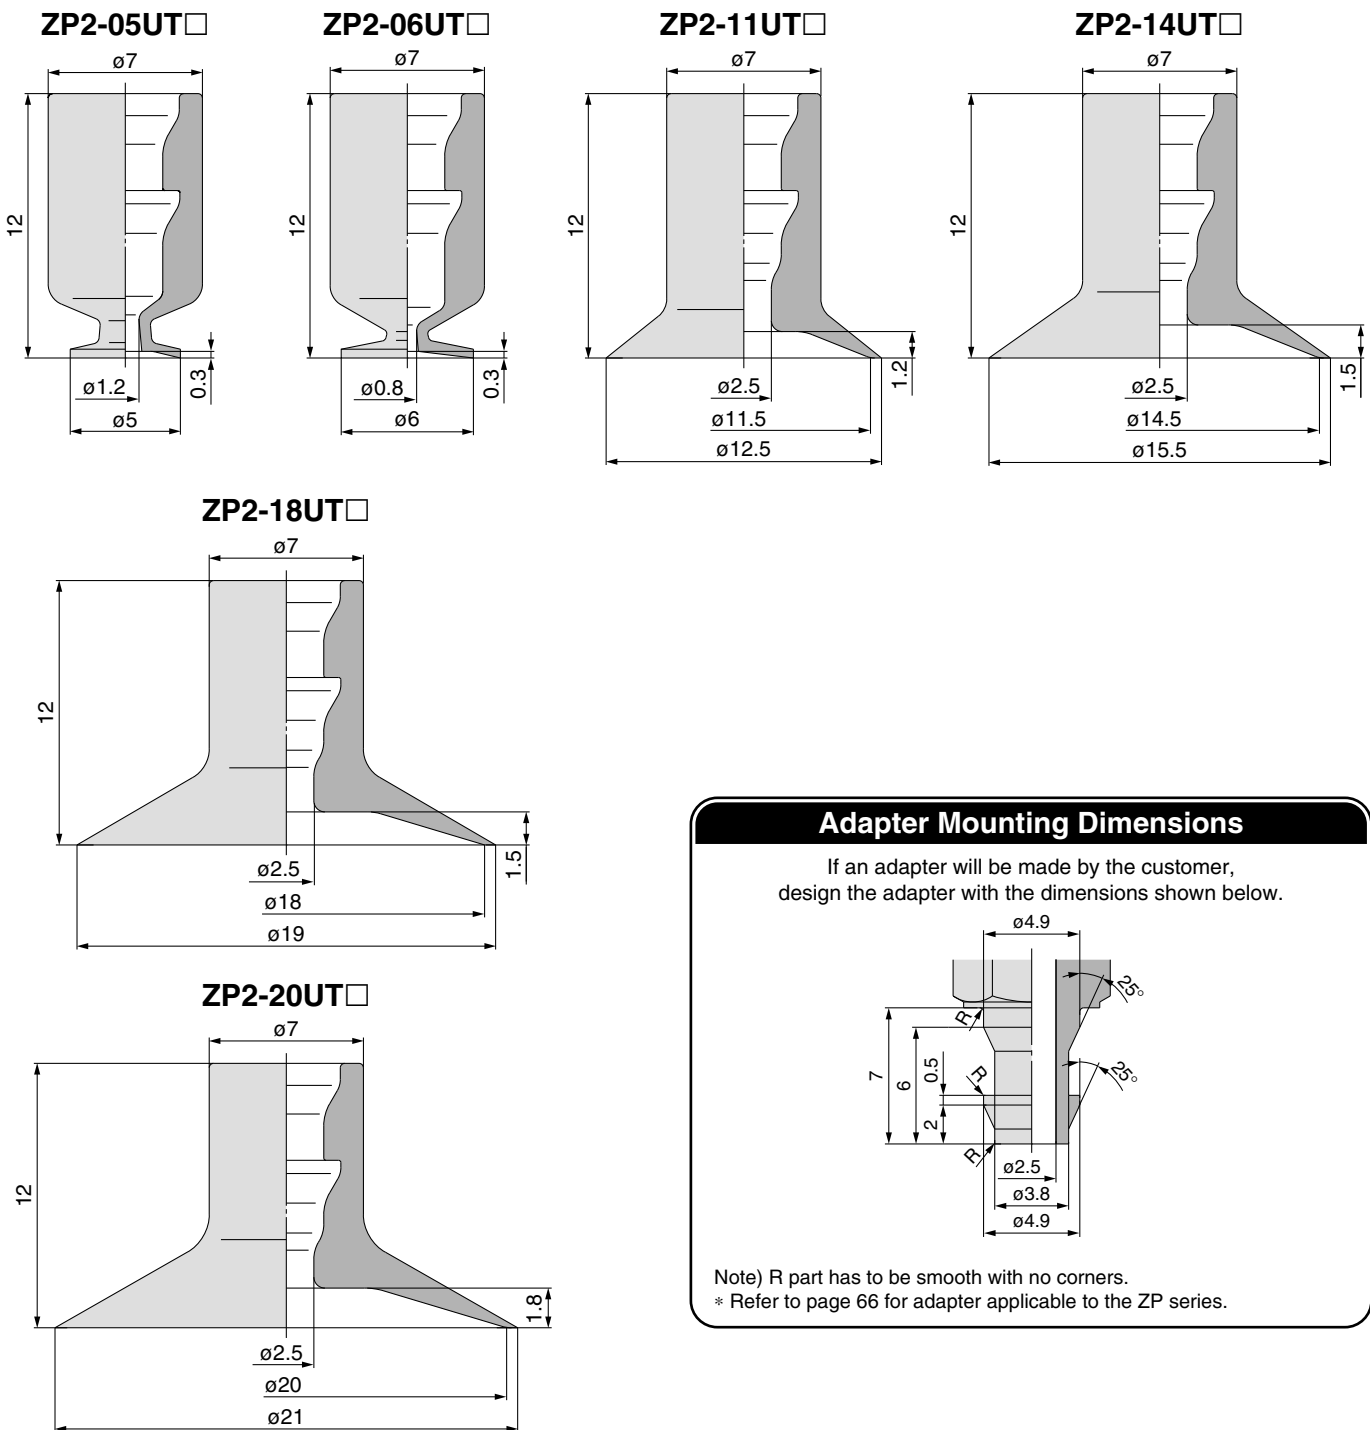

Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.

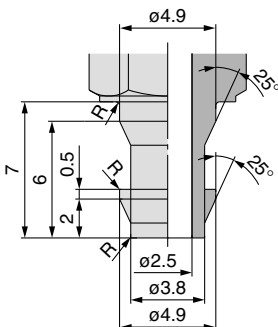

Note) R part has to be smooth with no corners.
 * Refer to page 66 for adapter applicable to the ZP series.




Flat Pad

Pad diameter $\varnothing 10, \varnothing 15, \varnothing 20, \varnothing 25, \varnothing 30$

Symbol/Type


MT: Thin flat
(with groove)

■ Adsorption surface with groove

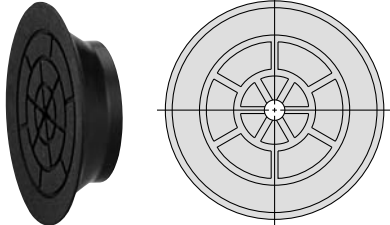

How to Order

Pad unit **ZP2 - B10 MT N**



Pad diameter

Symbol	Pad diameter	Blast type
B10	$\varnothing 10$	●
B15	$\varnothing 15$	●
B20	$\varnothing 20$	●
B25	$\varnothing 25$	●
B30	$\varnothing 30$	●

* Blast type: Work pieces can be removed easily.

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type

Symbol	Type
MT	Thin flat (With groove)

■ For adsorption of thin sheets or film

Deformation of the flat surface during adsorption is reduced.


Note 1) Not suitable for transferring work pieces which apply a load.

Note 2) Wrinkling may be generated depending on the sheet thickness.


Confirm the thickness before use.

Dimensions: Pad Unit


ZP2-B10MT□

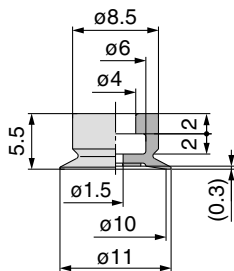


ZP2-B15MT□

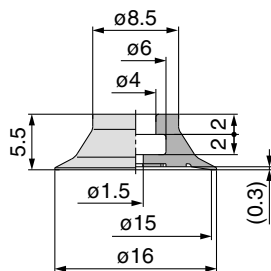


ZP2-B20MT□

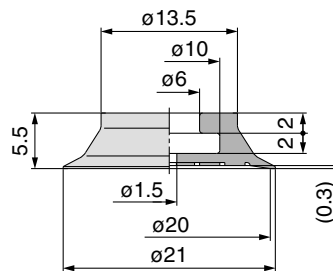

ZP2-B25MT□

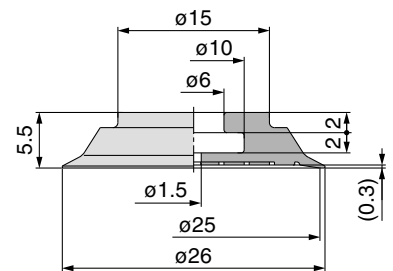


ZP2-B30MT□

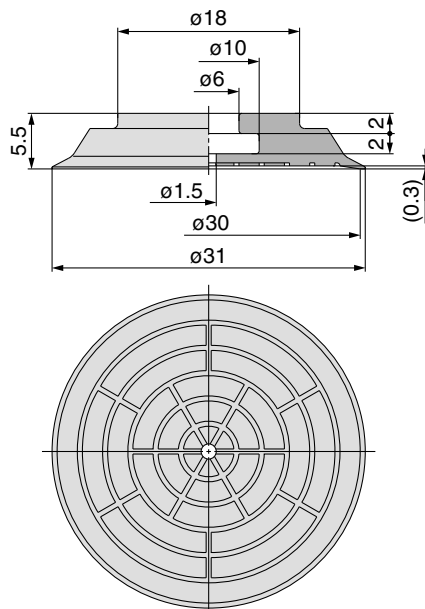


Adapter Mounting Dimensions

If an adapter will be made by the customer,
design the adapter with the dimensions shown below.

Applicable pad B10MT/B15MT

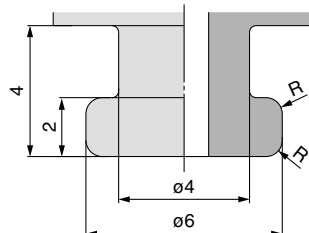

Applicable pad B20MT/B25MT/B30MT

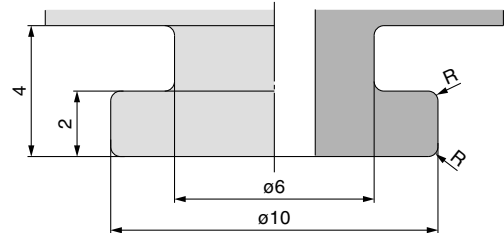

Note) R part has to be smooth with no corners.

* Refer to page 69 for adapter applicable to the ZP2 series.

How to Order



With adapter **ZP2-T B10 MT N-H5**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad diameter

Symbol	Pad diameter	Blast type
B10	ø10	●
B15	ø15	●
B20	ø20	●
B25	ø25	●
B30	ø30	●

* Blast type: Work pieces can be removed easily.

Pad type

Symbol	Type
MT	Thin flat (With groove)

Mounting

Thread size (Symbol)	Pad diameter (Symbol)	B10	B15	B20	B25	B30
H5 (M5 x 0.8 Male thread)		●	●	●	●	●
B5 (M5 x 0.8 Female thread)		●	●	—	—	—

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber



Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-TB10MT□-H5	ZP2-B10MT□	ZP2A-M02
ZP2-TB15MT□-H5	ZP2-B15MT□	
ZP2-TB20MT□-H5	ZP2-B20MT□	ZP2A-M03
ZP2-TB25MT□-H5	ZP2-B25MT□	
ZP2-TB30MT□-H5	ZP2-B30MT□	ZP2A-M04
ZP2-TB10MT□-B5	ZP2-B10MT□	
ZP2-TB15MT□-B5	ZP2-B15MT□	



Note) □ in the table indicates the pad material.

Dimensions: With Adapter



ZP2-TB10MT□-H5

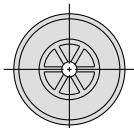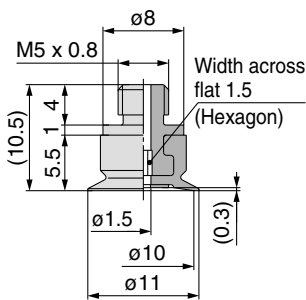



ZP2-TB15MT□-H5

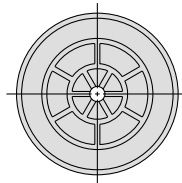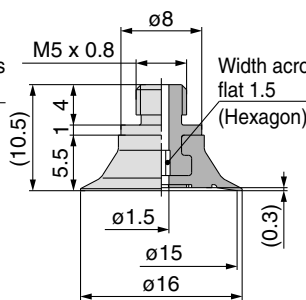



ZP2-TB20MT□-H5

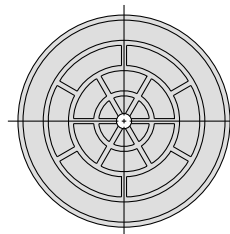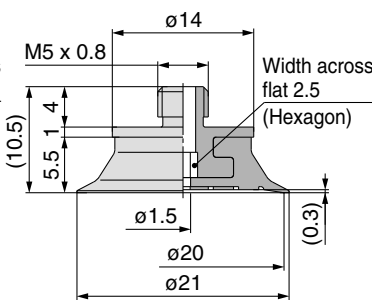



ZP2-TB25MT□-H5

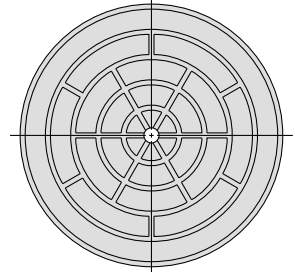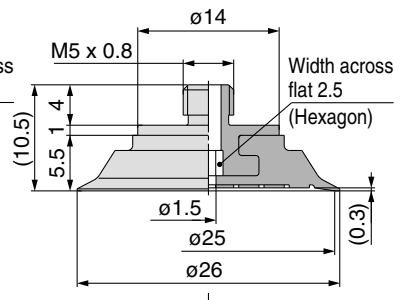



ZP2-TB30MT□-H5

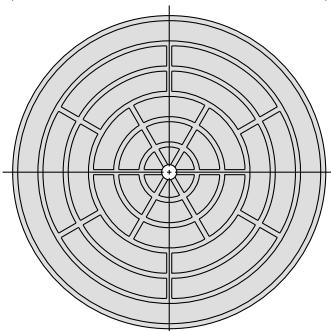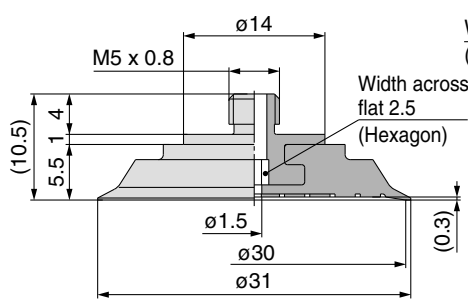


ZP2-TB10MT□-B5

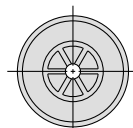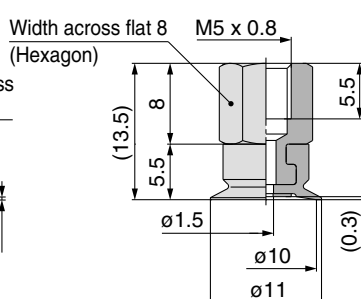

ZP2-TB15MT□-B5

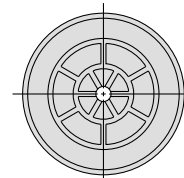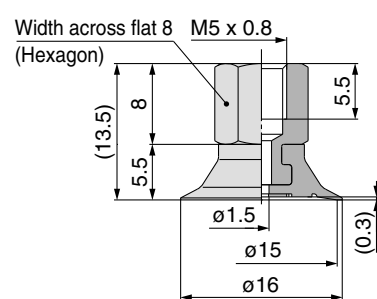



Bellows Pad

Pad diameter $\phi 6, \phi 9, \phi 10, \phi 14, \phi 15, \phi 16, \phi 25, \phi 30$

Symbol/Type

J: Bellows
(Multistage type)

■ For use where there is no space for the buffer (spring type)

■ Work pieces with inclined adsorption surface

■ Applicable for the ZP series adapter



How to Order

Pad unit **ZP2-06 J N-X19**

Symbol	Pad diameter	Blast type
06	$\phi 6$	—
09	$\phi 9$	—
B10	$\phi 10$	●
14	$\phi 14$	—
B15	$\phi 15$	●
16	$\phi 16$	—
B25	$\phi 25$	●
B30	$\phi 30$	●

* Blast type: Work pieces can be removed easily.

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type

Symbol	Type
J	Bellows (Multistage type)




With/Without lock ring

Nil	With lock ring
X19	Without lock ring (Note)


Note) $\phi 6, \phi 10, \phi 15$ are not available.

Dimensions: Pad Unit


ZP2-06J

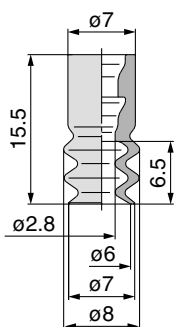


ZP2-09J

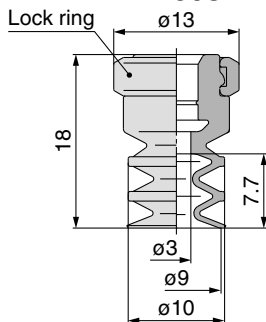


ZP2-B10J

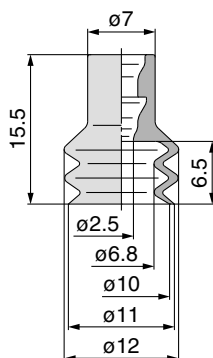


ZP2-14J

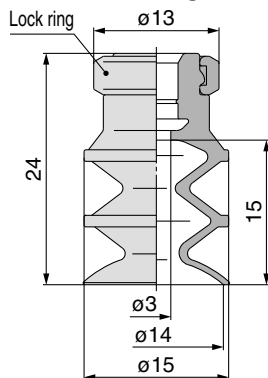


ZP2-B15J

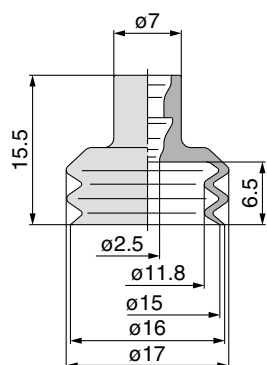


ZP2-16J

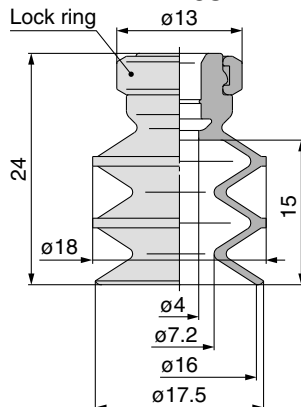

ZP2-B25J

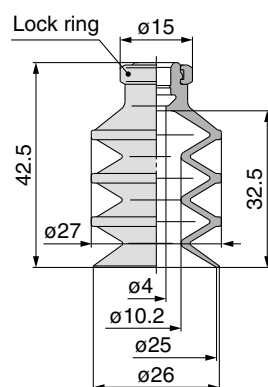


ZP2-B30J

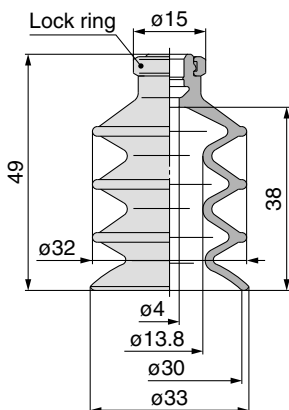


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad
06J/B10J/B15J

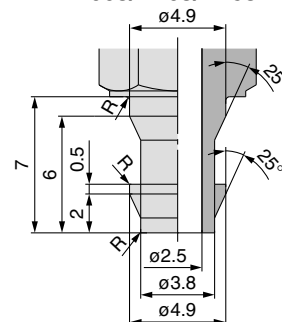


Applicable pad
09J/14J/16J

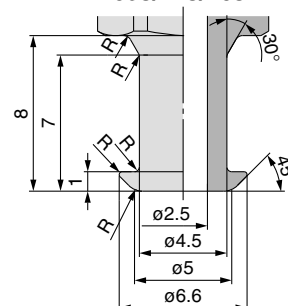

Applicable pad
B25J/B30J

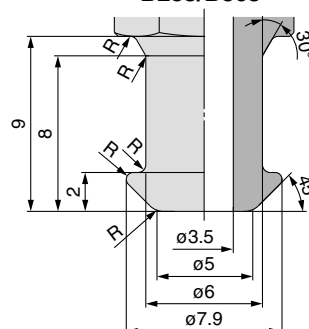

Note) R part has to be smooth with no corners.
* Refer to page 66 for adapter applicable to the ZP series.

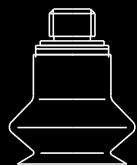

Bellows Pad

Symbol/Type

MB: Bellows

Pad diameter $\varnothing 4, \varnothing 6, \varnothing 8, \varnothing 10, \varnothing 15, \varnothing 20$

■ For use where there is no space for the buffer (spring type)

■ Work pieces with inclined adsorption surface

How to Order

Pad unit **ZP2 - B04 MB N**

Symbol	Pad diameter	Blast type
B04	$\varnothing 4$	●
B06	$\varnothing 6$	●
B08	$\varnothing 8$	●
B10	$\varnothing 10$	●
B15	$\varnothing 15$	●
B20	$\varnothing 20$	●

Symbol	Type
MB	Bellows


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber




* Blast type: Work pieces can be removed easily.

Dimensions: Pad Unit


ZP2-B04MB

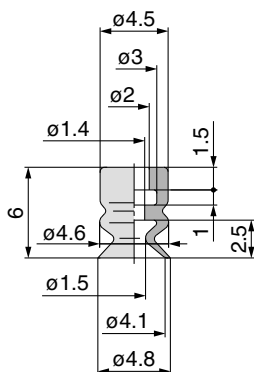


ZP2-B06MB

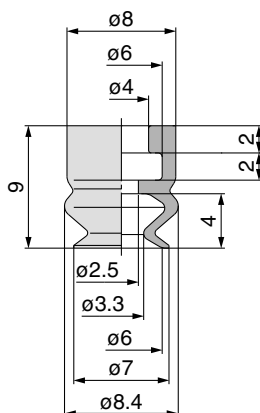


ZP2-B08MB

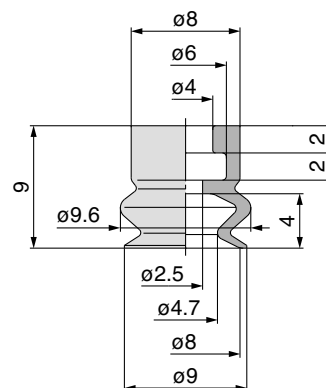


ZP2-B10MB

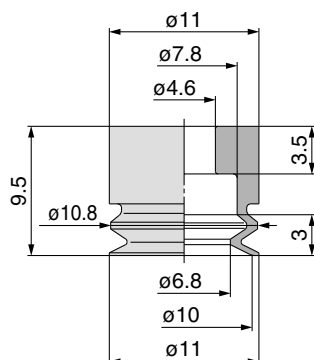

ZP2-B15MB

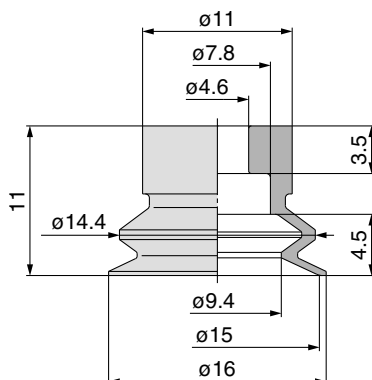


ZP2-B20MB

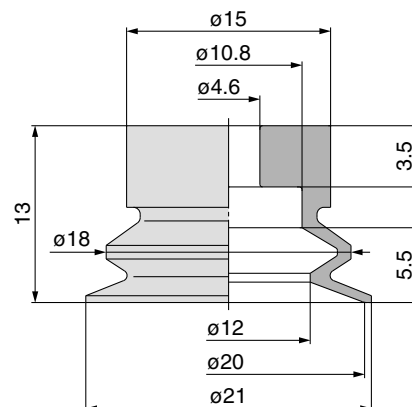


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad
B04MB

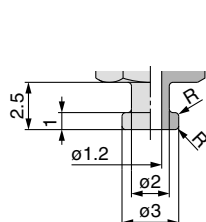


Applicable pad
B06MB/B08MB

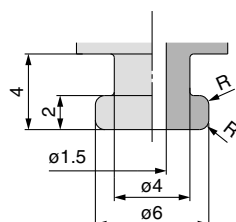

Applicable pad
B10MB/B15MB

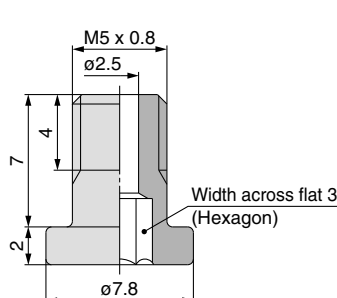

Applicable pad
B20MB

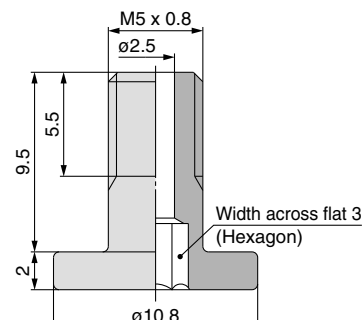

Note) R part has to be smooth with no corners.

* Refer to pages 69 and 70 for adapter applicable to the ZP2 series.

How to Order



With adapter **ZP2 – T B04 MB N – A3**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad diameter ●

Symbol	Pad diameter	Blast type
B04	ø4	●
B06	ø6	●
B08	ø8	●
B10	ø10	●
B15	ø15	●
B20	ø20	●

* Blast type: Work pieces can be removed easily.

- **Mounting**

Thread size (Symbol)	Pad diameter (Symbol)	B04	B06	B08	B10	B15	B20
A3 (M3 x 0.5 Male thread)		●	—	—	—	—	—
H5 (M5 x 0.8 Male thread)		—	●	●	●	—	●
B5 (M5 x 0.8 Female thread)		—	●	●	—	—	—

- Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

- **Pad type**

Symbol	Type
MB	Bellows


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-TB04MB <input type="checkbox"/> - A3	ZP2-B04MB <input type="checkbox"/>	ZP2A-M01F
ZP2-TB06MB <input type="checkbox"/> - H5	ZP2-B06MB <input type="checkbox"/>	ZP2A-M02P
ZP2-TB08MB <input type="checkbox"/> - H5	ZP2-B08MB <input type="checkbox"/>	
ZP2-TB10MB <input type="checkbox"/> - H5	ZP2-B10MB <input type="checkbox"/>	ZP2A-M05
ZP2-TB15MB <input type="checkbox"/> - H5	ZP2-B15MB <input type="checkbox"/>	
ZP2-TB20MB <input type="checkbox"/> - H5	ZP2-B20MB <input type="checkbox"/>	ZP2A-M06
ZP2-TB06MB <input type="checkbox"/> - B5	ZP2-B06MB <input type="checkbox"/>	ZP2A-M04
ZP2-TB08MB <input type="checkbox"/> - B5	ZP2-B08MB <input type="checkbox"/>	


Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-TB04MB□□-A3

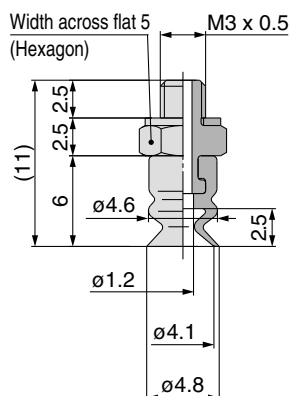


ZP2-TB06MB□-H5

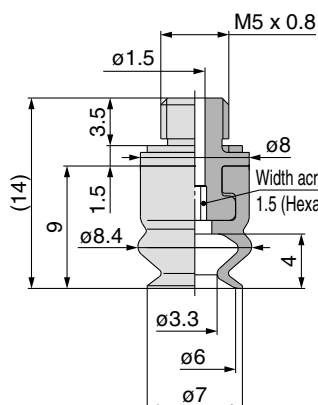


ZP2-TB08MB□-H5

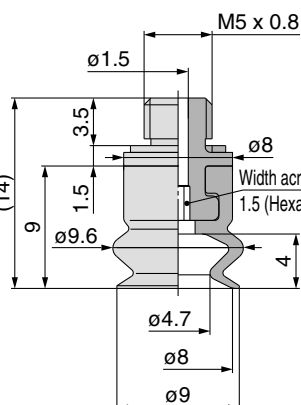


ZP2-TB10MB□-H5

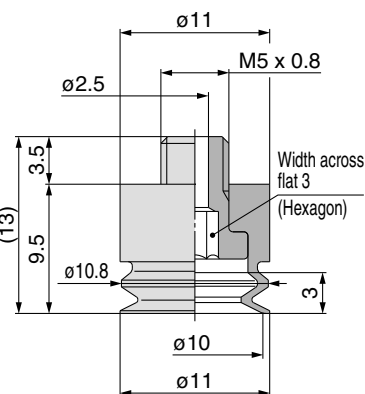


ZP2-TB15MB□-H5

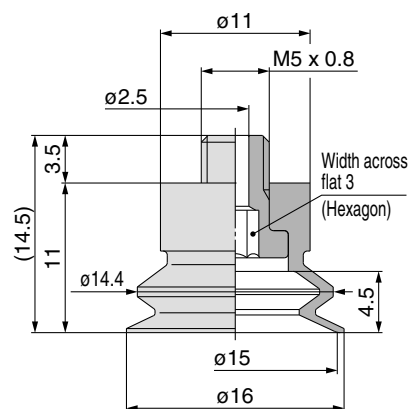


ZP2-TB20MB□-H5

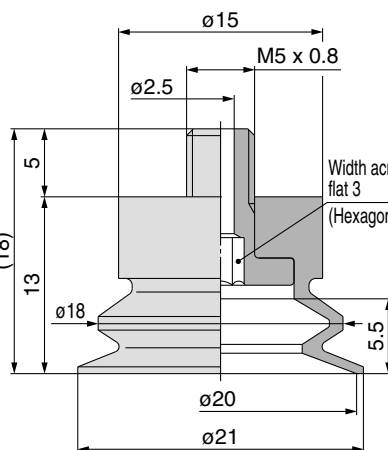

ZP2-TB06MB□-B5

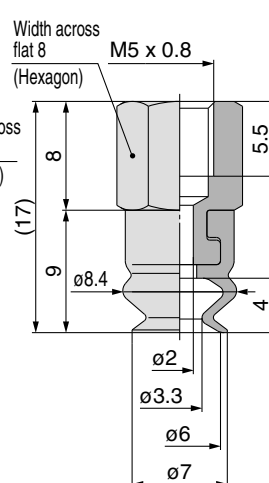

ZP2-TB08MB□-B5

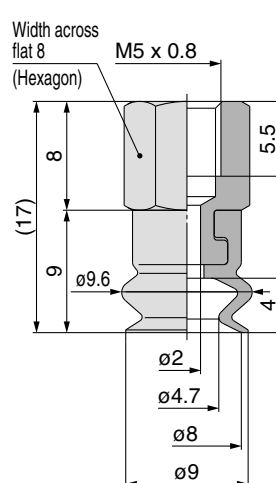



Bellows Pad

Symbol/Type

Pad diameter $\phi 2, \phi 4, \phi 5, \phi 6, \phi 40, \phi 46$

ZJ: Bellows

- For use where there is no space for the buffer (spring type)
- Work pieces with inclined adsorption surface

How to Order

Pad unit **ZP2 - 02 ZJ N**



Pad diameter

Symbol	Pad diameter
02	$\phi 2$
04	$\phi 4$
05	$\phi 5$
06	$\phi 6$
40	$\phi 40$
46	$\phi 46$

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type


Symbol	Type
ZJ	Bellows

Dimensions: Pad Unit


ZP2-02ZJ□

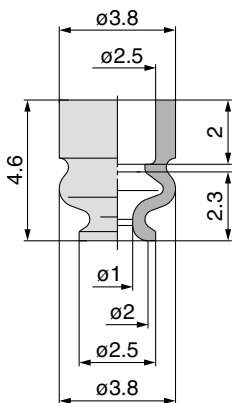


ZP2-04ZJ□

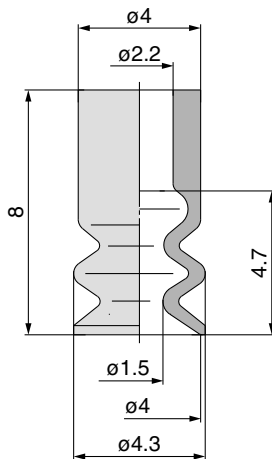


ZP2-05ZJ□

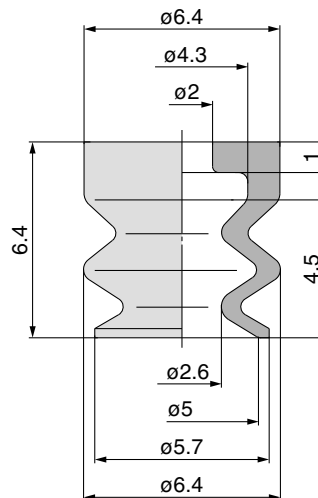


ZP2-06ZJ□

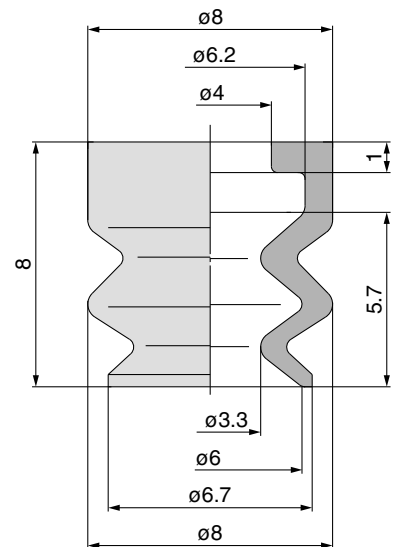

ZP2-40ZJ□□

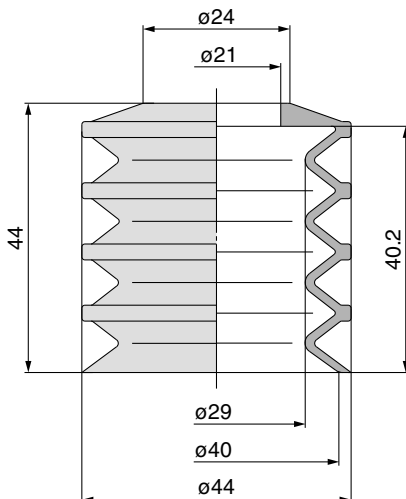

ZP2-46ZJ□□

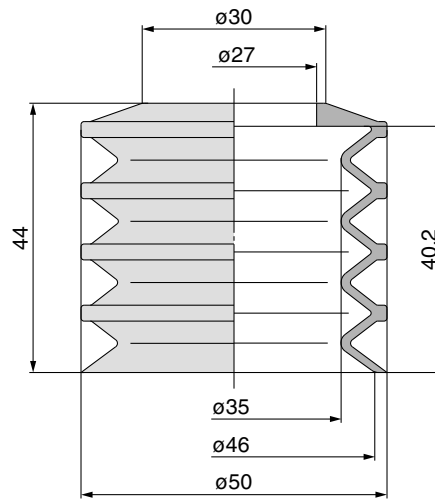




Oval Pad

Pad size **3.5 x 7 to 8 x 30**

Symbol/Type

W: Oval

■ For work pieces with limitations on the adsorption surface

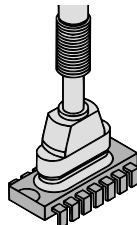

How to Order

Pad unit **ZP2 - 3507 W N**



Pad size

Symbol	Size	Symbol	Size
3507	3.5 x 7	6020	6 x 20
4010	4 x 10	8020	8 x 20
5010	5 x 10	4030	4 x 30
6010	6 x 10	5030	5 x 30
4020	4 x 20	6030	6 x 30
5020	5 x 20	8030	8 x 30

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type


Symbol	Type
W	Oval

Dimensions: Pad Unit


ZP2- W

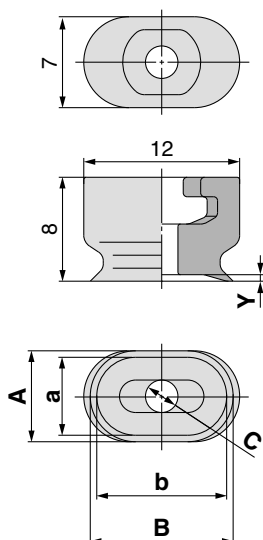

ZP2- 20W

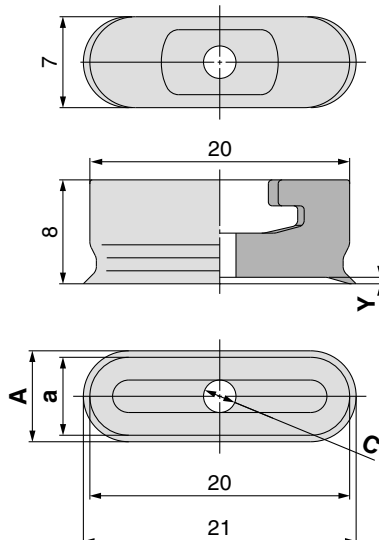

ZP2- 30W

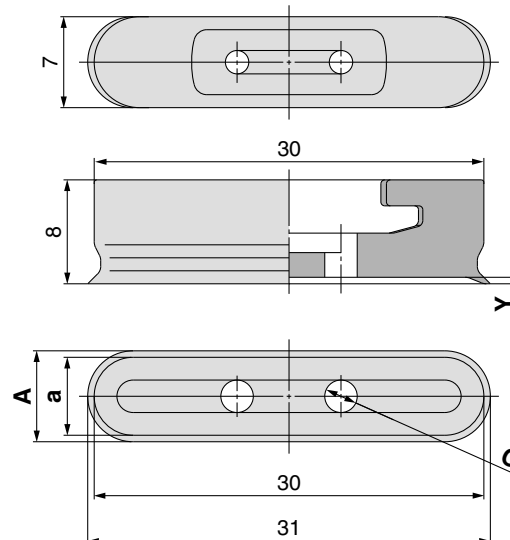

Dimensions

Model	a	A	b	B	C	Y
ZP2-3507W	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-4010W	4	5				
ZP2-5010W	5	6	10	11		
ZP2-6010W	6	7			2.5	

Dimensions

Model	a	A	C	Y
ZP2-4020W	4	5	2 x 1.8	0.5
ZP2-5020W	5	6	2 x 2	
ZP2-6020W	6	7	2.5	
ZP2-8020W	8	9	3	


Dimensions

Model	a	A	C	Y
ZP2-4030W	4	5	2 x 1.8	0.5
ZP2-5030W	5	6		
ZP2-6030W	6	7	2 x 2.5	
ZP2-8030W	8	9		


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad
3507W/4010W/5010W/6010W

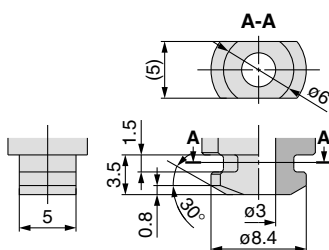

Applicable pad
4020W/5020W/6020W/8020W

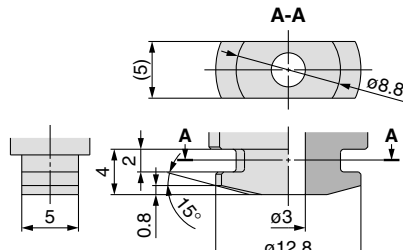

Applicable pad
4030W/5030W/6030W/8030W

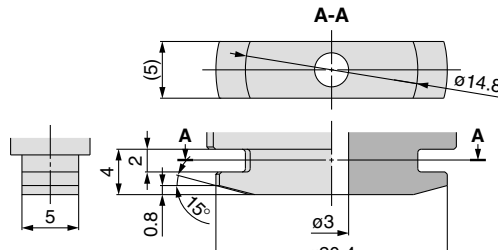

Note) R part has to be smooth with no corners.

* Refer to page 69 for adapter applicable to the ZP2 series.

Oval Pad: With Adapter (Vacuum Inlet Direction: Vertical) *Series ZP2*

How to Order



With adapter **ZP2 - T 3507 W N - B5**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad size

Symbol	Size	Symbol	Size
3507	3.5 x 7	6020	6 x 20
4010	4 x 10	8020	8 x 20
5010	5 x 10	4030	4 x 30
6010	6 x 10	5030	5 x 30
4020	4 x 20	6030	6 x 30
5020	5 x 20	8030	8 x 30

Vacuum inlet

Symbol	Thread size
B5	M5 x 0.8

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type

Symbol	Type
W	Oval


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-T3507W□-B5	ZP2-3507W□	ZP2A-001
ZP2-T4010W□-B5	ZP2-4010W□	
ZP2-T5010W□-B5	ZP2-5010W□	
ZP2-T6010W□-B5	ZP2-6010W□	ZP2A-002
ZP2-T4020W□-B5	ZP2-4020W□	
ZP2-T5020W□-B5	ZP2-5020W□	
ZP2-T6020W□-B5	ZP2-6020W□	ZP2A-003
ZP2-T8020W□-B5	ZP2-8020W□	
ZP2-T4030W□-B5	ZP2-4030W□	
ZP2-T5030W□-B5	ZP2-5030W□	ZP2A-003
ZP2-T6030W□-B5	ZP2-6030W□	
ZP2-T8030W□-B5	ZP2-8030W□	

Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-T□W□-B5

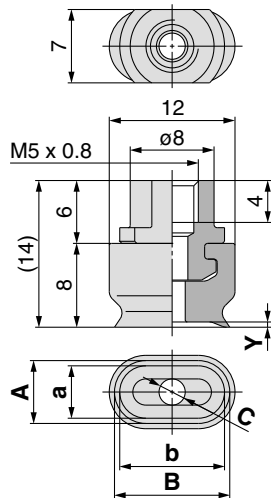

Dimensions

Model	a	A	b	B	C	Y
ZP2-T3507W□-B5	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-T4010W□-B5	4	5				
ZP2-T5010W□-B5	5	6	10	11	2.5	
ZP2-T6010W□-B5	6	7				


ZP2-T 20W□-B5

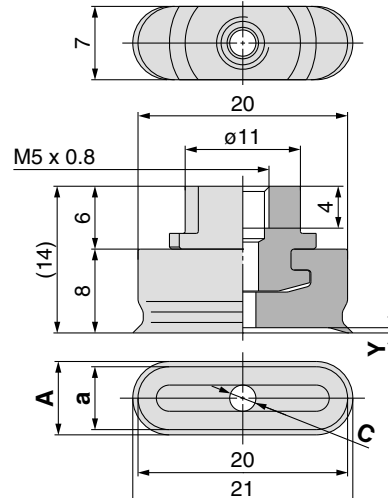

Dimensions

Model	a	A	C	Y
ZP2-T4020W□-B5	4	5	2 x 1.8	0.5
ZP2-T5020W□-B5	5	6	2 x 2	
ZP2-T6020W□-B5	6	7	2.5	
ZP2-T8020W□-B5	8	9	3	

ZP2-T 30W□-B5

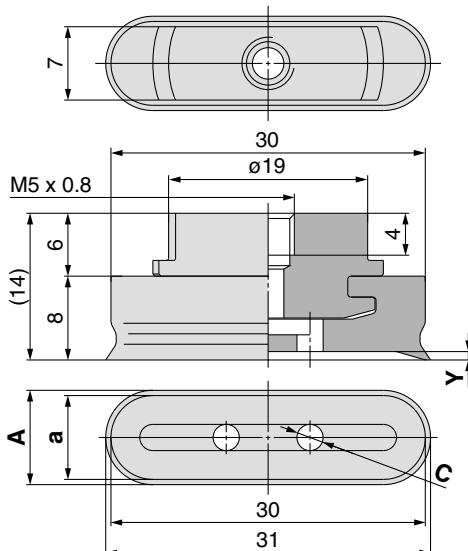

Dimensions

Model	a	A	C	Y
ZP2-T4030W□-B5	4	5	2 x 1.8	0.5
ZP2-T5030W□-B5	5	6		
ZP2-T6030W□-B5	6	7	2 x 2.5	0.8
ZP2-T8030W□-B5	8	9		

How to Order

With buffer ZP2-T 3507 W N K 10-B5

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad size

Symbol	Size	Symbol	Size
3507	3.5 x 7	6020	6 x 20
4010	4 x 10	8020	8 x 20
5010	5 x 10	4030	4 x 30
6010	6 x 10	5030	5 x 30
4020	4 x 20	6030	6 x 30
5020	5 x 20	8030	8 x 30

Pad type

Symbol	Type
W	Oval

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Buffer specification


Symbol	Specification
K	Non-rotating

Buffer stroke (★)

Symbol	Stroke
10	10 mm
20	20 mm
30	30 mm
40	40 mm
50	50 mm

Vacuum inlet (■)

Symbol	Applicable tube O.D.
B5	M5 x 0.8
04	ø4 one-touch fitting
06	ø6 one-touch fitting

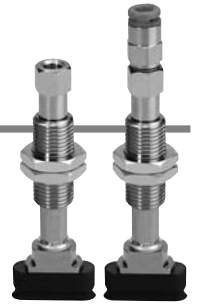

Replacement Part No.

Model	Pad unit part no.	Adapter part no.	Buffer assembly part no.
ZP2-T3507W□K★-■	ZP2-3507W□	ZP2A-001	ZPB2K★-■
ZP2-T4010W□K★-■	ZP2-4010W□		
ZP2-T5010W□K★-■	ZP2-5010W□		
ZP2-T6010W□K★-■	ZP2-6010W□	ZP2A-002	ZPB2K★-■
ZP2-T4020W□K★-■	ZP2-4020W□		
ZP2-T5020W□K★-■	ZP2-5020W□		
ZP2-T6020W□K★-■	ZP2-6020W□	ZP2A-003	ZPB2K★-■
ZP2-T8020W□K★-■	ZP2-8020W□		
ZP2-T4030W□K★-■	ZP2-4030W□		
ZP2-T5030W□K★-■	ZP2-5030W□	ZP2A-003	ZPB2K★-■
ZP2-T6030W□K★-■	ZP2-6030W□		
ZP2-T8030W□K★-■	ZP2-8030W□		


Note 1) □ in the table indicates the pad material. Note 2) ★ in the table indicates the buffer stroke. Note 3) ■ in the table indicates the vacuum inlet.

Buffer Specifications

Stroke (mm)	10, 20, 30, 40, 50
Spring reactive force	At 0 stroke (N) 1.0
	At buffer stroke (N) 3.0
Tightening torque	3.0 N·m ±5%

Dimensions: With Buffer


ZP2-T 3507 W N K★-B5

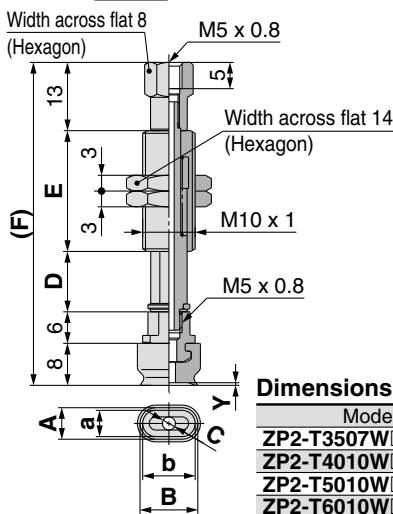

Dimensions

Model	a	A	b	B	C	Y
ZP2-T3507W□K★-B5	3.5	4.5	7	8	2 x 1.5	
ZP2-T4010W□K★-B5	4	5				0.5
ZP2-T5010W□K★-B5	5	6	10	11		
ZP2-T6010W□K★-B5	6	7			2.5	


ZP2-T 20 W N K★-B5

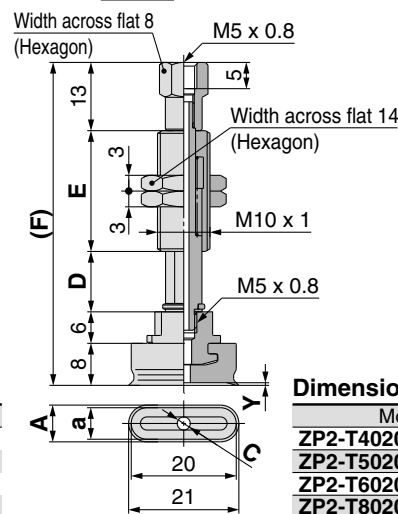

Dimensions

Model	a	A	C	Y
ZP2-T4020W□K★-B5	4	5	2 x 1.8	
ZP2-T5020W□K★-B5	5	6	2 x 2	0.5
ZP2-T6020W□K★-B5	6	7	2.5	
ZP2-T8020W□K★-B5	8	9	3	0.8

ZP2-T 30 W N K★-B5

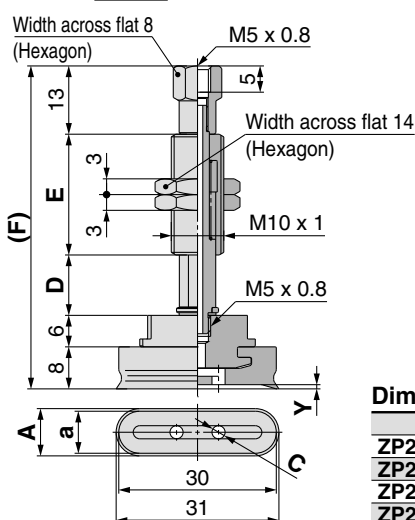

Dimensions

Model	a	A	C	Y
ZP2-T4030W□K★-B5	4	5	2 x 1.8	
ZP2-T5030W□K★-B5	5	6		0.5
ZP2-T6030W□K★-B5	6	7	2 x 2.5	
ZP2-T8030W□K★-B5	8	9		0.8


Dimensions common for all three drawings

Dimensions (per buffer stroke)


Stroke (★)	D	E	F
10	11.5	23	61.5
20	21.5		99.5
30	31.5	51	109.5
40	41.5	77	145.5
50	51.5		155.5

Dimensions: With Buffer

ZP2-T W K★-⁰⁴/₀₆

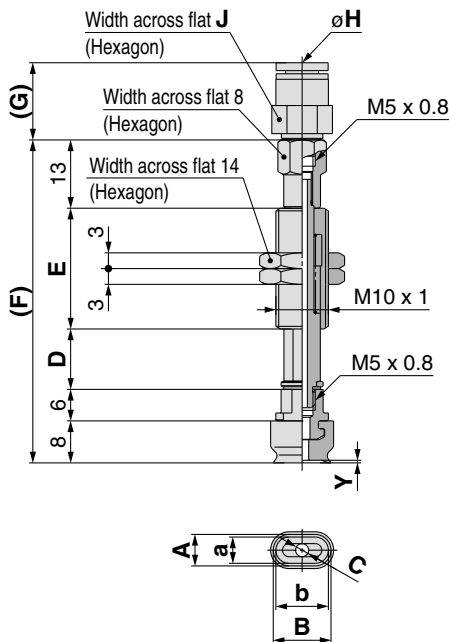

ZP2-T 20 W K★-⁰⁴/₀₆

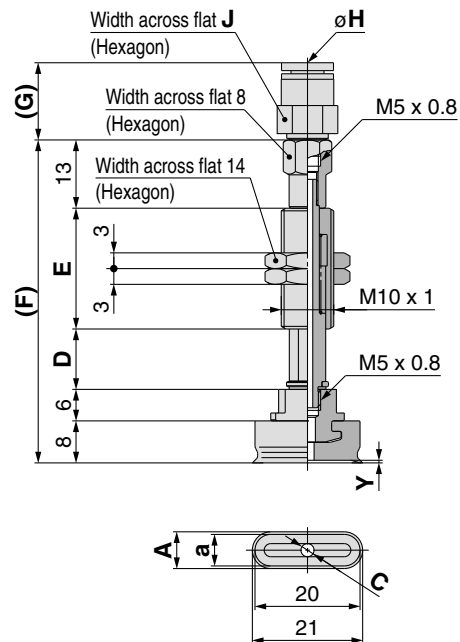


Dimensions

Model	a	A	b	B	C	Y
ZP2-T3507W <input type="text"/> K★- ⁰⁴ / ₀₆	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-T4010W <input type="text"/> K★- ⁰⁴ / ₀₆	4	5				
ZP2-T5010W <input type="text"/> K★- ⁰⁴ / ₀₆	5	6	10	11	2.5	
ZP2-T6010W <input type="text"/> K★- ⁰⁴ / ₀₆	6	7				

Dimensions

Model	a	A	C	Y
ZP2-T4020W <input type="text"/> K★- ⁰⁴ / ₀₆	4	5	2 x 1.8	0.5
ZP2-T5020W <input type="text"/> K★- ⁰⁴ / ₀₆	5	6	2 x 2	
ZP2-T6020W <input type="text"/> K★- ⁰⁴ / ₀₆	6	7	2.5	
ZP2-T8020W <input type="text"/> K★- ⁰⁴ / ₀₆	8	9	3	

ZP2-T 30 W K★-⁰⁴/₀₆

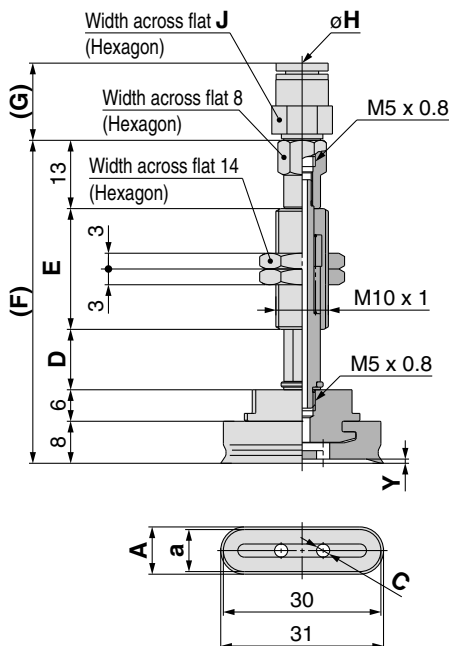

Dimensions

Model	a	A	C	Y
ZP2-T4030W <input type="text"/> K★- ⁰⁴ / ₀₆	4	5	2 x 1.8	0.5
ZP2-T5030W <input type="text"/> K★- ⁰⁴ / ₀₆	5	6		
ZP2-T6030W <input type="text"/> K★- ⁰⁴ / ₀₆	6	7	2 x 2.5	
ZP2-T8030W <input type="text"/> K★- ⁰⁴ / ₀₆	8	9		

Dimensions common for all three drawings Dimensions (per buffer stroke)

Stroke (★)	D	E	F	H: ø4		H: ø6	
				G	J	G	J
10	11.5	23	61.5	13.9	8	14.7	10
20	21.5	51	99.5				
30	31.5		109.5				
40	41.5	77	145.5				
50	51.5		155.5				

Series ZP2

How to Order

Without buffer **ZP2 - R 3507 W N - 04 - A5**

Vacuum inlet direction

Symbol	Direction
R	Lateral

Pad size

Symbol	Size
3507	3.5 x 7
4010	4 x 10
5010	5 x 10
6010	6 x 10
4020	4 x 20
5020	5 x 20
6020	6 x 20
8020	8 x 20
4030	4 x 30
5030	5 x 30
6030	6 x 30
8030	8 x 30

Pad type

Symbol	Type
W	Oval

Pad material (□)


Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Mounting

Symbol	Thread size
A5	M5 x 0.8 (Male thread)
B5	M5 x 0.8 (Female thread)

Vacuum inlet (■)

Symbol	Applicable tube O.D.
04	ø4
06	ø6

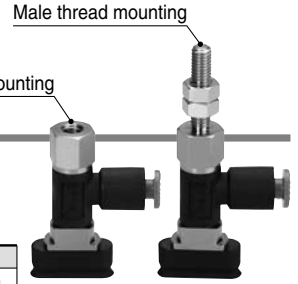


Replacement Part No.

Model	Pad unit part no.	Adapter part no.	Type R adapter part no.
ZP2-R3507W□-■-A5	ZP2-R3507W□-■-B5	ZP2-3507W□	ZPRS-■-A5 ZPRS-■-B5
ZP2-R4010W□-■-A5	ZP2-R4010W□-■-B5	ZP2-4010W□	
ZP2-R5010W□-■-A5	ZP2-R5010W□-■-B5	ZP2-5010W□	
ZP2-R6010W□-■-A5	ZP2-R6010W□-■-B5	ZP2-6010W□	ZPRS-■-A5 ZPRS-■-B5
ZP2-R4020W□-■-A5	ZP2-R4020W□-■-B5	ZP2-4020W□	
ZP2-R5020W□-■-A5	ZP2-R5020W□-■-B5	ZP2-5020W□	
ZP2-R6020W□-■-A5	ZP2-R6020W□-■-B5	ZP2-6020W□	ZPRS-■-A5 ZPRS-■-B5
ZP2-R8020W□-■-A5	ZP2-R8020W□-■-B5	ZP2-8020W□	
ZP2-R4030W□-■-A5	ZP2-R4030W□-■-B5	ZP2-4030W□	
ZP2-R5030W□-■-A5	ZP2-R5030W□-■-B5	ZP2-5030W□	ZPRS-■-A5 ZPRS-■-B5
ZP2-R6030W□-■-A5	ZP2-R6030W□-■-B5	ZP2-6030W□	
ZP2-R8030W□-■-A5	ZP2-R8030W□-■-B5	ZP2-8030W□	

Note 1) □ in the table indicates the pad material.


Note 2) ■ in the table indicates the vacuum inlet.

Dimensions: Without Buffer

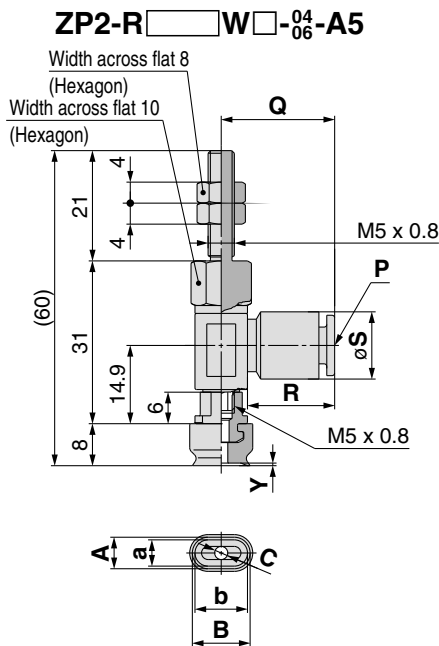


Dimensions

Model	a	A	b	B	C	Y
ZP2-R3507W□-■-A5	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-R4010W□-■-A5	4	5				
ZP2-R5010W□-■-A5	5	6	10	11	2.5	
ZP2-R6010W□-■-A5	6	7				

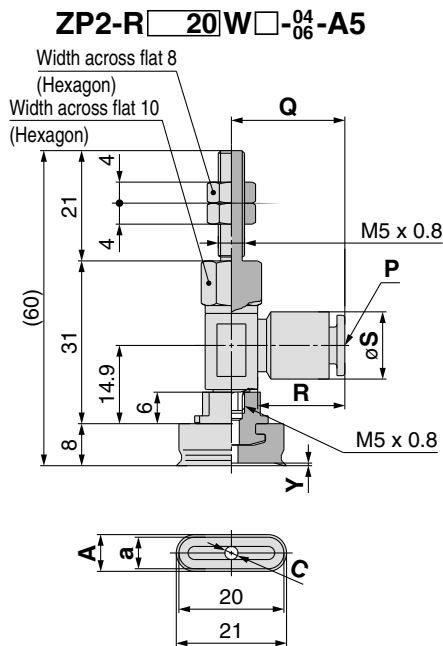

Dimensions

Model	a	A	C	Y
ZP2-R4020W□-■-A5	4	5	2 x 1.8	
ZP2-R5020W□-■-A5	5	6	2 x 2	0.5
ZP2-R6020W□-■-A5	6	7	2.5	
ZP2-R8020W□-■-A5	8	9	3	0.8

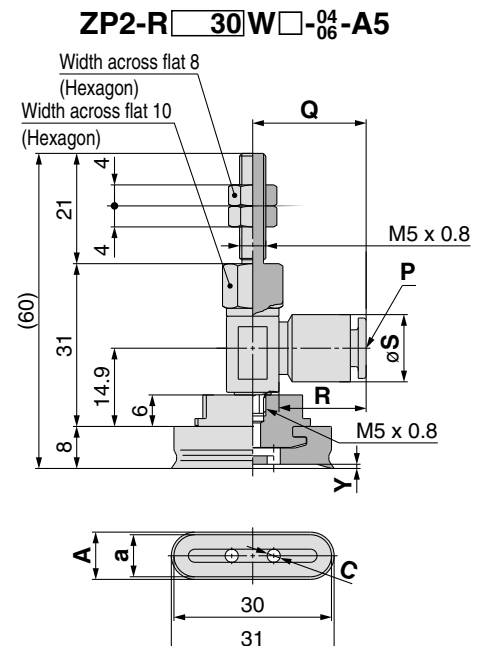

Dimensions

Model	a	A	C	Y
ZP2-R4030W□-■-A5	4	4.8	2 x 1.8	
ZP2-R5030W□-■-A5	5	6		0.5
ZP2-R6030W□-■-A5	6	7	2 x 2.5	
ZP2-R8030W□-■-A5	8	9		0.8


Dimensions common for all three drawings

Dimensions (per applicable tube)


Applicable tube O.D. (■)	P	Q	R	S
ø4	4	20.6	15.6	10.4
ø6	6	21.6	16.6	12.8

Dimensions: Without Buffer

ZP2-R W -⁰⁴/₀₆-B5

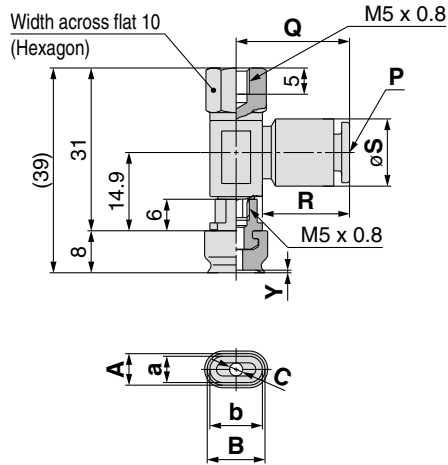

ZP2-R 20 W -⁰⁴/₀₆-B5

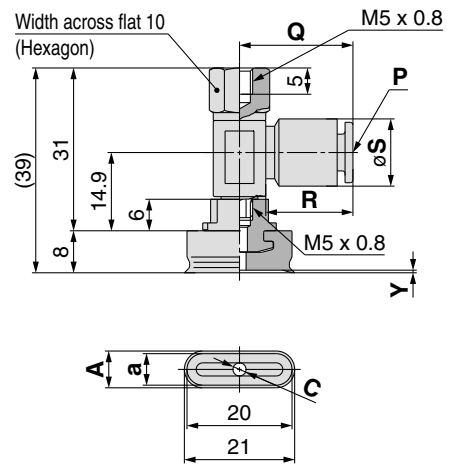


Dimensions

Model	a	A	b	B	C	Y
ZP2-R3507W□-■-B5	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-R4010W□-■-B5	4	5	10	11	2.5	
ZP2-R5010W□-■-B5	5	6				
ZP2-R6010W□-■-B5	6	7				

Dimensions

Model	a	A	C	Y
ZP2-R4020W - ■ -B5	4	5	2 x 1.8	0.5
ZP2-R5020W - ■ -B5	5	6	2 x 2	
ZP2-R6020W - ■ -B5	6	7	2.5	
ZP2-R8020W - ■ -B5	8	9	3	0.8

ZP2-R 30 W -⁰⁴/₀₆-B5

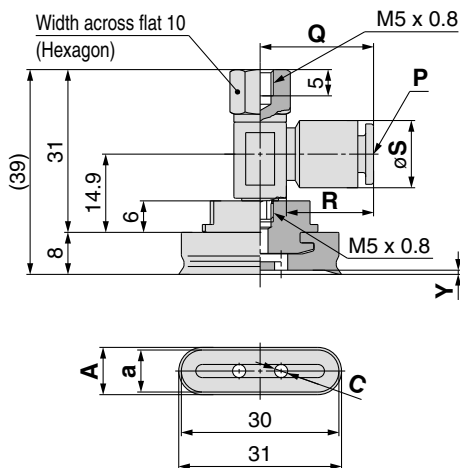

Dimensions

Model	a	A	C	Y
ZP2-R4030W□-■-B5	4	5	2 x 1.8	0.5
ZP2-R5030W□-■-B5	5	6	2 x 2.5	
ZP2-R6030W□-■-B5	6	7		
ZP2-R8030W□-■-B5	8	9		0.8

Dimensions common for all three drawings Dimensions (per applicable tube)

Applicable tube O.D. (■)	P	Q	R	S
ø4	4	20.6	15.6	10.4
ø6	6	21.6	16.6	12.8

How to Order

With buffer ZP2 - R 3507 W N K 10 - 04

Vacuum inlet direction

Symbol	Direction
R	Lateral

Pad size

Symbol	Size	Symbol	Size
3507	3.5 x 7	6020	6 x 20
4010	4 x 10	8020	8 x 20
5010	5 x 10	4030	4 x 30
6010	6 x 10	5030	5 x 30
4020	4 x 20	6030	6 x 30
5020	5 x 20	8030	8 x 30

Pad type

Symbol	Type
W	Oval

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Buffer specification

Symbol	Specification
K	Non-rotating

Vacuum inlet (■)

Symbol	Applicable tube O.D.
04	ø4
06	ø6

Buffer stroke (★)

Symbol	Stroke
10	10 mm
20	20 mm
30	30 mm
40	40 mm
50	50 mm

Replacement Part No.

Model	Pad unit part no.	Adapter part no.	Type R adapter part no.	Buffer assembly part no.																		
ZP2-R3507W□K★-■	ZP2-3507W□	ZP2A-001	ZPRS-■-B5	ZPB2K★																		
ZP2-R4010W□K★-■	ZP2-4010W□																					
ZP2-R5010W□K★-■	ZP2-5010W□																					
ZP2-R6010W□K★-■	ZP2-6010W□	ZP2A-002	●Vacuum inlet <table><tr><th>Symbol</th><th>Applicable tube O.D.</th></tr><tr><td>04</td><td>ø4</td></tr><tr><td>06</td><td>ø6</td></tr></table>	Symbol	Applicable tube O.D.	04	ø4	06	ø6	●Buffer stroke <table><tr><th>Symbol</th><th>Stroke</th></tr><tr><td>10</td><td>10 mm</td></tr><tr><td>20</td><td>20 mm</td></tr><tr><td>30</td><td>30 mm</td></tr><tr><td>40</td><td>40 mm</td></tr><tr><td>50</td><td>50 mm</td></tr></table>	Symbol	Stroke	10	10 mm	20	20 mm	30	30 mm	40	40 mm	50	50 mm
Symbol	Applicable tube O.D.																					
04	ø4																					
06	ø6																					
Symbol	Stroke																					
10	10 mm																					
20	20 mm																					
30	30 mm																					
40	40 mm																					
50	50 mm																					
ZP2-R4020W□K★-■	ZP2-4020W□																					
ZP2-R5020W□K★-■	ZP2-5020W□	ZP2A-003																				
ZP2-R6020W□K★-■	ZP2-6020W□																					
ZP2-R8020W□K★-■	ZP2-8020W□																					
ZP2-R4030W□K★-■	ZP2-4030W□																					
ZP2-R5030W□K★-■	ZP2-5030W□																					
ZP2-R6030W□K★-■	ZP2-6030W□																					
ZP2-R8030W□K★-■	ZP2-8030W□																					


Note 1) □ in the table indicates the pad material. Note 3) ■ in the table indicates the vacuum inlet.
Note 2) ★ in the table indicates the buffer stroke.

Buffer Specifications (Non-rotating)

Stroke (mm)	10, 20, 30, 40, 50
Spring reactive force	At 0 stroke (N) 1.0 At buffer stroke (N) 3.0
Tightening torque	3.0 N·m ±5%

Dimensions: With Buffer


ZP2-R□W□K★-04

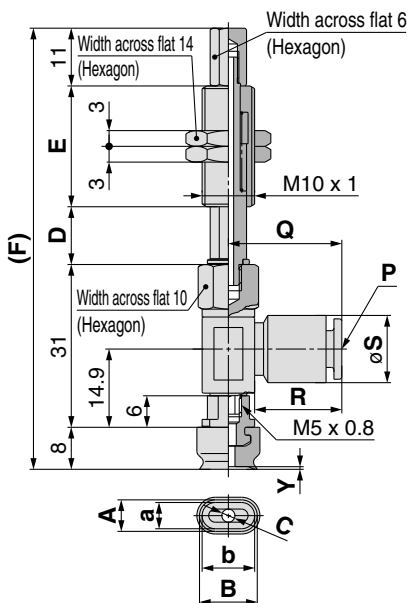

Dimensions

Model	a	A	b	B	C	Y
ZP2-R3507W□K★-■	3.5	4.5	7	8	2 x 1.5	0.5
ZP2-R4010W□K★-■	4	5				
ZP2-R5010W□K★-■	5	6	10	11	2.5	
ZP2-R6010W□K★-■	6	7				


ZP2-R 20 W□K★-04

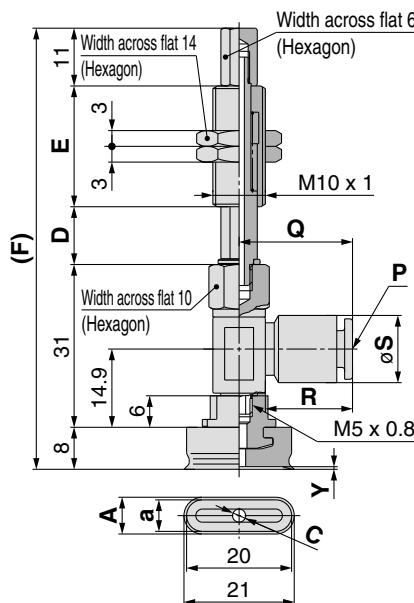

Dimensions

Model	a	A	C	Y
ZP2-R4020W□K★-■	4	5	2 x 1.8	
ZP2-R5020W□K★-■	5	6	2 x 2	0.5
ZP2-R6020W□K★-■	6	7	2.5	
ZP2-R8020W□K★-■	8	9	3	0.8

ZP2-R 30 W□K★-04

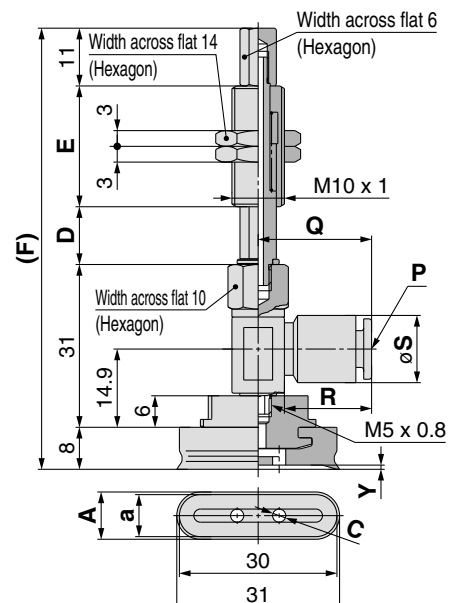

Dimensions

Model	a	A	C	Y
ZP2-R4030W□K★-■	4	5	2 x 1.8	
ZP2-R5030W□K★-■	5	6		0.5
ZP2-R6030W□K★-■	6	7	2 x 2.5	
ZP2-R8030W□K★-■	8	9		0.8

Dimensions common for all three drawings

Dimensions (per stroke)

Stroke (★)	D	E	F
10	11	23	84
20	21	51	122
30	31	51	132
40	41	77	168
50	51		178

Dimensions (per applicable tube)

Applicable tube O.D. (■)	P	Q	R	S
ø4	4	20.6	15.6	10.4
ø6	6	21.6	16.6	12.8



Pad with Ball Spline Buffer

Symbol/Type

Pad diameter $\varnothing 2, \varnothing 4, \varnothing 6, \varnothing 8$

U: Flat

■ Ball spline guide is used to the buffer.

How to Order

ZP2-T02UNS6

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad diameter

Symbol	Pad diameter
02	$\varnothing 2$
04	$\varnothing 4$
06	$\varnothing 6$
08	$\varnothing 8$

Pad type

Symbol	Type
U	Flat

Buffer stroke

Symbol	Stroke
6	6 mm

Buffer specification

Symbol	Specification
S	Ball spline

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber



Buffer Specifications

Specifications		Ball spline
Stroke (mm)		6
Spring reactive force	At 0 stroke (N)	0.8
	At buffer stroke (N)	1.1


Replacement Part No.

Model	Pad unit part no.	Adapter part no.	Buffer assembly part no.
ZP2-T02U□S6	ZP02U□	ZPT1-B5	ZP2B-T3S6
ZP2-T04U□S6	ZP04U□		
ZP2-T06U□S6	ZP06U□		
ZP2-T08U□S6	ZP08U□		

Note) □ in the table indicates the pad material.

Dimensions

ZP2-T02U□S6


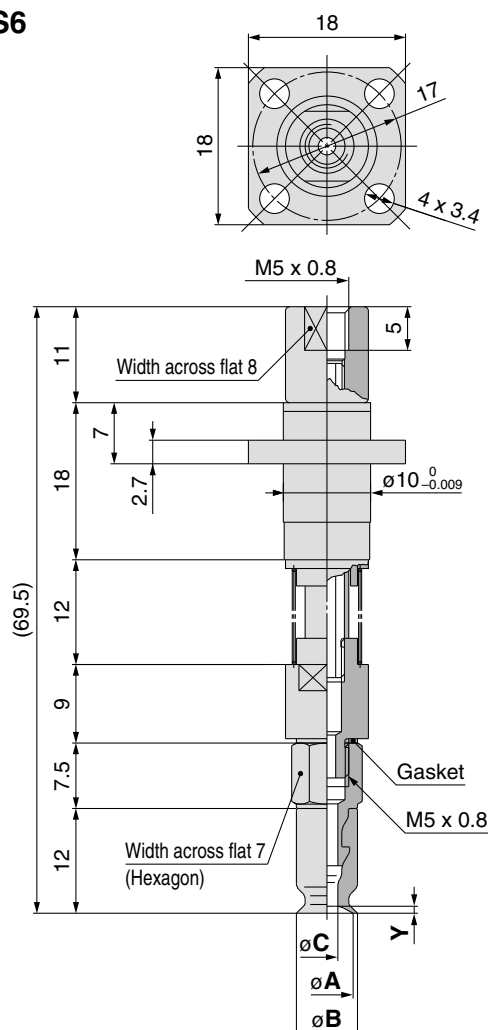


Dimensions

Model	A	B	C	Y
ZP2-T02U□S6	2	2.6	1.2	0.5
ZP2-T04U□S6	4	4.8	1.6	0.8
ZP2-T06U□S6	6	7	2.5	1
ZP2-T08U□S6	8	9		

Mark-free Pad Series


Minimizes the transfer of rubber constituents to the workpiece.

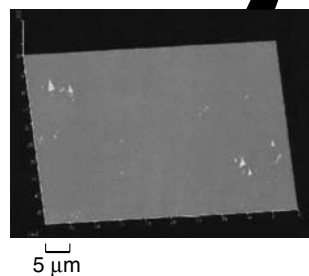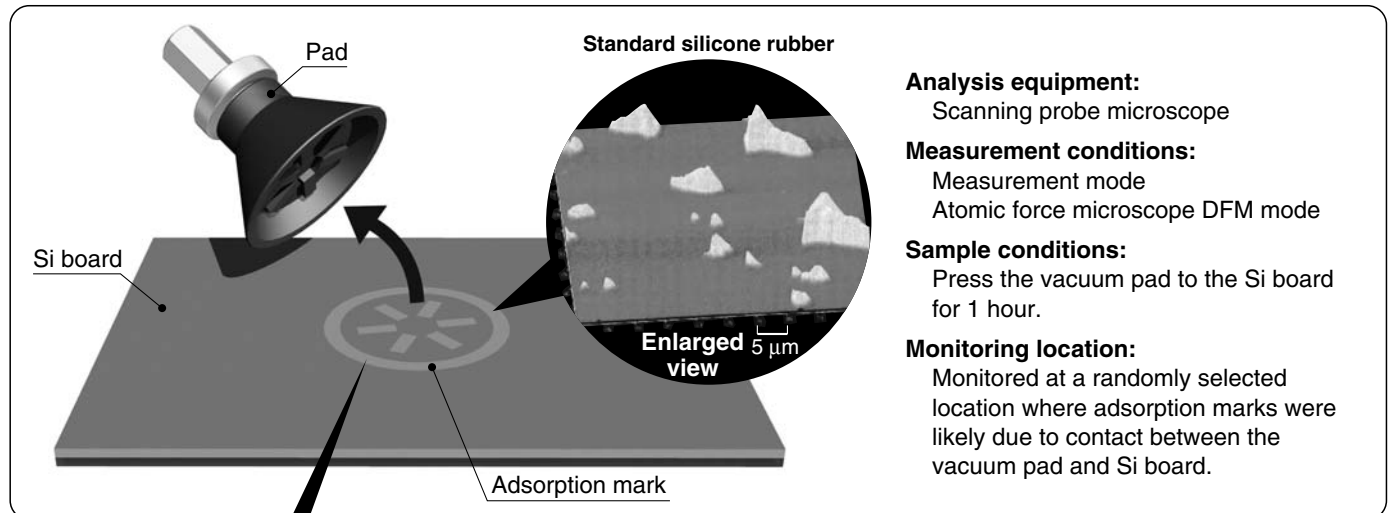

1 Mark-free NBR Pad

Minimizes the transfer of rubber constituents which is supposed to be the cause of adsorption.


Pad diameter: $\phi 4$ to $\phi 125$

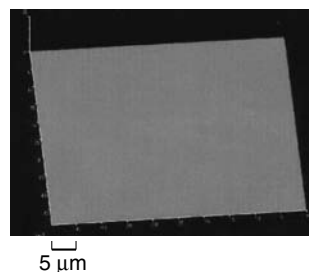

2 Stuck Fluororesin Pad

Fluororesin sheet is baked onto the pad adsorption surface. Prevents the transfer of rubber constituents.


Pad diameter: $\phi 40$ to $\phi 125$

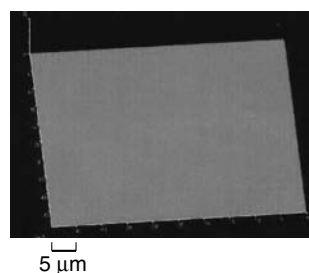


3 Resin Attachment

PEEK material is used for the pad adsorption surface. Prevents the transfer of rubber constituents.

Pad diameter: $\phi 6$ to $\phi 32$

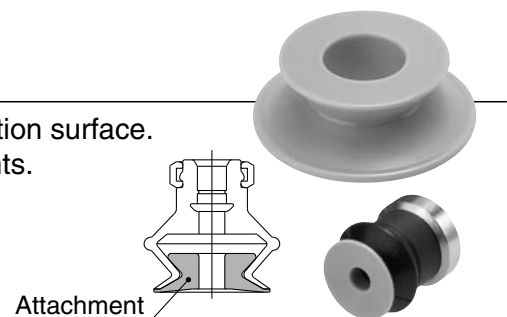


Related Pad

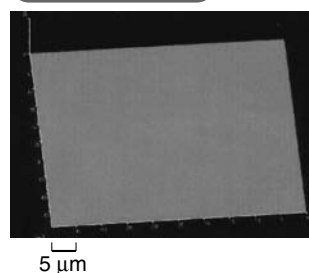






4 Cyclone Pad

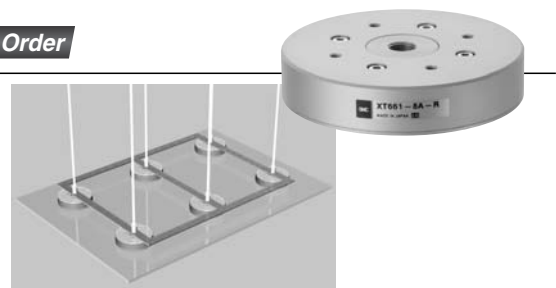Made to Order

No adsorption mark is left because the vacuum pad does not come into contact with the workpiece.



The above adsorption marks show sample data. Actual results will depend on the conditions.

Pad type			Material of the adsorption part (Part in contact with the workpiece)	Adsorption mark *1		Static friction ratio *5	
				Condition *2 (Initial value)			Operating temperature range (°C)
				Visual checking	Vapor method *3		
Mark-free Pad Series	<div>1</div> <div>Mark-free NBR pad</div> <div></div>	Mark-free NBR (Specially treated *4)	●	●	5 to 40	0.6	
	<div>2</div> <div>Stuck fluororesin pad</div> <div></div>	NBR + Stuck fluororesin	●	●	5 to 60	0.2	
		Fluororubber + Stuck fluororesin	●	●	5 to 100		
	<div>3</div> <div>Resin attachment</div> <div></div>	PEEK	●	●	5 to 40	0.2	
		Conductive PEEK (Volume resistivity: 1 x 10 ⁶ Ωcm)	●	●			
	<div>4</div> <div>Cyclone pad</div> <div>Made to Order</div> <div></div>	—	●	●	Standard: -5 to 60 (No freezing)	—	
Standard	<div>Series ZP (Standard material)</div> <div></div>	NBR Fluororubber Conductive NBR/Silicone rubber	×	×	—	—	
		Silicone rubber Urethane rubber	○	×			

Adsorption mark characteristics [●: Little or no influence ○: Can be used depending on the conditions. ×: Not suitable]

* The above table is for reference when selecting the pad.

Values and evaluation are reference data only. Preparatory testing under actual operating conditions is recommended.

*1 **Adsorption mark** ——— Indicates the transfer of rubber constituents from the pad.

*2 **Condition** ——— Visual evaluation of the adsorption mark

*3 **Vapor method** ——— Method of applying vapor to the workpiece to visually check for adsorption marks

*4 **Specially treated** ——— NBR is specially treated to modify and reduce the transfer of rubber constituents.

*5 **Static friction ratio** ——— Static friction ratio when the workpiece (glass) is adsorbed by the pad. (NBR = 1 as a benchmark)
When the cyclone pad is used, the pad does not come into contact with the workpiece (glass).
The customer needs to install a guide for holding.

Cleaning method [Mark-free NBR pad/Stuck fluororesin pad/Resin attachment]

• Always clean the product before operation and when carrying out regular maintenance.

1) Hold the part other than the adsorption surface.

* Non particle-generating vinyl gloves are recommended.

2) Soak a non particle-generating cloth in 2-propanol (isopropyl alcohol) (purity > 99.5%).

* This solution is a recommendation. If not available, use **a solution with high purity which does not affect the material properties.**

3) Wipe the adsorption surface (pad/resin attachment) and the part that comes into contact with the workpiece.

4) Dry them with clean air blow. (Or, wipe again with a dry non particle-generating cloth.)



Mark-free Pad

Symbol/Type

U: Flat

Pad diameter $\phi 4, \phi 6, \phi 8, \phi 10, \phi 16, \phi 25, \phi 32, \phi 40, \phi 50$

- Pad which reduces the adsorption marks left on the workpiece by rubber
- The pad is made from mark-free NBR, and the NBR is then specially treated to minimize the transfer of rubber constituents to the workpiece.
- Applicable for the ZP series adapter

How to Order

Pad unit **ZP2-04 UCL-X19**



Pad diameter

Symbol	Pad diameter
04	$\phi 4$
06	$\phi 6$
08	$\phi 8$
10	$\phi 10$
16	$\phi 16$
25	$\phi 25$
32	$\phi 32$
40	$\phi 40$
50	$\phi 50$

With/Without lock ring

Nil	With lock ring
X19	Without lock ring (Note)

Note) $\phi 10$ or larger

Pad material


Symbol	Material
CL	Mark-free NBR

Pad type

Symbol	Type
U	Flat

Dimensions: Pad Unit


ZP2-04 to 08UCL

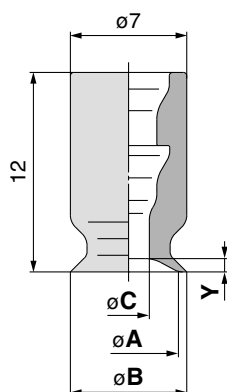

Dimensions

Model	A	B	C	Y
ZP2-04UCL	4	4.8	1.6	0.8
ZP2-06UCL	6	7	2.5	
ZP2-08UCL	8	9		1

ZP2-10 to 50UCL

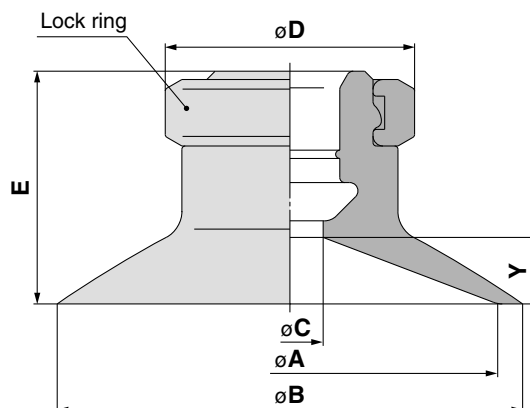


Dimensions

Model	A	B	C	D	E	Y
ZP2-10UCL	10	12		13	12	3
ZP2-16UCL	16	18	4		12.5	3.5
ZP2-25UCL	25	28		15	14	4
ZP2-32UCL	32	35			14.5	4.5
ZP2-40UCL	40	43	7	18	18.5	6.5
ZP2-50UCL	50	53			19.5	7.5


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad 04U/06U/08U

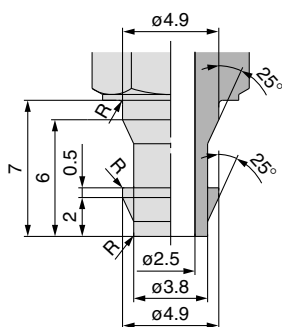


Applicable pad 10U/16U

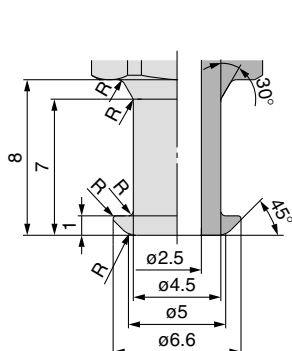

Applicable pad 25U/32U

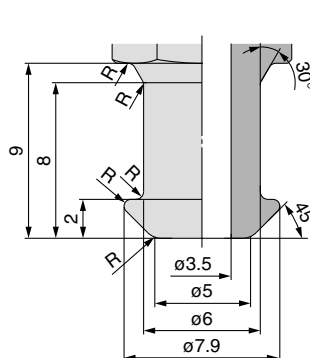


Applicable pad 40U/50U

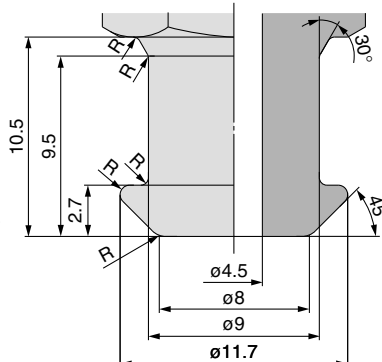

Note) R part has to be smooth with no corners.

* Refer to page 66 for adapter applicable to the ZP series.

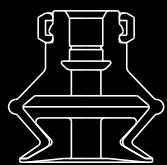

Resin Attachment

Pad diameter $\varnothing 6, \varnothing 8, \varnothing 10, \varnothing 13, \varnothing 16, \varnothing 20, \varnothing 25, \varnothing 32$

■ No adsorption marks (rubber constituents) are left on the workpiece.

Avoids direct contact between the workpiece and the rubber by installing a PEEK attachment to the bellows pad to prevent the transfer of rubber constituents.

■ Prevents sticking of the pad (rubber) and the workpiece.

■ Ideal for the ZP series bellows pad ($\varnothing 6$ to $\varnothing 32$)



How to Order


ZP2-06 K P

Pad diameter


Symbol	Pad diameter
06	ZP06B□
08	ZP08B□
10	ZP10B□
13	ZP13B□
16	ZP16B□
20	ZP20B□
25	ZP25B□
32	ZP32B□

Attachment material

Symbol	Material
P	PEEK
GP	Conductive PEEK

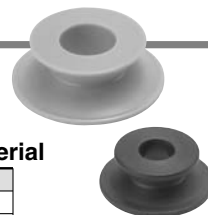


How to Order (When ordering with a pad)

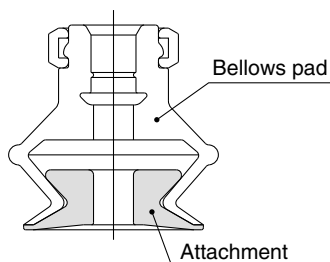

- When ordering with a pad, put “*”, below the part number of the pad as shown below. Note that the pad is not delivered with the attachment assembled.
- This attachment can only be assembled onto SMC’s standard bellows pad.
- When the attachment is made of conductive PEEK, use conductive material for the pad.

Ordering example ZPT06BNJ10-B5-A8 ← Bellows pad part no.
 * ZP2-06KP ← Resin attachment part no.

Dimensions

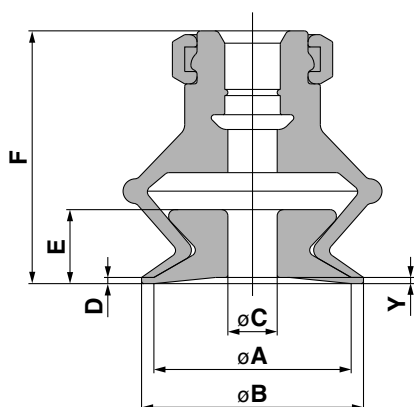

Dimensions

Model	Applicable pad	A	B	C	D	E	F	Y
ZP2-06K■	ZP06B□	6	7	1.6		3	13.5	
ZP2-08K■	ZP08B□	8	9	3				
ZP2-10K■	ZP10B□	10	12	3.5	0.5	3.5	16.5	0.5
ZP2-13K■	ZP13B□	13	15	4		5.5	19	
ZP2-16K■	ZP16B□	16	18			6	20.5	
ZP2-20K■	ZP20B□	20	22	8			24.5	
ZP2-25K■	ZP25B□	25	27		1	8.5	25	1
ZP2-32K■	ZP32B□	32	34	10		11.5	30	

Note 1) ■ in the table indicates the attachment material.


Note 2) □ in the table indicates the pad material.

«Precautions»

Clean the product before using the attachment.

This product is not cleaned after machining. If the product is used in the condition in which it is shipped, residual material may be left on the work pieces. Clean before usage. If you have any questions, please contact SMC.

- If contact with hard material is a problem, do not use this product.
- PEEK material and cut parts fall under the security trade control.




Sponge Pad

Pad diameter $\varnothing 4, \varnothing 6, \varnothing 8, \varnothing 10, \varnothing 15$

Symbol/Type

S: Sponge

■ For adsorption of work pieces with bumps

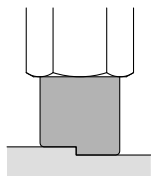

How to Order

Pad unit **ZP2-06 S GS**

Pad O.D.

Symbol	Pad diameter
04	$\varnothing 4$
06	$\varnothing 6$
08	$\varnothing 8$
10	$\varnothing 10$
15	$\varnothing 15$

Pad material

Symbol	Material
GS	Conductive silicone
GC	Conductive CR


Pad type

Symbol	Type
S	Sponge




Dimensions: Pad Unit


ZP2-04S□

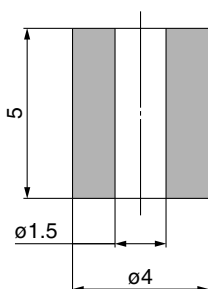


ZP2-06S□

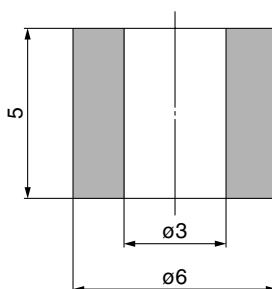


ZP2-08S□

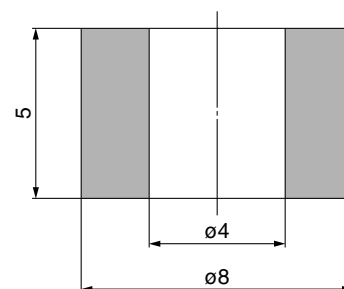

ZP2-10S□

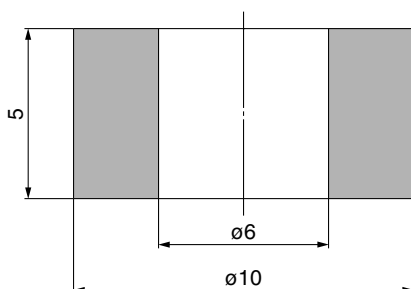


ZP2-15S□

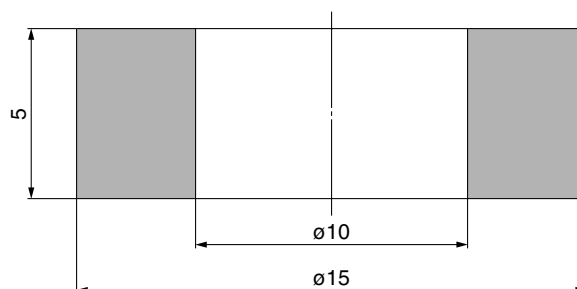


Adapter Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad 04S

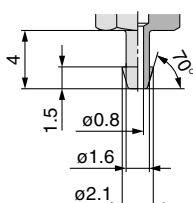


Applicable pad 06S

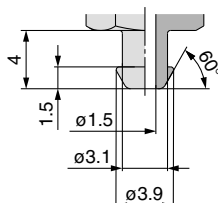


Applicable pad 08S

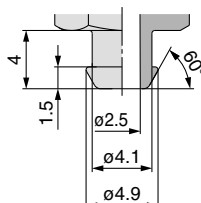

Applicable pad 10S

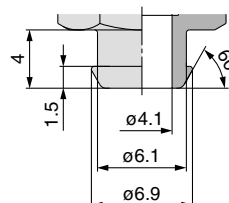


Applicable pad 15S

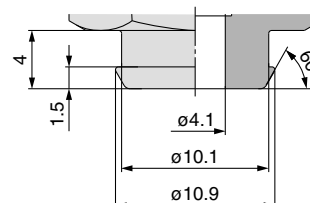

* Refer to pages 70 and 71 for adapter applicable to the ZP2 series.

How to Order

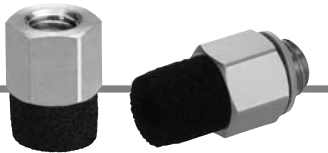

With adapter **ZP2 – T 06 S GS – A3**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad O.D.

Symbol	Pad diameter
04	ø4
06	ø6
08	ø8
10	ø10
15	ø15

Pad type

Symbol	Type
S	Sponge

Mounting

Symbol	Thread size	Applicable pad O.D. symbol				
		04	06	08	10	15
A3	M3 x 0.5 (Male thread)	●	—	—	—	—
A5	M5 x 0.8 (Male thread)	—	●	●	●	●
B3	M3 x 0.5 (Female thread)	●	—	—	—	—
B5	M5 x 0.8 (Female thread)	—	●	●	●	●

Pad material

Symbol	Material
GS	Conductive silicone
GC	Conductive CR


Replacement Part No.

Model	Pad unit part no.	Adapter part no.
ZP2-T04S□-A3	ZP2-04S□	ZP2A-S01P
ZP2-T06S□-A5	ZP2-06S□	ZP2A-S02P
ZP2-T08S□-A5	ZP2-08S□	ZP2A-S03P
ZP2-T10S□-A5	ZP2-10S□	ZP2A-S04P
ZP2-T15S□-A5	ZP2-15S□	ZP2A-S05P
ZP2-T04S□-B3	ZP2-04S□	ZP2A-S11
ZP2-T06S□-B5	ZP2-06S□	ZP2A-S12
ZP2-T08S□-B5	ZP2-08S□	ZP2A-S13
ZP2-T10S□-B5	ZP2-10S□	ZP2A-S14
ZP2-T15S□-B5	ZP2-15S□	ZP2A-S15


Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-T04S□-A3

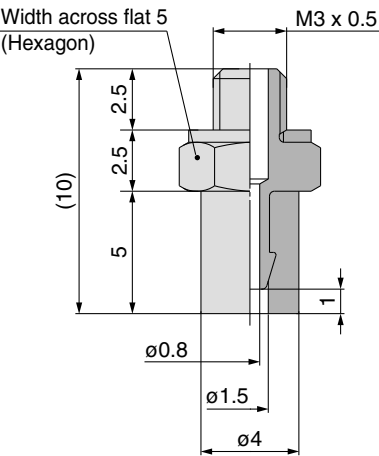

ZP2-T06S□-A5

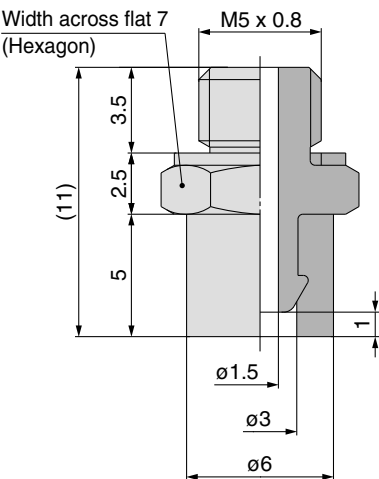


ZP2-T08S□-A5

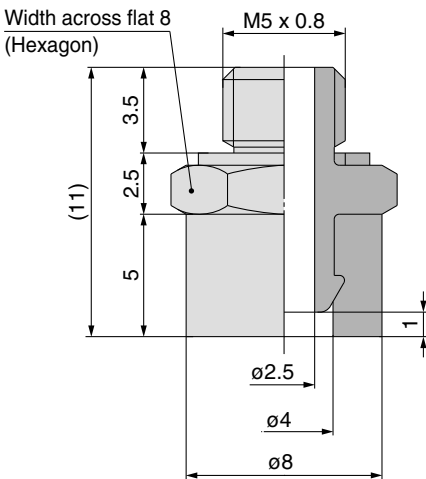


Dimensions: With Adapter


ZP2-T10S□-A5

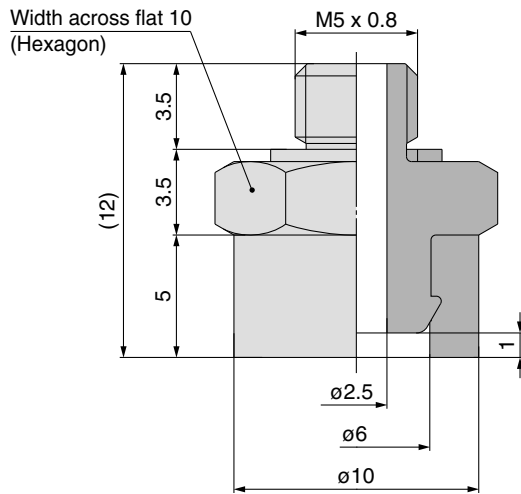


ZP2-T15S□-A5

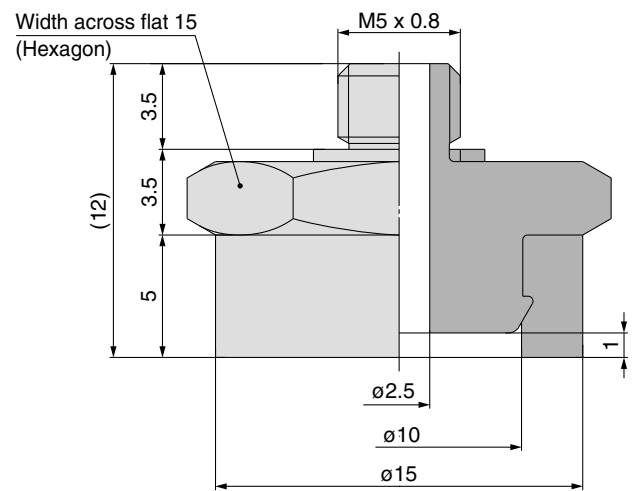


ZP2-T04S□-B3

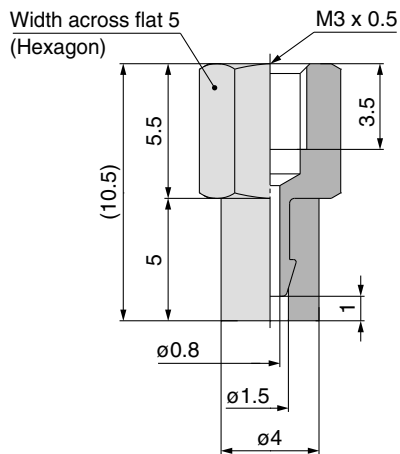


ZP2-T06S□-B5

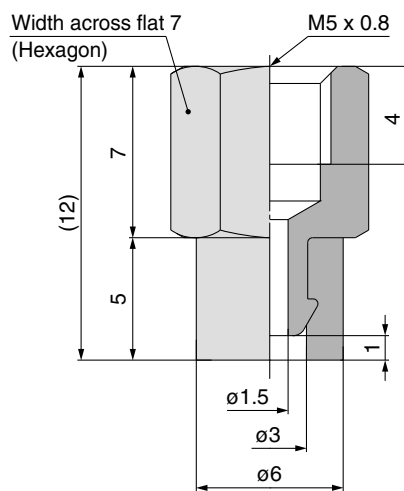


ZP2-T08S□-B5

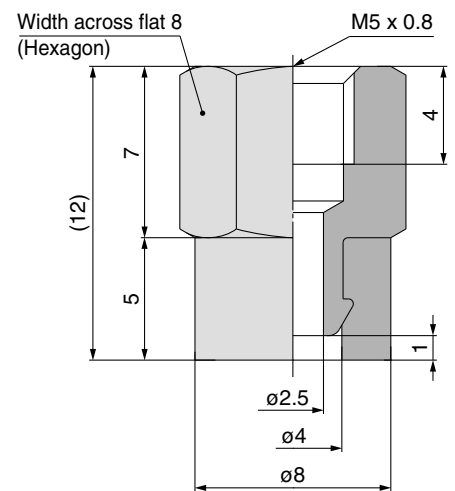


ZP2-T10S□-B5

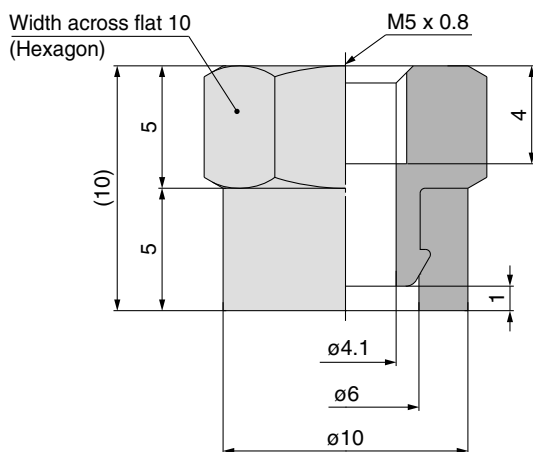

ZP2-T15S□-B5

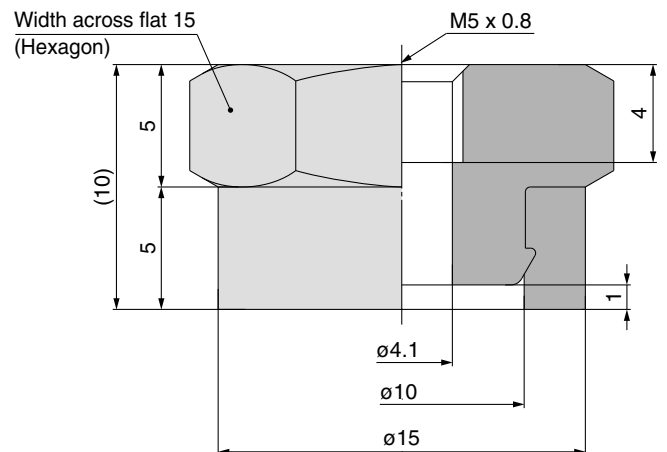



Heavy-duty Pad

Pad diameter ø32, ø150, ø250, ø300, ø340

Symbol/Type


H: Heavy-duty (Flat with rib)

HT: Heavy-duty (Thin flat with rib)

■ Reinforced pad to prevent deformation when transferring heavy or large work pieces

Pad unit

ZP2 – 32 H N



Pad diameter

Symbol	Pad diameter
32	ø32
150	ø150
250	ø250
300	ø300
340	ø340

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
F	FKM
C	CR

(Note) Silicone rubber is only applicable to the ø32 pad.

Pad type—Pad diameter



Pad type \ Pad diameter (Symbol)	32	150	250	300	340
H (Flat with rib)	●	—	—	●	●
HT (Thin flat with rib)	—	●	●	—	—

Dimensions: Pad Unit


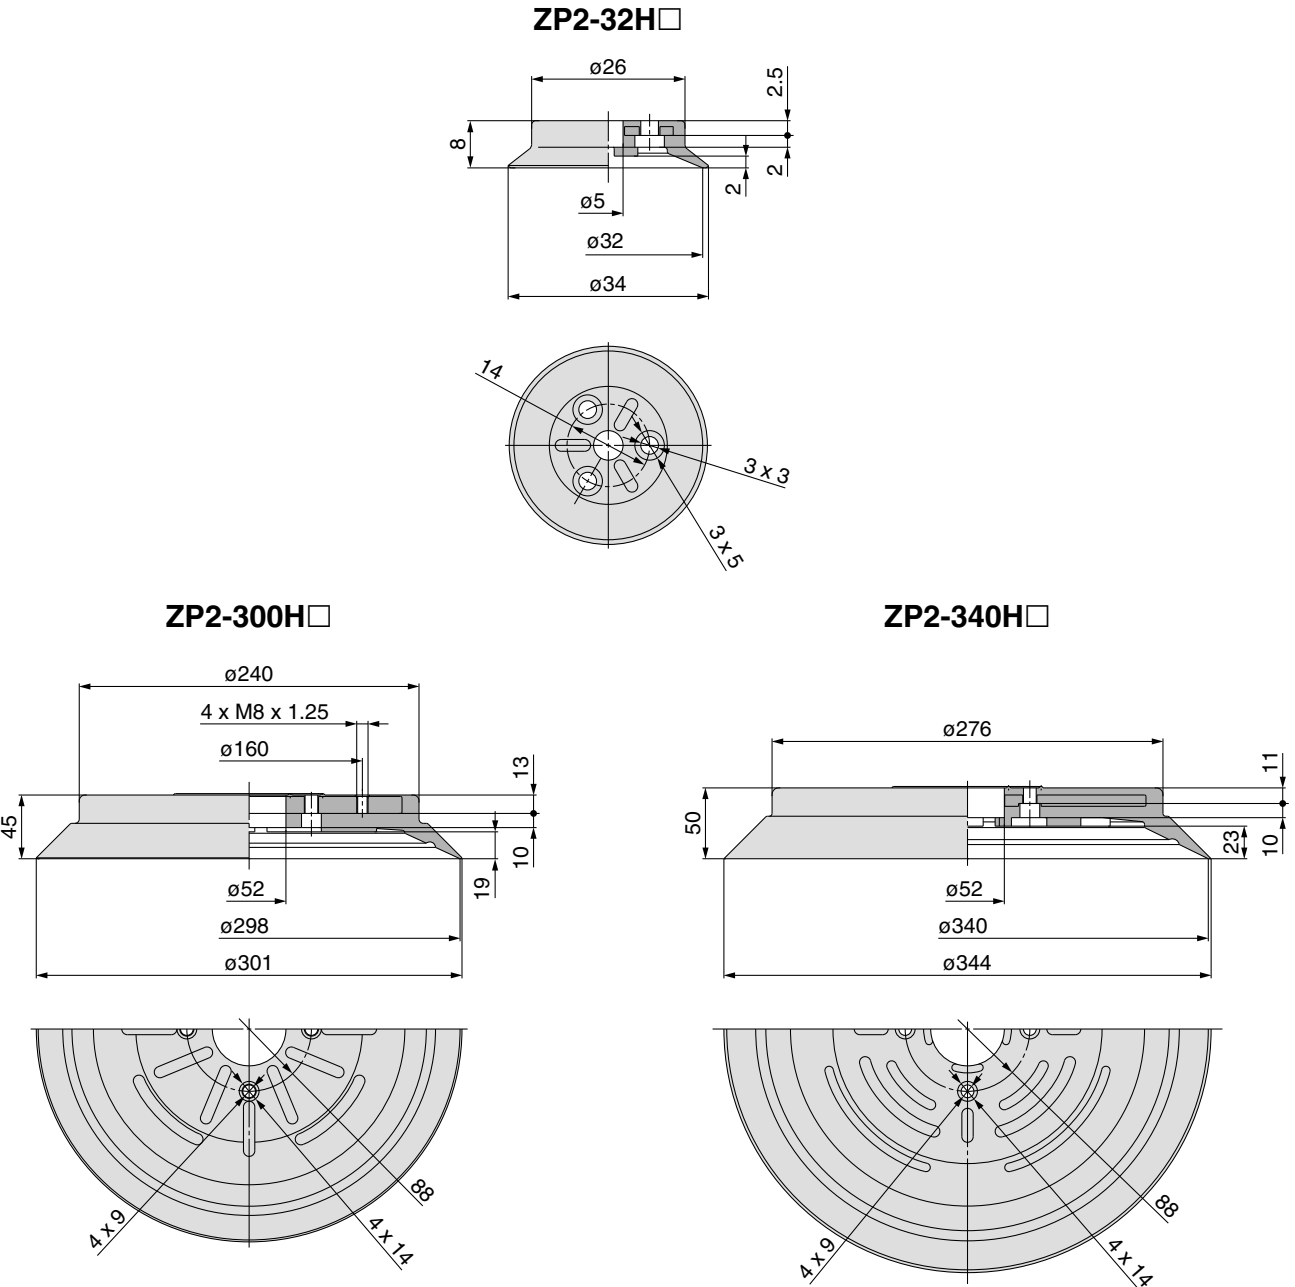



Dimensions

ZP2-150HT□

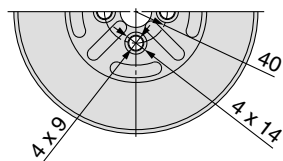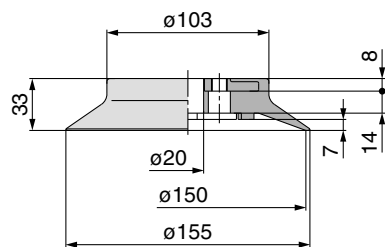

ZP2-250HT□

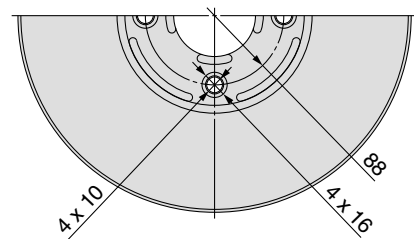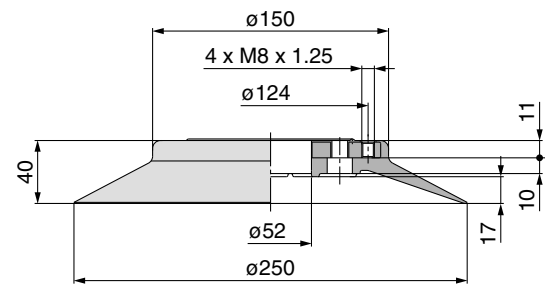



Heavy-duty Pad

Pad diameter **ø32, ø150**

Symbol/Type

**HB: Heavy-duty
(Bellows)**

■ For heavy or large work pieces

How to Order



Pad unit **ZP2 - 32 HB N**

Pad diameter

Symbol	Pad diameter
32	ø32
150	ø150

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
F	FKM
C	CR


Note) Silicone rubber is only applicable to the ø32 pad.

Pad type


Symbol	Type
HB	Heavy-duty (Bellows)

Dimensions: Pad Unit

ZP2-32HB□

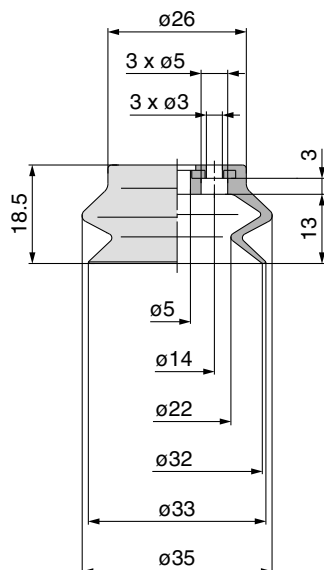

ZP2-150HB□

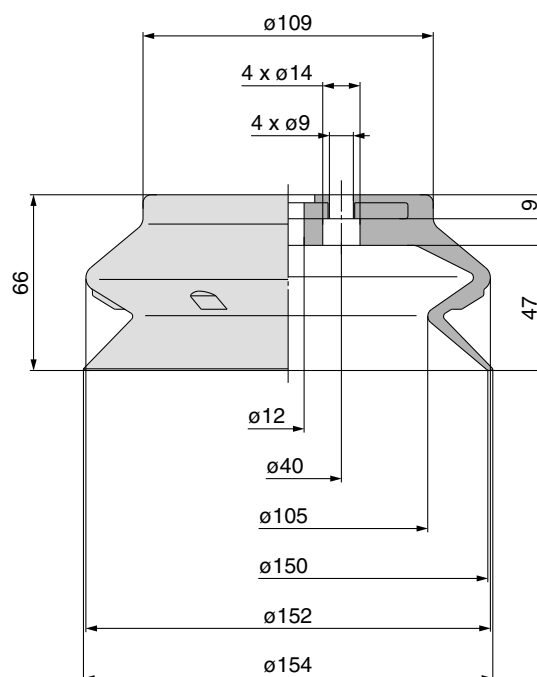

	<h1>Heavy-duty Pad</h1>	Symbol/Type HW: Heavy-duty (Oval)
	Pad size 30 x 50	

■ For heavy or large work pieces

How to Order



Pad unit **ZP2-3050 HW N**

Pad size

Symbol	Pad size
3050	30 x 50

Pad material


Symbol	Material
N	NBR
S	Silicone rubber
F	FKM
C	CR

Pad type

Symbol	Type
HW	Heavy-duty (Oval)

Dimensions: Pad Unit

ZP2-3050HW □

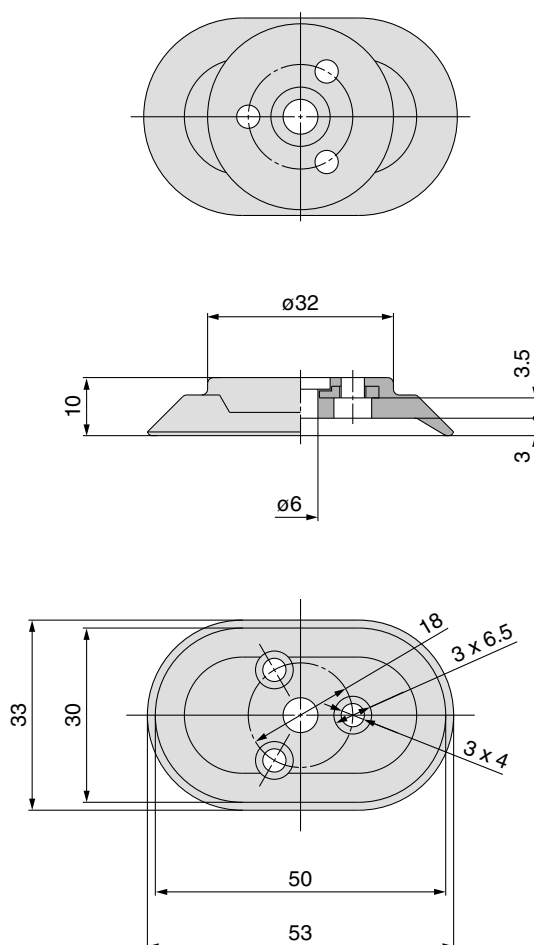




Heavy-duty Ball Joint Pad

Symbol/Type

H: Heavy-duty
(Flat with rib)

Pad diameter $\varnothing 40, \varnothing 50, \varnothing 63, \varnothing 80, \varnothing 100, \varnothing 125$

■ For adsorption of work pieces with inclined surface

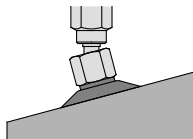

Replacement Part No.

Model	Pad unit part no.	Adapter assembly part no.
ZP2-TF40H□	ZP40H□	ZP2A-TF1
ZP2-TF50H□	ZP50H□	
ZP2-TF63H□	ZP63H□	ZP2A-TF2
ZP2-TF80H□	ZP80H□	
ZP2-TF100H□	ZP100H□	ZP2A-TF3
ZP2-TF125H□	ZP125H□	

Note) □ in the table indicates the pad material.

How to Order

With adapter **ZP2 – T F 40 H N**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	$\varnothing 40$
50	$\varnothing 50$
63	$\varnothing 63$
80	$\varnothing 80$
100	$\varnothing 100$
125	$\varnothing 125$

Pad type

Symbol	Type
H	Heavy-duty (Flat with rib)

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Vacuum inlet direction **Vertical**




Dimensions: With Adapter

ZP2-TF⁴⁰₅₀H□

Width across flat 19 (Hexagon)

Width across flat 19 (Hexagon)

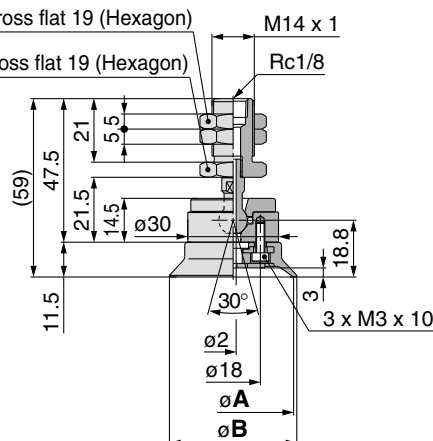


Dimensions

Model	A	B
ZP2-TF40H□	40	42
ZP2-TF50H□	50	52

ZP2-TF⁶³₈₀H□

Width across flat 22 (Hexagon)

Width across flat 22 (Hexagon)

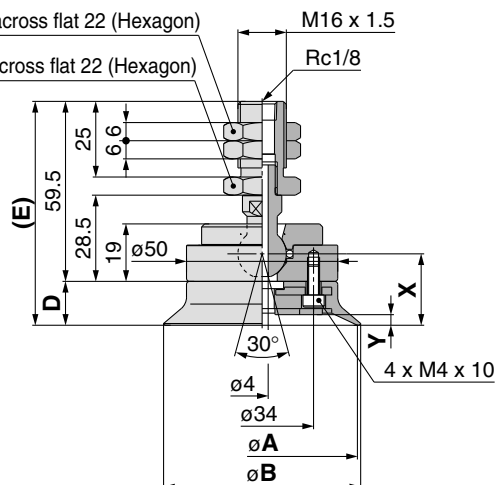


Dimensions

Model	A	B	D	E	X	Y
ZP2-TF63H□	63	65	14.5	74	23.6	3.5
ZP2-TF80H□	80	82	16.5	76	25.6	4.5

ZP2-TF¹⁰⁰₁₂₅H□

Width across flat 22 (Hexagon)

Width across flat 22 (Hexagon)

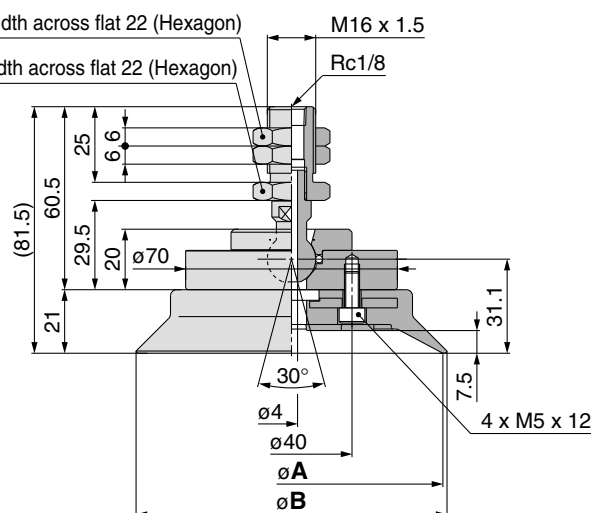

Dimensions

Model	A	B
ZP2-TF100H□	100	103
ZP2-TF125H□	125	128

How to Order

Vacuum inlet direction **Lateral**

With adapter **ZP2 – X F 40 H N**

Vacuum inlet direction ●

Symbol	Direction
X	Lateral

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125













● **Pad material (☐)**

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

- Pad type

Symbol	Type
H	Heavy-duty (Flat with rib)


Replacement Part No.

Model	Pad unit part no.	Adapter assembly part no.	
ZP2-XF40H 	ZP40H 	ZP2A-XF1	With three M3 bolts
ZP2-XF50H 	ZP50H 		
ZP2-XF63H 	ZP63H 	ZP2A-XF2	With four M4 bolts
ZP2-XF80H 	ZP80H 		
ZP2-XF100H 	ZP100H 	ZP2A-XF3	With four M5 bolts
ZP2-XF125H 	ZP125H 		

Note) □ in the table indicates the pad material.

Dimensions: With Adapter


ZP2-XF⁴⁰₅₀H ☐

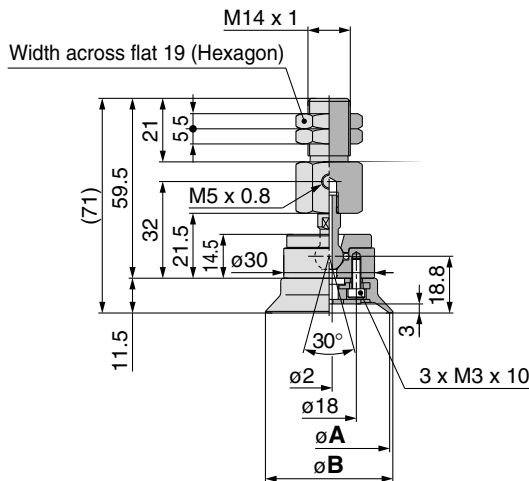

Dimensions

Model	A	B
ZP2-XF40H□	40	42
ZP2-XF50H□	50	52


ZP2-XF⁶³₈₀H ☐

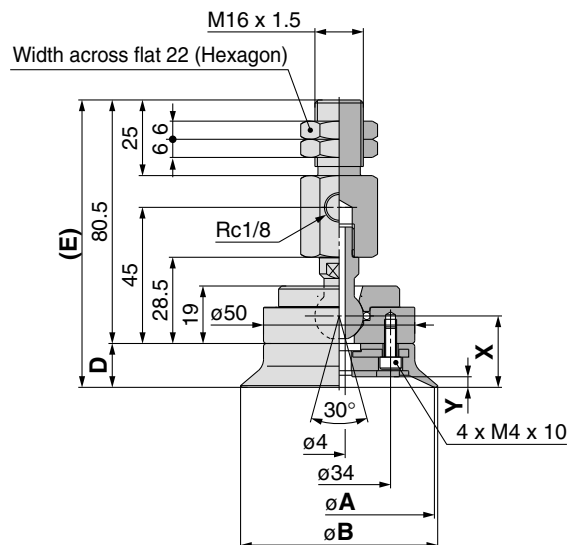

Dimensions

Model	A	B	D	E	X	Y
2P2-XF63H□	63	65	14.5	95	23.6	3.5
2P2-XF80H□	80	82	16.5	97	25.6	4.5

ZP2-XF¹⁰⁰₁₂₅H ☐

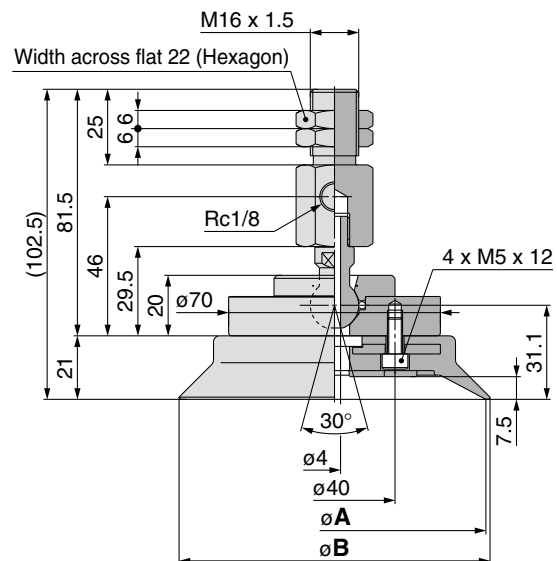

Dimensions

Model	A	B
ZP2-XF100H <input type="checkbox"/>	100	103
ZP2-XF125H <input type="checkbox"/>	125	128

How to Order

With buffer **ZP2 – T F 40 H N JB 25**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type

Symbol	Type
H	Heavy-duty (Flat with rib)

Buffer stroke (■)

Stroke	Applicable pad	ZP40H ZP50H	ZP63H ZP80H	ZP100H ZP125H
25		●	●	●
50		●	●	●
75		●	●	●
100		—	●	●

Buffer specification

Symbol	Specification
JB	Rotating With bushing Material: Brass
JF	Rotating With bushing Material: Steel

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR



Vacuum inlet direction **Vertical**

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZP2-TF40H□(JB/JF)25	ZP40H□	ZP2B-TF1(JB/JF)25
ZP2-TF40H□(JB/JF)50		ZP2B-TF1(JB/JF)50
ZP2-TF40H□(JB/JF)75		ZP2B-TF1(JB/JF)75
ZP2-TF50H□(JB/JF)25	ZP50H□	ZP2B-TF1(JB/JF)25
ZP2-TF50H□(JB/JF)50		ZP2B-TF1(JB/JF)50
ZP2-TF50H□(JB/JF)75		ZP2B-TF1(JB/JF)75
ZP2-TF63H□(JB/JF)25	ZP63H□	ZP2B-TF2(JB/JF)25
ZP2-TF63H□(JB/JF)50		ZP2B-TF2(JB/JF)50
ZP2-TF63H□(JB/JF)75		ZP2B-TF2(JB/JF)75
ZP2-TF63H□(JB/JF)100		ZP2B-TF2(JB/JF)100
ZP2-TF80H□(JB/JF)25	ZP80H□	ZP2B-TF2(JB/JF)25
ZP2-TF80H□(JB/JF)50		ZP2B-TF2(JB/JF)50
ZP2-TF80H□(JB/JF)75		ZP2B-TF2(JB/JF)75
ZP2-TF80H□(JB/JF)100		ZP2B-TF2(JB/JF)100
ZP2-TF100H□(JB/JF)25	ZP100H□	ZP2B-TF3(JB/JF)25
ZP2-TF100H□(JB/JF)50		ZP2B-TF3(JB/JF)50
ZP2-TF100H□(JB/JF)75		ZP2B-TF3(JB/JF)75
ZP2-TF100H□(JB/JF)100	ZP125H□	ZP2B-TF3(JB/JF)100
ZP2-TF125H□(JB/JF)25		ZP2B-TF3(JB/JF)25
ZP2-TF125H□(JB/JF)50		ZP2B-TF3(JB/JF)50
ZP2-TF125H□(JB/JF)75		ZP2B-TF3(JB/JF)75
ZP2-TF125H□(JB/JF)100		ZP2B-TF3(JB/JF)100


Note) □ in the table indicates the pad material.

Buffer Specifications

Pad diameter		ø40, ø50	ø63, ø80, ø100, ø125
Stroke (mm)		25, 50, 75	25, 50, 75, 100
Spring reactive force	At 0 stroke (N)	6.9	10
	At buffer stroke (N)	11.8	15
Buffer specifications	JB	Rotating With bushing Buffer body material: Brass	
		Tightening torque: 30 N·m ±5%	Tightening torque: 45 N·m ±5%
	JF	Rotating With bushing Buffer body material: Steel	
		Tightening torque: 50 N·m ±5%	Tightening torque: 70 N·m ±5%

Dimensions: With Buffer


ZP2-TF⁴⁰₅₀H □ JB ■ JF ■

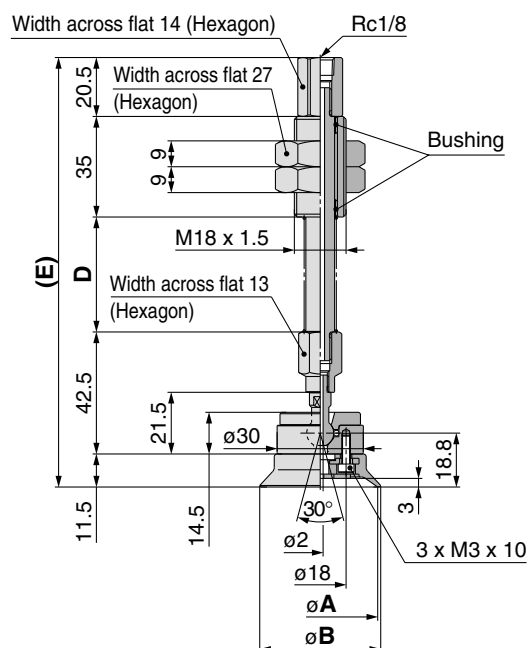

Dimensions

Model	A	B	D	E
ZP2-TF40H□(JB/JF)25			40	149.5
ZP2-TF40H□(JB/JF)50	40	42	75	184.5
ZP2-TF40H□(JB/JF)75			111	220.5
ZP2-TF50H□(JB/JF)25			40	149.5
ZP2-TF50H□(JB/JF)50	50	52	75	184.5
ZP2-TF50H□(JB/JF)75			111	220.5


ZP2-TF⁶³₈₀H □ JB ■ JF ■

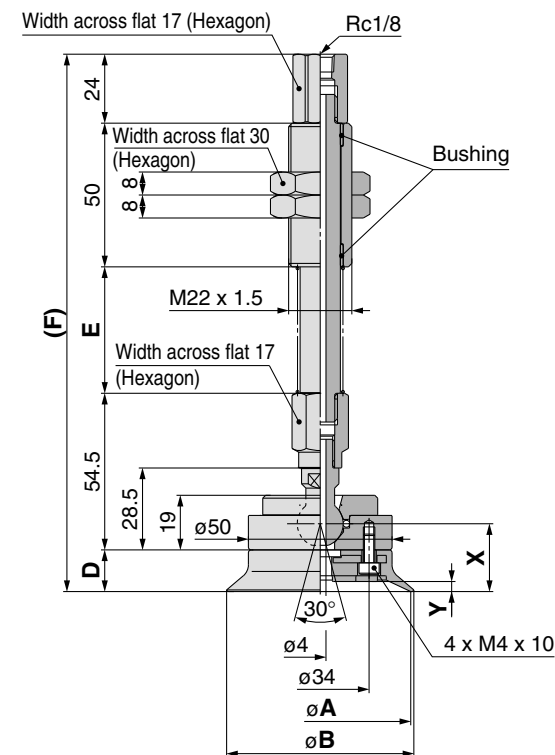

Dimensions

Model	A	B	D	E	F	X	Y
ZP2-TF63H□(JB/JF)25				44	187		
ZP2-TF63H□(JB/JF)50	63	65	14.5	80	223	23.6	3.5
ZP2-TF63H□(JB/JF)75				120	263		
ZP2-TF63H□(JB/JF)100				155	298		
ZP2-TF80H□(JB/JF)25				44	189		
ZP2-TF80H□(JB/JF)50	80	82	16.5	80	225	25.6	4.5
ZP2-TF80H□(JB/JF)75				120	265		
ZP2-TF80H□(JB/JF)100				155	300		

ZP2-TF¹⁰⁰₁₂₅H □ JB ■ JF ■

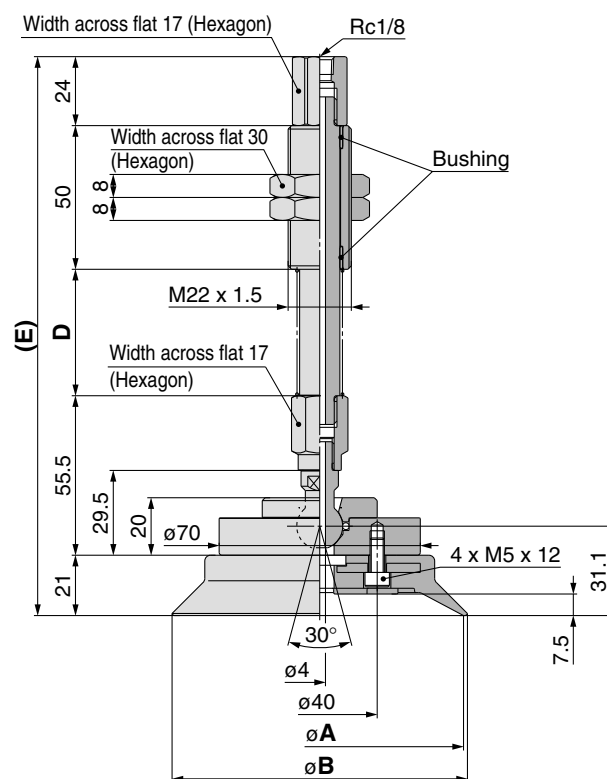

Dimensions

Model	A	B	D	E
ZP2-TF100H□(JB/JF)25			44	194.5
ZP2-TF100H□(JB/JF)50	100	103	80	230.5
ZP2-TF100H□(JB/JF)75			120	270.5
ZP2-TF100H□(JB/JF)100			155	305.5
ZP2-TF125H□(JB/JF)25			44	194.5
ZP2-TF125H□(JB/JF)50	125	128	80	230.5
ZP2-TF125H□(JB/JF)75			120	270.5
ZP2-TF125H□(JB/JF)100			155	305.5

How to Order

With buffer **ZP2 – X F 40 H N JB 25**

Vacuum inlet direction

Symbol	Direction
X	Lateral

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type

Symbol	Type
H	Heavy-duty (Flat with rib)

Buffer stroke (■)

Stroke	Applicable pad	ZP40H ZP50H	ZP63H ZP80H	ZP100H ZP125H
25		●	●	●
50		●	●	●
75		●	●	●
100		—	●	●

Buffer specification

Symbol	Specification
JB	Rotating With bushing Material: Brass
JF	Rotating With bushing Material: Steel

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR



Vacuum inlet direction **Lateral**

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZP2-XF40H□(JB/JF)25	ZP40H□	ZP2B-XF1(JB/JF)25
ZP2-XF40H□(JB/JF)50		ZP2B-XF1(JB/JF)50
ZP2-XF40H□(JB/JF)75		ZP2B-XF1(JB/JF)75
ZP2-XF50H□(JB/JF)25	ZP50H□	ZP2B-XF1(JB/JF)25
ZP2-XF50H□(JB/JF)50		ZP2B-XF1(JB/JF)50
ZP2-XF50H□(JB/JF)75		ZP2B-XF1(JB/JF)75
ZP2-XF63H□(JB/JF)25	ZP63H□	ZP2B-XF2(JB/JF)25
ZP2-XF63H□(JB/JF)50		ZP2B-XF2(JB/JF)50
ZP2-XF63H□(JB/JF)75		ZP2B-XF2(JB/JF)75
ZP2-XF63H□(JB/JF)100		ZP2B-XF2(JB/JF)100
ZP2-XF80H□(JB/JF)25	ZP80H□	ZP2B-XF2(JB/JF)25
ZP2-XF80H□(JB/JF)50		ZP2B-XF2(JB/JF)50
ZP2-XF80H□(JB/JF)75		ZP2B-XF2(JB/JF)75
ZP2-XF80H□(JB/JF)100		ZP2B-XF2(JB/JF)100
ZP2-XF100H□(JB/JF)25	ZP100H□	ZP2B-XF3(JB/JF)25
ZP2-XF100H□(JB/JF)50		ZP2B-XF3(JB/JF)50
ZP2-XF100H□(JB/JF)75		ZP2B-XF3(JB/JF)75
ZP2-XF100H□(JB/JF)100	ZP125H□	ZP2B-XF3(JB/JF)100
ZP2-XF125H□(JB/JF)25		ZP2B-XF3(JB/JF)25
ZP2-XF125H□(JB/JF)50		ZP2B-XF3(JB/JF)50
ZP2-XF125H□(JB/JF)75		ZP2B-XF3(JB/JF)75
ZP2-XF125H□(JB/JF)100		ZP2B-XF3(JB/JF)100

Note) □ in the table indicates the pad material.


Buffer Specifications

Pad diameter		ø40, ø50	ø63, ø80, ø100, ø125
Stroke (mm)		25, 50, 75	25, 50, 75, 100
Spring reactive force	At 0 stroke (N)	6.9	10
	At buffer stroke (N)	11.8	15
Buffer specifications	JB	Rotating With bushing Buffer body material: Brass	
		Tightening torque: 30 N·m ±5%	Tightening torque: 45 N·m ±5%
	JF	Rotating With bushing Buffer body material: Steel	
		Tightening torque: 50 N·m ±5%	Tightening torque: 75 N·m ±5%

Dimensions: With Buffer

ZP2-XF⁴⁰₅₀H□JB JF■

Width across flat 14 (Hexagon)

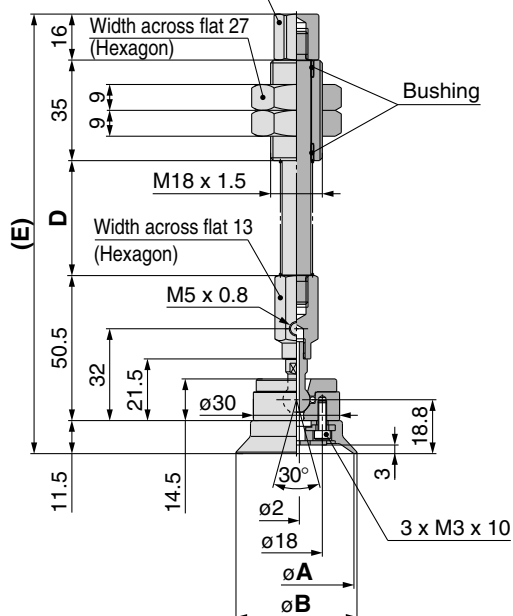


Dimensions

Model	A	B	D	E
ZP2-XF40H□(JB/JF)25			40	153
ZP2-XF40H□(JB/JF)50	40	42	75	188
ZP2-XF40H□(JB/JF)75			111	224
ZP2-XF50H□(JB/JF)25			40	153
ZP2-XF50H□(JB/JF)50	50	52	75	188
ZP2-XF50H□(JB/JF)75			111	224

ZP2-XF⁶³₈₀H□JB JF■

Width across flat 17 (Hexagon)

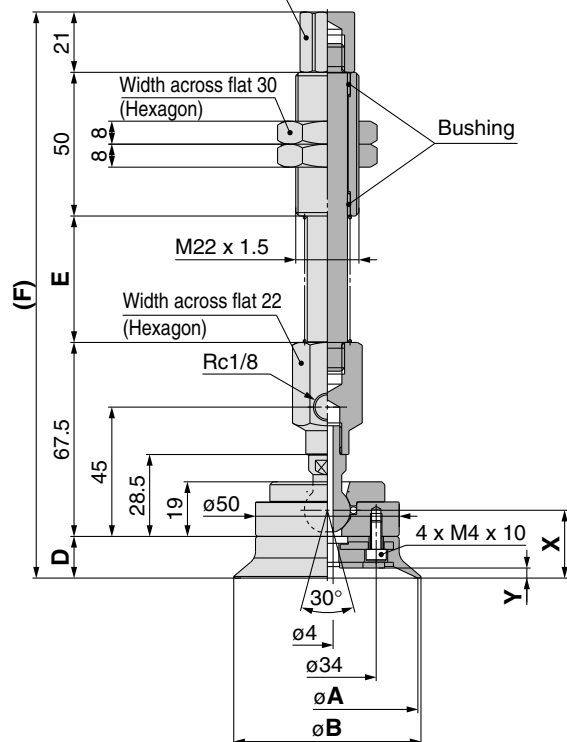


Dimensions

Model	A	B	D	E	F	X	Y
ZP2-XF63H□(JB/JF)25				44	197		
ZP2-XF63H□(JB/JF)50				80	233		
ZP2-XF63H□(JB/JF)75	63	65	14.5	120	273	23.6	3.5
ZP2-XF63H□(JB/JF)100				155	308		
ZP2-XF80H□(JB/JF)25				44	199		
ZP2-XF80H□(JB/JF)50				80	235		
ZP2-XF80H□(JB/JF)75	80	82	16.5	120	275	25.6	4.5
ZP2-XF80H□(JB/JF)100				155	310		

ZP2-XF¹⁰⁰₁₂₅H□JB JF■

Width across flat 17 (Hexagon)

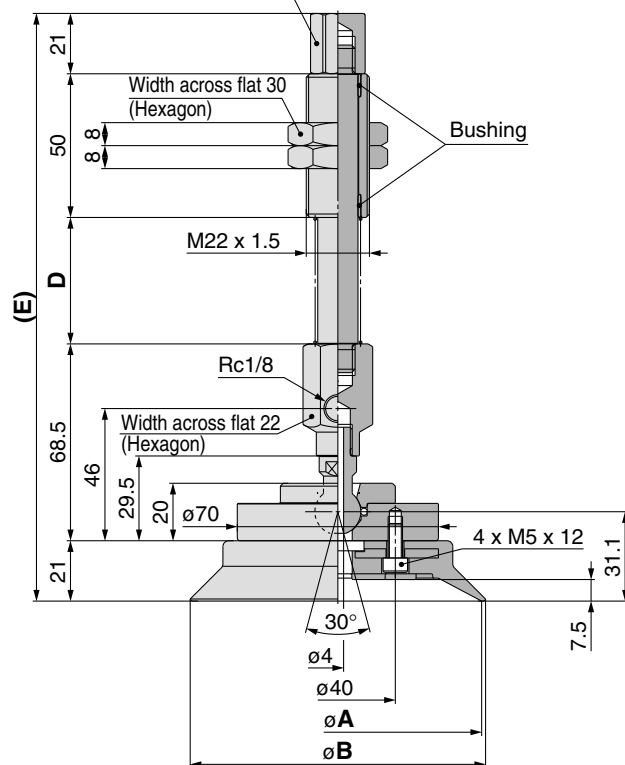

Dimensions

Model	A	B	D	E
ZP2-XF100H□(JB/JF)25			44	204.5
ZP2-XF100H□(JB/JF)50			80	240.5
ZP2-XF100H□(JB/JF)75	100	103	120	280.5
ZP2-XF100H□(JB/JF)100			155	315.5
ZP2-XF125H□(JB/JF)25			44	204.5
ZP2-XF125H□(JB/JF)50			80	240.5
ZP2-XF125H□(JB/JF)75	125	128	120	280.5
ZP2-XF125H□(JB/JF)100			155	315.5




Heavy-duty Ball Joint Pad

Symbol/Type

HB: Heavy-duty
(Bellows)

Pad diameter $\varnothing 40, \varnothing 50, \varnothing 63, \varnothing 80, \varnothing 100, \varnothing 125$

■ For adsorption of work pieces
with inclined or curved
surface

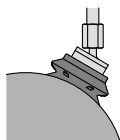

How to Order

With adapter **ZP2 - T F 40 HB N**

Vacuum inlet direction

Symbol	Direction
T	Vertical

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	$\varnothing 40$
50	$\varnothing 50$
63	$\varnothing 63$
80	$\varnothing 80$
100	$\varnothing 100$
125	$\varnothing 125$

Pad type

Symbol	Type
HB	Heavy-duty (Bellows)

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR




Vacuum inlet direction **Vertical**

Replacement Part No.

Model	Pad unit part no.	Adapter assembly part no.
ZP2-TF40HB□	ZP40HB□	ZP2A-TF1 With three M3 bolts
ZP2-TF50HB□	ZP50HB□	ZP2A-TF2 With four M4 bolts
ZP2-TF63HB□	ZP63HB□	ZP2A-TF3 With four M5 bolts
ZP2-TF80HB□	ZP80HB□	
ZP2-TF100HB□	ZP100HB□	
ZP2-TF125HB□	ZP125HB□	


Note) □ in the table indicates the pad material.

Dimensions: With Adapter

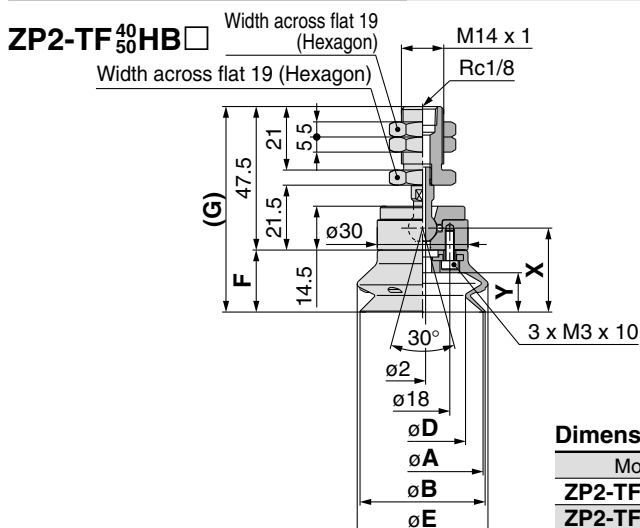


Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-TF40HB□	40	41	28	43	20.5	68	27.8	13
ZP2-TF50HB□	50	52	36	54	24	71.5	31.3	16.5

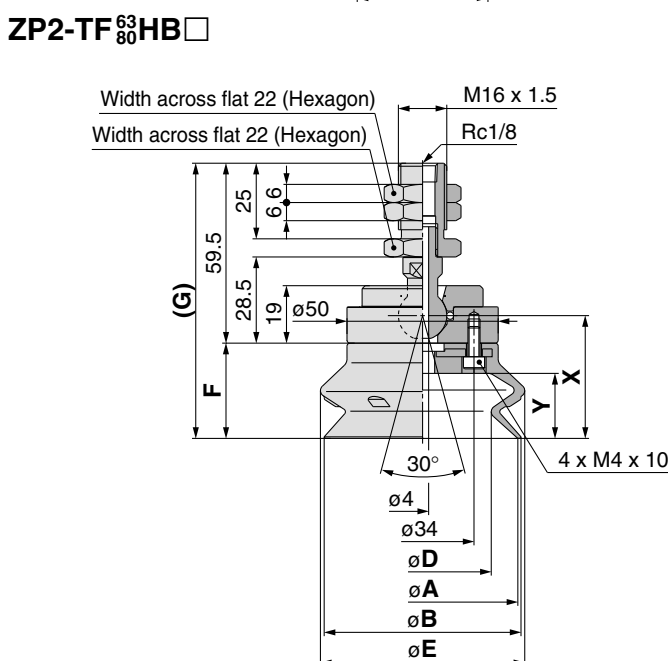

Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-TF63HB□	63	65	46	68	31.5	91	40.6	21
ZP2-TF80HB□	80	83	58	85	37	96.5	46.1	27.5

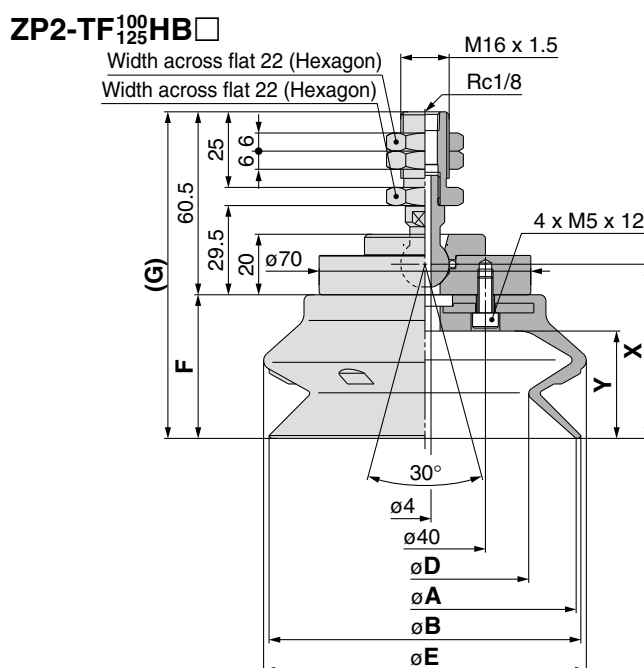

Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-TF100HB□	100	103	69	107	47.5	108	57.6	35.5
ZP2-TF125HB□	125	129	89	135	56	116.5	66.1	44

How to Order

With adapter ZP2 - X F 40 HB N

Vacuum inlet direction

Symbol	Direction
X	Lateral

Specification (mechanism)

Symbol	Specification
F	Ball joint

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Pad type

Symbol	Type
HB	Heavy-duty (Bellows)




Vacuum inlet direction **Lateral**

Replacement Part No.

Model	Pad unit part no.	Adapter assembly part no.
ZP2-XF40HB□	ZP40HB□	ZP2A-XF1
ZP2-XF50HB□	ZP50HB□	
ZP2-XF63HB□	ZP63HB□	ZP2A-XF2
ZP2-XF80HB□	ZP80HB□	
ZP2-XF100HB□	ZP100HB□	ZP2A-XF3
ZP2-XF125HB□	ZP125HB□	


Note) □ in the table indicates the pad material.

Dimensions: With Adapter

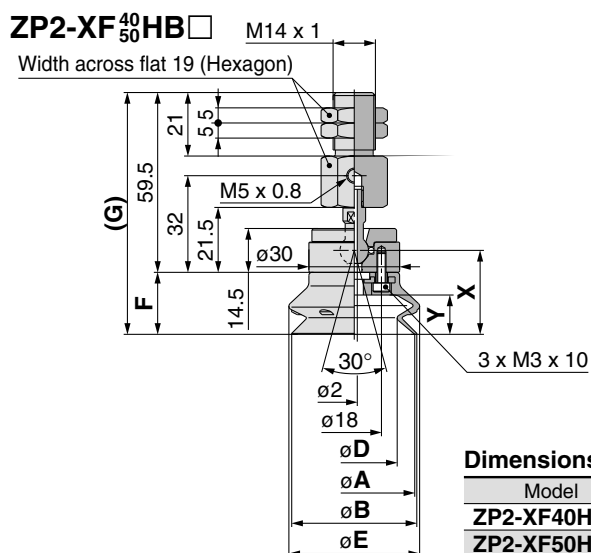


Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-XF40HB□	40	41	28	43	20.5	80	27.8	13
ZP2-XF50HB□	50	52	36	54	24	83.5	31.3	16.5

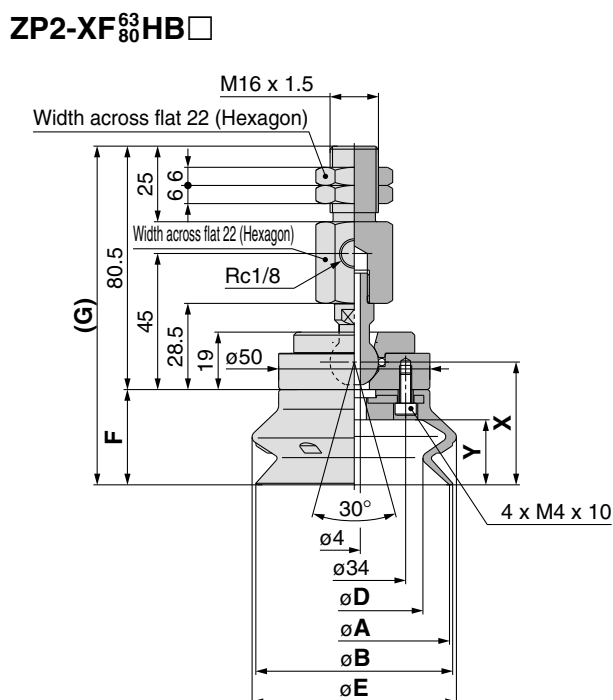

Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-XF63HB□	63	65	46	68	31.5	112	40.6	21.5
ZP2-XF80HB□	80	83	58	85	37	117.5	46.1	27.5

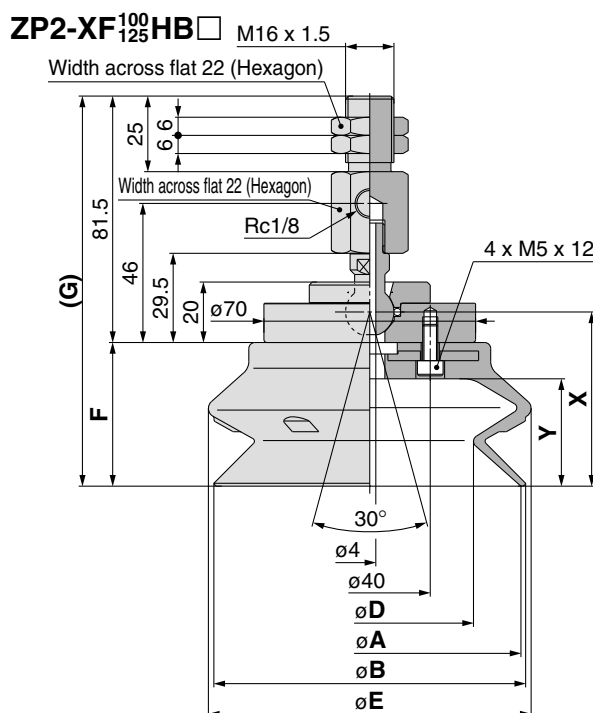

Dimensions

Model	A	B	D	E	F	G	X	Y
ZP2-XF100HB□	100	103	69	107	47.5	129	57.6	35.5
ZP2-XF125HB□	125	129	89	135	56	137.5	66.1	44

How to Order

With buffer **ZP2 – T F 40 HB N JB 25**

Vacuum inlet direction •

Symbol	Direction
T	Vertical

Specification (mechanism) •

Symbol	Specification
F	Ball joint

Pad diameter •

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type •

Symbol	Type
HB	Heavy-duty (Bellows)

• Buffer stroke (■)

Stroke	Applicable pad	ZP40HB	ZP63HB	ZP100HB
		ZP50HB	ZP80HB	ZP125HB
25		●	●	●
50		●	●	●
75		●	●	●
100		—	●	●

• Buffer specification

Symbol	Specification
JB	Rotating With bushing Material: Brass
JF	Rotating With bushing Material: Steel

• Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR



Vacuum inlet direction **Vertical**

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZP2-TF40HB□(JB/JF)25	ZP40HB□	ZP2B-TF1(JB/JF)25
ZP2-TF40HB□(JB/JF)50		ZP2B-TF1(JB/JF)50
ZP2-TF40HB□(JB/JF)75		ZP2B-TF1(JB/JF)75
ZP2-TF50HB□(JB/JF)25	ZP50HB□	ZP2B-TF1(JB/JF)25
ZP2-TF50HB□(JB/JF)50		ZP2B-TF1(JB/JF)50
ZP2-TF50HB□(JB/JF)75		ZP2B-TF1(JB/JF)75
ZP2-TF63HB□(JB/JF)25	ZP63HB□	ZP2B-TF2(JB/JF)25
ZP2-TF63HB□(JB/JF)50		ZP2B-TF2(JB/JF)50
ZP2-TF63HB□(JB/JF)75		ZP2B-TF2(JB/JF)75
ZP2-TF63HB□(JB/JF)100		ZP2B-TF2(JB/JF)100
ZP2-TF80HB□(JB/JF)25	ZP80HB□	ZP2B-TF2(JB/JF)25
ZP2-TF80HB□(JB/JF)50		ZP2B-TF2(JB/JF)50
ZP2-TF80HB□(JB/JF)75		ZP2B-TF2(JB/JF)75
ZP2-TF80HB□(JB/JF)100		ZP2B-TF2(JB/JF)100
ZP2-TF100HB□(JB/JF)25	ZP100HB□	ZP2B-TF3(JB/JF)25
ZP2-TF100HB□(JB/JF)50		ZP2B-TF3(JB/JF)50
ZP2-TF100HB□(JB/JF)75		ZP2B-TF3(JB/JF)75
ZP2-TF100HB□(JB/JF)100		ZP2B-TF3(JB/JF)100
ZP2-TF125HB□(JB/JF)25	ZP125HB□	ZP2B-TF3(JB/JF)25
ZP2-TF125HB□(JB/JF)50		ZP2B-TF3(JB/JF)50
ZP2-TF125HB□(JB/JF)75		ZP2B-TF3(JB/JF)75
ZP2-TF125HB□(JB/JF)100		ZP2B-TF3(JB/JF)100


Note) □ in the table indicates the pad material.

Buffer Specifications

Pad diameter		ø40, ø50	ø63, ø80, ø100, ø125
Stroke (mm)		25, 50, 75	25, 50, 75, 100
Spring reactive force	At 0 stroke (N)	6.9	10
	At buffer stroke (N)	11.8	15
Buffer specifications	JB	Rotating With bushing Buffer body material: Brass	
		Tightening torque: 30 N·m ±5% Tightening torque: 45 N·m ±5%	
	JF	Rotating With bushing Buffer body material: Steel	
		Tightening torque: 50 N·m ±5% Tightening torque: 75 N·m ±5%	

Dimensions: With Buffer


ZP2-TF⁴⁰₅₀HB ☐ **JB** ☒ **JF** ☐

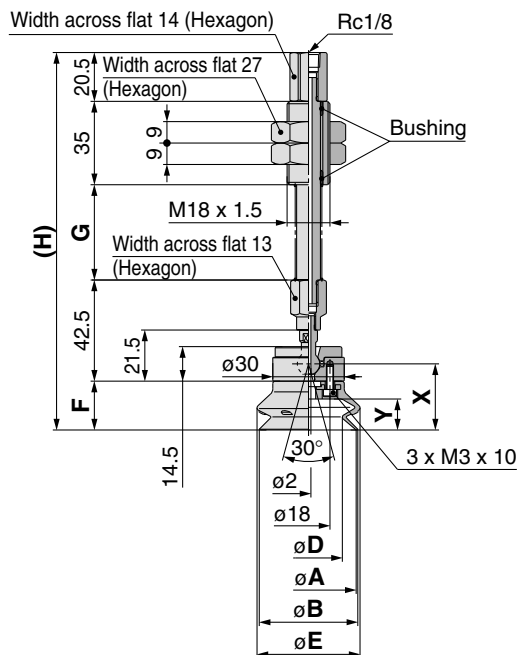

Dimensions

Model	A	B	D	E	F	G	H	X	Y
BP2-TF40HB□(JB/JF)25						40	158.5		
BP2-TF40HB□(JB/JF)50	40	42	28	43	20.5	75	193.5	27.8	13
BP2-TF40HB□(JB/JF)75						111	229.5		
BP2-TF50HB□(JB/JF)25						40	162		
BP2-TF50HB□(JB/JF)50	50	52	36	54	24	75	197	31.3	16.5
BP2-TF50HB□(JB/JF)75						111	233		


ZP2-TF⁶³₈₀HB ☐ **JB** ☒ **JF**

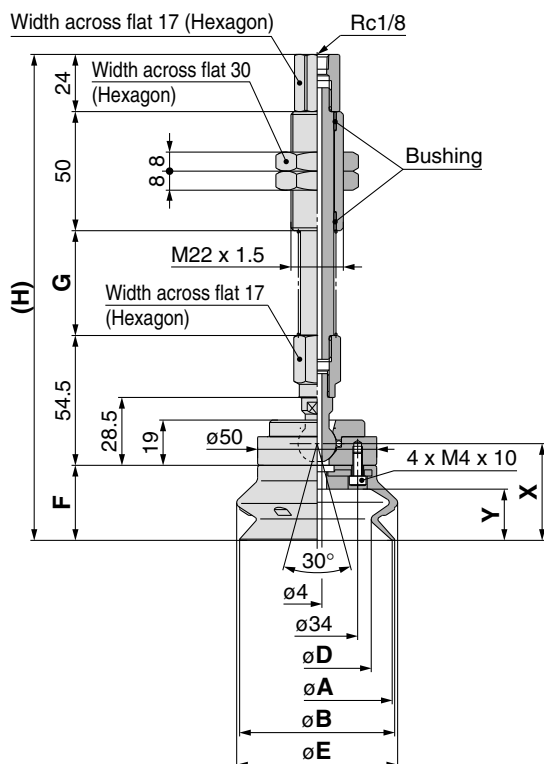

Dimensions

Model	A	B	D	E	F	G	H	X	Y
BP2-TF63HB□(JB/JF)25	63	65	46	68	31.5	44	204	40.6	21.5
BP2-TF63HB□(JB/JF)50						80	240		
BP2-TF63HB□(JB/JF)75						120	280		
BP2-TF63HB□(JB/JF)100						155	315		
BP2-TF80HB□(JB/JF)25	80	83	58	85	37	44	209.5	46.1	27.5
BP2-TF80HB□(JB/JF)50						80	245.5		
BP2-TF80HB□(JB/JF)75						120	285.5		
BP2-TF80HB□(JB/JF)100						155	320.5		

ZP2-TF¹⁰⁰₁₂₅HB ☐ **JB** ☒ **JF** ☐

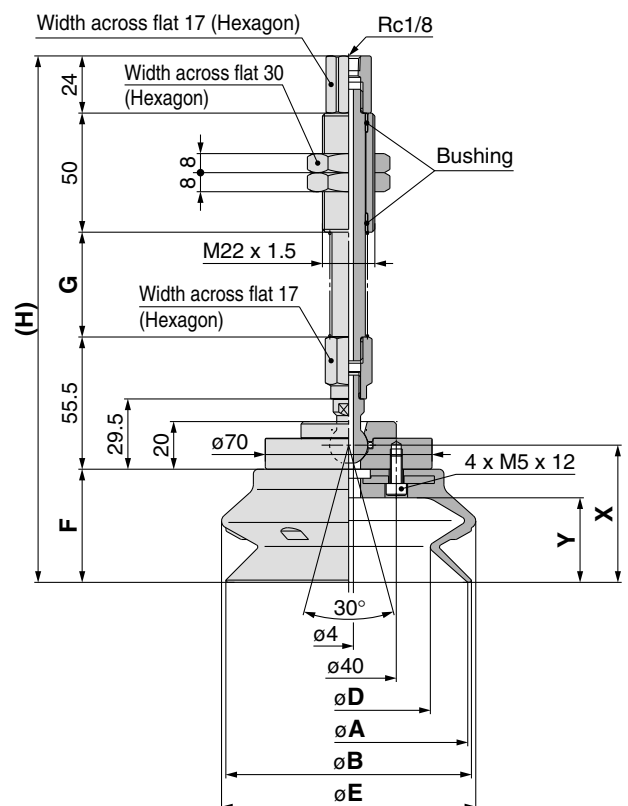

Dimensions

Model		A	B	D	E	F	G	H	X	Y
100	103	69	107	47.5		44	221			
						80	257	57.6	35.5	
						120	297			
						155	332			
125	129	89	135	56		44	229.5			
						80	265.5	66.1	44	
						120	305.5			
						155	340.5			

How to Order

With buffer **ZP2 – X F 40 HB N JB 25**

Vacuum inlet direction •

Symbol	Direction
T	Lateral

Specification (mechanism) •

Symbol	Specification
F	Ball joint

Pad diameter •

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type •

Symbol	Type
HB	Heavy-duty (Bellows)

• Buffer stroke (■)

Stroke	Applicable pad	ZP40HB ZP50HB	ZP63HB ZP80HB	ZP100HB ZP125HB
25		●	●	●
50		●	●	●
75		●	●	●
100		—	●	●

• Buffer specification

Symbol	Specification
JB	Rotating With bushing Material: Brass
JF	Rotating With bushing Material: Steel

• Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR



Vacuum inlet direction **Lateral**

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZP2-XF40HB□(JB/JF)25	ZP40HB□	ZP2B-XF1(JB/JF)25
ZP2-XF40HB□(JB/JF)50		ZP2B-XF1(JB/JF)50
ZP2-XF40HB□(JB/JF)75		ZP2B-XF1(JB/JF)75
ZP2-XF50HB□(JB/JF)25	ZP50HB□	ZP2B-XF1(JB/JF)25
ZP2-XF50HB□(JB/JF)50		ZP2B-XF1(JB/JF)50
ZP2-XF50HB□(JB/JF)75		ZP2B-XF1(JB/JF)75
ZP2-XF63HB□(JB/JF)25	ZP63HB□	ZP2B-XF2(JB/JF)25
ZP2-XF63HB□(JB/JF)50		ZP2B-XF2(JB/JF)50
ZP2-XF63HB□(JB/JF)75		ZP2B-XF2(JB/JF)75
ZP2-XF63HB□(JB/JF)100		ZP2B-XF2(JB/JF)100
ZP2-XF80HB□(JB/JF)25	ZP80HB□	ZP2B-XF2(JB/JF)25
ZP2-XF80HB□(JB/JF)50		ZP2B-XF2(JB/JF)50
ZP2-XF80HB□(JB/JF)75		ZP2B-XF2(JB/JF)75
ZP2-XF80HB□(JB/JF)100		ZP2B-XF2(JB/JF)100
ZP2-XF100HB□(JB/JF)25	ZP100HB□	ZP2B-XF3(JB/JF)25
ZP2-XF100HB□(JB/JF)50		ZP2B-XF3(JB/JF)50
ZP2-XF100HB□(JB/JF)75		ZP2B-XF3(JB/JF)75
ZP2-XF100HB□(JB/JF)100		ZP2B-XF3(JB/JF)100
ZP2-XF125HB□(JB/JF)25	ZP125HB□	ZP2B-XF3(JB/JF)25
ZP2-XF125HB□(JB/JF)50		ZP2B-XF3(JB/JF)50
ZP2-XF125HB□(JB/JF)75		ZP2B-XF3(JB/JF)75
ZP2-XF125HB□(JB/JF)100		ZP2B-XF3(JB/JF)100


Note) □ in the table indicates the pad material.

Buffer Specifications

Pad diameter		ø40, ø50	ø63, ø80, ø100, ø125
Stroke (mm)		25, 50, 75	25, 50, 75, 100
Spring reactive force	At 0 stroke (N)	6.9	10
	At buffer stroke (N)	11.8	15
Buffer specifications	JB	Rotating With bushing Buffer body material: Brass	
		Tightening torque: 30 N·m ±5%	Tightening torque: 45 N·m ±5%
	JF	Rotating With bushing Buffer body material: Steel	
		Tightening torque: 50 N·m ±5%	Tightening torque: 75 N·m ±5%

Dimensions: With Buffer


ZP2-XF⁴⁰₅₀HB□JB/JF■

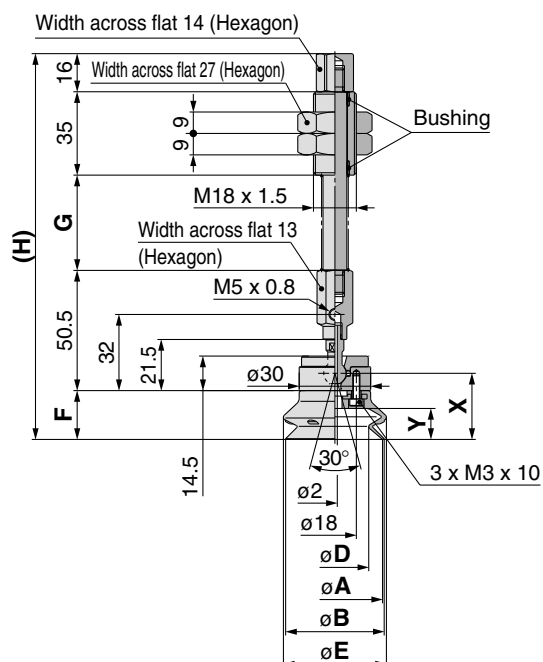

Dimensions

Model	A	B	D	E	F	G	H	X	Y
ZP2-XF40HB□(JB/JF)25	40	42	28	43	20.5	40	162	27.8	13
ZP2-XF40HB□(JB/JF)50						75	197		
ZP2-XF40HB□(JB/JF)75						111	233		
ZP2-XF50HB□(JB/JF)25	50	52	36	54	24	40	165.5	31.3	16.5
ZP2-XF50HB□(JB/JF)50						75	200.5		
ZP2-XF50HB□(JB/JF)75						111	236.5		


ZP2-XF⁶³₈₀HB□JB/JF■

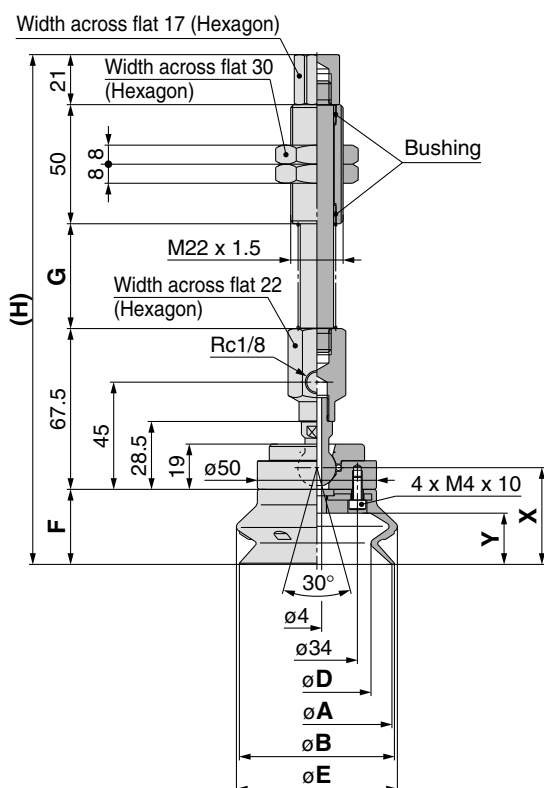

Dimensions


Model	A	B	D	E	F	G	H	X	Y
ZP2-XF63HB□(JB/JF)25	63	65	46	68	31.5	44	214	40.6	21.5
ZP2-XF63HB□(JB/JF)50						80	250		
ZP2-XF63HB□(JB/JF)75						120	290		
ZP2-XF63HB□(JB/JF)100						155	325		
ZP2-XF80HB□(JB/JF)25	80	83	58	85	37	44	219.5	46.1	27.5
ZP2-XF80HB□(JB/JF)50						80	255.5		
ZP2-XF80HB□(JB/JF)75						120	295.5		
ZP2-XF80HB□(JB/JF)100						155	330.5		

ZP2-XF¹⁰⁰₁₂₅HB□JB/JF■

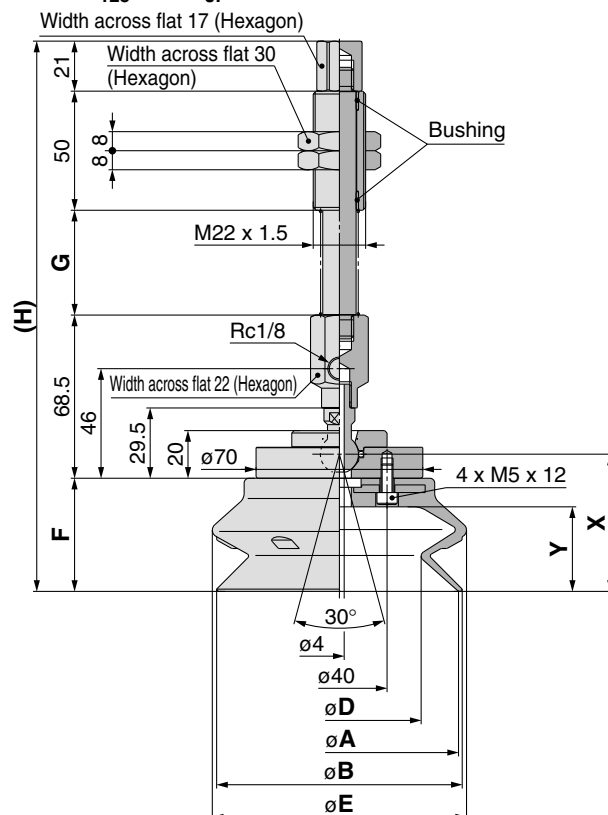

Dimensions

Model	A	B	D	E	F	G	H	X	Y
ZP2-XF100HB□(JB/JF)25	100	103	69	107	47.5	44	231	57.6	35.5
ZP2-XF100HB□(JB/JF)50						80	267		
ZP2-XF100HB□(JB/JF)75						120	307		
ZP2-XF100HB□(JB/JF)100						155	342		
ZP2-XF125HB□(JB/JF)25	125	129	89	135	56	44	239.5	66.1	44
ZP2-XF125HB□(JB/JF)50						80	275.5		
ZP2-XF125HB□(JB/JF)75						120	315.5		
ZP2-XF125HB□(JB/JF)100						155	350.5		



Heavy-duty Pad

Pad diameter $\varnothing 40, \varnothing 50, \varnothing 63, \varnothing 80, \varnothing 100, \varnothing 125$

Symbol/Type

H: Heavy-duty
(Flat with rib)
HB: Heavy-duty
(Bellows)

■ Reinforced pad prevents deformation when transferring heavy or large work pieces.

How to Order

Pad unit

ZP 40 H N

Pad diameter

Symbol	Pad diameter
40	$\varnothing 40$
50	$\varnothing 50$
63	$\varnothing 63$
80	$\varnothing 80$
100	$\varnothing 100$
125	$\varnothing 125$

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR



Pad type

Symbol	Type
H	Heavy-duty (Flat with rib)
HB	Heavy-duty (Bellows)





Dimensions: Pad Unit



ZP₅₀⁴⁰H□

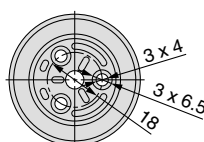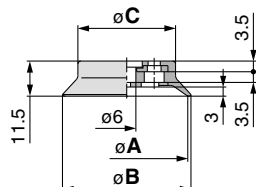

ZP₈₀⁶³H□

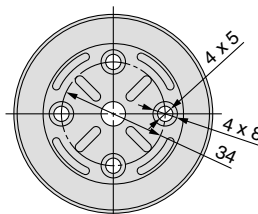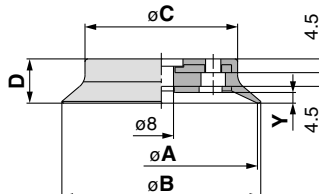

ZP₁₂₅¹⁰⁰H□

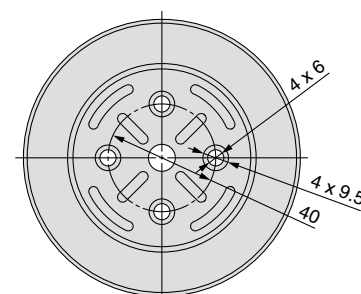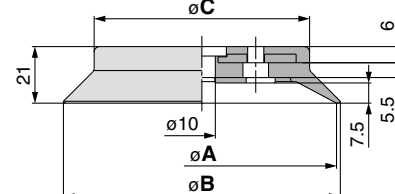

Dimensions

Model	A	B	C
ZP40H□	40	42	32
ZP50H□	50	52	42


Dimensions

Model	A	B	C	D	Y
ZP63H□	63	65	50	14.5	3.5
ZP80H□	80	82	61	16.5	4.5


Dimensions

Model	A	B	C
ZP100H□	100	103	80
ZP125H□	125	128	104


ZP₅₀⁴⁰HB□

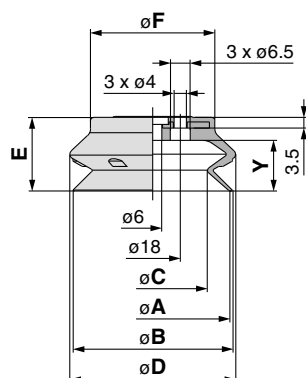

ZP₈₀⁶³HB□

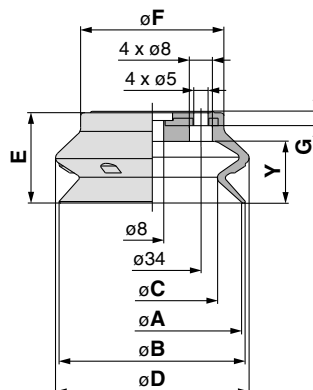

ZP₁₂₅¹⁰⁰HB□

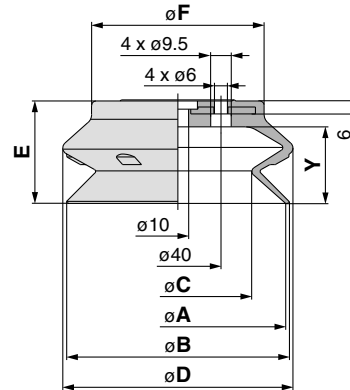

Dimensions

Model	A	B	C	D	E	F	Y
ZP40HB□	40	41	28	43	20.5	30	13
ZP50HB□	50	52	36	54	24	40.5	16.5


Dimensions

Model	A	B	C	D	E	F	G	Y
ZP63HB□	63	65	46	68	31.5	50	4.5	21.5
ZP80HB□	80	83	58	85	37	64	5	27.5

Dimensions

Model	A	B	C	D	E	F	Y
ZP100HB□	100	103	69	107	47.5	80	35.5
ZP125HB□	125	129	89	135	56	105	44

How to Order

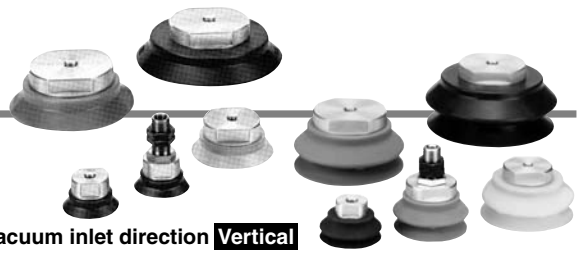

With adapter **ZPT 40 H N - A14**

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type (*)

Symbol	Type
H	Heavy-duty (Flat with rib)
HB	Heavy-duty (Bellows)

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Mounting thread size (Vacuum inlet)

Mounting	Male thread	M14 x 1	M16 x 1.5

Symbol	Thread size	Pad diameter		
		ø40, ø50	ø63, ø80	ø100, ø125
A14	Rc1/8	●	—	—
A14N	NPT1/8	●	—	—
A14T	NPTF1/8	●	—	—
A16	Rc1/8	—	●	●
A16N	NPT1/8	—	●	●
A16T	NPTF1/8	—	●	●
B8	M8 x 1.25	●	●	—
B10	M10 x 1.5	●	●	—
B12	M12 x 1.75	—	●	●
B16	M16 x 1.5	—	●	●


Replacement Part No.

Model	Pad unit part no.	Adapter assembly part no.	Model	Pad unit part no.	Adapter assembly part no.
ZPT40*□-A14		ZPA-T1-B01	ZPT40*□-B8	ZP40*□	ZPA-T1-B8
ZPT40*□-A14N	ZP40*□	ZPA-T1-N01	ZPT40*□-B10		ZPA-T1-B10
ZPT40*□-A14T		ZPA-T1-T01	ZPT50*□-B8	ZP50*□	ZPA-T1-B8
ZPT50*□-A14		ZPA-T1-B01	ZPT50*□-B10		ZPA-T1-B10
ZPT50*□-A14N	ZP50*□	ZPA-T1-N01	ZPT63*□-B8		ZPA-T2-B8
ZPT50*□-A14T		ZPA-T1-T01	ZPT63*□-B10	ZP63*□	ZPA-T2-B10
ZPT63*□-A16		ZPA-T2-B01	ZPT63*□-B12		ZPA-T2-B12
ZPT63*□-A16N	ZP63*□	ZPA-T2-N01	ZPT63*□-B16		ZPA-T2-B16
ZPT63*□-A16T		ZPA-T2-T01	ZPT80*□-B8		ZPA-T2-B8
ZPT80*□-A16		ZPA-T2-B01	ZPT80*□-B10	ZP80*□	ZPA-T2-B10
ZPT80*□-A16N	ZP80*□	ZPA-T2-N01	ZPT80*□-B12		ZPA-T2-B12
ZPT80*□-A16T		ZPA-T2-T01	ZPT80*□-B16		ZPA-T2-B16
ZPT100*□-A16		ZPA-T3-B01	ZPT100*□-B12	ZP100*□	ZPA-T3-B12
ZPT100*□-A16N	ZP100*□	ZPA-T3-N01	ZPT100*□-B16		ZPA-T3-B16
ZPT100*□-A16T		ZPA-T3-T01	ZPT125*□-B12	ZP125*□	ZPA-T3-B12
ZPT125*□-A16		ZPA-T3-B01	ZPT125*□-B16		ZPA-T3-B16
ZPT125*□-A16N	ZP125*□	ZPA-T3-N01			
ZPT125*□-A16T		ZPA-T3-T01			


Note 1) * in the table indicates the pad type.
Note 2) □ in the table indicates the pad material.

Dimensions: With Adapter


ZPT⁴⁰₅₀H□-A14 (Male thread)

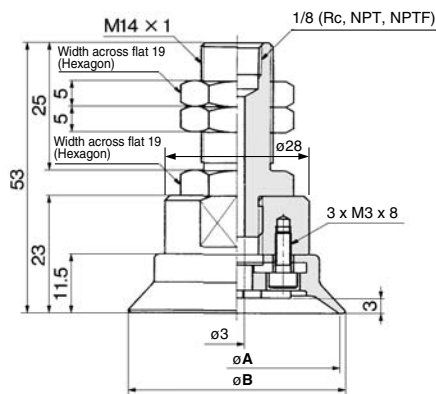

ZPT⁶³₈₀H□-A16 (Male thread)

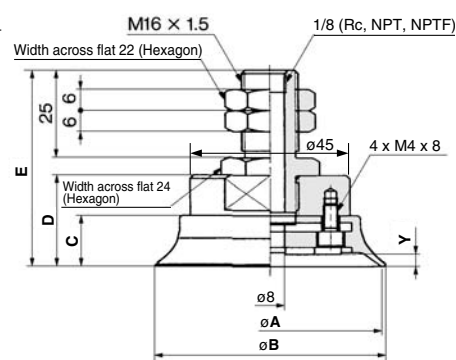

ZPT¹⁰⁰₁₂₅H□-A16 (Male thread)

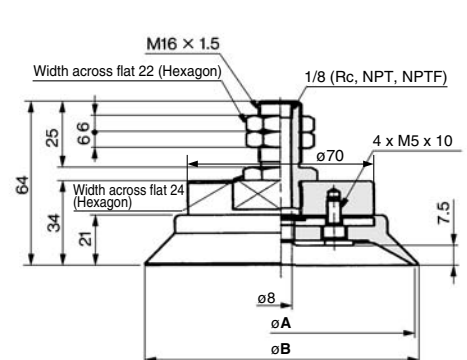

Dimensions

Model	A	B
ZPT40H□-A14	40	42
ZPT50H□-A14	50	52

Dimensions

Model	A	B	C	D	E	Y
ZPT63H□-A16	63	65	14.5	26	56	3.5
ZPT80H□-A16	80	82	16.5	28	58	4.5


Dimensions

Model	A	B
ZPT100H□-A16	100	103
ZPT125H□-A16	125	128

Series ZP

Dimensions: With Adapter

ZPT⁴⁰₅₀HB□-A14 (Male thread)

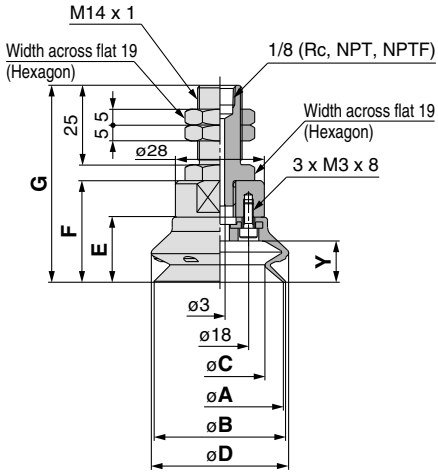


Dimensions

Model	A	B	C	D
ZPT40HB□-A14	40	41	28	43
ZPT50HB□-A14	50	52	36	54

Model	E	F	G	Y
ZPT40HB□-A14	20.5	32	62	13
ZPT50HB□-A14	24	35.5	65.5	16.5

ZPT⁶³₈₀HB□-A16 (Male thread)

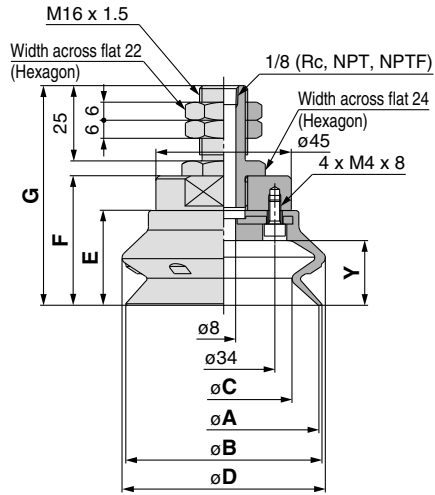


Dimensions

Model	A	B	C	D
ZPT63HB□-A16	63	65	46	68
ZPT80HB□-A16	80	83	58	85

Model	E	F	G	Y
ZPT63HB□-A16	31.5	43	73	21.5
ZPT80HB□-A16	37	48.5	78.5	27.5

ZPT¹⁰⁰₁₂₅HB□-A16 (Male thread)


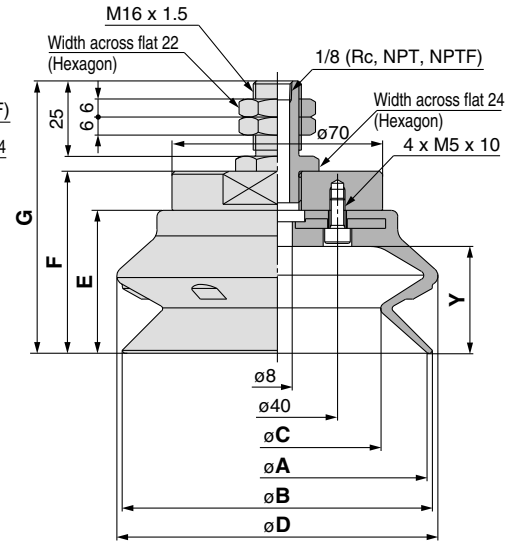


Dimensions

Model	A	B	C	D
ZPT100HB□-A16	100	103	69	107
ZPT125HB□-A16	125	129	89	135

Model	E	F	G	Y
ZPT100HB□-A16	47.5	60.5	90.5	35.5
ZPT125HB□-A16	56	69	99	44



ZPT⁴⁰₅₀H□-B (Female thread)

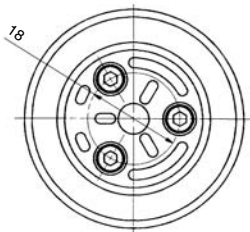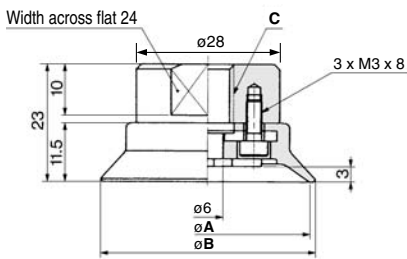

Dimensions

Model	A	B	C
ZPT40H□-B8	40	42	M8 x 1.25
ZPT40H□-B10	40	42	M10 x 1.5
ZPT50H□-B8	50	52	M8 x 1.25
ZPT50H□-B10	50	52	M10 x 1.5

ZPT⁶³₈₀H□-B (Female thread)

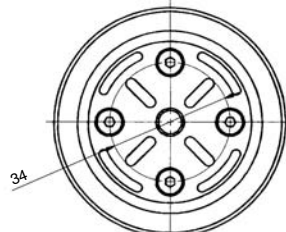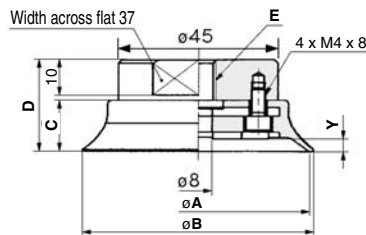


Dimensions

Model	A	B	C	D	E	Y
ZPT63H□-B8	63	65	14.5	26	M8 x 1.25	3.5
ZPT63H□-B10	63	65	14.5	26	M10 x 1.5	3.5
ZPT63H□-B12	63	65	14.5	26	M12 x 1.75	3.5
ZPT63H□-B16	63	65	14.5	26	M16 x 1.5	3.5
ZPT80H□-B8	80	82	16.5	28	M8 x 1.25	4.5
ZPT80H□-B10	80	82	16.5	28	M10 x 1.5	4.5
ZPT80H□-B12	80	82	16.5	28	M12 x 1.75	4.5
ZPT80H□-B16	80	82	16.5	28	M16 x 1.5	4.5

Dimensions: With Adapter


ZPT₁₂₅¹⁰⁰H□-B (Female thread)

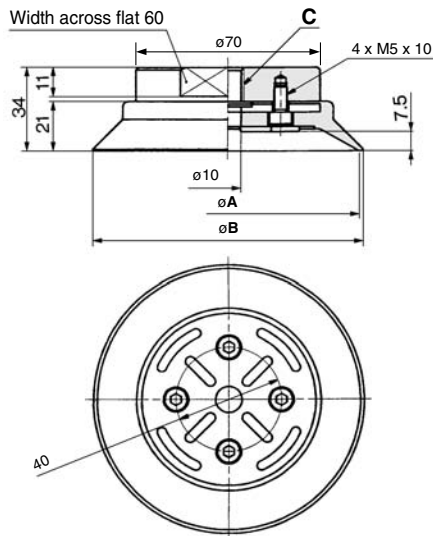

Dimensions

Model	A	B	C
ZPT100H□-B12	100	103	M12 x 1.75
ZPT100H□-B16	100	103	M16 x 1.5
ZPT125H□-B12	125	128	M12 x 1.75
ZPT125H□-B16	125	128	M16 x 1.5


ZPT₅₀⁴⁰H□-B (Female thread)

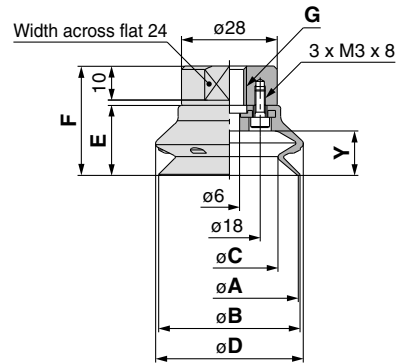

Dimensions

Model	A	B	C	D	E	F	G	Y
ZPT40HB□-B8	40	41	28	43	20.5	32	M8 x 1.25	13
ZPT40HB□-B10	40	41	28	43	20.5	32	M10 x 1.5	13
ZPT50HB□-B8	50	52	36	54	24	35.5	M8 x 1.25	16.5
ZPT50HB□-B10	50	52	36	54	24	35.5	M10 x 1.5	16.5


ZPT₈₀⁶³HB□-B (Female thread)

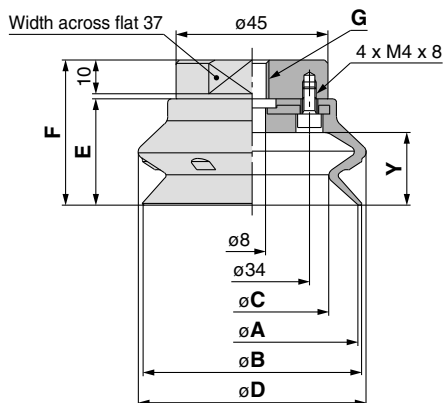

Dimensions

Model	A	B	C	D	E	F	G	Y
ZPT63HB□-B8	63	65	46	68	31.5	43	M8 x 1.25	21.5
ZPT63HB□-B10	63	65	46	68	31.5	43	M10 x 1.5	21.5
ZPT63HB□-B12	63	65	46	68	31.5	43	M12 x 1.75	21.5
ZPT63HB□-B16	63	65	46	68	31.5	43	M16 x 1.5	21.5
ZPT80HB□-B8	80	83	58	85	37	48.5	M8 x 1.25	27.5
ZPT80HB□-B10	80	83	58	85	37	48.5	M10 x 1.5	27.5
ZPT80HB□-B12	80	83	58	85	37	48.5	M12 x 1.75	27.5
ZPT80HB□-B16	80	83	58	85	37	48.5	M16 x 1.5	27.5

ZPT₁₂₅¹⁰⁰HB□-B (Female thread)

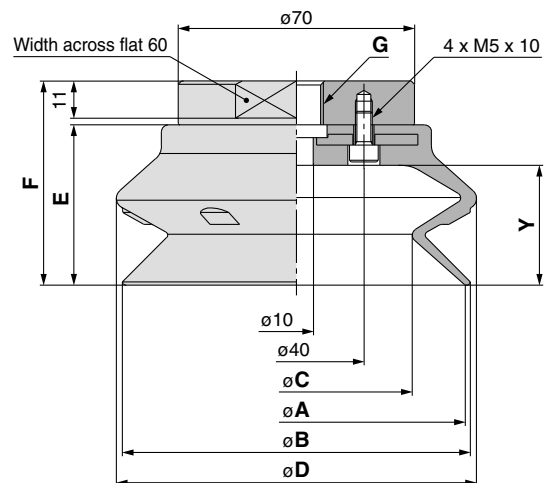

Dimensions

Model	A	B	C	D	E	F	G	Y
ZPT100HB□-B12	100	103	69	107	47.5	60.5	M12 x 1.75	35.5
ZPT100HB□-B16	100	103	69	107	47.5	60.5	M16 x 1.5	35.5
ZPT125HB□-B12	125	129	89	135	56	69	M12 x 1.75	44
ZPT125HB□-B16	125	129	89	135	56	69	M16 x 1.5	44

How to Order

Without buffer **ZPX 40 H □ - B01 - B8**

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type (*)

Symbol	Type
H	Heavy-duty (Flat with rib)
HB	Heavy-duty (Bellows)

Vacuum inlet thread size

Symbol	Thread size
B01	Rc1/8
N01	NPT1/8
T01	NPTF1/8

Mounting thread size

Symbol	Thread size	Pad diameter
		ø40, ø50 ø63, ø80 ø100, ø125
B8	M8 x 1.25	● — —
B10	M10 x 1.5	● ● ●
B12	M12 x 1.75	— ● ●

Vacuum inlet direction **Lateral**

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Replacement Part No.


Model	Pad unit part no.	Adapter assembly part no.	Model	Pad unit part no.	Adapter assembly part no.
ZPX40*□-B01-B8	ZP40*□	ZPA-X1-B01-B8	ZPX80*□-B01-B10	ZP80*□	ZPA-X2-B01-B10
ZPX40*□-N01-B8		ZPA-X1-N01-B8	ZPX80*□-N01-B10		ZPA-X2-N01-B10
ZPX40*□-T01-B8		ZPA-X1-T01-B8	ZPX80*□-T01-B10		ZPA-X2-T01-B10
ZPX40*□-B01-B10		ZPA-X1-B01-B10	ZPX80*□-B01-B12		ZPA-X2-B01-B12
ZPX40*□-N01-B10		ZPA-X1-N01-B10	ZPX80*□-N01-B12		ZPA-X2-N01-B12
ZPX40*□-T01-B10	ZP50*□	ZPA-X1-T01-B10	ZPX80*□-T01-B12	ZP100*□	ZPA-X2-T01-B12
ZPX50*□-B01-B8		ZPA-X1-B01-B8	ZPX100*□-B01-B10		ZPA-X3-B01-B10
ZPX50*□-N01-B8		ZPA-X1-N01-B8	ZPX100*□-N01-B10		ZPA-X3-N01-B10
ZPX50*□-T01-B8		ZPA-X1-T01-B8	ZPX100*□-T01-B10		ZPA-X3-T01-B10
ZPX50*□-B01-B10		ZPA-X1-B01-B10	ZPX100*□-B01-B12		ZPA-X3-B01-B12
ZPX50*□-N01-B10	ZP63*□	ZPA-X1-N01-B10	ZPX100*□-N01-B12	ZP125*□	ZPA-X3-N01-B12
ZPX50*□-T01-B10		ZPA-X1-T01-B10	ZPX100*□-T01-B12		ZPA-X3-T01-B12
ZPX63*□-B01-B10		ZPA-X2-B01-B10	ZPX125*□-B01-B10		ZPA-X3-B01-B10
ZPX63*□-N01-B10		ZPA-X2-N01-B10	ZPX125*□-N01-B10		ZPA-X3-N01-B10
ZPX63*□-T01-B10		ZPA-X2-T01-B10	ZPX125*□-T01-B10		ZPA-X3-T01-B10
ZPX63*□-B01-B12	ZP63*□	ZPA-X2-B01-B12	ZPX125*□-B01-B12		ZPA-X3-B01-B12
ZPX63*□-N01-B12		ZPA-X2-N01-B12	ZPX125*□-N01-B12		ZPA-X3-N01-B12
ZPX63*□-T01-B12		ZPA-X2-T01-B12	ZPX125*□-T01-B12		ZPA-X3-T01-B12

Note 1) * in the table indicates the pad type.


Note 2) □ in the table indicates the pad material.

Dimensions: Without Buffer


ZPX₅₀40H□-□01-B₈B10

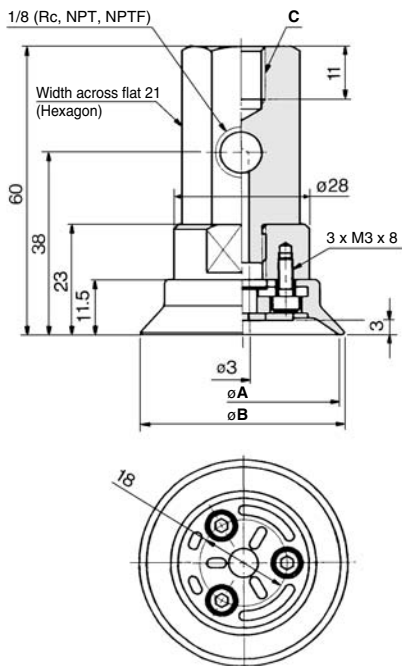

ZPX₈₀63H□-□01-B₁₀B12

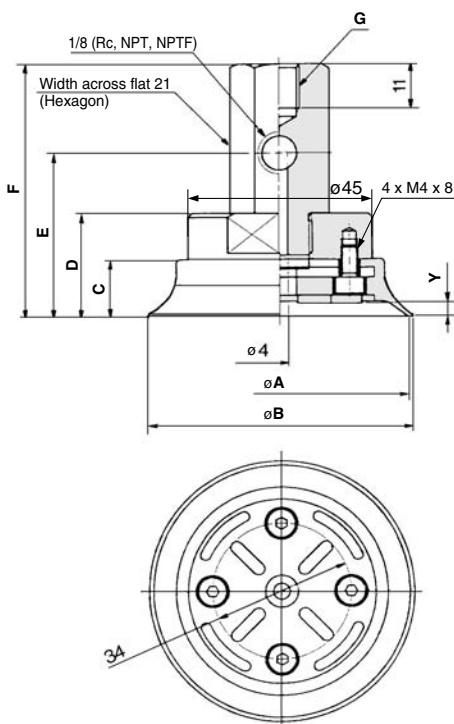

ZPX₁₂₅100H□-□01-B₁₀B12

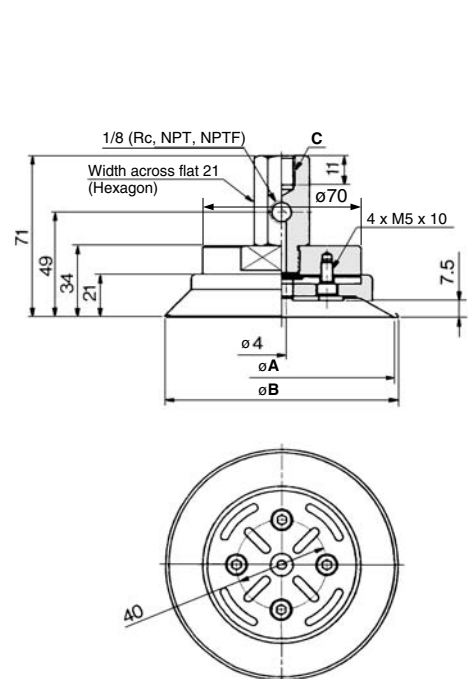

Dimensions

Model	A	B	C
ZPX40H□-□01-B8	40	42	M8 x 1.25
ZPX40H□-□01-B10	40	42	M10 x 1.5
ZPX50H□-□01-B8	50	52	M8 x 1.25
ZPX50H□-□01-B10	50	52	M10 x 1.5

Dimensions


Model	A	B	C	D	E	F	Y	G
ZPX63H□-□01-B10	63	65	14.5	26	41	63	3.5	M10 x 1.5
ZPX63H□-□01-B12	63	65	14.5	26	41	63	3.5	M12 x 1.75
ZPX80H□-□01-B10	80	82	16.5	28	43	65	4.5	M10 x 1.5
ZPX80H□-□01-B12	80	82	16.5	28	43	65	4.5	M12 x 1.75

Dimensions


Model	A	B	C
ZPX100H□-□01-B10	100	103	M10 x 1.5
ZPX100H□-□01-B12	100	103	M12 x 1.75
ZPX125H□-□01-B10	125	128	M10 x 1.5
ZPX125H□-□01-B12	125	128	M12 x 1.75

Dimensions: Without Buffer


ZPX⁴⁰₅₀HB□-□01-B⁸_{B10}

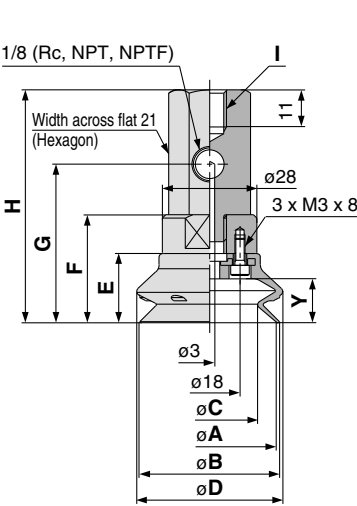

ZPX⁶³₈₀HB□-□01-B¹⁰_{B12}

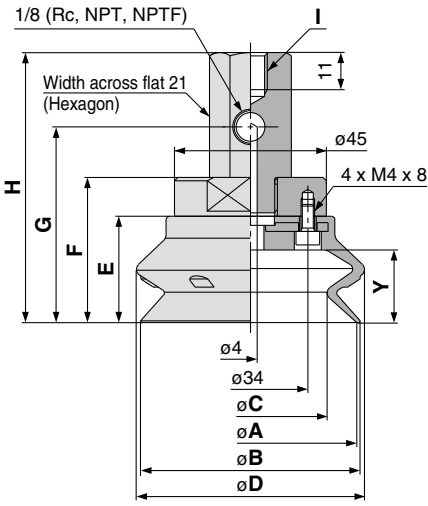

ZPX¹⁰⁰₁₂₅HB□-□01-B¹⁰_{B12}

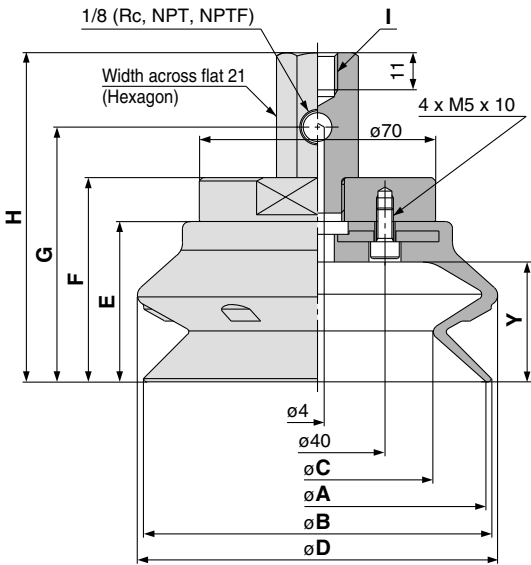

Dimensions

Model	A	B	C	D	E	F
ZPX40HB□-□01-B8	40	41	28	43	20.5	32
ZPX40HB□-□01-B10						
ZPX50HB□-□01-B8	50	52	36	54	24	35.5
ZPX50HB□-□01-B10						

Model	G	H	I	Y
ZPX40HB□-□01-B8	47	69	M8 x 1.25	13
ZPX40HB□-□01-B10			M10 x 1.5	
ZPX50HB□-□01-B8	50.5	72.5	M8 x 1.25	16.5
ZPX50HB□-□01-B10			M10 x 1.5	

Dimensions

Model	A	B	C	D	E	F
ZPX63HB□-□01-B10	63	65	46	68	31.5	43
ZPX63HB□-□01-B12						
ZPX80HB□-□01-B10	80	83	58	85	37	48.5
ZPX80HB□-□01-B12						

Model	G	H	I	Y
ZPX63HB□-□01-B10	58	80	M10 x 1.5	21.5
ZPX63HB□-□01-B12			M12 x 1.75	
ZPX80HB□-□01-B10	63.5	85.5	M10 x 1.5	27.5
ZPX80HB□-□01-B12			M12 x 1.75	


Dimensions

Model	A	B	C	D	E	F
ZPX100HB□-□01-B10	100	103	69	107	47.5	60.5
ZPX100HB□-□01-B12						
ZPX125HB□-□01-B10	125	129	89	135	56	69
ZPX125HB□-□01-B12						

Model	G	H	I	Y
ZPX100HB□-□01-B10	75.5	97.5	M10 x 1.5	35.5
ZPX100HB□-□01-B12			M12 x 1.75	
ZPX125HB□-□01-B10	84	106	M10 x 1.5	44
ZPX125HB□-□01-B12			M12 x 1.75	

How to Order

With buffer **ZPT 40 H N J 25 - B01 - A18**

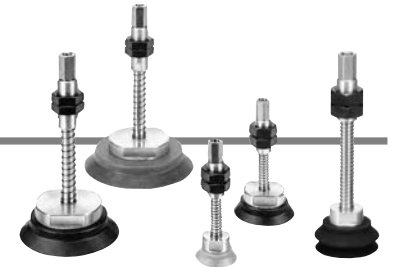

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type (*)

Symbol	Type
H	Heavy-duty (Flat with rib)
HB	Heavy-duty (Bellows)

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Buffer body material (★)

Symbol	Material
J	Aluminum alloy
JB	Brass + With bushing
JF	Steel + With bushing

Mounting thread size

Symbol	Thread size
A18	M18 x 1.5 (ø40 to ø80)
A22	M22 x 1.5 (ø100, ø125)

Vacuum inlet thread size

Symbol	Thread size
B01	Rc1/8
N01	NPT1/8
T01	NPTF1/8

Tightening Torque

Mounting thread size	Buffer body material		
	Aluminum alloy	Brass + With bushing	Steel + With bushing
M18 x 1.5	10	30	50
M22 x 1.5	10	45	75

* Control value shall be ±5% of the tightening torque.

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZPT40*□★25-(B/N/T)01-A18	ZP40*□	ZPB-T1★25-(B/N/T)01
ZPT40*□★50-(B/N/T)01-A18		ZPB-T1★50-(B/N/T)01
ZPT40*□★75-(B/N/T)01-A18		ZPB-T1★75-(B/N/T)01
ZPT50*□★25-(B/N/T)01-A18	ZP50*□	ZPB-T1★25-(B/N/T)01
ZPT50*□★50-(B/N/T)01-A18		ZPB-T1★50-(B/N/T)01
ZPT50*□★75-(B/N/T)01-A18		ZPB-T1★75-(B/N/T)01
ZPT63*□★25-(B/N/T)01-A18	ZP63*□	ZPB-T2★25-(B/N/T)01
ZPT63*□★50-(B/N/T)01-A18		ZPB-T2★50-(B/N/T)01
ZPT63*□★75-(B/N/T)01-A18		ZPB-T2★75-(B/N/T)01
ZPT80*□★25-(B/N/T)01-A18	ZP80*□	ZPB-T2★25-(B/N/T)01
ZPT80*□★50-(B/N/T)01-A18		ZPB-T2★50-(B/N/T)01
ZPT80*□★75-(B/N/T)01-A18		ZPB-T2★75-(B/N/T)01
ZPT100*□★25-(B/N/T)01-A22	ZP100*□	ZPB-T3★25-(B/N/T)01
ZPT100*□★50-(B/N/T)01-A22		ZPB-T3★50-(B/N/T)01
ZPT100*□★75-(B/N/T)01-A22		ZPB-T3★75-(B/N/T)01
ZPT100*□★100-(B/N/T)01-A22	ZP100*□	ZPB-T3★100-(B/N/T)01
ZPT125*□★25-(B/N/T)01-A22		ZPB-T3★25-(B/N/T)01
ZPT125*□★50-(B/N/T)01-A22		ZPB-T3★50-(B/N/T)01
ZPT125*□★75-(B/N/T)01-A22	ZP125*□	ZPB-T3★75-(B/N/T)01
ZPT125*□★100-(B/N/T)01-A22		ZPB-T3★100-(B/N/T)01

Note 1) * in the table indicates the pad type.

Note 2) □ in the table indicates the pad material.


Note 3) ★ in the table indicates the buffer body material.

Buffer Specifications (Rotating)

Pad diameter		ø40 to ø80	ø100, ø125
Stroke (mm)		25, 50, 75	25, 50, 75, 100
Spring reactive force	At 0 stroke (N)	6.9	10
	At buffer stroke (N)	11.8	15

Dimensions: With Buffer


ZPT⁴⁰₅₀H□★■-□01-A18

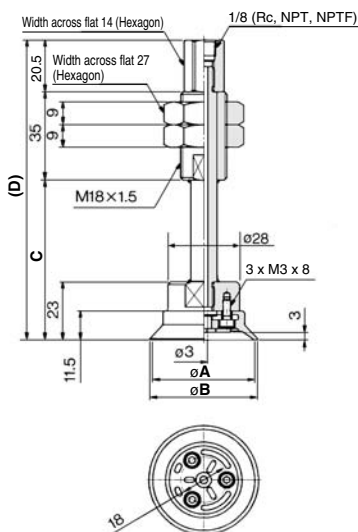

Dimensions

Model	A	B	C	D
ZPT40H□★25-□01-A18	40	42	63	118.5
ZPT40H□★50-□01-A18	40	42	98	153.5
ZPT40H□★75-□01-A18	40	42	134	189.5
ZPT50H□★25-□01-A18	50	52	63	118.5
ZPT50H□★50-□01-A18	50	52	98	153.5
ZPT50H□★75-□01-A18	50	52	134	189.5


ZPT⁶³₈₀H□★■-□01-A18

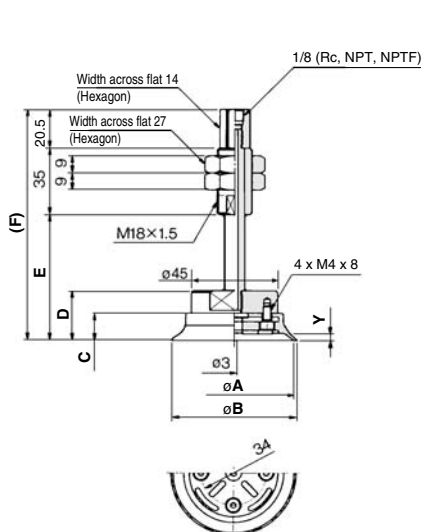

Dimensions

Model	A	B	C	D	E	F	Y
ZPT63H□★25-□01-A18	63	65	14.5	26	66	121.5	3.5
ZPT63H□★50-□01-A18	63	65	14.5	26	101	156.5	3.5
ZPT63H□★75-□01-A18	63	65	14.5	26	137	192.5	3.5
ZPT80H□★25-□01-A18	80	83	16.5	28	68	123.5	4.5
ZPT80H□★50-□01-A18	80	83	16.5	28	103	158.5	4.5
ZPT80H□★75-□01-A18	80	83	16.5	28	139	194.5	4.5

ZPT¹⁰⁰₁₂₅H□★■-□01-A22

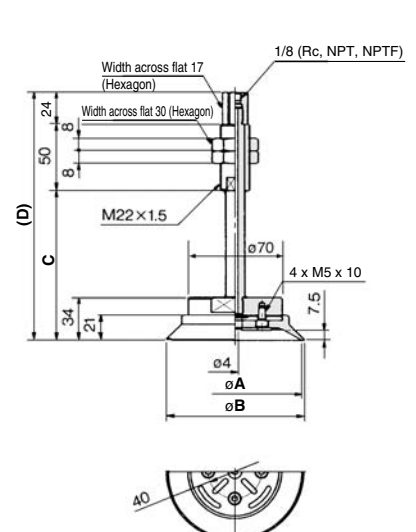


Dimensions


Model	A	B	C	D
ZPT100H□★25-□01-A22	100	103	78	152
ZPT100H□★50-□01-A22	100	103	114	188
ZPT100H□★75-□01-A22	100	103	154	228
ZPT100H□★100-□01-A22	100	103	189	263
ZPT125H□★25-□01-A22	125	128	78	152
ZPT125H□★50-□01-A22	125	128	114	188
ZPT125H□★75-□01-A22	125	128	154	228
ZPT125H□★100-□01-A22	125	128	189	263

Dimensions: With Buffer


ZPT⁴⁰₅₀HB ☐ ★ ☒ - -A18

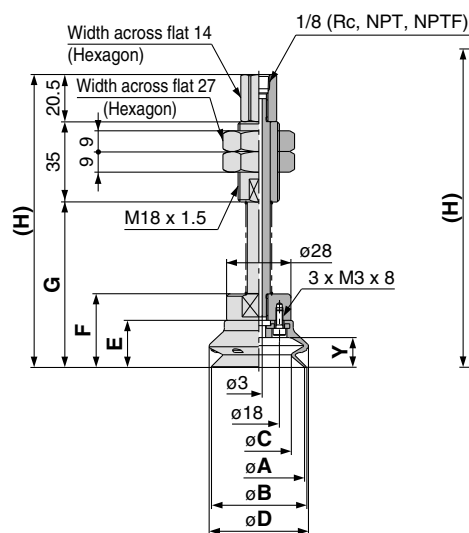

ZPT⁶³₈₀HB ☐ ★ ☒ - -A18

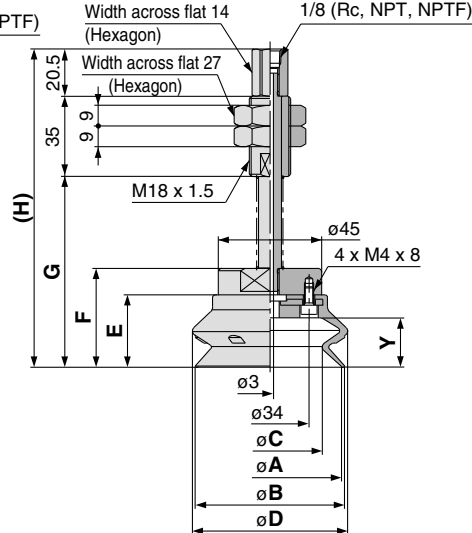

ZPT¹⁰⁰₁₂₅HB ☐ **★** ☒ - **01** - **A22**

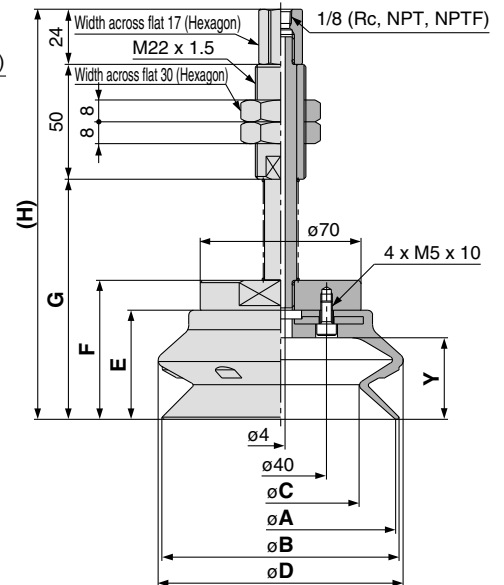

Dimensions

Model	A	B	C	D	E
ZPT40HB $\star 25_{-01}$ -A18	40	41	28	43	20.5
ZPT40HB $\star 50_{-01}$ -A18					
ZPT40HB $\star 75_{-01}$ -A18					
ZPT50HB $\star 25_{-01}$ -A18	50	52	36	54	24
ZPT50HB $\star 50_{-01}$ -A18					
ZPT50HB $\star 75_{-01}$ -A18					

Dimensions

Model	A	B	C	D	E
ZPT63HB $\star 25_{-01}$ -A18	63	65	46	68	31.5
ZPT63HB $\star 50_{-01}$ -A18					
ZPT63HB $\star 75_{-01}$ -A18					
ZPT80HB $\star 25_{-01}$ -A18	80	83	58	85	37
ZPT80HB $\star 50_{-01}$ -A18					
ZPT80HB $\star 75_{-01}$ -A18					


Model	F	G	H	Y
ZPT63HB $\star 25_{-01}$ -A18	43	83	138.5	21.5
ZPT63HB $\star 50_{-01}$ -A18		118	173.5	
ZPT63HB $\star 75_{-01}$ -A18		154	209.5	
ZPT80HB $\star 25_{-01}$ -A18	48.5	88.5	144	27.5
ZPT80HB $\star 50_{-01}$ -A18		123.5	179	
ZPT80HB $\star 75_{-01}$ -A18		159.5	215	

Dimensions

Model	A	B	C	D	E
ZPT100HB $\square \star 25$ - \square_{01} -A22	100	103	69	107	47.5
ZPT100HB $\square \star 50$ - \square_{01} -A22					
ZPT100HB $\square \star 75$ - \square_{01} -A22					
ZPT100HB $\square \star 100$ - \square_{01} -A22					
ZPT125HB $\square \star 25$ - \square_{01} -A22	125	129	89	135	56
ZPT125HB $\square \star 50$ - \square_{01} -A22					
ZPT125HB $\square \star 75$ - \square_{01} -A22					
ZPT125HB $\square \star 100$ - \square_{01} -A22					

How to Order

With buffer ZPX 40 H N J 25 - B01 - A18

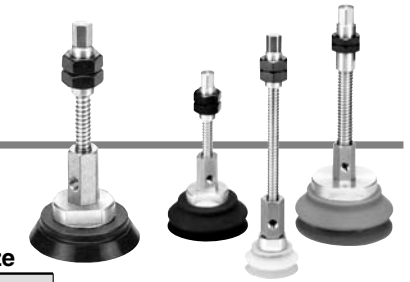

Pad diameter

Symbol	Pad diameter
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100
125	ø125

Pad type (*)

Symbol	Type
H	Heavy-duty (Flat with rib)
HB	Heavy-duty (Bellows)

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
E	EPR

Buffer body material (★)

Symbol	Material
J	Aluminum alloy
JB	Brass + With bushing
JF	Steel + With bushing

Buffer stroke (■)

Stroke	ø40	ø50	ø63	ø80	ø100	ø125
25	●	●	●	●	●	●
50	●	●	●	●	●	●
75	●	●	●	●	●	●
100	—	—	—	—	●	●

Mounting thread size

Symbol	Thread size
A18	M18 x 1.5 (ø40 to ø80)
A22	M22 x 1.5 (ø100, ø125)

Vacuum inlet thread size

Symbol	Thread size
B01	Rc1/8
N01	NPT1/8
T01	NPTF1/8

Tightening Torque

Buffer body material	Aluminum alloy	Brass + With bushing	Steel + With bushing
Mounting thread size			
M18 x 1.5	10	30	50
M22 x 1.5	10	45	75

* Control value shall be ±5% of the tightening torque.

Replacement Part No.

Model	Pad unit part no.	Buffer assembly part no.
ZPX40*□★25-(B/N/T)01-A18	ZP40*□	ZPB-X1★25-(B/N/T)01
ZPX40*□★50-(B/N/T)01-A18		ZPB-X1★50-(B/N/T)01
ZPX40*□★75-(B/N/T)01-A18		ZPB-X1★75-(B/N/T)01
ZPX50*□★25-(B/N/T)01-A18	ZP50*□	ZPB-X1★25-(B/N/T)01
ZPX50*□★50-(B/N/T)01-A18		ZPB-X1★50-(B/N/T)01
ZPX50*□★75-(B/N/T)01-A18		ZPB-X1★75-(B/N/T)01
ZPX63*□★25-(B/N/T)01-A18	ZP63*□	ZPB-X2★25-(B/N/T)01
ZPX63*□★50-(B/N/T)01-A18		ZPB-X2★50-(B/N/T)01
ZPX63*□★75-(B/N/T)01-A18		ZPB-X2★75-(B/N/T)01
ZPX80*□★25-(B/N/T)01-A18	ZP80*□	ZPB-X2★25-(B/N/T)01
ZPX80*□★50-(B/N/T)01-A18		ZPB-X2★50-(B/N/T)01
ZPX80*□★75-(B/N/T)01-A18		ZPB-X2★75-(B/N/T)01
ZPX100*□★25-(B/N/T)01-A22	ZP100*□	ZPB-X3★25-(B/N/T)01
ZPX100*□★50-(B/N/T)01-A22		ZPB-X3★50-(B/N/T)01
ZPX100*□★75-(B/N/T)01-A22		ZPB-X3★75-(B/N/T)01
ZPX100*□★100-(B/N/T)01-A22	ZP100*□	ZPB-X3★100-(B/N/T)01
ZPX125*□★25-(B/N/T)01-A22		ZPB-X3★25-(B/N/T)01
ZPX125*□★50-(B/N/T)01-A22		ZPB-X3★50-(B/N/T)01
ZPX125*□★75-(B/N/T)01-A22	ZP125*□	ZPB-X3★75-(B/N/T)01
ZPX125*□★100-(B/N/T)01-A22		ZPB-X3★100-(B/N/T)01

Note 1) * in the table indicates the pad type.

Note 2) □ in the table indicates the pad material.


Note 3) ★ in the table indicates the buffer body material.

Buffer Specifications (Rotating)


Pad diameter	ø40 to ø80	ø100, ø125
Stroke (mm)	25, 50, 75	25, 50, 75, 100
Spring reactive force		
At 0 stroke (N)	6.9	10
At buffer stroke (N)	11.8	15

Dimensions: With Buffer


ZPX⁴⁰₅₀H□★■-□01-A18

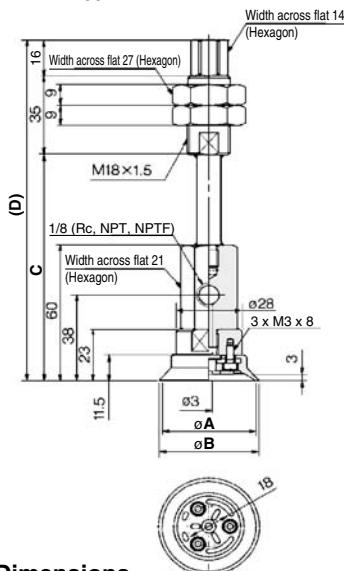

ZPX⁶³₈₀H□★■-□01-A18

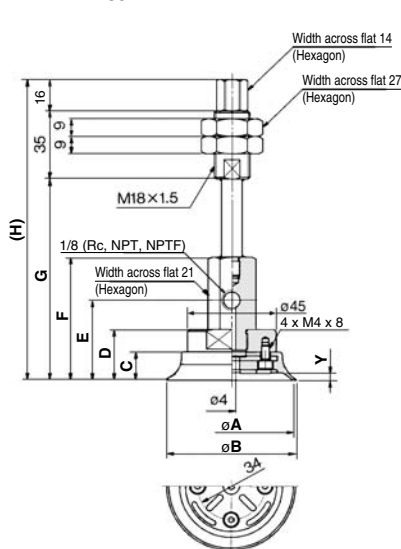

ZPX¹⁰⁰₁₂₅H□★■-□01-A22

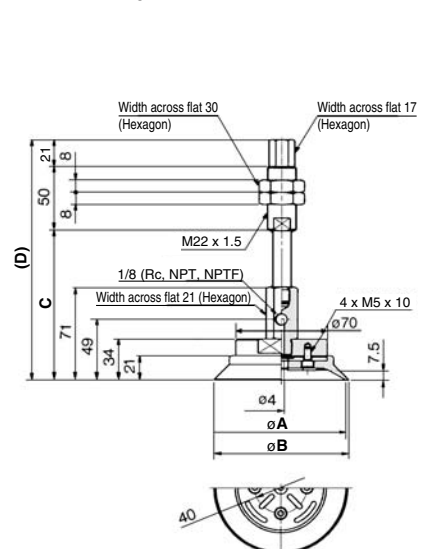

Dimensions


Model	A	B	C	D
ZPX40H□★25-□01-A18	40	42	100	151
ZPX40H□★50-□01-A18	40	42	135	186
ZPX40H□★75-□01-A18	40	42	171	222
ZPX50H□★25-□01-A18	50	52	100	151
ZPX50H□★50-□01-A18	50	52	135	186
ZPX50H□★75-□01-A18	50	52	171	222

Dimensions

Model	A	B	C	D	E	F	G	H	Y
ZPX63H□★25-□01-A18	63	65	14.5	26	41	63	103	154	3.5
ZPX63H□★50-□01-A18	63	65	14.5	26	41	63	136	189	3.5
ZPX63H□★75-□01-A18	63	65	14.5	26	41	63	172	225	3.5
ZPX80H□★25-□01-A18	80	82	16.5	28	43	65	105	156	4.5
ZPX80H□★50-□01-A18	80	82	16.5	28	43	65	138	191	4.5
ZPX80H□★75-□01-A18	80	82	16.5	28	43	65	174	227	4.5

Dimensions

Model	A	B	C	D
ZPX100H□★25-□01-A22	100	103	115	186
ZPX100H□★50-□01-A22	100	103	151	222
ZPX100H□★75-□01-A22	100	103	191	262
ZPX100H□★100-□01-A22	100	103	226	297
ZPX125H□★25-□01-A22	125	128	115	186
ZPX125H□★50-□01-A22	125	128	151	222
ZPX125H□★75-□01-A22	125	128	191	262
ZPX125H□★100-□01-A22	125	128	226	297



Vacuum Pad for Transferring Disks

■ For adsorbing and transferring disks of digital household electric appliances (CD, DVD)

- For adsorbing circular components like CD and DVD
- Bellows mechanism is realized in the pad to dampen the impact to the work.

How to Order

ZP2-Z1-001-S




• Pad material



Symbol	Material
S	Silicone rubber
GS	Urethane rubber


Dimensions

ZP2-Z1-001-□□

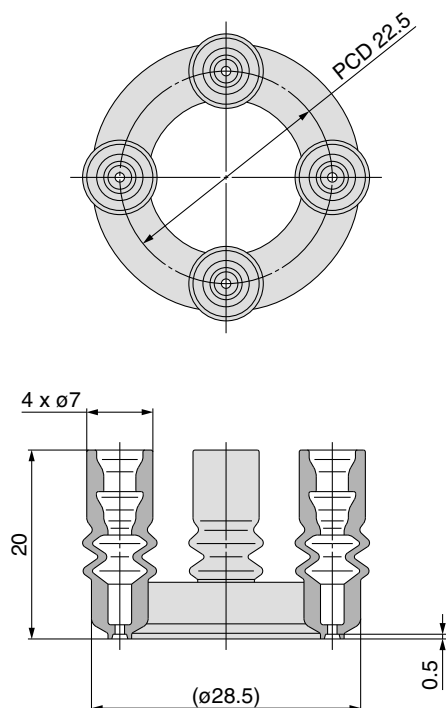

ZPT1-A5 is a recommended adapter.
(Four adapters are necessary.)
See below for mounting.
Refer to the Best Pneumatics No. 4 for details.

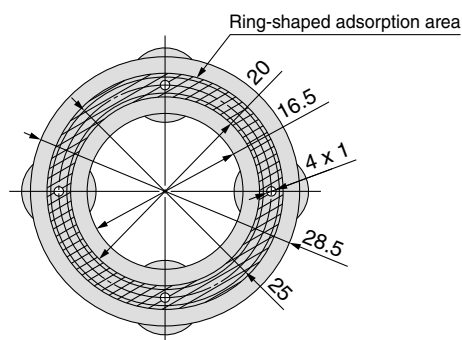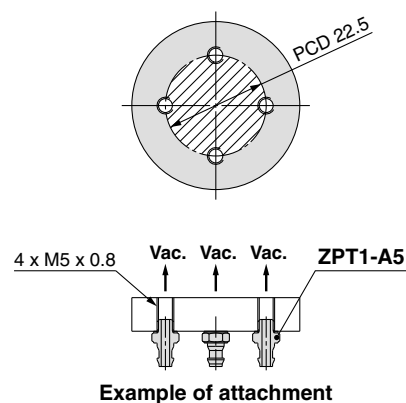





Vacuum Pad for Fixing Panel

- For adsorbing and fixing the stage of LCD panels, etc.
- Bellows mechanism allows complete contact with curved work surface.



Dimensions



ZP2-Z002

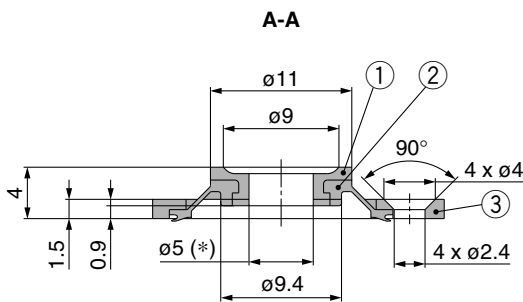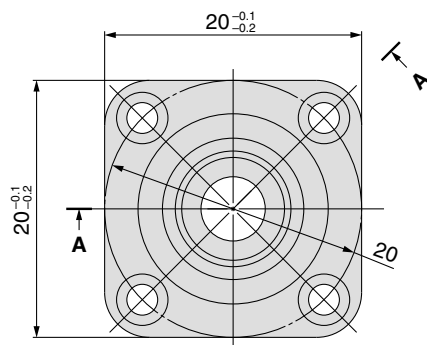

Component Parts

No.	Part no.	Description	Material	Note
1	ZP2-Z2A	Pad	PTFE	—
2	ZP2-Z2B	Joint	FKM	—
3	ZP2-Z2C	Mounting plate	Aluminum alloy	Clear anodized

ZP2-Z003

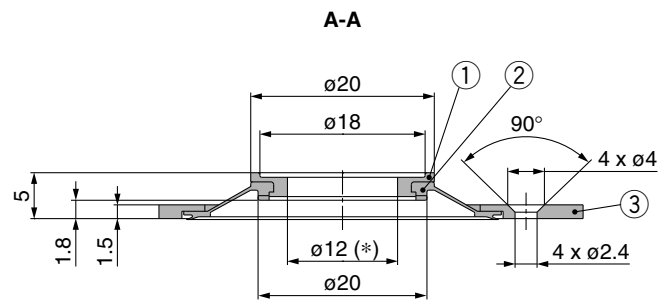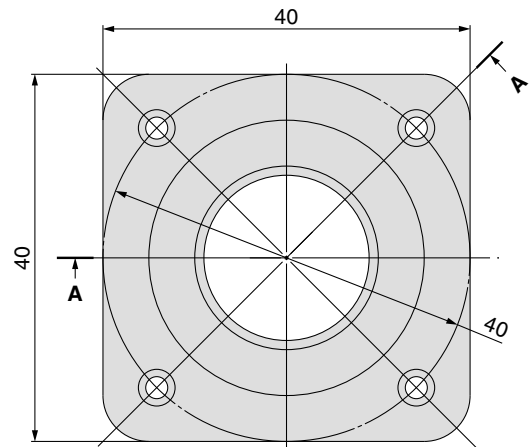


Component Parts


No.	Part no.	Description	Material	Note
1	ZP2-Z3A	Pad	PTFE	—
2	ZP2-Z3B	Joint	FKM	—
3	ZP2-Z3C	Mounting plate	Aluminum alloy	Clear anodized

How to use

The plate for air purging should be prepared by the customer.
The plate needs to have supporting points.
(Avoid applying the weight of the workpiece directly to the pad.)
Place the workpiece on the pad horizontally.

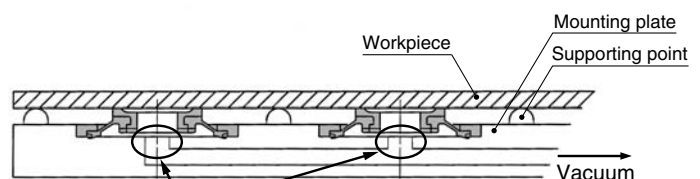


When a hole is made in the plate, the dimension shall be (*) or less.



Vacuum Saving Valve

■ Can restrict the reduction of vacuum pressure even when there is no workpiece.

When multiple vacuum pads are operated by one vacuum generator, and some of them are not holding the workpiece, the reduction of vacuum pressure is restricted and the workpiece can remain held by the rest of pads.

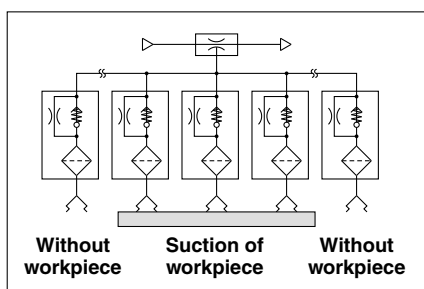

How to Order


ZP2V – A5 – 03



• Connection thread symbol for pad side

Male thread connection

Symbol	Thread size	Applicable fixed orifice size			
		0.3	0.5	0.7	1.0
A5	M5	○	○	○	—
A8	M8	—	○	○	○
A01	R1/8	—	○	○	○
AG1	G1/8	—	○	○	○
AN1	NPT1/8	—	○	○	○




• Fixed orifice size

Symbol	Fixed orifice size (mm)
03	0.3
05	0.5
07	0.7
10	1.0

Female thread connection

Symbol	Thread size	Applicable fixed orifice size			
		0.3	0.5	0.7	1.0
B5	M5	○	○	○	—
B6	M6	○	○	○	—
B01	Rc1/8	—	○	○	○
BG1	G1/8	—	○	○	○
BN1	NPT1/8	—	○	○	○


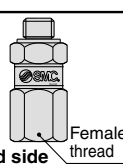


Specifications

Connection thread size for pad side	M5, M6			M8, R1/8, G1/8, NPT1/8		
Fixed orifice size (mm)	0.3	0.5	0.7	0.5	0.7	1.0
Fluid	Air					
Max. operating pressure range (MPa)	0 to 0.7					
Max. operating vacuum pressure range (kPa)	0 to -100					
Ambient and fluid temperature (°C)	5 to 60 (No freezing)					
Element nominal filtration rating (μm)	40					
Min. operating flow rate (L/min (ANR))	3	5	8	5	8	16

■ No need for switching operation when changing work pieces

When the work pieces have different shapes, the control circuit can be simplified.

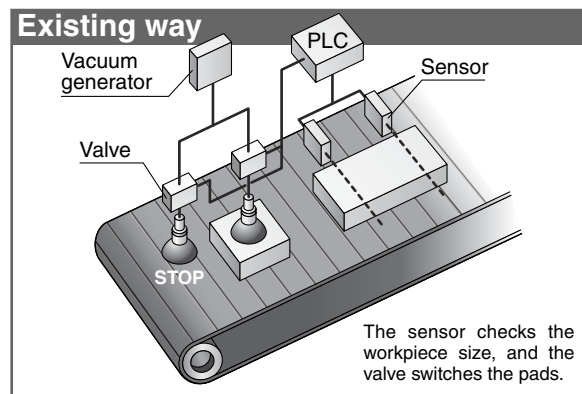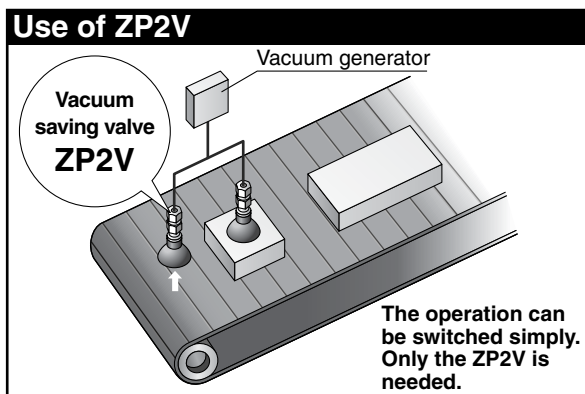

Model Selection

Select the quantity of vacuum saving valves that can be used with one vacuum generator.

Selection Conditions

Workpiece: No leakage and several sizes
Required vacuum pressure: -50 kPa or more of vacuum pressure per vacuum pad
Part number of vacuum saving valve used: ZP2V-A8-05
(Connection thread size for pad side: M8, Fixed orifice size: $\phi 0.5$)

1 Check the flow-rate characteristics of the vacuum generator used.

From the flow-rate characteristics of the vacuum generator (**Chart 1**), calculate the **suction flow rate (Q1)** of the vacuum generator from the required vacuum pressure.

Vacuum pressure -50 kPa (①→②→③) =
Suction flow rate (Q1) \approx 31 L/min (ANR).

2 Calculate the quantity (N) of vacuum saving valves.

Find the **minimum operating flow rate (Q2)** and the **suction flow rate (Q1)** of the vacuum generator from the specifications table (page 61), and calculate the **quantity (N) of vacuum saving valves** that can be used with one vacuum generator.

Quantity of vacuum saving valves (N) = $\frac{\text{Suction flow rate of vacuum generator (Q1)}}{\text{Minimum operating flow rate (Q2)}}$

Example) Vacuum saving valve used: ZP2V-A8-05
 From **Table 1**, Q2 can be calculated as 5.0 L/min (ANR).

$$N = \frac{31 \text{ \{L/min (ANR)\}}}{5 \text{ \{L/min (ANR)\}}} \approx 6 \text{ (unit)}$$

Table 1. Relationship between Minimum Operating Flow Rate and Fixed Orifice Size

Connection thread size for pad side	M8
Fixed orifice size (mm)	0.5
Minimum operating flow rate (L/min (ANR)) Q2	5.0

Chart 1. Flow-rate Characteristics of Vacuum Generator


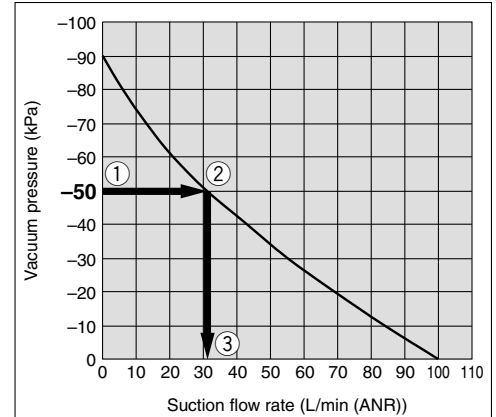


Chart 2. Selection Example by Min. Operating Flow Rate

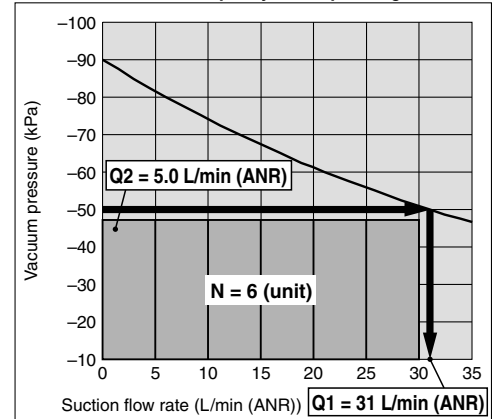

The above selection example is based on a general method under the given selection conditions, and may not always be applicable. A final decision on operating conditions should be made based on test results performed at the responsibility of the customer.

⚠ Specific Product Precautions

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Vacuum Equipment Precautions.

- The product is not equipped with a vacuum holding function, and cannot be used for the purpose of holding vacuum.
- Determine the quantity of products to be used by selection, and keep the recommended pad diameter per product shown in Table 1. Also, check the operation with the customer's machine sufficiently beforehand.

Table 1. Recommended Pad Diameter per Product

Connection thread symbol for pad side	A5	B5	B6	A8	A01	B01	AG1	BG1	AN1	BN1
Thread size	M5	M6	M8	R1/8	G1/8	NPT1/8				
Recommended pad diameter (mm)	25 or less			32 to 50						

- Do not disassemble the product. Once the product is disassembled and reassembled, it will not be able to satisfy the original performance.
- When piping, do not get the pad side and vacuum generator side of the product the wrong way round. (Refer to Fig. 1.)

Enlarged view of name plate
 (Vacuum generator side)

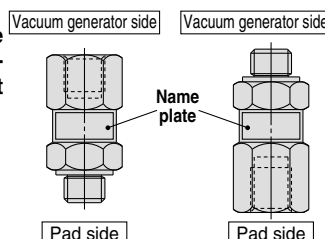



Fig. 1. Mounting direction









- For mounting and removing the product, strictly follow the instructions below.

When mounting and removing the product, use the specified places in page 64 to apply tools. Also, when mounting, tighten to the specified torque shown in page 64. Excessive torque or applying a tool to places other than the specified place can cause damage or loss of original performance.


- The reduction of the vacuum pressure while the work piece is sucked and released depends on the flow-rate characteristics of the vacuum generator. Check the flow-rate characteristics of the vacuum generator before checking the operation with the customer's machine.
- When the built-in element of the product gets clogged, replace the whole product.
- When verifying the suction using such as a pressure sensor, check the operation with the customer's machine sufficiently beforehand.
- If there is leakage between the pad and a workpiece, for example if the workpiece is permeable, the quantity of products that can be used with one vacuum generator is reduced.

Take the leakage between the pad and workpiece into account and check the operation with the customer's machine sufficiently before using.

Working Principle

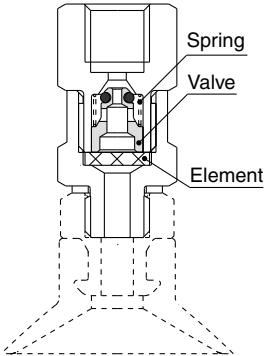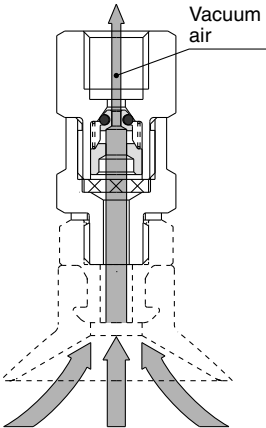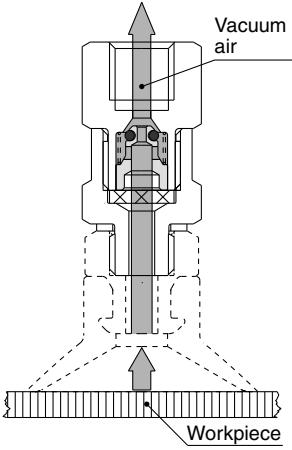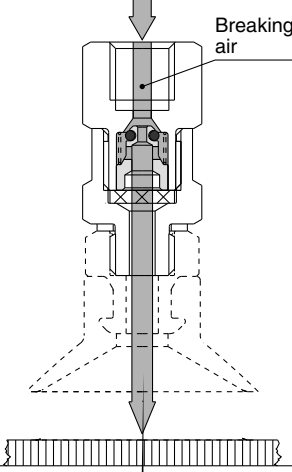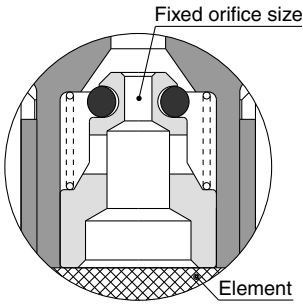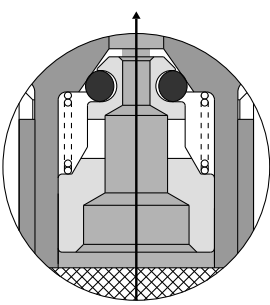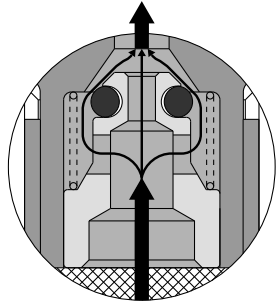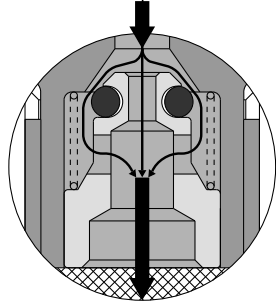	Initial condition	When a workpiece is sucked		When a workpiece is released
		Without workpiece	With workpiece	
Air flow				
Valve operating condition	 <p>Since there is no air flow, the valve remains opened by the spring force.</p>	 <p>Closed valve When the workpiece is separated from the vacuum pad, the valve is closed by the air flow, and the suction air can only flow through the fixed orifice. At this time, an amount of air corresponding to the fixed orifice size is sucked.</p>	 <p>Opened valve When the workpiece is sucked by the vacuum pad, the suction flow reduces, and the valve is opened by the spring force, which opens the path between the valve and body for suction.</p>	 <p>Opened valve When the workpiece is released, the valve is opened by the vacuum breaking air, and the path between the valve and body will open.</p>


Construction

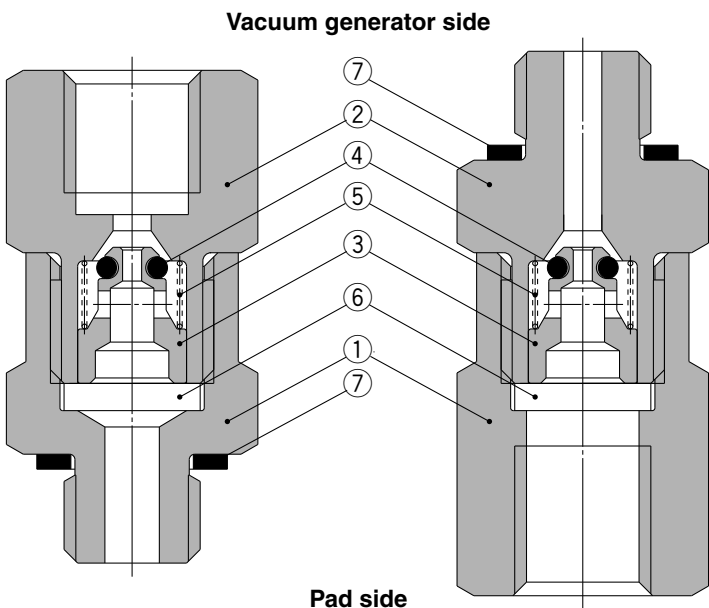

ZP2V-A□-□

ZP2V-B□-□

Vacuum generator side

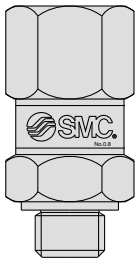


Pad side

* For the mounting direction of the product, refer to 4 on page 62.

Component Parts

No.	Description	Material	Surface treatment
1	Body A	Brass	Electroless nickel plated
2	Body B	Brass	Electroless nickel plated
3	Valve	Aluminum	—
4	O-ring	HNBR	—
5	Spring	Stainless steel	—
6	Element	BC	—
7	Gasket	NBR + Stainless steel	—

Dimensions

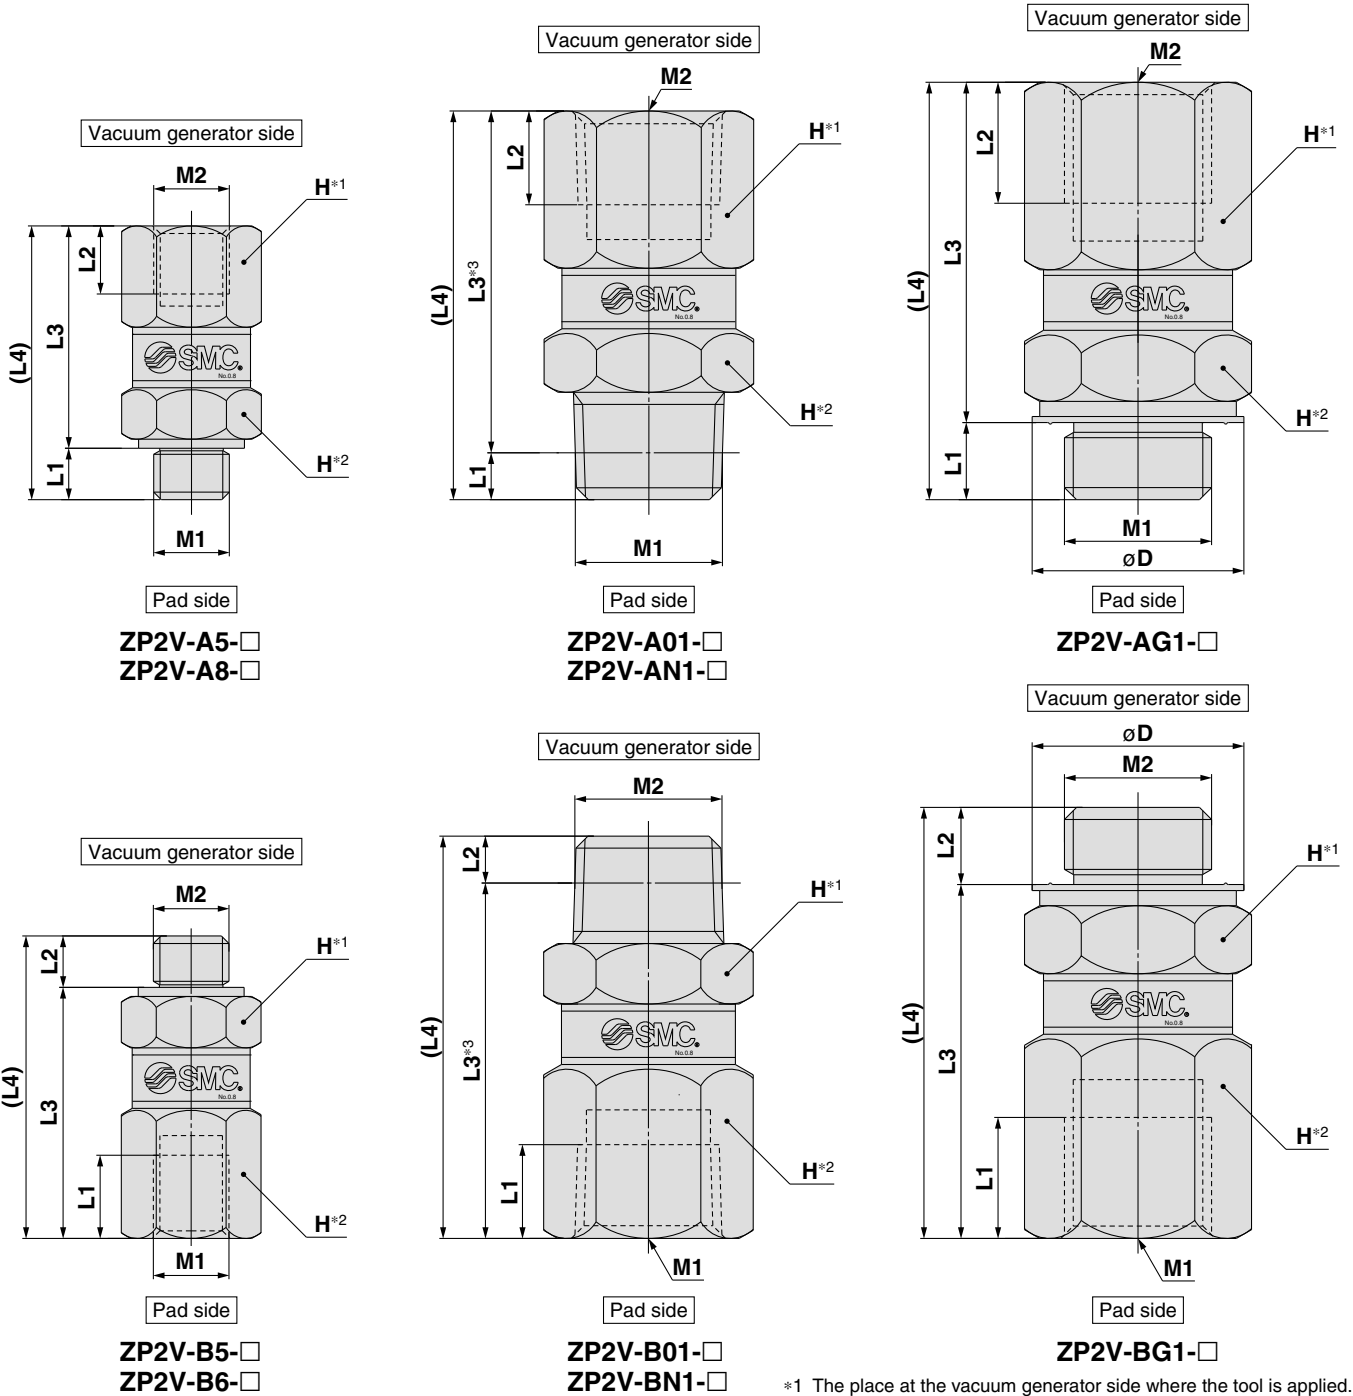

*1 The place at the vacuum generator side where the tool is applied.

*2 The place at the pad side where the tool is applied.

*3 Referential dimensions after the R, NPT thread is screwed.

Model	M1	M2	L1	L2	L3	L4	H (Width across flat)	ØD	W (g)	Tightening torque (N·m) ^{Note)}
ZP2V-A5-□	M5 x 0.8	M5 x 0.8	3.4	4.5	14.7	18.1	8	—	6	1.0 to 1.5
ZP2V-A8-□	M8 x 1.25	M8 x 1.25	5.9	8	20.1	26	12	—	18	5.5 to 6.0
ZP2V-A01-□	R1/8	Rc1/8	3.1	6.2	22.6	25.7	12	—	18	7.0 to 9.0
ZP2V-AG1-□	G1/8	G1/8	5.1	8	22.5	27.6	13	14	23	5.5 to 6.0
ZP2V-AN1-□	NPT1/8	NPT1/8	3.2	6.9	23.3	26.5	12	—	23	7.0 to 9.0
ZP2V-B5-□	M5 x 0.8	M5 x 0.8	5.5	3.4	16.6	20	8	—	7	1.0 to 1.5
ZP2V-B6-□	M6 x 1	M6 x 1	5	4.5	16.2	20.7	8	—	7	2.0 to 2.5
ZP2V-B01-□	Rc1/8	R1/8	6.2	3.1	23.5	26.6	12	—	19	7.0 to 9.0
ZP2V-BG1-□	G1/8	G1/8	8	5.1	23.4	28.5	13	14	24	5.5 to 6.0
ZP2V-BN1-□	NPT1/8	NPT1/8	6.9	3.2	24.2	27.4	12	—	20	7.0 to 9.0










Note) When mounting and removing the product, apply a wrench or torque wrench to the place shown in Figure.














When mounting, tighten to the torque specified in the table.

Series ZP2/ZP





Adapter/Buffer Applicable Pad List

Series ZP2 Mounting Adapter Part No.

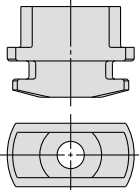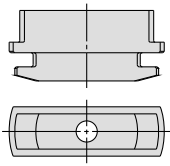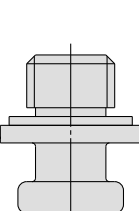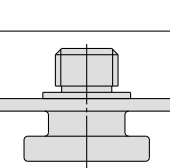

Adapter model		Applicable pad model	Page
		Series ZP2	
ZP2A-001		ZP2-3507W□ ZP2-4010W□ ZP2-5010W□ ZP2-6010W□	P. 69
ZP2A-002		ZP2-4020W□ ZP2-5020W□ ZP2-6020W□ ZP2-8020W□	P. 69
ZP2A-003		ZP2-4030W□ ZP2-5030W□ ZP2-6030W□ ZP2-8030W□	P. 69
ZP2A-M01P		ZP2-B02MU□ ZP2-B035MU□ ZP2-B04MU□ ZP2-B05MU□ ZP2-B04MB□	P. 69
ZP2A-M02*		ZP2-B06MU□ ZP2-B08MU□ ZP2-B10MU□ ZP2-B15MU□ ZP2-B06MB□ ZP2-B08MB□ ZP2-B10MT□ ZP2-B15MT□	P. 69
ZP2A-M03*		ZP2-B20MT□ ZP2-B25MT□ ZP2-B30MT□	P. 69
ZP2A-M04		ZP2-B06MU□ ZP2-B08MU□ ZP2-B10MU□ ZP2-B15MU□ ZP2-B06MB□ ZP2-B08MB□ ZP2-B10MT□ ZP2-B15MT□	P. 69
ZP2A-M05		ZP2-B10MB□ ZP2-B15MB□	P. 69
ZP2A-M06		ZP2-B20MB□	P. 70

Adapter model		Applicable pad model	Page
		Series ZP2	
ZP2A-Z01P		ZP2-B02EU□ ZP2-B04EU□ ZP2-B06EU□ ZP2-08EU□ ZP2-15EU□	P. 70
ZP2A-Z02P		ZP2-B02EU□ ZP2-B04EU□ ZP2-B06EU□ ZP2-08EU□ ZP2-15EU□	P. 70
ZP2A-Z21P		ZP2-08AN□ ZP2-11AN□	P. 70
ZP2A-S01P		ZP2-04S□	P. 70
ZP2A-S02P		ZP2-06S□	P. 70
ZP2A-S03P		ZP2-08S□	P. 70
ZP2A-S04P		ZP2-10S□	P. 70
ZP2A-S05P		ZP2-15S□	P. 71
ZP2A-S11		ZP2-04S□	P. 71
ZP2A-S12		ZP2-06S□	P. 71
ZP2A-S13		ZP2-08S□	P. 71
ZP2A-S14		ZP2-10S□	P. 71
ZP2A-S15		ZP2-15S□	P. 71

Series **ZP** Mounting Adapter Part No.

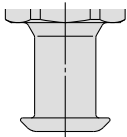
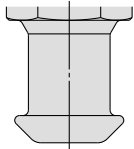
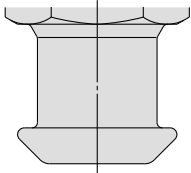
Adapter model		Applicable pad model		Page
		Series ZP	Series ZP2	
ZPT1-A5, A6 ZPT1-B4, B5		ZP (02, 04, 06, 08) U□ ZP (06, 08) B□ ZP (10, 13, 16) UT□ ZP (10, 13, 16) CT□ ZP2004U□ ZP3507U□ ZP4010U□	ZP2-03U□ ZP2-14UT□ ZP2-B04U□ ZP2-18UT□ ZP2-B06C□ ZP2-20UT□ ZP2-07C□ ZP2-06J□ ZP2-B08C□ ZP2-B10J□ ZP2-B06B□ ZP2-B15J□ ZP2-B08B□ ZP2-04UCL ZP2-05UT□ ZP2-06UCL ZP2-06UT□ ZP2-08UCL ZP2-11UT□	P. 72
ZPT2-A5, A6 ZPT2-B5, B6 B01, N01 T01		ZP (10, 13, 16) U□ ZP (10, 13, 16) C□ ZP (10, 13, 16) B□ ZP (10, 16) D□	ZP2-09J□ ZP2-14J□ ZP2-16J□ ZP2-10UCL ZP2-16UCL	P. 72 P. 73
ZPT3-A6, A8 ZPT3-B5, B6, B8 B01, N01 T01		ZP (20, 25, 32) U□ ZP (20, 25, 32) C□ ZP (20, 25, 32) B□ ZP25D□	ZP2-B25J□ ZP2-B30J□ ZP2-25UCL ZP2-32UCL	P. 72 P. 73
ZPT4-A6, A8 ZPT4-B6, B8 B01, N01 T01		ZP (40, 50) U□ ZP (40, 50) C□ ZP (40, 50) B□ ZP40D□	ZP2-40UCL ZP2-50UCL	P. 72 P. 73

Adapter Assembly Part No. (For Heavy-duty Ball Joint)

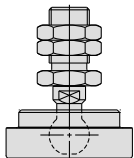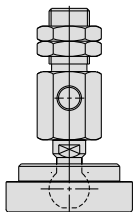
Adapter assembly model		Applicable pad model		Page
		Series ZP		
ZP2A-TF1		ZP40H□ ZP50H□	ZP40HB□ ZP50HB□	P. 74
ZP2A-TF2		ZP63H□ ZP80H□	ZP63HB□ ZP80HB□	P. 74
ZP2A-TF3		ZP100H□ ZP125H□	ZP100HB□ ZP125HB□	P. 74
ZP2A-XF1		ZP40H□ ZP50H□	ZP40HB□ ZP50HB□	P. 74
ZP2A-XF2		ZP63H□ ZP80H□	ZP63HB□ ZP80HB□	P. 74
ZP2A-XF3		ZP100H□ ZP125H□	ZP100HB□ ZP125HB□	P. 74

Series ZP2/ZP



Adapter Assembly Part No. (for Heavy-duty)

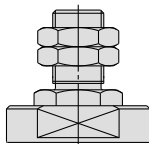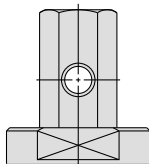Adapter assembly model		Applicable pad model		Page
		Series ZP		
ZPA-T1-B*		ZP40H□ ZP50H□	ZP40HB□ ZP50HB□	P. 75
ZPA-T2-B*		ZP63H□ ZP80H□	ZP63HB□ ZP80HB□	P. 75
ZPA-T3-B*		ZP100H□ ZP125H□	ZP100HB□ ZP125HB□	P. 75
ZPA-T1-*01		ZP40H□ ZP50H□	ZP40HB□ ZP50HB□	P. 75
ZPA-T2-*01		ZP63H□ ZP80H□	ZP63HB□ ZP80HB□	P. 75
ZPA-T3-*01		ZP100H□ ZP125H□	ZP100HB□ ZP125HB□	P. 75
ZPA-X1-*01-B*		ZP40H□ ZP50H□	ZP40HB□ ZP50HB□	P. 76
ZPA-X2-*01-B*		ZP63H□ ZP80H□	ZP63HB□ ZP80HB□	P. 76
ZPA-X3-*01-B*		ZP100H□ ZP125H□	ZP100HB□ ZP125HB□	P. 76



Buffer Assembly Part No. (for Ball Spline)









Buffer assembly model		Applicable pad model	Page
		Series ZP	
ZP2B-T3S6		ZP02U□ ZP04U□ ZP06U□ ZP08U□	P. 77

Buffer Assembly Part No. (for Heavy-duty Ball Joint)









Buffer assembly model		Applicable pad model	Page
		Series ZP	
ZP2B-TF1 (JB/JF)◆		ZP40H□ ZP50H□ ZP40HB□ ZP50HB□	P. 78
ZP2B-TF2 (JB/JF)◆		ZP63H□ ZP80H□ ZP63HB□ ZP80HB□	P. 78
ZP2B-TF3 (JB/JF)◆		ZP100H□ ZP125H□ ZP100HB□ ZP125HB□	P. 78
ZP2B-XF1 (JB/JF)◆		ZP40H□ ZP50H□ ZP40HB□ ZP50HB□	P. 79
ZP2B-XF2 (JB/JF)◆		ZP63H□ ZP80H□ ZP63HB□ ZP80HB□	P. 79
ZP2B-XF3 (JB/JF)◆		ZP100H□ ZP125H□ ZP100HB□ ZP125HB□	P. 79

Buffer Assembly Part No. (for Heavy-duty)







Buffer assembly model		Applicable pad model	Page
		Series ZP	
ZPB-T1 (J/JB/JF)◆-*01		ZP40H□ ZP50H□ ZP40HB□ ZP50HB□	P. 80 P. 81
ZPB-T2 (J/JB/JF)◆-*01		ZP63H□ ZP80H□ ZP63HB□ ZP80HB□	P. 80 P. 81
ZPB-T3 (J/JB/JF)◆-*01		ZP100H□ ZP125H□ ZP100HB□ ZP125HB□	P. 80 P. 81
ZPB-X1 (J/JB/JF)◆-*01		ZP40H□ ZP50H□ ZP40HB□ ZP50HB□	P. 82 P. 83
ZPB-X2 (J/JB/JF)◆-*01		ZP63H□ ZP80H□ ZP63HB□ ZP80HB□	P. 82 P. 83
ZPB-X3 (J/JB/JF)◆-*01		ZP100H□ ZP125H□ ZP100HB□ ZP125HB□	P. 82 P. 83

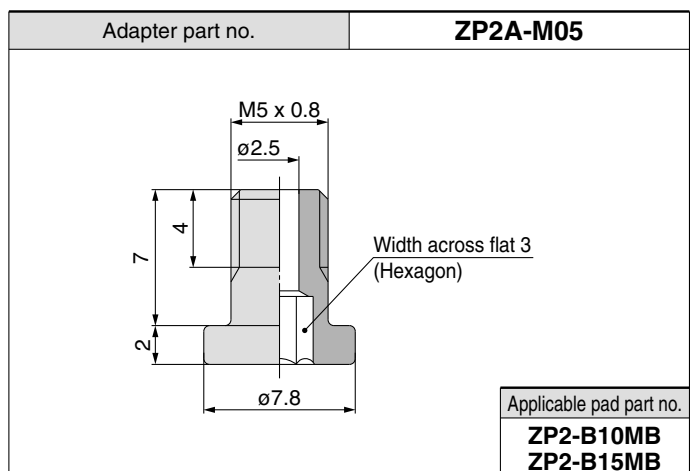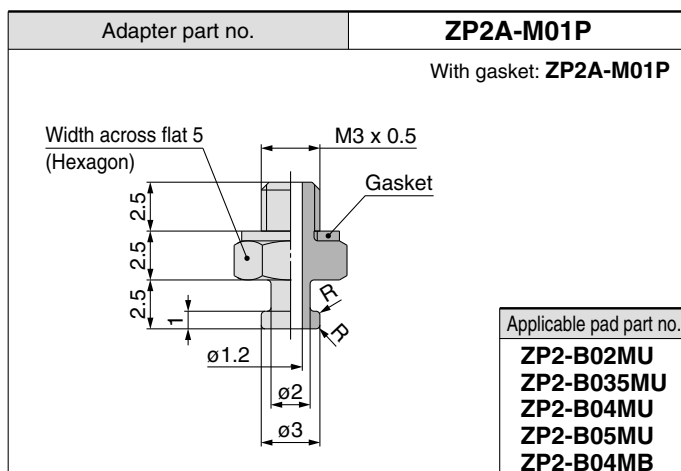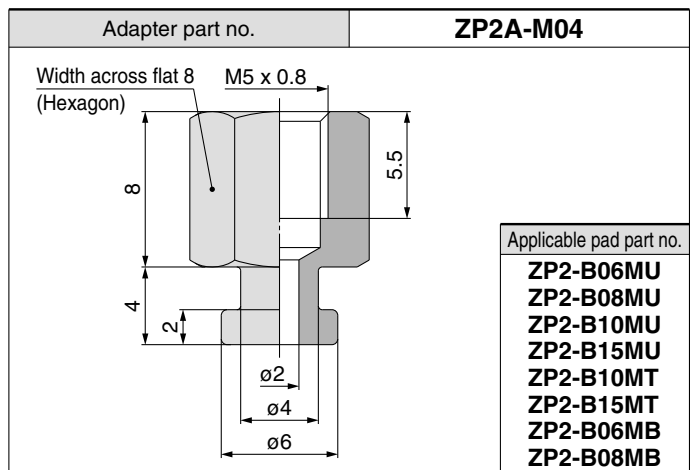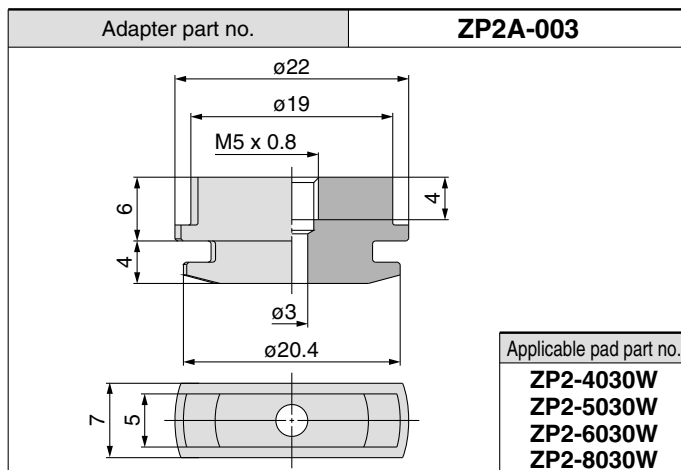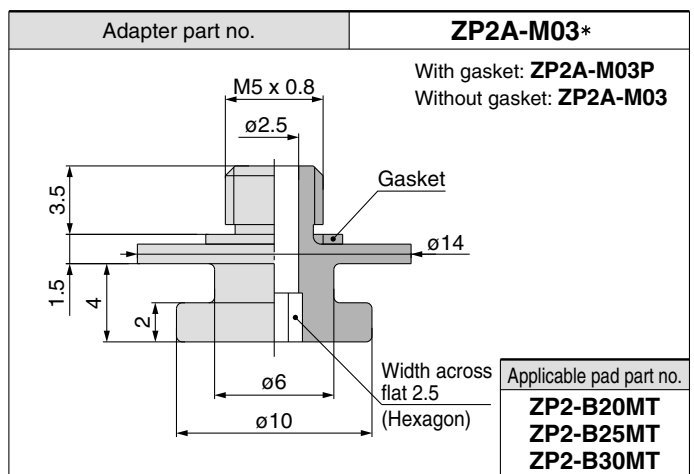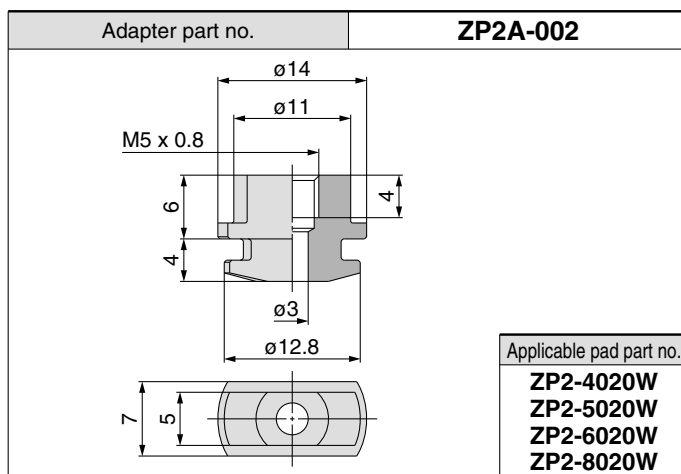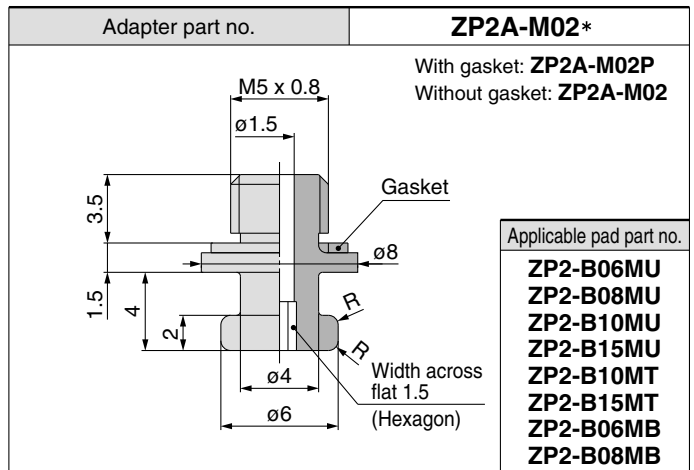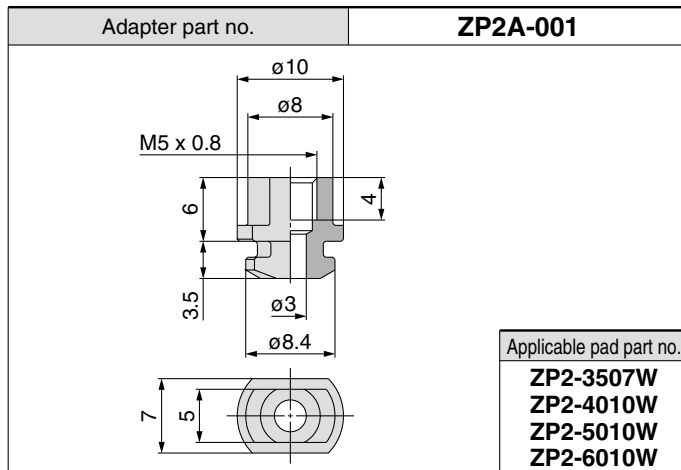

Mounting Adapter Part No. **Series ZP2**

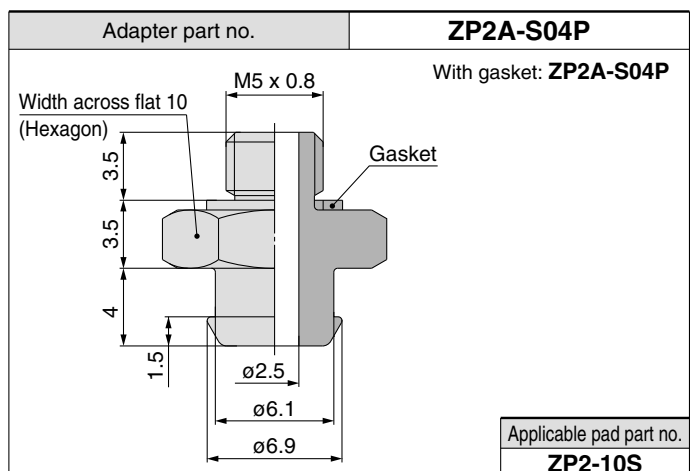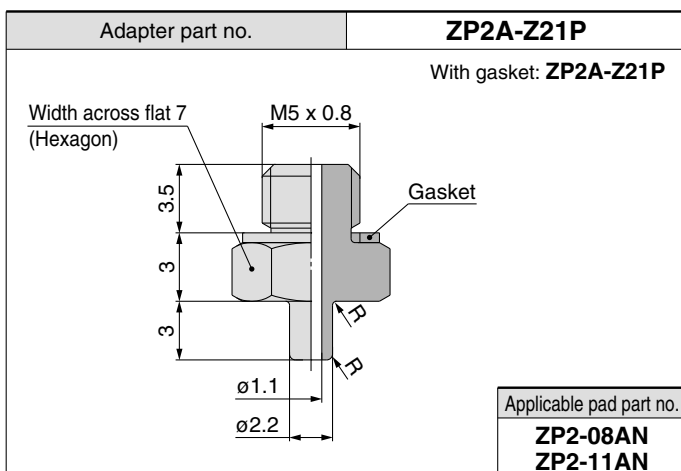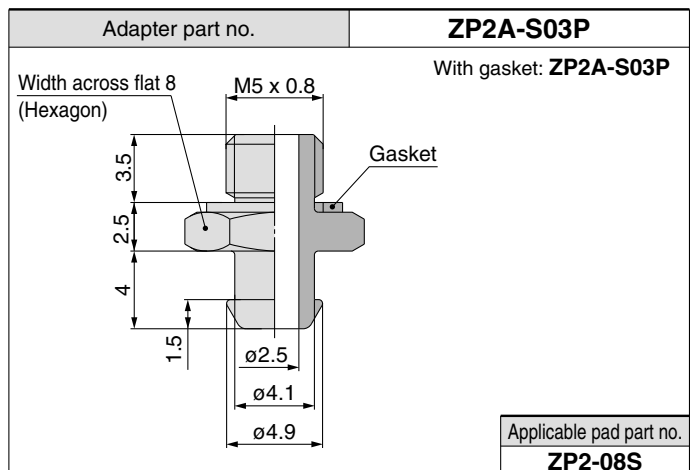
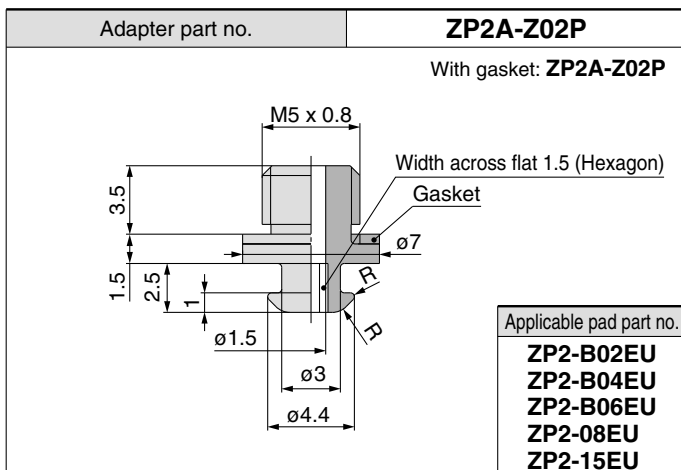
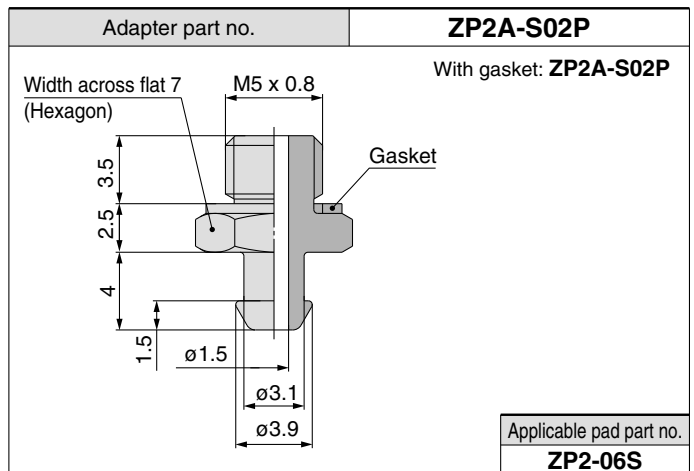
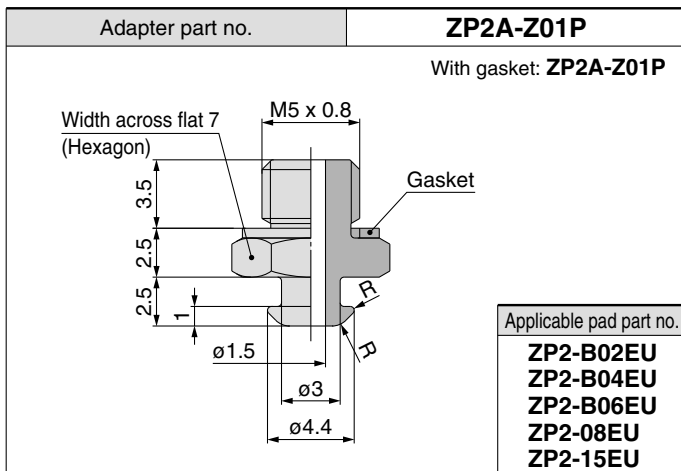
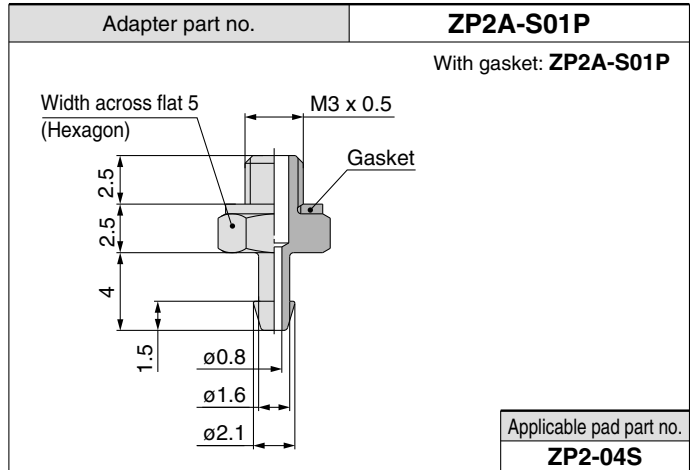
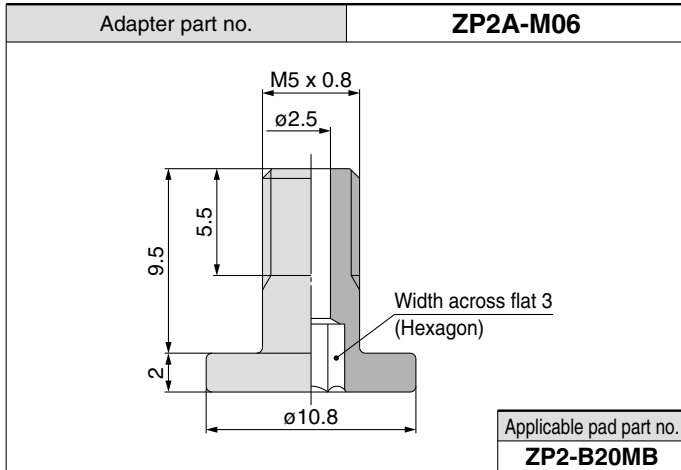


Series **ZP2**

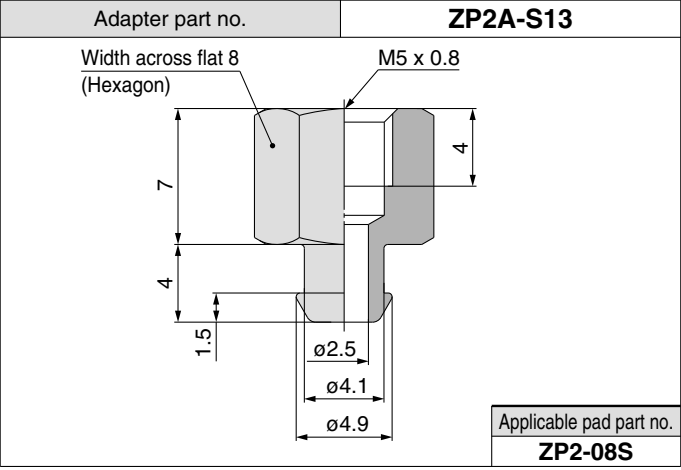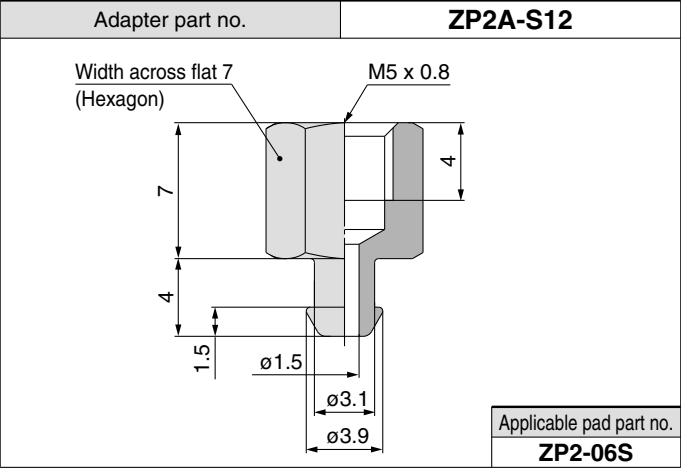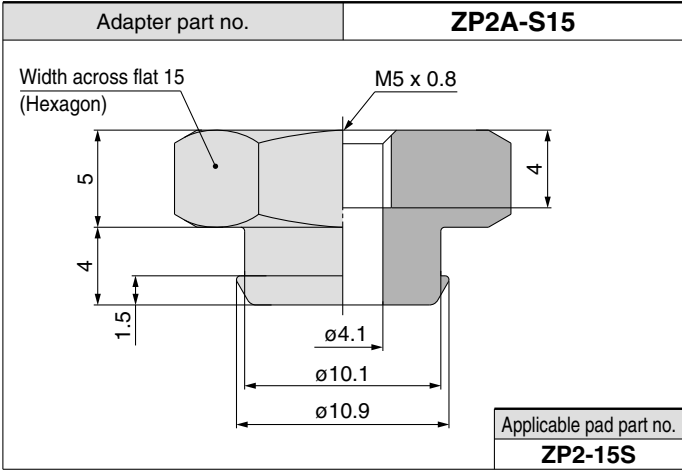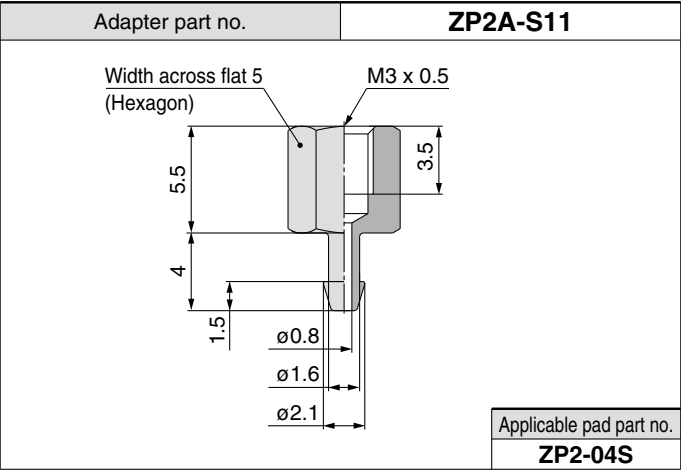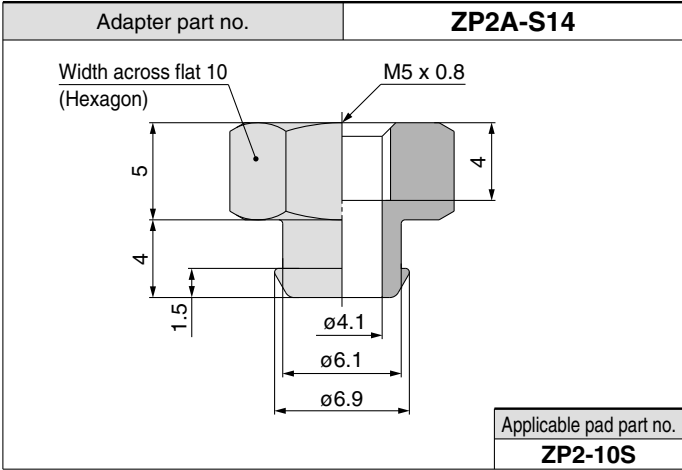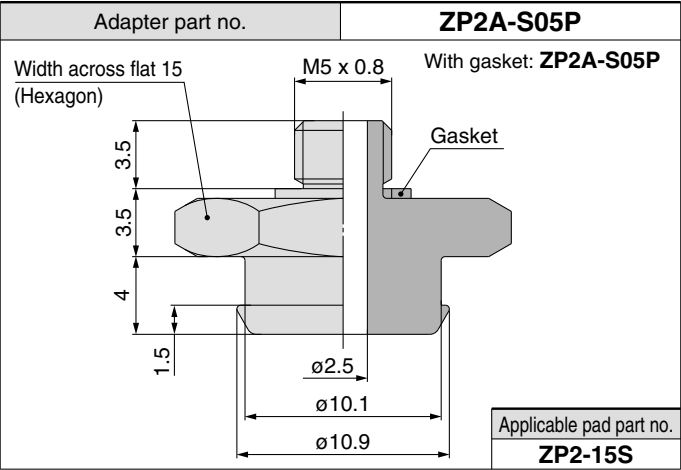


Mounting Adapter Part No.


* Refer to page 66 for applicable pad part no.

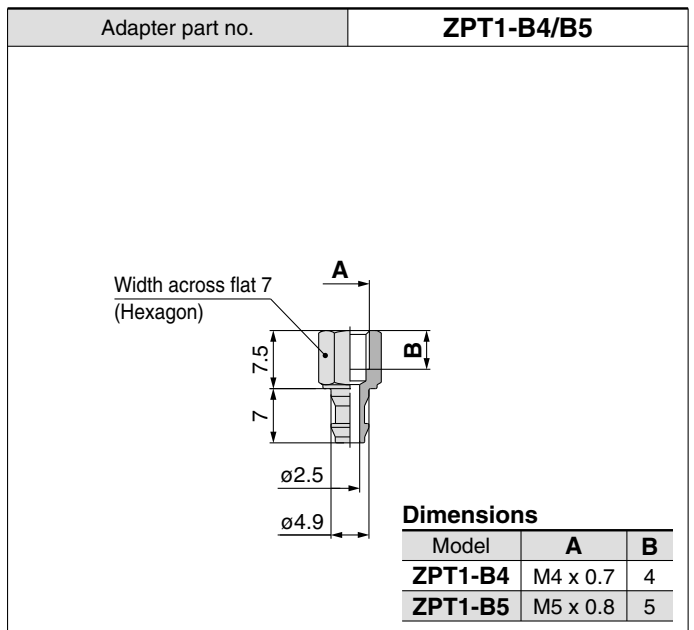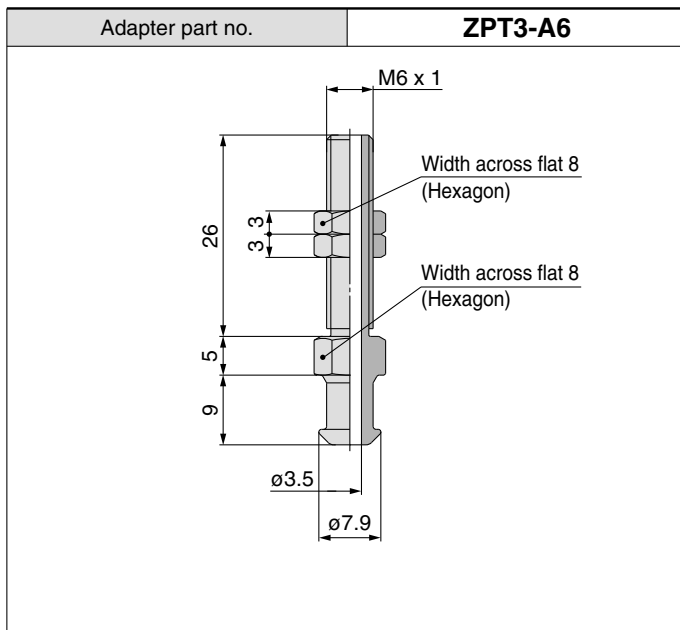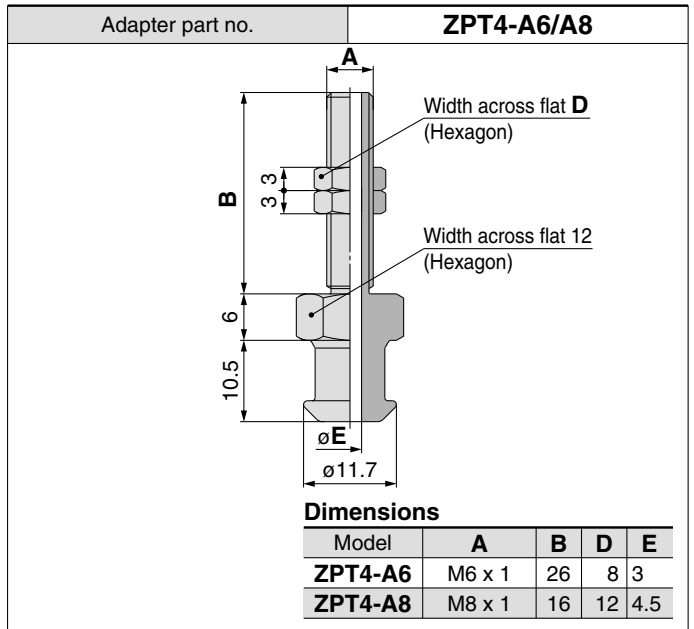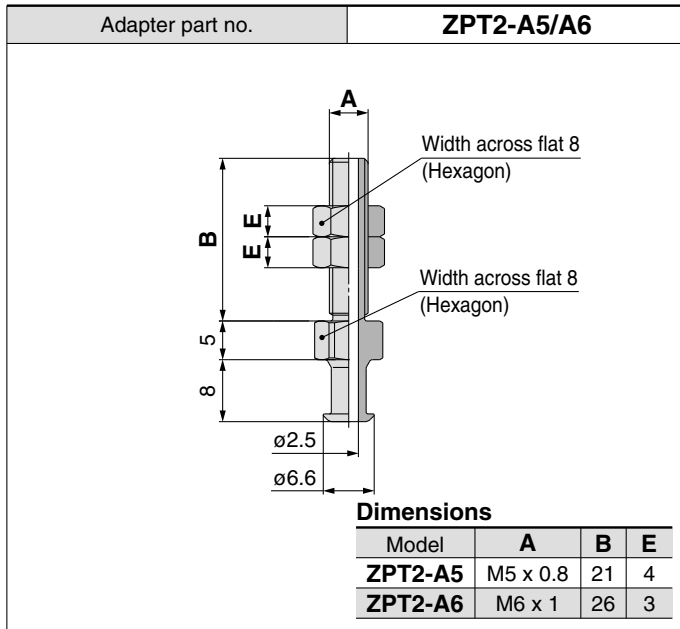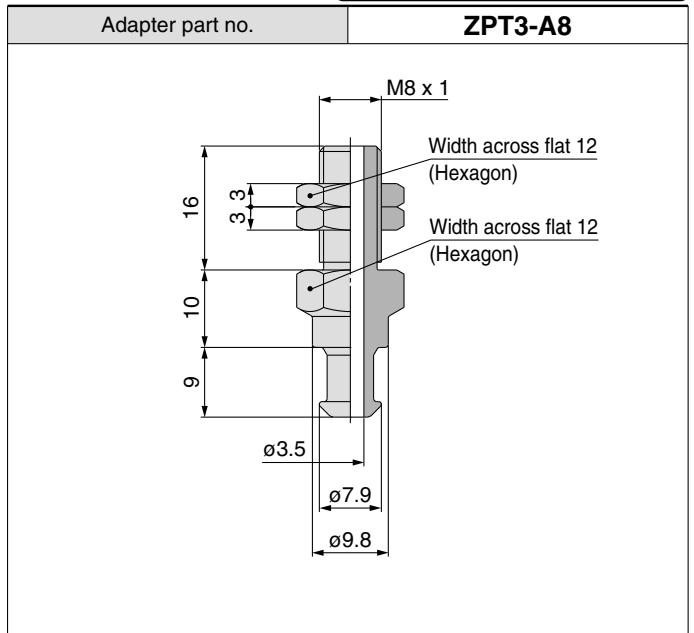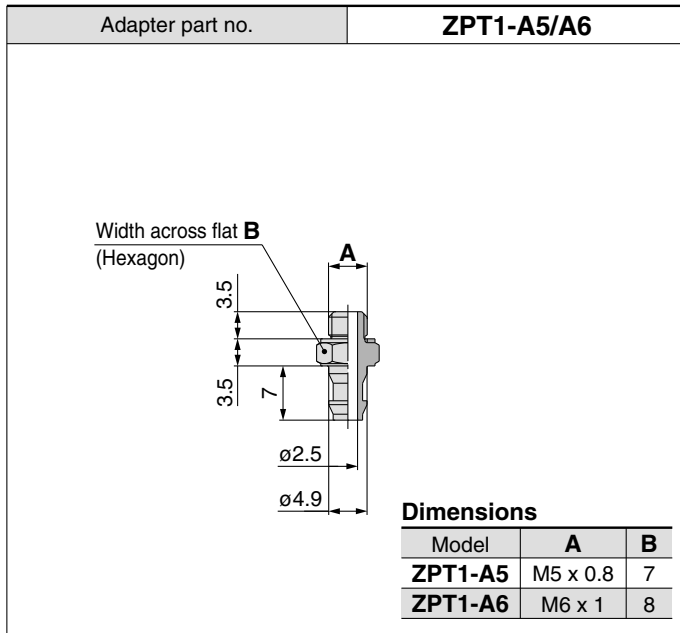



Refer to page 66 for applicable pad part no.

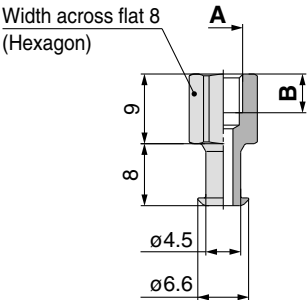
Adapter part no.	ZPT2-B5/B6		
			
Dimensions			
Model	A	B	
ZPT2-B5	M5 x 0.8	5	
ZPT2-B6	M6 x 1	6	

Adapter part no.	ZPT3-B8/B01/N01/T01		
<div><div><div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><</div></div></div></div></div>			

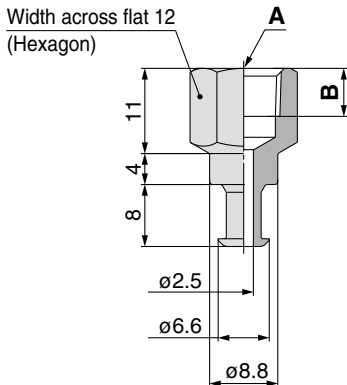Adapter part no.	ZPT2-B01/N01/T01		
			
Dimensions			
Model	A	B	
ZPT2-B01	Rc1/8	6.2	
ZPT2-N01	NPT1/8	6.9	
ZPT2-T01	NPTF1/8	6.9	

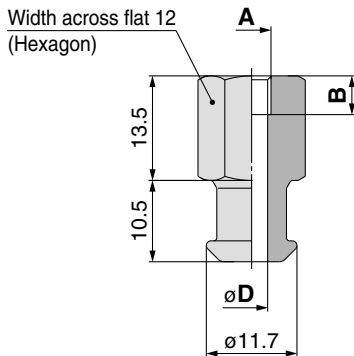Adapter part no.	ZPT4-B6/B8			
				
Dimensions				
Model	A	B	D	
ZPT4-B6	M6 x 1	6	4.9	
ZPT4-B8	M8 x 1.25	8	7.5	

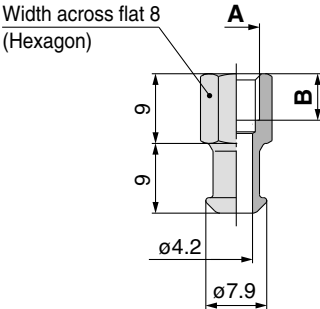Adapter part no.	ZPT3-B5/B6		
			
Dimensions			
Model	A	B	
ZPT3-B5	M5 x 0.8	5	
ZPT3-B6	M6 x 1	6	

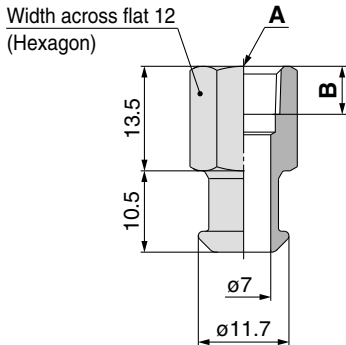Adapter part no.	ZPT4-B01/N01/T01		
			
Dimensions			
Model	A	B	
ZPT4-B01	Rc1/8	6.2	
ZPT4-N01	NPT1/8	6.9	
ZPT4-T01	NPTF1/8	6.9	

Heavy-duty Ball Joint Adapter Assembly Part No. (Type T)

Adapter assembly part no.	Applicable pad part no.
ZP2A-TF1	ZP40H <input type="checkbox"/> ZP40HB <input type="checkbox"/> ZP50H <input type="checkbox"/> ZP50HB <input type="checkbox"/>

* With three M3 bolts

Adapter assembly part no.	Applicable pad part no.
ZP2A-TF2	ZP63H <input type="checkbox"/> ZP63HB <input type="checkbox"/> ZP80H <input type="checkbox"/> ZP80HB <input type="checkbox"/>

* With four M4 bolts

Adapter assembly part no.	Applicable pad part no.
ZP2A-TF3	ZP100H <input type="checkbox"/> ZP100HB <input type="checkbox"/> ZP125H <input type="checkbox"/> ZP125HB <input type="checkbox"/>

* With four M5 bolts

Heavy-duty Ball Joint Adapter Assembly Part No. (Type X)

Adapter assembly part no.	Applicable pad part no.
ZP2A-XF1	ZP40H <input type="checkbox"/> ZP40HB <input type="checkbox"/> ZP50H <input type="checkbox"/> ZP50HB <input type="checkbox"/>

* With three M3 bolts

Adapter assembly part no.	Applicable pad part no.
ZP2A-XF2	ZP63H <input type="checkbox"/> ZP63HB <input type="checkbox"/> ZP80H <input type="checkbox"/> ZP80HB <input type="checkbox"/>

* With four M4 bolts


Adapter assembly part no.	Applicable pad part no.
ZP2A-XF3	ZP100H <input type="checkbox"/> ZP100HB <input type="checkbox"/> ZP125H <input type="checkbox"/> ZP125HB <input type="checkbox"/>

* With four M5 bolts

Adapter Assembly Part No.

Heavy-duty Adapter Assembly Part No. (Type T, Female thread)

Adapter assembly part no.	Applicable pad part no.
ZPA-T1-B8	ZP40H □ ZP50H □
ZPA-T1-B10	ZP40HB □ ZP50HB □

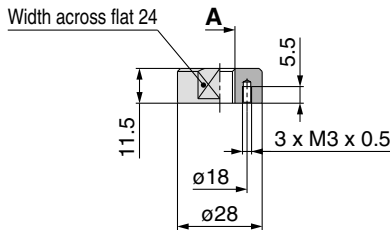


Dimensions

Model	A
ZPA-T1-B8	M8 x 1.25
ZPA-T1-B10	M10 x 1.5

* With three M3 bolts

Adapter assembly part no.	Applicable pad part no.
ZPA-T2-B8	ZP63H □
ZPA-T2-B10	ZP80H □
ZPA-T2-B12	ZP63HB □
ZPA-T2-B16	ZP80HB □

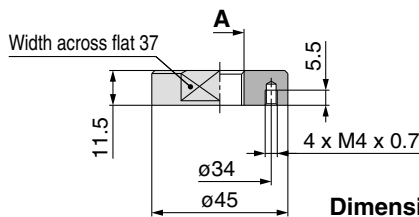


Dimensions

Model	A
ZPA-T2-B8	M8 x 1.25
ZPA-T2-B10	M10 x 1.5
ZPA-T2-B12	M12 x 1.75
ZPA-T2-B16	M16 x 1.5

* With four M4 bolts

Adapter assembly part no.	Applicable pad part no.
ZPA-T3-B12	ZP100H □ ZP125H □
ZPA-T3-B16	ZP100HB □ ZP125HB □

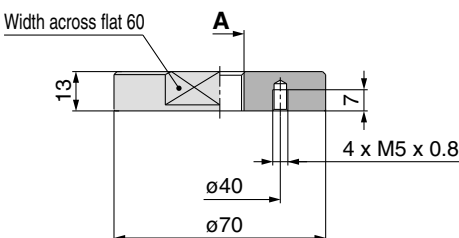


Dimensions

Model	A
ZPA-T3-B12	M12 x 1.75
ZPA-T3-B16	M16 x 1.5

* With four M5 bolts


Heavy-duty Adapter Assembly Part No. (Type T, Male thread)

Adapter assembly part no.	Applicable pad part no.
ZPA-T1-B01	ZP40H □ ZP50H □
ZPA-T1-N01	ZP40HB □ ZP50HB □
ZPA-T1-T01	

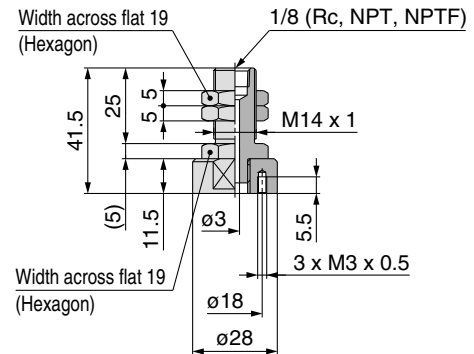


* With three M3 bolts

Adapter assembly part no.	Applicable pad part no.
ZPA-T2-B01	ZP63H □
ZPA-T2-N01	ZP80H □ ZP63HB □
ZPA-T2-T01	ZP80HB □

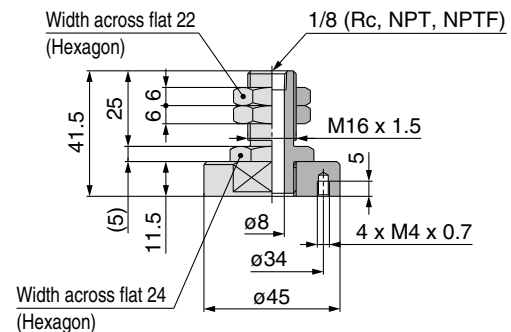

* With four M4 bolts


Adapter assembly part no.	Applicable pad part no.
ZPA-T3-B01	ZP100H □ ZP125H □
ZPA-T3-N01	ZP100HB □ ZP125HB □
ZPA-T3-T01	

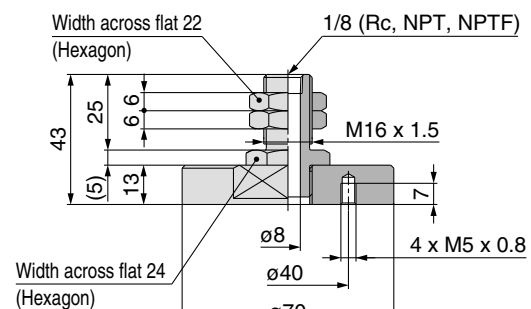

* With four M5 bolts

Heavy-duty Adapter Assembly Part No. (Type X, Female thread)

Adapter assembly part no.	Applicable pad part no.
ZPA-X1-B01-B8	ZP40H □ ZP50H □ ZP40HB □ ZP50HB □
ZPA-X1-N01-B8	
ZPA-X1-T01-B8	
ZPA-X1-B01-B10	
ZPA-X1-N01-B10	
ZPA-X1-T01-B10	

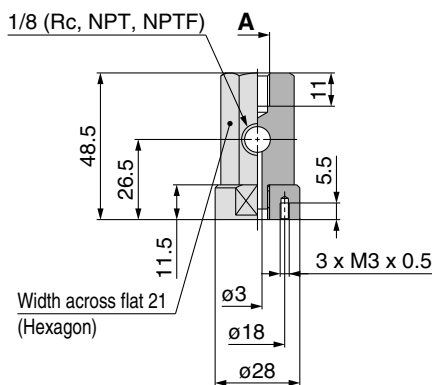


Dimensions

Model	A
ZPA-X1-□01-B8	M8 x 1.25
ZPA-X1-□01-B10	M10 x 1.5

* With three M3 bolts

Adapter assembly part no.	Applicable pad part no.
ZPA-X3-B01-B10	ZP100H □ ZP125H □ ZP100HB □ ZP125HB □
ZPA-X3-N01-B10	
ZPA-X3-T01-B10	
ZPA-X3-B01-B12	
ZPA-X3-N01-B12	
ZPA-X3-T01-B12	

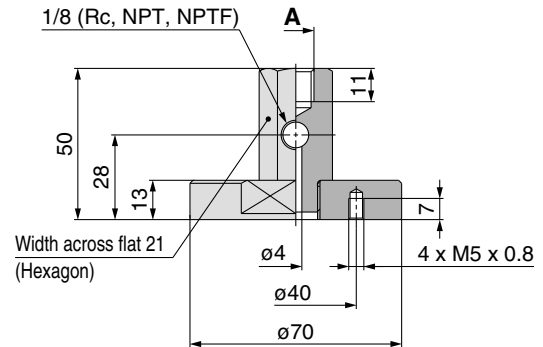


Dimensions

Model	A
ZPA-X3-□01-B10	M10 x 1.5
ZPA-X3-□01-B12	M12 x 1.75

* With four M5 bolts

Adapter assembly part no.	Applicable pad part no.
ZPA-X2-B01-B10	ZP63H □ ZP80H □ ZP63HB □ ZP80HB □
ZPA-X2-N01-B10	
ZPA-X2-T01-B10	
ZPA-X2-B01-B12	
ZPA-X2-N01-B12	
ZPA-X2-T01-B12	

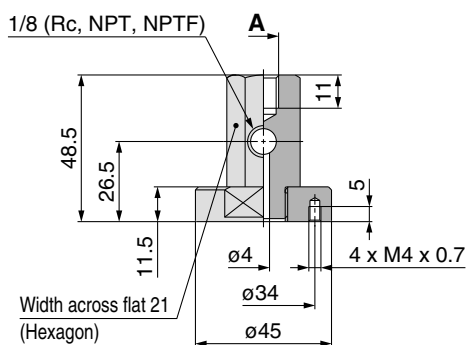


Dimensions

Model	A
ZPA-X2-□01-B10	M10 x 1.5
ZPA-X2-□01-B12	M12 x 1.75

* With four M4 bolts


* Refer to the front matter 30 for nut tightening torque.

Heavy-duty Ball Joint Buffer Assembly Part No. (Type T)

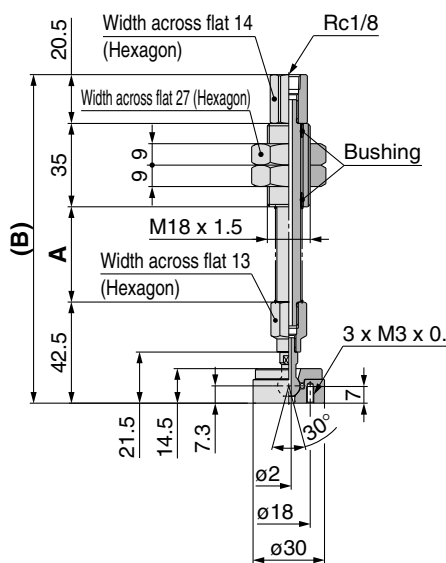Buffer assembly part no.			Applicable pad part no. ZP40H□ ZP50H□ ZP40HB□ ZP50HB□
Buffer body (Material: Brass)	Buffer body (Material: Steel)		
ZP2B-TF1JB25	ZP2B-TF1JF25		
ZP2B-TF1JB50	ZP2B-TF1JF50		
ZP2B-TF1JB75	ZP2B-TF1JF75		


Model	A	B
ZP2B-TF1(JB/JF)25	40	138
ZP2B-TF1(JB/JF)50	75	173
ZP2B-TF1(JB/JF)75	111	209

* With three M3 bolts

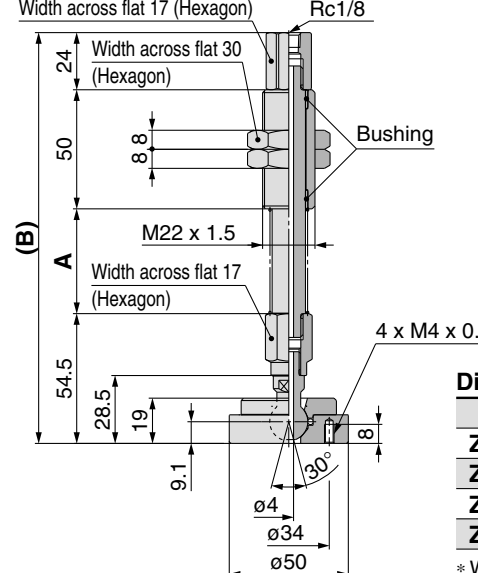Buffer assembly part no.			Applicable pad part no. ZP63H□ ZP80H□ ZP63HB□ ZP80HB□
Buffer body (Material: Brass)	Buffer body (Material: Steel)		
ZP2B-TF2JB25	ZP2B-TF2JF25		
ZP2B-TF2JB50	ZP2B-TF2JF50		
ZP2B-TF2JB75	ZP2B-TF2JF75		

Model	A	B
ZP2B-TF2(JB/JF)25	44	172.5
ZP2B-TF2(JB/JF)50	80	208.5
ZP2B-TF2(JB/JF)75	120	248.5
ZP2B-TF2(JB/JF)100	155	283.5

* With four M4 bolts

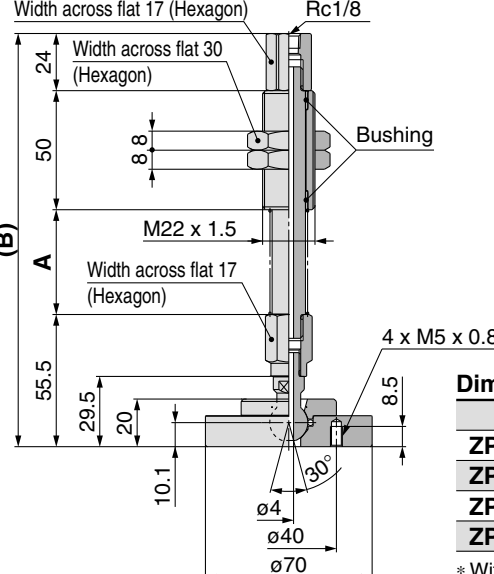Buffer assembly part no.			Applicable pad part no. ZP100H□ ZP125H□ ZP100HB□ ZP125HB□
Buffer body (Material: Brass)	Buffer body (Material: Steel)		
ZP2B-TF3JB25	ZP2B-TF3JF25		
ZP2B-TF3JB50	ZP2B-TF3JF50		
ZP2B-TF3JB75	ZP2B-TF3JF75		


Model	A	B
ZP2B-TF3(JB/JF)25	44	173.5
ZP2B-TF3(JB/JF)50	80	209.5
ZP2B-TF3(JB/JF)75	120	249.5
ZP2B-TF3(JB/JF)100	155	284.5

* With four M5 bolts

* Refer to the front matter 30 for nut tightening torque.

Heavy-duty Ball Joint Buffer Assembly Part No. (Type X)

Buffer assembly part no.	
Buffer body (Material: Brass)	Buffer body (Material: Steel)
ZP2B-XF1JB25	ZP2B-XF1JF25
ZP2B-XF1JB50	ZP2B-XF1JF50
ZP2B-XF1JB75	ZP2B-XF1JF75

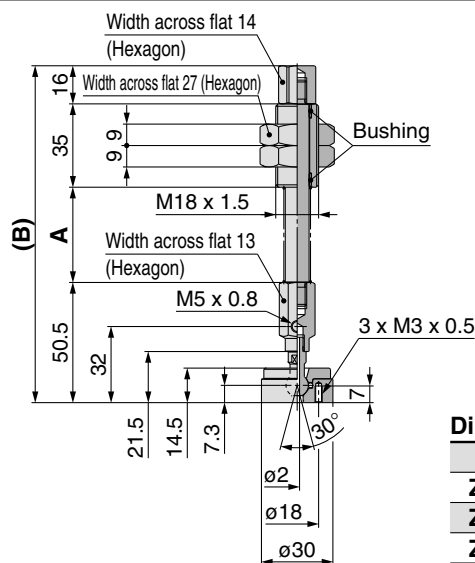


Applicable pad part no.
ZP40H □
ZP50H □
ZP40HB □
ZP50HB □

Dimensions

Model	A	B
ZP2B-XF1(JB/JF)25	40	141.5
ZP2B-XF1(JB/JF)50	75	176.5
ZP2B-XF1(JB/JF)75	111	212.5

* With three M3 bolts

Buffer assembly part no.	
Buffer body (Material: Brass)	Buffer body (Material: Steel)
ZP2B-XF2JB25	ZP2B-XF2JF25
ZP2B-XF2JB50	ZP2B-XF2JF50
ZP2B-XF2JB75	ZP2B-XF2JF75
ZP2B-XF2JB100	ZP2B-XF2JF100

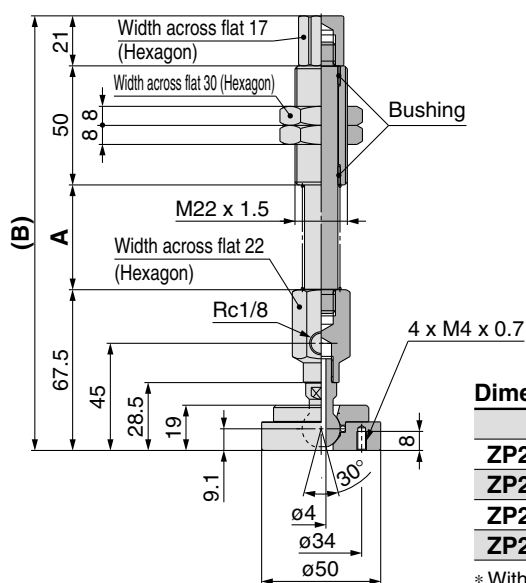


Applicable pad part no.
ZP63H <input type="checkbox"/>
ZP80H <input type="checkbox"/>
ZP63HB <input type="checkbox"/>
ZP80HB <input type="checkbox"/>

Dimensions

Model	A	B
ZP2B-XF2(JB/JF)25	44	182.5
ZP2B-XF2(JB/JF)50	80	218.5
ZP2B-XF2(JB/JF)75	120	258.5
ZP2B-XF2(JB/JF)100	155	293.5

* With four M4 bolts

Buffer assembly part no.	
Buffer body (Material: Brass)	Buffer body (Material: Steel)
ZP2B-XF3JB25	ZP2B-XF3JF25
ZP2B-XF3JB50	ZP2B-XF3JF50
ZP2B-XF3JB75	ZP2B-XF3JF75
ZP2B-XF3JB100	ZP2B-XF3JF100

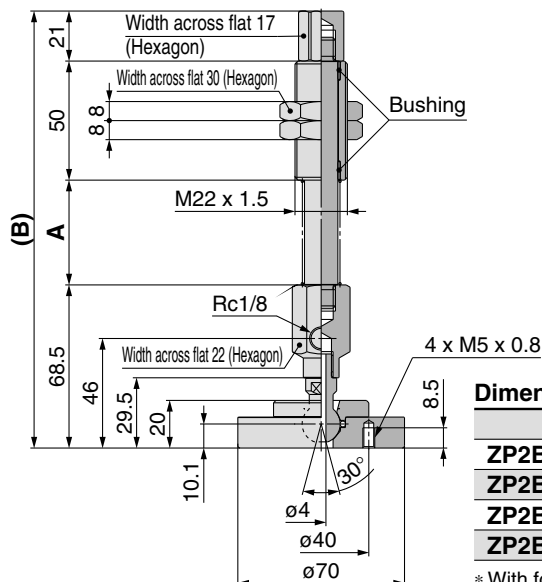

Applicable pad part no.
ZP100H□
ZP125H□
ZP100HB□
ZP125HB□


Dimensions

Model	A	B
ZP2B-XF3(JB/JF)25	44	183.5
ZP2B-XF3(JB/JF)50	80	219.5
ZP2B-XF3(JB/JF)75	120	259.5
ZP2B-XF3(JB/JF)100	155	294.5

* With four M5 bolts

Heavy-duty Buffer Assembly Part No. (Type T)

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-T1J25-B01
ZPB-T1J25-N01
ZPB-T1J25-T01
ZPB-T1J50-B01
ZPB-T1J50-N01
ZPB-T1J50-T01
ZPB-T1J75-B01
ZPB-T1J75-N01
ZPB-T1J75-T01

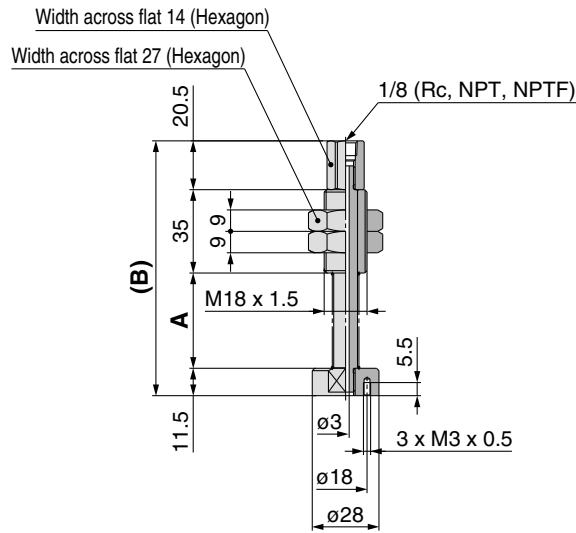


Applicable pad part no.
ZP40H□
ZP50H□
ZP40HB□
ZP50HB□

Dimensions

Model	A	B
ZPB-T1J25-□01	40	107
ZPB-T1J50-□01	75	142
ZPB-T1J75-□01	111	178

* With three M3 bolts

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-T2J25-B01
ZPB-T2J25-N01
ZPB-T2J25-T01
ZPB-T2J50-B01
ZPB-T2J50-N01
ZPB-T2J50-T01
ZPB-T2J75-B01
ZPB-T2J75-N01
ZPB-T2J75-T01

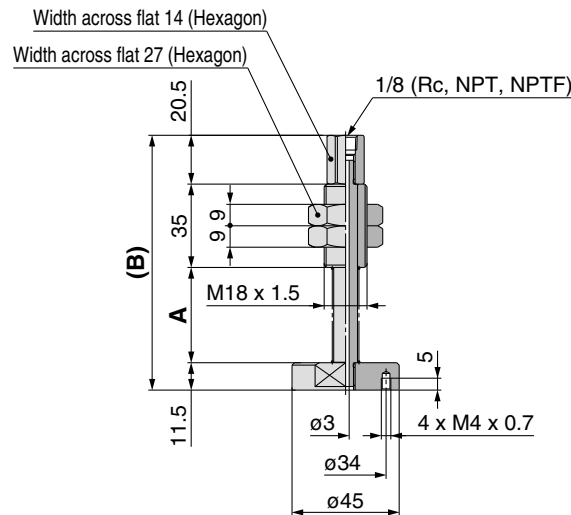


Applicable pad part no.
ZP63H□
ZP80H□
ZP63HB□
ZP80HB□

Dimensions

Model	A	B
ZPB-T2J25-□01	40	107
ZPB-T2J50-□01	75	142
ZPB-T2J75-□01	111	178

* With four M4 bolts

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-T3J25-B01
ZPB-T3J25-N01
ZPB-T3J25-T01
ZPB-T3J50-B01
ZPB-T3J50-N01
ZPB-T3J50-T01
ZPB-T3J75-B01
ZPB-T3J75-N01
ZPB-T3J75-T01
ZPB-T3J100-B01
ZPB-T3J100-N01
ZPB-T3J100-T01

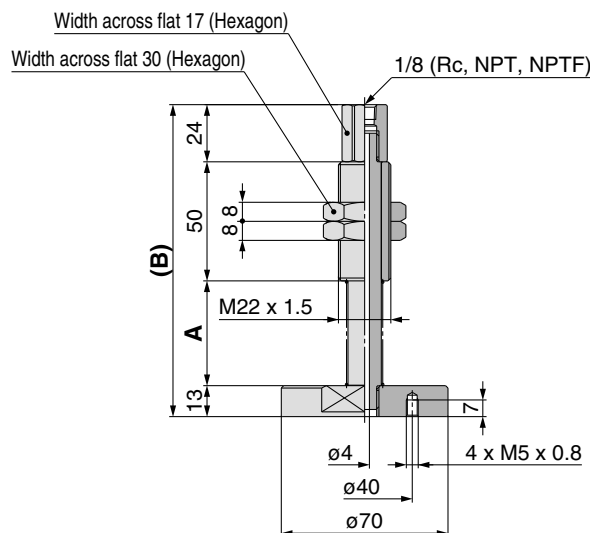

Applicable pad part no.
ZP100H□
ZP125H□
ZP100HB□
ZP125HB□

Dimensions

Model	A	B
ZPB-T3J25-□01	44	131
ZPB-T3J50-□01	80	167
ZPB-T3J75-□01	120	207
ZPB-T3J100-□01	155	242

* With four M5 bolts

Heavy-duty Buffer Assembly Part No. (Type T)

Buffer assembly part no.	
Buffer body (Material: Brass)	Buffer body (Material: Steel)
ZPB-T1JB25-B01	ZPB-T1JF25-B01
ZPB-T1JB25-N01	ZPB-T1JF25-N01
ZPB-T1JB25-T01	ZPB-T1JF25-T01
ZPB-T1JB50-B01	ZPB-T1JF50-B01
ZPB-T1JB50-N01	ZPB-T1JF50-N01
ZPB-T1JB50-T01	ZPB-T1JF50-T01
ZPB-T1JB75-B01	ZPB-T1JF75-B01
ZPB-T1JB75-N01	ZPB-T1JF75-N01
ZPB-T1JB75-T01	ZPB-T1JF75-T01

Technical drawing of a buffer assembly. The drawing shows a cross-section of the assembly with various dimensions and components labeled. The main dimensions are: Width across flat 14 (Hexagon), Width across flat 27 (Hexagon), 1/8 (Rc, NPT, NPTF), 20.5, 35, 9.9, 5.5, 11.5, A, B, M18 x 1.5, 3 x M3 x 0.5, 3, 18, 28, 3, 18, 28. The components are: Buffer body (Material: Brass), Buffer body (Material: Steel), Bushing, and 1/8 (Rc, NPT, NPTF).

Dimensions		
Model	A	B
ZPB-T1(JB/JF)25-□01	40	107
ZPB-T1(JB/JF)50-□01	75	142
ZPB-T1(JB/JF)75-□01	111	178

* With three M3 bolts

Applicable pad part no.

ZP40H□
ZP50H□
ZP40HB□
ZP50HB□

Buffer assembly part no.	
Buffer body (Material: Brass)	Buffer body (Material: Steel)
ZPB-T2JB25-B01	ZPB-T2JF25-B01
ZPB-T2JB25-N01	ZPB-T2JF25-N01
ZPB-T2JB25-T01	ZPB-T2JF25-T01
ZPB-T2JB50-B01	ZPB-T2JF50-B01
ZPB-T2JB50-N01	ZPB-T2JF50-N01
ZPB-T2JB50-T01	ZPB-T2JF50-T01
ZPB-T2JB75-B01	ZPB-T2JF75-B01
ZPB-T2JB75-N01	ZPB-T2JF75-N01
ZPB-T2JB75-T01	ZPB-T2JF75-T01

Width across flat 14 (Hexagon)

Width across flat 27 (Hexagon)

1/8 (Rc, NPT, NPTF)

Bushing

M18 x 1.5

5

4 x M4 x 0.7

11.5

A

B

20.5

35

9

9

ø3

ø34

ø45

Applicable pad part no.

ZP63H□

ZP80H□


ZP63HB□

ZP80HB□

Dimensions

Model	A	B
ZPB-T2(JB/JF)25-□01	40	107
ZPB-T2(JB/JF)50-□01	75	142
ZPB-T2(JB/JF)75-□01	111	178


* With four M4 bolts

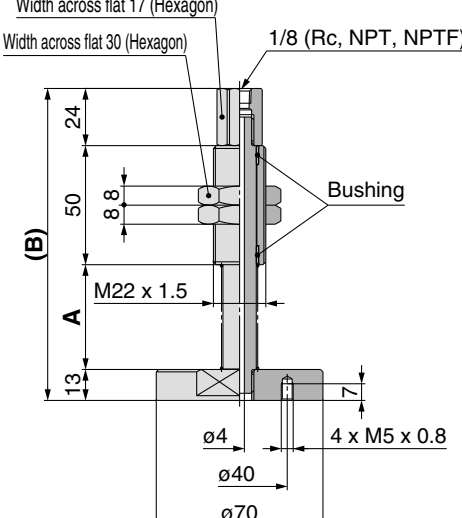Buffer assembly part no.			Applicable pad part no.															
Buffer body (Material: Brass)	Buffer body (Material: Steel)																	
ZPB-T3JB25-B01	ZPB-T3JF25-B01	Dimensions <table><tr><th>Model</th><th>A</th><th>B</th></tr><tr><td>ZPB-T3(JB/JF)25-□01</td><td>44</td><td>131</td></tr><tr><td>ZPB-T3(JB/JF)50-□01</td><td>80</td><td>167</td></tr><tr><td>ZPB-T3(JB/JF)75-□01</td><td>120</td><td>207</td></tr><tr><td>ZPB-T3(JB/JF)100-□01</td><td>155</td><td>242</td></tr></table> <p>* With four M5 bolts</p>	Model	A	B	ZPB-T3(JB/JF)25-□01	44	131	ZPB-T3(JB/JF)50-□01	80	167	ZPB-T3(JB/JF)75-□01	120	207	ZPB-T3(JB/JF)100-□01	155	242	ZP100H□ ZP125H□ ZP100HB□ ZP125HB□
Model	A		B															
ZPB-T3(JB/JF)25-□01	44		131															
ZPB-T3(JB/JF)50-□01	80		167															
ZPB-T3(JB/JF)75-□01	120		207															
ZPB-T3(JB/JF)100-□01	155		242															
ZPB-T3JB25-N01	ZPB-T3JF25-N01																	
ZPB-T3JB25-T01	ZPB-T3JF25-T01																	
ZPB-T3JB50-B01	ZPB-T3JF50-B01																	
ZPB-T3JB50-N01	ZPB-T3JF50-N01																	
ZPB-T3JB50-T01	ZPB-T3JF50-T01																	
ZPB-T3JB75-B01	ZPB-T3JF75-B01																	
ZPB-T3JB75-N01	ZPB-T3JF75-N01																	
ZPB-T3JB75-T01	ZPB-T3JF75-T01																	
ZPB-T3JB100-B01	ZPB-T3JF100-B01																	
ZPB-T3JB100-N01	ZPB-T3JF100-N01																	
ZPB-T3JB100-T01	ZPB-T3JF100-T01																	

* Refer to the front matter 30 for nut tightening torque.

Heavy-duty Buffer Assembly Part No. (Type X)

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-X1J25-B01
ZPB-X1J25-N01
ZPB-X1J25-T01
ZPB-X1J50-B01
ZPB-X1J50-N01
ZPB-X1J50-T01
ZPB-X1J75-B01
ZPB-X1J75-N01
ZPB-X1J75-T01

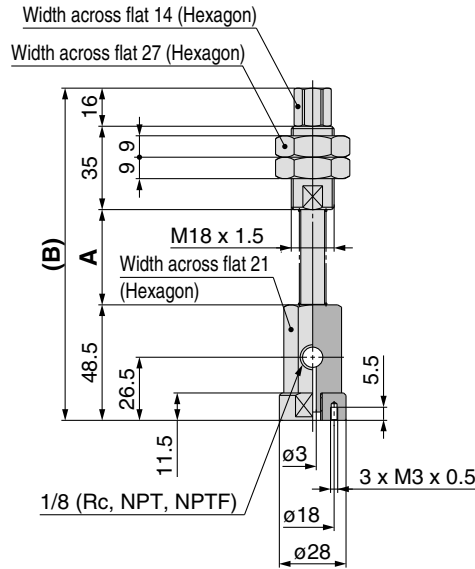


Applicable pad part no.
ZP40H□
ZP50H□
ZP40HB□
ZP50HB□

Dimensions

Model	A	B
ZPB-X1J25-□01	40	139.5
ZPB-X1J50-□01	75	174.5
ZPB-X1J75-□01	111	210.5

* With three M3 bolts

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-X2J25-B01
ZPB-X2J25-N01
ZPB-X2J25-T01
ZPB-X2J50-B01
ZPB-X2J50-N01
ZPB-X2J50-T01
ZPB-X2J75-B01
ZPB-X2J75-N01
ZPB-X2J75-T01

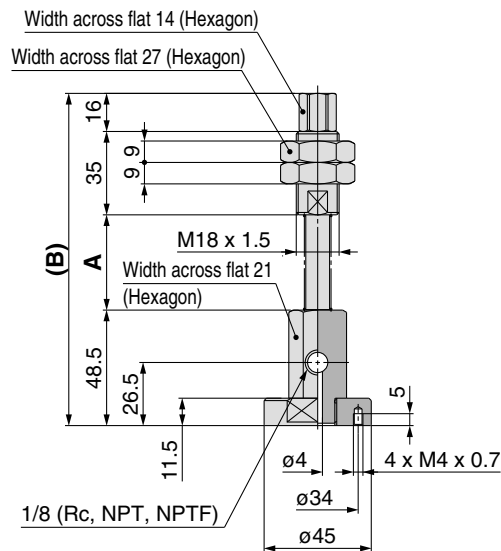


Applicable pad part no.
ZP63H□
ZP80H□
ZP63HB□
ZP80HB□

Dimensions

Model	A	B
ZPB-X2J25-□01	40	139.5
ZPB-X2J50-□01	75	174.5
ZPB-X2J75-□01	111	210.5

* With four M4 bolts

Buffer assembly part no.
Buffer body (Material: Aluminum alloy)
ZPB-X3J25-B01
ZPB-X3J25-N01
ZPB-X3J25-T01
ZPB-X3J50-B01
ZPB-X3J50-N01
ZPB-X3J50-T01
ZPB-X3J75-B01
ZPB-X3J75-N01
ZPB-X3J75-T01
ZPB-X3J100-B01
ZPB-X3J100-N01
ZPB-X3J100-T01

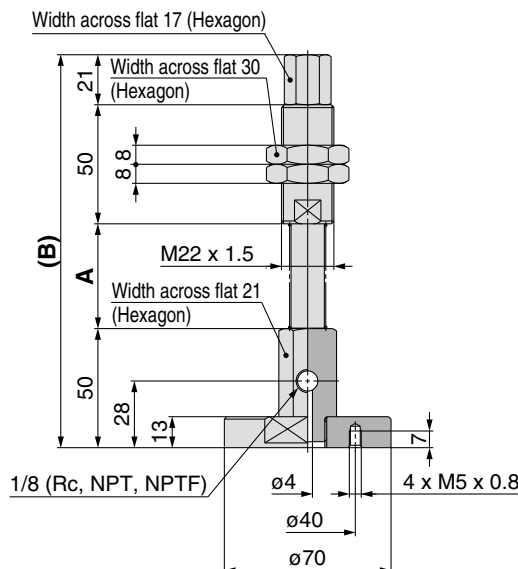


Applicable pad part no.
ZP100H□
ZP125H□
ZP100HB□
ZP125HB□

Dimensions

Model	A	B
ZPB-X3J25-□01	44	165
ZPB-X3J50-□01	80	201
ZPB-X3J75-□01	120	241
ZPB-X3J100-□01	155	276

* With four M5 bolts


Heavy-duty Buffer Assembly Part No. (Type X)

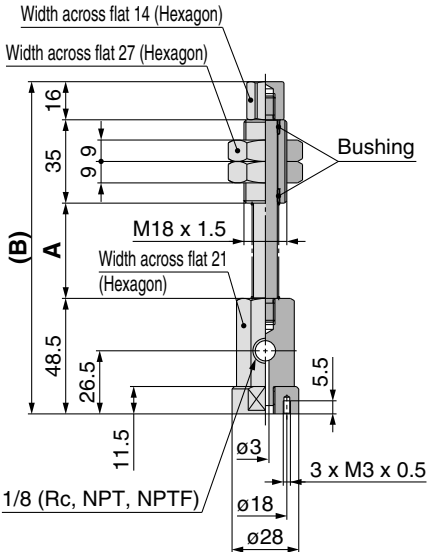
Buffer assembly part no.			Applicable pad part no.
Buffer body (Material: Brass)	Buffer body (Material: Steel)		
ZPB-X1JB25-B01	ZPB-X1JF25-B01		ZP40H□
ZPB-X1JB25-N01	ZPB-X1JF25-N01		ZP50H□
ZPB-X1JB25-T01	ZPB-X1JF25-T01		ZP40HB□
ZPB-X1JB50-B01	ZPB-X1JF50-B01		ZP50HB□
ZPB-X1JB50-N01	ZPB-X1JF50-N01		
ZPB-X1JB50-T01	ZPB-X1JF50-T01		
ZPB-X1JB75-B01	ZPB-X1JF75-B01		
ZPB-X1JB75-N01	ZPB-X1JF75-N01		
ZPB-X1JB75-T01	ZPB-X1JF75-T01		

Dimensions

Model	A	B
ZPB-X1(JB/JF)25-□01	40	139.5
ZPB-X1(JB/JF)50-□01	75	174.5
ZPB-X1(JB/JF)75-□01	111	210.5

* With three M3 bolts

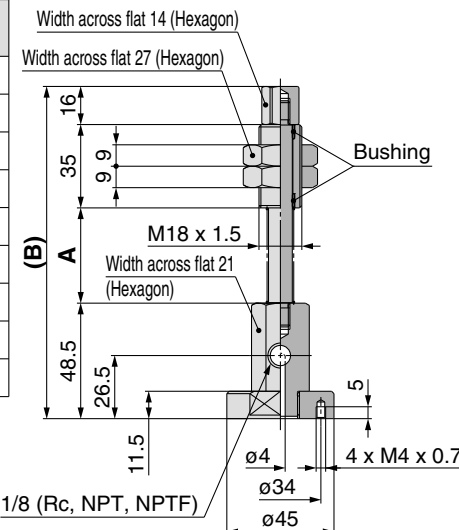Buffer assembly part no.			Applicable pad part no.												
Buffer body (Material: Brass)	Buffer body (Material: Steel)														
ZPB-X2JB25-B01	ZPB-X2JF25-B01	Dimensions <table><tr><th>Model</th><th>A</th><th>B</th></tr><tr><td>ZPB-X2(JB/JF)25-□01</td><td>40</td><td>139.5</td></tr><tr><td>ZPB-X2(JB/JF)50-□01</td><td>75</td><td>174.5</td></tr><tr><td>ZPB-X2(JB/JF)75-□01</td><td>111</td><td>210.5</td></tr></table> <p>* With four M4 bolts</p>	Model	A	B	ZPB-X2(JB/JF)25-□01	40	139.5	ZPB-X2(JB/JF)50-□01	75	174.5	ZPB-X2(JB/JF)75-□01	111	210.5	ZP63H□ ZP80H□ ZP63HB□ ZP80HB□
Model	A		B												
ZPB-X2(JB/JF)25-□01	40		139.5												
ZPB-X2(JB/JF)50-□01	75		174.5												
ZPB-X2(JB/JF)75-□01	111		210.5												
ZPB-X2JB25-N01	ZPB-X2JF25-N01														
ZPB-X2JB25-T01	ZPB-X2JF25-T01														
ZPB-X2JB50-B01	ZPB-X2JF50-B01														
ZPB-X2JB50-N01	ZPB-X2JF50-N01														
ZPB-X2JB50-T01	ZPB-X2JF50-T01														
ZPB-X2JB75-B01	ZPB-X2JF75-B01														
ZPB-X2JB75-N01	ZPB-X2JF75-N01														
ZPB-X2JB75-T01	ZPB-X2JF75-T01														

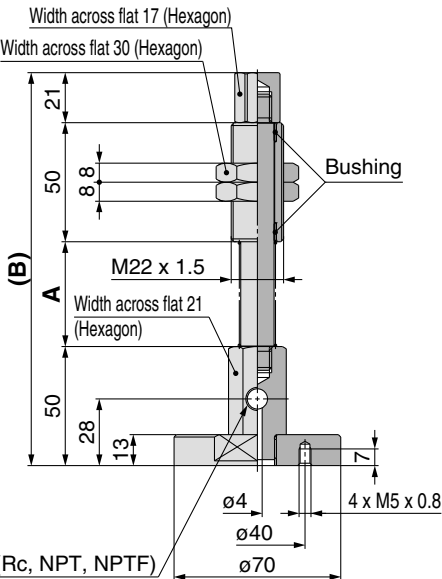Buffer assembly part no.			Applicable pad part no.															
Buffer body (Material: Brass)	Buffer body (Material: Steel)																	
ZPB-X3JB25-B01	ZPB-X3JF25-B01	Dimensions <table><tr><th>Model</th><th>A</th><th>B</th></tr><tr><td>ZPB-X3(JB/JF)25-□01</td><td>44</td><td>165</td></tr><tr><td>ZPB-X3(JB/JF)50-□01</td><td>80</td><td>201</td></tr><tr><td>ZPB-X3(JB/JF)75-□01</td><td>120</td><td>241</td></tr><tr><td>ZPB-X3(JB/JF)100-□01</td><td>155</td><td>276</td></tr></table> <p>* With four M5 bolts</p>	Model	A	B	ZPB-X3(JB/JF)25-□01	44	165	ZPB-X3(JB/JF)50-□01	80	201	ZPB-X3(JB/JF)75-□01	120	241	ZPB-X3(JB/JF)100-□01	155	276	ZP100H□ ZP125H□ ZP100HB□ ZP125HB□
Model	A		B															
ZPB-X3(JB/JF)25-□01	44		165															
ZPB-X3(JB/JF)50-□01	80		201															
ZPB-X3(JB/JF)75-□01	120		241															
ZPB-X3(JB/JF)100-□01	155		276															
ZPB-X3JB25-N01	ZPB-X3JF25-N01																	
ZPB-X3JB25-T01	ZPB-X3JF25-T01																	
ZPB-X3JB50-B01	ZPB-X3JF50-B01																	
ZPB-X3JB50-N01	ZPB-X3JF50-N01																	
ZPB-X3JB50-T01	ZPB-X3JF50-T01																	
ZPB-X3JB75-B01	ZPB-X3JF75-B01																	
ZPB-X3JB75-N01	ZPB-X3JF75-N01																	
ZPB-X3JB75-T01	ZPB-X3JF75-T01																	
ZPB-X3JB100-B01	ZPB-X3JF100-B01																	
ZPB-X3JB100-N01	ZPB-X3JF100-N01																	
ZPB-X3JB100-T01	ZPB-X3JF100-T01																	



Vacuum Equipment Precautions 1

Be sure to read this before handling.

Design/Selection

Warning

1. Confirm the specifications.

Products represented in this catalog are designed only for use in compressed air systems (including vacuum).

Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.)

Please contact SMC when using a fluid other than compressed air (including vacuum).

We do not guarantee against any damage if the product is used outside of the specification range.

2. Safe designs should be developed, which account for the possibility of accidents resulting from a drop in vacuum pressure due to power failure or trouble with the air supply, etc.

If vacuum pressure drops and there is a loss of vacuum pad adsorption force, work pieces being carried may fall, causing human injury or damage to machinery. Sufficient safety measures should be implemented, such as drop prevention, to avoid any accidents.

3. Follow vacuum specifications for vacuum switching valves and vacuum release valves.

If non-vacuum equipment is installed in a vacuum piping, vacuum leakage will occur. Therefore, select only equipment for vacuum specifications.

4. Select an ejector which has a suitable suction flow rate.

<When there is vacuum leakage from the workpiece or the piping>

If the ejector's suction flow rate is too low, the adsorption will be poor.

<When piping is long or the diameter is large>

The adsorption response time will delay due to the increased volume of the piping.

Select an ejector with a suitable suction flow rate by referring to the technical data.

5. If the suction flow rate is too high, setting of vacuum switch will become difficult.

Setting the vacuum switch when absorbing a small (few millimeter) workpiece will sometimes become difficult, if the selected ejector has a high suction rate and there is a small pressure difference when absorbing and releasing the workpiece.

6. When two or more pads are piped to one ejector, if one pad releases its workpiece, the other pads will also release.

When one pad releases its workpiece, there is a drop in vacuum pressure which causes the other pad to release its workpiece as well.

7. Do not disassemble the product or make any modifications, including additional machining.

It may cause human injury and/or an accident.

When disassembling or assembling the product for the purpose of replacing parts, etc., be certain to follow the operation manual or catalogs.

8. Check valve

SMC can issue no guarantees regarding the maintenance of workpiece adsorption when using check valves. Take separate safety measures to prevent work pieces from dropping in the case of an electrical power outage, etc.

Please consult with SMC when using check valves as a means of preventing interference caused by the exhaust from nearby ejectors.

Caution

1. Mounting the suction filter

Because the suction of vacuum equipment acts not only on work pieces but also on dust or water droplets in the surrounding atmosphere, steps must be taken to prevent their penetration into the equipment's interior.

Even when using equipment equipped with filters, if there is a considerable amount of dust in the environment, use a separately ordered large-size filter as well.

If there is a possibility of water droplets being sucked in by the vacuum, use a drain separator for vacuum.

2. The maximum vacuum pressure of the vacuum ejector is affected by the atmospheric pressure of the operating environment.

As atmospheric pressure changes based on altitude, climate, etc., the actual maximum vacuum pressure may not reach the value listed in the specifications.

3. For information on related items, such as directional control equipment and drive equipment, refer to the caution sections in each respective catalog.

4. Do not use the product in an environment that exposes it to vibration. If the product is used in such an environment, we can offer a lock nut type product to prevent it from loosening. Please contact SMC for model number.

Mounting

Warning

1. Operation manual

Install the products and operate them only after reading the operation manual carefully and understanding its contents. Also, keep the manual available whenever necessary.

2. Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance.

3. Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

4. Do not obstruct the exhaust port of the ejector.

If the exhaust port is obstructed when mounted, a vacuum will not be generated. Also, do not obstruct the exhaust port with the goal of removing the workpiece. It may cause damage to the equipment.



Vacuum Equipment Precautions 2

Be sure to read this before handling.

Piping

⚠ Caution


1. Refer to the Fittings and Tubing Precautions (Best Pneumatics No. 6) for handling one-touch fittings.

2. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

3. Wrapping of pipe tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

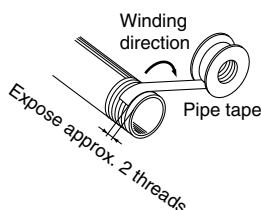

4. Use piping with an adequate conductance.

Select equipment and piping for the vacuum side which has an adequate conductance so that the ejector's maximum suction flow rate can be accommodated by the piping. Also, make sure that there are no unnecessary restrictions or leaks, etc., along the course of the piping. Furthermore, design of the air supply should be performed while taking into consideration the ejector's maximum air consumption and the air consumption of other pneumatic circuits.

5. Avoid disorganized piping.

Piping which is direct and of the shortest possible length should be used for both the vacuum and supply sides. Disorganized piping should be avoided. Unnecessary length increases the piping volume, and thus increases the response time.

6. Use piping with a large conductance on the exhaust side of the ejector.

If the exhaust piping is restrictive, there will be a decline in the ejector's performance.

7. Be certain that there are no crushed areas in the piping due to damage or bending.

Air Supply

⚠ Warning

1. Type of fluids

Please consult with SMC when using the product in applications other than compressed air.

2. When there is a large amount of drainage.

Compressed air containing a large amount of drainage can cause malfunction of pneumatic equipment. An air dryer or water separator should be installed upstream from filters.

Air Supply

⚠ Warning

3. Drain flushing

If condensation in the water separator and drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. It causes malfunction of pneumatic equipment.

If the drain bowl is difficult to check and remove, installation of a drain bowl with an auto drain option is recommended.

For compressed air quality, refer to SMC's Best Pneumatics catalog.

4. Use clean air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

Operating Environment

⚠ Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.

2. Do not use in a place subject to heavy vibration and/or shock.

3. Do not use in an environment where flammable gas or explosive gas exists. Usage may cause a fire or explosion. The products do not have an explosion proof construction.

4. The valve should not be exposed to prolonged sunlight. Use a protective cover.

5. Remove any sources of excessive heat.

6. In locations where there is contact with spatter from water, oil, solder, etc., take suitable protective measures.

7. In cases where the vacuum unit is surrounded by other equipment, etc., or the unit is energized for an extended time, take measures to exhaust excess heat so that the temperature should be within specifications.

⚠ Caution

1. Under certain conditions, the exhaust of the vacuum ejector may generate intermittent noises, and vacuum pressure may be uneven.

Using the ejector under these conditions will not result in decreased performance, but if the intermittent noise becomes a nuisance, or there is an adverse effect on the operation of the vacuum pressure switch, try lowering or raising the supply pressure of the vacuum ejector to find a supply pressure level at which the intermittent noise ceases.



Vacuum Equipment Precautions 3

Be sure to read this before handling.

Maintenance

Warning

1. Perform maintenance inspection according to the procedures indicated in the operation manual.

If handled improperly, malfunction and damage of machinery or equipment may occur.

2. Maintenance work

If handled improperly, compressed air can be dangerous. Assembly, handling, repair and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.

3. Drain flushing

Remove drainage regularly from the water separator, air filters, vacuum drain separator, etc.

4. Removal of equipment, and supply/exhaust of compressed air

When components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.

When machinery is restarted after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc. Then, confirm that the equipment is operating normally.

5. Clean suction filters and silencers on a regular basis.

The performance of an ejector will deteriorate due to clogged filters and silencers. High flow filters should be used, especially in dusty locations.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.



Caution:

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



Warning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- *1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.



Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.



Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: 03-5207-8249 Fax: 03-5298-5362
<http://www.smcworld.com>
© 2011 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice
and any obligation on the part of the manufacturer.

D-DN

1st printing PQ printing PQ 12450SZ Printed in Japan.

Vacuum Pad

ø1.5, ø2, ø3.5, ø4, ø6, ø8, ø10, ø13, ø16

New

RoHS


Overall length is shortened.

In the case of Flat type (Pad diameter: ø2)

Pad unit

Max. **0.35 inch shortened**
(9 mm)

Actual size

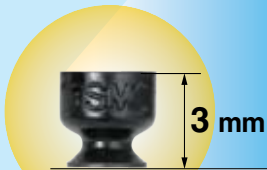

New **ZP3**


ZP(Conventional model)

12 mm

With adapter

Max. **0.43 inch shortened**
(11 mm)

Actual size

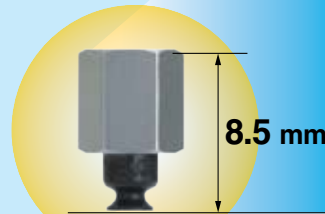


New **ZP3**

ZP(Conventional model)

19.5 mm


Space-saving

ø2 piping reduces working space!

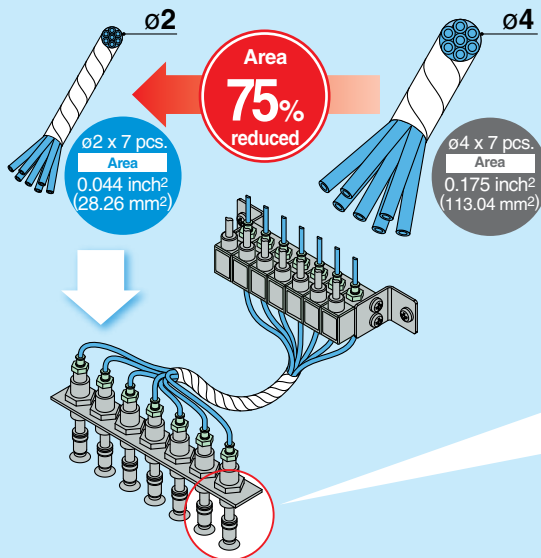

Vertical

- Male thread
- Female thread
- Barb fitting (Applicable tubing: ø2)
- One-touch fitting (Applicable tubing: ø2)

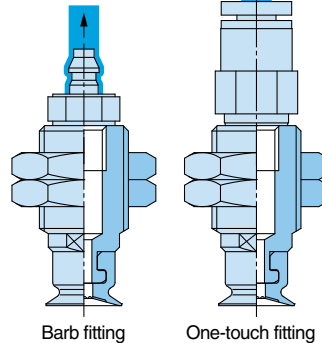


Barb fitting

One-touch fitting

Lateral

- Female thread
- Barb fitting (Applicable tubing: ø2)
- One-touch fitting (Applicable tubing: ø2)

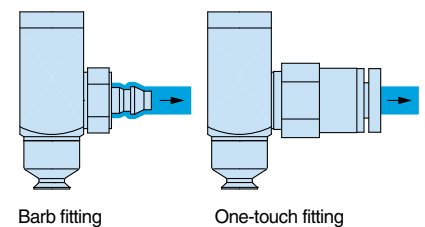

Barb fitting

One-touch fitting

Variations

Pad diameter ø1.5 added!

Type	Pad diameter								
	ø1.5	ø2	ø3.5	ø4	ø6	ø8	ø10	ø13	ø16
Flat									
Flat with groove									
Bellows									



Series **ZP3**

SMC
CAT.NAS100-100A

Excellent functions

New

Excellent functions

Adsorption surface is shot-blasted
Micro-dents and bumps on the surface facilitate easy removal.


With groove

Less contact surface with the workpiece makes it easy to remove.



Construction to prevent pad from coming off

New shape for connecting with the adapter prevents the pad from coming off.

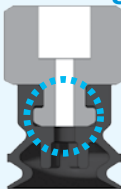



Pad diameter from $\phi 1.5$

Easier identification

SMC logo mark




Fixing boss allows easy mounting and repeatability.

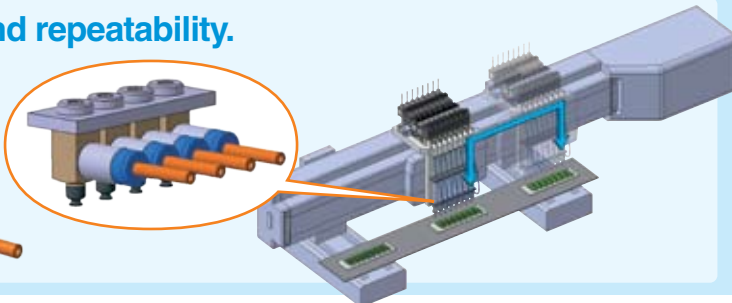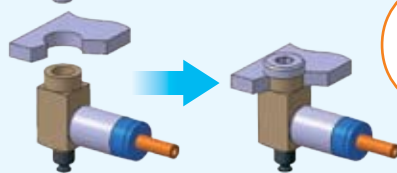

Compact buffer body

New

Overall length is shortened.

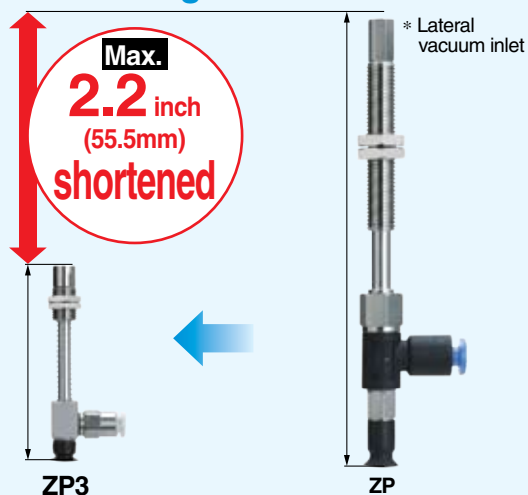

Pad diameter $\phi 8$, Flat, With one-touch fitting

ZP3

Stroke	Overall length (mm)
3	40
6	46
10	56
15	59
20	66.5
25	—

ZP

Stroke	Overall length (mm)
3	—
6	78.5
10	109.5
15	114.5
20	—
25	124.5

Short stroke type: 3 mm added




Buffer stroke

(* With bushing)


Pad diameter	Buffer specifications	Stroke (mm)				
		3	6	10	15	20
$\phi 1.5, \phi 2, \phi 3.5$	Rotating, Non-rotating	●	●	—	—	—
	Rotating	●	●	●	—	—
$\phi 4, \phi 6, \phi 8$ $\phi 10, \phi 13, \phi 16$	Rotating, With bushing	—	—	—	●	●
	Non-rotating	●	●	●	●	●

Wide selection of piping


Male thread

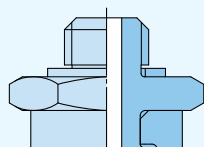

Female thread

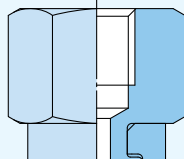


Barb fitting

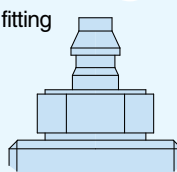




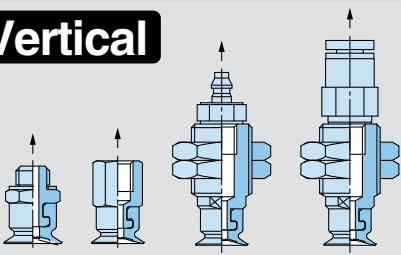
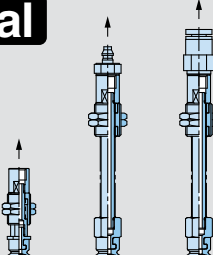
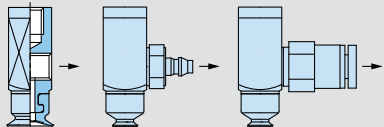
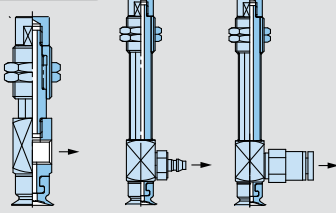
New For $\phi 2$ piping!

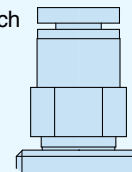One-touch fitting



Series Variations

Type	Pad diameter										Material	Page
	ø1.5	ø2	ø3.5	ø4	ø6	ø8	ø10	ø13	ø16			
 Flat For adsorption of general workpieces For adsorption of work pieces with flat and not deformed surface	●	●	●							NBR Silicone rubber Urethane rubber FKM Conductive NBR Conductive silicone rubber	P.1	
 Flat with groove For a workpiece which is likely to deform For releasing a workpiece certainly				●	●	●	●	●	●			
 Bellows For adsorption of work pieces with inclined surface				●	●	●	●	●	●			

Vacuum inlet direction	Buffer attachment	Vacuum inlet		Page
Vertical  ZP3-T □ □ □ - □	Without buffer (with adapter)	Male thread	M3, M5	P.3
		Female thread	M3, M5	
		Barb fitting	Polyurethane tubing ø2 Soft nylon/ Polyurethane tubing ø4, ø6	
		One-touch fitting	ø2, ø4, ø6	
Vertical  ZP3-T □ □ □ - J _{JB} □ □ - □	Stroke with buffer 3 mm 6 mm 10 mm 15 mm 20 mm	Female thread	M3, M5	P.15
		Barb fitting	Polyurethane tubing ø2 Soft nylon/ Polyurethane tubing ø4, ø6	
		One-touch fitting	ø2, ø4, ø6	
Lateral  ZP3-Y □ □ □ - □ □ - □	Without buffer (with adapter)	Female thread	M3, M5	P.25
		Barb fitting	Polyurethane tubing ø2 Soft nylon/ Polyurethane tubing be ø4, ø6	
		One-touch fitting	ø2, ø4, ø6	
Lateral  ZP3-Y □ □ □ - J _{JB} □ □ - □	Stroke with buffer 3 mm 6 mm 10 mm 15 mm 20 mm	Female thread	M3, M5	P.31
		Barb fitting	Polyurethane tubing ø2 Soft nylon/ Polyurethane tubing ø4, ø6	
		One-touch fitting	ø2, ø4, ø6	

Construction P.41
 Adapter Applicable Pad List P.42
 Buffer Applicable Pad List P.43

Mounting Adapter Part No. P.47
 Buffer Assembly Part No. P.49



Vacuum Pads Series ZP3/ZP2/ZP

Pad Diameter List



Series ZP3



Series ZP2



Series ZP

Pad type	Symbol																	
		0.8	1.1	1.5	2	3	3.5	4	5	6	7	8	9	10	11	13	14	15
Flat	U	—	—	★	★	●	★	● (Note)	—	○	—	○	—	○	—	○	—	—
	MU	—	—	—	● (Note)	—	● (Note)	● (Note)	● (Note)	● (Note)	—	● (Note)	—	● (Note)	—	—	—	● (Note)
	EU	—	—	—	● (Note)	—	—	● (Note)	—	● (Note)	—	●	—	—	—	—	—	●
	AU	—	—	—	●	●	—	●	—	●	—	●	—	—	—	—	—	—
Flat with rib	C	—	—	—	—	—	—	—	—	●	●	●	—	○	—	○	—	—
Flat with groove	UM	—	—	—	—	—	—	★	—	★	—	★	—	★	—	★	—	—
Thin flat	UT	—	—	—	—	—	—	—	●	●	—	—	—	○	●	○	●	—
Thin flat with rib	CT	—	—	—	—	—	—	—	—	—	—	—	—	○	—	○	—	—
Bellows	B	—	—	—	—	—	—	★	—	● (Note)	★	● (Note)	—	○	—	○	—	—
	J	—	—	—	—	—	—	—	—	●	—	—	●	● (Note)	—	—	●	● (Note)
	MB	—	—	—	—	—	—	● (Note)	—	● (Note)	—	● (Note)	—	● (Note)	—	—	—	● (Note)
	ZJ	—	—	—	●	—	—	●	●	●	—	—	—	—	—	—	—	—
Deep	D	—	—	—	—	—	—	—	—	—	—	—	—	○	—	—	—	—
Nozzle pad	AN	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Flat pad	MT	—	—	—	—	—	—	—	—	—	—	—	—	● (Note)	—	—	—	● (Note)
Oval	W	—	—	—	—	—	3.5 x 7	4 x 10 4 x 20 4 x 30	5 x 10 5 x 20 5 x 30	6 x 10 6 x 20 6 x 30	—	8 x 20 8 x 30	—	—	—	—	—	—
	U	—	—	—	2 x 4	—	3.5 x 7	4 x 10	—	—	—	—	—	—	—	—	—	—
Heavy-duty pad	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	HT	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	HB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	HW	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Mark-free pad	U	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	—
	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Sponge pad	S	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	●
Resin attachment	K	—	—	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—
Pad with ball spline buffer	U	—	—	—	●	—	—	●	—	●	—	●	—	—	—	—	—	—
Heavy-duty ball joint pad	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	HB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

* Cyclone pad (Non-contact pad)

Made to Order

Note) The ZP2 series is blast type.

Features 3
■ Products other than above

Vacuum pad for transferring disks



ZP2
ES100-76

Vacuum pad for fixing panel



ZP2
ES100-76


Vacuum saving valve



ZP2
ES100-76

* The ZP3 series is available from $\phi 1.5$ to $\phi 16$. If you need other sizes or shapes, please choose from ZP or ZP2 series.

Pad Diameter List





































































































* : Refer to SMC website in Best Pneumatics No. 4 for details of the ZP series.

SMC vacuum pad









Search 

<http://www.smcworld.com>

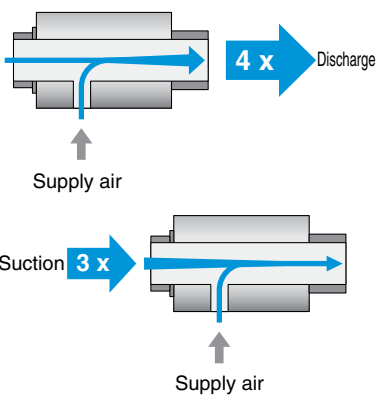Catalogs

Pad diameter																		Symbol					
	16	18	20	25	30	32	40	46	50	63	80	100	125	150	250	300	340						
		—			—			—		—	—	—	—	—	—	—	—	U					
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	MU	—		—		
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	EU	—		—		
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AU	—		—		
		—			—			—		—	—	—	—	—	—	—	—	C	—				
		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	UM				—	
				—	—	—	—	—	—	—	—	—	—	—	—	—	—	UT	—			—	
		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	CT	—			—	
	 	—			—			—		—	—	—	—	—	—	—	—	B					
		—	—	Note)	Note)	—	—	—	—	—	—	—	—	—	—	—	—	J	—			—	
	—	—		—	—	—	—	—	—	—	—	—	—	—	—	—	—	MB	—			—	
	—	—	—	—	—	—			—	—	—	—	—	—	—	—	—	ZJ	—			—	
		—	—		—	—		—	—	—	—	—	—	—	—	—	—	—	D	—	—		
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AN	—		—	
	—	—	Note)	Note)	Note)	—	—	—	—	—	—	—	—	—	—	—	—	—	MT	—		—	
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	W	—			
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U	—			
	—	—	—	—	—			—						—	—			H	—				
	—	—	—	—	—	—	—	—	—	—	—	—	—			—	—	HT	—				
	—	—	—	—	—			—							—	—	—	HB	—				
	—	—	—	—	30 x 50 	—	—	—	—	—	—	—	—	—	—	—	—	—	HW			—	
		—	—		—			—		—	—	—	—	—	—	—	—	—	U	—			
	—	—	—	—	—	—		—						—	—	—	—	H	—				
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	S	—				
		—			—		—	—	—	—	—	—	—	—	—	—	—	K	—				
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U	—			
	—	—	—	—	—	—		—						—	—	—	—	H	—				
	—	—	—	—	—	—		—						—	—	—	—	—	HB	—			

Related Products

Variations		Note
<p>Vacuum Flow ZH□-□-X185 <i>Made to Order</i></p> <ul style="list-style-type: none"> ■ A blow flow rate 4 times the supply air ■ A vacuum flow rate 3 times the supply air <p>A discharge flow rate 4 times the supply air can be generated. Contributes to reduction in flow consumption if discharge requires flow rate.</p>  <p>A suction flow rate 3 times the supply air can be generated. Contributes to reduction in flow consumption if suction requires flow rate.</p>		—
<p>Vacuum Saving Valve ZP2V</p> <ul style="list-style-type: none"> ■ Can restrict the reduction of vacuum pressure even when there is no workpiece. ■ No need for switching operation when changing workpieces. ■ Multiple vacuum pads can be operated by one ejector. 		<p>Connection thread size for pad side</p> <ul style="list-style-type: none"> • M5 x 0.8 • M6 x 1 • M8 x 1.25 • R1/8 • Rc1/8 • G1/8 • NPT1/8
<p>Space Saving Vacuum Ejector/ Pump System ZQ</p> <ul style="list-style-type: none"> ■ Width: 10 mm Weight: 109 g <p>(Single unit, with vacuum pressure switch and suction filter)</p>		—
<p>Multistage Ejector ZL</p> <ul style="list-style-type: none"> ■ Suction flow rate increased by a 3 stage diffuser construction. <p>(Max. 200 L/min (ANR))</p>		—
<p>Air Suction Filter with One-touch Fittings/ In-line Type ZFC</p> <ul style="list-style-type: none"> ■ IN/OUT straight piping ■ One-touch fittings for easy installation and remove ■ Lightweight molded resin parts ■ Cartridge type allows element replacement. 		—
<p>SMC Design Support Software Ver.2.0</p> <ul style="list-style-type: none"> ■ Model Selection Software ■ Vacuum Adsorption Transfer System Selection Software ■ Electric Actuator Selection Software ■ SMC Draw Ver.1.0 Pneumatic Circuit Drawing Software ■ Guide Cylinder Selection Software ■ Energy Saving Software 		—

Vacuum Equipment Model Selection

CONTENTS

1	Features and Precautions for Vacuum Adsorption	Front matter 2
2	Vacuum Pad Selection	Front matter 2
	<ul style="list-style-type: none">● Vacuum Pad Selection Procedures● Points for Selecting Vacuum Pads<ul style="list-style-type: none">A. Theoretical Lifting ForceB. Shear Force and Moment Applied to Vacuum Pad● Lifting Force and Vacuum Pad Diameter<ul style="list-style-type: none">1. Theoretical Lifting Force● Vacuum Pad Type● Vacuum Pad Material● Rubber Material and Properties● Color and Identification● Buffer Attachment● Pad Selection by Workpiece Type● Vacuum Pad Durability	
3	Selection of Vacuum Ejector and Vacuum Switching Valve	Front matter 8
	<ul style="list-style-type: none">● Calculating Vacuum Ejector and Switching Valve Size with the Formula	
4	Leakage Volume during Workpiece Adsorption	Front matter 8
	<ul style="list-style-type: none">● Leakage Volume from Conductance of Workpiece● Leakage Volume from Adsorption Test	
5	Adsorption Response Time	Front matter 9
	<ul style="list-style-type: none">● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated● Calculating Adsorption Response Time with the Formula● Adsorption Response Time from the Selection Graph	
6	Precautions on Vacuum Equipment Selection and SMC's Proposal	Front matter 11
	<ul style="list-style-type: none">● Safety Measures● Precautions on Vacuum Equipment Selection● Vacuum Ejector or Pump and Number of Vacuum Pads● Vacuum Ejector Selection and Handling Precautions● Supply Pressure of Vacuum Ejector● Timing for Vacuum Generation and Suction Verification<ul style="list-style-type: none">A. Timing for Vacuum GenerationB. Suction VerificationC. Set Pressure for Vacuum Pressure Switch● Dust Handling of Vacuum Equipment	
7	Vacuum Equipment Selection Example	Front matter 15
	<ul style="list-style-type: none">● Transfer of Semiconductor Chips	
8	Data	Front matter 16
	<ul style="list-style-type: none">● Selection Graph● Glossary of Terms● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting)● Non-conformance Examples● Time of Replacement of Vacuum Pad	

Model Selection

1 Features and Precautions for Vacuum Adsorption

Vacuum adsorption system as a method to hold a workpiece has the following features. But it is also necessary to note some precautions.

Features and precautions of vacuum

Features	<ul style="list-style-type: none">• Easy construction• Compatible with any place where adsorption is possible.• Compatible with soft and easily-deformed workpieces• Available when the space around the workpiece is limited.
Precautions	<ul style="list-style-type: none">• Workpiece may drop under certain conditions since it is transferred being adsorbed.• Liquid or foreign matter around the workpiece may be sucked into the equipment.• Large adsorption area is necessary to get large gripping force.• Vacuum pad (rubber) may deteriorate.• Precise positioning is difficult.

Fully understand the features above and select the equipment that suits your operating conditions.

2 Vacuum Pad Selection

● Vacuum Pad Selection Procedures

- 1) Fully taking into account the balance of a workpiece, identify the adsorption positioning, number of pads and applicable pad diameter (or pad area).
- 2) Find the theoretical lifting force from the identified adsorption area (pad area x number of pads) and vacuum pressure, and then find the lifting force considering actual lifting and safety factor of transfer condition.
- 3) Determine a pad diameter (or pad area) that is sufficient to ensure the lifting force is greater than the workpiece mass.
- 4) Determine the pad type and materials, and the necessity of buffer based on the operating environment, and the workpiece shape and materials.

The above shows selection procedures for general vacuum pads; thus, they will not be applicable for all pads. Customers are required to conduct a test on their own and to select applicable adsorption conditions and pads based on the test results.

● Points for Selecting Vacuum Pads

A. Theoretical Lifting Force

- The theoretical lifting force is determined by vacuum pressure and contact area of the vacuum pad.
- Since the theoretical lifting force is the value measured at the static state, the safety factor responding to the actual operating conditions must be estimated in the actual operation.
- It is not necessarily true that higher vacuum pressure is better. Extremely high vacuum pressure may cause problems.
 - When the vacuum pressure is unnecessarily high, pads are likely to be worn out quickly and cracked, which makes the pad service life shorter.
 - Doubling the vacuum pressure makes the theoretical lifting force double, while doubling the pad diameter makes the theoretical lifting force quadruple.
 - When the vacuum pressure (set pressure) is high, it makes not only response time longer, but also the necessary energy to generate a vacuum larger.

Example) Theoretical lifting force = Pressure x Area 2 times →

Pad diameter \ Area (cm ²)		Vacuum pressure [-40 kPa]	Vacuum pressure [-80 kPa]
ø6	0.28	Theoretical lifting force 1.1 N	Theoretical lifting force 2.2 N
ø16	2.01	Theoretical lifting force 8.0 N	Theoretical lifting force 16.1 N

↓
4 times

B. Shear Force and Moment Applied to Vacuum Pad


- Vacuum pads are not resistant to shear force (parallel force with adsorption surface) and moment.
- Minimize the moment applied to the vacuum pad with the position of the workpiece center of gravity in mind.
- The acceleration rate of the movement must be as small as possible, and make sure to take into consideration the wind pressure and impact. If measures to slow down the acceleration rate are introduced, safety to prevent the workpiece from dropping will improve.
- Avoid lifting the workpiece by adsorbing the vertical side with a vacuum pad (vertical lifting) if possible. When it is unavoidable, a sufficient safety factor must be secured.

Lifting Force, Moment, Horizontal Force

To lift a workpiece vertically, make sure to take into consideration the acceleration rate, wind pressure, impact, etc., in addition to the mass of the workpiece. (Refer to Fig. 1)


Because the pads are susceptible to moments, mount the pad so as not to allow the workpiece to create a moment. (Refer to Fig. 2)

When a workpiece that is suspended horizontally is moved laterally, the workpiece could shift depending on the extent of the acceleration rate or the size of the friction coefficient between the pad and the workpiece. Therefore, the acceleration rate of the lateral movement must be minimized. (Refer to Fig. 3)

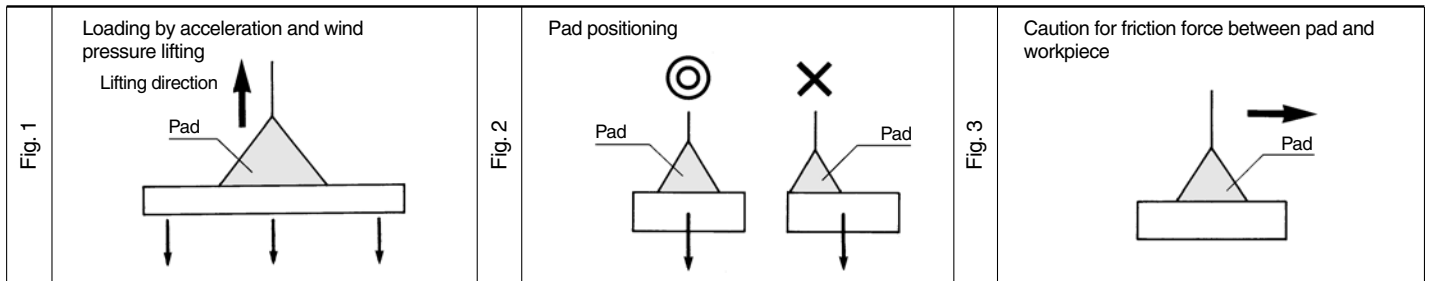


Balance of Pad and Workpiece

Make sure that the pad's suction surface is not larger than the surface of the workpiece to prevent vacuum leakage and unstable picking.

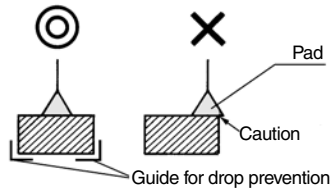


If multiple pads are used for transferring a flat object with a large surface area, properly allocate the pads to maintain balance. Also make sure that the pads are aligned properly to prevent them from becoming disengaged along the edges.

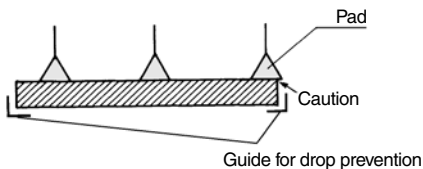

Provide an auxiliary device (example: a guide for preventing the workpieces from dropping) as necessary.

Mounting Position

As a rule, the unit must be installed horizontally. Although a diagonal or a vertical installation should be avoided whenever possible, if the unit must be installed in such a manner, be certain to guarantee guide and absolute safety.

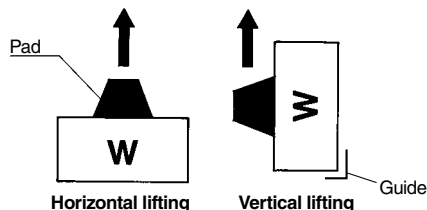

Model Selection

● Lifting Force and Vacuum Pad Diameter

1. Theoretical Lifting Force

- Set the vacuum pressure below the pressure that has been stabilized after adsorption.
- However, when a workpiece is permeable or has a rough surface, note that the vacuum pressure drops since the workpiece takes air in. In such a case, carry out an adsorption test for confirmation.
- The vacuum pressure when using an ejector is approximately –60 kPa as a guide.

The theoretical lifting force of a pad can be found by calculation or from the theoretical lifting force table.

Calculation


$$W = P \times S \times 0.1 \times \frac{1}{t}$$

W : Lifting force (N)

P : Vacuum pressure (kPa)

S : Pad area (cm²)

t : Safety factor Horizontal lifting: 4 or more
 Vertical lifting: 8 or more

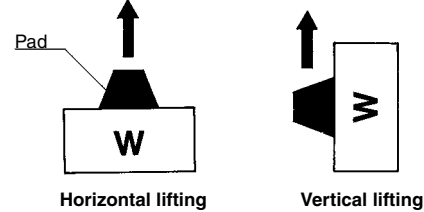

(This type of application should basically be avoided.)

Theoretical Lifting Force

The theoretical lifting force (not including the safety factor) is found from the pad diameter and vacuum pressure. The required lifting force is then found by dividing the theoretical lifting force by the safety factor **t**.

Lifting force = Theoretical lifting force ÷ t

(1) Theoretical Lifting Force (Theoretical lifting force = $P \times S \times 0.1$)




(N)

Pad diameter (mm)		ø1.5	ø2	ø3.5	ø4	ø6	ø8	ø10	ø13	ø16
Pad area S (cm ²)		0.02	0.03	0.10	0.13	0.28	0.50	0.79	1.33	2.01
Vacuum pressure (kPa)	–85	0.15	0.27	0.82	1.07	2.4	4.2	6.6	11.3	17.1
	–80	0.14	0.25	0.77	1.00	2.2	4.0	6.2	10.6	16.1
	–75	0.13	0.24	0.72	0.94	2.1	3.7	5.8	10.0	15.1
	–70	0.12	0.22	0.67	0.88	1.9	3.5	5.5	9.3	14.1
	–65	0.11	0.20	0.63	0.82	1.8	3.2	5.1	8.6	13.1
	–60	0.11	0.19	0.58	0.75	1.7	3.0	4.7	8.0	12.1
	–55	0.10	0.17	0.53	0.69	1.5	2.7	4.3	7.3	11.1
	–50	0.09	0.16	0.48	0.63	1.4	2.5	3.9	6.7	10.0
	–45	0.08	0.14	0.43	0.57	1.2	2.2	3.5	6.0	9.0
	–40	0.07	0.13	0.38	0.50	1.1	2.0	3.1	5.3	8.0

● Vacuum Pad Type

- Flat type, flat with groove and bellows type are available in the ZP3 series. Select the appropriate shape to suit the workpiece and operating environment.

Pad Type

Pad type	Application
Flat 	To be used when adsorption surface of a workpiece is flat and not deformed.
Flat with groove 	To be used to ensure removal of a workpiece.
Bellows 	To be used when there is not enough space to install a buffer or adsorption surface of a workpiece is inclined.

● Vacuum Pad Material

- It is necessary to determine vacuum pad materials carefully taking into account the workpiece shape, adaptability in the operating environment, effect after being adsorbed, electrical conductivity, etc.
- Based on the workpiece transfer example for each material, select after confirming the characteristics (adaptability) of rubber.

Vacuum Pad/Example of Workpiece Transfer

Material

Material	Application
NBR	Transfer of general workpieces, Corrugated board, Veneer plate, Iron plate and others
Silicone rubber	Semiconductor, Removing from die-casting, Thin workpieces, Food processor
Urethane rubber	Corrugated board, Iron plate, Veneer plate
FKM	Chemical workpieces
Conductive NBR	General workpieces of semiconductor (Static electricity resistance)
Conductive silicone rubber	Semiconductor (Static electricity)

Model Selection

● Rubber Material and Properties

General name		NBR (Nitrile rubber)	Silicone rubber	Urethane rubber	FKM (Fluoro rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber
Main features		Good oil resistance, abrasion resistance, and aging resistance	Excellent heat resistance, and cold resistance	Excellent mechanical strength	Best heat resistance, and chemical resistance	Good oil resistance, abrasion resistance, and aging resistance. Conductive	Very excellent heat resistance, and cold resistance. Conductive
Pure gum property (specific gravity)		1.00-1.20	0.95-0.98	1.00-1.30	1.80-1.82	1.00-1.20	0.95-0.98
Physical properties of blended gum	Impact resilience	○	◎	◎	△	○	◎
	Abrasion resistance	◎	×/△	◎	◎	◎	×/△
	Tear resistance	○	×/△	◎	○	○	×/△
	Flex crack resistance	○	×/○	◎	○	○	×/○
	Maximum operation temperature °C	120	200	60	250	100	200
	Minimum operation temperature °C	0	-30	0	0	0	-10
	Volume resistivity (Ωcm)	—	—	—	—	10 ⁴ or less	10 ⁴ or less
	Heat aging	○	◎	△	◎	○	◎
	Weather resistance	○	◎	◎	◎	○	◎
	Ozone resistance	△	◎	◎	◎	△	◎
	Gas permeability resistance	○	×/△	×/△	×/△	○	×/△
Chemical resistance Oil resistance	Gasoline/Gas oil	◎	×/△	◎	◎	◎	×/△
	Benzene/Toluene	×/△	×	×/△	◎	×/△	×
	Alcohol	◎	◎	△	△/◎	◎	◎
	Ether	×/△	×/△	×	×/△	×/△	×/△
	Ketone (MEK)	×	○	×	×	×	○
	Ethyl acetate	×/△	△	×/△	×	×/△	△
Alkaline resistance Acid resistance	Water	◎	○	△	◎	◎	○
	Organic acid	×/△	○	×	△/○	×/△	○
	Organic acid of high concentration	△/○	△	×	◎	△/○	△
	Organic acid of low concentration	○	○	△	◎	○	○
	Strong alkali	○	◎	×	○	○	◎
	Weak alkali	○	◎	×	○	○	◎

◎ = Excellent --- Not affected at all, or almost no effect

○ = Good --- Affected a little, but adequate resistance depending on conditions

△ = Better not to use if possible

× = Unsuitable for usage. Severely affected.

* Properties, chemical resistance, and other values are not guaranteed. These values depend on the operating environment, so they cannot be guaranteed by SMC. Thorough research and confirmation are necessary before usage.

● Color and Identification



General name		NBR (Nitrile rubber)	Silicone rubber	Urethane rubber	FKM (Fluoro rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber
Color of rubber		Black	White	Brown	Black	Black	Black
Identification (Dot)		—	—	—	· Green 1 dot	· Silver 1 dot	· Pink 1 dot
Rubber hardness HS (±5°)		A60/S					

● Buffer Attachment

- Choose buffer type when the workpieces are of varying heights, the workpieces are fragile, or you need to reduce the impact to the pad.
- If rotation needs to be limited, use non-rotating buffer.

Unsteady Distance between Pad and Workpiece

When the workpieces are of varying heights, use the buffer type pad with built-in spring. The spring creates a cushion effect between the pad and the workpieces. If rotation needs to be limited further, use non-rotating buffer type.

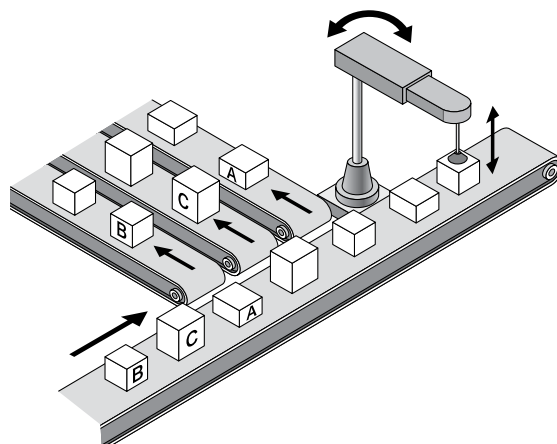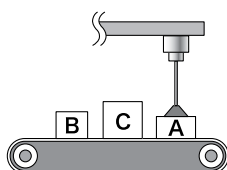


● Pad Selection by Workpiece Type

- Carefully select a pad for the following workpieces.


1. Porous Workpiece

To pick a permeable workpiece such as paper, select a pad with a small diameter that is sufficient to lift the workpiece. Because a large amount of air leakage could reduce the pad's suction force, it may be necessary to increase the capacity of an ejector or vacuum pump or enlarge the conductance area of the piping passage.

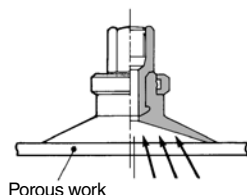


2. Flat Plate Workpiece

When a workpiece with a large surface area such as sheet glass or PCB is suspended, the workpiece could move in a wavelike motion if a large force is applied by wind pressure or by an impact. Therefore, it is necessary to ensure the proper allocation and size of pads.

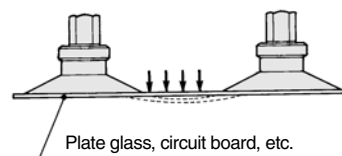


3. Soft Workpiece

If a soft workpiece such as vinyl, paper, or thin sheet is picked up, the vacuum pressure could cause the workpiece to deform or wrinkle. In such a case, it will be necessary to use a small pad or a ribbed pad and reduce the vacuum pressure.

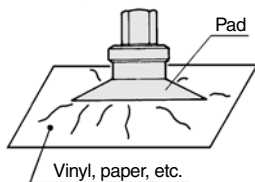

4. Impact to Pad

When pushing a pad to a workpiece, make sure not to apply an impact or a large force which would lead to premature deformation, cracking, or wearing of the pad. The pad should be pushed against the workpiece to the extent that its skirt portion deforms or that its ribbed portion comes into slight contact with the workpiece. Especially, when using a smaller diameter pad, make sure to locate it correctly.

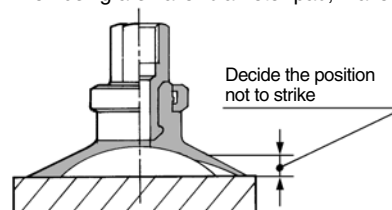

● Vacuum Pad Durability

- Need to be careful of the vacuum pad (rubber) deterioration.
- The vacuum pad's adsorption surface will be worn out when it is used for a certain period of time, and the outer diameter gradually becomes smaller. The lifting force becomes weaker as the pad diameter becomes smaller, but adsorption is still possible.
- Decide when to replace the vacuum pads, taking into account the customer's operating conditions, and signs of deterioration such as changes in the appearance due to wear, reduction in the vacuum pressure that is reached, and delay in the adsorption response time.

Model Selection

3 Selection of Vacuum Ejector and Vacuum Switching Valve

● Calculating Vacuum Ejector and Switching Valve Size with the Formula

Average suction flow rate for achieving adsorption response time

$$Q = \frac{V \times 60}{T_1} + Q_L$$

$$T_2 = 3 \times T_1$$

Q : Average suction flow rate L/min (ANR)

V : Piping capacity (L)

T₁ : Arrival time to stable **P_v** 63% after adsorption (sec)

T₂ : Arrival time to stable **P_v** 95% after adsorption (sec)

Q_L : Leakage volume during workpiece adsorption L/min (ANR) ^{Note 1)}

Max. suction flow rate

$$Q_{\max} = (2 \text{ to } 3) \times Q \text{ L/min (ANR)}$$

<Selection Procedure>

• Ejector

Select the ejector with the greater maximum suction flow rate from the **Q_{max}** indicated above.

• Direct operation valve

$$\text{Conductance } C = \frac{Q_{\max}}{55.5} [\text{dm}^3/(\text{s} \cdot \text{bar})]$$

* Select a valve (solenoid valve) having a conductance that is greater than that of the conductance **C** formula given above from the related equipment (page 1278 in Best Pneumatics No. 4).

Note 1) **Q_L**: 0 when no leakage occurs during adsorbing a workpiece.



If there is leakage during adsorbing a workpiece, find the leakage volume based on "4. Leakage Volume during Workpiece Adsorption."

Note 2) Tube piping capacity can be found in "8. Data: Piping Capacity by Tube I.D. (Selection Graph (2))."

4 Leakage Volume during Workpiece Adsorption

Air could be drawn in depending on the type of workpiece. As a result, the vacuum pressure in the pad becomes reduced and the amount of vacuum that is necessary for adsorption cannot be attained.

When this type of workpiece must be handled, it is necessary to select the proper size of the ejector and the vacuum switching valve by taking into consideration the amount of air that could leak through the workpiece.

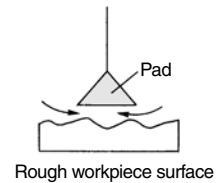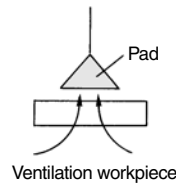

● Leakage Volume from Conductance of Workpiece

$$\text{Leakage volume } Q_L = 55.5 \times C_L$$


Q_L: Leakage volume L/min (ANR)

C_L: Conductance between workpiece and pad, and workpiece opening area [dm³/(s·bar)]

● Leakage Volume from Adsorption Test

As described in the illustration below, pick up the workpiece with the ejector, using an ejector, pad and a vacuum gauge.

At this time, read vacuum pressure **P_i**, obtain the suction flow rate from the flow-rate characteristics graph for the ejector that is being used, and render this amount as the leakage of the workpiece.

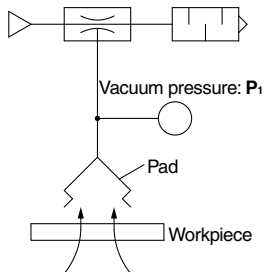

Exercise: Using a supply pressure of 0.45 MPa, when the ejector (ZH07□S) picks up a workpiece that leaks air, the vacuum gauge indicated a pressure of -53 kPa. Calculate the leakage volume from the workpiece.


<Selection Procedure>

When obtaining the suction flow rate at a vacuum pressure of -53 kPa from the ZH07DS flow-rate characteristics graph, the suction flow rate is 5 L/min (ANR). (A)→(B)→(C)

$$\text{Leakage volume} \approx \text{Suction flow rate } 5 \text{ L/min (ANR)}$$


ZH07BS, ZH07DS

Exhaust Characteristics

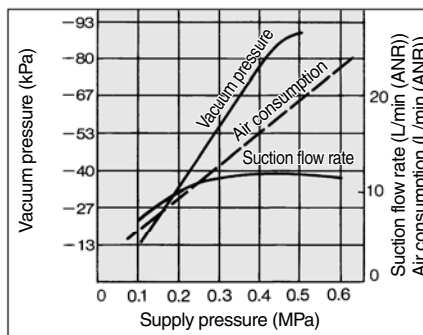

Flow-rate Characteristics

Supply pressure (0.45 MPa)

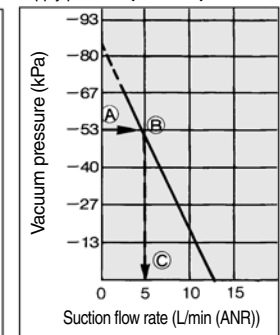


5 Adsorption Response Time

When a vacuum pad is used for the adsorption transfer of a workpiece, the approximate adsorption response time can be obtained (the length of time it takes for the pad's internal vacuum pressure to reach the pressure that is required for adsorption after the supply valve {vacuum switching valve} has been operated). An approximate adsorption response time can be obtained through formulas and selection graphs.


● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

The relationship between vacuum pressure and response time after the supply valve (switching valve) is operated as shown below.

Vacuum System Circuit

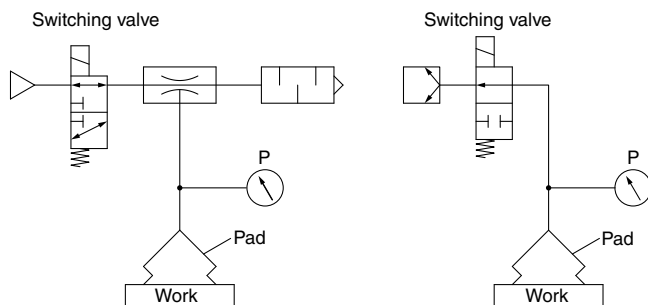

Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

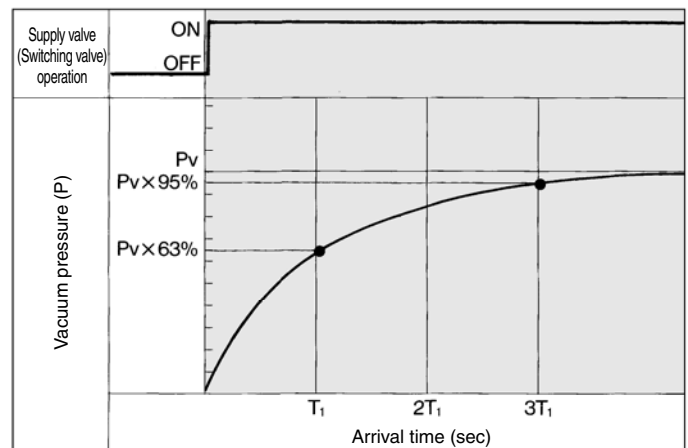

Pv: Final vacuum pressure
T₁: Arrival time to 63% of final vacuum pressure **Pv**
T₂: Arrival time to 95% of final vacuum pressure **Pv**

● Calculating Adsorption Response Time with the Formula

Adsorption response times **T₁** and **T₂** can be obtained through the formulas given below.

Adsorption response time $T_1 = \frac{V \times 60}{Q}$

Adsorption response time $T_2 = 3 \times T_1$

Piping capacity

$$V = \frac{3.14}{4} D^2 \times L \times \frac{1}{1000} \text{ (L)}$$

T₁: Arrival time to 63% of final vacuum pressure **Pv** (sec)

T₂: Arrival time to 95% of final vacuum pressure **Pv** (sec)

Q₁: Average suction flow rate L/min [ANR]

Calculation of average suction flow rate

• Ejector

$$Q_1 = (1/2 \text{ to } 1/3) \times \text{Ejector max. suction flow rate L/min [ANR]}$$

• Vacuum pump

$$Q_1 = (1/2 \text{ to } 1/3) \times 55.5 \times \text{Conductance of vacuum pump [dm}^3\text{/(s.bar)]}$$

D: Piping diameter (mm)

L: Length from ejector and switch valve to pad (m)

V: Piping capacity from ejector and switching valve to pad (L)

Q₂: Max. flow from ejector and switching valve to pad by piping system

$$Q_2 = C \times 55.5 \text{ L/min [ANR]}$$

Q: Smaller one between the **Q₁** and **Q₂** L/min [ANR]

C: Conductance of piping [dm³/(s.bar)]

For the conductance, the equivalent conductance can be found in "8. Data: Conductance by Tube I.D. (Selection Graph (3))."

Model Selection

● Adsorption Response Time from the Selection Graph


1. Tube Piping Capacity

Piping capacity from the ejector and switching valve at vacuum pump to the pad can be found in “8. Data: Piping Capacity by Tube I.D. (Selection Graph (2)).”

2. Obtain the adsorption response times.

By operating the supply valve (switching valve) that controls the ejector (vacuum pump), the adsorption response times T_1 and T_2 that elapsed before the prescribed vacuum pressure is reached can be obtained from the Selection Graph (1).

Selection Graph (1) Adsorption Response Time

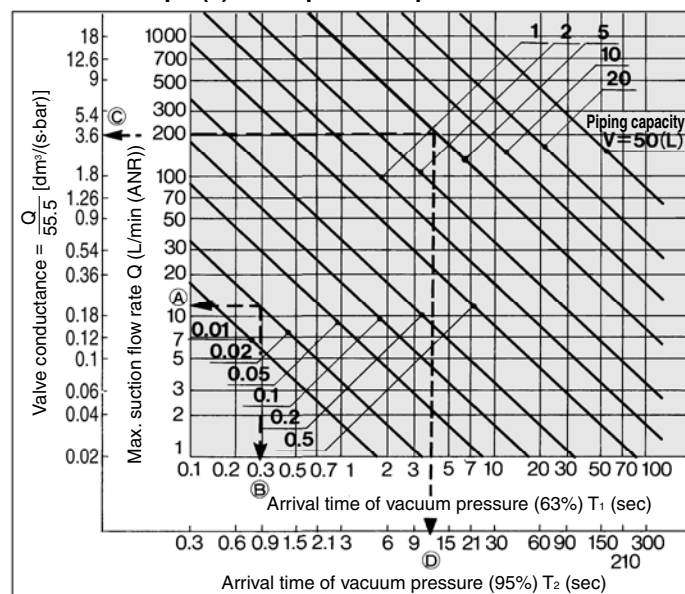

* Conversely, the size of the ejector or the size of the switching valve of the vacuum pump system can be obtained from the adsorption response time.

How to read the graph

Example 1: For obtaining the adsorption response time until the pressure in the piping system with a piping capacity of 0.02 L is discharged to 63% (T_1) of the final vacuum pressure through the use of the vacuum ejector ZH07□S with a maximum suction flow rate of 12 L/min (ANR).

<Selection Procedure>

From the point at which the vacuum ejector's maximum vacuum suction flow rate of 12 L/min (ANR) and the piping capacity of 0.02 L intersect, the adsorption response time T_1 that elapses until 63% of the maximum vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (A)→(B)) $T_1 \approx 0.3$ seconds.

Example 2: For obtaining the discharge response time until the internal pressure in the 5 L tank is discharged to 95% (T_2) of the final vacuum pressure through the use of a valve with a conductance of 3.6 [dm³/(s·bar)].

<Selection Procedure>

From the point at which the valve's conductance of 3.6 [dm³/(s·bar)] and the piping capacity of 5 L intersect, the discharge response time (T_2) that elapses until 95% of the final vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (C)→(D)) $T_2 \approx 12$ seconds.


6 Precautions on Vacuum Equipment Selection and SMC's Proposal

● Safety Measures

- Make sure to provide a safe design for a vacuum pressure drop due to a disruption of power supply, or a lack of supply air. Drop prevention measures must be taken in particular when dropping a workpiece presents some degree of danger.


● Precautions on Vacuum Equipment Selection

As a countermeasure for power outages, select a supply valve that is normally open or one that is equipped with a self-holding function.

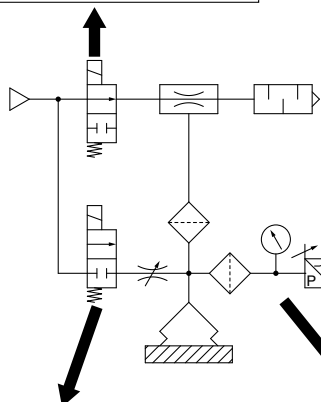


For the release valve, select a 2/3 port valve with a low vacuum specification. Also, use a needle valve to regulate the release flow rate.

- During the adsorption and transfer of a workpiece, verification of the vacuum switch is recommended.
- In addition, visually verify the vacuum gauge when handling a heavy or a hazardous item.
- The ZSP1 type is optimal for the adsorption and transfer of small parts using a suction nozzle with a small diameter.
- Install a filter (Series ZFA, ZFB, ZFC) before the pressure switch if the ambient air is of low quality.



Select a vacuum switching valve that has a conductance that does not reduce the composite conductance consisting of the areas from the pad to the ejector.

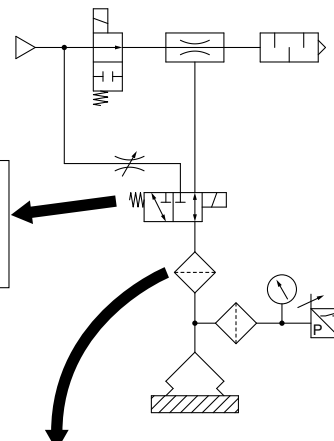

Use a suction filter (Series ZFA, ZFB, ZFC) to protect the switching valve and to prevent the ejector from becoming clogged. Also, a suction filter must be used in a dusty environment. If only the unit's filter is used, it will become clogged quickly.

● Vacuum Ejector or Pump and Number of Vacuum Pads

Ejector and number of pads		Vacuum pump and number of pads	
Ideally, one pad should be used for each ejector.	When more than one pad is attached to a single ejector, if one of the workpieces becomes detached, the vacuum pressure will drop, causing other workpieces to become detached. Therefore, the countermeasures listed below must be taken. <ul style="list-style-type: none"> • Adjust the needle valve to minimize the pressure fluctuation between adsorption and non-adsorption operations. • Provide a vacuum switching valve to each individual pad to minimize the influences on other pads if an adsorption error occurs. 	Ideally, one pad should be used for each line.	When more than one pad is attached to a single vacuum line, take the countermeasures listed below. <ul style="list-style-type: none"> • Adjust the needle valve to minimize the pressure fluctuation between adsorption and non-adsorption operation. • Include a tank and a vacuum pressure reduction valve (vacuum pressure regulator valve) to stabilize the source pressure. • Provide a vacuum switching valve to each individual pad to minimize the influences on other pads if an adsorption error occurs.


Model Selection

● Vacuum Ejector Selection and Handling Precautions


Ejector Selection

There are 2 types of ejector flow-rate characteristics: the high vacuum type (S type) and the high flow type (L type). During the selection, pay particular attention to the vacuum pressure when adsorbing workpieces that leak.

High Vacuum Type Flow-rate Characteristics/ ZH13□S

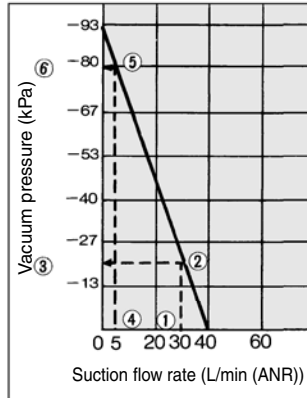

High Flow Type Flow-rate Characteristics/ ZH13□L

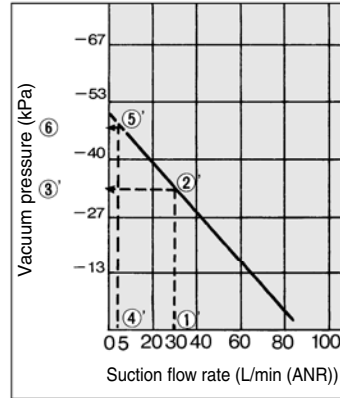

The vacuum pressure varies in accordance with the leakage volumes indicated in the above diagrams.

If the leakage volume is 30 L/min (ANR), the vacuum pressure of the S type is -20 kPa ① → ② → ③, and for the L type it is -33 kPa ①' → ②'. If the leakage volume is 5 L/min (ANR), the vacuum pressure of the S type is -80 kPa ④ → ⑤ → ⑥, and for the L type it is -47 kPa ④' → ⑤' → ⑥'. Thus, if the leakage volume is 30 L/min (ANR) the L type can attain a higher vacuum pressure, and if the leakage volume is 5 L/min (ANR), the S type can attain a higher vacuum pressure.

Thus, during the selection process, make sure to take the flow-rate characteristics of the high vacuum type (S type) and the high flow type (L type) into consideration in order to select the type that is optimal for your application.


- If the vacuum ejector makes an intermittent noise (abnormal noise) from exhaust at a certain supply pressure, the vacuum pressure will not be stable. It will not be any problem if the vacuum ejector is used under this condition. However, if the noise is disturbing or might affect the operation of the vacuum pressure switch, lower or raise supply pressure a little at a time, and use in an air pressure range that does not produce the intermittent noise.

● Supply Pressure of Vacuum Ejector

- Use the vacuum ejector at the standard supply pressure.

The maximum vacuum pressure and suction flow rate can be obtained when the vacuum ejector is used at the standard supply pressure, and as a result, adsorption response time also improves. From the viewpoint of energy-saving, it is the most effective to use the ejector at the standard supply pressure. Since using it at the excessive supply pressure causes a decline in the ejector performance, do not use it at a supply pressure exceeding the standard supply.


Ejector Nozzle Diameter Selection

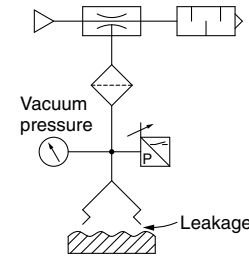

If a considerable amount of leakage occurs between the workpiece and the pad, resulting in incomplete adsorption, or to shorten the adsorption and transfer time, select an ejector nozzle with a larger diameter from the ZH, ZM, ZR, or ZL series.


Manifold Use

Individual exhaust

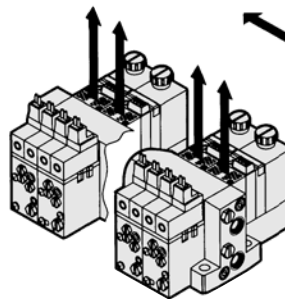

If there are a large number of ejectors that are linked on a manifold and operate simultaneously, use the built-in silencer type or the port exhaust type.

Centralized exhaust

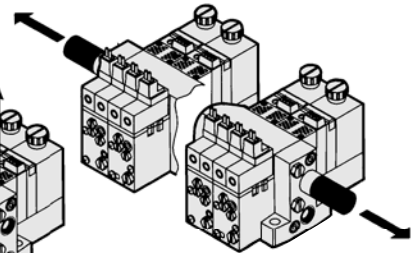

If there are a large number of ejectors that are linked on a manifold, which exhaust collectively, install a silencer at both ends. If the exhaust must be discharged outdoors through piping, make sure that the diameter of the piping is large enough that its back pressure will not affect the operation of the ejectors.

● Timing for Vacuum Generation and Suction Verification

A. Timing for Vacuum Generation

The time for opening/closing the valve will be counted if a vacuum is generated after the adsorption pad descends to adsorb a workpiece. Also, there is a timing delay risk for the generating vacuum since the operational pattern for the verification switch, which is used for detecting the descending vacuum pad, is not even.

To solve this issue, we recommend that vacuum be generated in advance, before the vacuum pad begins to descend to the workpiece. Adopt this method after confirming that there will be no misalignment resulting from the workpiece's light mass.

B. Suction Verification

When lifting the vacuum pad after absorbing a workpiece, confirm that there is a suction verification signal from the vacuum pressure switch, before the vacuum pad is lifted. If the vacuum pad is lifted, based on the timing of a timer, etc., there is a risk that the workpiece may be left behind.

In general adsorption transfer, the time for adsorbing a workpiece is slightly different since the position of the vacuum pad and the workpiece are different after every operation. Therefore, program a sequence in which the suction completion is verified by a vacuum pressure switch, etc. before moving to the next operation.

C. Set Pressure for Vacuum Pressure Switch

Set the optimum value after calculating the required vacuum pressure for lifting a workpiece.

If a higher pressure than required is set, there is a possibility of being unable to confirm the suction even though the workpiece is adsorbed. This will result in a suction error.

When setting vacuum pressure switch set values, you should set using a lower pressure, with which a workpiece can be adsorbed, only after considering the acceleration or vibration when a workpiece is transferred. The set value of the vacuum pressure switch shortens the time to lift a workpiece. Since the switch detects whether the workpiece is lifted or not, the pressure must be set high enough to detect it.

Vacuum Pressure Switch (Series ZS), Vacuum Pressure Gauge (Series GZ)


When adsorbing and transferring a workpiece, verify at the vacuum pressure switch as much as possible (In addition, visually verify the vacuum gauge, especially when handling a heavy or a hazardous item.).

Approx. $\phi 1$ adsorption nozzle

The difference in pressure between ON and OFF becomes small depending on the capacity of the ejector and vacuum pump. In such a case, **it will be necessary to use ZSP1 that can detect a small hysteresis or a flow switch.**


Note) • **A vacuum generator with a large suction capacity will not be detected properly**, so an ejector with an appropriate capacity must be selected.

- Since the hysteresis is small, vacuum pressure must be stabilized.

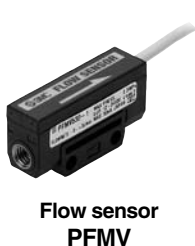

Refer to the Best Pneumatics No. 6 for details.

Timing Chart Example

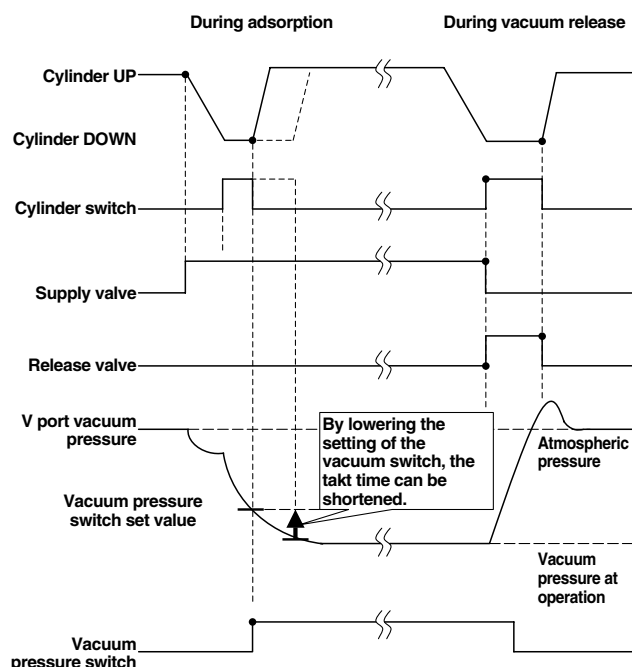

Model Selection

● Dust Handling of Vacuum Equipment

- When the vacuum equipment is used, not only the workpiece, but also dust in the surrounding environment is taken in the equipment. Preventing the intrusion of dust is required more than for any other pneumatic equipment. Some of SMC's vacuum equipment comes with a filter, but when there is a large amount of dust, an additional filter must be installed.
- When vaporized materials such as oil or adhesive are sucked into the equipment, they accumulate inside, which may cause problems.
- It is important to prevent dust from entering the vacuum equipment as much as possible.
 - (1) Make sure to keep the working environment and surrounding area of the workpiece clean so that dust will not be sucked in the equipment.
 - (2) Check the amount and types of dust before using the equipment and install a filter, etc., in the piping when necessary. In particular, equipment used to capture dust, such as a vacuum cleaner, require a special filter.
 - (3) Conduct a test and make sure that operating conditions are cleared before using the equipment.
 - (4) Perform filter maintenance depending on the amount of dirt.
 - (5) Filter clogging generates a pressure difference between the adsorption and ejector parts. This requires attention, since clogging can prevent proper adsorption from being achieved.

Air Suction Filter (Series ZFA, ZFB, ZFC)

- To protect the switching valve and the ejector from becoming clogged, a suction filter in the vacuum circuit is recommended.
- When using an ejector in a dusty environment, the unit's filter will become clogged quickly, so it is recommended that the ZFA, ZFB or ZFC series be used concurrently.

Vacuum Line Equipment Selection

Determine the volume of the suction filter and the conductance of the switching valve in accordance with the maximum suction flow rate of the ejector and the vacuum pump. Make sure that the conductance is greater than the value that has been obtained through the formula given below. (If the devices are connected in series in the vacuum line, their conductances must be combined.)

$$C = \frac{Q_{\max}}{55.5}$$

C: Conductance [dm³/(s·bar)]
Q_{max}: Max. suction flow rate L/min (ANR)

7 Vacuum Equipment Selection Example

● Transfer of Semiconductor Chips

Selection conditions:

- (1) Workpiece: Semiconductor chips
Dimensions: 8 mm x 8 mm x 1 mm, Mass: 1 g
- (2) Vacuum piping length: 1 m
- (3) Adsorption response time: 300 msec or less

1. Vacuum Pad Selection

- (1) Based on the workpiece size, the pad diameter is 4 mm (1 pc.).
- (2) Using the formula on the front matter 4, confirm the lifting force.

$$W = P \times S \times 0.1 \times 1/t$$

$$0.0098 = P \times 0.13 \times 0.1 \times 1/4$$

$$P = 3.0 \text{ kPa}$$

$$W = 1 \text{ g} = 0.0098 \text{ N}$$

$$S = \pi/4 \times (0.4)^2 = 0.13 \text{ cm}^2$$

$$t = 4 \text{ (Horizontal lifting)}$$

According to the calculation, -3.0 kPa or more of vacuum pressure can adsorb the workpiece.

- (3) Based on the workpiece shape and type, select:

Pad type: Flat

Pad material: Silicone

- (4) According to the results above, select a vacuum pad part number ZP3-04US-□□.
(Specify the vacuum inlet type (□□) from the pad mounting status.)

2. Vacuum Ejector Selection

- (1) Find the vacuum piping capacity.

Assuming that the tube I.D. is 2 mm, the piping capacity is as follows:

$$V = \pi/4 \times D^2 \times L \times 1/1000 = \pi/4 \times 2^2 \times 1 \times 1/1000 \\ = 0.0031 \text{ L}$$

- (2) Assuming that leakage (Q_L) during adsorption is 0, find the average suction flow rate to meet the adsorption response time using the formula on the front matter 8.

$$Q = (V \times 60) / T_1 + Q_L = (0.0031 \times 60) / 0.3 + 0 = 0.62 \text{ L}$$

From the formula on the front matter 8, the maximum suction flow rate Q_{\max} is

$$Q_{\max} = (2 \text{ to } 3) \times Q = (2 \text{ to } 3) \times 0.62 \\ = 1.24 \text{ to } 1.86 \text{ L/min (ANR)}$$

According to the maximum suction flow rate of the vacuum ejector, a nozzle with a 0.5 diameter can be used.

If the vacuum ejector ZX series is used, representative model ZX105□ can be selected.

(Based on the operating conditions, specify the complete part number for the vacuum ejector used.)

3. Adsorption Response Time Confirmation

Confirm the adsorption response time based on the characteristics of the vacuum ejector selected.

- (1) The maximum suction flow rate of the vacuum ejector ZX105□ is 5 L/min (ANR). From the formula on the front matter 9, the average suction flow rate Q_1 is as follows:

$$Q_1 = (1/2 \text{ to } 1/3) \times \text{Ejector max. suction flow rate} \\ = (1/2 \text{ to } 1/3) \times 5 = 2.5 \text{ to } 1.7 \text{ L/min (ANR)}$$

- (2) Next, find the maximum flow rate Q_2 of the piping. The conductance C is 0.22 from the Selection Graph (3).
From the formula on the front matter 9, the maximum flow rate is as follows:

$$Q_2 = C \times 55.5 = 0.22 \times 55.5 = 12.2 \text{ L/min (ANR)}$$

- (3) Since Q_2 is smaller than Q_1 , $Q = Q_1$.

Thus, from the formula on the front matter 9, the adsorption response time is as follows:

$$T = (V \times 60) / Q = (0.0031 \times 60) / 1.7 = 0.109 \text{ seconds} \\ = 109 \text{ msec}$$


It is possible to confirm that the calculation result satisfies the required specification of 300 msec.

Model Selection

8 Data

● Selection Graph

Selection Graph (2) Piping Capacity by Tube I.D.

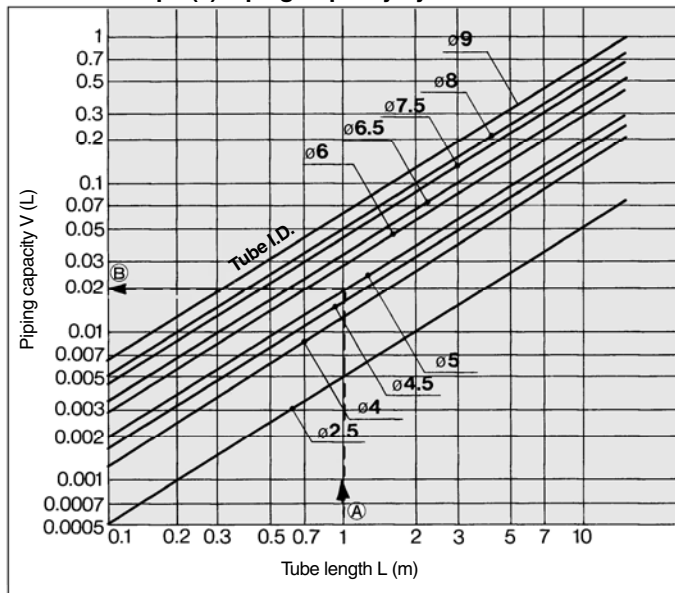

How to read the graph


Example: For obtaining the capacity of tube I.D. ø5 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. ø5, the piping capacity approximately equivalent to 0.02 L can be obtained on the vertical axis.

Piping capacity $\approx 0.02 L$

Selection Graph (3) Conductance by Tube I.D.

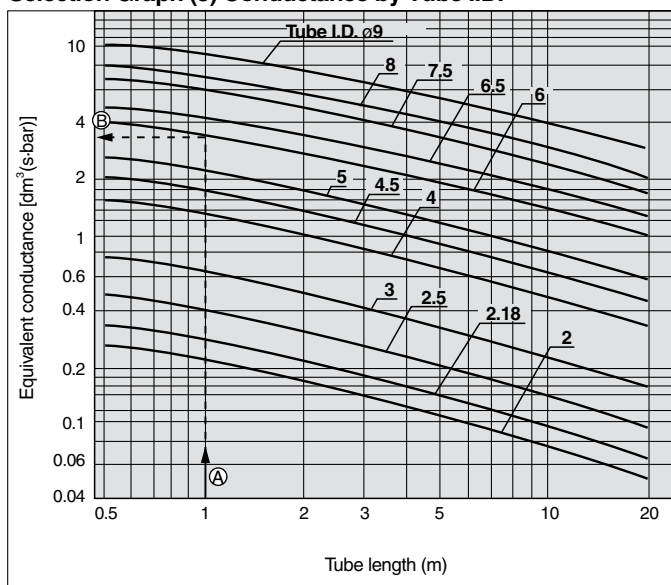

How to read the graph

Example: Tube size ø8/ø6 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. ø6, the equivalent conductance approximately 3.6 [dm³/(s·bar)] can be obtained on the vertical axis.

Equivalent conductance $\approx 3.6 \text{ [dm}^3\text{/(s·bar)]}$

● Glossary of Terms

Terms	Description
(Max.) suction flow rate	Volume of air taken in by the ejector. The maximum value is the volume of air taken in without having anything connected to the vacuum port.
Maximum vacuum pressure	The maximum value of the vacuum pressure generated by the ejector
Air consumption	The compressed volume of air consumed by the ejector
Standard supply pressure	The optimal supply pressure for operating the ejector
Exhaust characteristics	The relationship between the vacuum pressure and the suction flow rate when the supply pressure to the ejector has been changed.
Flow-rate characteristics	The relationship between the vacuum pressure and the suction flow rate with the standard supply pressure supplied to the ejector.
Vacuum pressure switch	Pressure switch for verifying the adsorption of a workpiece
Suction verification switch	Switch, based on an air pressure bridge, for verifying the adsorption of a workpiece. It is used when the adsorption pad and the nozzle are extremely small.
(Air) supply valve	Valve for supplying compressed air to the ejector
(Vacuum) release valve	Valve for supplying positive pressure or air for breaking the vacuum state of the adsorption pad
Flow adjustment valve	Valve for adjusting the volume of air for breaking the vacuum
Release pressure	Pressure for breaking the vacuum
Pilot pressure	Pressure for operating the ejector valve
External release	The action of breaking the vacuum using externally supplied air instead of using the ejector unit
Vacuum port	Port for generating vacuum
Exhaust port	Port for exhausting air consumed by the ejector, and air taken in from the vacuum port.
Supply port	Port for supplying air to the ejector
Back pressure	Pressure inside the exhaust port
Leakage	The entry of air into the vacuum passage, such as from an area between a workpiece and a pad, or between a fitting and a tube. The vacuum pressure decreases when leakage occurs.
Response time	The time from the application of the rated voltage to the supply valve or release valve, until V port pressure reaches the specified pressure.
Average suction flow rate	The suction flow rate by the ejector or pump for calculating the response speed. It is 1/2 to 1/3 of the maximum suction flow rate.
Conductive pad	A low electrical resistance pad for electrostatic prevention measure
Vacuum pressure	Any pressure below the atmospheric pressure. When the atmospheric pressure is used as a reference, the pressure is presented by -kPa (G), and when the absolute pressure is used as a reference, the pressure is represented by kPa (abs). When referencing a piece of vacuum equipment such as an ejector, the pressure is generally represented by -kPa.
Ejector	A unit for generating vacuum by discharging the compressed air from a nozzle at a high speed, based on the phenomenon in which the pressure is reduced when the air around the nozzle is sucked.
Air suction filter	Vacuum filter provided in the vacuum passage for preventing the dust intrusion into the ejector, vacuum pump, or peripheral equipment

Model Selection

● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting)

Condition & Description of improvement	Contributing factor	Countermeasure
Initial adsorption problem (During trial operation)	Adsorption area is small. (Lifting force is lower than the workpiece mass.)	Reconfirm the relationship between workpiece mass and lifting force. • Use a vacuum pad with a large adsorption area. • Increase the quantity of vacuum pads.
	Vacuum pressure is low. (Leakage from adsorption surface) (Air permeable workpiece)	Eliminate (reduce) leakage from adsorption surface. • Reconsider shape of vacuum pad. Confirm the relationship between suction flow rate and arrival pressure of vacuum ejector. • Use a vacuum ejector with a high suction flow rate. • Increase adsorption area.
	Vacuum pressure is low. (Leakage from vacuum piping)	Repair leakage point.
	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Inadequate supply pressure of vacuum ejector	Measure supply pressure in vacuum generation state. • Use standard supply pressure. • Reconsider compressed air circuit (line).
	Clogging of nozzle or diffuser (Infiltration of foreign objects during piping)	Remove foreign objects.
	Supply valve (switching valve) is not being activated.	Measure supply voltage at the solenoid valve with a tester. • Review electric circuits, wiring and connectors. • Use in the rated voltage range.
	Workpiece deforms during adsorption.	Since a workpiece is thin, it deforms and leakage occurs. • Use a pad for adsorption of thin objects.
Late vacuum achieving time (Shortening of response time)	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Using the product as close to the highest vacuum power in the specifications.	Set vacuum pressure to minimum necessary value by optimizing the pad diameter, etc. As the vacuum power of an ejector (venturi) rises, the vacuum flow actually lowers. When an ejector is used at its highest possible vacuum value, the vacuum flow will lower. Due to this, the amount of time needed to achieve adsorption is lengthened. One should consider an increase in the diameter of the ejector nozzle or an increase the size of the vacuum pad utilized in order to lower the required vacuum pressure, maximum the vacuum flow, and speed up the adsorption process.
	Setting of vacuum pressure switch is too high.	Set to suitable setting pressure.

Condition & Description of improvement	Contributing factor	Countermeasure
Fluctuation in vacuum pressure	Fluctuation in supply pressure	Reconsider compressed air circuit (line). (Addition of a tank, etc.)
	Vacuum pressure may fluctuate under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where vacuum pressure does not fluctuate.
Occurrence of abnormal noise (intermittent noise) from exhaust of vacuum ejector	Intermittent noise may occur under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where the intermittent noise does not occur.
Air leakage from vacuum port of manifold type vacuum ejector	Exhaust air from the ejector enters the vacuum port of another ejector that is stopped.	Use a vacuum ejector with a check valve. (Please contact SMC for the part no. of an ejector with a check valve.)
Adsorption problem over time (Adsorption was normal during trial operation.)	Clogging of suction filter	Replace filters. Improve installation environment.
	Clogging of sound absorbing material	Replace sound absorbing materials. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Clogging of nozzle or diffuser	Remove foreign objects. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Vacuum pad (rubber) deterioration, cracking, etc.	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
Workpiece is not released.	Inadequate release flow rate	Open release flow adjustment needle.
	Viscosity increase due to vacuum pad (rubber) wear	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
	Vacuum pressure is too high.	Set vacuum pressure to minimum necessary value.
	Effects due to static electricity	Use a conductive pad.

Model Selection

●Non-conformance Examples

Phenomenon	Possible causes	Countermeasure
No problem occurred during the test, but adsorption becomes unstable after starting operation.	<ul style="list-style-type: none"> Setting of the vacuum switch is not appropriate. Supply pressure is unstable. Vacuum pressure does not reach the set pressure. There is leakage between the workpiece and the vacuum pad. 	<ol style="list-style-type: none"> 1) Set the pressure for the vacuum equipment (supply pressure, if using an ejector) to the necessary vacuum pressure during the adsorption of the workpieces. And set the set pressure for the vacuum switch to the necessary vacuum pressure for adsorption. 2) It is presumed that there was leakage during the test, but it was not serious enough to prevent adsorption. Revise the vacuum ejector and the shape, diameter, and material of the vacuum pad. Revise the vacuum pad.
Adsorption becomes unstable after replacing the pad.	<ul style="list-style-type: none"> Initial setting conditions (vacuum pressure, vacuum switch setting, height of the pad) have changed. Settings have changed because the pad was worn out or had permanent setting due to the operating environment. When the pad was replaced, leakage was generated from the screw connection part, or the engagement between the pad and the adapter. 	<ol style="list-style-type: none"> 1) Revise the operating conditions including vacuum pressure, the set pressure of the vacuum switch, and the height of the pad. 2) Revise the engagement.
Identical pads are used to adsorb identical workpieces, but some of the pads cannot adsorb the workpieces.	<ul style="list-style-type: none"> There is leakage between the workpiece and the vacuum pad. The supply circuit for the cylinder, the solenoid valve and the ejector is in the same pneumatic circuit system. The supply pressure decreases when they are used simultaneously. (Vacuum pressure does not increase) There is leakage from the screw connection part or the engagement between the pad and the adapter. 	<ol style="list-style-type: none"> 1) Revise the pad diameter, shape, material, vacuum ejector (suction flow rate), etc. 2) Revise the pneumatic circuit. 3) Revise the engagement.
The workpiece cannot be separated from the pad. The workpiece sticks to the rubber part of the bellows.	<ul style="list-style-type: none"> The adhesiveness of the rubber material is high. Adhesiveness increases due to the operating environment (wearing of the pad, etc.). Vacuum pressure is higher than necessary, so excessive force (adhesiveness of the rubber + vacuum pressure) is applied to the pad (rubber part). 	<ol style="list-style-type: none"> 1) Revise the shape, material, and quantity of vacuum pads. 2) Reduce the vacuum pressure. If inadequate lifting force causes a problem in transferring the workpieces due to the reduction of vacuum pressure, increase the number of pads, or select pads with larger diameter.

■ **When mounted with the nut, sometimes the buffer operation is not smooth, or the buffer does not slide.**

[Possible causes]

- The tightening torque of the nut for mounting the buffer is too high.
- Particles stuck to the sliding surface, or it is scratched.
- Lateral load applied to the piston rod, causing eccentric wearing.

[Remedy]

Tighten the nut to the recommended tightening torque.

The nut may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.

General Purpose

Product specifications			Nut tightening torque
Pad diameter	Product part no.	Mounting thread size	
ø1.5 to ø3.5	ZP3-*(015 to 035) U*	M6 x 0.75	1.5 to 1.8 N·m
		M8 x 0.75	2.0 to 2.5 N·m
ø4 to ø16	ZP3-*(04 to 16) UM, B* ZP3-*(10 to 16) UM, B*	M8 x 0.75	2.0 to 2.5 N·m

● **Time of Replacement of Vacuum Pad**

The vacuum pad is disposable. Replace it on a regular basis.

Continued use of the vacuum pad will cause wear and tear on the adsorption surface, and the exterior dimensions will gradually get smaller and smaller. As the pad diameter gets smaller, lifting force will decrease, though adsorption is possible.

It is extremely difficult to provide advice on the frequency of vacuum pad exchange. This is because there are numerous factors at work, including surface roughness, operating environment (temperature, humidity, ozone, solvents, etc.), and operating conditions (vacuum pressure, workpiece weight, pressing force of the vacuum pad on the workpiece, presence or absence of a buffer, etc.).

Thus, the customer should decide when the vacuum pad should be exchanged, based on its condition at time of initial use.

The bolt may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.



Compact Pad

Pad
diameter

ø1.5, ø2, ø3.5, ø4, ø6, ø8, ø10, ø13, ø16

Symbol/Type

U: Flat
UM: Flat with
groove
B: Bellows

How to Order



Pad unit

ZP3-015 U N

Pad diameter

Symbol	Pad diameter
015	ø1.5
02	ø2
035	ø3.5
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16

Pad material

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Pad type—Pad diameter

Pad type \ Pad diameter (Symbol)	015	02	035	04	06	08	10	13	16
U (Flat)	●	●	●	—	—	—	—	—	—
UM (Flat with groove)	—	—	—	●	●	●	●	●	●
B (Bellows)	—	—	—	●	●	●	●	●	●

* Sales unit


ø1.5 to ø8 : 10 pcs.

ø10 to ø16 : 5 pcs.


Dimensions: Pad Unit

Flat


ZP3-015U [Weight: 0.1 g]

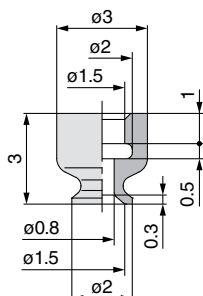

ZP3-02U [Weight: 0.1 g]

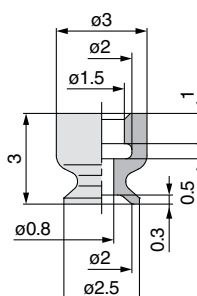


ZP3-035U [Weight: 0.1 g]

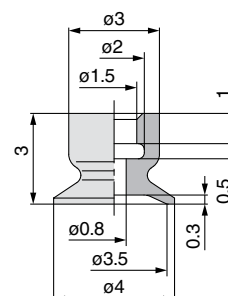


Flat
with
groove



ZP3-04UM [Weight: 0.3 g]

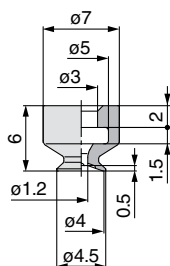

ZP3-06UM [Weight: 0.3 g]

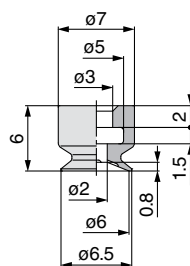


ZP3-08UM [Weight: 0.3 g]

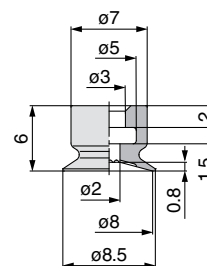


Dimensions: Pad Unit

Flat with groove


ZP3-10UM [Weight: 0.6 g]

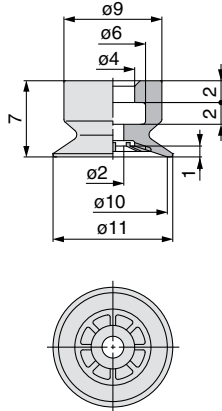

ZP3-13UM [Weight: 0.7 g]

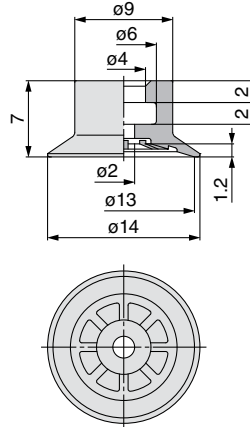


ZP3-16UM [Weight: 0.8 g]

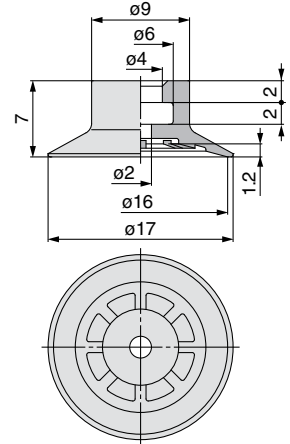


Bellows


ZP3-04B [Weight: 0.3 g]

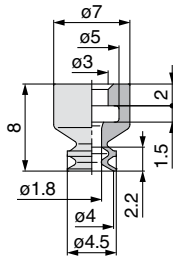


ZP3-06B [Weight: 0.3 g]

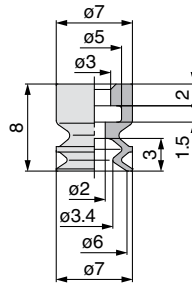


ZP3-08B [Weight: 0.4 g]

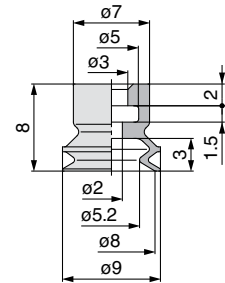


ZP3-10B [Weight: 0.8 g]

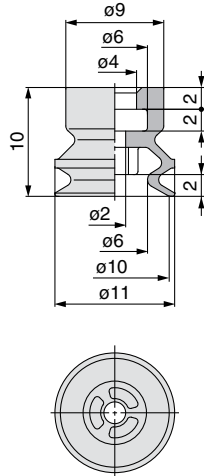

ZP3-13B [Weight: 1.0 g]

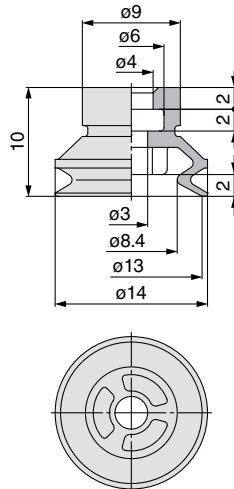


ZP3-16B [Weight: 1.1 g]

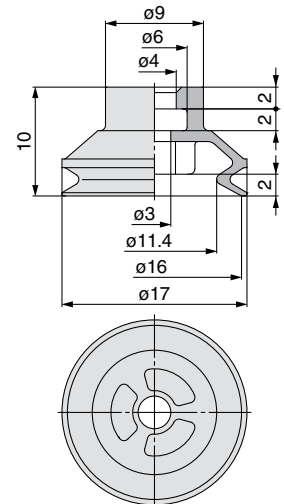


Pad Mounting Dimensions

If an adapter will be made by the customer, design the adapter with the dimensions shown below.


Applicable pad
015U/02U/035U

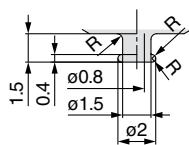

Applicable pad
04UM/06UM/08UM/04B/06B/08B

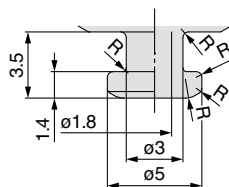

Applicable pad
10UM/13UM/16UM/10B/13B/16B

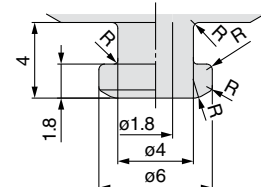

Note) R part has to be smooth with no corners. *Refer to page 47 and 48 for applicable adapter.

How to Order

Vertical vacuum inlet/ With adapter

ZP3-T 015 U □ -A6-B3

Vacuum inlet direction

Symbol	Direction
T	Vertical

Pad diameter

Symbol	Pad diameter	Symbol	Pad diameter
015	ø1.5	08	ø8
02	ø2	10	ø10
035	ø3.5	13	ø13
04	ø4	16	ø16
06	ø6		

Pad type – Pad diameter

Pad type	Pad diameter (Symbol)	015	02	035	04	06
U (Flat)		●	●	●	—	—
UM (Flat with groove)		—	—	—	●	●
B (Bellows)		—	—	—	●	●

Pad type	Pad diameter (Symbol)	08	10	13	16
U (Flat)		—	—	—	—
UM (Flat with groove)		●	●	●	●
B (Bellows)		●	●	●	●

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Vacuum inlet (◇)

Symbol	Vacuum inlet	Mounting thread size		
		A6	A10	A12
B3	M3 x 0.5 female thread	●	—	—
B5	M5 x 0.8 female thread	—	●	—
U2	ø2 tubing/barb fitting *1	●	●	●
U4	ø4 tubing/barb fitting *2	●	●	●
U6	ø6 tubing/barb fitting *2	—	—	●
02	ø2 tubing	—	●	●
04	ø4 tubing	●	●	●
06	ø6 tubing	—	—	●
Nil	—	A3/A5/B3/B5		

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping

Mounting thread size

	Symbol	Mounting Thread size	ø1.5 to ø3.5	ø4 to ø8	ø10 to ø16
Male thread	A3*	M3 x 0.5	●	—	—
	A5*	M5 x 0.8	—	●	—
	A6	M6 x 0.75	●	—	—
	A10	M10 x 1	—	●	—
	A12	M12 x 1	—	—	●
Female thread	B3*	M3 x 0.5	●	—	—
	B5*	M5 x 0.8	—	●	—

* indicates vacuum inlet symbol is "Nil".

Replacement Part No.

Pad diameter: ø1.5 to ø3.5

Model	Pad unit part no.	Adapter part no.
ZP3-T (015/02/035) U □ -A3	ZP3-(015/02/035)U □	ZP3A-T1-A3
ZP3-T (015/02/035) U □ -B3		ZP3A-T1-B3
ZP3-T (015/02/035) U □ -A6-◇		ZP3A-T1-A6-B3

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-3AU-2, U4: M-3AU-4-X83
02: KJH02-M3, 04: KJH04-M3-X83

Pad diameter: ø4 to ø8

Model	Pad unit part no.	Adapter part no.
ZP3-T (04/06/08) UM □ -A5	ZP3- (04/06/08) UM □	ZP3A-T2-A5
ZP3-T (04/06/08) B □ -A5	ZP3- (04/06/08) B □	
ZP3-T (04/06/08) UM □ -B5	ZP3- (04/06/08) UM □	ZP3A-T2-B5
ZP3-T (04/06/08) B □ -B5	ZP3- (04/06/08) B □	
ZP3-T (04/06/08) UM □ -A10-◇	ZP3- (04/06/08) UM □	ZP3A-T2-A10-B5
ZP3-T (04/06/08) B □ -A10-◇	ZP3- (04/06/08) B □	
ZP3-T (04/06/08) UM □ -A10-04	ZP3- (04/06/08) UM □	ZP3A-T2-A10-04
ZP3-T (04/06/08) B □ -A10-04	ZP3- (04/06/08) B □	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83,
02: KJH02-M5

Pad diameter: ø10 to ø16

Model	Pad unit part no.	Adapter part no.
ZP3-T (10/13/16) UM □ -A5	ZP3- (10/13/16) UM □	ZP3A-T3-A5
ZP3-T (10/13/16) B □ -A5	ZP3- (10/13/16) B □	
ZP3-T (10/13/16) UM □ -B5	ZP3- (10/13/16) UM □	ZP3A-T3-B5
ZP3-T (10/13/16) B □ -B5	ZP3- (10/13/16) B □	
ZP3-T (10/13/16) UM □ -A12-◇	ZP3- (10/13/16) UM □	ZP3A-T3-A12-B5
ZP3-T (10/13/16) B □ -A12-◇	ZP3- (10/13/16) B □	
ZP3-T (10/13/16) UM □ -A12-04	ZP3- (10/13/16) UM □	ZP3A-T3-A12-04
ZP3-T (10/13/16) B □ -A12-04	ZP3- (10/13/16) B □	
ZP3-T (10/13/16) UM □ -A12-06	ZP3- (10/13/16) UM □	ZP3A-T3-A12-06
ZP3-T (10/13/16) B □ -A12-06	ZP3- (10/13/16) B □	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.


Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
U6: M-5AU-6-X83, 02: KJH02-M5

Dimensions/With Adapter: Vacuum Inlet Vertical


ZP3-T015U □ -A3

[Weight: 0.6 g]

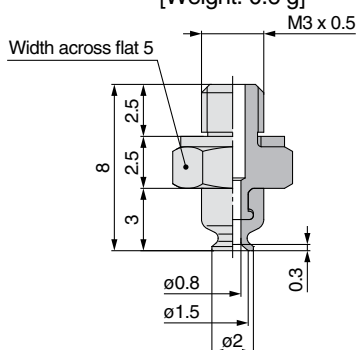


ZP3-T02U □ -A3

[Weight: 0.6 g]

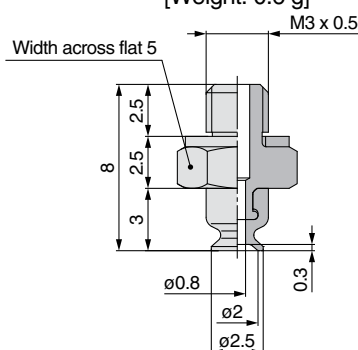

ZP3-T035U □ -A3


[Weight: 0.6 g]

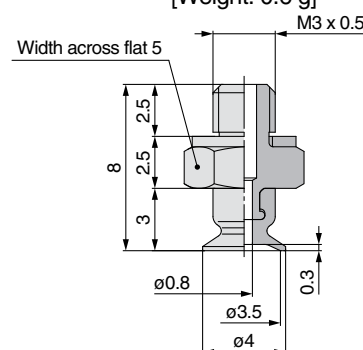

Pad diameter $\phi 1.5$ to $\phi 3.5$

Pad type Flat

Dimensions/With Adapter: Vacuum Inlet Vertical

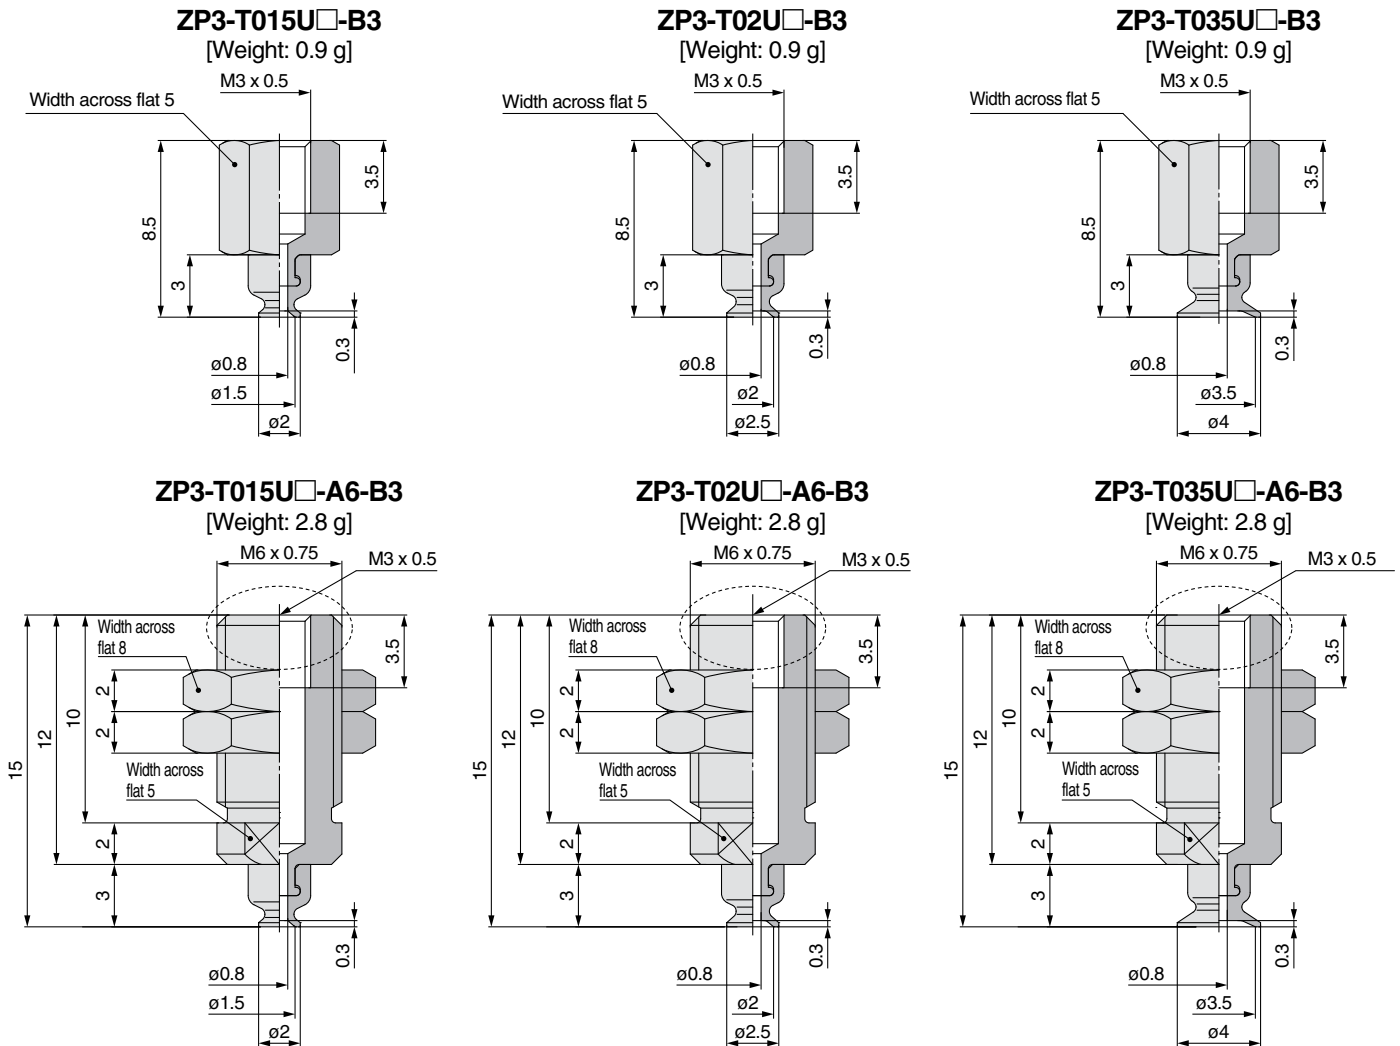

Vacuum Inlet Dimensions

	Barb fitting			One-touch fitting	
	ZP3-T015U□-A6-U2 ZP3-T02U□-A6-U2 ZP3-T035U□-A6-U2	ZP3-T015U□-A6-U4 ZP3-T02U□-A6-U4 ZP3-T035U□-A6-U4		ZP3-T015U□-A6-02 ZP3-T02U□-A6-02 ZP3-T035U□-A6-02	ZP3-T015U□-A6-04 ZP3-T02U□-A6-04 ZP3-T035U□-A6-04
	<p>M-3AU-2 [Weight: 0.7 g]^{*2}</p>	<p>M-3AU-4-X83 [Weight: 0.7 g]^{*2}</p>		<p>KJH02-M3 [Weight: 1.1 g]^{*2}</p>	<p>KJH04-M3-X83 [Weight: 1.9 g]^{*2}</p>


*1 Refer to "ZP3-T▲▲▲U□-A6-B3" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲▲U□-A6-B3".


Dimensions/With Adapter: Vacuum Inlet **Vertical**

Pad diameter	ø4 to ø8
Pad type	Flat with groove


ZP3-T04UM□-A5
[Weight: 1.7 g]

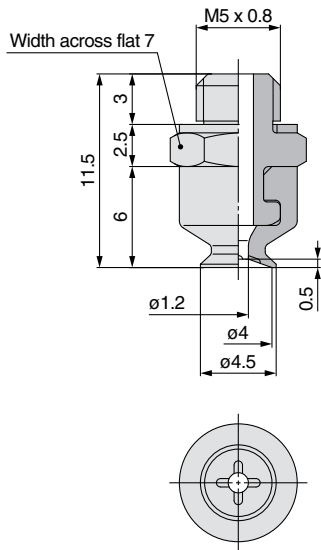


ZP3-T06UM□-A5
[Weight: 1.7 g]

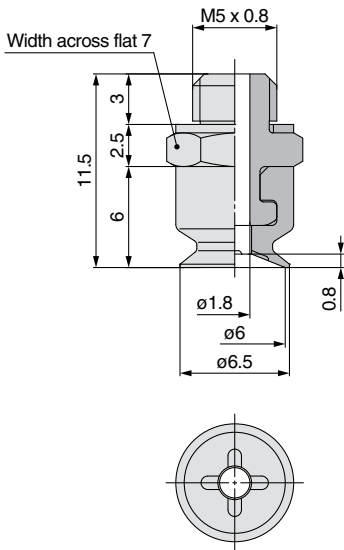


ZP3-T08UM□-A5
[Weight: 1.7 g]

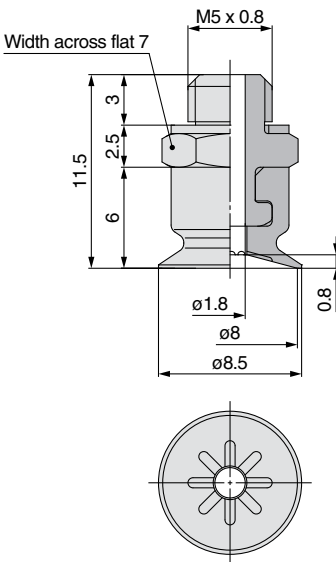


ZP3-T04UM□-B5
[Weight: 2.3 g]

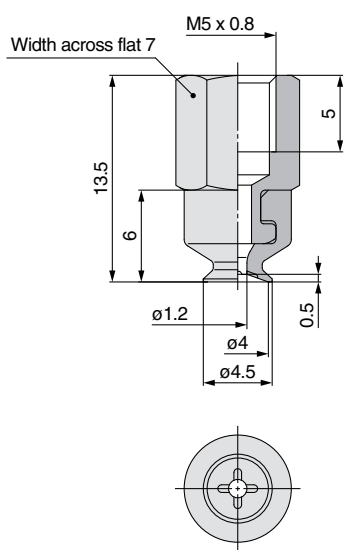

ZP3-T06UM□-B5
[Weight: 2.3 g]

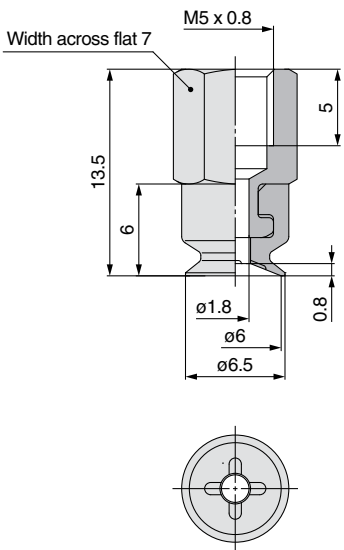

ZP3-T08UM□-B5
[Weight: 2.3 g]

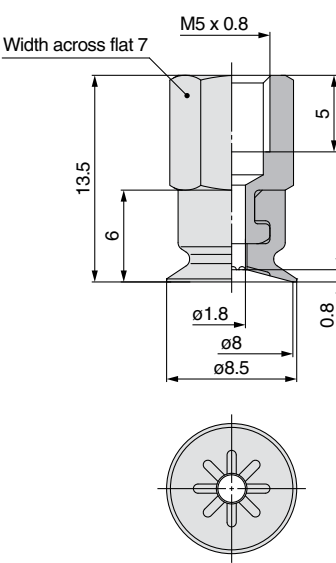

Dimensions/With Adapter: Vacuum Inlet


Vertical

Pad diameter $\phi 4$ to $\phi 8$

Pad type Flat with groove


ZP3-T04UM□-A10-B5

[Weight: 11.0 g]

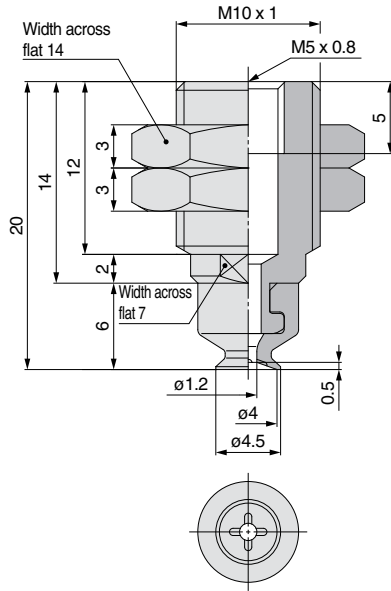


ZP3-T06UM□-A10-B5

[Weight: 11.0 g]

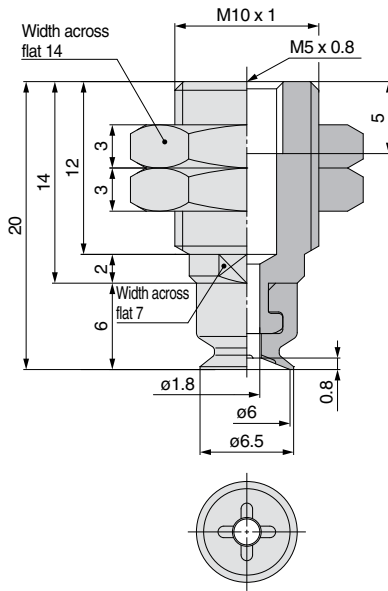

ZP3-T08UM□-A10-B5

[Weight: 11.0 g]

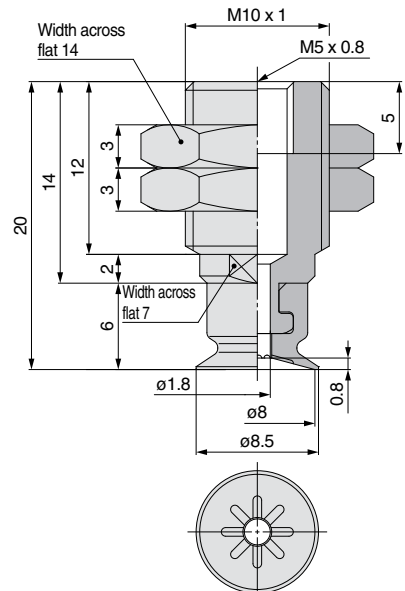

Vacuum Inlet Dimensions

Barb fitting	ZP3-T04UM□-A10-U2 ZP3-T06UM□-A10-U2 ZP3-T08UM□-A10-U2	ZP3-T04UM□-A10-U4 ZP3-T06UM□-A10-U4 ZP3-T08UM□-A10-U4
	 M-5AU-2 [Weight: 1.5 g] ^{*2}	 M-5AU-4-X83 [Weight: 1.6 g] ^{*2}

One-touch fitting	ZP3-T04UM□-A10-02 ZP3-T06UM□-A10-02 ZP3-T08UM□-A10-02
	 KJH02-M5 [Weight: 1.9 g] ^{*2}


*1 Refer to "ZP3-T▲▲UM□-A10-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲UM□-A10-B5".

ZP3-T04UM□-A10-04

[Weight: 10.2 g]


Applicable tubing: $\phi 4$

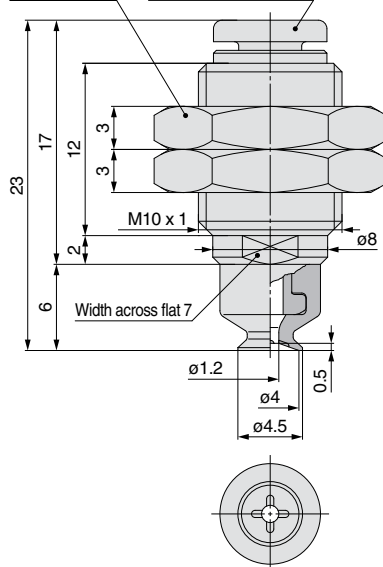

ZP3-T06UM□-A10-04

[Weight: 10.2 g]


Applicable tubing: $\phi 4$

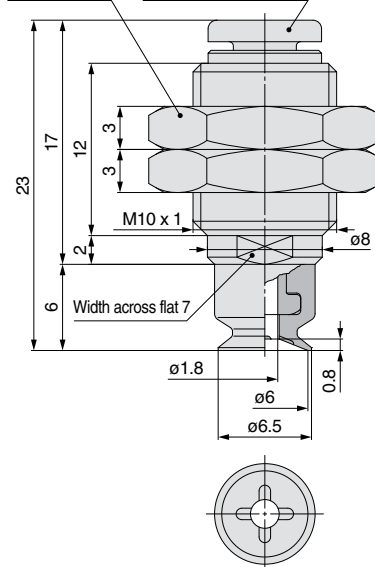

ZP3-T08UM□-A10-04

[Weight: 10.2 g]



Applicable tubing: $\phi 4$

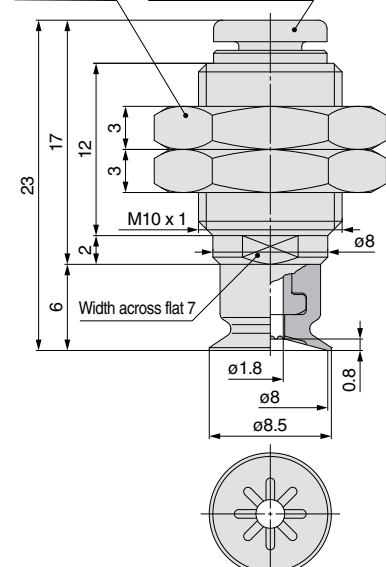



Dimensions/With adapter: Vacuum inlet **Vertical**

Pad diameter	ø10 to ø16
Pad type	Flat with groove



ZP3-T10UM□-A5
[Weight: 3.0 g]

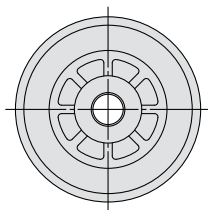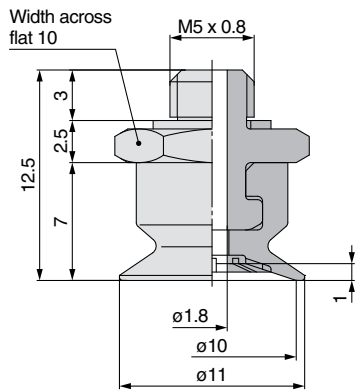



ZP3-T13UM□-A5
[Weight: 3.1 g]

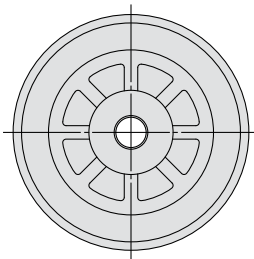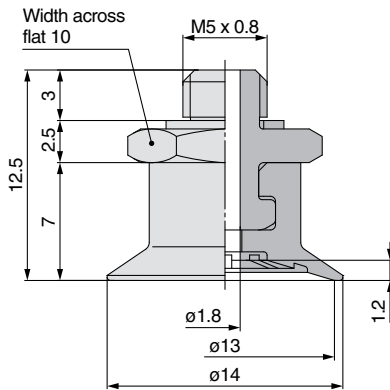



ZP3-T16UM□-A5
[Weight: 3.2 g]

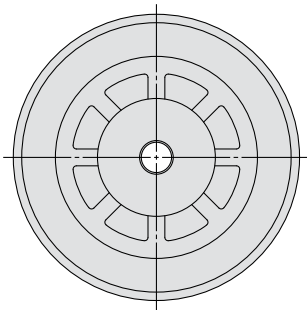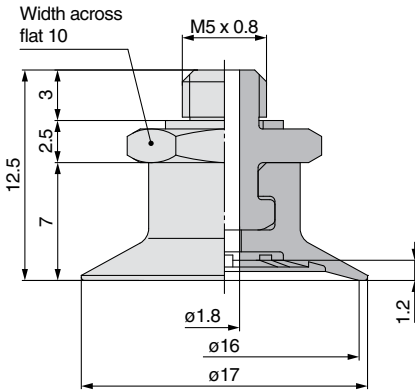



ZP3-T10UM□-B5
[Weight: 5.7 g]

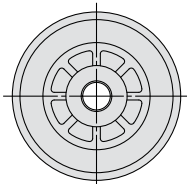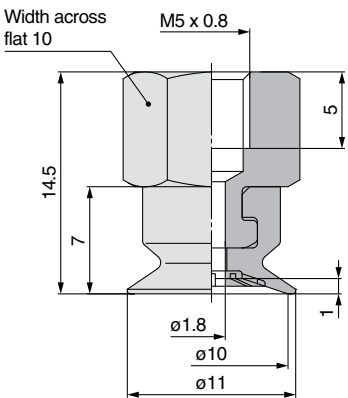

ZP3-T13UM□-B5
[Weight: 5.8 g]

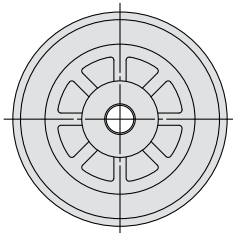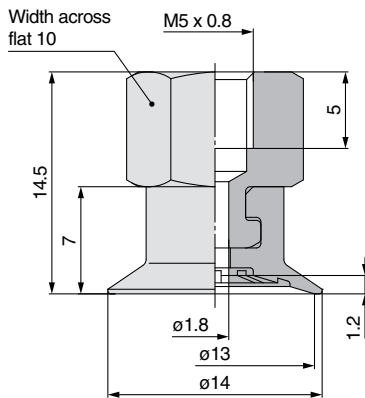

ZP3-T16UM□-B5
[Weight: 5.9 g]

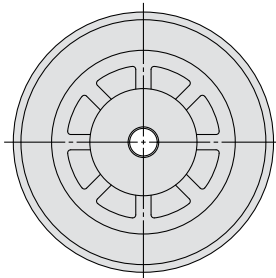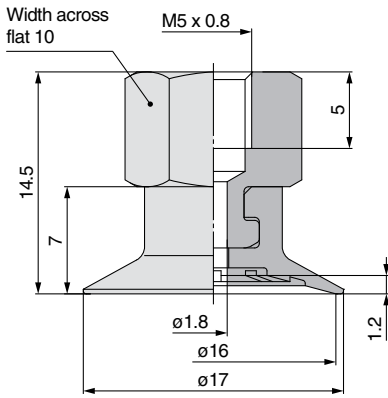


Dimensions/With Adapter: Vacuum Inlet **Vertical**

Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove


ZP3-T10UM□-A12-B5

[Weight: 18.8 g]

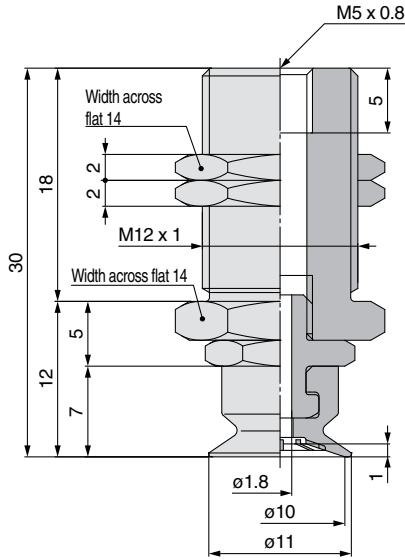





ZP3-T13UM□-A12-B5

[Weight: 18.9 g]

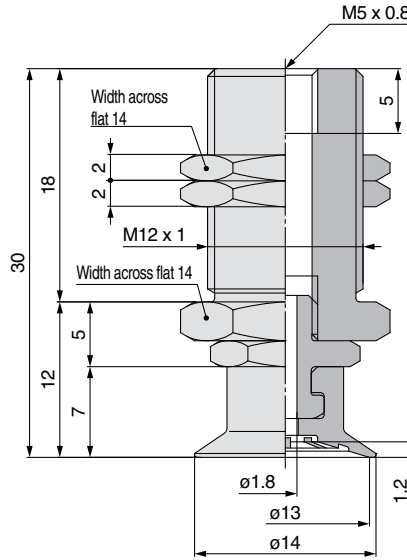

ZP3-T16UM□-A12-B5

[Weight: 19.0 g]

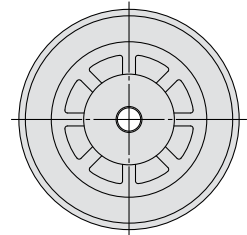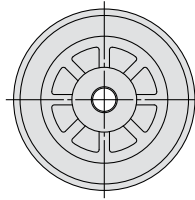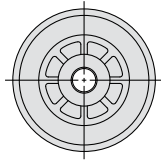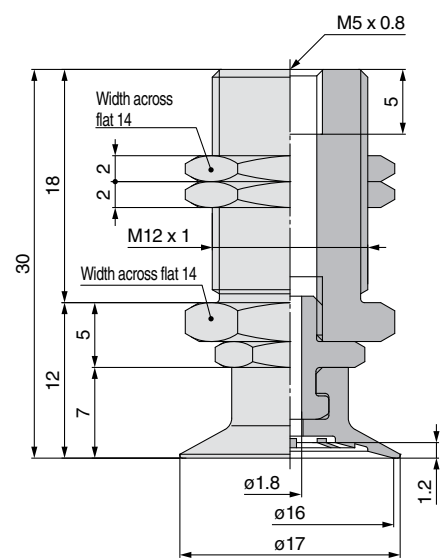

Vacuum Inlet Dimensions

	ZP3-T10UM□-A12-U2 ZP3-T13UM□-A12-U2 ZP3-T16UM□-A12-U2	ZP3-T10UM□-A12-U4 ZP3-T13UM□-A12-U4 ZP3-T16UM□-A12-U4	ZP3-T10UM□-A12-U6 ZP3-T13UM□-A12-U6 ZP3-T16UM□-A12-U6
Barb fitting	 M-5AU-2 [Weight: 1.5 g] ^{*2}	 M-5AU-4-X83 [Weight: 1.6 g] ^{*2}	 M-5AU-6-X83 [Weight: 1.8 g] ^{*2}
One-touch fitting	 KJH02-M5 [Weight: 1.9 g] ^{*2}		

*1 Refer to "ZP3-T▲▲UM□-A12-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲UM□-A12-B5".

Dimensions/With Adapter: Vacuum Inlet


Vertical

Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove


ZP3-T10UM□-A12-04

[Weight: 20.2 g]

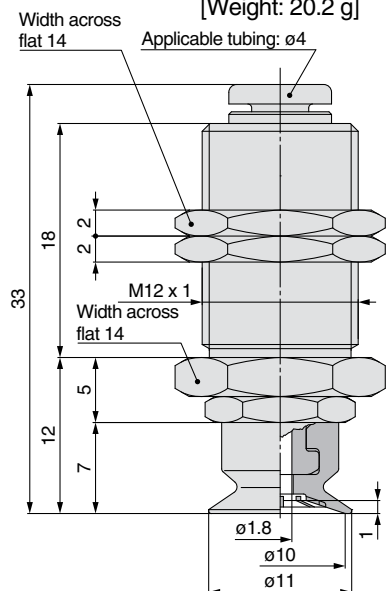


ZP3-T13UM□-A12-04

[Weight: 20.3 g]

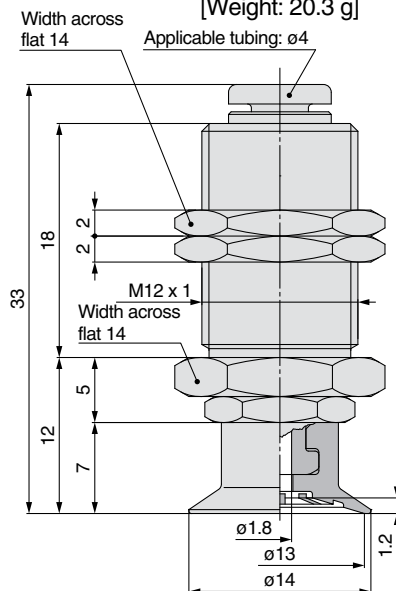


ZP3-T16UM□-A12-04

[Weight: 20.4 g]

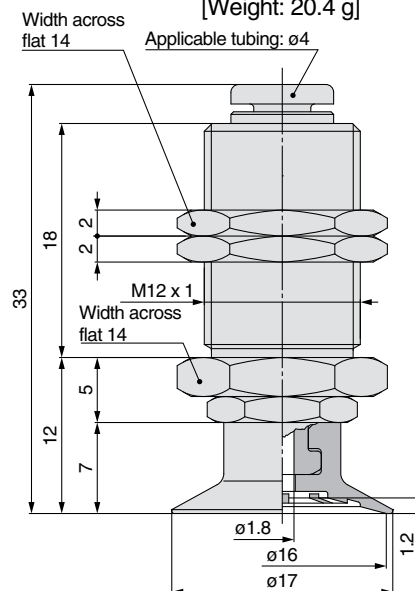


ZP3-T10UM□-A12-06

[Weight: 18.1 g]

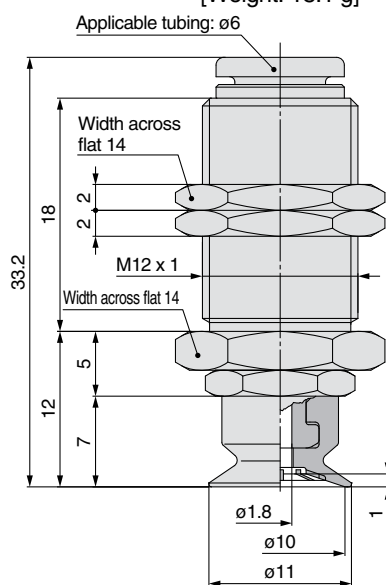


ZP3-T13UM□-A12-06

[Weight: 18.2 g]

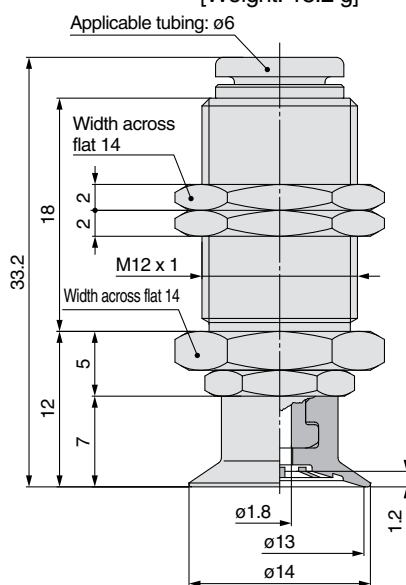

ZP3-T16UM□-A12-06

[Weight: 18.3 g]

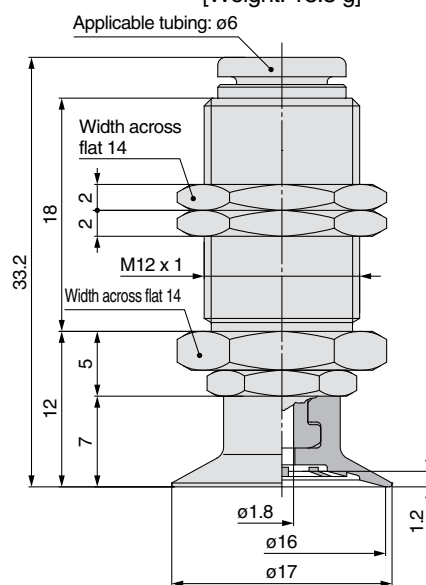


Dimensions/With Adapter: Vacuum Inlet


Vertical

Pad diameter	ø4 to ø8
Pad type	Bellows


ZP3-T04B□-A5
[Weight: 1.7 g]

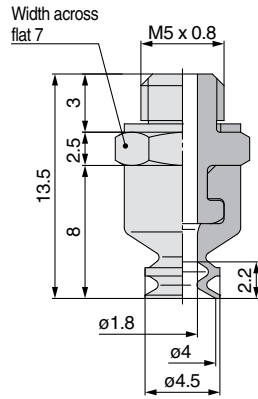


ZP3-T06B□-A5
[Weight: 1.7 g]

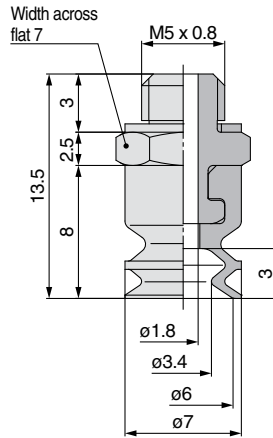


ZP3-T08B□-A5
[Weight: 1.8 g]

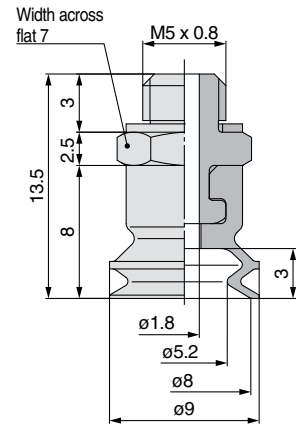


ZP3-T04B□-B5
[Weight: 2.3 g]

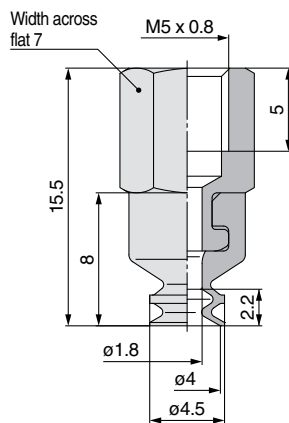

ZP3-T06B□-B5
[Weight: 2.3 g]

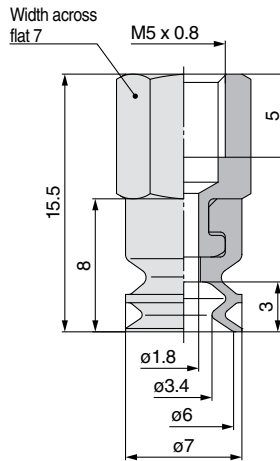

ZP3-T08B□-B5
[Weight: 2.4 g]

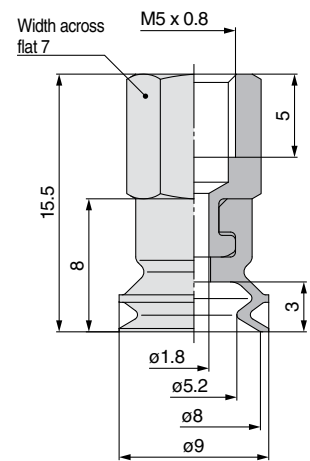


Dimensions/With Adapter: Vacuum Inlet

Vertical


Pad diameter	Ø4 to Ø8
---------------------	-----------------

Pad type	Bellows
----------	---------


ZP3-T04B□-A10-B5
[Weight: 11.0 g]

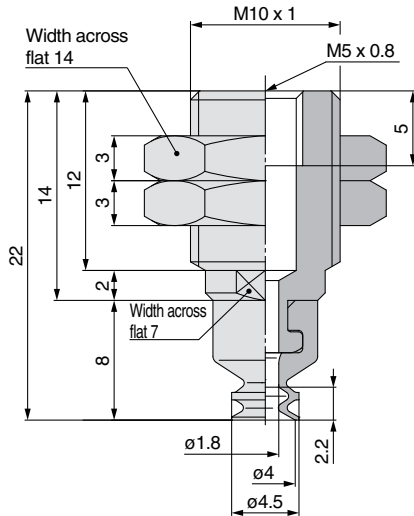

ZP3-T06B□-A10-B5
[Weight: 11.0 g]

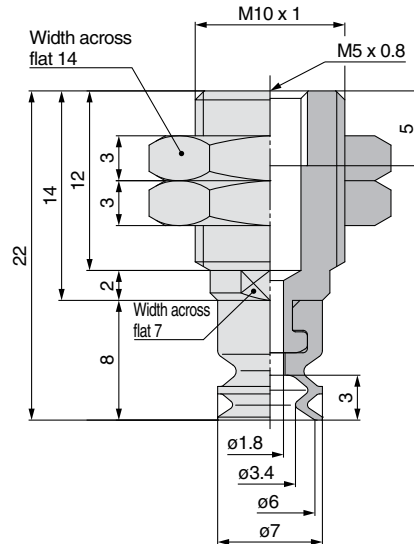


ZP3-T08B□-A10-B5
[Weight: 11.1 g]

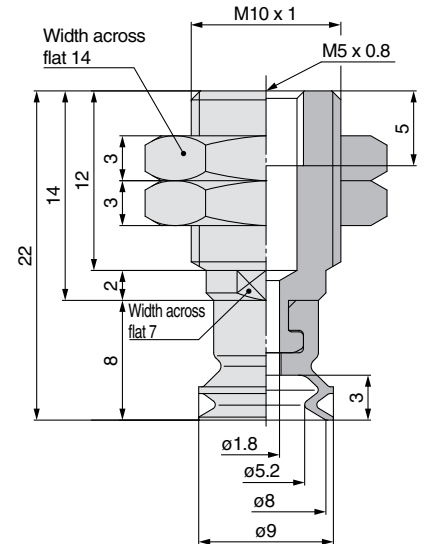

Vacuum Inlet Dimensions


Barb fitting

ZP3-T04B□-A10-U2
ZP3-T06B□-A10-U2
ZP3-T08B□-A10-U2

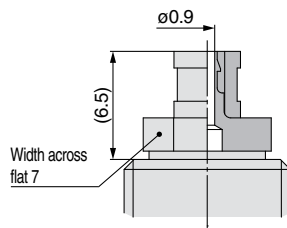

M-5AU-2 [Weight: 1.5 g]*2

ZP3-T04B□-A10-U4
ZP3-T06B□-A10-U4
ZP3-T08B□-A10-U4

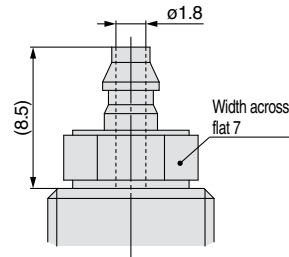


M-5AU-4-X83 [Weight: 1.6 g]*2

*1 Refer to "ZP3-T▲▲B■-A10-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲B■-A10-B5".


One-touch fitting

ZP3-T04B□-A10-02
ZP3-T06B□-A10-02
ZP3-T08B□-A10-02

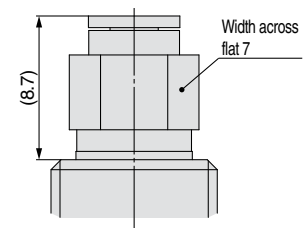


KJH02-M5 [Weight: 1.8 g]*2


ZP3-T04B□-A10-04
[Weight: 10.2 g]

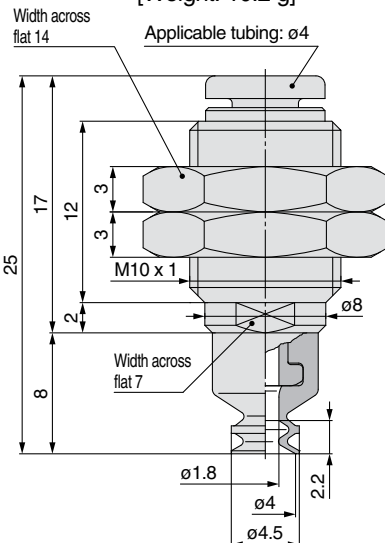

ZP3-T06B□-A10-04
[Weight: 10.2 g]

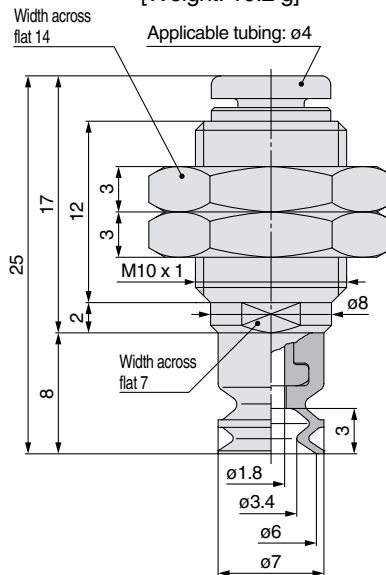

ZP3-T08B□-A10-04
[Weight: 10.3 g]

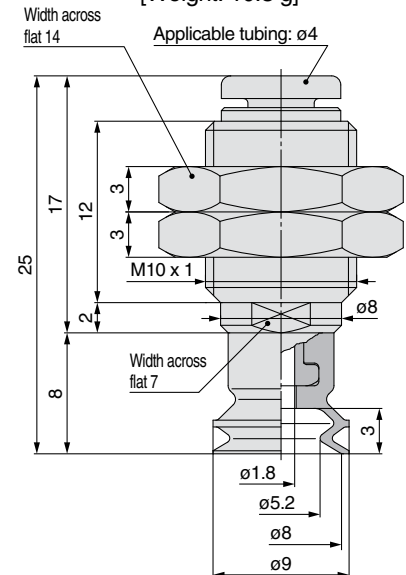


Dimensions/With Adapter: Vacuum Inlet **Vertical**


Pad diameter $\varnothing 10$ to $\varnothing 16$

Pad type **Bellows**


ZP3-T10B-A5
[Weight: 3.2 g]

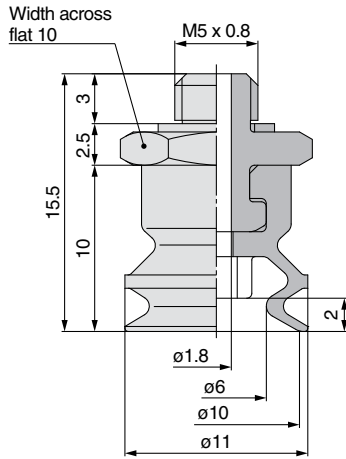


ZP3-T13B-A5
[Weight: 3.4 g]

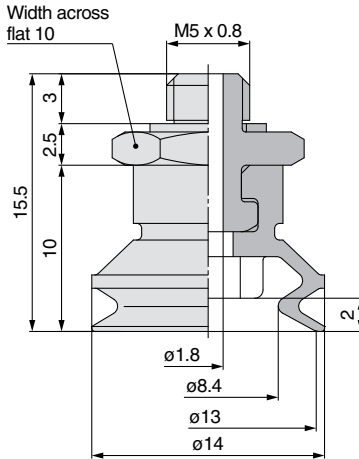


ZP3-T16B-A5
[Weight: 3.5 g]

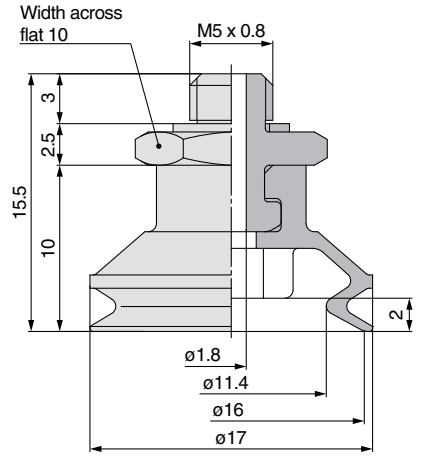


ZP3-T10B-B5
[Weight: 5.9 g]

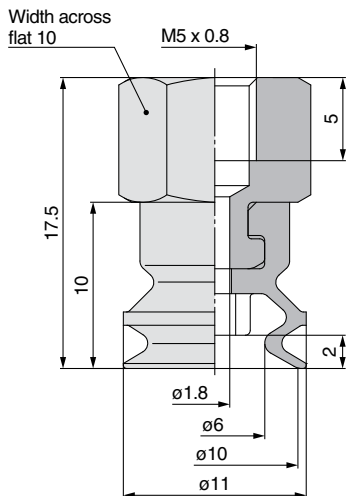

ZP3-T13B-B5
[Weight: 6.1 g]

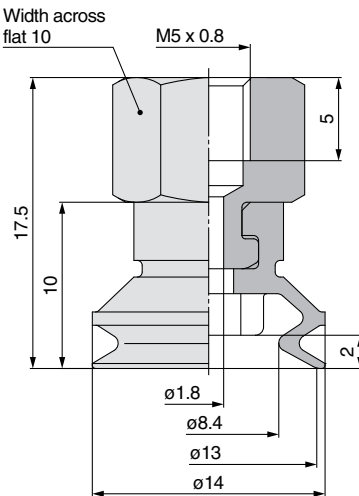

ZP3-T16B-B5
[Weight: 6.2 g]

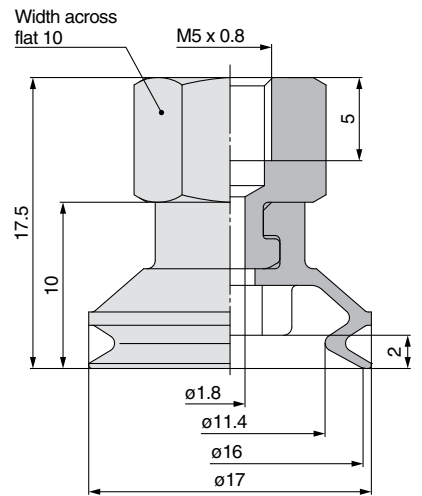

Pad Unit

Vertical
With Adapter:
Vacuum Inlet

Vertical
With Buffer:
Vacuum Inlet

Lateral
With Adapter:
Vacuum Inlet

Lateral
With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List

Buffer Applicable
Pad List

Mounting Adapter
Part No.

Buffer Assembly
Part No.

ZP3-T10B-A12-B5







[Weight: 19.0 g]

ZP3-T13B-A12-B5

[Weight: 19.2 g]

ZP3-T16B-A12-B5

[Weight: 19.3 g]

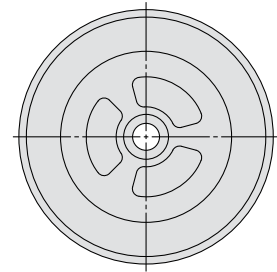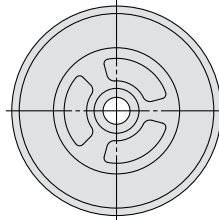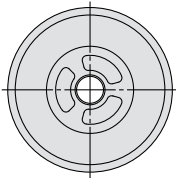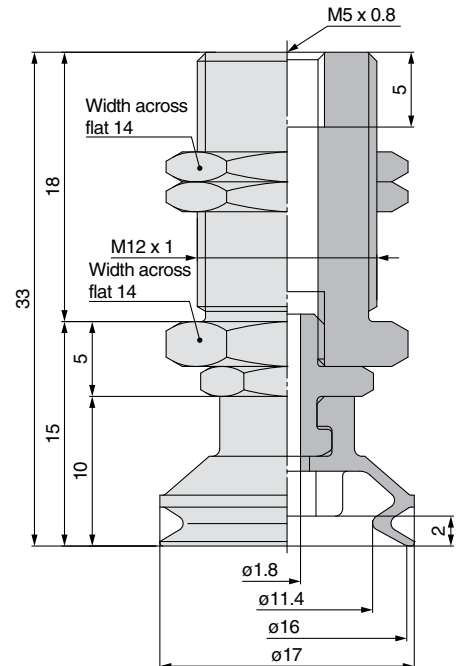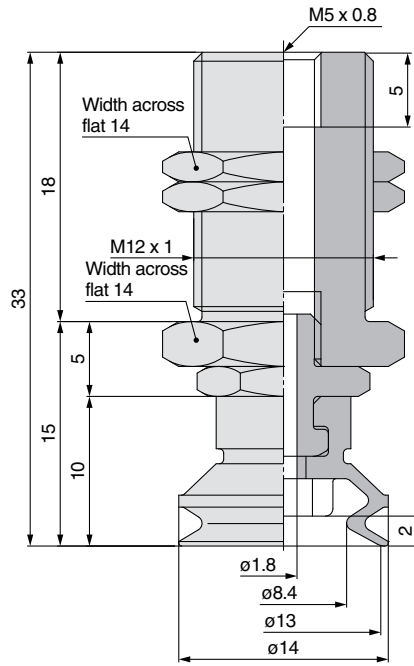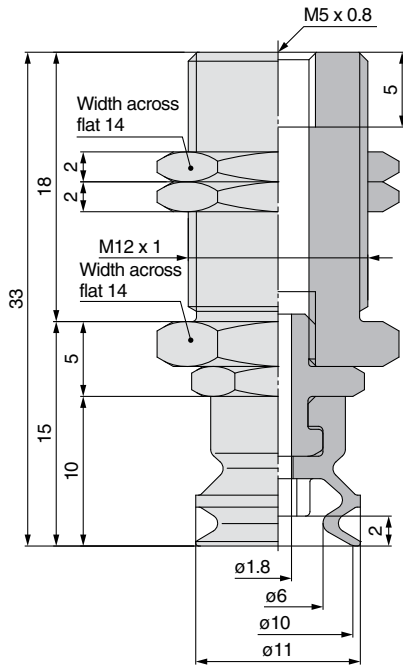

Vacuum Inlet Dimensions

	ZP3-T10B-A12-U2 ZP3-T13B-A12-U2 ZP3-T16B-A12-U2	ZP3-T10B-A12-U4 ZP3-T13B-A12-U4 ZP3-T16B-A12-U4	ZP3-T10B-A12-U6 ZP3-T13B-A12-U6 ZP3-T16B-A12-U6
Barb fitting	<p>M-5AU-2 [Weight: 1.5 g]^{*2}</p>	<p>M-5AU-4-X83 [Weight: 1.6 g]^{*2}</p>	<p>M-5AU-6-X83 [Weight: 1.8 g]^{*2}</p>
One-touch fitting	<p>KJH02-M5 [Weight: 1.9 g]^{*2}</p>	<p>* 1 Refer to "ZP3-T▲▲B-A12-B5" for dimensions. * 2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲B-A12-B5".</p>	

Dimensions/With Adapter: Vacuum Inlet


Vertical

Pad diameter $\phi 10$ to $\phi 16$

Pad type Bellows


ZP3-T10B-A12-04

[Weight: 20.4 g]

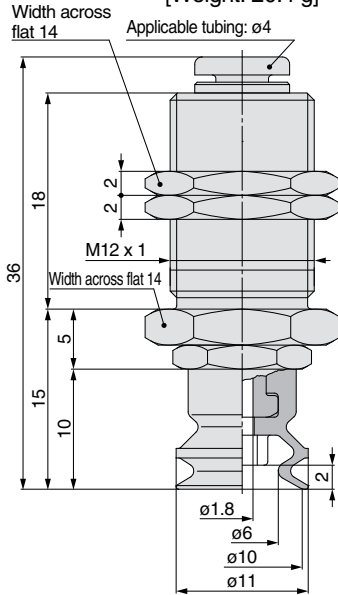


ZP3-T13B-A12-04

[Weight: 20.6 g]

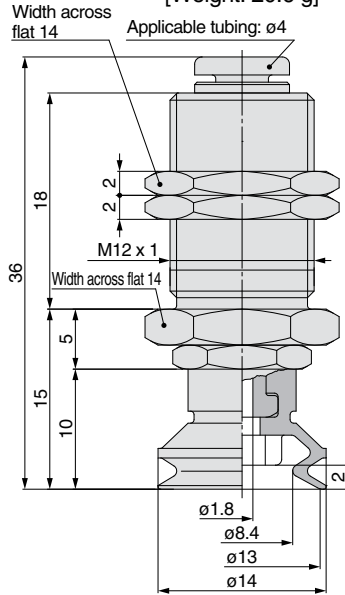


ZP3-T16B-A12-04

[Weight: 20.7 g]

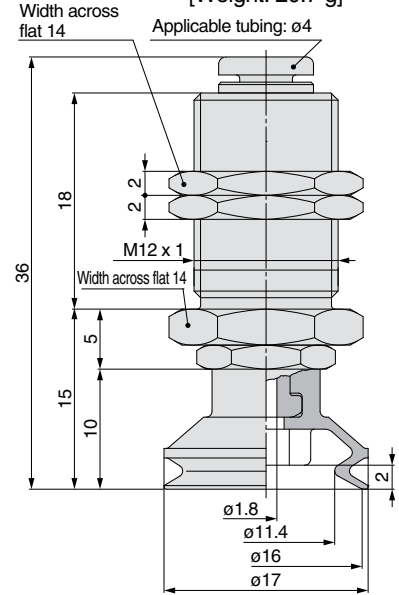


ZP3-T10B-A12-06

[Weight: 18.3 g]

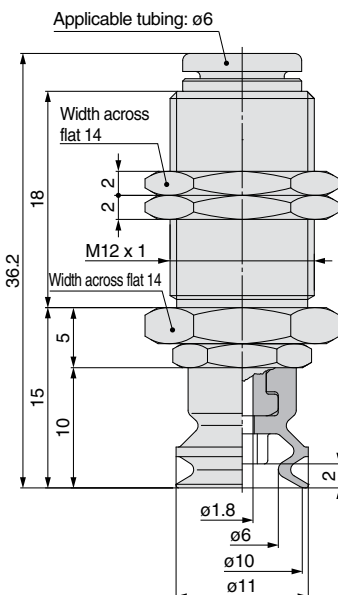


ZP3-T13B-A12-06

[Weight: 18.5 g]

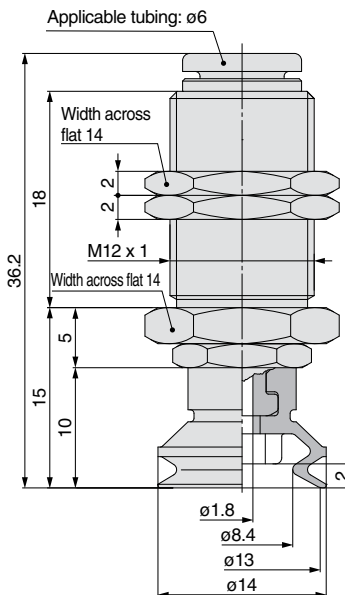

ZP3-T16B-A12-06

[Weight: 18.6 g]

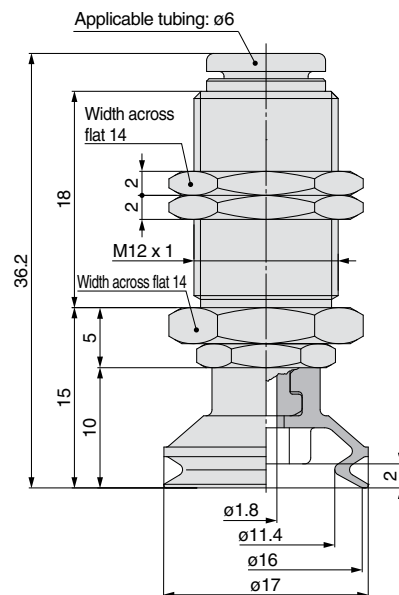

How to Order

Vertical vacuum inlet/
With buffer

ZP3-T 015 U N J 3-B3

Vacuum inlet direction ●

Symbol	Direction
T	Vertical

Pad diameter ●

Symbol	Pad diameter
015	ø1.5
02	ø2
035	ø3.5
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16

Pad type – Pad diameter ●

Pad type	Pad diameter (Symbol)	015	02	035	04	06
U (Flat)		●	●	●	—	—
UM (Flat with groove)		—	—	—	—	●
B (Bellows)		—	—	—	●	●

Pad type	Pad diameter (Symbol)	08	10	13	16
U (Flat)		—	—	—	—
UM (Flat with groove)		●	●	●	●
B (Bellows)		●	●	●	●

Pad material (□) ●

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

● Vacuum inlet (◇)

	Symbol	Connection	ø1.5 to ø3.5	ø4 to ø8	ø10 to ø16
Female thread	B3	M3 x 0.5	●	—	—
	B5	M5 x 0.8	—	●	●
Barb fitting	U2	ø2 tubing *1	●	●	●
	U4	ø4 tubing *2	●	●	●
	U6	ø6 tubing *2	—	—	●
One-touch fitting	02	ø2 tubing	●	●	●
	04	ø4 tubing	●	●	●
	06	ø6 tubing	—	—	●

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping

● Stroke (■)—Buffer specifications

Stroke	ø1.5 to ø3.5	ø4 to ø16
	J K	J JB K
3	● ●	— ●
6	● ●	— ●
10	— —	● —
15	— —	— ●
20	— —	— ●

*Refer to the "Specifications" below, for applicable stroke.

● Buffer specifications (☆)

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

Specifications

Pad diameter	Buffer specifications	Stroke (mm)	Tightening torque lbf-ft (N-m)	Mounting	Spring reactive force	
					At 0 stroke lbf (N)	At full stroke lbf (N)
ø1.5 to ø3.5	J K	3, 6	1.1 to 1.33 (1.5 to 1.8)	M6 x 0.75	0.045 (0.2)	0.09 (0.4)
ø4 to ø16	J	3, 6, 10	1.48 to 1.84 (2.0 to 2.5)	M8 x 0.75		0.11 (0.5)
	JB	15, 20				
	K	3, 6, 10, 15, 20				

Replacement Part No.

Pad diameter: ø1.5 to ø3.5

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-T(015/02/035)U□(J/K)3-◇	ZP3-(015/02/035)U□	ZP3B-T1(J/K)3-B3
ZP3-T(015/02/035)U□(J/K)6-◇		ZP3B-T1(J/K)6-B3

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-3AU-2, U4: M-3AU-4-X83
02: KJH02-M3, 04: KJH04-M3-X83

Pad diameter: ø4 to ø8

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-T(04/06/08)UM□(J/K)3-◇	ZP3-(04/06/08)UM□	ZP3B-T2A(J/K)3-B5
ZP3-T(04/06/08)B□(J/K)3-◇	ZP3-(04/06/08)B□	
ZP3-T(04/06/08)UM□(J/K)6-◇	ZP3-(04/06/08)UM□	ZP3B-T2A(J/K)6-B5
ZP3-T(04/06/08)B□(J/K)6-◇	ZP3-(04/06/08)B□	
ZP3-T(04/06/08)UM□(J/K)10-◇	ZP3-(04/06/08)UM□	ZP3B-T2A(J/K)10-B5
ZP3-T(04/06/08)B□(J/K)10-◇	ZP3-(04/06/08)B□	
ZP3-T(04/06/08)UM□(JB/K)15-◇	ZP3-(04/06/08)UM□	ZP3B-T2A(JB/K)15-B5
ZP3-T(04/06/08)B□(JB/K)15-◇	ZP3-(04/06/08)B□	
ZP3-T(04/06/08)UM□(JB/K)20-◇	ZP3-(04/06/08)UM□	ZP3B-T2A(JB/K)20-B5
ZP3-T(04/06/08)B□(JB/K)20-◇	ZP3-(04/06/08)B□	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
02: KJH02-M5, 04: KJH04-M5

Pad diameter: ø10 to ø16

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-T(10/13/16)UM□(J/K)3-◇	ZP3-(10/13/16)UM□	ZP3B-T2B(J/K)3-B5
ZP3-T(10/13/16)B□(J/K)3-◇	ZP3-(10/13/16)B□	
ZP3-T(10/13/16)UM□(J/K)6-◇	ZP3-(10/13/16)UM□	ZP3B-T2B(J/K)6-B5
ZP3-T(10/13/16)B□(J/K)6-◇	ZP3-(10/13/16)B□	
ZP3-T(10/13/16)UM□(J/K)10-◇	ZP3-(10/13/16)UM□	ZP3B-T2B(J/K)10-B5
ZP3-T(10/13/16)B□(J/K)10-◇	ZP3-(10/13/16)B□	
ZP3-T(10/13/16)UM□(JB/K)15-◇	ZP3-(10/13/16)UM□	ZP3B-T2B(JB/K)15-B5
ZP3-T(10/13/16)B□(JB/K)15-◇	ZP3-(10/13/16)B□	
ZP3-T(10/13/16)UM□(JB/K)20-◇	ZP3-(10/13/16)UM□	ZP3B-T2B(JB/K)20-B5
ZP3-T(10/13/16)B□(JB/K)20-◇	ZP3-(10/13/16)B□	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
U6: M-5AU-6-X83, 02: KJH02-M5
04: KJH04-M5, 06: KJH06-M5


Pad diameter $\phi 1.5$ to $\phi 3.5$

Pad type **Flat**


Stroke **3, 6 mm**

Dimensions/With Buffer: Vacuum Inlet **Vertical**


ZP3-T015U□J■-B3

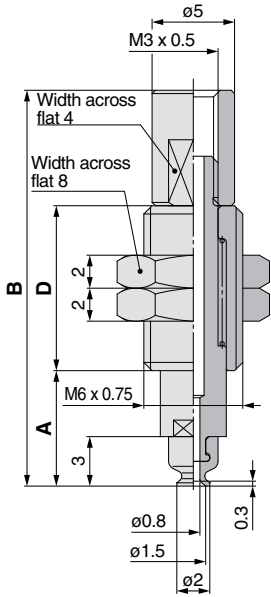


ZP3-T015U□K■-B3

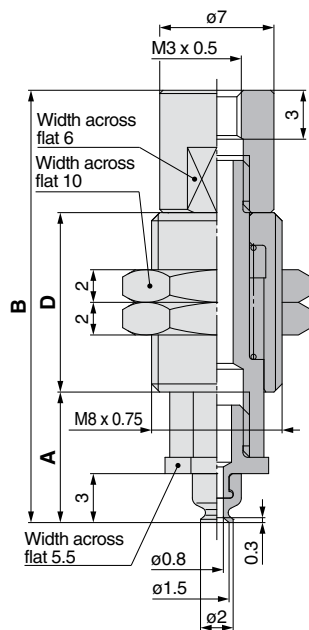

ZP3-T02U□J■-B3

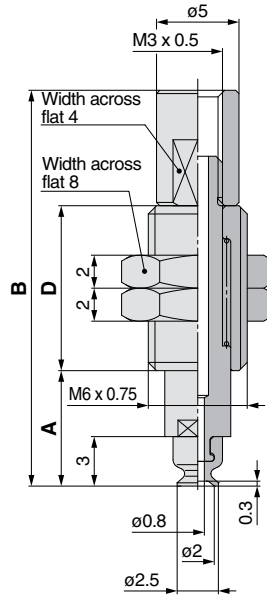

ZP3-T02U□K■-B3

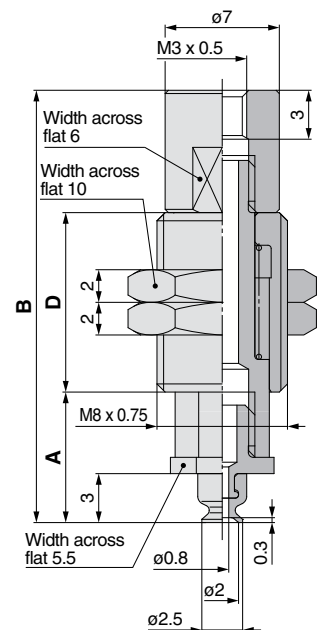

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-T015U□J3-B3	7	24	10	3.4
ZP3-T015U□J6-B3	10	31	14	4.4

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-T015U□K3-B3	8	26.5	11	6.8
ZP3-T015U□K6-B3	11	33	14.5	8.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-T02U□J3-B3	7	24	10	3.4
ZP3-T02U□J6-B3	10	31	14	4.4


Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)


Model	A	B	D	Weight (g)
ZP3-T02U□K3-B3	8	26.5	11	6.8
ZP3-T02U□K6-B3	11	33	14.5	8.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

ZP3-T035U□J■-B3

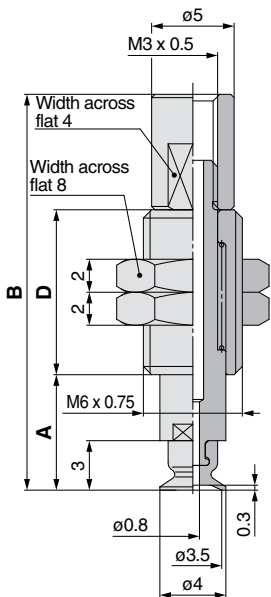

ZP3-T035U□K■-B3

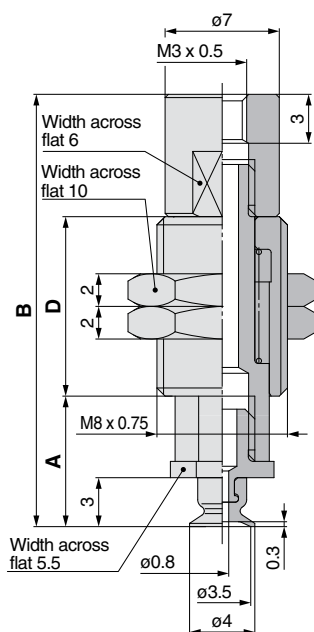

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-T035U□J3-B3	7	24	10	3.4
ZP3-T035U□J6-B3	10	31	14	4.4

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)


Model	A	B	D	Weight (g)
ZP3-T035U□K3-B3	8	26.5	11	6.8
ZP3-T035U□K6-B3	11	33	14.5	8.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Vacuum Inlet Dimensions


Barb fitting

ZP3-T015U□☆■-U2
ZP3-T02U□☆■-U2
ZP3-T035U□☆■-U2

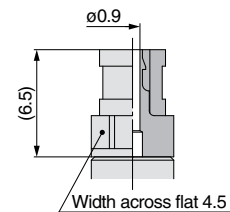

M-3AU-2 [Weight: 0.7 g]^{*2}


ZP3-T015U□☆■-U4
ZP3-T02U□☆■-U4
ZP3-T035U□☆■-U4

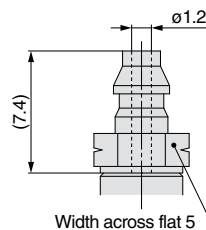

M-3AU-4-X83 [Weight: 0.7 g]^{*2}


One-touch fitting

ZP3-T015U□☆■-02
ZP3-T02U□☆■-02
ZP3-T035U□☆■-02

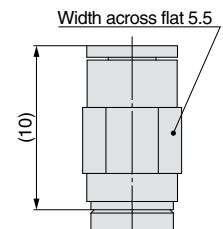

KJH02-M3 [Weight: 1.1 g]^{*2}

ZP3-T015U□☆■-04
ZP3-T02U□☆■-04
ZP3-T035U□☆■-04

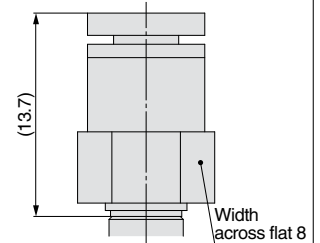

KJH04-M3-X83 [Weight: 1.9 g]^{*2}

*1 Refer to "ZP3-T▲▲▲U□☆■-B3" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲▲U□☆■-B3".

Pad diameter $\phi 4$ to $\phi 8$



Pad type Flat with groove

Stroke 3, 6, 10 mm

Dimensions/With Buffer: Vacuum Inlet **Vertical**



ZP3-T04UM□J■-B5

ZP3-T04UM□K■-B5

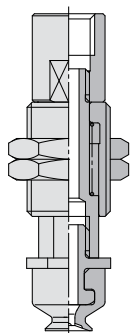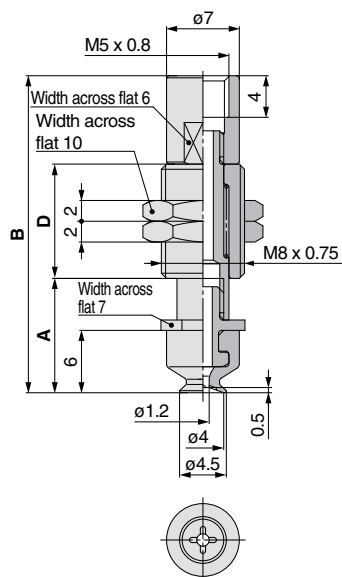

ZP3-T06UM□J■-B5

ZP3-T06UM□K■-B5

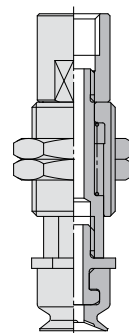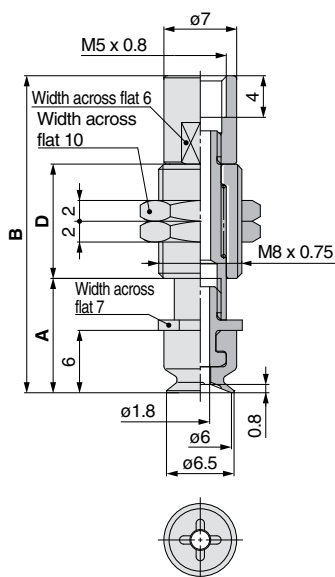

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T04UM□☆3-B5	11	30.5	11	7.4	7.3
ZP3-T04UM□☆6-B5	14	37	14.5	8.6	8.6
ZP3-T04UM□☆10-B5	18	47	20.5	10.5	10.5

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Dimensions (per stroke)



Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T06UM□☆3-B5	11	30.5	11	7.4	7.3
ZP3-T06UM□☆6-B5	14	37	14.5	8.6	8.6
ZP3-T06UM□☆10-B5	18	47	20.5	10.5	10.5

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-T08UM□J■-B5

ZP3-T08UM□K■-B5

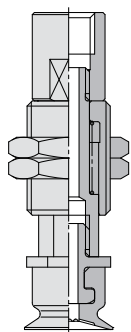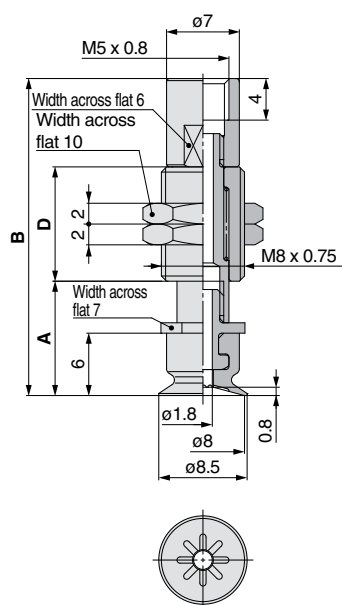

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T08UM□☆3-B5	11	30.5	11	7.4	7.3
ZP3-T08UM□☆6-B5	14	37	14.5	8.6	8.6
ZP3-T08UM□☆10-B5	18	47	20.5	10.5	10.5


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T04UM□☆■-U2
ZP3-T06UM□☆■-U2
ZP3-T08UM□☆■-U2

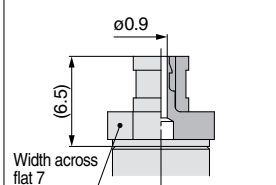

M-5AU-2 [Weight: 1.5 g]*2


ZP3-T04UM□☆■-U4
ZP3-T06UM□☆■-U4
ZP3-T08UM□☆■-U4

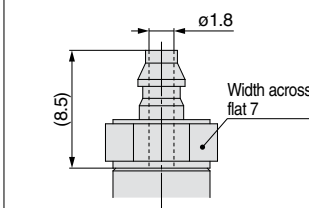

M-5AU-4-X83 [Weight: 1.6 g]*2


One-touch fitting

ZP3-T04UM□☆■-02
ZP3-T06UM□☆■-02
ZP3-T08UM□☆■-02

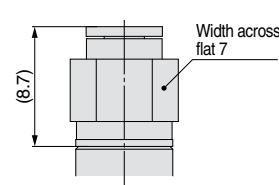

KJH02-M5 [Weight: 1.9 g]*2

ZP3-T04UM□☆■-04
ZP3-T06UM□☆■-04
ZP3-T08UM□☆■-04

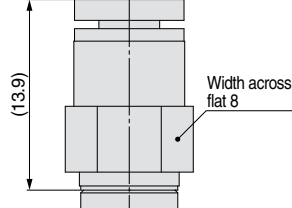

KJH04-M5 [Weight: 2.4 g]*2

*1 Refer to "ZP3-T▲▲UM□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲UM□☆■-B5".

Pad diameter $\phi 4$ to $\phi 8$

Pad type Flat with groove

Stroke 15, 20 mm


Dimensions/With Buffer: Vacuum Inlet Vertical

ZP3-T04UM \square JB \blacksquare -B5

ZP3-T04UM \square K \blacksquare -B5

ZP3-T06UM \square JB \blacksquare -B5


ZP3-T06UM \square K \blacksquare -B5

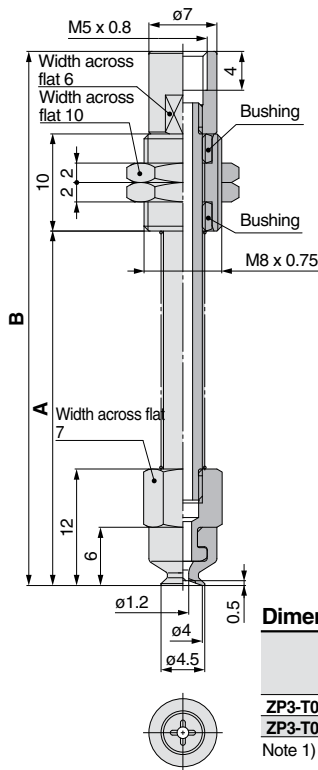

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T04UM \square 15-B5	36.5	55	10.3	12.3
ZP3-T04UM \square 20-B5	44	62.5	10.9	13.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "JB" or "K".

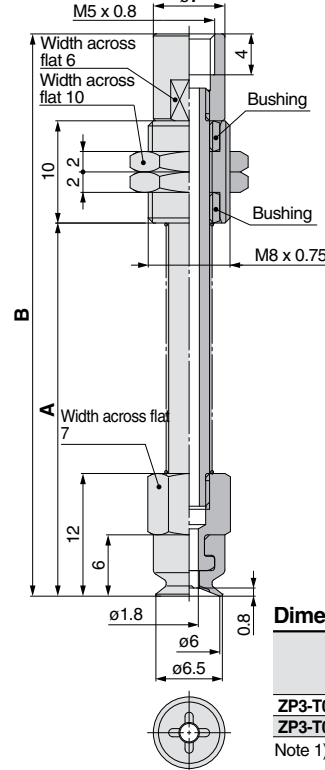


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T06UM \square 15-B5	36.5	55	10.3	12.3
ZP3-T06UM \square 20-B5	44	62.5	10.9	13.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-T08UM \square JB \blacksquare -B5

ZP3-T08UM \square K \blacksquare -B5

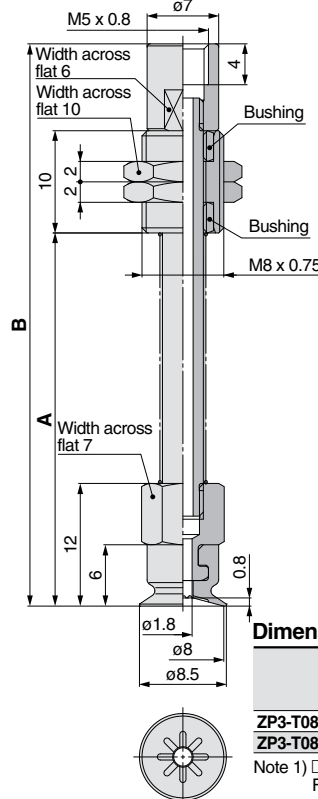

Dimensions (per stroke)


Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T08UM \square 15-B5	36.5	55	10.3	12.3
ZP3-T08UM \square 20-B5	44	62.5	10.9	13.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T04UM \square ☆ \blacksquare -U2
ZP3-T06UM \square ☆ \blacksquare -U2
ZP3-T08UM \square ☆ \blacksquare -U2

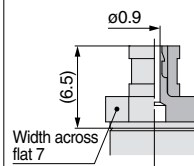

M-5AU-2 [Weight: 1.5 g]*2


ZP3-T04UM \square ☆ \blacksquare -U4
ZP3-T06UM \square ☆ \blacksquare -U4
ZP3-T08UM \square ☆ \blacksquare -U4

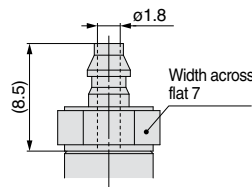

M-5AU-4-X83 [Weight: 1.6 g]*2


One-touch fitting

ZP3-T04UM \square ☆ \blacksquare -02
ZP3-T06UM \square ☆ \blacksquare -02
ZP3-T08UM \square ☆ \blacksquare -02

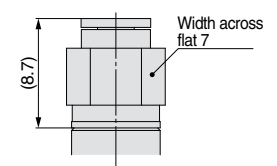

KJH02-M5 [Weight: 1.9 g]*2

ZP3-T04UM \square ☆ \blacksquare -04
ZP3-T06UM \square ☆ \blacksquare -04
ZP3-T08UM \square ☆ \blacksquare -04

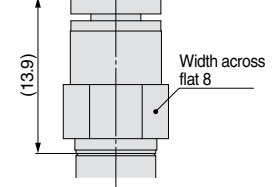

KJH04-M5 [Weight: 2.4 g]*2

*1 Refer to "ZP3-T▲▲UM \square ☆ \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲UM \square ☆ \blacksquare -B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove

Stroke 3, 6, 10 mm

Dimensions/With Buffer: Vacuum Inlet


Vertical

ZP3-T10UM□J■-B5

ZP3-T10UM□K■-B5

ZP3-T13UM□J■-B5

ZP3-T13UM□K■-B5

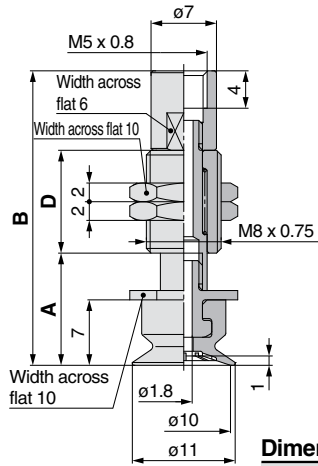


Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T10UM□☆3-B5	12	31.5	11	8.4	8.3
ZP3-T10UM□☆6-B5	15	38	14.5	9.6	9.6
ZP3-T10UM□☆10-B5	19	48	20.5	11.7	11.7

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

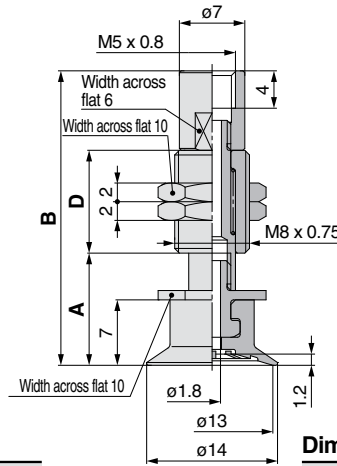

Dimensions (per stroke)


Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T13UM□☆3-B5	12	31.5	11	8.5	8.4
ZP3-T13UM□☆6-B5	15	38	14.5	9.7	9.7
ZP3-T13UM□☆10-B5	19	48	20.5	11.8	11.8

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-T16UM□J■-B5

ZP3-T16UM□K■-B5

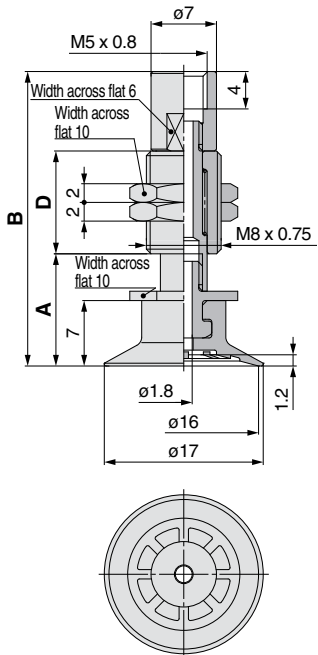

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T16UM□☆3-B5	12	31.5	11	8.6	8.5
ZP3-T16UM□☆6-B5	15	38	14.5	9.8	9.8
ZP3-T16UM□☆10-B5	19	48	20.5	11.9	11.9


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T10UM□☆■-U2
ZP3-T13UM□☆■-U2
ZP3-T16UM□☆■-U2

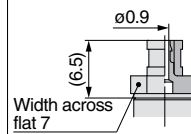


M-5AU-2 [Weight: 1.5 g]*2

ZP3-T10UM□☆■-U4
ZP3-T13UM□☆■-U4
ZP3-T16UM□☆■-U4

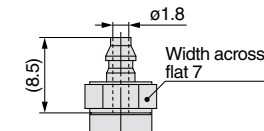

M-5AU-4-X83 [Weight: 1.6 g]*2


ZP3-T10UM□☆■-U6
ZP3-T13UM□☆■-U6
ZP3-T16UM□☆■-U6

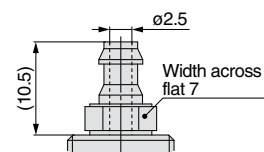

M-5AU-6-X83 [Weight: 1.8 g]*2


One-touch fitting

ZP3-T10UM□☆■-02
ZP3-T13UM□☆■-02
ZP3-T16UM□☆■-02

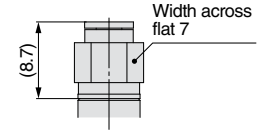


KJH02-M5 [Weight: 1.9 g]*2

ZP3-T10UM□☆■-04
ZP3-T13UM□☆■-04
ZP3-T16UM□☆■-04

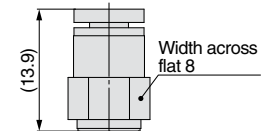

KJH04-M5 [Weight: 2.4 g]*2

ZP3-T10UM□☆■-06
ZP3-T13UM□☆■-06
ZP3-T16UM□☆■-06

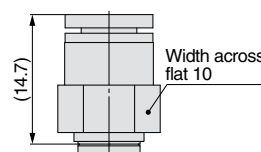

KJH06-M5 [Weight: 3.3 g]*2

*1 Refer to "ZP3-T▲▲UM□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲UM□☆■-B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove

Stroke 15, 20 mm

Dimensions/With Buffer: Vacuum Inlet


Vertical

ZP3-T10UM \square JB \blacksquare -B5

ZP3-T10UM \square K \blacksquare -B5

ZP3-T13UM \square JB \blacksquare -B5

ZP3-T13UM \square K \blacksquare -B5

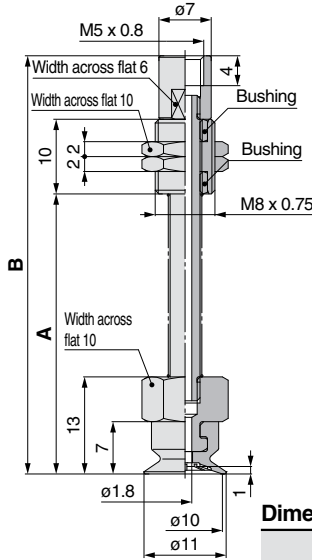


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T10UM \square 15-B5	37.5	56	13.1	15.1
ZP3-T10UM \square 20-B5	45	63.5	16.2	16.2

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

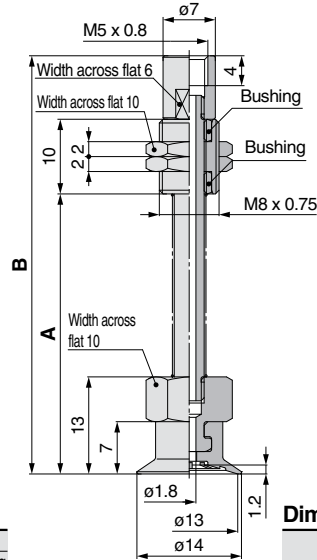

Dimensions (per stroke)


Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T13UM \square 15-B5	37.5	56	13.2	15.2
ZP3-T13UM \square 20-B5	45	63.5	16.3	16.3

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-T16UM \square JB \blacksquare -B5

ZP3-T16UM \square K \blacksquare -B5

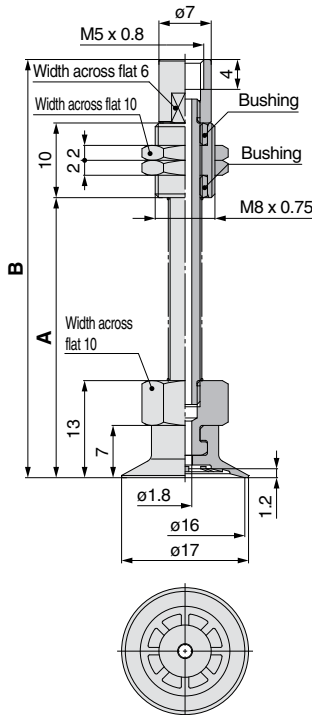

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T16UM \square 15-B5	37.5	56	13.3	15.3
ZP3-T16UM \square 20-B5	45	63.5	16.4	16.4


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T10UM \square ☆ \blacksquare -U2
ZP3-T13UM \square ☆ \blacksquare -U2
ZP3-T16UM \square ☆ \blacksquare -U2

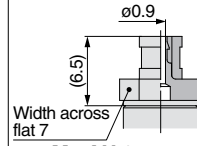


M-5AU-2 [Weight: 1.5 g]*2

ZP3-T10UM \square ☆ \blacksquare -U4
ZP3-T13UM \square ☆ \blacksquare -U4
ZP3-T16UM \square ☆ \blacksquare -U4

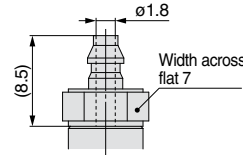

M-5AU-4-X83 [Weight: 1.6 g]*2


ZP3-T10UM \square ☆ \blacksquare -U6
ZP3-T13UM \square ☆ \blacksquare -U6
ZP3-T16UM \square ☆ \blacksquare -U6

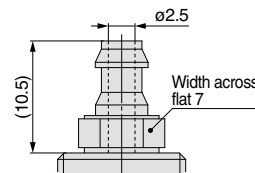

M-5AU-6-X83 [Weight: 1.8 g]*2


One-touch fitting

ZP3-T10UM \square ☆ \blacksquare -02
ZP3-T13UM \square ☆ \blacksquare -02
ZP3-T16UM \square ☆ \blacksquare -02

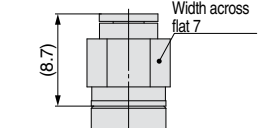


KJH02-M5 [Weight: 1.9 g]*2

ZP3-T10UM \square ☆ \blacksquare -04
ZP3-T13UM \square ☆ \blacksquare -04
ZP3-T16UM \square ☆ \blacksquare -04

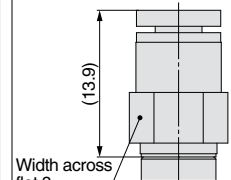

KJH04-M5 [Weight: 2.4 g]*2

ZP3-T10UM \square ☆ \blacksquare -06
ZP3-T13UM \square ☆ \blacksquare -06
ZP3-T16UM \square ☆ \blacksquare -06

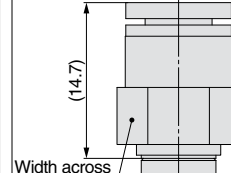


KJH06-M5 [Weight: 3.3 g]*2


*1 Refer to "ZP3-T \blacktriangle UM \square ☆ \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T \blacktriangle UM \square ☆ \blacksquare -B5".


ZP3-T04B□J■-B5

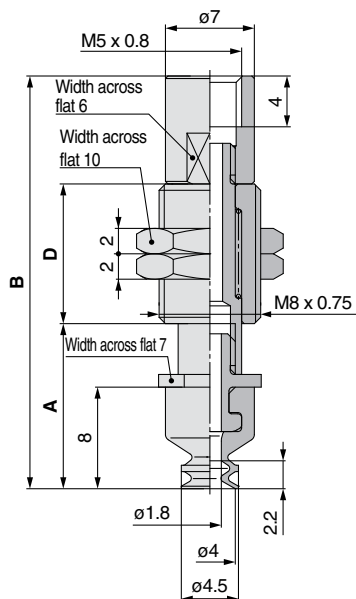


ZP3-T04B□K■-B5

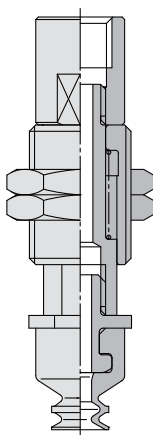

ZP3-T06B□J■-B5

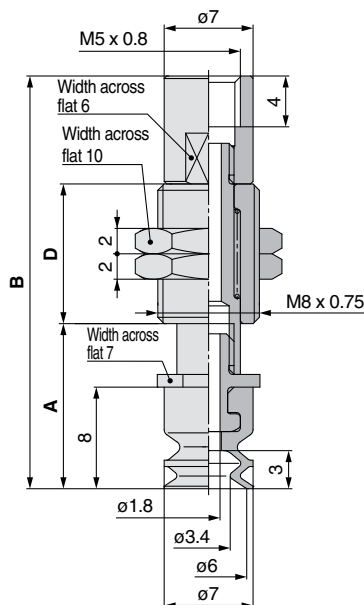

ZP3-T06B□K■-B5

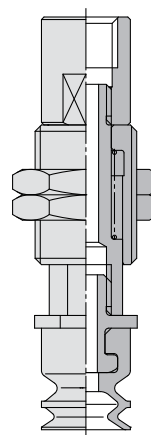

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T04B□☆3-B5	13	32.5	11	7.4	7.3
ZP3-T04B□☆6-B5	16	39	14.5	8.6	8.6
ZP3-T04B□☆10-B5	20	49	20.5	10.5	10.5

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".


Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T06B□☆3-B5	13	32.5	11	7.4	7.3
ZP3-T06B□☆6-B5	16	39	14.5	8.6	8.6
ZP3-T06B□☆10-B5	20	49	20.5	10.5	10.5


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-T08B□J■-B5

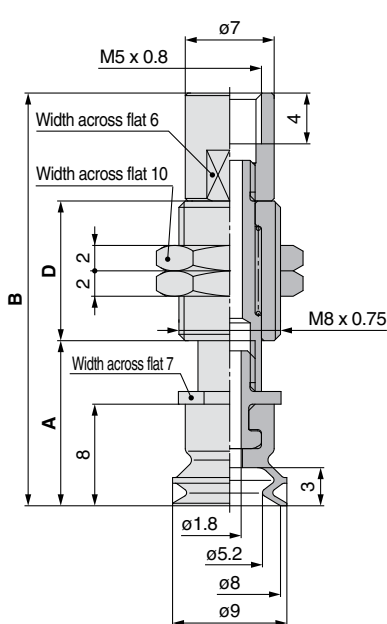

ZP3-T08B□K■-B5

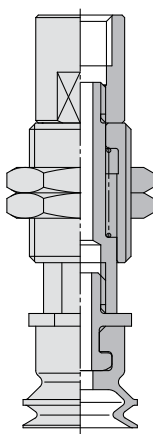

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T08B□☆3-B5	13	32.5	11	7.5	7.4
ZP3-T08B□☆6-B5	16	39	14.5	8.7	8.7
ZP3-T08B□☆10-B5	20	49	20.5	10.6	10.6


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T04B□☆■-U2
ZP3-T06B□☆■-U2
ZP3-T08B□☆■-U2

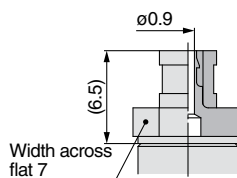

M-5AU-2 [Weight: 1.5 g]*2


ZP3-T04B□☆■-U4
ZP3-T06B□☆■-U4
ZP3-T08B□☆■-U4

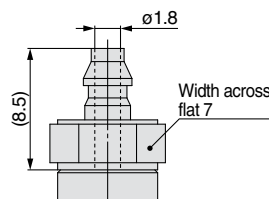

M-5AU-4-X83 [Weight: 1.6 g]*2


One-touch fitting

ZP3-T04B□☆■-02
ZP3-T06B□☆■-02
ZP3-T08B□☆■-02

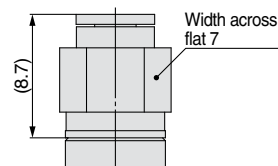

KJH02-M5 [Weight: 1.9 g]*2

ZP3-T04B□☆■-04
ZP3-T06B□☆■-04
ZP3-T08B□☆■-04

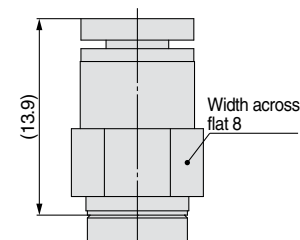

KJH04-M5 [Weight: 2.4 g]*2

*1 Refer to "ZP3-T▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲B□☆■-B5".

Pad diameter $\phi 4$ to $\phi 8$

Pad type Bellows

Stroke 15, 20 mm





Dimensions/With Buffer: Vacuum Inlet Vertical

ZP3-T04B \square JB \blacksquare -B5

ZP3-T04B \square K \blacksquare -B5

ZP3-T06B \square JB \blacksquare -B5

ZP3-T06B \square K \blacksquare -B5

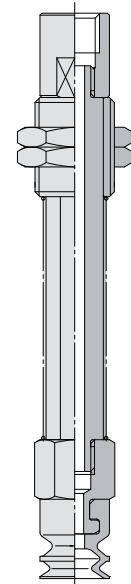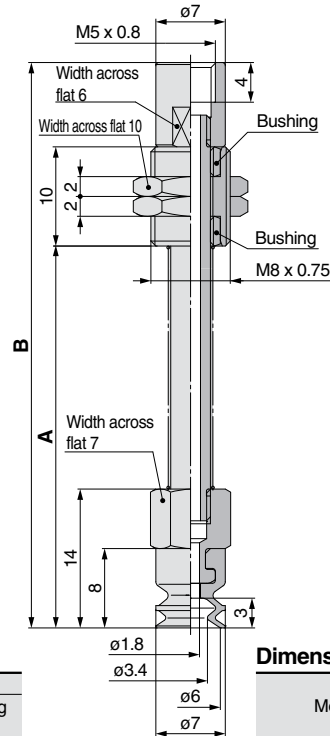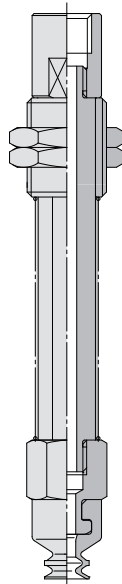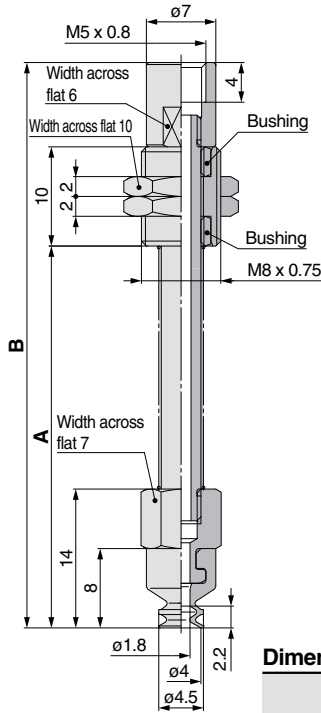

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T04B \square 15-B5	38.5	57	10.3	12.3
ZP3-T04B \square 20-B5	46	64.5	10.9	13.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Dimensions (per stroke)



Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T06B \square 15-B5	38.5	57	10.3	12.3
ZP3-T06B \square 20-B5	46	64.5	10.9	13.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-T08B \square JB \blacksquare -B5

ZP3-T08B \square K \blacksquare -B5

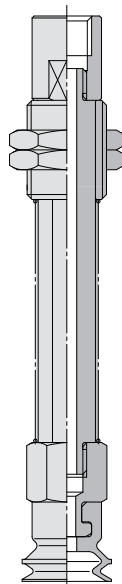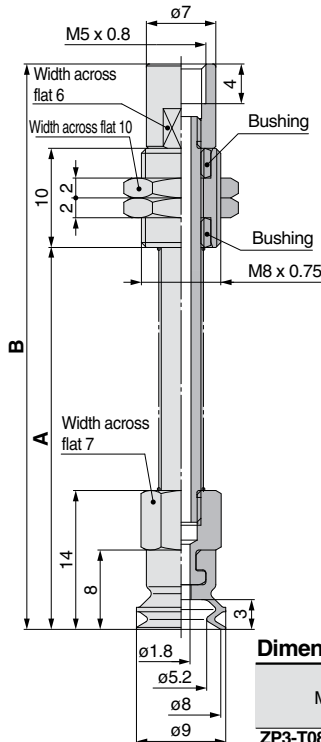

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T08B \square 15-B5	38.5	57	10.4	12.4
ZP3-T08B \square 20-B5	46	64.5	11.0	13.5


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T04B \square ☆ \blacksquare -U2
ZP3-T06B \square ☆ \blacksquare -U2
ZP3-T08B \square ☆ \blacksquare -U2

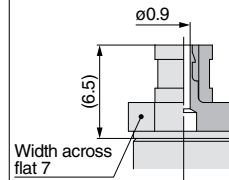

M-5AU-2 [Weight: 1.5 g]^{*2}


ZP3-T04B \square ☆ \blacksquare -U4
ZP3-T06B \square ☆ \blacksquare -U4
ZP3-T08B \square ☆ \blacksquare -U4

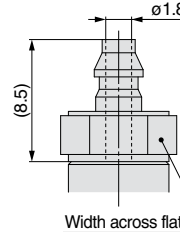

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


One-touch fitting

ZP3-T04B \square ☆ \blacksquare -02
ZP3-T06B \square ☆ \blacksquare -02
ZP3-T08B \square ☆ \blacksquare -02

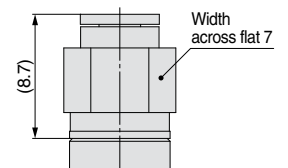

KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-T04B \square ☆ \blacksquare -04
ZP3-T06B \square ☆ \blacksquare -04
ZP3-T08B \square ☆ \blacksquare -04

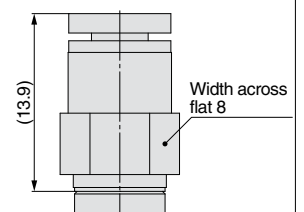

KJH04-M5 [Weight: 2.4 g]^{*2}

*1 Refer to "ZP3-T \blacktriangle \blacktriangle B \square ☆ \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T \blacktriangle \blacktriangle B \square ☆ \blacksquare -B5".


Pad diameter $\phi 10$ to $\phi 16$

Pad type Bellows


Stroke 3, 6, 10 mm

Dimensions/With Buffer: Vacuum Inlet **Vertical**


ZP3-T10B□J■-B5

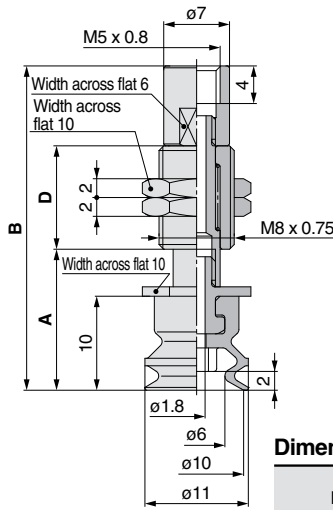


ZP3-T10B□K■-B5



ZP3-T13B□J■-B5

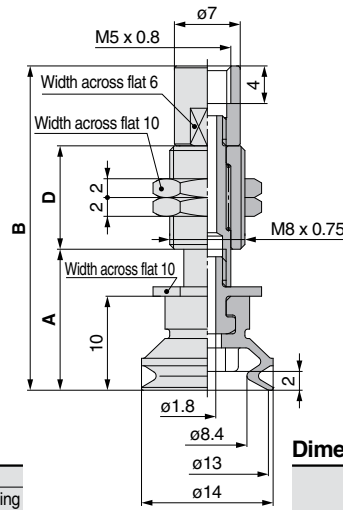

ZP3-T13B□K■-B5

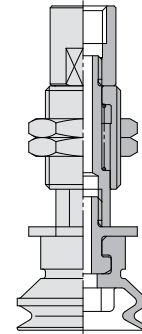

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T10B□☆3-B5	15	34.5	11	8.6	8.5
ZP3-T10B□☆6-B5	18	41	14.5	9.7	9.7
ZP3-T10B□☆10-B5	22	51	20.5	11.7	11.7

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".


Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T13B□☆3-B5	15	34.5	11	8.7	8.6
ZP3-T13B□☆6-B5	18	41	14.5	9.8	9.8
ZP3-T13B□☆10-B5	22	51	20.5	11.8	11.8


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-T16B□J■-B5

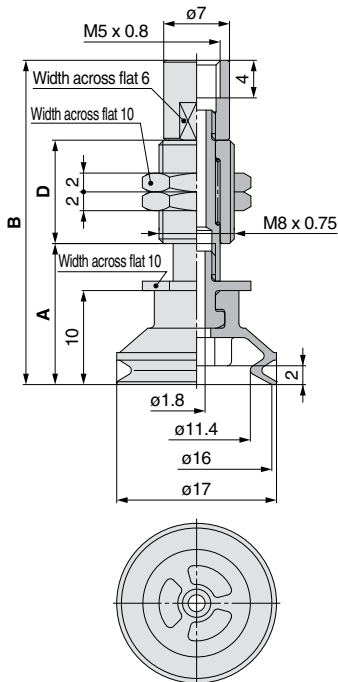

ZP3-T16B□K■-B5

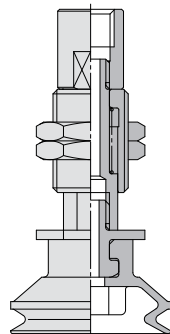

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-T16B□☆3-B5	15	34.5	11	8.8	8.7
ZP3-T16B□☆6-B5	18	41	14.5	9.9	9.9
ZP3-T16B□☆10-B5	22	51	20.5	11.9	11.9


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T10B□☆■-U2
ZP3-T13B□☆■-U2
ZP3-T16B□☆■-U2

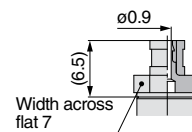


M-5AU-2 [Weight: 1.5 g]^{*2}

ZP3-T10B□☆■-U4
ZP3-T13B□☆■-U4
ZP3-T16B□☆■-U4

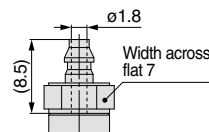

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


ZP3-T10B□☆■-U6
ZP3-T13B□☆■-U6
ZP3-T16B□☆■-U6

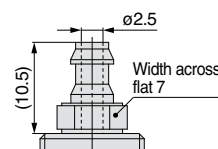

M-5AU-6-X83 [Weight: 1.8 g]^{*2}


One-touch fitting

ZP3-T10B□☆■-02
ZP3-T13B□☆■-02
ZP3-T16B□☆■-02




KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-T10B□☆■-04
ZP3-T13B□☆■-04
ZP3-T16B□☆■-04

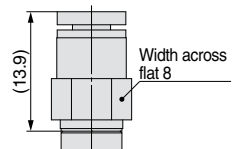

KJH04-M5 [Weight: 2.4 g]^{*2}

ZP3-T10B□☆■-06
ZP3-T13B□☆■-06
ZP3-T16B□☆■-06

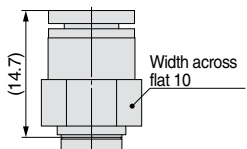

KJH06-M5 [Weight: 3.3 g]^{*2}

*1 Refer to "ZP3-T▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲B□☆■-B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type Bellows

Stroke 15, 20 mm


Dimensions/With Buffer: Vacuum Inlet **Vertical**

ZP3-T10B□JB■-B5

ZP3-T10B□K■-B5

ZP3-T13B□JB■-B5

ZP3-T13B□K■-B5

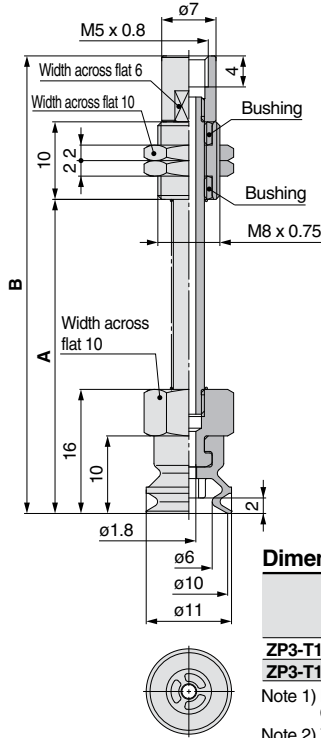


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T10B□☆15-B5	40.5	59	13.3	15.3
ZP3-T10B□☆20-B5	48	66.5	16.4	16.4

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

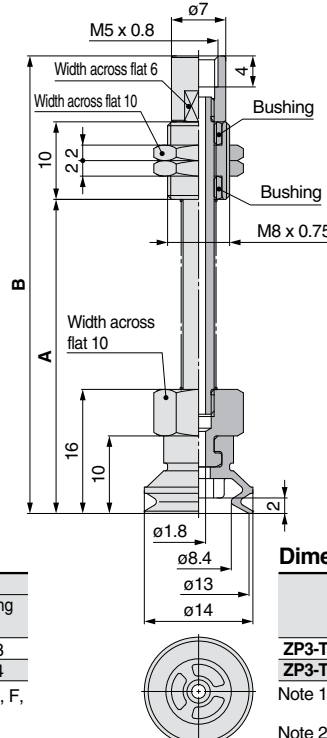

Dimensions (per stroke)


Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T13B□☆15-B5	40.5	59	13.5	15.5
ZP3-T13B□☆20-B5	48	66.5	16.6	16.6

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-T16B□JB■-B5

ZP3-T16B□K■-B5

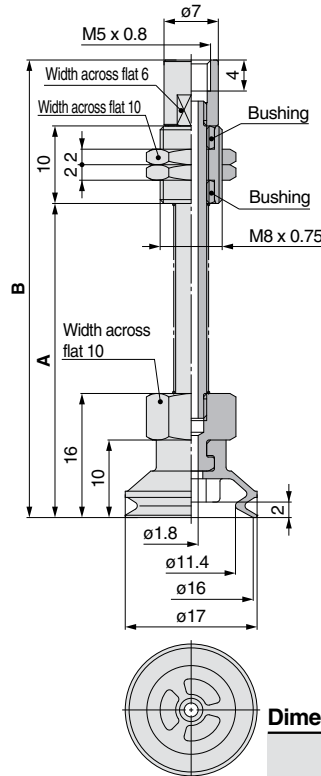

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-T16B□☆15-B5	40.5	59	13.6	15.6
ZP3-T16B□☆20-B5	48	66.5	16.7	16.7


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-T10B□☆■-U2
ZP3-T13B□☆■-U2
ZP3-T16B□☆■-U2

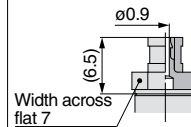


M-5AU-2 [Weight: 1.5 g]^{*2}

ZP3-T10B□☆■-U4
ZP3-T13B□☆■-U4
ZP3-T16B□☆■-U4

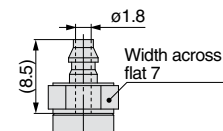

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


ZP3-T10B□☆■-U6
ZP3-T13B□☆■-U6
ZP3-T16B□☆■-U6

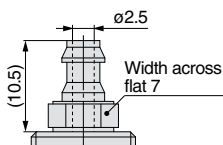

M-5AU-6-X83 [Weight: 1.8 g]^{*2}


One-touch fitting

ZP3-T10B□☆■-02
ZP3-T13B□☆■-02
ZP3-T16B□☆■-02




KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-T10B□☆■-04
ZP3-T13B□☆■-04
ZP3-T16B□☆■-04

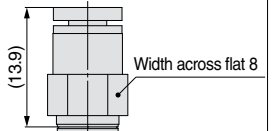

KJH04-M5 [Weight: 2.4 g]^{*2}

ZP3-T10B□☆■-06
ZP3-T13B□☆■-06
ZP3-T16B□☆■-06

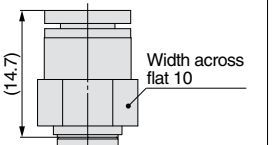

KJH06-M5 [Weight: 3.3 g]^{*2}

*1 Refer to "ZP3-T▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-T▲▲B□☆■-B5".

How to Order

Lateral vacuum inlet/
With adapter

ZP3 – Y 015 U N – B3 – B3

• Vacuum inlet direction •

Symbol	Direction
Y	Lateral

• Pad diameter •

Symbol	Pad diameter
015	ø1.5
02	ø2
035	ø3.5
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16

• Vacuum inlet (◇)

	Symbol	Connection	ø1.5 to ø3.5	ø4 to ø8	ø10 to ø16
Female thread	B3	M3 x 0.5	●	—	—
	B5	M5 x 0.8	—	—	●
Barb fitting	U2	ø2 tubing *1	●	●	●
	U4	ø4 tubing *2	●	●	●
	U6	ø6 tubing *2	—	—	●
One-touch fitting	02	ø2	●	●	●
	04	ø4	●	●	●
	06	ø6	—	—	●

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping

• Mounting thread size

	Symbol	Thread size	ø1.5 to ø3.5	ø4 to ø16
Female thread	B3	M3 x 0.5	●	—
	B5	M5 x 0.8	—	●

• Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

• Pad type – Pad diameter

	Pad diameter (Symbol)	015	02	035	04	06	08	10	13	16
Pad type										
U (Flat)		●	●	●	—	—	—	—	—	—
UM (Flat with groove)		—	—	—	●	●	●	●	●	●
B (Bellows)		—	—	—	●	●	●	●	●	●

Specifications

Pad diameter: ø1.5 to ø3.5

Model	Pad unit part no.	Adapter part no.
ZP3-Y(015/02/035)U□-B3-◇	ZP3-(015/02/035)U□	ZP3A-Y1-B3

Note 1) • in the table indicates the pad material.

Note 2) • in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (•) U2: M-3AU-2, U4: M-3AU-4-X83
02: KJH02-M3, 04: KJH04-M3-X83

Pad diameter: ø4 to ø8

Model	Pad unit part no.	Adapter part no.
ZP3-Y(04/06/08)UM□-B5-◇	ZP3-(04/06/08)UM□	ZP3A-Y2-B5
ZP3-Y(04/06/08)B□-B5-◇	ZP3-(04/06/08)B□	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
02: KJH02-M5, 04: KJH04-M5

Pad diameter: ø10 to ø16

Model	Pad unit part no.	Adapter part no.
ZP3-Y (10/13/16)UM□-B5-◇	ZP3-(10/13/16)UM•	ZP3A-Y3-B5
ZP3-Y (10/13/16)B□-B5-◇	ZP3-(10/13/16)B•	

Note 1) • in the table indicates the pad material.

Note 2) • in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (•) U2: M-5AU-2, U4: M-5AU-4-X83
U6: M-5AU-6-X83, 02: KJH02-M5
04: KJH04-M5, 06: KJH06-M5

Dimensions/With Adapter: Vacuum Inlet


Lateral

Pad diameter $\varnothing 1.5$ to $\varnothing 3.5$

Pad type Flat


ZP3-Y015U□-B3-B3

[Weight: 1.9 g]

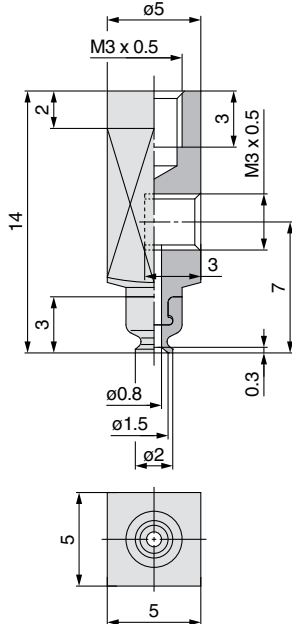


ZP3-Y02U□-B3-B3

[Weight: 1.9 g]

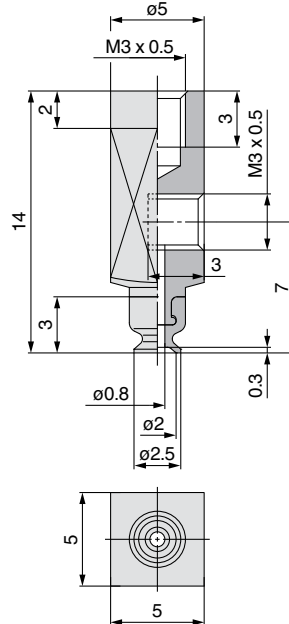

ZP3-Y035U□-B3-B3


[Weight: 1.9 g]

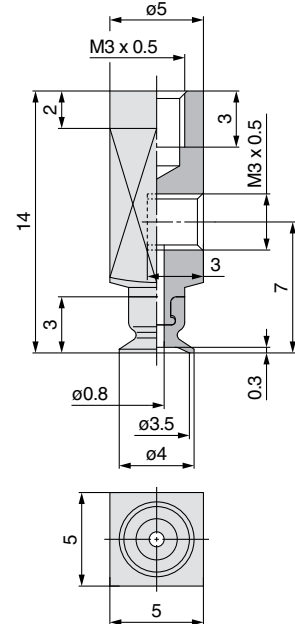

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y015U□-B3-U2
ZP3-Y02U□-B3-U2
ZP3-Y035U□-B3-U2

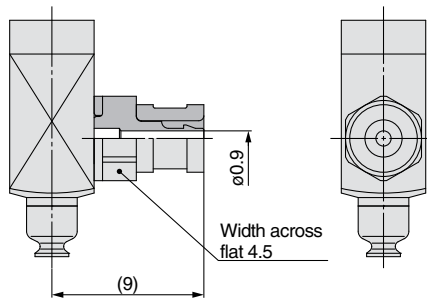

M-3AU-2 [Weight: 0.7 g]^{*2}


ZP3-Y015U□-B3-U4
ZP3-Y02U□-B3-U4
ZP3-Y035U□-B3-U4

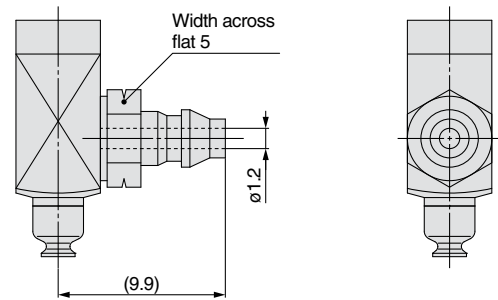

M-3AU-4-X83 [Weight: 0.7 g]^{*2}


One-touch fitting

ZP3-Y015U□-B3-02
ZP3-Y02U□-B3-02
ZP3-Y035U□-B3-02

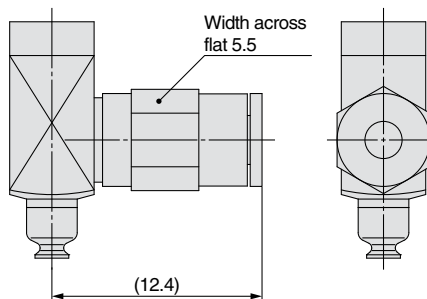

KJH02-M3 [Weight: 1.1 g]^{*2}

ZP3-Y015U□-B3-04
ZP3-Y02U□-B3-04
ZP3-Y035U□-B3-04

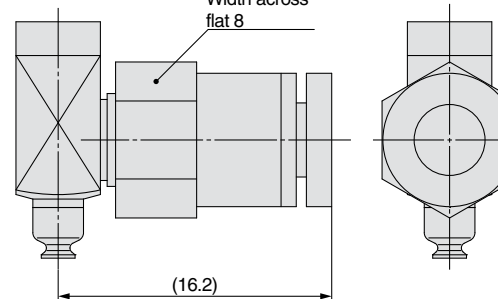

KJH04-M3-X83 [Weight: 1.9 g]^{*2}

*1 Refer to "ZP3-Y▲▲▲U□-B3-B3" for dimensions. *2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲▲U□-B3-B3".

Pad Unit

Vertical

With Adapter:
Vacuum Inlet

Vertical

With Buffer:
Vacuum Inlet

Lateral

With Adapter:
Vacuum Inlet

Lateral

With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List

Buffer Applicable
Pad List

Mounting Adapter
Part No.

Buffer Assembly
Part No.


Dimensions/With Adapter: Vacuum Inlet

Lateral


Pad diameter $\varnothing 4$ to $\varnothing 8$

Pad type Flat with groove


ZP3-Y04UM□-B5-B5
[Weight: 7.0 g]

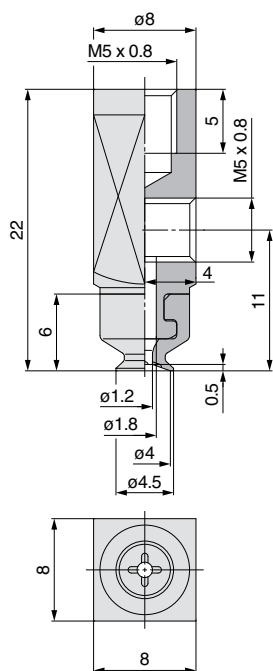

ZP3-Y06UM□-B5-B5
[Weight: 7.0 g]

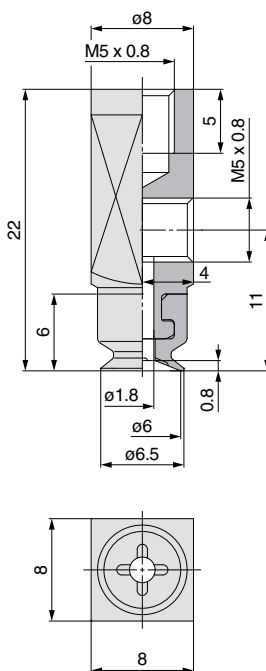


ZP3-Y08UM□-B5-B5
[Weight: 7.0 g]

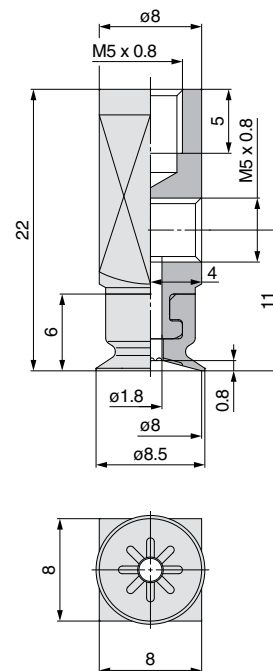

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04UM□-B5-U2
ZP3-Y06UM□-B5-U2
ZP3-Y08UM□-B5-U2

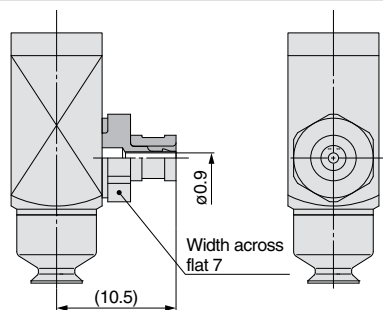

M-5AU-2 [Weight: 1.5 g]^{*2}


ZP3-Y04UM□-B5-U4
ZP3-Y06UM□-B5-U4
ZP3-Y08UM□-B5-U4

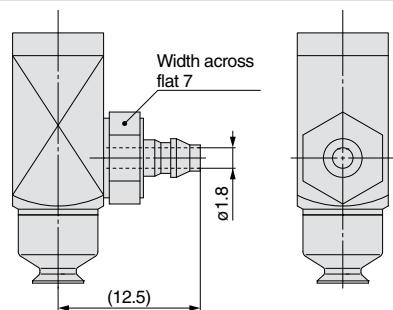

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


One-touch fitting

ZP3-Y04UM□-B5-02
ZP3-Y06UM□-B5-02
ZP3-Y08UM□-B5-02

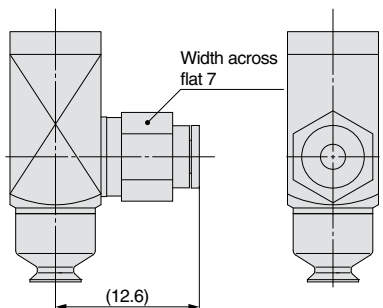

KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y04UM□-B5-04
ZP3-Y06UM□-B5-04
ZP3-Y08UM□-B5-04

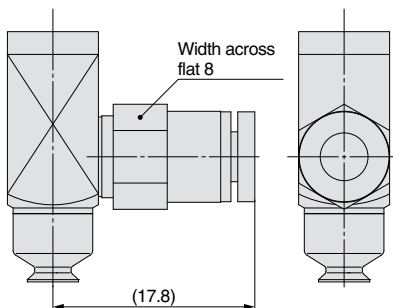

KJH04-M5 [Weight: 2.4 g]^{*2}

*1 Refer to "ZP3-Y▲▲UM□-B5-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲UM□-B5-B5".


Dimensions/With Adapter: Vacuum Inlet

Lateral


Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove


ZP3-Y10UM□-B5-B5
[Weight: 7.7 g]

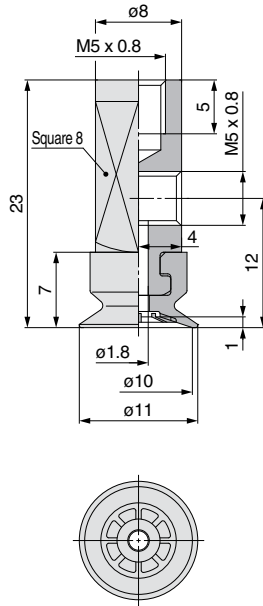

ZP3-Y13UM□-B5-B5
[Weight: 7.8 g]

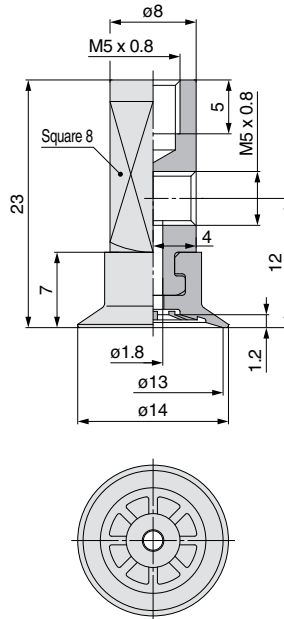

ZP3-Y16UM□-B5-B5
[Weight: 7.9 g]

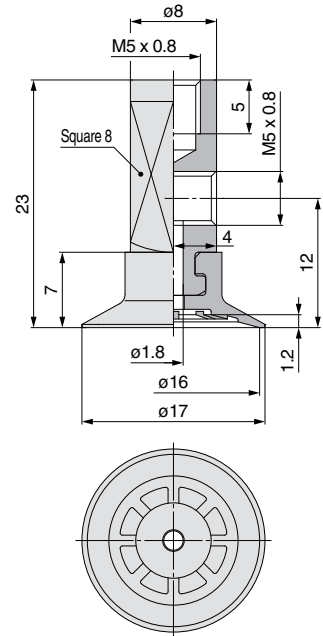

Vacuum Inlet Dimensions

	ZP3-Y10UM□-B5-U2 ZP3-Y13UM□-B5-U2 ZP3-Y16UM□-B5-U2	ZP3-Y10UM□-B3-U4 ZP3-Y13UM□-B3-U4 ZP3-Y16UM□-B3-U4	ZP3-Y10UM□-B5-U6 ZP3-Y13UM□-B5-U6 ZP3-Y16UM□-B5-U6
Barb fitting	<p>M-5AU-2 [Weight: 1.5 g]^{*2}</p>	<p>M-5AU-4-X83 [Weight: 1.6 g]^{*2}</p>	<p>M-5AU-6-X83 [Weight: 1.8 g]^{*2}</p>
One-touch fitting	<p>KJH02-M5 [Weight: 1.9 g]^{*2}</p>	<p>KJH04-M5 [Weight: 2.4 g]^{*2}</p>	<p>KJH06-M5 [Weight: 3.3 g]^{*2}</p>

*1 Refer to "ZP3-Y▲▲UM□-B5-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲UM□-B5-B5".

Dimensions/With Adapter: Vacuum Inlet


Lateral

Pad diameter $\phi 4$ to $\phi 8$

Pad type Bellows


ZP3-Y04B□-B5-B5

[Weight: 7.0 g]

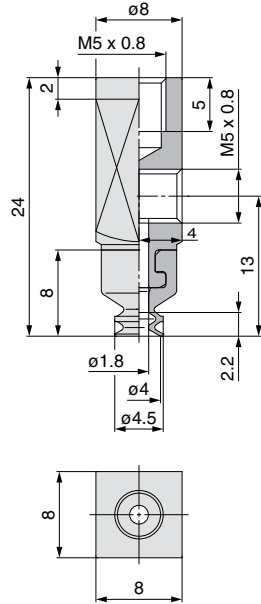


ZP3-Y06B□-B5-B5

[Weight: 7.0 g]

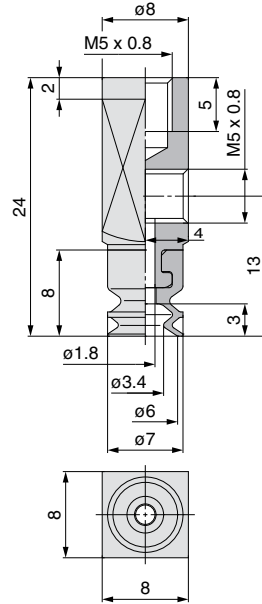

ZP3-Y08B□-B5-B5


[Weight: 7.1 g]

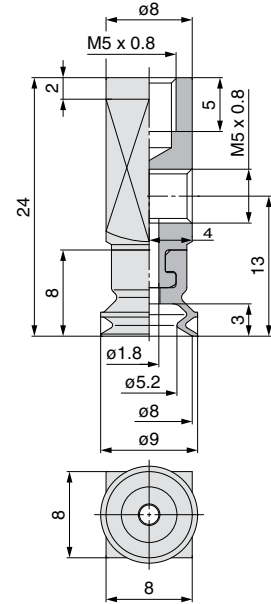

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04B□-B5-U2
ZP3-Y06B□-B5-U2
ZP3-Y08B□-B5-U2

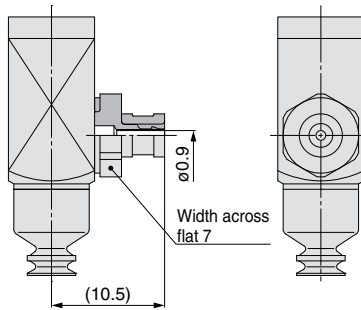

M-5AU-2 [Weight: 0.7 g]*2


ZP3-Y04B□-B5-U4
ZP3-Y06B□-B5-U4
ZP3-Y08B□-B5-U4

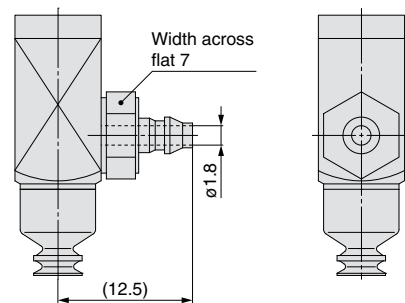

M-5AU-4-X83 [Weight: 0.7 g]*2


One-touch fitting

ZP3-Y04B□-B5-02
ZP3-Y06B□-B5-02
ZP3-Y08B□-B5-02

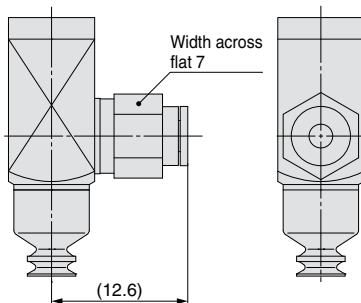

KJH02-M5 [Weight: 1.1 g]*2

ZP3-Y04B□-B5-04
ZP3-Y06B□-B5-04
ZP3-Y08B□-B5-04

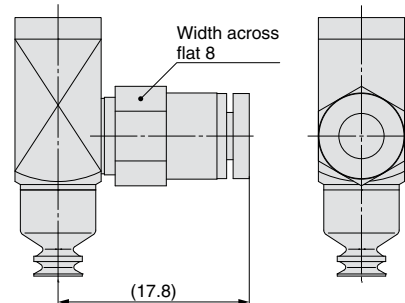

KJH04-M5 [Weight: 1.9 g]*2

*1 Refer to "ZP3-Y▲▲B□-B5-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲B□-B5-B5".


Dimensions/With Adapter: Vacuum Inlet

Lateral


Pad diameter $\phi 10$ to $\phi 16$

Pad type **Bellows**


ZP3-Y10B□-B5-B5
[Weight: 7.9 g]

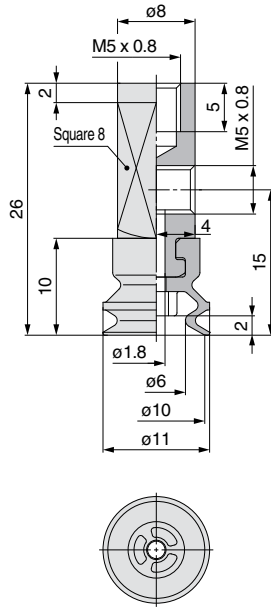

ZP3-Y13B□-B5-B5
[Weight: 8.1 g]

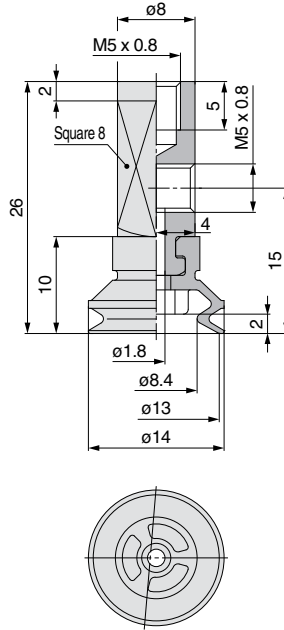

ZP3-Y16B□-B5-B5
[Weight: 8.2 g]

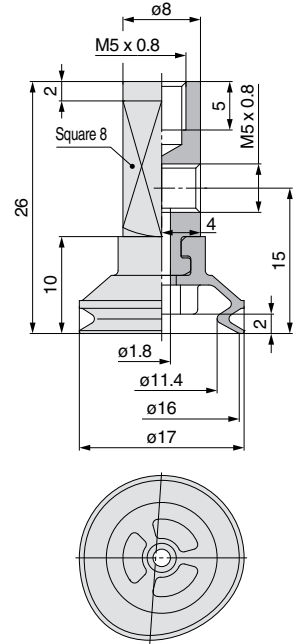

Vacuum Inlet Dimensions

	ZP3-Y10B□-B5-U2 ZP3-Y13B□-B5-U2 ZP3-Y16B□-B5-U2	ZP3-Y10B□-B5-U4 ZP3-Y13B□-B5-U4 ZP3-Y16B□-B5-U4	ZP3-Y10B□-B5-U6 ZP3-Y13B□-B5-U6 ZP3-Y16B□-B5-U6
Barb fitting	<p>M-5AU-2 [Weight: 1.5 g]^{*2}</p>	<p>M-5AU-4-X83 [Weight: 1.6 g]^{*2}</p>	<p>M-5AU-6-X83 [Weight: 1.8 g]^{*2}</p>
One-touch fitting	<p>KJH02-M5 [Weight: 1.9 g]^{*2}</p>	<p>KJH04-M5 [Weight: 2.4 g]^{*2}</p>	<p>KJH06-M5 [Weight: 3.3 g]^{*2}</p>

*1 Refer to "ZP3-Y▲▲B□-B5-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲B□-B5-B5".

How to Order

Lateral vacuum inlet/ With buffer

ZP3-Y 015 U N J 3-B3

Vacuum inlet direction

Symbol	Direction
Y	Lateral

Pad diameter

Symbol	Pad diameter
015	ø1.5
02	ø2
035	ø3.5
04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16

Pad type – Pad diameter

Pad type \ Pad diameter (Symbol)	015	02	035	04	06
U (Flat)	●	●	●	—	—
UM (Flat with groove)	—	—	—	●	●
B (Bellows)	—	—	—	●	●

Pad type \ Pad diameter (Symbol)	08	10	13	16
U (Flat)	—	—	—	—
UM (Flat with groove)	●	●	●	●
B (Bellows)	●	●	●	●

Pad material (□)

Symbol	Material
N	NBR
S	Silicone rubber
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

Vacuum inlet (◇)

	Symbol	Connection	ø1.5 to ø3.5	ø4 to ø8	ø10 to ø16
Female thread	B3	M3 x 0.5	●	—	—
	B5	M5 x 0.8	—	●	●
Barb fitting	U2	ø2 tubing *1	●	●	●
	U4	ø4 tubing *2	●	●	●
	U6	ø6 tubing *2	—	—	●
One-touch fitting	02	ø2 tubing	●	●	●
	04	ø4 tubing	●	●	●
	06	ø6 tubing	—	—	●

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping

Stroke (■)—Buffer specifications

Stroke	ø1.5 to ø3.5		ø4 to ø16		
	J	K	J	JB	K
3	●	●	●	—	●
6	●	●	●	—	●
10	—	—	●	—	●
15	—	—	—	●	●
20	—	—	—	●	●

Buffer specifications (☆)

J	Non-rotating
JB	Non-rotating, With bushing
K	Rotating

Specifications

Pad diameter	Buffer specifications	Stroke (mm)	Tightening torque lbf-ft (N·m)	Mounting	Spring reactive force	
					At 0 stroke lbf (N)	At full stroke lbf (N)
ø1.5 to ø3.5	J	3, 6	1.1 to 1.33 (1.5 to 1.8)	M6 x 0.75	0.045 (0.2)	0.09 (0.4)
	K		1.48 to 1.84 (2.0 to 2.5)	M8 x 0.75		0.11 (0.5)
ø4 to ø16	J	3, 6, 10	1.48 to 1.84 (2.0 to 2.5)	M8 x 0.75	0.045 (0.2)	0.11 (0.5)
	JB	15, 20				
	K	3, 6, 10, 15, 20				

Replacement Part No.

Pad diameter: ø1.5 to ø3.5

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-Y(015/02/035)U□(J/K)3-◇	ZP3-(015/02/035)U*	ZP3B-Y1(J/K)3-B3
ZP3-Y(015/02/035)U□(J/K)6-◇		ZP3B-Y1(J/K)6-B3

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-3AU-2, U4: M-3AU-4-X83
02: KJH02-M3, 04: KJH04-M3-X83

Pad diameter: ø4 to ø8

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-Y(04/06/08)UM□(J/K)3-◇	ZP3-(04/06/08)UM□	ZP3B-Y2A(J/K)3-B5
ZP3-Y(04/06/08)B□(J/K)3-◇	ZP3-(04/06/08)B□	
ZP3-Y(04/06/08)UM□(J/K)6-◇	ZP3-(04/06/08)UM□	ZP3B-Y2A(J/K)6-B5
ZP3-Y(04/06/08)B□(J/K)6-◇	ZP3-(04/06/08)B□	
ZP3-Y(04/06/08)UM□(J/K)10-◇	ZP3-(04/06/08)UM□	ZP3B-Y2A(J/K)10-B5
ZP3-Y(04/06/08)B□(J/K)10-◇	ZP3-(04/06/08)B□	
ZP3-Y(04/06/08)UM□(JB/K)15-◇	ZP3-(04/06/08)UM□	ZP3B-Y2A(JB/K)15-B5
ZP3-Y(04/06/08)B□(JB/K)15-◇	ZP3-(04/06/08)B□	
ZP3-Y(04/06/08)UM□(JB/K)20-◇	ZP3-(04/06/08)UM□	ZP3B-Y2A(JB/K)20-B5
ZP3-Y(04/06/08)B□(JB/K)20-◇	ZP3-(04/06/08)B□	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
02: KJH02-M5, 04: KJH04-M5

Pad diameter: ø10 to ø16

Model	Pad unit part no.	Buffer assembly part no. (Note 3)
ZP3-Y(10/13/16)UM□(J/K)3-◇	ZP3-(10/13/16)UM□	ZP3B-Y2B(J/K)3-B5
ZP3-Y(10/13/16)B□(J/K)3-◇	ZP3-(10/13/16)B□	
ZP3-Y(10/13/16)UM□(J/K)6-◇	ZP3-(10/13/16)UM□	ZP3B-Y2B(J/K)6-B5
ZP3-Y(10/13/16)B□(J/K)6-◇	ZP3-(10/13/16)B□	
ZP3-Y(10/13/16)UM□(J/K)10-◇	ZP3-(10/13/16)UM□	ZP3B-Y2B(J/K)10-B5
ZP3-Y(10/13/16)B□(J/K)10-◇	ZP3-(10/13/16)B□	
ZP3-Y(10/13/16)UM□(JB/K)15-◇	ZP3-(10/13/16)UM□	ZP3B-Y2B(JB/K)15-B5
ZP3-Y(10/13/16)B□(JB/K)15-◇	ZP3-(10/13/16)B□	
ZP3-Y(10/13/16)UM□(JB/K)20-◇	ZP3-(10/13/16)UM□	ZP3B-Y2B(JB/K)20-B5
ZP3-Y(10/13/16)B□(JB/K)20-◇	ZP3-(10/13/16)B□	

Note 1) □ in the table indicates the pad material.

Note 2) ◇ in the table indicates the vacuum inlet.

Note 3) Fitting is ordered separately.

Suffix of how to order (◇) U2: M-5AU-2, U4: M-5AU-4-X83
U6: M-5AU-6-X83, 02: KJH02-M5
04: KJH04-M5, 06: KJH06-M5

Pad diameter $\varnothing 1.5$ to $\varnothing 3.5$

Pad type **Flat**

Stroke **3, 6 mm**

Dimensions/With Buffer: Vacuum Inlet

Lateral

Pad Unit

Vertical

With Adapter:
Vacuum Inlet

Vertical
With Buffer:
Vacuum Inlet

Lateral
With Adapter:
Vacuum Inlet

Lateral
With Buffer:
Vacuum Inlet

Construction


Adapter Applicable
Pad List

Buffer Applicable
Pad List


Mounting Adapter
Part No.

Buffer Assembly
Part No.


ZP3-Y015U□J■-B3

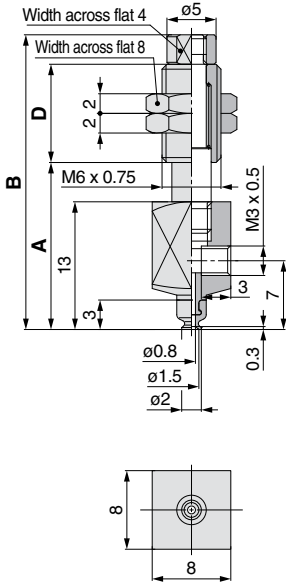


ZP3-Y015U□K■-B3

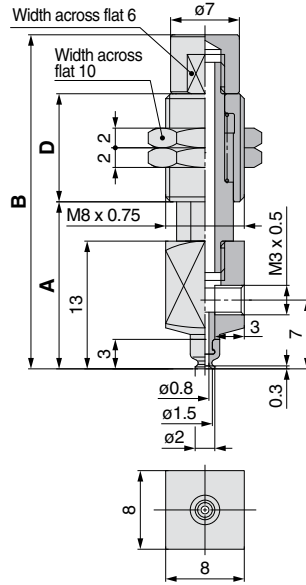

ZP3-Y02U□J■-B3

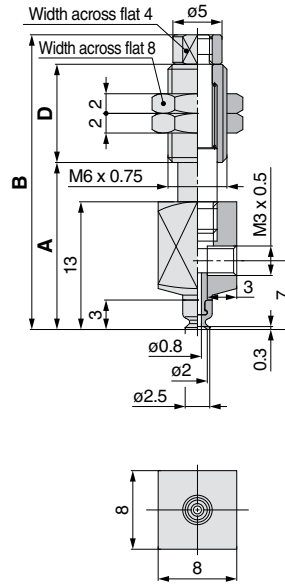

ZP3-Y02U□K■-B3

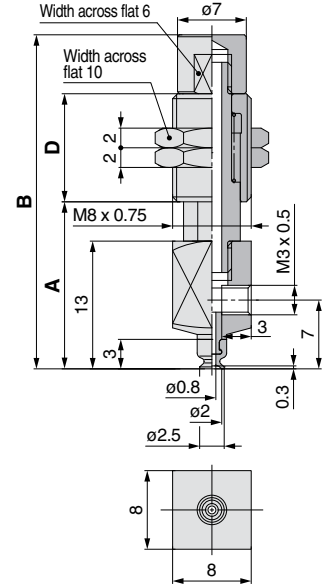

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-Y015U□J3-B3	17	30	10	7.7
ZP3-Y015U□J6-B3	20	37	14	8.6

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-Y015U□K3-B3	17	34	11	11.0
ZP3-Y015U□K6-B3	20	40.5	14.5	12.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-Y02U□J3-B3	17	30	10	7.7
ZP3-Y02U□J6-B3	20	37	14	8.6


Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)


Model	A	B	D	Weight (g)
ZP3-Y02U□K3-B3	17	34	11	11.0
ZP3-Y02U□K6-B3	20	40.5	14.5	12.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

ZP3-Y035U□J■-B3

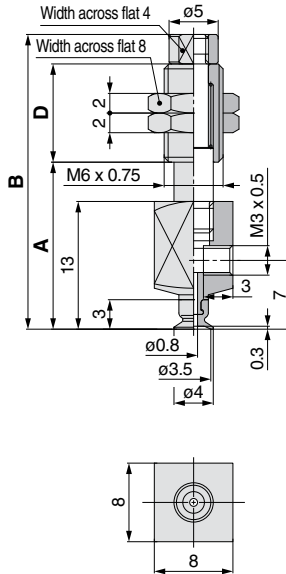

ZP3-Y035U□K■-B3

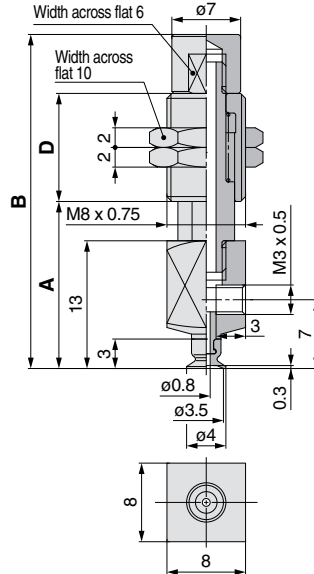

Dimensions (per stroke)

Model	A	B	D	Weight (g)
ZP3-Y035U□J3-B3	17	30	10	7.7
ZP3-Y035U□J6-B3	20	37	14	8.6

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Dimensions (per stroke)


Model	A	B	D	Weight (g)
ZP3-Y035U□K3-B3	17	34	11	11.0
ZP3-Y035U□K6-B3	20	40.5	14.5	12.2

Note) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y015U□J■-U2
ZP3-Y02U□J■-U2
ZP3-Y035U□J■-U2

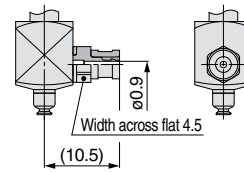

M-3AU-2 [Weight: 0.7 g]^{*2}


ZP3-Y015U□J■-U4
ZP3-Y02U□J■-U4
ZP3-Y035U□J■-U4

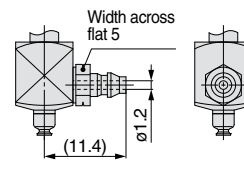

M-3AU-4-X83 [Weight: 0.7 g]^{*2}


One-touch fitting

ZP3-Y015U□J■-02
ZP3-Y02U□J■-02
ZP3-Y035U□J■-02

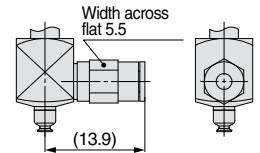

KJH02-M3 [Weight: 1.1 g]^{*2}

ZP3-Y015U□J■-04
ZP3-Y02U□J■-04
ZP3-Y035U□J■-04

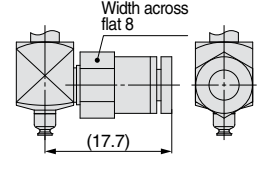

KJH04-M3-X83 [Weight: 1.9 g]^{*2}

*1 Refer to "ZP3-Y▲▲▲U□☆■-B3" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲▲U□☆■-B3".

Pad diameter $\phi 4$ to $\phi 8$

Pad type Flat with groove

Stroke 3, 6, 10 mm


Dimensions/With Buffer: Vacuum Inlet **Lateral**

ZP3-Y04UM \square J \blacksquare \blacksquare -B5

ZP3-Y04UM \square K \blacksquare \blacksquare -B5

ZP3-Y06UM \square J \blacksquare \blacksquare -B5

ZP3-Y06UM \square K \blacksquare \blacksquare -B5

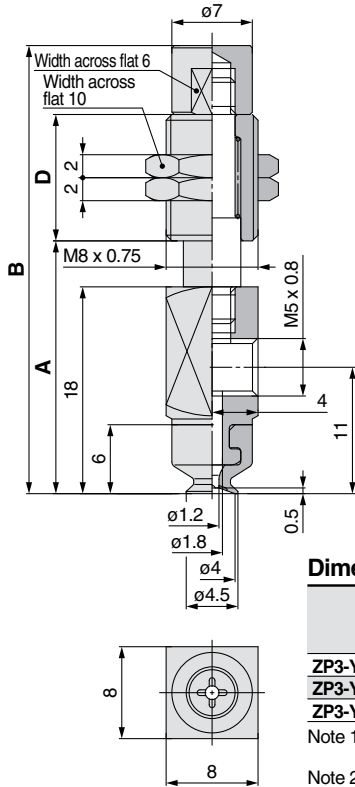


Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y04UM \square \star 3-B5	22.5	40	11	12.8	12.2
ZP3-Y04UM \square \star 6-B5	25	46	14.5	14.2	13.4
ZP3-Y04UM \square \star 10-B5	29	56	20.5	16.6	15.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "J" or "K".

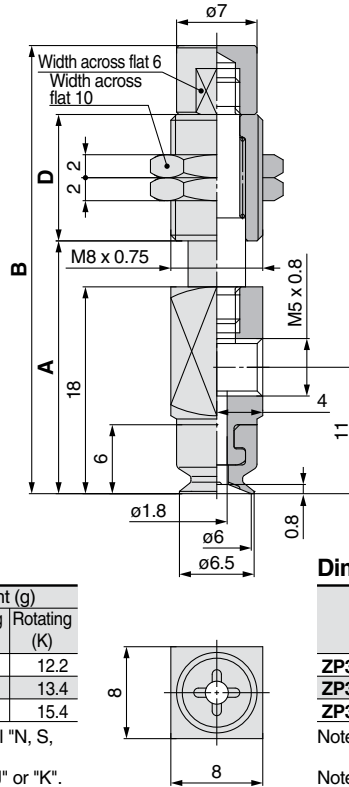

Dimensions (per stroke)


Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y06UM \square \star 3-B5	22.5	40	11	12.8	12.2
ZP3-Y06UM \square \star 6-B5	25	46	14.5	14.2	13.4
ZP3-Y06UM \square \star 10-B5	29	56	20.5	16.6	15.4

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "J" or "K".

ZP3-Y08UM \square J \blacksquare \blacksquare -B5

ZP3-Y08UM \square K \blacksquare \blacksquare -B5

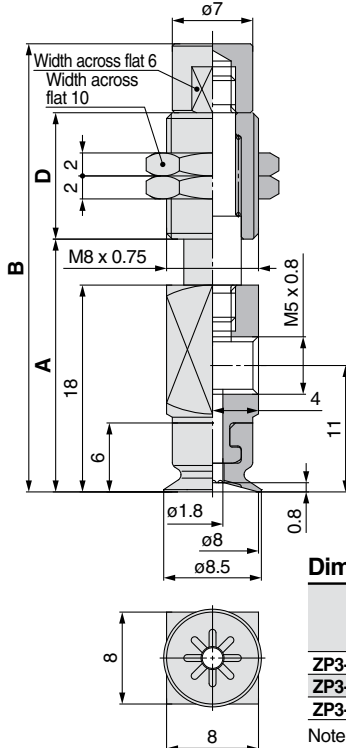

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y08UM \square \star 3-B5	22.5	40	11	12.8	12.2
ZP3-Y08UM \square \star 6-B5	25	46	14.5	14.2	13.4
ZP3-Y08UM \square \star 10-B5	29	56	20.5	16.6	15.4


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04UM \square \blacksquare \blacksquare -U2
ZP3-Y06UM \square \blacksquare \blacksquare -U2
ZP3-Y08UM \square \blacksquare \blacksquare -U2

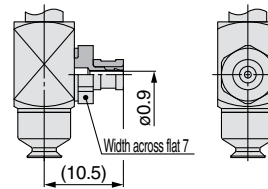

M-5AU-2 [Weight: 1.5 g]*2


ZP3-Y04UM \square \blacksquare \blacksquare -U4
ZP3-Y06UM \square \blacksquare \blacksquare -U4
ZP3-Y08UM \square \blacksquare \blacksquare -U4

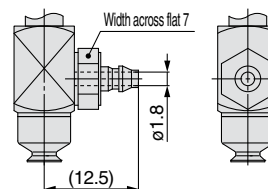

M-5AU-4-X83 [Weight: 1.6 g]*2


One-touch fitting

ZP3-Y04UM \square \blacksquare \blacksquare -02
ZP3-Y06UM \square \blacksquare \blacksquare -02
ZP3-Y08UM \square \blacksquare \blacksquare -02

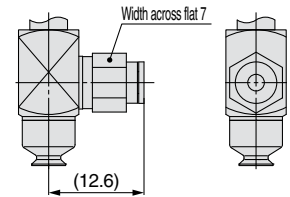

KJH02-M5 [Weight: 1.9 g]*2

ZP3-Y04UM \square \blacksquare \blacksquare -04
ZP3-Y06UM \square \blacksquare \blacksquare -04
ZP3-Y08UM \square \blacksquare \blacksquare -04

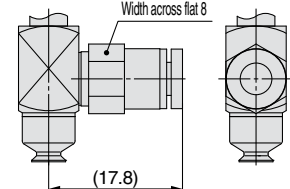

KJH04-M5 [Weight: 2.4 g]*2

*1 Refer to "ZP3-Y \blacktriangle UM \square \blacksquare \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y \blacktriangle UM \square \blacksquare \blacksquare -B5".

Pad diameter $\phi 4$ to $\phi 8$

Pad type Flat with groove

Stroke 15, 20 mm

Dimensions/With Buffer: Vacuum Inlet **Lateral**

Pad Unit

Vertical

With Adapter:
Vacuum Inlet

Vertical
With Buffer:
Vacuum Inlet

Lateral
With Adapter:
Vacuum Inlet

Lateral
With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List

Buffer Applicable
Pad List

Mounting Adapter
Part No.


Buffer Assembly
Part No.

ZP3-Y04UM \square JB \blacksquare -B5

ZP3-Y04UM \square K \blacksquare -B5

ZP3-Y06UM \square JB \blacksquare -B5

ZP3-Y06UM \square K \blacksquare -B5

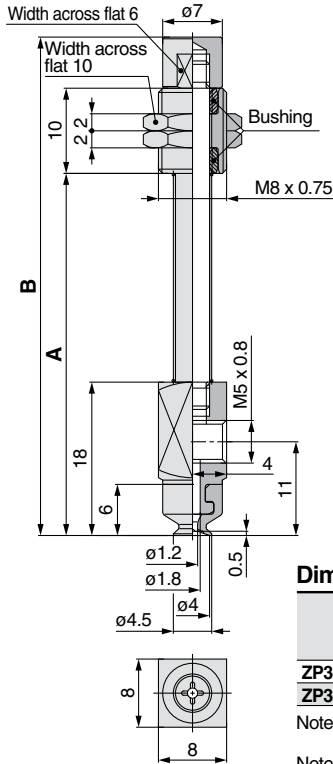


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y04UM \square ☆15-B5	42.5	59	14.3	15.5
ZP3-Y04UM \square ☆20-B5	50	66.5	15.1	16.6

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

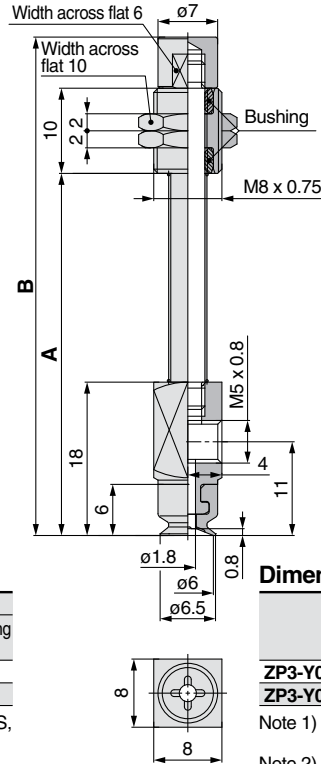

Dimensions (per stroke)


Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y06UM \square ☆15-B5	42.5	59	14.3	15.5
ZP3-Y06UM \square ☆20-B5	50	66.5	15.1	16.6

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-Y08UM \square JB \blacksquare -B5

ZP3-Y08UM \square K \blacksquare -B5

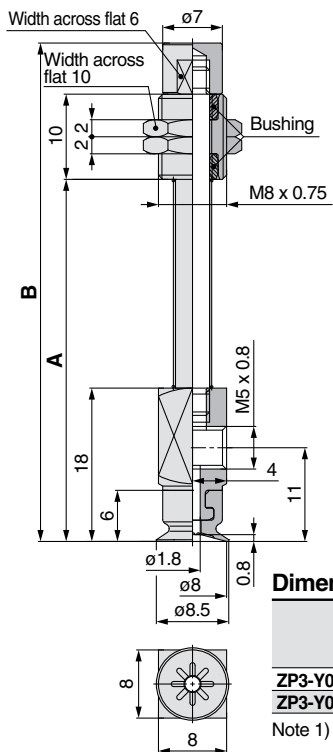

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y08UM \square ☆15-B5	42.5	59	14.3	15.5
ZP3-Y08UM \square ☆20-B5	50	66.5	15.1	16.6


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04UM \square ☆ \blacksquare -U2
ZP3-Y06UM \square ☆ \blacksquare -U2
ZP3-Y08UM \square ☆ \blacksquare -U2

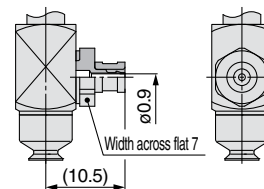

M-5AU-2 [Weight: 1.5 g]^{*2}


ZP3-Y04UM \square ☆ \blacksquare -U4
ZP3-Y06UM \square ☆ \blacksquare -U4
ZP3-Y08UM \square ☆ \blacksquare -U4

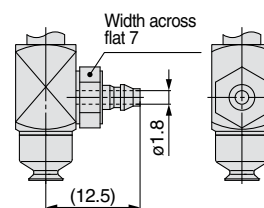

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


One-touch fitting

ZP3-Y04UM \square ☆ \blacksquare -02
ZP3-Y06UM \square ☆ \blacksquare -02
ZP3-Y08UM \square ☆ \blacksquare -02

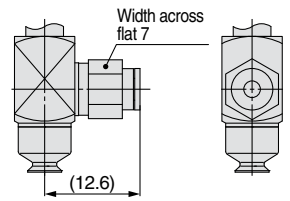

KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y04UM \square ☆ \blacksquare -04
ZP3-Y06UM \square ☆ \blacksquare -04
ZP3-Y08UM \square ☆ \blacksquare -04

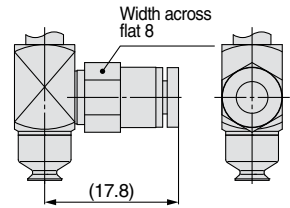

KJH04-M5 [Weight: 2.4 g]^{*2}

*1 Refer to "ZP3-Y▲▲UM \square ☆ \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲UM \square ☆ \blacksquare -B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove

Stroke 3, 6, 10 mm



Dimensions/With Buffer: Vacuum Inlet **Lateral**

ZP3-Y10UM□J■-B5

ZP3-Y10UM□K■-B5

ZP3-Y13UM□J■-B5

ZP3-Y13UM□K■-B5

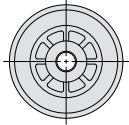
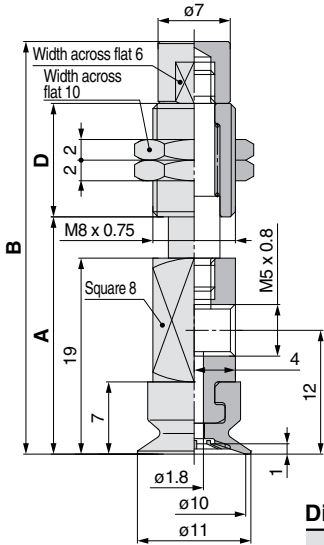


Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y10UM□☆3-B5	23.5	41	11	13.6	13.0
ZP3-Y10UM□☆6-B5	26	47	14.5	14.9	14.2
ZP3-Y10UM□☆10-B5	30	57	20.5	17.3	16.1

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

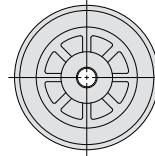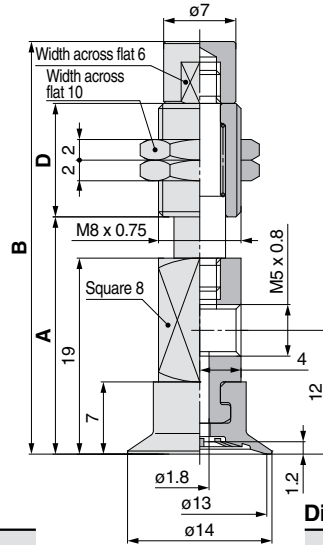

Dimensions (per stroke)



Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y13UM□☆3-B5	23.5	41	11	13.7	13.1
ZP3-Y13UM□☆6-B5	26	47	14.5	15.0	14.3
ZP3-Y13UM□☆10-B5	30	57	20.5	17.4	16.2

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-Y16UM□J■-B5

ZP3-Y16UM□K■-B5

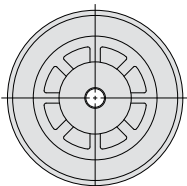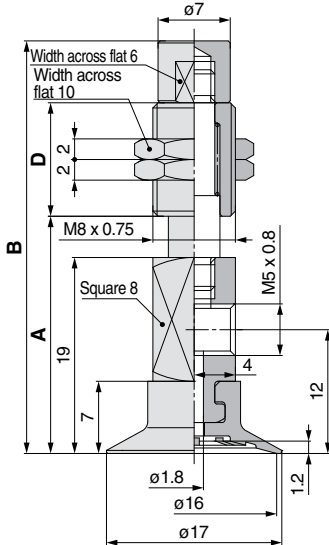

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y16UM□☆3-B5	23.5	41	11	13.8	13.2
ZP3-Y16UM□☆6-B5	26	47	14.5	15.1	14.4
ZP3-Y16UM□☆10-B5	30	57	20.5	17.5	16.3


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y10UM□☆■-U2
ZP3-Y13UM□☆■-U2
ZP3-Y16UM□☆■-U2

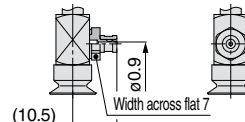


M-5AU-2 [Weight: 1.5 g]^{*2}

ZP3-Y10UM□☆■-U4
ZP3-Y13UM□☆■-U4
ZP3-Y16UM□☆■-U4

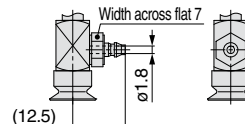

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


ZP3-Y10UM□☆■-U6
ZP3-Y13UM□☆■-U6
ZP3-Y16UM□☆■-U6

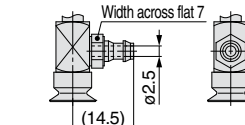

M-5AU-6-X83 [Weight: 1.8 g]^{*2}


One-touch fitting

ZP3-Y10UM□☆■-02
ZP3-Y13UM□☆■-02
ZP3-Y16UM□☆■-02

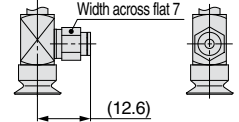


KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y10UM□☆■-04
ZP3-Y13UM□☆■-04
ZP3-Y16UM□☆■-04

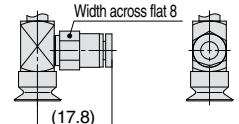

KJH04-M5 [Weight: 2.4 g]^{*2}

ZP3-Y10UM□☆■-06
ZP3-Y13UM□☆■-06
ZP3-Y16UM□☆■-06

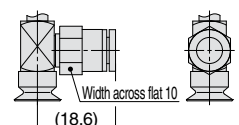

KJH06-M5 [Weight: 3.3 g]^{*2}

*1 Refer to "ZP3-Y▲▲UM□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲UM□☆■-B5".


Pad diameter $\phi 10$ to $\phi 16$

Pad type Flat with groove


Stroke 15, 20 mm

Dimensions/With Buffer: Vacuum Inlet **Lateral**


ZP3-Y10UM \square JB \blacksquare B5

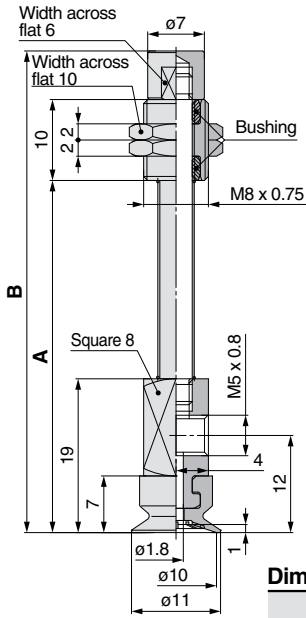


ZP3-Y10UM \square K \blacksquare B5



ZP3-Y13UM \square JB \blacksquare B5

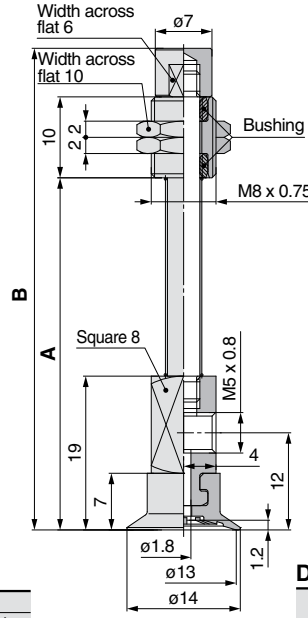

ZP3-Y13UM \square K \blacksquare B5



Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y10UM \square 15-B5	43.5	60	15.0	16.2
ZP3-Y10UM \square 20-B5	51	67.5	15.8	17.3

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y13UM \square 15-B5	43.5	60	15.1	16.3
ZP3-Y13UM \square 20-B5	51	67.5	15.9	17.4


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-Y16UM \square JB \blacksquare B5

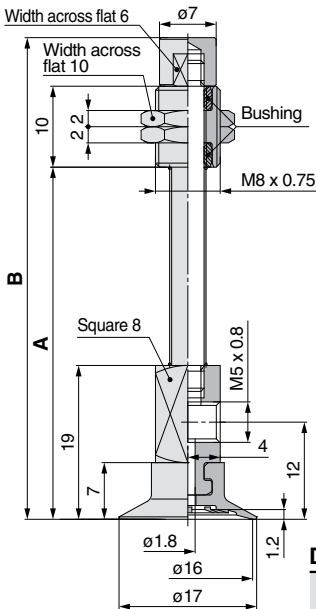

ZP3-Y16UM \square K \blacksquare B5

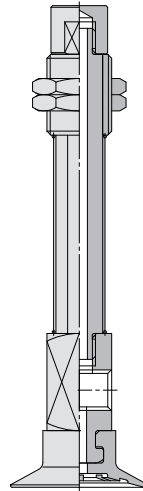

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y16UM \square 15-B5	43.5	60	15.2	16.4
ZP3-Y16UM \square 20-B5	51	67.5	16.0	17.5


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y10UM \square ☆ \blacksquare -U2
ZP3-Y13UM \square ☆ \blacksquare -U2
ZP3-Y16UM \square ☆ \blacksquare -U2

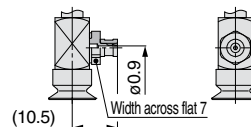


M-5AU-2 [Weight: 1.5 g]^{*2}

ZP3-Y10UM \square ☆ \blacksquare -U4
ZP3-Y13UM \square ☆ \blacksquare -U4
ZP3-Y16UM \square ☆ \blacksquare -U4

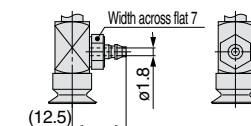

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


ZP3-Y10UM \square ☆ \blacksquare -U6
ZP3-Y13UM \square ☆ \blacksquare -U6
ZP3-Y16UM \square ☆ \blacksquare -U6

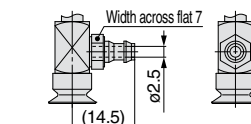

M-5AU-6-X83 [Weight: 1.8 g]^{*2}


One-touch fitting

ZP3-Y10UM \square ☆ \blacksquare -02
ZP3-Y13UM \square ☆ \blacksquare -02
ZP3-Y16UM \square ☆ \blacksquare -02

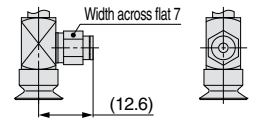


KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y10UM \square ☆ \blacksquare -04
ZP3-Y13UM \square ☆ \blacksquare -04
ZP3-Y16UM \square ☆ \blacksquare -04

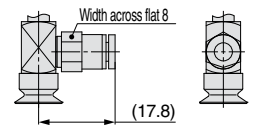

KJH04-M5 [Weight: 2.4 g]^{*2}

ZP3-Y10UM \square ☆ \blacksquare -06
ZP3-Y13UM \square ☆ \blacksquare -06
ZP3-Y16UM \square ☆ \blacksquare -06

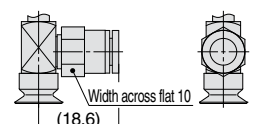

KJH06-M5 [Weight: 3.3 g]^{*2}

*1 Refer to "ZP3-Y▲▲UM \square ☆ \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲UM \square ☆ \blacksquare -B5".

Pad diameter $\phi 4$ to $\phi 8$

Pad type Bellows

Stroke 3, 6, 10 mm





Dimensions/With Buffer: Vacuum Inlet **Lateral**

ZP3-Y04B□J■-B5

ZP3-Y04B□K■-B5

ZP3-Y06B□J■-B5

ZP3-Y06B□K■-B5

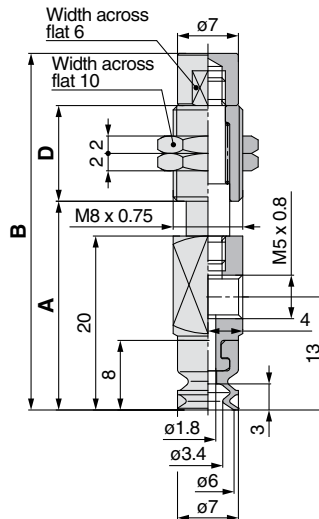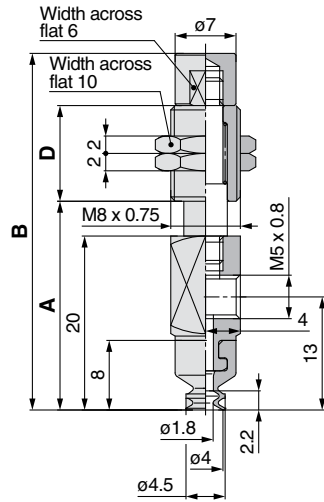

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y04B□☆3-B5	24.5	42	11	12.8	12.2
ZP3-Y04B□☆6-B5	27	48	14.5	14.2	13.4
ZP3-Y04B□☆10-B5	31	58	20.5	16.6	15.4

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Dimensions (per stroke)



Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y06B□☆3-B5	24.5	42	11	12.8	12.2
ZP3-Y06B□☆6-B5	27	48	14.5	14.2	13.4
ZP3-Y06B□☆10-B5	31	58	20.5	16.6	15.4

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

ZP3-Y08B□J■-B5

ZP3-Y08B□K■-B5

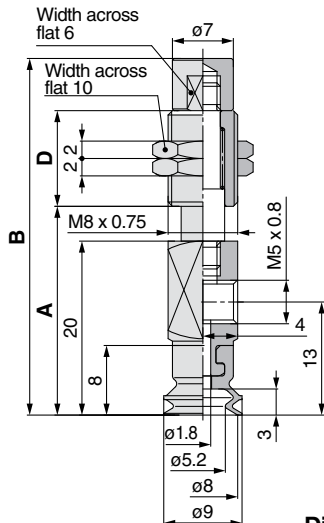

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y08B□☆3-B5	24.5	42	11	12.9	12.3
ZP3-Y08B□☆6-B5	27	48	14.5	14.3	13.5
ZP3-Y08B□☆10-B5	31	58	20.5	16.7	15.5


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "J" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04B□☆■-U2
ZP3-Y06B□☆■-U2
ZP3-Y08B□☆■-U2

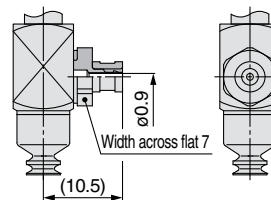

M-5AU-2 [Weight: 1.5 g]^{*2}


ZP3-Y04B□☆■-U4
ZP3-Y06B□☆■-U4
ZP3-Y08B□☆■-U4

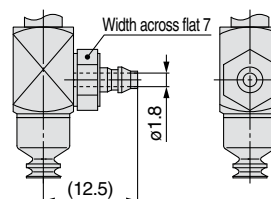

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


One-touch fitting

ZP3-Y04B□☆■-02
ZP3-Y06B□☆■-02
ZP3-Y08B□☆■-02

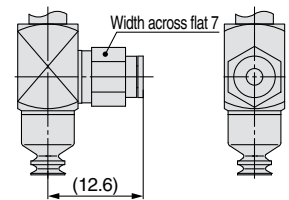

KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y04B□☆■-04
ZP3-Y06B□☆■-04
ZP3-Y08B□☆■-04

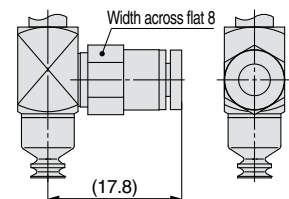

KJH04-M5 [Weight: 2.4 g]^{*2}

*1 Refer to "ZP3-Y▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲B□☆■-B5".


Pad diameter $\phi 4$ to $\phi 8$

Pad type **Bellows**


Stroke **15, 20 mm**

Dimensions/With Buffer: Vacuum Inlet **Lateral**


ZP3-Y04B \square **JB** \blacksquare **-B5**

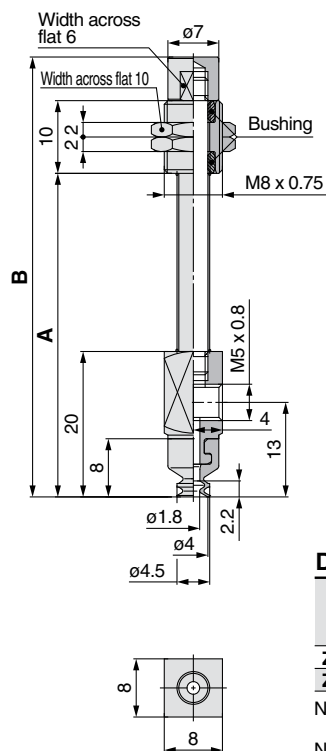


ZP3-Y04B \square **K** \blacksquare **-B5**



ZP3-Y06B \square **JB** \blacksquare **-B5**

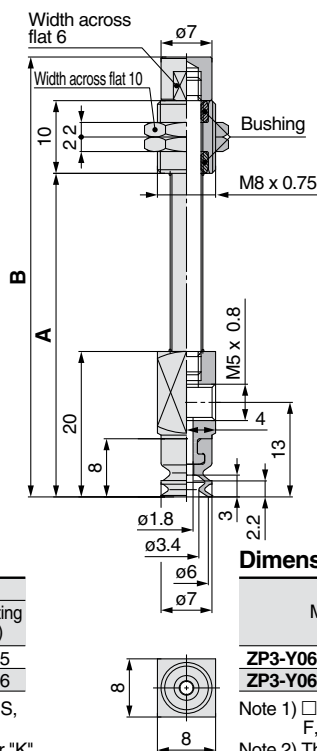

ZP3-Y06B \square **K** \blacksquare **-B5**



Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y04B \square \star 15-B5	44.5	61	14.3	15.5
ZP3-Y04B \square \star 20-B5	52	68.5	15.1	16.6

Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "JB" or "K".


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y06B \square \star 15-B5	44.5	61	14.3	15.5
ZP3-Y06B \square \star 20-B5	52	68.5	15.1	16.6


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "JB" or "K".

ZP3-Y08B \square **JB** \blacksquare **-B5**

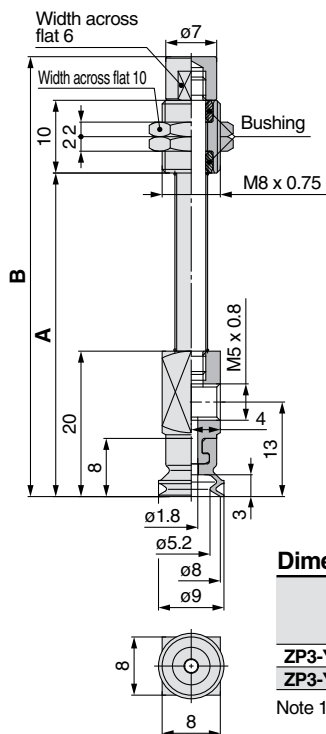

ZP3-Y08B \square **K** \blacksquare **-B5**



Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y08B \square \star 15-B5	44.5	61	14.4	15.6
ZP3-Y08B \square \star 20-B5	52	68.5	15.2	16.7


Note 1) \square in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol " \star " indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y04B \square \star \blacksquare **-U2**
ZP3-Y06B \square \star \blacksquare **-U2**
ZP3-Y08B \square \star \blacksquare **-U2**

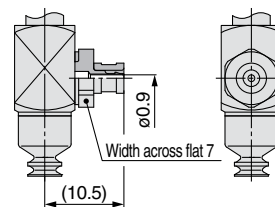

M-5AU-2 [Weight: 1.5 g]^{*2}


ZP3-Y04B \square \star \blacksquare **-U4**
ZP3-Y06B \square \star \blacksquare **-U4**
ZP3-Y08B \square \star \blacksquare **-U4**

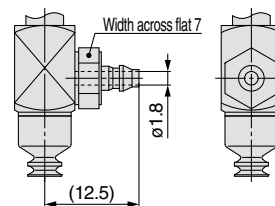

M-5AU-4-X83 [Weight: 1.6 g]^{*2}


One-touch fitting

ZP3-Y04B \square \star \blacksquare **-02**
ZP3-Y06B \square \star \blacksquare **-02**
ZP3-Y08B \square \star \blacksquare **-02**

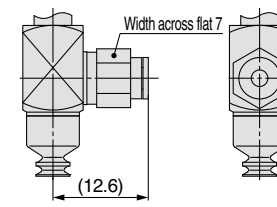

KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y04B \square \star \blacksquare **-04**
ZP3-Y06B \square \star \blacksquare **-04**
ZP3-Y08B \square \star \blacksquare **-04**

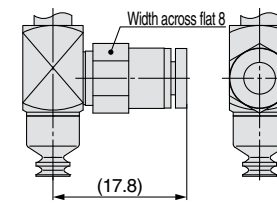

KJH04-M5 [Weight: 2.4 g]^{*2}

*1 Refer to "ZP3-Y \blacktriangle \blacktriangle \blacktriangle \square \star \blacksquare -B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y \blacktriangle \blacktriangle \blacktriangle \square \star \blacksquare -B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type Bellows

Stroke 3, 6, 10 mm



Dimensions/With Buffer: Vacuum Inlet **Lateral**

ZP3-Y10B□J■-B5

ZP3-Y10B□K■-B5

ZP3-Y13B□J■-B5




ZP3-Y13B□K■-B5

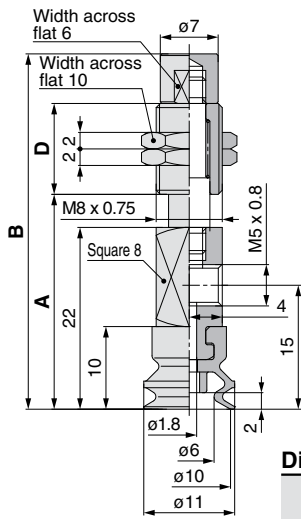

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y10B□☆3-B5	26.5	44	11	13.8	13.2
ZP3-Y10B□☆6-B5	29	50	14.5	15.1	14.2
ZP3-Y10B□☆10-B5	33	60	20.5	17.5	16.3


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "J" or "K".

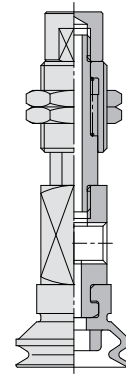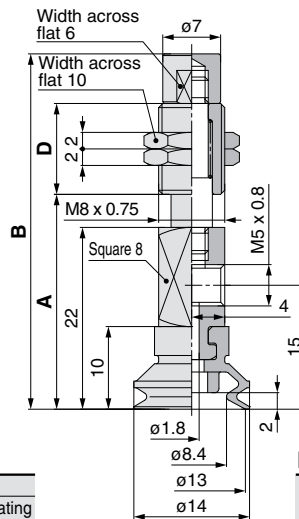

Dimensions (per stroke)



Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y13B□☆3-B5	26.5	44	11	14.0	13.4
ZP3-Y13B□☆6-B5	29	50	14.5	15.3	14.4
ZP3-Y13B□☆10-B5	33	60	20.5	17.7	16.5

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "J" or "K".



ZP3-Y16B□J■-B5


ZP3-Y16B□K■-B5

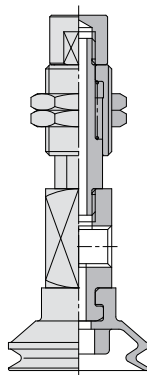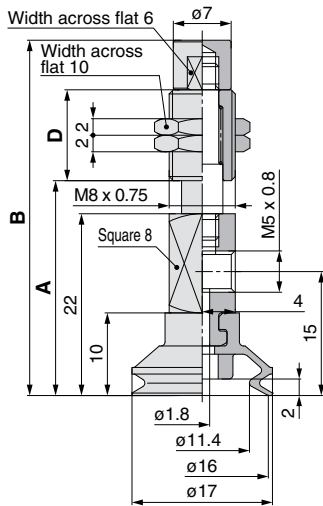

Dimensions (per stroke)

Model	A	B	D	Weight (g)	
				Non-rotating (J)	Rotating (K)
ZP3-Y16B□☆3-B5	26.5	44	11	14.1	13.5
ZP3-Y16B□☆6-B5	29	50	14.5	15.4	14.5
ZP3-Y16B□☆10-B5	33	60	20.5	17.8	16.6

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."
Note 2) The symbol "☆" indicates buffer type "J" or "K".

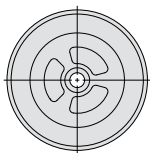


Vacuum Inlet Dimensions

Barb fitting


One-touch fitting

ZP3-Y10B□☆■-U2
ZP3-Y13B□☆■-U2
ZP3-Y16B□☆■-U2

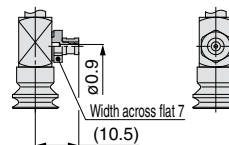


M-5AU-2 [Weight: 1.5 g]^{*2}

ZP3-Y10B□☆■-U4
ZP3-Y13B□☆■-U4
ZP3-Y16B□☆■-U4

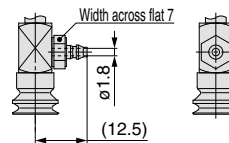


M-5AU-4-X83 [Weight: 1.6 g]^{*2}

ZP3-Y10B□☆■-U6
ZP3-Y13B□☆■-U6
ZP3-Y16B□☆■-U6

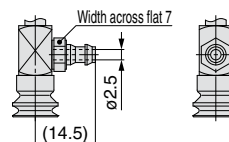


M-5AU-6-X83 [Weight: 1.8 g]^{*2}

ZP3-Y10B□☆■-02
ZP3-Y13B□☆■-02
ZP3-Y16B□☆■-02

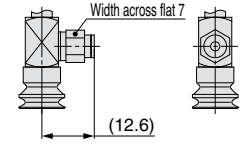


KJH02-M5 [Weight: 1.9 g]^{*2}

ZP3-Y10B□☆■-04
ZP3-Y13B□☆■-04
ZP3-Y16B□☆■-04

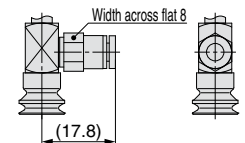

KJH04-M5 [Weight: 2.4 g]^{*2}

ZP3-Y10B□☆■-06
ZP3-Y13B□☆■-06
ZP3-Y16B□☆■-06

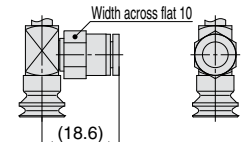

KJH06-M5 [Weight: 3.3 g]^{*2}

*1 Refer to "ZP3-Y▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲B□☆■-B5".

Pad diameter $\phi 10$ to $\phi 16$

Pad type **Bellows**

Stroke **15, 20 mm**

Dimensions/With Buffer: Vacuum Inlet


Lateral

ZP3-Y10B□JB■-B5

ZP3-Y10B□K■-B5

ZP3-Y13B□JB■-B5

ZP3-Y13B□K■-B5

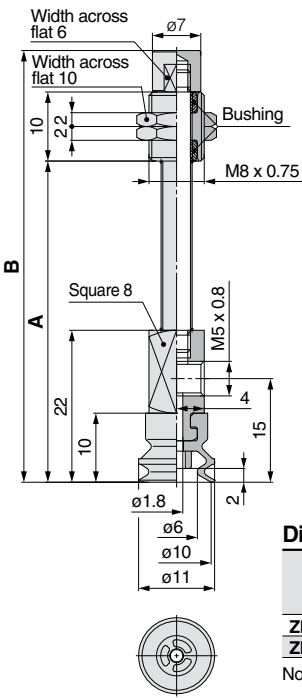


Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y10B□☆15-B5	46.5	63	15.2	16.4
ZP3-Y10B□☆20-B5	54	70.5	16.0	17.5

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

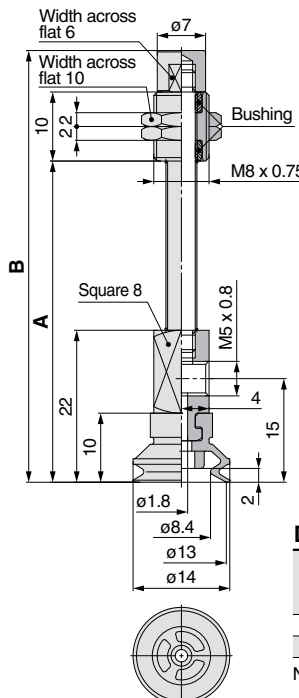

Dimensions (per stroke)


Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y13B□☆15-B5	46.5	63	15.4	16.6
ZP3-Y13B□☆20-B5	54	70.5	16.2	17.7

Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

ZP3-Y16B□JB■-B5

ZP3-Y16B□K■-B5

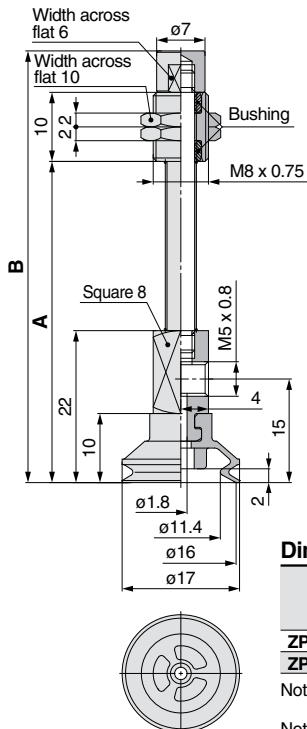

Dimensions (per stroke)

Model	A	B	Weight (g)	
			Non-rotating (J)	Rotating (K)
ZP3-Y16B□☆15-B5	46.5	63	15.5	16.7
ZP3-Y16B□☆20-B5	54	70.5	16.3	17.8


Note 1) □ in the table indicates the pad material "N, S, U, F, GN, GS."

Note 2) The symbol "☆" indicates buffer type "JB" or "K".

Vacuum Inlet Dimensions


Barb fitting

ZP3-Y10B□☆■-U2
ZP3-Y13B□☆■-U2
ZP3-Y16B□☆■-U2

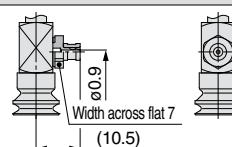


M-5AU-2 [Weight: 1.5 g]*2

ZP3-Y10B□☆■-U4
ZP3-Y13B□☆■-U4
ZP3-Y16B□☆■-U4

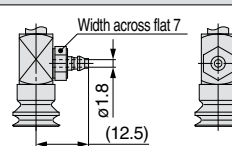

M-5AU-4-X83 [Weight: 1.6 g]*2


ZP3-Y10B□☆■-U6
ZP3-Y13B□☆■-U6
ZP3-Y16B□☆■-U6

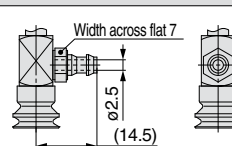

M-5AU-6-X83 [Weight: 1.8 g]*2


One-touch fitting

ZP3-Y10B□☆■-02
ZP3-Y13B□☆■-02
ZP3-Y16B□☆■-02

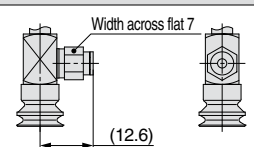


KJH02-M5 [Weight: 1.9 g]*2

ZP3-Y10B□☆■-04
ZP3-Y13B□☆■-04
ZP3-Y16B□☆■-04

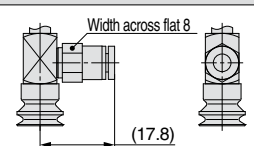

KJH04-M5 [Weight: 2.4 g]*2

ZP3-Y10B□☆■-06
ZP3-Y13B□☆■-06
ZP3-Y16B□☆■-06

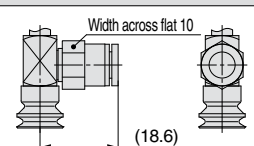

KJH06-M5 [Weight: 3.3 g]*2


*1 Refer to "ZP3-Y▲▲B□☆■-B5" for dimensions.

*2 When calculating the weight, add the weight of the fitting to "ZP3-Y▲▲B□☆■-B5".

Series ZP3 Construction

Component Parts List


Pad with adapter

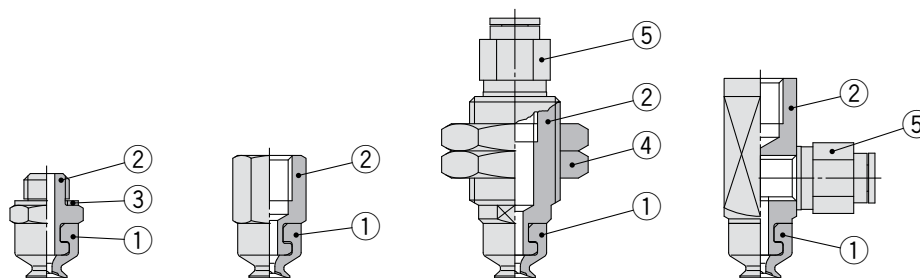

Component Parts

No.	Description	Material (Surface treatment)	Note
1	Pad	NBR/Silicone rubber Urethane rubber/FKM Conductive NBR/Conductive silicone rubber	
2	Adapter	Brass(Electroless nickel plated)	
3	Gasket	Stainless steel 304/NBR	
4	Nut	Structural steel(Trivalent chromated)	M6 x 0.75 M8 x 0.75 M12 x 1
5	Fitting	Brass(Nickel plated)	M10 x 1

Pad with buffer

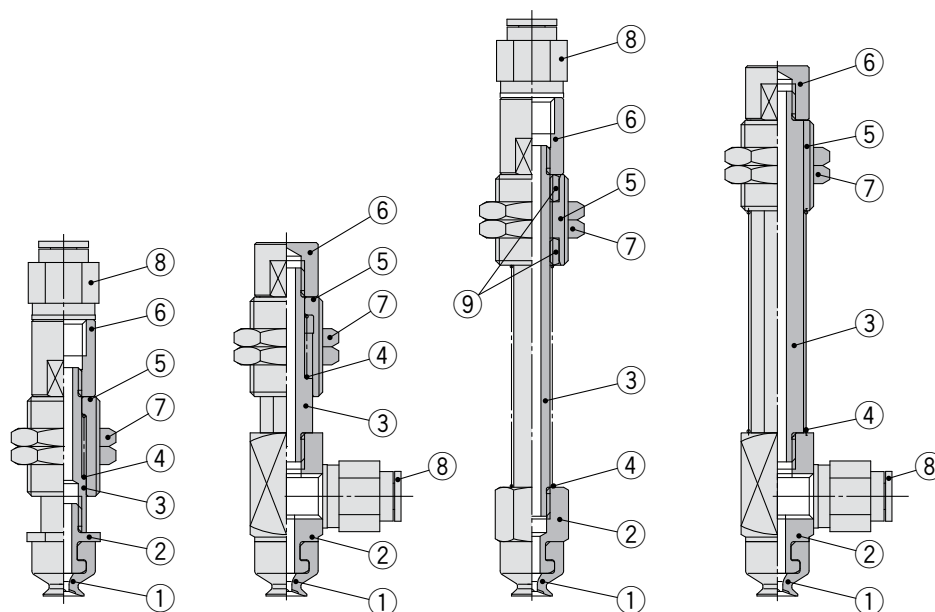










Component Parts







No.	Description	Material (Surface treatment)	Note
1	Pad	NBR/Silicone rubber Urethane rubber/FKM Conductive NBR/Conductive silicone rubber	
2	Adapter	Brass(Electroless nickel plated)	
3	Piston rod	Stainless steel	
4	Return spring	Stainless steel	
5	Buffer body	Brass(Electroless nickel plated)	
6	Buffer adapter	Brass(Electroless nickel plated)	
7	Nut	Structural steel(Trivalent chromated)	
8	Fitting	—	
9	Bushing	—	

Series ZP3

Adapter Applicable Pad List

Series ZP3 Mounting Adapter Part No.




Adapter part no.		Applicable pad part no. Series ZP3	Page
ZP3A-T1-A3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.47
ZP3A-T1-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.47
ZP3A-T1-A6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.47
ZP3A-T2-A5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.47
ZP3A-T2-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.47
ZP3A-T2-A10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.47
ZP3A-T2-A10-04		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.47
ZP3A-T3-A5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.47
ZP3A-T3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.48




Adapter part no.		Applicable pad part no. Series ZP3	Page
ZP3A-T3-A12-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.48
ZP3A-T3-A12-04		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.48
ZP3A-T3-A12-06		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.48
ZP3A-Y1-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.48
ZP3A-Y2-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.48
ZP3A-Y3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.48

Series ZP3




Buffer Applicable Pad List




Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T1J3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.49
ZP3B-T1J6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.49
ZP3B-T1K3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.49
ZP3B-T1K6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.49
ZP3B-T2AJ3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AJ6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AJ10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T2AK3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AK6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AK10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AJB15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AJB20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AK15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49
ZP3B-T2AK20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.49

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T2BJ3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BJ6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BJ10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BK3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BK6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BK10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BJB15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BJB20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T2BK15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-T2BK20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.50
ZP3B-Y1J3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.51
ZP3B-Y1J6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.51
ZP3B-Y1K3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.51
ZP3B-Y1K6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.51

Pad Unit

Vertical
With Adapter:
Vacuum Inlet

Vertical
With Buffer:
Vacuum Inlet

Lateral
With Adapter:
Vacuum Inlet

Lateral
With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List





Buffer Applicable
Pad List

Mounting
Adapter Part No.



Buffer Assembly
Part No.



Series ZP3

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page	Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-Y2AJ3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51	ZP3B-Y2AJB15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51
ZP3B-Y2AJ6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51	ZP3B-Y2AJB20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51
ZP3B-Y2AJ10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51	ZP3B-Y2AK15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51
ZP3B-Y2AK3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51	ZP3B-Y2AK20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51
ZP3B-Y2AK6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51				
ZP3B-Y2AK10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.51				

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-Y2BJ3-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BJ6-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BJ10-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BK3-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BK6-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BK10-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-Y2BJB15-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BJB20-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BK15-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52
ZP3B-Y2BK20-B5		ZP3-10UM <input type="checkbox"/> ZP3-13UM <input type="checkbox"/> ZP3-16UM <input type="checkbox"/> ZP3-10B <input type="checkbox"/> ZP3-13B <input type="checkbox"/> ZP3-16B <input type="checkbox"/>	P.52

Pad Unit

Vertical

With Adapter:
Vacuum Inlet

Vertical

With Buffer:
Vacuum Inlet

Lateral

With Adapter:
Vacuum Inlet

Lateral

With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List

Buffer Applicable
Pad List

Mounting
Adapter Part No.





Buffer Assembly
Part No.

Mounting Adapter Part No.

Vacuum Inlet Direction **Vertical**




Vacuum Inlet Direction

Vertical

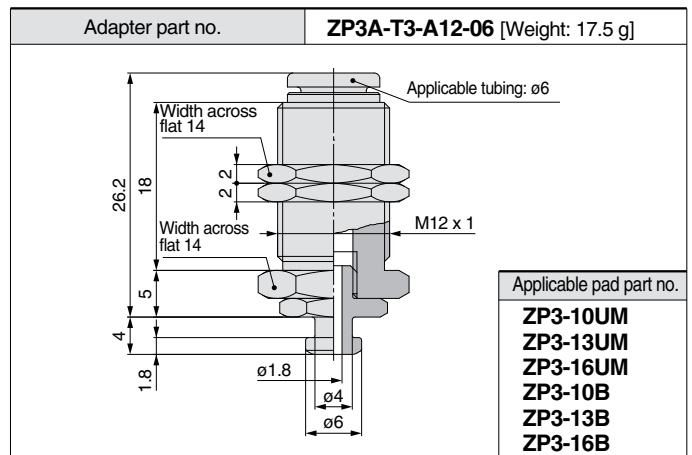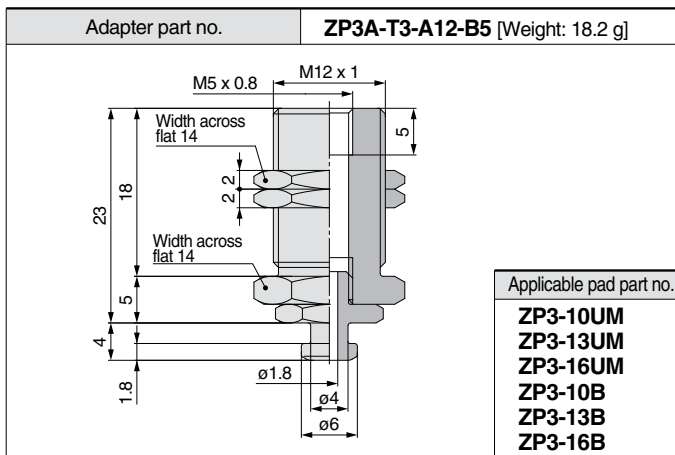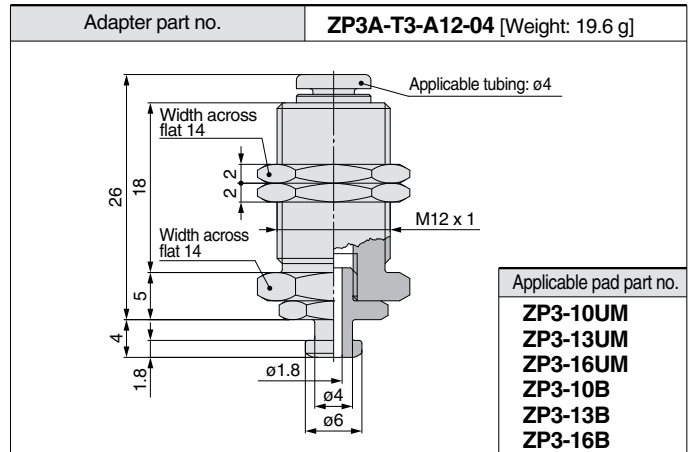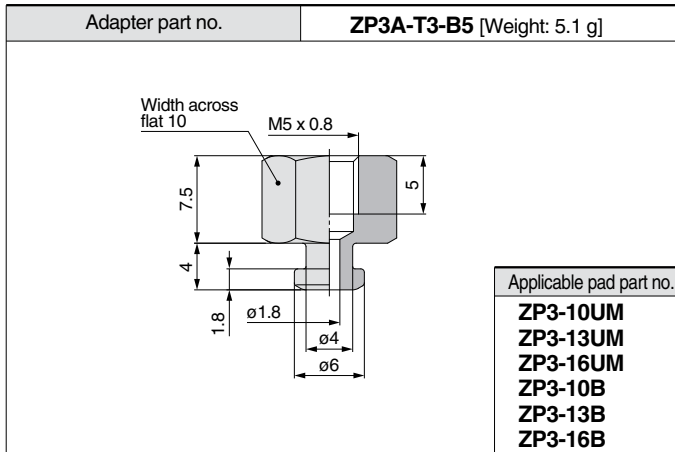

Vacuum Inlet Direction

Lateral

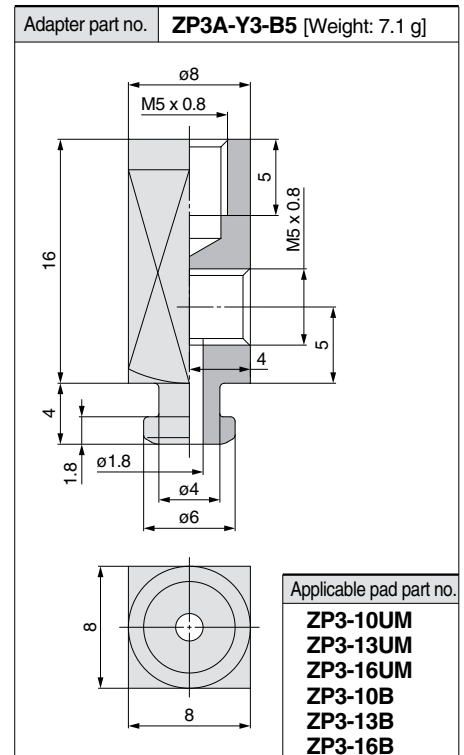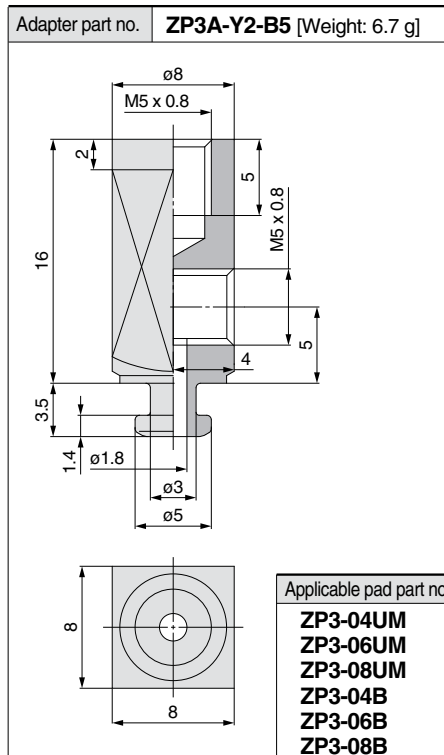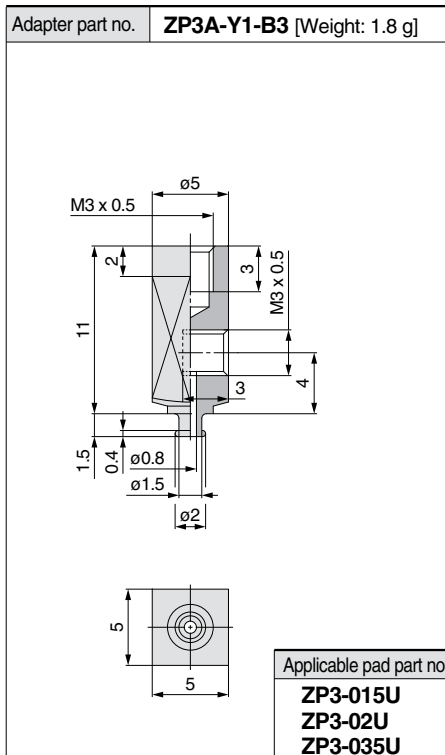



Series ZP3

Buffer Assembly Part No.

Vacuum Inlet Direction

Vertical

Buffer assembly part no.	Weight(g)
ZP3B-T1J3-B3	3.5
ZP3B-T1J6-B3	4.3
ZP3B-T1K3-B3	6.7
ZP3B-T1K6-B3	8.1

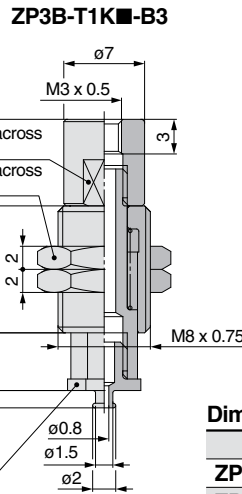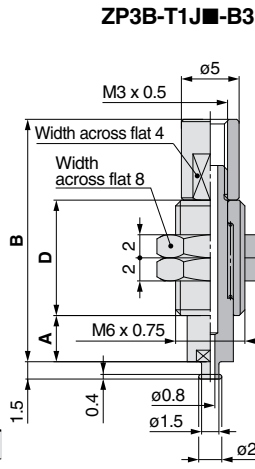

Applicable pad part no.
ZP3-015U
ZP3-02U
ZP3-035U



Dimensions (per stroke)

Model	A	B	D
ZP3B-T1J3-B3	4	21	10
ZP3B-T1J6-B3	7	28	14

Dimensions (per stroke)

Model	A	B	D
ZP3B-T1K3-B3	5	23.5	11
ZP3B-T1K6-B3	8	30	14.5

Buffer assembly part no.	Weight(g)
ZP3B-T2AJ3-B5	7.1
ZP3B-T2AJ6-B5	8.3
ZP3B-T2AJ10-B5	10.2
ZP3B-T2AK3-B5	7.0
ZP3B-T2AK6-B5	8.3
ZP3B-T2AK10-B5	10.2

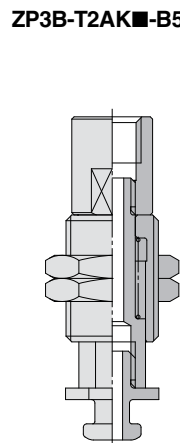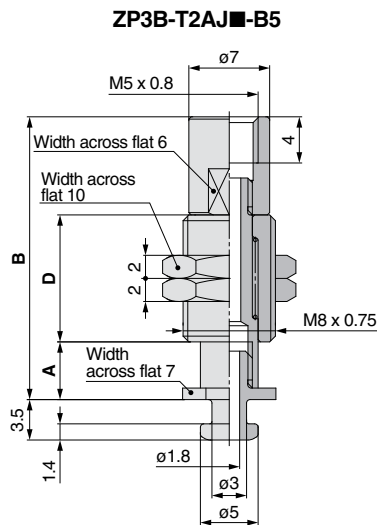



Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B

Dimensions (per stroke)

Model	A	B	D
ZP3B-T2A☆3-B5	5	24.5	11
ZP3B-T2A☆6-B5	8	31	14.5
ZP3B-T2A☆10-B5	12	41	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".

Buffer assembly part no.	Weight(g)
ZP3B-T2AJB15-B5	10.0
ZP3B-T2AJB20-B5	10.6
ZP3B-T2AK15-B5	12.0
ZP3B-T2AK20-B5	13.1

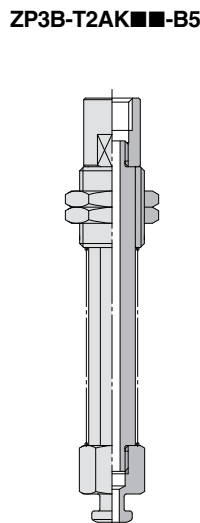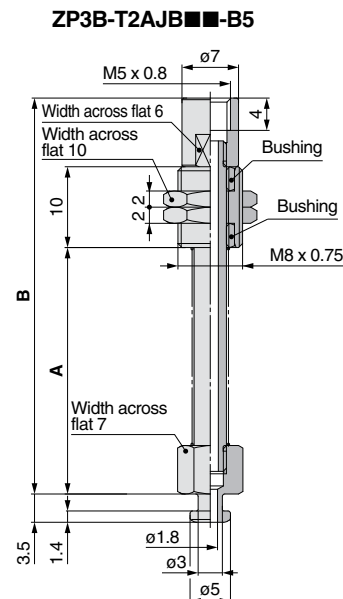

Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B

Dimensions (per stroke)

Model	A	B
ZP3B-T2A☆15-B5	30.5	49
ZP3B-T2A☆20-B5	38	56.5


Note) The symbol "☆" indicates buffer type "JB" or "K".

* Refer to the front matter 25 for nut tightening torque.

Vacuum Inlet Direction

Vertical

Buffer assembly part no.	Weight(g)
ZP3B-T2BJ3-B5	7.8
ZP3B-T2BJ6-B5	8.9
ZP3B-T2BJ10-B5	10.9
ZP3B-T2BK3-B5	7.7
ZP3B-T2BK6-B5	8.9
ZP3B-T2BK10-B5	10.9

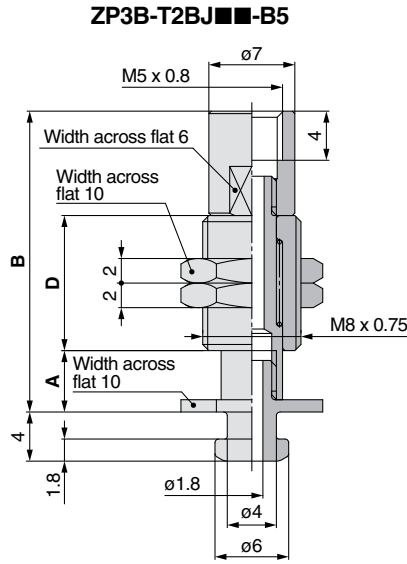

ZP3B-T2BK■■■-B5

Applicable pad part no.


ZP3-10UM
ZP3-13UM
ZP3-16UM
ZP3-10B
ZP3-13B
ZP3-16B

Dimensions (per stroke)

Model	A	B	D
ZP3B-T2B☆3-B5	5	24.5	11
ZP3B-T2B☆6-B5	8	31	14.5
ZP3B-T2B☆10-B5	12	41	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".

Buffer assembly part no.	Weight(g)
ZP3B-T2BJB15-B5	12.5
ZP3B-T2BJB20-B5	15.6
ZP3B-T2BK15-B5	14.5
ZP3B-T2BK20-B5	15.6

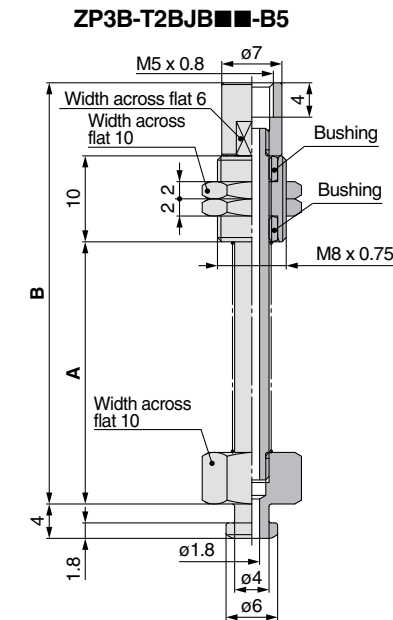

ZP3B-T2BK■■■-B5

Applicable pad part no.

ZP3-10UM
ZP3-13UM
ZP3-16UM
ZP3-10B
ZP3-13B
ZP3-16B

Dimensions (per stroke)

Model	A	B
ZP3B-T2B☆15-B5	30.5	49
ZP3B-T2B☆20-B5	38	56.5

Note) The symbol "☆" indicates buffer type "JB" or "K".

Pad Unit

Vertical

With Adapter:
Vacuum Inlet

Vertical

With Buffer:
Vacuum Inlet

Lateral

With Adapter:
Vacuum Inlet

Lateral

With Buffer:
Vacuum Inlet

Construction

Adapter Applicable
Pad List


Buffer Applicable
Pad List

Mounting Adapter
Part No.

Buffer Assembly
Part No.


Vacuum Inlet Direction **Lateral**

Buffer assembly part no.	Weight(g)
ZP3B-Y1J3-B3	7.6
ZP3B-Y1J6-B3	8.5
ZP3B-Y1K3-B3	10.9
ZP3B-Y1K6-B3	12.1

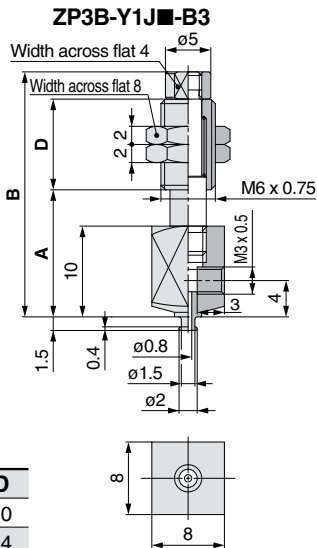

Dimensions (per stroke)

Model	A	B	D
ZP3B-Y1J3-B3	14	27	10
ZP3B-Y1J6-B3	17	34	14

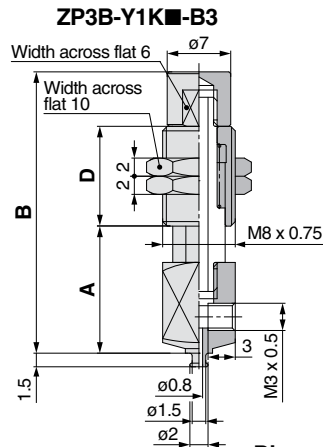


Dimensions (per stroke)

Model	A	B	D
ZP3B-Y1K3-B3	14	31	11
ZP3B-Y1K6-B3	17	37.5	14.5


Applicable pad part no.

ZP3-015U
ZP3-02U
ZP3-035U

Buffer assembly part no.	Weight(g)
ZP3B-Y2AJ3-B5	12.5
ZP3B-Y2AJ6-B5	13.9
ZP3B-Y2AJ10-B5	16.3
ZP3B-Y2AK3-B5	11.9
ZP3B-Y2AK6-B5	13.1
ZP3B-Y2AK10-B5	15.1

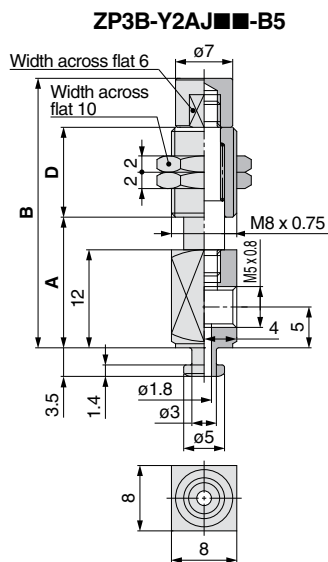

ZP3B-Y2AK■-B5



Dimensions (per stroke)


Model	A	B	D
ZP3B-Y2A☆3-B5	16.5	34	11
ZP3B-Y2A☆6-B5	19	40	14.5
ZP3B-Y2A☆10-B5	23	50	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".


Applicable pad part no.

ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B

Buffer assembly part no.	Weight(g)
ZP3B-Y2AJB15-B5	14.0
ZP3B-Y2AJB20-B5	14.8
ZP3B-Y2AK15-B5	15.2
ZP3B-Y2AK20-B5	16.3

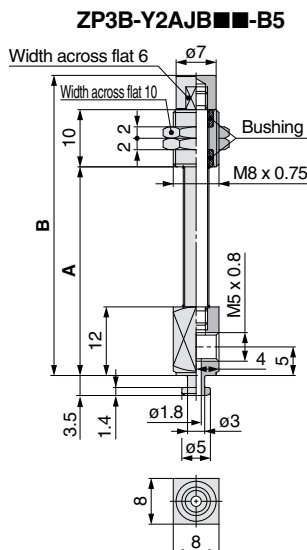

ZP3B-Y2AK■-B5



Dimensions (per stroke)

Model	A	B
ZP3B-Y2A☆15-B5	36.5	53
ZP3B-Y2A☆20-B5	44	60.5

Note) The symbol "☆" indicates buffer type "JB" or "K".

Applicable pad part no.

ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B



Vacuum Equipment Precautions 1

Be sure to read this before handling.

Design/Selection

Warning

1. Confirm the specifications.

Products represented in this catalog are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.) Please contact SMC when using a fluid other than compressed air (including vacuum). We do not guarantee against any damage if the product is used outside of the specification range.

2. Safe designs should be developed, which account for the possibility of accidents resulting from a drop in vacuum pressure due to power failure or trouble with the air supply, etc.

If vacuum pressure drops and there is a loss of vacuum pad adsorption force, workpieces being carried may fall, causing human injury or damage to machinery. Sufficient safety measures should be implemented, such as drop prevention, to avoid any accidents.

3. Follow vacuum specifications for vacuum switching valves and vacuum release valves.

If non-vacuum equipment is installed in a vacuum piping, vacuum leakage will occur. Therefore, select only equipment for vacuum specifications.

4. Select an ejector which has a suitable suction flow rate.

<When there is vacuum leakage from the workpiece or the piping>
If the ejector's suction flow rate is too low, the adsorption will be poor.
<When piping is long or the diameter is large>
The adsorption response time will delay due to the increased volume of the piping.
Select an ejector with a suitable suction flow rate by referring to the technical data.

5. If the suction flow rate is too high, setting of vacuum switch will become difficult.

Setting the vacuum switch when absorbing a small (few millimeter) workpiece will sometimes become difficult, if the selected ejector has a high suction rate and there is a small pressure difference when absorbing and releasing the workpiece.

6. When two or more pads are piped to one ejector, if one pad releases its workpiece, the other pads will also release.

When one pad releases its workpiece, there is a drop in vacuum pressure which causes the other pad to release its workpiece as well.

7. When separating the pad from the workpiece, break the vacuum and confirm that the pressure is atmospheric pressure.

Do not separate them forcibly while vacuum pressure exists between them. This may cause cracking, tearing, or distortion of the pad, or cause the pad to come off the adapter.

8. Do not apply lateral load (force) such as rotation or sliding force of the workpiece to the adsorption surface of the pad during adsorption of the workpiece.

This may cause deformation, cracking, tearing, or distortion of the pad, or cause the pad to come off the adapter.

9. Do not disassemble the product or make any modifications, including additional machining.

It may cause human injury and/or an accident. When disassembling or assembling the product for the purpose of replacing parts, etc., be certain to follow the operation manual or catalogs.

10. Check valve

SMC can issue no guarantees regarding the maintenance of workpiece adsorption when using check valves. Take separate safety measures to prevent workpieces from dropping in the case of an electrical power outage, etc. Please consult with SMC when using check valves as a means of preventing interference caused by the exhaust from nearby ejectors.

Caution

1. Mounting the suction filter

Because the suction of vacuum equipment acts not only on workpieces but also on dust or water droplets in the surrounding atmosphere, steps must be taken to prevent their penetration into the equipment's interior. Even when using equipment equipped with filters, if there is a considerable amount of dust in the environment, use a separately ordered large-size filter as well.

If there is a possibility of water droplets being sucked in by the vacuum, use a drain separator for vacuum.

2. The maximum vacuum pressure of the vacuum ejector is affected by the atmospheric pressure of the operating environment.

As atmospheric pressure changes based on altitude, climate, etc., the actual maximum vacuum pressure may not reach the value listed in the specifications.

3. For information on related items, such as directional control equipment and drive equipment, refer to the caution sections in each respective catalog.

4. Do not use the product in an environment that exposes it to vibration. If the product is used in such an environment, we can offer a lock nut type product to prevent it from loosening. Please contact SMC for model number.

Mounting

Warning

1. Operation manual

Install the products and operate them only after reading the operation manual carefully and understanding its contents. Also, keep the manual available whenever necessary.

2. Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance.

3. Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

4. Do not obstruct the exhaust port of the ejector.

If the exhaust port is obstructed when mounted, a vacuum will not be generated. Also, do not obstruct the exhaust port with the goal of removing the workpiece. It may cause damage to the equipment.



Vacuum Equipment Precautions 2

Be sure to read this before handling.

Piping

⚠ Caution


1. **Refer to the Fittings and Tubing Precautions (Best Pneumatics No. 6) for handling onetouch fittings.**

2. **Preparation before piping**

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

3. **Wrapping of pipe tape**

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

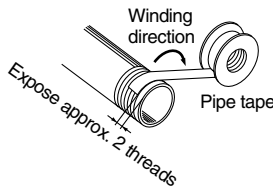

4. **Use piping with an adequate conductance.**

Select equipment and piping for the vacuum side which has an adequate conductance so that the ejector's maximum suction flow rate can be accommodated by the piping.

Also, make sure that there are no unnecessary restrictions or leaks, etc., along the course of the piping. Furthermore, design of the air supply should be performed while taking into consideration the ejector's maximum air consumption and the air consumption of other pneumatic circuits.

5. **Avoid disorganized piping.**

Piping which is direct and of the shortest possible length should be used for both the vacuum and supply sides.

Disorganized piping should be avoided. Unnecessary length increases the piping volume, and thus increases the response time.

6. **Use piping with a large conductance on the exhaust side of the ejector.**

If the exhaust piping is restrictive, there will be a decline in the ejector's performance.

7. **Be certain that there are no crushed areas in the piping due to damage or bending.**

Air Supply

⚠ Warning

1. **Type of fluids**

Please consult with SMC when using the product in applications other than compressed air.

2. **When there is a large amount of drainage.**

Compressed air containing a large amount of drainage can cause malfunction of pneumatic equipment. An air dryer or water separator should be installed upstream from filters.

Air Supply

⚠ Warning

3. **Drain flushing**

If condensation in the water separator and drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. It causes malfunction of pneumatic equipment.

If the drain bowl is difficult to check and remove, installation of a drain bowl with an auto drain option is recommended.

For compressed air quality, refer to SMC's Best Pneumatics catalog.

4. **Use clean air.**

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

Operating Environment

⚠ Warning

1. **Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.**
2. **Do not use in a place subject to heavy vibration and/or shock.**
3. **Do not use in an environment where flammable gas or explosive gas exists. Usage may cause a fire or explosion. The products do not have an explosion proof construction.**
4. **The valve should not be exposed to prolonged sunlight. Use a protective cover.**
5. **Remove any sources of excessive heat.**
6. **In locations where there is contact with spatter from water, oil, solder, etc., take suitable protective measures.**
7. **In cases where the vacuum unit is surrounded by other equipment, etc., or the unit is energized for an extended time, take measures to exhaust excess heat so that the temperature should be within specifications.**

⚠ Caution

1. **Under certain conditions, the exhaust of the vacuum ejector may generate intermittent noises, and vacuum pressure may be uneven.**

Using the ejector under these conditions will not result in decreased performance, but if the intermittent noise becomes a nuisance, or there is an adverse effect on the operation of the vacuum pressure switch, try lowering or raising the supply pressure of the vacuum ejector to find a supply pressure level at which the intermittent noise ceases.



Vacuum Equipment Precautions 3

Be sure to read this before handling.

Maintenance

Warning

1. Perform maintenance inspection according to the procedures indicated in the operation manual.

If handled improperly, malfunction and damage of machinery or equipment may occur.

2. Maintenance work

If handled improperly, compressed air can be dangerous. Assembly, handling, repair and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.

3. Drain flushing

Remove drainage regularly from the water separator, air filters, vacuum drain separator, etc.

4. Removal of equipment, and supply/exhaust of compressed air

When components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.




When machinery is restarted after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc. Then, confirm that the equipment is operating normally.

5. Clean suction filters and silencers on a regular basis.

The performance of an ejector will deteriorate due to clogged filters and silencers. High flow filters should be used, especially in dusty locations.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)
 ISO 10218-1: Manipulating industrial robots - Safety.
 etc.

Warning

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**
 Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- Only personnel with appropriate training should operate machinery and equipment.**
 The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

- The product is provided for use in manufacturing industries.**
 The product herein described is basically provided for peaceful use in manufacturing industries.
 If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
 If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.
 Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
 This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 *2) Vacuum pads are excluded from this 1 year warranty.
 A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.
 Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

Global Manufacturing, Distribution and Service Network

Worldwide Subsidiaries

North & South America

- U.S.A. SMC Corporation of America
- CANADA SMC Pneumatics (Canada) Ltd.
- MEXICO SMC Corporation (México), S.A. de C.V.
- BRAZIL SMC Pneumáticos do Brasil Ltda.
- CHILE SMC Pneumatics (Chile) S.A.
- COLOMBIA SMC Colombia Sucursal de SMC Chile S.A.
- ARGENTINA SMC Argentina S.A.
- BOLIVIA SMC Pneumatics Bolivia S.r.l.
- VENEZUELA SMC Neumatica Venezuela S.A.
- PERU (Distributor) IMPECO Automatización Industrial S.A.C.
- ECUADOR (Distributor) ASSISTECH CIA. LTDA.

Asia/Oceania

- CHINA SMC (China) Co., Ltd.
- CHINA SMC Pneumatics (Guangzhou) Ltd.
- HONG KONG SMC Pneumatics (Hong Kong) Ltd.
- TAIWAN SMC Pneumatics (Taiwan) Co., Ltd.
- KOREA SMC Pneumatics Korea Co., Ltd.
- SINGAPORE SMC Pneumatics (S.E.A.) Pte. Ltd.
- MALAYSIA SMC Pneumatics (S.E.A.) Sdn. Bhd.
- THAILAND SMC (Thailand) Ltd.
- PHILIPPINES Shoketsu SMC Corporation
- INDIA SMC Pneumatics (India) Pvt. Ltd.
- ISRAEL (Distributor) Baccara Geva A.C.S. Ltd.
- INDONESIA (Distributor) PT. Sinar Mutiara Cemerlang
- VIETNAM (Distributor) Dy Dan Trading Co., Ltd.
- PAKISTAN (Distributor) Jubilee Corporation

Asia/Oceania

- SRI LANKA (Distributor) Electro-Serv (Pvt.) Ltd.
- IRAN (Distributor) Abzarchian Co. Ltd.
- U.A.E. (Distributor) Machinery People Trading Co. L.L.C.
- KUWAIT (Distributor) Esco Kuwait Equip & Petroleum App. Est.
- SAUDI ARABIA (Distributor) Assaggaff Trading Est.
- BAHRAIN (Distributor) Mohammed Jalal & Sons W.L.L. Technical & Automotive Services
- SYRIA (Distributor) Miak Corporation
- JORDAN (Distributor) Atafawok Trading Est.
- BANGLADESH (Distributor) Chemie International
- AUSTRALIA SMC Pneumatics (Australia) Pty. Ltd.
- NEW ZEALAND SMC Pneumatics (N.Z.) Ltd.
- JAPAN SMC Corporation

Europe/Africa

- GERMANY SMC Pneumatik GmbH
- SWITZERLAND SMC Pneumatik AG
- U.K. SMC Pneumatics (U.K.) Ltd.
- FRANCE SMC Pneumatique SA
- SPAIN / PORTUGAL SMC España S.A.
- ITALY SMC Italia S.p.A.
- GREECE SMC HELLAS E.P.E
- IRELAND SMC Pneumatics (Ireland) Ltd.
- NETHERLANDS (Associated company) SMC Pneumatics BV
- BELGIUM (Associated company) SMC Pneumatics N.V./S.A.
- DENMARK SMC Pneumatik A/S
- AUSTRIA SMC Pneumatik GmbH (Austria)

Europe/Africa

- CZECH REPUBLIC SMC Industrial Automation CZ s.r.o.
- HUNGARY SMC Hungary Ipari Automatizálási Kft.
- POLAND SMC Industrial Automation Polska Sp. z o.o.
- SLOVAKIA SMC Priemyselná Automatizácia Spol s.r.o.
- SLOVENIA SMC Industrijska Avtomatika d.o.o.
- BULGARIA SMC Industrial Automation Bulgaria EOOD
- CROATIA SMC Industrijska Avtomatika d.o.o.
- BOSNIA AND HERZEGOVINA (Distributor) A.M. Pneumatik d.o.o.
- SERBIA (Distributor) Best Pneumatics d.o.o.
- UKRAINE (Distributor) PNEUMOTEC Corp.
- FINLAND SMC Pneumatics Finland Oy
- NORWAY SMC Pneumatics Norway AS
- SWEDEN SMC Pneumatics Sweden AB
- ESTONIA SMC Pneumatics Estonia OÜ
- LATVIA SMC Pneumatics Latvia SIA
- LITHUANIA (LIETUVA) UAB "SMC Pneumatics"
- ROMANIA SMC Romania S.r.l.
- RUSSIA SMC Pneumatik LLC.
- KAZAKHSTAN SMC Kazakhstan, LLC.
- TURKEY (Distributor) Entek Pnömatik Sanayi ve Ticaret Şirketi
- MOROCCO (Distributor) Soraflex
- TUNISIA (Distributor) Byms
- EGYPT (Distributor) Saadani Trading & Industrial Services
- NIGERIA (Distributor) Faraday Engineering Company Ltd.
- SOUTH AFRICA (Distributor) Hyflo Southern Africa (Pty.) Ltd.

U.S. & Canadian Sales Offices

WEST


Austin
Dallas
Los Angeles
Phoenix
Portland
San Francisco
Vancouver

EAST

Atlanta
Birmingham
Boston
Charlotte
Nashville
New Jersey
Richmond
Rochester
Tampa
Montreal

CENTRAL

Chicago
Cincinnati
Cleveland
Detroit
Indianapolis
Milwaukee
Minneapolis
St. Louis
Toronto
Windsor

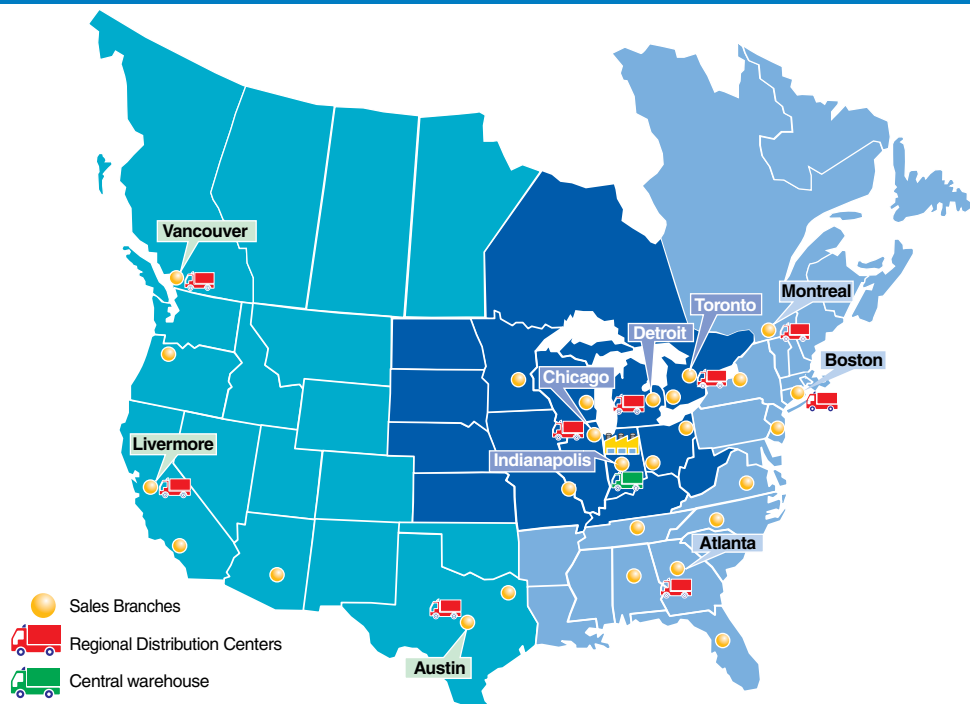

SMC Corporation of America

10100 SMC Blvd., Noblesville, IN 46060

www.smcusa.com

SMC Pneumatics (Canada) Ltd.

www.smcpcanada.com

(800) SMC.SMC1 (762-7621)

e-mail: sales@smcusa.com

For International inquiries: www.smcworld.com

