



# Operation Manual

## PRODUCT NAME

*E/P Regulator  
(16points preset input type)*

## MODEL/ Series/ Product Number

*ITV1000/2000/3000/2090-52\* Series  
(Switch output: NPN output)*

*ITV1000/2000/3000/2090-53\* Series  
(Switch output: PNP output)*

Install and operate the product only after reading the Operation Manual carefully and understanding its contents.

Specifically, read the safety instructions carefully.

Keep this operation manual available whenever necessary.

**SMC Corporation**

# Contents

Contents	P1
Safety Instructions	P2
Handling precautions	P4
Wiring method	P6
Relation of input signal and preset pressure	P8
Setting method	P8
Key locking function	P9
Setting of min. pressure, max. pressure and preset pressure	P10
Auto memory function	P10
Switch output (Out of range mode)	P11
Error indicating function	P11
Detail setting mode	P12
Gain setting	P12
Sensitivity setting	P13
Zero clear	P14
Initialize	P14
LED display	P15



# E/P Regulator Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

\*1) ISO 4414: Pneumatic fluid power -- General rules relating to systems.

ISO 4413: Hydraulic fluid power -- General rules relating to systems.

IEC 60204-1: Safety of machinery -- Electrical equipment of machines .(Part 1: General requirements)

ISO 10218-1992: Manipulating industrial robots -Safety.

etc.



## Caution

**Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



## Warning

**Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



## Danger

**Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

## Warning

### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results.

The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product.

This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly.

The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

### 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



# E/P Regulator Safety Instructions

## **Caution**

### **1. The product is provided for use in manufacturing industries.**

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
If anything is unclear, contact your nearest sales branch.

## **Limited warranty and Disclaimer/Compliance Requirements**

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### **Limited warranty and Disclaimer**

#### **1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)**

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

#### **2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.**

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

#### **3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.**

##### **\*2) Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.


### **Compliance Requirements**

#### **1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.**


#### **2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulation of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.**

## Handling precautions

### ! Caution

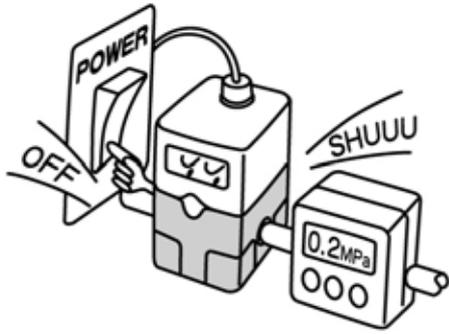


If the power supply to this product is turned off due to a power failure during normal operation, the output on the secondary side will be held and air will flow continuously.

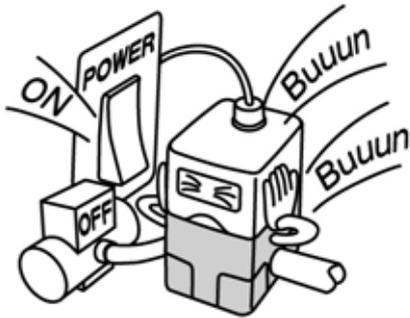


If supply pressure to this product is interrupted or shut off, while the power is still on, the internal solenoid valve will continue to operate and a humming noise will be generated.

Turn off the power supply when supply pressure is interrupted or shut off, since the life of the product may be shortened.

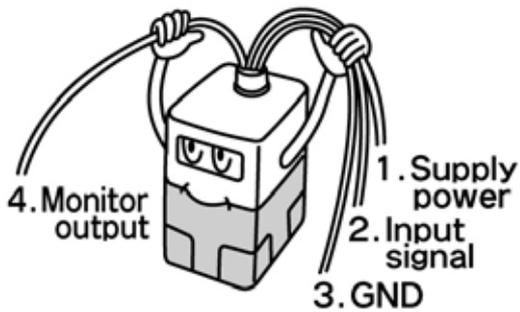


The optional cable connector is a 4 wire type. When the monitor output (switch output) is not being used, prevent the unused wires from touching the other wires, as a malfunction could occur.

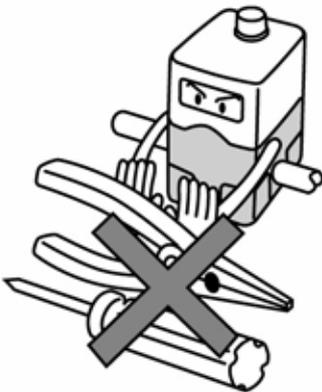

This product is adjusted to specification at the time of shipment from the factory.


Avoid careless disassembly or removal of parts, as this can lead to malfunction.

## ! Caution

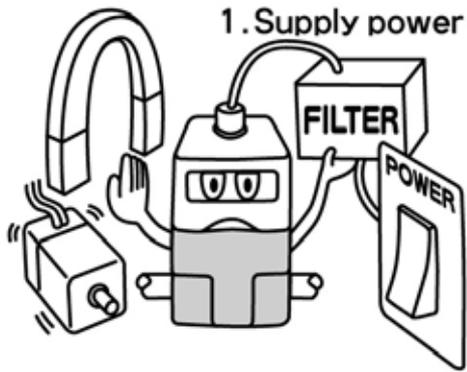

Take the following steps to avoid malfunction due to noise.

1. Install a line filter etc. to the AC power line to reduce / eliminate power supply noise.
2. Avoid malfunction due to noise by installing this product and its wiring away from strong electric fields, such as those of motors and power cables, etc.
3. Be sure to implement protective measures against load surge for inductive loads (solenoid valves, relays etc.).
4. Turn off the power supply before inserting or removing the connector.

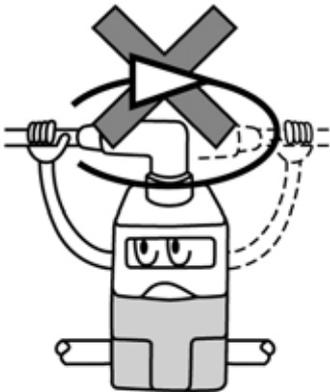

Please note that the right angled cable connector does not rotate and is limited to only one entry direction.

# Wiring method

## ! Caution

Proceed carefully, as incorrect wiring can cause damage.

Use a DC power supply with sufficient capacity and a low ripple.

Turn off the power supply to remove and insert the connector.

Never rotate the right angled type connector as it is not designed to rotate.

When the monitor output is not used, prevent the unused wires from touching the other wires, as this can cause a malfunction.

### Power cable


1	Brown	Power supply Vcc
2	White	NC
3	Blue	GND
4	Black	Monitor output

### Signal cable

1	Brown	Input signal 1
2	White	Input signal 2
3	Blue	Input signal 3
4	Black	Input signal 4
5	Gray	Common

Common is no polarity.


Signal cable (5wire) Power cable (4wire)

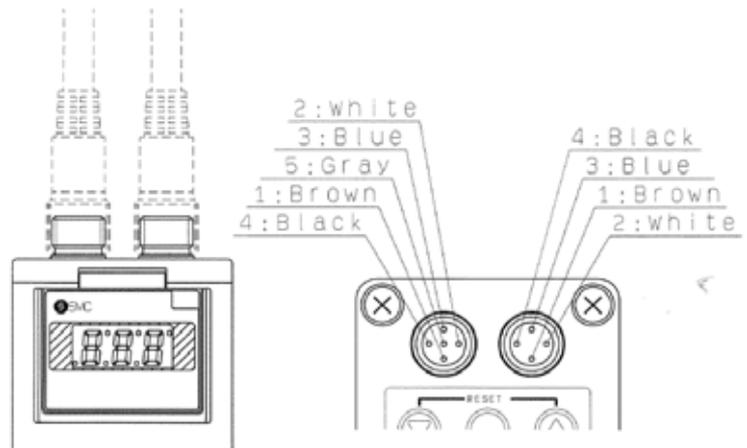

### Wiring diagram (Power supply and monitor output)

Switch output - NPN type (ITV 0 0-52)	Switch output - PNP type (ITV 0 0-53)
<p>Power supply DC24V±10%</p> <p>1 : Brown 2 : White 3 : Blue 4 : Black</p>	<p>Power supply DC24V±10%</p> <p>1 : Brown 2 : White 3 : Blue 4 : Black</p>
<p>When a current of approx.150 mA or more is applied, the over current circuit will operate, "Er.5" will be displayed and the operation will stop. Please install a load to give an output current of 80 mA or less.</p>	<p>When a current of approx.150 mA or more is applied, the over current circuit will operate, "Er.5" will be displayed and the operation will stop. Please install a load to give an output current of 80 mA or less.</p>

## Wiring diagram (Input signal )

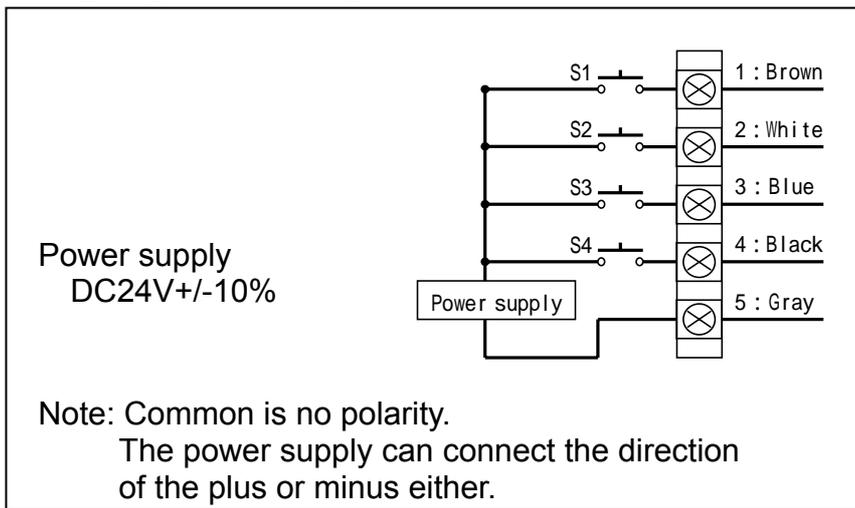

## Relation of Input signal and preset pressure

Preset pressure	Input signal 4 Black: S4	Input signal 3 Blue: S3	Input signal 2 White: S2	Input signal 1 Brown: S1
P01	OFF	OFF	OFF	OFF
P02	OFF	OFF	OFF	ON
P03	OFF	OFF	ON	OFF
P04	OFF	OFF	ON	ON
P05	OFF	ON	OFF	OFF
P06	OFF	ON	OFF	ON
P07	OFF	ON	ON	OFF
P08	OFF	ON	ON	ON
P09	ON	OFF	OFF	OFF
P10	ON	OFF	OFF	ON
P11	ON	OFF	ON	OFF
P12	ON	OFF	ON	ON
P13	ON	ON	OFF	OFF
P14	ON	ON	OFF	ON
P15	ON	ON	ON	OFF
P16	ON	ON	ON	ON

## Setting method

### ! Caution


If an incorrect key is pressed or incorrect information is displayed during setting, power must be turned off and the procedure started again.

It is recommended that the settings are changed without supply pressure. The product operates immediately after preset pressures are set and the S-key is pressed.

It is recommended that pressure of P01 is output when air is supplied to the inlet, even if the input signal has not been entered.

Output pressure from this product and state of operation are changed by changing of each setting and function. Each setting and function should be operated by trained and experienced operator.

### Flow of the setting

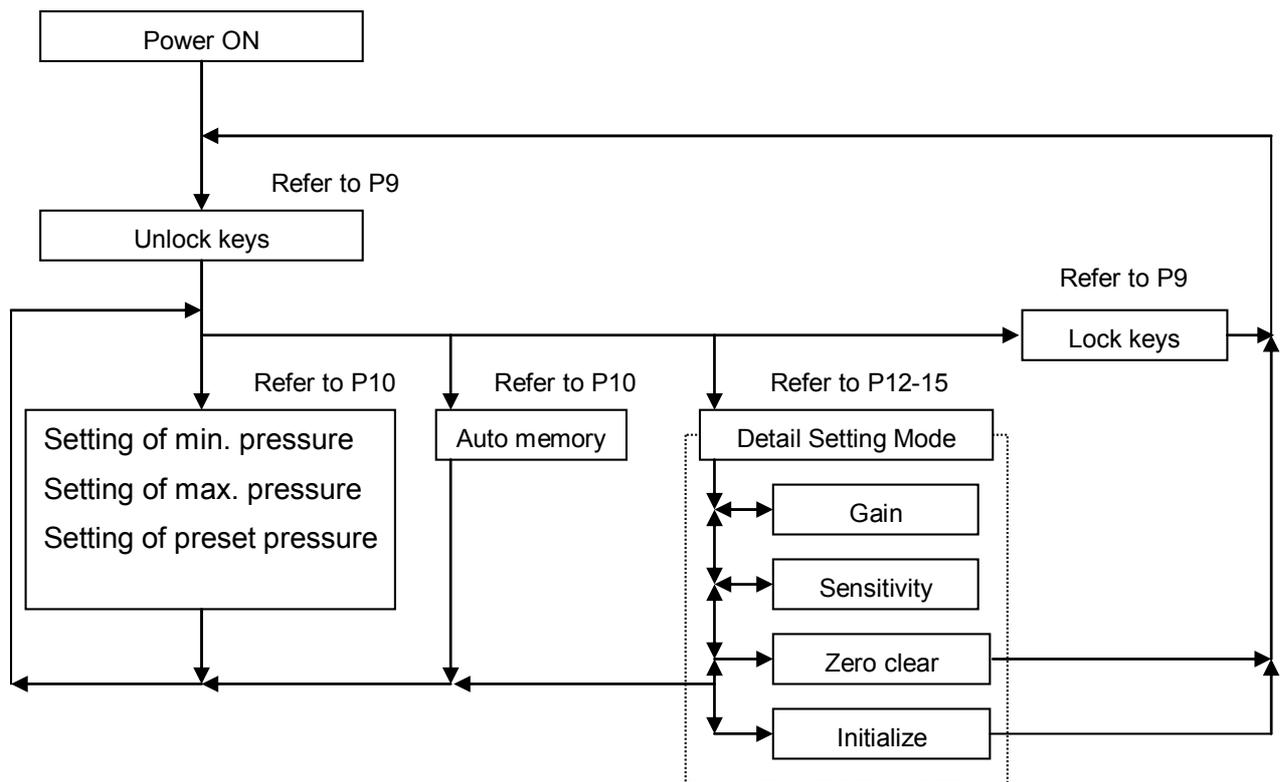

(Note1) Please refer to each section for the operation method.

## Key locking function

### ! Caution

The keys are locked after turning the power on and can not be operated.

### Unlocking the keys

No	Key operation	LED Display
		(current) pressure is displayed
	Press  key for 2 seconds or more.	 is displayed
		 flashes on the display
	Press S-key	
		 is displayed for approx. 1 second
	Key lock is released	(current) pressure is displayed

(Note) Press  key to cancel.

### Locking the keys

No	Key operation	LED Display
		(current) pressure is displayed
	Press  key for 2 seconds or more.	 is displayed
		 flashes on the display
	Press S-key	
		 is displayed for approx. 1 second
	Keys are locked	(current) pressure is displayed

(Note) Press  key to cancel.

## Setting of min. pressure, max. pressure and preset pressure

No	Key operation	LED Display
	Unlock keys (refer to P9)	
	Press S-key	
	Set the minimum pressure by using the and keys. (Note 1)	<i>F_1 .000</i> (displayed alternately) * Adjusting range: Refer to Note 2 to 3
	Press S-key	(Note 4)
	Set the maximum pressure by using the and keys. (Note1)	<i>F_2 .900</i> (displayed alternately) * Adjusting range: Refer to Note 2 to 3
	Press S-key	(Note 4)
	Set the P01 by using the and keys.	<i>P01 .000</i> (displayed alternately)
	Press S-key	(Note 4)
	Set the P02 by using the and keys.	<i>P02 .900</i> (displayed alternately)
	Press S-key	(Note 4)
	Set P03 to P16 as same.	(Note 4)
	Lock keys (refer to P9)	

(Note1) If auto memory function is not use, jump this item.

(Note2) F\_1 is adjustable in a range from 0% to 100% of the rated value. (Default value: 0%)

(Note3) F\_2 is adjustable in a range from 0% to 100% of the rated value. (Default value: 0%)

(Note4) Return to (current) pressure display by pressing the SET and keys simultaneously even if while you are setting F\_1, F\_2 and P01 to P16.

([---] is displayed for approx. 1 second.)


## Auto memory function

Auto memory function is possible to set the preset pressure in from P01 to P16 automatically. When this function is executed, P01 is set to the value of F\_1 and P16 is set to the value of F\_2. And from P02 to P15 is set to the divide value of F\_1 and F\_2.

No	Key operation	LED Display
	Unlock keys (refer to P9)	
	Press the and keys simultaneously for 3 seconds or more.	(Current) pressure is displayed
	Preset value (divide value of F_1 and F_2) is input in from P01 to P16 automatically.	<i>ASE</i> is displayed momentarily
	Lock keys (refer to P9)	

## Switch output (Out of range mode)

The switch output turns on when output pressure is achieved to +/-5%F.S. of setting oressure.

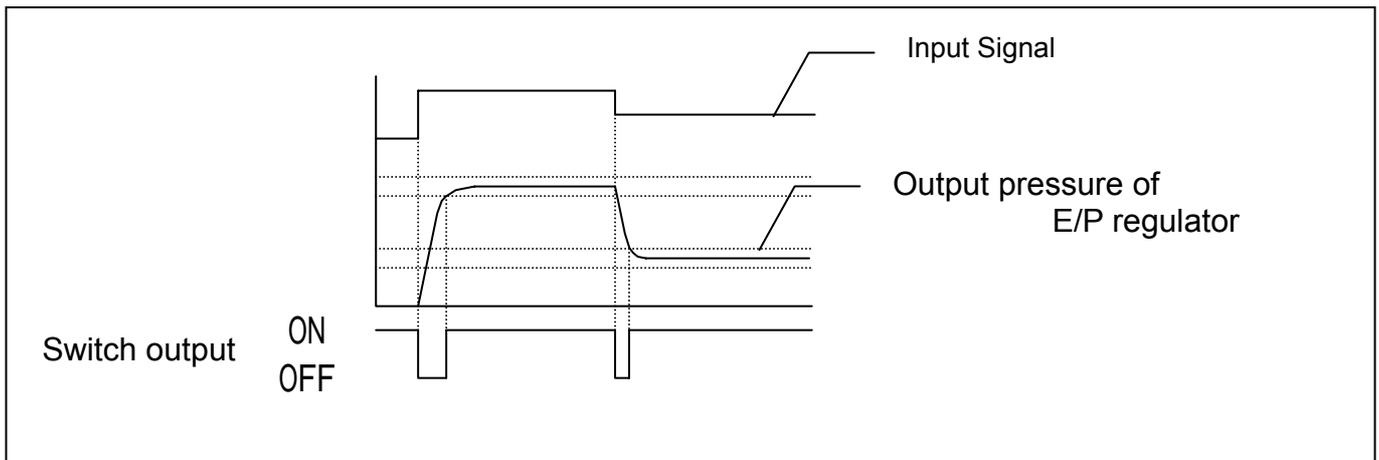

## Error Indicating function

Error name	LED display	Contents of error	Countermeasure
System error	E1.2	Reading or writing errors occurred in EEPROM.	Please execute "Initialize (refer to P15)" when the ITVX does not operate normally after reconnecting the power supply. Please contact SMC, when the ITVX does not operate normally after initialization.
	E1.3	Reading and writing errors occurred in memory.	Please contact SMC when the ITVX does not operate normally after reconnecting the power supply.
Solenoid valve error	E1.4	Solenoid valve failure	Replace the solenoid valve. For the replacement procedure contact SMC.
Over current error	E1.5	Over current errors in switch output	Please install a load to give an output current of 80 mA or less.
Residual pressure error	E1.6	Out of range error of "Zero clear"	Please operate "Zero clear" within the range of +/- 5% F.S. Please operate "Zero clear" after the secondary pressure of the ITVX has reached atmospheric.

## Detail setting mode

No	Key operation and LED display	
	Unlock keys (refer to P9)	
	Press S-key for 2 seconds or more.	
	<p>The diagram illustrates the sequence of key operations and LED displays in detail setting mode. It starts with the display 'F01 0L9'. Pressing the left key leads to 'F02 5L0'. Pressing the down key leads to 'F03 0cL'. Pressing the up key leads to 'F99 in 1'. Pressing the right key returns to 'F01 0L9'. Each state is displayed alternately.</p>	<p>(displayed alternately) Press S-key To "GAIN" (refer to P12)</p> <p>(displayed alternately) Press S-key To "SENSITIVITY" (refer to P13)</p> <p>(displayed alternately) Press S-key To "ZERO CLEAR" (refer to P14)</p> <p>(displayed alternately) Press S-key To "INITIALIZE" (refer to P14 )</p>
	In state of , press S-key for 2seconds or more.	
	Return to (current) pressure display.	
	Lock keys (refer to P9)	

## Gain setting

Normal operation does not require the adjustment of gain.

The product can change the response time using this gain setting.

When the gain is changed to a larger value, the response will be faster, but there is a possibility that stability will be lost.

No	Key operation	LED Display
	Unlock keys (refer to P9)	
	Press S-key for 2 seconds or more, then go to detail setting mode.	
	To "F01" by using the and keys.	<i>F01 0L9</i> (displayed alternately)
	Press S-key.	



## Zero clear

The display can be reset to zero by executing "Zero clear".

When "Zero clear" is executed with residual pressure in the secondary piping, the pressure is assumed to be zero. Please execute the operation of "Zero clear" with the supply pressure interrupted, and the piping of the secondary side removed.

No	Key operation	LED Display
	Unlock keys (refer to P9)	
	Press S-key for 2 seconds or more, then go to detail setting mode.	
	To "F03" by using the      and      keys.	F03 0cL (displayed alternately)
	Press S-key.	0cL (displayed alternately)
	Press      and      keys for 3 seconds or more. (press S-key to      )	0cL (is displayed)
	"Zero clear" is executed, after 3 seconds. (Release keys till less than 3 seconds to      )	cLr (is displayed for approx. 1 second)
	Returns to the state immediately after turning on the power supply. (keys are locked)	

(Note) The adjustable range is within +/- 5% F.S from the state of the factory shipment. When outside of this range, *Err* is displayed and "Zero clear" will not be executed.

## Initialize

"Initialize" is a function to return all the settings that the internal control constant are included to an initial value. Please execute "initialize" only when the error is displayed and this product does not operate at all.

Please execute the "Reset" function, when you want to return the pressure setting and the switch setting to an initial value.

No	Key operation	LED Display
	Unlock keys (refer to P9)	
	Press S-key for 2 seconds or more, then go to detail setting mode.	
	To "F99" by using the      and      keys.	F99 117.1 (displayed alternately)
	Press S-key.	117.1 displayed alternately

Press and keys for 3 seconds or more. (press S-key to )	117 1 is displayed
"Initialize" is executed, after 5 seconds. (Release keys till less than 5 seconds to )	Turning off for 1 second
Returns to the state immediately after turning on the power supply. (keys are locked)	

## LED display

The range of the LED pressure display is different according to the pressure range and the unit of the display.

unit	ITV 010	ITV 030	ITV 050	ITV2090
MPa	。020 ~ .120	。100 ~ .600	。180 ~ .A80	-
Kgf/cm <sup>2</sup>	0。20 ~ .120	1。00 ~ 6.00	1。80 ~ A.80	-
bar	0。20 ~ .120	1。00 ~ 6.00	1。80 ~ A.80	-
PSI	3。0 ~ 18.0	14。0 ~ 84.0	-26 ~ 156	-
kPa	-20 ~ 120	-100 ~ 600	-180 ~ A80	16 ~ -96

(note1) : The mark "。" is blinking the decimal point, and it is shown a minus.

(note2) : When the digit overflows, the following of "9" are substituted by "A".

(example: The following of 999(kPa) are displayed as A00(kPa), and it shows 1000 kPa.)

(note3) : When the display exceeds the lower bound value, "LLL" is displayed.

(note4) : When the display exceeds the upper bound value, "HHH" is displayed.

Refer to the SMC website (URL <http://www.smcworld.com>) for more information about troubleshooting.

This operation manual refers to all standard types and is partially applicable to special models.

### Revision history

B : Change of "Safety Instructions"  
C : P15 Addition note

## SMC Corporation

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021 JAPAN  
Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362  
URL <http://www.smcworld.com>



# 0120-837-838

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.  
© 2012 SMC Corporation All Rights Reserved